



Mid–Size Mower

ProLine Gear 15hp with 48in Side Discharge Mower

Model No. 30195—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel System Assembly	3	Cooling Equipment Assembly	
Transmission and Drive Pulley Assembly	4	Kawasaki FH451V–BS04	17
Wheel Drive Assembly	6	Electric Equipment Assembly	
Upper Handle Assembly	8	Kawasaki FH451V–BS04	18
Front Caster and Blade Brake Assembly	9	Control Equipment Assembly	
Spindle Assembly	10	Kawasaki FH451V–BS04	19
Idler Pulley Assembly	11	Carburetor Assembly	
Deck Assembly	12	Kawasaki FH451V–BS04	20
Cylinder/Crankcase Assembly		Air Filter/Muffler Assembly	
Kawasaki FH451V–BS04	13	Kawasaki FH451V–BS04	21
Piston/Crankshaft Assembly		Fuel Tank/Fuel Valve Assembly	
Kawasaki FH451V–BS04	14	Kawasaki FH451V–BS04	22
Valve/Camshaft Assembly		Starter Assembly	
Kawasaki FH451V–BS04	15	Kawasaki FH451V–BS04	23
Lubrication Equipment Assembly		Label Assembly	
Kawasaki FH451V–BS04	16	Kawasaki FH451V–BS04	24


Accessories

Description	Model / Part No.	Description	Model / Part No.
Recycler Kit	30143	Low Sail Blade	103–2507
Soft Bagger	30198	Atomic Blade	104–8595

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

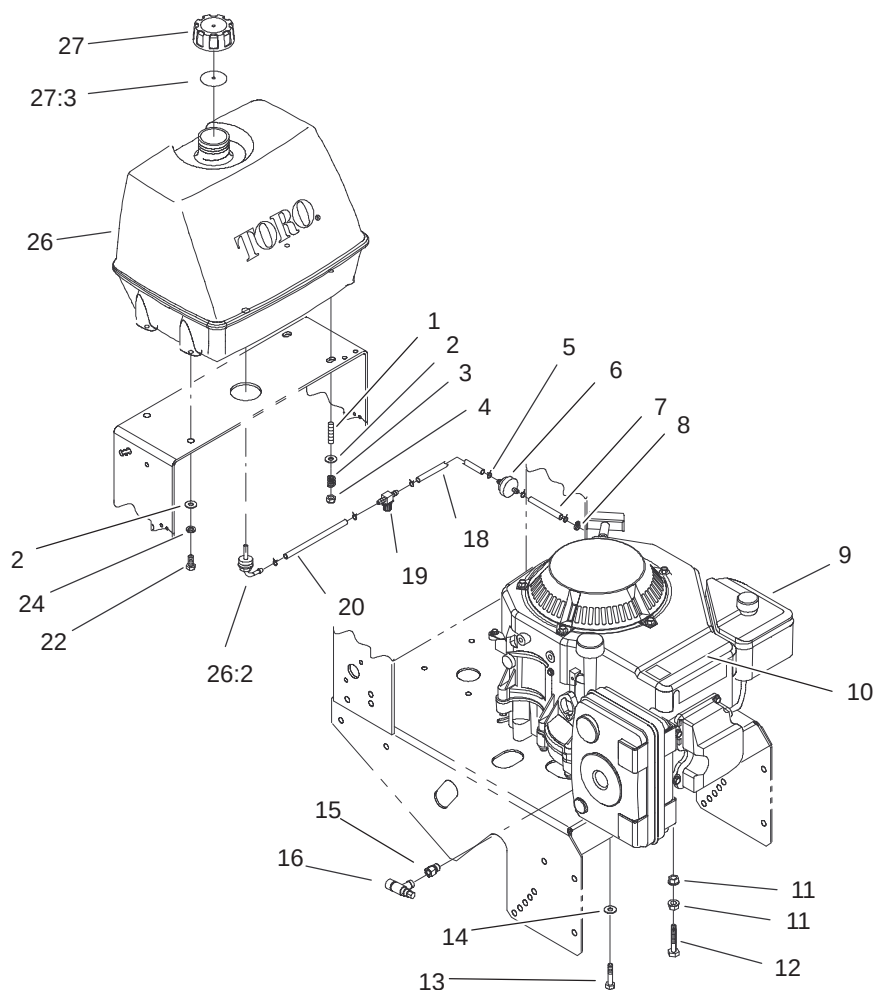


Sheet No.: 2

Engine and Fuel System Assembly

Ref. No.	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	5	Clamp
6	1-303197	1	Filter-Fuel
7	1-603954	1	Hose-Line, Fuel
8	1-303308	1	Clamp-Hose
☆9		1	Engine-Kawasaki, Fh451v-Bs04
10	106-0699	1	Decal-Warning, Hot Surfaces
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	33114-025	4	Screw-HH
14	1-303334	4	Washer-Spring
15	103-1966	1	Adapter
16	103-1965	1	Valve-Drain, Oil
18	1-303022	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM

☆ Not serviced separately

* Not illustrated

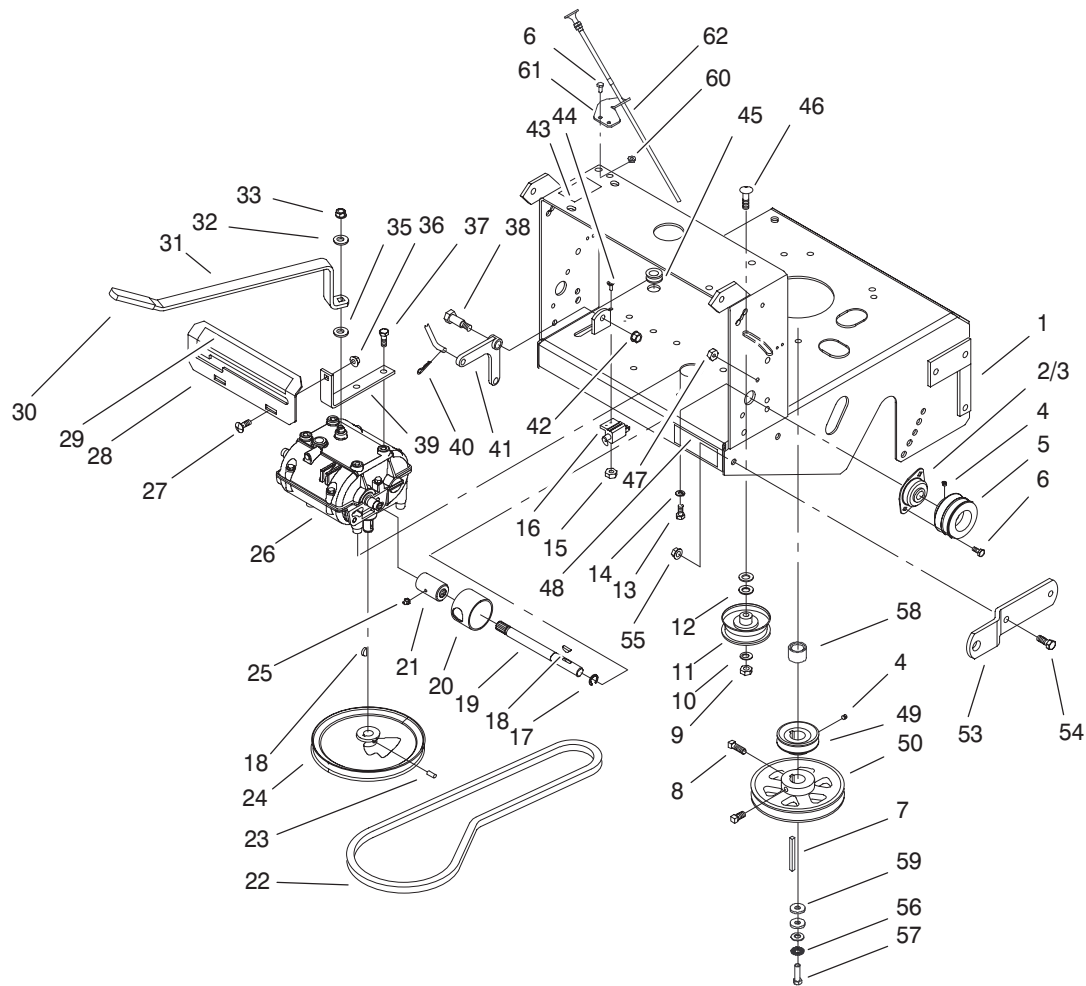


Sheet No.: 3

Transmission and Drive Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	103-2923-01	1	Deck-Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	1-323257-03	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	5-1336	1	Key
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513152	1	Switch-Closed, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref. No.	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	98-3256	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock, NI
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	1-323256	1	Sheave-Transmission
50	1-403160	1	Sheave
53	1-323318-01	2	Hitch-Sulky

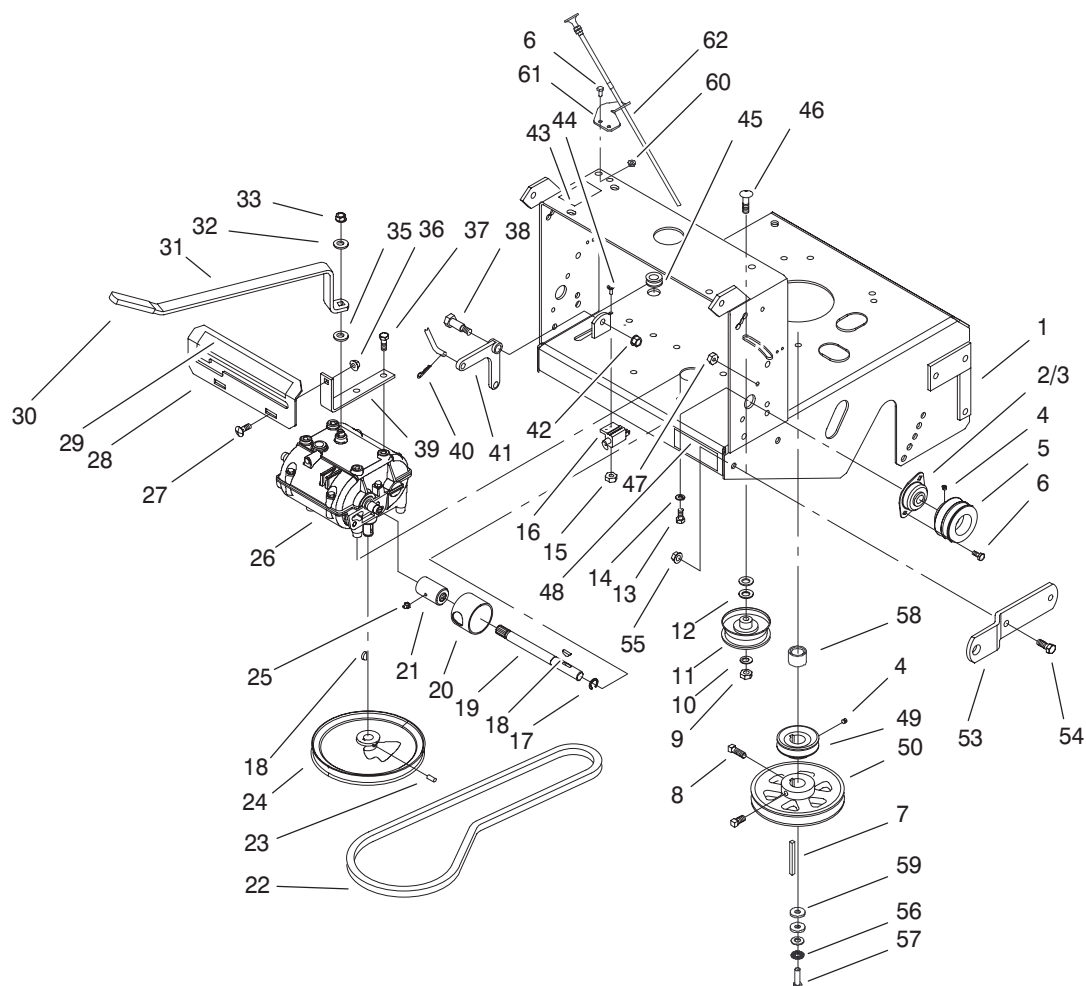


Sheet No.: 3

Transmission and Drive Pulley Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
54	323-6	4	Screw-HH
55	3290-357	4	Nut-HHF
56	1-603610	2	Washer-Spring
57	33115-035	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
60	32128-33	2	Nut-HF
61	103-1797-01	1	Bracket-Cable, Choke
62	103-1796	1	Cable-Choke

Ref. No.	Part No.	Qty.	Description

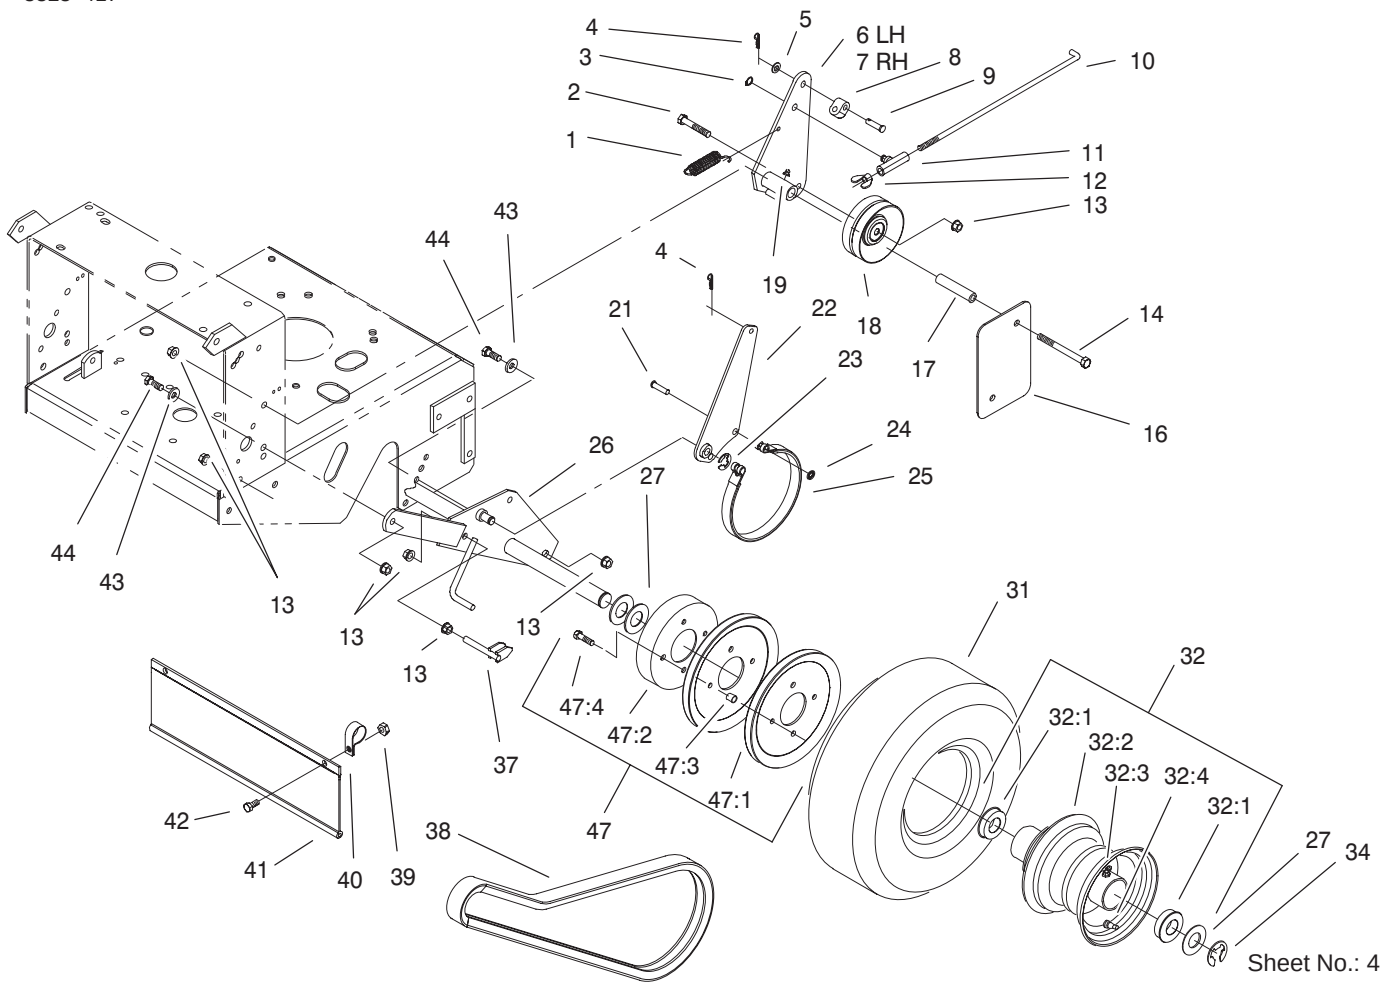


Wheel Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	98-3273	2	Spring-Extension
2	323-10	2	Screw-HH
3	32151-47	2	Ring-Retaining
4	1-806003	4	Pin-Hair
5	3256-23	2	Washer-Flat
6	104-1321-03	1	RH Idler Arm ASM
7	104-1322-03	1	LH Idler Arm ASM
8	74-0521	2	Fitting-Rod
9	283-6	2	Pin-Clevis
10	1-323296	2	Rod-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-16	4	Screw-HH
16	98-5131-01	2	Shield-Wheel, Drive
17	1-323694	4	Spacer-Shield
18	1-323634	2	Idler-Drive, Wheel
19	302-19	2	Fitting-Grease
21	1-323307	4	Pin-Clevis
22	1-322209-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	4	Nut-Push
25	1-323595	2	Band-Brake
26	1-322212-03	1	Axle ASM
27	1-543436	8	Washer-Spacer


Ref. No.	Part No.	Qty.	Description
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive
31	1-323720	2	Tire-Turfmaster
32	1-323328	2	Wheel And Hub ASM
32:1	1-323329	2	Bearing-Flanged
☆32:2		1	Rim ASM
☆32:3		1	Fitting-Grease
☆32:4		1	Valve Stem
33	1-323329	4	Bearing-Flanged
34	1-808519	2	Ring-Snap
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
37	1-412358	2	Scraper
38	1-323631	2	V-Belt
39	3296-29	2	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
47		2	Drive Wheel ASM
47:1	1-323253	2	Sheave-Wheel, Drive
47:2	1-323261	1	Drum-Brake

☆ Not serviced separately

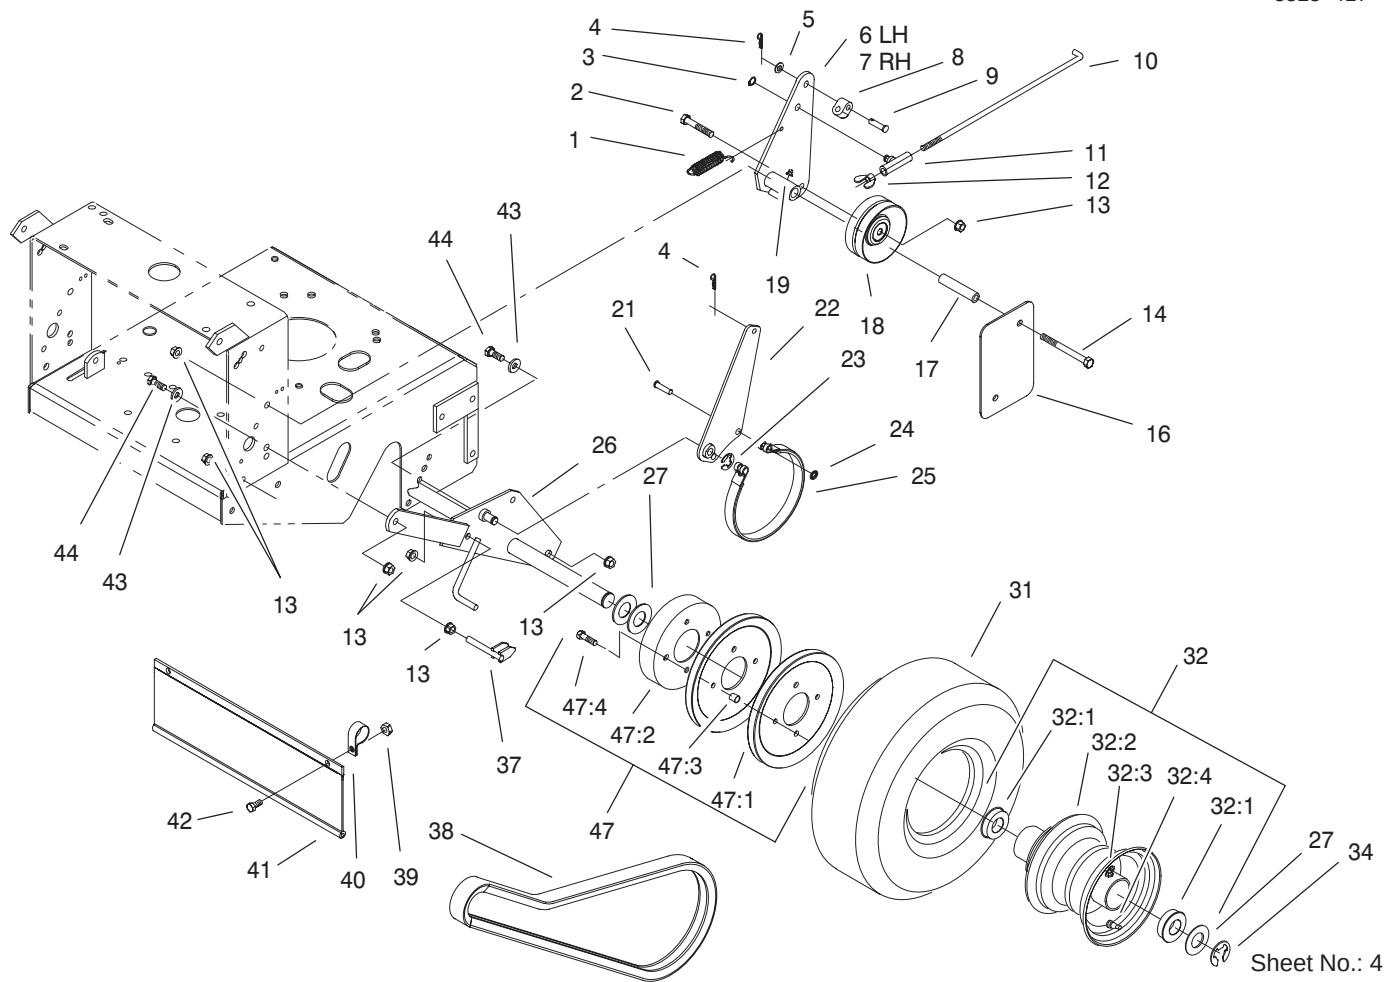

Wheel Drive Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
47:3	1-323260	4	Spacer-Sheave, Wheel
47:4	322-6	4	Screw-HH

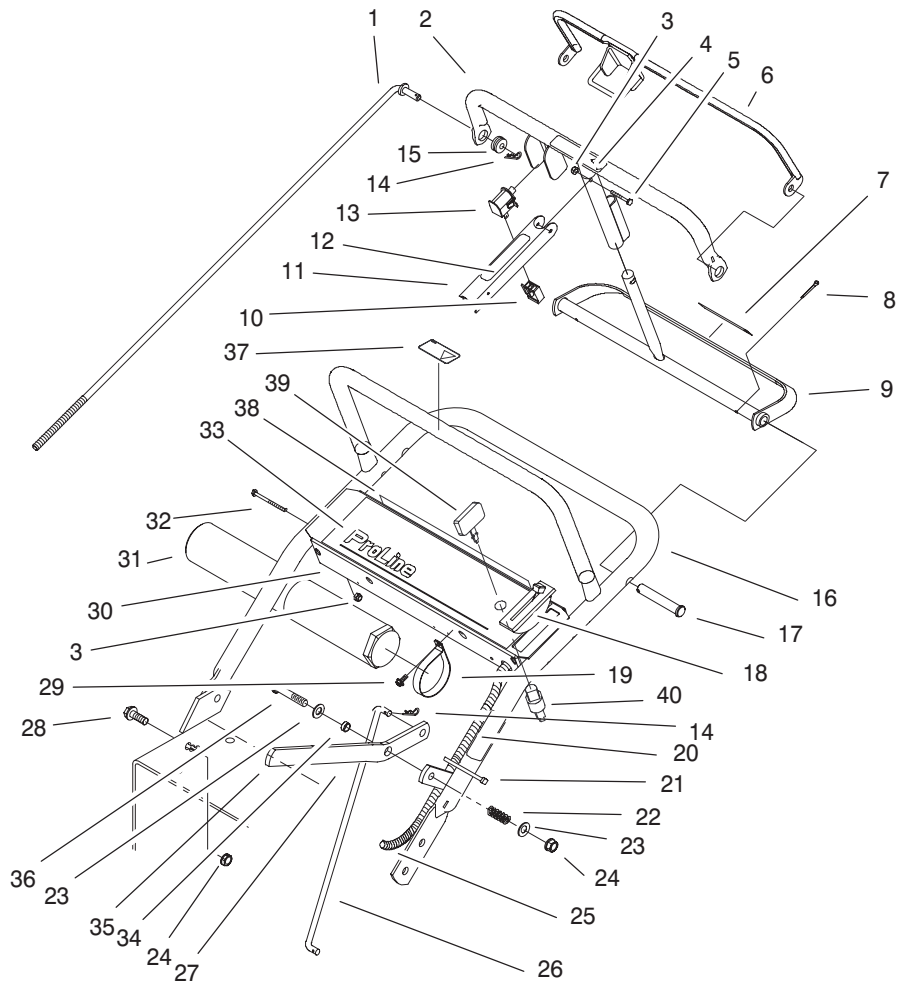


Sheet No.: 5

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-3282	2	Rod-Control
2	95-5522-03	1	Control Bar ASM
3	3296-2	5	Nut-Lock
4	82-2290	1	Decal-Bar, Control
5	32105-1	1	Screw-SHH
6	98-3289-03	1	Bail ASM
7	82-2280	1	Decal-Handle, Reverse
8	3272-11	2	Pin-Cotter
9	99-8501-03	1	Control-Pivot
10	218-595	1	Connector-Body
11	98-3261-03	1	Lever-Brake, Parking
12	98-3266	1	Decal-Brake, Parking
13	740275	1	Switch-Seat
14	1-806003	3	Pin-Hair
15	237-141	2	Grommet-Rubber
16	98-3267-03	1	Upper Handle ASM
17	283-55	2	Pin-Clevis
18	100-6450	1	Control-Throttle
19	2412-120	2	R-Clamp
20	95-5537	1	Decal-Engage, Deck
21	1-303335	1	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-24	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI
25	106-0678	1	Harness-Wire

Ref. No.	Part No.	Qty.	Description
26	98-3279	1	Linkage-Drive, Blade
27	98-3287-03	1	Lever-Engagement, Blade
28	323-6	4	Screw-HH
29	32104-76	2	Screw
30	106-0677	1	Control Panel ASM
31	104-7050	1	Housing-Manual
32	32105-14	4	Screw
33	106-0681	1	Decal-Control Panel
34	99-8509	1	Spacer
35	1-303020	1	Grip-Lever
36	323-10	1	Screw-HH
37	98-4387	1	Decal-Protection, Ear
38	105-0884	1	Decal-Danger
39	1-403121	1	Switch-Key
40	63-8360	1	Key-Ignition

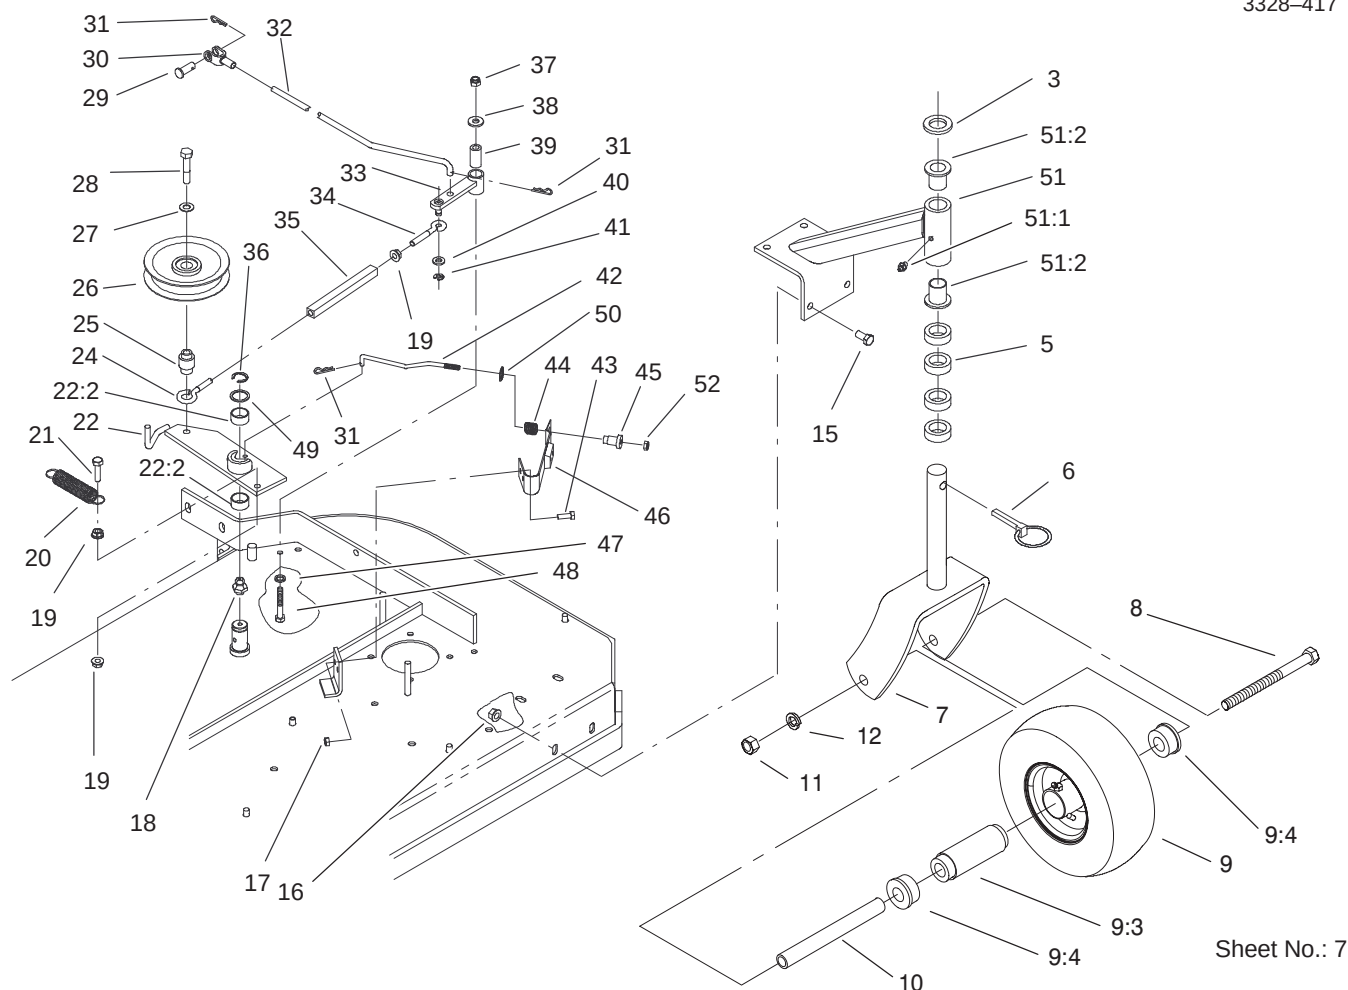


Sheet No.: 7

Front Caster and Blade Brake Assembly

Ref. No.	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
☆9	1-513648	2	Wheel And Tire ASM
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
29	1-808280	1	Pin-Clevis

Ref. No.	Part No.	Qty.	Description
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323714	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad/Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM
51:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI

☆ Not serviced separately

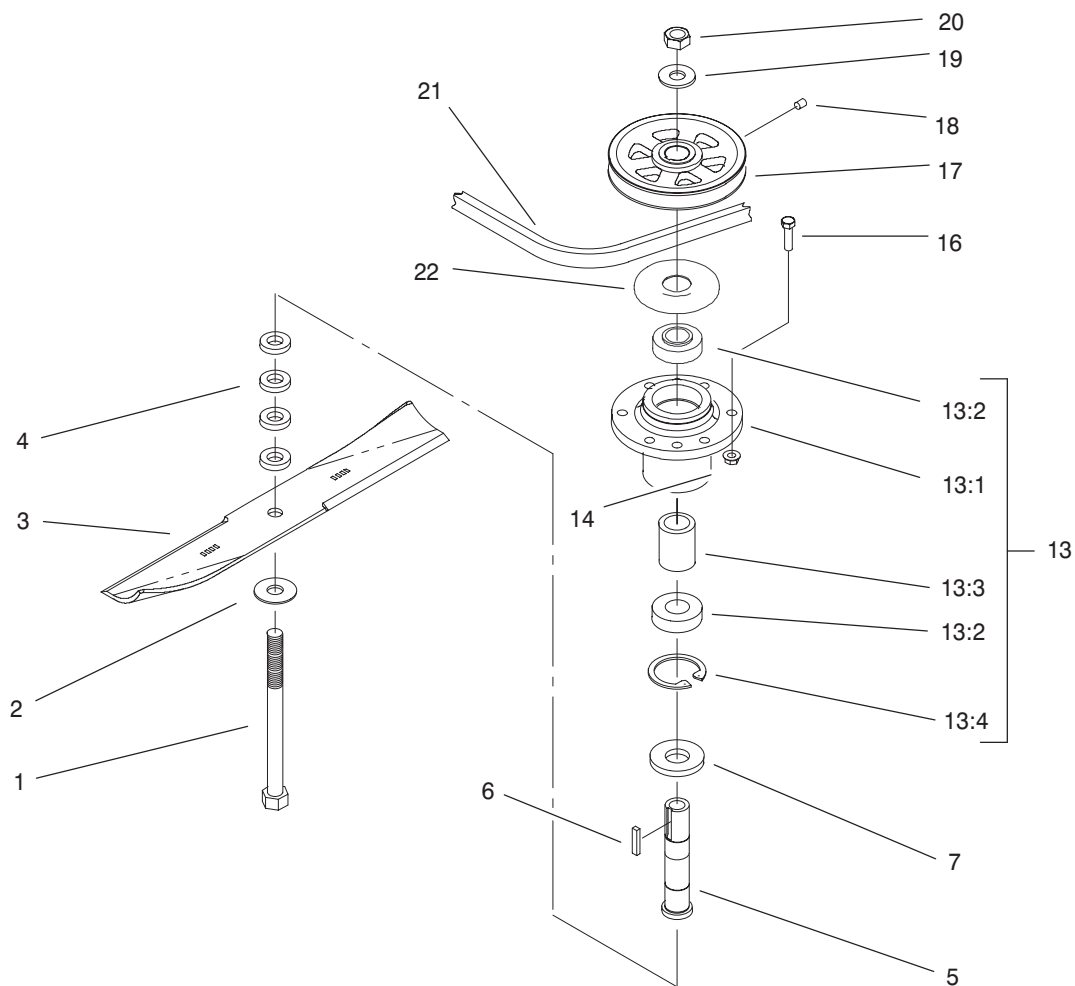


Sheet No.: 8

Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	1-800861	3	Screw-Cap, HH
2	1-513208	3	Washer-Spring
3	103-2507	3	Blade-Lift, Low
4	1-323539	12	Spacer-Drive, Blade
5	1-323529	3	Tube-Spindle, Short
6	1-807267	3	Key
7	103-2535	3	Spacer-Guard, Bottom
13	103-2533	3	Cutter Housing ASM
13:1	1-323532	1	Housing-Spindle
13:2	103-2477	2	Bearing-Ball
13:3	103-2534	1	Spacer-Bearing
13:4	32120-8	1	Ring-Snap
14	3296-39	18	Nut-Lock, NI
16	323-7	18	Screw-HH
17	1-403183	3	Sheave
18	1-803310	3	Screw-Set
19	1-323339	3	Washer-Retainer, Sheave
20	3219-6	3	Nut-Hex
21	1-403171	1	Belt-Drive, Blade
22	103-1330	3	Guard-Bearing, Top

Ref. No.	Part No.	Qty.	Description

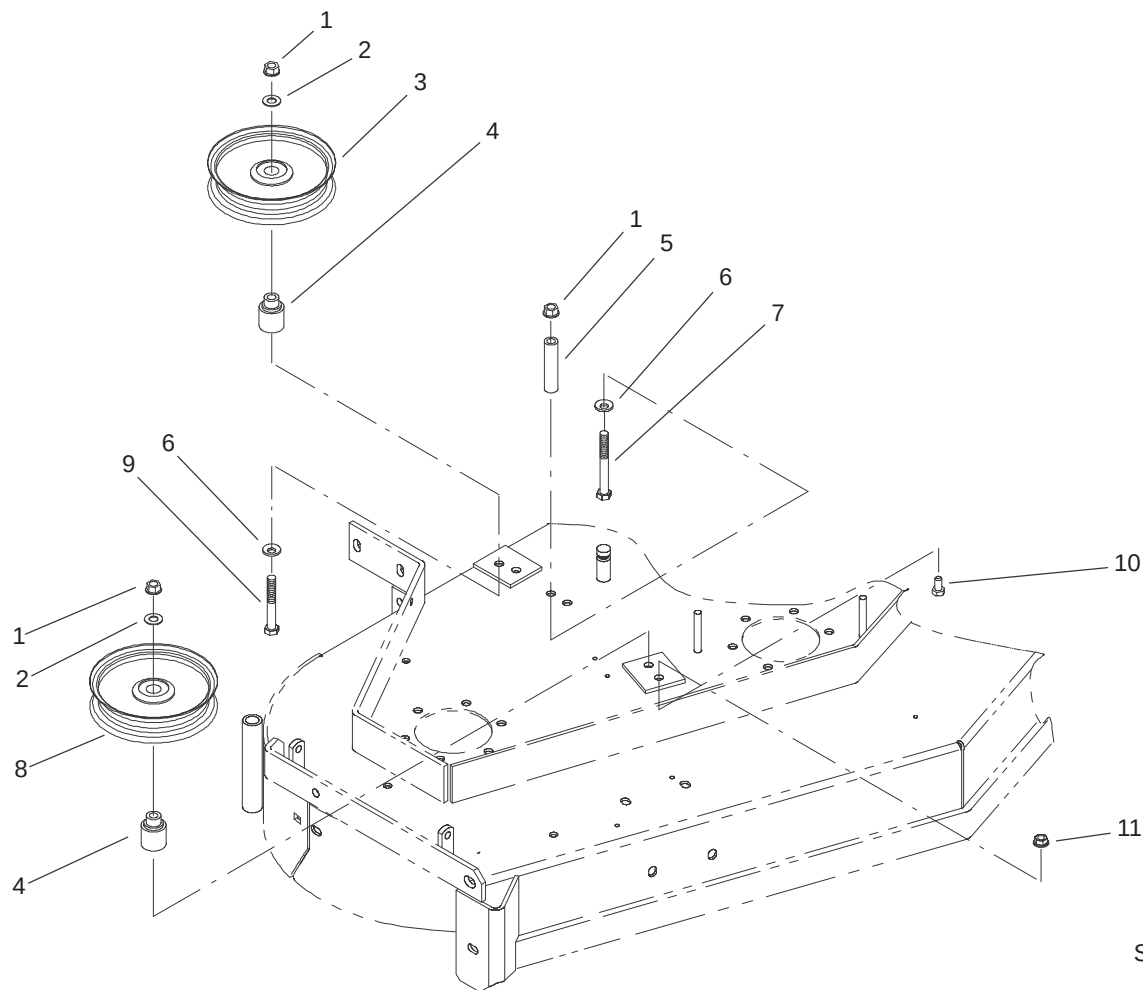


Sheet No.: 9

Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-357	3	Nut-HHF
2	3256-24	2	Washer-Flat
3	1-403186	1	Idler-Pulley, Flat
4	1-403184	2	Bushing-Idler
5	1-403188	1	Spacer
6	98-5975	3	Washer-Belleville
7	323-20	1	Screw-HH
8	1-613098	1	Pulley-Idler
9	323-13	2	Screw-HH
10	322-2	2	Screw-HH
11	32128-20	2	Nut-HF

Ref. No.	Part No.	Qty.	Description

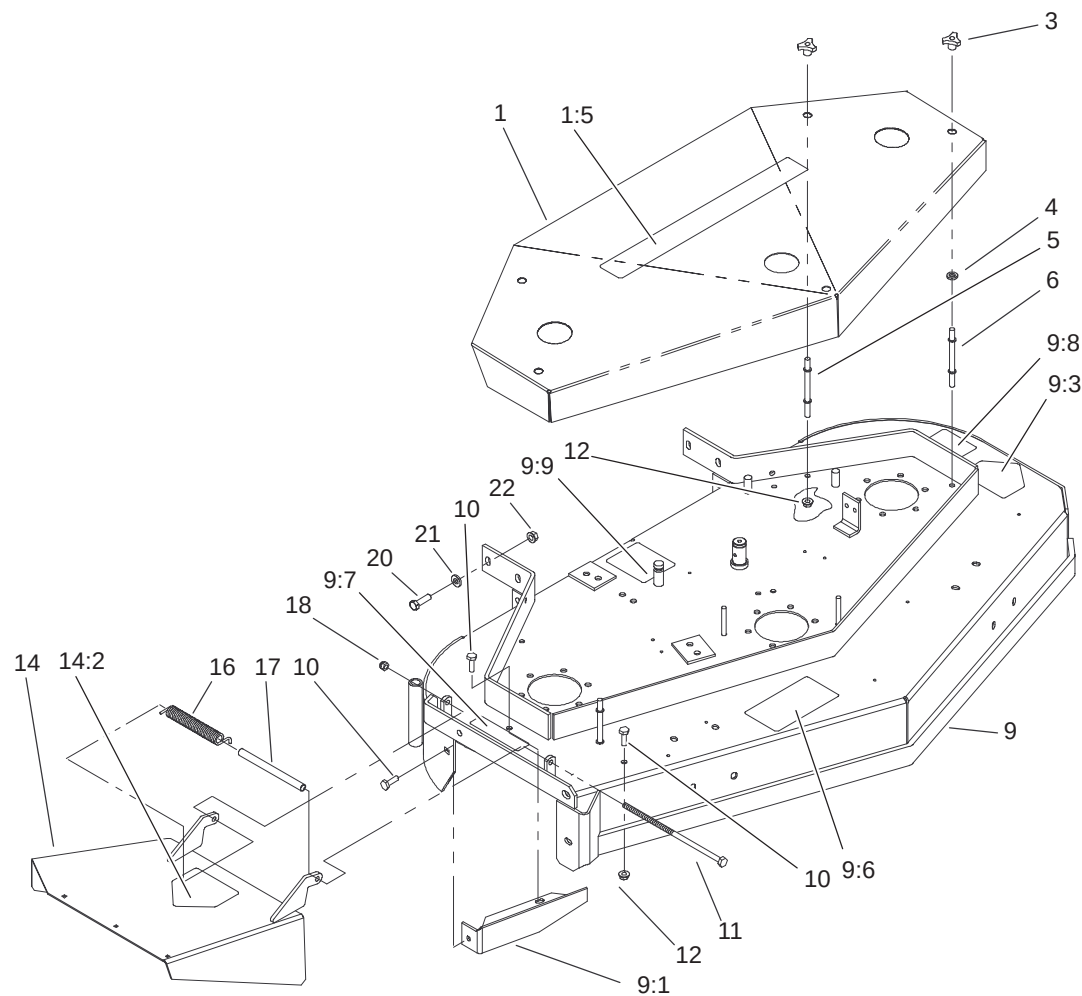


Sheet No.: 10

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	1-404246	1	Shield-Belt
1:5	106-0712	1	Decal-Proline 48
3	1-323385	5	Knob-3 Prong
4	1-323417	5	Washer
5	1-303536	3	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	1-404270	1	Deck
9:1	1-402107-01	1	Baffle-Dogleg
9:3	1-403005	1	Decal-Danger
9:6	66-1340	1	Decal-Danger
9:7	98-5954	1	Decal-Missing, Cover
9:8	98-5130	1	Decal-Torque
9:9	99-3943	1	Decal-Routing, Belt
10	322-2	7	Screw-HH
11	1-800291	1	Screw-Cap HH
12	32128-20	11	Nut-HF
14	1-404245	1	Chute
14:2	54-9220	1	Decal-Danger
16	98-3280	1	Spring-Deflector
17	1-323636	1	Spacer-Spring
18	3296-29	1	Nut-Lock, NI
19	67-5360	1	Decal-Danger
20	323-8	6	Screw-HH


Ref. No.	Part No.	Qty.	Description
21	98-5975	6	Washer-Belleville
22	3290-357	6	Nut-HHF

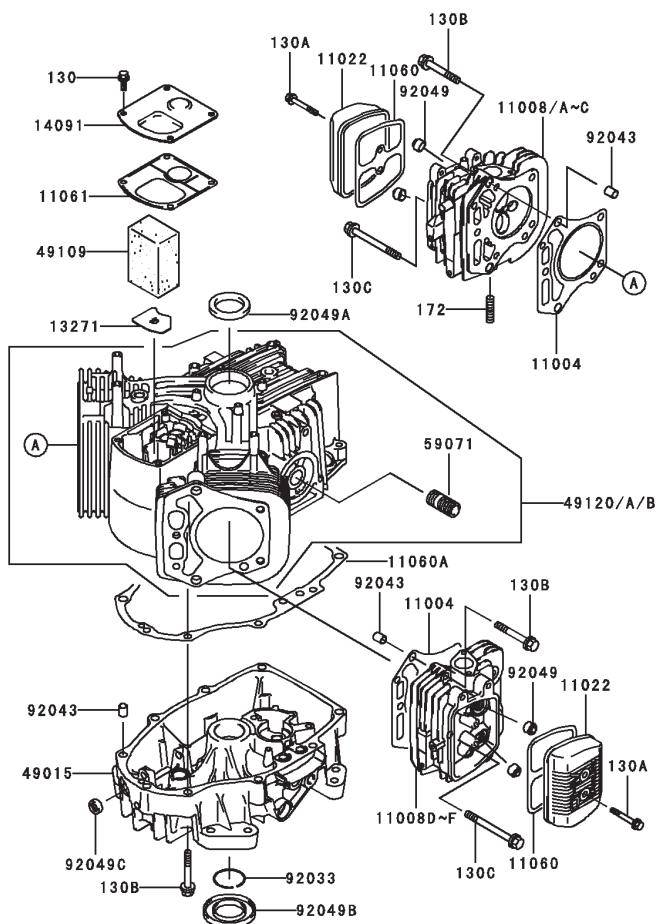

Cylinder/Crankcase Assembly Kawasaki FH451V-BS04

Ref. No.	Part No.	Qty.	Description
11004	11004-7005	2	Gasket-Head
11008A	11008-6042	1	Head-Comp-Cylinder
11008E	11008-7009	1	Head-Comp-Cylinder
11022	11022-7003	2	Case-Rocker
11060	11060-7001	2	Gasket,Rocker Case
11060A	11060-7008	1	Gasket,Crankcase Cover
11061	11061-7001	1	Gasket,Breather
13271	13271-7016	1	Plate
14091	14091-7006	1	Cover
49015	49015-6223	1	Cover-Crankcase
49109	49109-7002	1	Element-Breather
49120A	49120-6132	1	Crankcase-Comp
59071	59071-2079	1	Joint
92033	92033-7003	1	Ring-Snap
92043	92043-7001	6	Pin
92049	92049-7001	4	Seal-Oil
92049A	92049-7002	1	Seal-Oil
92049B	92049-7004	1	Seal-Oil
92049C	92049-7005	1	Seal-Oil
130	130B0612	4	Bolt-Flanged
130A	130B0640	4	Bolt-Flanged
130B	130T0850	17	Bolt-Flanged
130C	130T0875	2	Bolt-Flanged

Obtain Parts from Kawasaki

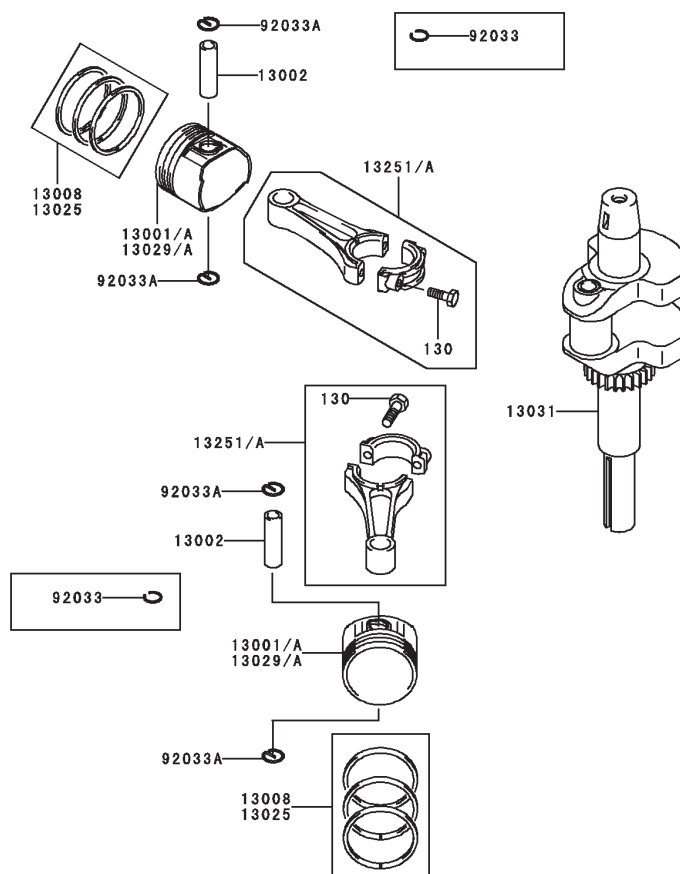


Piston/Crankshaft Assembly Kawasaki FH451V-BS04

Ref. No.	Part No.	Qty.	Description
13001A	13001-7008	2	Piston-Engine
13002	13002-7001	2	Pin-Piston
13008	13008-6055	2	Ring-Set-Piston
13025	13025-7001	AR	Ring-Set-Piston L,0.50
13029A	13029-7004	AR	Piston-Engine L,0.50
13031	13031-7001	1	Crankshaft-Comp
13251	13251-7003	AR	Rod-Assy-Connecting, U/S=0.50
13251A	13251-7004	2	Rod-Assy-Connecting
92033A	92033-7005	4	Ring-Snap
130	130G0630	4	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description


Obtain Parts from Kawasaki

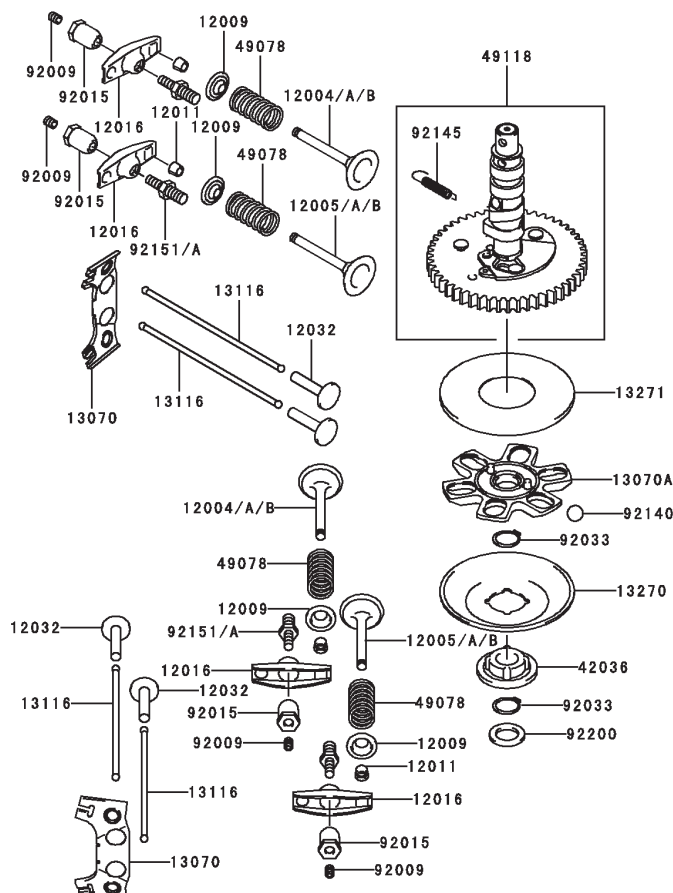

Valve/Camshaft Assembly Kawasaki FH451V-BS04

Ref. No.	Part No.	Qty.	Description
12004A	12004-7003	2	Valve-Intake
12005A	12005-7003	2	Valve-Exhaust
12009	12009-7001	4	Retainer-Valve Spring
12011	12011-2056	8	Collet
12016	12016-7001	4	Arm-Rocker
12032	12032-7001	4	Tappet
13070	13070-7001	2	Guide
13070A	13070-7004	1	Guide
13116	13116-2057	4	Rod-Push
13270	13270-7002	1	Plate
13271	13271-7007	1	Plate
42036	42036-7001	1	Sleeve
49078	49078-7001	4	Spring-Engine Valve
49118	49118-7002	1	Camshaft-Comp
92009	92009-2341	4	Screw
92015	92015-2253	4	Nut
92033	92033-7001	2	Ring-Snap
92140	92140-7002	6	Ball
92145	92145-7001	1	Spring
92151A	92151-7019	4	Bolt
92200	92200-7001	1	Washer

Obtain Parts from Kawasaki

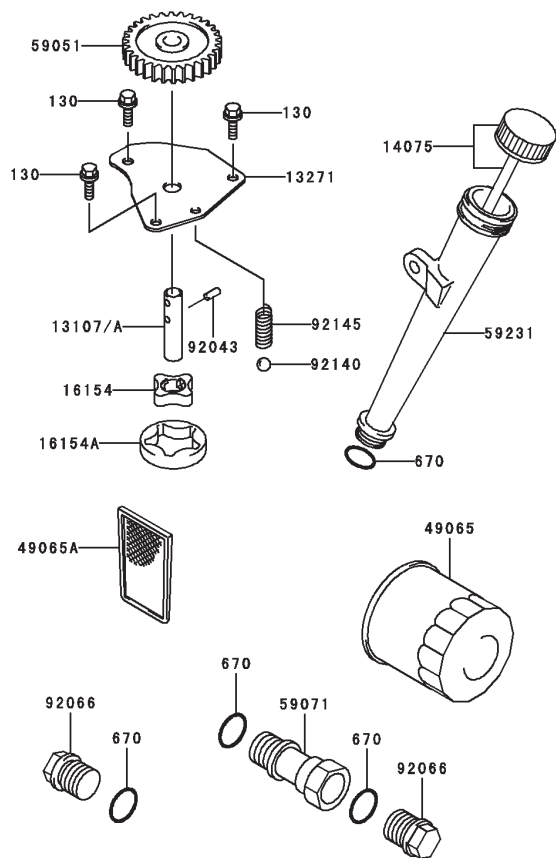


Lubrication Equipment Assembly
Kawasaki FH451V-BS04

Ref. No.	Part No.	Qty.	Description
13107A	13107-7009	1	Shaft
13271	13271-7017	1	Plate
14075	14075-7001	1	Cap-Assy
16154	16154-2053	1	Rotor-Pump,In
16154A	16154-2054	1	Rotor-Pump,Out
49065	49065-2078	1	Filter-Oil
49065A	49065-7004	1	Filter-Oil
59051	59051-7004	1	Gear-Spur
59071	59071-7003	1	Joint
59231	59231-7001	1	Filler
92043	92043-7003	1	Pin
92066	92066-7003	2	Plug
92140	92140-7003	1	Ball
92145	92145-7002	1	Spring
130	130B0612	3	Bolt-Flanged
670	670D2016	4	O Ring,16mm

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

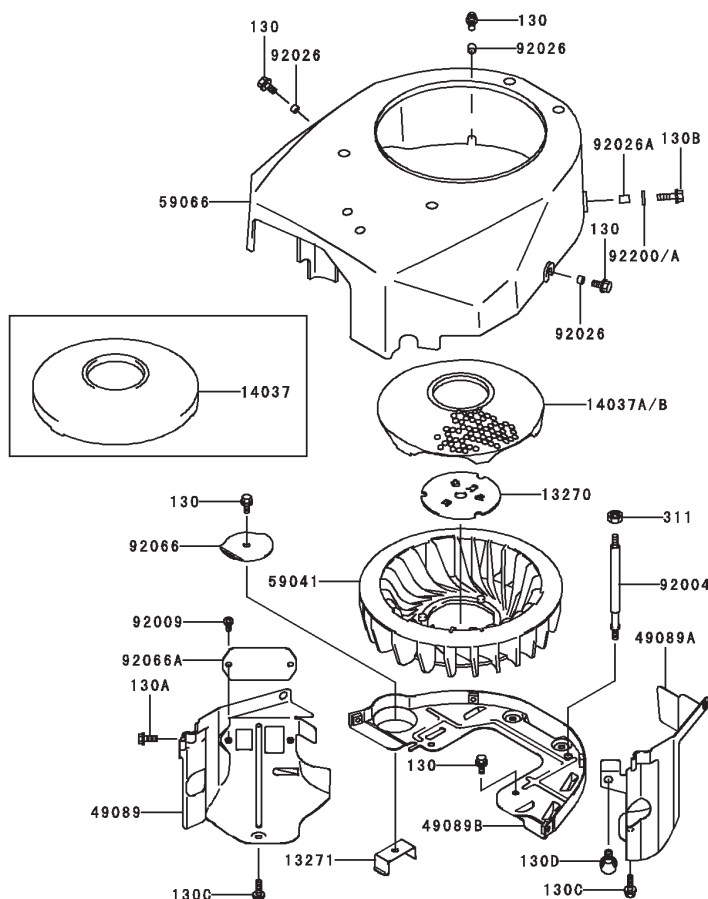


Cooling Equipment Assembly Kawasaki FH451V-BS04

Ref. No.	Part No.	Qty.	Description
13270	13270-7007	1	Plate
13271	13271-7002	1	Plate
14037A	14037-7015-9H	1	Screen
49089	49089-7001	1	Shroud-Engine
49089A	49089-7002	1	Shroud-Engine
49089B	49089-7003	1	Shroud-Engine
59041	59041-7001	1	Fan
59066	59066-7002	1	Housing-Fan
92004	92004-7006	2	Stud
92009	92009-2308	2	Screw
92026	92026-7001	3	Spacer,6.2x7.9x5
92026A	92026-7003	1	Spacer,6.5x7.9x10.5
92066	92066-7004	1	Plug
92066A	92066-7005	1	Plug
92200	92200-2078	1	Washer,6.5x18x2.0
130	130B0612	6	Bolt-Flanged
130A	130B0616	2	Bolt-Flanged
130B	130B0620	1	Bolt-Flanged
130C	130B0625	2	Bolt-Flanged
130D	130B0816	1	Bolt-Flanged
311	311B0600	2	Nut-Hex

Obtain Parts from Kawasaki


Ref. No.	Part No.	Qty.	Description

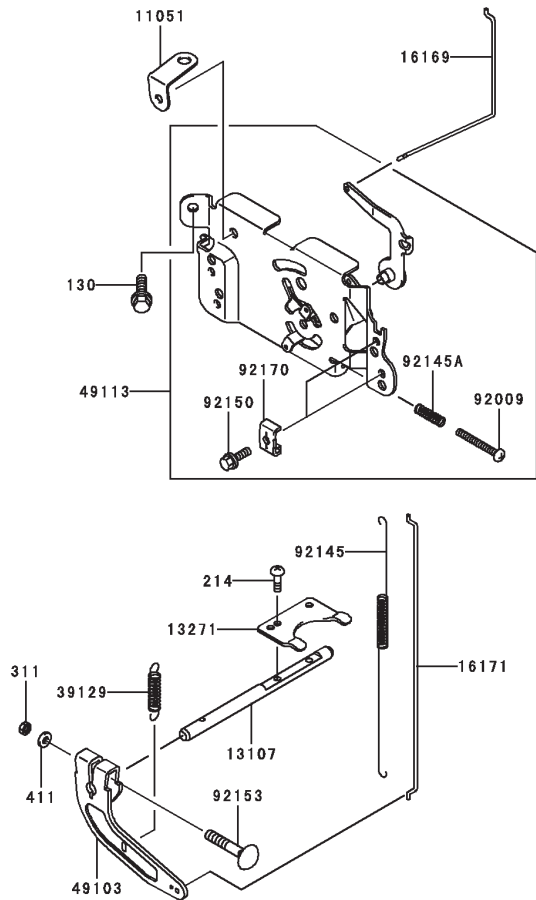

**Control Equipment Assembly
Kawasaki FH451V-BS04**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11051	11051-7008	1	Bracket				
13107	13107-7010	1	Shaft				
13271	13271-7018	1	Plate				
16169	16169-7001	1	Link-Choke				
16171	16171-7001	1	Link				
39129	39129-7003	1	Spring-Governor				
49103	49103-7004	1	Arm-Governor				
49113	49113-7024	1	Panel-Comp-Control				
92009	92009-7007	1	Screw,4x35				
92145	92145-7003	1	Spring				
92145A	92145-7005	1	Spring				
92150	92150-2182	2	Bolt,5x18				
92153	92153-7005	1	Bolt,6x35				
92170	92170-7001	2	Clamp				
130	130B0612	2	Bolt-Flanged				
214	214B0408	2	Screw-Pan+-				
311	311B0600	1	Nut-Hex				
411	411B0600	1	Washer-Plain				

Obtain Parts from Kawasaki

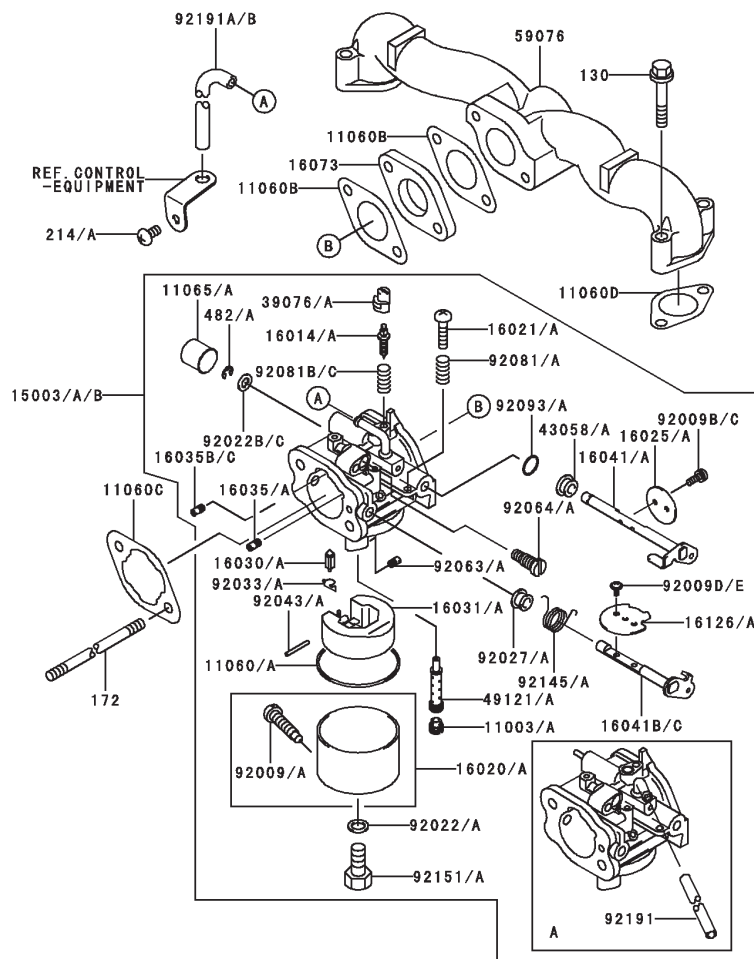


Carburetor Assembly Kawasaki FH451V-BS04

Ref. No.	Part No.	Qty.	Description
11003	11003-2105	1	Seat-Valve
11060	11060-2406	1	Gasket
11060B	11060-7003	2	Gasket, Insulator
11060C	11060-7004	1	Gasket, Air Filter
11060D	11060-7005	2	Gasket, Manifold
11065	11065-2061	1	Cap
15003A	15003-7036	1	Carburetor-Assy
16014	16014-2080	1	Screw-Pilot Air
16020	16020-2141	1	Chamber-Float
16021	16021-2060	1	Screw-Throttle Stop
16025	16025-2193	1	Valve-Throttle, #130
16030	16030-2067	1	Valve-Float
16031	16031-2066	1	Float
16035	16035-2060	1	Jet-Air, #1.7
16035B	16035-2061	1	Jet-Air, #1.2
16041	16041-7005	1	Shaft-Carburetor
16041B	16041-7006	1	Shaft-Carburetor
16073	16073-7001	1	Insulator
16126	16126-7007	1	Valve
39076	39076-2053	1	Limiters
43058	43058-3716	1	Ring
49121	49121-2222	1	Nozzle-Main, #113a
59076	59076-7001	1	Manifold-Intake
92009	92009-2015	1	Screw

Ref. No.	Part No.	Qty.	Description
92009B	92009-2024	2	Screw
92009D	92009-2081	2	Screw
92022	92022-2231	1	Washer
92022B	92022-2239	1	Washer
92027	92027-2025	1	Collar
92033	92033-2067	1	Ring-Snap
92043	92043-2226	1	Pin
92063	92063-2358	1	Jet-Main, #125
92064	92064-2125	1	Jet-Pilot, #48.8
92081	92081-2009	1	Spring
92081B	92081-2256	1	Spring
92093	92093-2002	1	Seal
92145	92145-2061	1	Spring
92151	92151-2092	1	Bolt
92191A	92191-7016	1	Tube, 4.76x7.94x225
130	130B0635	4	Bolt-Flanged
172	172G0685	2	Bolt-Stud
214	214B0510	1	Screw-Pan+-
482	482L4000	1	Circlip-Type-E

Obtain Parts from Kawasaki

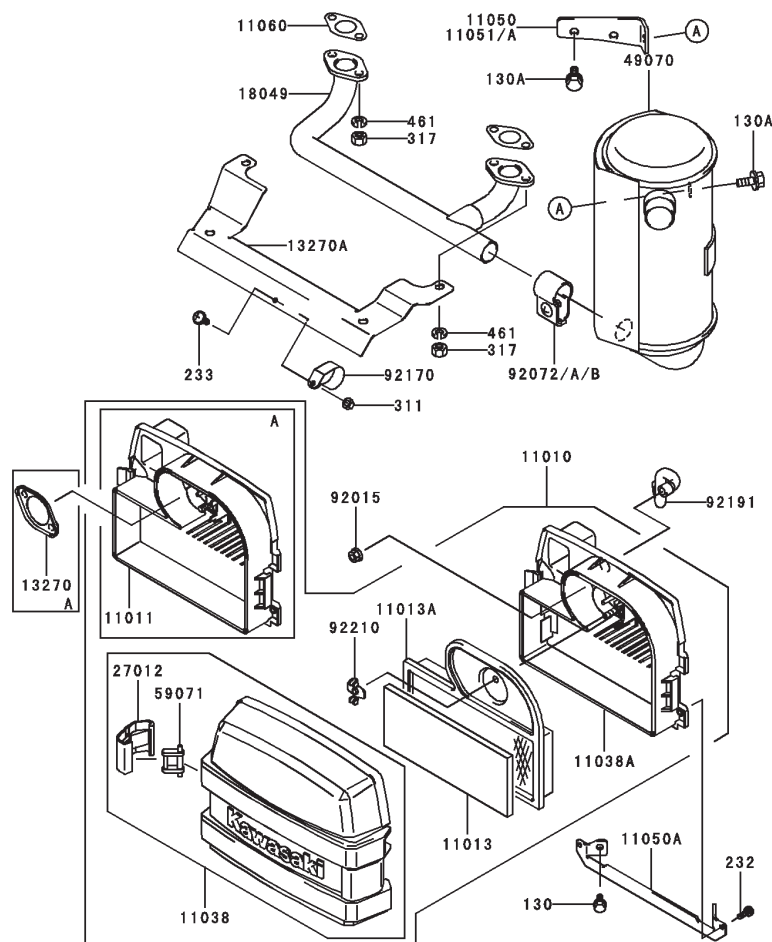

Air Filter/Muffler Assembly Kawasaki FH451V-BS04


Ref. No.	Part No.	Qty.	Description
11010	11010-7001	1	Filter-Assy-Air
11013	11013-7001	1	Element-Air Filter
11013A	11013-7002	1	Element-Air Filter
11038	11038-7001	1	Case-Assy-Air Filter
11038A	11038-7003	1	Case-Assy-Air Filter
11050A	11050-7006	1	Bracket
11051	11051-7005-9H	1	Bracket
11060	11060-7021	2	Gasket,Muffler
13270A	13270-7008	1	Plate
18049	18049-7001	1	Pipe-Exhaust
27012	27012-7001	2	Hook,Air Filter
49070	49070-7002	1	Muffler-Comp
59071	59071-7001	2	Joint
92015	92015-1193	2	Nut
92072A	92072-7007	1	Band
92170	92170-7002	1	Clamp
92191	92191-7001	1	Tube
92210	92210-7004	1	Nut
130	130B0612	2	Bolt-Flanged
130A	130B0816	2	Bolt-Flanged
232	232B0514	2	Screw-Pan-WS+-
233	233B0416	1	Screw-Pan-WP+-
311	311B0400	1	Nut-Hex
317	317R0800	4	Nut-Hex-Small

Obtain Parts from Kawasaki



Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

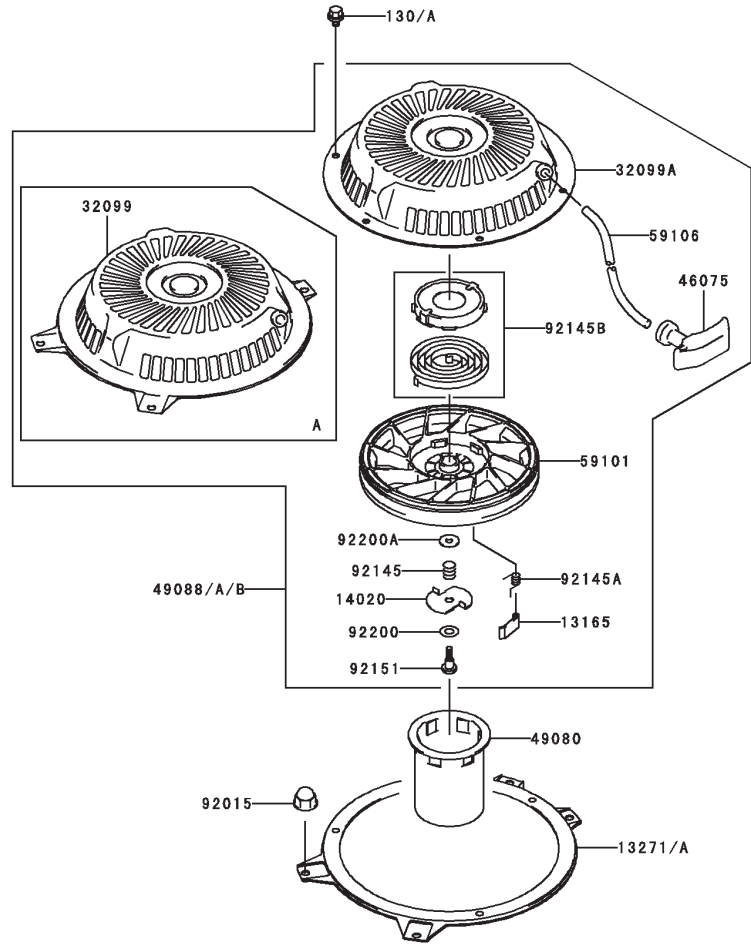

Starter Assembly Kawasaki FH451V-BS04

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13165	13165-7001	2	Pawl, Recoil Starter				
13271	13271-7003-9H	1	Plate				
14020	14020-7001	1	Retainer				
32099	32099-7002	1	Case, Recoil Starter				
46075	46075-7001	1	Grip, Recoil Starter				
49080	49080-7001	1	Pulley-Starting				
49088	49088-7002	1	Starter-Recoil				
59101	59101-7001	1	Reel, Recoil Starter				
59106	59106-7001	1	Rope				
92015	92015-1170	4	Nut				
92145	92145-7006	1	Spring				
92145A	92145-7007	2	Spring				
92145B	92145-7008	1	Spring				
92151	92151-7008	1	Bolt				
92200	92200-7004	1	Washer				
92200A	92200-7005	1	Washer				
130	130B0608	3	Bolt-Flanged				

Obtain Parts from Kawasaki

Ref. No.	Part No.	Qty.	Description
56033	56033-7001	1	Label-Manual
56080	56080-2077	1	Label-Brand
56080A	56080-7010	1	Label-Brand

24

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

