



Bag Kit

21in 60V Lawn Mower

Model No. 161-3137

Installation Instructions

Safety

Safety and Instructional Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or missing.




139-8986

decal139-8986

Installation

Assembling the Grass Bag

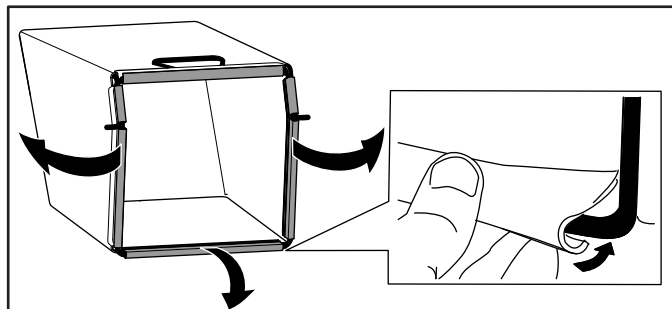

g409809

Figure 1



Installing the Grass Bag

1. Shut off the machine and wait for all moving parts to stop.
2. Remove the battery pack from the machine.
3. Raise and hold up the rear deflector (A of [Figure 2](#)).
4. Remove the rear-discharge plug by pushing in the latch with your thumb and pulling the plug out from the machine (B and C of [Figure 2](#)).
5. Install the bag rod ends into the notches at the base of the handle (D of [Figure 2](#)).
6. Lower the rear deflector until it rests on the grass bag.

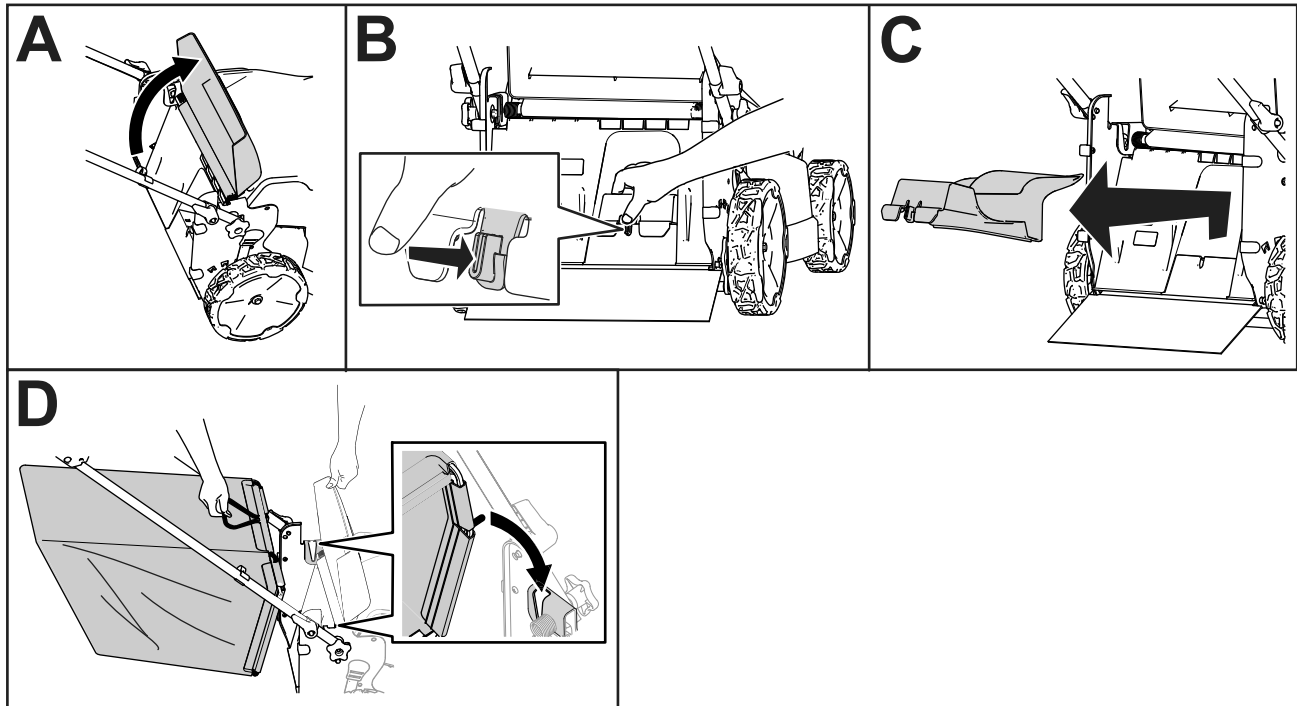


Figure 2

g443724

Removing the Grass Bag

⚠ DANGER

The machine can throw grass clippings and other objects through an opening in the machine housing. Objects thrown with enough force could cause serious personal injury or death to you or to bystanders.

- Never remove the grass bag and then start the machine without the discharge plug installed on the machine.
- Never open the rear deflector on the machine when the machine is running.

Reverse the steps in [Installing the Grass Bag \(page 2\)](#).