



Proline 53cm Recycler/Rear Bagger Mower Model No. 22157–230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

 
Contents

Description	Page	Description	Page
Housing Assembly	3	Wheel and Tire Assembly No. 53–7720	10
Blade Brake Clutch Assembly	5	Gear Case Assembly No. 74–1861	11
Fuel Tank Assembly	6	Wheel and Tire Assembly No. 74–1720	12
Handle Assembly	7	Grass Bag Assembly No. 99–2535	13
Handle Control Assembly	8	Engine GTS–200	14
Gear Case and Rear Wheel Assembly	9		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

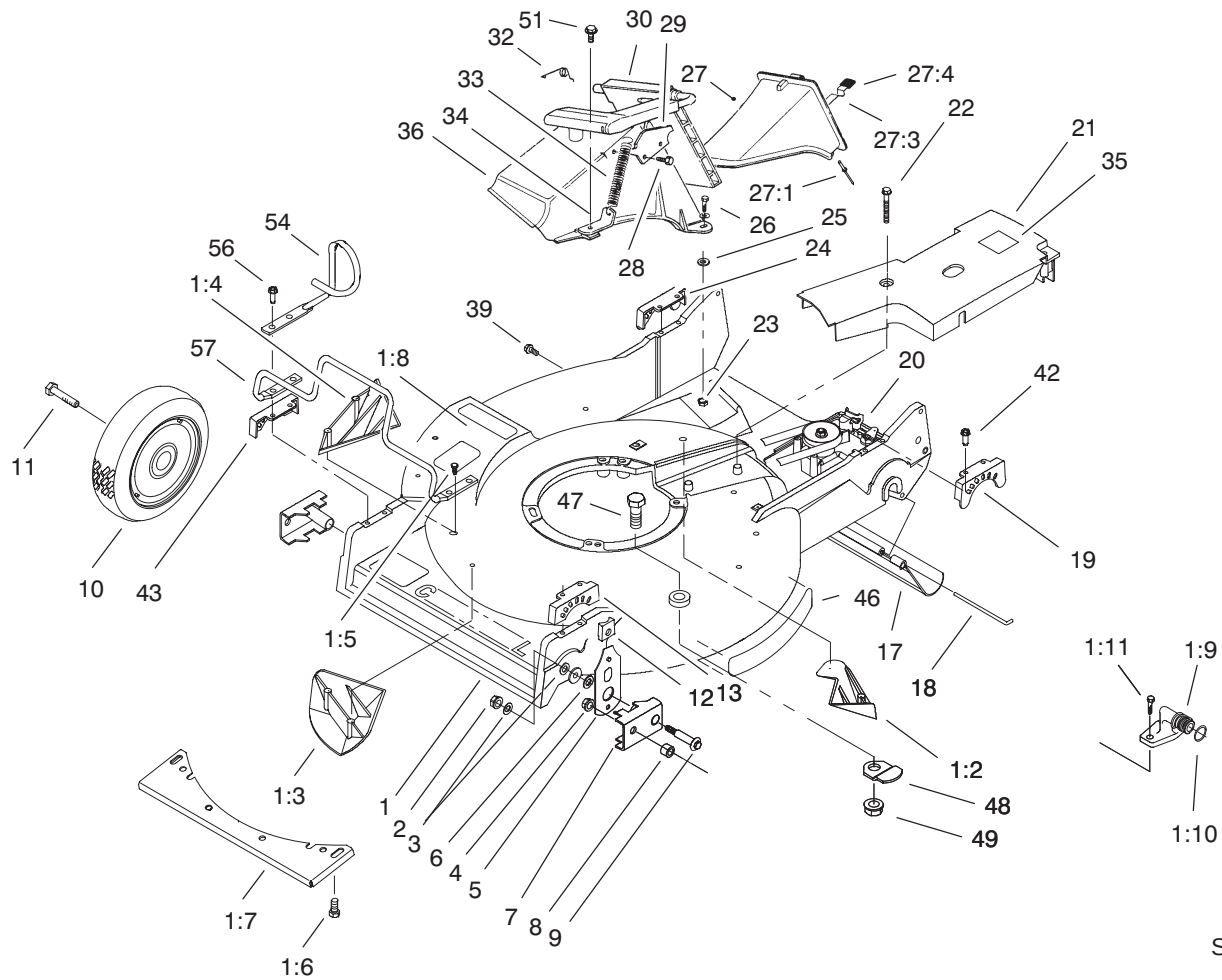


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7144	1	Housing
1:2	92-1750	1	Kicker-Rear
1:3	92-1720	1	Kicker-Front
1:4	92-1730	1	Kicker-RH
1:5	32144-111	6	Screw-PPH
1:6	32144-70	4	Screw-HH
1:7	46-5400-03	1	Shield
1:8	93-6654	1	Decal-Danger Covers
1:9	95-2747	1	Fitting-Washout
1:10	46-6290	1	O-Ring
1:11	46-6811	2	Screw-HWH
2	3296-6	2	Nut-Lock, NI
3	40-1940	4	Washer
4	32152-2	2	Nut-Conelock
5	66-7560	2	Front Spring Arm ASM
6	257-3	2	Washer-Thrust
7	61-8300	2	Arm-Pivot, Front
8	52-2480	2	Spacer-Wheel
9	27-6232	2	Bolt-Wheel
10	53-7720	2	Wheel & Tire ASM
11	323-12	2	Screw-HH
12	25-7740	2	Knob-Arm
13	49-8760	1	Quadrant-Front, LH
17	44-0580	1	Shield-Trailing
18	33-3208	1	Rod-Shield
19	49-8740	1	Quadrant-Rear, LH

Ref. No.	Part No.	Qty.	Description
20	74-1861	1	Gear Case ASM
21	98-3214	1	Cover-Belt
22	37-7260	2	Screw-HH
23	3296-42	2	Nut-Lock, NI
24	49-8750	1	Quadrant-Rear, RH
25	3256-22	2	Washer-Flat
26	321-7	2	Screw-HH
27	77-0502	1	Discharge Plug ASM
27:1	3295-35	1	Rivet-Head, Flat
27:3	76-4640	1	Latch-Plug, Discharge
27:4	76-4650	1	Grip-Latch
28	46-8090	2	Screw-Plastite
29	93-3154	1	Latch-Plate
30	93-7351	1	Discharge Door ASM
32	80-3770	1	Retainer-Door
33	76-4660	1	Spring-Door
34	71-9350	1	Bracket-Spring
35	93-6664	1	Decal-Grease, Int'l
36	82-9151	1	Tunnel-Discharge
39	46-6810	1	Screw And Washer ASM
42	49-2040	4	Screw-Tapping
43	49-8770	1	Quadrant-Front, RH
46	92-7988	1	Decal-Recycler
47	323-6	2	Screw-HH
48	84-8930	2	Shield-Retainer

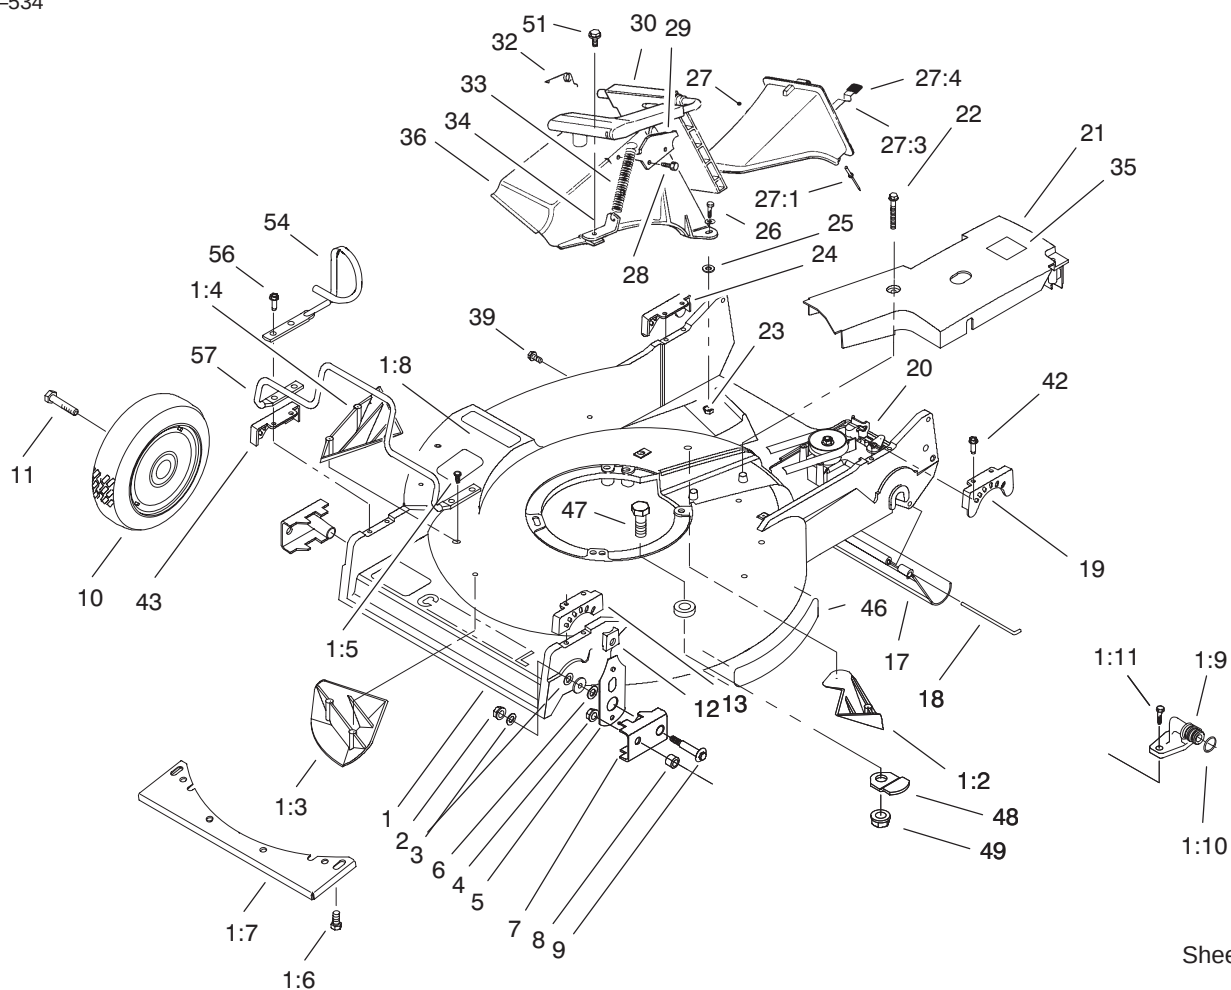 


Sheet No.:2

Housing Assembly (continued)

Ref. No.	Part No.	Qty.	Description
49	3296-39	2	Nut-Lock, NI
51	46-6811	1	Screw-HWH
54	98-9227	1	Guard - Primer
56	32144-86	4	Screw-HH
57	99-6722	1	Guard-Engine

Ref. No.	Part No.	Qty.	Description

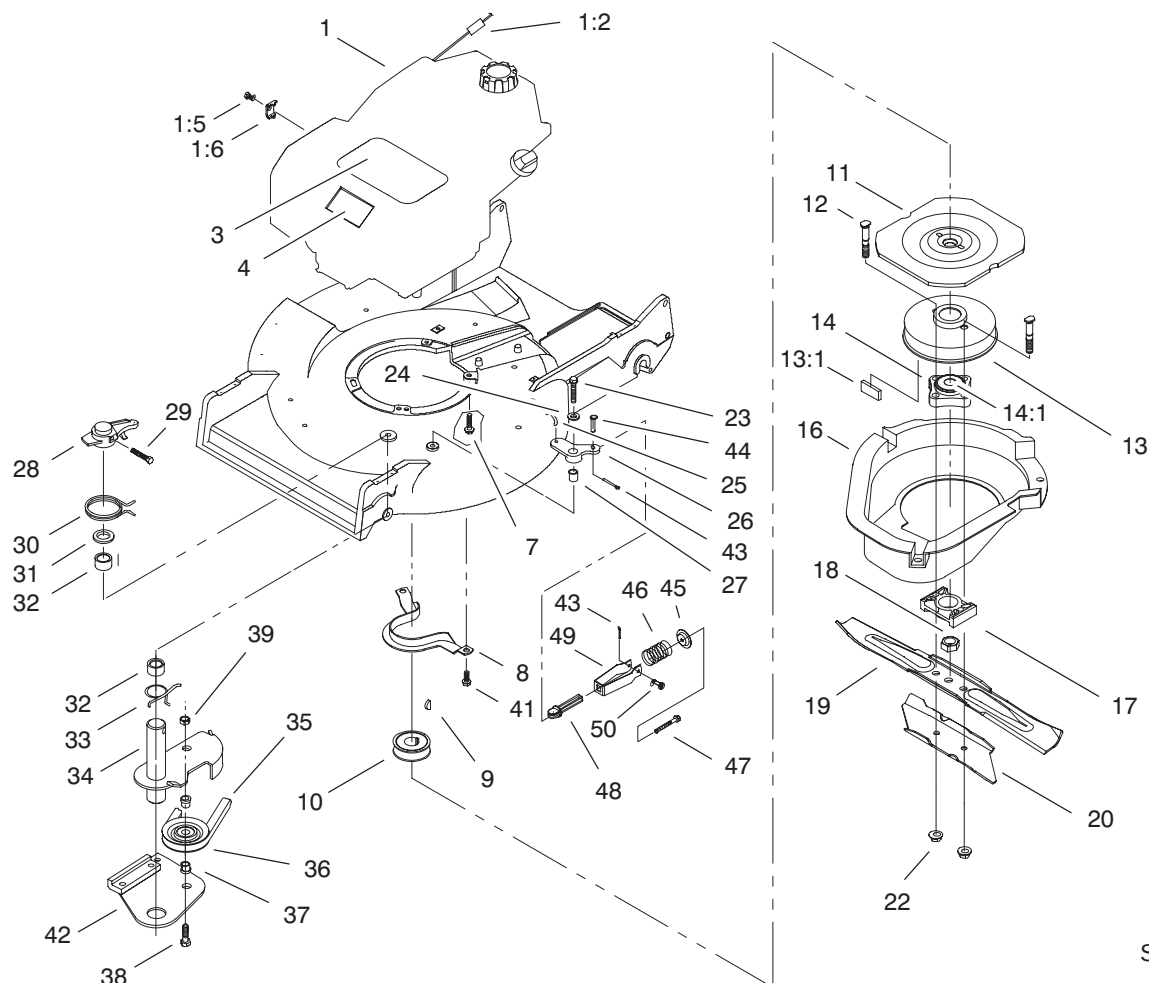 


Sheet No.:3

Blade Brake Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9246	1	Engine Replacement ASM
1:2	2210-316	1	Stop-Rope
1:5	93-8470	1	Screw-Clamp
1:6	2210-249	1	Clamp-Casing
3	98-2004	1	Decal-Engine
4	84-4960	1	Decal - Proline
7	32144-102	3	Screw-HWH
8	66-0570-03	1	Bracket-Guide, Belt
9	3257-17	1	Key-Woodruff
10	56-6180	1	Driver-Pulley
11	56-6160-03	1	Flywheel - Bbc
12	42-3190	2	Bolt-Blade
13	94-9431	1	Brake Drum ASM
13:1	52-3480	2	Dampner-Vibration
14	42-6890	1	Hub ASM
14:1	100-1048	2	Bearing-Ball
16	46-5693	1	Shield
17	62-4280	1	Spacer-Blade
18	603164	1	Nut-Blade
19	14-9419	1	Blade
20	91-2255-03	1	Stiffener-Blade
22	54-9190	2	Nut-Lock
23	32104-107	1	Screw-HH
24	3256-23	1	Washer-Flat
25	49-2810	1	Link - Control

Ref. No.	Part No.	Qty.	Description
26	49-7960	1	Bellcrank
27	49-7950	1	Sleeve-Bellcrank
28	49-2820	1	Lever
29	32104-96	1	Screw-HH
30	49-7970	1	Spring-Torsion
31	70-1160	1	Washer
32	68-9780	2	Bearing
33	85-6880	1	Spring-Torsion
34	84-9130	1	Plate-Brake
35	42-0884	1	V-Belt
36	46-5650	1	Pulley-Idler
37	46-5631	2	Hub-Pulley, Idler
38	322-6	1	Screw-HH
39	3296-47	1	Nut-Lock, NI
41	32144-70	2	Screw-HH
42	84-9180	1	Brake Plate ASM
43	3272-1	2	Pin-Cotter
44	84-9050	1	Pin-Spring
45	65-5280	1	Retainer-Spring
46	84-9100	1	Spring
47	46-7040	1	Screw-HWTF
48	84-8870	1	Guide-Spring
49	84-8880-03	1	Bracket-Spring
50	84-9040	1	Pin-Cable

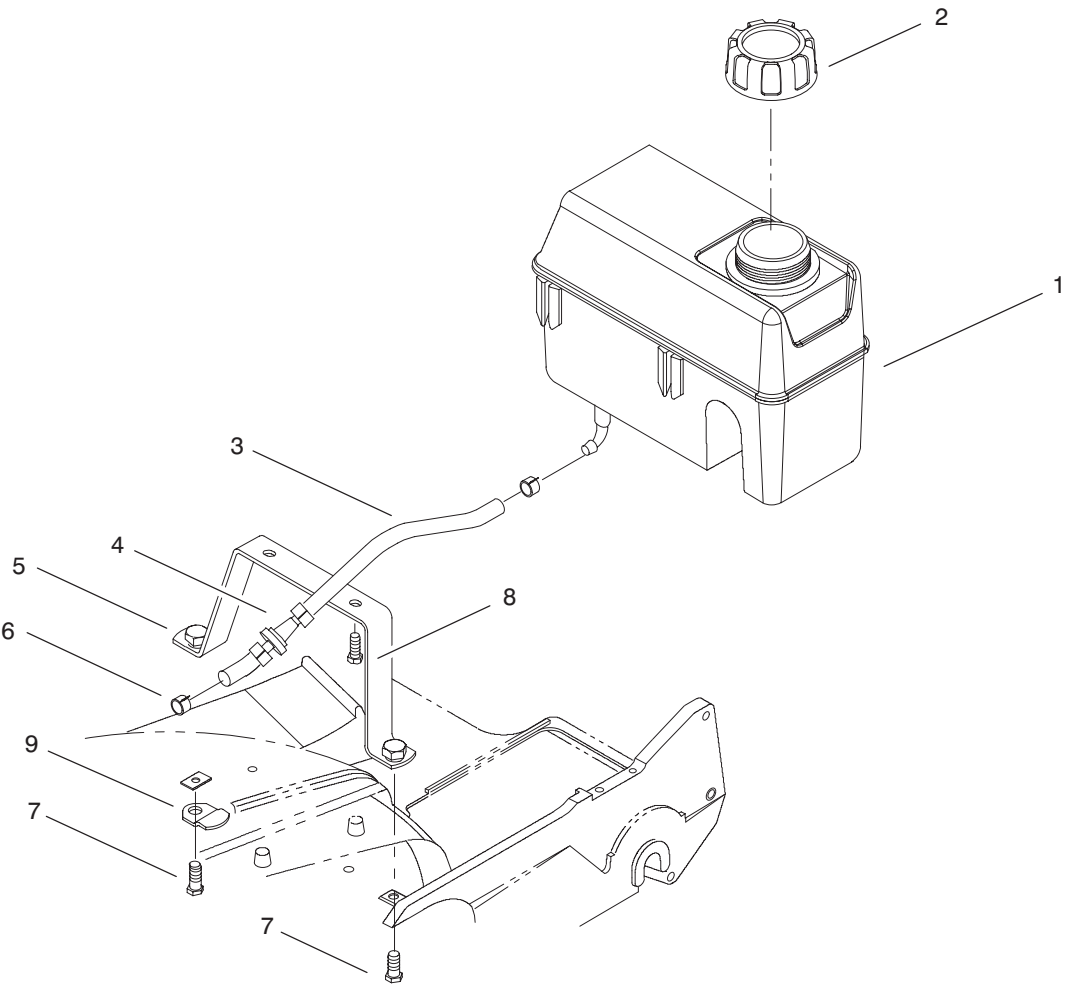 


Sheet No.:4

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	106-0625	1	Tank-Fuel
2	93-7198	1	Gas Cap ASM
3	51-3210	2	Line-Fuel 5.68
4	71-9280	1	Filter-Fuel
5	84-9170-03	1	Base-Tank
6	2412-95	4	Clamp-Fuel Line
7	95-1727	2	Screw-Taptite
8	46-8091	2	Screw-HWH
9	84-8930	1	Shield-Retainer


Ref. No.	Part No.	Qty.	Description

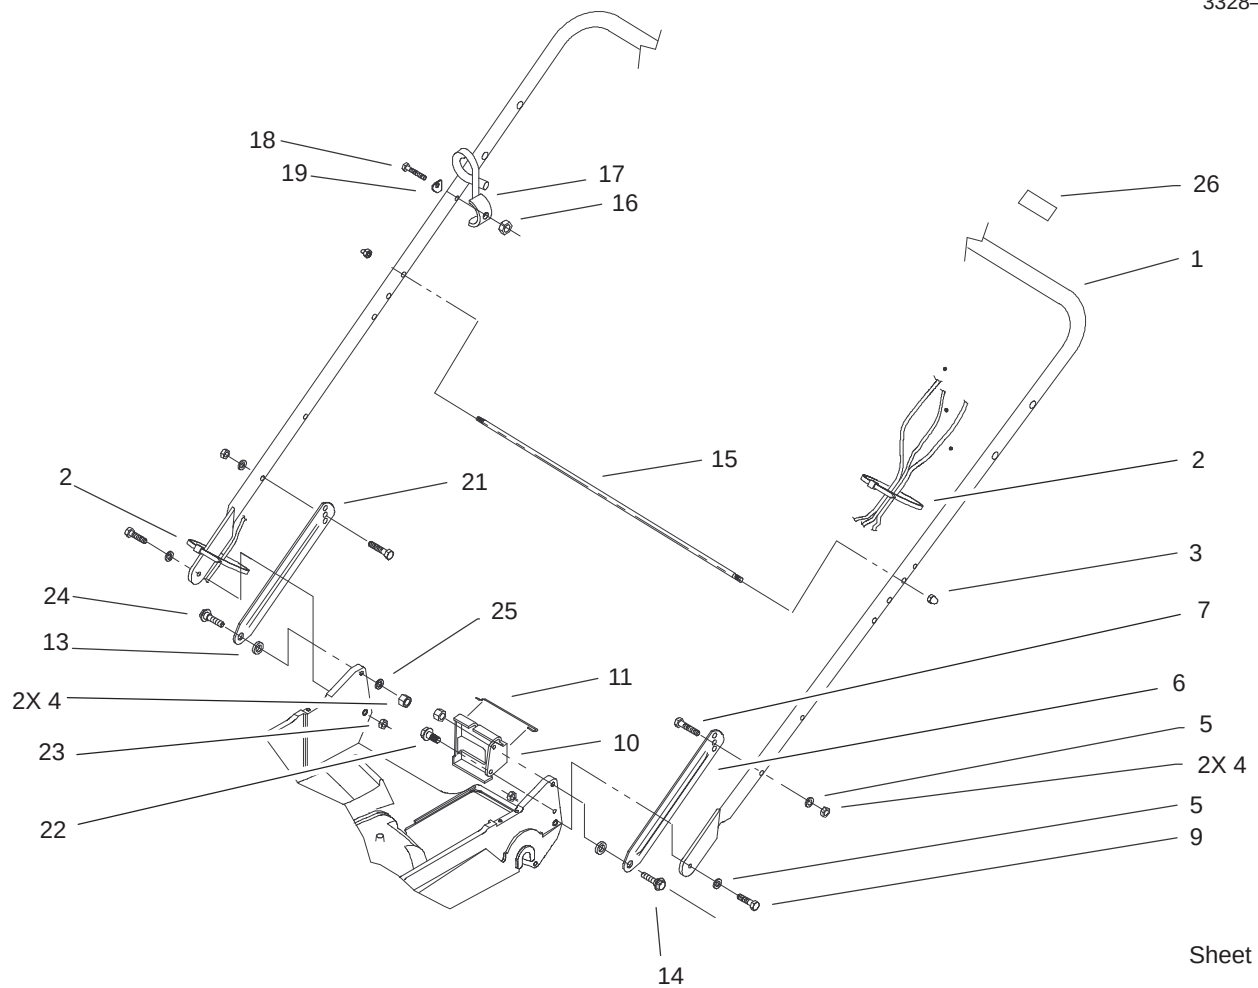 

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-2385-03	1	Handle				
2	3290-378	2	Tie-Cable				
3	32111-7	2	Nut-Cap				
4	3296-29	4	Nut-Lock, NI				
5	3256-23	4	Washer-Flat				
6	100-3298-03	1	Latch-Handle, LH				
7	322-7	2	Screw-HH				
9	322-6	2	Screw-HH				
10	74-1741	1	Bracket-Adjustment, Traction				
11	46-7030	1	Retainer-Cable				
13	3-3287	2	Spacer-Latch, Handle				
14	27-7210	1	Screw-Shoulder				
15	48-2810	1	Rod-Support, Bag				
16	3296-42	1	Nut-Lock, NI				
17	46-8081	1	Guide-Rope				
18	321-9	1	Screw-HH				
19	3-7501	1	Washer				
21	100-3297-03	1	Latch-Handle, RH				
22	32144-70	1	Screw-HH				
23	3296-47	2	Nut-Lock, NI				
24	27-7211	1	Screw-Shoulder				
25	3256-23	2	Washer-Flat				
26	98-4387	1	Decal-Protection, Ear				

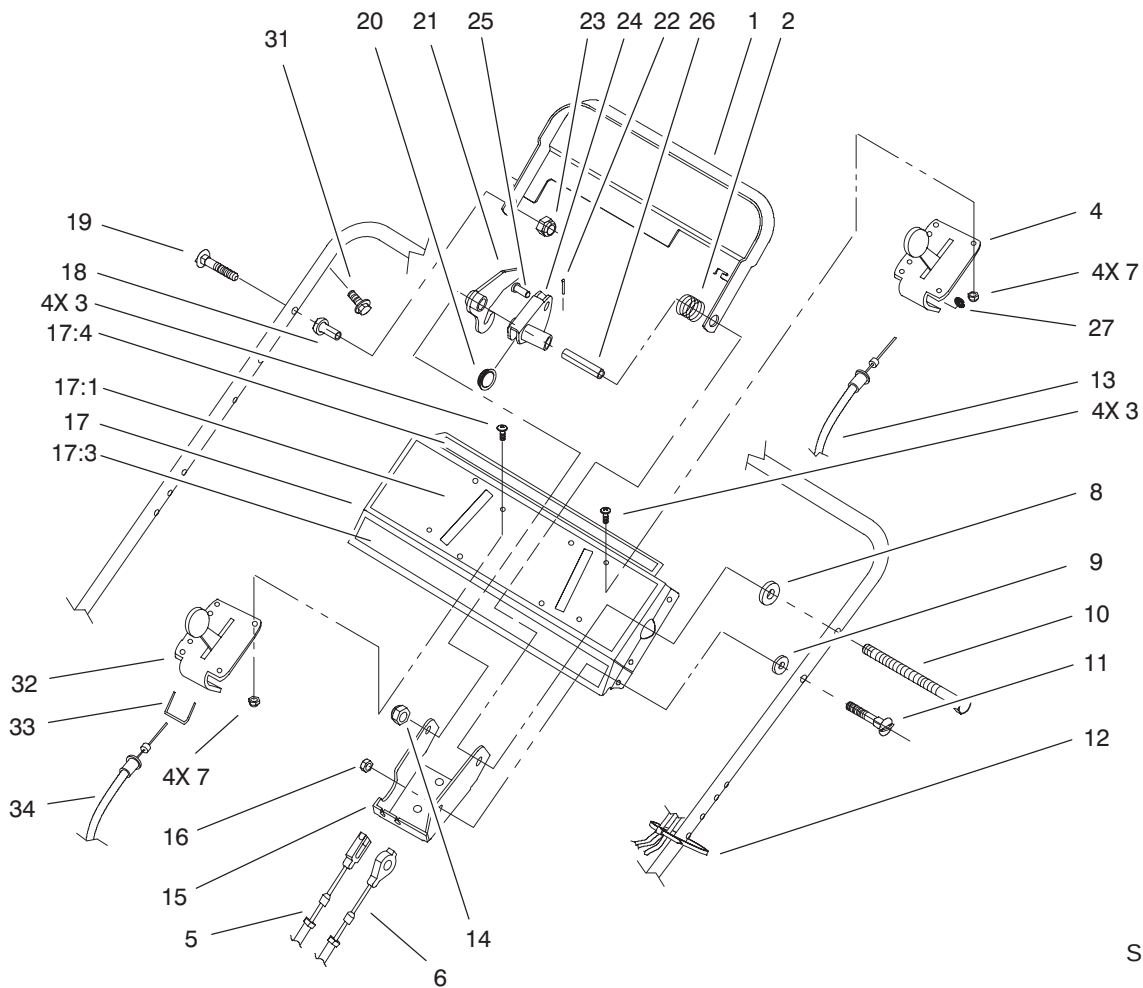 


Sheet No.:6

Handle Control Assembly

Ref. No.	Part No.	Qty.	Description
1	98-4995-03	1	Bar-Control
2	85-6750	1	Spring-Control
3	3250-12	8	Screw-PPH
4	98-2005	1	Control-Throttle
5	84-9120	1	Cable-Traction
6	84-9110	1	Cable-Clutch
7	3296-2	8	Nut-Lock
8	71-9310	1	Spacer
9	71-9320	1	Spacer
10	322-19	1	Screw-HH
11	46-6430	1	Screw-Handle
12	3290-378	2	Tie-Cable
13	98-2047	1	Cable - Throttle
14	3296-29	1	Nut-Lock, NI
15	92-1778-03	1	Bracket-Control
16	3296-42	1	Nut-Lock, NI
17	99-8137	1	Panel ASM
17:1	98-2006	1	Decal-Panel, Control
17:3	106-0771	1	Decal-Panel, Proline
17:4	93-6655	1	Decal-Panel, Rear
18	49-1631	1	Spacer-Support
19	17-9427	1	Screw
20	86-9320	1	Bushing-Flange
21	84-9000	1	Lever-Traction
22	3272-1	1	Pin-Cotter
23	3296-58	1	Nut-Lock NI

Ref. No.	Part No.	Qty.	Description
24	84-8990	1	Lever-Bbc
25	84-9040	1	Pin-Cable
26	84-9030	1	Spacer-Bracket, Control
27	32151-86	1	E-Ring
31	32104-76	6	Screw
32	99-2542	1	Control-Shift, Bbc
33	85-6780	1	Retainer-Cable, Throttle
34	99-2541	1	Cable-Shift, Bbc

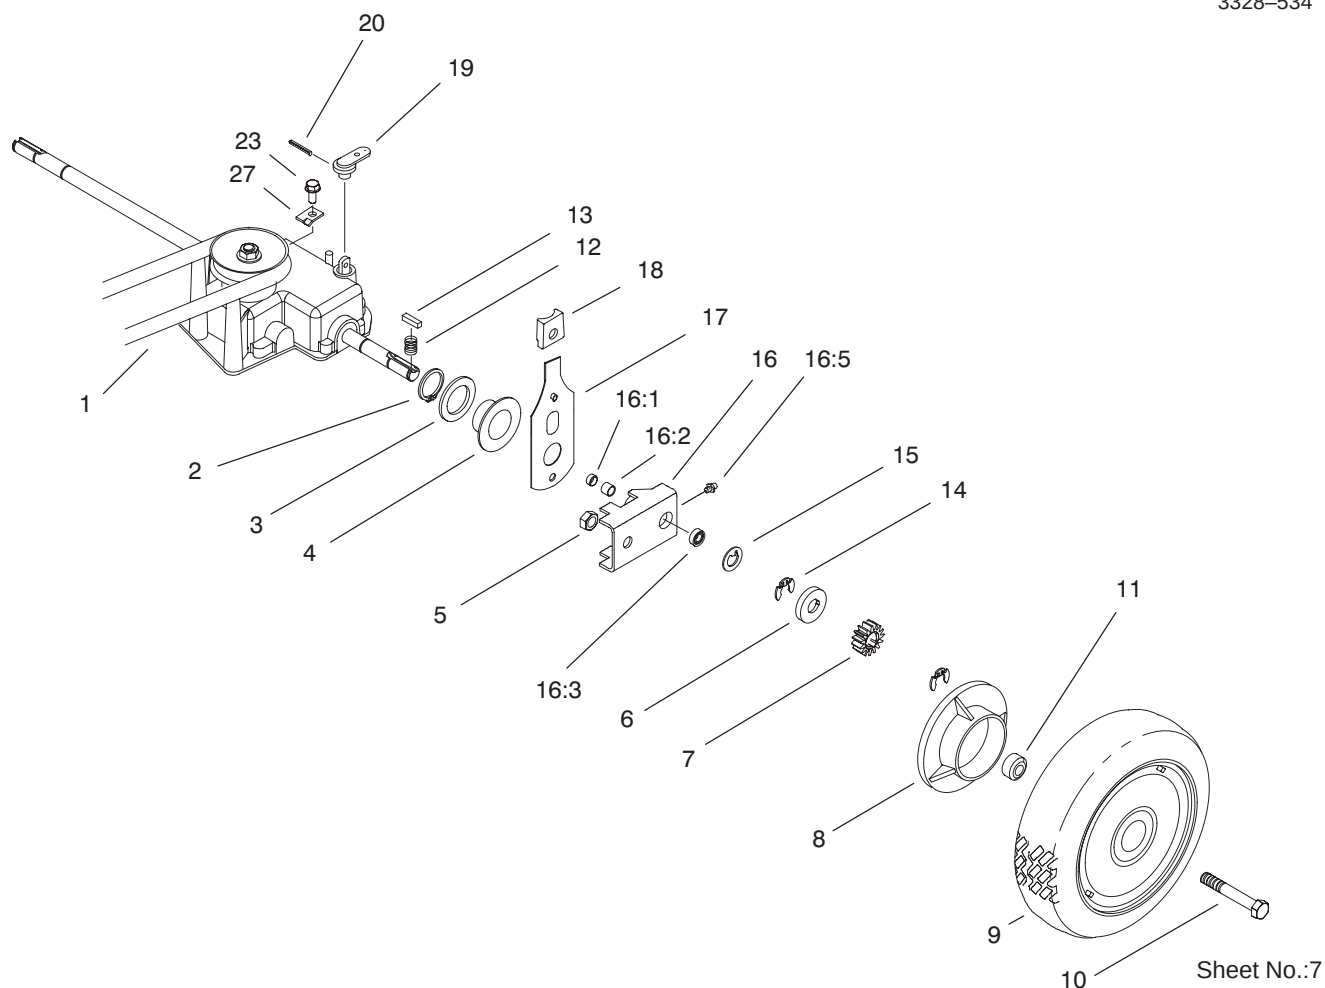 


Gear Case and Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Conelock
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	Wheel & Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk-Drive, Special
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm
19	29-9560	1	Lever-Shift
20	32121-99	1	Pin-Coil
23	32144-70	1	Screw-HH
27	62-3720	1	Clamp-Cable

Wheel and Tire Assembly No. 53-7720

Ref. No.	Part No.	Qty.	Description

 10

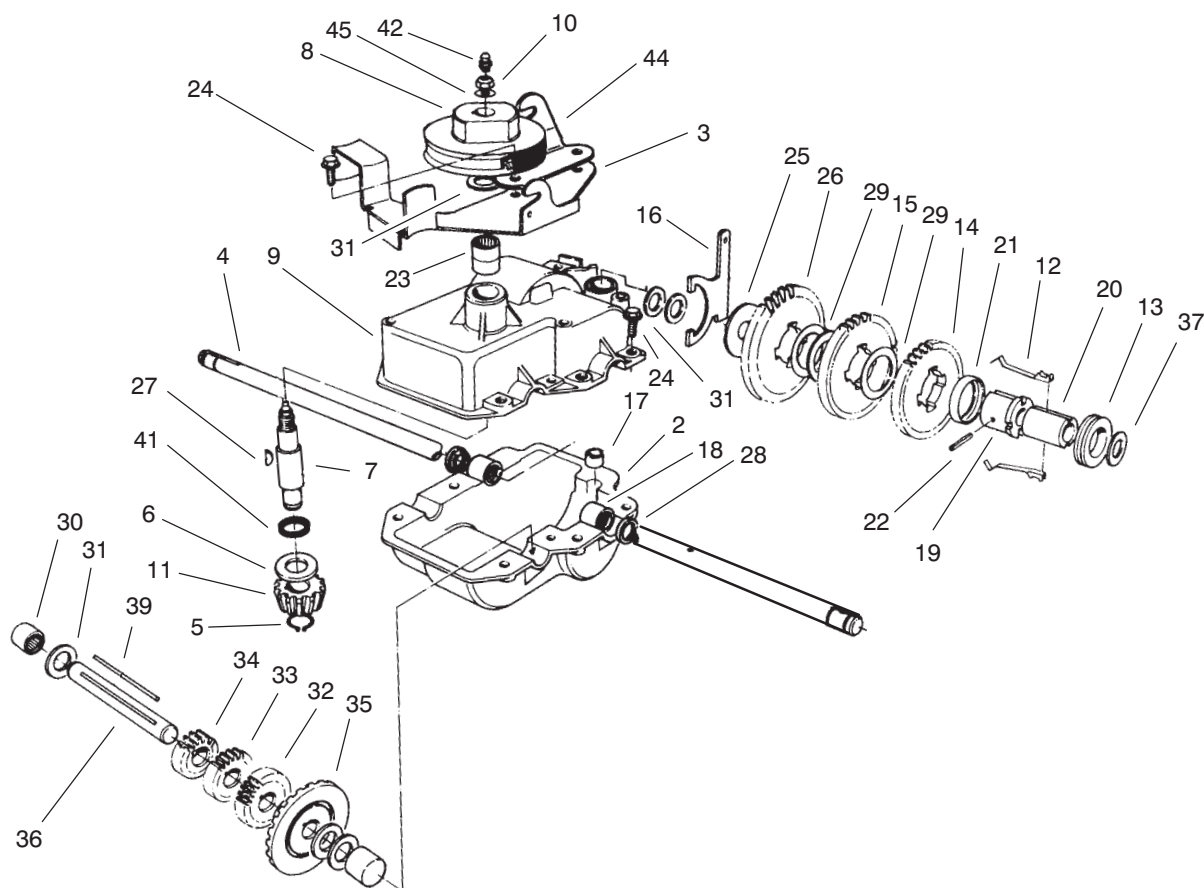

Sheet No.:1

Gear Case Assembly No. 74-1861


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower	28	48-2060	2	Bearing-Roller
3	49-8461-03	1	Bracket-Guide, Belt	29	36-4770	3	Washer
4	74-1890	1	Shaft-Output	30	252-103	2	Bearing-Closed
5	32151-57	1	Ring-Retaining	31	36-4792	4	Washer-Thrust
6	47-2910	1	Washer-Thrust	32	39-6650	1	Gear-18t
7	68-8190	1	Shaft-Input	33	46-3550	1	Gear-14t
8	39-6740	1	Pulley	34	46-3540	1	Gear-12t
9	74-1880	1	Case-Gear, Upper	35	74-1760	1	Gear-Bevel
10	3296-5	1	Nut-Lock, NI	36	53-7950	1	Shaft-Intermediate
11	39-6660	1	Pinion-Bevel	37	36-4780	3	Washer
12	29-9330	2	Key	39	39-7842	1	Key
13	29-9340	1	Collar-Shift	41	47-7260	1	Seal
14	42-4740	1	Gear-38 Tooth	42	302-63	1	Zerk
15	29-9271	1	Gear-42 Tooth	44	74-1750-03	1	Brake-Engage, Traction
16	60-8870	1	Yoke-Shift	45	3256-45	1	Washer-Flat
17	29-9570	1	Bushing-Yoke				
18	47-6730	2	Seal-Oil				
19	55-8010	1	Sleeve-Gear				
20	39-6720	1	Sleeve				
21	55-8020	1	Retainer-Key				
22	3285-19	1	Pin-Groove				
23	47-7270	2	Bearing				
24	49-2040	6	Screw-Tapping				
25	29-9690	1	Washer				
26	46-3560	1	Gear				
27	3257-1	2	Key-Woodruff				

Wheel and Tire Assembly No. 74-1720

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	1	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock, NI
5	92-4957-06	1	Wheel Half/Gear ASM
☆6		1	Hub & Bearing ASM
6:1	52-2410	1	Hub-Bearing
6:2	52-2440	1	Spacer-Bearing
6:3	52-2450	2	Bearing-Wheel

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced separately

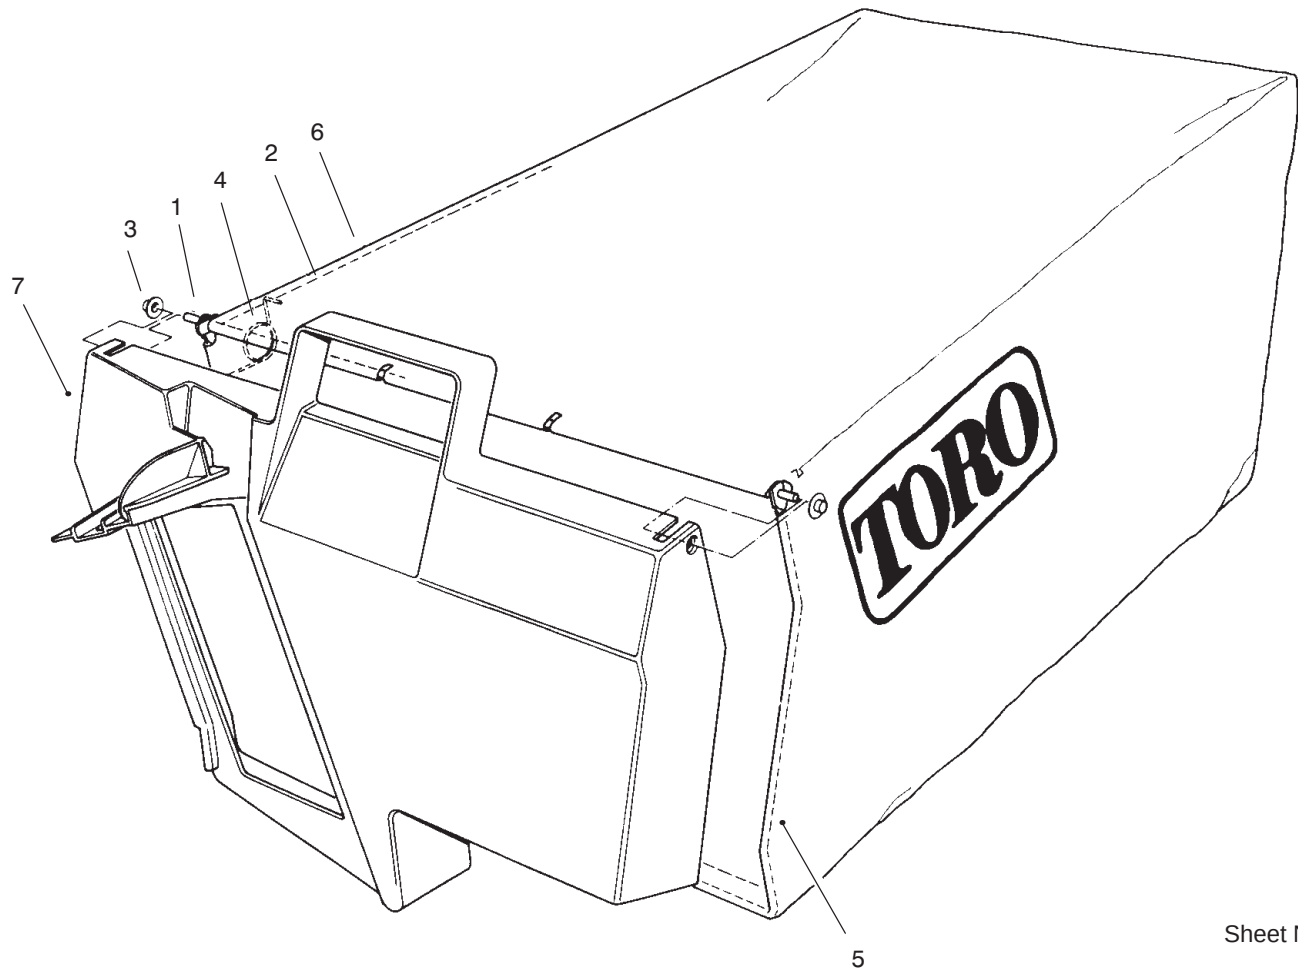


Sheet No.:1

Grass Bag Assembly No. 99-2535

Ref. No.	Part No.	Qty.	Description
1	33-4820	1	Hinge-Door, Bag
2	42-4030	1	Frame-Bag, Upper
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	98-9225	1	Bag-Grass
7	48-2840	1	Door-Bag, Grass
*	99-2535	1	Grass Bag ASM

Ref. No.	Part No.	Qty.	Description

 * Not illustrated

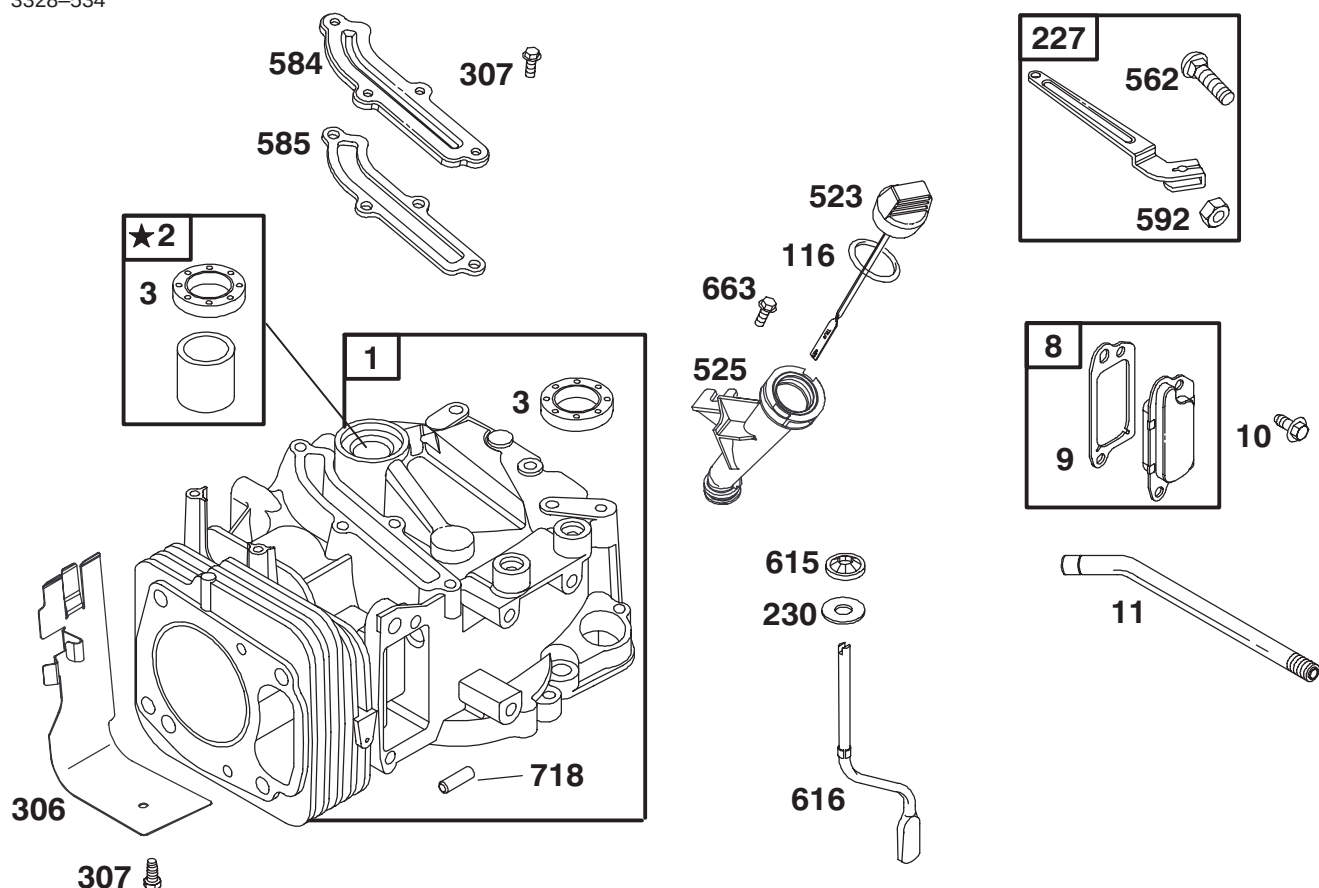

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

Sheet No.:
T-xxxx


Engine GTS-200

Ref. No.	Part No.	Qty.	Description
1	99-0900	1	Cylinder Assembly
2	99-0911	1	Bushing
★3	99-0912	1	Seal - Oil
8	77-9260	1	Breather Asm
†★9	99-0913		Gasket - Breather
10	99-0914	1	Screw - Hex.
11	99-0915	1	Tube-Breather
★116	99-0916		Seal - O Ring
227	99-0917		Lever Assembly-Gov.
230	99-0918		Washer - Gov. Crank
306	99-0919		Shield - Cylinder
307	99-0920		Screw - Hex.
523	77-7260		Dipstick
525	99-0906		Tube - Oil Filler
562	99-0921		Screw - Hex.
584	99-0922		Baffle - Cylinder
★585	99-0923		Gasket - Breather
592	99-0924		Nut - Hex.
615	99-0925		Fastener
616	99-0926		Crank - Governor
663	99-0927		Screw - Hex.
718	99-0928		Dowel - Sleeve

Ref. No.	Part No.	Qty.	Description

† Included in Vavel Overhaul Gasket Set – Part No. 99-0904

 ★ Included in Gasket Set – Part No. 99-0902

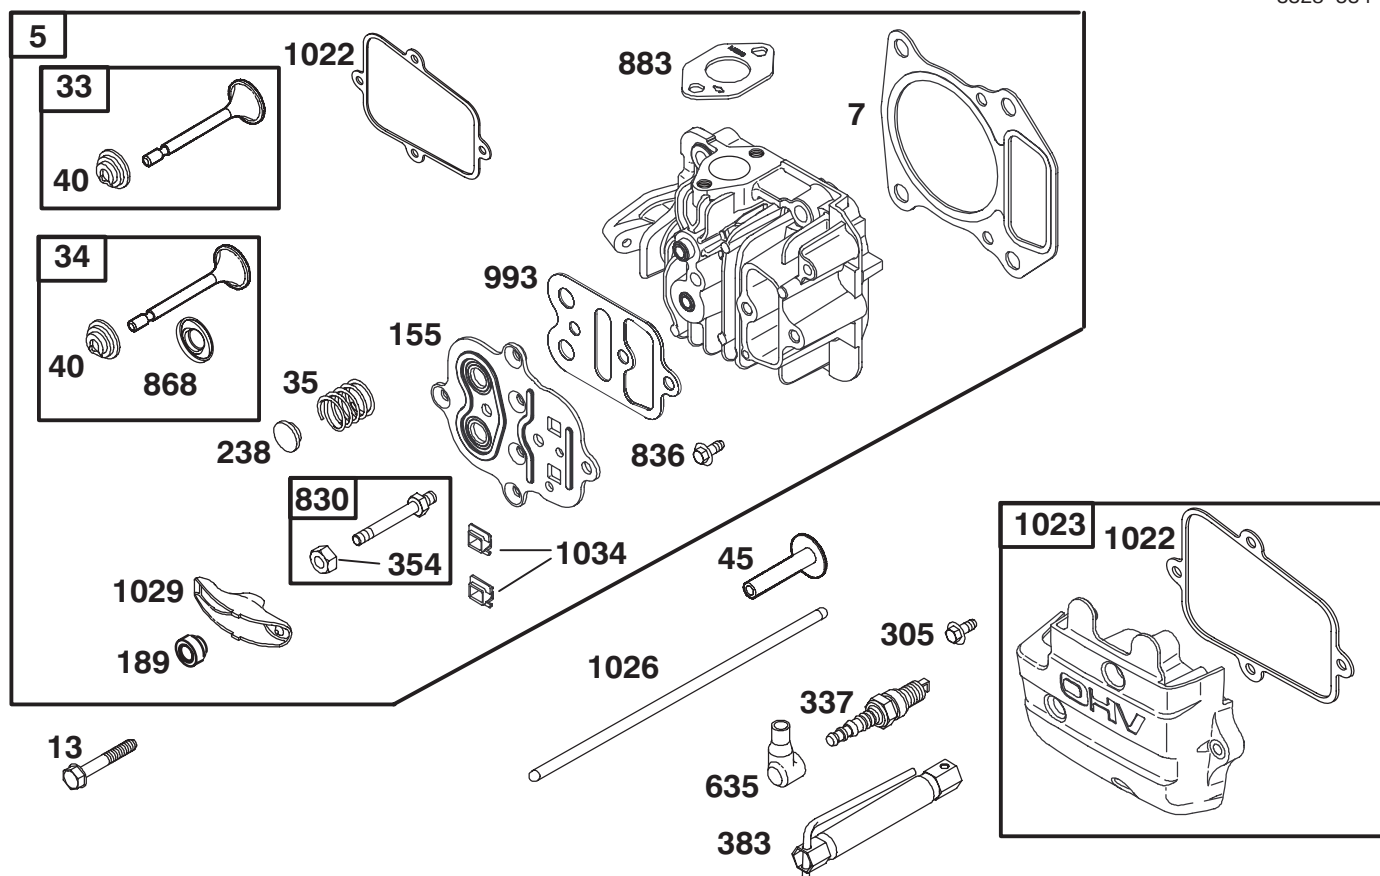

Assemblies include all parts shown in frames.

Sheet No.:


T-xxxx

Engine GTS-200

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
5	99-0929	1	Head-Cylinder	1023	98-9211		Cover - Rocker
†★7	99-0930		Gasket - Cylinder Head	1026	99-0949		Rod - Push
13	99-0931	1	Screw - Hex.	1029	99-0950		Arm - Rocker
33	99-0932	1	Valve - Exhaust	1034	99-0951		Guide - Push Rod
34	99-0933	1	Valve - Intake				
35	99-0934	1	Spring - Valve				
40	99-0935	1	Retainer - Valve Spring				
45	99-0936	1	Tappet - Valve				
155	99-0938	1	Plate - Cylinder Head				
189	99-0939	1	Ball - Rocker Arm				
238	99-0940		Cap - Valve				
305	99-0942		Screw - Hex.				
337	77-7330		Plug - Spark				
354			Nut - Hex. (Sold in Kit Only).				
383	99-0944		Wrench - Spark Plug				
635	77-9190		Elbow - Spark Plug				
830	99-0945		Stud - Rocker Arm				
836	99-0941		Screw - Hex.				
†★868	99-0946		Seal - Valve				
†★883	99-0947		Gasket - Exhaust				
†★993	99-0948		Gasket - Plate				
†★1022	99-0907		Gasket - Rocker Cover				

★ Included in Gasket Set - Part No. 99-0902

 † Included in Vavel Overhaul Gasket Set - Part No. 99-0904

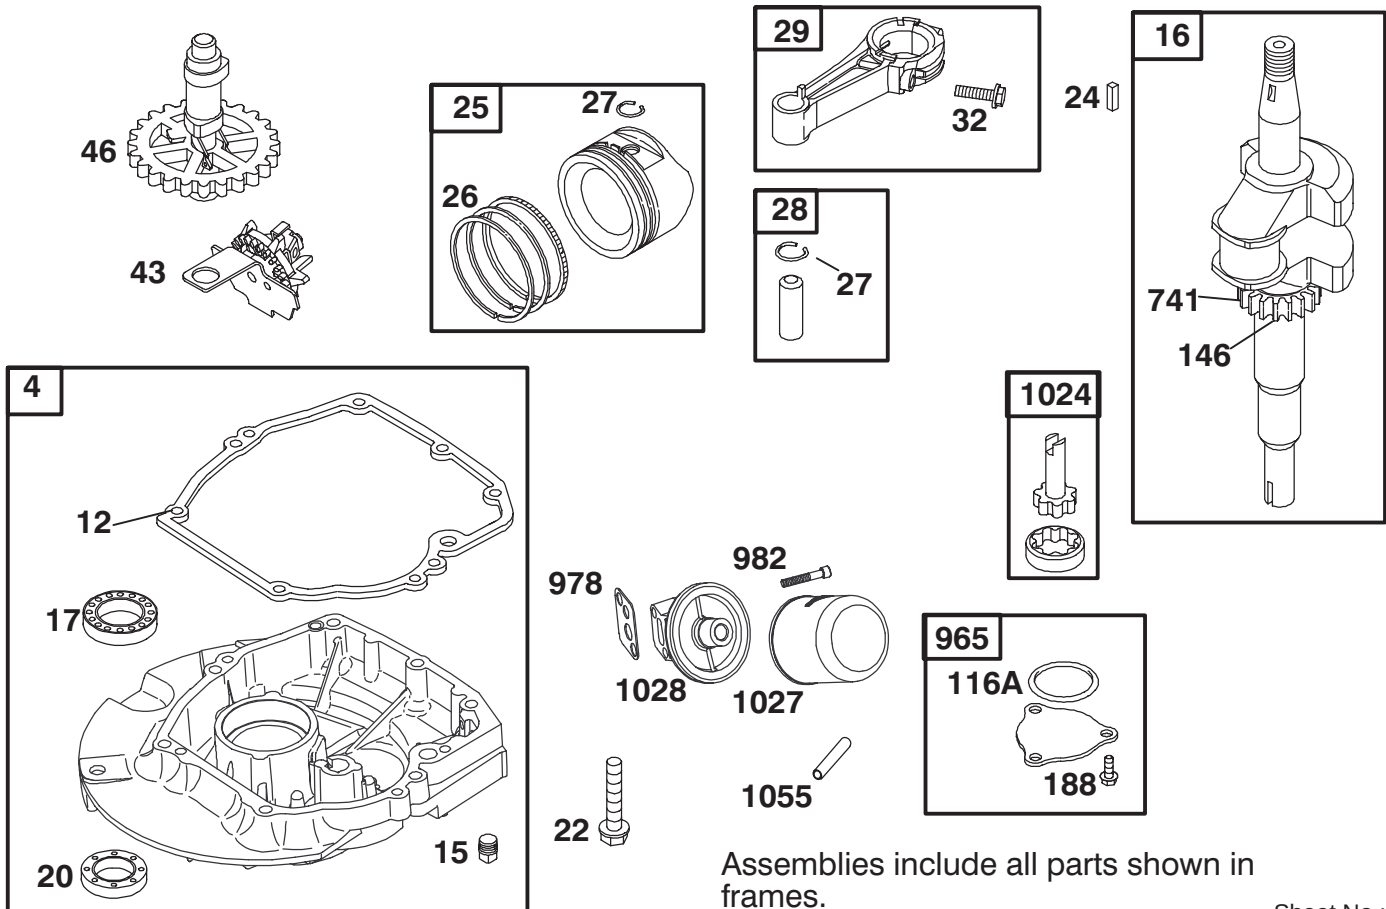

Sheet No.:

T-xxxx

Engine GTS-200

Ref. No.	Part No.	Qty.	Description
4	99-0980	1	Sump-Engine
★12	99-0953	1	Gasket - Crankcase
15	99-0954	1	Plug - Oil Drain
16	98-9213	1	Crankshaft
17	99-1031	1	Bearing-Ball
★20	77-7570	1	Seal - Oil
22	99-0956	1	Screw - Hex.
			Note: 99-1040
			Screw - Hex.
			(One (1) Used in Hole
			Nearest Breather
24	77-8340	1	Key - Flywheel
25	99-0958	1	Piston Assy.
			(Standard)
26	99-0959	1	Ring Set (Standard)
27	99-0960	1	Lock - Piston Pin
28	99-0961	1	Pin - Piston
			(Standard)
29	99-0962	1	Rod - Connecting
32	99-0963	1	Screw - Connecting
			Rod
43	99-0937	1	Governor/Oil Slinger
46	99-0965	1	Gear - Cam
116A	99-1032	1	Seal - O-Ring
146	99-0966	1	Key - Timing
188	99-1033	1	Screw - Hex.

Ref. No.	Part No.	Qty.	Description
741	99-0967		Gear - Timing
965	99-1034		Cover - Oil Pump
978	99-1035		Gasket - Adapter
982	99-1036		Screw - Soc. Hd.
1024	99-1037		Pump - Oil
1027	98-9217		Filter - Oil
1028	99-1038		Adapter - Oil Filter
1055	99-1039		Tube - Oil Pump



★ Included in Gasket Set - Part No. 99-0902

Sheet No.:

T-XXXX

Ref. No.	Part No.	Qty.	Description
95	99-0969	1	Screw-Slotted
●104	99-0970		Pin - Float Hinge
◆110			Washer - Bowl
		1	(Sold in Kit Only).
117	99-0971		Jet - Main (Std.)
			Note: 99-1041
			Jet - Main
			(High Altitude)
124	99-0972		Screw - Shoulder
125	99-0973		Carburetor
●127			Plug - Welch
		1	(Sold in Kit Only).
130	99-0974		Valve - Throttle
131	99-0975		Shaft - Throttle
133	77-8170		Float - Carburetor
●134	77-8110		Valve - Needle
◆137			Gasket - Bowl
		1	(Sold in Kit Only)
◆★163	99-0976		Gasket - Air Cleaner
◆634			Washer - Foam
		1	(Sold in Kit Only).
975	99-0977		Bowl - Float

  - ★ Included in Gasket Set – Part No. 99-0902



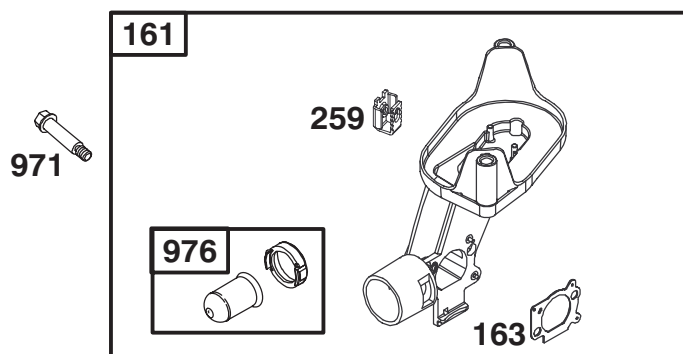
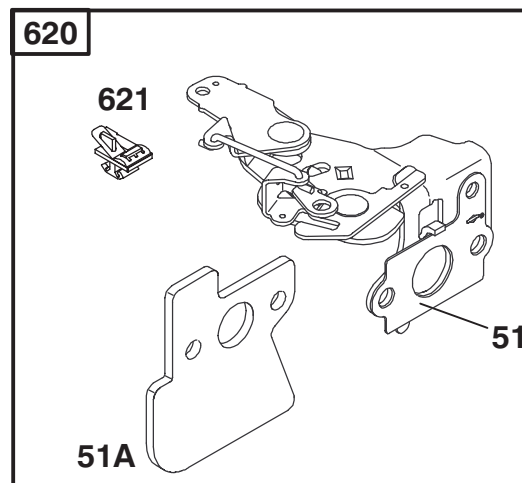


T-xxxx

Ref. No.	Part No.	Qty.	Description
51	99-0968	1	Gasket - Intake
51A	99-0978		Gasket - Intake
161	99-0979		Base - Air
			Cleaner/Primer
◆★163	99-0976		Gasket - Air Cleaner
202	99-0981		Link - Governor
209	99-0982		Spring - Governor
259	99-0984		Grommet
445	98-9212		Filter - Air
467	98-9208		Knob
620	99-0908		Bracket - Control
621	99-0986		Switch - Stop
642	98-9207		Cover - Air Cleaner
967	98-0989		Filter - Air
971	99-0990		Screw - Hex.
976	99-0991		Primer - Carburetor

Ref. No.	Part No.	Qty.	Description

    - ★ Included in Gasket Set – Part No. 99-0902

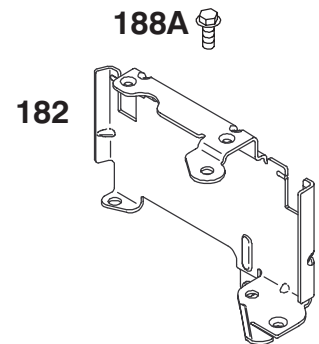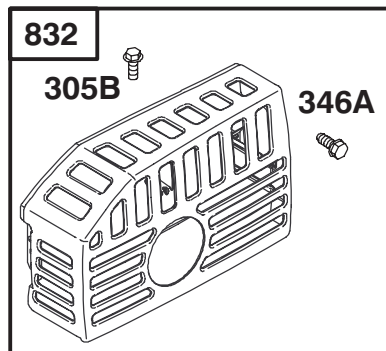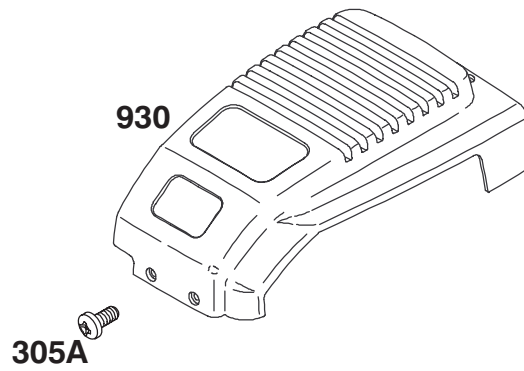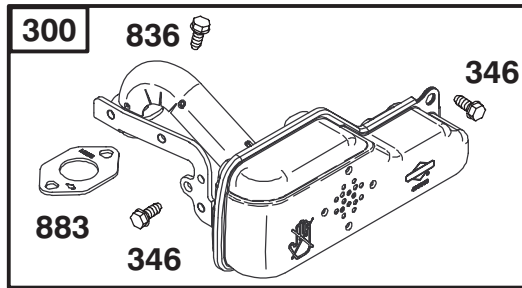

Assemblies include all parts shown in frames.

Sheet No.:

T-XXXX


Engine GTS-200

Ref. No.	Part No.	Qty.	Description
182	98-9205	1	Bracket - Tank Mounting
188A	98-9202		Screw - Hex.
300	99-0995		Muffler - Exhaust
305A	99-9204		Screw - Hex.
305B	99-0998		Screw - Hex.
346	99-1047		Screw - Hex.
346A	99-0999		Screw - Hex.
832	98-9206		Guard - Muffler
836	99-0941		Screw - Hex.
†★883	99-0947		Gasket - Exhaust
930	98-9203		Guard - Rewind

Ref. No.	Part No.	Qty.	Description

★ Included in Gasket Set – Part No. 99-0902

 † Included in Vavel Overhaul Gasket Set – Part No. 99-0904

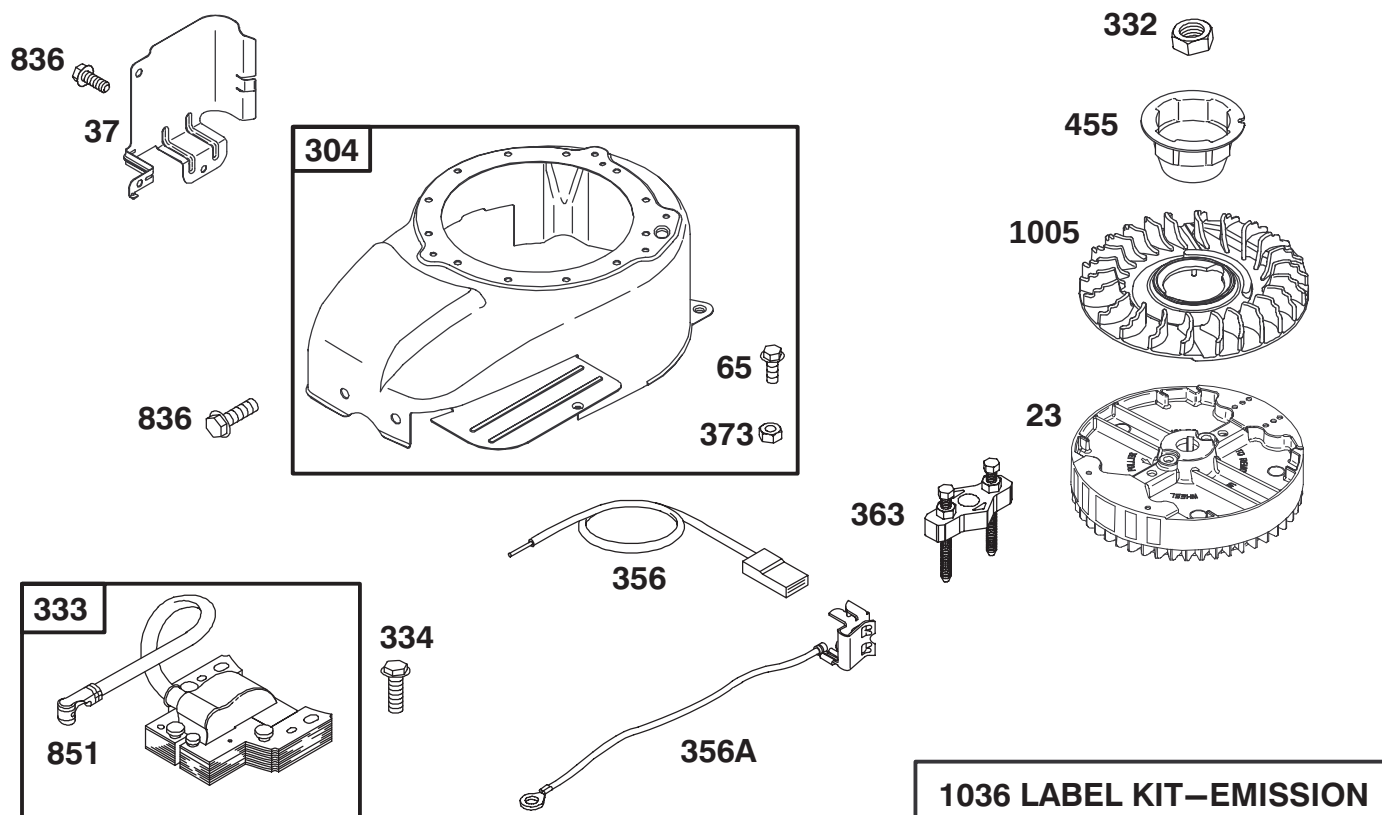

Assemblies include all parts shown in frames.


Sheet No.:

T-xxxx

Engine GTS-200

Ref. No.	Part No.	Qty.	Description
23	99-1001	1	Flywheel
37	99-1013	1	Guard - Flywheel
65	99-1002	1	Screw - Hex.
304	99-1003		Housing - Blower
332	99-1004		Nut - Flywheel
333	99-1005		Armature - Magneto
334	99-1006		Screw - Hex.
356	99-1007		Wire - Stop
356A	99-0910		Wire - Stop
363	99-1008		Puller - Flywheel
373	99-1009		Nut - Hex.
455	99-1010		Cup - Flywheel
836	99-0941		Screw - Hex.
851	77-9450		Terminal - Cable
1005	99-1015		Fan - Flywheel
1036	99-1016		Label Kit - Emission

Ref. No.	Part No.	Qty.	Description

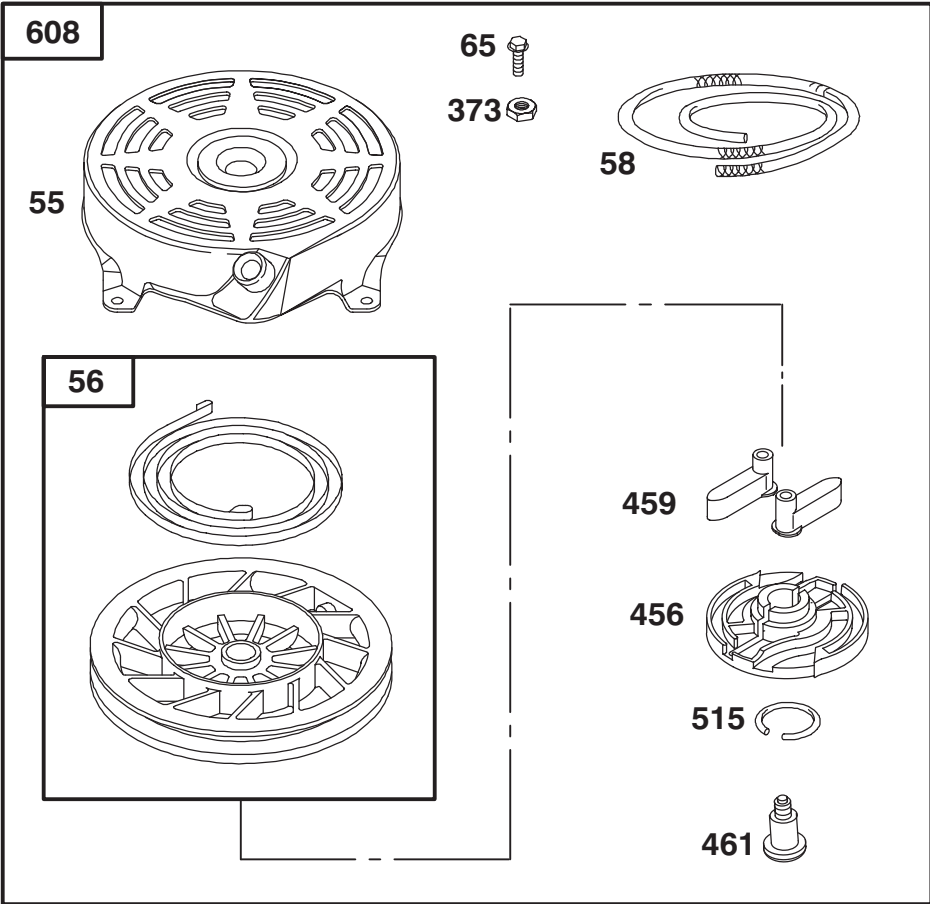 





Assemblies include all parts shown in frames.

Sheet No.:
T-xxxx

Engine GTS-200

Ref. No.	Part No.	Qty.	Description
55	99-1048	1	Housing – Rewind Starter
56	94-1657	1	Pulley – Starter
58	94-1668	1	Rope – Starter
59	77-7210	1	Insert – Starter Grip
60	77-8520	1	Grip – Starter Rope
65	99-1002	1	Screw – Hex.
373	99-1009	1	Nut – Hex.
456	94-1659		Retainer – Spring
459	94-1654		Pawl – Ratchet
461	94-1660		Screw – Shoulder
515	94-1655		Spring – Friction
608	98-9215		Starter – Rewind

Ref. No.	Part No.	Qty.	Description

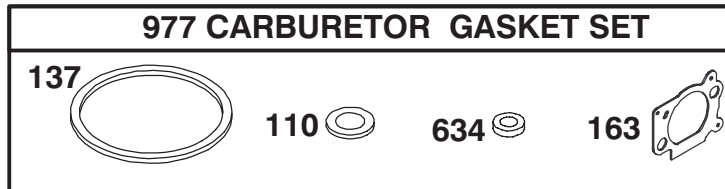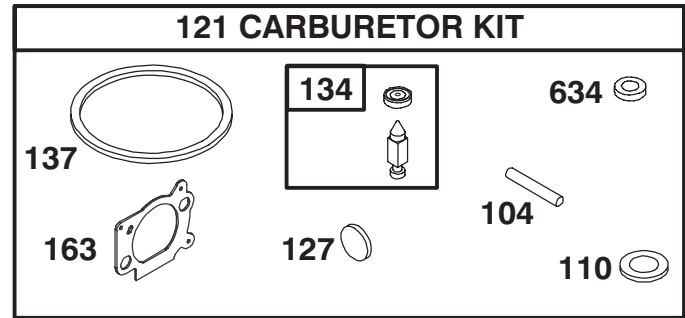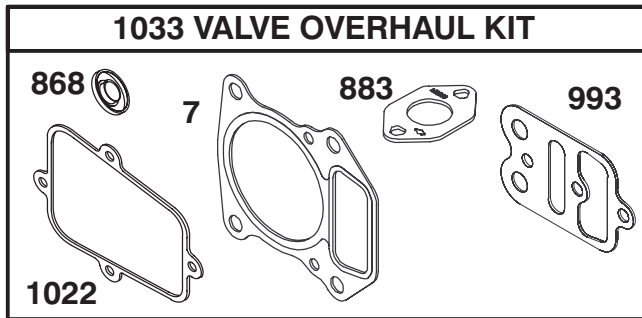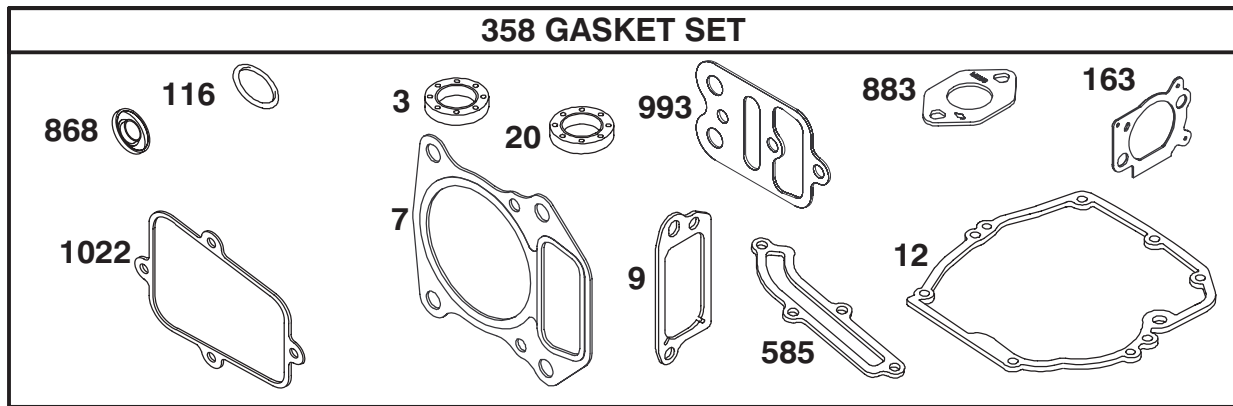    

Assemblies include all parts shown in frames.

Sheet No.:

T-xxxx

Engine GTS-200

Ref. No.	Part No.	Qty.	Description
★3	99-0912	1	Seal-Oil
★7	99-0930		Gasket – Cylinder Head
†★9	99-0913		Gasket – Breather
★12	99-0953		Gasket – Crankcase
★20	99-0955		Seal – Oil
●104	99-0970		Pin – Float Hinge
◆110		1	Washer – Bowl (Sold in Kit Only)
★116	99-0916		Seal – O Ring
121	99-0901		Carburetor Kit
●127		1	Plug – Welch (Sold in Kit Only)
●134	77-8110	1	Valve – Needle
◆137		1	Gasket – Bowl (Sold in Kit Only)
◆★163	99-0976		Gasket – Air Cleaner
1358	99-0902		Gasket Set
★585	99-0923		Gasket – Breather
◆634		1	Washer – Foam (Sold in Kit Only)
†★868	99-0946		Seal – Valve
†★883	99-0947		Gasket – Exhaust
977	99-0903		Gasket Set – Carburetor
†★993	99-0948		Gasket – Plate

Ref. No.	Part No.	Qty.	Description
†★1022	99-0907		Gasket – Rocker Cover
1033	99-0904		Gasket Set – Valve Overhaul

- Included in Carburetor Kit – Part No. 99-0901 † Included in Valve Overhaul Gasket Set – Part No. 99-0904
- ◆ Included in Carburetor Gasket Set – Part No. 99-0903 ★ Included in Gasket Set – Part No. 99-0902

Maintenance Record

[illegible]

