



V-21SB RECYCLER[®] MOWER

Model No. 20490 – 8900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing Assembly	1	Handle Control Assembly	7
Engine Assembly	2	Gear Case Assembly	8
Blade Brake Clutch Assembly	3	Engine Briggs & Stratton	
Handle Assembly	4	Model 12H802–1766–E1	9–17
Bag Assembly	5	Toro Part Number Index	18–21
Rear Axle Assembly	6		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Dethatcher Kit	Model No. 59191		
Leaf Shredder Kit	Model No. 59180		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.

 
For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

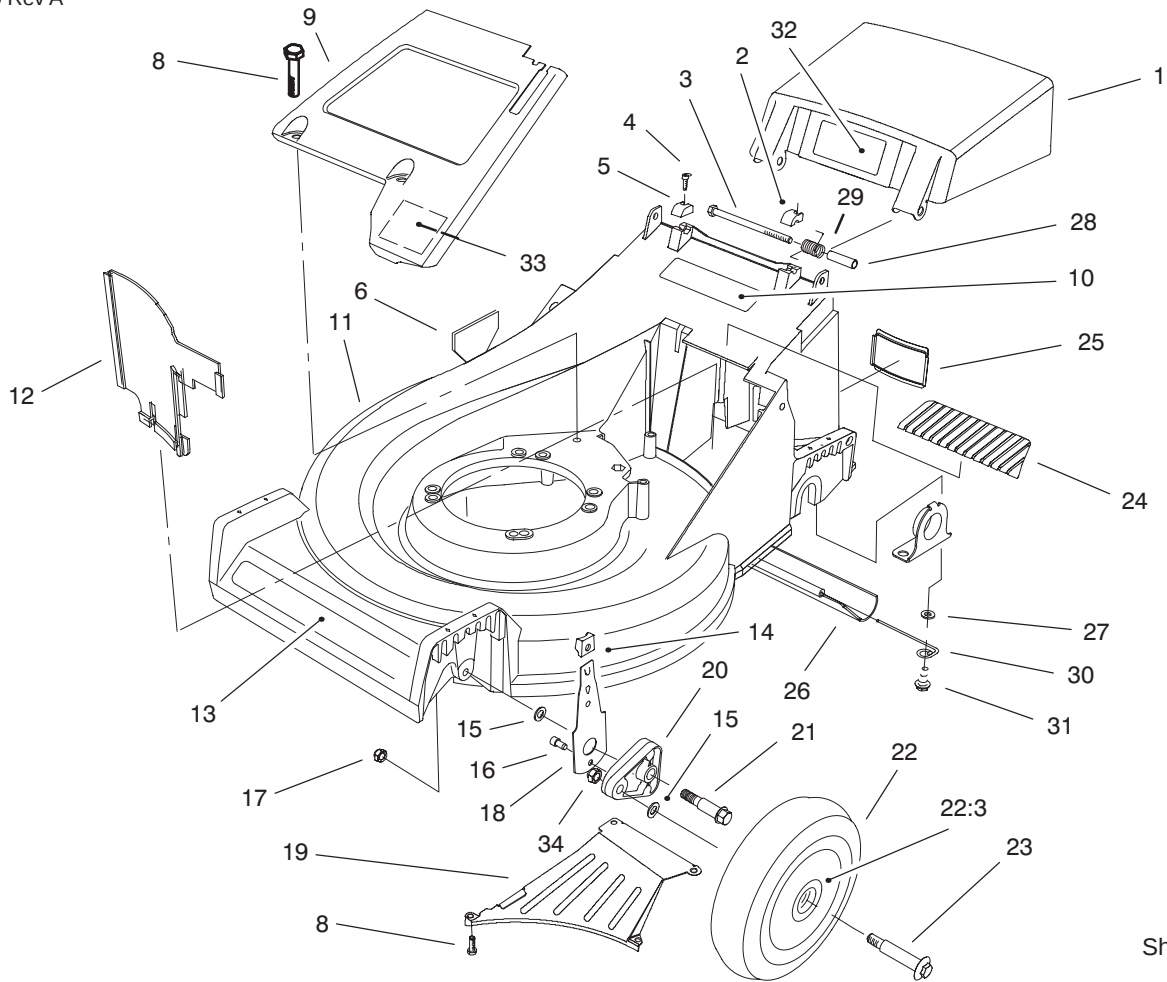


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1725	1	Door-Discharge
2	71-7900	1	Cap-bolt Lh
3	322-29	2	Screw-HH
4	65-5210	2	Screw-Tf
5	71-7910	1	Cap-Bolt RH
6	43-8480	1	Decal-Danger
8	32144-70	6	Screw-TAP
9	65-5660	1	Panel-Screen
10	93-0248	1	Decal-Warning
11	98-9224	1	Housing-53cm
12	66-0020	1	Panel-Vertical
13	98-3223	1	Decal-Deck
14	25-7740	2	Knob-Arm
15	40-1940	4	Washer
16	65-5220	2	Screw-Thrd Frm
17	3296-6	2	Nut-Lock
18	66-0541	2	ASM-Spring Arm
19	71-9640	1	Ramp-Discharge
20	66-0580	2	Arm-Pivot
21	66-0560	2	Screw-Shoulder
22	98-7130	2	ASM-Wheel
22:3	27-6250	4	Bushing
23	92-1057	2	Bolt-Shoulder
24	71-9920	1	Cover-Top
25	71-9650	1	Access-Cover
26	65-5350	1	Shield-Trailing

Ref. No.	Part No.	Qty.	Description
27	3256-23	2	Washer-Flat
28	71-8580	2	Spacer-Door
29	71-9840	2	Spring-Door
30	76-1980	2	Hanger-Shield
31	5-2490	2	Bolt-Shoulder
32	98-3218	1	Decal-Danger
33	71-8680	1	Decal-Bbc
34	603773	2	Nut-Lock

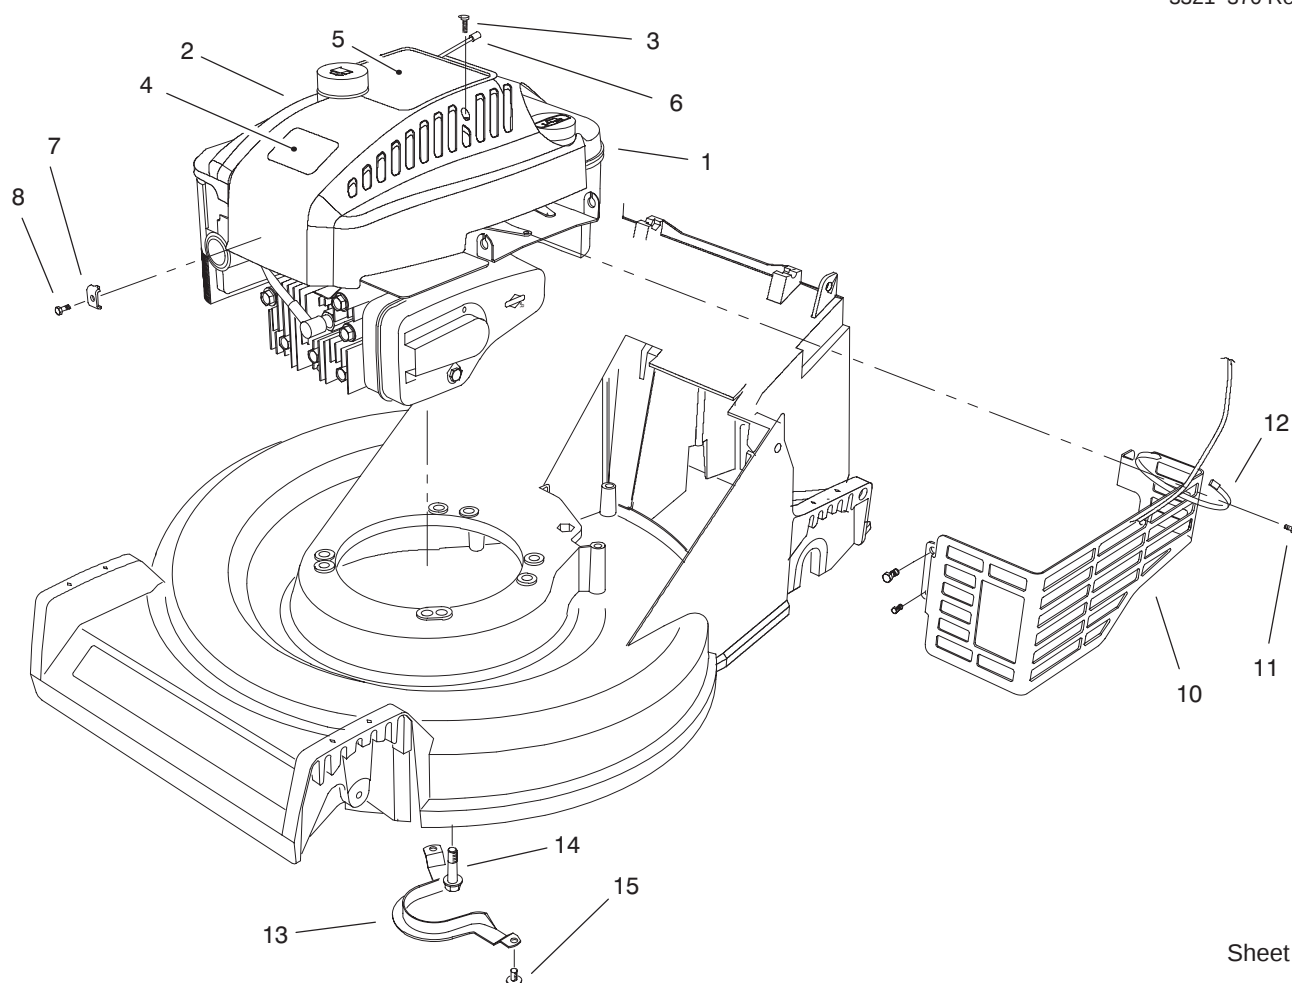 


Sheet No.:3

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1		1	Engine
2	93-0243	1	Shroud
3	32144-121	2	Screw
4	98-3206	1	Plate-Logo
5	95-1671	1	Decal-Engine
6	2210-316	1	Rope-Stop
7	2210-249	1	Clamp-Casing
8	93-8470	1	Screw-Clamp
10	82-8550	1	Shield-Muffler
11	32144-73	3	Screw-HWHTF
12	3290-378	1	Tie-Cable
13	66-0570	1	Guide-Belt
14	32144-102	3	Screw
15	32144-70	2	Screw-TAP

Ref. No.	Part No.	Qty.	Description

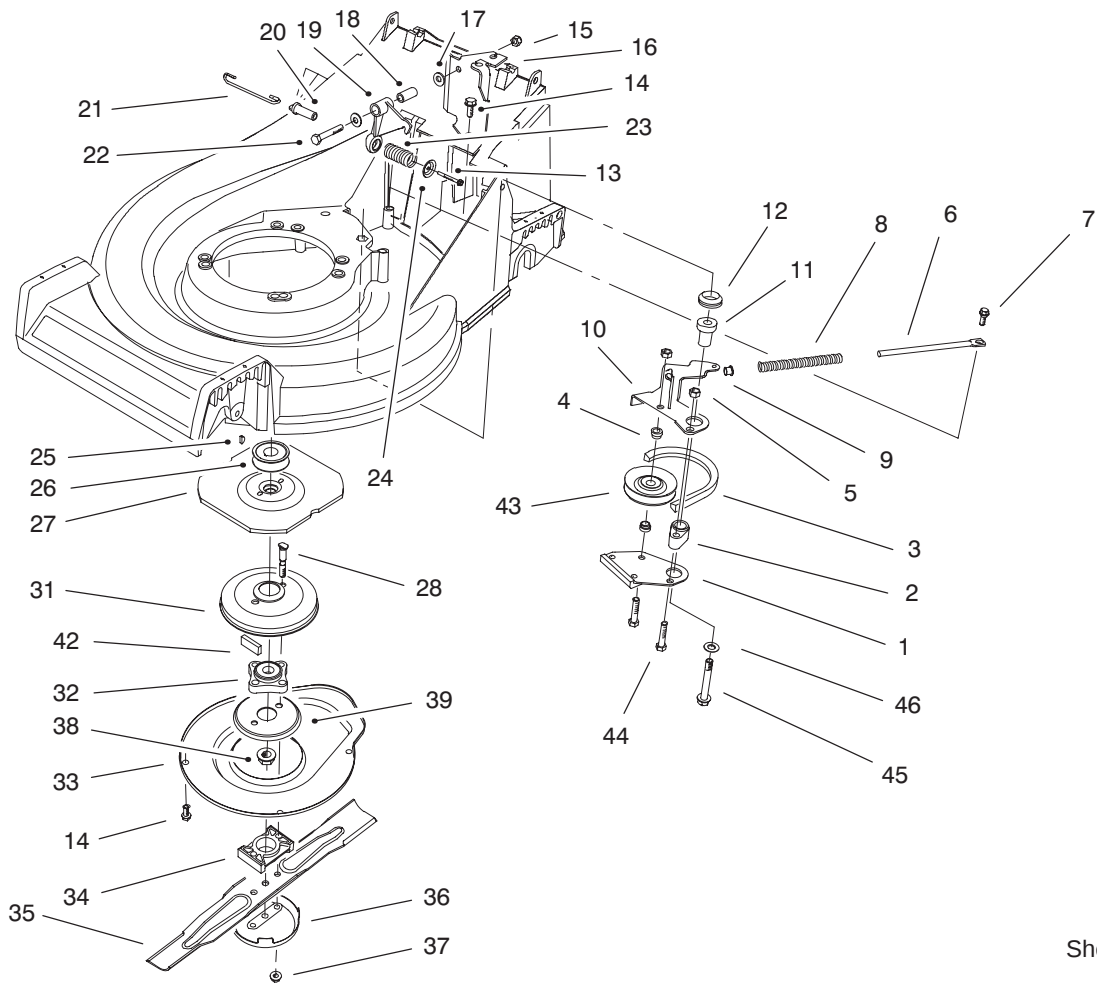 


Sheet No.:4

Blade Brake Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	65-5780	1	Shoe-Brake
2	65-5070	1	Hub-Plate
3	65-5740	1	Belt-"v"
4	65-5130	2	Hub-Pulley
5	3296-42	2	Nut-Lock
6	65-5320	1	Rod-Spring
7	65-5670	1	Bolt-Shoulder
8	71-3640	1	Spring-Compression
9	66-0350	1	Bushing-Flange
10	66-0090	1	Wa-Lever
11	65-5720	1	Bushing
12	253-151	1	Seal-Ring
13	46-7040	1	Screw-HWH
14	32144-70	5	Screw-TAP
15	32128-44	1	Nut-Flange
16	66-0030	1	Bracket-Cable Support
17	3256-23	2	Washer-Flat
18	65-5690	1	Bushing-Bellcrank
19	65-5700	1	Crank
20	71-3660	1	Pin-Spring
21	71-3650	1	Link-Control
22	322-21	1	Screw-HH
23	71-3630	1	Spring-Compression
24	65-5280	1	Retainer-Spring
25	3257-17	1	Key-Woodruff


Ref. No.	Part No.	Qty.	Description
26	62-7560	1	Pulley-Driver
27	65-5300	1	Flywheel-Bbc
28	42-3190	2	Bolt-Blade
31	62-3890	1	Drum-Brake
32	42-6890	1	ASM-Hub
33	65-5200	1	Shield-Bbc
34	62-4280	1	Spacer-Blade
35	62-7700	1	Blade-21"
36	80-2770	1	Cup-Anti Scalp
37	54-9190	2	Nut-Lock
38	3296-33	1	Nut-Lock
39	65-5330	1	Screen-Bbc
42	52-3480	2	Damper-Vibration
43	46-5650	1	Pulley-Idler
44	321-13	2	Screw-HH
45	11-0580	1	Screw-Thd Forming
46	65-5380	1	Washer-Flat

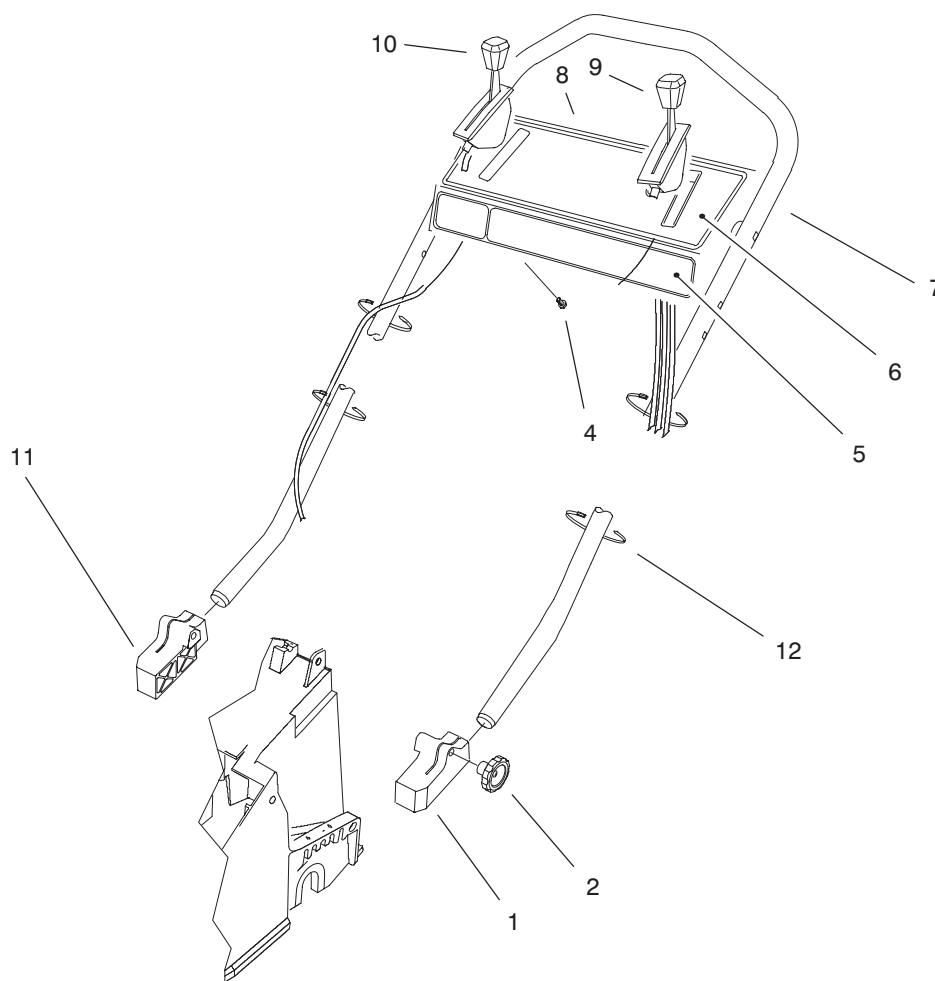 

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	71-8090	1	Mount-Handle LH
2	19-4050	2	Knob
4	92-9665	4	Screw-Phil
5	98-3227	1	Decal-Panel
6	98-1523	1	Decal-Instruction
7	98-3229	1	Handle
8	98-9242	1	Panel-Control
9	98-3242	1	Control-Throttle
10	93-6632	1	Control-Speed
11	71-8100	1	Mount-Handle RH
12	3290-378	5	Tie-Cable

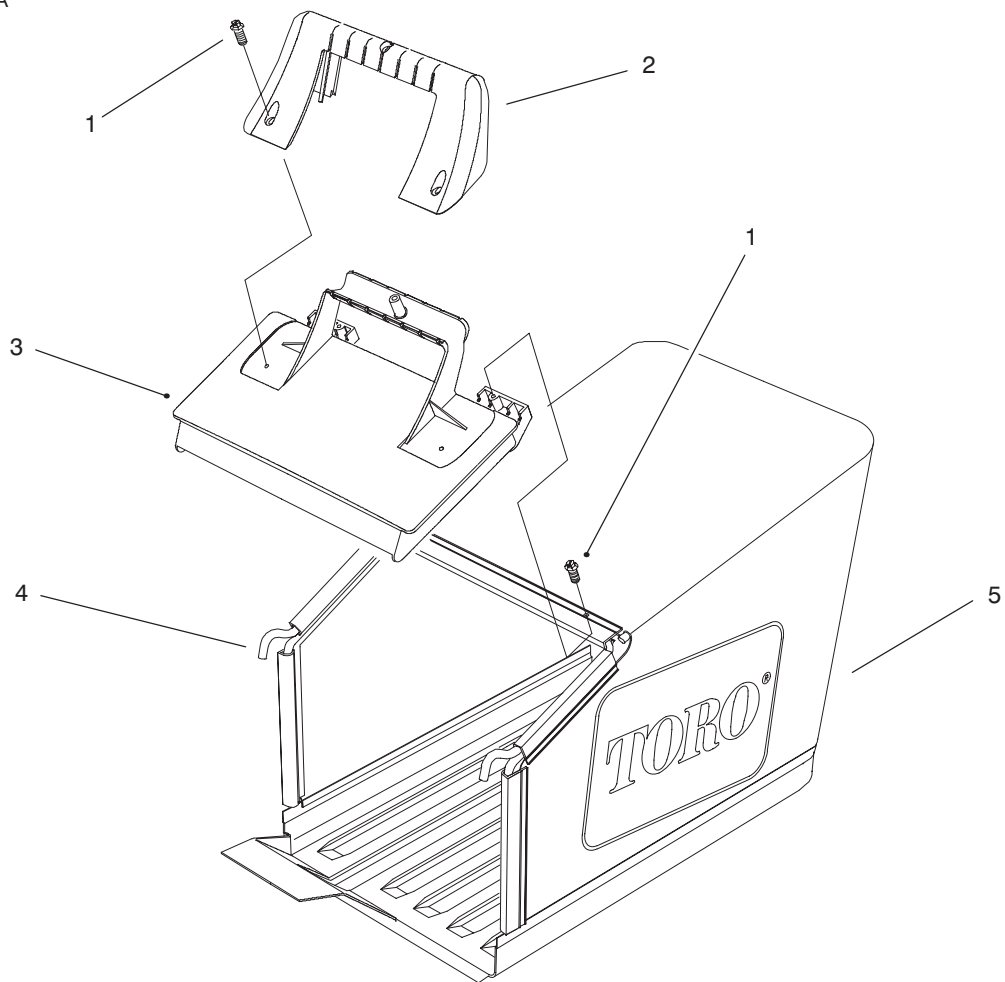 


Sheet No.:6

Bag Assembly


Ref. No.	Part No.	Qty.	Description
1	32144-111	5	Screw – PPH
2	71-9480	1	Handle-Door
3	71-9470	1	Door-Bag
4	71-9930	1	Wa-Frame
5	98-3234	1	Bag-Grass

Ref. No.	Part No.	Qty.	Description

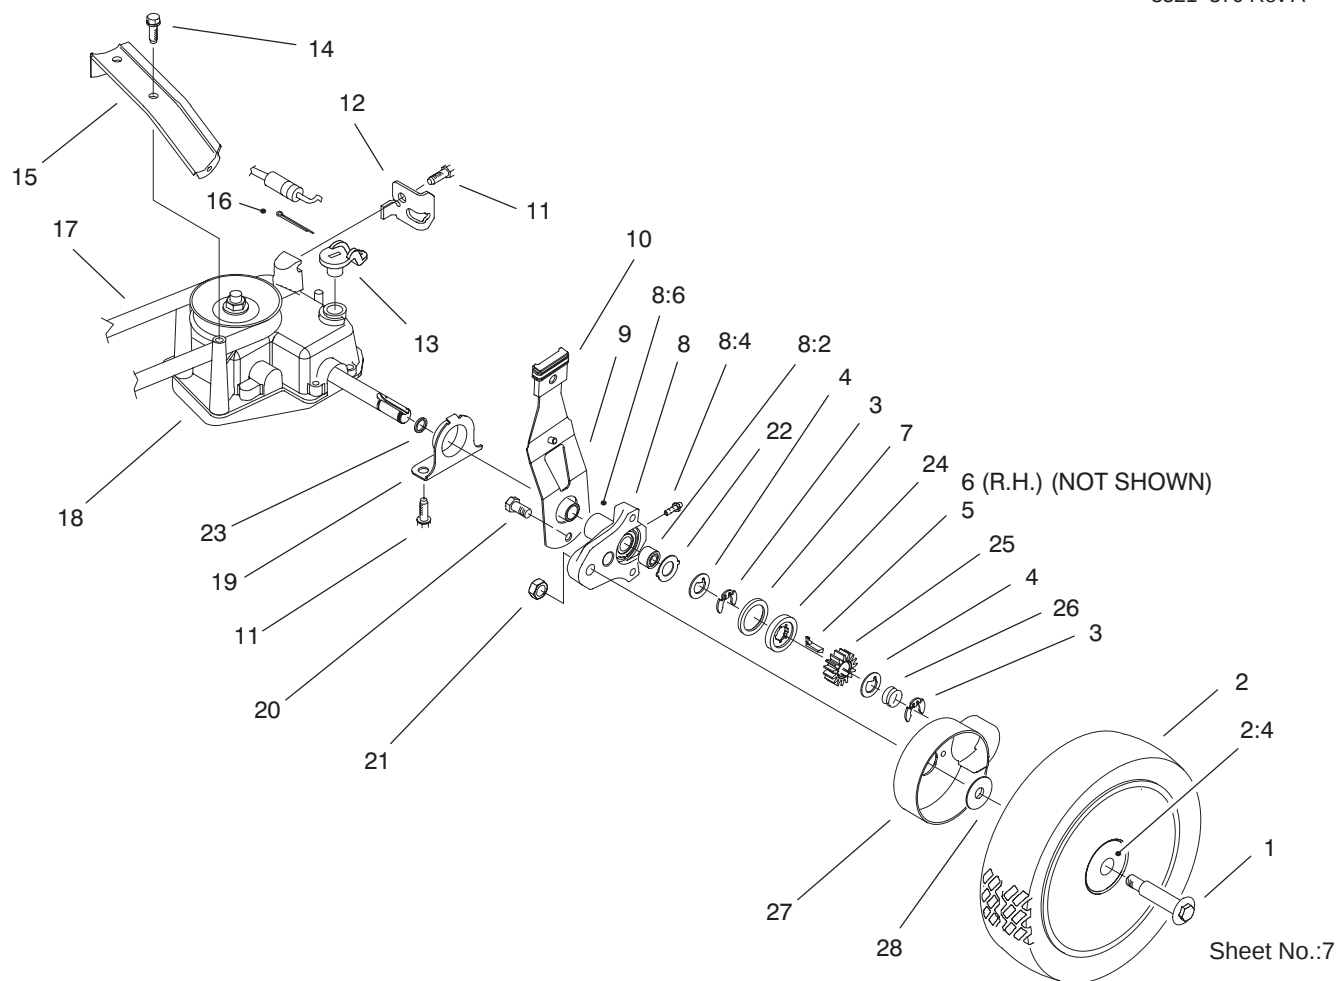 

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder	22	65-4730	2	Washer-Thrust
2	98-7135	2	ASM-Wheel Sp	23	237-153	2	O-Ring
2:4	27-6250	4	Bushing	24	65-4760	2	Washer
3	65-2720	4	Ring-Retaining	25	65-4750	2	Gear-Pinion
4	65-4740	4	Washer-Thrust	26	65-4720	2	Spring-Compression
5	66-6050	1	Key-Rocking LH	27	74-1660	2	Cover-Wheel
6	66-6040	1	Key-Locking RH	28	74-1670	2	Spacer-Cover
7	65-4710	2	Ring-Friction				
8	65-5042	2	ASM-Pivot Arm				
8:2	48-2060	2	Bearing-Needle				
8:4	302-56	2	Fitting-Grease				
8:6	70-9760	2	Bushing				
9	65-5441	2	ASM-Spring				
10	25-7740	2	Knob-Arm				
11	32144-70	5	Screw-TAP				
12	76-2930	1	Retainer-Cable				
13	76-0920	1	Lever-Shift				
14	49-2040	2	Screw-HH				
15	65-5190	1	Bracket-Belt Guide				
16	3272-5	1	Pin-Cotter				
17	36-8070	1	"v" Belt				
18	62-6673	1	ASM-Gearcase				
19	66-0360	2	Cap-End				
20	65-5220	2	Screw-Thrd Frmg				
21	603773	2	Nut-Lock				

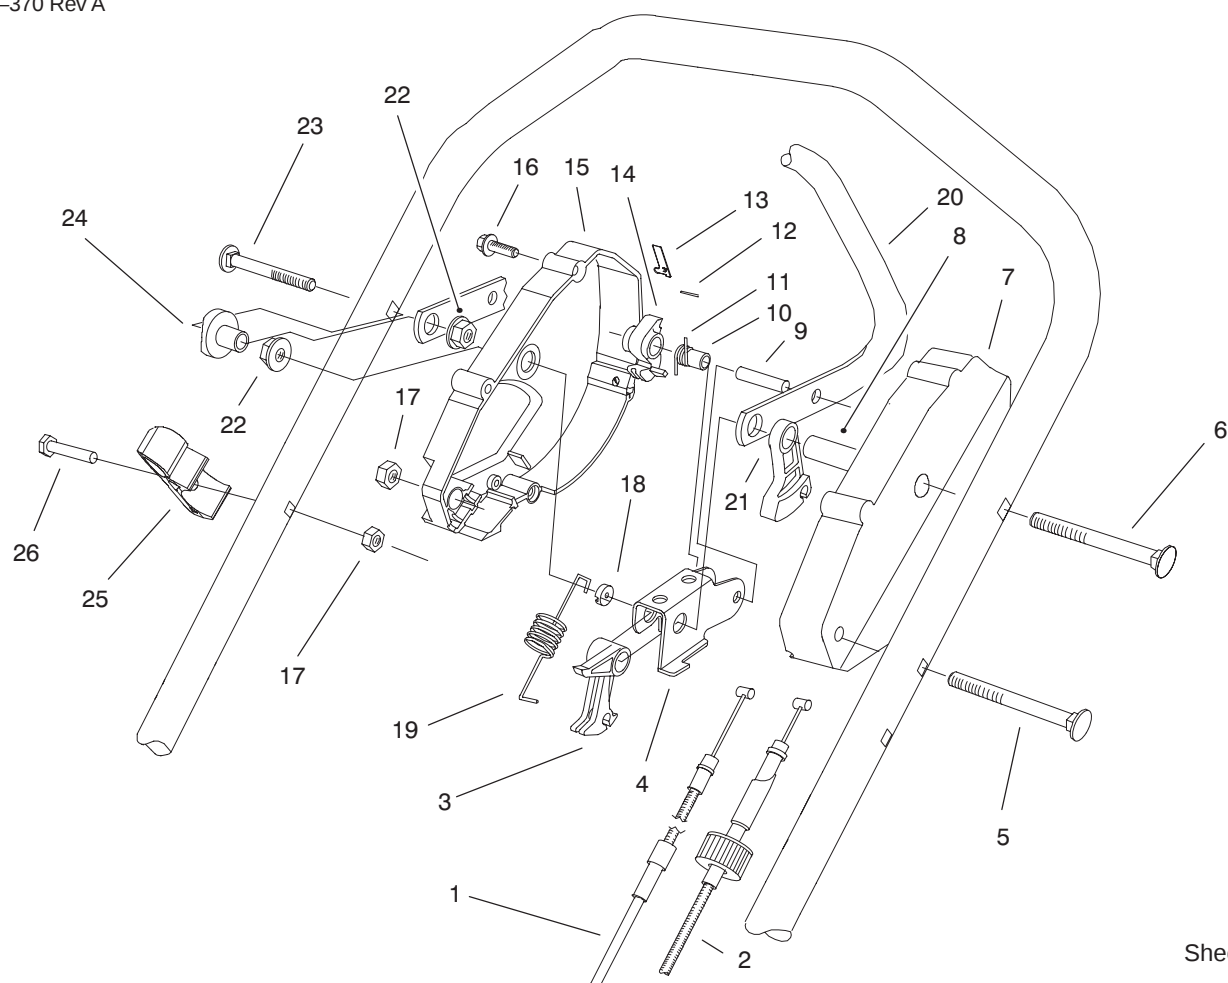 


Sheet No.:8

Handle Control Assembly

Ref. No.	Part No.	Qty.	Description
1	93-6629	1	ASM-Cable
2	93-6633	1	Cable-Traction
3	46-5540	1	Lever-Cable
4	66-0180	1	Rocker
5	92-2267	1	Screw-Handle
6	17-9429	1	Screw-Handle
7	46-5460	1	Housing-Control
8	46-5590	1	Spacer
9	32121-9	1	Pin-Roll
10	46-5550	1	Bushing-Pm
11	46-5510	1	Spring-Torsion
12	57-6290	1	Pin-Insert
13	52-7410	1	Spring-Leaf
14	46-5530	1	Hook-Control
15	12-3429	1	Housing-Control
16	46-7040	3	Screw-HWH
17	3296-75	2	Nut-Lock
18	66-0170	1	Washer-Nylon
19	66-0190	1	Spring-Detent
20	52-7430	1	Bar-Control
21	46-5520	1	Lever-Traction
22	3296-74	2	Nut-Flange
23	17-9428	1	Screw
24	66-0330	1	Spacer-Support
25	93-3772	1	Rope-Guide
26	321-51	1	Bolt-Hex


Ref. No.	Part No.	Qty.	Description

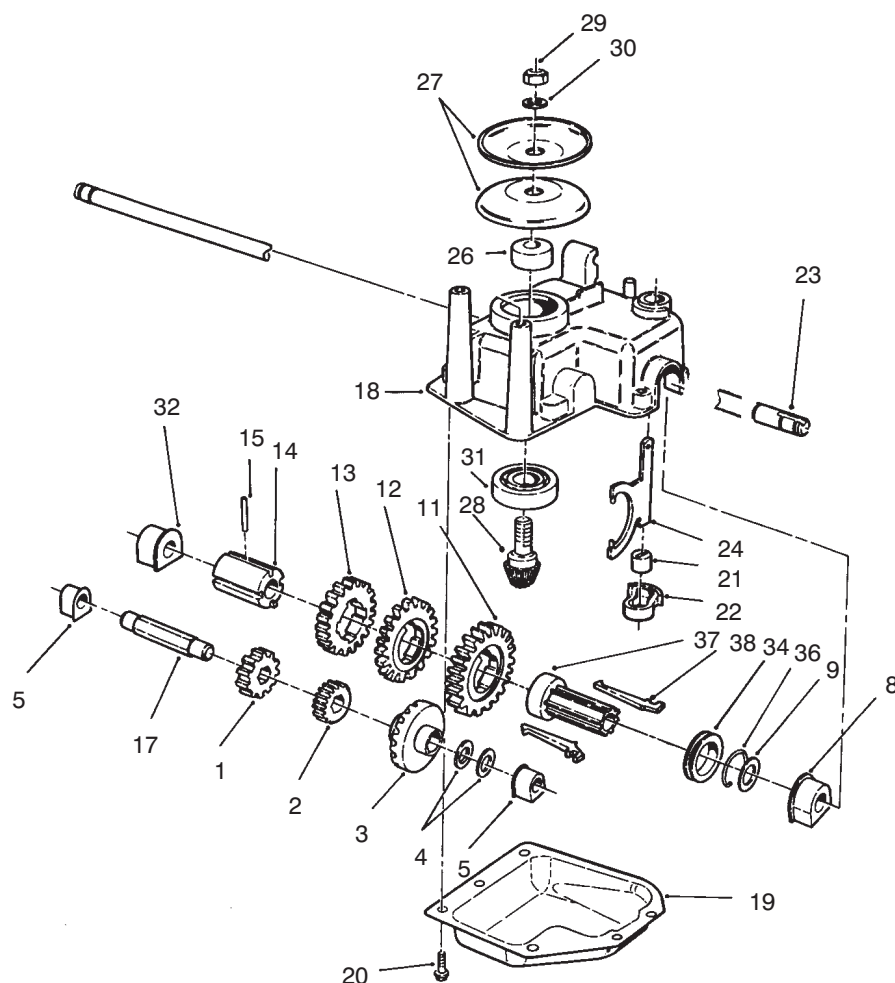 

Sheet No.:101

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3800	1	Pinion 25t 3rd Gear	32	60-8850	1	Bushing-Output
2	55-3780	1	Pinion 20t 2nd Gear	34	76-0770	1	Collar-Shift
3	55-3760	1	15 T Pinion	36	65-5250	1	Clip-Spring
4	36-4791	2	Washer-Thrust	37	76-0780	1	Sleeve-Shift Key
5	60-8750	2	Bushing	38	76-0760	2	Key-Shift
8	60-8770	1	Bushing-Output Shaft				
9	36-4780	1	Washer-Thrust				
11	55-3770	1	Gear 49t 1st Gear				
12	55-3790	1	Gear 44t 2nd Gear				
13	55-3810	1	Gear 39t 3rd Gear				
14	60-8790	1	Sleeve-Gear				
15	32121-120	1	Pin-Coil				
17	60-8800	1	Shaft-Intermediate				
18	60-8710	1	Gearcase-Upper 3 Sp				
19	60-8730	1	Cover-Gearcase				
20	49-2040	6	Screw-HH				
21	29-9570	1	Bushing-Yoke				
22	60-8810	1	Retainer-Shift-Fork				
23	65-4770	1	Shaft-Output				
24	60-8870	1	Yoke-Shift				
26	62-6660	1	Spacer-Pulley				
27	60-8840	2	Pulley-Half				
28	60-8890	1	Gear-Pinnion				
29	3296-5	1	Nut-Lock				
30	3256-24	1	Washer-Flat				
31	38-7820	1	Bearing-Ball				

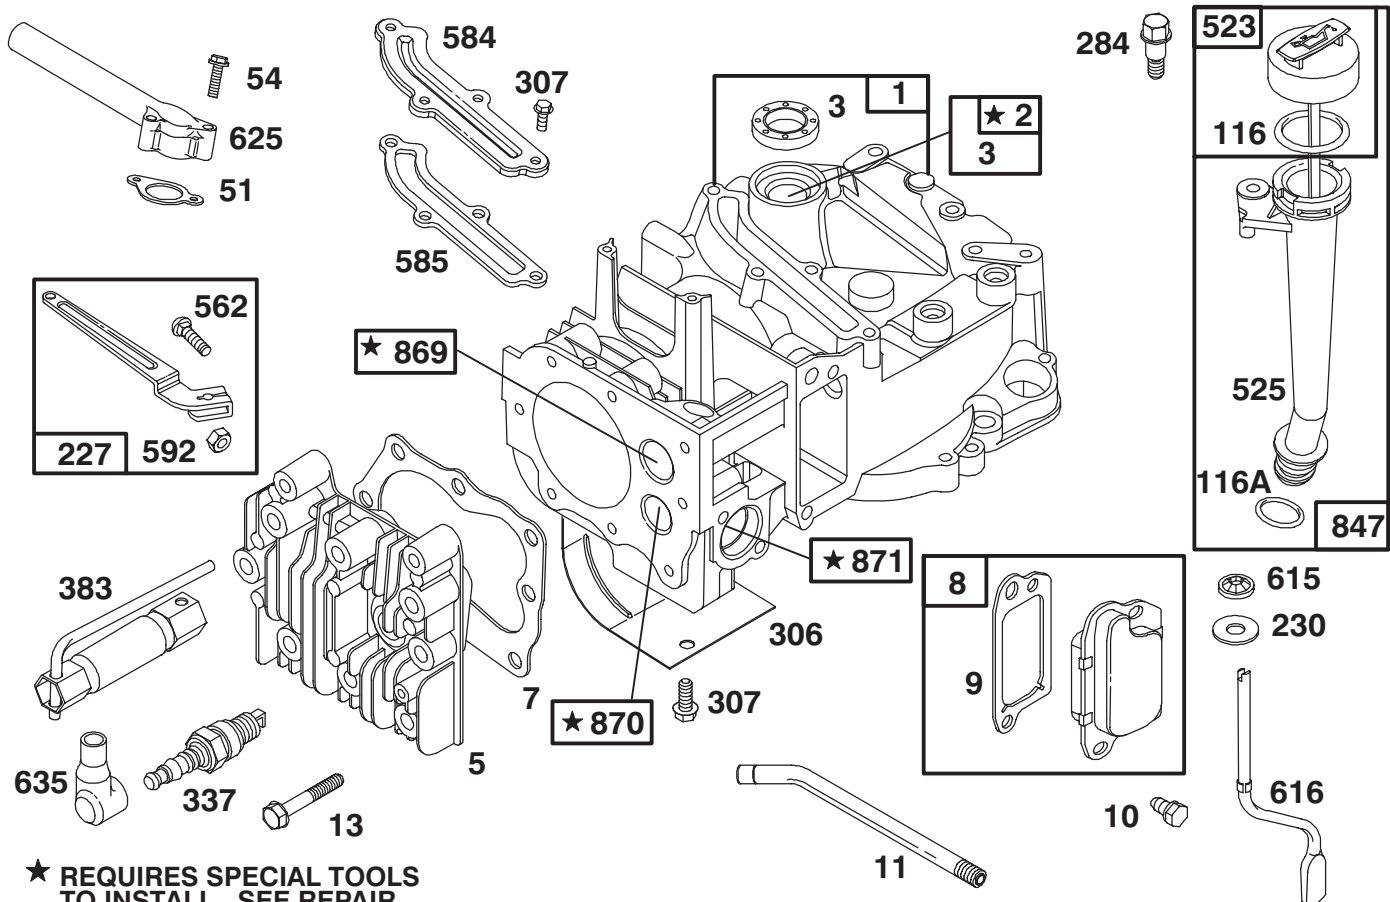 


ENGINE BRIGGS & STRATTON MODEL 12H802-1766-E1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing	1
★3	299819	Seal – Oil	1
5	214368	Head – Cylinder	1
†★7	272916	Gasket – Cylinder Head	1
8	495786	Breather Assy.	1
†★9	272481	Gasket – Breather	1
10	94650	Screw – Hex.	1
11	231933	Tube – Breather	1
13	94876	Screw – Hex.	1
★51	272199	Gasket – Intake Elbow	1
54	94526	Screw – Hex	1
★116	280393	Seal – O Ring	1
★116A	280966	Seal – O Ring	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex.	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex.	1

★Included in Gasket Set—Part No. 497316.

Ref. No.	Part No.	Description	No. Used
337	802592	Plug – Spark	1
383	89838	Wrench – Spark Plug	1
523	495264	Dipstick	1
525	495265	Tube – Oil Filler	1
562	94582	Screw – Hex.	1
584	224328	Baffle – Cylinder	1
★585	272238	Gasket – Breather	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	263175	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
847	495263	Dipstick/Tube Assy.	1
869	213512	Seat – Valve (Intake)	1
870	213513	Seat – Valve (Exhaust)	1
871	262001	Bushing – Guide (Exhaust)	1
		Note: 63709 Bushing – Guide (Intake)	1

 †Included in Valve Overhaul Gasket Set—Part No. 498528.

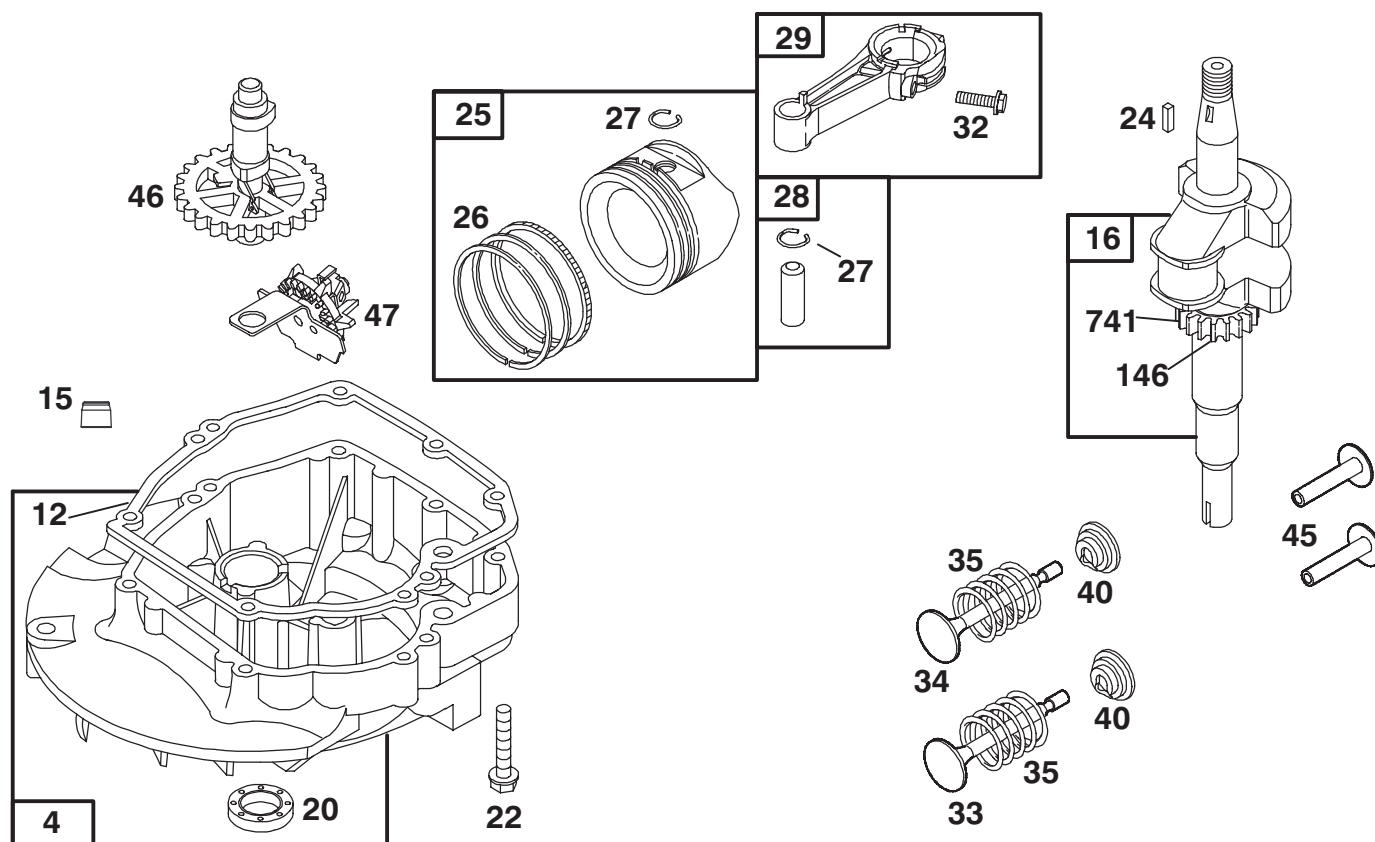


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1766—E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
4	493279	Sump — Engine	1	26	499425	Ring Set (Standard)	1
★12	272198	Gasket — Crankcase	1		499426	Ring Set (0.010" O.S.)	1
15	94880	Plug — Oil Drain	1		499427	Ring Set (0.020" O.S.)	1
16	692822	Crankshaft	1		499428	Ring Set (0.030" O.S.)	1
★20	399781	Seal — Oil	1	27	263190	Lock — Piston Pin	1
22	94220	Screw — Hex.	1	28	499423	Pin — Piston (Standard)	1
		Note: 94612 Screw — Hex.		29	499424	Rod Assembly — Connecting	1
		(One (1) Used in Hole Nearest Breather.)	1	32	94699	Screw — Connecting Rod	1
24	222698	Key — Flywheel	1	33	262651	Valve — Exhaust	1
25	499429	Piston Assy. (Standard)	1	34	262652	Valve — Intake	1
	499430	Piston Assy. (0.010" O.S.)	1	35	262224	Spring — Valve	1
	499431	Piston Assy. (0.020" O.S.)	1	40	93312	Retainer — Valve Spring	1
	499432	Piston Assy. (0.030" O.S.)	1	45	262204	Tappet — Valve	1
				46	498275	Gear — Cam	1
				47	493737	Slinger — Oil	1
				146	94388	Key — Timing	1
				741	262598	Gear — Timing	1

 ★Included in Gasket Set—Part No. 497316.

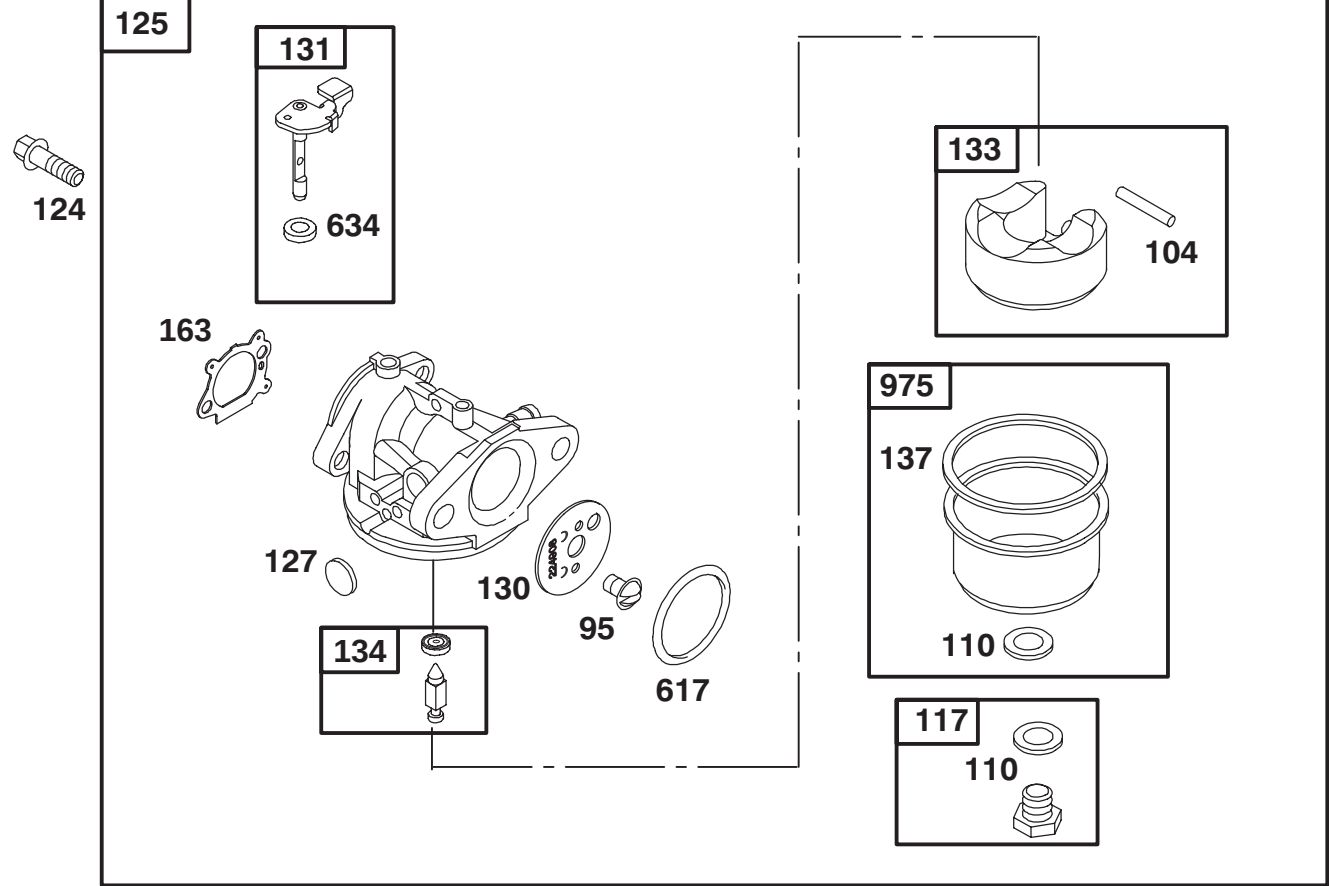

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1766-E1



Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Slotted	1
●104	231371	Pin – Float Hinge	1
●◆110		Washer – Bowl	
		(Sold in Kit Only).	1
117	494870	Jet – Main (Std.)	1
		Note: 497315 Jet – Main	
		(High Altitude)	1
124	94840	Screw – Hex	1
125	498170	Carburetor	1
●127		Plug – Welch	
		(Sold in Kit Only)	1

★Included in Gasket Set–Part No. 497316.

Ref. No.	Part No.	Description	No. Used
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float – Carburetor	1
●134	398188	Kit – Needle/Seat	1
●◆137		Gasket – Bowl	
		(Sold in Kit Only)	1
●◆★163	272653	Gasket – Air Cleaner	1
●◆617	270344	Seal – Intake Manifold	1
●◆634		Washer – Foam	
		(Sold in Kit Only).	1
975	493640	Bowl – Float	1

●Included in Carburetor Kit–Part No. 498260.

  ◆Included in Carburetor Gasket Set–Part No. 498261.

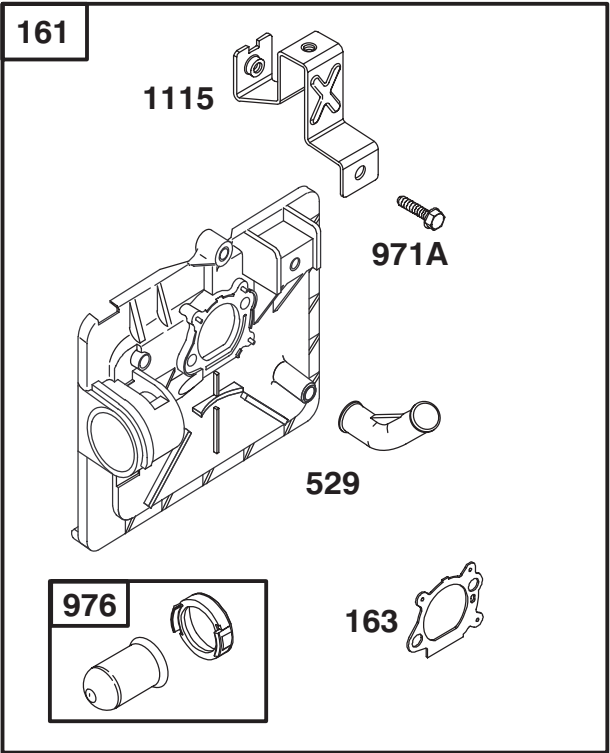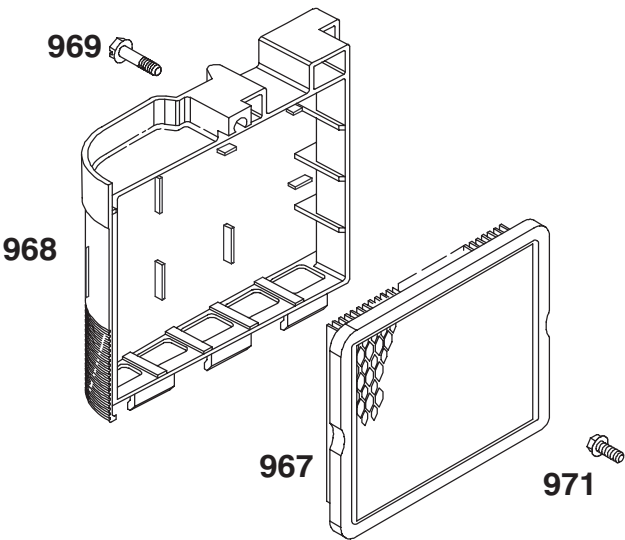

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12H802-1766–E1

Ref. No.	Part No.	Description	No. Used
161	496116	Base – Air Cleaner	1
◆◆★163	272653	Gasket – Air Cleaner	1
529	281299	Grommet	1
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1

★Included in Gasket Set—Part No. 497316.

Ref. No.	Part No.	Description	No. Used
969	94872	Screw – Slotted Hex.	1
971	94873	Screw – Hex.	1
971A	94749	Screw – Hex.	1
976	496115	Primer – Carburetor	1
1115	224815	Bracket – Support	1

 ◆Included in Carburetor Kit—Part No. 498260.
◆Included in Carburetor Gasket Set—Part No. 498261.

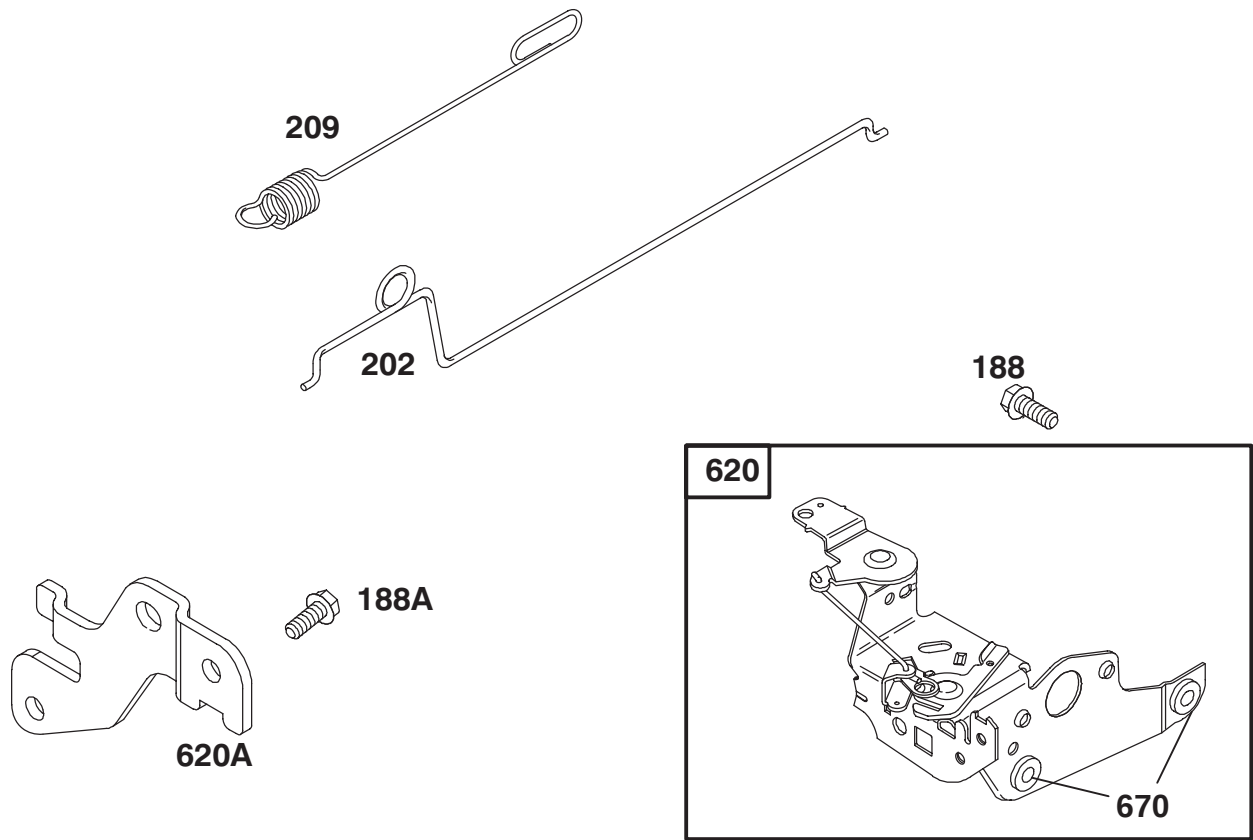


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1766—E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw — Hex.	1
188A	94874	Screw — Hex.	1
202	262579	Link — Governor	1
209	263046	Spring — Governor	1

Ref. No.	Part No.	Description	No. Used
620	497203	Bracket — Carburetor	1
620A	225152	Bracket — Control	1
★670	493823	Spacer — Bracket Note: Includes Two	1

 
★Included in Gasket Set—Part No. 497316

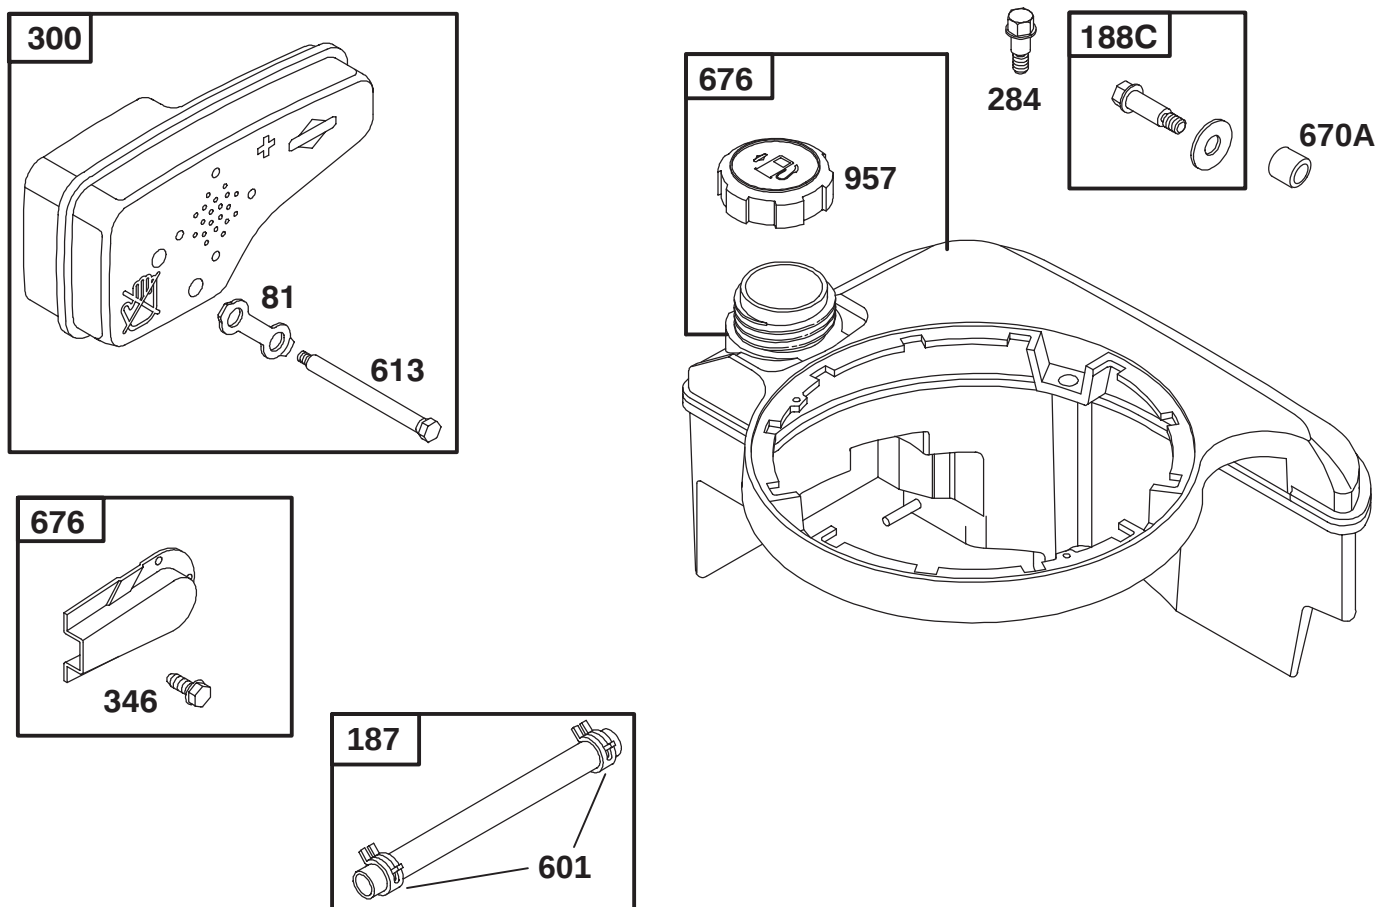

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1766-E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1	601	93053	Clamp – Hose	1
187	298049	Line – Fuel (Cut to Required Length).	1	613	94231	Screw – Shoulder	1
188C	398540	Screw – Shoulder	1	670A	280512	Spacer – Fuel Tank	1
284	94511	Screw – Shoulder	1	676	493871	Deflector – Muffler	1
300	497838	Muffler – Exhaust	1	957	397974	Cap – Fuel Tank	1
346	94896	Screw – Hex.	1	972	495224	Tank – Fuel	1

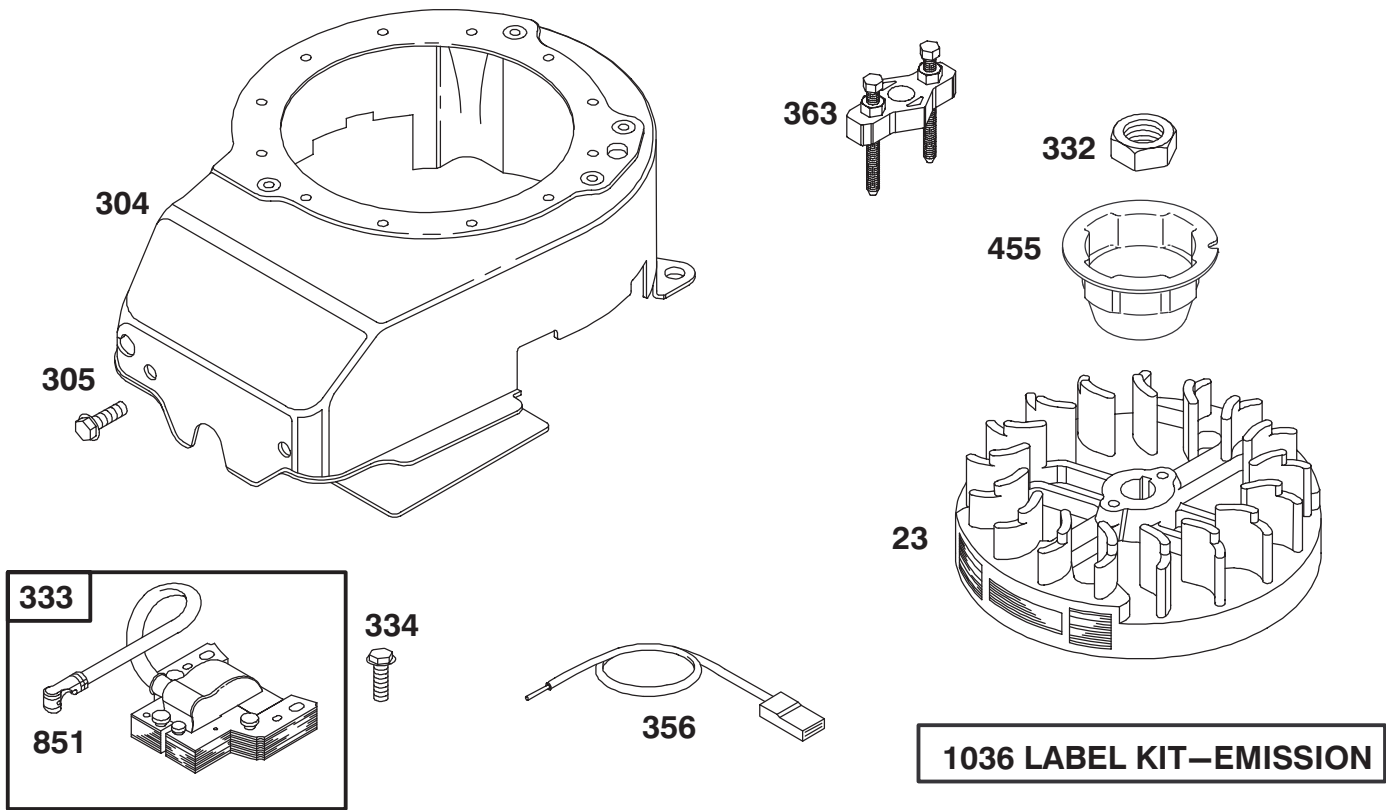 


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1766—E1

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
304	493294	Housing — Blower	1
305	94744	Screw — Hex.	1
332	94877	Nut — Flywheel	1
333	802574	Armature — Magneto	1
334	94731	Screw — Hex.	1





Ref. No.	Part No.	Description	No. Used
356	497833	Wire — Stop	1
363	19069	Puller — Flywheel	1
455	225121	Cup — Flywheel	1
851	493880	Terminal — Cable	1
1036	499341	Label Kit — Emission	1

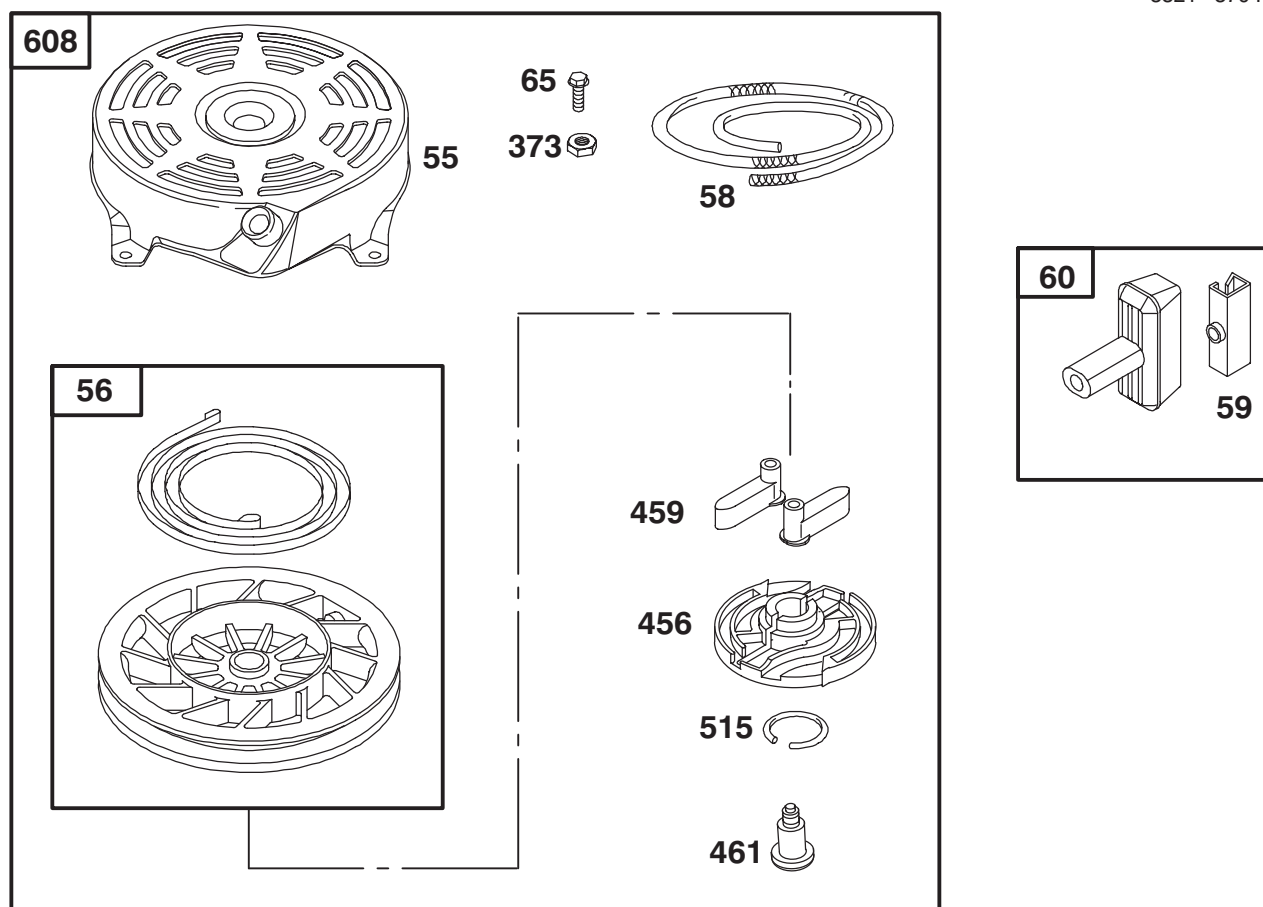 

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1766–E1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1	373	94908	Nut – Hex.	1
56	498144	Pulley – Starter	1	456	281503	Retainer – Spring	1
58	280399	Rope – Starter	1	459	281505	Pawl – Ratchet	1
59	224467	Insert – Starter Grip	1	461	94943	Screw – Shoulder	1
60	493926	Grip – Starter Rope	1	515	263073	Spring – Friction	1
65	94904	Screw – Hex.	1	608	497680	Starter – Rewind	1

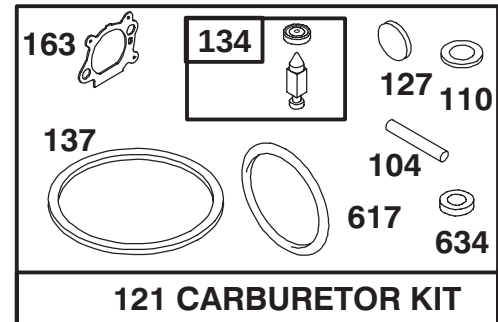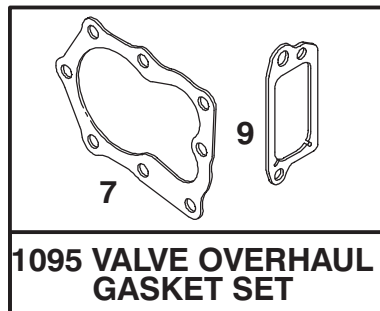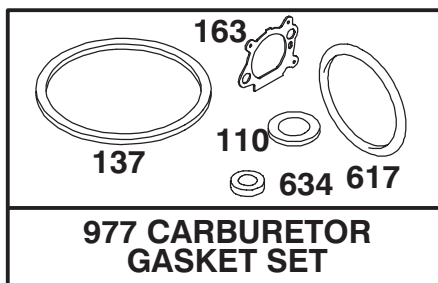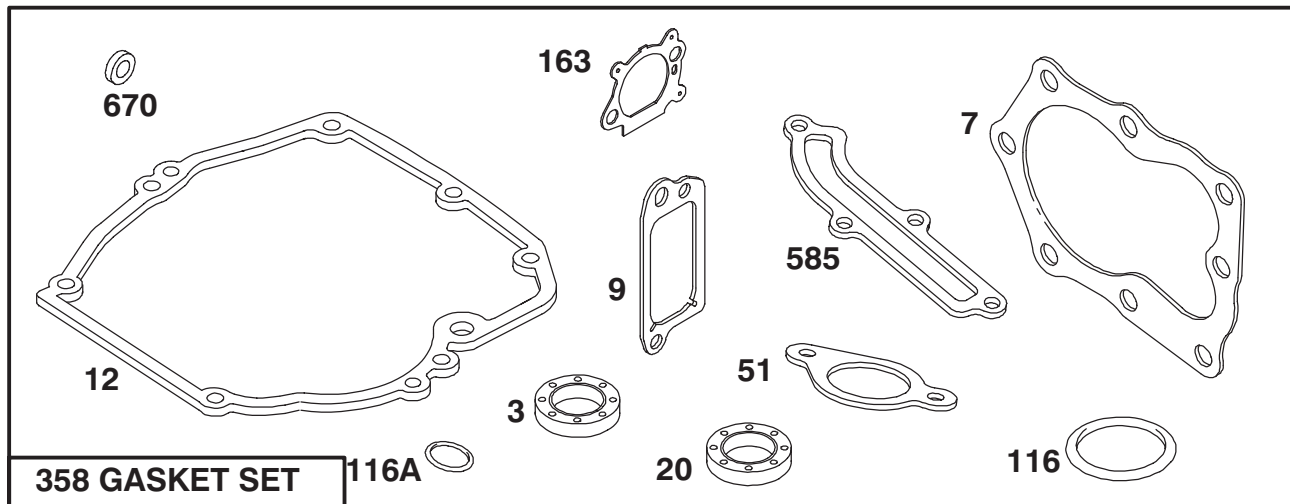    

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1766—E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal — Oil	1
†★7	272916	Gasket — Cylinder Head	1
†★9	272481	Gasket — Breather	1
★12	272198	Gasket — Crankcase	1
★20	399781	Seal — Oil	1
★51	272199	Gasket — Intake	1
●104	231371	Pin — Float Hinge	1
●◆110		Washer — Bowl (Sold in Kit Only).	1
★116	280393	Seal — O Ring	1
★116A	280966	Seal — O Ring	1
121	498260	Carburetor Kit	1
●127		Plug — Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Kit — Needle/Seat	1
●◆137		Gasket — Bowl (Sold in Kit Only).	1
●◆★163	272653	Gasket — Air Cleaner	1
358	496117	Gasket Set	1
★585	272238	Gasket — Breather	1
●◆617	270344	Seal — Intake Manifold	1
●◆634		Washer — Foam (Sold in Kit Only).	1
★670	493823	Spacer — Bracket Note: Includes Two.	1
977	498261	Gasket Set — Carburetor	1
1095	498528	Gasket Set — Valve Overhaul	1

●Included in Carburetor Kit—Part No. 498260.

◆Included in Carburetor Gasket Set—Part No. 498261.

★Included in Gasket Set—Part No. 497316.

†Included in Valve Overhaul Gasket Set—Part No. 498528.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
603773	1	34	2	Nut—Lock
603773	6	21	2	Nut—Lock
5–2490	1	31	2	Bolt—Shoulder
11–0580	3	45	1	Screw—Thd Forming
12–3429	7	15	1	Housing—Control
17–9428	7	23	1	Screw
17–9429	7	6	1	Screw—Handle
19–4050	4	2	2	Knob
25–7740	1	14	2	Knob—Arm
25–7740	6	10	2	Knob—Arm
27–6250	1	22:3	4	Bushing
27–6250	6	2:4	4	Bushing
29–9570	8	21	1	Bushing—Yoke
36–4780	8	9	1	Washer—Thrust
36–4791	8	4	2	Washer—Thrust
36–8070	6	17	1	"v" Belt
38–7820	8	31	1	Bearing—Ball
40–1940	1	15	4	Washer
42–3190	3	28	2	Bolt—Blade
42–6890	3	32	1	ASM—Hub
43–8480	1	6	1	Decal—Danger
46–5460	7	7	1	Housing—Control
46–5510	7	11	1	Spring—Torsion
46–5520	7	21	1	Lever—Traction
46–5530	7	14	1	Hook—Control
46–5540	7	3	1	Lever—Cable
46–5550	7	10	1	Bushing—Pm
46–5590	7	8	1	Spacer
46–5650	3	43	1	Pulley—Idler
46–7040	3	13	1	Screw—HWH
46–7040	7	16	3	Screw—HWH
48–2060	6	8:2	2	Bearing—Needle
49–2040	6	14	2	Screw—HH
49–2040	8	20	6	Screw—HH
52–3480	3	42	2	Damper—Vibration
52–7410	7	13	1	Spring—Leaf
52–7430	7	20	1	Bar—Control
54–9190	3	37	2	Nut—Lock
55–3760	8	3	1	15 T Pinion
55–3770	8	11	1	Gear 49t 1st Gear
55–3780	8	2	1	Pinion 20t 2nd Gear
55–3790	8	12	1	Gear 44t 2nd Gear
55–3800	8	1	1	Pinion 25t 3rd Gear
55–3810	8	13	1	Gear 39t 3rd Gear
57–6290	7	12	1	Pin—Insert
60–8710	8	18	1	Gearcase—Upper 3 Sp
60–8730	8	19	1	Cover—Gearcase
60–8750	8	5	2	Bushing
60–8770	8	8	1	Bushing—Output Shaft
60–8790	8	14	1	Sleeve—Gear
60–8800	8	17	1	Shaft—Intermediate
60–8810	8	22	1	Retainer—Shift—Fork
60–8840	8	27	2	Pulley—Half
60–8850	8	32	1	Bushing—Output
60–8870	8	24	1	Yoke—Shift
60–8890	8	28	1	Gear—Pinnion
62–3890	3	31	1	Drum—Brake
62–4280	3	34	1	Spacer—Blade
62–6660	8	26	1	Spacer—Pulley
62–6673	6	18	1	ASM—Gearcase
62–7560	3	26	1	Pulley—Driver
62–7700	3	35	1	Blade—21"

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
65-2720	6	3	4	Ring—Retaining
65-4710	6	7	2	Ring—Friction
65-4720	6	26	2	Spring—Compression
65-4730	6	22	2	Washer—Thrust
65-4740	6	4	4	Washer—Thrust
65-4750	6	25	2	Gear—Pinion
65-4760	6	24	2	Washer
65-4770	8	23	1	Shaft—Output
65-5042	6	8	2	ASM—Pivot Arm
65-5070	3	2	1	Hub—Plate
65-5130	3	4	2	Hub—Pulley
65-5190	6	15	1	Bracket—Belt Guide
65-5200	3	33	1	Shield—Bbc
65-5210	1	4	2	Screw—Tf
65-5220	1	16	2	Screw—Thrd Frmg
65-5220	6	20	2	Screw—Thrd Frmg
65-5250	8	36	1	Clip—Spring
65-5280	3	24	1	Retainer—Spring
65-5300	3	27	1	Flywheel—Bbc
65-5320	3	6	1	Rod—Spring
65-5330	3	39	1	Screen—Bbc
65-5350	1	26	1	Shield—Trailing
65-5380	3	46	1	Washer—Flat
65-5441	6	9	2	ASM—Spring Arm—Rear
65-5660	1	9	1	Panel—Screen
65-5670	3	7	1	Bolt—Shoulder
65-5690	3	18	1	Bushing—Bellcrank
65-5700	3	19	1	Crank
65-5720	3	11	1	Bushing
65-5740	3	3	1	Belt—"v"
65-5780	3	1	1	Shoe—Brake
66-0020	1	12	1	Panel—Vertical
66-0030	3	16	1	Bracket—Cable Support
66-0090	3	10	1	Wa—Lever
66-0170	7	18	1	Washer—Nylon
66-0180	7	4	1	Rocker
66-0190	7	19	1	Spring—Detent
66-0330	7	24	1	Spacer—Support
66-0350	3	9	1	Bushing—Flange
66-0360	6	19	2	Cap—End
66-0541	1	18	2	ASM—Spring Arm
66-0560	1	21	2	Screw—Shoulder
66-0570	2	13	1	Guide—Belt
66-0580	1	20	2	Arm—Pivot
66-6040	6	6	1	Key—Locking RH
66-6050	6	5	1	Key—Rocking LH
70-9760	6	8:6	2	Bushing
71-3630	3	23	1	Spring—Compression
71-3640	3	8	1	Spring—Compression
71-3650	3	21	1	Link—Control
71-3660	3	20	1	Pin—Spring
71-7910	1	5	1	Cap—Bolt RH
71-8090	4	1	1	Mount—Handle LH
71-8100	4	11	1	Mount—Handle RH
71-8580	1	28	2	Spacer—Door
71-8680	1	33	1	Decal—Bbc
71-9470	5	3	1	Door—Bag
71-9480	5	2	1	Handle—Door
71-9640	1	19	1	Ramp—Discharge
71-9650	1	25	1	Access—Cover
71-9840	1	29	2	Spring—Door
71-9920	1	24	1	Cover—Top

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
71–9930	5	4	1	Wa–Frame
74–1660	6	27	2	Cover–Wheel
74–1670	6	28	2	Spacer–Cover
76–0760	8	38	2	Key–Shift
76–0770	8	34	1	Collar–Shift
76–0780	8	37	1	Sleeve–Shift Key
76–0920	6	13	1	Lever–Shift
76–1980	1	30	2	Hanger–Shield
76–2930	6	12	1	Retainer–Cable
80–2770	3	36	1	Cup–Anti Scalp
82–8550	2	10	1	Shield–Muffler
92–1057	1	23	2	Bolt–Shoulder
92–1057	6	1	2	Bolt–Shoulder
92–2267	7	5	1	Screw–Handle
92–9665	4	4	4	Screw–Phil
93–0243	2	2	1	Shroud
93–0248	1	10	1	Decal–Warning
93–3772	7	25	1	Rope–Guide
93–6629	7	1	1	ASM–Cable
93–6632	4	10	1	Control–Speed
93–6633	7	2	1	Cable–Traction
93–8470	2	8	1	Screw–Clamp
95–1671	2	5	1	Decal–Engine
98–1523	4	6	1	Decal–Instruction
98–3206	2	4	1	Plate–Logo
98–3218	1	32	1	Decal–Danger
98–3223	1	13	1	Decal–Deck
98–3227	4	5	1	Decal–Panel
98–3229	4	7	1	Handle
98–3234	5	5	1	Bag–Grass
98–3242	4	9	1	Control–Throttle
98–7130	1	22	2	ASM–Wheel
98–7135	6	2	2	ASM–Wheel Sp
98–9224	1	11	1	Housing–53cm
98–9242	4	8	1	Panel–Control
99–1725	1	1	1	Door–Discharge
2210–249	2	7	1	Clamp–Casing
2210–316	2	6	1	Rope–Stop
237–153	6	23	2	O–Ring
253–151	3	12	1	Seal–Ring
302–56	6	8:4	2	Fitting–Grease
321–13	3	44	2	Screw–HH
321–51	7	26	1	Bolt–Hex
322–21	3	22	1	Screw–HH
322–29	1	3	2	Screw–HH
3256–23	1	27	2	Washer–Flat
3256–23	3	17	2	Washer–Flat
3256–24	8	30	1	Washer–Flat
3257–17	3	25	1	Key–Woodruff
3272–5	6	16	1	Pin–Cotter
3290–378	2	12	1	Tie–Cable
3290–378	4	12	5	Tie–Cable
3296–5	8	29	1	Nut–Lock
3296–6	1	17	2	Nut–Lock
3296–33	3	38	1	Nut–Lock
3296–42	3	5	2	Nut–Lock
3296–74	7	22	2	Nut–Flange
3296–75	7	17	2	Nut–Lock
32121–9	7	9	1	Pin–Roll
32121–120	8	15	1	Pin–Coil
32128–44	3	15	1	Nut–Flange
32144–70	1	8	6	Screw–TAP

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
32144—70	2	15	2	Screw—TAP
32144—70	3	14	5	Screw—TAP
32144—70	6	11	5	Screw—TAP
32144—73	2	11	3	Screw—HWHTF
32144—102	2	14	3	Screw
32144—111	5	1	5	Screw — PPH
32144—121	2	3	2	Screw