



Proline 53cm Recycler[®] /Rear Bagging Mower Model No. 22173–210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Valves/Camshaft Assembly	14
Housing Assembly No. 98–7144	4	Control Linkage Assembly	15
Front Wheel and Tire Assembly	5	Brake Band Assembly	16
Gear Case Assembly No. 74–1861	6	Fuel Tank and Valve Assembly	17
Engine and Blade Brake Clutch Assembly	7	Flywheel/Ignition Assembly	18
Handle and Handle Latch Assembly	8	Carburetor Assembly	19
Controls, Bails and Panel Assembly	9	Piston/Crankshaft Assembly	20
Gear Case and Rear Wheel Assembly	10	Air Filter/Muffler Assembly	21
Rear Wheel and Tire Assembly No. 74–1720 ..	11	Cover/Cooling Assembly	22
Grass Bag Assembly No. 99–2535	12	Dipstick/Oil Filter Assembly	23
Cylinder/Crankcase Assembly	13	Recoil Starter Assembly	24

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Discharge Kit No. 59113	94–1613		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSR	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

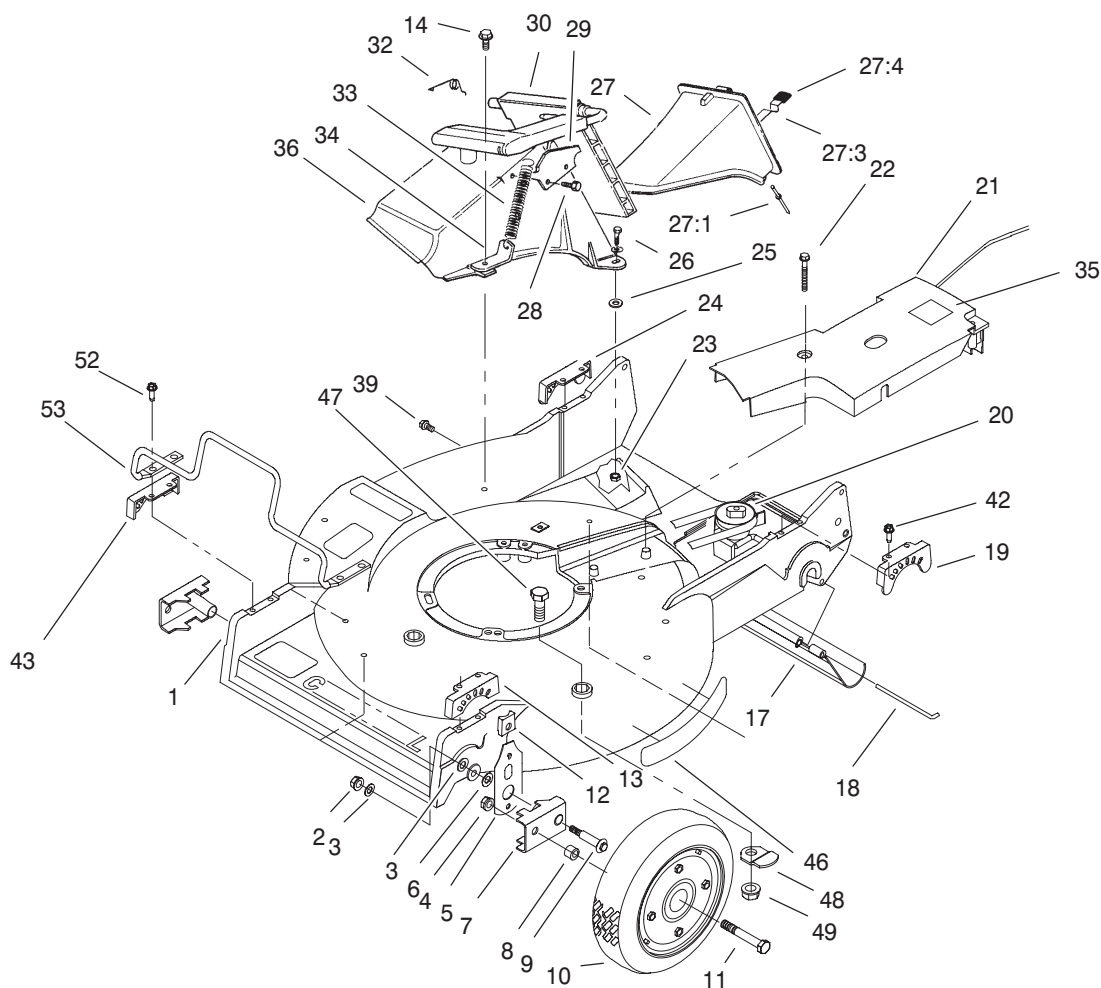

Sheet No.:2
C-3002

Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7144	1	Housing	27:3	76-4640	1	Latch-Plug, Discharge
2	3296-6	2	Nut-Lock, NI	27:4	76-4650	1	Grip-Latch
3	40-1940	4	Washer	28	46-8090	2	Screw-Plastite
4	32152-2	2	Nut-Conelock	29	93-3154	1	Latch-Plate
5	66-7560	2	Front Spring Arm ASM	30	93-7351	1	Discharge Door ASM
6	257-3	2	Washer-Thrust	32	80-3770	1	Retainer-Door
7	61-8300	2	Arm-Pivot, Front	33	76-4660	1	Spring-Door
8	52-2480	2	Spacer-Wheel	34	71-9350	1	Bracket-Spring
9	27-6232	2	Bolt-Wheel	35	93-6664	1	Decal-Grease, Int'l
10	53-7720	2	Wheel & Tire ASM	36	82-9151	1	Tunnel-Discharge
11	323-12	2	Screw-HH	39	46-6810	1	Screw & Washer ASM
12	25-7740	2	Knob-Arm	42	49-2040	4	Screw-Tapping
13	49-8760	1	Quadrant-Front, LH	43	49-8770	1	Quadrant-Front, RH
14	46-6811	3	Screw-HWH	46	92-7988	1	Decal - Recycler
17	44-0580	1	Shield-Trailing	47	323-6	3	Screw-HH
18	33-3208	1	Rod-Shield	48	84-8930	2	Shield-Retainer
19	49-8740	1	Quadrant-Rear, LH	49	3296-39	3	Nut-Lock, NI
20	74-1861	1	Gear Case ASM	52	32144-86	4	Screw-HH
21	99-6298	1	Cover-Belt	53	99-6722	1	Guard-Engine
22	37-7260	2	Screw-HH				
23	3296-42	2	Nut-Lock NI				
24	49-8750	1	Quadrant-Rear, RH				
25	3256-22	2	Washer-Flat				
26	321-7	2	Screw-HH				
27	77-0502	1	Discharge Plug ASM				
27:1	3295-35	1	Rivet-Head, Flat				

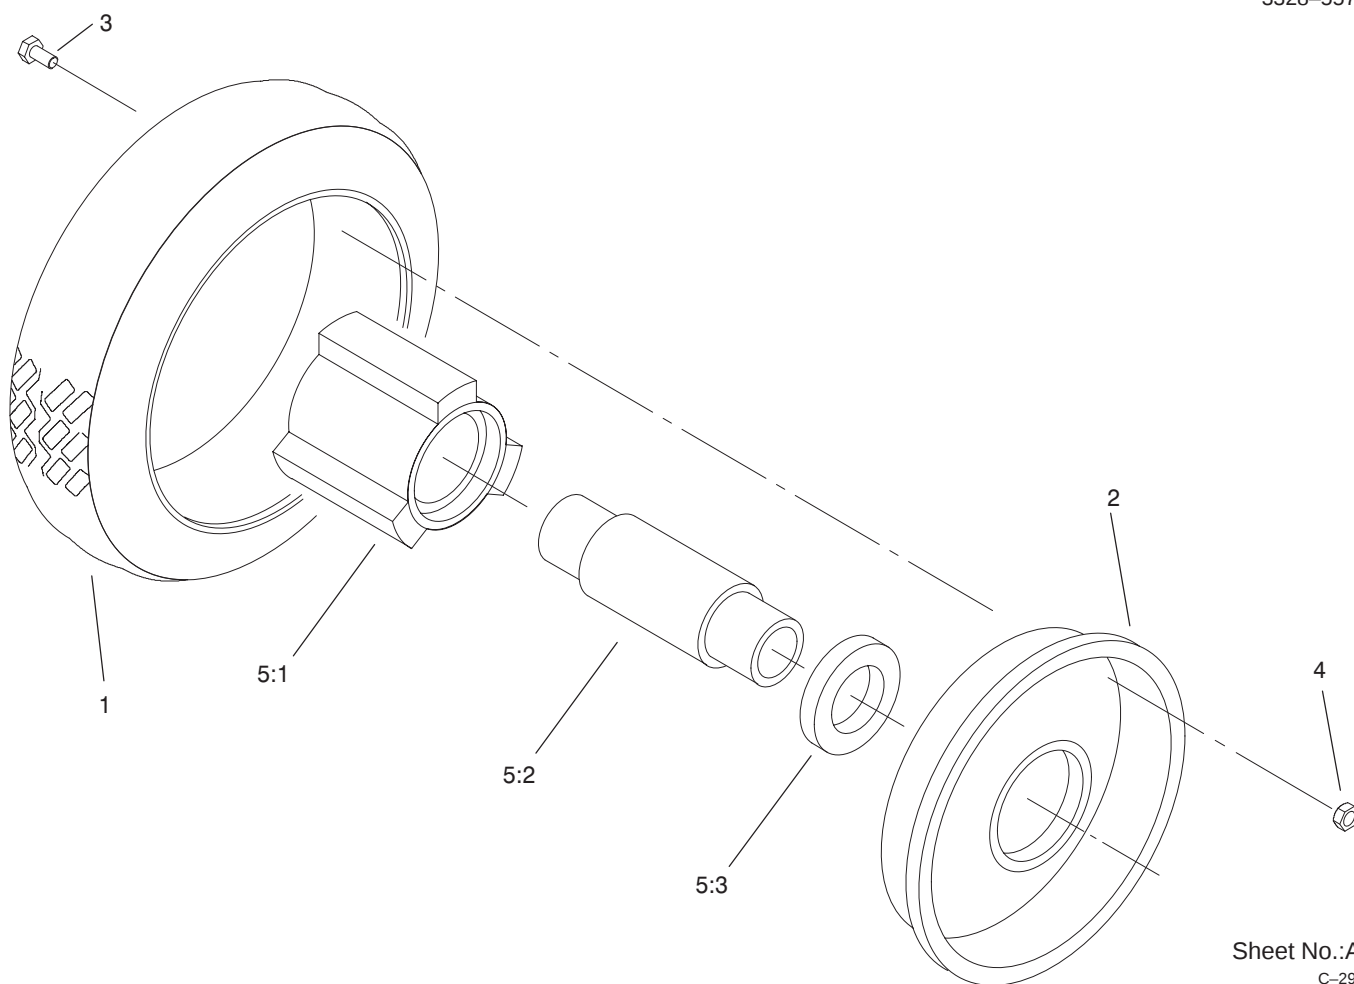 


Sheet No.:A2
C-2989

Front Wheel and Tire Assembly

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	2	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock NI
☆5		1	Hub & Bearing ASM
5:1	52-2410	1	Hub-Bearing
5:2	52-2440	1	Spacer-Bearing
5:3	52-2450	2	Bearing-Wheel

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced

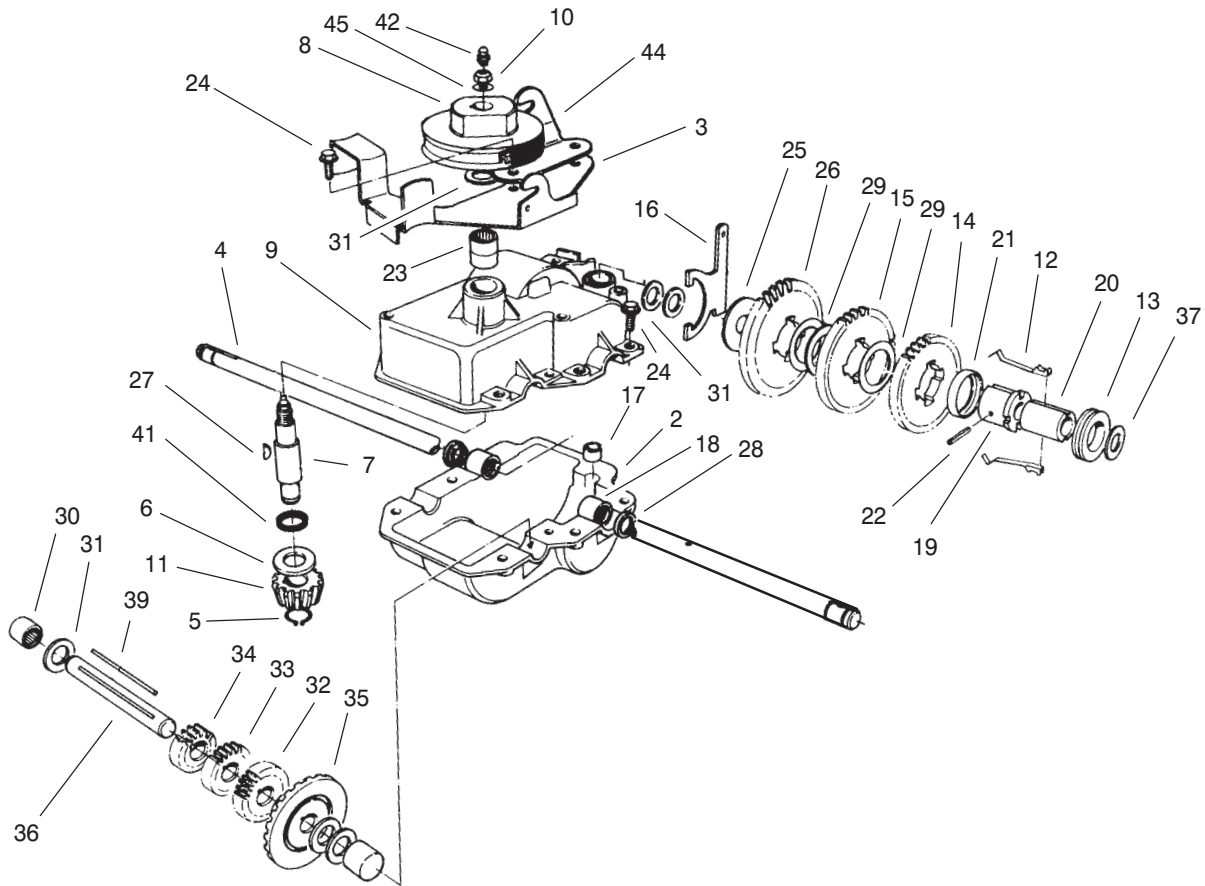


Sheet No.:A3

C-2990

Gear Case Assembly No. 74-1861

Ref. No.	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower
3	49-8461-03	1	Bracket-Guide, Belt
4	74-1890	1	Shaft-Output
5	32151-57	1	Ring-Retaining
6	47-2910	1	Washer-Thrust
7	68-8190	1	Shaft-Input
8	39-6740	1	Pulley
9	74-1880	1	Case-Gear, Upper
10	3296-5	1	Nut-Lock NI
11	39-6660	1	Pinion-Bevel
12	29-9330	2	Key
13	29-9340	1	Collar-Shift
14	42-4740	1	Gear-38 Tooth
15	29-9271	1	Gear-42 Tooth
16	60-8870	1	Yoke-Shift
17	29-9570	1	Bushing-Yoke
18	47-6730	2	Seal-Oil
19	55-8010	1	Sleeve-Gear
20	39-6720	1	Sleeve
21	55-8020	1	Retainer-Key
22	3285-19	1	Pin-Groove
23	47-7270	2	Bearing
24	49-2040	6	Screw-Tapping
25	29-9690	1	Washer
26	46-3560	1	Gear
27	3257-1	2	Key-Woodruff


Ref. No.	Part No.	Qty.	Description
28	48-2060	2	Bearing-Roller
29	36-4770	3	Washer
30	252-103	2	Bearing-Closed
31	36-4792	4	Washer-Thrust
32	39-6650	1	Gear-18t
33	46-3550	1	Gear-14t
34	46-3540	1	Gear-12t
35	74-1760	1	Gear-Bevel
36	53-7950	1	Shaft-Intermediate
37	36-4780	3	Washer
39	39-7842	1	Key
41	47-7260	1	Seal
42	302-63	1	Zerk
44	74-1750-03	1	Brake-Engage, Traction
45	3256-45	1	Washer-Flat

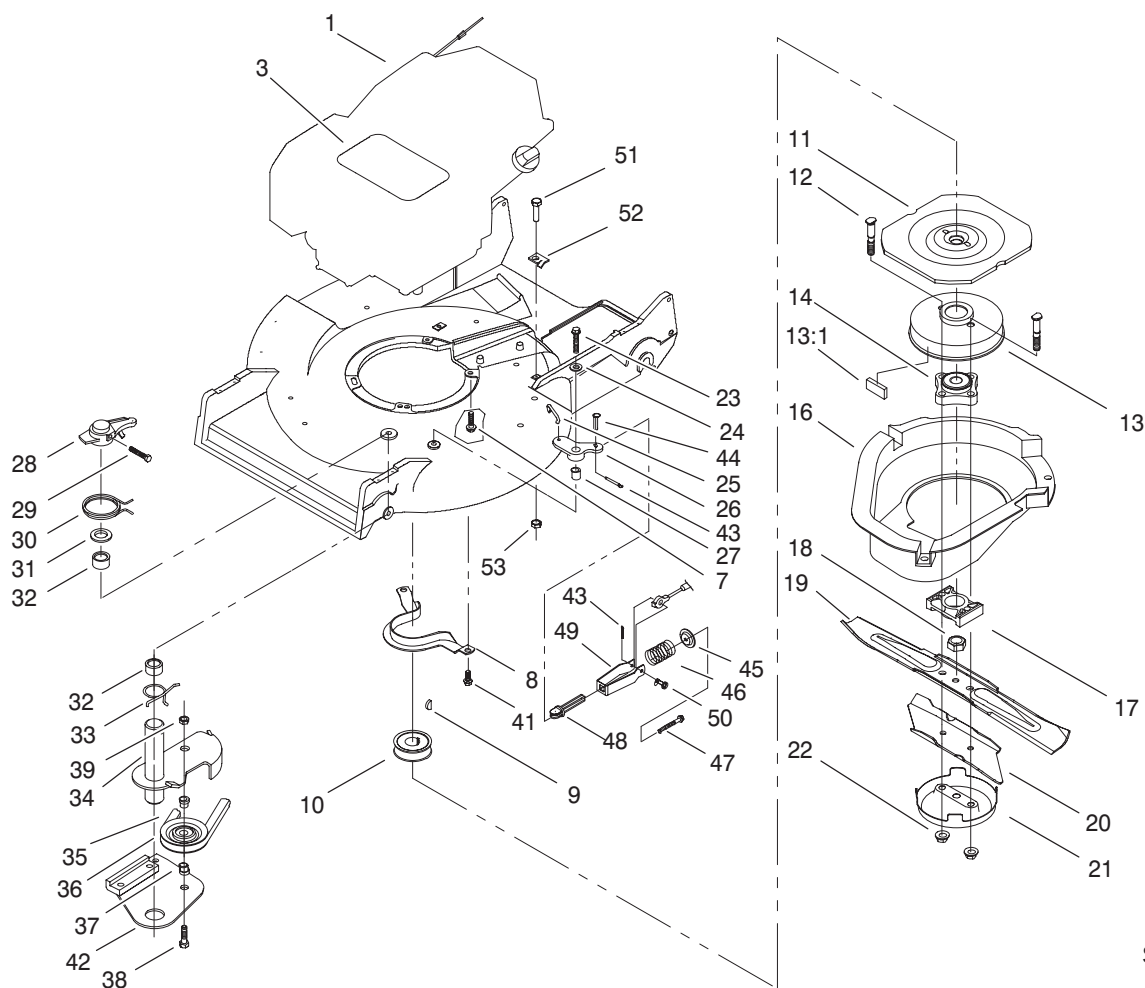 

Sheet No.:3

Engine and Blade Brake Clutch Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-1333	1	Engine-Kawasaki Fc150v	30	49-7970	1	Spring-Torsion
3	104-1335	1	Decal-Engine	31	70-1160	1	Washer
7	100-2835	3	Screw-Mount, Engine	32	68-9780	2	Bearing
8	66-0570-03	1	Bracket-Guide, Belt	33	85-6880	1	Spring-Torsion
9	3257-17	1	Key-Woodruff	34	84-9130	1	Plate-Brake
10	56-6180	1	Driver-Pulley	35	42-0884	1	V-Belt
11	56-6160-03	1	Flywheel - Bbc	36	46-5650	1	Pulley-Idler
12	42-3190	2	Bolt-Blade	37	46-5631	2	Hub-Pulley, Idler
13	94-9431	1	Brake Drum ASM	38	322-6	1	Screw-HH
13:1	52-3480	2	Dampner-Vibration	39	3296-47	1	Nut-Lock, NI
14	42-6890	1	Hub ASM	41	32144-70	3	Screw-HH
16	46-5693	1	Shield	42	84-9180	1	Brake Plate ASM
17	62-4280	1	Spacer-Blade	43	3272-1	2	Pin-Cotter
18	603164	1	Nut-Blade	44	84-9050	1	Pin-Spring
19	91-2256-03	1	Blade	45	65-5280	1	Retainer-Spring
20	91-2255-03	1	Stiffener-Blade	46	84-9100	1	Spring
21	80-2770	1	Cup-Anti-Scalp	47	46-7040	1	Screw-HWHTF
22	54-9190	2	Nut-Lock	48	84-8870	1	Guide-Spring
23	32104-107	1	Screw-HH	49	84-8880-03	1	Bracket-Spring
24	3256-23	1	Washer-Flat	50	84-9040	1	Pin-Cable
25	49-2810	1	Link - Control	51	322-6	1	Screw-HH
26	49-7960	1	Bellcrank	52	62-3720	1	Clamp-Cable
27	49-7950	1	Sleeve-Bellcrank	53	3296-58	1	Nut-Lock NI
28	49-2820	1	Lever				
29	32104-96	1	Screw-HH				

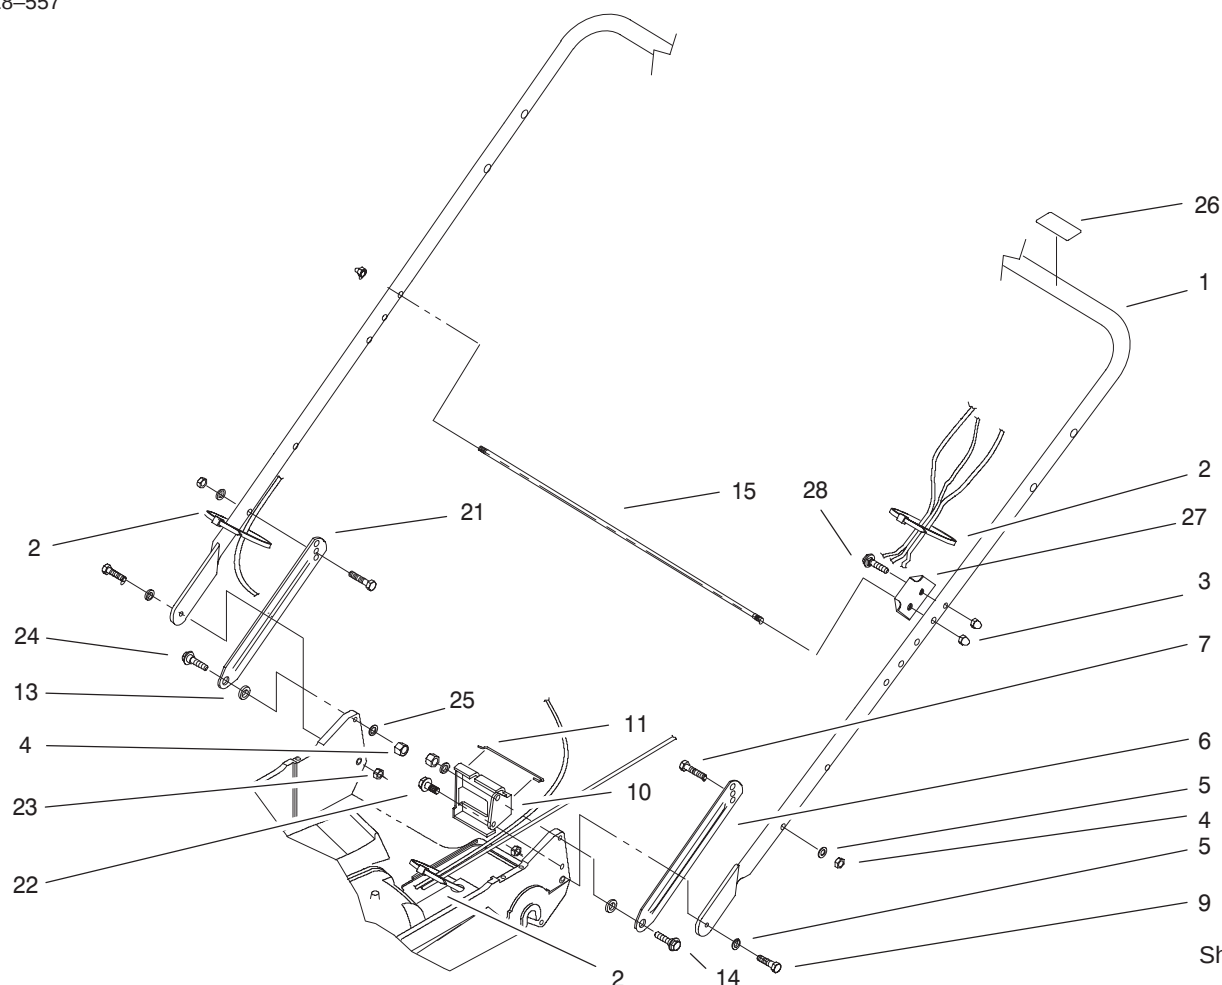 


Sheet No.:4

Handle and Handle Latch Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2385-03	1	Handle
2	3290-378	2	Tie-Cable
3	32111-7	3	Nut-Cap
4	3296-29	4	Nut-Lock
5	3290-456	4	Washer-Belleville
6	100-3298-03	1	Latch-Handle, LH
7	322-7	2	Screw-HH
9	322-6	2	Screw-HH
10	74-1741	1	Bracket-Traction Adjustment
11	46-7030	1	Retainer-Cable
13	3-3287	2	Spacer-Latch, Handle
14	27-7210	1	Screw-Shoulder
15	48-2810	1	Rod-Support, Bag
21	100-3297-03	1	Latch-Handle, RH
22	32144-70	1	Screw-HH
23	3296-47	2	Nut-Lock, NI
24	27-7211	1	Screw-Shoulder
25	3256-23	2	Washer-Flat
26	98-4387	1	Decal-Protection, Ear
27	104-1326	1	Plate - Bag Aligning
28	3229-3	1	Screw-CARR

Ref. No.	Part No.	Qty.	Description

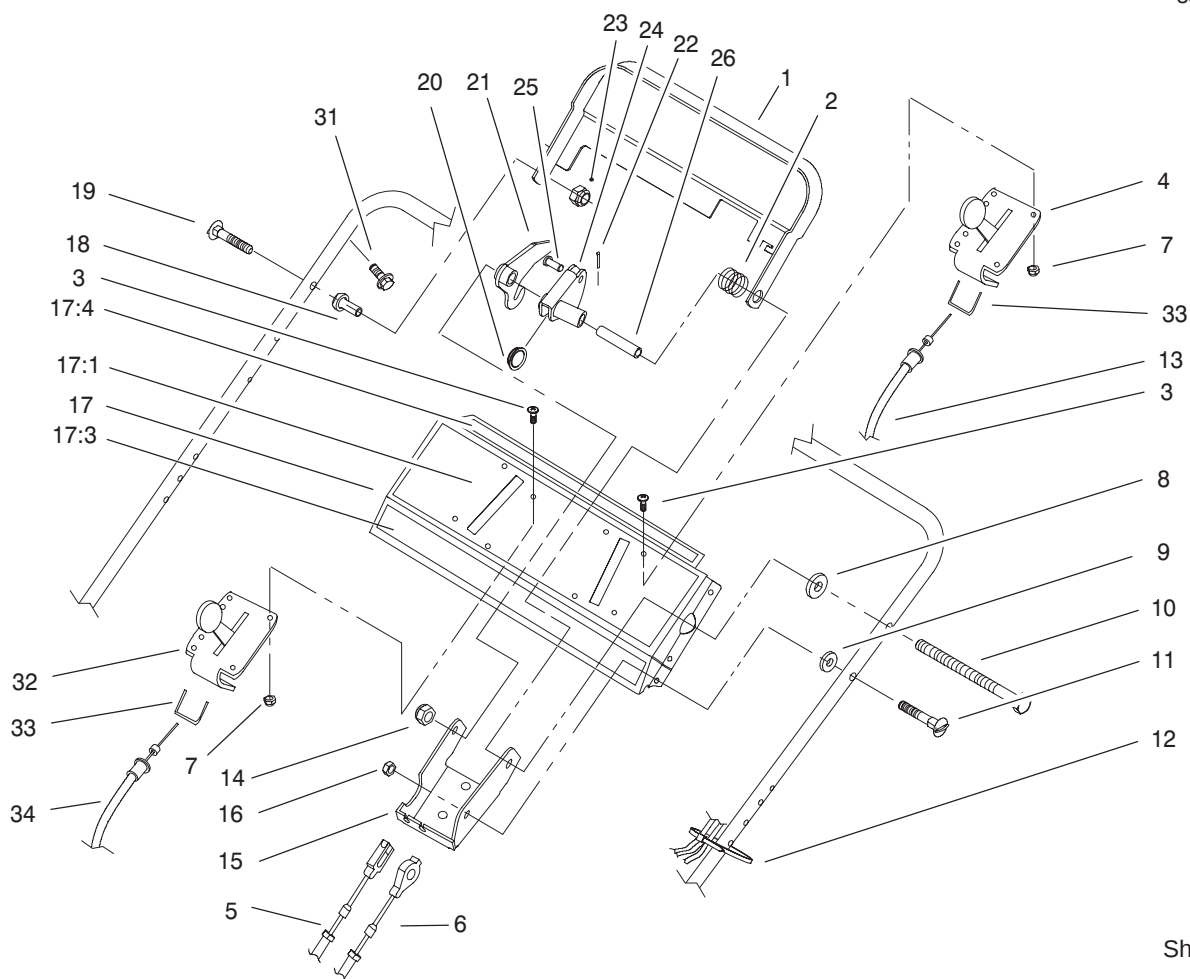 


Sheet No.:5

Controls, Bails and Panel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	84-8940-03	1	Bar-Control	24	84-8990	1	Lever-Bbc
2	85-6750	1	Spring-Control	25	84-9040	1	Pin-Cable
3	3250-12	8	Screw-PPH	26	84-9030	1	Spacer-Bracket, Control
4	85-6770	1	Control-Throttle	*27	85-6780	1	Retainer-Cable, Throttle
5	84-9120	1	Cable-Traction	31	32104-76	6	Screw
6	84-9110	1	Cable-Clutch	32	99-2542	1	Control-Shift, Bbc
7	3296-2	8	Nut-Lock	33	85-6780	1	Retainer-Cable, Throttle
8	71-9310	1	Spacer	34	99-2541	1	Cable-Shift, Bbc
9	71-9320	1	Spacer				
10	322-19	1	Screw-HH				
11	46-6430	1	Screw-Handle				
12	3290-378	2	Tie-Cable				
13	100-2839	1	Cable-Throttle				
14	3296-29	1	Nut-Lock				
15	92-1778-03	1	Bracket-Control				
16	3296-42	1	Nut-Lock NI				
17	99-8137	1	Panel ASM				
17:1	98-2006	1	Decal-Panel, Control				
17:3	85-6720	1	Decal-Panel, Proline				
17:4	93-6655	1	Decal-Panel, Rear				
18	49-1631	1	Spacer-Support				
19	17-9427	1	Screw				
20	86-9320	1	Bushing-Flange				
21	84-9000	1	Lever-Traction				
22	3272-1	1	Pin-Cotter				
23	3296-58	1	Nut-Lock NI				

 * Not illustrated

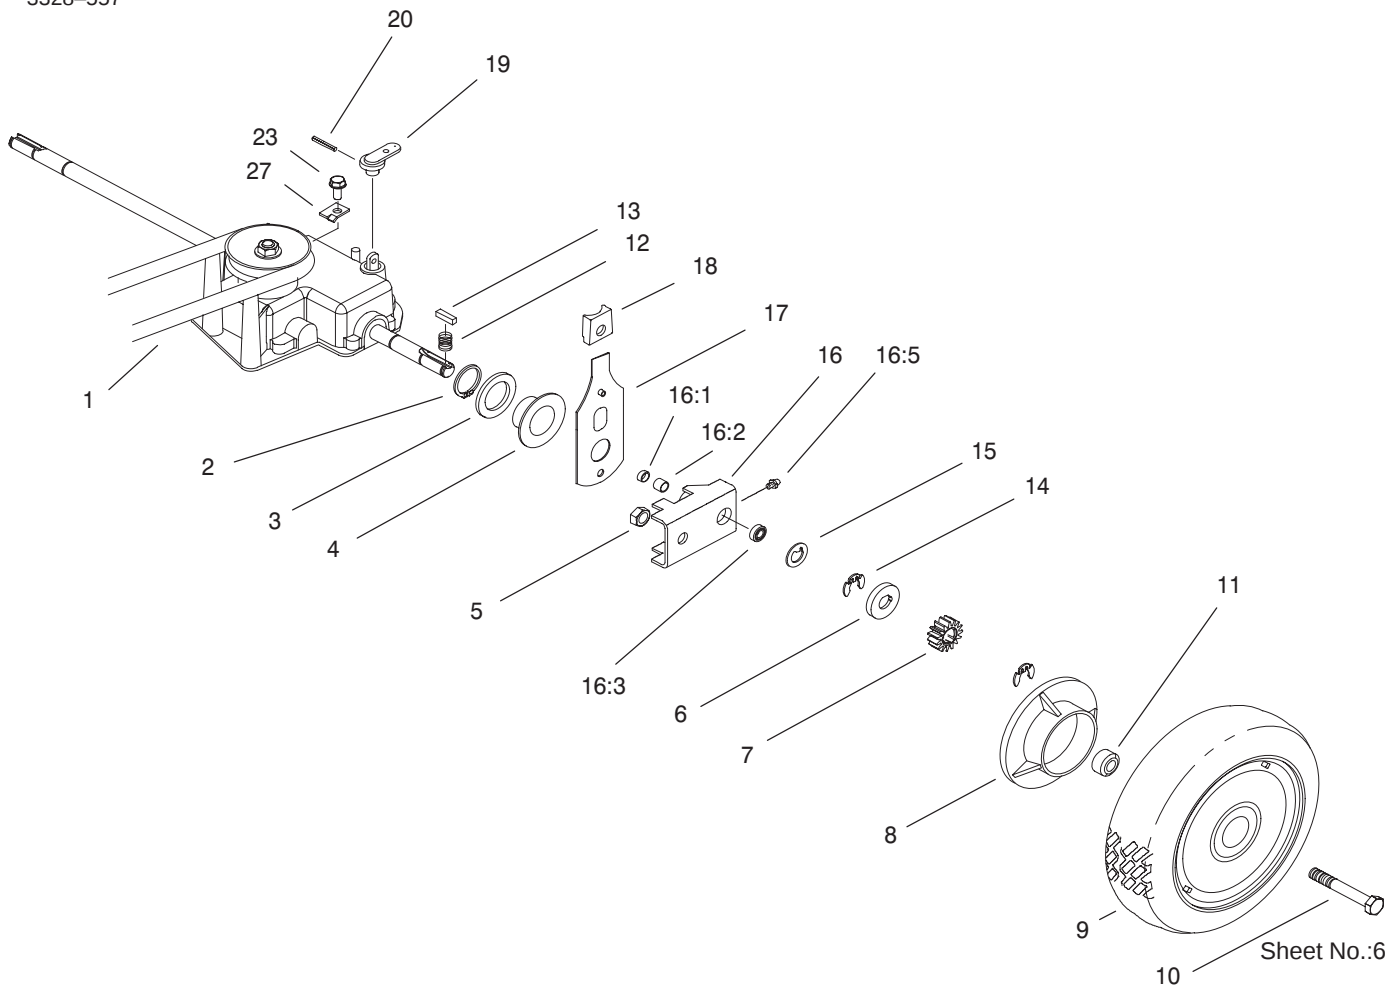


Sheet No.:6

Gear Case and Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Conelock
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	Wheel & Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk-Drive, Special
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm
19	29-9560	1	Lever-Shift
20	32121-99	1	Pin-Coil
23	32144-70	1	Screw-HH

Ref. No.	Part No.	Qty.	Description
27	62-3720	1	Clamp-Cable
*99	99-2535	1	Grass Bag ASM

 * Not illustrated

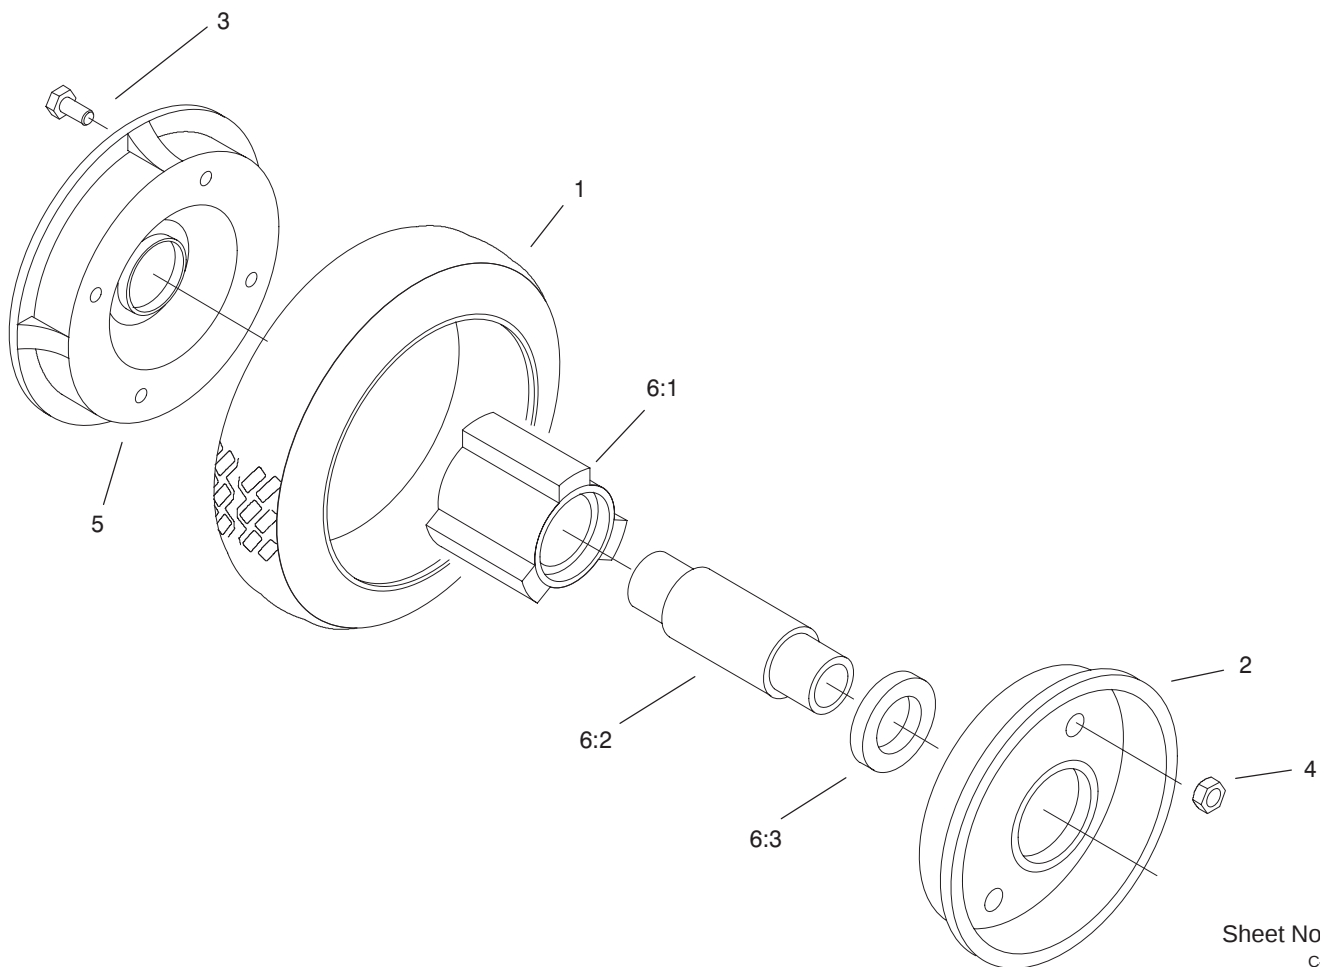


Sheet No.:A4
C-2991

Rear Wheel and Tire Assembly No. 74-1720

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	1	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock NI
5	92-4957-06	1	Wheel Half/Gear ASM
☆6		1	Hub & Bearing ASM
6:1	52-2410	1	Hub-Bearing
6:2	52-2440	1	Spacer-Bearing
6:3	52-2450	2	Bearing-Wheel

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced

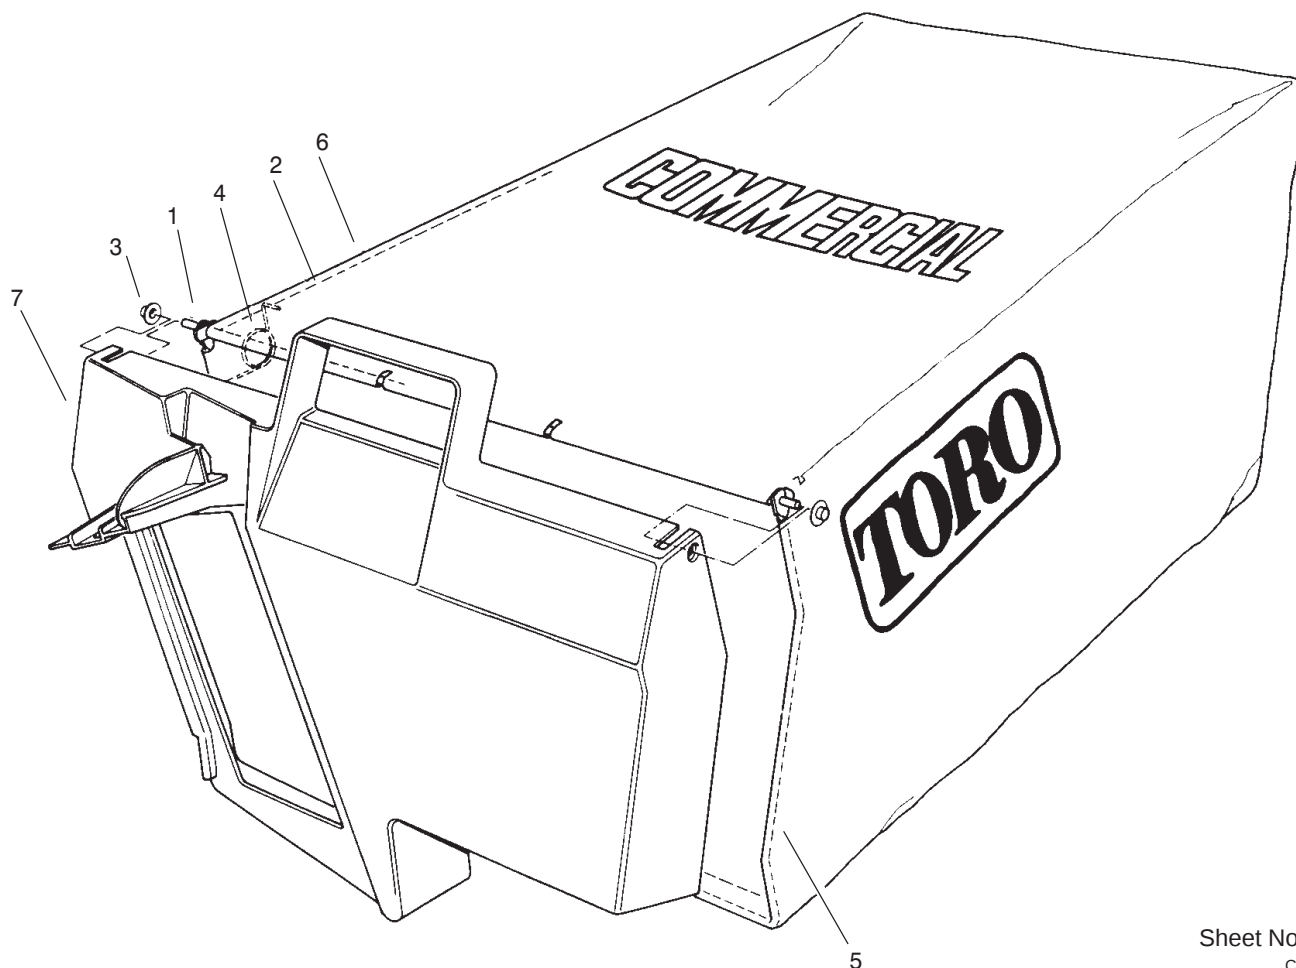


Sheet No.:A5
C-2992

Grass Bag Assembly No. 99-2535

Ref. No.	Part No.	Qty.	Description
1		1	Grass Bag ASM
1	33-4820	1	Hinge-Door, Bag
2	42-4030	1	Frame-Bag, Upper
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	98-9225	1	Bag-Grass
7	48-2840	1	Door-Bag, Grass


Ref. No.	Part No.	Qty.	Description

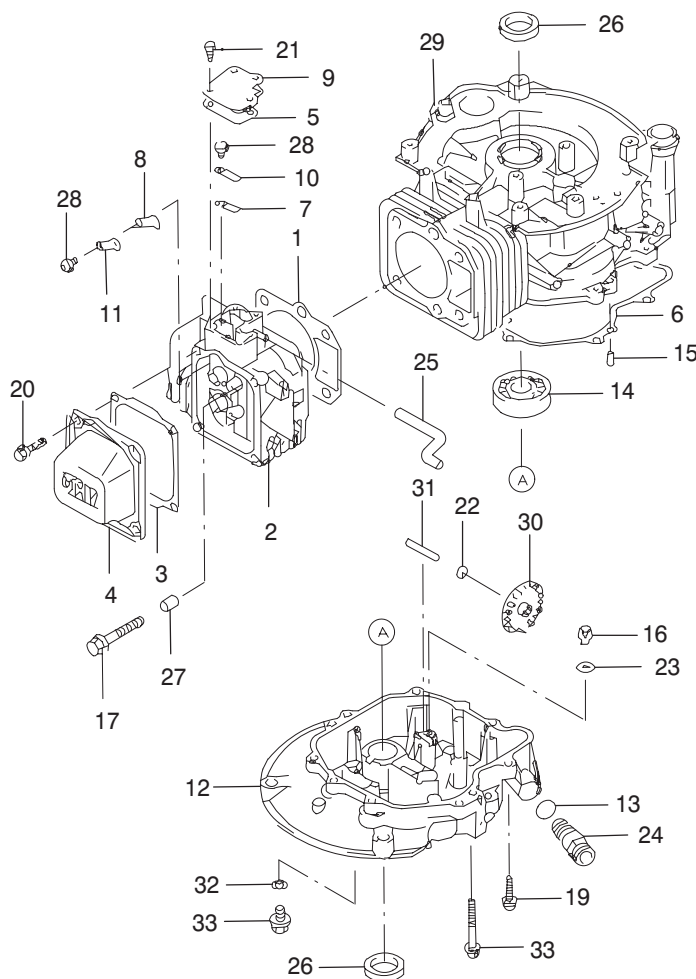 

Sheet No.:3

Cylinder/Crankcase Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2742	1	Gasket-Head	25	100-2846	1	Tube
2	100-2743	1	Head-Cylinder, Complete	26	100-2847	2	Seal-Oil
3	100-2744	1	Gasket-Case, Rocker	27	100-2848	2	Pin
4	100-2745	1	Case-Rocker	28	93-8549	2	Screw
5	100-2746	1	Cover-Gasket	29	100-2849	1	Crankcase-Complete
6	100-2747	1	Gasket-Cover, Crankcase	30	99-6728	1	Slinger-Oil
7	100-2748	1	Plate	31	99-6729	1	Shaft
8	100-2749	1	Plate	32	99-6730	1	Gasket
9	100-2779	1	Cover	33	100-2855	1	Bolt-Flanged
10	100-2780	1	Valve				
11	100-2781	1	Valve				
12	100-2782	1	Cover-Crankcase				
13	100-2840	1	O-Ring				
14	100-2841	1	Bearing-Ball				
15	93-8516	2	Pin				
16	100-2842	1	Bolt				
17	KW10035	4	Bolt-Flanged				
18	KW10033	1	Bolt-Flanged				
19	100-2610	6	Bolt-Flanged				
20	100-2804	4	Bolt-Flanged				
21	100-2609	4	Bolt-Flanged				
22	100-2843	1	Washer				
23	100-2844	1	Washer				
24	100-2854	1	Plug				

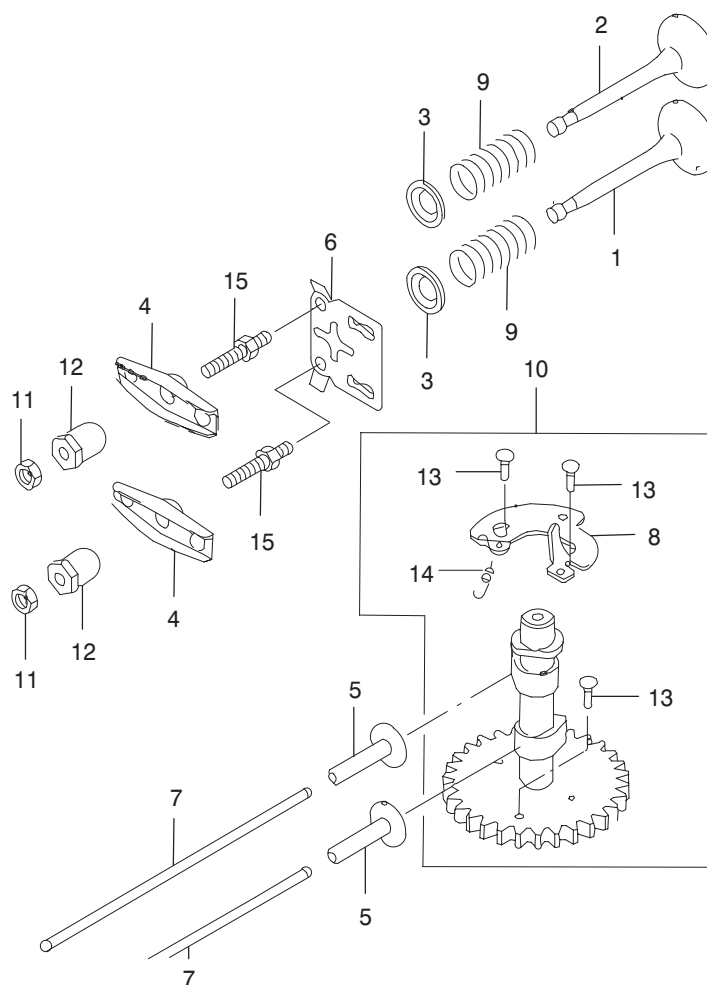 


Sheet No.:4

Valves/Camshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2727	1	Valve-Intake
2	100-2728	1	Valve-Exhaust
3	100-2729	2	Retainer-Spring, Valve
4	100-2730	2	Arm-Rocker
5	100-2731	2	Tappet
6	100-2732	1	Guide
7	100-2733	2	Rod-Push
8	100-2734	1	Decompressor
9	100-2735	2	Spring-Valve, Engine
10	100-2736	1	Camshaft-Complete
11	93-8533	2	Nut
12	93-8534	2	Nut
13	100-2739	3	Pin
14	100-2740	1	Spring
15	100-2741	2	Bolt

Ref. No.	Part No.	Qty.	Description

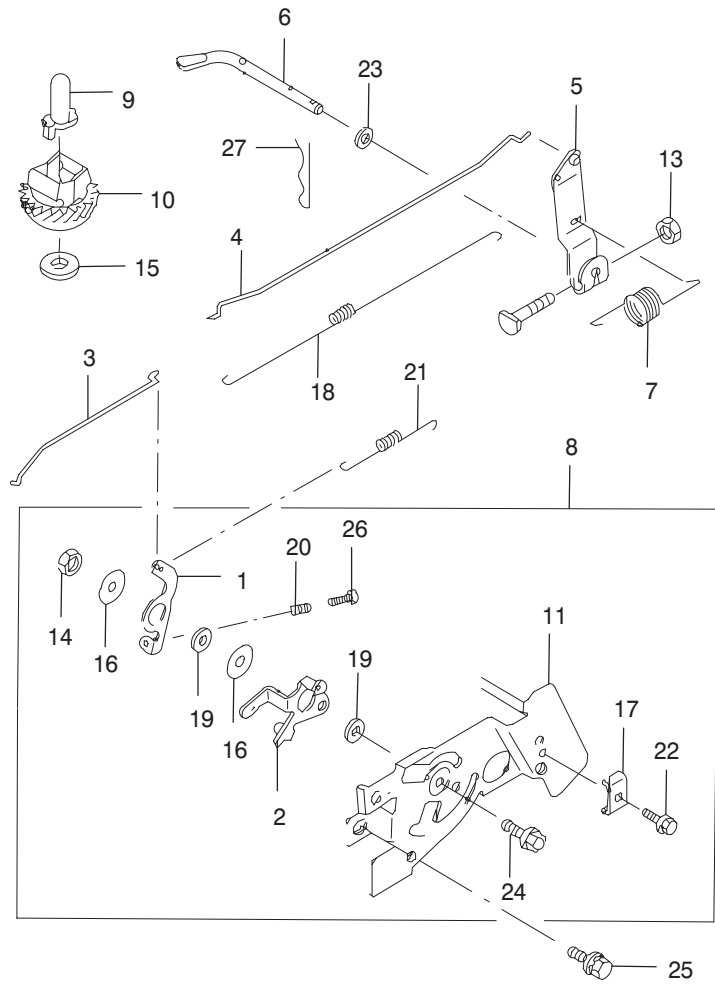 


Sheet No.:5

Control Linkage Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2700	1	Lever
2	100-2701	1	Lever
3	100-2702	1	Link-Choke
4	100-2703	1	Link
5	100-2704	1	Arm ASM
6	100-2705	1	Arm-Pivot
7	100-2706	1	Spring-Governor
8	100-2707	1	Control Panel ASM
9	100-2708	1	Sleeve
10	93-8611	1	Governor ASM
11	100-2710	1	Panel-Control
*12	93-8608	1	Washer
13	93-8631	1	Nut
14	93-8595	1	Nut
15	94-6842	1	Washer
16	100-2715	2	Washer
17	95-9849	1	Clamp
18	100-2717	1	Link-Spring
19	100-2718	2	Collar
20	93-8588	1	Spring
21	100-2720	1	Spring
22	95-9853	1	Bolt
23	93-8608	1	Washer
24	95-9837	1	Bolt - Flanged
25	100-2724	2	Bolt

Ref. No.	Part No.	Qty.	Description
26	100-2725	1	Screw-Pan
27	93-8607	1	Pin-Snap

 * Not illustrated

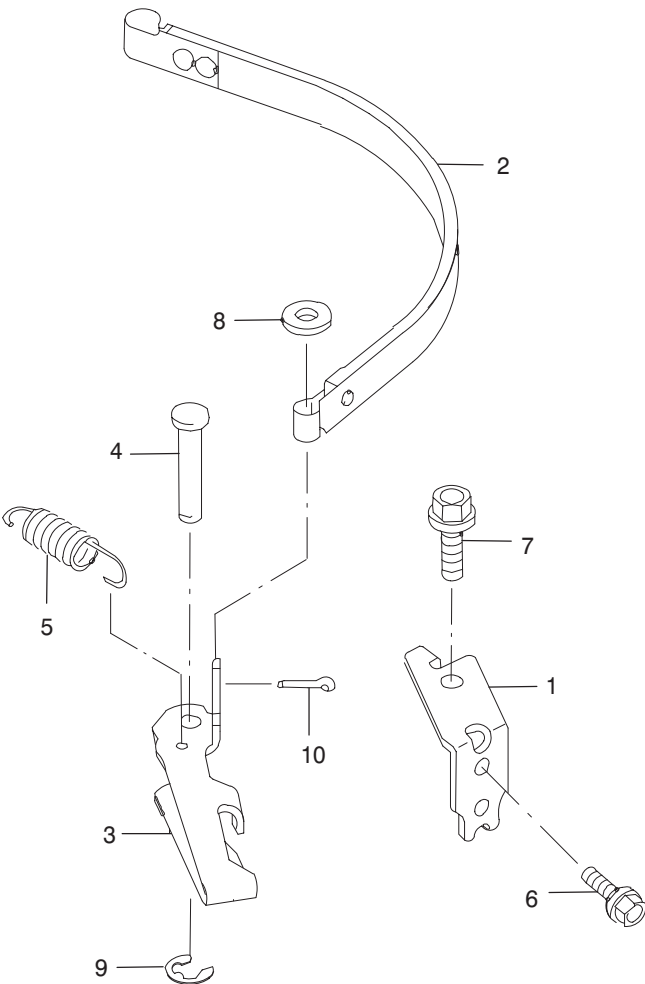


Sheet No.:6

Brake Band Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2783	1	Bracket
2	100-2784	1	Band-Brake
3	100-2785	1	Lever-Brake
4	100-2786	1	Pin
5	100-2787	1	Spring
6	100-2609	1	Bolt-Flanged
7	KW10029	1	Bolt, Flanged
8	100-2671	1	Washer Plain S
9	100-2791	1	Circlip-Type-E
10	100-2792	2	Pin Cotter


Ref. No.	Part No.	Qty.	Description

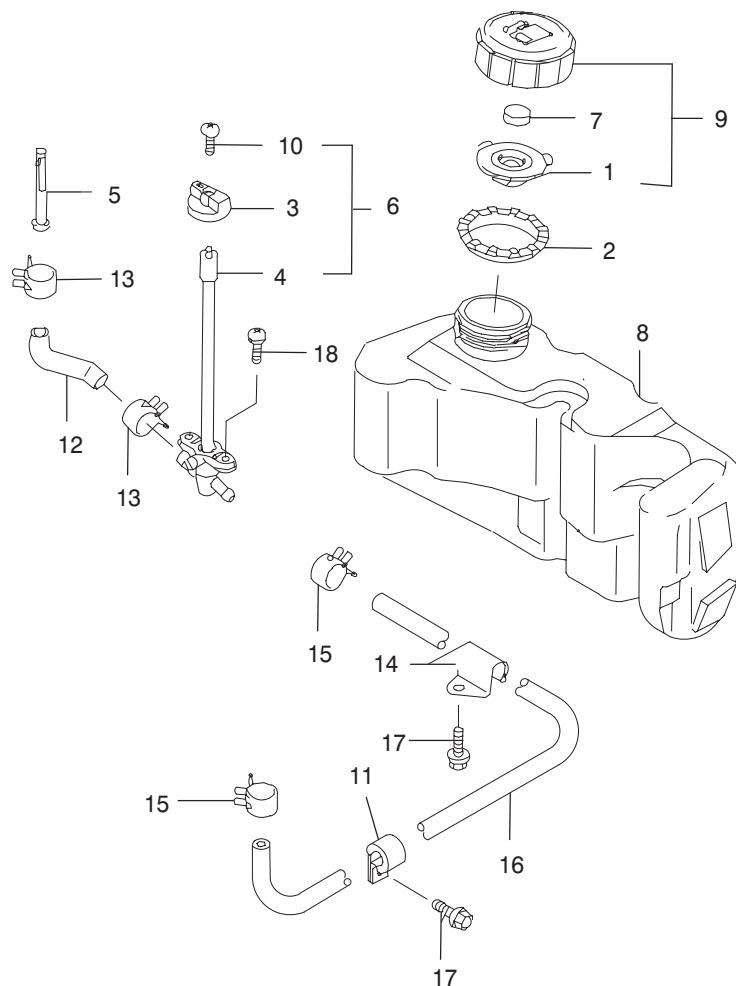 

Sheet No.:7

Fuel Tank and Valve Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2808	1	Gasket
2	100-2809	1	Guide
3	100-2810	1	Lever
4	100-2811	1	Filter-Complete
5	100-2812	1	Filter-Fuel
6	100-2814	1	Valve - Fuel
7	100-2813	1	Element-Breather
8	100-2815	1	Tank-Fuel, Complete
9	100-2816	1	Tank Cap ASM
10	100-2817	1	Screw
11	100-2818	1	Clamp
12	100-2819	1	Tube
13	100-2820	2	Clamp
14	100-2821	1	Clamp
15	100-2822	2	Clamp
16	100-2823	1	Tube
17	100-2804	2	Bolt-Flanged
18	100-2825	2	Screw-Pan

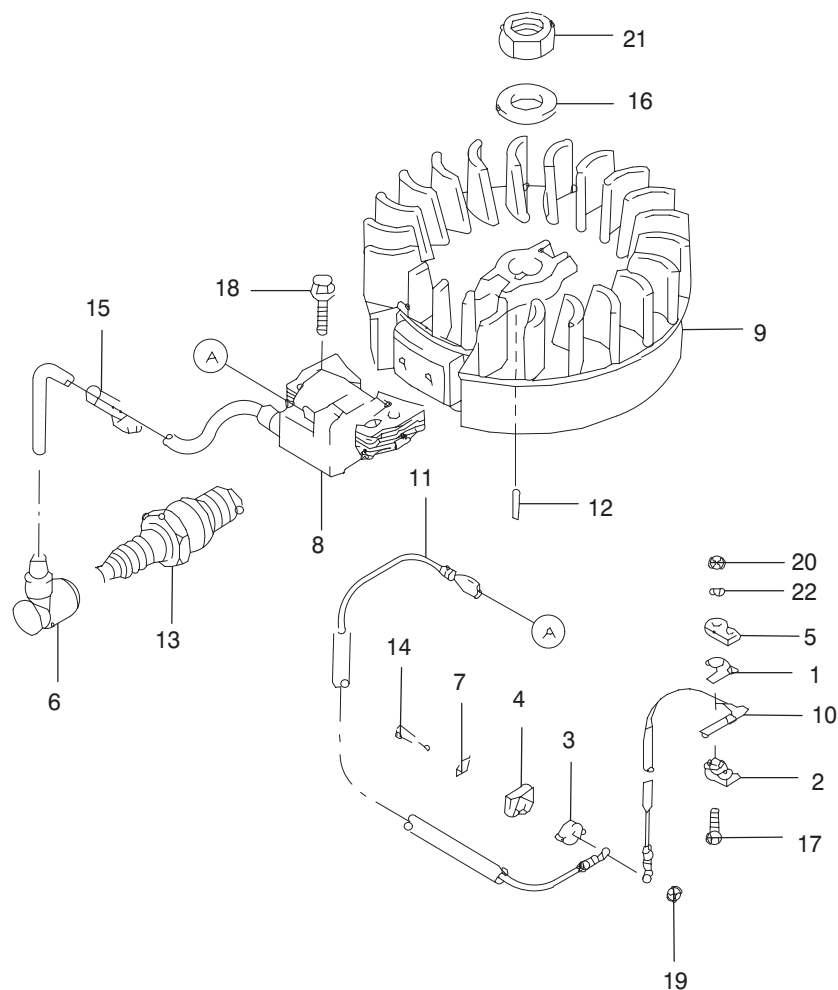 


Sheet No.:8

Flywheel/Ignition Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2650	1	Plate
2	100-2651	1	Cover
3	100-2652	1	Cover
4	100-2653	1	Insulator
5	100-2654	1	Insulator
6	KW10087	1	Plug-Cap
7	100-2656	1	Terminal
8	100-2657	1	Ignition Coil ASM
9	100-2658	1	Flywheel-Complete
10	100-2659	1	Wire Lead
11	100-2660	1	Wire-Lead
12	93-8571	1	Key
13	KW10676	1	Plug-Spark
14	100-2663	1	Bolt
15	100-2664	1	Clamp
16	100-2665	1	Washer
17	100-2666	1	Bolt Upset
18	100-2610	2	Bolt-Flanged
19	100-2668	1	Nut-Hex
20	100-2669	1	Nut Hex
21	93-8568	1	Nut
22	100-2671	1	Washer Plain S


Ref. No.	Part No.	Qty.	Description

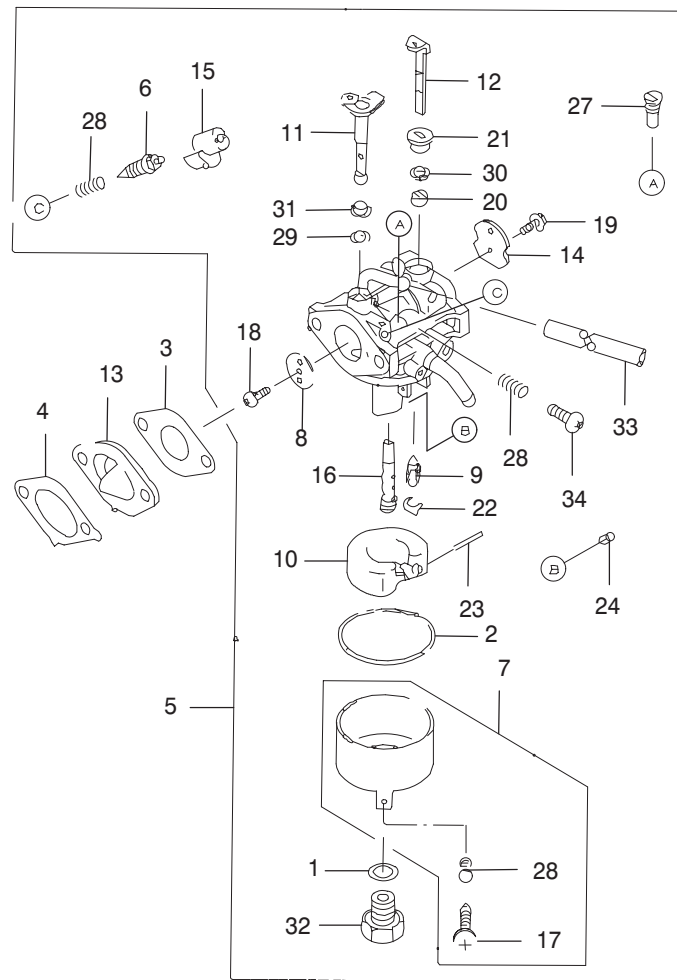 

Sheet No.:9

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2611	1	Gasket	27	100-2635	1	Jet-Pilot
2	100-2612	1	Gasket	28	100-2636	3	Spring
3	100-2613	1	Gasket-Carburetor	29	100-2637	1	Seal
4	100-2614	1	Gasket-Insulator	30	100-2638	1	Seal
5	100-2615	1	Carburetor ASM	31	100-2639	1	Collar
6	100-2616	1	Screw-Pilot, Air	32	100-2640	1	Bolt
7	100-2617	1	Float-Chamber	33	100-2641	1	Tube
8	100-2618	1	Valve-Throttle	34	100-2642	1	Screw-Pan
9	100-2619	1	Valve-Float				
10	100-2620	1	Float				
11	100-2621	1	Shaft-Throttle, Carburetor				
12	100-2622	1	Shaft-Choke, Carburetor				
13	100-2623	1	Insulator				
14	100-2624	1	Valve				
15	100-2625	1	Limiter				
16	100-2626	1	Nozzle-Main				
17	100-2627	1	Screw				
18	100-2628	1	Screw				
19	100-2629	2	Screw				
20	100-2630	1	Collar				
21	100-2631	1	Collar				
22	KW10297	1	Clip				
23	100-2633	1	Pin				
24	100-2634	1	Jet-Main				

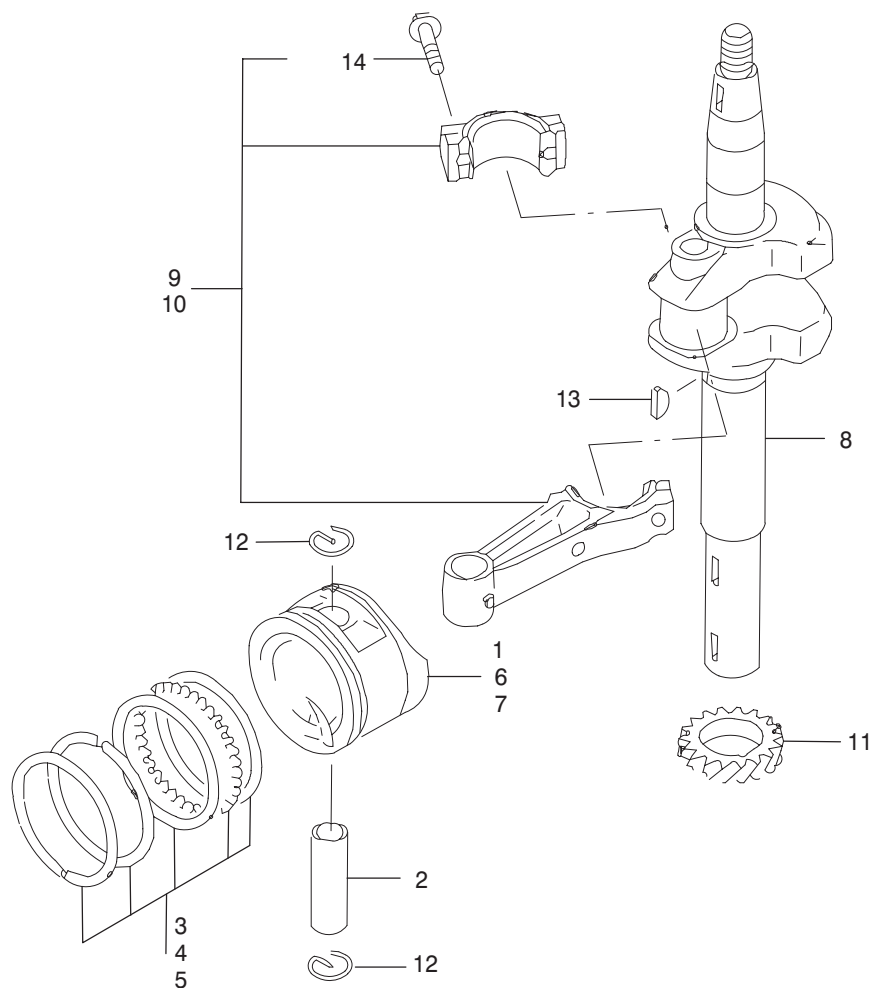 


Sheet No.:10

Piston/Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2672	1	Piston-Engine
2	100-2673	1	Pin-Piston
3	100-2674	1	Set-Ring, Piston
4	100-2675	1	Set-Ring, Piston-L0.25
5	100-2676	1	Set-Ring, Piston-L0.50
6	100-2677	1	Piston-Engine, L0.25
7	100-2678	1	Piston-Engine, L0.50
8	100-2828	1	Crankshaft
9	100-2680	1	Connecting Rod ASM
10	100-2681	1	Connecting Rod ASM (U/S=0.50)
11	100-2682	1	Gear-Helical
12	100-2683	2	Ring-Snap
13	93-8526	1	Key
14	93-8527	2	Bolt-Rod


Ref. No.	Part No.	Qty.	Description

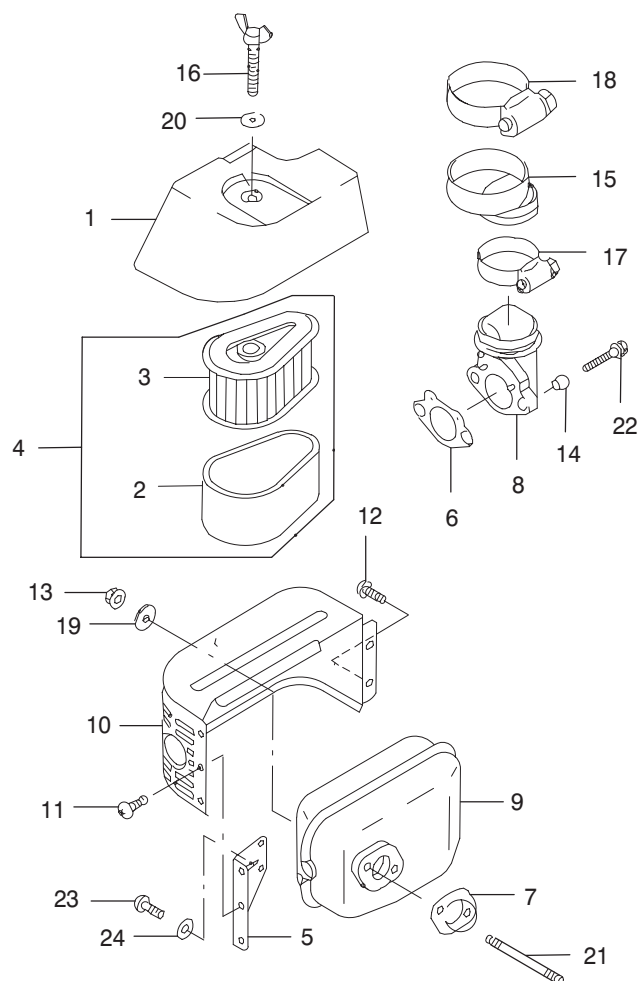 

Sheet No.:11

Air Filter/Muffler Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2691	1	Cap-Filter, Air
2	100-2692	1	Element-Filter, Air
3	100-2693	1	Element-Filter, Air
4	100-2694	1	Air Filter Element ASM
5	100-2695	1	Bracket
6	100-2696	1	Gasket-Pipe, Intake
7	100-2697	1	Gasket-Muffler
8	100-2698	1	Pipe-Intake
9	100-2699	1	Muffler-Complete
10	100-2750	1	Cover-Muffler
11	93-8549	3	Screw
12	95-9716	2	Screw
13	93-8631	2	Nut
14	100-2754	2	Spacer
15	100-2755	1	Tube
16	100-2756	1	Bolt
17	100-2757	1	Clamp
18	100-2758	1	Clamp
19	100-2759	2	Washer
20	100-2760	1	Washer
21	100-2761	2	Bolt-Stud
22	100-2762	2	Bolt
23	100-2763	2	Screw-Pan
24	93-8639	2	Washer

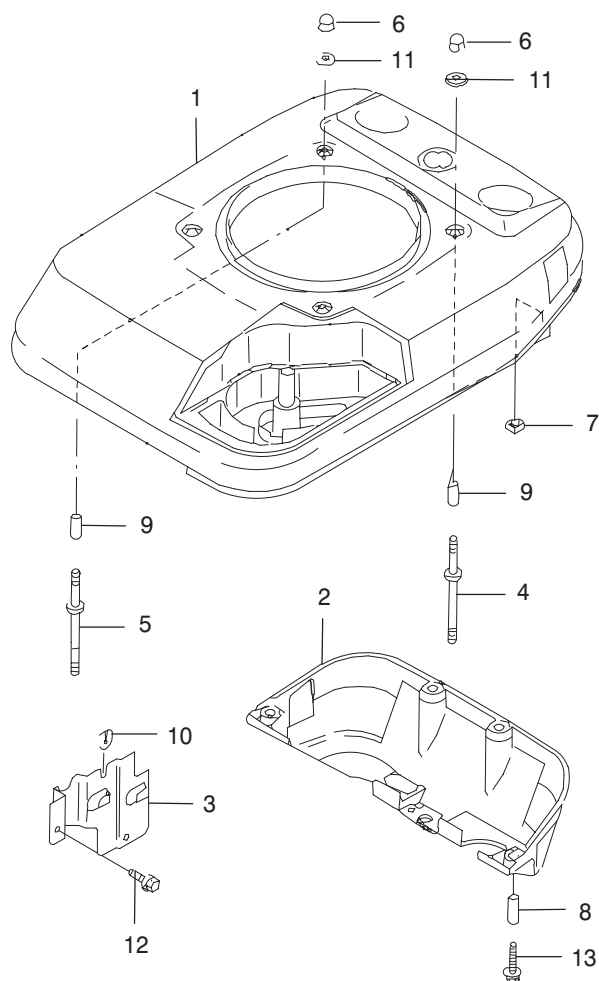 


Sheet No.:12

Cover/Cooling Assembly

Ref. No.	Part No.	Qty.	Description
1	100-2600	1	Cover-Upper
2	100-2793	1	Cover-Lower
3	100-2794	1	Cover
4	100-2601	3	Stud
5	100-2602	1	Stud
6	100-2603	4	Nut
7	100-2604	4	Nut
8	100-2606	4	Spacer
9	100-2605	4	Spacer
10	100-2607	1	Grommet
11	100-2760	4	Washer
12	100-2609	2	Bolt-Flanged
13	100-2610	4	Bolt-Flanged


Ref. No.	Part No.	Qty.	Description

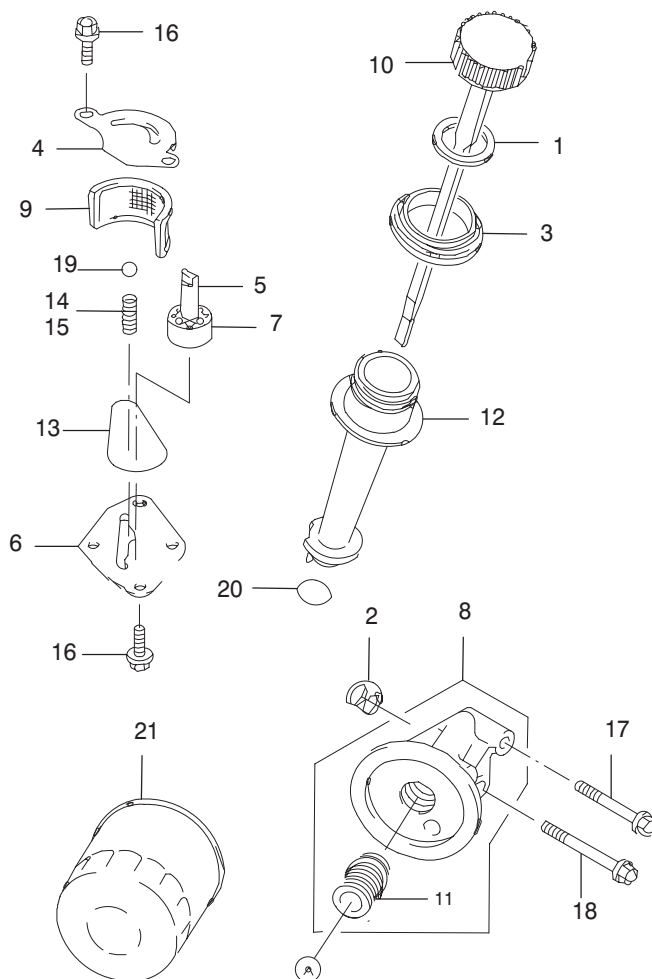 

Sheet No.:13

Dipstick/Oil Filter Assembly

Ref. No.	Part No.	Qty.	Description
1	KW10010	1	Gasket
2	100-2644	1	Gasket
3	100-2687	1	Guide
4	100-2645	1	Plate
5	100-2643	1	Pump ASM Oil
6	100-2646	1	Cover Pump
7	100-2647	1	Rotor Pump
8	100-2648	1	Pipe Complete
9	100-2649	1	Filter – Screen
10	100-2688	1	Gauge
11	95-9715	1	Joint
12	100-2689	1	Filler
13	100-2801	1	Ring O
14	100-2802	1	Spring
15	100-2803	1	Spring
16	100-2804	6	Bolt-Flanged
17	100-2805	2	Bolt-Flanged
18	100-2806	1	Bolt-Flanged
19	100-2807	1	Ball-Steel
20	100-2690	1	O-Ring
21	KW10761	1	Filter-Oil

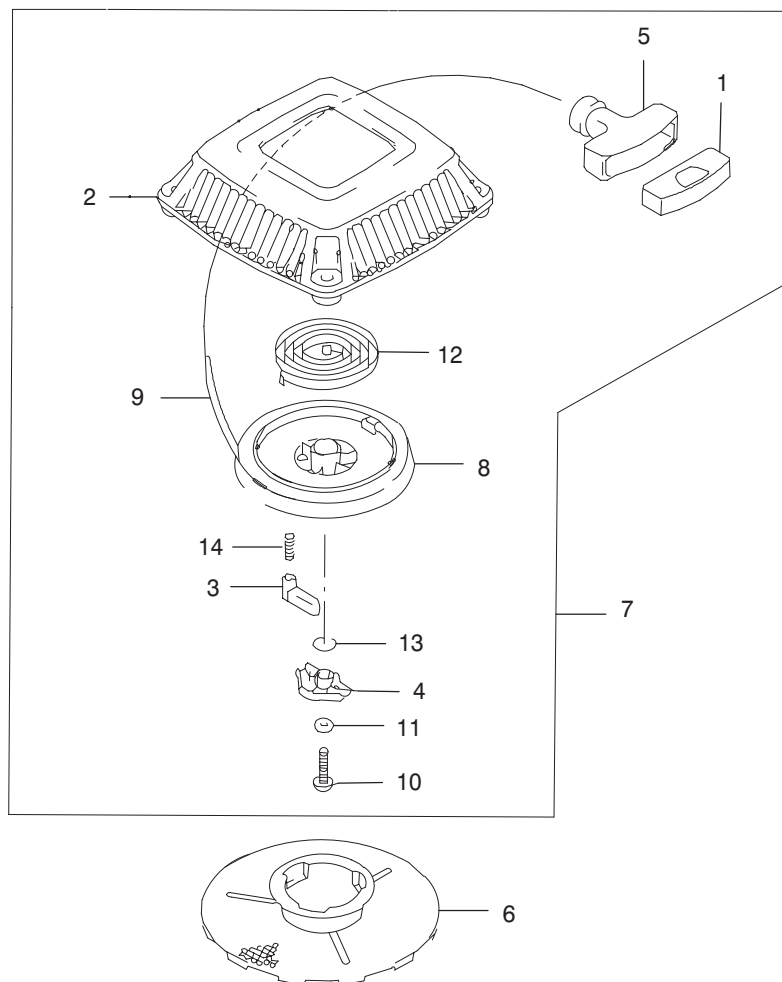 

Sheet No.:14

Recoil Starter Assembly

Ref. No.	Part No.	Qty.	Description
1	94-9044	1	Cap - Grip
2	100-2766	1	Holder
3	100-2767	1	Pawl-Starter, Recoil
4	100-2768	1	Retainer-Spring
5	100-2769	1	Grip-Starter, Recoil
6	100-2770	1	Pulley-Starting
7	100-2771	1	Starter-Recoil
8	100-2772	1	Reel-Starter, Recoil
9	100-2836	1	Rope Recoil 3.8x2610
10	100-2774	1	Screw
11	100-2775	1	Washer
12	100-2776	1	Spring-Recoil
13	100-2777	1	Spring
14	93-8555	1	Spring-Return

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

