

REAR ATTACH-A-MATIC™ HITCH

PART NO. 95-4220

INSTALLATION INSTRUCTIONS

Loose Parts

Note: Use the chart below to identify parts for assembly.

DESCRIPTION	QTY.	USE
Mounting bracket assembly	1	
Mounting bracket	2	Assemble Attach–A–Matic™
Lock nut .375-16	4	
Carriage bolt .375–16 x 3.5"	4	

Assembling the Rear Attach–A–Matic[™] Hitch

The rear Attach-A-Matic $^{\text{m}}$ is mounted on the rear axle of the tractor.

1. Push one bolt upward through the rear hole on each side of the Attach–A–Matic [™], then through a mounting bracket (Fig. 1).

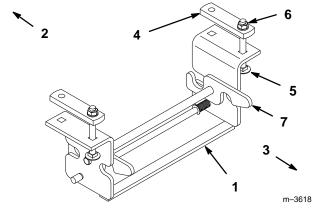


Figure 1

- 1. Attach-A-Matic™
- 2. Facing front of tractor
- 3. Facing rear of tractor
- 4. Mounting bracket
- 5. Carriage bolt .375 x 3.5"
- 6. Lock nut
- 7. Latch
- 2. Begin to thread a nut onto the end of the bolt (Fig. 1).

- 3. Place the Attach–A–Matic [™] under the rear axle (Fig. 2), and rotate the mounting brackets over the top of the axle to hold the Attach–A–Matic [™] in place.
- **4.** Push the remaining two bolts upward through the front holes on the Attach–A–Matic [™], then through the remaining holes on the mounting brackets. Thread a nut onto each bolt.


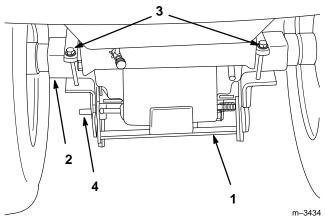


Figure 2

- Attach–A–Matic[™]
- 2. Axle housing
- 3. Mounting nuts
- 4. Release button

- 5. Tighten the nuts evenly on the bolts to hold the Attach–A–Matic [™] in place.
- 6. When mounting an attachment to the rear Attach–A–Matic [™], press on the release button (Fig. 2) and open the latches. Place the attachment bar hitch into the Attach–A–Matic [™], then close the latches (Fig. 3).

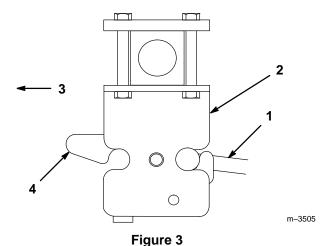

- 1. Attachment bar hitch
- 3. Rear
- Rear Attach–A–Matic ™
- 4. Latch