

Deluxe Seat Suspension Kit Groundsmaster® 3000/4000 Series

Model No. 30396

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form \mathbf{nX} \mathbf{y} . The \mathbf{n} represents the quantity of the part, the \mathbf{X} is the multiplication symbol, and the \mathbf{y} represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

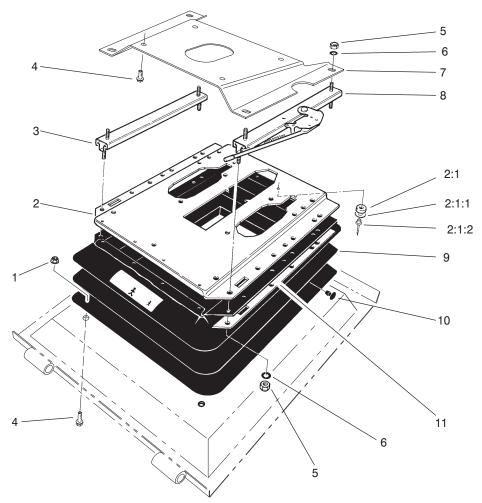


T-2264-2 Sheet No.:0

Suspension Kit Assembly

			<u>-</u>
Ref. No.	Part No.	Qty.	Description
1 2	32128–44 71–2410	4 1	Nut–Flange Plate–Upper Suspension
2:1:1 2:1:2	71–2390 66–8530 3234–17 3296–29 3256–23 93–5602 66–8510 71–2420	2 2 2 1 8 8 8 1 1 21 2	Suspension Bumper Assembly Washer Rivet-Pop Adjuster Screw-HHF Nut-Lock

Ref. No.	Part No.	Qty.	Description

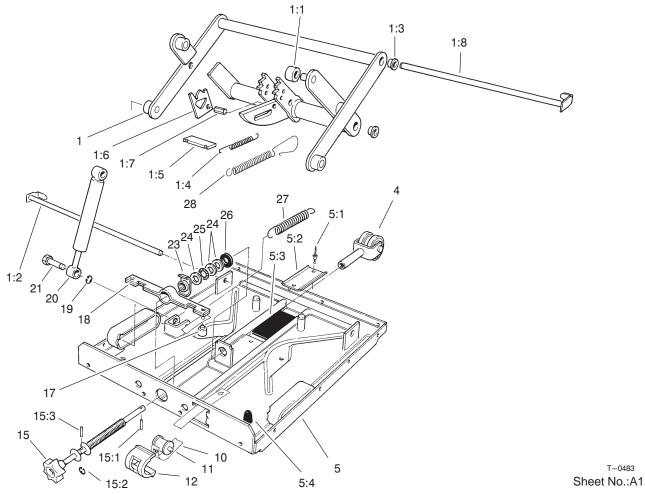

Seat Suspension Assembly

Ref. No.	Part No.	Qty.	Description
1	71–2200	1	Swing Arm ASM
1:1	40–4010	4	Roller
1:2	71–2170	1	Pin
1:3	71–2180	4	Bearing
1:4	40-4350	2	Spring-Coil
1:5	40-4360	1	Plate
1:6	40–4380	2	Bracket–Release
1:7	40-4370	1	Bolt
1:8	71–2190	1	Pin
4	71–2290	1	Fork And Triple
			Bearing ASM
5	71–2310	1	Plate-Suspension,
F.4	40 4000	ا	Lower
5:1		2	Rivet
1	40–4080	1	U-Track
1	40–4120	1	Rubber
1	71–2300	2	Bumper–Rubber
10	71–2280	1	Band–Indicator,
44	40 4450	ا ہا	Weight
11		1	Roller
12		1	Guide-Sleeve
1	71–2240	1	Knob ASM
1	71–2210	1	Pin Bina Coor
1	71–2230	1	Ring-Snap
1	71–2220	1	Pin
17	40–4230	1	Plug

Ref. No. Part	No. Qty.	Description
18 71–225 19 71–233 20 71–234 21 71–232 23 71–227 24 40–407 25 40–431 26 40–406 27 71–226 28 40–434	60 1 60 2 60 1 70 1 70 3 70 1 60 1	Bracket–Spring Ring–Snap Absorber–Shock Pin Nut–Special Washer Bearing–Thrust, Needle Washer–Rubber Spring Spring–Coil

