



Super Recycler[®] Walk Power Lawn Mower

Model No. 20036—230000001 and Up

Model No. 20037—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Housing and Wheel Assembly	3	Carburetor Assembly	
Gear Case Assembly No. 104–7674	4	Briggs and Stratton Model 123K02–0114–E1	13
Gear Case and Wheel Assembly	5	Air Cleaner Assembly	
Engine Assembly	6	Briggs and Stratton Model 123K02–0114–E1	14
Handle and Control Assembly	7	Governor Assembly	
Rear Bag Discharge Chute Assembly		Briggs and Stratton Model 123K02–0114–E1	15
(Model 20037 only)	8	Muffler and Fuel Tank Assembly	
Rear Bagger Assembly		Briggs and Stratton Model 123K02–0114–E1	16
(Model 20037 only)	9	Blower Housing Assembly	
Cylinder Assembly		Briggs and Stratton Model 123K02–0114–E1	17
Briggs and Stratton Model 123K02–0114–E1	10	Starter Assembly	
Crankshaft Assembly		Briggs and Stratton Model 123K02–0114–E1	18
Briggs and Stratton Model 123K02–0114–E1	11	Gasket Assembly	
Crankcase Assembly		Briggs and Stratton Model 123K02–0114–E1	19
Briggs and Stratton Model 123K02–0114–E1	12	Carburetor Overhaul Kit Assembly	
		Briggs and Stratton Model 123K02–0114–E1	20

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

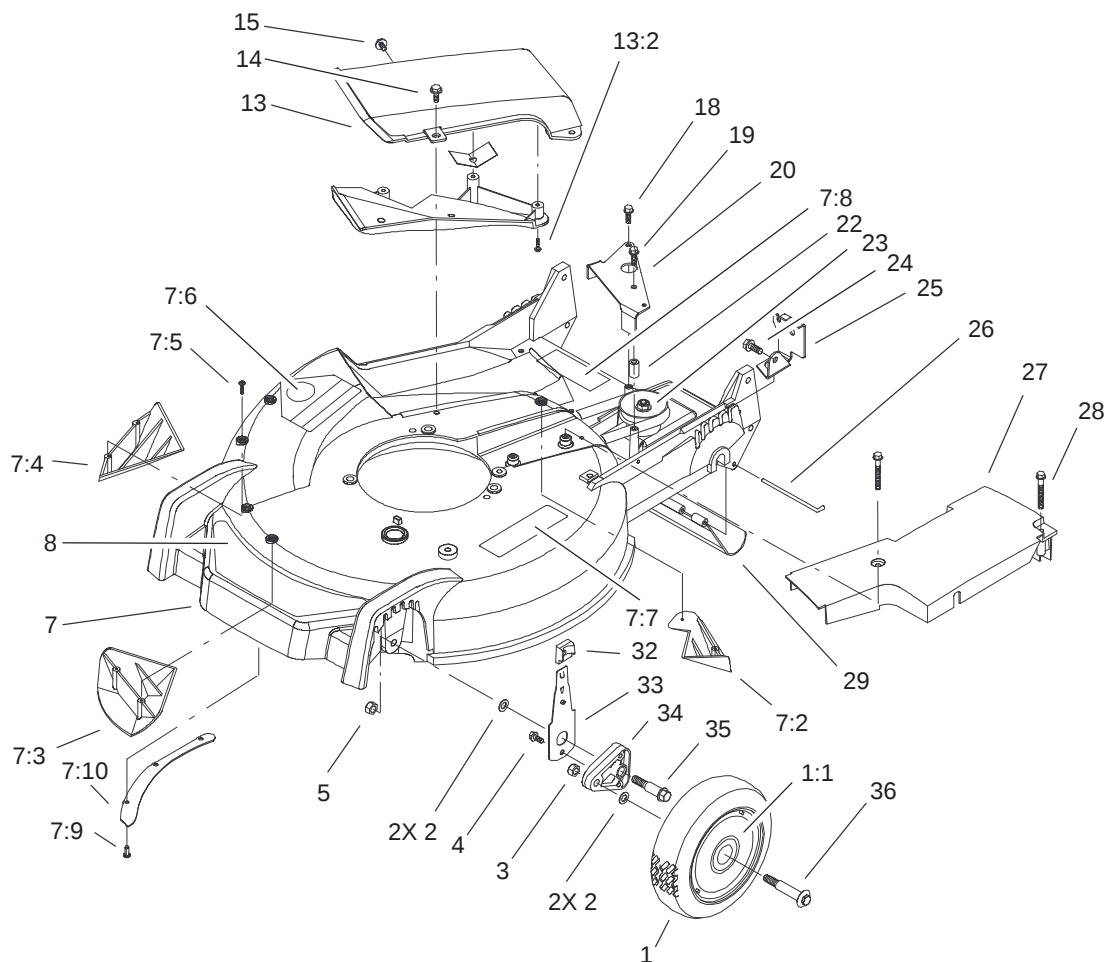

Sheet No.:2

Housing and Wheel Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7130	2	Wheel ASM	18	49-2040	1	Screw-Tapping
1:1	27-6250	2	Bushing	19	92-1616	1	Screw-HWHTF
2	40-1940	4	Washer	20	99-1513-03	1	Bracket-Transmission Actuator
3	603773	2	Nut	22	614673	1	Bushing-Plate, Actuator
4	32144-85	2	Screw-HH	23	104-7674	1	Gear Case ASM
5	3296-6	2	Nut-Lock, NI	24	32144-70	1	Screw-HH
7	105-1307	1	Housing-Service	25	99-1512-03	1	Bracket-Cable, Traction
7:2	92-1750	1	Kicker-Rear	26	33-3208	1	Rod-Shield
7:3	92-1720	1	Kicker-Front	27	104-7906	1	Cover-Belt
7:4	92-1730	1	Kicker-RH	28	37-7260	2	Screw-HH
7:5	32144-111	6	Screw-PPH	29	44-0580	1	Shield-Trailing
7:6	43-8480	1	Decal-Danger	32	25-7740	2	Knob-Arm
7:7	93-0248	1	Decal-Warning	33	66-0541	2	Front Spring Arm ASM
7:8	99-6018	1	Decal-Warning	34	66-0580	2	Arm-Pivot, Front
7:9	63-8590	3	Screw	35	66-0560	2	Bolt-Shoulder
7:10	105-1316-03	1	Sheet-Lip	36	92-1057	2	Bolt-Shoulder
8	99-6010	1	Decal-Deck				
13	100-8775	1	Recycler Cover ASM (only on: 20036)				
13:2	32144-111	5	Screw-PPH (only on: 20036)				
14	46-6811	3	Screw-HWH (only on: 20036)				
15	46-6810	1	Screw And Washer ASM (only on: 20036)				

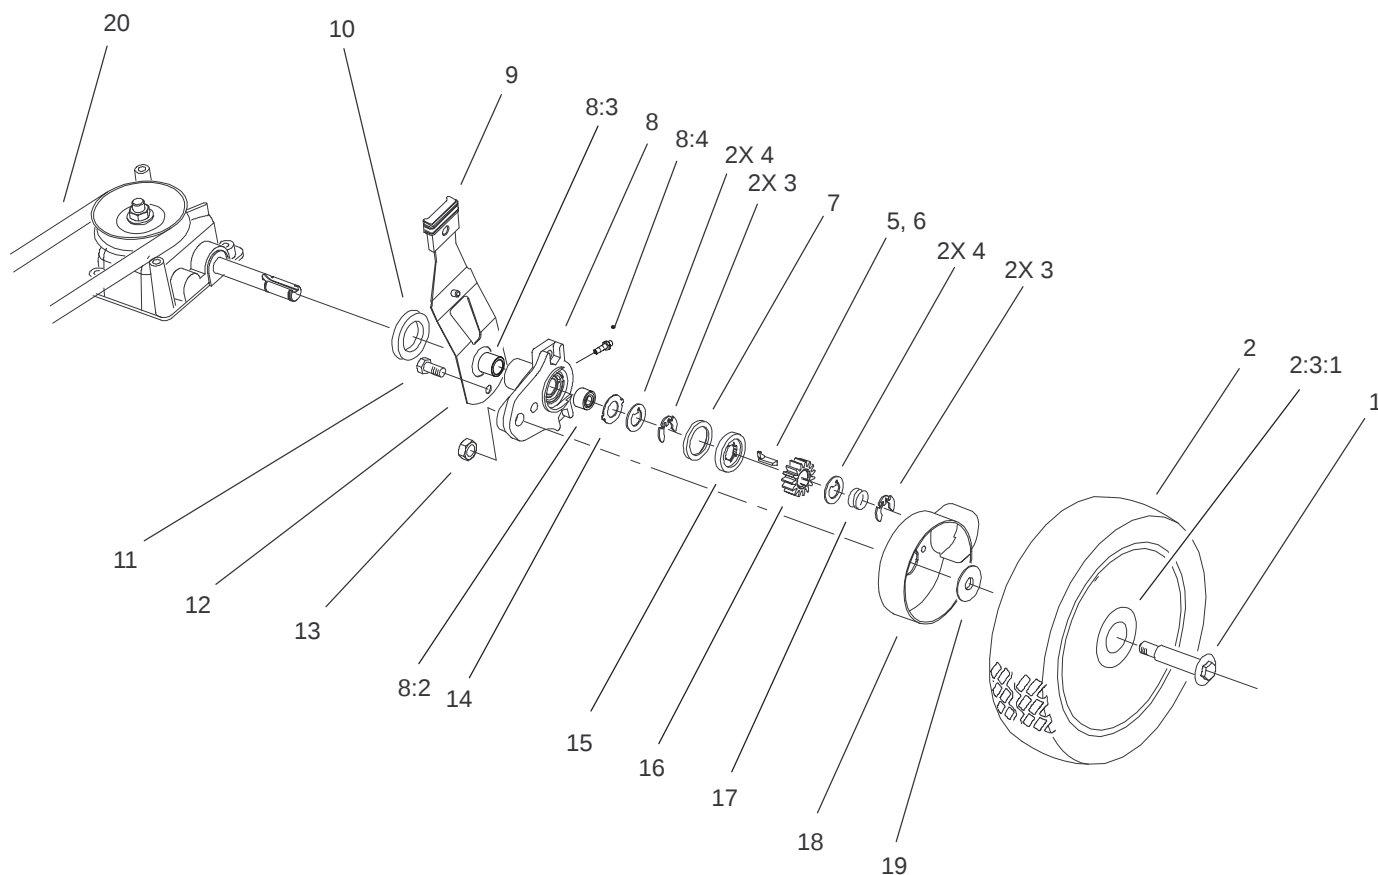

Sheet No.:3

Gear Case and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	98-7135	2	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Ring-Klip
4	65-4740	4	Washer-Thrust, Keyed
5	66-6040	1	Key-Rocking, RH
6	66-6050	1	Key-Rocking, LH
7	65-4710	2	Ring-Friction
8	100-8774	2	Pivot Arm ASM
8:2	47-2900	1	Bushing
8:3	70-9760	1	Bushing
8:4	302-56	1	Fitting-Grease
9	25-7740	2	Knob-Arm
10	42-3520	2	Cap-End
11	32144-85	2	Screw-HH
12	63-8721	2	Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	74-1660	2	Cover-Wheel
19	74-1671	2	Spacer-Cover, Wheel
20	91-2258	1	V-Belt

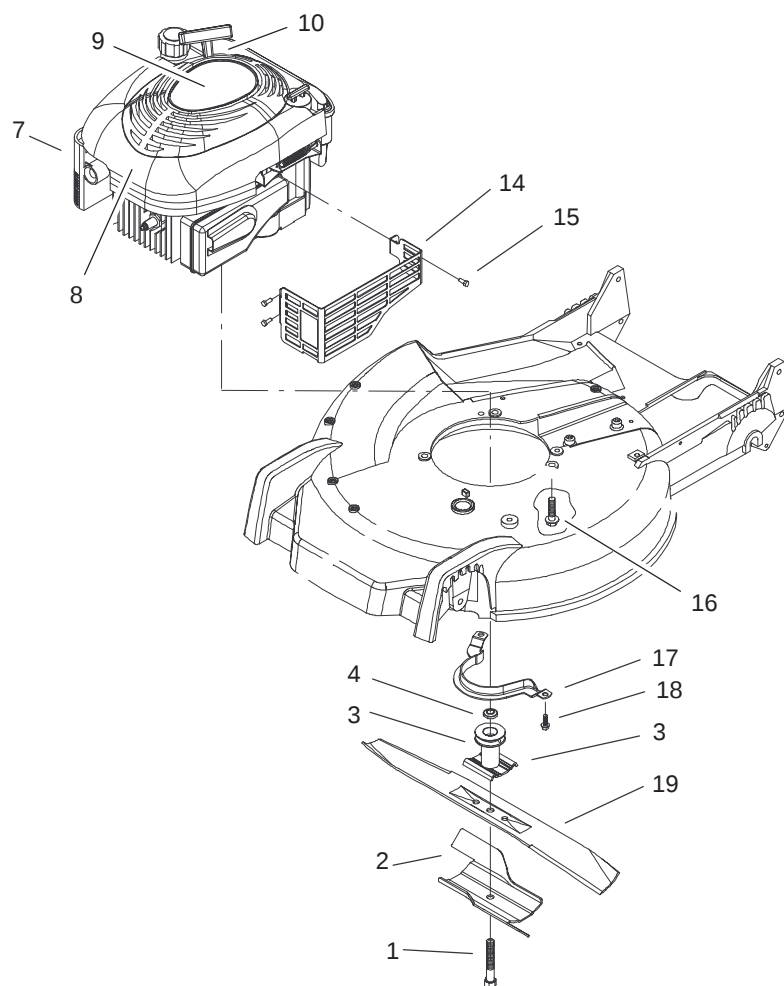

Sheet No.:4


Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade, Sems
2	105-6848-03	1	Accelerator-Blade
3	106-3987	1	Driver-Blade, ASM
4	106-3999	1	Spacer-Driver
☆■7		1	Engine-Quantum 6.5 Briggs & Stratton Model 123K02-0114-E1
8	98-3206	1	Decal-Logo, Toro
9	105-8570	1	Decal-Recoil
10	2210-316	1	Stop-Rope
14	104-7577-03	1	Shield-Muffler
15	32144-1	3	Screw-Taptite
16	32144-102	3	Screw-HWH
17	66-0570-03	1	Bracket-Guide, Belt
18	32144-70	2	Screw-HH
19	93-4106-03	1	Blade-Recycler

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately


- Contact your local Briggs & Stratton Dealer for part replacement.

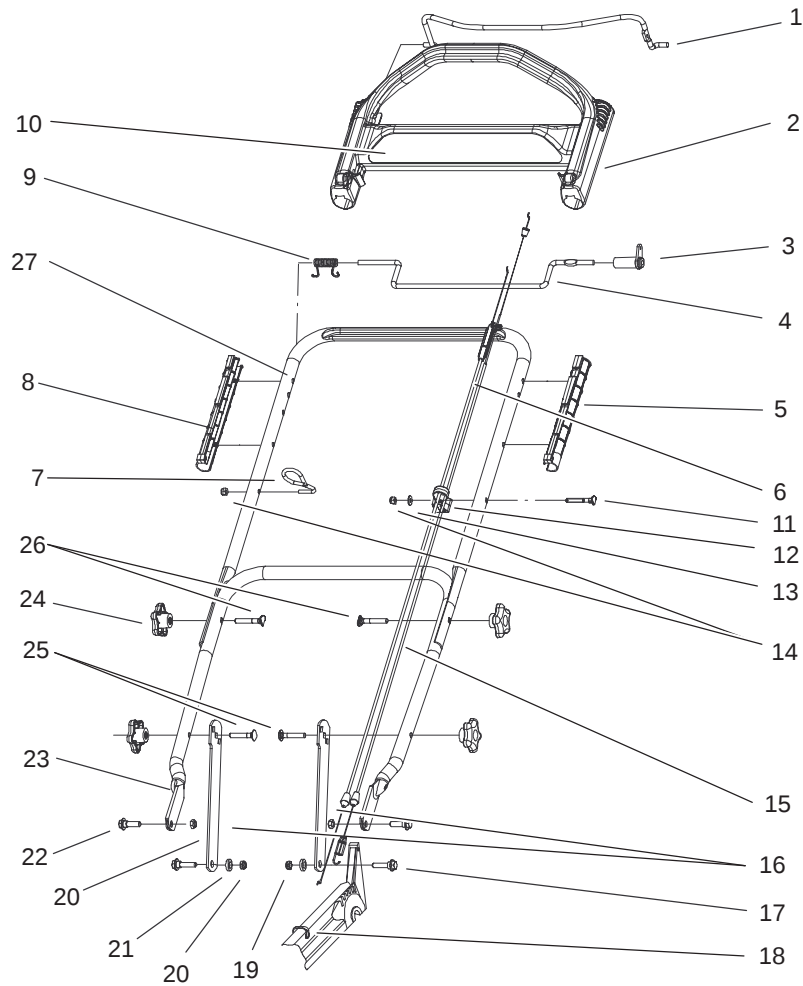

Sheet No.:5

Handle and Control Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-8679-03	1	Bail-Brake	26	92-2260	2	Screw-Handle
2	104-8678	1	Handle-Personal Pace	27	104-8680-05	1	Handle-Upper
3	99-1589	1	Lever-Traction				
4	99-1588	1	Bar-Control, Traction				
5	105-6842	1	Guide-LH				
6	106-5750	1	Cable-Brake				
7	86-9671	1	Guide-Rope				
8	105-6841	1	Guide-RH				
9	104-8690	1	Spring-Torsion				
10	105-8613	1	Decal-Console				
11	95-4453	1	Screw-Handle				
12	99-5239	1	Anchor-Cable				
13	3256-1	1	Washer-Flat				
14	3296-73	2	Nut-Lock, NI				
15	106-8300	1	Cable-Traction				
16	99-5248-03	2	Latch-Handle				
17	27-7210	2	Screw-Shoulder				
18	100-2894	1	Tie-Cable				
19	3296-47	1	Nut-Lock, NI				
20	3296-72	3	Nut-Lock, NI				
21	3-3287	2	Spacer-Latch, Handle				
22	27-7211	2	Screw-Shoulder				
23	99-5249-05	1	Handle-Lower				
24	106-4161	4	Knob-Handle				
25	99-6019	2	Screw-CARR				

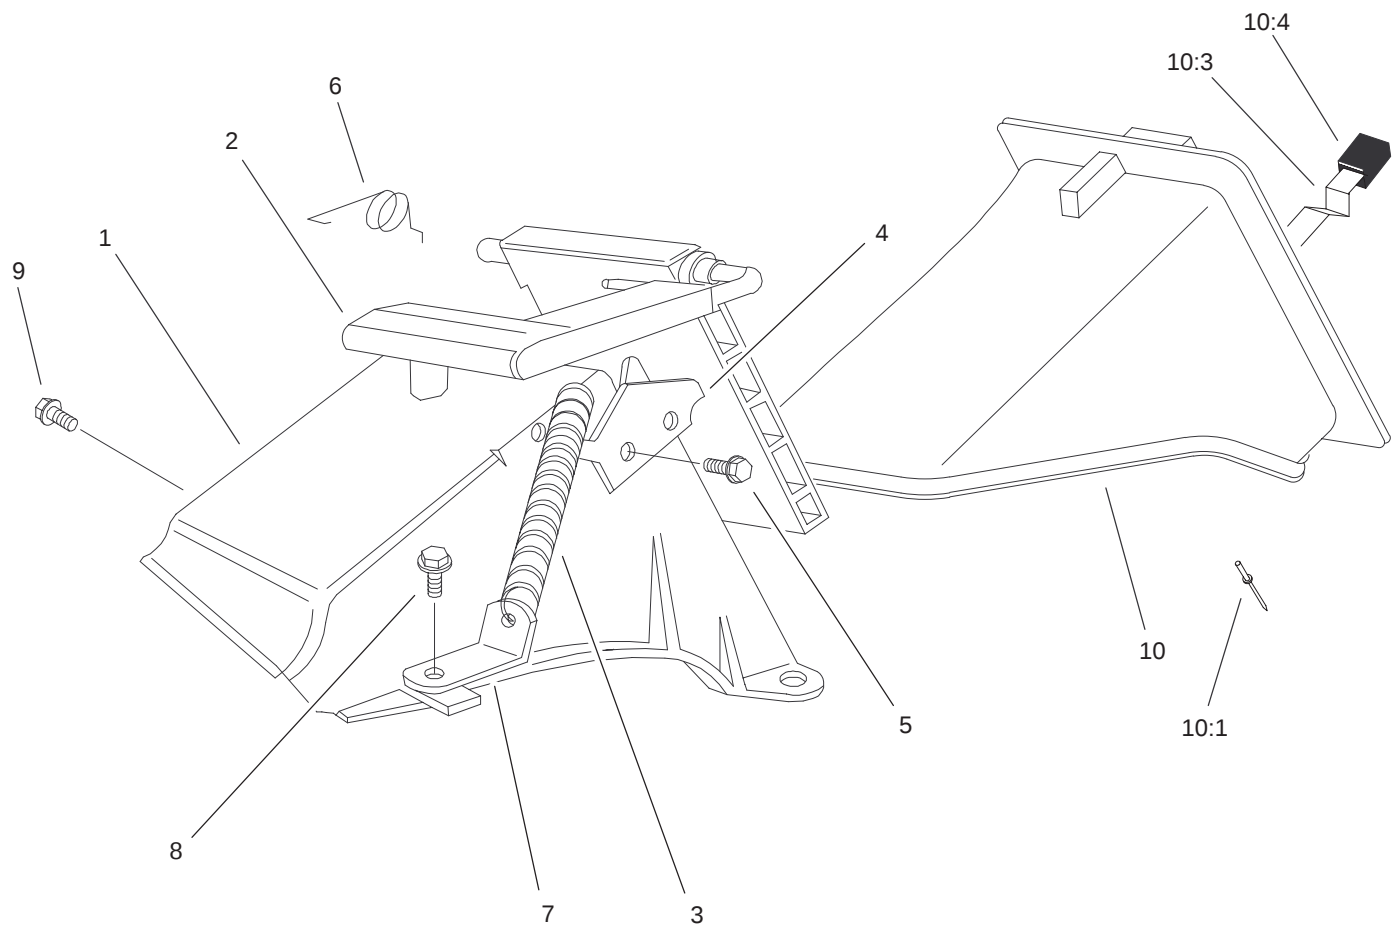

Sheet No.:7

**Rear Bag Discharge Chute Assembly
(Model 20037 only)**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	82-9153	1	Tunnel-Discharge				
2	93-7351	1	Discharge Door ASM				
3	76-4660	1	Spring-Door				
4	93-3154	1	Latch-Plate				
5	46-8090	2	Screw-Plastite				
6	80-3770	1	Retainer-Door				
7	71-9350	1	Bracket-Spring				
8	46-6811	3	Screw-HWH				
9	46-6810	1	Screw And Washer ASM				
10	77-0500	1	Discharge Plug ASM				
10:1	3295-35	1	Rivet-Head, Flat				
10:3	76-4640	1	Latch-Plug, Discharge				
10:4	76-4650	1	Grip-Latch				

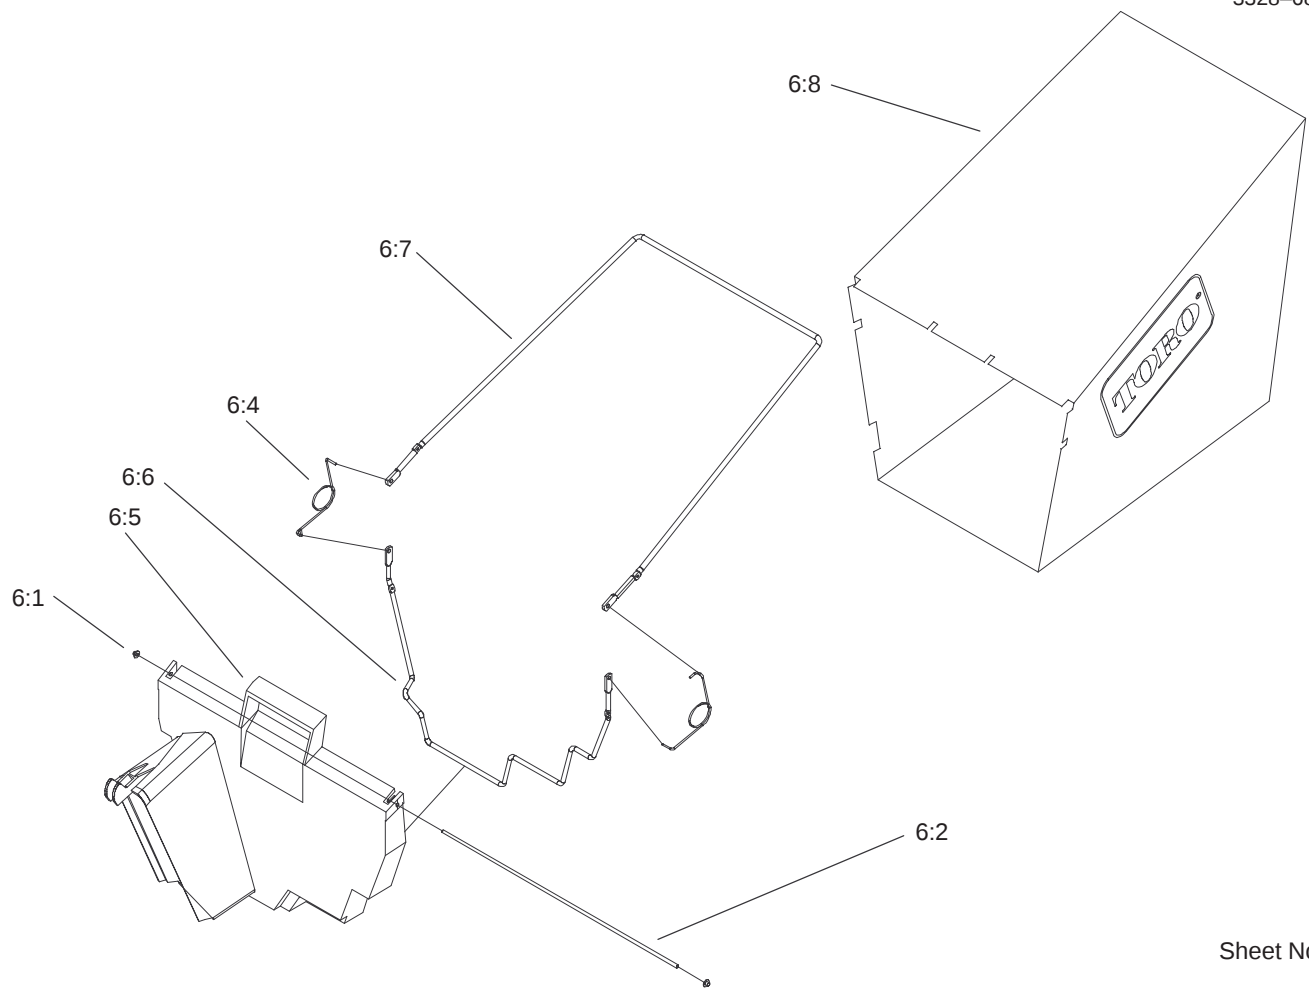


Sheet No.:8

Rear Bagger Assembly (Model 20037 only)

Ref. No.	Part No.	Qty.	Description
6		1	Grass Bag ASM
6:1	3290-422	2	Nut-Push
6:2	33-4820	1	Hinge-Door, Bag
6:4	36-6910	2	Spring
6:5	37-1393	1	Door-Bag
6:6	42-4020	1	Frame-Bag
6:7	42-4030	1	Frame-Bag, Upper
6:8	44-0522	1	Bag-Grass

Ref. No.	Part No.	Qty.	Description

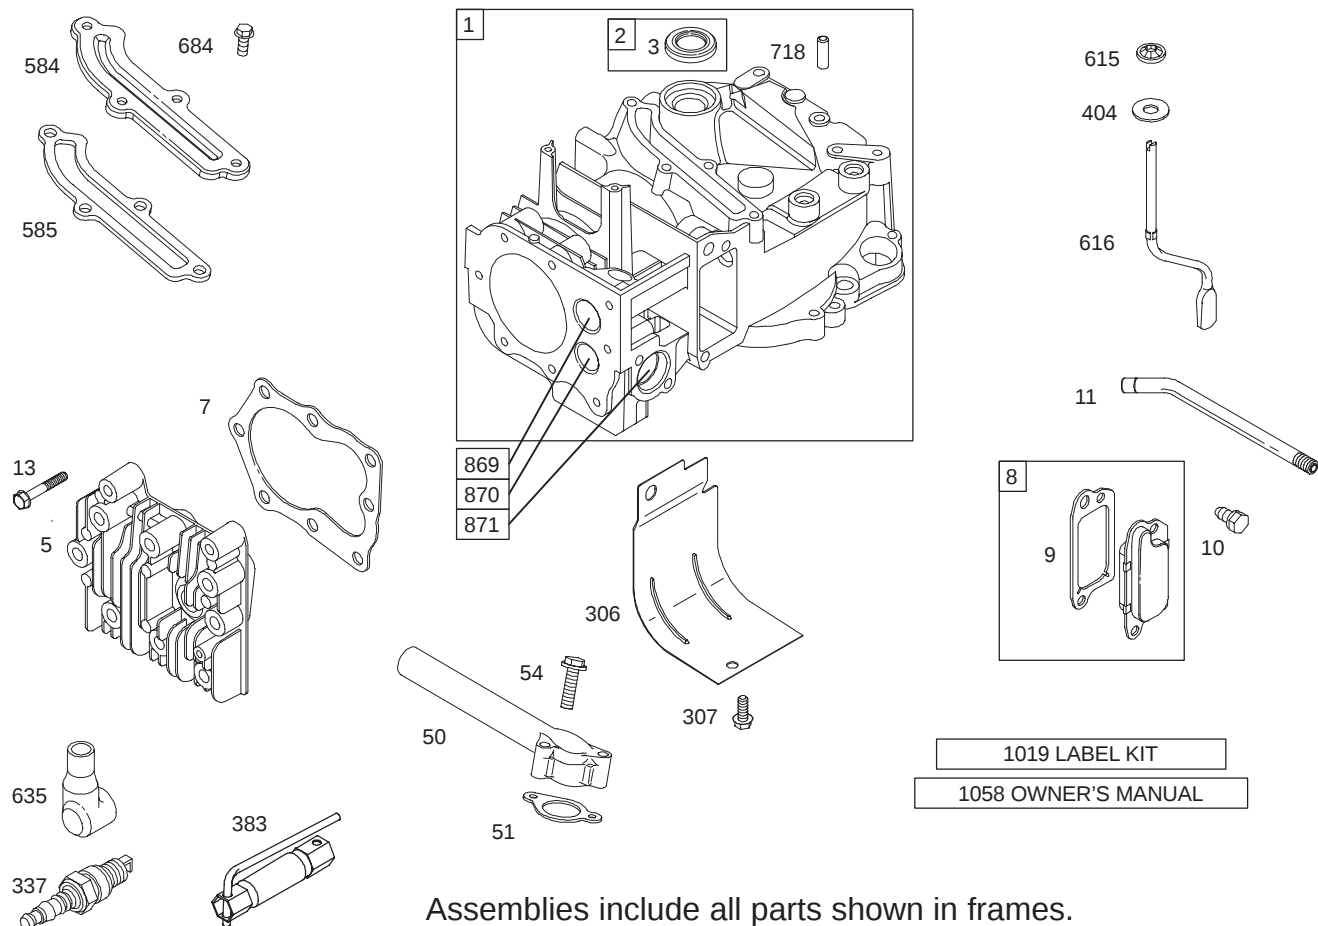

Assemblies include all parts shown in frames.

Cylinder Assembly


Briggs and Stratton Model 123K02-0114-E1

Ref. No.	Part No.	Qty.	Description
1	697322	1	Cylinder Assembly
2	399269	1	Kit—Bushing/Seal
★3	299819	1	Seal—Oil (Magneto Side)
5	691160	1	Head—Cylinder
★7	692249	1	Gasket—Cylinder Head
8	695250	1	Breather Assembly
9	696125	1	Gasket—Breather
10	691125	1	Screw (Breather Assembly)
11	691781	1	Tube—Breather
13	690912	1	Screw (Cylinder Head)
50	497465	1	Manifold—Intake
★51	272199	1	Gasket—Intake
54	691650	1	Screw (Intake Manifold)
306	690450	1	Cylinder Shield
307	690345	1	Screw (Cylinder Shield)
337	802592	1	Plug—Spark
383	89838	1	Wrench—Sparkplug
404	690272	1	Washer (Governor Crank)

Ref. No.	Part No.	Qty.	Description
584	692342	1	Cover—Breather Passage
★585	691879	1	Gasket—Breather Passage
615	690340	1	Retainer—Governor Shaft
616	691308	1	Crank—Governor
635	66538	1	Boot—Spark Plug
684	690345	1	Screw (Breather Passage Cover)
718	690959	1	Pin—Locating
869	691155	1	Seat—Valve (Intake)
870	690380	1	Seat—Valve (Exhaust)
871	262001	1	Bushing—Guide (Exhaust)
	63709	1	Bushing—Guide (Intake)
1019	494256	1	Kit—Label
1058	275177	1	Owner's Manual

Obtain Parts from Briggs and Stratton

★ Included in Engine Gasket Set—Ref. 358.

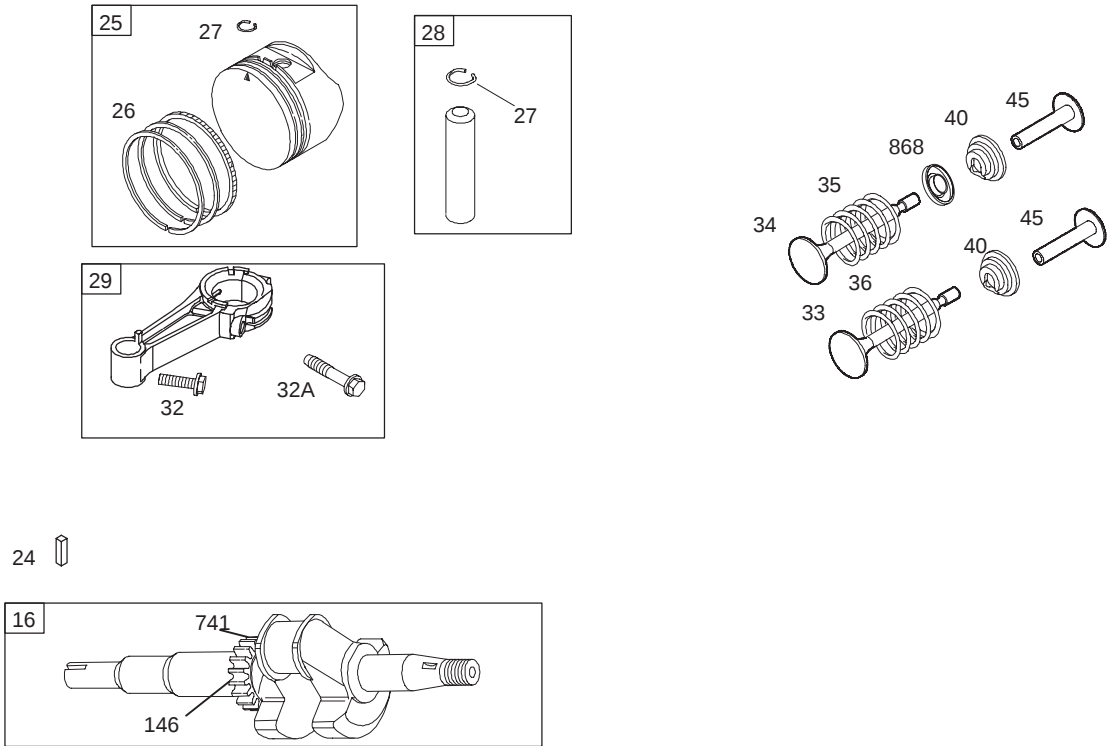


Assemblies include all parts shown in frames.

Crankshaft Assembly **Briggs and Stratton Model 123K02-0114-E1**

Ref. No.	Part No.	Qty.	Description
16	696009	1	Crankshaft
24	222698	1	Key-Flywheel
25	697339	1	Piston Assembly (Standard)
	697340	1	Piston Assembly (.010" Oversize)
	697341	1	Piston Assembly (.020" Oversize)
	697342	1	Piston Assembly (.030" Oversize)
26	499425	1	Ring Set (Standard)
	499426	1	Ring Set (.010" Oversize)
	499427	1	Ring Set (.020" Oversize)
	499428	1	Ring Set (.030" Oversize)
27	691866	1	Lock-Piston Pin
28	499423	1	Piston Pin (Standard)
	298908	1	Piston Pin (.005" Undersize)
29	499424	1	Connecting Rod (Standard)

Ref. No.	Part No.	Qty.	Description
32	691664	1	Screw (Connecting Rod)
32A	695759	1	Screw (Connecting Rod)
33	262651	1	Valve-Exhaust
34	262652	1	Valve-Intake
35	691270	1	Spring-Valve (Intake)
36	691270	1	Spring-Valve (Exhaust)
40	692194	1	Retainer-Valve
45	690548	1	Tappet-Valve
146	690979	1	Key-Timing
741	691830	1	Gear-Timing
868	697338	1	Seal-Valve

Obtain Parts from Briggs and Stratton

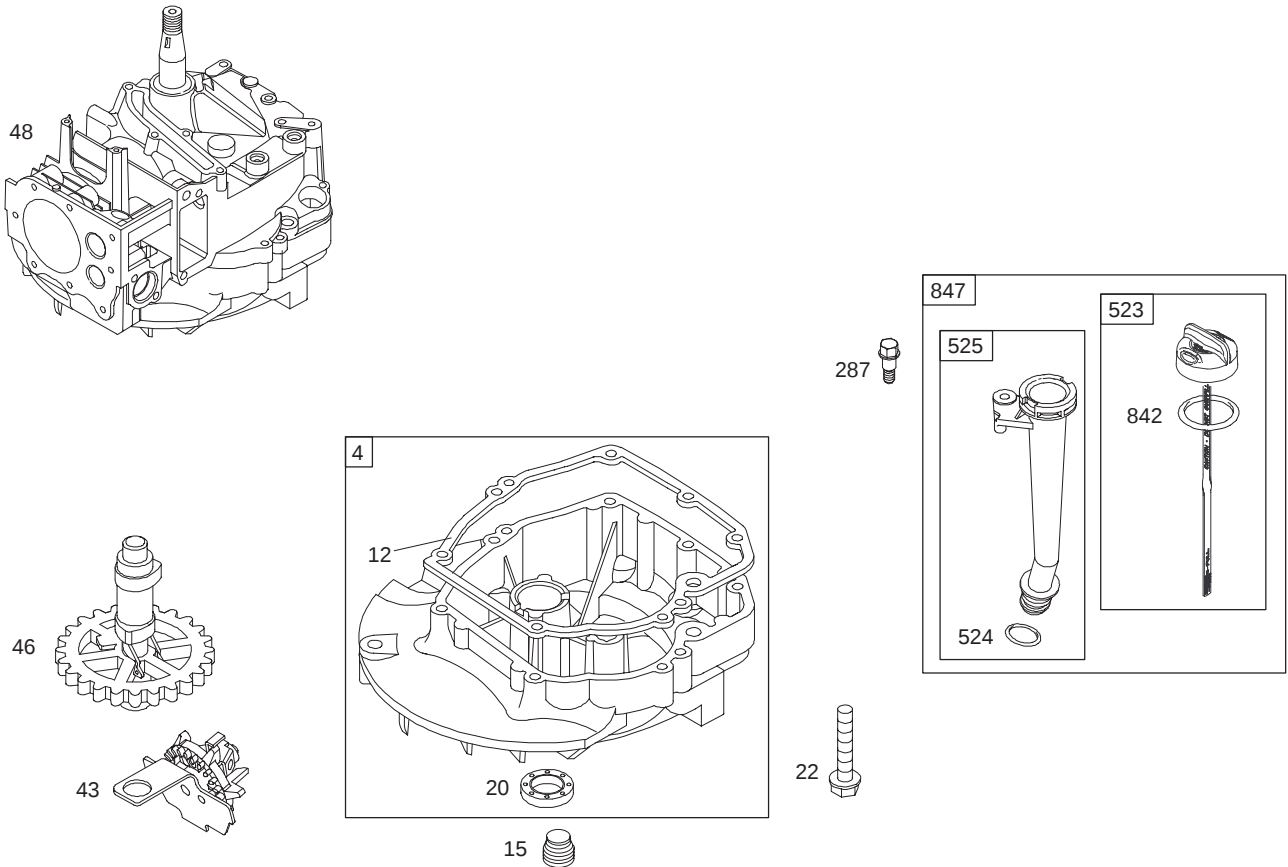


Assemblies include all parts shown in frames.

Crankcase Assembly **Briggs and Stratton Model 123K02-0114-E1**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
4	493279	1	Sump-Engine				
★12	692232	1	Gasket-Crankcase (.015 Thick, Std.)				
15	691680	1	Plug-Oil Drain				
★20	399781	1	Seal-Oil				
22	691092	1	Screw (Engine Sump)				
43	691997	1	Slinger-Governor/Oil				
46	691449	1	Camshaft				
48	696276	1	Short Block				
287	690940	1	Screw (Dipstick Tube)				
523	499621	1	Dipstick				
★524	692296	1	Dipstick Tube Seal				
525	495265	1	Dipstick Tube				
★842	691031	1	O-Ring Seal (Dipstick Tube)				
847	692047	1	Dipstick/ Tube Assembly				

Obtain Parts from Briggs and Stratton
★ Included in Engine Gasket Set-Ref. 358.

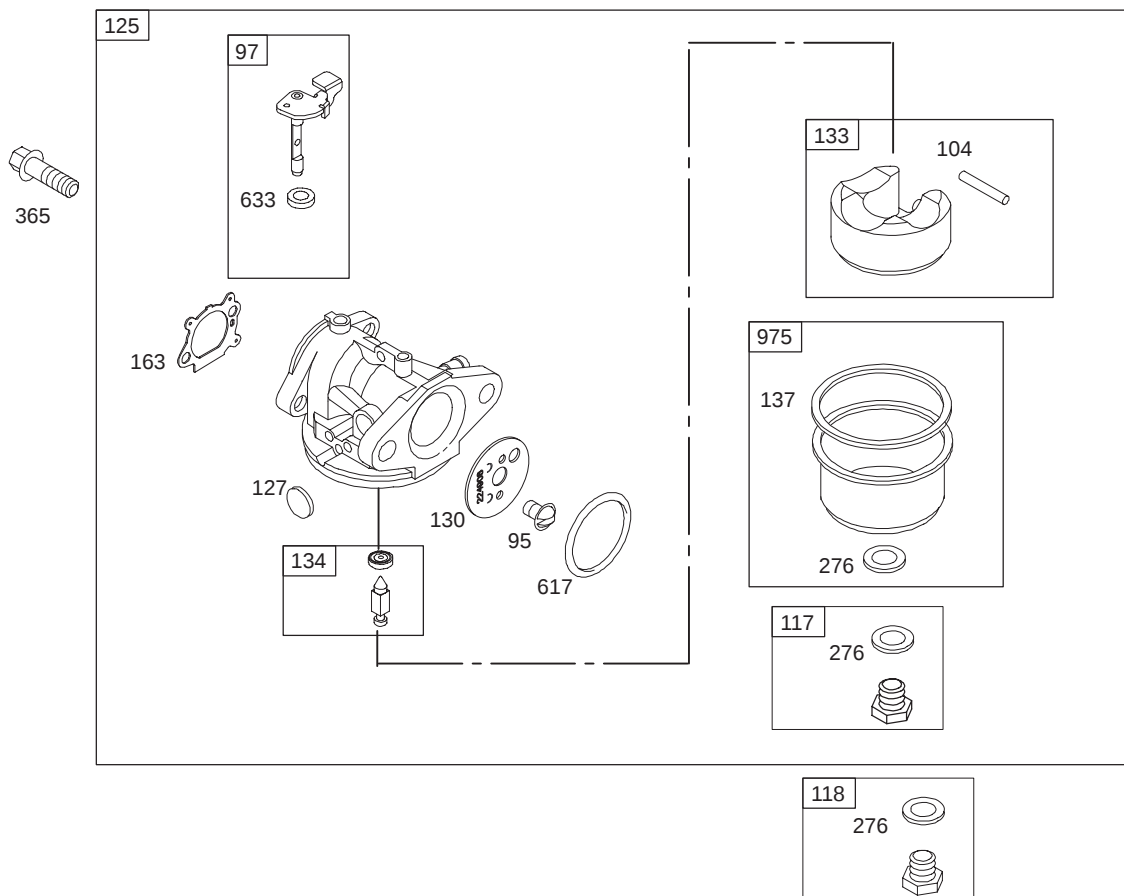

Assemblies include all parts shown in frames.

Carburetor Assembly Briggs and Stratton Model 123K02-0114-E1


Ref. No.	Part No.	Qty.	Description
95	691636	1	Screw (Throttle Valve)
97	696565	1	Shaft–Throttle
●104	691242	1	Pin–Float Hinge
117	498978	1	Jet–Main (Standard)
118	497466	1	Jet–Main (High Altitude)
125	498170	1	Carburetor
●127	694468	1	Plug–Welch
130	696564	1	Valve–Throttle
133	398187	1	Float–Carburetor
●134	398188	1	Kit–Needle/Seat
●◆137	693981	1	Gasket–Float Bowl
★●◆163	272653	1	Gasket–Air Cleaner
●◆276	271716	1	Washer–Sealing
365	692524	1	Screw (Carburetor)
●◆617	270344	1	Seal–O Ring (Intake Manifold)
●◆633	691321	1	Seal–Choke/Throttle Shaft
975	493640	1	Bowl–Float

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Briggs and Stratton

- Included in Carburetor Overhaul Kit—Ref. 121.
- ◆ Included in Carburetor Gasket Set—Ref. 977.

- ★ Included in Engine Gasket Set—Ref. 358.






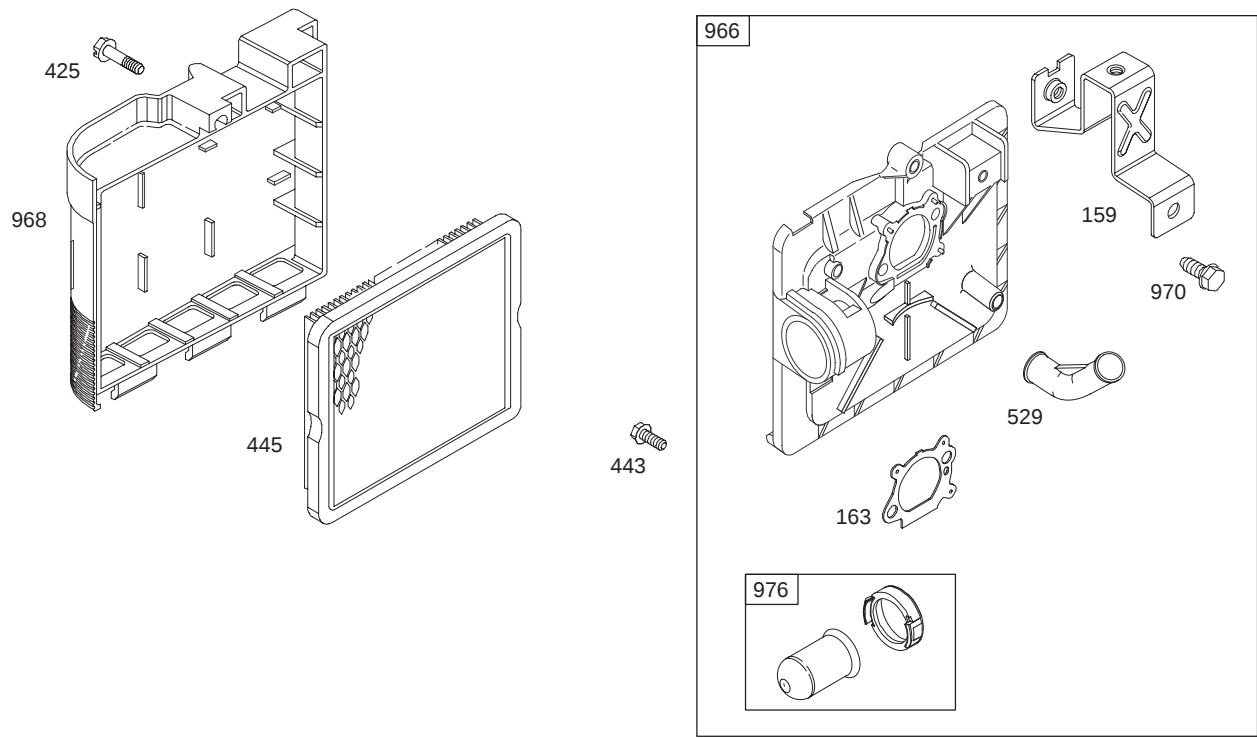


Assemblies include all parts shown in frames.

Air Cleaner Assembly
Briggs and Stratton Model 123K02-0114-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
159	691753	1	Bracket-Air Cleaner Primer				
★◆163	272653	1	Gasket-Air Cleaner				
425	690670	1	Screw (Air Cleaner Cover)				
443	692523	1	Screw (Air Cleaner Primer Base)				
445	491588	1	Filter-Air Cleaner Cartridge				
529	691923	1	Grommet				
966	496116	1	Base-Air Cleaner Primer				
968	692298	1	Cover-Air Cleaner				
970	691669	1	Screw (Air Cleaner Primer Bracket)				
976	694395	1	Primer-Carburetor				

 ★ Included in Engine Gasket Set-Ref. 358. ◆ Included in Carburetor Overhaul Kit-Ref. 121.
◆ Included in Carburetor Gasket Set-Ref. 977. **Obtain Parts from Briggs and Stratton**

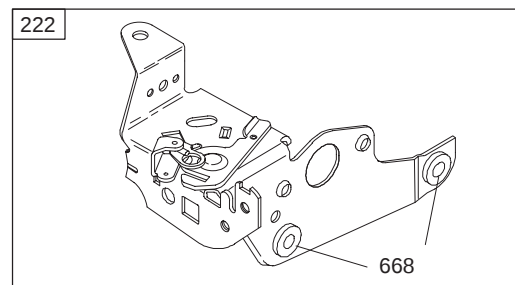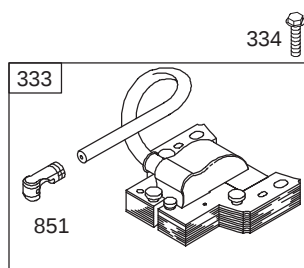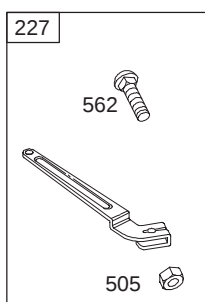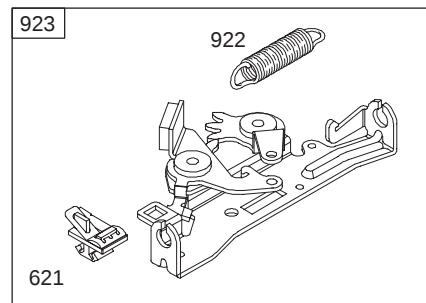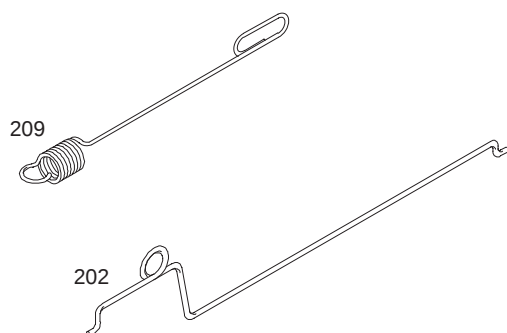


Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton Model 123K02-0114-E1

Ref. No.	Part No.	Qty.	Description
188	693399	1	Screw (Control Bracket)
202	691829	1	Link—Mechanical Governor
209	691292	1	Spring—Governor
222	692467	1	Bracket—Control
227	690783	1	Lever—Governor Control
333	802574	1	Armature—Magneto
334	691061	1	Screw (Magneto Armature)
356	692390	1	Wire—Stop
505	231082	1	Nut (Governor Control Lever)
562	92613	1	Bolt (Governor Control Lever)
621	692310	1	Switch—Stop
★668	493823	1	Spacer
745	691648	1	Screw (Brake)
851	493880	1	Terminal—Spark Plug
922	691831	1	Spring—Brake
923	691994	1	Brake

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Briggs and Stratton

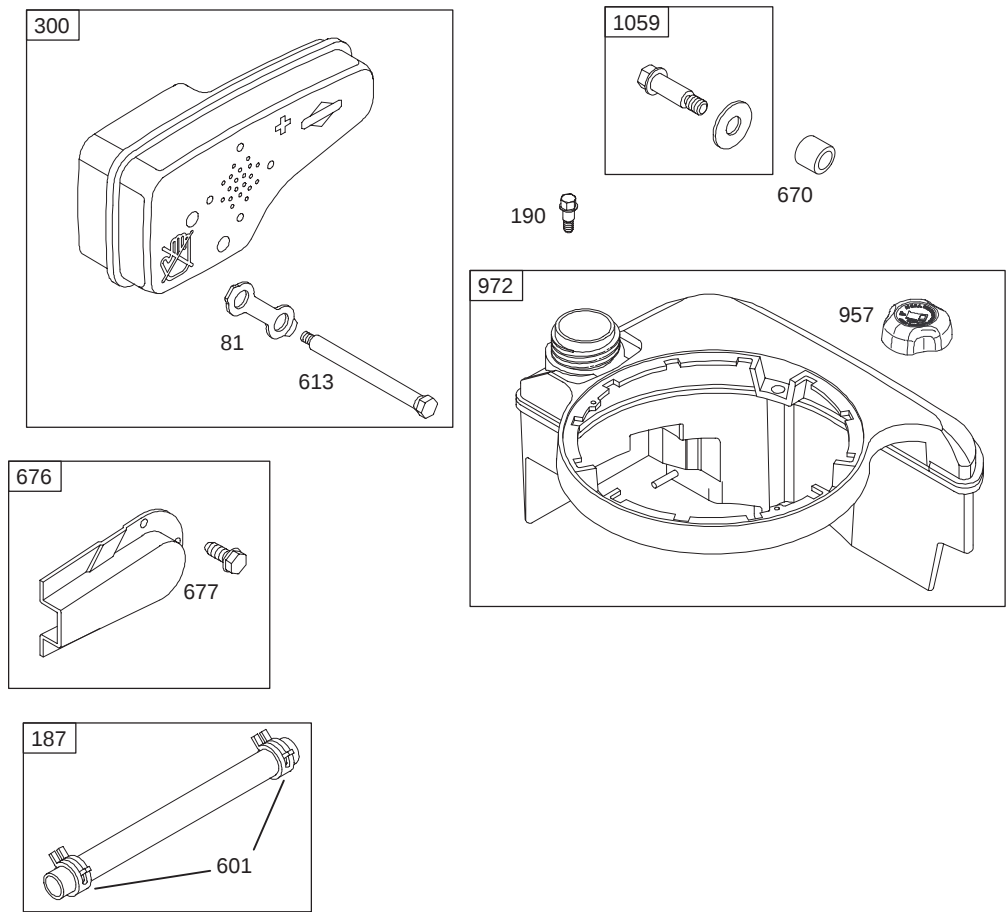


Assemblies include all parts shown in frames.

Muffler and Fuel Tank Assembly
Briggs and Stratton Model 123K02-0114-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
81	691740	1	Lock-Muffler Screw				
187	691050	1	Line-Fuel (Cut to Required Length)				
190	690940	1	Screw (Fuel Tank)				
300	692038	1	Muffler				
601	95162	1	Clamp-Hose				
613	691340	1	Screw (Muffler)				
670	692294	1	Spacer-Fuel Tank				
676	493871	1	Deflector-Muffler				
677	690661	1	Screw (Muffler Deflector)				
957	692046	1	Cap-Fuel Tank				
972	499618	1	Tank-Fuel				
1059	692311	1	Kit-Screw/Washer				

Obtain Parts from Briggs and Stratton

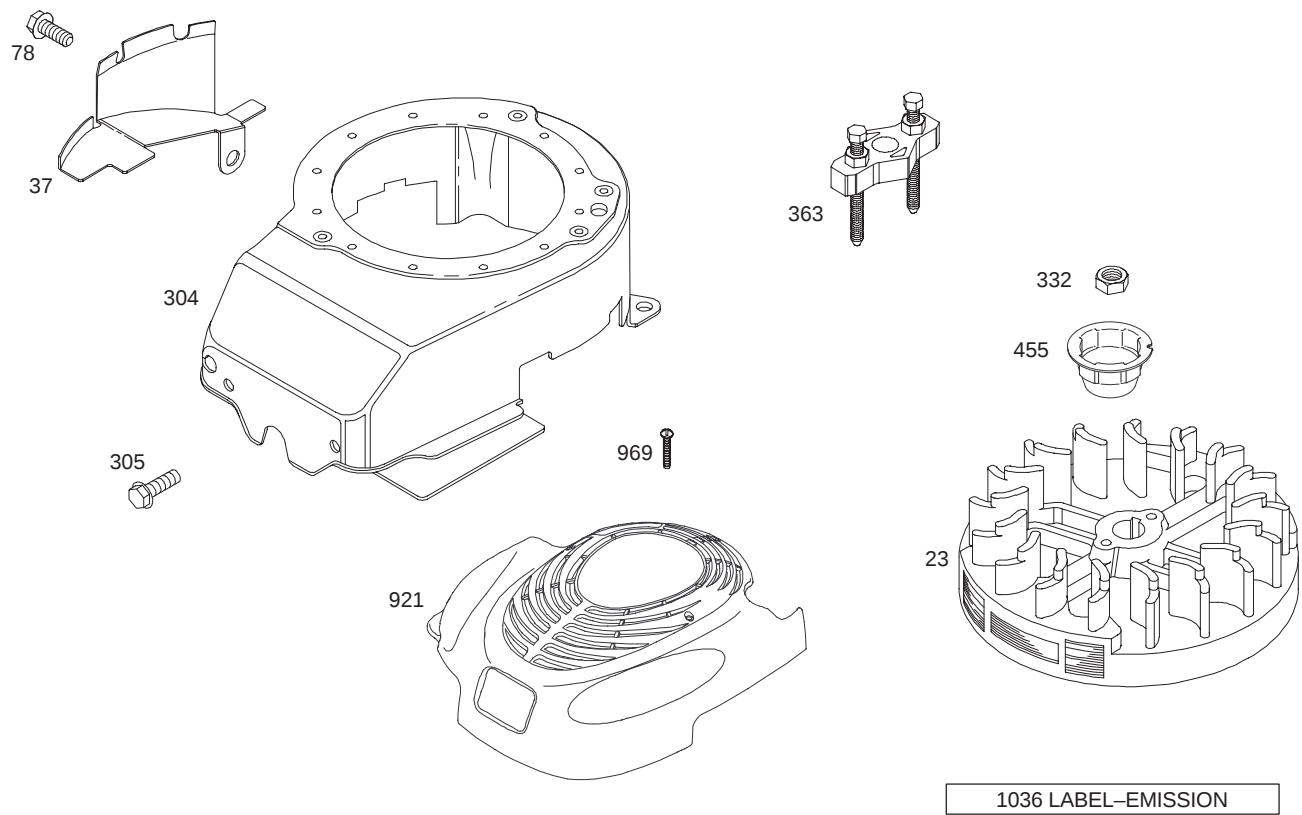


Assemblies include all parts shown in frames.

Blower Housing Assembly

Briggs and Stratton Model 123K02-0114-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
23	692315	1	Flywheel				
37	694086	1	Guard-Flywheel				
78	691108	1	Screw				
			(Flywheel Guard)				
304	493293	1	Housing-Blower				
305	691108	1	Screw				
			(Blower Housing)				
332	690662	1	Nut				
			(Flywheel)				
363	19069	1	Puller-Flywheel				
455	695161	1	Cup-Flywheel				
921	697343	1	Cover-Blower Housing				
969	690700	1	Screw				
			(Blower Housing				
			Cover)				
1036	697456	1	Label-Emission				

Obtain Parts from Briggs and Stratton


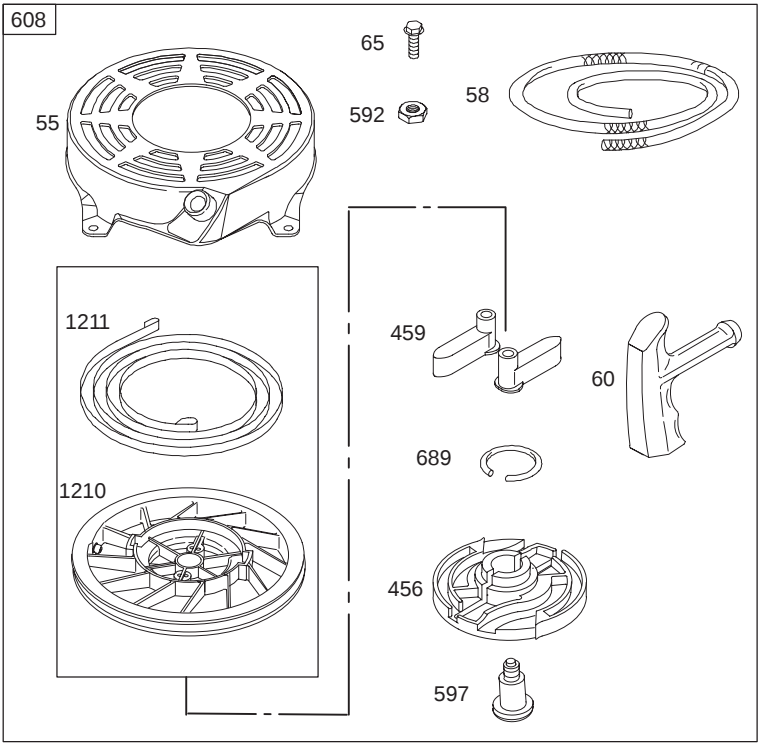


Starter Assembly
Briggs and Stratton Model 123K02-0114-E1

Ref. No.	Part No.	Qty.	Description
55	691421	1	Housing-Rewind Starter
58	697316	1	Rope-Starter (Cut to Required Length)
60	281434	1	Grip-Starter Rope
65	690837	1	Screw (Rewind Starter)
456	692299	1	Plate-Pawl Friction
459	281505	1	Ratchet-Pawl
592	690800	1	Nut (Rewind Starter)
597	691696	1	Screw (Pawl Friction Plate)
608	497680	1	Starter-Rewind
689	691855	1	Spring-Friction
1210	498144	1	Pulley/Spring Assembly (Pulley)
1211	498144	1	Pulley/Spring Assembly (Spring)

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Briggs and Stratton

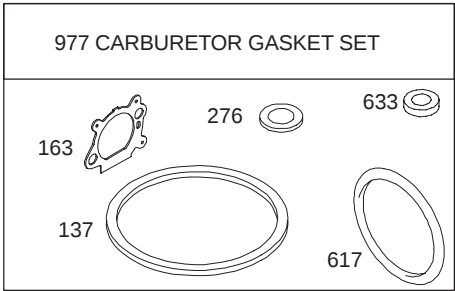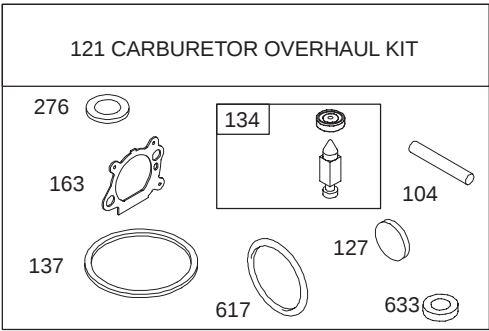

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton Model 123K02-0114-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
●104	691242	1	Pin-Float Hinge				
121	498260	1	Kit-Carburetor Overhaul				
●127	694468	1	Plug-Welch				
●134	398188	1	Kit-Needle/Seat				
◆137	693981	1	Gasket-Float Bowl				
★◆163	272653	1	Gasket-Air Cleaner				
◆276	271716	1	Washer-Sealing				
★◆617	270344	1	Seal-O Ring (Intake Manifold)				
◆633	691321	1	Seal-Choke/Throttle Shaft				
977	498261	1	Gasket Set-Carburetor				

Obtain Parts from Briggs and Stratton

- Included in Carburetor Overhaul Kit-Ref. 121.
- ★ Included in Engine Gasket Set-Ref. 358.
- ◆ Included in Carburetor Gasket Set-Ref. 977.

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

