



53cm Rear-Bagging Lawnmower

Model No. 26634-230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck Assembly	3	Cylinder Head Assembly	12
Engine and Belt Guide Assembly	4	Crankshaft Assembly	13
Blade and Brake Assembly	5	Carburetor Assembly	14
Handle Assembly	6	Governor Assembly	15
Bag Assembly	7	Air Cleaner Assembly	16
Rear Drive Assembly	8	Fuel Tank Assembly	17
Gear Case Assembly No. 62-6673	9	Blower Housing and Flywheel Assembly	18
Control Assembly	10	Rewind Starter Assembly	19
Cylinder Assembly	11	Gasket Assembly	20


Accessories

Description	Model / Part No.	Description	Model / Part No.
Dethatcher Kit	59131	Leaf Shredder Kit	59180

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

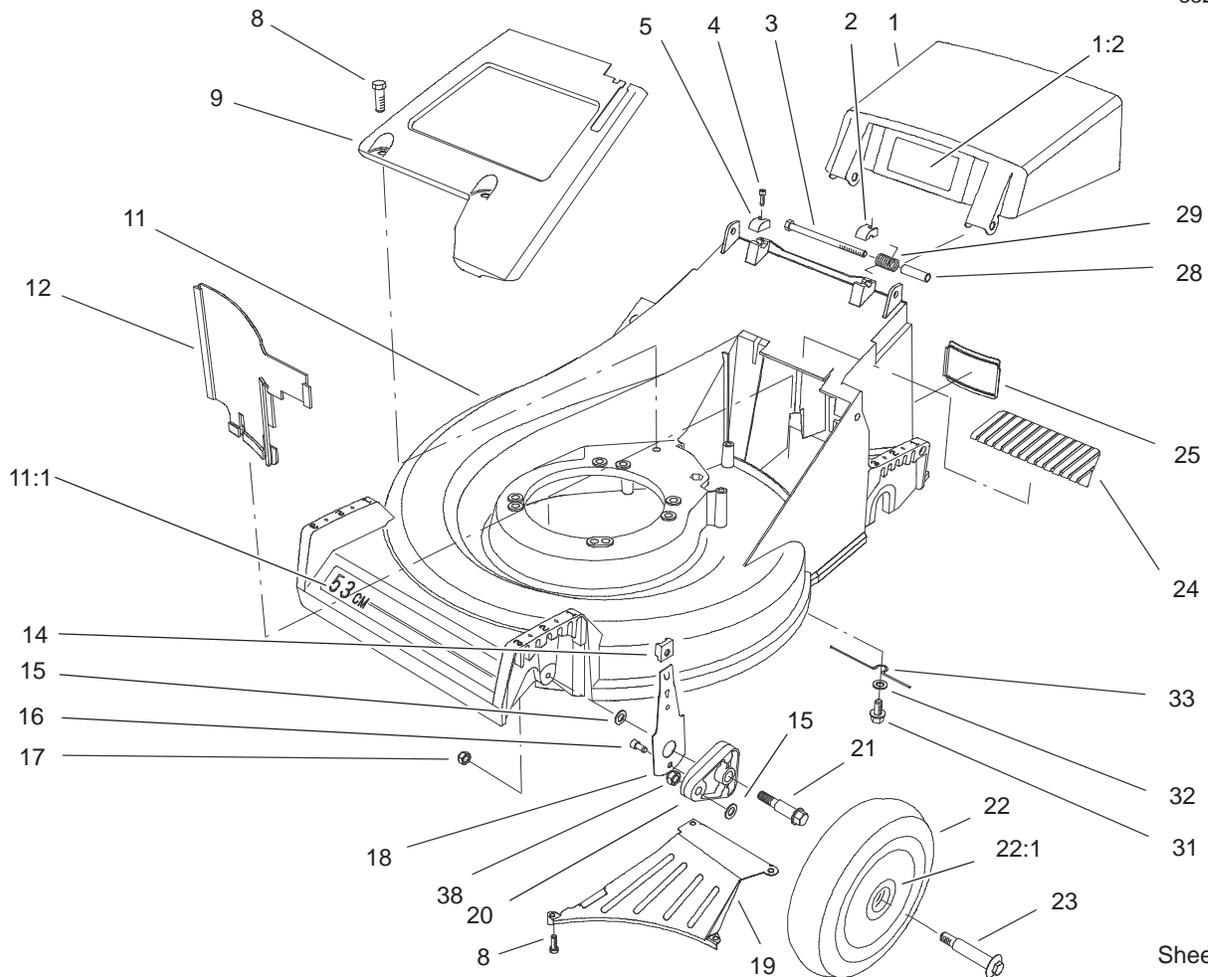

Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	17-1569	1	Door-Bag	31	32144-15	1	Screw
1:2	93-4105	1	Decal-Danger	32	3256-24	1	Washer-Flat
2	71-7900	1	Cap-Hinge Bolt, LH	33	66-0620	1	Retainer-Belt
3	322-29	2	Screw-HH	38	603773	2	Nut
4	65-5210	2	Screw-HSH				
5	71-7910	1	Cap-Hinge Bolt, RH				
6	32144-70	6	Screw-HH				
8	32144-70	6	Screw-HH				
9	65-5660-03	1	Panel-Screen				
11	16-1769	1	Deck W/Decals				
11:1	71-9870	1	Decal				
12	66-0020	1	Panel-Vertical				
14	25-7740	2	Knob-Arm				
15	40-1940	4	Washer				
16	32144-85	2	Screw-HWH				
17	3296-6	2	Nut-Lock, NI				
18	66-0540	2	Front Spring Arm ASM				
19	71-9640-03	1	Ramp-Discharge				
20	66-0580	2	Arm-Pivot, Front				
21	66-0560	2	Bolt-Shoulder				
22	92-9592	2	Wheel ASM				
22:1	27-6250	2	Bushing				
23	92-1057	2	Bolt-Shoulder				
24	71-9920	1	Cover-Top				
25	71-9650	1	Cover-Access				
28	71-8580	2	Spacer-Door				
29	71-9840	2	Spring-Door				

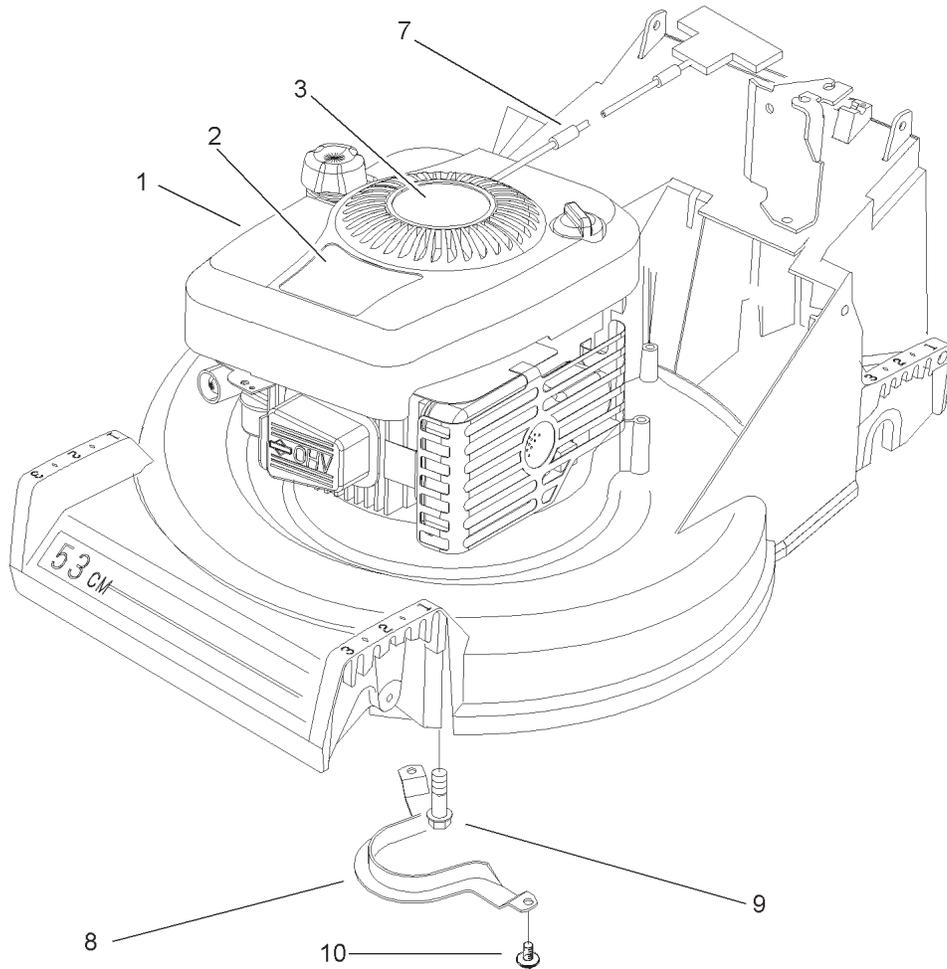


Sheet No.:3

Engine and Belt Guide Assembly

Ref. No.	Part No.	Qty.	Description
☆1		1	Engine-B & S Model 122602-0120-E1
2	99-6015	1	Decal-Recoil
3	105-8649	1	Decal-Recoil
7	2210-316	1	Stop-Rope
8	66-0570-03	1	Bracket-Guide, Belt
9	32144-102	3	Screw-HWH
10	32144-70	2	Screw-HH

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

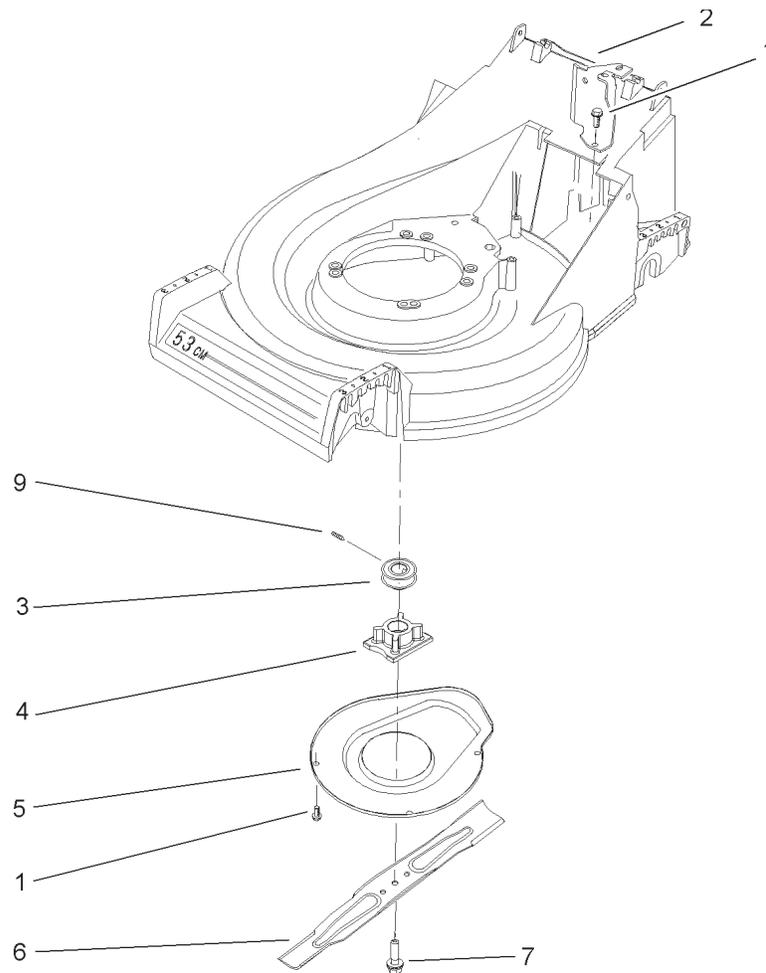


Sheet No.:4

Blade and Brake Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32144-70	5	Screw-HH				
2	66-0030-03	1	Bracket-Cable, Support				
3	95-1878	1	Pulley				
4	104-1008	1	Retainer-Blade				
5	65-5200-03	1	Shield				
6	42-1000-03	1	Blade				
7	105-8579	1	Bolt-Blade				
9	105-8875	1	Screw-Set, Cone Point				

3328-717

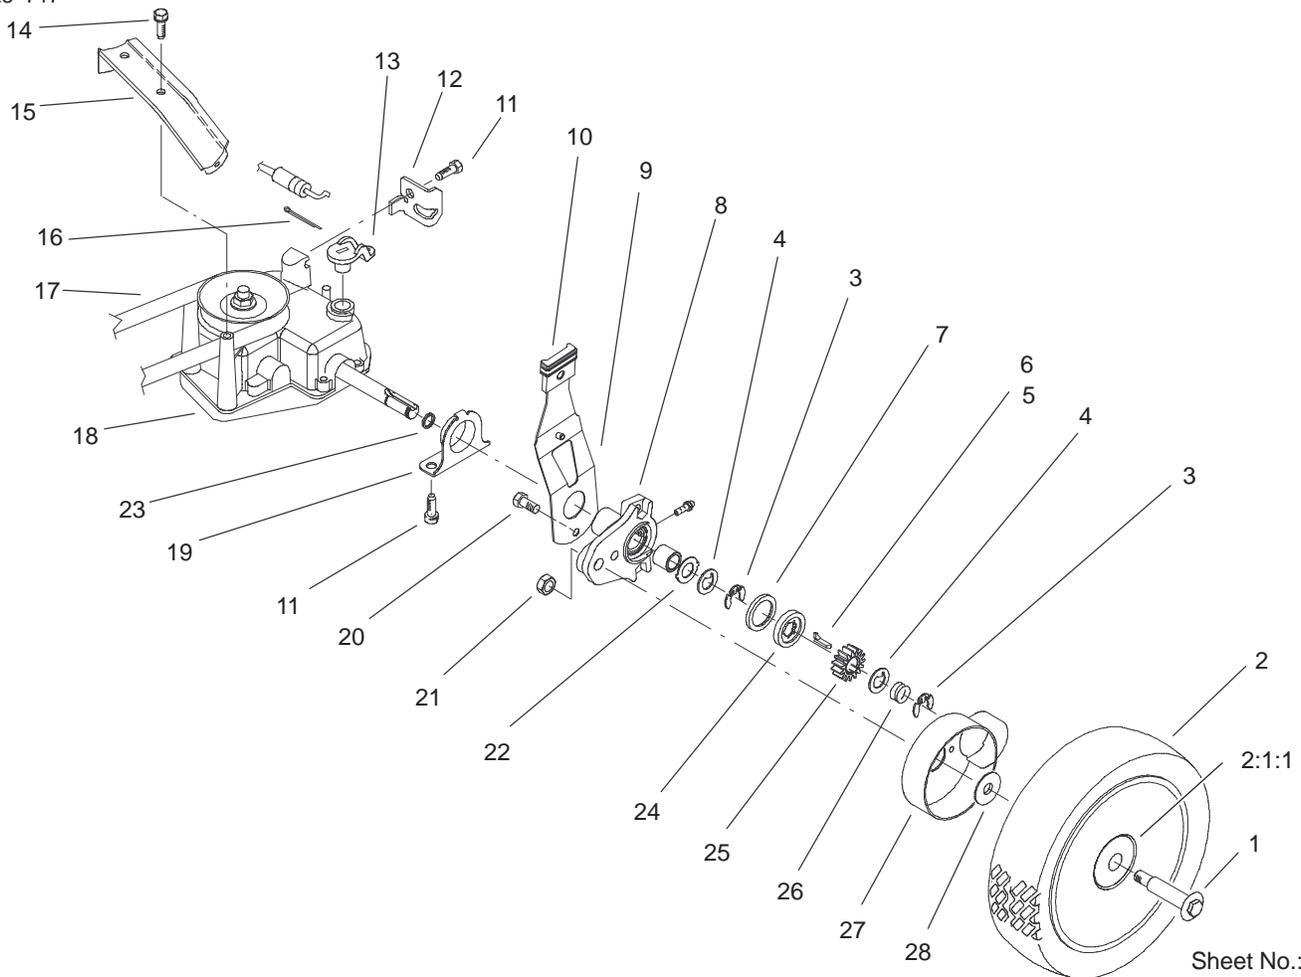


Rear Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	99-8136	2	Wheel And Gear ASM
☆2:1		1	Wheel ASM
2:1:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	65-5042	2	Pivot Arm ASM
9	65-5440	2	Spring Arm ASM
10	25-7740	2	Knob-Arm
11	32144-70	5	Screw-HH
12	76-2930	1	Retainer-Cable
13	76-0920	1	Lever-Shift
14	49-2040	2	Screw-Tapping
15	65-5190-03	1	Bracket-Guide, Belt
16	3272-5	1	Pin-Cotter
17	36-8070	1	V-Belt
18	62-6673	1	Gearcase ASM
19	66-0360	2	Cap-End
20	32144-85	2	Screw-HWH
21	603773	2	Nut
22	65-4730	2	Washer-Arm, Pivot
23	237-153	2	O-Ring

Ref. No.	Part No.	Qty.	Description
24	65-4760	2	Washer-Clutch
25	65-4750	2	Gear-Pinion
26	65-4720	2	Spring-Compression
27	74-1660	2	Cover-Wheel
28	74-1671	2	Spacer-Cover, Wheel


☆ Not serviced separately

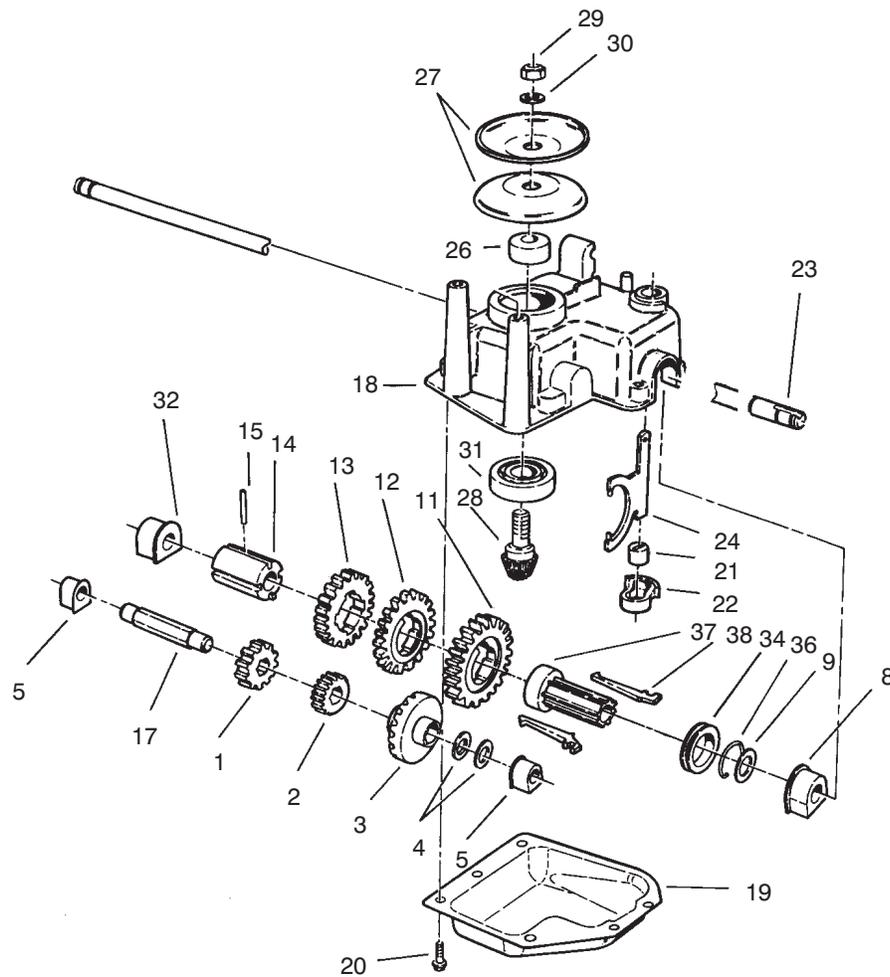

Sheet No.:A1

Gear Case Assembly No. 62-6673

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3800	1	Pinion-25 T	31	100-1048	1	Bearing-Ball
2	55-3780	1	Pinion-20 T	32	60-8850	1	Bushing
3	104-7668	1	Gear-15t Spur, 37t Bevel	34	76-0770	1	Collar-Shift
4	36-4791	2	Washer-Thrust	36	65-5250	1	Clip-Spring
5	60-8750	2	Bushing	37	76-0780	1	Sleeve-Key, Shift
8	60-8770	1	Bushing-Output	38	76-0760	2	Key-Shift
9	36-4780	1	Washer				
11	55-3770	1	Gear-49 T				
12	55-3790	1	Gear-44 T				
13	55-3810	1	Gear-39 T				
14	60-8790	1	Sleeve-Gear				
15	32121-120	1	Pin-Spring				
17	60-8800	1	Shaft-Intermediate				
18	60-8710	1	Case-Gear, Upper				
19	60-8730-03	1	Cover-Case, Gear				
20	49-2040	6	Screw-Tapping				
21	29-9570	1	Bushing-Yoke				
22	60-8810	1	Retainer-Fork, Shift				
23	65-4770	1	Shaft-Output				
24	60-8870	1	Yoke-Shift				
26	62-6660	1	Spacer				
27	100-1176	2	Pulley-Half				
28	104-7667	1	Gear-Pinion, Bevel				
29	3296-5	1	Nut-Lock, NI				
30	3256-24	1	Washer-Flat				

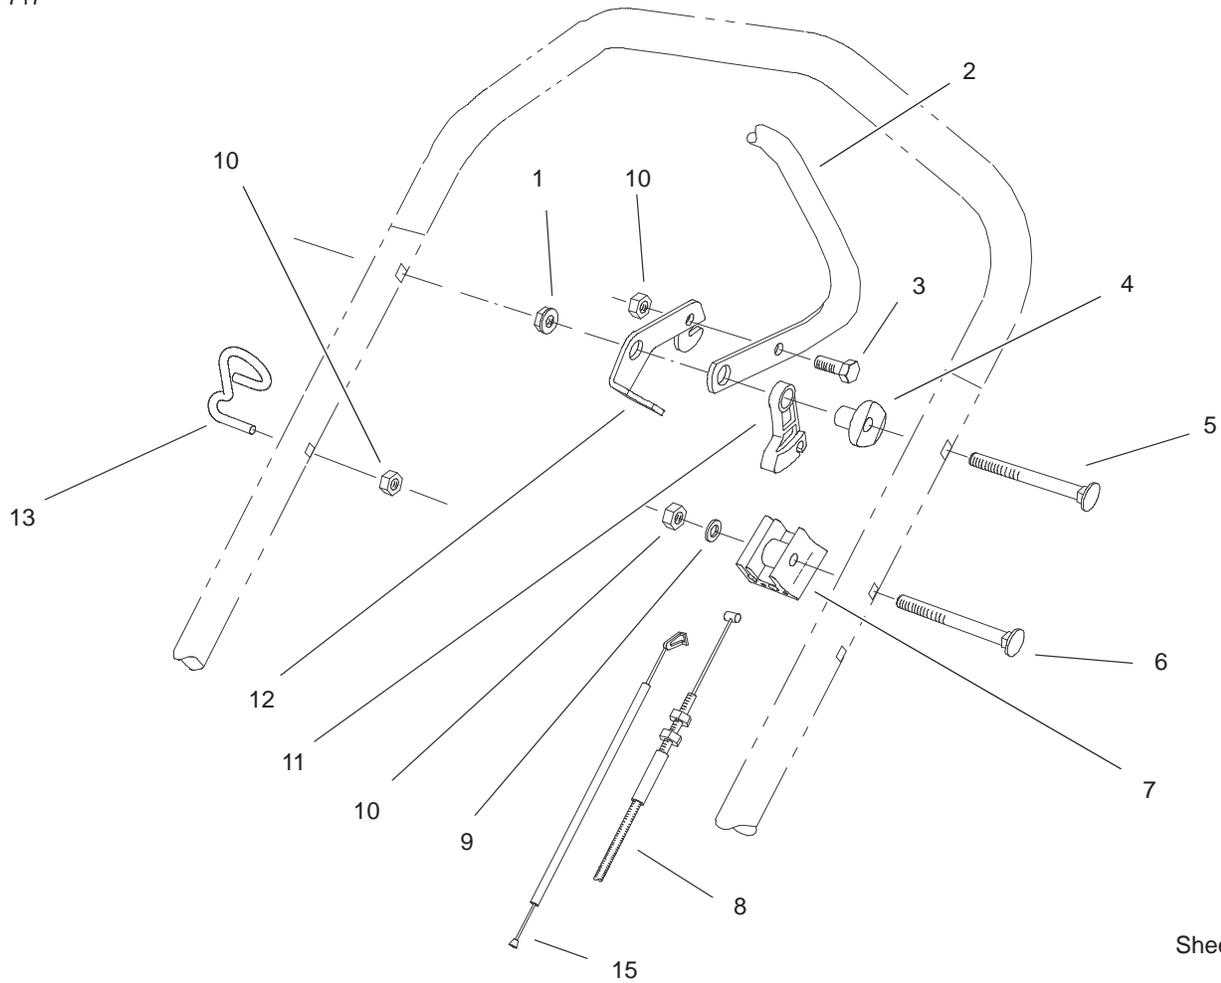


Sheet No.:8

Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-58	2	Nut-Lock NI
2	52-7430-03	1	Bar-Control
3	321-3	1	Screw-HH
4	66-0330	2	Spacer-Support
5	17-9426	2	Screw-Handle
6	46-6432	1	Screw-Handle
7	71-0960	1	Support-Cable
8	93-6634	1	Cable-Traction
9	3256-22	1	Washer-Flat
10	3296-42	3	Nut-Lock, NI
11	46-5520	1	Lever-Traction
12	66-5350	1	Lever-Control
13	95-4478	1	Guide-Rope
15	93-6628	1	Cable-Brake

Ref. No.	Part No.	Qty.	Description

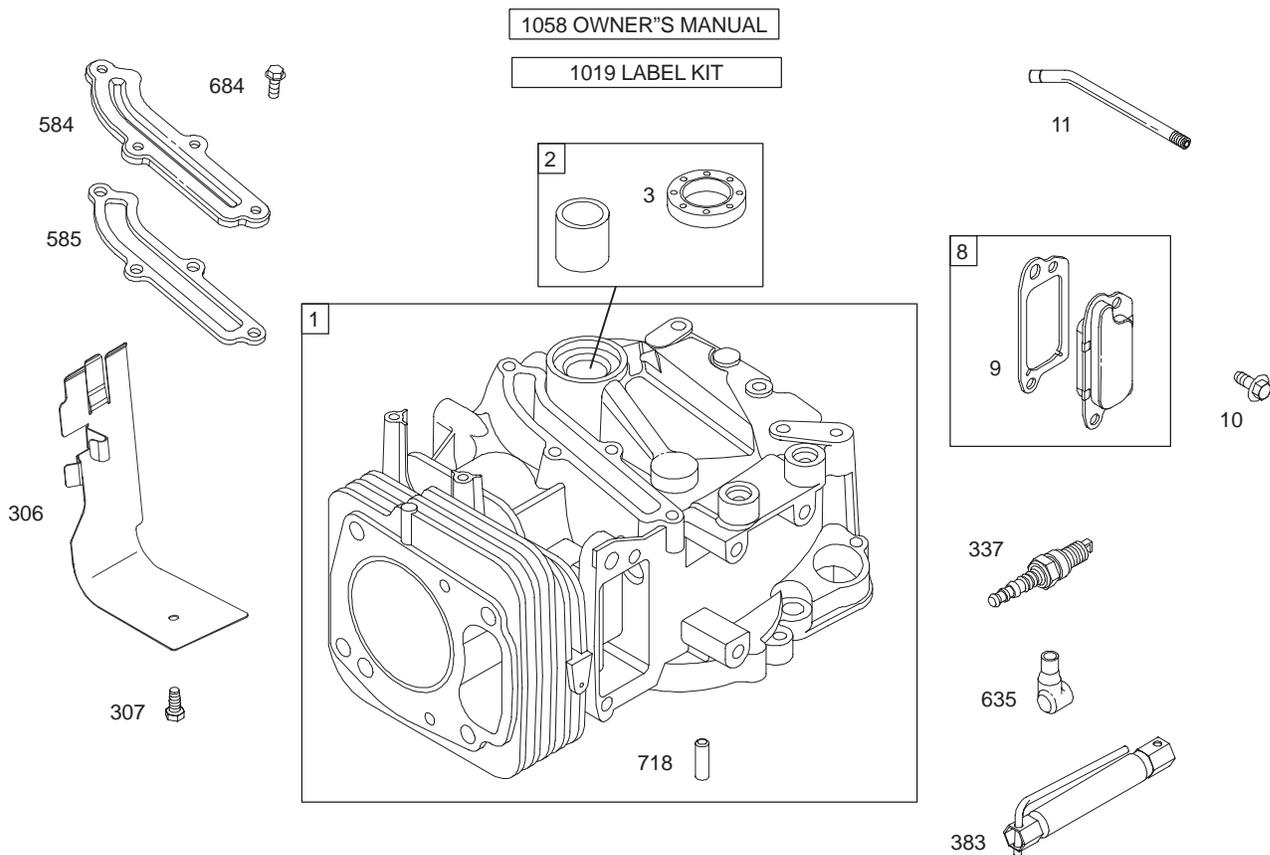


Assemblies include all parts shown in frames.

Cylinder Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	499678	1	Cylinder Assembly	1019	695811	1	Kit-Label
2	399269	1	Kit-Bushing/Seal (Magneto Side)	1058	274979	1	Owner's Manual
★3	299819	1	Seal-Oil (Magneto Side)				
8	495786	1	Breather Assembly				
△★9	272481	1	Gasket-Breather				
10	691125	1	Screw (Breather Assembly)				
11	691260	1	Tube-Breather				
306	691232	1	Shield-Cylinder				
307	690345	1	Screw (Cylinder Shield)				
337	692051	1	Sparkplug				
383	19374	1	Wrench-Sparkplug				
584	692342	1	Cover-Breather Passage				
★585	691879	1	Gasket-Breather Passage				
635	66538	1	Boot-Sparkplug				
684	690345	1	Screw (Breather Passage Gasket)				
718	690959	1	Pin-Locating				

△ Included in Valve Gasket Set-Ref. 1095. **Obtain Parts from Briggs and Stratton**

★ Included in Engine Gasket Set-Ref. 358.

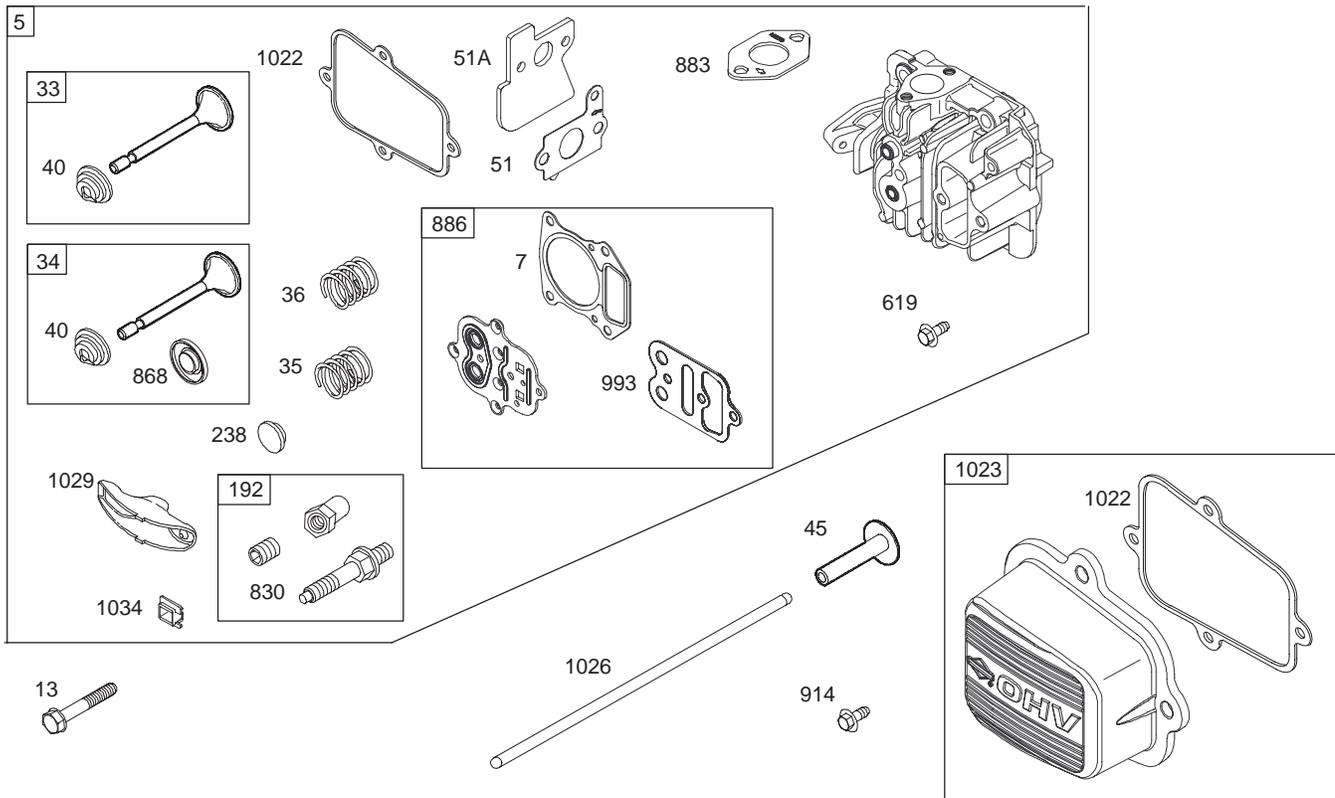

Assemblies include all parts shown in frames.

Cylinder Head Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
5	695276	1	Head-Cylinder
Δ★7	695166	1	Gasket-Cylinder Head
13	691137	1	Screw
33	499642	1	Valve-Exhaust
34	499641	1	Valve-Intake
35	691304	1	Spring-Valve (Intake)
36	691304	1	Spring-Valve (Exhaust)
40	692194	1	Retainer-Valve
45	690977	1	Tappet-Valve
Δ★◆51	692668	1	Gasket-Intake
Δ★◆51A	692799	1	Gasket-Intake
192	694543	1	Adjuster-Rocker Arm
238	691300	1	Cap-Valve
619	691108	1	Screw (Cylinder Head Plate)
830	694544	1	Stud-Rocker Arm
Δ★868	692044	1	Seal-Valve
Δ★883	691893	1	Gasket-Exhaust
886	696268	1	Gasket Kit-Cylinder Head/Plate

Ref. No.	Part No.	Qty.	Description
914	691127	1	Screw (Rocker Cover)
Δ★993	694088	1	Gasket-Cylinder Head Plate
Δ★1022	691890	1	Gasket-Rocker Cover
1023	692694	1	Cover-Rocker
1026	692045	1	Rod-Push
1029	691230	1	Arm-Rocker
1034	691343	1	Guide-Push Rod


Δ Included in Valve Gasket Set-Ref. 1095.

● Included in Carburetor Overhaul Kit-Ref. 121.

★ Included in Engine Gasket Set-Ref. 358.

◆ Included in Carburetor Gasket Set-Ref. 977.

Obtain Parts from Briggs and Stratton

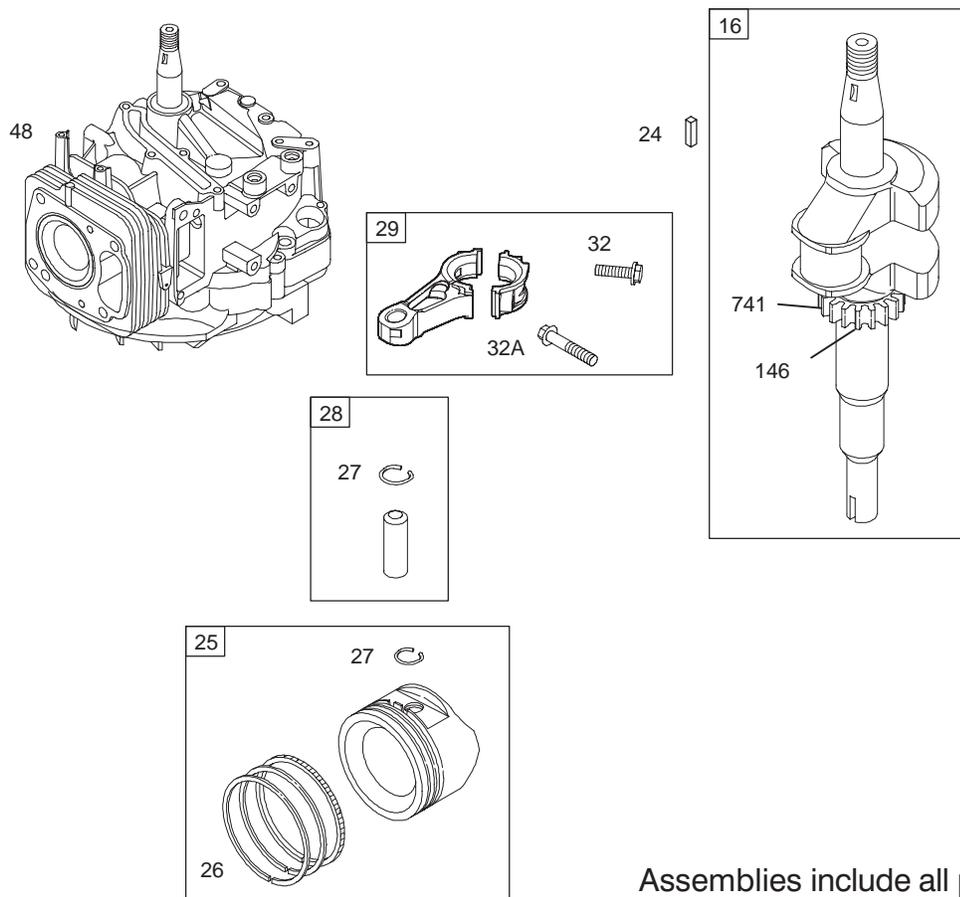


Assemblies include all parts shown in frames.

Crankshaft Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
16	695950	1	Crankshaft
24	222698	1	Key-Flywheel
25	499627	1	Piston Assembly (Standard)
	692788	1	Piston Assembly (.010" Oversize)
	692789	1	Piston Assembly (.020" Oversize)
	692790	1	Piston Assembly (.030" Oversize)
26	499631	1	Ring Set (Standard)
	692785	1	Ring Set (.010" Oversize)
	692786	1	Ring Set (.020" Oversize)
	692787	1	Ring Set (.030" Oversize)
27	691866	1	Lock-Piston Pin
28	499423	1	Pin-Piston
29	499424	1	Rod-Connecting
32	691664	1	Screw (Connecting Rod)

Ref. No.	Part No.	Qty.	Description
32A	695759	1	Screw (Connecting Rod)
48	694898	1	Short Block
146	690979	1	Key-Timing
741	691830	1	Gear-Timing

Obtain Parts from Briggs and Stratton

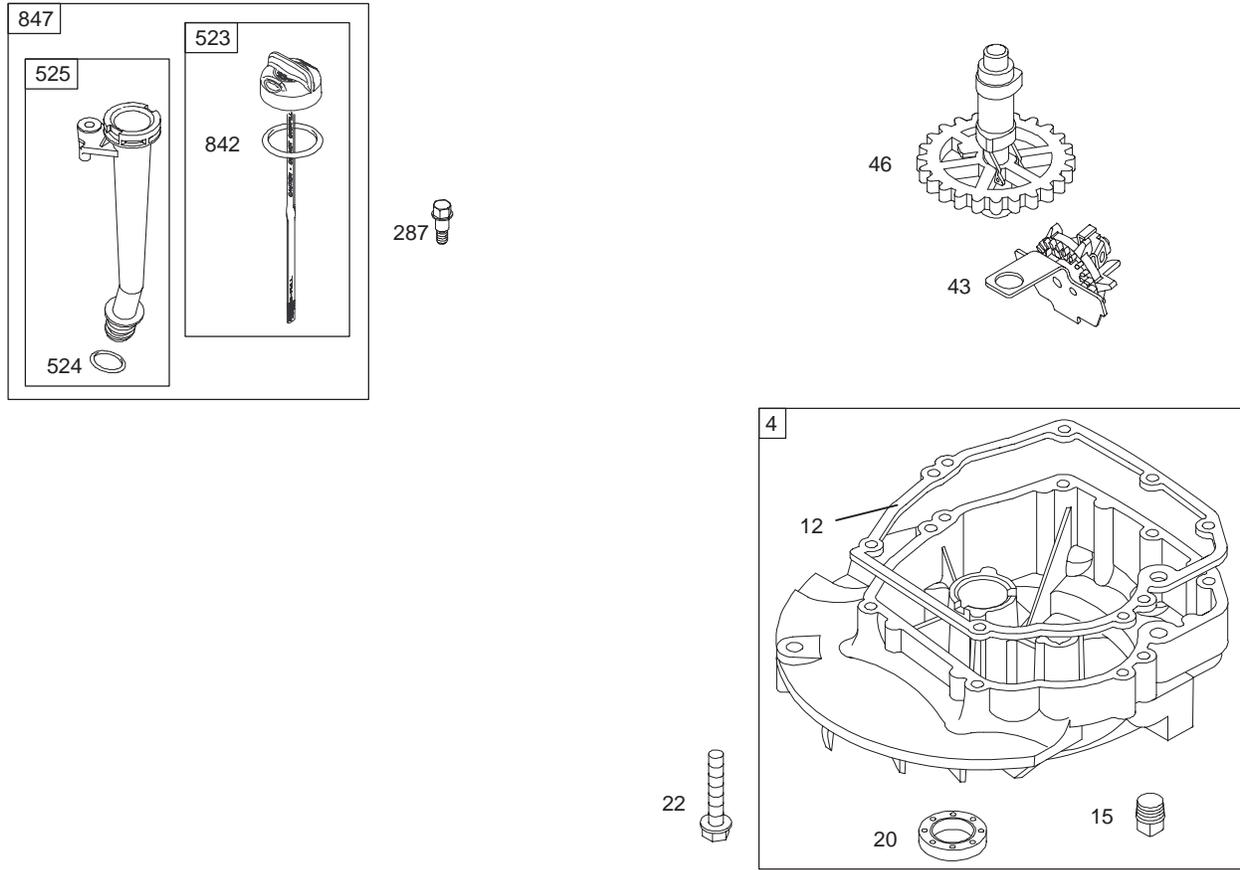

Assemblies include all parts shown in frames.


Crankcase Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
4	499619	1	Sump-Engine
★12	692232	1	Gasket-Crankcase
15	691680	1	Plug-Oil Drain
★20	399781	1	Seal-Oil (PTO Side)
22	691092	1	Screw (Engine Sump)
43	691997	1	Slinger-Governor/Oil
46	694039	1	Camshaft
287	690940	1	Screw (Dipstick Tube)
523	499621	1	Tube-Dipstick
★524	692296	1	Seal-Dipstick Tube
525	495265	1	Tube-Dipstick
★842	691031	1	Seal-O Ring (Dipstick Tube)
847	692047	1	Assembly-Dipstick/ Tube

Ref. No.	Part No.	Qty.	Description

★ Included in Engine Gasket Set-Ref. 358.

Obtain Parts from Briggs and Stratton

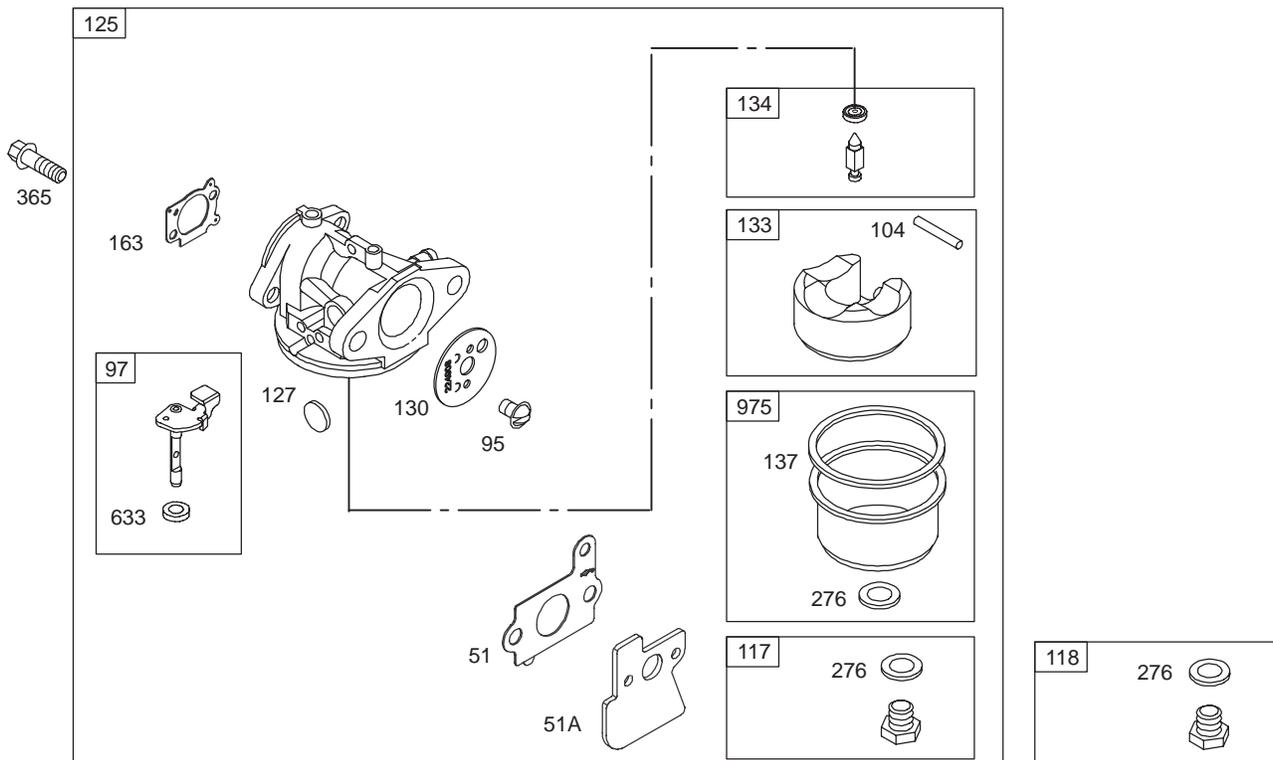


Carburetor Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
△★◆51	692668	1	Gasket-Intake
△★◆51A	692799	1	Gasket-Intake
95	691636	1	Screw (Throttle Valve)
97	499682	1	Shaft-Throttle
●104	691242	1	Pin-Float Hinge
117	498978	1	Jet-Main (Standard)
118	498975	1	Jet-Main (High Altitude)
125	694202	1	Carburetor
●127	694468	1	Plug-Welch
130	691203	1	Valve-Throttle
133	398187	1	Float-Carburetor
●134	398188	1	Kit-Needle/Seat
●◆137	693981	1	Gasket-Float Bowl
△★◆163	691894	1	Gasket-Air Cleaner
●◆276	271716	1	Washer-Sealing
365	691136	1	Screw (Carburetor)
●◆633	691321	1	Seal-Choke/Throttle Shaft
975	493640	1	Bowl-Float

Ref. No.	Part No.	Qty.	Description

△ Included in Valve Gasket Set-Ref. 1095.
 ★ Included in Engine Gasket Set-Ref. 358.
Obtain Parts from Briggs and Stratton

● Included in Carburetor Overhaul Kit-Ref. 121.
 ◆ Included in Carburetor Gasket Set-Ref. 977.

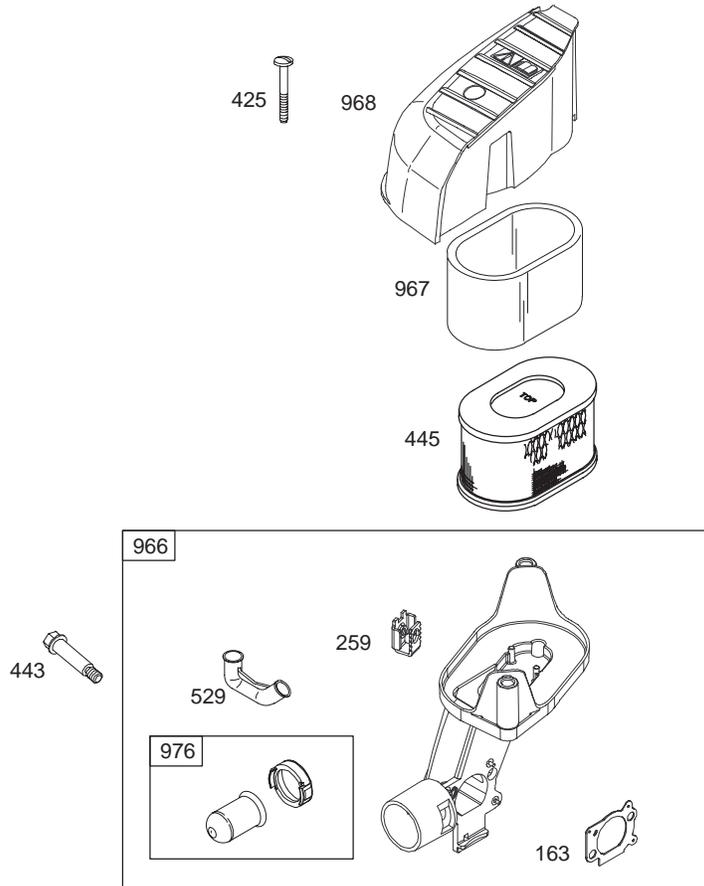

Assemblies include all parts shown in frames.

Air Cleaner Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
Δ★◆163	691894	1	Gasket-Air Cleaner
259	691189	1	Bracket-Casing Clamp
425	690244	1	Screw (Air Cleaner Cover)
443	690255	1	Screw (Air Cleaner Primer Bracket)
445	690610	1	Filter-Air Cleaner Cartridge
529	692937	1	Grommet
966	690243	1	Base-Air Cleaner Primer
967	273356	1	Filter-Pre Cleaner
968	692692	1	Cover-Air Cleaner
976	694395	1	Primer-Carburetor

Ref. No.	Part No.	Qty.	Description


Δ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

Obtain Parts from Briggs and Stratton

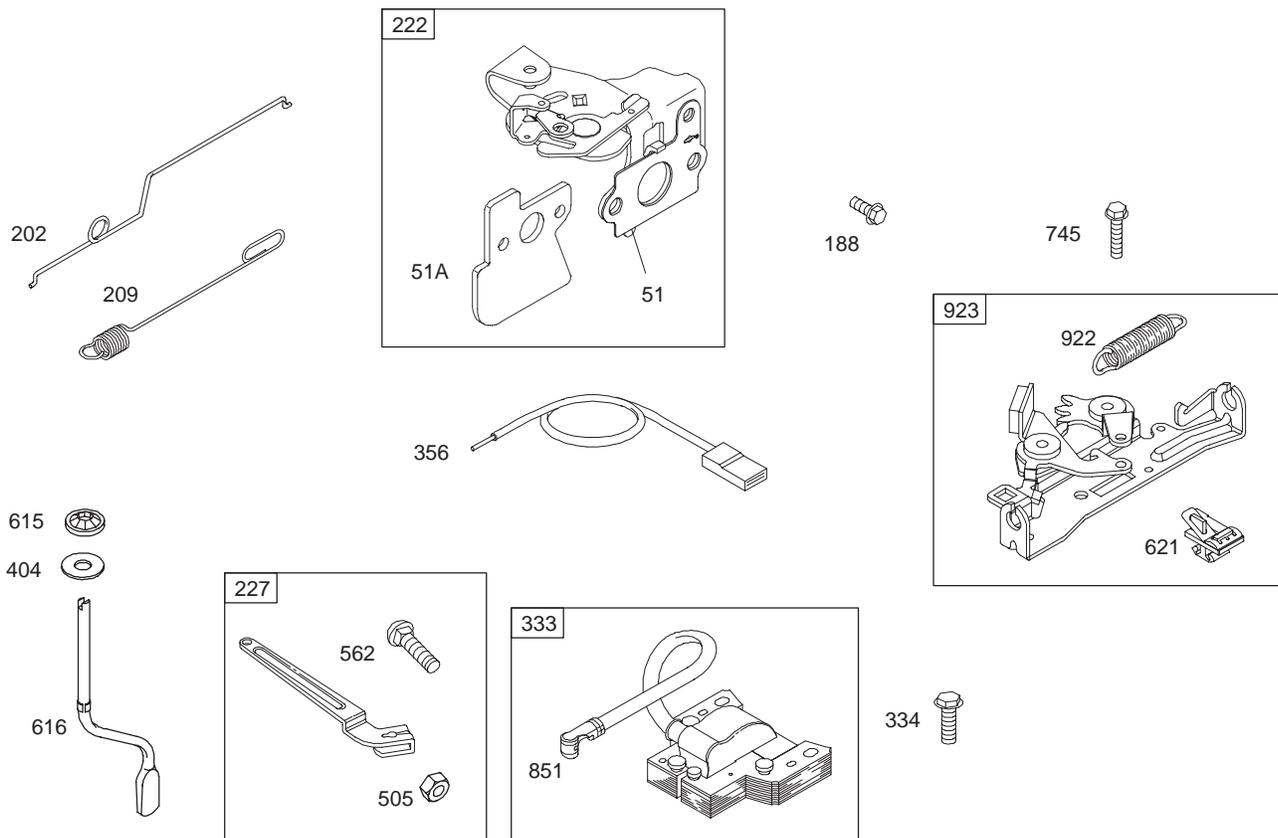

Assemblies include all parts shown in frames.

Governor Assembly Briggs and Stratton Model 122602-0120-E1






Ref. No.	Part No.	Qty.	Description
△★◆51	692668	1	Gasket-Intake
△★◆51A	692799	1	Gasket-Intake
188	693168	1	Screw (Control Bracket)
202	691303	1	Link-Mechanical Governor
209	691292	1	Spring-Governor
222	692723	1	Bracket-Control
227	690783	1	Lever-Governor Control
333	802574	1	Armature-Magneto
334	691061	1	Screw (Magneto Armature)
356	692390	1	Wire-Stop
404	690272	1	Washer (Governor Crank)
505	231082	1	Nut (Governor Control Lever)
562	92613	1	Screw (Governor Control Lever)
615	690340	1	Retainer-Governor Shaft

Ref. No.	Part No.	Qty.	Description
616	691308	1	Crank-Governor
621	692310	1	Switch-Stop
745	691648	1	Screw (Brake)
851	493880	1	Terminal-Sparkplug
922	691831	1	Spring-Brake
923	691994	1	Brake Assembly

△ Included in Valve Gasket Set-Ref. 1095.
★ Included in Engine Gasket Set-Ref. 358.

◆ Included in Carburetor Overhaul Kit-Ref. 121.
◆ Included in Carburetor Gasket Set-Ref. 977.

Obtain Parts from Briggs and Stratton

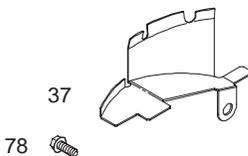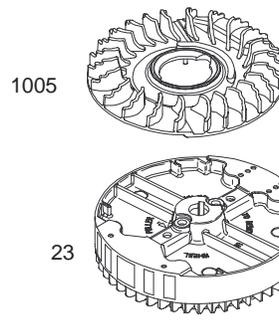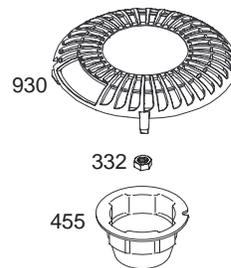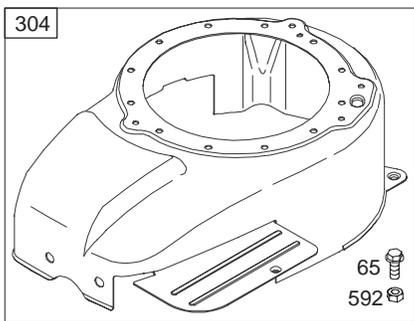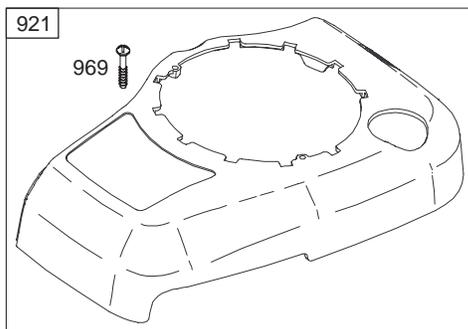

1036 Emission Label


Assemblies include all parts shown in frames.

Blower Housing Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
23	696569	1	Flywheel
37	694086	1	Guard-Flywheel
65	690837	1	Screw (Rewind Starter)
78	691108	1	Screw (Flywheel Guard)
304	499677	1	Housing-Blower
305	690960	1	Screw (Blower Housing)
332	690662	1	Nut (Flywheel)
363	19069	1	Puller-Flywheel
455	695161	1	Cup-Flywheel
592	690800	1	Nut (Rewind Starter)
921	692699	1	Cover-Blower Housing
930	692691	1	Guard-Rewind
969	691138	1	Screw (Blower Housing Cover)
1005	691346	1	Fan-Flywheel
1036	696767	1	Label-Emission

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Briggs and Stratton

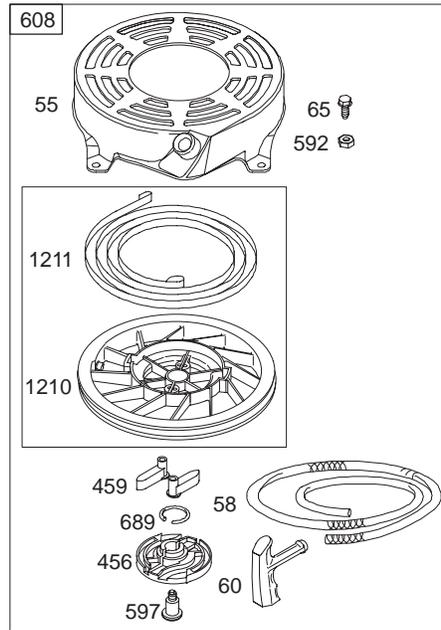



Assemblies include all parts shown in frames.

Starter Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
55	691421	1	Housing-Rewind Starter
58	280399	1	Rope-Starter (Cut to Required Length)
60	281434	1	Grip-Starter Rope
65	690837	1	Screw (Rewind Starter)
456	692299	1	Plate-Pawl Friction
459	281505	1	Pawl-Ratchet
592	690800	1	Nut (Rewind Starter)
597	691696	1	Screw (Pawl Friction Plate)
608	497680	1	Starter-Rewind
689	691855	1	Spring-Friction
1210	498144	1	Pulley/Spring Assembly (Pulley)
1211	498144	1	Pulley/Spring Assembly (Spring)

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Briggs and Stratton

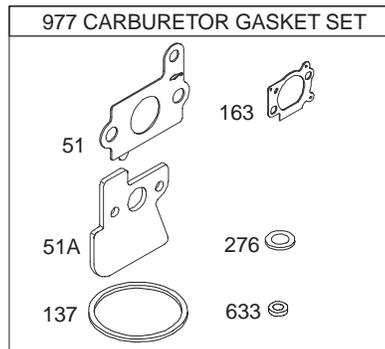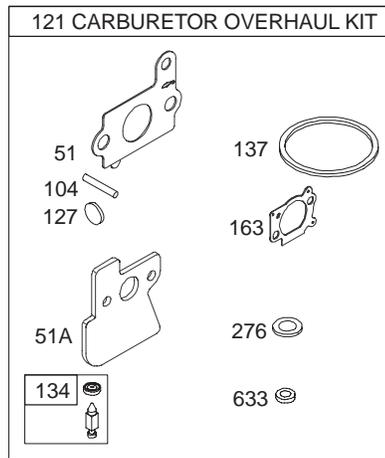

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
△★◆51	692668	1	Gasket-Intake
△★◆51A	692799	1	Spacer-Carburetor
●104	691242	1	Pin-Float Hinge
121	692703	1	Kit-Carburetor Overhaul
●127	694468	1	Plug-Welch
●134	398188	1	Kit-Needle/Seat
◆137	693981	1	Gasket-Float Bowl
△★◆163	691894	1	Gasket-Air Cleaner
◆276	271716	1	Washer-Sealing
◆633	691321	1	Seal-Choke/Throttle Shaft
977	692704	1	Gasket Set-Carburetor

Ref. No.	Part No.	Qty.	Description

△ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

Obtain Parts from Briggs and Stratton

