



Count on it.

Parts Catalog

Reelmaster® 3100-D

Traction Unit With Sidewinder®

Model No. 03171—Serial No. 407960000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame and Platform Assembly	5
Battery Tray and Cover Assembly	6
Engine Assembly	7
Air Cleaner Assembly No. 93-2190	8
Muffler, Muffler Guard and Engine Mount Assembly	9
Radiator Assembly	10
Carrier Assembly	11
Hydraulic Cylinder Assembly No. 117-5109	12
Scissor Assembly	13
Rear Lift Arm Assembly	14
Hydraulic Cylinder Assembly No. 112-9916	15
Fuel System Assembly	16
Control Panel Assembly	18
Seat Assembly	20
Seat and Track Assembly No. 139-2679	21
Seat Assembly No. 139-2700	22
Steering Column Assembly	23
Steering Valve Assembly No. 121-7856	24
Front Platform Assembly	25
Hood Assembly	27
Hydraulic Drive and Wheel Assembly	28
Hydraulic Motor Assembly No. 110-8786	29
Hydraulic Motor Assembly No. 110-8785	30
Brake Assembly No. 104-7705	31
Rear Fork and Tire Assembly	32
Hydraulic Motor Assembly No. 95-8694	33
Hydraulic Cylinder Assembly No. 121-3653	34
Hydrostat Assembly	35
Hydraulic Pump Assembly No. 104-4890	37
Gear Pump Assembly No. 95-8601	39
Tandem Pump Mount Assembly	40
Traction and Steering Circuit Assembly	41
Lift Circuit Assembly	43
Hydraulic Mow Circuit Assembly	44
Gear Motor Assembly No. 115-8250	46
Wire Harness and Battery Assembly	47
Hydraulic Tank and Control Valve Assembly	48
Hydraulic Manifold Assembly No. 108-9037	50
Valve Assembly No. 95-8581	51
Crankcase Assembly	52
Oil Pan and Dipstick Assembly	53
Cylinder Head Assembly	54
Gear Case and Oil Filter Cartridge Assembly	55
Cylinder Head Cover Assembly	56
Main Bearing Case Assembly	57
Camshaft and Idle Gear Shaft Assembly	58
Piston and Crankshaft Assembly	59
Fuel Camshaft and Governor Shaft Assembly	60
Idle Apparatus Assembly	61
Stop Solenoid and Fuel Pump Cover Assembly	62
Injection Pump Assembly	63
Governor Assembly	64
Speed Control Plate Assembly	65
Nozzle Holder and Glow Plug Assembly	66

Contents (continued)


- Nozzle Holder Assembly 67
- Alternator, Pulley and Fan Assembly 68
- Alternator Components Assembly 69
- Starter and Flywheel Assembly 70
- Starter Component Assembly 71
- Water Flange and Thermostat Assembly 72
- Water Pump and Water Pipe Assembly 73
- Valve and Rocker Arm Assembly..... 74
- Inlet and Exhaust Manifold Assembly 75
- Miscellaneous Engine Parts 76
- Upper Gasket Kit 77
- Lower Engine Gasket Kit..... 78
- Attachments and Accessories 79

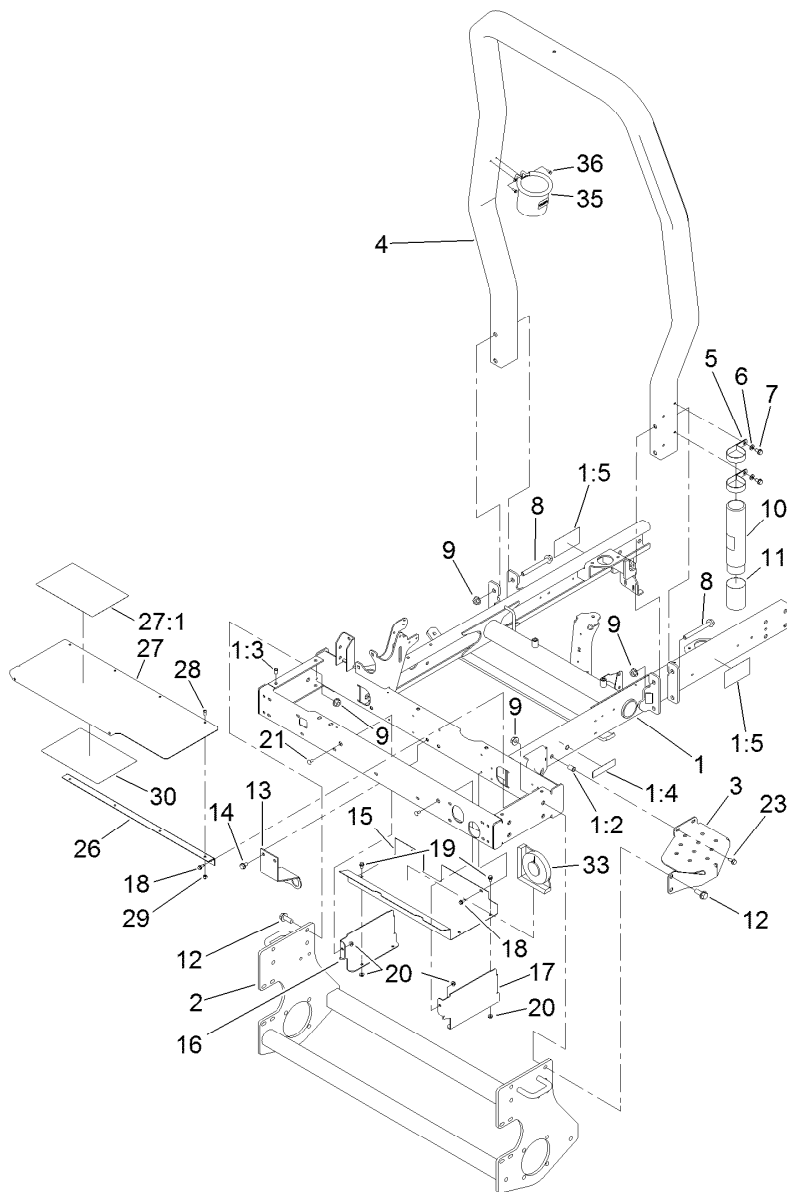

Frame and Platform Assembly

Ref.	Part Number	Qty.	Description
1	121-3639	1	Frame ASM W/Decals
1:2	32148-8	2	Nut-Clinch
1:3	32148-6	2	Nut-Clinch
1:4	133-8062	1	Decal-Arrestor, Spark
1:5	117-3270	2	Decal-Danger
2	95-8568-03	1	Frame-Lower
3	99-3375-03	1	Step
4	127-8493	1	ROPS ASM
5	2412-133	2	Clamp-R
6	3256-23	2	Washer-Plain
7	32144-70	2	Screw-HWHTF
8	117-3176	4	Screw-HHF
9	32128-49	12	Nut-HHF
10	104-7050	1	Tube-Manual
11	104-7048	1	Cap-Housing
12	3234-38	8	Screw-HHF
13	115-3417-0P	1	Bracket-Bulkhead, Scissor
14	32144-15	2	Screw-HHFTF


Ref.	Part Number	Qty.	Description
15	99-3430-0P	1	Bottom - Toolbox *b
16	99-3431-0P	1	End - Toolbox, RH *b
17	99-3432-0P	1	End - Toolbox, LH *b
18	32144-10	9	Screw-HWH
19	3234-13	4	Screw-HHF
20	32128-33	6	Nut-HF
21	3229-11	2	Screw-CARR
23	3234-5	2	Screw-HHF
26	119-2034	1	Hinge-Toolbox
27	119-2029	1	Toolbox Cover ASM
27:1	121-3623	1	Decal-Danger
28	119-6906	4	Screw-HSBH
29	3296-42	4	Nut-Lock, NI
30	138-6979	1	Decal-Service
33	99-3503	1	Indicator-Angle
35	117-2378	1	Holder-Bag
36	32144-1	2	Screw-Taptite

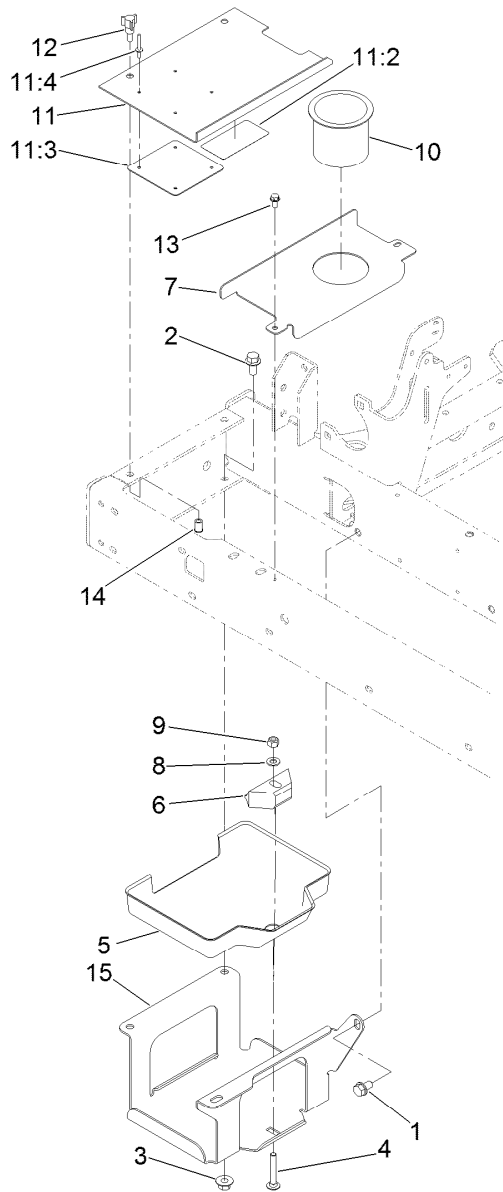

Battery Tray and Cover Assembly

Ref.	Part Number	Qty.	Description
1	32144-15	1	Screw-HHFTF
2	3234-1	3	Screw-HHF
3	32128-43	3	Nut-Flange
4	3230-6	1	Bolt-CARR
5	99-3513	1	Tray-Battery
6	138-6335	1	Retainer-Battery
7	95-8817-01	1	Cover-Battery, Inner
8	3256-23	1	Washer-Plain
9	3296-29	1	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
10	94-1410	1	Holder-Can, Beverage
11	99-3602	1	Battery Cover ASM
11:2	93-7276	1	Decal-Danger
11:3	87-7620	1	Shield-Terminal, Battery
11:4	3269-27	4	Rivet-Snap
12	233-70	2	Knob-Star, Three
13	32144-4	2	Screw-HWH
14	32148-6	2	Nut-Clinch
15	95-8796-03	1	Support-Battery

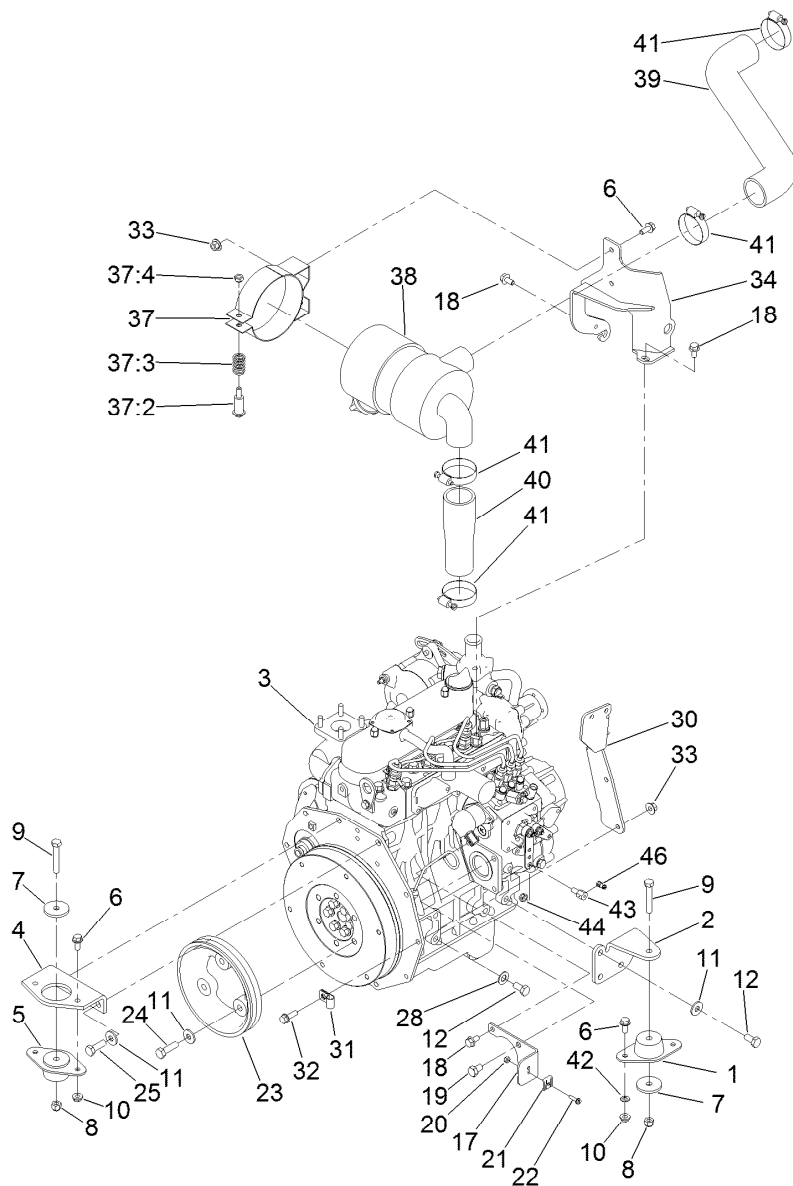

Engine Assembly


Ref.	Part Number	Qty.	Description
1	121-9076	1	Mount-Engine
2	95-8937-0P	1	Mount-Engine, LH
3	138-6905	1	Engine-Kubota, D1105
4	95-8926-0P	1	Mount - Engine, Front
5	93-5265	1	Mount-Engine
6	3234-5	7	Screw-HHF
7	80-8560	2	Washer-Hardened
8	3296-39	2	Nut-Lock, NI
9	323-11	2	Screw-HH
10	32128-20	4	Nut-HF
11	80-6990	7	Washer-Hardened
12	63-7790	4	Screw-Cap
17	110-9009-0P	1	Bracket-Cable, Throttle
18	33104-016	4	Screw-HHF
19	70-8470	1	Screw-HH
20	3296-2	1	Nut-Lock, NI
21	81-1690	1	Clamp-Cable
22	32105-13	1	Screw-HWH
23	99-3412-03	1	Pulley
24	56-2140	3	Screw-HH

Ref.	Part Number	Qty.	Description
25	95-8812	1	Screw-HH
28	33095-00	1	Washer-Flat
30	115-3487-0P	1	Bracket-Mount, Fuel Filter
31	2412-10	1	Clamp-R
32	3234-17	1	Screw-HHF
33	32128-44	4	Nut
34	136-3154-0P	1	Bracket-Cleaner, Air
37	93-2191	1	Air Cleaner Mounting Band ASM
37:2	94-3653	1	Bolt
37:3	94-3654	1	Spring
37:4	48-9510	1	*obs* Nut
38	93-2190	1	Air Cleaner ASM
39	95-8946	1	Hose-Upper, Air Inlet
40	95-8947	1	Hose-Air Inlet, Lower
41	2412-92	4	Clamp-Hose
42	120-9683	1	Washer-Plain
43	98-9311	1	Swivel-Throttle
44	3296-20	1	Nut-Lock, NI
46	112-9919	1	Stop-Cable, Throttle



Air Cleaner Assembly No. 93-2190


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe

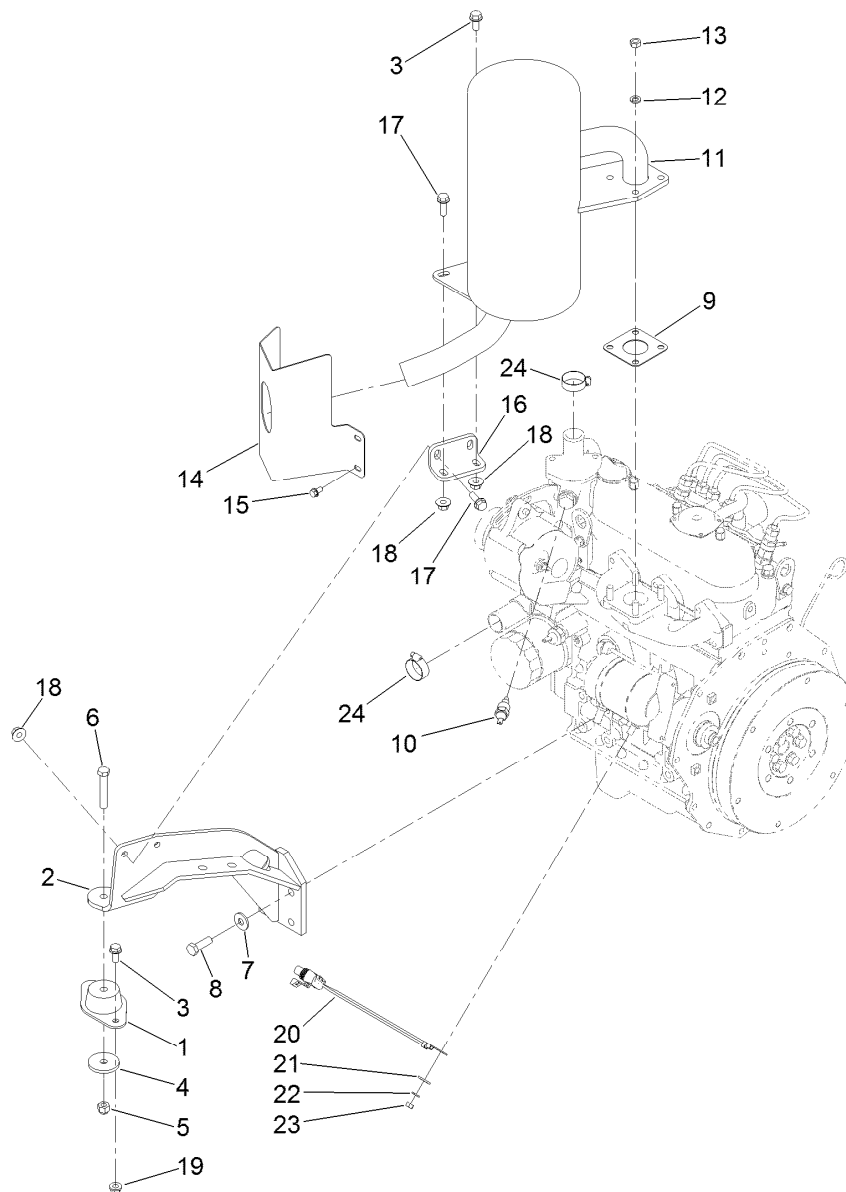

Muffler, Muffler Guard and Engine Mount Assembly

Ref.	Part Number	Qty.	Description
1	121-9076	1	Mount-Engine
2	100-4838-0P	1	Mount-Engine
3	3234-5	3	Screw-HHF
4	80-8560	1	Washer-Hardened
5	3296-39	1	Nut-Lock, NI
6	323-11	1	Screw-HH
7	80-6990	4	Washer-Hardened
8	95-8812	4	Screw-HH
9	98-9611	1	Gasket
10	140-2469	1	Thermoswitch
11	104-4834	1	Muffler
12	3253-4	4	Washer-Lock


Ref.	Part Number	Qty.	Description
13	33014-00	4	Nut-Hex
14	99-3425-03	1	Guard-Exhaust
15	32144-4	4	Screw-HWH
16	95-8943-0P	1	Bracket-Muffler
17	3234-17	3	Screw-HHF
18	32128-44	4	Nut
19	32128-20	2	Nut-HF
20	99-3441	1	Harness-Wire, Fusible Link
21	3256-78	1	Washer-Flat
22	43-5930	1	Washer-Lock, Spring
23	48-7890	1	Nut-Hex
24	2412-34	2	Clamp-Hose

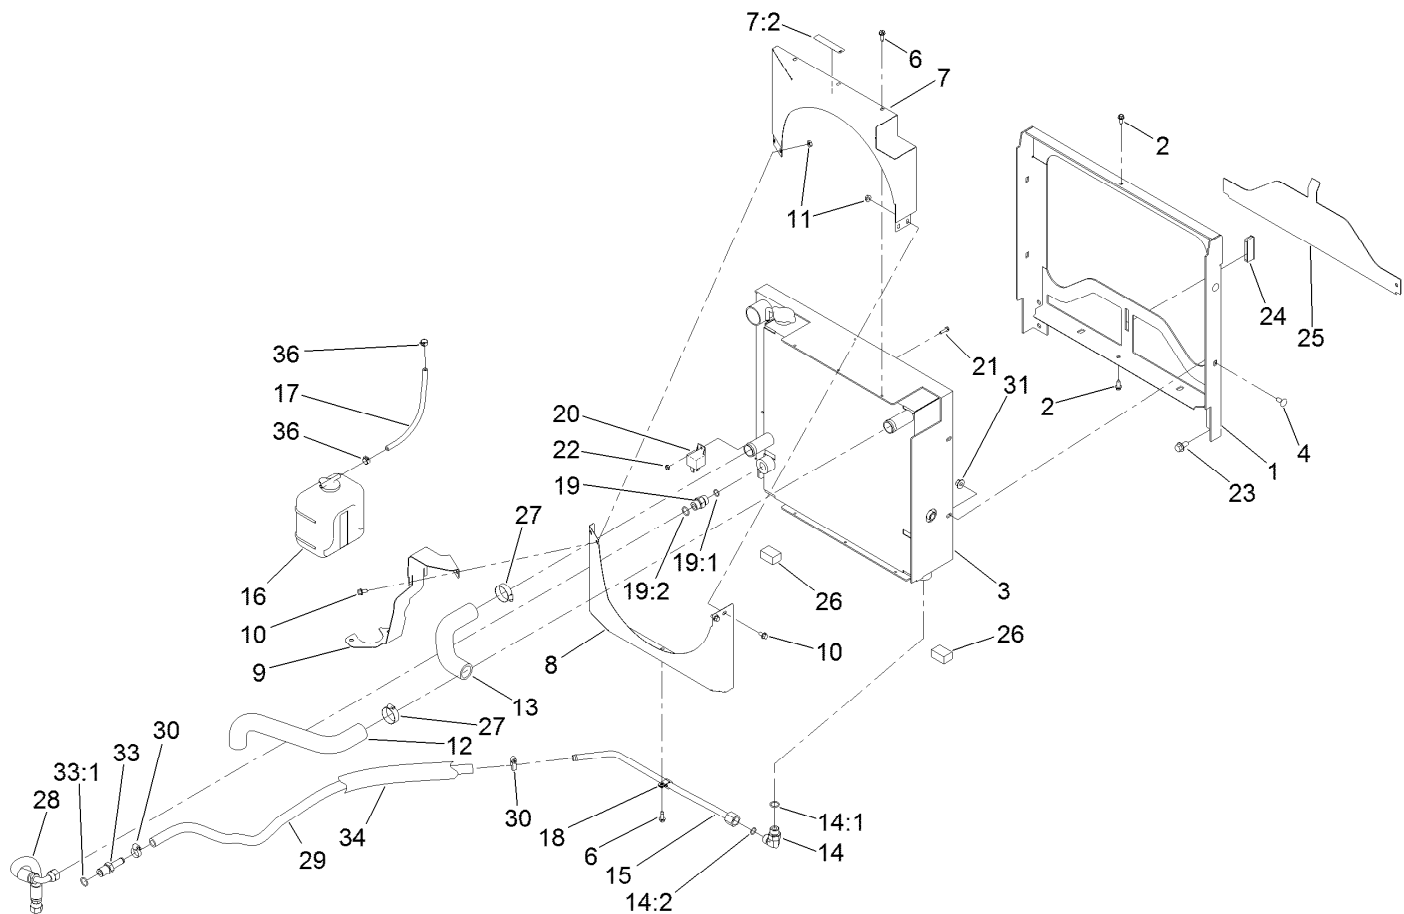

Radiator Assembly

Ref.	Part Number	Qty.	Description
1	100-4903-0P	1	Radiator Frame ASM
2	119-2038	2	Screw-HWH
3	120-3392	1	Radiator/Oil Cooler
4	3230-1	4	Bolt-CARR
6	32104-95	6	Screw-HWH
7	121-3584	1	Shroud-Fan, Top
7:2	93-6681	1	Decal-Warning, Fan
8	121-6254-0P	1	Shroud-Fan, Bottom
9	121-3604-0P	1	Bracket-Mounting, Reservoir
10	3234-13	4	Screw-HHF
11	32128-33	4	Nut-HF
12	121-3571	1	Hose-Radiator, Upper
13	119-6748	1	Hose-Radiator, Lower
14	340-98	1	Fitting-Elbow, 90 DEG
14:1	237-79	1	O-Ring
14:2	237-30	1	O-Ring
15	121-3572	1	Tube-HYD
16	108-0638	1	Bottle-Overflow
17	110-4105	1	Hose-Fuel

Ref.	Part Number	Qty.	Description
18	2412-73	2	Clamp-R
19	340-4	1	Fitting-Straight
19:1	237-30	1	O-Ring
19:2	237-79	1	O-Ring
20	99-7435	1	Relay
21	32105-13	1	Screw-HWH
22	3296-2	1	Nut-Lock, NI
23	3234-1	4	Screw-HHF
24	99-3497	1	Magnet
25	95-8702-0P	1	Shield-Radiator, Lower
26	95-8962	2	Seal-Foam, Radiator
27	2412-34	2	Clamp-Hose
28	104-2806	1	Hose-HYD
29	93-6804	1	Hose
30	2412-36	2	Clamp-Hose
31	32128-44	4	Nut
33	354-121	1	Fitting-STR
33:1	237-79	1	O-Ring
34	56-7985	1	Sleeve-Protective
36	92-2379	2	Clamp-Hose

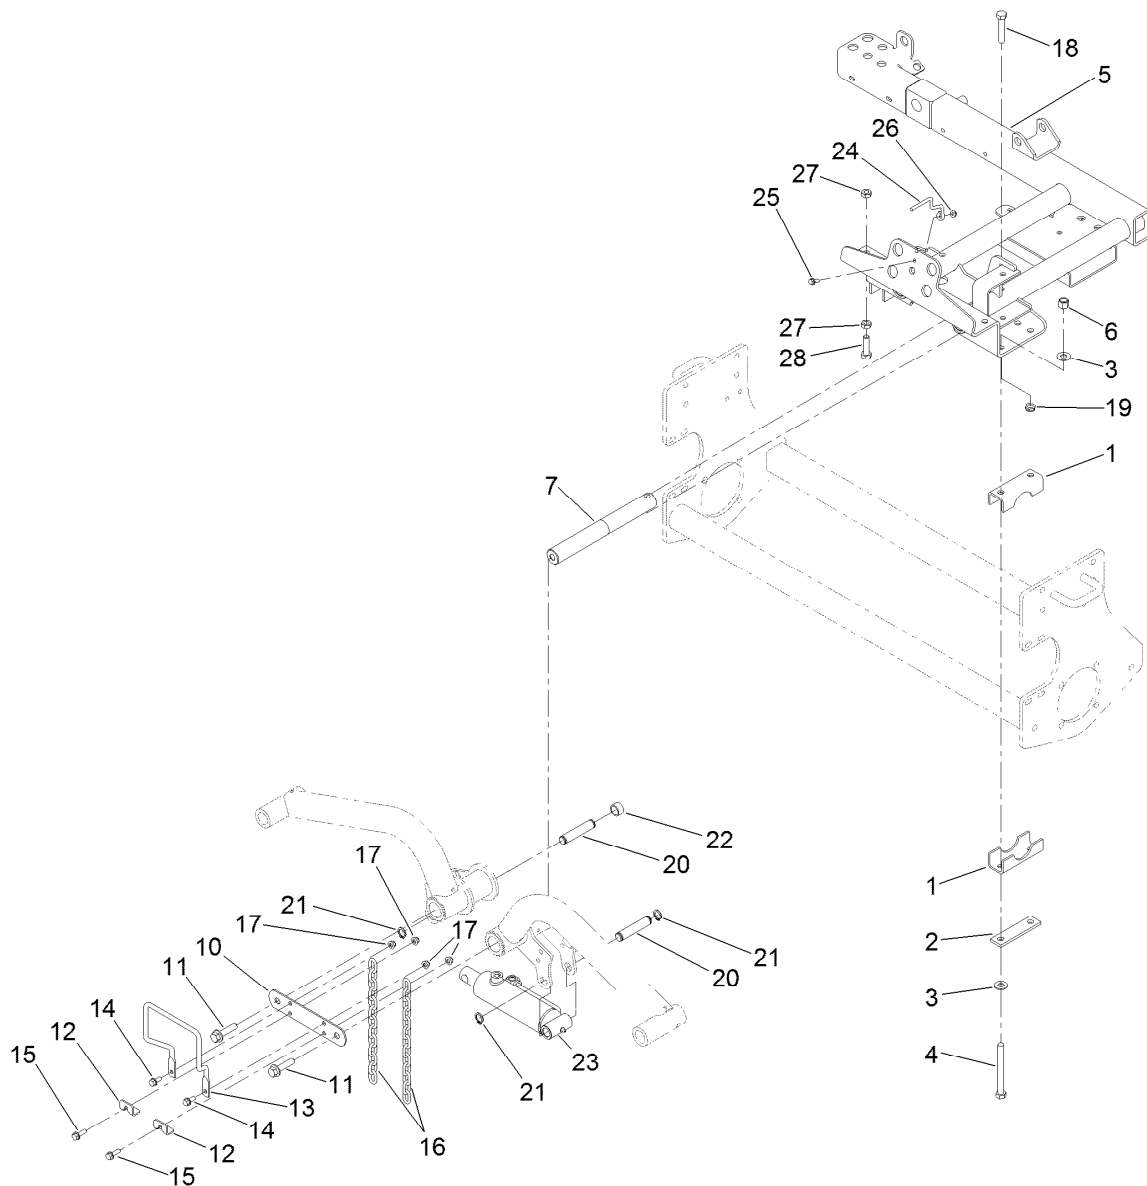


Carrier Assembly

Ref.	Part Number	Qty.	Description
1	104-4865	8	Cap-Bearing
2	99-3373	4	Bar-Support, Slide
3	87-7270	16	Washer-Thrust
4	325-19	8	Screw-HH
5	100-4930-03	1	Carrier ASM
6	3296-23	8	Nut-Lock, NI
7	95-8531	2	Shaft-Pivot, Liftarm
10	95-8532-03	1	Link-Shaft, Pivot
11	3234-27	2	Screw-HHF
12	99-3550	2	Clip-Link
13	99-3492	1	Rod-Formed, Hose Guard
14	3234-5	2	Screw-HHF
15	3234-17	4	Screw-HHF
16	98-7981	2	Chain-Link, Straight


Ref.	Part Number	Qty.	Description
17	104-8300	6	Nut-HF, NI
18	325-10	2	Screw-HH
19	3296-45	2	Nut-Hex
20	95-8575	2	Pin-Clevis
21	32120-93	4	Ring-Retaining
22	75-9590	2	Spacer-Cylinder
23	117-5109	1	HYD Cylinder ASM
24	99-3433	1	Wire-Center
25	3234-4	1	Screw-HHF
26	32128-33	1	Nut-HF
27	3218-5	4	Nut-Jam
28	325-7	2	Screw-HH
99	3290-378	1	Tie-Cable ●

● Not illustrated

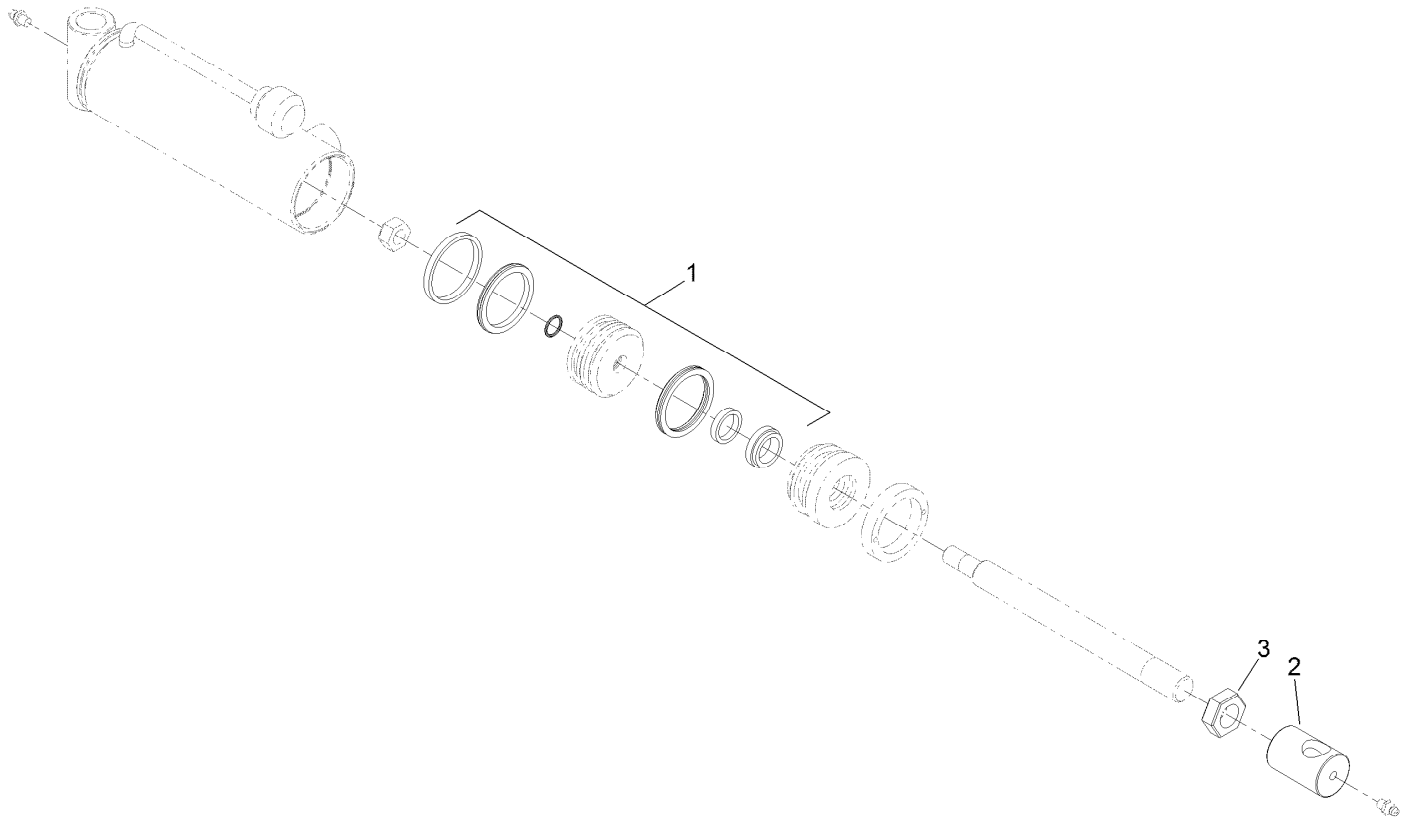

Hydraulic Cylinder Assembly No. 117-5109


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-3410	1	Seal Kit
2	108-9035	1	Clevis
3	3220-7	1	Nut-Jam

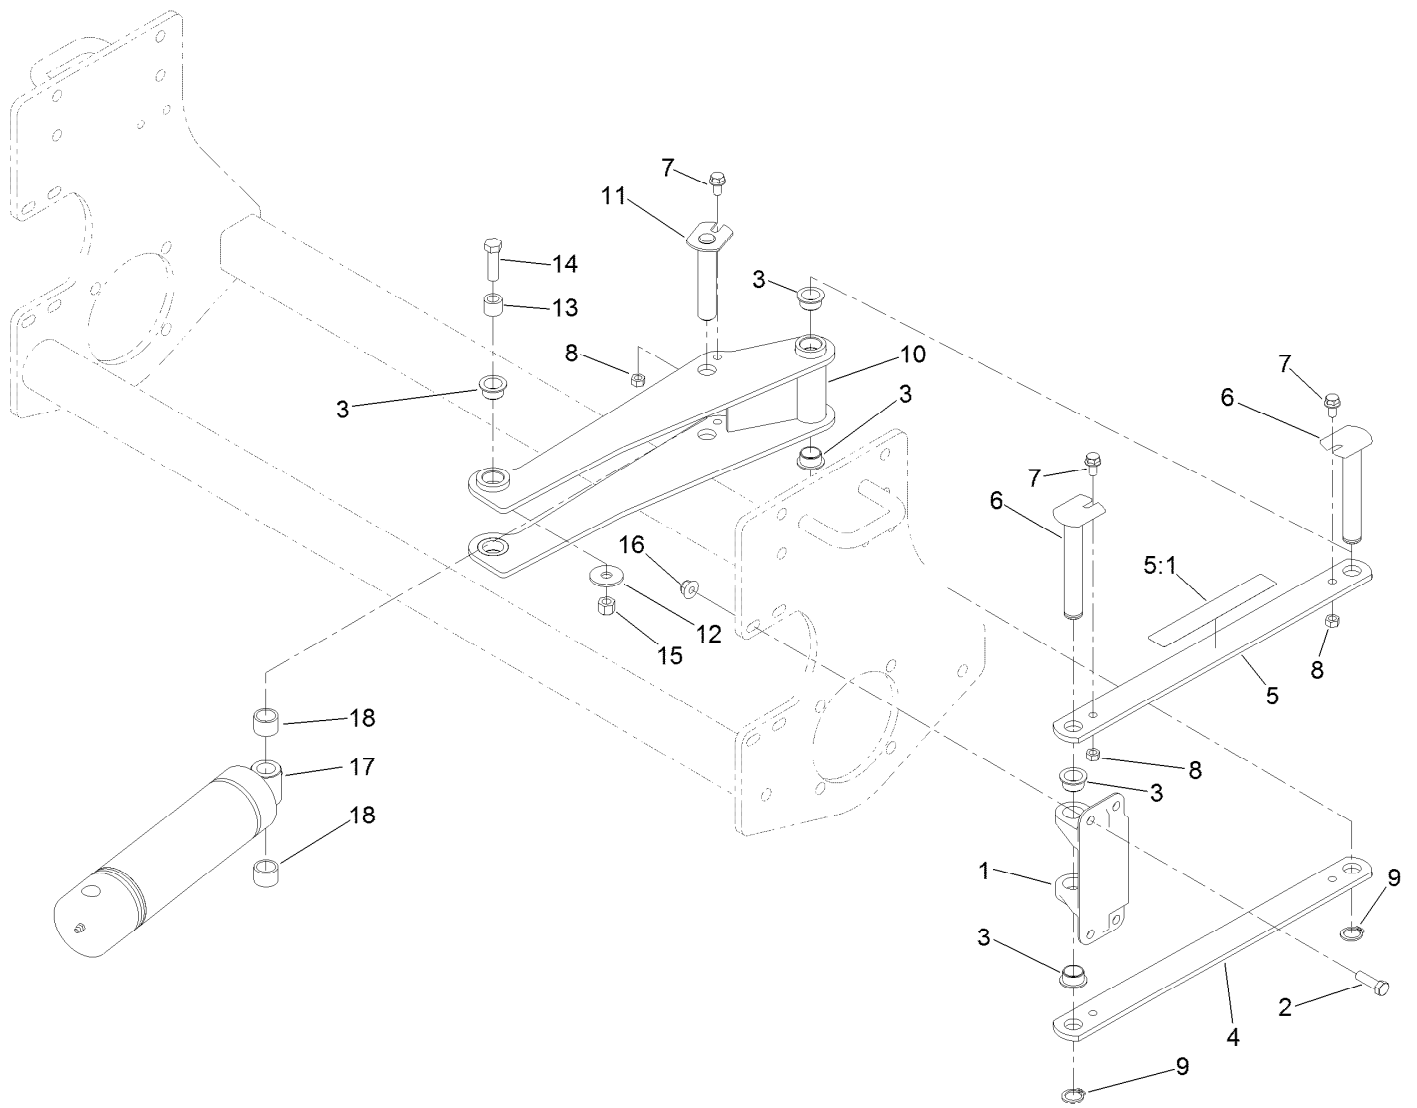

Scissor Assembly

Ref.	Part Number	Qty.	Description
1	95-8883	1	Mount-Scissor
2	323-7	4	Screw-HH
3	95-8526	6	Bushing-Plastic
4	95-8527-0P	1	Link-Scissor
5	99-3505	1	Scissors Link ASM
5:1	94-3353	1	Decal-Pinch Point, Intl
6	125-1914	2	Pin-Pivot
7	3234-14	3	Screw-HHF
8	32152-1	3	Nut-Lock, Cone
9	32120-93	2	Ring-Retaining


Ref.	Part Number	Qty.	Description
10	95-8521-03	1	Frame-Scissor
11	140-5248	1	Pin-Ram, Pivot
12	87-5330	2	Washer
13	95-8603	2	Spacer
14	324-6	2	Screw-HH
15	3296-48	2	Nut-Hex
16	104-8301	4	Nut-HF, NI
17	121-3654	1	Cylinder-HYD
18	46-6350	2	Spacer

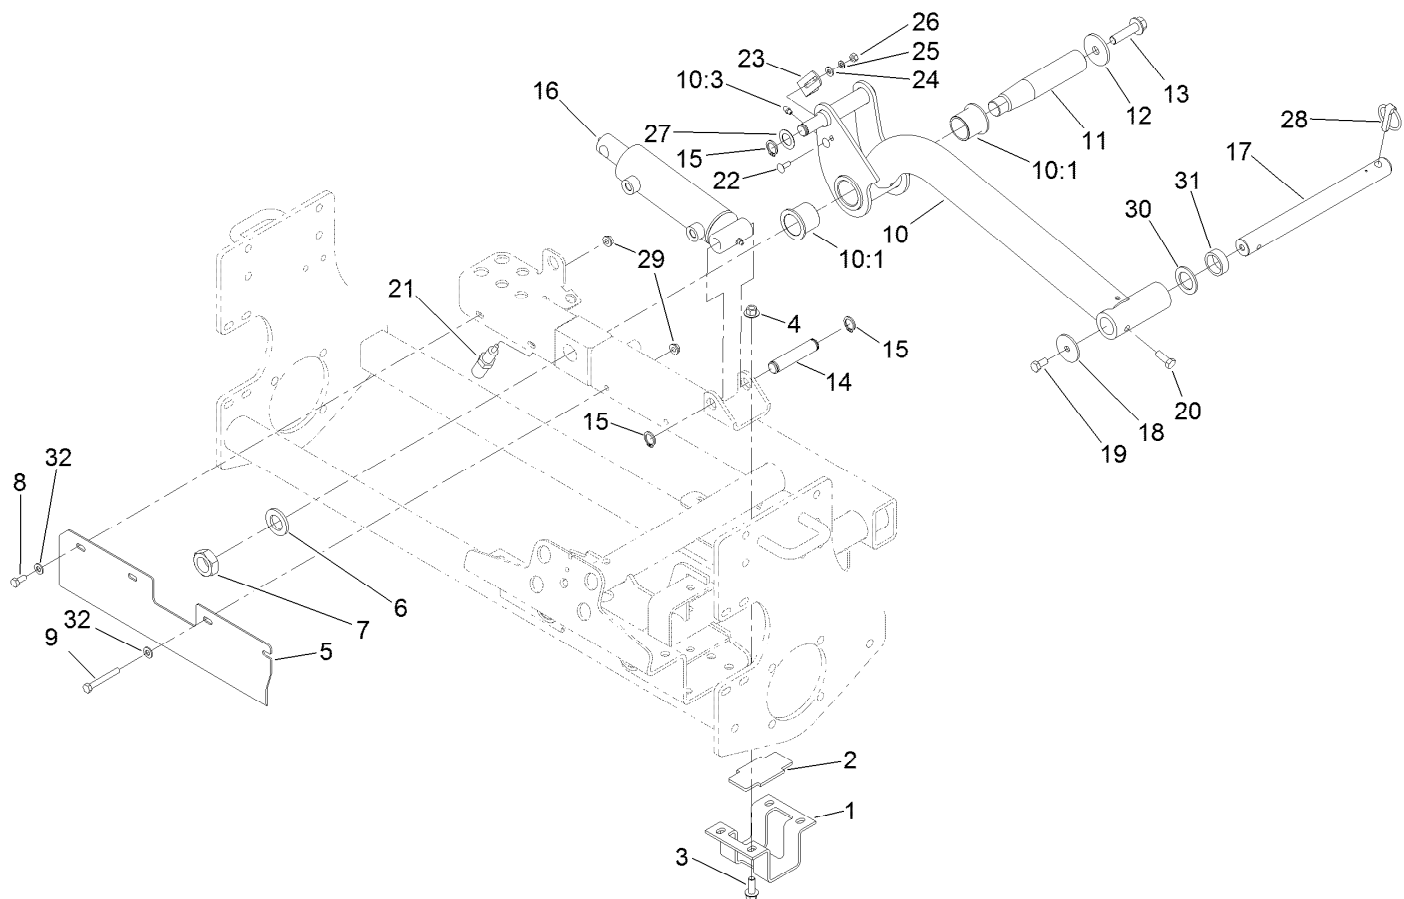

Rear Lift Arm Assembly

Ref.	Part Number	Qty.	Description
1	95-8519-0P	1	Bracket - Slide *b
2	95-8538	2	Slide-Plastic
3	3234-11	4	Screw-HHF
4	32128-43	4	Nut-Flange
5	121-3616-03	1	Guard
6	86-1480	1	Washer
7	3220-9	1	Nut-Jam
8	322-3	2	Screw-HH
9	322-12	2	Screw-HH
10	115-3475	1	Rear Liftarm ASM
10:1	69-6470	2	Bushing-Caster
10:3	302-5	1	Fitting-Grease
11	95-8990	1	Shaft-Pivot, Rear
12	75-7730	1	Washer-Thrust
13	3234-27	1	Screw-HHF
14	95-8575	1	Pin-Clevis
15	32120-93	3	Ring-Retaining


Ref.	Part Number	Qty.	Description
16	112-9916	1	HYD Cylinder ASM
17	104-1392	1	Shaft-Pivot
18	63-7400	1	Washer-Rebound
19	323-4	1	Screw-HH
20	323-6	1	Screw-HH
21	93-6762	1	Switch-Ball
22	3229-1	2	Screw-CARR
23	95-8613	1	Bracket-Switch
24	3256-22	2	Washer-Flat
25	3253-3	2	Washer-Lock
26	3217-5	2	Nut-Hex
27	3-6498	1	Washer-Thrust
28	283-71	1	Pin-Lynch
29	32128-20	4	Nut-HF
30	3-6781	1	Washer-Flat
31	63-0070	1	Spacer
32	3256-23	4	Washer-Plain

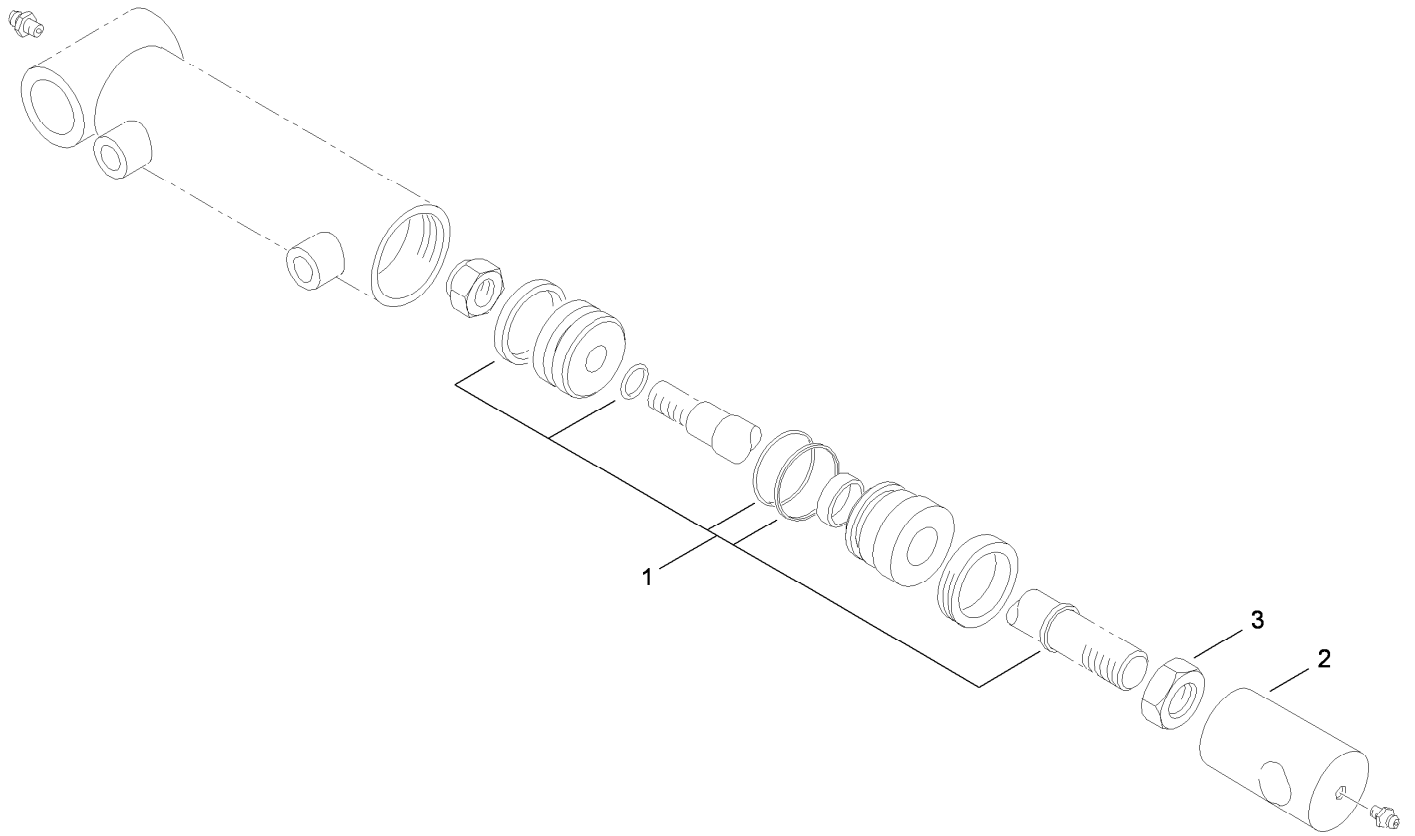

Hydraulic Cylinder Assembly No. 112-9916

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-3410	1	Seal Kit
2	108-9035	1	Clevis
3	3220-7	1	Nut-Jam

Fuel System Assembly

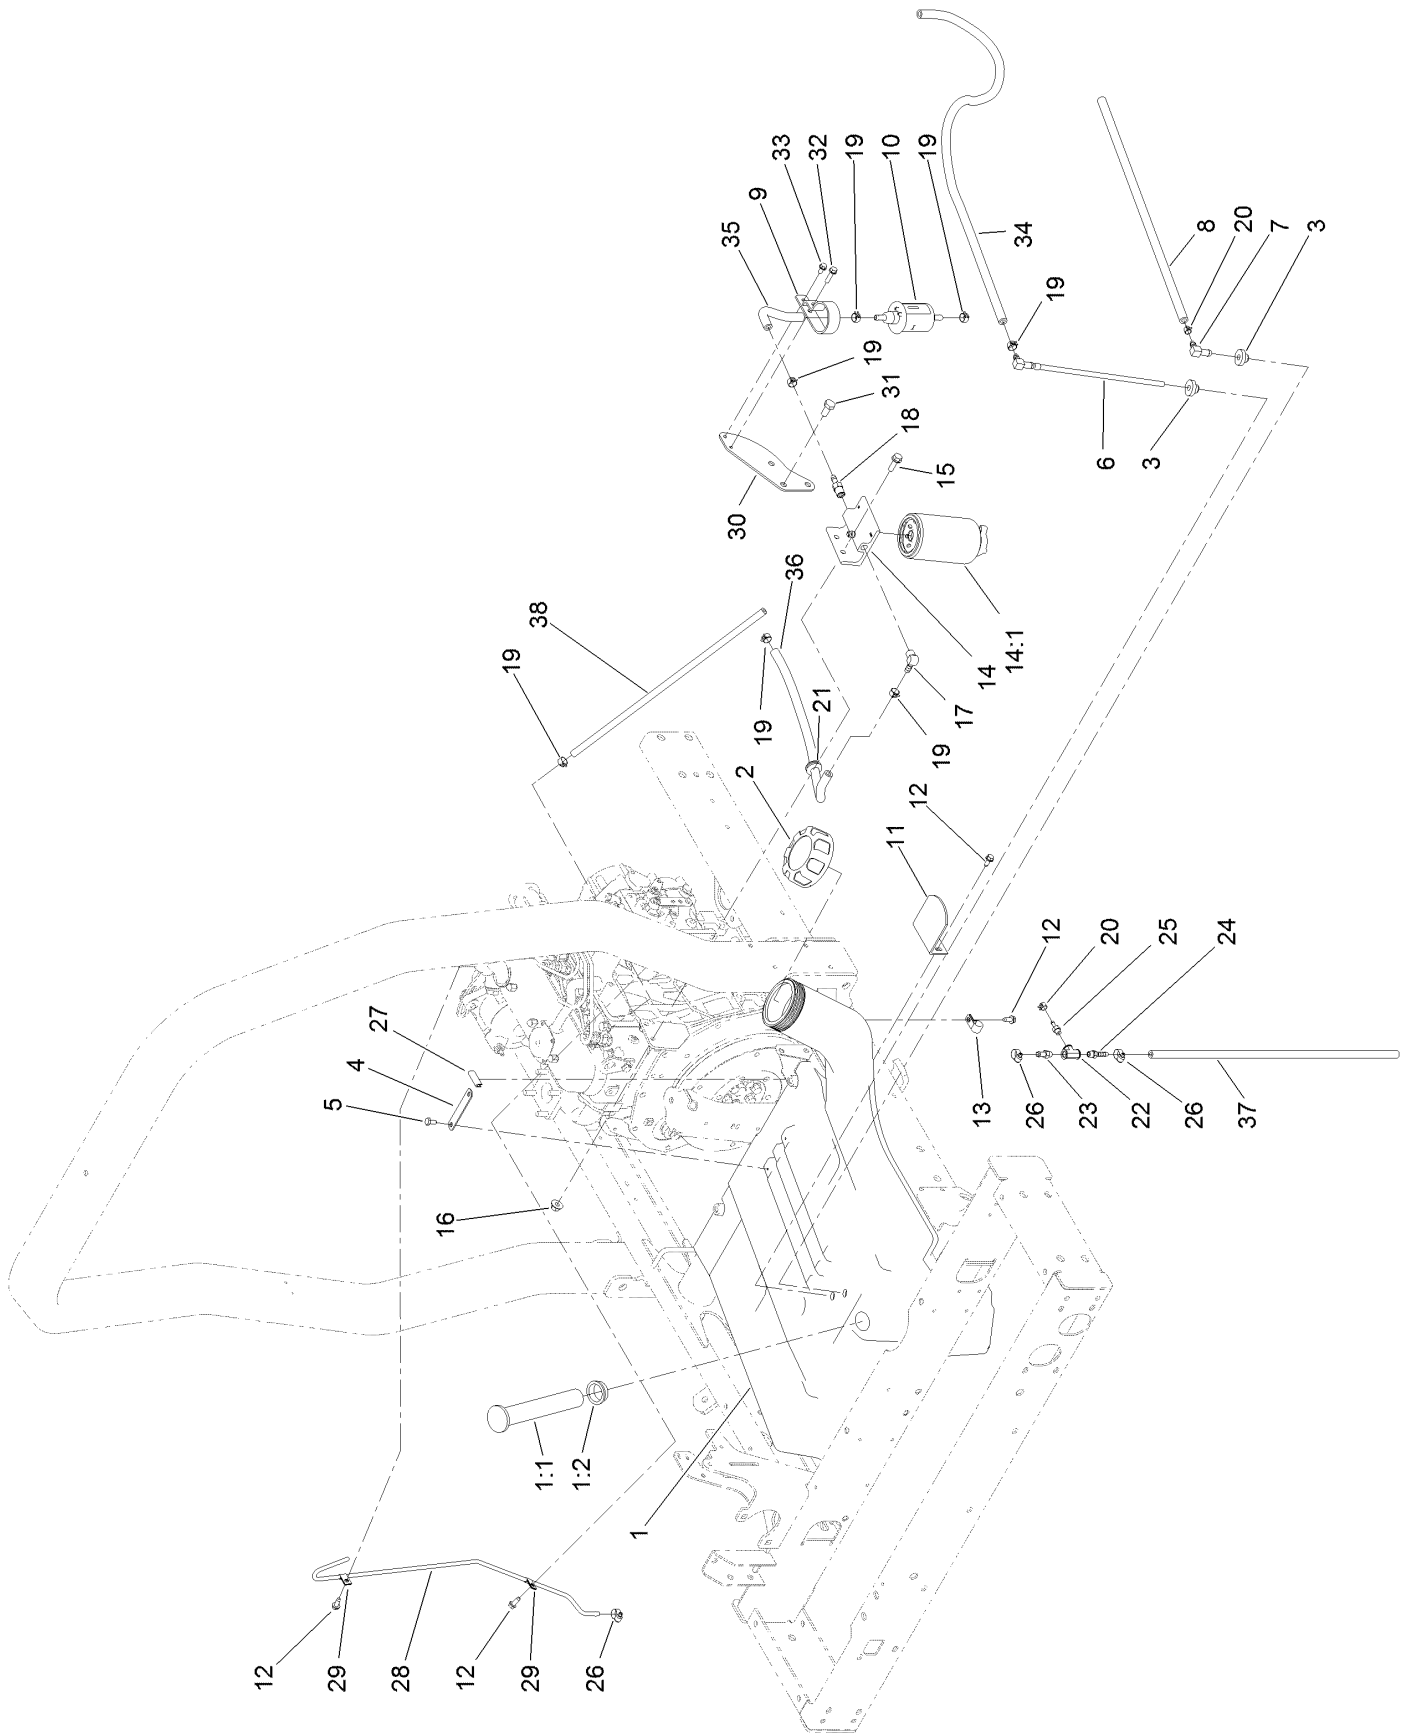


Fuel System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	95-8620	1	Tank-Fuel	20	2412-80	2	Clamp-Hose
1:1	95-8971	1	Gauge-Fuel	21	1-543296	1	Grommet
1:2	95-8972	1	Grommet	22	354-20	1	Fitting-Tee
2	114-5064	1	Cap-Diesel	23	354-21	1	Fitting-Barbed
3	46-6560	2	Bushing	24	304-73	1	Fitting-Straight
4	95-8881	1	Strap-Line, Fuel	25	354-22	1	Fitting-Barbed
5	321-2	2	Screw-HH	26	2412-108	3	Clamp-Worm
6	110-9689	1	Pipe-Stand	27	110-8754	1	Trim
7	46-6550	1	Fitting-Elbow, 90 DEG	28	95-8615	1	Tube-Breather
8	110-6187	1	Hose-Fuel	29	2412-72	2	Clip-Closed, Insulated
9	110-8817	1	Bracket-Pump, Fuel	30	120-2182-0P	1	Plate-Mount, Fuel Pump
10	110-8806	1	Pump-Fuel	31	63-7790	3	Screw-Cap
11	95-8968-03	1	Support-Tank, Fuel	32	32144-86	1	Screw-HWHTF
12	32144-10	5	Screw-HWH	33	32144-4	1	Screw-HWH
13	2412-73	1	Clamp-R	34	121-7914	1	Hose-Fuel
14	110-9044	1	Separator-Filter	35	117-4026	1	Hose-Fuel
14:1	110-9049	1	Filter-Spin On, Fuel/Water	36	121-7852	1	Hose-Fuel
15	3234-17	2	Screw-HHF	37	110-5701	1	Hose-Fuel
16	32128-44	2	Nut	38	110-8751	1	Hose-Fuel
17	353-781	1	Fitting-HYD, 90	99	3290-378	1	Tie-Cable ●
18	353-783	1	Fitting-STR	99	3290-379	1	Tie-Cable ●
19	92-2379	7	Clamp-Hose				

● Not illustrated


Control Panel Assembly

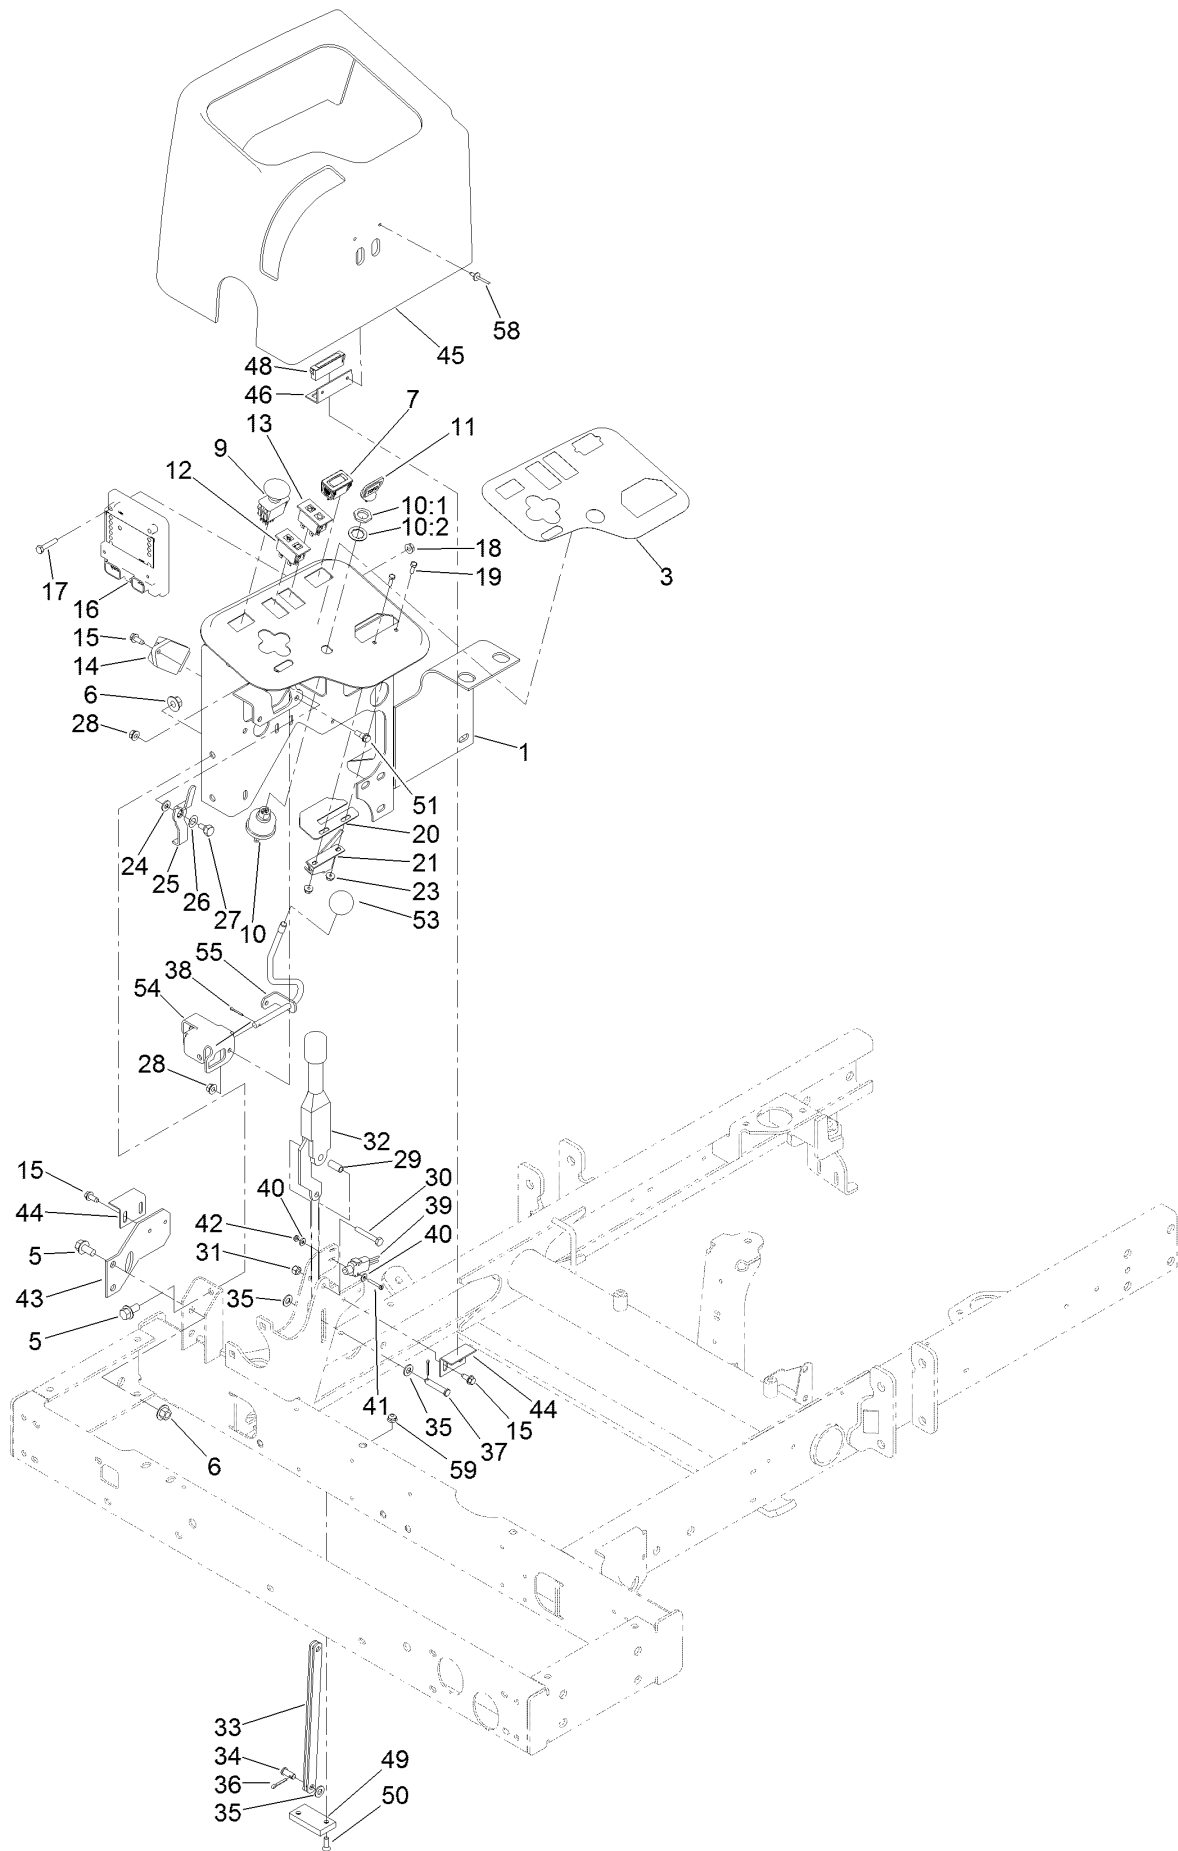

Control Panel Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-3496-03	1	Panel-Control	31	3296-42	1	Nut-Lock, NI
3	139-6027	1	Decal-Console	32	104-4817	1	Lever-Brake
5	3234-1	7	Screw-HHF	33	104-4628	2	Link-Brake, Parking
6	32128-43	7	Nut-Flange	34	283-62	1	Pin-Clevis
7	120-2244	1	Hourmeter	35	3256-23	3	Washer-Plain
9	93-9999	1	Switch-PTO	36	3272-10	1	Pin-Cotter
10	104-2541	1	Ignition Switch ASM	37	94-3829	1	Pin-Clevis
10:1	218-461	1	Nut-HH	38	3272-6	2	Pin-Cotter
10:2	3254-5	1	Washer-Lock	39	95-8900	1	Switch
11	63-8360	1	Key-Ignition	40	3256-21	4	Washer-Flat
12	100-8070	1	Lamp-Warning	41	32105-9	2	Screw-HH
13	100-8071	1	Lamp-Warning	42	3296-9	2	Nut-Hex
14	98-7611	1	Controller-Glow	43	95-8764-03	1	Support-Magnet
15	32144-10	5	Screw-HWH	44	95-8765	2	Bracket-Strike, Magnet
16	106-9277	1	Module-Control, Standard	45	95-8707	1	Cover-Dash
17	321-8	3	Screw-HH	46	95-8763	2	Bracket-Hold Down, Cover
18	32128-33	3	Nut-HF	48	58-4250	2	Catch-Magnetic
19	3290-134	2	Screw	49	95-8684	1	Pad-Bumper
20	104-0421	1	Plate-Stop, Throttle	50	3289-4	2	Screw-FH
21	138-1224	1	Cable-Throttle	51	42-3560	2	Bolt-Shoulder
23	3290-148	2	Nut-HF	53	233-42	1	Knob
24	3256-22	1	Washer-Flat	54	95-8633	1	Bracket-Valve, Actuator
25	99-3401	1	Lever-Lock	55	95-8635	1	Lever-Valve
26	3290-477	1	Washer-Curved	58	3269-5	4	Rivet-Pop
27	63-3410	1	Screw-Shoulder	59	104-7201	2	Nut-HF, NI
28	32128-32	3	Nut-HHF	99	3290-378	1	Tie-Cable ●
29	87-4710	1	Spacer-Brake, Parking	99	3290-379	1	Tie-Cable ●
30	321-10	1	Screw-HH				

● Not illustrated

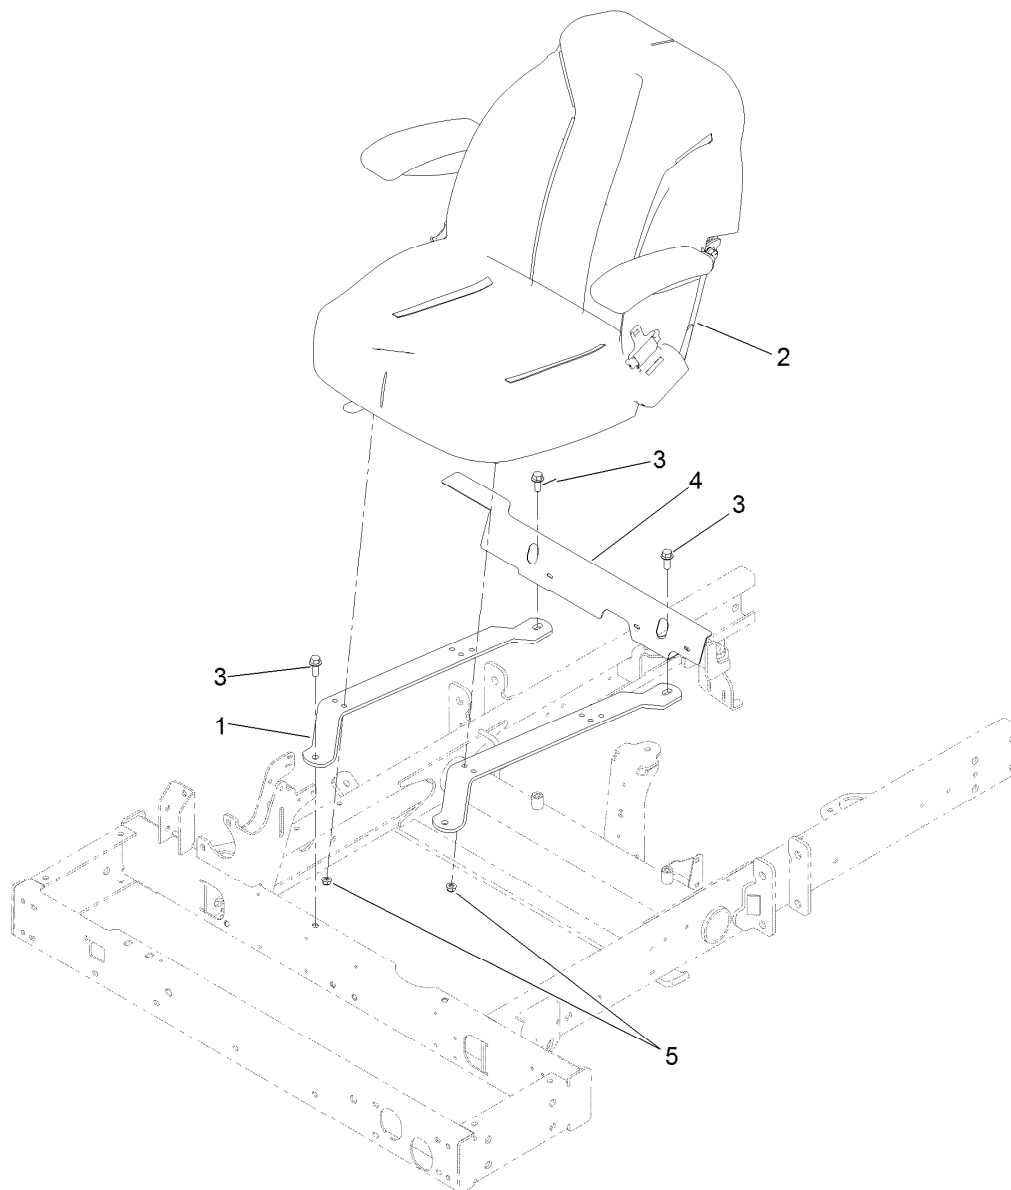


Seat Assembly

Ref.	Part Number	Qty.	Description
1	121-3665-03	2	Strap-Support, Seat
2	139-2679	1	Seat And Track ASM
3	3234-11	4	Screw-HHF
4	104-4833-03	1	Shield-Heat
5	104-8300	4	Nut-HF, NI

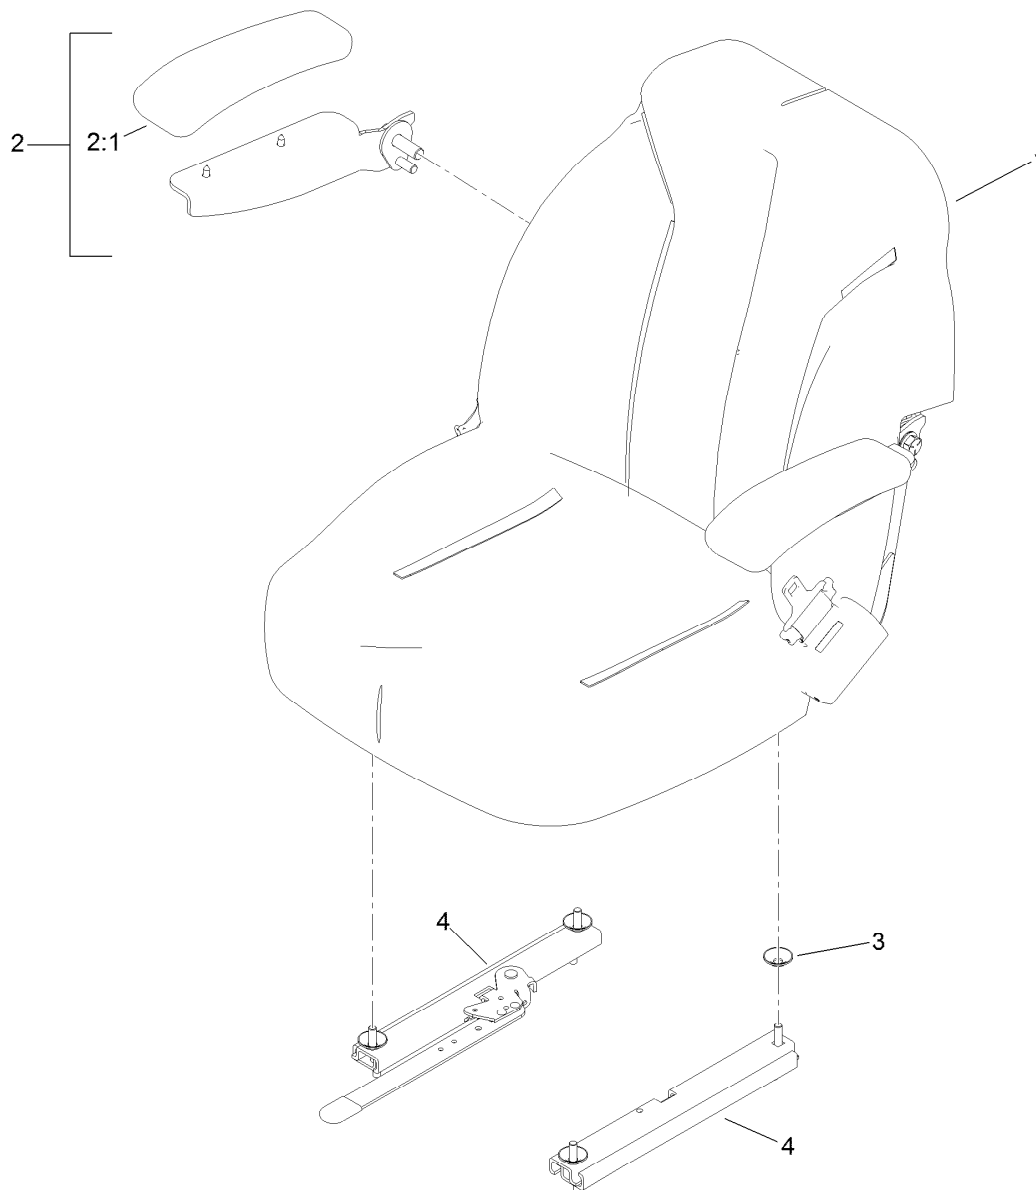


Seat and Track Assembly No. 139-2679

Ref.	Part Number	Qty.	Description
1	139-2700	1	Seat ASM
2	121-3658	1	RH Arm Rest Kit
2:1	110-4163	1	Cushion-Rest, Arm
3	136-9002	4	Spacer-Mounting
4	126-2177	1	Track-Seat

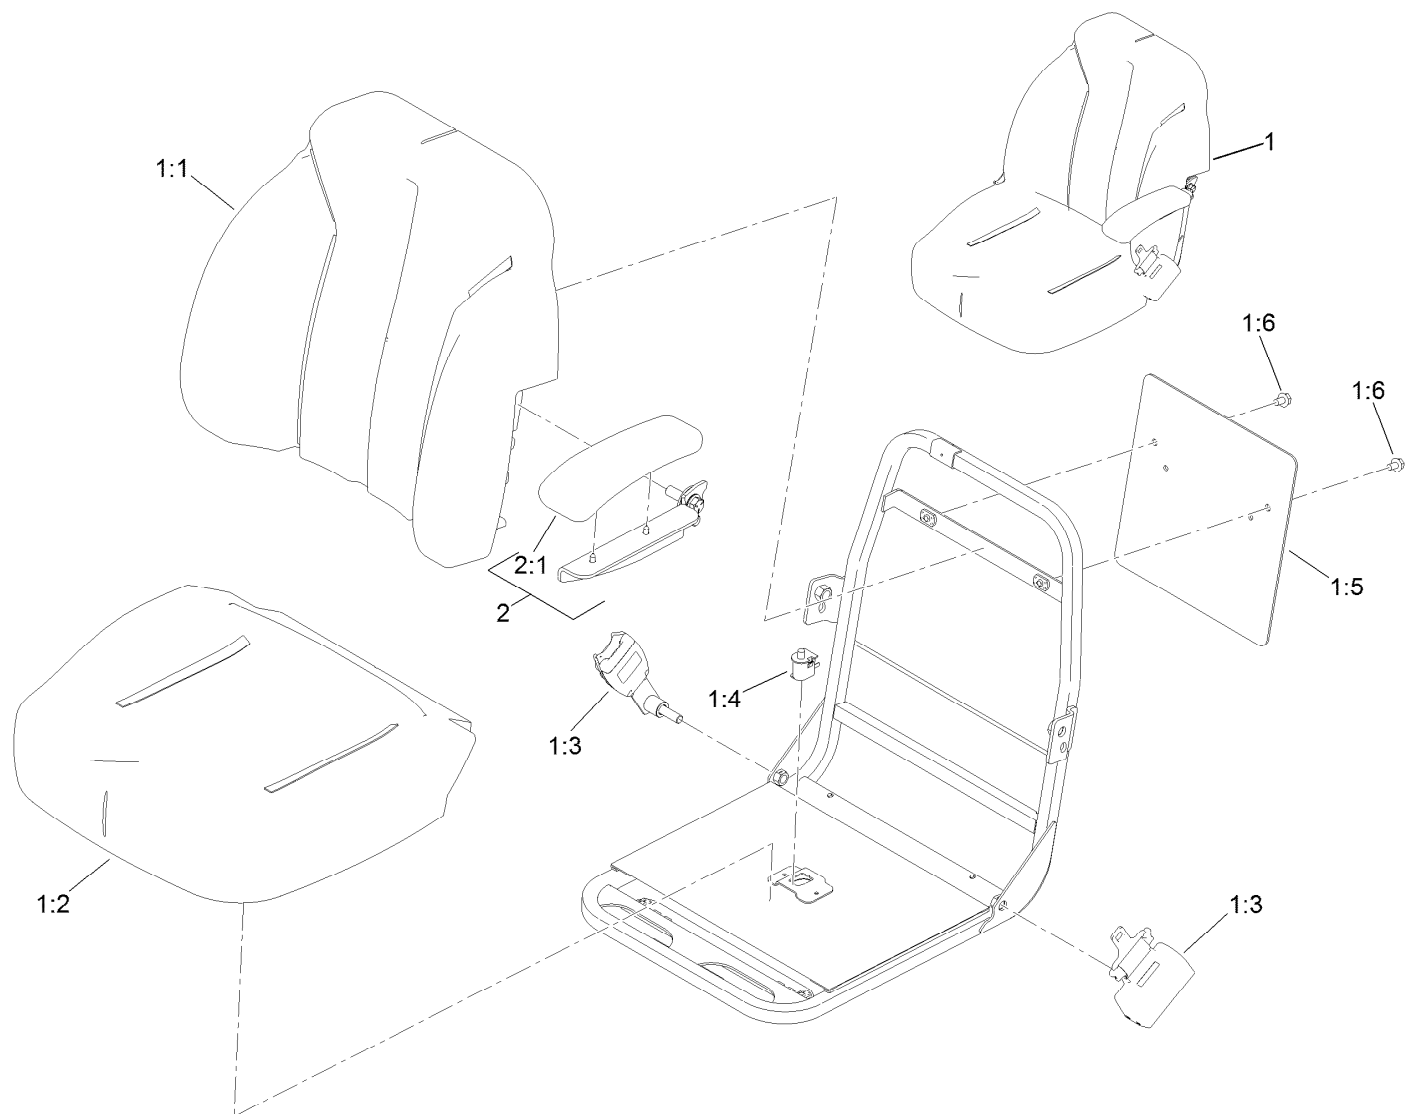

Seat Assembly No. 139-2700

Ref.	Part Number	Qty.	Description
1	139-2680	1	Seat ASM
1:1	139-2705	1	Cover-Seat, Back
1:2	139-2706	1	Cover-Seat, Bottom
1:3	139-2707	1	Seat Belt Kit
1:4	82-2190	1	Switch-Bail
1:5	139-2701	1	Plate-Decal
1:6	3234-30	2	Screw-HHF
2	121-3660	1	LH Arm Rest Kit
2:1	110-4163	1	Cushion-Rest, Arm

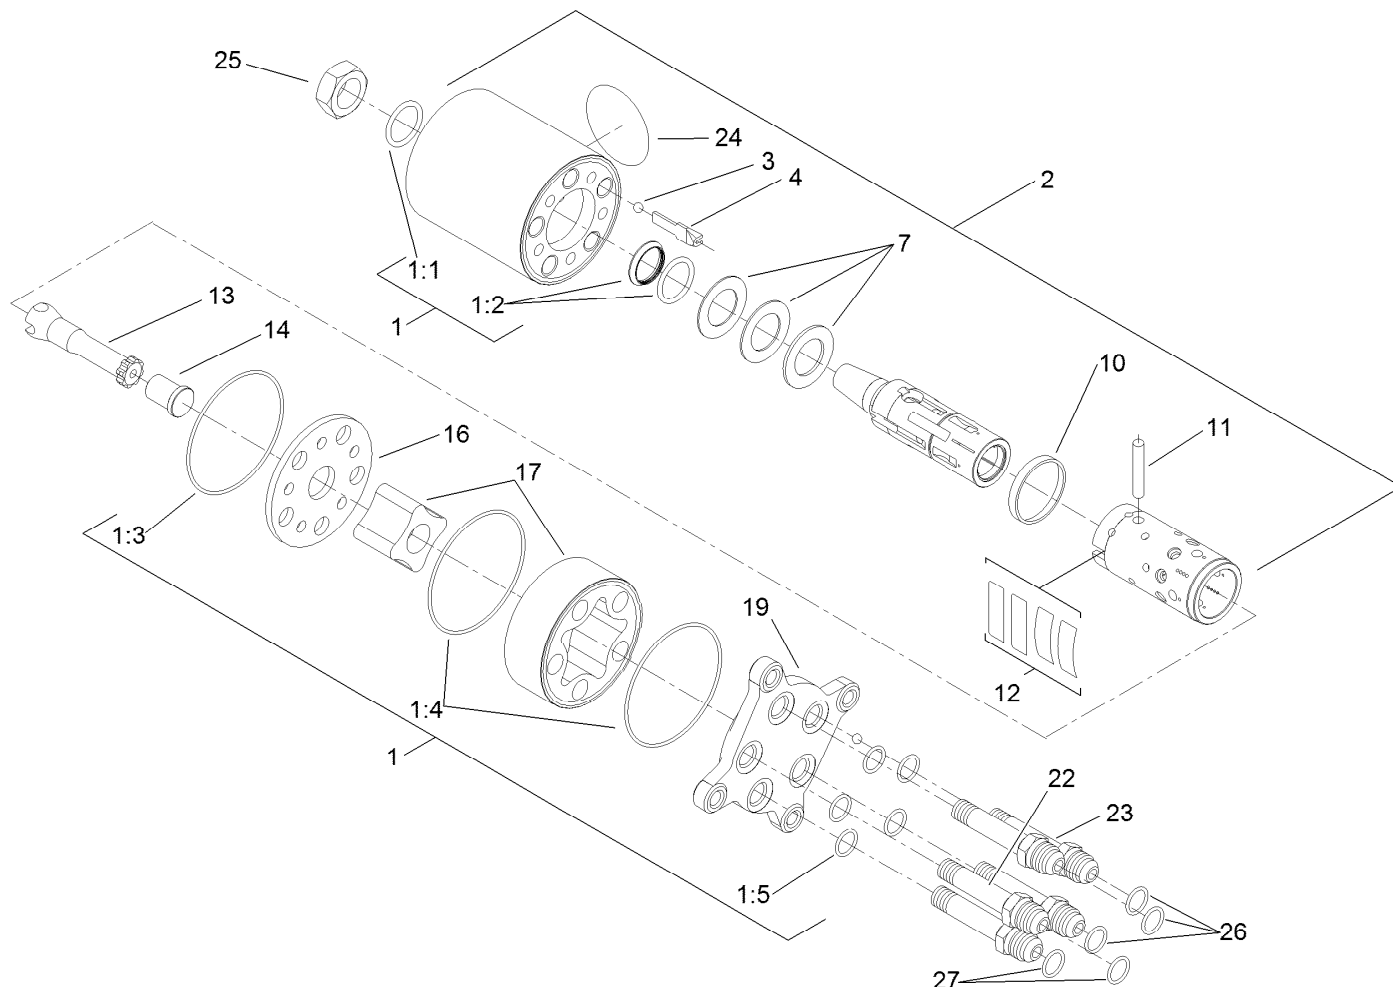


Steering Valve Assembly No. 121-7856

Ref.	Part Number	Qty.	Description
1	106-6716	1	Seal Kit
1:1		1	Ring-Seal, Dust ●
1:2		1	Seal-Shaft ●
1:3		1	O-Ring ●
1:4		2	O-Ring ●
1:5		5	O-Ring ●
2		1	Housing ●
3		1	Ball ●
4		1	Stop-Ball ●
7		1	Bearing ASM ●
10		1	Ring ●
11		1	Pin-Cross ●

Ref.	Part Number	Qty.	Description
12		1	Springs ●
13		1	Shaft ●
14		1	Spacer ●
16		1	Plate-Distributor ●
17		1	Gearwheel Set ●
19		1	Cover-End ●
22		1	Screw-Special ●
23		4	Screw-Special ●
24		1	Plate-Name ●
25	3296-33	1	Nut-Lock, NI
26	237-22	3	O-Ring
27	237-21	2	O-Ring

● Not serviced separately

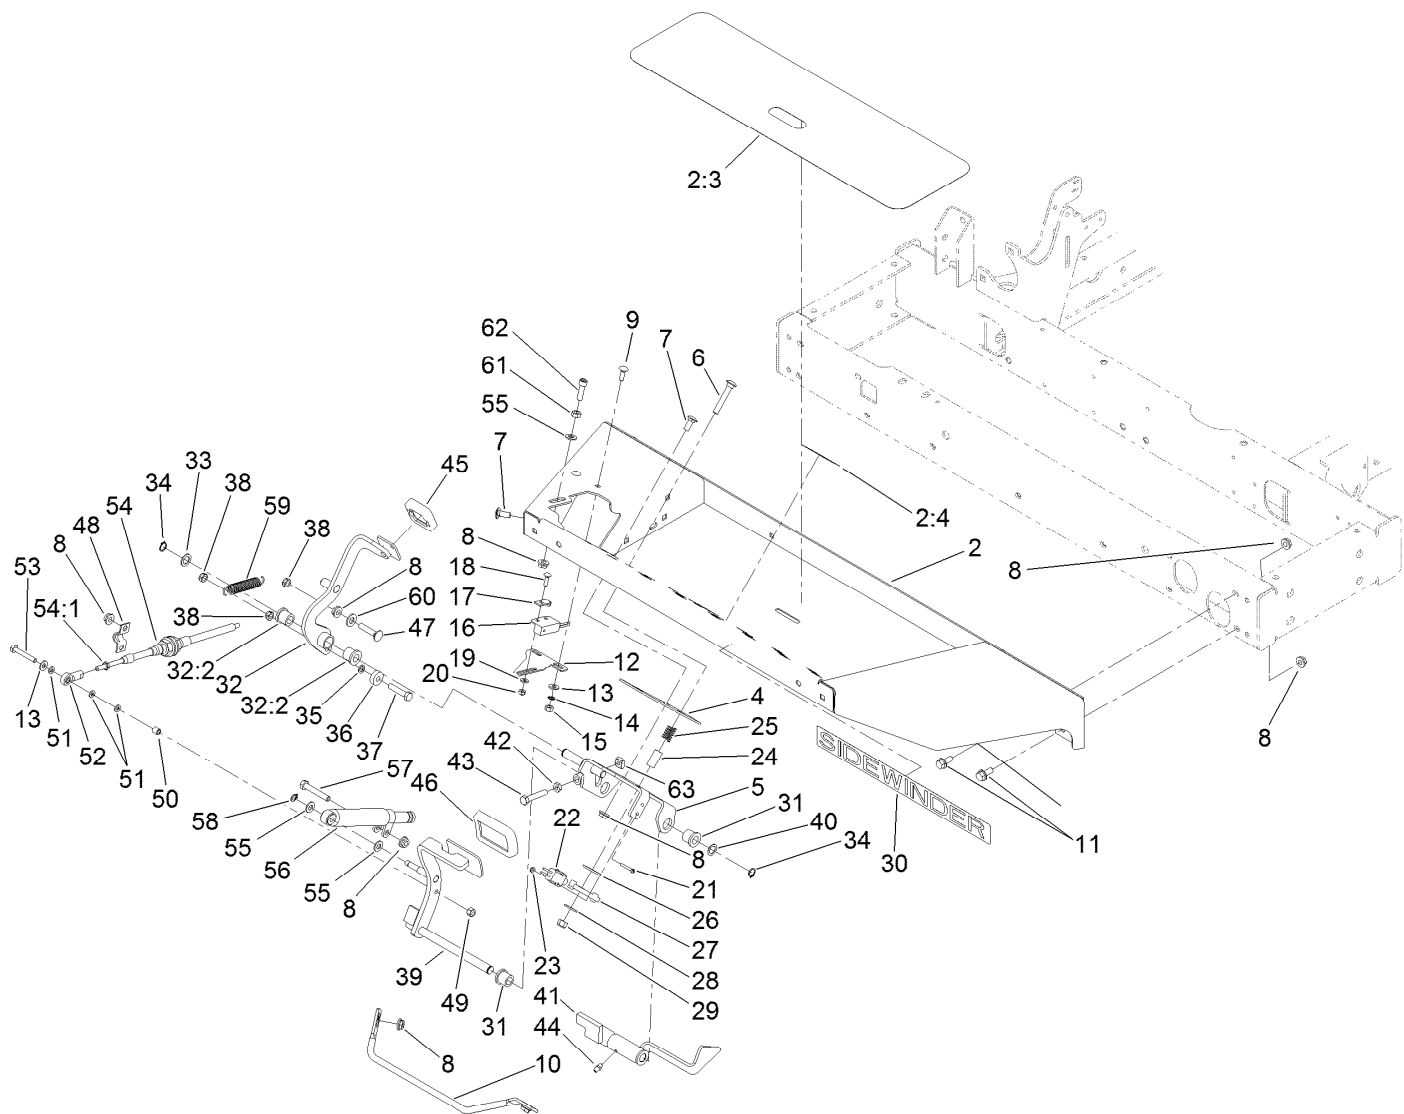


Front Platform Assembly

Ref.	Part Number	Qty.	Description
2	106-4154	1	Floorplate ASM
2:3	99-3478	1	Tread-Foot
2:4	99-3444	1	Decal-Mow / Transport
4	106-2661-0P	1	Plate-Support
5	95-8869-0P	1	Bracket-Pedal, Traction
6	3230-6	1	Bolt-CARR
7	3230-23	6	Bolt-CARR
8	32128-20	20	Nut-HF
9	3229-1	2	Screw-CARR
10	95-8893	1	Bar-Deflector
11	3234-5	10	Screw-HHF
12	100-4871	1	Bracket-Switch, Neutral
13	3256-22	3	Washer-Flat
14	3255-7	2	Washer-Lock/EXT
15	3217-5	2	Nut-Hex
16	100-1270	1	Switch-Proximity
17	100-4872	1	Plate-Switch, Neutral
18	3229-34	1	Screw-CARR

Ref.	Part Number	Qty.	Description
19	3256-14	1	Washer-Flat
20	3296-2	1	Nut-Lock, NI
21	32105-9	2	Screw-HH
22	95-8900	1	Switch
23	3296-9	2	Nut-Hex
24	95-8866	1	Tube-Arm, Rocker
25	65-9940	1	Spring
26	3256-40	1	Washer-Flat
27	99-3593	1	Arm-Rocker
28	3256-3	1	Washer-Flat
29	3296-29	1	Nut-Lock, NI
30	99-3388	1	Decal
31	256-243	2	Bearing-Flange
32	99-3379	1	Pedal-Reverse ASM
32:2	256-243	2	Bearing-Flange
33	41-8440	1	Washer
34	32151-84	2	Ring-Shaft, EXT
35	75-5470	1	Spacer-Bearing

● Not illustrated

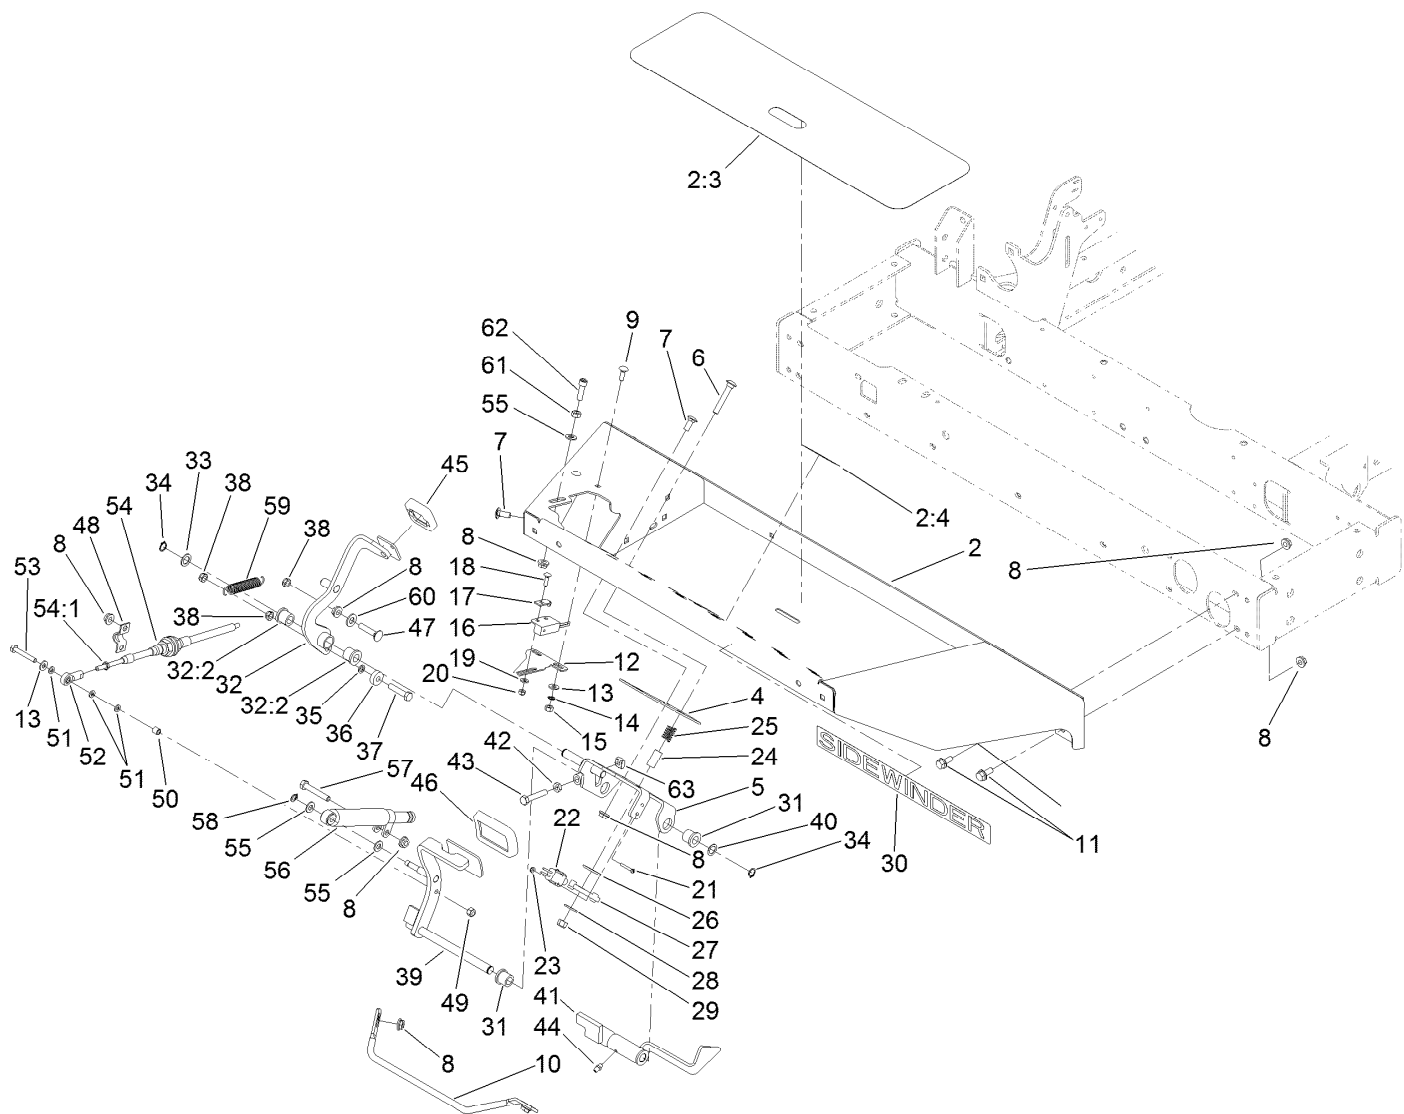


Front Platform Assembly (continued)

Ref.	Part Number	Qty.	Description
36	251-259	1	Bearing-Ball
37	322-7	1	Screw-HH
38	3296-47	3	Nut-Lock,NI
39	104-4852-03	1	Pedal-Traction
40	73-0040	1	Washer-Thrust
41	95-8861	1	Slide
42	3218-2	1	Nut-Hex Jam
43	322-41	1	Bolt-Hex,TAP
44	302-5	1	Fitting-Grease
45	74-9110	1	Pad-Pedal, Reverse
46	74-9100	1	Pad-Pedal, Forward
47	3230-27	1	Screw-CARR
48	93-2092	1	Clamp-Cable
49	3296-42	1	Nut-Lock, NI
50	99-3545	1	Spacer

Ref.	Part Number	Qty.	Description
51	33093-00	3	Washer-Flat
52	2411-41	1	Rod End-Ball Joint
53	321-10	1	Screw-HH
54	100-4815	1	Cable-Control, Traction
54:1	3220-1	2	Nut-Jam
55	3256-23	3	Washer-Plain
56	76-8870	1	Damper-Lever
57	322-10	1	Screw-HH
58	32151-3	1	Ring-Grip
59	99-3476	1	Spring-Extension
60	3256-24	1	Washer-Plain
61	3217-6	1	Nut-Hex
62	3274-22	1	Screw-HSH
63	99-3565	1	Nut-Square
99	3290-378	4	Tie-Cable ●

● Not illustrated

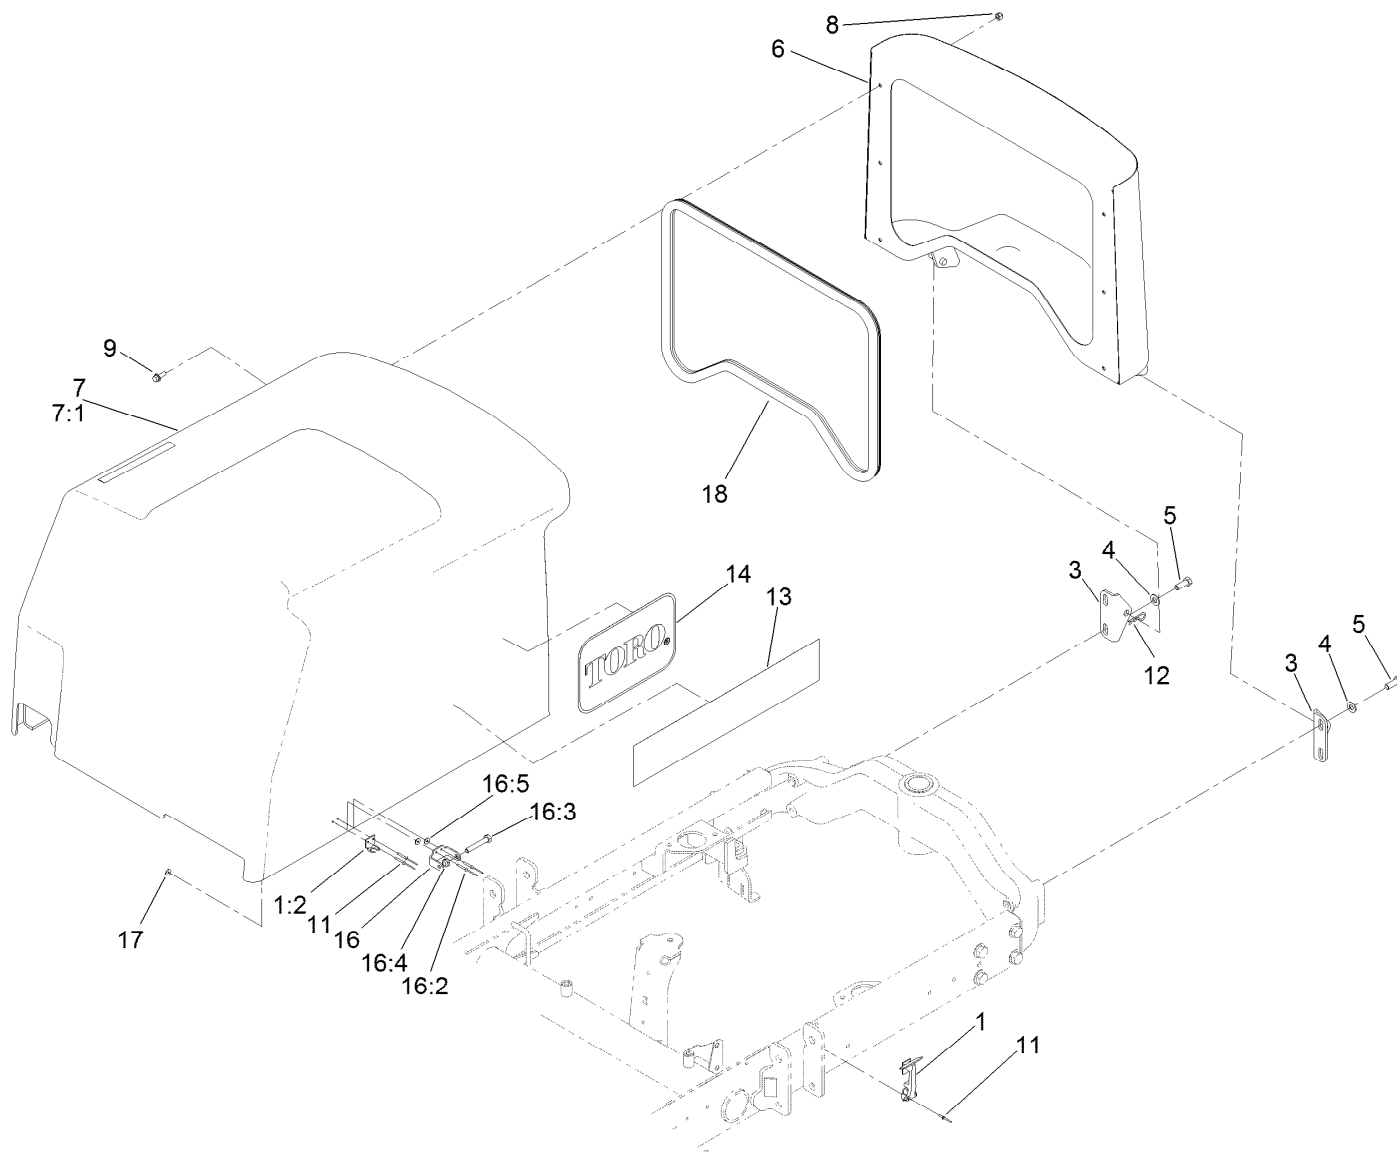


Hood Assembly

Ref.	Part Number	Qty.	Description
1	59-9740	2	Flex Draw Latch ASM
1:2	249-40	1	Keeper
3	95-8728	2	Bracket-Pivot, Hood
4	3256-24	4	Washer-Plain
5	323-6	4	Screw-HH
6	95-8724-03	1	Screen-Hood
7	121-3633	1	Hood ASM
7:1		1	Hood ■
7:1:1	106-8114	1	Heat Tape Repair Kit ●
8	3296-42	6	Nut-Lock, NI
9	3234-4	6	Screw-HHF

Ref.	Part Number	Qty.	Description
11	107-0333	4	Rivet-Pop
12	3290-467	1	Pin-Hair
13	104-5153	2	Decal-Hood
14	66-6140	2	Decal
16	119-2004	1	CE Latch Kit
16:2	107-0333	2	Rivet-Pop
16:3	322-10	1	Screw-HH
16:4	3296-47	1	Nut-Lock, NI
16:5	3269-10	2	Washer-Back
17	3269-10	4	Washer-Back
18	95-8809	1	Trim-Seal

● Not illustrated


■ Not serviced separately

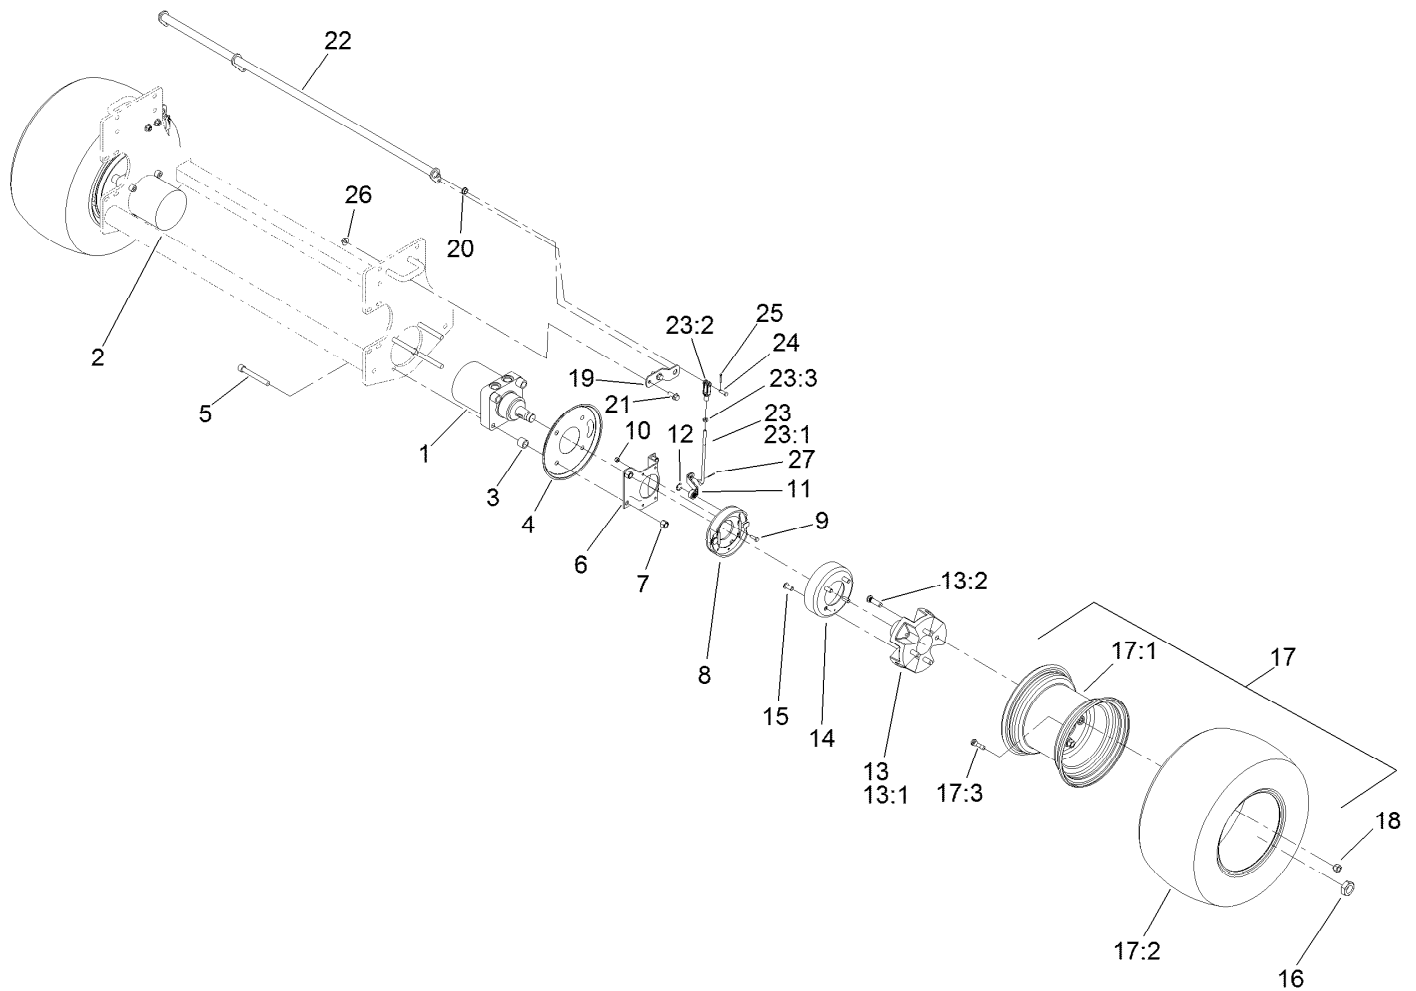

Hydraulic Drive and Wheel Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	110-8785	1	HYD Motor ASM (CCW)	17		2	Tire And Rim ASM ●
2	110-8786	1	HYD Motor ASM (CW)	17:1	121-3548	1	Rim
3	119-8238	8	Spacer-Deck Pulley	17:2	117-5125	1	Tire
4	104-0485-0P	2	Shield-Wheel	17:3	232-27	1	Stem-Valve
5	3274-99	8	Screw-HSH	18	242-50	8	Nut-Lug
6	84-2000-0P	2	Bracket-Brake	19	95-8683	2	Bracket-Pivot, Brake
7	3296-23	8	Nut-Lock, NI	20	256-156	2	Bushing-Flange
8	104-7705	2	Brake ASM	21	3234-11	4	Screw-HHF
9	321-5	8	Screw-HH	22	104-4625-03	1	Shaft-Pivot, Brake
10	3296-42	8	Nut-Lock, NI	23	115-6672	2	Brake Lever ASM
11	114-2726	2	Lever-Brake	23:1	104-4627	1	Rod-Adjusting
12	104-7706	2	E-Ring, Bowed	23:2	1-303105	1	Yoke-Adjustable
13		2	Wheel Hub/Stud ASM ●	23:3	3220-2	1	Nut-Jam
13:1	104-0462	1	Hub-Wheel, Spacer	24	283-1	2	Pin-Clevis
13:2	10-6830	4	Stud-Type, Drive	25	3272-10	2	Pin-Cotter
14	104-4809	2	Drum-Brake	26	32128-43	4	Nut-Flange
15	3274-105	8	Screw-HSBH	27	3272-6	2	Pin-Cotter
16	26-3790	2	Nut-Lock				


● Not serviced separately

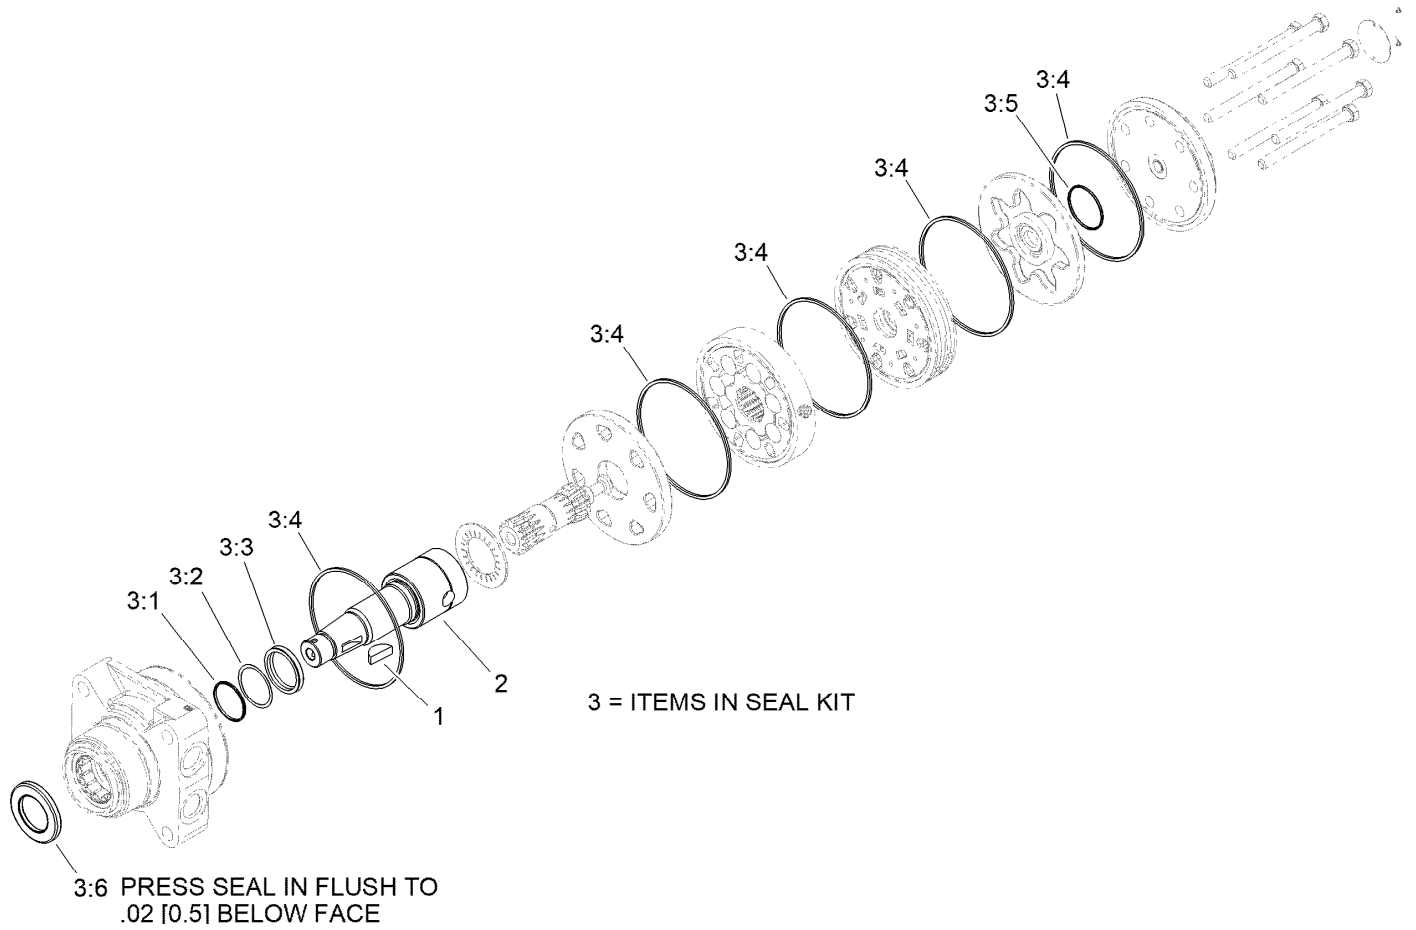

Hydraulic Motor Assembly No. 110-8786

Ref.	Part Number	Qty.	Description
1	3257-42	1	Key-Woodruff
2	99-3090	1	Shaft-Coupling
3	100-6131	1	Seal Kit
3:1		1	Ring-Back Up ●
3:2		1	Washer-Back Up ●
3:3		1	Seal-Shaft ●
3:4		5	Seal-Ring ●
3:5		1	Seal-Commutator ●
3:6		1	Seal-Dirt And Water ●


● Not serviced separately

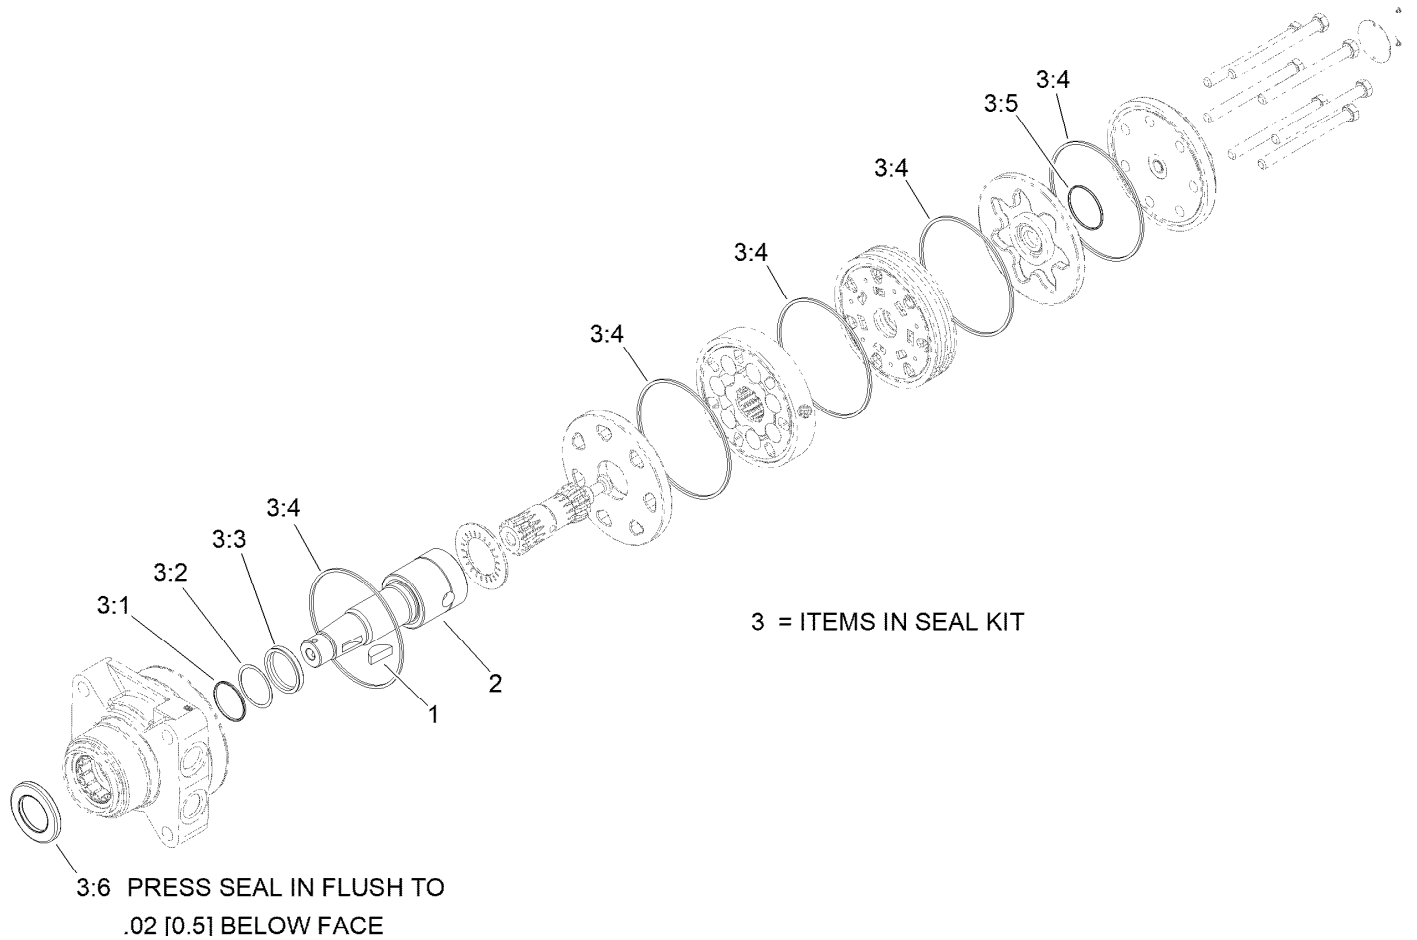

Hydraulic Motor Assembly No. 110-8785


Ref.	Part Number	Qty.	Description
1	3257-42	1	Key-Woodruff
2	99-3090	1	Shaft-Coupling
3	100-6131	1	Seal Kit
3:1		1	Ring-Back Up ●
3:2		1	Washer-Back Up ●
3:3		1	Seal-Shaft ●
3:4		5	Seal-Ring ●
3:5		1	Seal-Commutator ●
3:6		1	Seal-Dirt And Water ●

● Not serviced separately

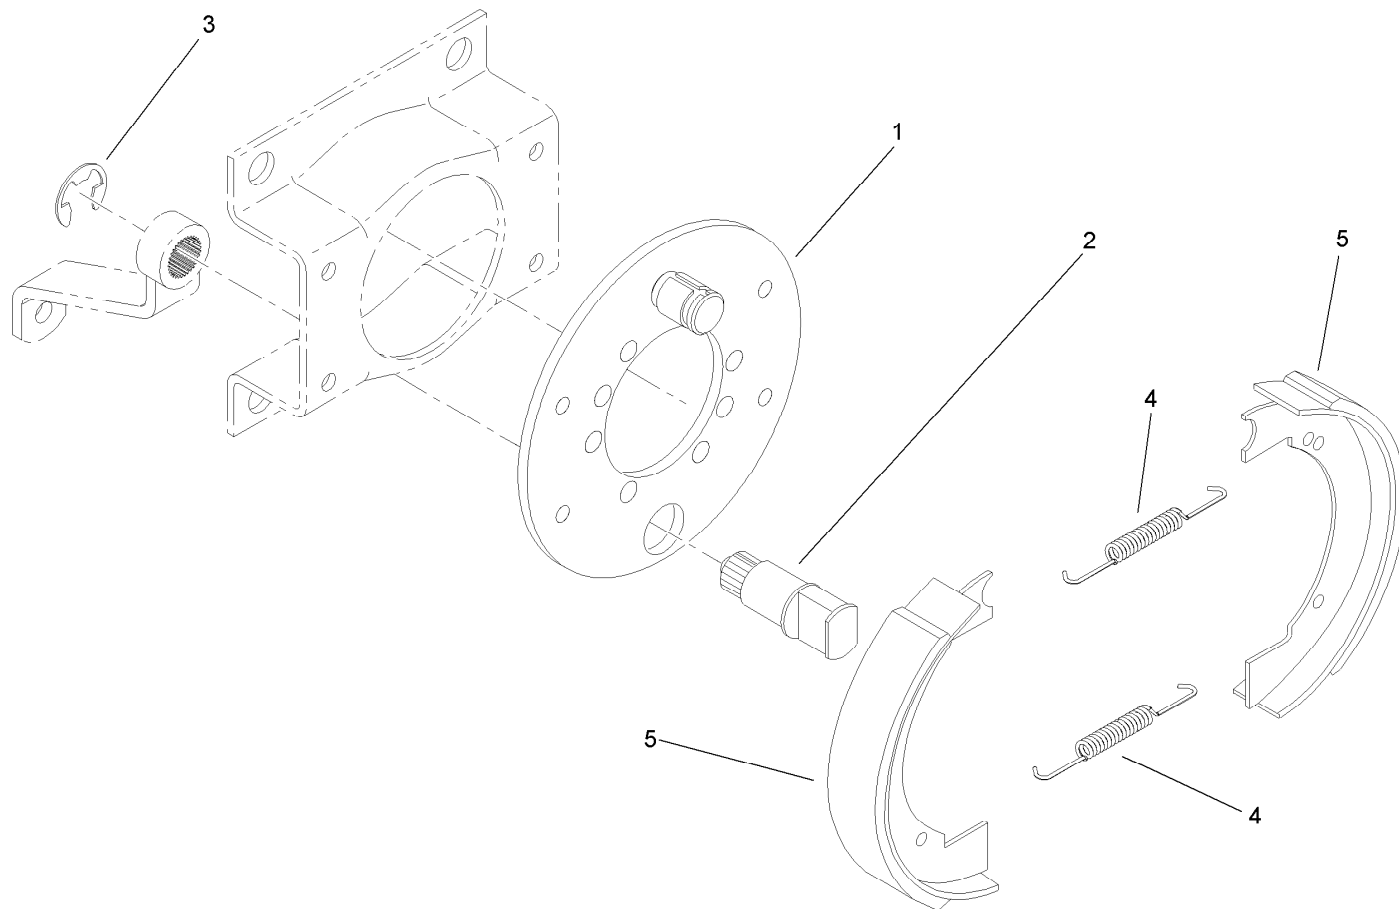

Brake Assembly No. 104-7705

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	70-9870	1	Plate-Backing
2	104-7707	1	Shaft-Cam, Brake
3	104-7706	1	E-Ring, Bowed
4	70-9880	2	Spring-Return
5	70-9840	2	Shoe-Brake

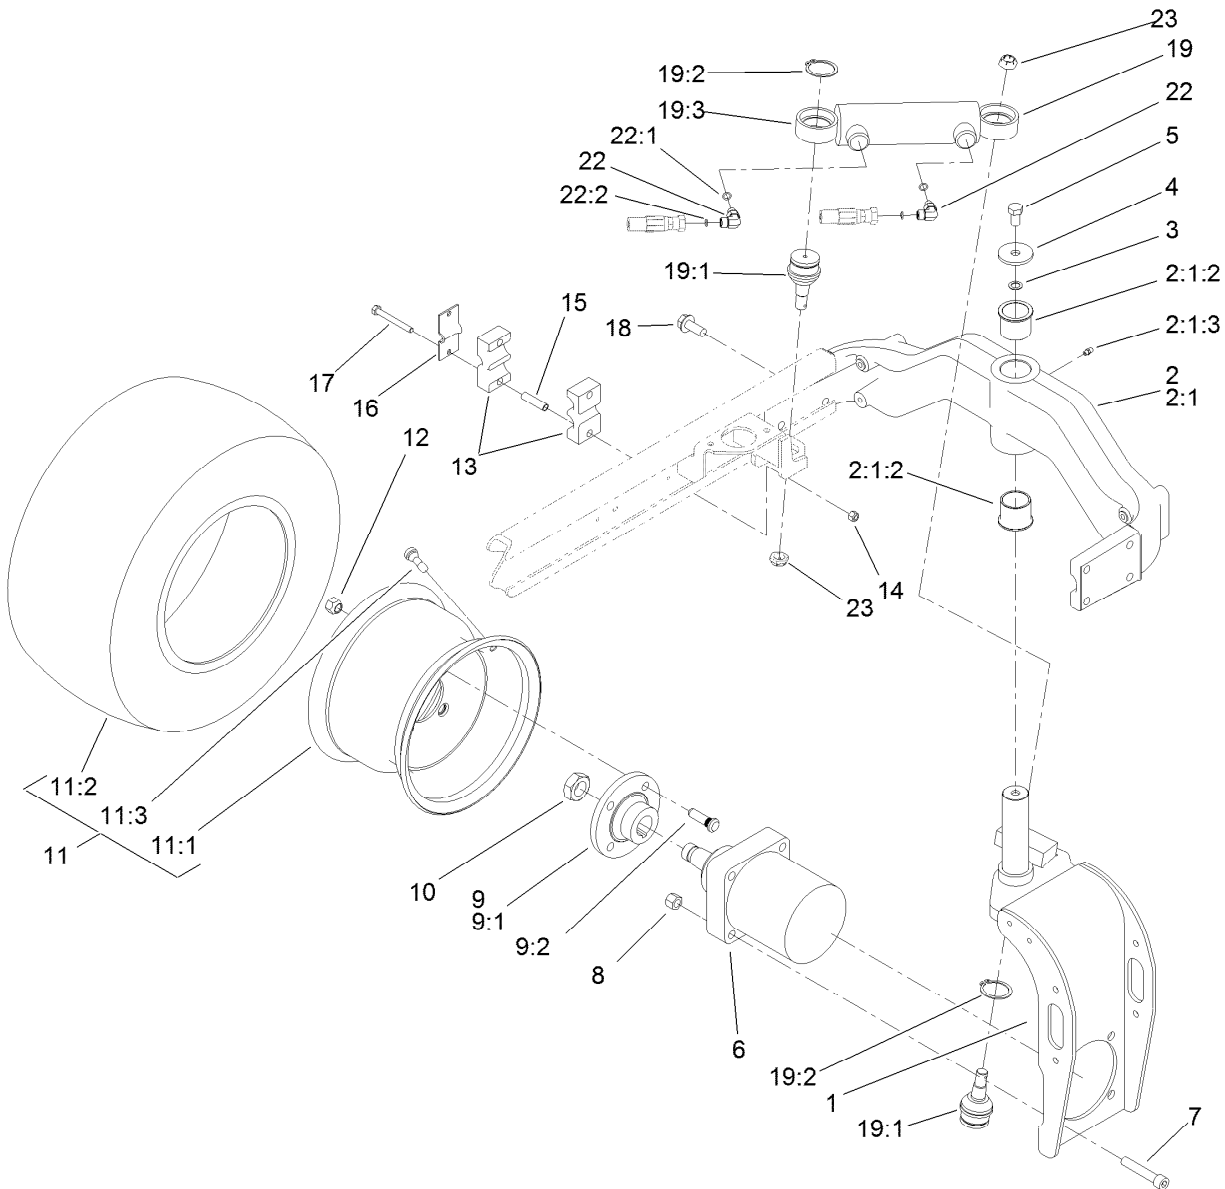


Rear Fork and Tire Assembly

Ref.	Part Number	Qty.	Description
1	95-8905-01	1	Fork-Rear
2	107-7828-03	1	Casting-Rear
2:1		1	Rear Casting ASM ●
2:1:2	95-8805	2	Bushing
2:1:3	302-5	1	Fitting-Grease
3	3255-2	1	Washer-Lock, EXT
4	75-7730	1	Washer-Thrust
5	325-3	1	Screw-HH
6	95-8694	1	HYD Motor ASM
7	3274-93	4	Screw-HSH
8	3296-23	4	Nut-Lock, NI
9	18-3209	1	Wheel Hub/Stud ASM
9:1	10-6870-03	1	Hub-Wheel
9:2	10-6830	4	Stud-Type, Drive
10	26-3790	1	Nut-Lock
11		1	Wheel And Tire ASM ●
11:1	117-5129	1	Rim

Ref.	Part Number	Qty.	Description
11:2	115-1572	1	Tire
11:3	232-27	1	Stem-Valve
12	242-50	4	Nut-Lug
13	82-8170	2	Clamp
14	3296-29	2	Nut-Lock, NI
15	93-7960	2	Spacer
16	93-7961	1	Clamp-Drain, Case
17	322-13	2	Screw-HH
18	3234-38	8	Screw-HHF
19		1	Steering Cylinder ASM ●
19:1	121-3605	2	Ball Joint
19:2	32151-104	2	Ring-Retaining, External
19:3	121-3653	1	Cylinder-HYD
22	340-132	2	Fitting-Elbow, 90 DEG
22:1	237-78	1	O-Ring
22:2	237-21	1	O-Ring
23	121-3611	2	Nut-Hex, Flextop


● Not serviced separately

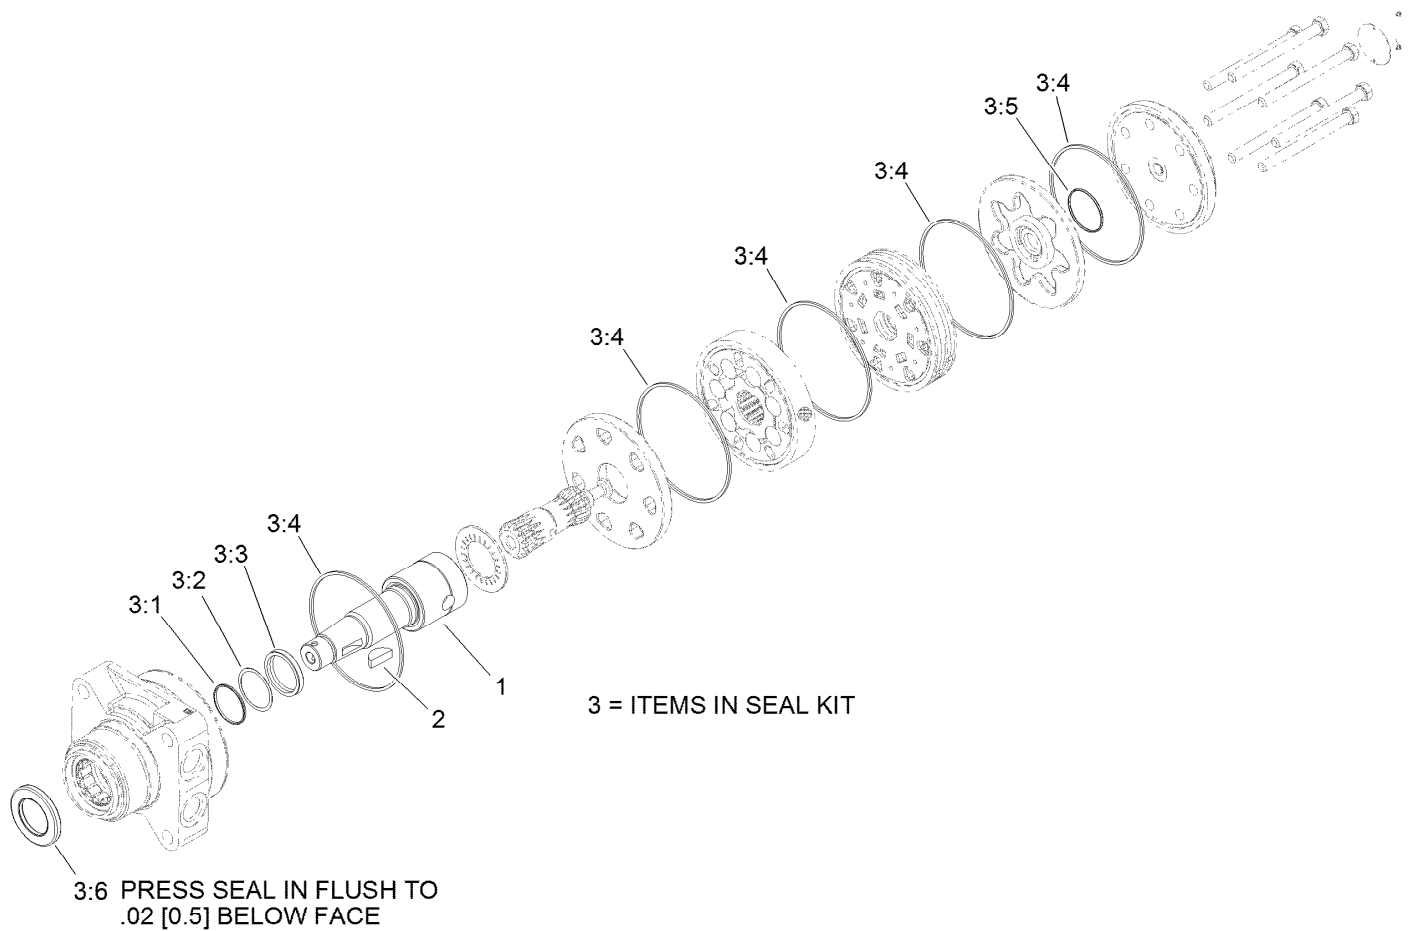

Hydraulic Motor Assembly No. 95-8694

Ref.	Part Number	Qty.	Description
1	99-3090	1	Shaft-Coupling
2	3257-42	1	Key-Woodruff
3	100-6131	1	Seal Kit
3:1		1	Ring-Back Up ●
3:2		1	Washer-Back Up ●
3:3		1	Seal-Shaft ●
3:4		5	Seal-Ring ●
3:5		1	Seal-Commutator ●
3:6		1	Seal-Dirt And Water ●


● Not serviced separately

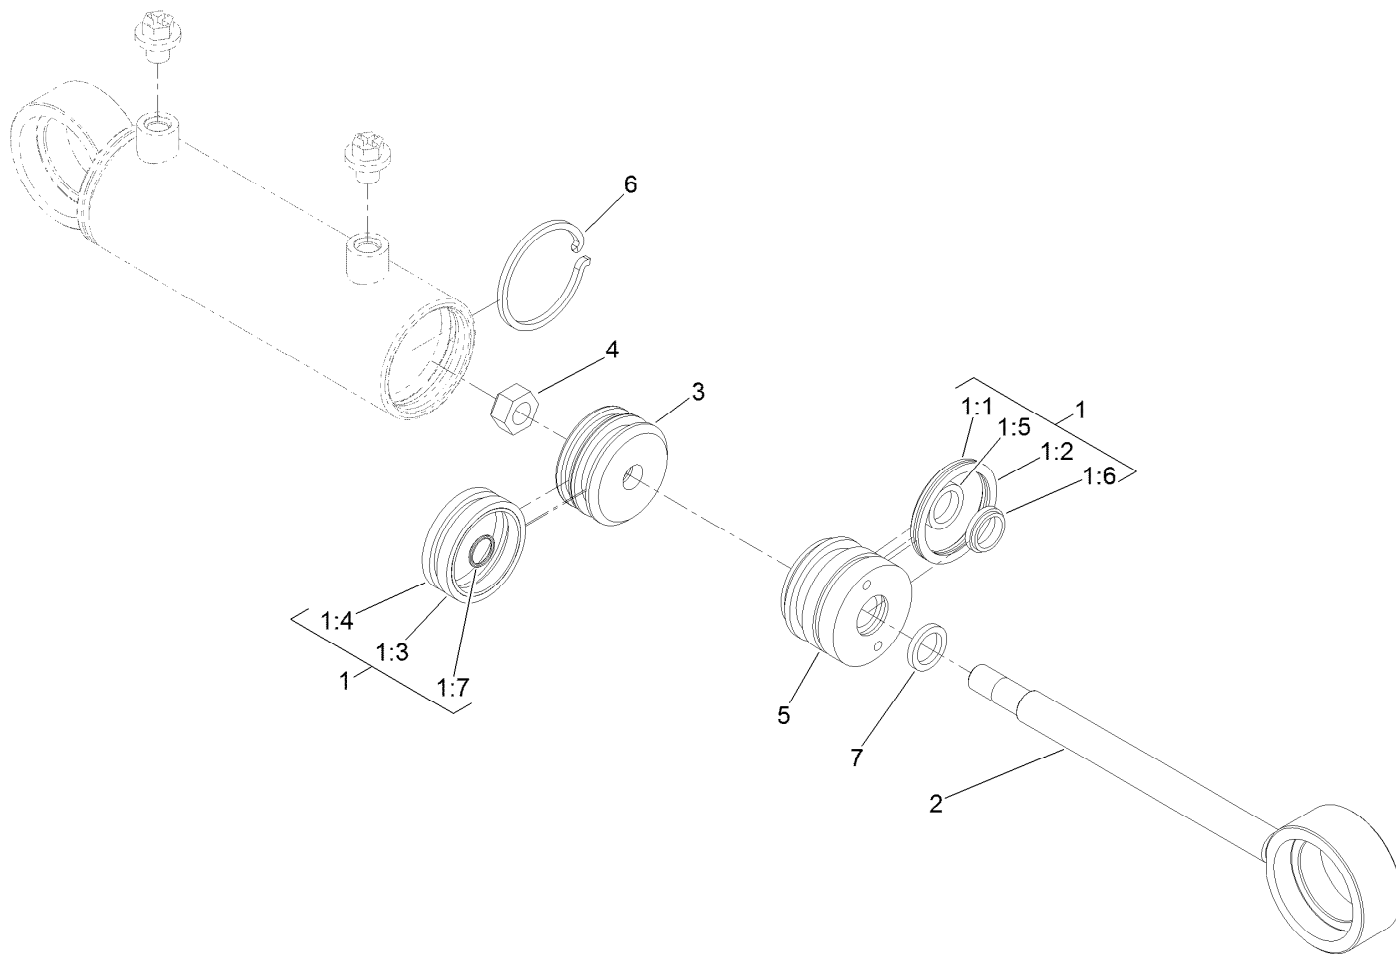

Hydraulic Cylinder Assembly No. 121-3653

Ref.	Part Number	Qty.	Description
1	136-3278	1	Seal Kit
1:1		1	O-Ring ●
1:2		1	Backup ●
1:3		1	Psp Seal ●
1:4		1	Wear Ring ●
1:5		1	Bt Seal ●
1:6		1	Dust Seal ●
1:7		1	O-Ring ●
2		1	Rod ●
3		1	Piston ●
4		1	Head ●
5		1	Lock Nut ●
6		1	Retaining Ring ●
7		1	Square O-Ring ●

● Not serviced separately

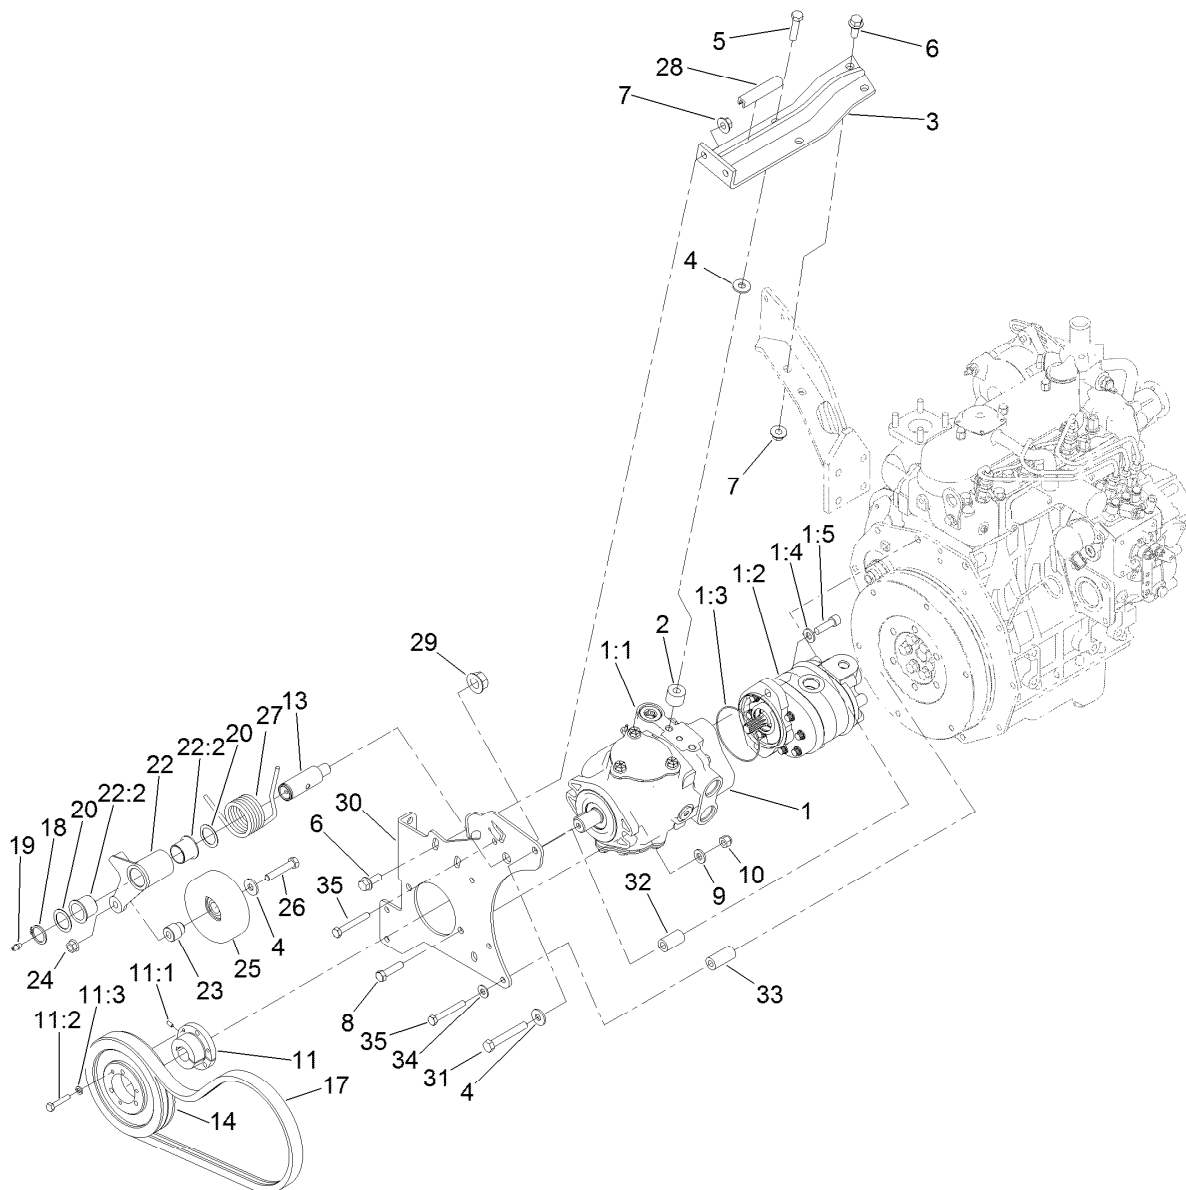


Hydrostat Assembly

Ref.	Part Number	Qty.	Description
1		1	Tandem Pump ASM ●
1:1	104-4890	1	Piston Pump ASM
1:2	95-8601	1	Gear Pump ASM
1:3	60-3520	1	O-Ring
1:4	3256-24	2	Washer-Plain
1:5	3274-1	2	Screw-HSH
2	99-3440	2	Spacer
3	99-3436-0P	1	Support-Pump
4	80-6990	4	Washer-Hardened
5	323-19	2	Screw-HH
6	3234-11	4	Screw-HHF
7	32128-43	4	Nut-Flange
8	323-8	2	Screw-HH
9	100-4852	2	Washer-Hardened
10	3296-39	2	Nut-Lock, NI
11	93-6842	1	Bushing-Lock, Taper
11:1	3245-36	1	Screw-Set, HSH
11:2	321-13	3	Screw-HH

Ref.	Part Number	Qty.	Description
11:3	3253-3	3	Washer-Lock
13	99-3529	1	Shaft-Pivot, Idler
14	93-6841	1	Pulley
17	95-8730	1	V-Belt
18	32151-36	1	Ring-Retaining
19	302-5	1	Fitting-Grease
20	74-1810	2	Washer
22	137-1653	1	Idler Arm ASM
22:2	126-1963	2	Bushing-Pivot
23	95-8806	1	Spacer
24	32128-21	1	Nut-HF Lock
25	95-8802	1	Pulley-Idler
26	323-10	1	Screw-HH
27	95-8917	1	Spring-Torsion
28	70-2041	1	Trim - Edge
29	32128-54	1	Nut-HF
30	95-8933-0P	1	Plate - Pump Mount *b
31	42-9370	1	Screw-HH

● Not serviced separately

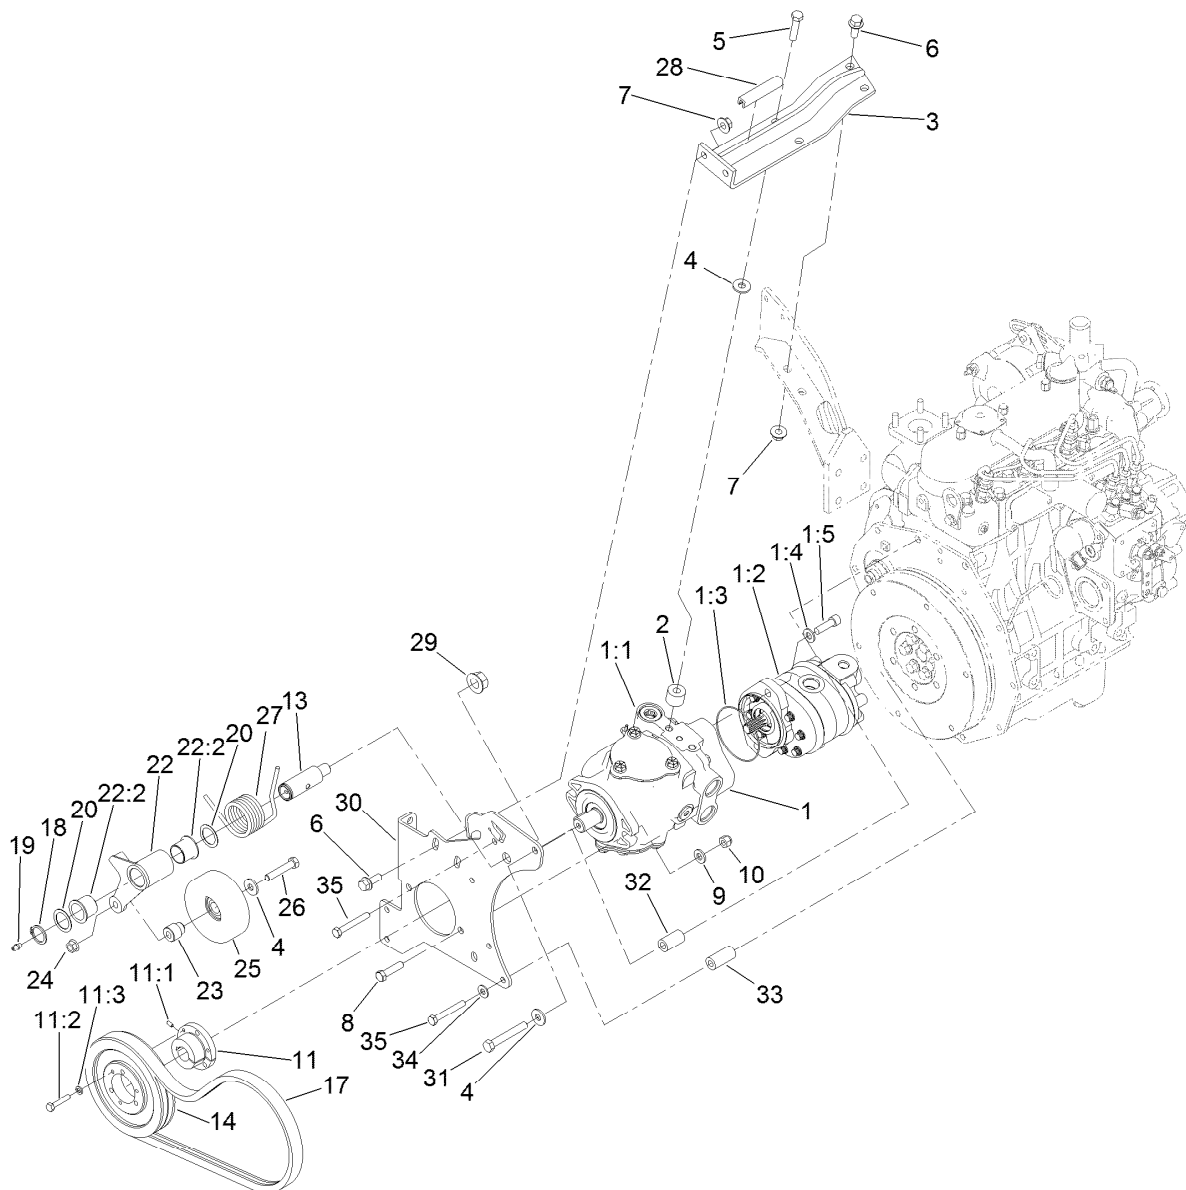


Hydrostat Assembly (continued)

Ref.	Part Number	Qty.	Description
32	95-8736	1	Spacer
33	95-8941	4	Spacer-Mount, Pump

Ref.	Part Number	Qty.	Description
34	87-8640	3	Washer-Flat
35	33114-060	4	Screw-HH

● Not serviced separately

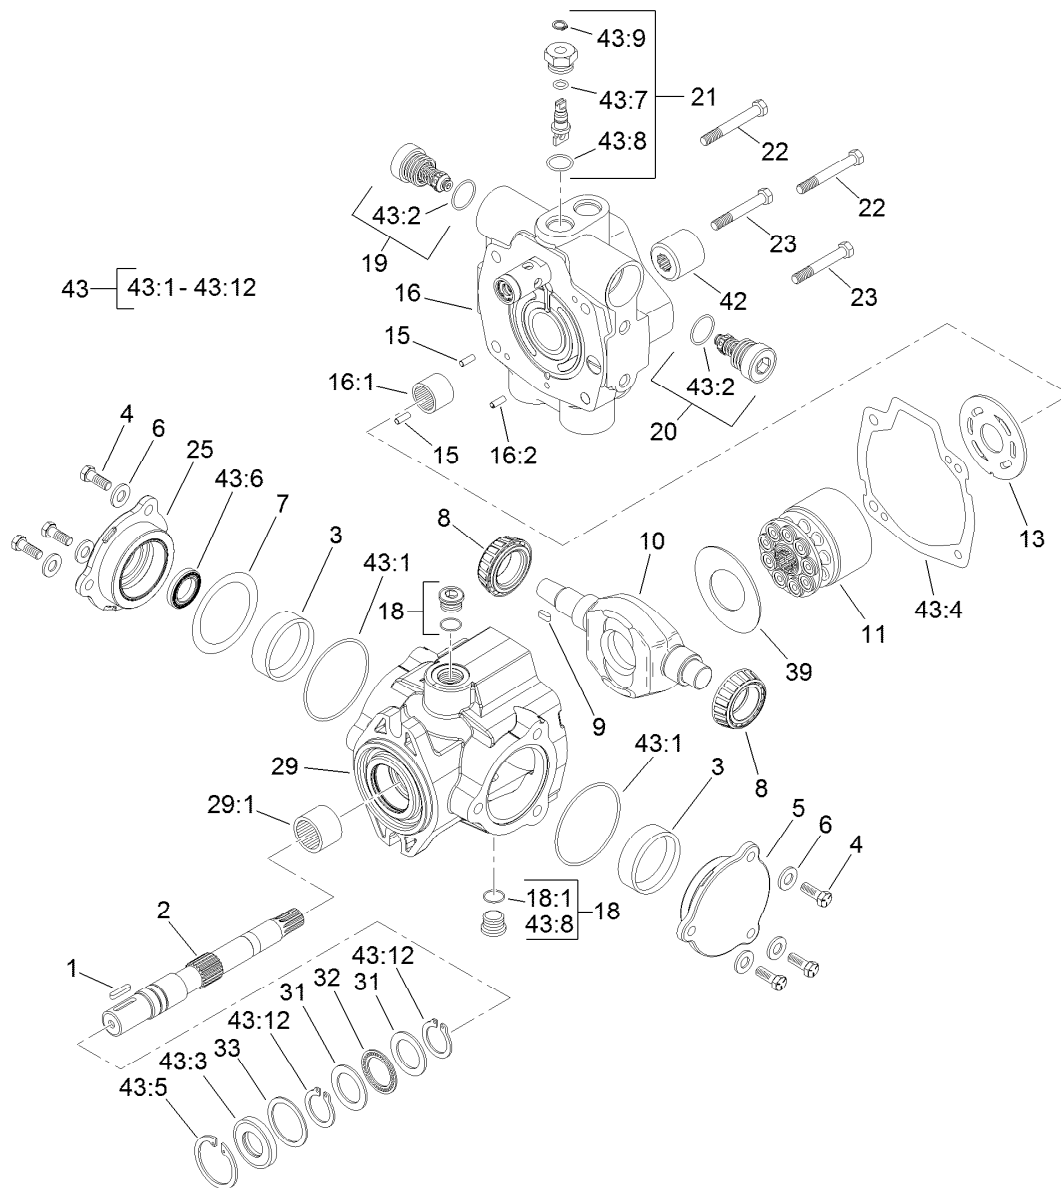


Hydraulic Pump Assembly No. 104-4890

Ref.	Part Number	Qty.	Description
1	94-3645	1	Key
2	94-6359	1	Shaft-Drive
3	104-4046	2	Bearing-Cup
4	98-4640	6	Screw-Cap
5	98-4644	1	Plate-Cover
6	105-9762	6	Washer
7	100-3182	2	Shim Kit
8	98-4639	2	Bearing-Cone
9	94-3646	1	Key
10	104-4888	1	Swashplate
11	76-6070	1	Rotating Kit
13	104-0429	1	Plate-Valve
15	76-6150	2	Pin-Dowel
16	105-3813	1	Endcover Sub ASM
16:1	94-6368	1	Bearing
16:2		1	Pin-Roll ■
18	74-9280	2	Plug ASM
18:1		1	O-Ring ■

Ref.	Part Number	Qty.	Description
19	104-4889	1	Relief Valve ASM
20	105-3812	1	Valve-Check
21	105-3811	1	Valve-Bypass
22	76-6170	2	Capscrew
23	76-6160	2	Capscrew
25	98-4645	1	Plate-Cover
29	100-3176	1	Housing ASM
29:1	94-6363	1	Bearing
31	252-71	2	Washer-Thrust
32	252-66	1	Bearing-Thrust
33	33-3720	1	Washer
39	98-4635	1	Insert-Plate, Cam
42	74-9040	1	Coupler
43	120-5754	1	Seal Kit
43:1		2	O-Ring ■
43:2		2	O-Ring ■
43:3		1	Seal-Shaft ■
43:4		1	Gasket ■

● Not illustrated

■ Not serviced separately

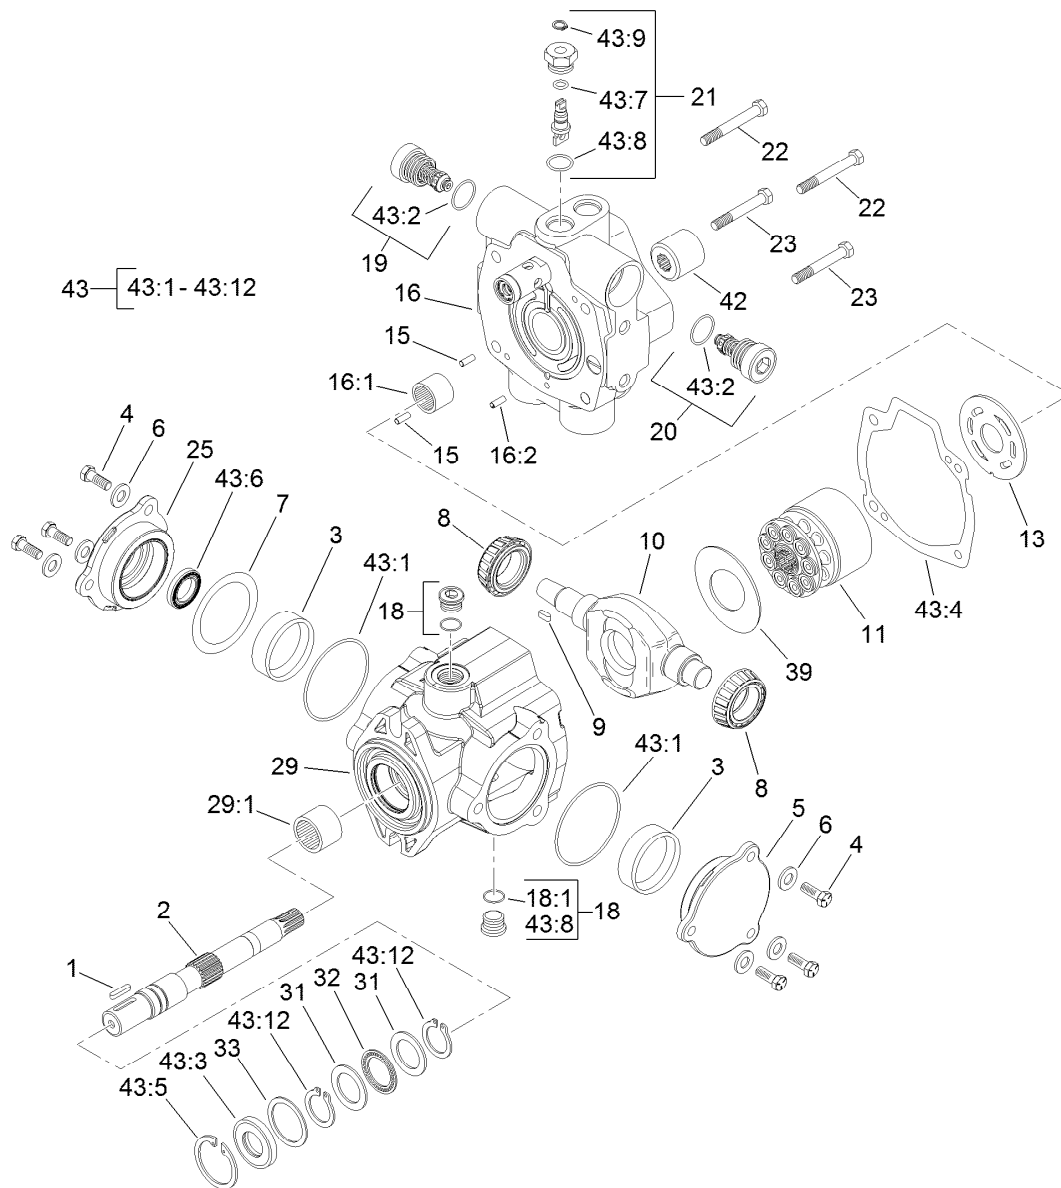


Hydraulic Pump Assembly No. 104-4890 (continued)

Ref.	Part Number	Qty.	Description
43:5		1	Ring-Retaining ■
43:6		1	Seal-Shaft ■
43:7		1	O-Ring ■
43:8		5	O-Ring ■
43:9		1	Ring-Retaining ■

Ref.	Part Number	Qty.	Description
43:10		1	O-Ring ●■
43:11		1	O Ring-Molded ●■
43:12		2	Ring-Retaining ■
43:13		1	O-Ring ■●

● Not illustrated

■ Not serviced separately

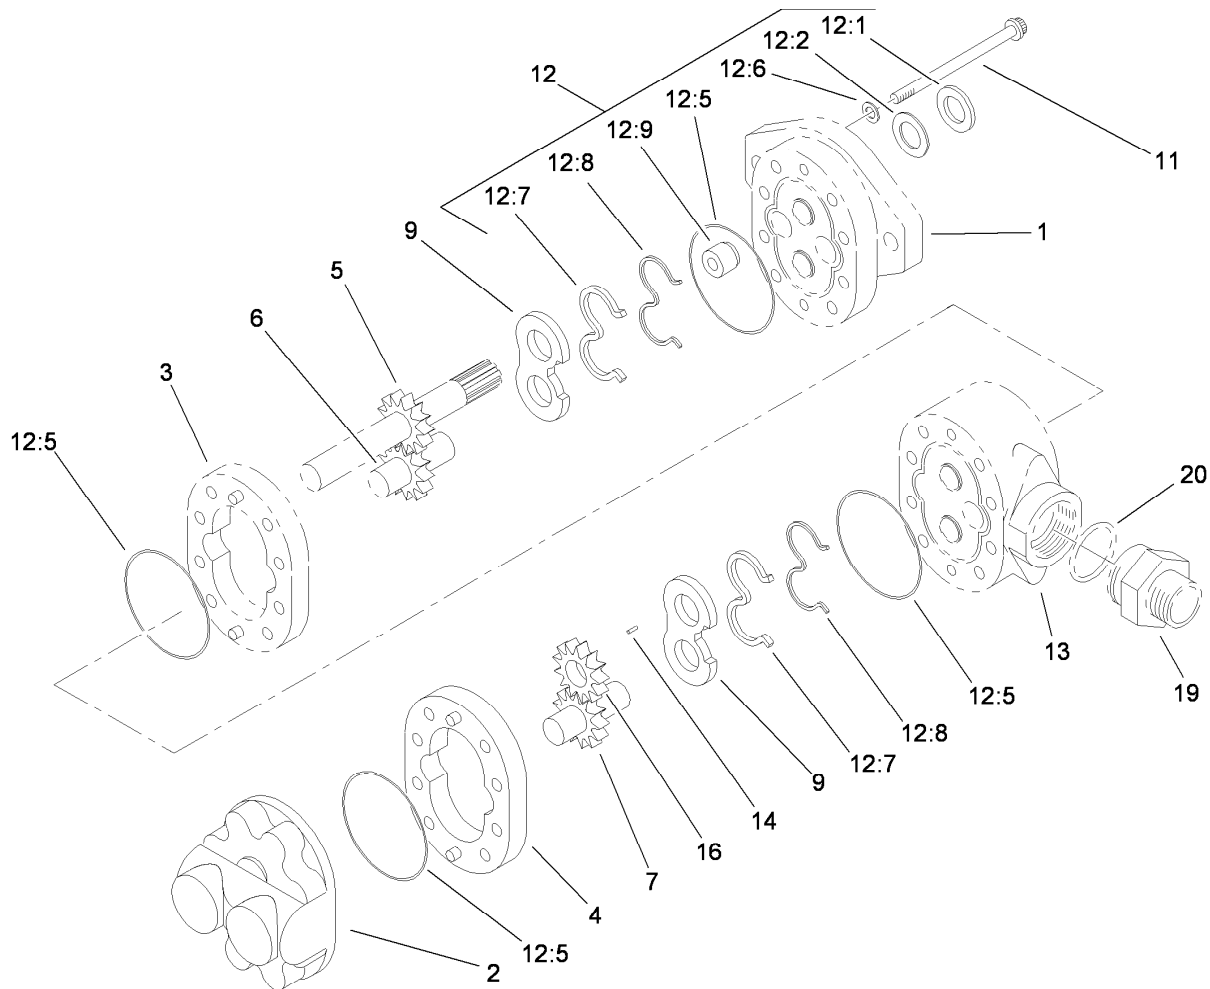


Gear Pump Assembly No. 95-8601

Ref.	Part Number	Qty.	Description
1		1	Plate-Front ■
2		1	Plate-Back ■
3		1	Body ■
4	95-4364	1	Body
5		1	Gear-Drive ■
6		1	Gear-Idler ■
7	95-4366	1	Gear-Idler
9	95-4368	2	Plate-Wear
11	94-8158	8	Screw-Cap
12	94-8161	1	Seal Repair Kit ●
12		4	O-Ring ■
12:1	49-2640	1	Seal-Shaft
12:2	60-5890	1	Washer
12:5		4	O-Ring ■
12:6	120-7576	4	Washer-Sealing
12:7	95-4369	2	Seal-Pressure
12:8	95-4368	2	Plate-Wear
12:9	94-3011	1	Plug
13		1	Plate-Adapter ■
14		1	Key ■
16	95-4373	1	Gear-Fit, Slip
19	49-2640	1	Seal-Shaft
20	60-5890	1	Washer

● Not illustrated


■ Not serviced separately

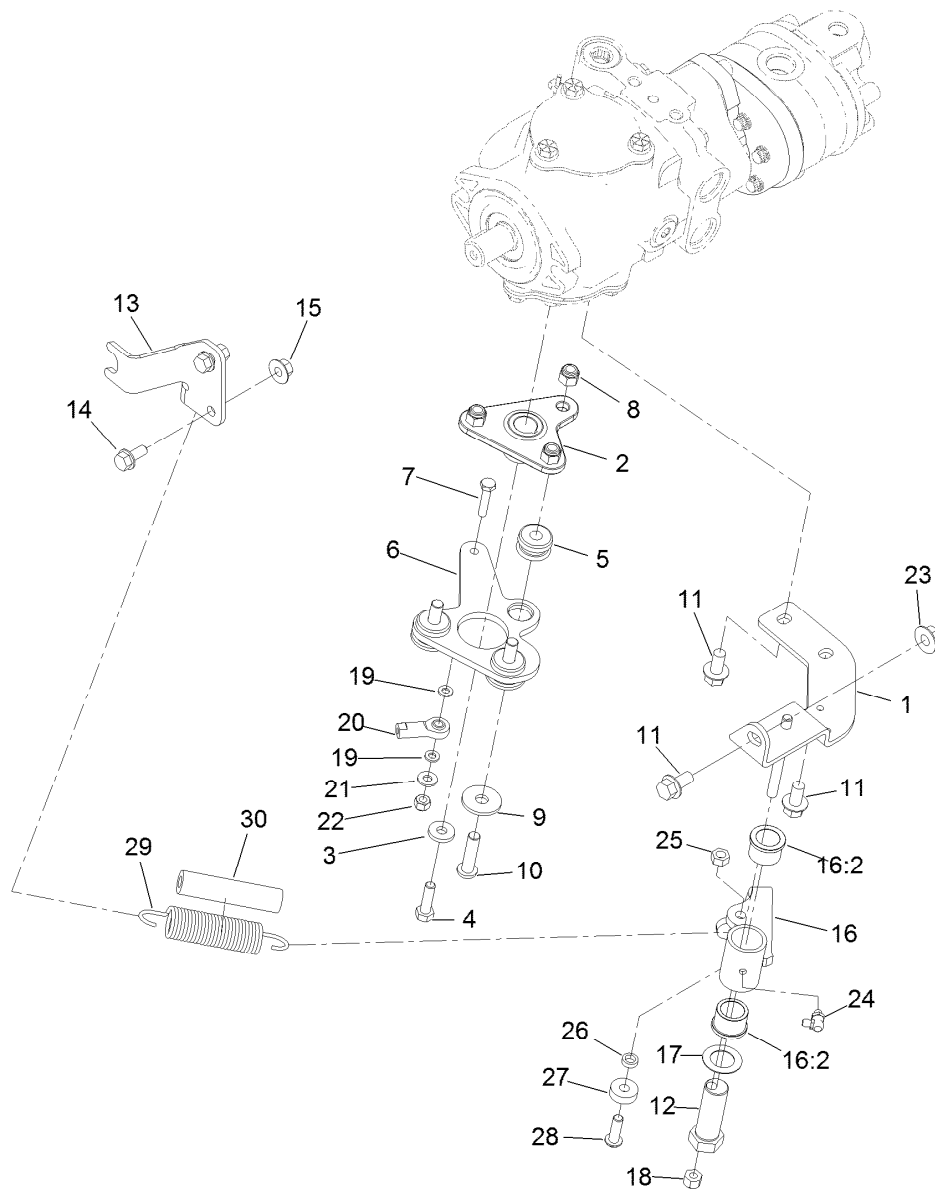

Tandem Pump Mount Assembly

Ref.	Part Number	Qty.	Description
1	95-8960-0P	1	Bracket-Neutral
2	120-5566	1	Hub
3	88-7200	1	Washer-Flat
4	3210-6	1	Screw-HH
5	63-9750	3	Mount
6	99-3594-0P	1	Lever-Pump
7	321-8	1	Screw-HH
8	3296-39	3	Nut-Lock, NI
9	2844	3	Washer
10	95-3857	3	Screw-HSBH
11	3234-1	3	Screw-HHF
12	76-8640	1	Stud-Traction
13	104-0464-03	1	Bracket-Support, Cable
14	3234-5	2	Screw-HHF
15	32128-44	2	Nut
16	104-0422	1	Neutral Arm ASM

Ref.	Part Number	Qty.	Description
16:2	256-113	2	Bushing-Flange
17	3-6498	1	Washer-Thrust
18	3296-29	1	Nut-Lock, NI
19	33093-00	2	Washer-Flat
20	2411-41	1	Rod End-Ball Joint
21	3256-22	1	Washer-Flat
22	3296-42	1	Nut-Lock, NI
23	32128-43	1	Nut-Flange
24	302-60	1	Fitting-Grease
25	32153-3	1	Nut-Hex, Side Deform
26	100-4817	1	Spacer
27	251-259	1	Bearing-Ball
28	3274-104	1	Screw-HSBH
29	94-1369	1	Spring-Extension
30	99-3556	1	Hose

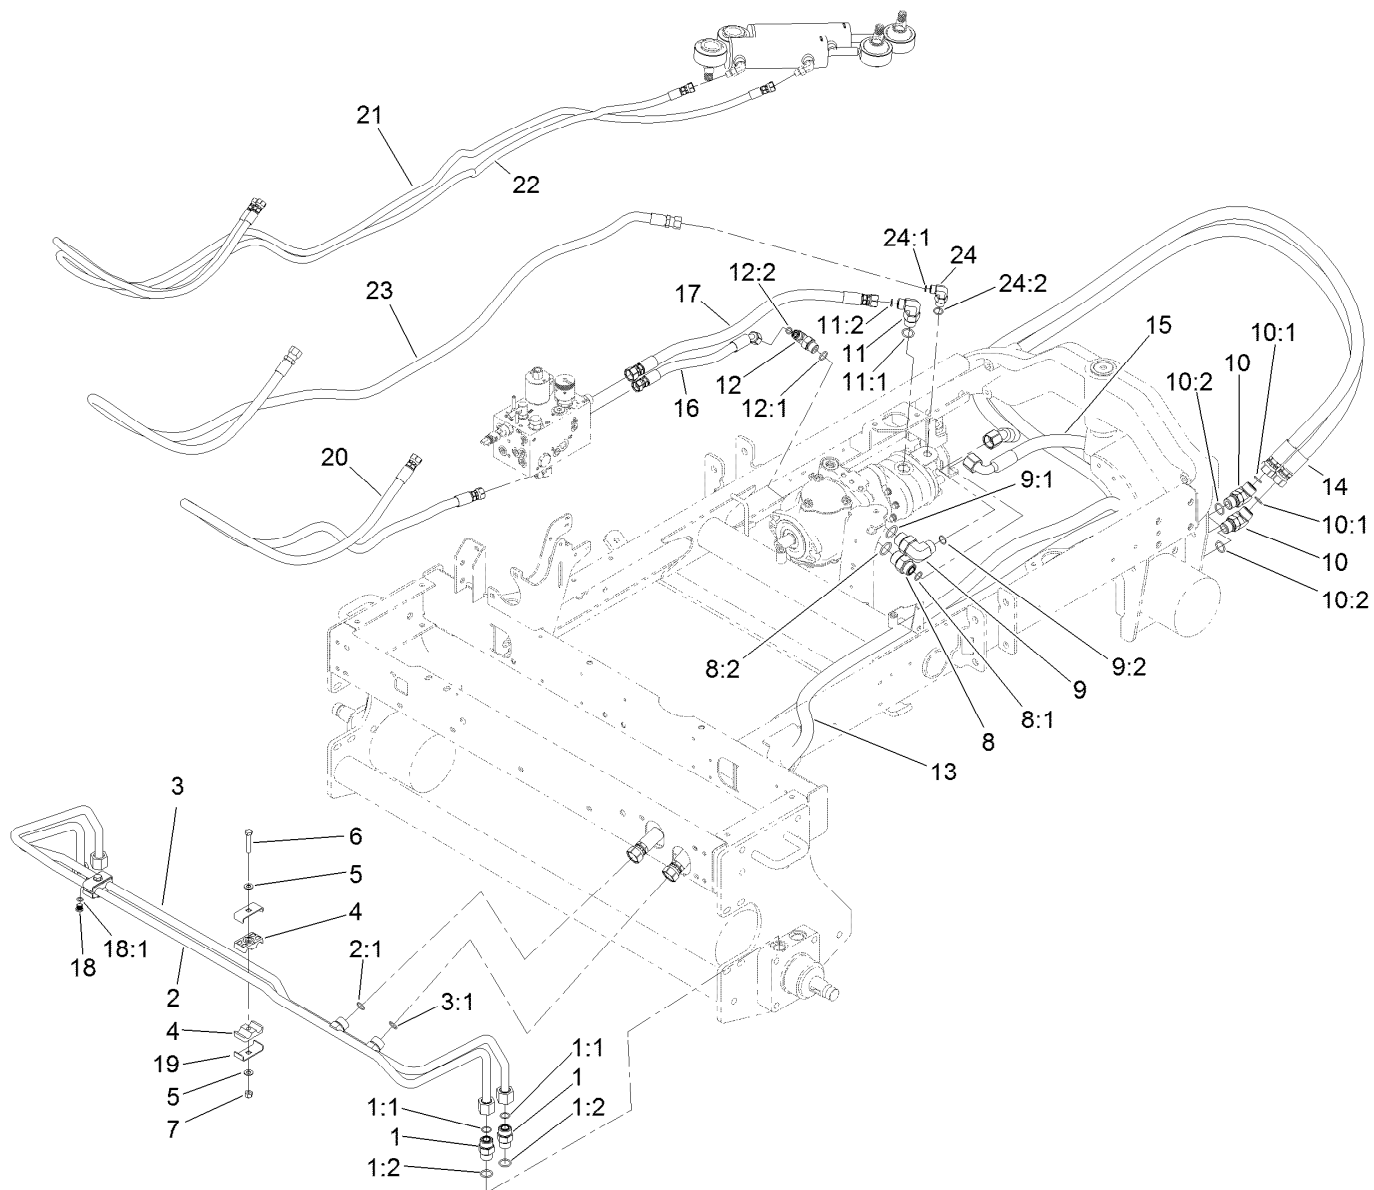


Traction and Steering Circuit Assembly

Ref.	Part Number	Qty.	Description
1	340-7	4	Fitting-Straight
1:1	237-65	1	O-Ring
1:2	237-80	1	O-Ring
2	95-8783	1	Tube ASM
2:1	237-65	1	O-Ring
3	95-8784	1	Tube ASM
3:1	237-65	1	O-Ring
4	56-7971	4	Clamp-Tube
5	3256-23	4	Washer-Plain
6	322-9	2	Screw-HH
7	3296-29	2	Nut-Lock, NI
8	340-8	1	Fitting-Straight
8:1	237-65	1	O-Ring
8:2	237-81	1	O-Ring
9	340-139	1	Fitting-Elbow 90
9:1	237-81	1	O-Ring
9:2	237-65	1	O-Ring
10	340-14	2	Fitting-HYD, 45 DEG

Ref.	Part Number	Qty.	Description
10:1	237-65	1	O-Ring
10:2	237-80	1	O-Ring
11	340-105	1	Fitting-Elbow, 90 DEG
11:1	237-80	1	O-Ring
11:2	237-30	1	O-Ring
12	340-18	1	Fitting-HYD, 90 DEG
12:1	237-79	1	O-Ring
12:2	237-22	1	O-Ring
13	105-1221	1	Hose ASM
14	105-1222	1	Hose ASM
15	105-1214	1	Hose-HYD
16	106-4197	1	Hose ASM
17	95-8829	1	Hose ASM
18	353-990	1	Plug ASM
18:1	237-78	1	O-Ring
19	119-1419	4	Plate-Clamp
20	95-8842	1	Hose-HYD
21	95-8845	1	Hose ASM

● Not illustrated

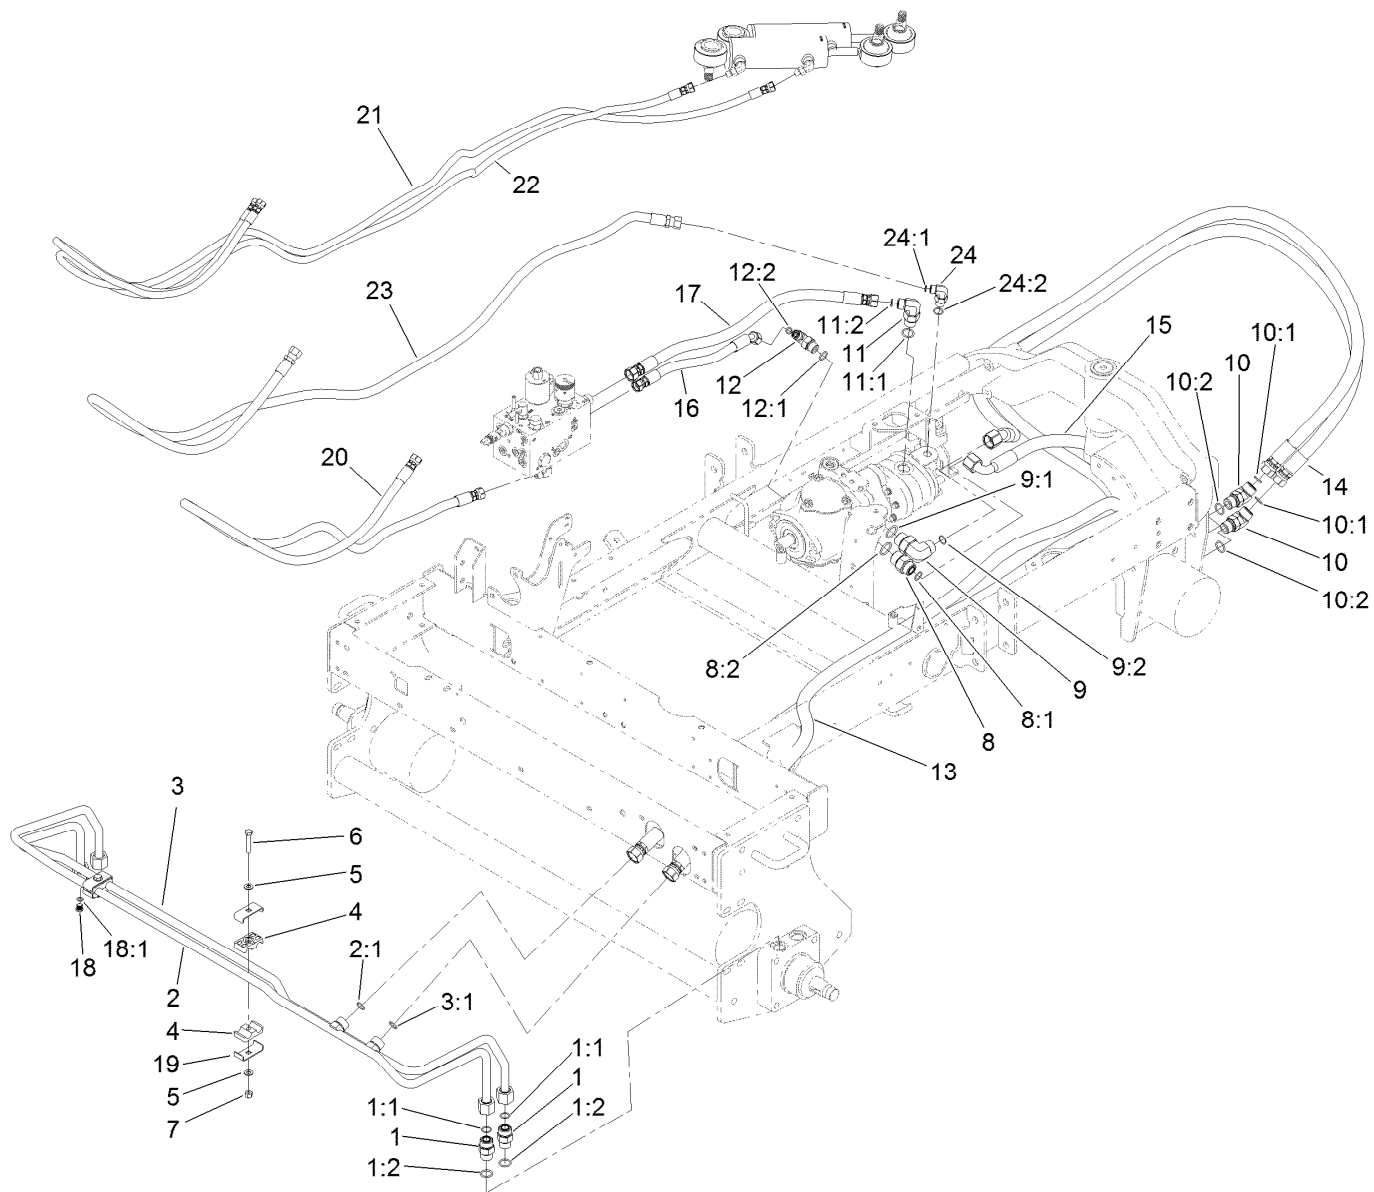


Traction and Steering Circuit Assembly (continued)

Ref.	Part Number	Qty.	Description
22	95-8844	1	Hose ASM
23	95-8846	1	Hose-HYD
24	340-77	1	Fitting-Elbow, 90 DEG

Ref.	Part Number	Qty.	Description
24:1	237-22	1	O-Ring
24:2	237-42	1	O-Ring
99	3290-378	2	Tie-Cable ●

● Not illustrated

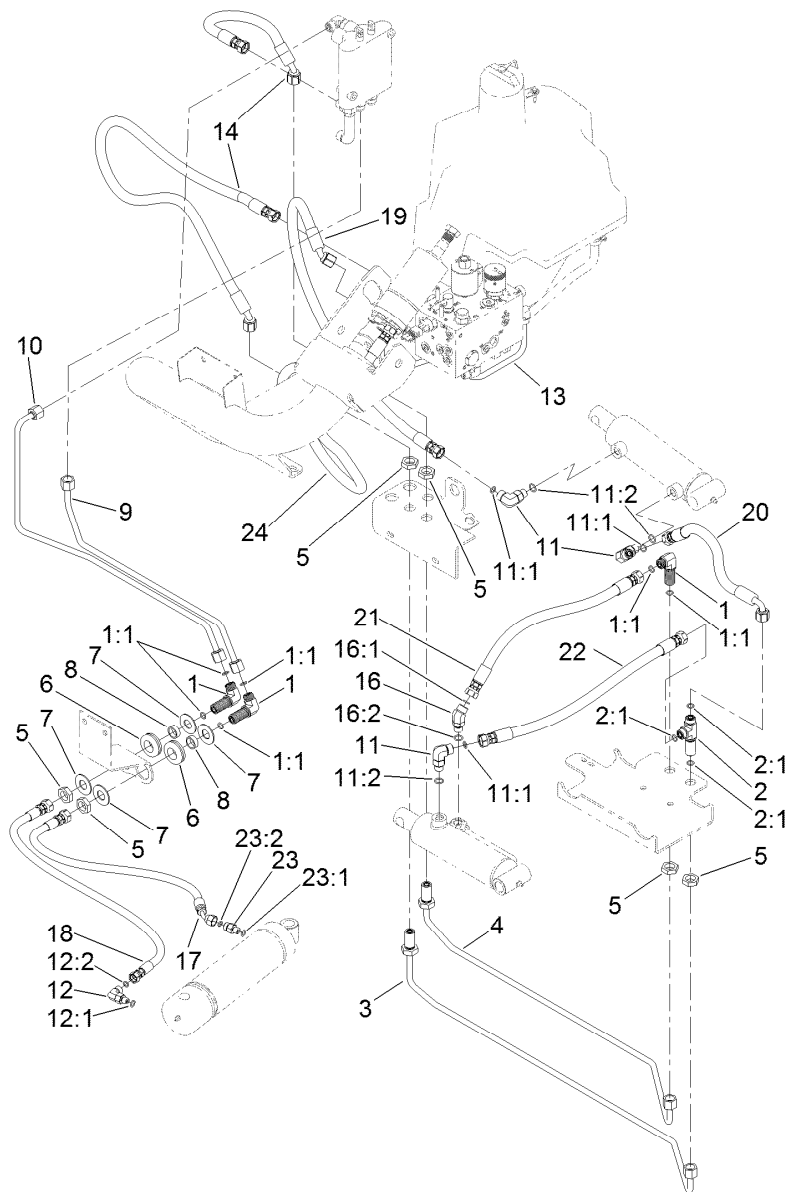


Lift Circuit Assembly

Ref.	Part Number	Qty.	Description
1	340-154	3	Union-Bulkhead
1:1	237-22	2	O-Ring
2	340-68	1	Fitting-Tee, Bulkhead
2:1	237-22	3	O-Ring
3	95-8984	1	Tube-HYD
4	95-8983	1	Tube-HYD
5	340-70	6	Nut-Lock
6	240-4	2	Grommet-Rubber
7	69-8940	4	Washer
8	69-8970	2	Spacer
9	95-8791	1	Tube-HYD
10	95-8790	1	Tube-HYD
11	340-77	3	Fitting-Elbow, 90 DEG
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring
12	340-132	1	Fitting-Elbow, 90 DEG
12:1	237-78	1	O-Ring

Ref.	Part Number	Qty.	Description
12:2	237-21	1	O-Ring
13	95-8792	1	Tube ASM
14	95-8822	2	Hose-HYD
16	340-87	1	Fitting-Elbow, 45 DEG
16:1	237-22	1	O-Ring
16:2	237-42	1	O-Ring
17	95-8838	1	Hose-HYD
18	95-8839	1	Hose-HYD
19	95-8823	1	Hose ASM
20	95-8831	1	Hose-HYD
21	117-5147	1	Hose-HYD
22	117-5147	1	Hose-HYD
23	85-9720	1	Fitting-STR, Orifice
23:1	237-78	1	O-Ring
23:2	237-21	1	O-Ring
24	95-8843	1	Hose-HYD
99	3290-378	1	Tie-Cable ●


● Not illustrated

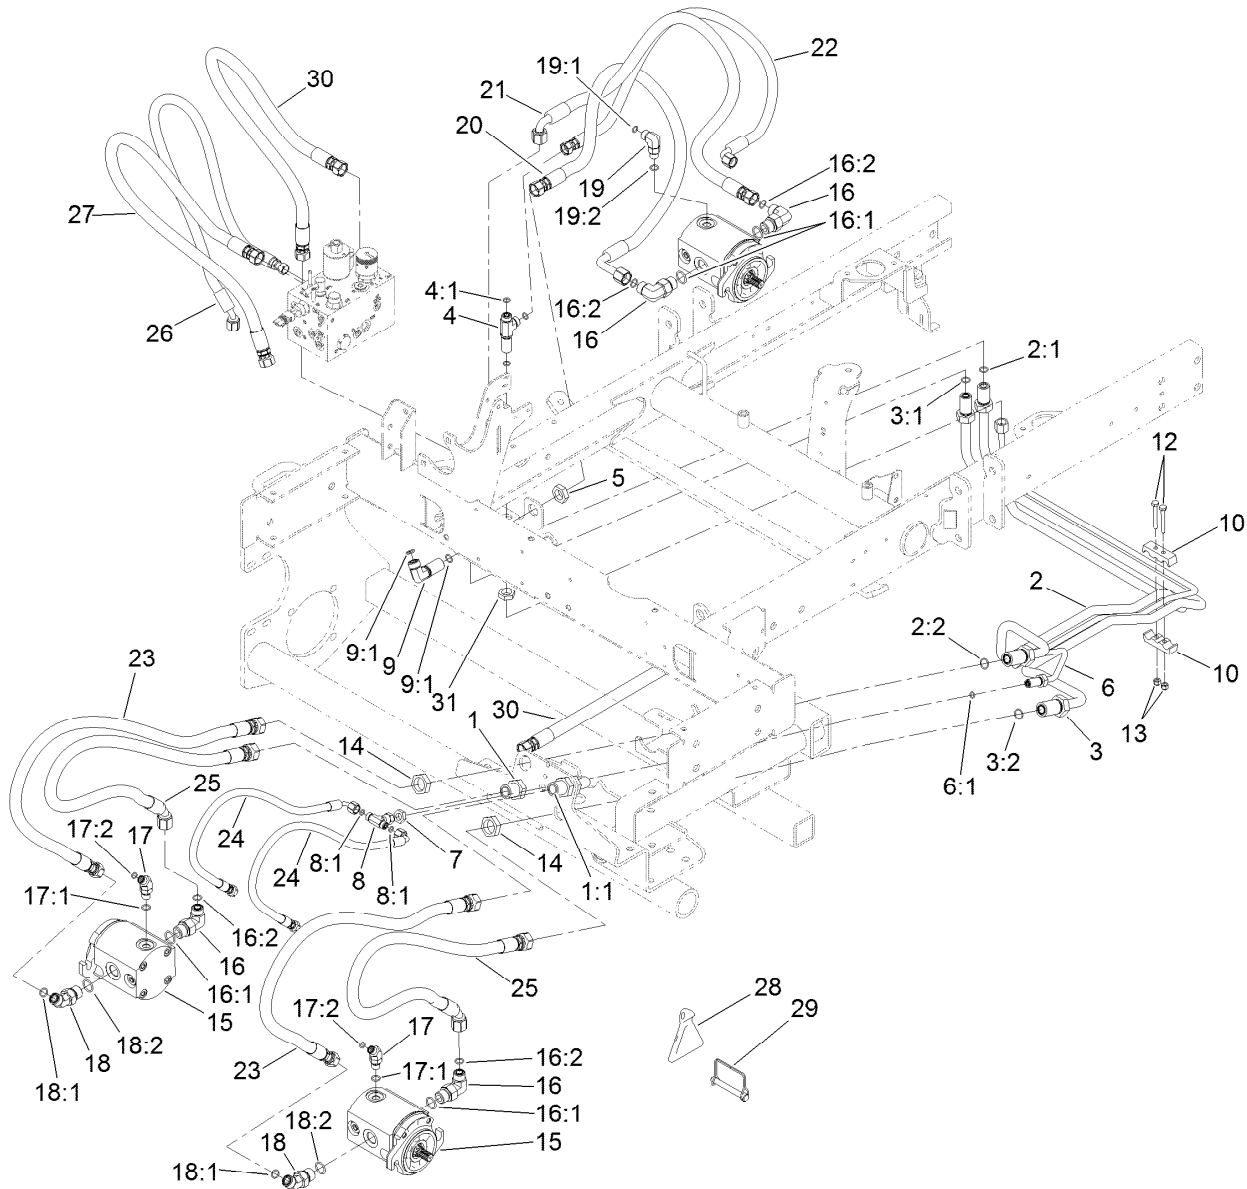

Hydraulic Mow Circuit Assembly

Ref.	Part Number	Qty.	Description
1	99-3640	1	Tube ASM
1:1	237-65	2	O-Ring
2	95-8980	1	Tube ASM
2:1	237-30	1	O-Ring
2:2	237-65	1	O-Ring
3	95-8981	1	Tube ASM
3:1	237-30	1	O-Ring
3:2	237-65	1	O-Ring
4	340-68	1	Fitting-Tee, Bulkhead
4:1	237-22	3	O-Ring
5	340-127	3	Nut-Bulkhead
6	95-8982	1	Tube ASM
6:1	237-21	1	O-Ring
7	340-78	1	Nut-Lock
8	99-3477	1	Fitting-Tee
8:1	237-21	2	O-Ring
9	93-9151	1	Fitting-HYD
9:1	237-30	2	O-Ring
10	93-2509	2	Clamp-Tube
12	3234-34	2	Screw-HHF
13	104-7201	2	Nut-HF, NI


Ref.	Part Number	Qty.	Description
14	340-74	4	Nut-Lock, Bulkhead
15	115-8250	3	Gear Motor ASM
16	340-105	4	Fitting-Elbow, 90 DEG
16:1	237-80	1	O-Ring
16:2	237-30	1	O-Ring
17	340-137	2	Fitting
17:1	237-21	1	O-Ring
17:2	237-42	1	O-Ring
18	340-89	2	Fitting-HYD, 45 DEG
18:1	237-30	1	O-Ring
18:2	237-80	1	O-Ring
19	340-77	1	Fitting-Elbow, 90 DEG
19:1	237-22	1	O-Ring
19:2	237-42	1	O-Ring
20	117-5145	1	Hose-HYD
21	117-5146	1	Hose-HYD
22	114-5500	1	Hose-HYD
23	117-5142	2	Hose-HYD
24	117-5144	2	Hose-HYD
25	117-5143	2	Hose-HYD
26	115-3411	1	Hose-HYD

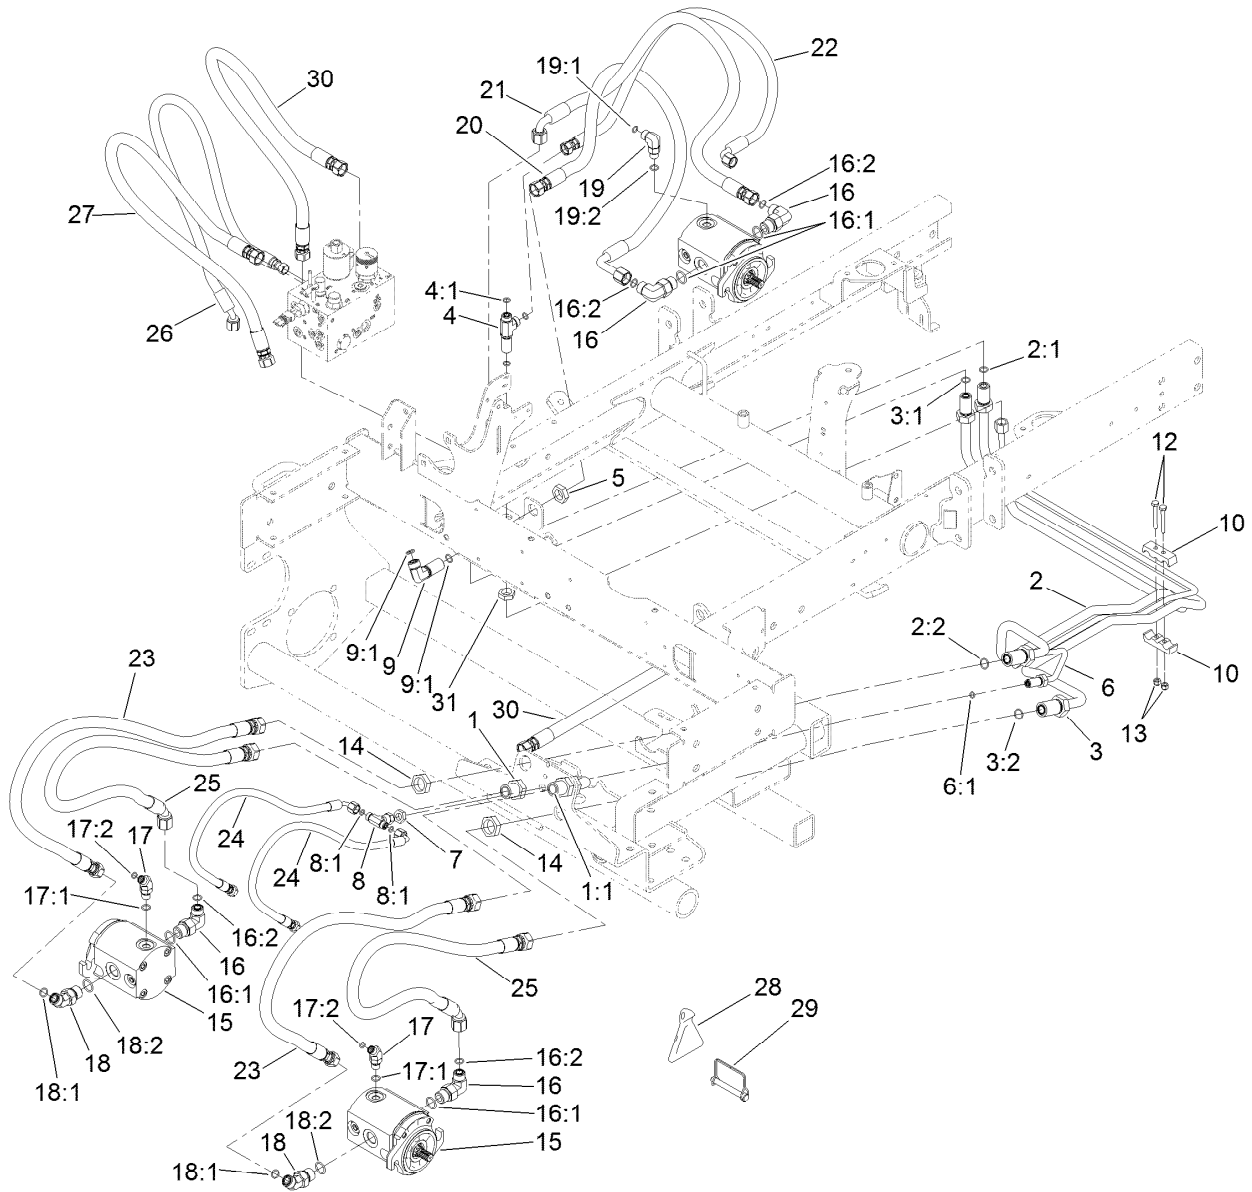

Hydraulic Mow Circuit Assembly (continued)


Ref.	Part Number	Qty.	Description
27	95-8824	1	Hose ASM
28	119-8010-03	1	Kickstand
29	107-7400	1	Pin-Lynch

Ref.	Part Number	Qty.	Description
30	95-8820	1	Hose ASM
31	340-70	1	Nut-Lock

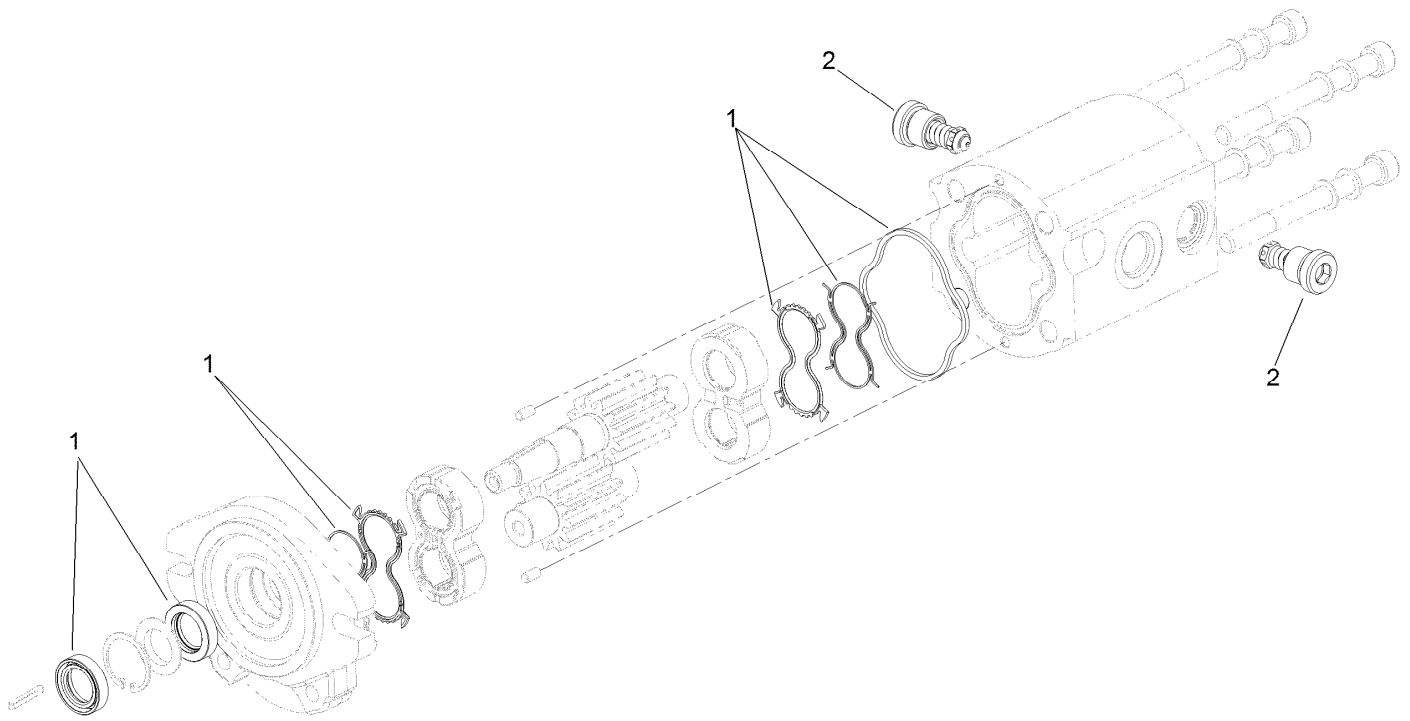

Gear Motor Assembly No. 115-8250


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1682	1	Motor Seal Kit
2	117-5107	2	Valve-Check

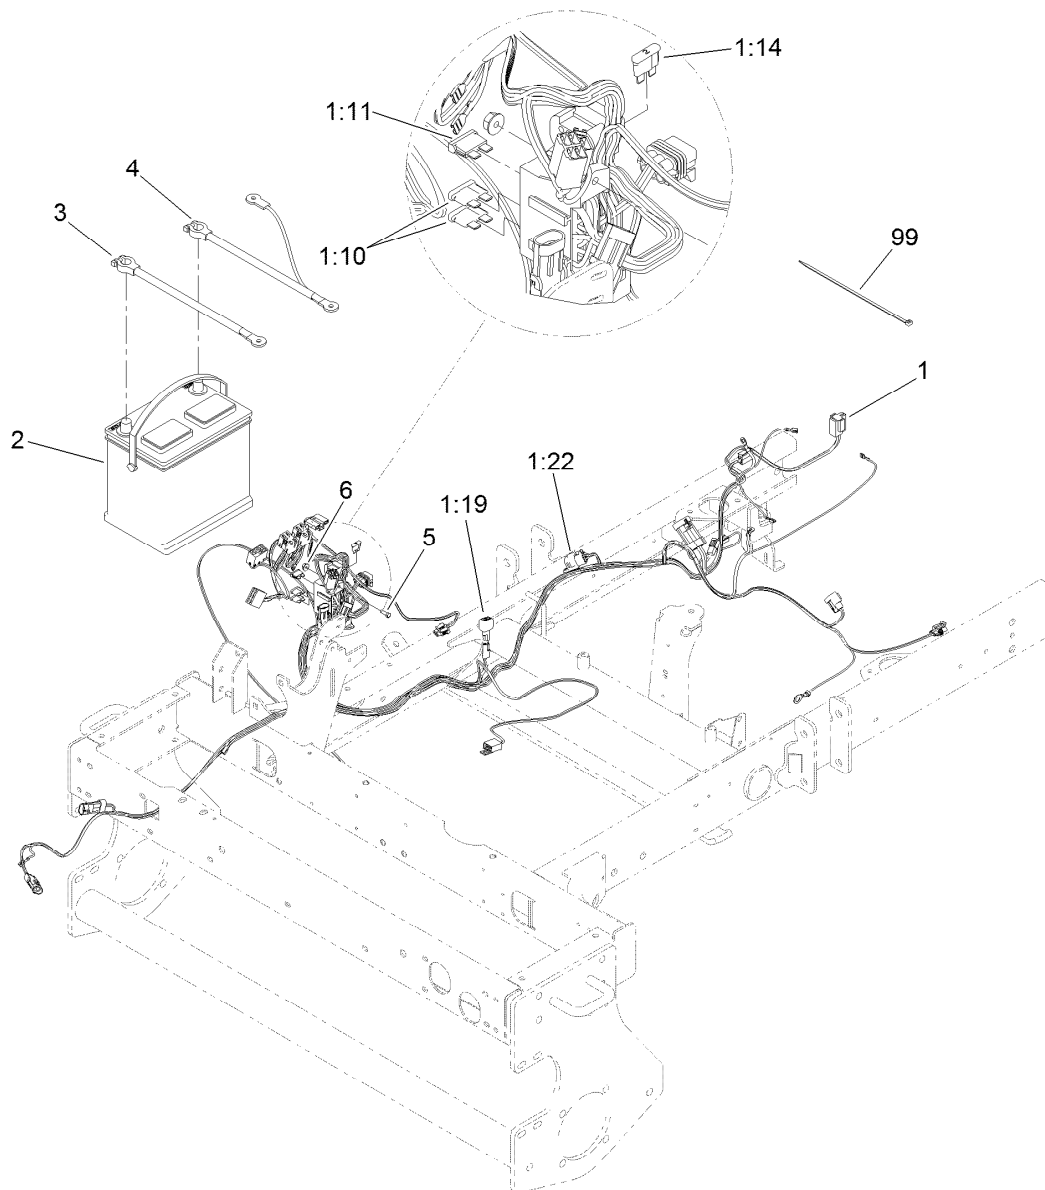

Wire Harness and Battery Assembly

Ref.	Part Number	Qty.	Description
1	122-1523	1	Harness-Wire
1:10	218-578	2	Fuse-Blade, 10 Amp
1:11	109355	1	Fuse-Blade, 15 Amp
1:14	94-6710	1	Fuse-2 Amp
1:19	100-4918	1	Diode
1:22	32180-156	1	Cap-Plug, 6 Way ●
2	104-0496	1	Battery (Group 55, Wet)
3	95-8853	1	Cable-Battery, Positive
4	95-8854	1	Cable-Battery, Negative
5	3290-134	2	Screw
6	3290-148	2	Nut-HF
99	3290-378	8	Tie-Cable


● Not illustrated

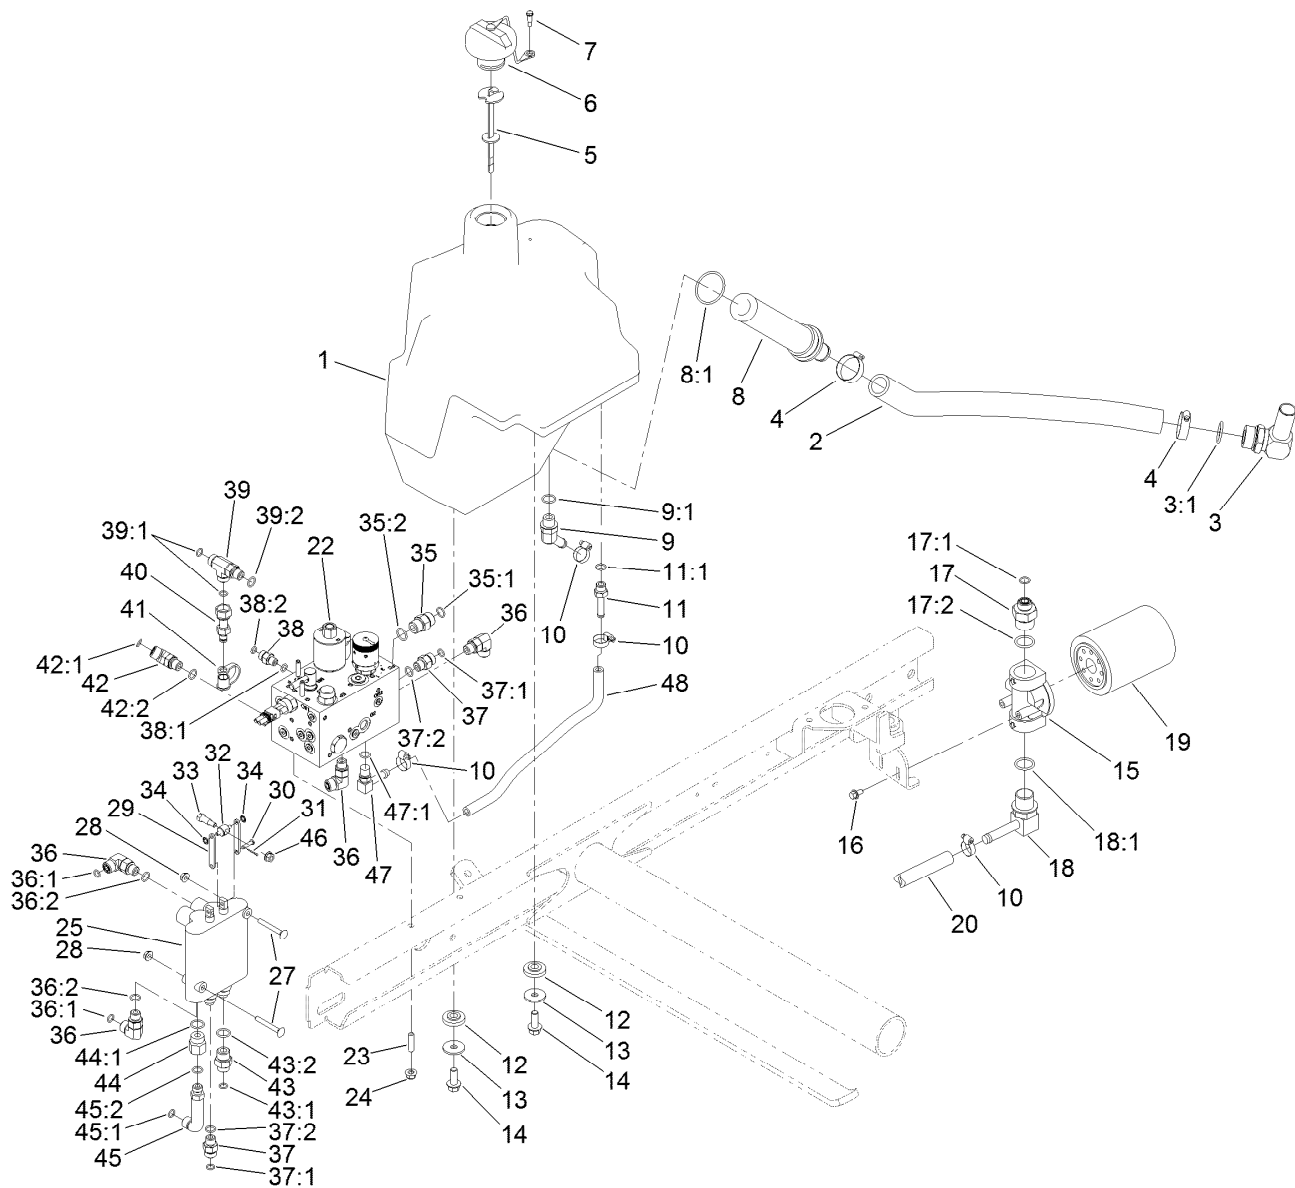

Hydraulic Tank and Control Valve Assembly

Ref.	Part Number	Qty.	Description
1	104-4840	1	Tank-HYD
2	104-4845	1	Hose-Suction
3	56-9530	1	Fitting-HYD, 90 DEG
3:1	237-117	1	O-Ring
4	2412-34	2	Clamp-Hose
5	119-6968	1	Dipstick-Oil
6	93-7160	1	Cap-Oil, HYD
7	57-5420	1	Screw-Shoulder
8	104-7546	1	Tank Strainer ASM
8:1	340-136	1	O-Ring
9	354-126	1	Fitting-Elbow, 45
9:1	237-79	1	O-Ring
10	2412-36	4	Clamp-Hose
11	353-979	1	Fitting-STR
11:1	237-42	1	O-Ring
12	240-11	4	Bushing-Flange
13	63-8410	4	Washer
14	3234-11	4	Screw-HHF
15	92-5821	1	Head-Filter
16	3234-13	2	Screw-HHF
17	100-4240	1	Fitting-STR


Ref.	Part Number	Qty.	Description
17:1	237-30	1	O-Ring
17:2	237-81	1	O-Ring
18	95-8814	1	Fitting-90
18:1	237-81	1	O-Ring
19	86-3010	1	Filter-Oil
20	99-3501	1	Hose
22	108-9037	1	Manifold ASM
23	104-0430	2	Stud
24	104-8300	2	Nut-HF, NI
25	95-8581	1	2-Spool Control Valve ASM
27	3230-33	2	Screw-CARR
28	32128-33	2	Nut-HF
29	95-8634	4	Link
30	283-16	3	Pin-Clevis
31	3272-1	3	Pin-Cotter
32	95-8638	1	Trunnion-Valve, Actuator
33	92-8916	1	Bolt-Shoulder
34	32151-106	2	Ring-Retaining
35	340-4	3	Fitting-Straight
35:1	237-30	1	O-Ring
35:2	237-79	1	O-Ring

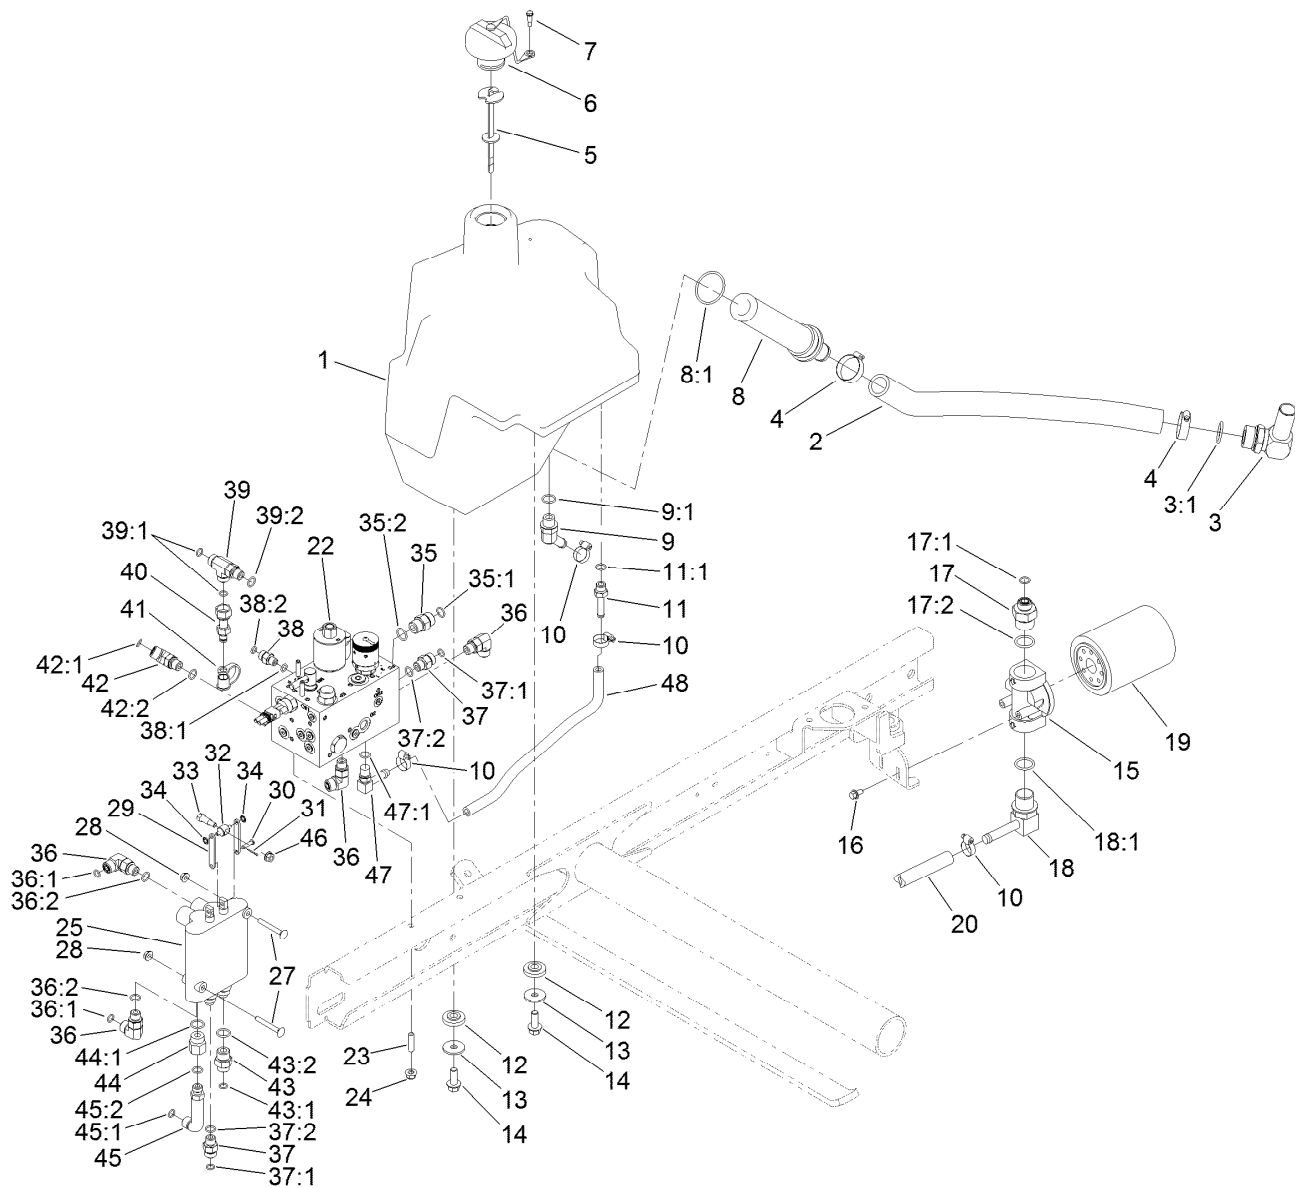

Hydraulic Tank and Control Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
36	340-77	4	Fitting-Elbow, 90 DEG
36:1	237-22	1	O-Ring
36:2	237-42	1	O-Ring
37	340-2	2	Fitting-Straight
37:1	237-22	1	O-Ring
37:2	237-42	1	O-Ring
38	340-92	1	Fitting-Straight
38:1	237-78	1	O-Ring
38:2	237-21	1	O-Ring
39	340-86	1	Fitting-Tee
39:1	237-22	2	O-Ring
39:2	237-42	1	O-Ring
40	86-5480	1	Nipple-Test
41	354-79	1	Cap-Dust
42	340-87	1	Fitting-Elbow, 45 DEG

Ref.	Part Number	Qty.	Description
42:1	237-22	1	O-Ring
42:2	237-42	1	O-Ring
43	340-3	1	Fitting-Straight
43:1	237-22	1	O-Ring
43:2	237-79	1	O-Ring
44	353-397	1	Reducer-Adapter
44:1	237-79	1	O-Ring
45	69-4320	1	Fitting-HYD, 90 DEG
45:1	237-22	1	O-Ring
45:2	237-42	1	O-Ring
46	32128-32	1	Nut-HHF
47	100-4887	1	Fitting-Elbow, 90
47:1	237-42	1	O-Ring
48	80-7342	1	Hose-HYD

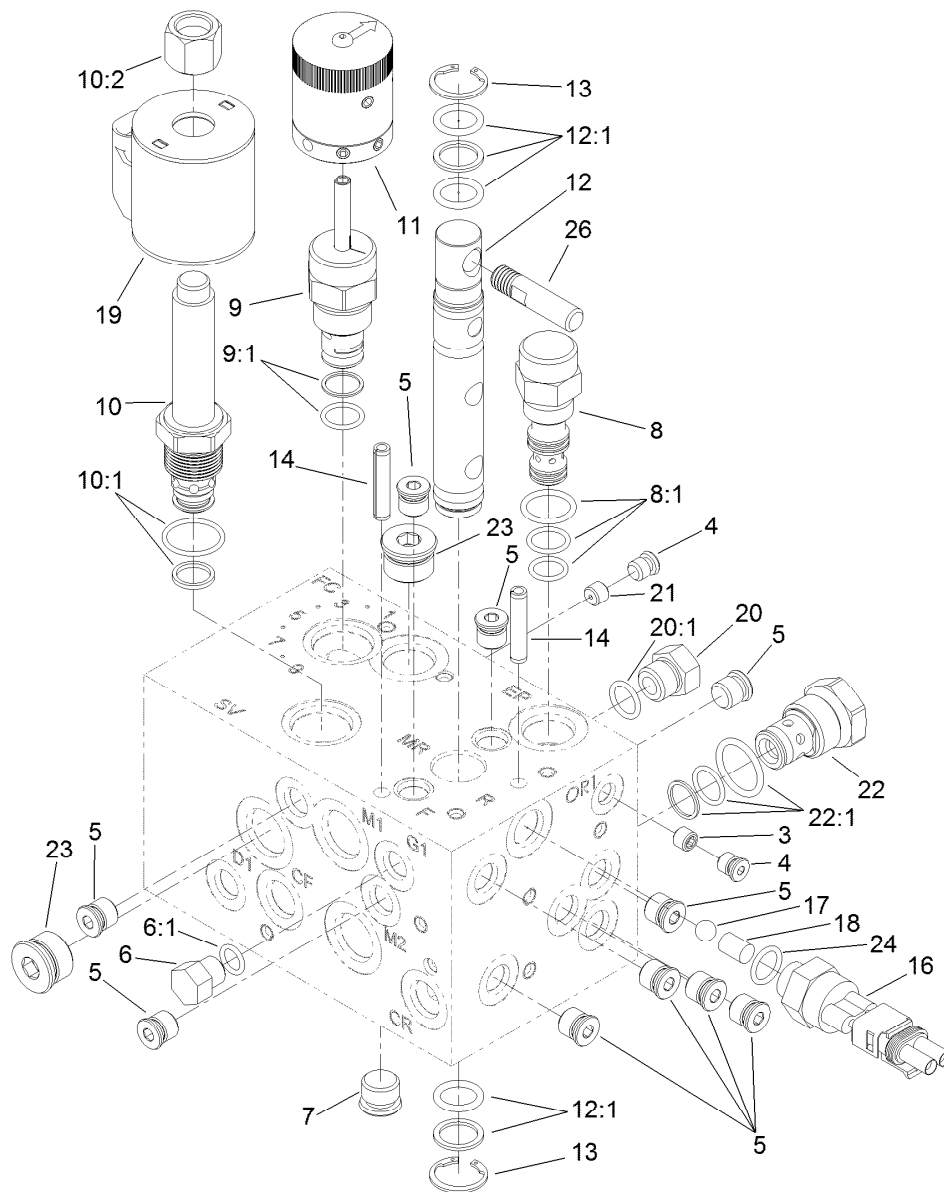


Hydraulic Manifold Assembly No. 108-9037

Ref.	Part Number	Qty.	Description
3	110-8771	1	Orifice-.020
4	106-1024	2	Plug-Leak, Zero
5	106-1025	10	Plug-HYD
6	353-512	1	Plug
6:1	237-78	1	O-Ring
7	106-1026	1	Plug-HYD
8	110-8770	1	Logic Element
8:1	110-8773	1	Seal Kit
9	110-8769	1	Valve-Control, Manual Flow
9:1	110-2633	1	Seal Kit
10	110-8768	1	Valve-Relief, Solenoid (3000 PSI)
10:1	110-6316	1	Seal Kit
10:2	130-8180	1	Nut-Coil (9/16-24 Unef-2B)
11	110-8767	1	Rotary Handle ASM
12	117-0108	1	Spool-Rotary

Ref.	Part Number	Qty.	Description
12:1	117-0109	1	Seal Kit
13	112-6532	2	Ring-Retaining
14	112-6531	2	Pin-Spring
16	72-4310	1	Switch-Ball
17	110-8762	1	Ball-Chrome
18	110-8761	1	Pin-Dowel
19	110-6344	1	Coil-12V, DC
20	353-508	1	Plug-HH
20:1	237-42	1	O-Ring
21	110-8760	1	Orifice-.073
22	110-8759	1	Valve-Relief
22:1	110-8772	1	Seal Kit ●
23	106-1027	2	Plug
24	110-8757	1	O-Ring
26	110-8758	1	Handle-Spool


● Not illustrated

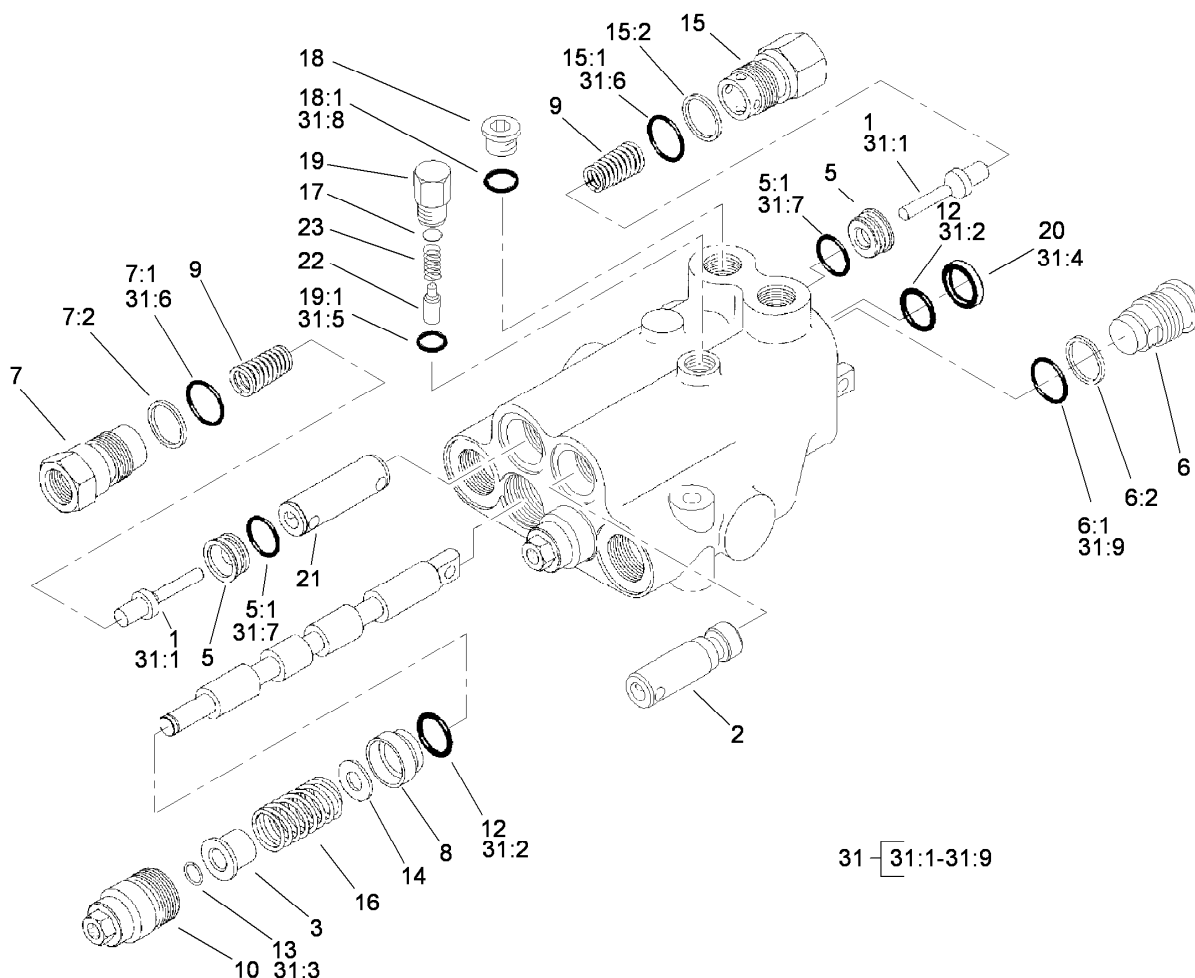

Valve Assembly No. 95-8581

Ref.	Part Number	Qty.	Description
1	58-6290	3	Poppet
2	69-1840	1	Plunger
3	58-6310	2	Spacer
5	58-6330	3	Seat
5:1	58-6340	1	O-Ring
6	58-6350	1	Plug
6:1	60-5720	1	O-Ring
6:2	58-6370	1	Washer
7	69-1800	2	Plug ASM
7:1	60-5720	1	O-Ring
7:2	58-6370	1	Washer
8	58-6400	2	Bushing
9	69-1810	3	Spring
10	58-6420	2	Cap
12	58-6450	4	O-Ring
13	58-6460	2	Ring-Retaining
14	65-2770	2	Washer
15	99-3526	1	Plug ASM
15:1	60-5720	1	O-Ring
15:2	59-7730	1	Washer-Backup


Ref.	Part Number	Qty.	Description
16	99-3531	2	Spring
17	60-6450	1	Disc
18	353-989	1	Plug-Hex, Hollow
18:1	237-42	1	O-Ring
19	58-6780	1	Plug
19:1	58-6790	1	O-Ring
20	58-6320	2	Wiper
21	99-3528	1	Plunger
22	58-6770	1	Plunger
23	58-6760	1	Spring
31	99-3530	1	Seal Kit
31:1	58-6290	3	Poppet
31:2	58-6450	4	O-Ring
31:3	58-6460	2	Ring-Retaining
31:4	58-6320	2	Wiper
31:5	58-6790	1	O-Ring
31:6	60-5720	4	O-Ring
31:7	58-6340	2	O-Ring
31:8	237-42	1	O-Ring
31:9	59-7730	2	Washer-Backup

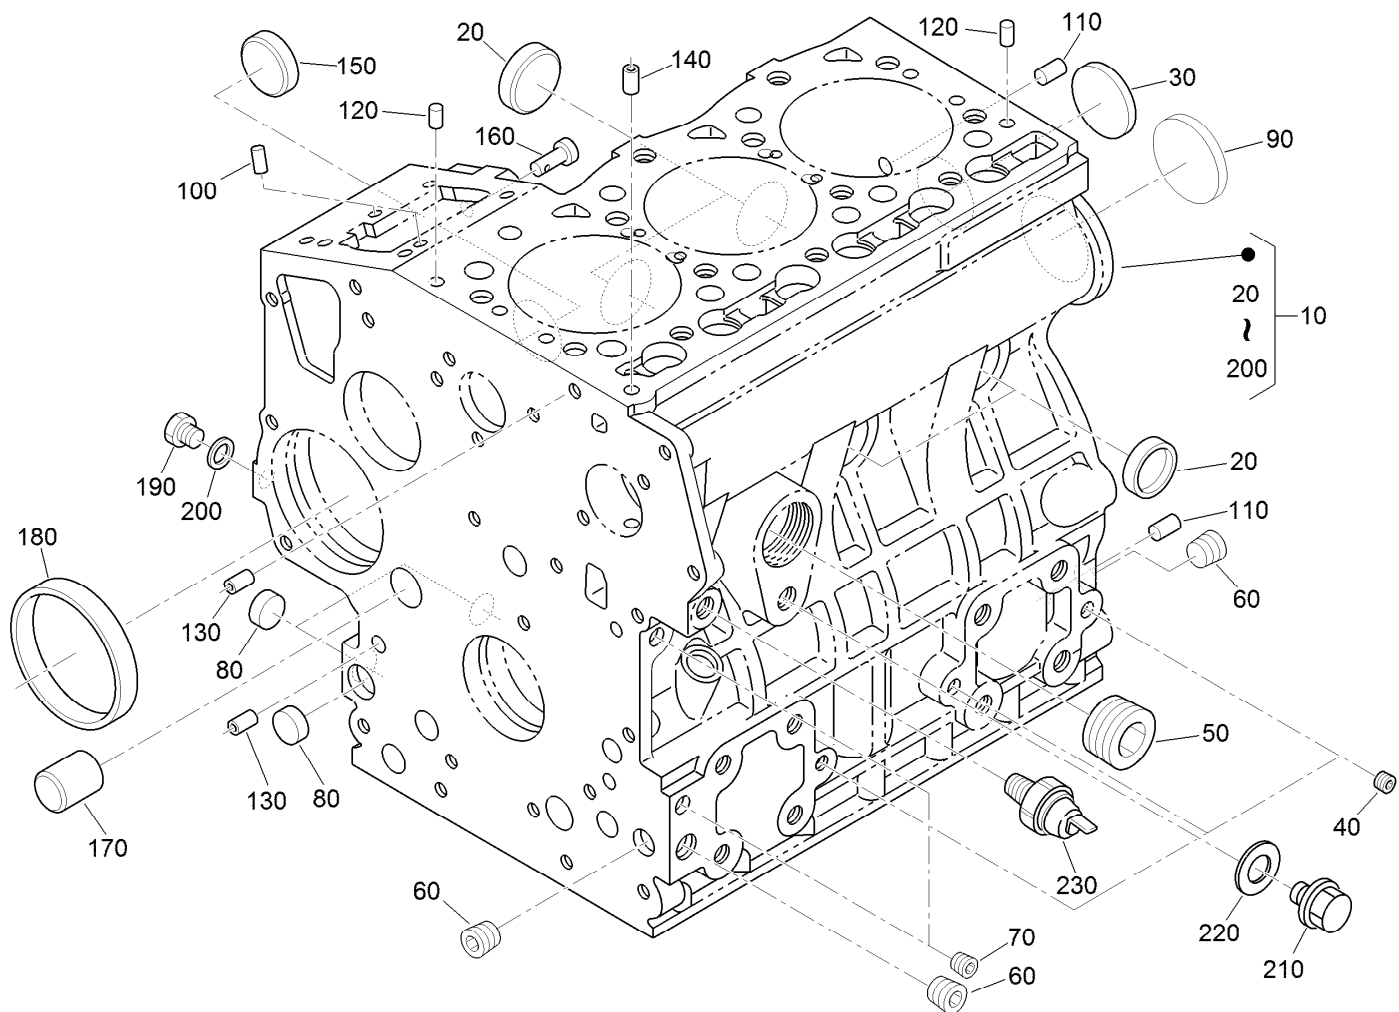

Crankcase Assembly


Ref.	Part Number	Qty.	Description
10	115-3443	1	Crankcase ASM
20	98-9398	4	Cap-Sealing
30	98-7539	1	Cap-Sealing
40	98-9687	3	Plug
50	105-3779	1	Plug
60	98-9597	3	Plug
70	98-7487	2	Plug
80	98-9379	3	Plug-Expansion
90	98-9668	1	Plug-Expansion
100	98-9375	2	Pin-Straight
110	98-9377	2	Pin-Straight
120	98-9376	2	Pin-Straight

Ref.	Part Number	Qty.	Description
130	98-9387	2	Pin-Pipe
140	98-9539	1	Pin-Pipe
150	98-9599	1	Plug
160	98-9630	1	Pin-Spring, Start
170	98-9675	1	Plug
180	98-9656	1	Bushing-Governor, Gear
190	120-2559	1	Plug
200	98-7428	1	Gasket
210	99-3447	1	Plug
220	106-7056	1	Gasket
230	98-9416	1	Switch-Oil

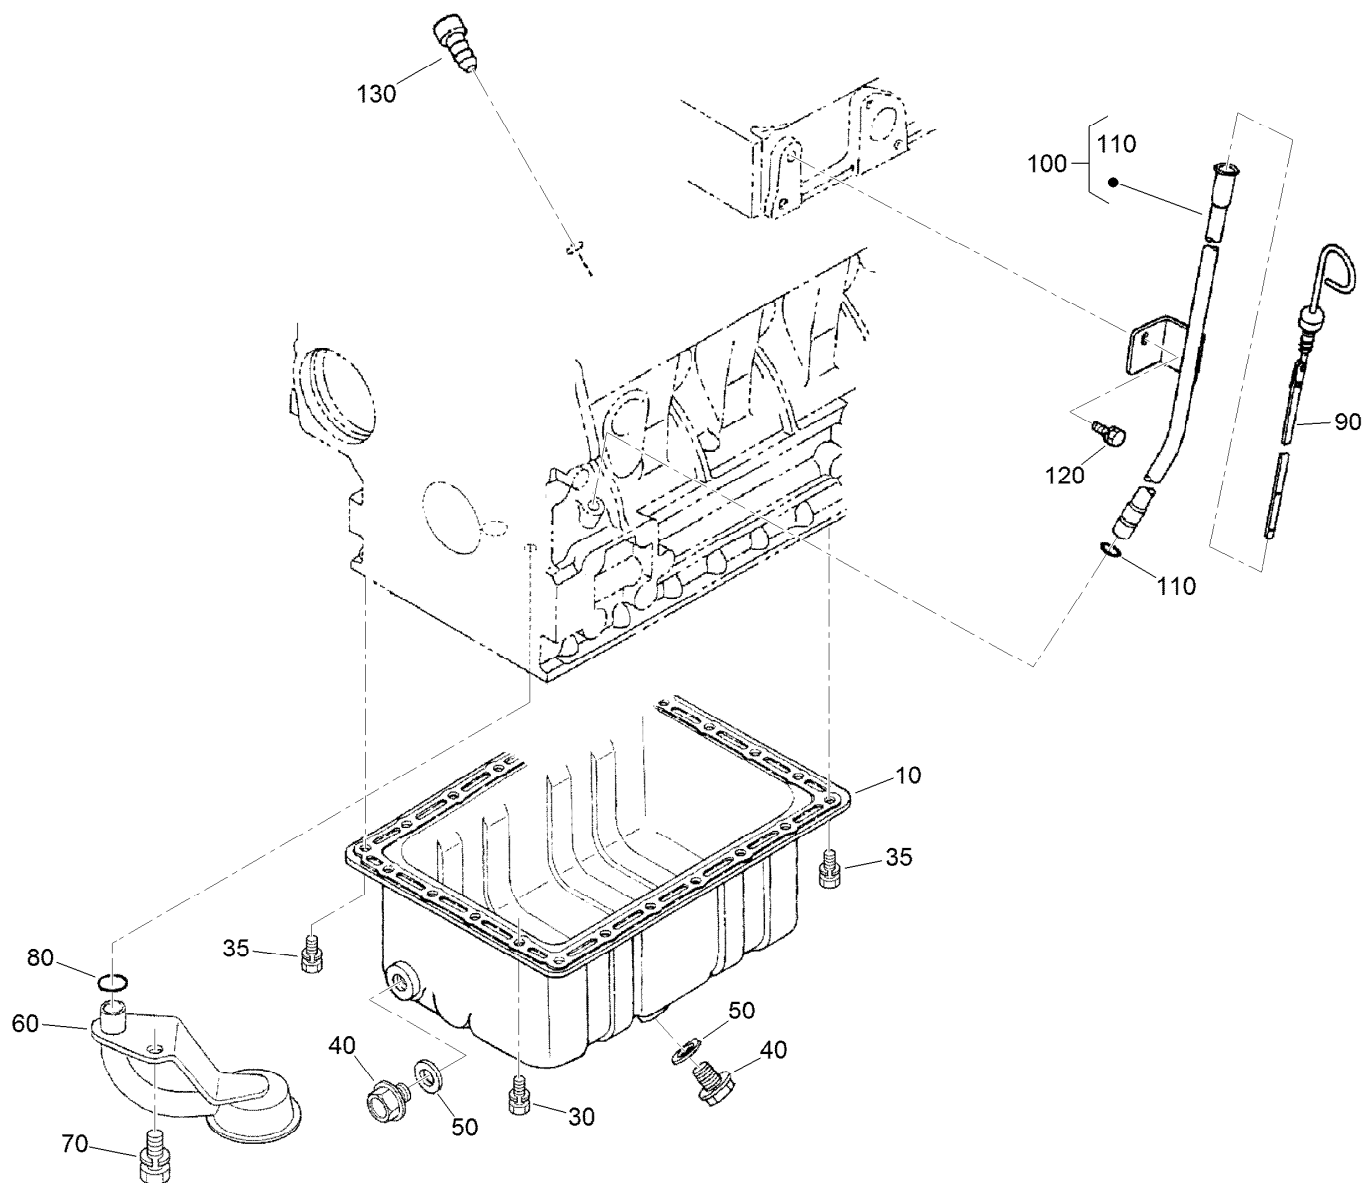


Oil Pan and Dipstick Assembly

Ref.	Part Number	Qty.	Description
10	98-9685	1	Pan-Oil
30	98-9351	20	Bolt
35	98-9351	2	Bolt
40	114-8151	1	Plug-Drain
50	98-7524	1	Gasket
60	108-1401	1	Base-Filter
70	98-7526	1	Bolt
80	105-3776	1	O-Ring
90	98-9670	1	Gauge-Oil
100	98-9672	1	Oil Gauge Guide ASM
110	98-9722	1	O-Ring
120	100-9195	1	Bolt
130	110-3720	1	Plug-Gauge, Oil

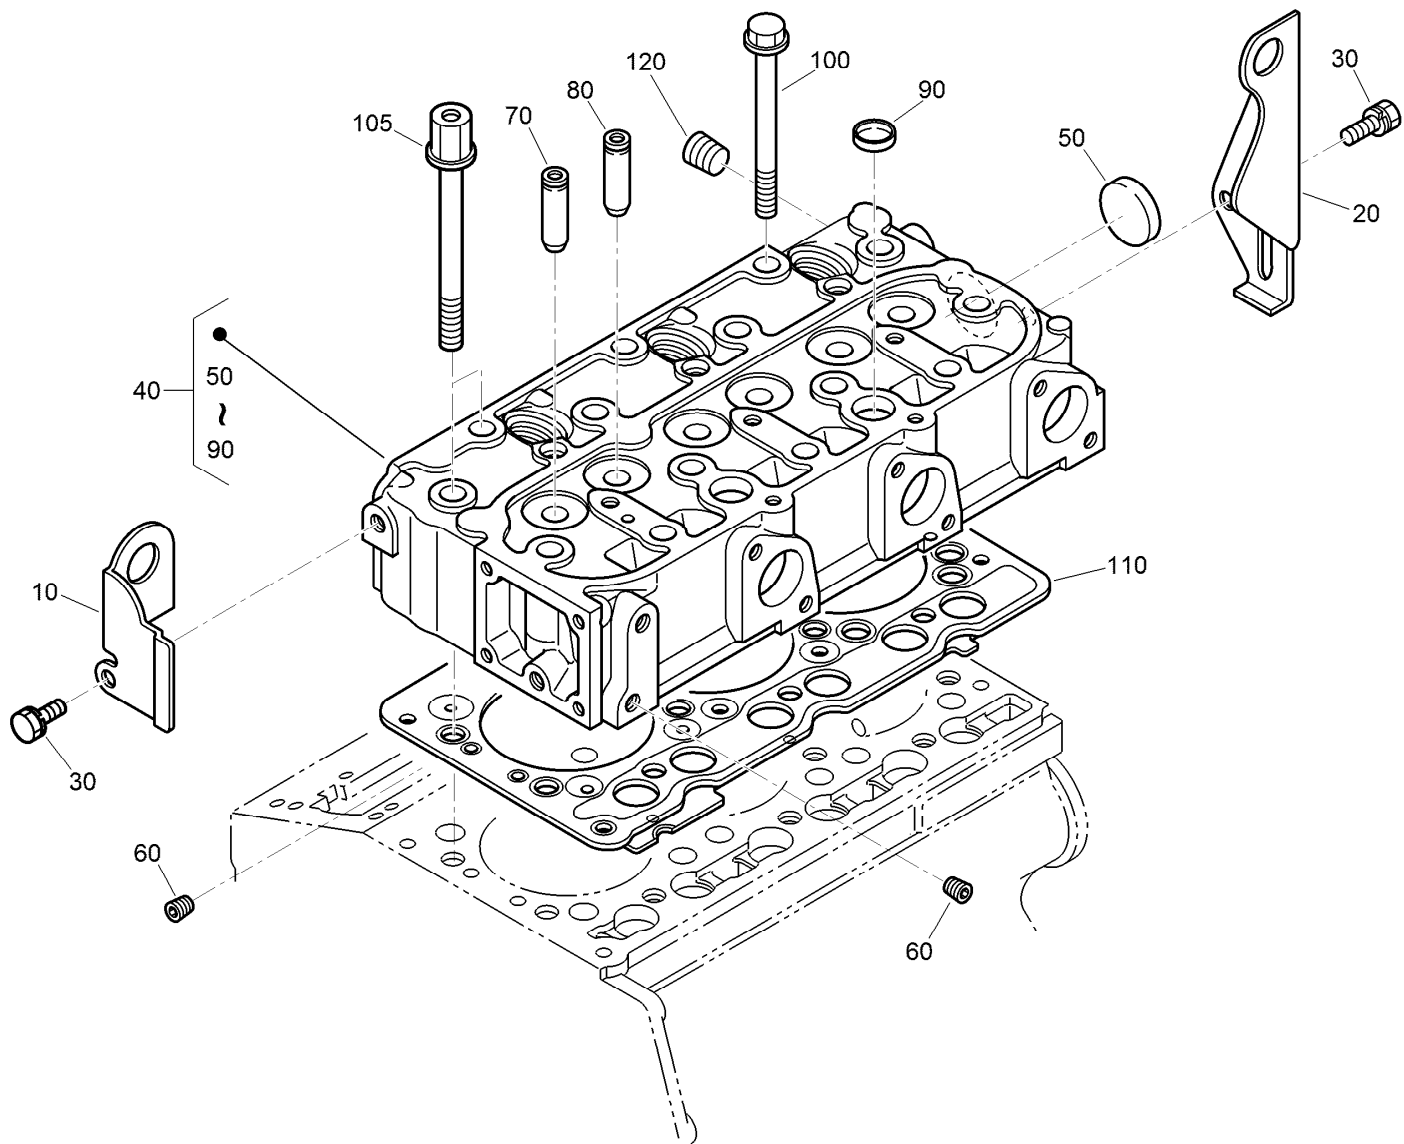

Cylinder Head Assembly


Ref.	Part Number	Qty.	Description
10	130-1231	1	Hook-Engine
20	98-9478	1	Hook-Engine
30	100-9195	2	Bolt
40	138-6997	1	Cylinder Head ASM
50	105-3705	1	Cap-Sealing
60	98-9687	2	Plug
70	107-9066	3	Guide-Valve, Inlet
80	107-9067	3	Guide-Valve, Exhaust
90	98-9389	2	Cap-Sealing
100	98-9479	12	Bolt-Head, Cylinder
105	98-9647	2	Bolt-Head, Cylinder
110	108-6573	1	Gasket-Head, Cylinder
120	98-9444	1	Plug

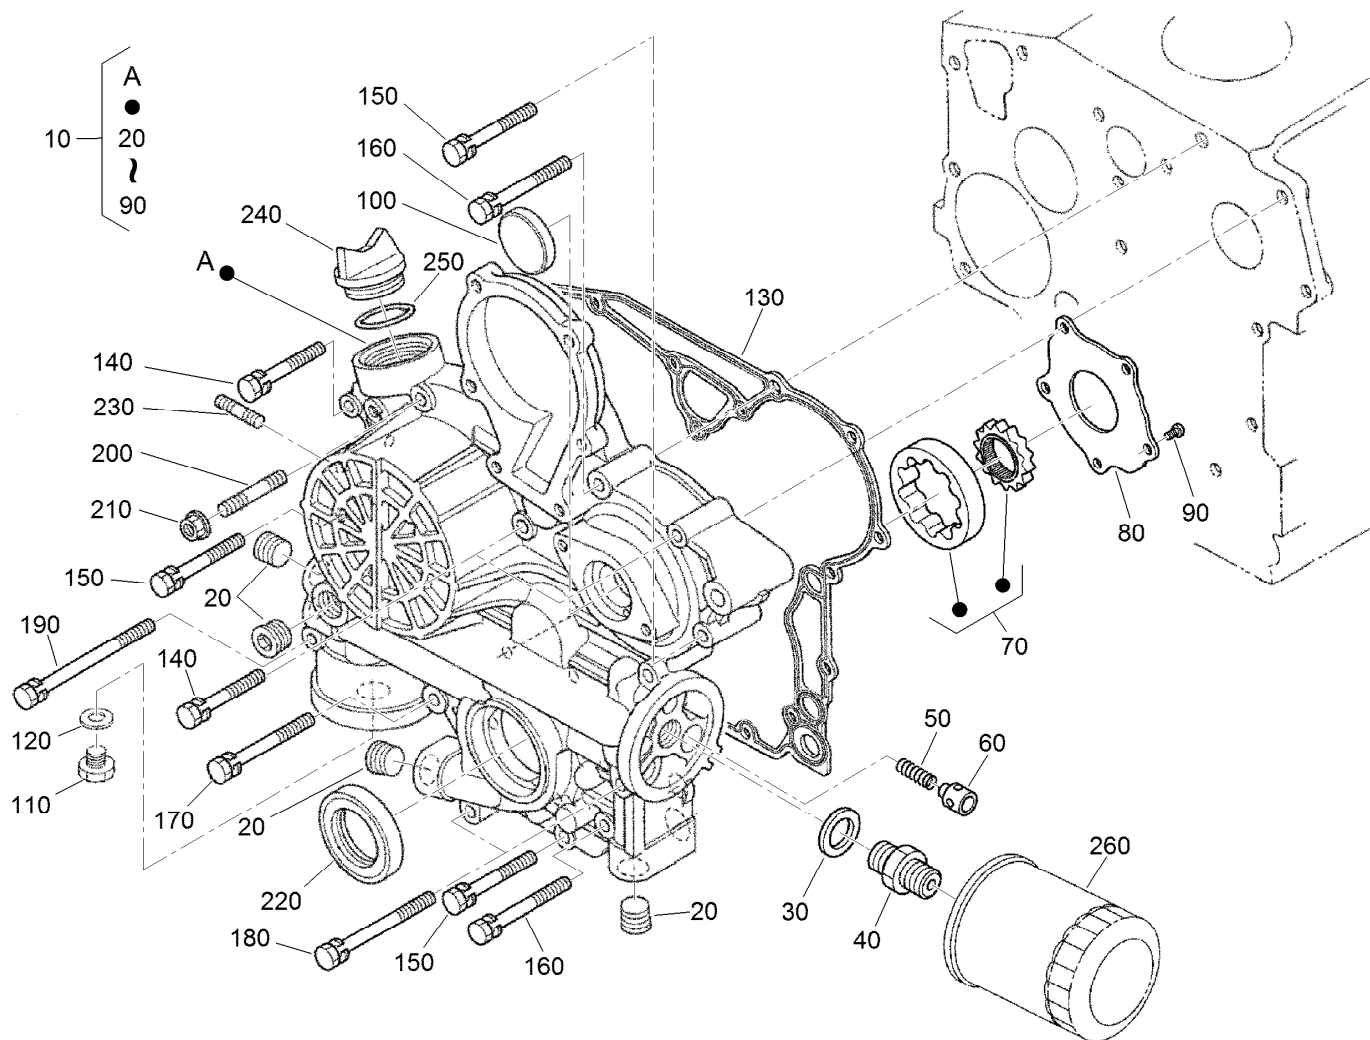

Gear Case and Oil Filter Cartridge Assembly


Ref.	Part Number	Qty.	Description
10	115-3442	1	Comp Gear Case
20	127-0425	5	Plug
30	98-7562	1	Washer-Plain
40	98-9388	1	Joint-Pipe
50	130-1511	1	Spring
60	130-1510	1	Valve-Relief
70	130-1508	1	Rotor ASM
80	130-1509	1	Cover-Pump, Oil
90	130-1164	5	Screw-Binding
100	99-3515	1	Plug-Gearcase
110	99-3450	1	Plug
120	99-3451	1	Plug-Packing
130	98-9633	1	Gasket-Case, Gear

Ref.	Part Number	Qty.	Description
140	100-1765	3	Bolt
150	125-9063	4	Bolt-Sems
160	98-9356	2	Bolt
170	98-9437	1	Bolt
180	98-9586	2	Bolt
190	99-3511	1	Bolt
200	105-3709	1	Stud
210	100-2203	1	Nut-Flange
220	119-8038	1	Seal-Oil
230	105-3710	2	Stud
240	107-9075	1	Plug-Filler, Oil
250	99-3446	1	O-Ring
260	127-0511	1	Filter-Oil

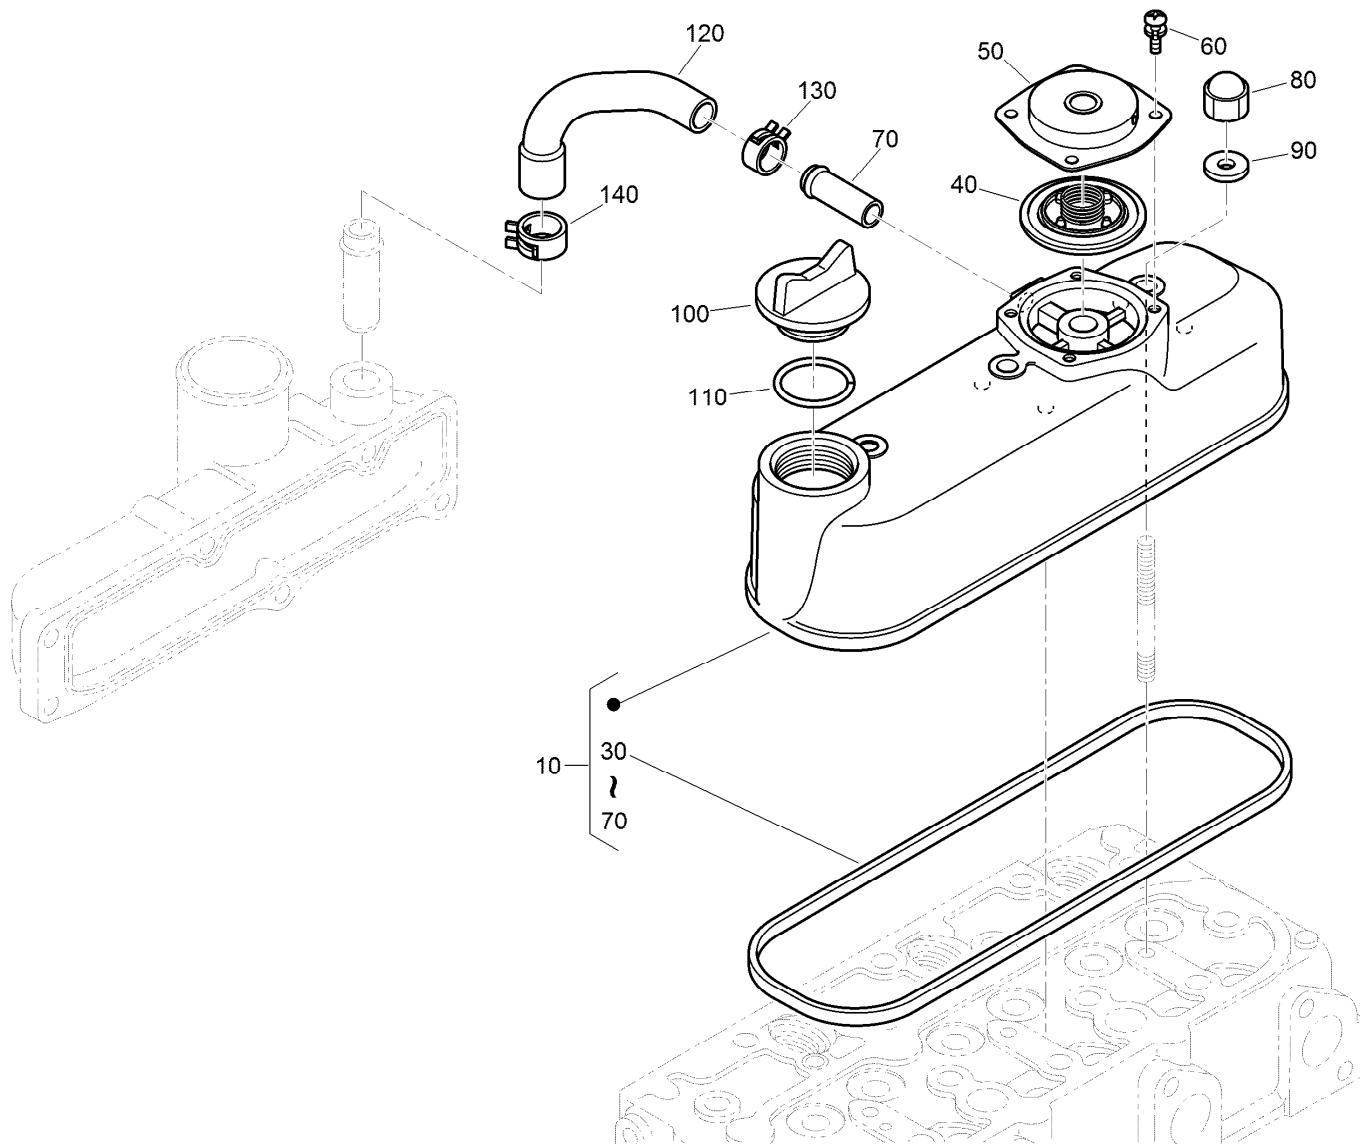

Cylinder Head Cover Assembly


Ref.	Part Number	Qty.	Description
10	130-1372	1	Cylinder Head Cover ASM
30	98-9615	1	Gasket-Cover, Head
40	110-3715	1	Valve-Breather
50	110-3714	1	Cover-Breather
60	98-9364	4	Screw (With Washer)
70	98-7766	1	Pipe-Return, Water
80	98-9455	3	Nut-Cap
90	98-9454	3	Gasket
100	107-9075	1	Plug-Filler, Oil
110	99-3446	1	O-Ring
120	107-7836	1	Tube-Breather
130	108-2859	1	Clamp-Hose
140	108-2860	1	Clamp-Hose

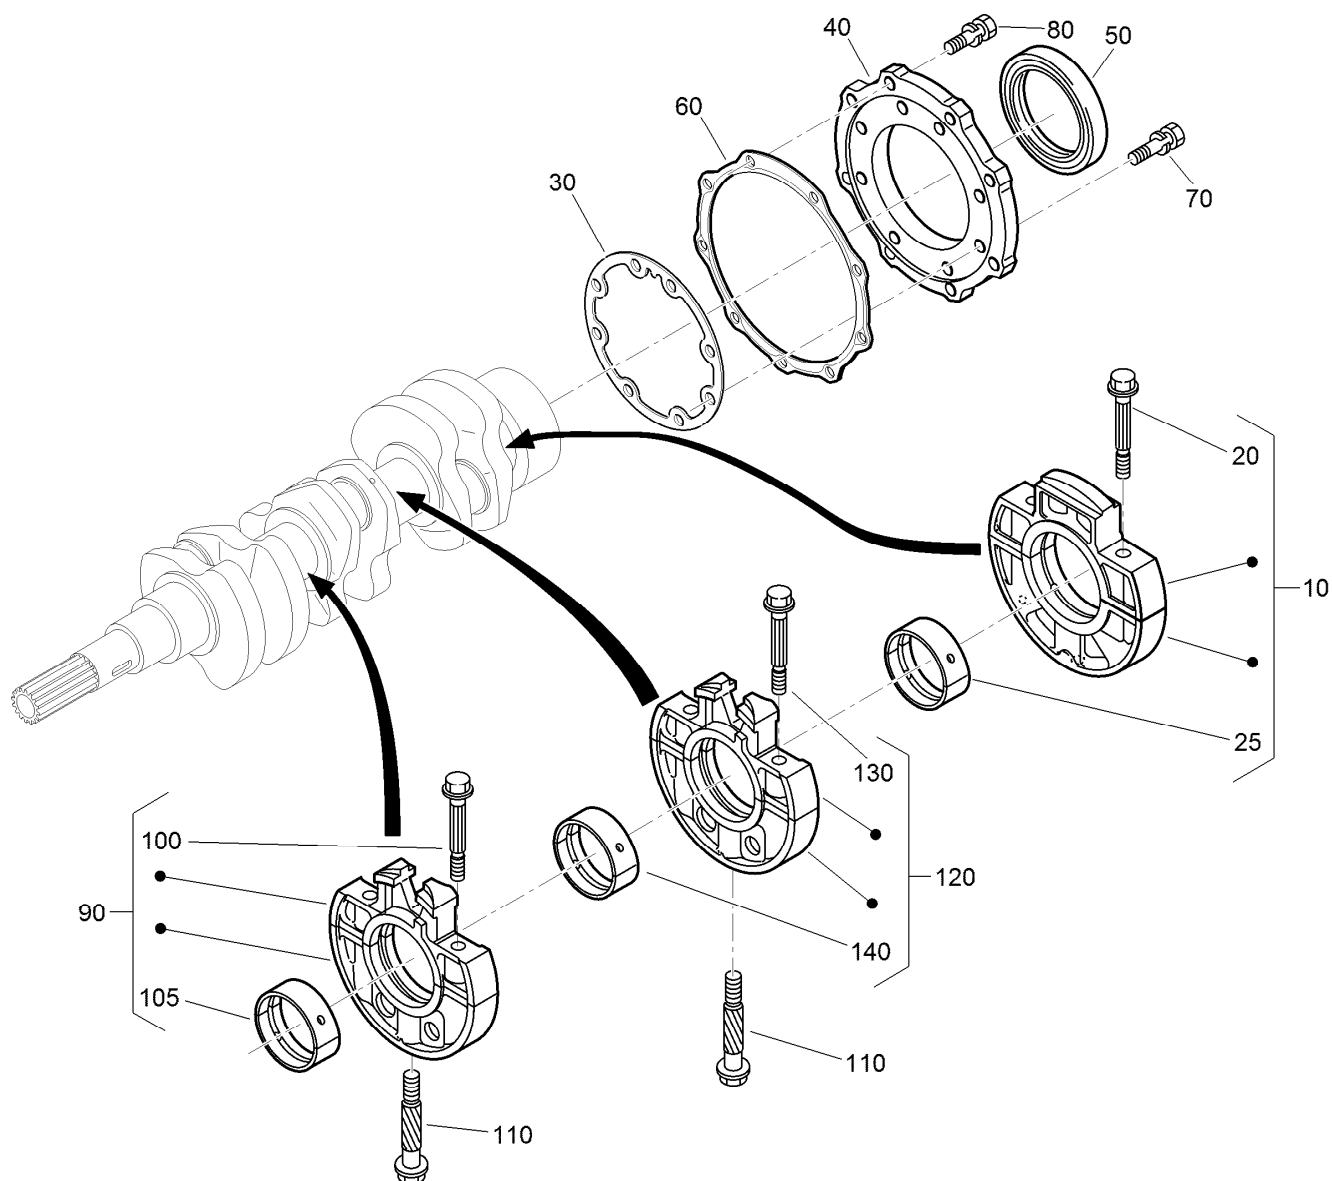

Main Bearing Case Assembly


Ref.	Part Number	Qty.	Description
10	112-7026	1	Wheel Bearing Case ASM
20	98-9484	2	Bolt-Case, Bearing
25	115-4121	1	Metal-Crankshaft (STD)
25	112-7039	1	Metal-Crankshaft (0.2Mm)
25	112-7040	1	Metal-Crankshaft (-0.4Mm)
30	127-0440	1	Gasket-Case, Bearing
40	112-7046	1	Cover-Case, Bearing
50	112-0180	1	Seal-Oil
60	112-7037	1	Gasket-Cover, Case
70	127-0441	8	Bolt
80	127-0442	9	Bolt

Ref.	Part Number	Qty.	Description
90	115-4106	1	Main Bearing Case ASM
100	98-9484	2	Bolt-Case, Bearing
105	98-9524	1	Metal-Crankshaft (STD Set)
105	127-0433	1	Metal-Crankshaft (-0.2MM)
105	98-9531	1	Bearing-Main (0.4MM)
110	98-9485	2	Bolt-Case, Bearing
120	115-4107	1	Main Bearing Case ASM
130	98-9484	2	Bolt-Case, Bearing
140	98-9524	1	Metal-Crankshaft (STD Set)
140	127-0433	1	Metal-Crankshaft (-0.2MM)
140	98-9531	1	Bearing-Main (0.4MM)

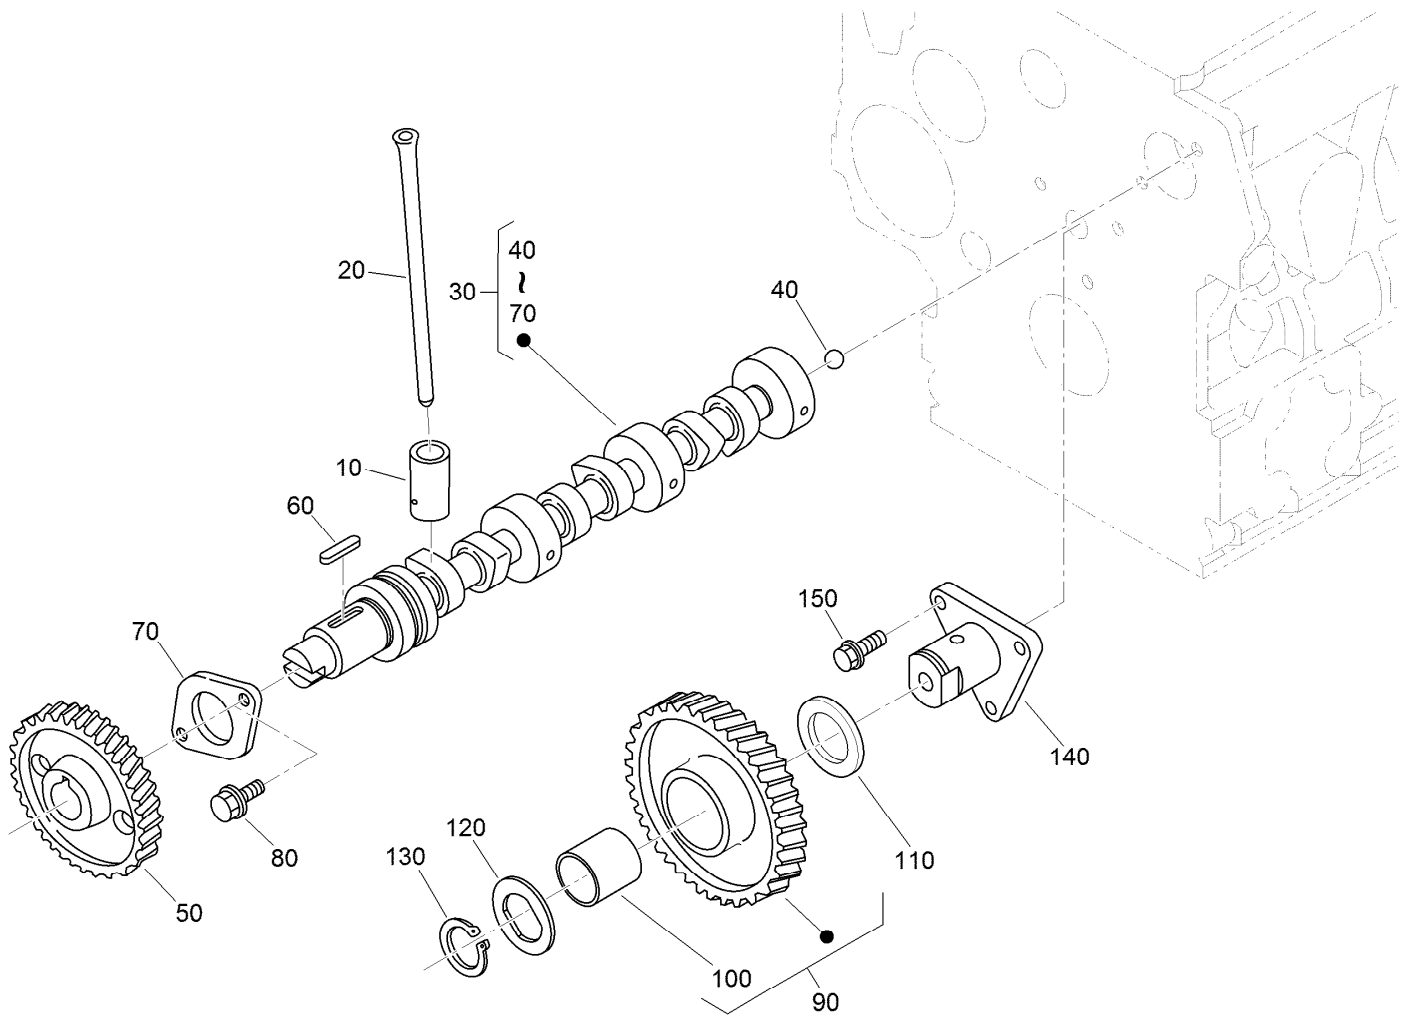

Camshaft and Idle Gear Shaft Assembly


Ref.	Part Number	Qty.	Description
10	112-0185	6	Tappet
20	127-0421	6	Rod-Push
30	130-1505	1	Camshaft ASM
40	110-3729	1	Ball
50	98-9512	1	Gear-Cam
60	98-9378	1	Key-Feather
70	98-9510	1	Stopper-Camshaft
80	98-7692	2	Bolt
90	117-7584	1	Idler Gear ASM
100	117-7585	1	Bushing-Gear, Idle
110	98-9535	1	Collar-Gear, Idle
120	98-9536	1	Collar-Gear, Idle
130	98-9534	1	Circlip-Gear, Idle
140	98-9533	1	Shaft-Gear, Idle
150	98-7692	3	Bolt

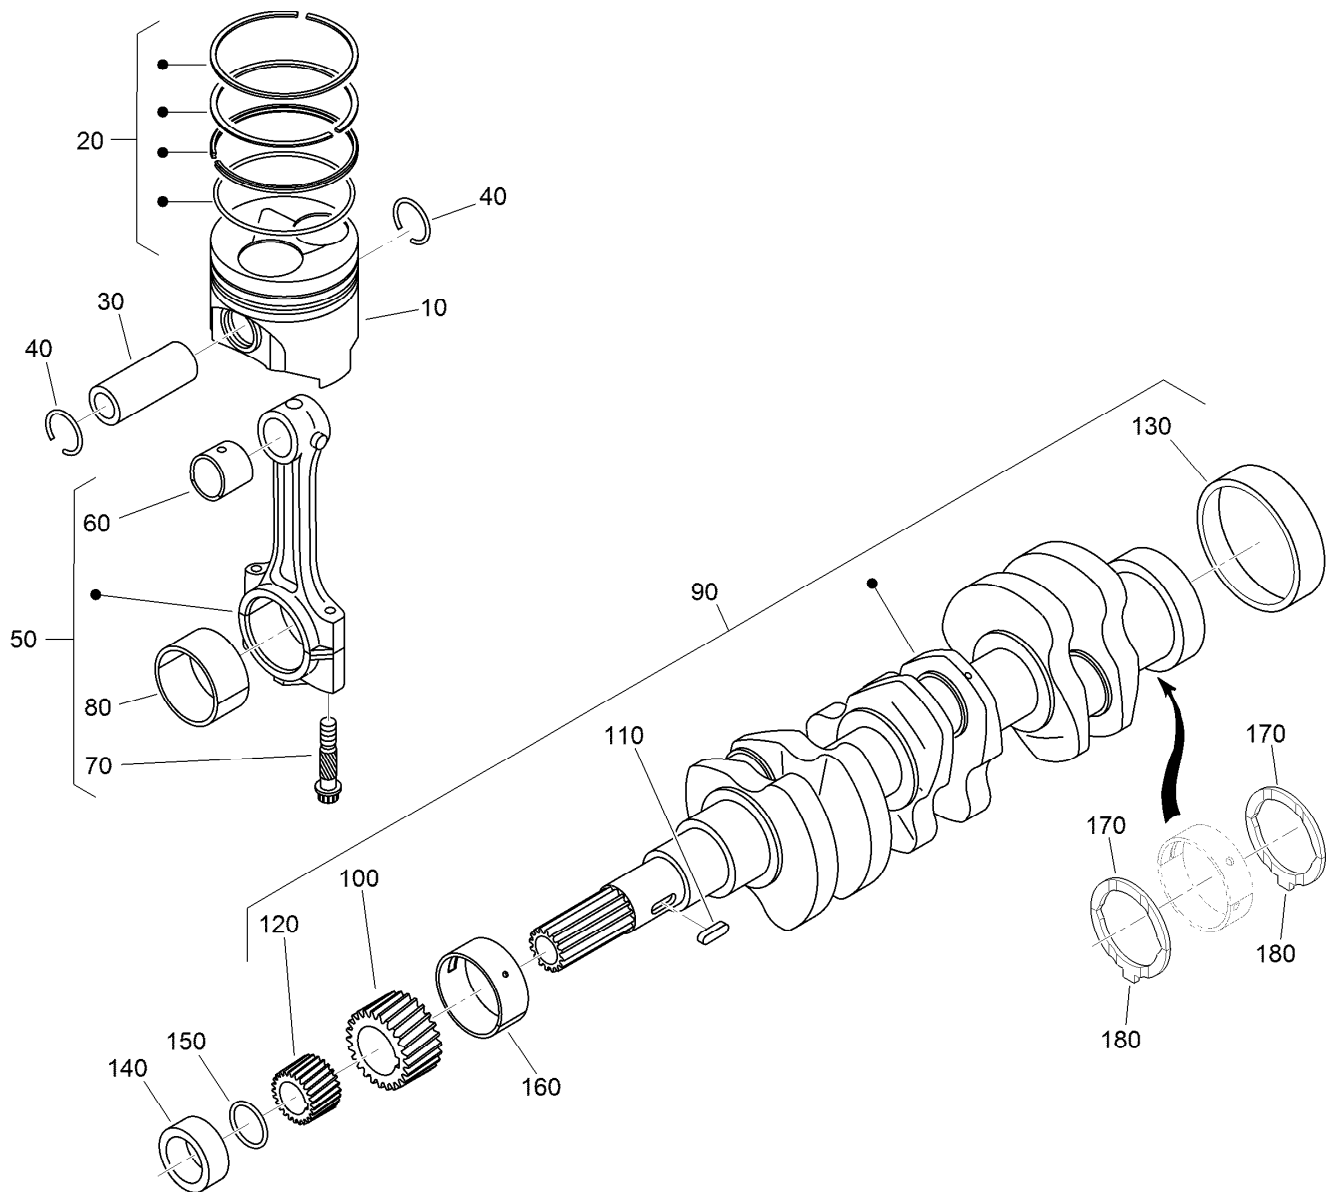

Piston and Crankshaft Assembly

Ref.	Part Number	Qty.	Description
10	130-1546	3	Piston (STD)
10	130-1549	3	Piston (+0.50MM)
20	130-1506	3	Piston Ring ASM (STD)
20	130-1507	3	Piston Ring ASM (+0.50MM)
30	98-9513	3	Pin-Piston
40	98-9514	6	Circlip-Pin, Piston
50	117-7586	3	Connecting Rod ASM
60	115-3014	3	Bushing-Pin, Piston
70	98-9517	6	Bolt-Rod, Connecting
80	98-9553	3	Bearing-Rod (STD)
80	98-9519	3	Bearing-Rod (-0.2MM)
80	117-7588	3	Metal-Crankpin (-0.4MM)
90	130-1375	1	Crankshaft ASM
100	117-7561	1	Gear-Crankshaft


Ref.	Part Number	Qty.	Description
110	98-9666	1	Key
120	127-0445	1	Gear-Drive, Oil Pump
130	98-9522	1	Sleeve-Crankshaft
140	127-0444	1	Collar-Crankshaft
150	105-3783	1	O-Ring
160	112-7005	1	Bearing-Main (STD)
160	98-9528	1	Bearing-Main (-0.2MM)
160	130-1274	1	Metal-Crankshaft (-0.40Mm)
170	98-9413	2	Bearing-Thrust (STD)
170	127-0416	2	Metal-Side (+0.2Mm)
170	127-0417	2	Metal-Side (+0.40Mm)
180	98-9688	2	Bearing-Thrust (STD)
180	127-0437	2	Metal-Side (+0.2MM)
180	127-0438	2	Metal-Side (+0.40MM)

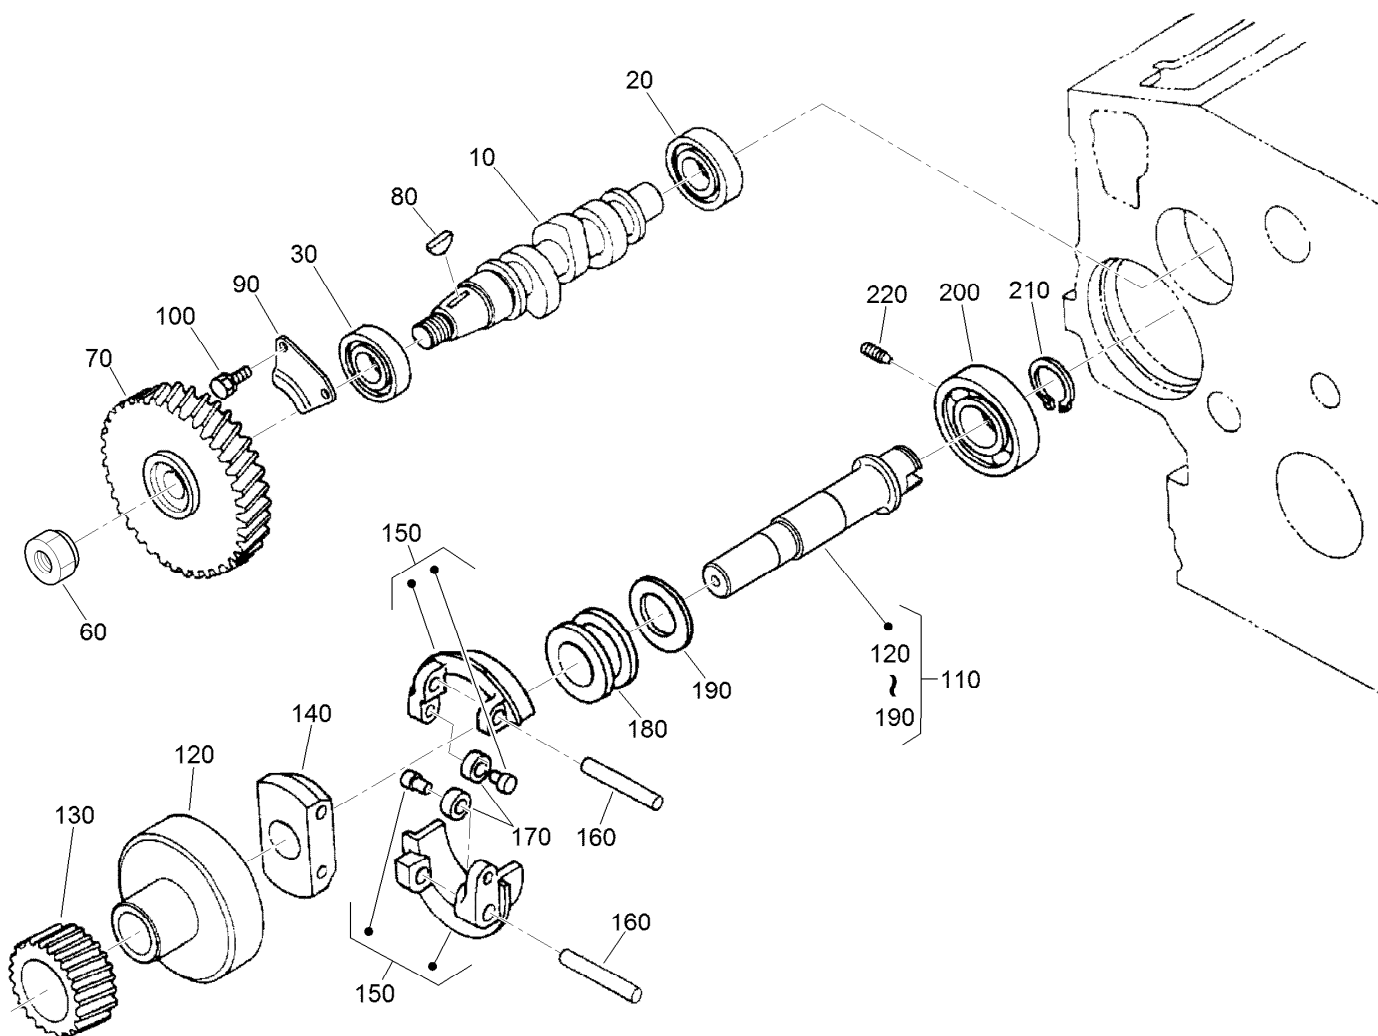

Fuel Camshaft and Governor Shaft Assembly


Ref.	Part Number	Qty.	Description
10	98-9459	1	Camshaft-Fuel
20	107-9077	1	Bearing-Ball
30	107-9078	1	Bearing-Ball
60	130-1512	1	Nut
70	130-1378	1	Gear-Injection Pump
80	98-9595	1	Key-Woodruff
90	98-9511	1	Stopper-Fuel, Camshaft
100	98-7692	2	Bolt
110	130-1255	1	Governor Shaft ASM
120	98-9562	1	Holder-Gear, Governor

Ref.	Part Number	Qty.	Description
130	98-9673	1	Gear-Governor
140	98-9561	1	Holder-Weight, Governor
150	98-9559	2	Governor Weight ASM
160	98-9560	2	Shaft-Weight, Governor
170	98-9692	2	Roller
180	98-9563	1	Sleeve-Governor
190	98-9564	1	Washer-Thrust
200	107-9079	1	Bearing-Ball
210	98-9657	1	Circlip-Shaft, Governor
220	98-9565	1	Screw-Set

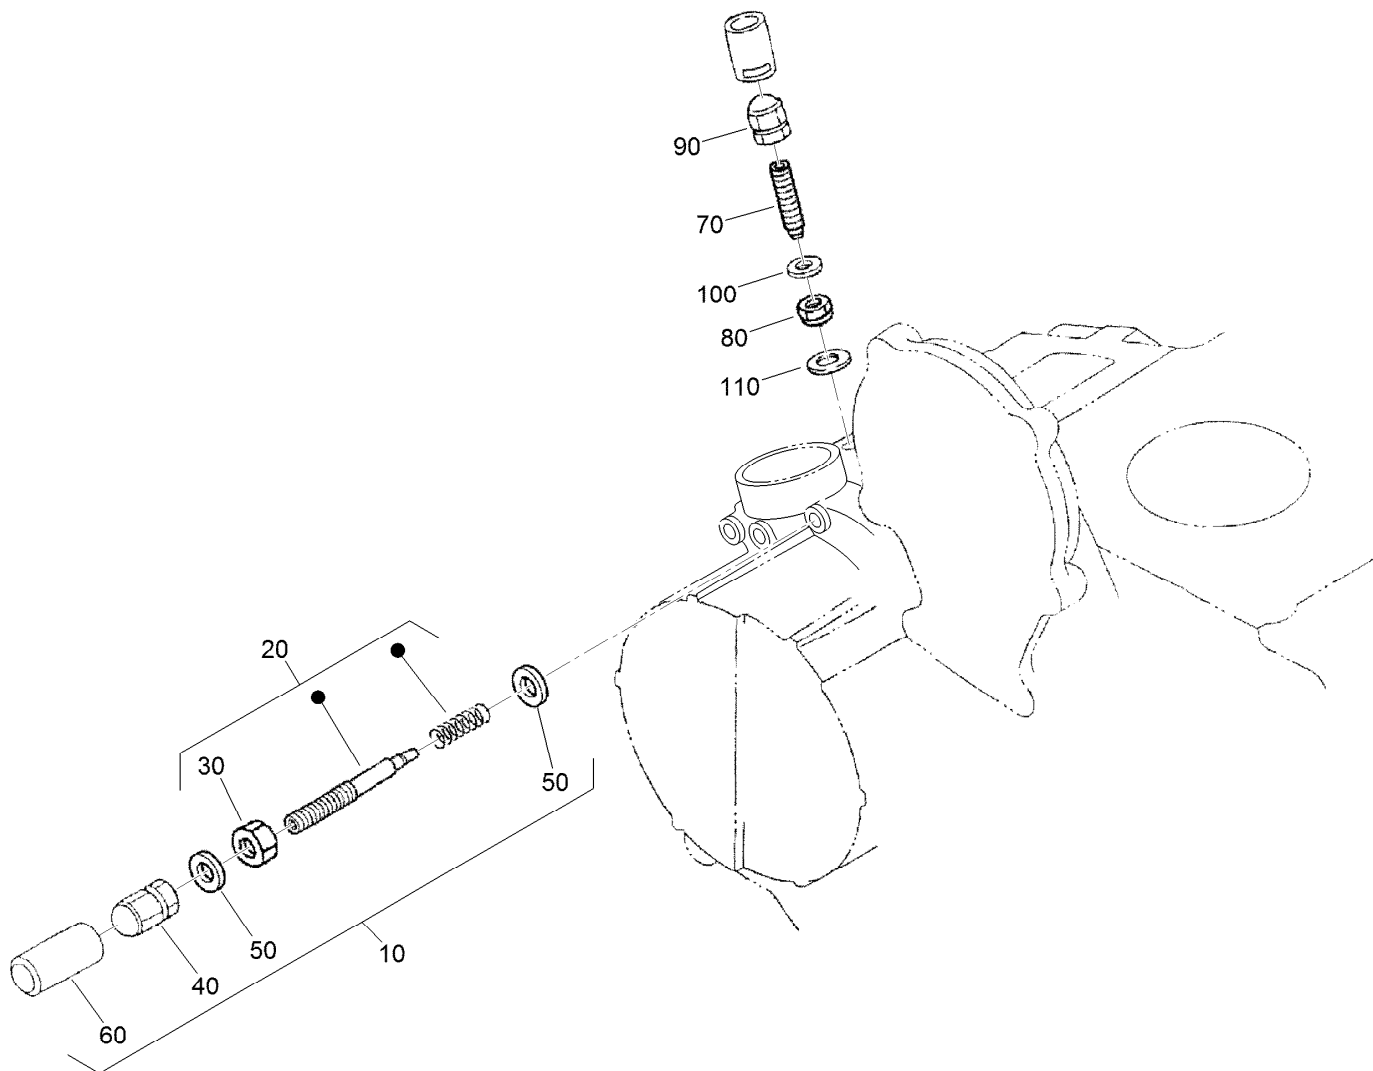


Idle Apparatus Assembly

Ref.	Part Number	Qty.	Description
10	107-7838	1	Apparatus-Idling
20	130-1253	1	Adjusting Bolt ASM
30	98-9439	1	Nut
40	112-0181	1	Nut
50	98-7654	2	Gasket
60	98-7656	1	Cap
70	112-7015	1	Bolt-Adjusting
80	100-2175	1	Nut-Lock
90	112-0181	1	Nut
100	98-7654	1	Gasket
110	107-9081	1	Gasket

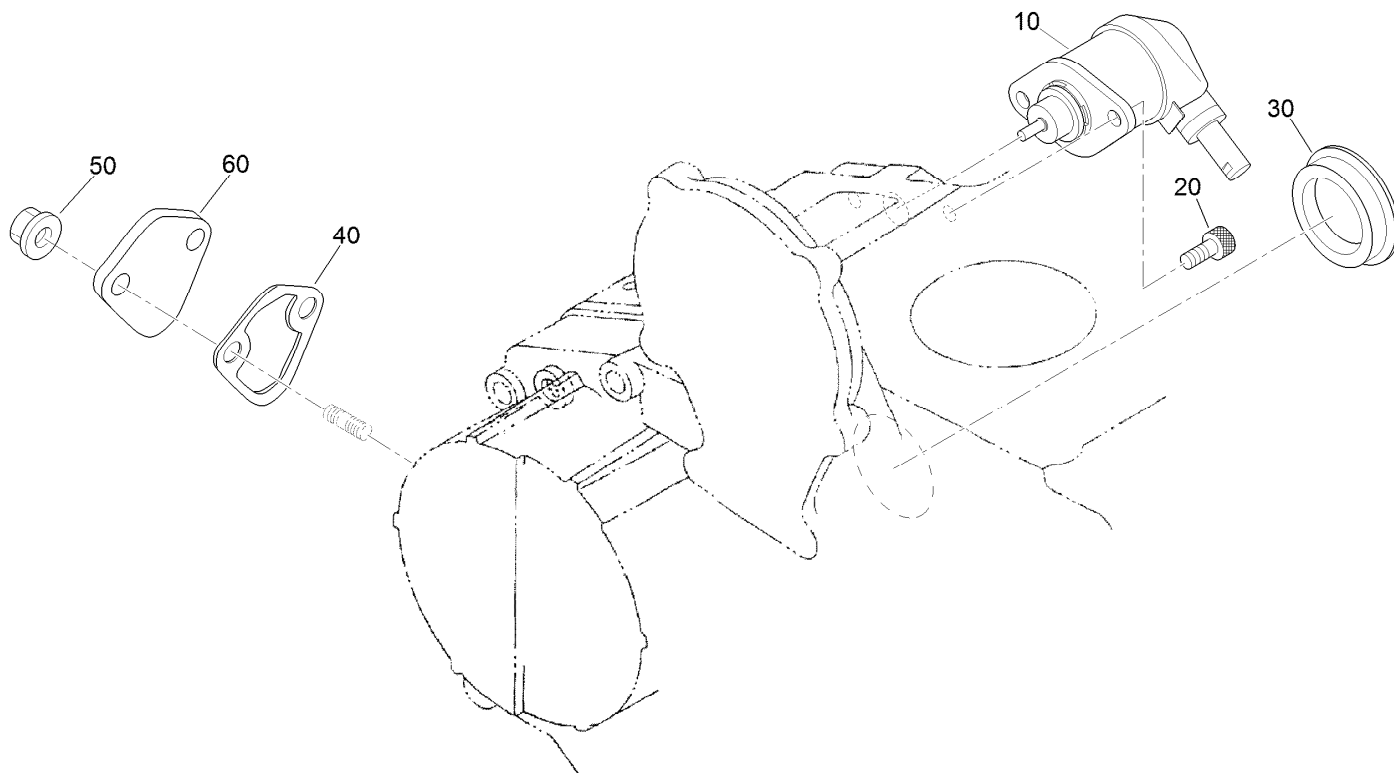

Stop Solenoid and Fuel Pump Cover Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	104-5155	1	Solenoid-Stop
20	130-1155	2	Screw-HSH
30	99-3514	1	Cover
40	117-7562	1	Gasket-Pump, Fuel
50	100-2203	2	Nut-Flange
60	112-7016	1	Cover-Pump

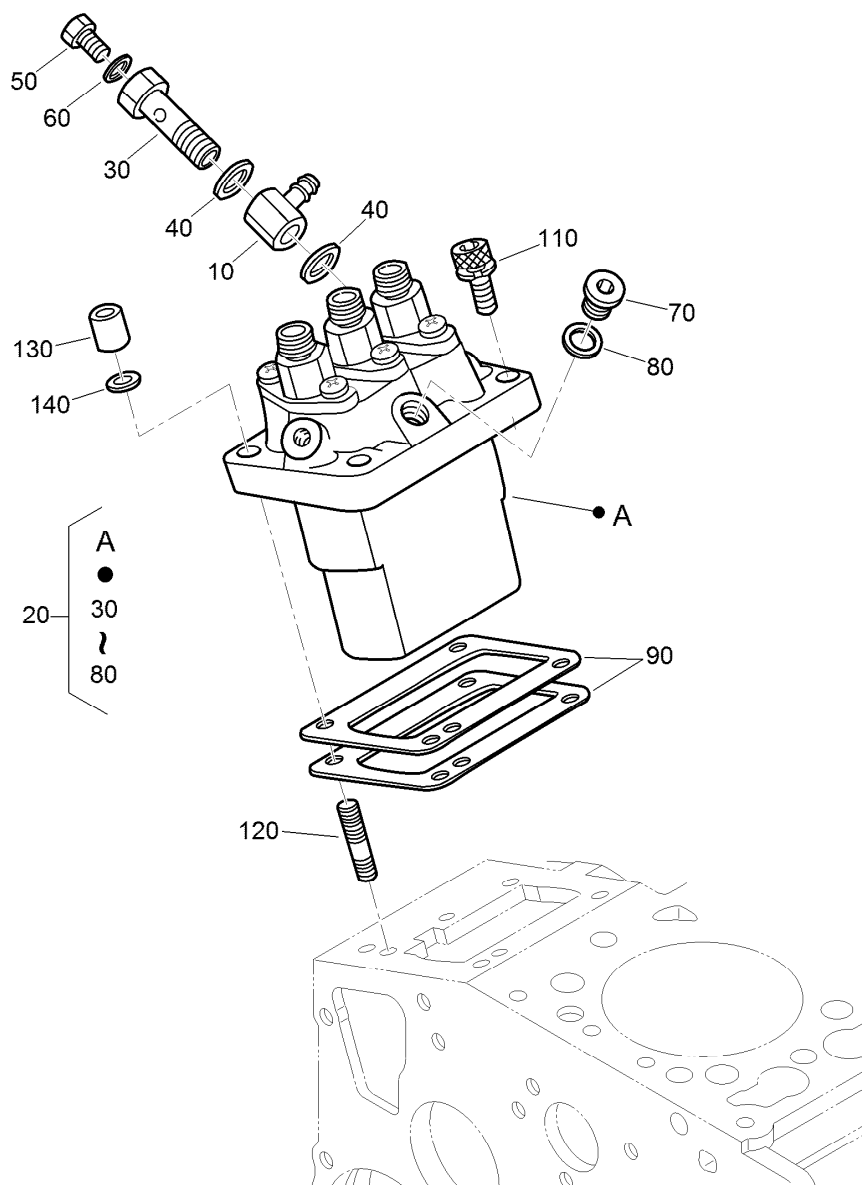

Injection Pump Assembly


Ref.	Part Number	Qty.	Description
10	98-9596	1	Joint-Eye
20	98-9643	1	Injection Pump ASM
30	98-9464	1	Bolt-Joint
40	98-9445	2	Gasket
50	98-9430	1	Screw
60	98-9446	1	Gasket
70	98-9466	1	Plug
80	98-9451	1	Gasket
90	98-9456	1	Shim-Injection (0.20MM)

Ref.	Part Number	Qty.	Description
90	98-9457	1	Shim-Injection (0.25MM)
90	98-9458	1	Shim-Injection (0.30MM)
90	115-3046	1	Shim-Injection (0.35MM)
90	115-3045	1	Shim-Injection (0.175MM)
110	117-7564	2	Bolt-Hex Soc HD
120	98-9438	2	Stud
130	98-9440	2	Nut-Cap
140	98-7699	2	Washer-Spring

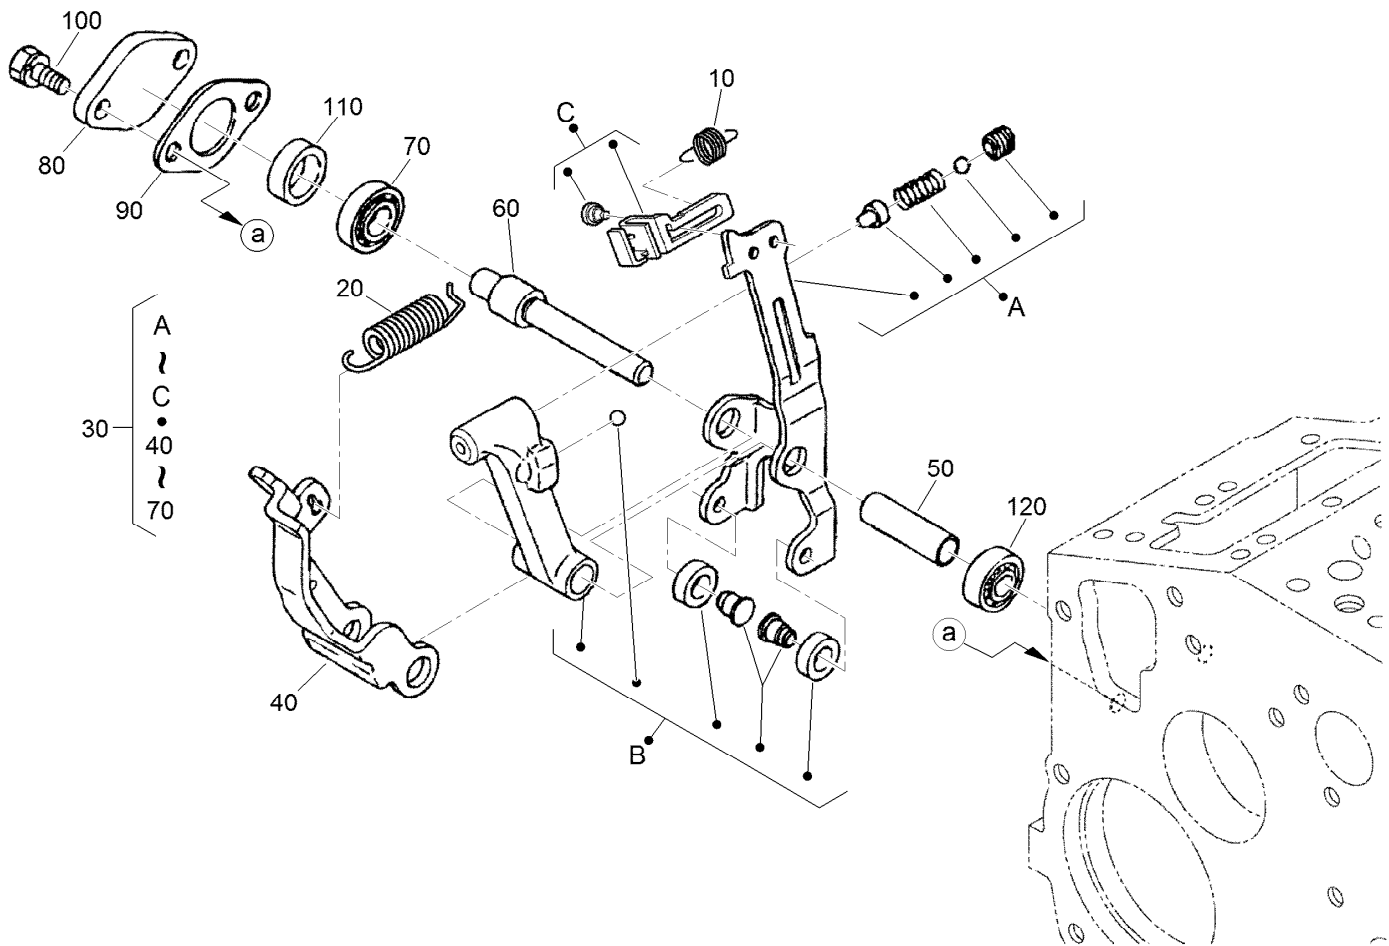

Governor Assembly


Ref.	Part Number	Qty.	Description
10	105-3786	1	Spring-Start
20	107-7839	1	Spring-Governor
30	107-7840	1	Fork Lever ASM
40	107-9084	1	Lever-Fork
50	107-9085	1	Shaft-Lever, Fork
60	107-9086	1	Shaft-Lever, Fork
70	98-9570	1	Bearing-Miniaturize
80	115-4122	1	Cover-Shaft, Fork Lever
90	98-9682	1	Gasket
100	98-9350	2	Bolt
110	98-9567	1	Collar
120	98-9571	1	Bearing-Miniaturize

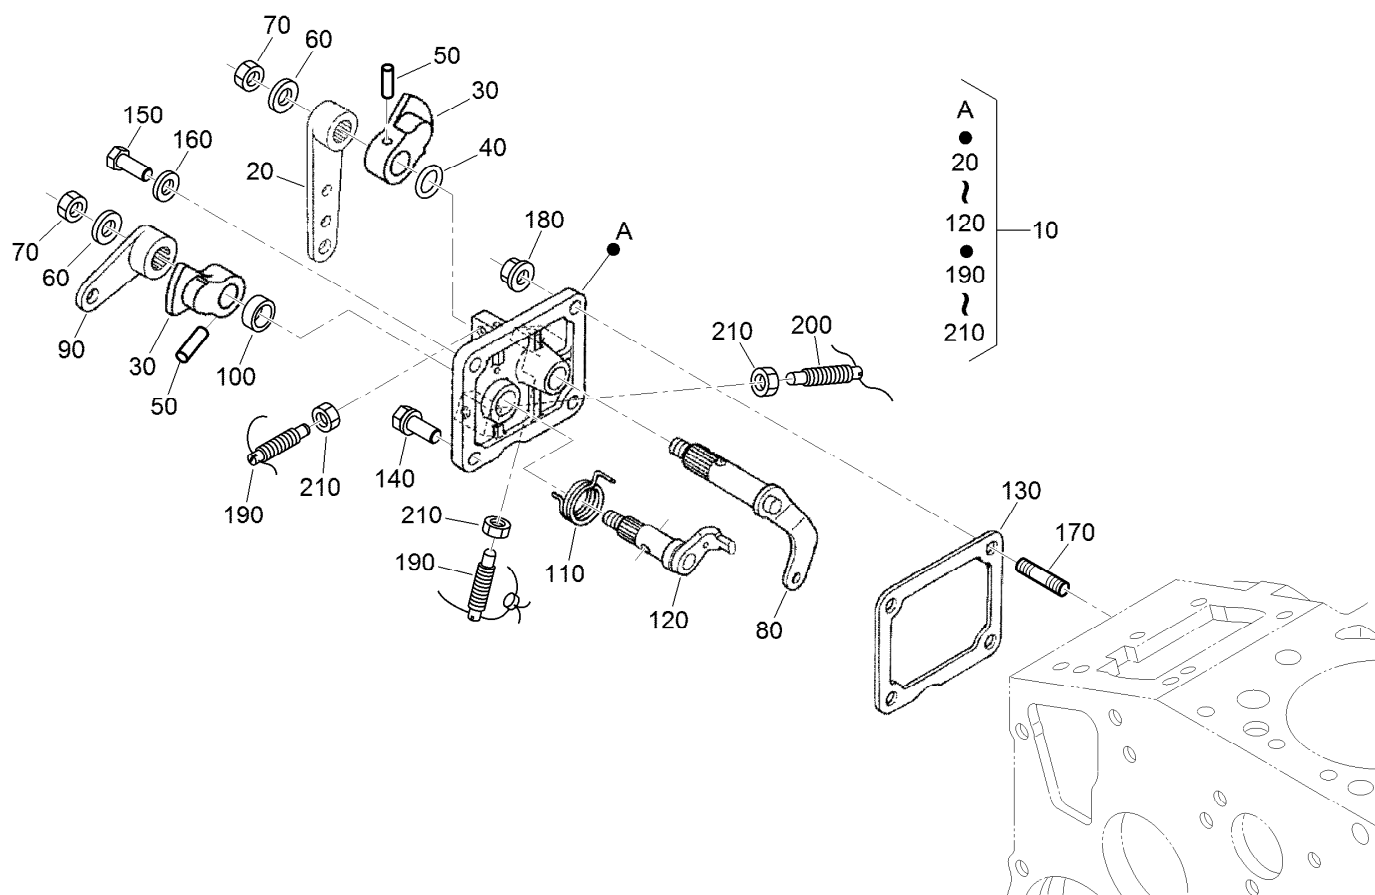

Speed Control Plate Assembly

Ref.	Part Number	Qty.	Description
10	105-3735	1	Control Plate ASM
20	98-9662	1	Lever-Control, Speed
30	98-9572	2	Lever-Control, Speed
40	105-3788	1	O-Ring
50	98-7602	2	Pin-Spring
60	98-9594	2	Washer-Plain
70	98-9589	2	Nut
80	98-9658	1	Governor Lever ASM
90	98-9663	1	Lever-Stop, Engine
100	98-7601	1	Seal-Oil
110	98-9472	1	Spring-Return


Ref.	Part Number	Qty.	Description
120	98-9664	1	Shaft-Lever, Stop
130	98-9637	1	Gasket
140	98-7692	1	Bolt
150	127-0401	1	Bolt-Hex
160	98-7654	1	Gasket
170	105-3710	2	Stud
180	100-2203	2	Nut-Flange
190	117-7565	2	Bolt-Adjusting
200	117-7566	1	Bolt-Adjusting
210	98-7572	3	Nut

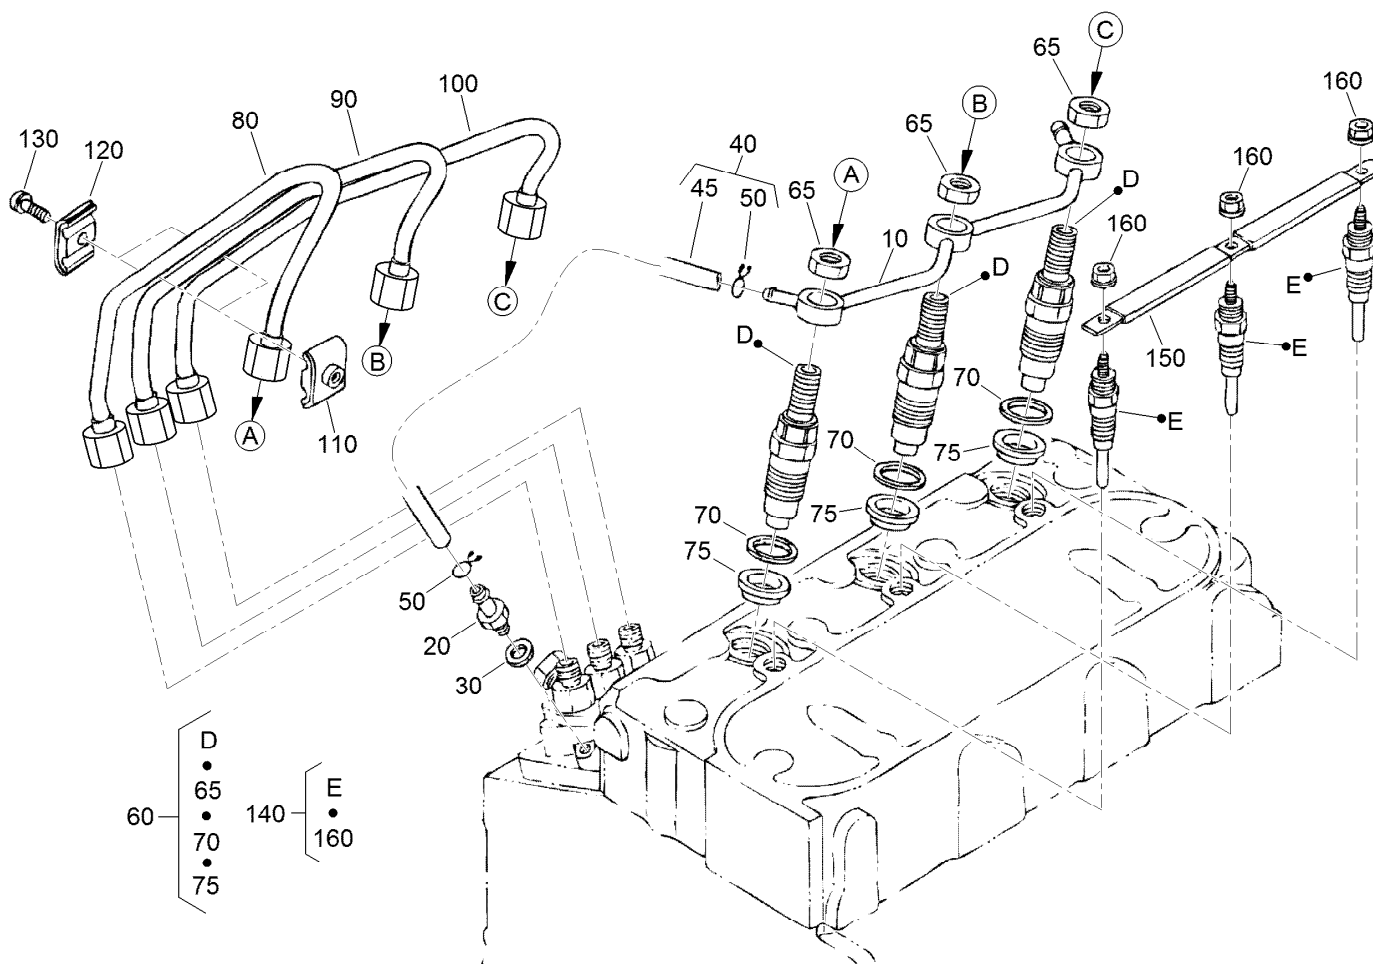

Nozzle Holder and Glow Plug Assembly


Ref.	Part Number	Qty.	Description
10	98-9620	1	Overflow Pipe ASM
20	98-9431	1	Screw-Bleeder, Air
30	98-7654	1	Gasket
40	98-9420	1	Overflow Pipe ASM
45	112-0182	1	Pipe-Overflow
50	98-7671	2	Clip-Pipe
60	115-3018	3	Nozzle Holder Kit
65	121-2411	3	Nut
70	98-7676	3	Gasket
75	98-7677	3	Seal-Heat

Ref.	Part Number	Qty.	Description
80	98-9622	1	Pipe-Injection
90	98-9654	1	Pipe-Injection
100	98-9655	1	Pipe-Injection
110	98-7682	2	Clamp-Pipe
120	98-7683	2	Clamp-Pipe
130	98-7684	2	Screw (W/Washer)
140	130-1411	3	Plug-Glow
150	98-9631	1	Cord-Plug, Glow
160	99-8377	3	Nut-Flange

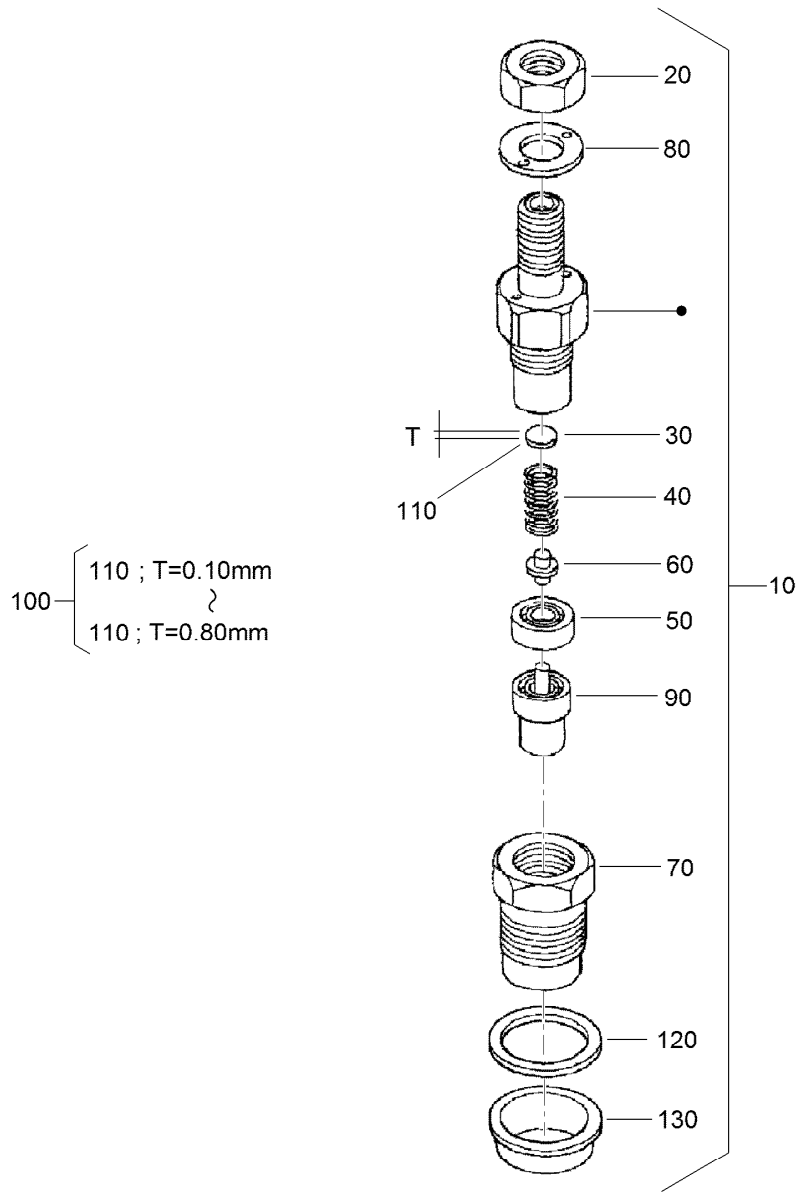


Nozzle Holder Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
10	115-3018	3	Nozzle Holder Kit	110	99-8311	3	Washer-Adjust (0.20MM)
20	121-2411	3	Nut	110	99-8312	3	Washer-Adjust (0.30MM)
30	99-8302	3	Washer-Adjusting	110	99-8313	3	Washer-Adjust (0.40MM)
40	99-8303	3	Spring-Nozzle	110	99-8314	3	Washer-Adjust (0.50MM)
50	99-8304	3	Spacer-Distance	110	99-8315	3	Washer-Adjust (0.52MM)
60	99-8305	3	Rod-Push	110	99-8316	3	Washer-Adjust (0.54MM)
70	99-8306	3	Nut-Nozzle	110	99-8317	3	Washer-Adjust (0.56MM)
80	99-8307	3	Washer-Plain	110	99-8318	3	Washer-Adjust (0.58MM)
90	115-3020	3	Piece-Nozzle	110	99-8319	3	Washer-Adjust (0.80MM)
100	99-8309	3	Adjusting Washer ASM	120	98-7676	3	Gasket
110	99-8310	3	Washer-Adjust (0.10MM)	130	98-7677	3	Seal-Heat

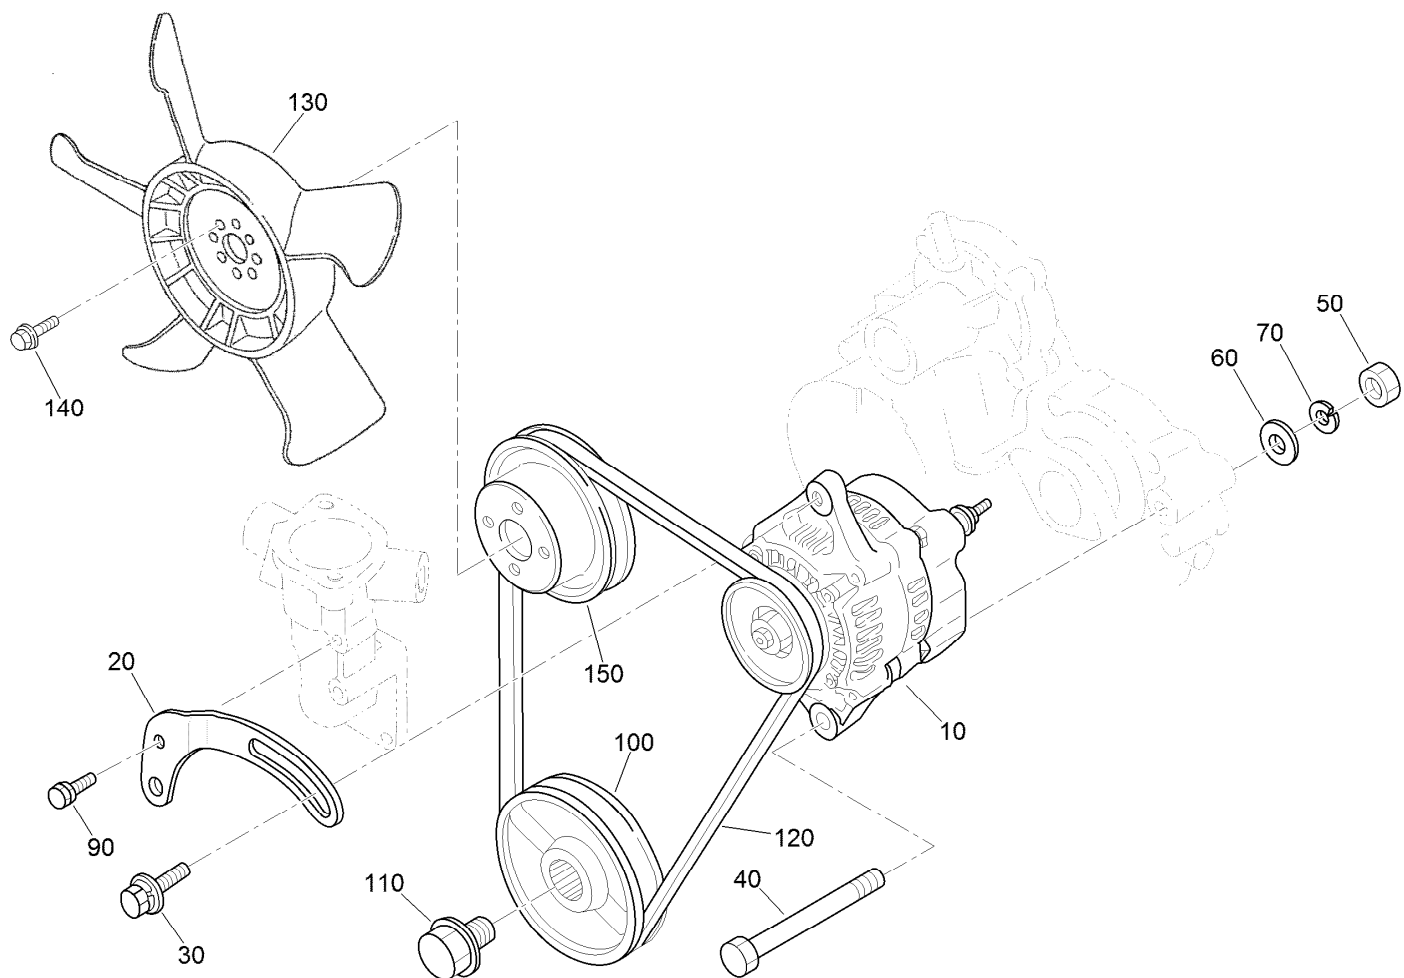

Alternator, Pulley and Fan Assembly


Ref.	Part Number	Qty.	Description
10	98-9474	1	Alternator ASM
20	112-7047	1	Stay-Dynamo
30	108-7088	1	Bolt
40	98-9360	1	Bolt
50	98-7737	1	Nut
60	98-9366	1	Washer-Plain
70	98-7738	1	Washer-Spring
90	98-7692	1	Bolt
100	99-3456	1	Pulley-Drive, Fan
110	98-9585	1	Bolt
120	130-1241	1	V Belt
130	99-3461	1	Fan
140	99-8363	4	Bolt-Flange
150	99-3453	1	Pulley-Fan

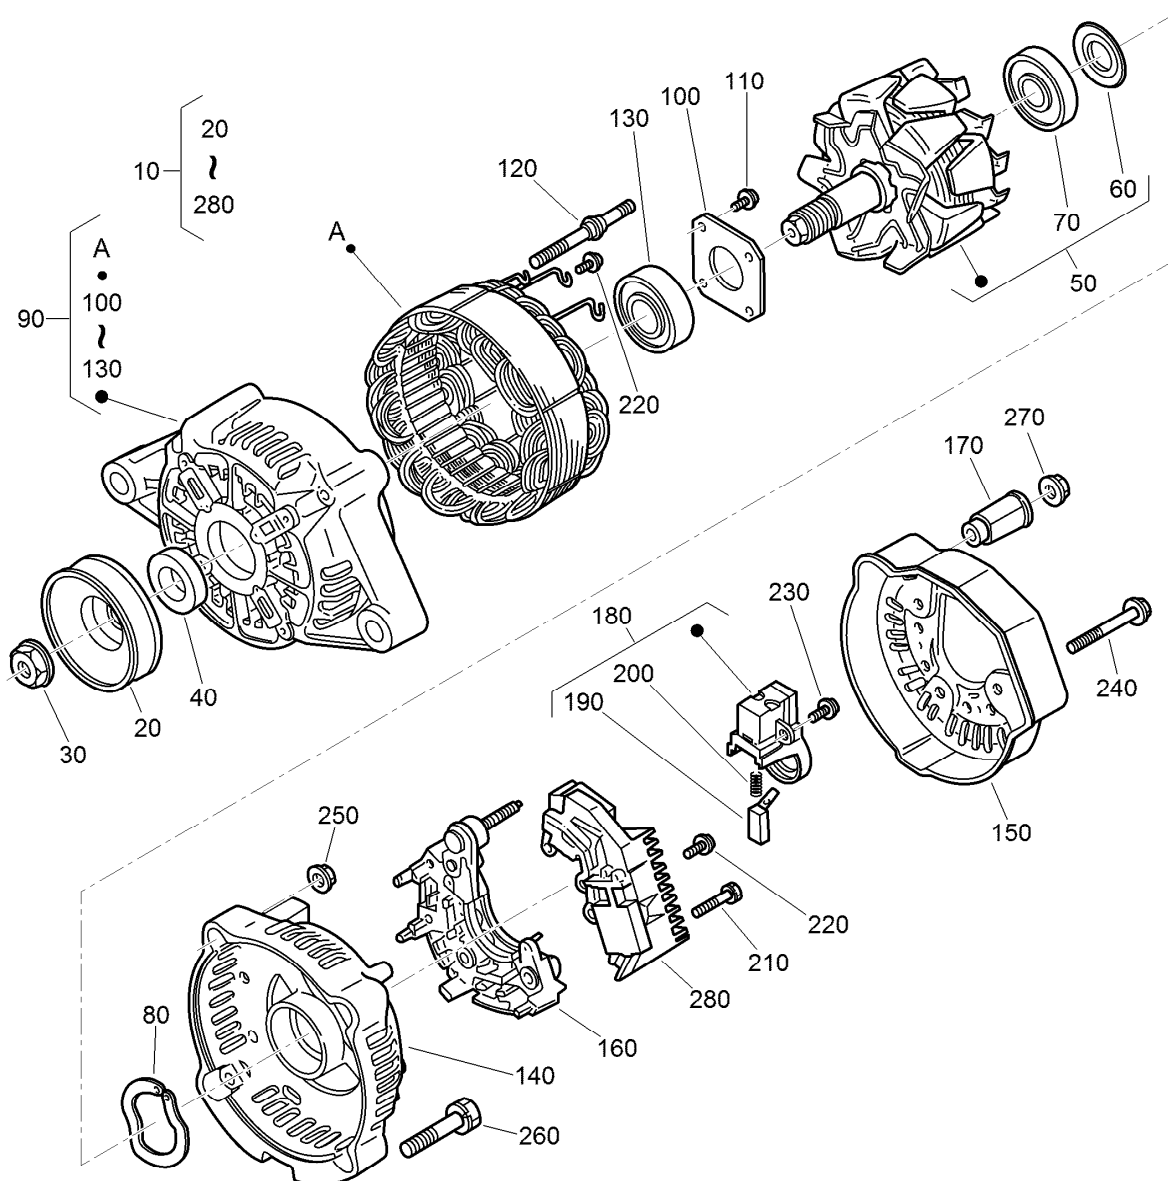

Alternator Components Assembly


Ref.	Part Number	Qty.	Description
10	98-9474	1	Alternator ASM
20	98-9453	1	Pulley-Dynamo
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor ASM
60	98-7711	1	Cover-Bearing
70	107-0138	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	133-2811	1	Bearing
140	107-9087	1	Frame-End

Ref.	Part Number	Qty.	Description
150	107-0140	1	Cover-End
160	127-1612	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	107-0141	1	Brush Holder ASM
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	110-3799	1	Regulator ASM

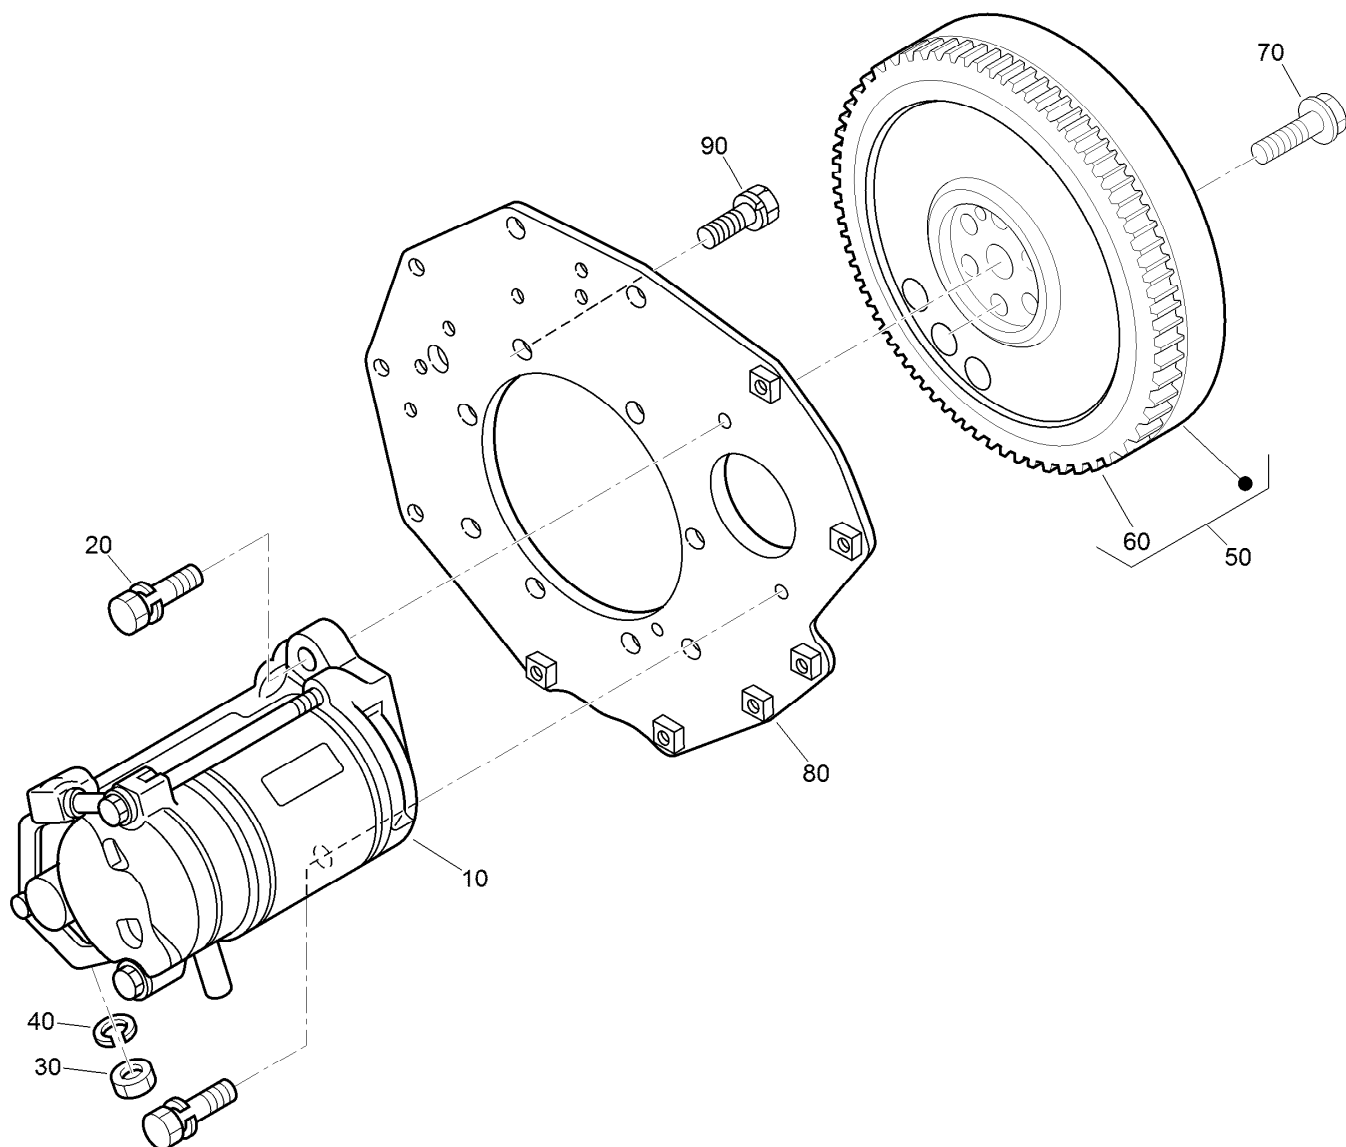

Starter and Flywheel Assembly


Ref.	Part Number	Qty.	Description
10	98-9705	1	Starter ASM
20	98-7697	2	Bolt
30	98-7739	1	Nut
40	105-2893	1	Washer-Spring
50	105-3784	1	Flywheel ASM
60	115-3015	1	Gear-Ring
70	98-9537	6	Bolt-Flywheel
80	98-9486	1	Plate-End, Rear
90	98-9392	8	Bolt

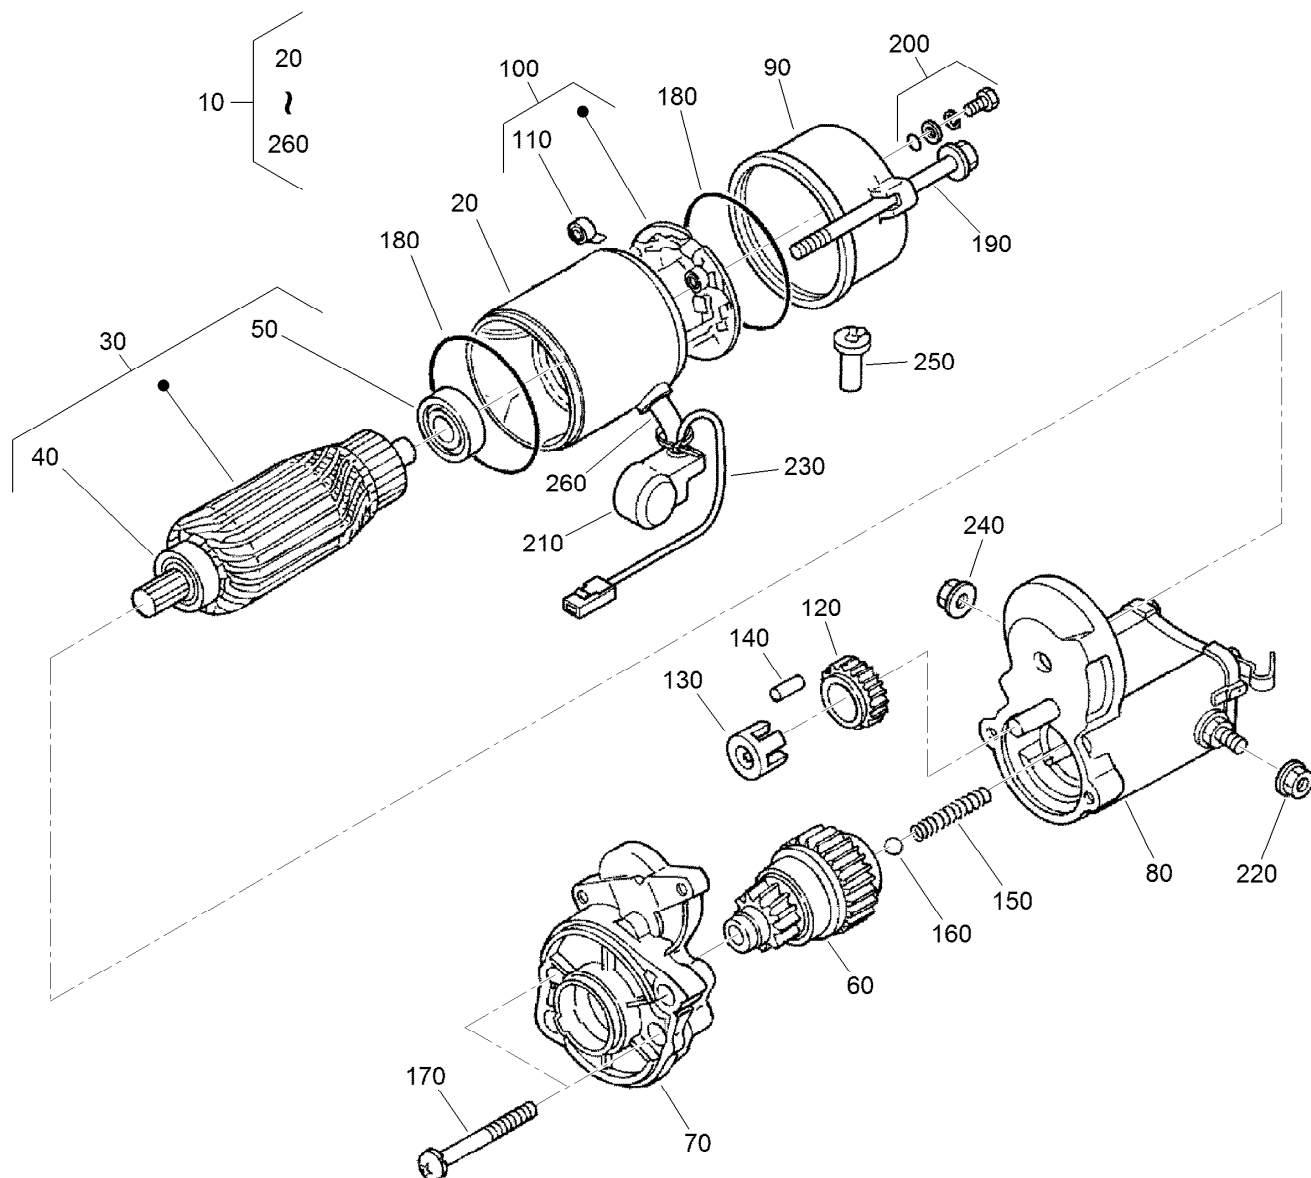

Starter Component Assembly


Ref.	Part Number	Qty.	Description
10	98-9705	1	Starter ASM
20	104-8608	1	Yoke ASM
30	98-7742	1	Armature ASM
40	98-7744	1	Bearing
50	98-7743	1	Bearing
60	99-8373	1	Clutch-Running, Over
70	99-8374	1	Frame-End, Drive
80	105-3746	1	Magnetic Switch ASM
90	98-7748	1	Frame-End
100	98-7749	1	Brush Holder ASM
110	98-7750	4	Spring-Brush
120	98-7751	1	Gear
130	98-7752	1	Retainer

Ref.	Part Number	Qty.	Description
140	98-7753	5	Roller
150	98-7754	1	Spring
160	98-7755	1	Ball
170	98-7756	2	Bolt
180	98-7757	2	O-Ring
190	100-9240	2	Bolt
200	98-7758	2	Bolt ASM
210	99-8375	1	Cover
220	99-8371	1	Nut-Hex
230	98-9711	1	Cord-Solenoid, Stop
240	99-8376	1	Nut-Hex
250	98-7759	1	Pipe-Drain
260	98-9712	1	Band-Cover

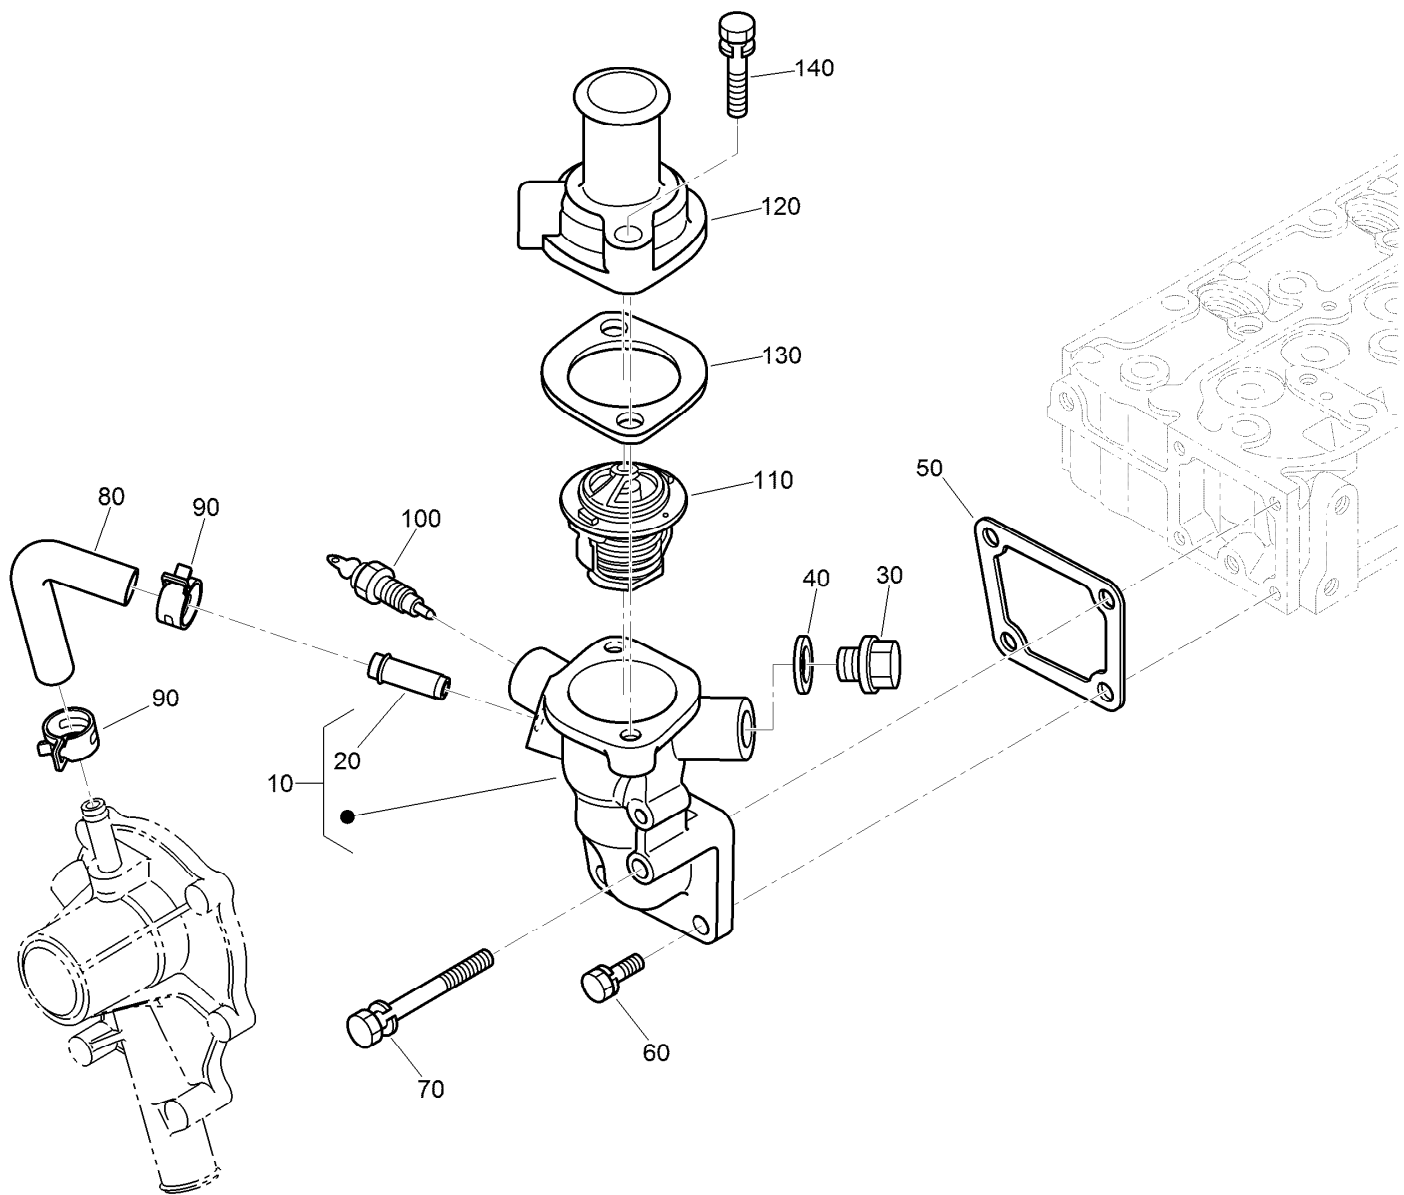


Water Flange and Thermostat Assembly

Ref.	Part Number	Qty.	Description
10	98-9713	1	Water Flange ASM
20	98-9580	1	Pipe-Return, Water
30	105-3747	1	Plug
40	99-3583	1	Gasket
50	98-9638	1	Gasket-Flange, Water
60	98-7692	3	Bolt
70	98-9356	1	Bolt
80	98-9578	1	Pipe-Return, Water
90	125-9078	2	Clamp-Hose
100	98-9719	1	Thermoswitch
110	98-7778	1	Thermostat ASM
120	98-9471	1	Cover-Thermostat
130	105-3748	1	Gasket-Thermostat
140	98-7777	2	Bolt

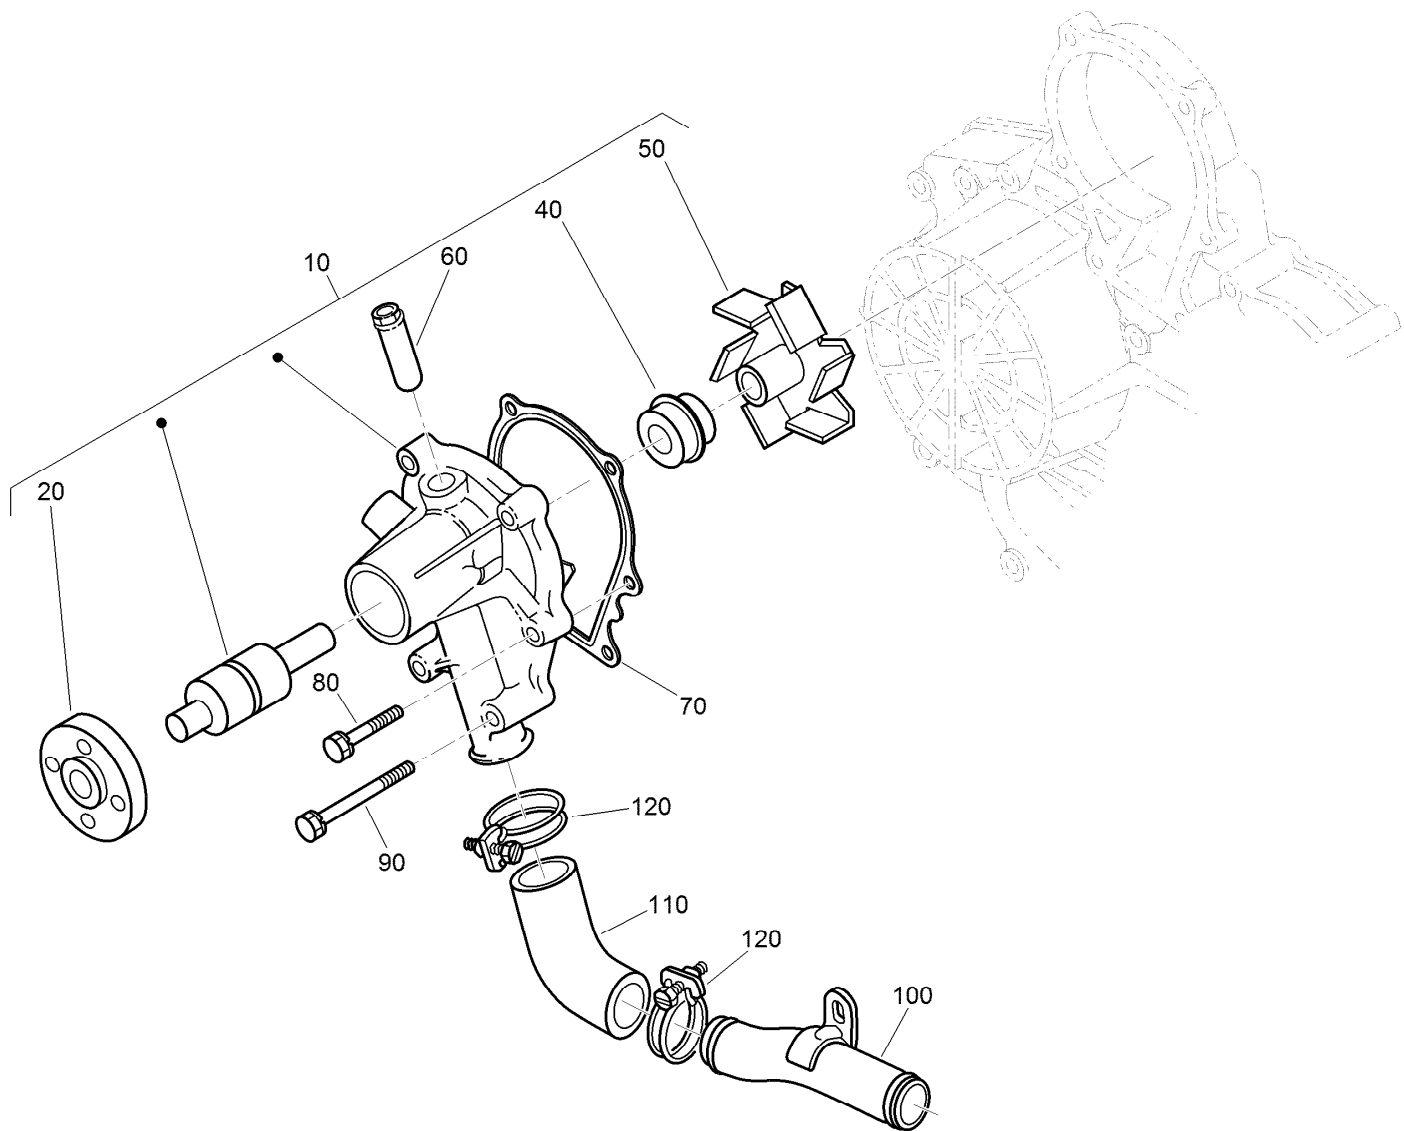

Water Pump and Water Pipe Assembly


Ref.	Part Number	Qty.	Description
10	107-9089	1	Water Pump ASM
20	99-3516	1	Flange-Pump, Water
40	105-3750	1	Mechanical Seal ASM
50	112-7017	1	Impeller-Pump, Water
60	100-1932	1	Pipe-Return, Water
70	99-3454	1	Gasket-Pump, Water
80	98-9353	4	Bolt
90	98-9357	2	Bolt
100	98-9716	1	Pipe-Water
110	107-9091	1	Pipe-Water
120	127-0439	2	Clamp-Hose

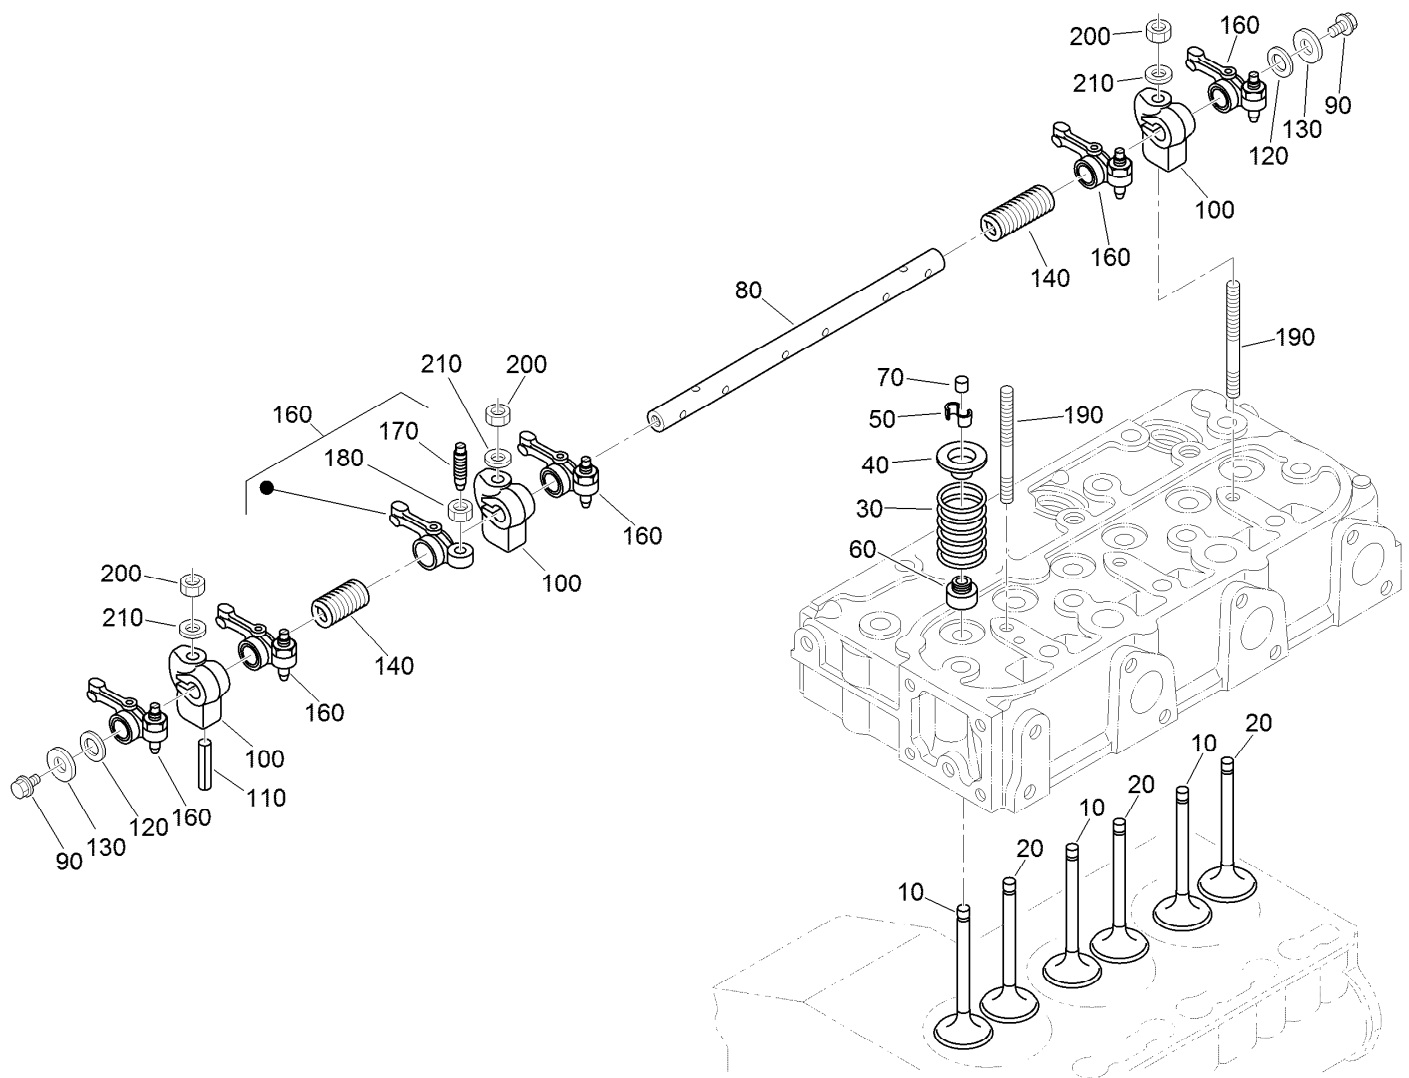

Valve and Rocker Arm Assembly


Ref.	Part Number	Qty.	Description
10	112-7018	3	Valve-Inlet
20	120-2564	3	Valve-Exhaust
30	98-9648	6	Spring-Valve
40	107-9092	6	Retainer-Spring
50	117-7572	6	Collet-Spring, Valve
60	99-8385	6	Seal-Stem, Valve
70	98-9497	6	Cap-Valve
80	130-1248	1	Shaft-Arm, Rocker
90	99-8363	2	Bolt-Flange
100	98-9505	3	Bracket-Arm, Rocker

Ref.	Part Number	Qty.	Description
110	105-3758	1	Pin-Spring
120	98-9507	2	Washer-Shaft, Rocker Arm
130	110-3832	2	Washer-Plain
140	98-9504	2	Spring-Arm, Rocker
160	112-7020	6	Rocker Arm ASM
170	98-9502	6	Screw-Adjusting
180	98-9503	6	Nut
190	98-9506	3	Stud
200	98-9393	3	Nut
210	98-9385	3	Washer-Flat

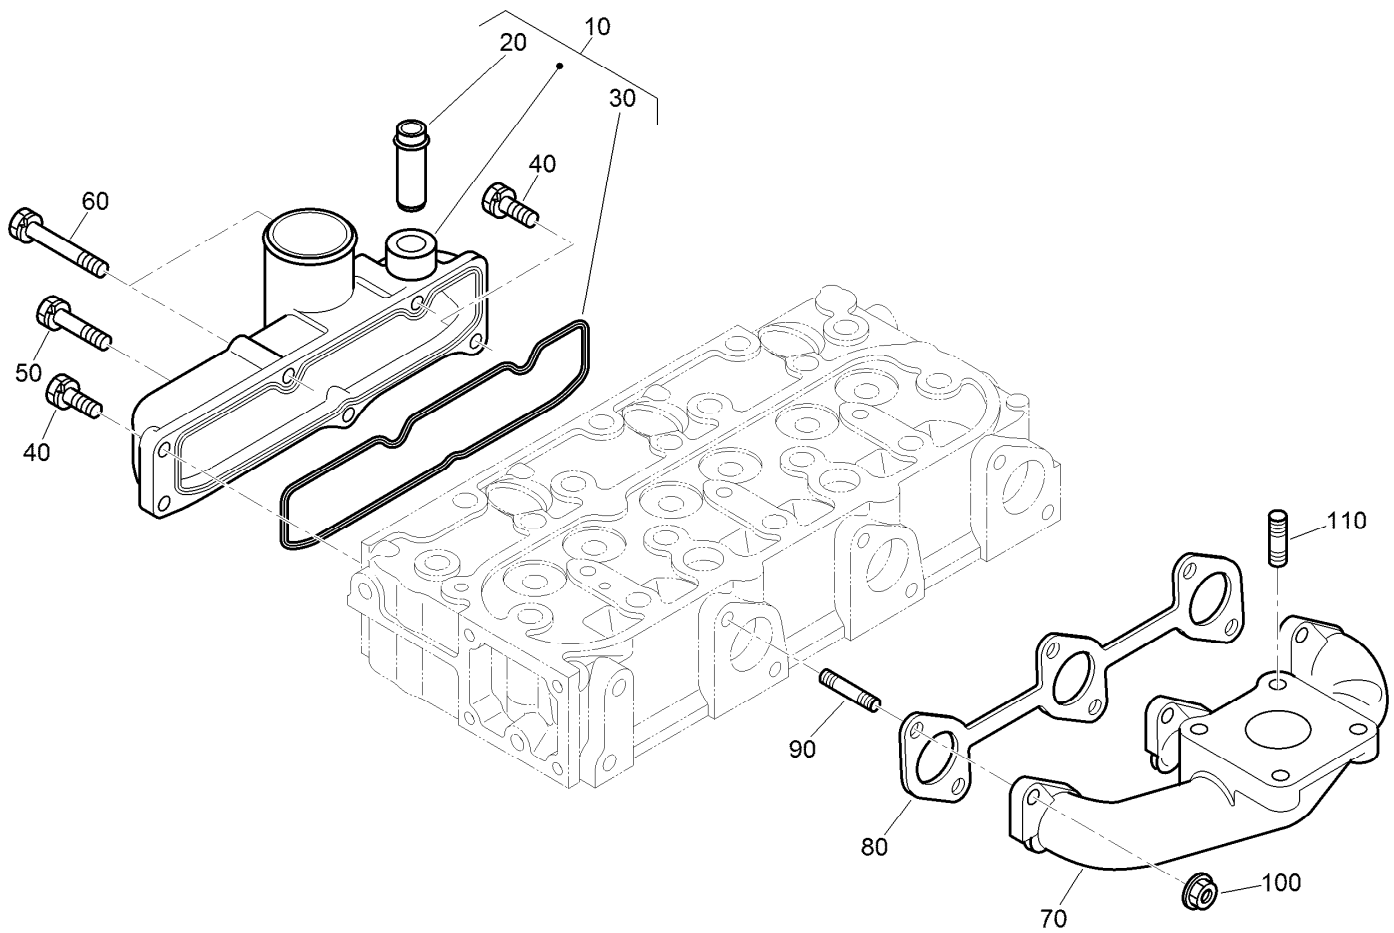


Inlet and Exhaust Manifold Assembly

Ref.	Part Number	Qty.	Description
10	107-7843	1	Manifold Inlet ASM
20	98-9492	1	Joint-Pipe, Breather
30	98-9609	1	Gasket-Manifold, Inlet
40	127-0403	3	Bolt-Flange
50	98-9353	1	Bolt
60	125-9063	2	Bolt-Sems
70	107-9093	1	Manifold-Exhaust
80	99-8327	1	Gasket-Manifold, Exhaust
90	98-9588	6	Stud
100	98-9665	6	Nut
110	98-7769	4	Stud

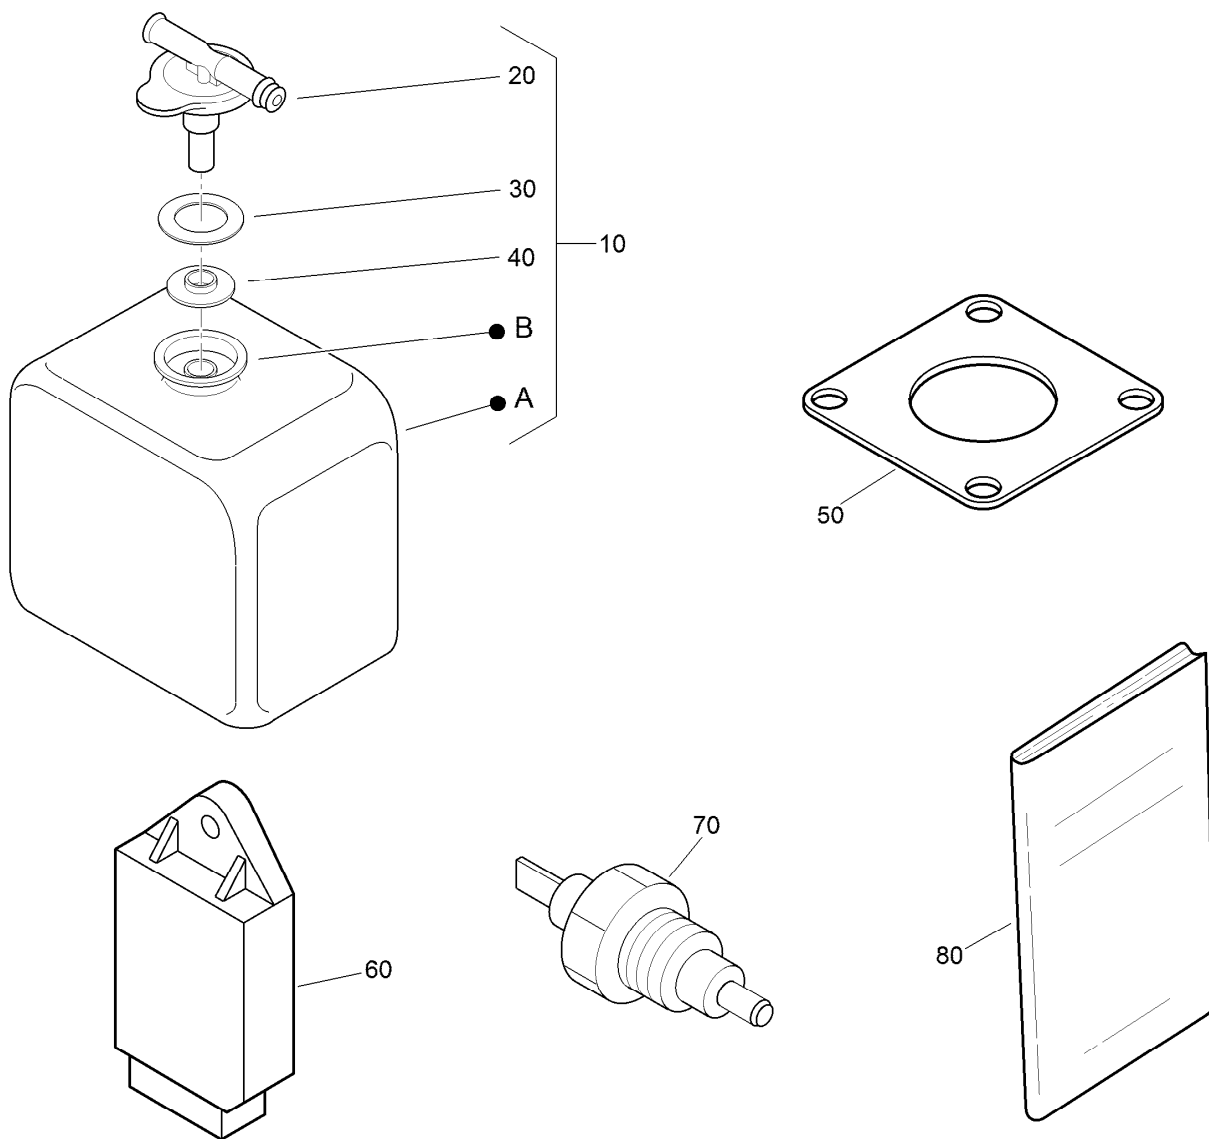


Miscellaneous Engine Parts

Ref.	Part Number	Qty.	Description
10	104-9318	1	Bottle-Overflow
20	115-4132	1	Cap
30	105-3755	1	Gasket
40	105-3756	1	Plate
50	99-8343	1	Gasket-Muffler
60	98-7611	1	Controller-Glow
70	106-7772	1	Thermoswitch
80	130-1543	1	Manual-Operator

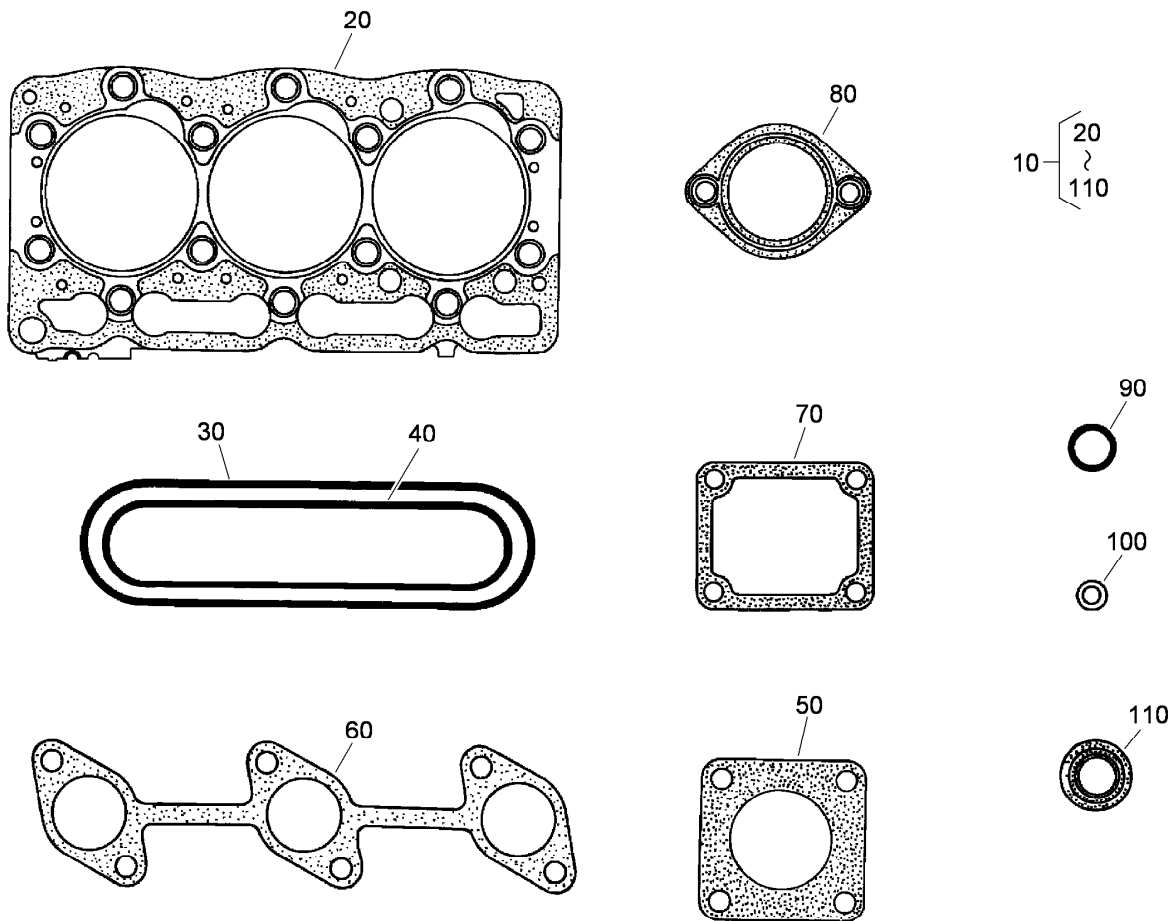

Upper Gasket Kit

Ref.	Part Number	Qty.	Description
10	107-7848	1	Upper Gasket Kit
20	108-6573	1	Gasket-Head, Cylinder
30	98-9615	1	Gasket-Cover, Head
40	98-9609	1	Gasket-Manifold, Inlet
50	99-8343	1	Gasket-Muffler
60	99-8327	1	Gasket-Manifold, Exhaust
70	98-9638	1	Gasket-Flange, Water
80	105-3748	1	Gasket-Thermostat
90	99-3446	2	O-Ring
100	98-9454	3	Gasket
110	99-8385	6	Seal-Stem, Valve

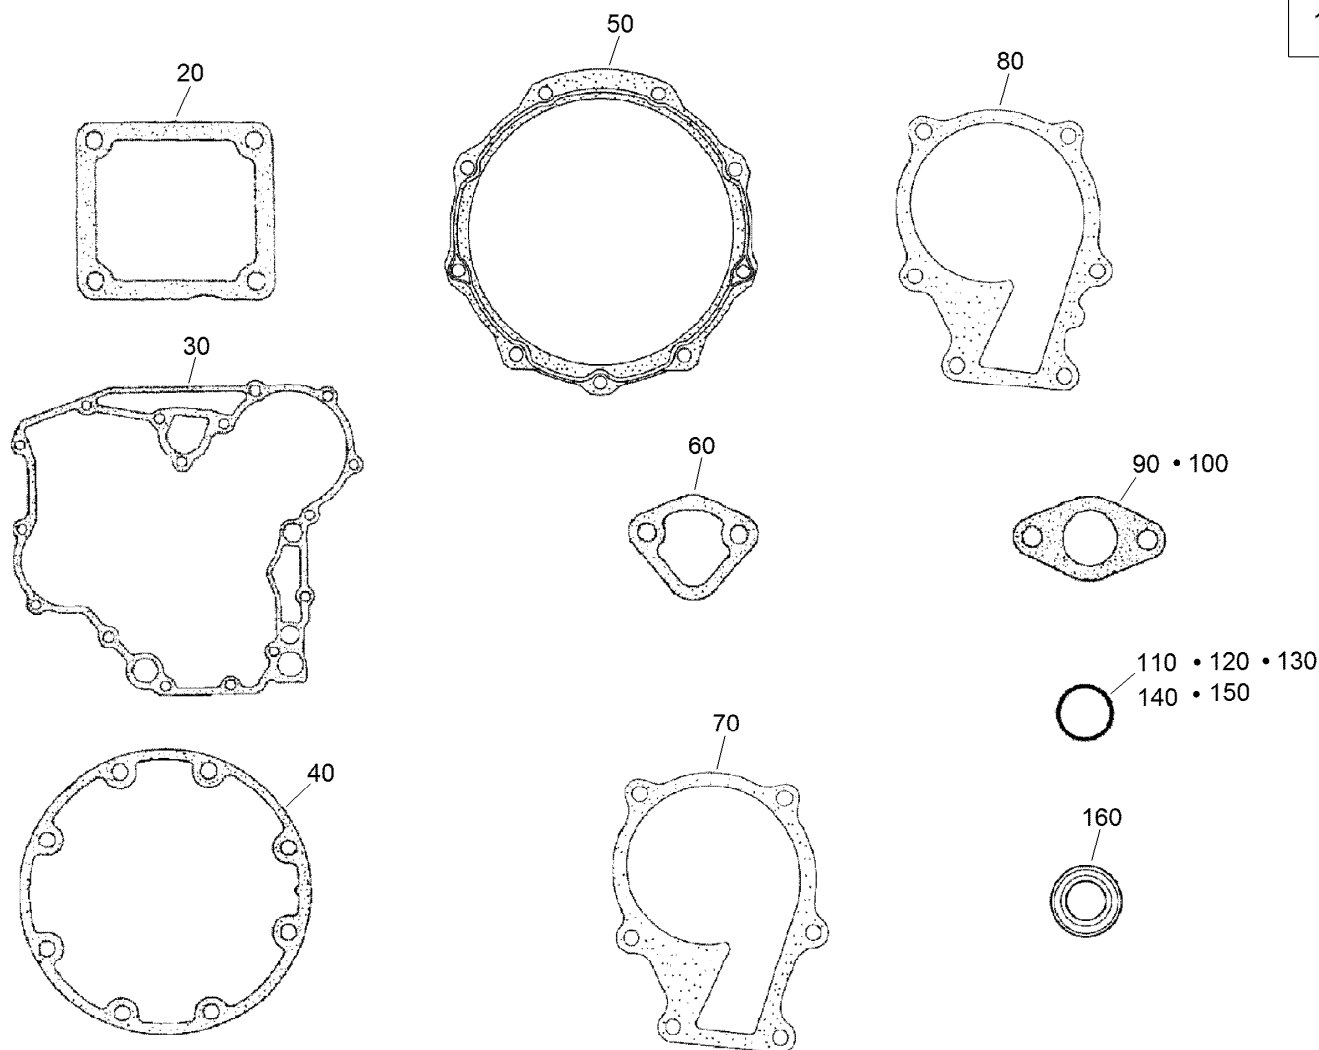

Lower Engine Gasket Kit

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
10	130-1364	1	Lower Gasket Kit	90	98-9682	1	Gasket
20	98-9637	1	Gasket	100	98-9683	1	Gasket-Cover, Solenoid
30	98-9633	1	Gasket-Case, Gear	110	105-3781	2	O-Ring
40	127-0440	1	Gasket-Case, Bearing	120	105-3777	2	O-Ring
50	112-7037	1	Gasket-Cover, Case	130	105-3783	1	O-Ring
60	117-7562	1	Gasket-Pump, Fuel	140	105-3776	1	O-Ring
70	98-9632	1	Gasket-Pump, Water	150	105-3788	1	O-Ring
80	99-3454	1	Gasket-Pump, Water	160	98-7601	1	Seal-Oil

Attachments and Accessories

For 03171 Reelmaster 3100-D Traction Unit With Sidewinder

Product Name	Model/Part
27in Lift Arm Kit	03172
32in Lift Arm Kit	03173
5-Blade 27in DPA Edge Series Cutting Unit.....	03188
8-Blade 27in DPA Edge Series Cutting Unit.....	03189
11-Blade 27in DPA Edge Series Cutting Unit	03190
8-Blade 32in DPA Edge Series Cutting Unit.....	03191
RM3105 27in, 8bld Rr Es No Frt Roller Cu.....	03192
27in Verticutter Cutting Unit	03203
Smooth Rear Tire	127-2796
Hi-Back Seat Cover	133-1308
Wheel Weight Kit	136-3315
Decal-Service, Japan	138-1190
Premium Seat Kit.....	30629
White Universal Sunshade	30669
Red Universal Sunshade	30671
Arm Rest Kit.....	30707
LED Light Kit.....	31696
New Red Paint - Gallon	361-11
Dark Metallic Gray Aerosol Paint	361-12
Semi-Gloss Black Spray Paint.....	361-9
1000 Hour MVP Kit	44963
Air Dry Red Paint - Qt	5340



Count on it.