



Count on it.

Parts Catalog

Reelmaster® 3105-D Traction Unit

Model No. 03174—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

 
For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame and Platform Assembly	5
Battery Tray and Cover Assembly	6
Engine and Air Cleaner Assembly	7
Air Cleaner Assembly No. 93-2190	8
Engine Mount and Muffler Assembly	10
Radiator/Oil Cooler Mounting Assembly	11
Lift Arm Mount Assembly	12
Rear Lift Arm Assembly	13
Fuel System Assembly	14
Control Console Assembly	16
Seat Assembly	18
Steering Assembly	19
Steering Valve Assembly No. 121-7856	20
Pedal Assembly	21
Footplate Assembly	23
Hood Assembly	24
Hydraulic Drive and Wheel Assembly	25
Hydraulic Motor Assembly No. 110-8786	26
Hydraulic Motor Assembly No. 110-8785	27
Brake Assembly No. 104-7705	28
Rear Caster Assembly	29
Hydraulic Cylinder Assembly No. 121-3653	30
Tandem Hydraulic Pump Assembly	31
Hydraulic Pump Assembly No. 104-4890	33
Gear Pump Assembly No. 95-8601	35
Tandem Pump Mount Assembly	36
Hydraulic Hose Assembly	37
Steering Hydraulic Assembly	38
Hydraulic Cylinder Assembly No. 117-5109	39
Hydraulic Cylinder Assembly No. 112-9916	40
Mow Circuit Hydraulic Assembly	42
Gear Motor Assembly No. 115-8250	43
Electrical Assembly	44
Hydraulic Tank and Valve Assembly	45
Hydraulic Manifold Assembly No. 108-9037	47
Single Spool Control Valve Assembly No. 95-8689	48
Crankcase Assembly	49
Oil Pan and Dipstick Assembly	50
Cylinder Head Assembly	51
Gear Case and Oil Filter Cartridge Assembly	52
Cylinder Head Cover Assembly	53
Main Bearing Case Assembly	54
Camshaft and Idle Gear Shaft Assembly	55
Piston and Crankshaft Assembly	56
Fuel Camshaft and Governor Shaft Assembly	57
Idle Apparatus Assembly	58
Stop Solenoid and Fuel Pump Cover Assembly	59
Injection Pump Assembly	60
Governor Assembly	61
Speed Control Plate Assembly	62
Nozzle Holder and Glow Plug Assembly	63
Nozzle Holder Assembly	64
Alternator, Pulley and Fan Assembly	65
Alternator Components Assembly	66

Contents (continued)


- Starter and Flywheel Assembly 67
- Starter Component Assembly 68
- Water Flange and Thermostat Assembly 69
- Water Pump and Water Pipe Assembly 70
- Valve and Rocker Arm Assembly..... 71
- Inlet and Exhaust Manifold Assembly 72
- Miscellaneous Engine Parts 73
- Upper Gasket Kit 74
- Lower Engine Gasket Kit..... 75
- Attachments and Accessories 76

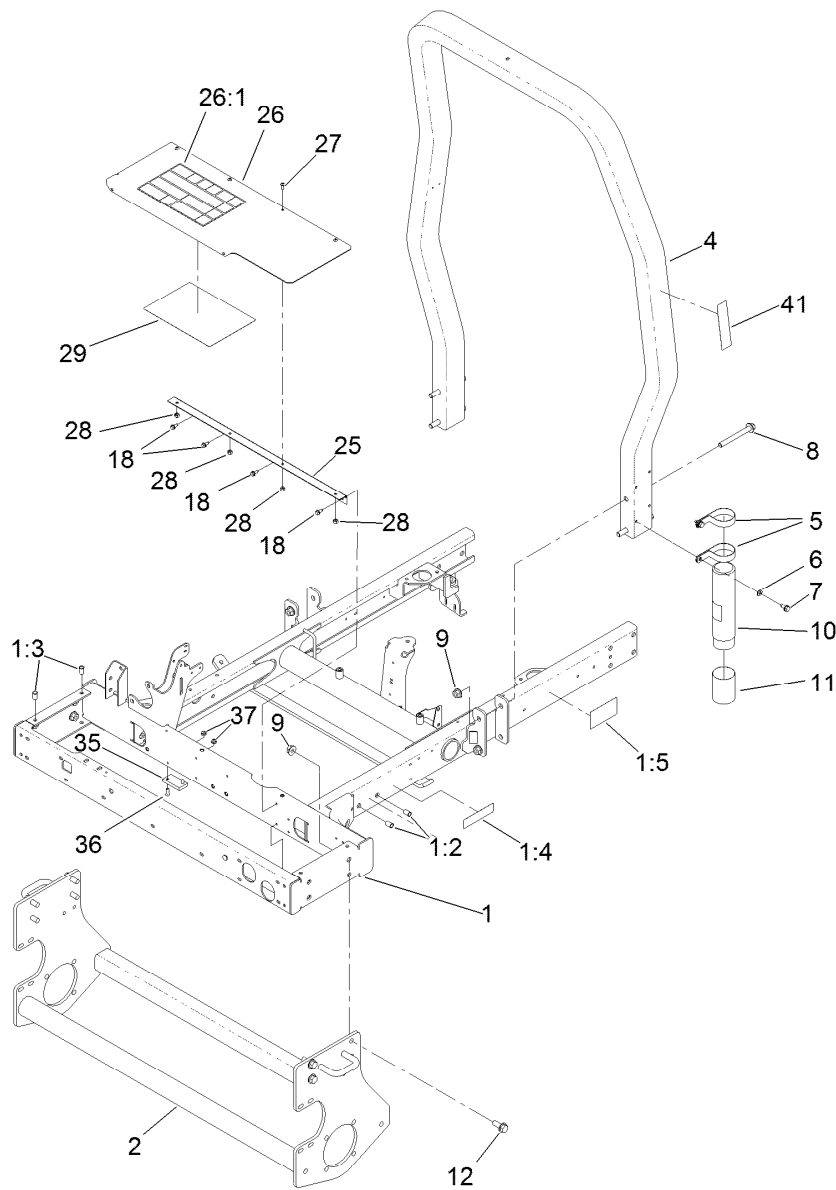

Frame and Platform Assembly

Ref.	Part Number	Qty.	Description
1	121-3639	1	Frame ASM W/Decals
1:2	32148-8	2	Nut-Clinch
1:3	32148-6	2	Nut-Clinch
1:4	133-8062	1	Decal-Arrestor, Spark
1:5	117-3270	2	Decal-Danger
2	95-8568-03	1	Frame-Lower
4	127-8493	1	ROPS ASM
5	2412-133	2	Clamp-R
6	3256-23	2	Washer-Plain
7	32144-70	2	Screw-HWHTF
8	117-3176	4	Screw-HHF
9	32128-49	12	Nut-HHF
10	104-7050	1	Tube-Manual


Ref.	Part Number	Qty.	Description
11	104-7048	1	Cap-Housing
12	3234-38	8	Screw-HHF
18	32144-10	4	Screw-HWH
25	119-2034	1	Hinge-Toolbox
26	119-2029	1	Toolbox Cover ASM
26:1	121-3623	1	Decal-Danger
27	119-6906	4	Screw-HSBH
28	3296-42	4	Nut-Lock, NI
29	138-6979	1	Decal-Service
35	95-8684	1	Pad-Bumper
36	3289-4	2	Screw-FH
37	104-7201	2	Nut-HF, NI
41	115-8226	1	Decal-ROPS

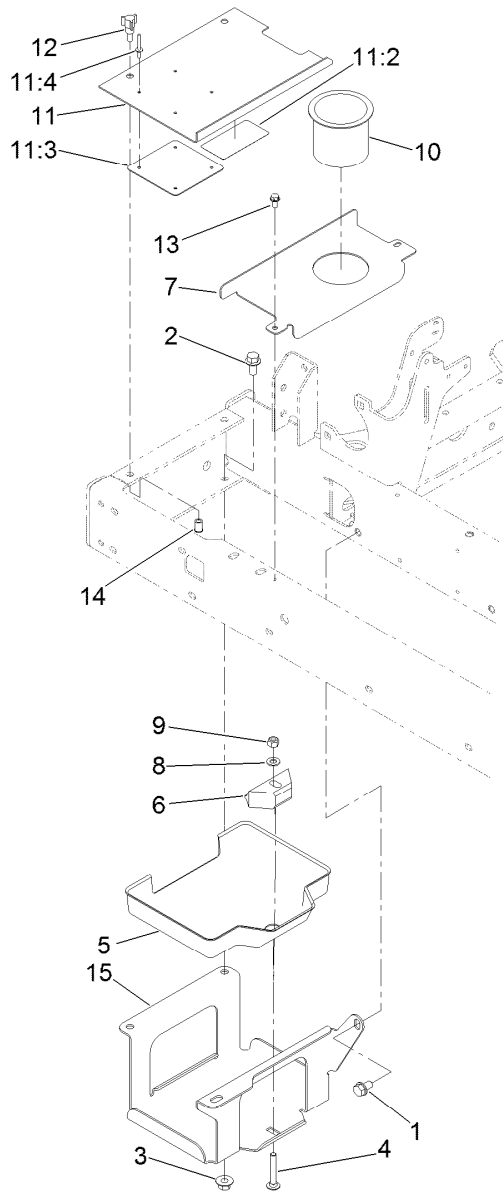 

Battery Tray and Cover Assembly

Ref.	Part Number	Qty.	Description
1	32144-15	1	Screw-HHFTF
2	3234-1	3	Screw-HHF
3	32128-43	3	Nut-Flange
4	3230-6	1	Bolt-CARR
5	99-3513	1	Tray-Battery
6	138-6335	1	Retainer-Battery
7	95-8817-01	1	Cover-Battery, Inner
8	3256-23	1	Washer-Plain
9	3296-29	1	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
10	94-1410	1	Holder-Can, Beverage
11	99-3602	1	Battery Cover ASM
11:2	93-7276	1	Decal-Danger
11:3	87-7620	1	Shield-Terminal, Battery
11:4	3269-27	4	Rivet-Snap
12	233-70	2	Knob-Star, Three
13	32144-4	2	Screw-HWH
14	32148-6	2	Nut-Clinch
15	95-8796-03	1	Support-Battery

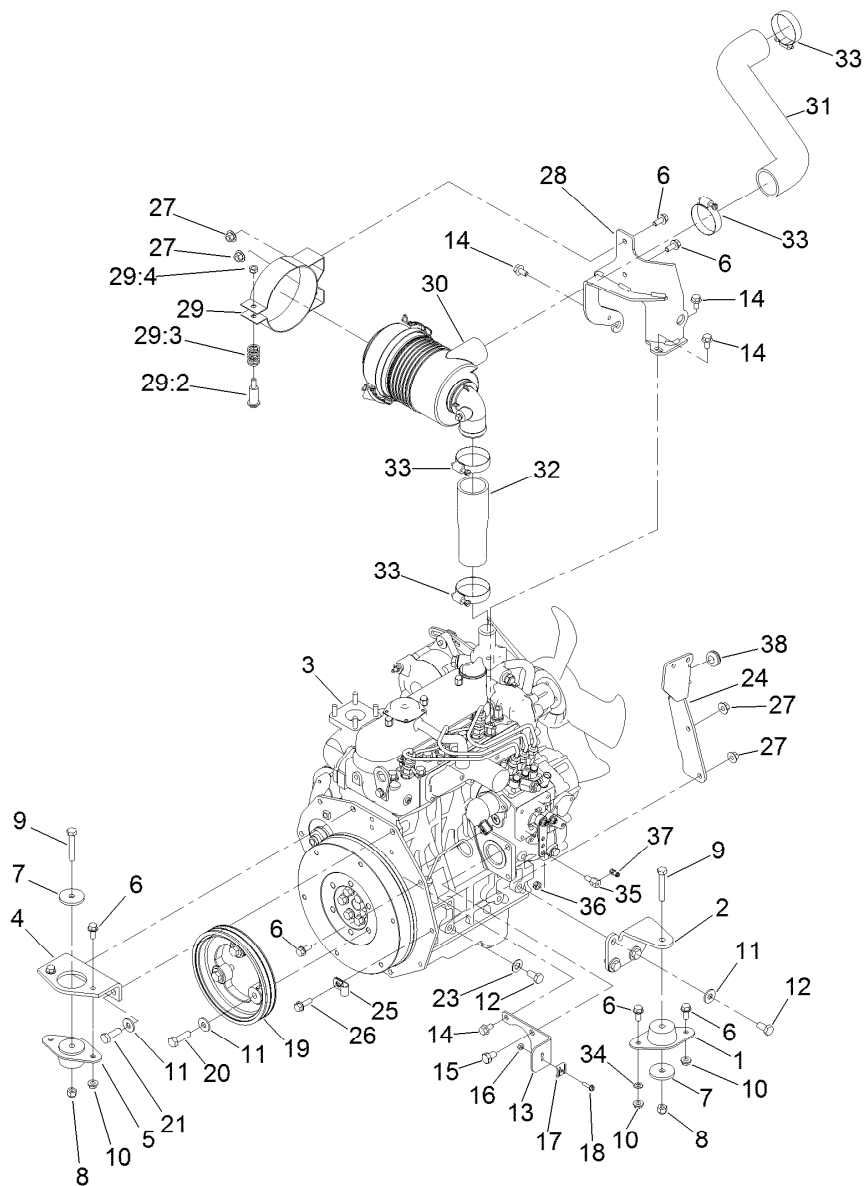 


Engine and Air Cleaner Assembly

Ref.	Part Number	Qty.	Description
1	121-9076	1	Mount-Engine
2	95-8937-0P	1	Mount-Engine, LH
3	138-6905	1	Engine-Kubota, D1105
4	95-8926-0P	1	Mount - Engine, Front
5	93-5265	1	Mount-Engine
6	3234-5	7	Screw-HHF
7	80-8560	2	Washer-Hardened
8	3296-39	2	Nut-Lock, NI
9	323-11	2	Screw-HH
10	32128-20	4	Nut-HF
11	80-6990	7	Washer-Hardened
12	63-7790	4	Screw-Cap
13	110-9009-0P	1	Bracket-Cable, Throttle
14	33104-016	4	Screw-HHF
15	70-8470	1	Screw-HH
16	3296-2	1	Nut-Lock, NI
17	81-1690	1	Clamp-Cable
18	32105-13	1	Screw-HWH
19	99-3412-03	1	Pulley
20	56-2140	3	Screw-HH
21	95-8812	1	Screw-HH

Ref.	Part Number	Qty.	Description
23	33095-00	1	Washer-Flat
24	115-3487-0P	1	Bracket-Mount, Fuel Filter
25	2412-10	1	Clamp-R
26	3234-17	1	Screw-HHF
27	32128-44	4	Nut
28	136-3154-0P	1	Bracket-Cleaner, Air
29	93-2191	1	Air Cleaner Mounting Band ASM
29:2	94-3653	1	Bolt
29:3	94-3654	1	Spring
29:4	48-9510	1	*obs* Nut
30	93-2190	1	Air Cleaner ASM
31	95-8946	1	Hose-Upper, Air Inlet
32	95-8947	1	Hose-Air Inlet, Lower
33	2412-92	4	Clamp-Hose
34	120-9683	1	Washer-Plain
35	98-9311	1	Swivel-Throttle
36	3296-20	1	Nut-Lock, NI
37	112-9919	1	Stop-Cable, Throttle
38	1-543296	1	Grommet

 
Air Cleaner Assembly No. 93-2190

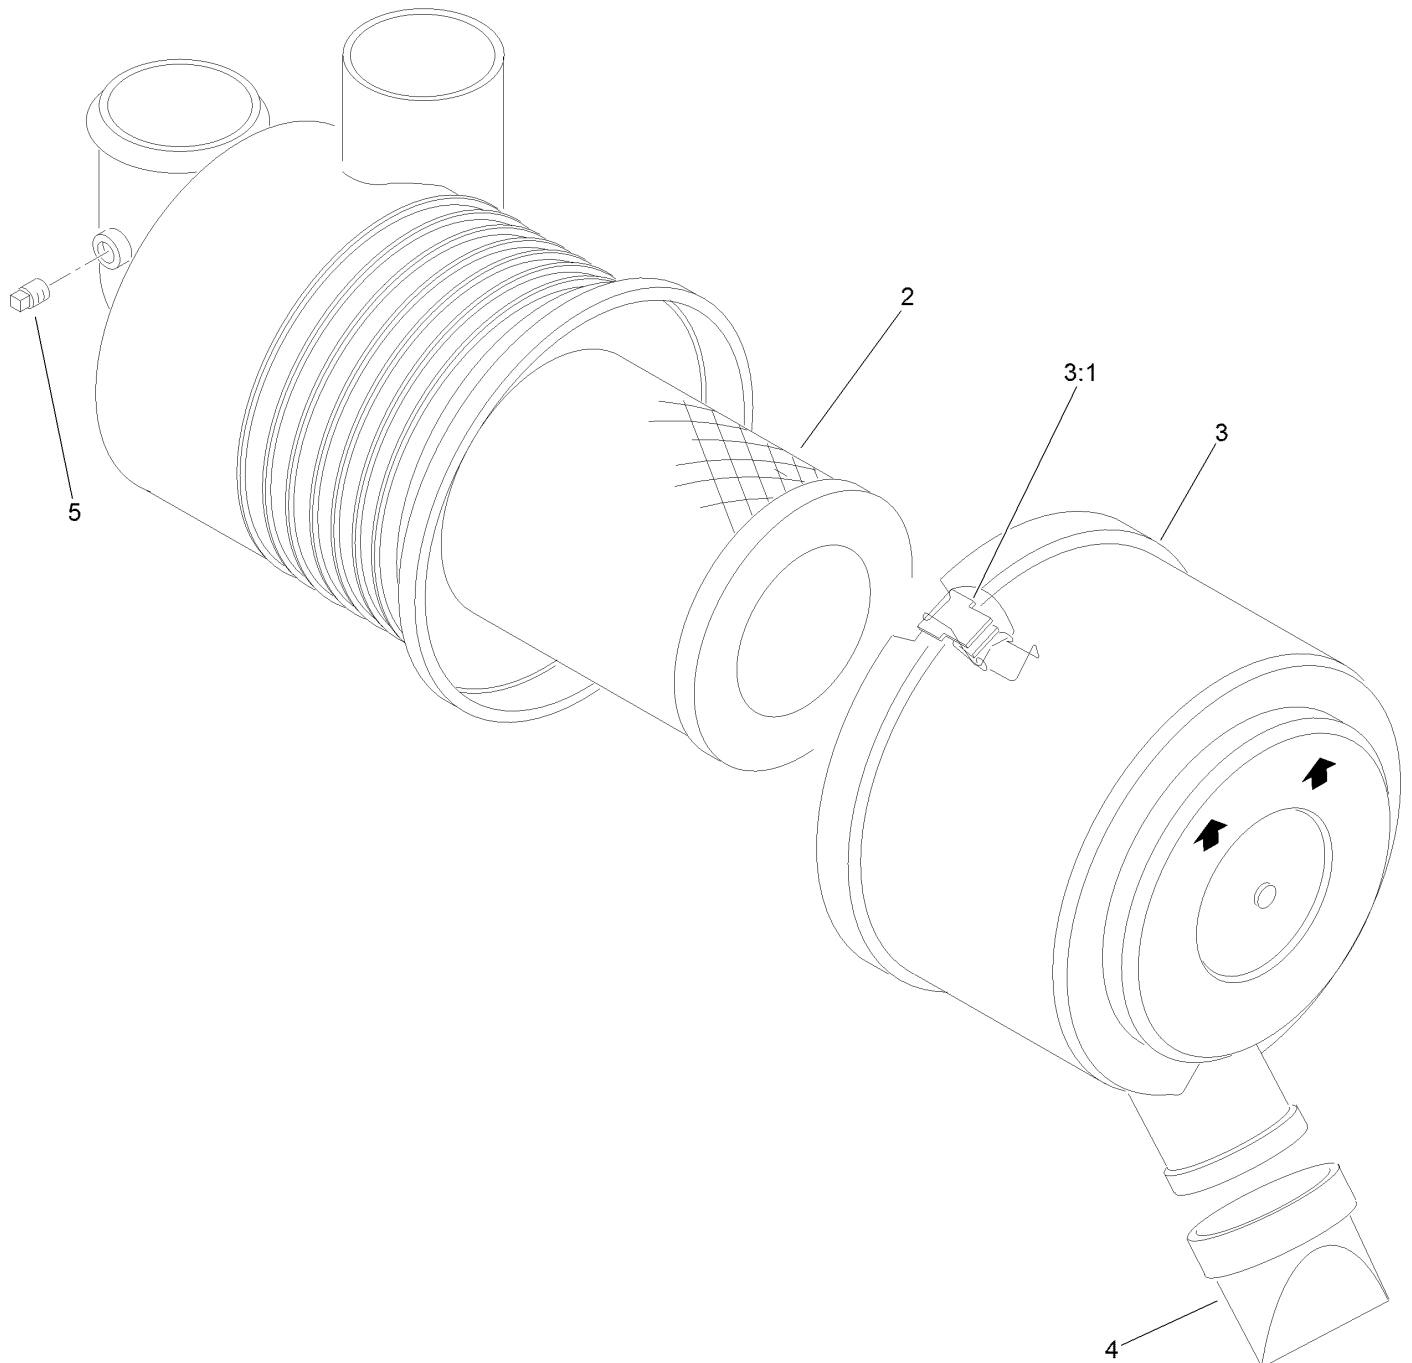

Air Cleaner Assembly No. 93-2190 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe

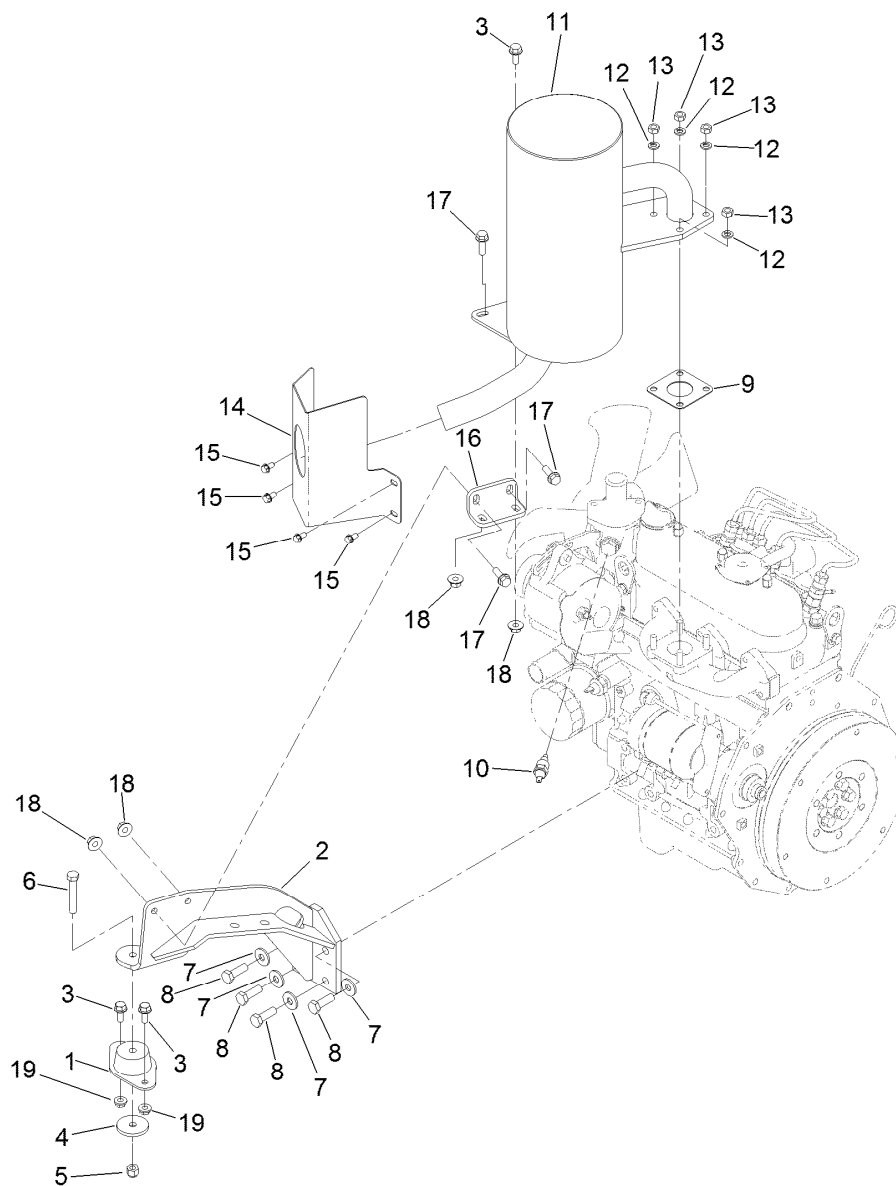 

Engine Mount and Muffler Assembly

Ref.	Part Number	Qty.	Description
1	121-9076	1	Mount-Engine
2	100-4838-0P	1	Mount-Engine
3	3234-5	3	Screw-HHF
4	80-8560	1	Washer-Hardened
5	3296-39	1	Nut-Lock, NI
6	323-11	1	Screw-HH
7	80-6990	4	Washer-Hardened
8	95-8812	4	Screw-HH
9	98-9611	1	Gasket
10	140-2469	1	Thermoswitch


Ref.	Part Number	Qty.	Description
11	104-4834	1	Muffler
12	3253-4	4	Washer-Lock
13	33014-00	4	Nut-Hex
14	99-3425-03	1	Guard-Exhaust
15	32144-4	4	Screw-HWH
16	95-8943-0P	1	Bracket-Muffler
17	3234-17	3	Screw-HHF
18	32128-44	4	Nut
19	32128-20	2	Nut-HF

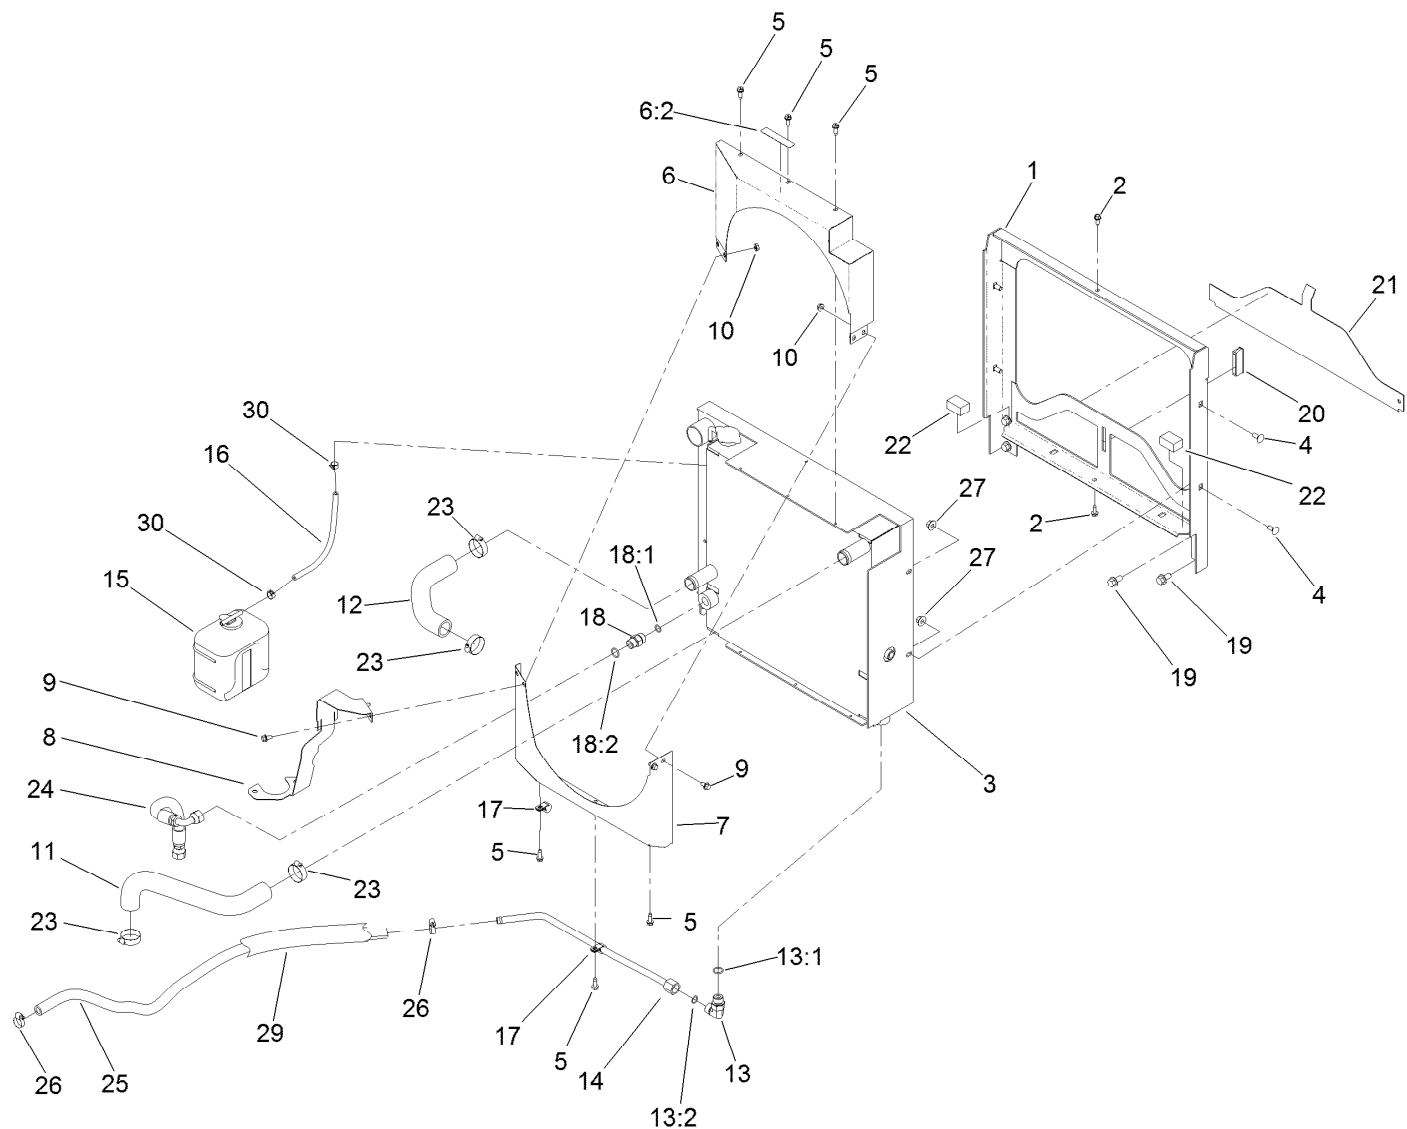 

Radiator/Oil Cooler Mounting Assembly

Ref.	Part Number	Qty.	Description
1	100-4903-0P	1	Radiator Frame ASM
2	119-2038	2	Screw-HWH
3	120-3392	1	Radiator/Oil Cooler
4	3230-1	4	Bolt-CARR
5	32104-95	6	Screw-HWH
6	121-3584	1	Shroud-Fan, Top
6:2	93-6681	1	Decal-Warning, Fan
7	121-6254-0P	1	Shroud-Fan, Bottom
8	121-3604-0P	1	Bracket-Mounting, Reservoir
9	3234-13	4	Screw-HHF
10	32128-33	4	Nut-HF
11	121-3571	1	Hose-Radiator, Upper
12	119-6748	1	Hose-Radiator, Lower
13	340-98	1	Fitting-Elbow, 90 DEG
13:1	237-79	1	O-Ring
13:2	237-30	1	O-Ring
14	121-3572	1	Tube-HYD

Ref.	Part Number	Qty.	Description
15	108-0638	1	Bottle-Overflow
16	110-4105	1	Hose-Fuel
17	2412-73	2	Clamp-R
18	340-4	1	Fitting-Straight
18:1	237-30	1	O-Ring
18:2	237-79	1	O-Ring
19	3234-1	4	Screw-HHF
20	99-3497	1	Magnet
21	95-8702-0P	1	Shield-Radiator, Lower
22	95-8962	2	Seal-Foam, Radiator
23	2412-34	4	Clamp-Hose
24	104-2806	1	Hose-HYD
25	93-6804	1	Hose
26	2412-36	2	Clamp-Hose
27	32128-44	4	Nut
29	56-7985	1	Sleeve-Protective
30	92-2379	2	Clamp-Hose

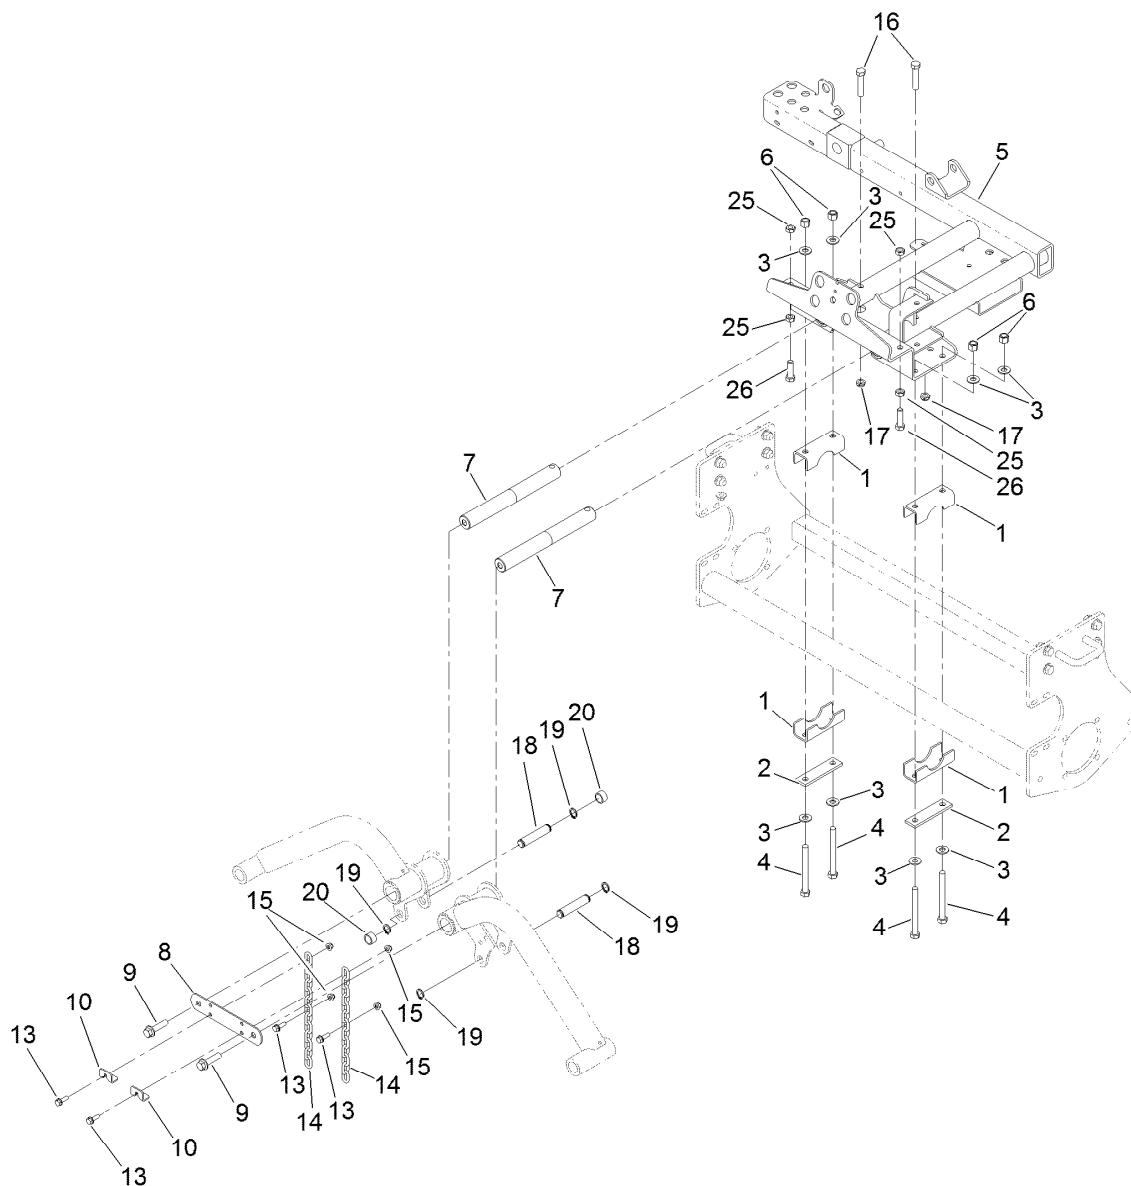 


Lift Arm Mount Assembly

Ref.	Part Number	Qty.	Description
1	95-8884	4	Clamp
2	99-3373	2	Bar-Support, Slide
3	87-7270	8	Washer-Thrust
4	325-19	4	Screw-HH
5	100-4930-03	1	Carrier ASM
6	3296-23	4	Nut-Lock, NI
7	95-8531	2	Shaft-Pivot, Liftarm
8	95-8532-03	1	Link-Shaft, Pivot
9	3234-27	2	Screw-HHF
10	99-3550	2	Clip-Link
13	3234-17	4	Screw-HHF

Ref.	Part Number	Qty.	Description
14	98-7981	2	Chain-Link, Straight
15	104-8300	4	Nut-HF, NI
16	325-10	2	Screw-HH
17	3296-45	2	Nut-Hex
18	95-8575	2	Pin-Clevis
19	32120-93	4	Ring-Retaining
20	75-9590	2	Spacer-Cylinder
25	3218-5	4	Nut-Jam
26	325-7	2	Screw-HH
99	3290-378	1	Tie-Cable ●

 
● Not illustrated

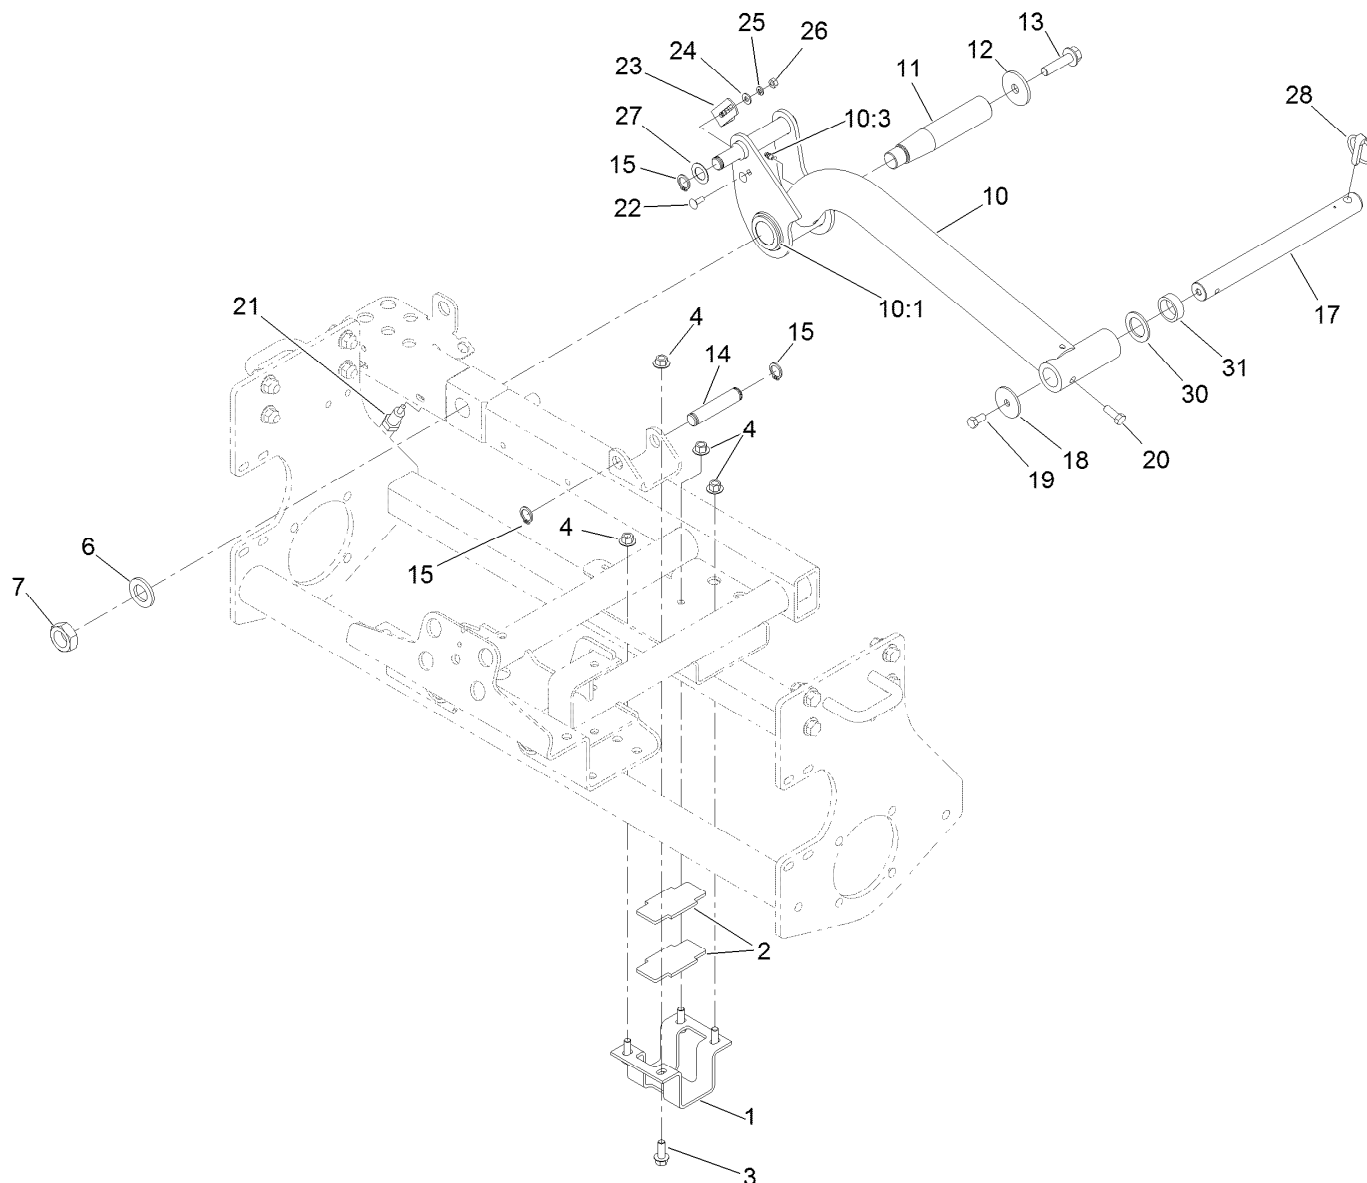

Rear Lift Arm Assembly

Ref.	Part Number	Qty.	Description
1	95-8904-0P	1	Bracket
2	95-8538	1	Slide-Plastic
3	3234-11	4	Screw-HHF
4	32128-43	4	Nut-Flange
6	86-1480	1	Washer
7	3220-9	1	Nut-Jam
10	115-3475	1	Rear Liftarm ASM
10:1	69-6470	2	Bushing-Caster
10:3	302-5	1	Fitting-Grease
11	95-8990	1	Shaft-Pivot, Rear
12	75-7730	1	Washer-Thrust
13	3234-27	1	Screw-HHF
14	95-8575	1	Pin-Clevis
15	32120-93	3	Ring-Retaining


Ref.	Part Number	Qty.	Description
17	104-1392	1	Shaft-Pivot
18	63-7400	1	Washer-Rebound
19	323-4	1	Screw-HH
20	323-6	1	Screw-HH
21	93-6762	1	Switch-Ball
22	3229-1	2	Screw-CARR
23	95-8613	1	Bracket-Switch
24	3256-22	2	Washer-Flat
25	3253-3	2	Washer-Lock
26	3217-5	2	Nut-Hex
27	3-6498	1	Washer-Thrust
28	283-71	1	Pin-Lynch
30	3-6781	1	Washer-Flat
31	63-0070	1	Spacer

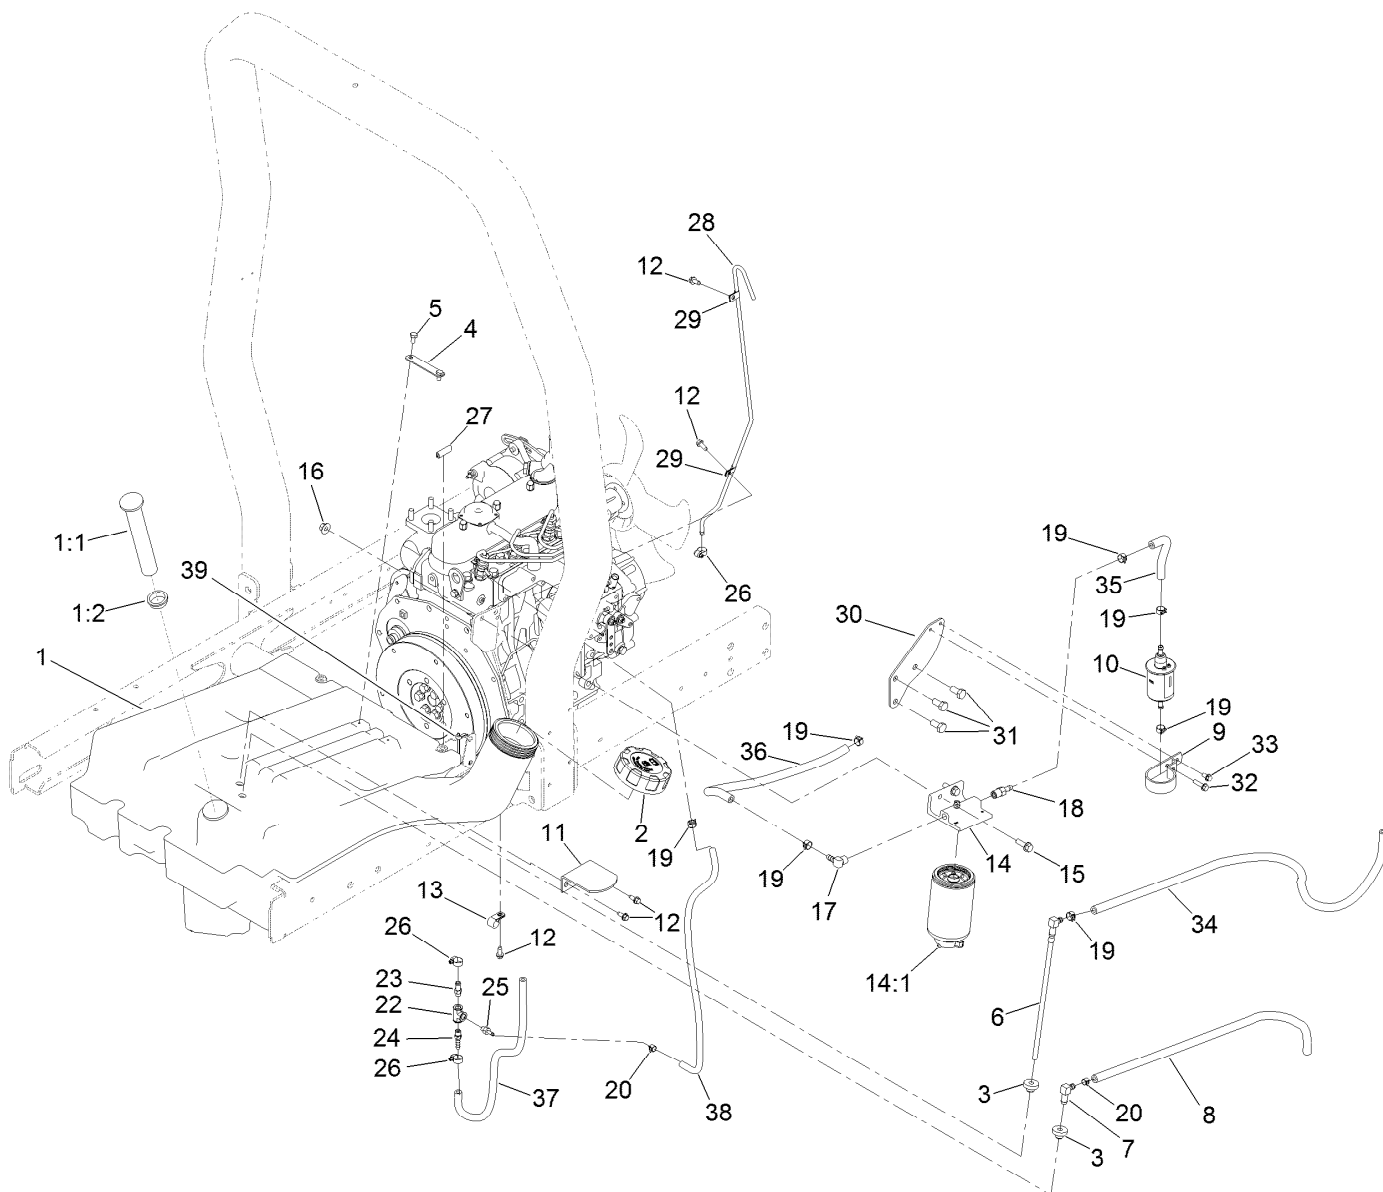 

Fuel System Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	95-8620	1	Tank-Fuel	16	32128-44	2	Nut
1:1	95-8971	1	Gauge-Fuel	17	353-781	1	Fitting-HYD, 90
1:2	95-8972	1	Grommet	18	353-783	1	Fitting-STR
2	114-5064	1	Cap-Diesel	19	92-2379	7	Clamp-Hose
3	46-6560	2	Bushing	20	2412-80	2	Clamp-Hose
4	95-8881	1	Strap-Line, Fuel	22	354-20	1	Fitting-Tee
5	321-2	2	Screw-HH	23	354-21	1	Fitting-Barbed
6	110-9689	1	Pipe-Stand	24	304-73	1	Fitting-Straight
7	46-6550	1	Fitting-Elbow, 90 DEG	25	354-22	1	Fitting-Barbed
8	110-6187	1	Hose-Fuel	26	2412-108	3	Clamp-Worm
9	110-8817	1	Bracket-Pump, Fuel	27	110-8754	1	Trim
10	110-8806	1	Pump-Fuel	28	95-8615	1	Tube-Breather
11	95-8968-03	1	Support-Tank, Fuel	29	2412-72	2	Clip-Closed, Insulated
12	32144-10	5	Screw-HWH	30	120-2182-0P	1	Plate-Mount, Fuel Pump
13	2412-73	1	Clamp-R	31	63-7790	3	Screw-Cap
14	110-9044	1	Separator-Filter	32	32144-86	1	Screw-HWHTF
14:1	110-9049	1	Filter-Spin On, Fuel/Water	33	32144-4	1	Screw-HWH
15	3234-17	2	Screw-HHF	34	121-7914	1	Hose-Fuel

 ● Not illustrated

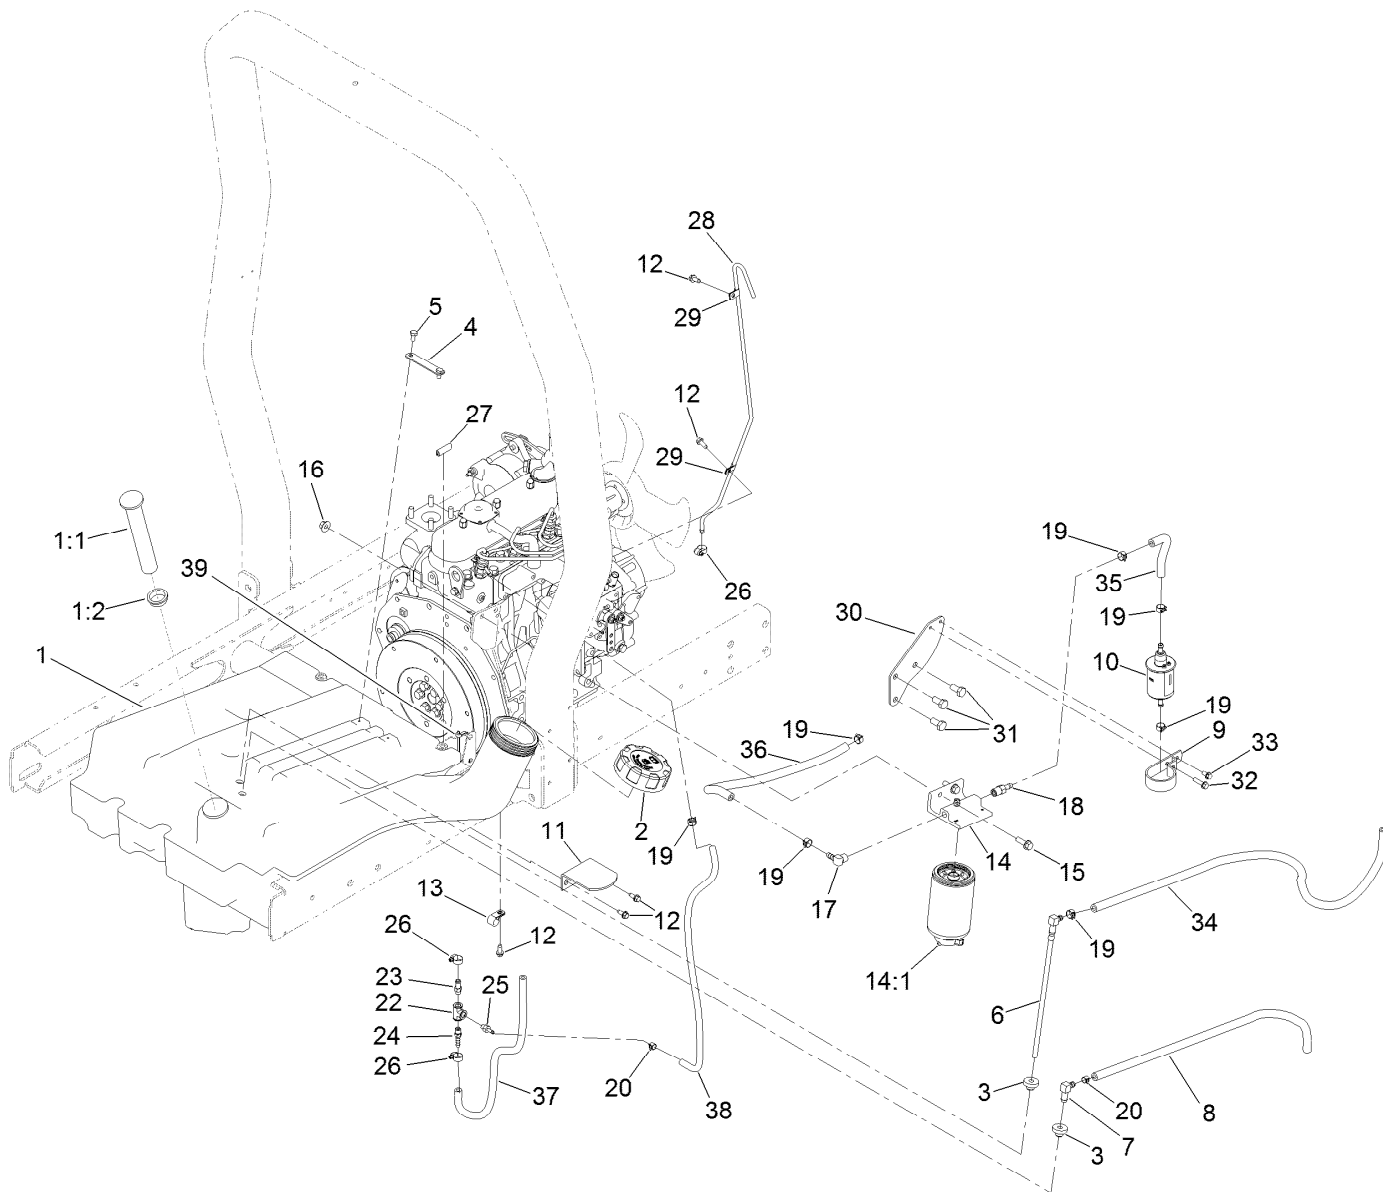


Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
35	117-4026	1	Hose-Fuel
36	121-7852	1	Hose-Fuel
37	110-5701	1	Hose-Fuel

Ref.	Part Number	Qty.	Description
38	110-8751	1	Hose-Fuel
39	3290-379	1	Tie-Cable ●
99	3290-378	1	Tie-Cable ●

 ● Not illustrated

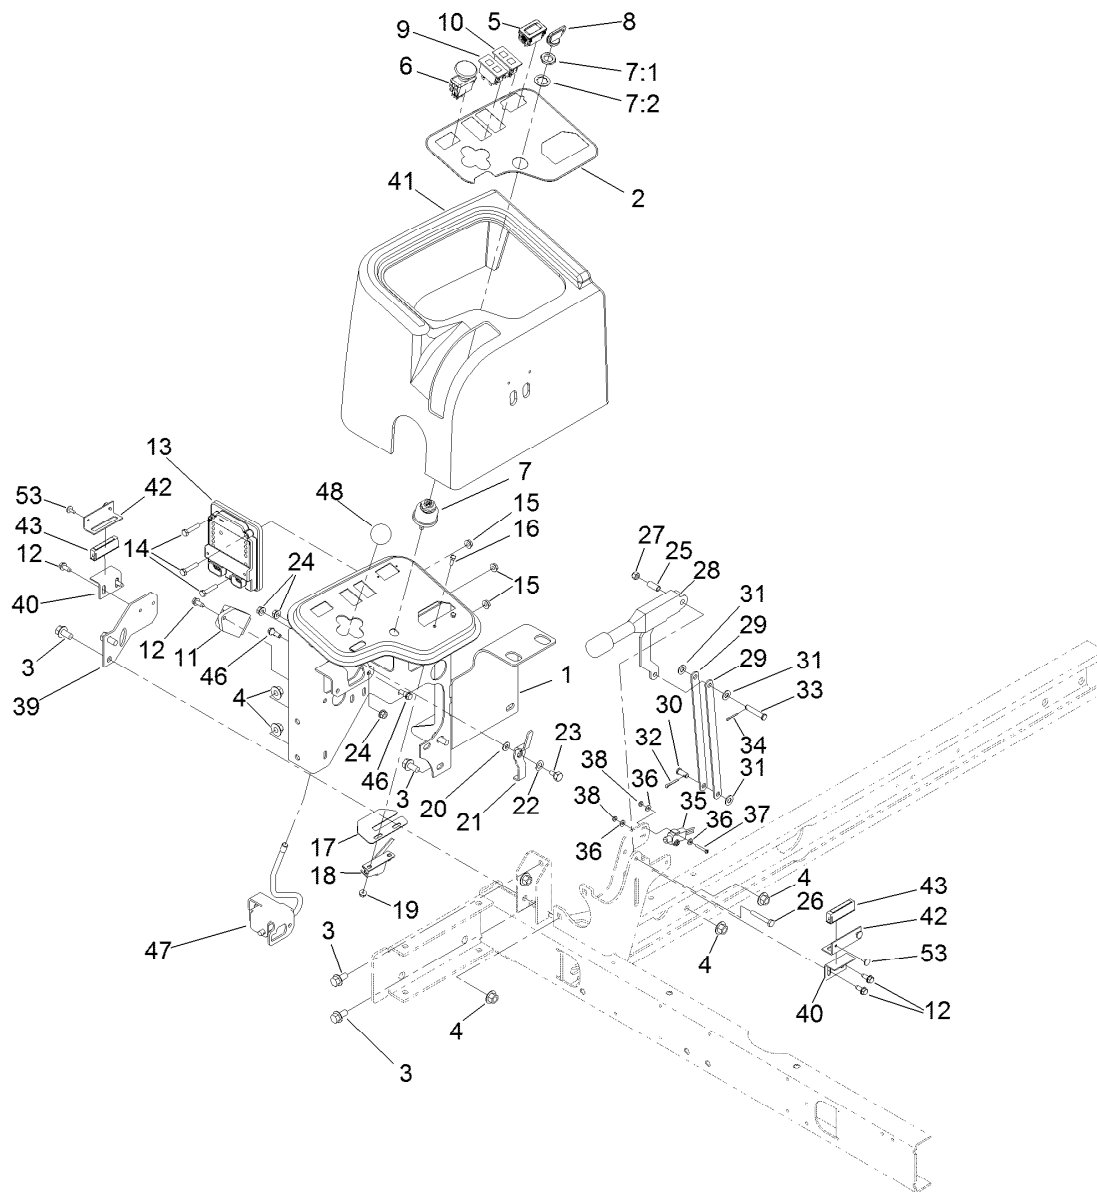


Control Console Assembly

Ref.	Part Number	Qty.	Description
1	136-3681-03	1	Panel-Control
2	136-3678	1	Decal-Console
3	3234-1	6	Screw-HHF
4	32128-43	6	Nut-Flange
5	120-2244	1	Hourmeter
6	93-9999	1	Switch-PTO
7	104-2541	1	Ignition Switch ASM
7:1	218-461	1	Nut-HH
7:2	3254-5	1	Washer-Lock
8	63-8360	1	Key-Ignition
9	100-8070	1	Lamp-Warning
10	100-8071	1	Lamp-Warning
11	98-7611	1	Controller-Glow
12	32144-10	5	Screw-HWH
13	106-9277	1	Module-Control, Standard
14	321-8	3	Screw-HH
15	32128-33	3	Nut-HF
16	3290-134	2	Screw

Ref.	Part Number	Qty.	Description
17	104-0421	1	Plate-Stop, Throttle
18	138-1224	1	Cable-Throttle
19	3290-148	2	Nut-HF
20	3256-22	1	Washer-Flat
21	99-3401	1	Lever-Lock
22	3290-477	1	Washer-Curved
23	63-3410	1	Screw-Shoulder
24	32128-32	3	Nut-HHF
25	87-4710	1	Spacer-Brake, Parking
26	321-10	1	Screw-HH
27	3296-42	1	Nut-Lock, NI
28	104-4817	1	Lever-Brake
29	104-4628	2	Link-Brake, Parking
30	283-62	1	Pin-Clevis
31	3256-23	3	Washer-Plain
32	3272-10	1	Pin-Cotter
33	94-3829	1	Pin-Clevis
34	3272-6	2	Pin-Cotter

 
● Not illustrated

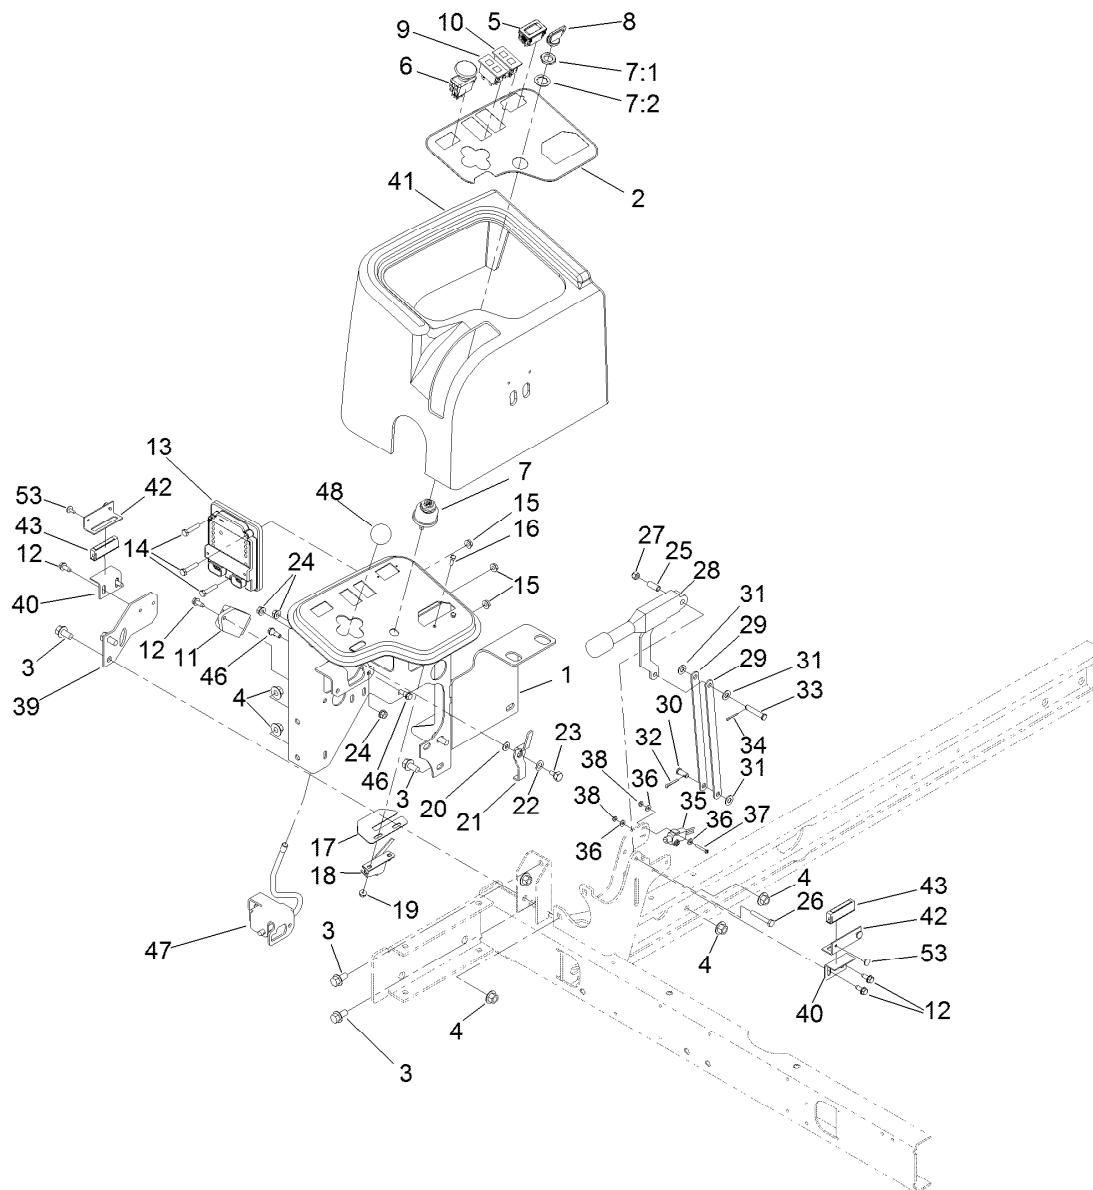

Control Console Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
35	95-8900	1	Switch	43	58-4250	2	Catch-Magnetic
36	3256-21	4	Washer-Flat	46	42-3560	2	Bolt-Shoulder
37	32105-9	2	Screw-HH	47	95-8692	1	Lever ASM
38	3296-9	2	Nut-Hex	48	233-42	1	Knob
39	95-8764-0P	1	Support-Magnet	53	3269-5	4	Rivet-Pop
40	95-8765	2	Bracket-Strike, Magnet	99	3290-378	1	Tie-Cable ●
41	95-8707	1	Cover-Dash	99	3290-379	1	Tie-Cable ●
42	95-8763	2	Bracket-Hold Down, Cover				

 ● Not illustrated

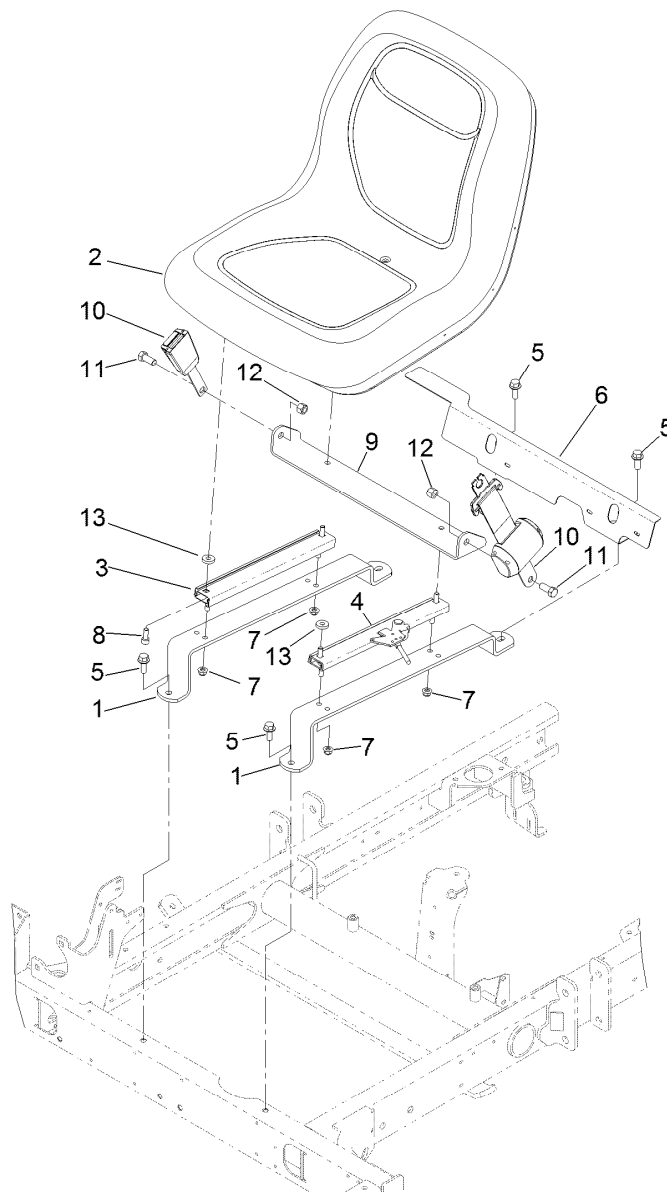

Seat Assembly


Ref.	Part Number	Qty.	Description
1	140-7448-03	2	Strap-Support, Seat
2	133-0577	1	Seat ASM
3	51-0780	1	Slider-Seat
4	51-0790	1	Adjuster-Seat, LH
5	3234-11	4	Screw-HHF
6	104-4833-03	1	Shield-Heat
7	104-8300	4	Nut-HF, NI
8	108-6343	4	Screw-HSH,Lock
9	119-0727-03	1	Bracket-Belt, Seat
10	110-0413	1	Seatbelt-Retractable
11	3212-4	2	Screw-HH
12	3296-7	2	Nut-Lock
13	104-7658	2	Spacer

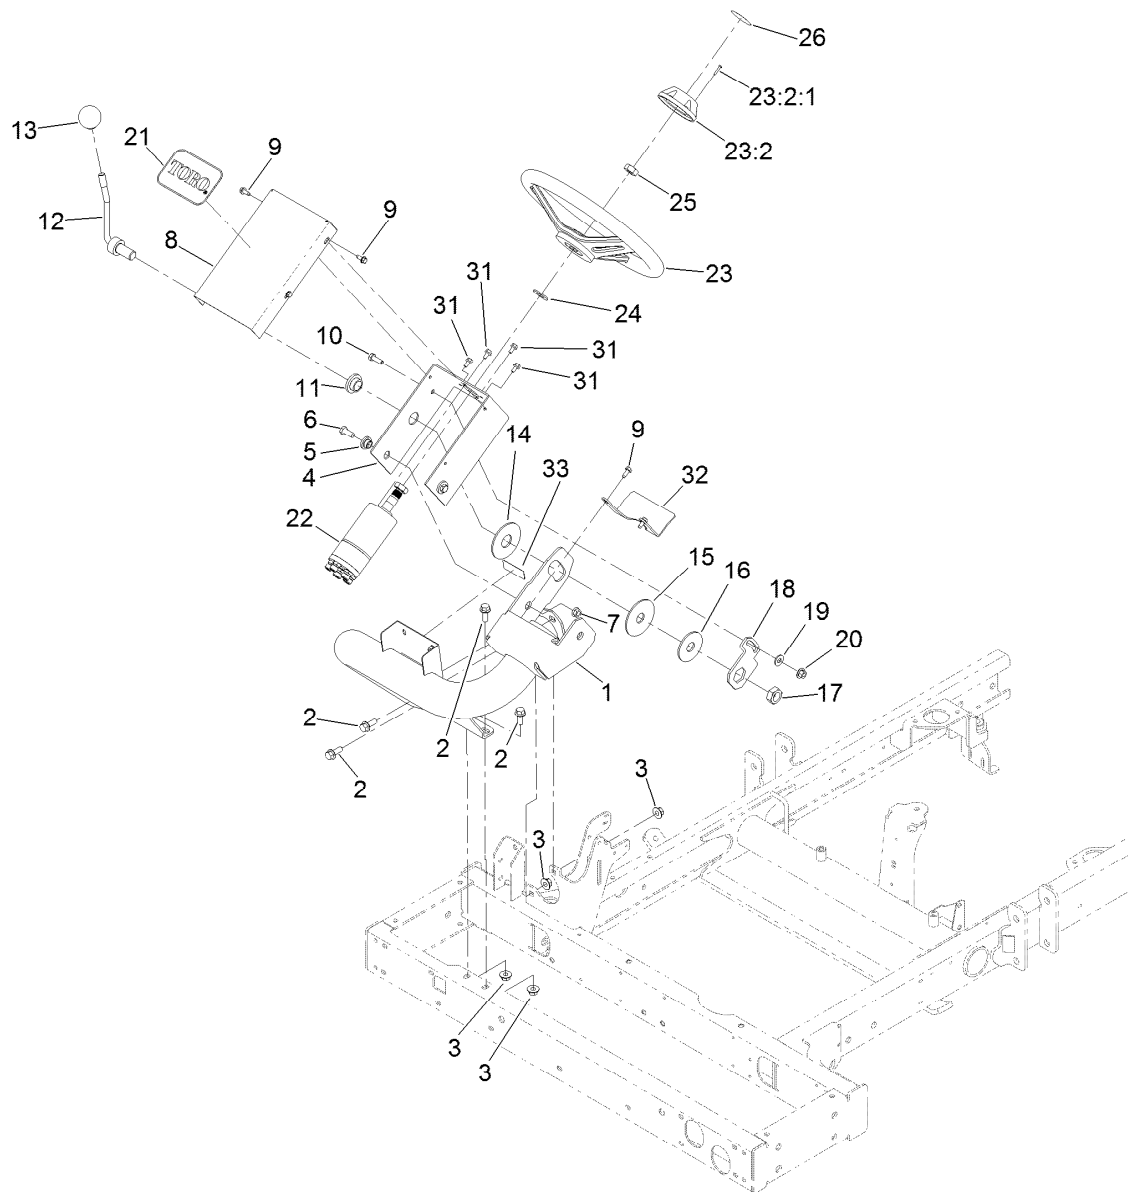 

Steering Assembly

Ref.	Part Number	Qty.	Description
1	105-8536-01	1	Arm-Steering
2	3234-11	4	Screw-HHF
3	32128-43	4	Nut-Flange
4	104-5185-01	1	Bracket-Valve, Steering
5	93-5988	2	Hub-Pivot
6	323-5	2	Screw-HH
7	32128-21	2	Nut-HF Lock
8	95-8794-01	1	Cover-Valve, Steering
9	32144-10	5	Screw-HWH
10	322-5	1	Screw-HH
11	99-3502	1	Boss
12	95-8798-03	1	Lever-Steering
13	233-48	1	Knob
14	31-0390	1	Disc-Friction
15	82-9010	1	Disc-Friction
16	80-2930	1	Washer-Flat

Ref.	Part Number	Qty.	Description
17	3218-7	1	Nut-Jam
18	80-2880	1	Bracket-Tilt
19	3256-3	1	Washer-Flat
20	32128-44	1	Nut
21	67-1300	1	Decal
22	121-7856	1	Steering Valve ASM
23	75-0560	1	Steering Wheel ASM
23:2	68-5140	1	Cap-Wheel, Steering
23:2:1	32144-21	1	Screw
24	3256-27	1	Washer-Flat
25	3296-33	1	Nut-Lock, NI
26	68-5370	1	Decal
31	33103-012	4	Screw-HHF
32	99-3405-01	1	Shield-Steering
33	140-7463	1	Decal-Angle

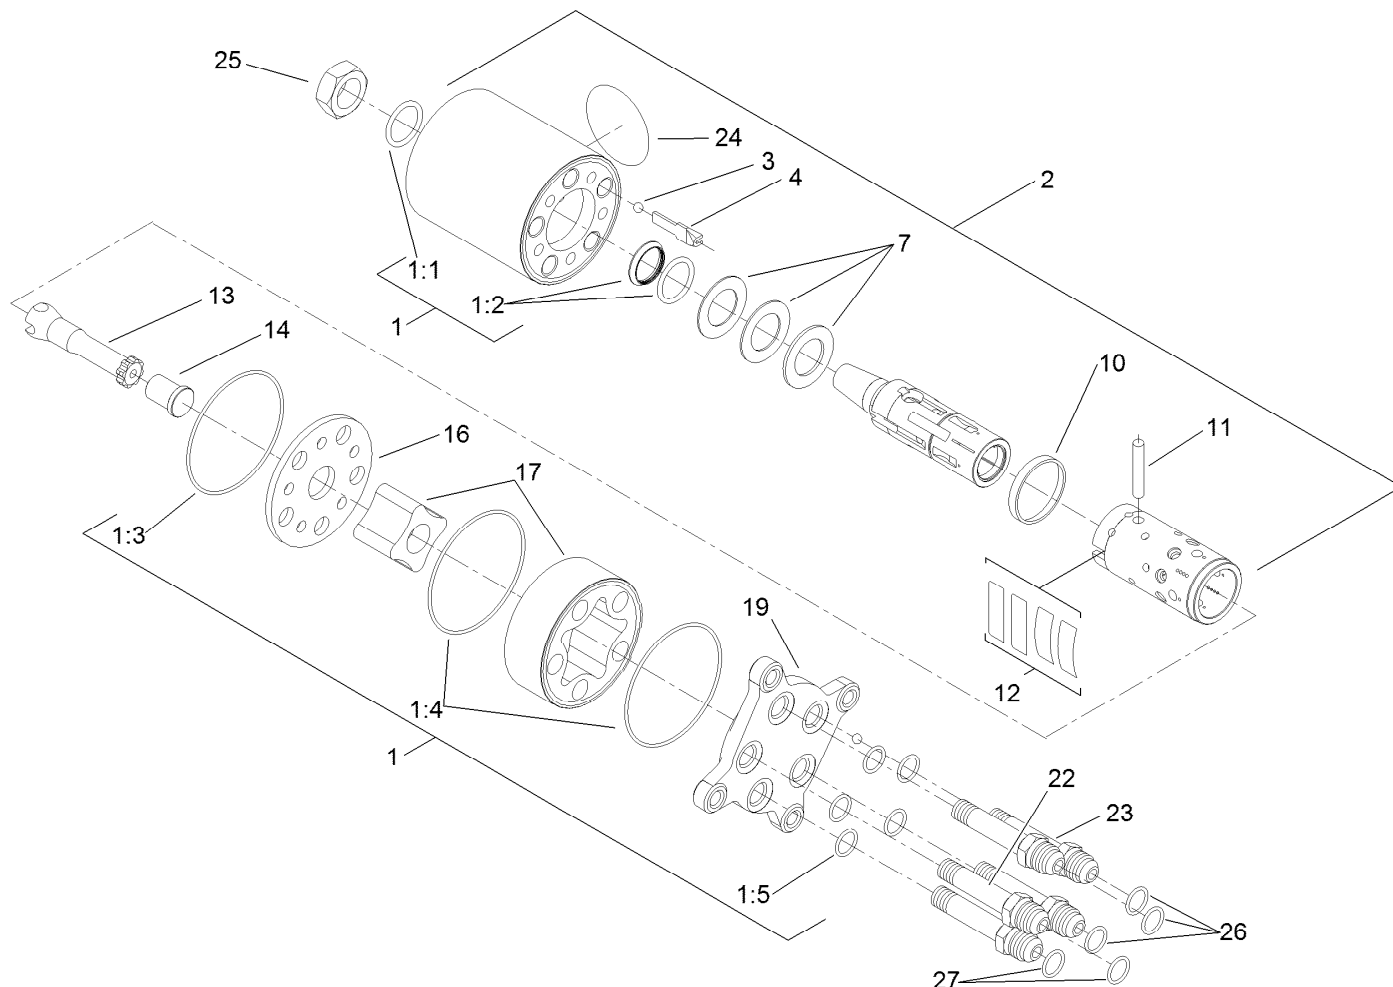 


Steering Valve Assembly No. 121-7856

Ref.	Part Number	Qty.	Description
1	106-6716	1	Seal Kit
1:1		1	Ring-Seal, Dust ●
1:2		1	Seal-Shaft ●
1:3		1	O-Ring ●
1:4		2	O-Ring ●
1:5		5	O-Ring ●
2		1	Housing ●
3		1	Ball ●
4		1	Stop-Ball ●
7		1	Bearing ASM ●
10		1	Ring ●
11		1	Pin-Cross ●

Ref.	Part Number	Qty.	Description
12		1	Springs ●
13		1	Shaft ●
14		1	Spacer ●
16		1	Plate-Distributor ●
17		1	Gearwheel Set ●
19		1	Cover-End ●
22		1	Screw-Special ●
23		4	Screw-Special ●
24		1	Plate-Name ●
25	3296-33	1	Nut-Lock, NI
26	237-22	3	O-Ring
27	237-21	2	O-Ring

 ● Not serviced separately

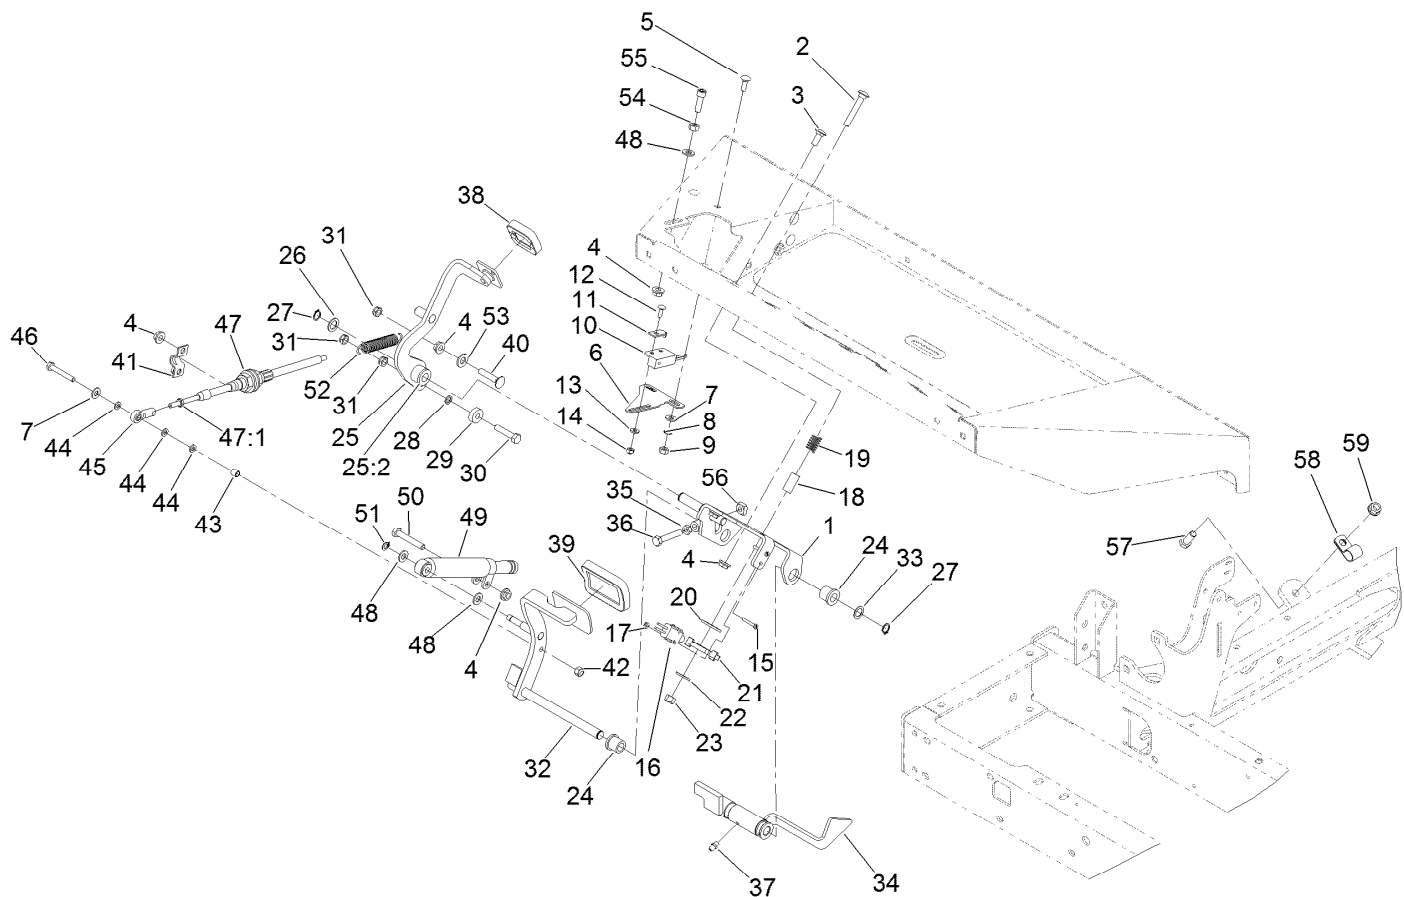


Pedal Assembly

Ref.	Part Number	Qty.	Description
1	95-8869-0P	1	Bracket-Pedal, Traction
2	3230-6	1	Bolt-CARR
3	3230-23	4	Bolt-CARR
4	32128-20	8	Nut-HF
5	3229-1	2	Screw-CARR
6	100-4871	1	Bracket-Switch, Neutral
7	3256-22	3	Washer-Flat
8	3255-7	2	Washer-Lock/EXT
9	3217-5	2	Nut-Hex
10	100-1270	1	Switch-Proximity
11	100-4872	1	Plate-Switch, Neutral
12	3229-34	1	Screw-CARR
13	3256-14	1	Washer-Flat
14	3296-2	1	Nut-Lock, NI
15	32105-9	2	Screw-HH
16	95-8900	1	Switch
17	3296-9	2	Nut-Hex
18	95-8866	1	Tube-Arm, Rocker

Ref.	Part Number	Qty.	Description
19	65-9940	1	Spring
20	3256-40	1	Washer-Flat
21	99-3593	1	Arm-Rocker
22	3256-3	1	Washer-Flat
23	3296-29	1	Nut-Lock, NI
24	256-243	2	Bearing-Flange
25	99-3379	1	Pedal-Reverse ASM
25:2	256-243	2	Bearing-Flange
26	41-8440	1	Washer
27	32151-84	2	Ring-Shaft, EXT
28	75-5470	1	Spacer-Bearing
29	251-259	1	Bearing-Ball
30	322-7	1	Screw-HH
31	3296-47	3	Nut-Lock, NI
32	104-4852-03	1	Pedal-Traction
33	73-0040	1	Washer-Thrust
34	95-8861	1	Slide
35	3218-2	1	Nut-Hex Jam

 
● Not illustrated

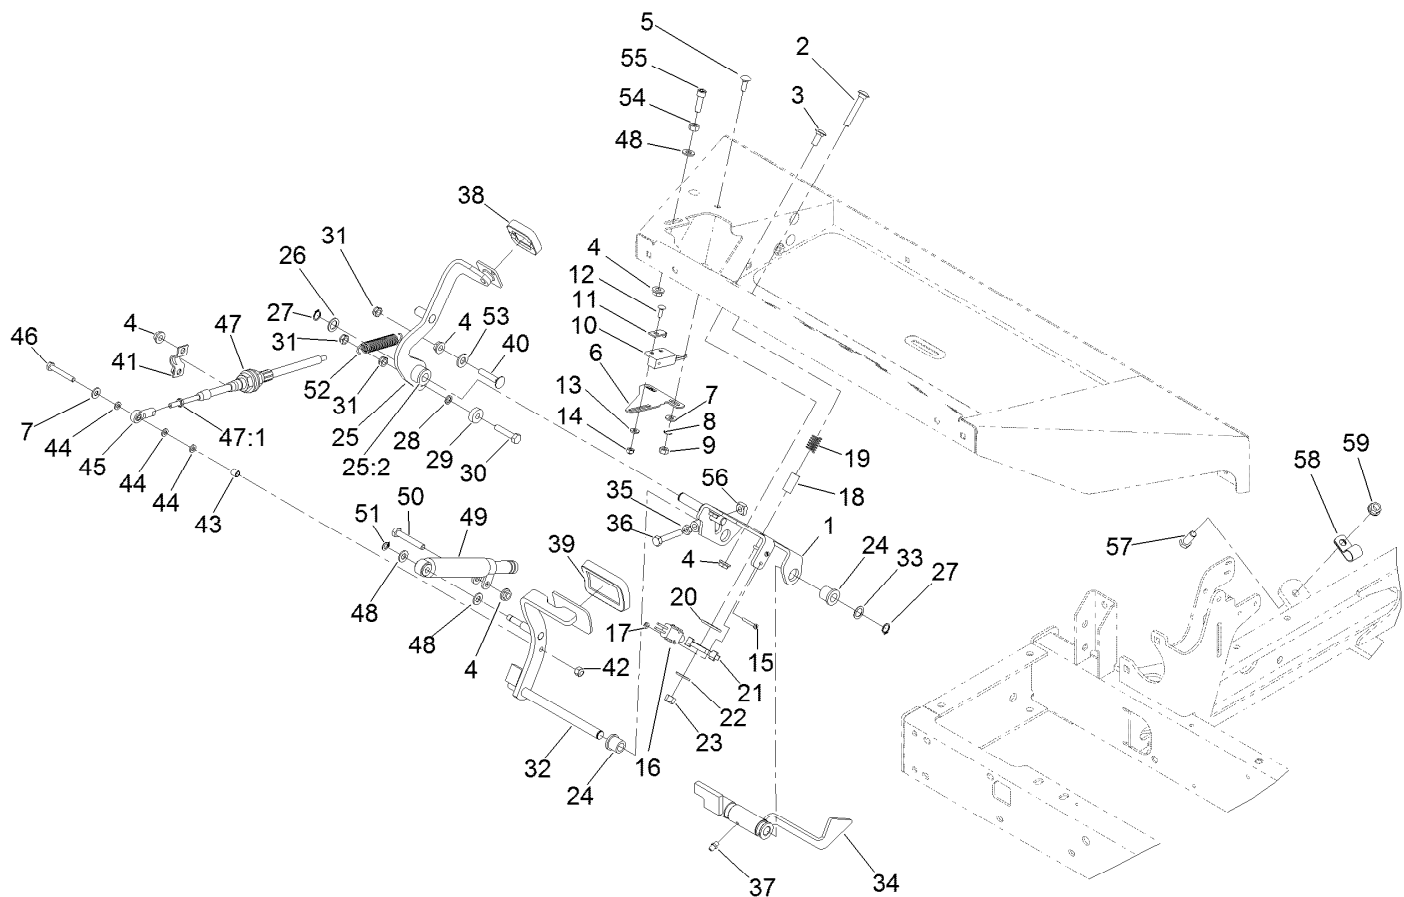

Pedal Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
36	322-41	1	Bolt-Hex,TAP	48	3256-23	3	Washer-Plain
37	302-5	1	Fitting-Grease	49	140-6248	1	Damper
38	74-9110	1	Pad-Pedal, Reverse	50	322-10	1	Screw-HH
39	74-9100	1	Pad-Pedal, Forward	51	32151-3	1	Ring-Grip
40	3230-27	1	Screw-CARR	52	99-3476	1	Spring-Extension
41	93-2092	1	Clamp-Cable	53	3256-24	1	Washer-Plain
42	3296-42	1	Nut-Lock, NI	54	3217-6	1	Nut-Hex
43	99-3545	1	Spacer	55	3274-22	1	Screw-HSH
44	33093-00	3	Washer-Flat	56	99-3565	1	Nut-Square
45	2411-41	1	Rod End-Ball Joint	57	323-6	1	Screw-HH
46	321-10	1	Screw-HH	58	2412-41	1	Clamp-R
47	100-4815	1	Cable-Control, Traction	59	3290-357	1	Nut-HSF
47:1	3220-1	2	Nut-Jam	99	3290-378	4	Tie-Cable ●

 ● Not illustrated

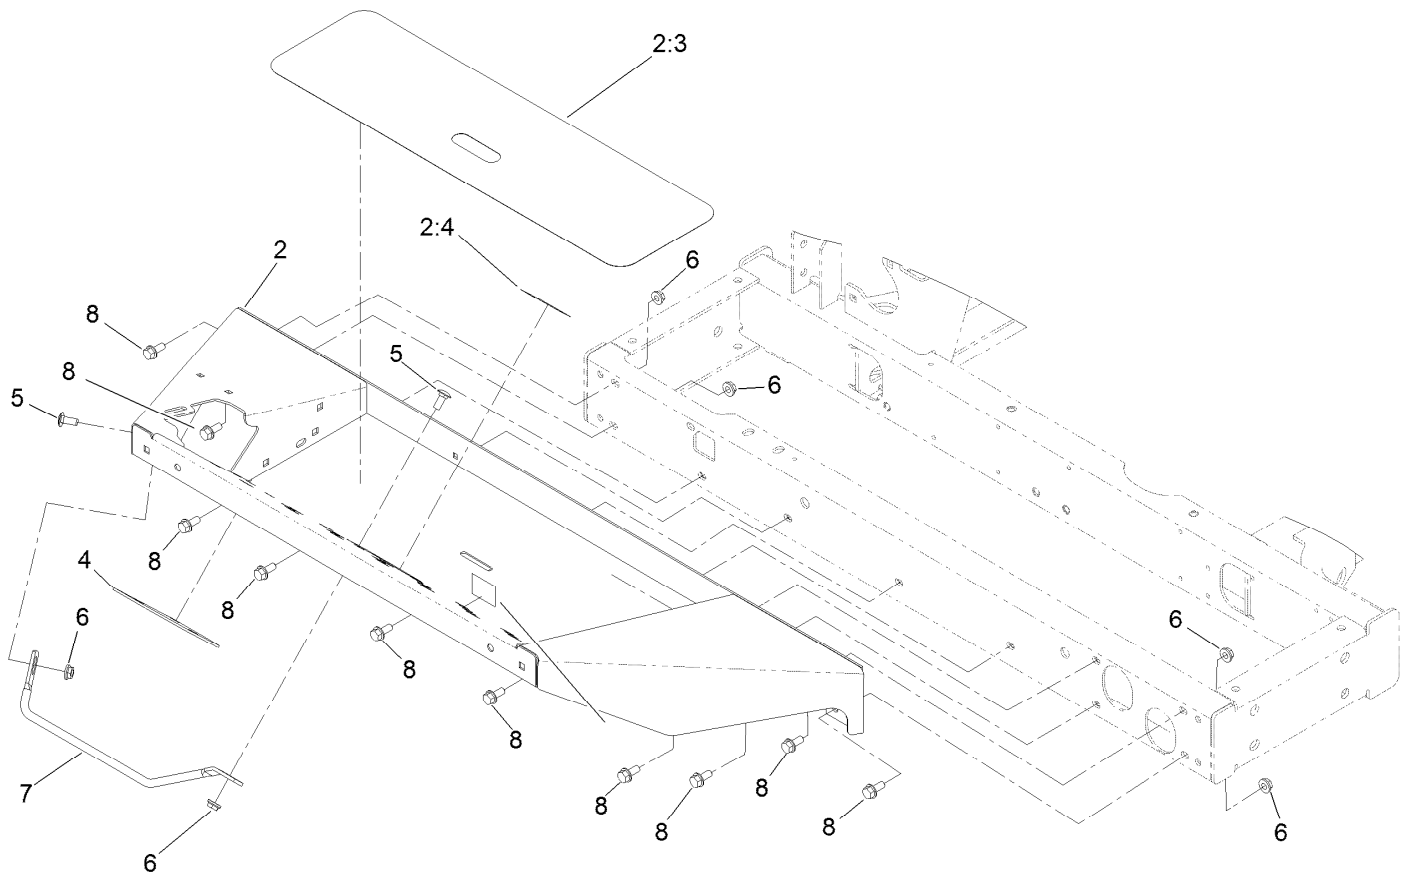

Footplate Assembly

Ref.	Part Number	Qty.	Description
2	106-4154	1	Floorplate ASM
2:3	99-3478	1	Tread-Foot
2:4	99-3444	1	Decal-Mow / Transport
4	106-2661-0P	1	Plate-Support
5	3230-23	2	Bolt-CARR
6	32128-20	12	Nut-HF
7	95-8893	1	Bar-Deflector
8	3234-5	10	Screw-HHF

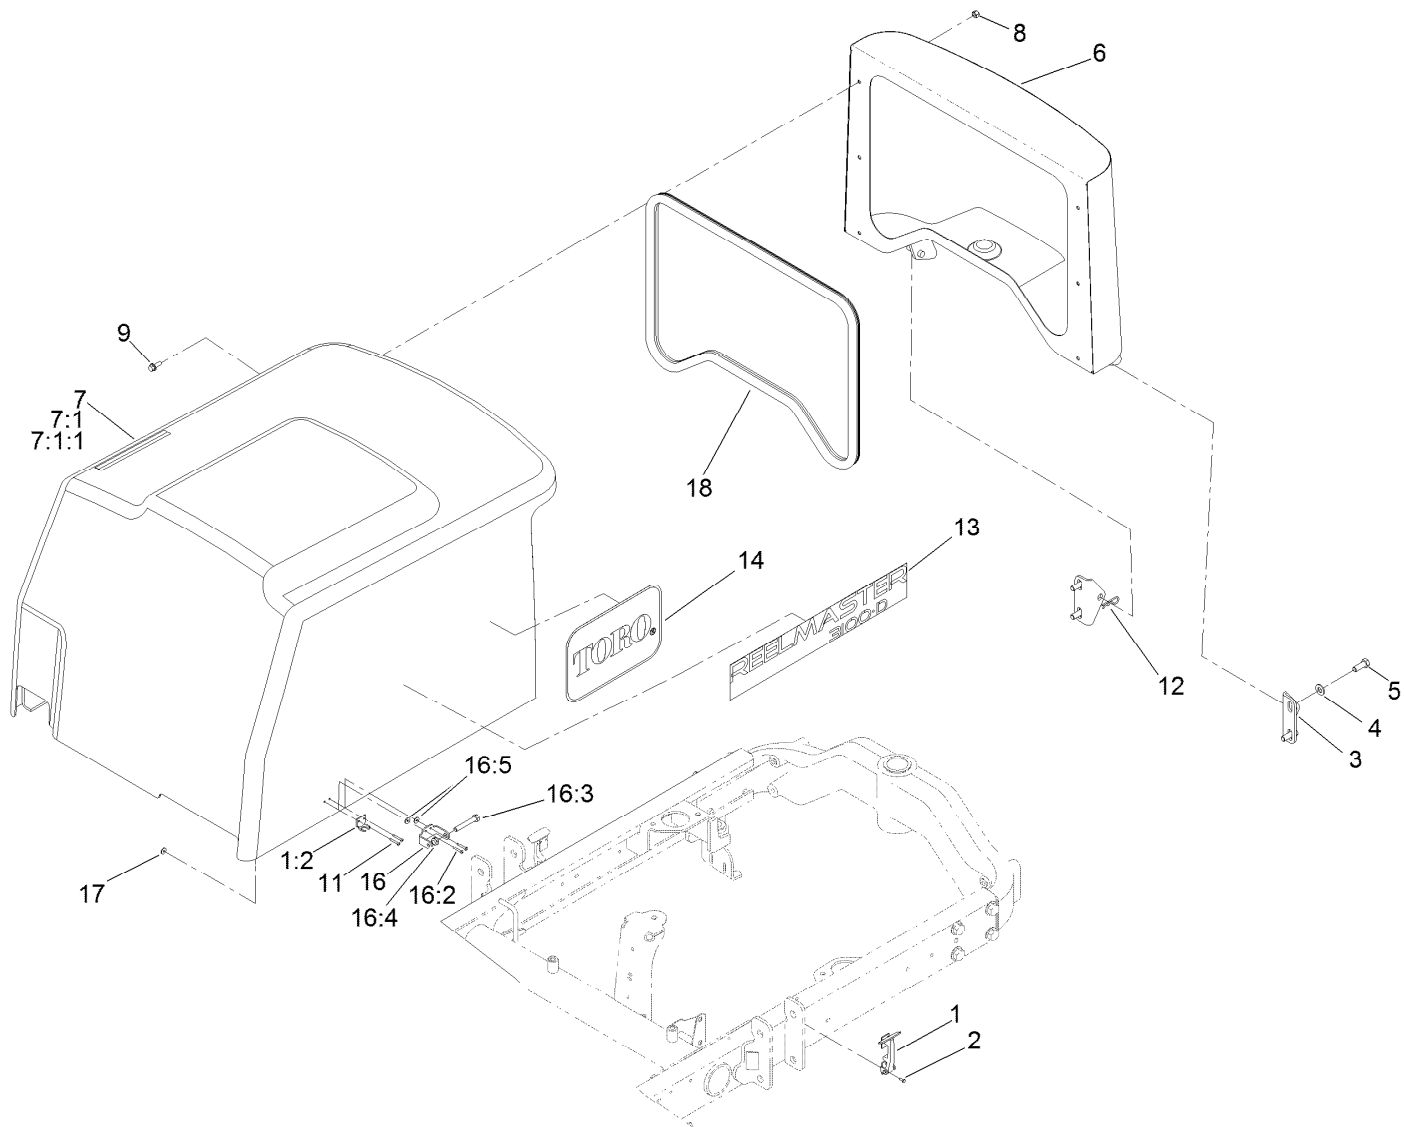 


Hood Assembly

Ref.	Part Number	Qty.	Description
1	59-9740	2	Flex Draw Latch ASM
1:2	249-40	1	Keeper
2	3290-55	4	Rivet-Pop
3	95-8728	2	Bracket-Pivot, Hood
4	3256-24	4	Washer-Plain
5	323-6	4	Screw-HH
6	95-8724-03	1	Screen-Hood
7	140-7447	1	Hood ASM
7:1		1	Hood ■
7:1:1	106-8114	1	Heat Tape Repair Kit ●
8	3296-42	6	Nut-Lock, NI
9	3234-4	6	Screw-HHF

Ref.	Part Number	Qty.	Description
11	107-0333	4	Rivet-Pop
12	3290-467	1	Pin-Hair
13	140-7446	2	Decal-Hood
14	66-6140	2	Decal
16	119-2004	1	CE Latch Kit
16:2	107-0333	2	Rivet-Pop
16:3	322-10	1	Screw-HH
16:4	3296-47	1	Nut-Lock, NI
16:5	3269-10	2	Washer-Back
17	3269-10	4	Washer-Back
18	95-8809	1	Trim-Seal

● Not illustrated

 
■ Not serviced separately

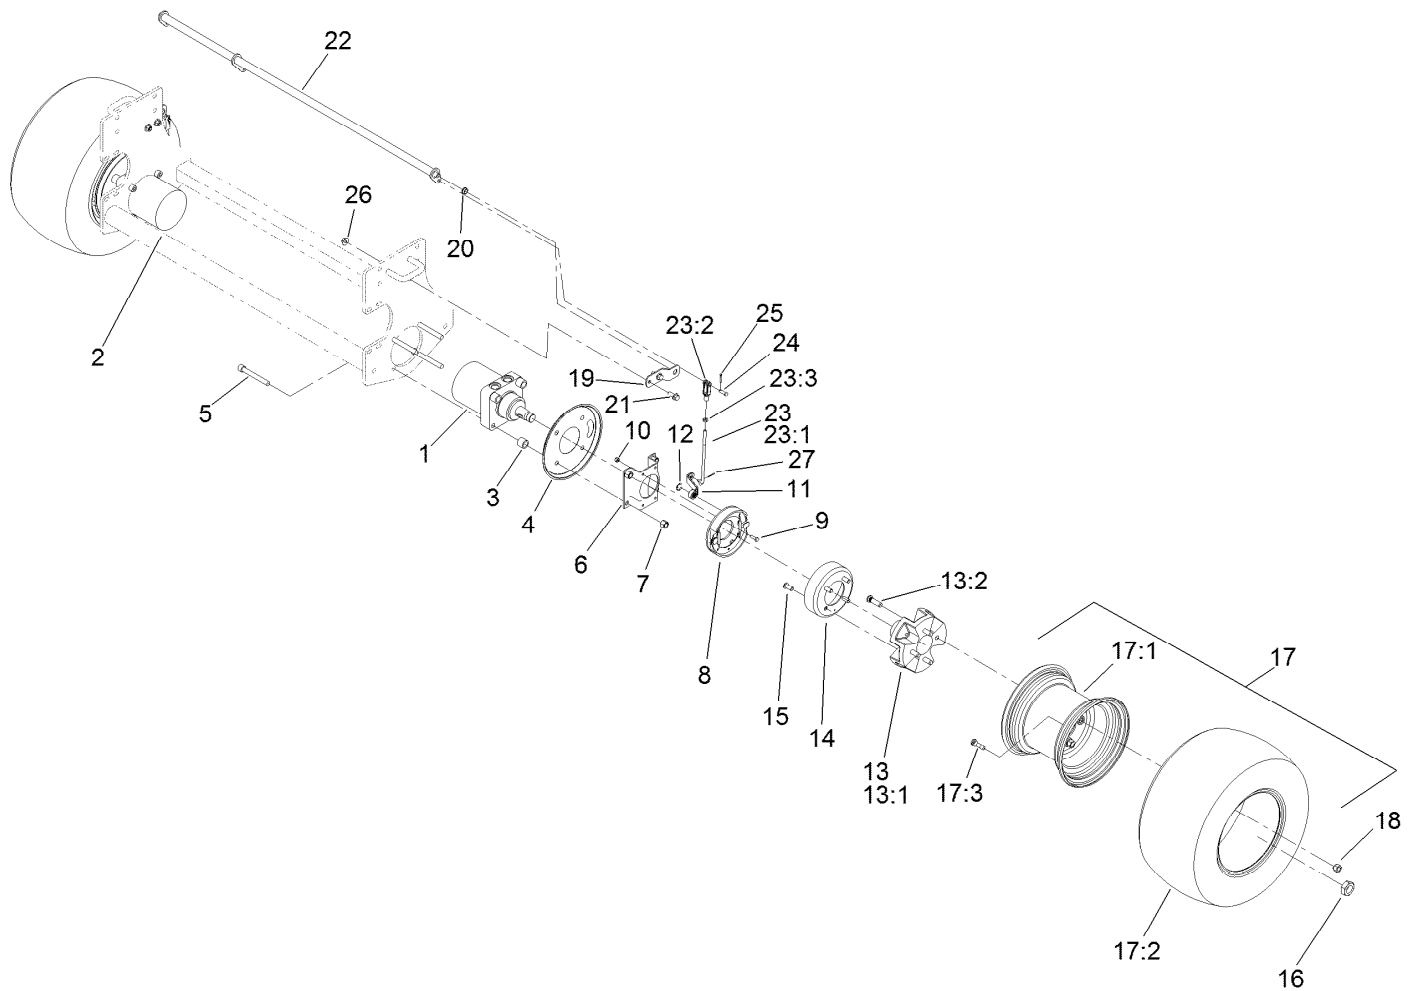

Hydraulic Drive and Wheel Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	110-8785	1	HYD Motor ASM (CCW)	17		2	Tire And Rim ASM ●
2	110-8786	1	HYD Motor ASM (CW)	17:1	121-3548	1	Rim
3	119-8238	8	Spacer-Deck Pulley	17:2	117-5125	1	Tire
4	104-0485-0P	2	Shield-Wheel	17:3	232-27	1	Stem-Valve
5	3274-99	8	Screw-HSH	18	242-50	8	Nut-Lug
6	84-2000-0P	2	Bracket-Brake	19	95-8683	2	Bracket-Pivot, Brake
7	3296-23	8	Nut-Lock, NI	20	256-156	2	Bushing-Flange
8	104-7705	2	Brake ASM	21	3234-11	4	Screw-HHF
9	321-5	8	Screw-HH	22	104-4625-03	1	Shaft-Pivot, Brake
10	3296-42	8	Nut-Lock, NI	23	115-6672	2	Brake Lever ASM
11	114-2726	2	Lever-Brake	23:1	104-4627	1	Rod-Adjusting
12	104-7706	2	E-Ring, Bowed	23:2	1-303105	1	Yoke-Adjustable
13		2	Wheel Hub/Stud ASM ●	23:3	3220-2	1	Nut-Jam
13:1	104-0462	1	Hub-Wheel, Spacer	24	283-1	2	Pin-Clevis
13:2	10-6830	4	Stud-Type, Drive	25	3272-10	2	Pin-Cotter
14	104-4809	2	Drum-Brake	26	32128-43	4	Nut-Flange
15	3274-105	8	Screw-HSBH	27	3272-6	2	Pin-Cotter
16	26-3790	2	Nut-Lock				

 
● Not serviced separately

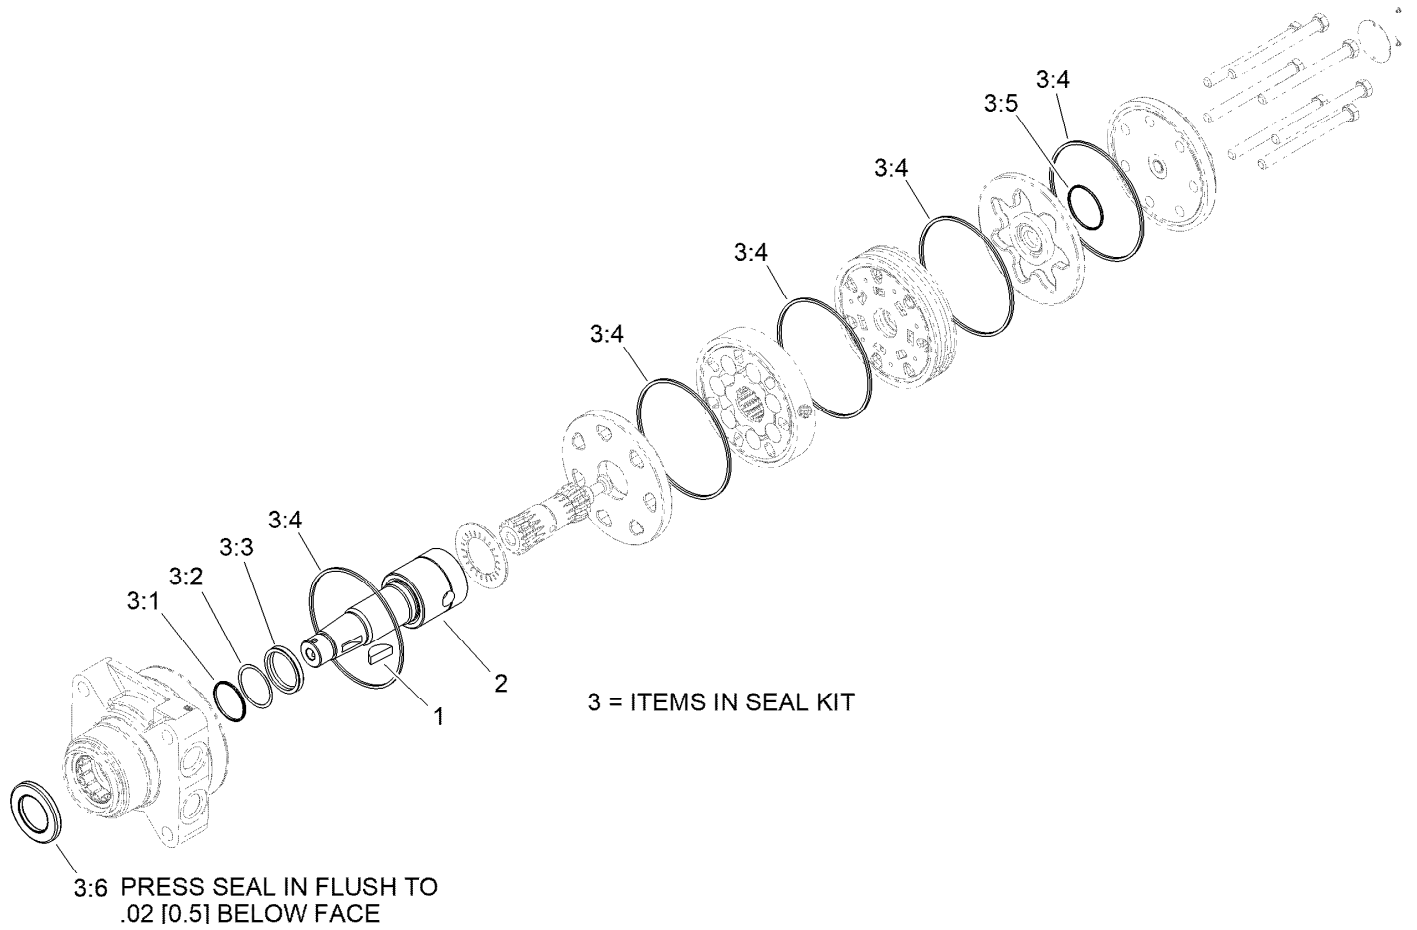

Hydraulic Motor Assembly No. 110-8786

Ref.	Part Number	Qty.	Description
1	3257-42	1	Key-Woodruff
2	99-3090	1	Shaft-Coupling
3	100-6131	1	Seal Kit
3:1		1	Ring-Back Up ●
3:2		1	Washer-Back Up ●
3:3		1	Seal-Shaft ●
3:4		5	Seal-Ring ●
3:5		1	Seal-Commutator ●
3:6		1	Seal-Dirt And Water ●

 
● Not serviced separately

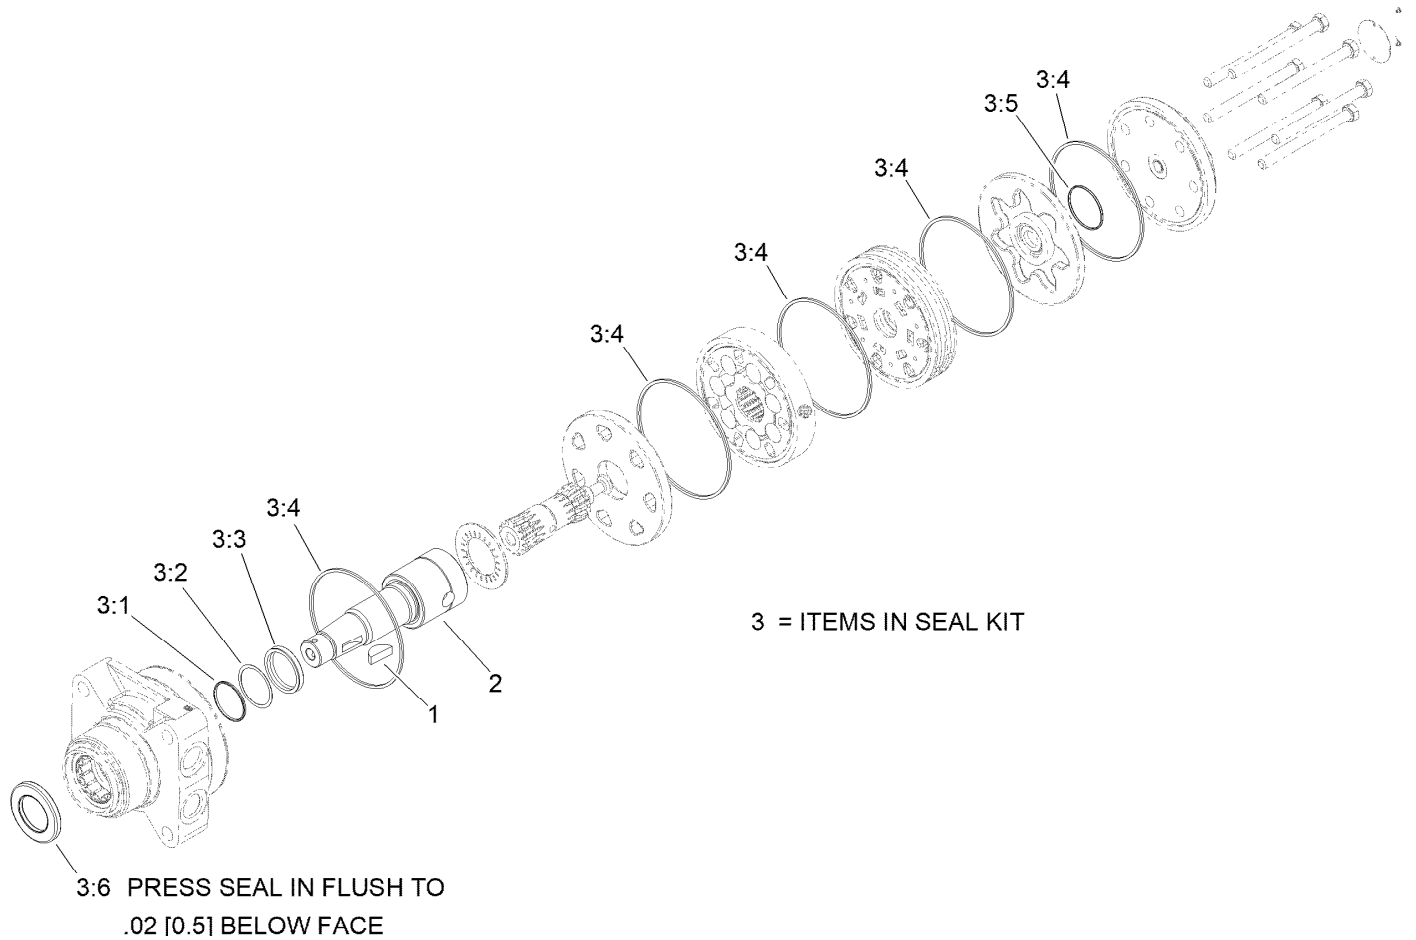

Hydraulic Motor Assembly No. 110-8785


Ref.	Part Number	Qty.	Description
1	3257-42	1	Key-Woodruff
2	99-3090	1	Shaft-Coupling
3	100-6131	1	Seal Kit
3:1		1	Ring-Back Up ●
3:2		1	Washer-Back Up ●
3:3		1	Seal-Shaft ●
3:4		5	Seal-Ring ●
3:5		1	Seal-Commutator ●
3:6		1	Seal-Dirt And Water ●

 ● Not serviced separately

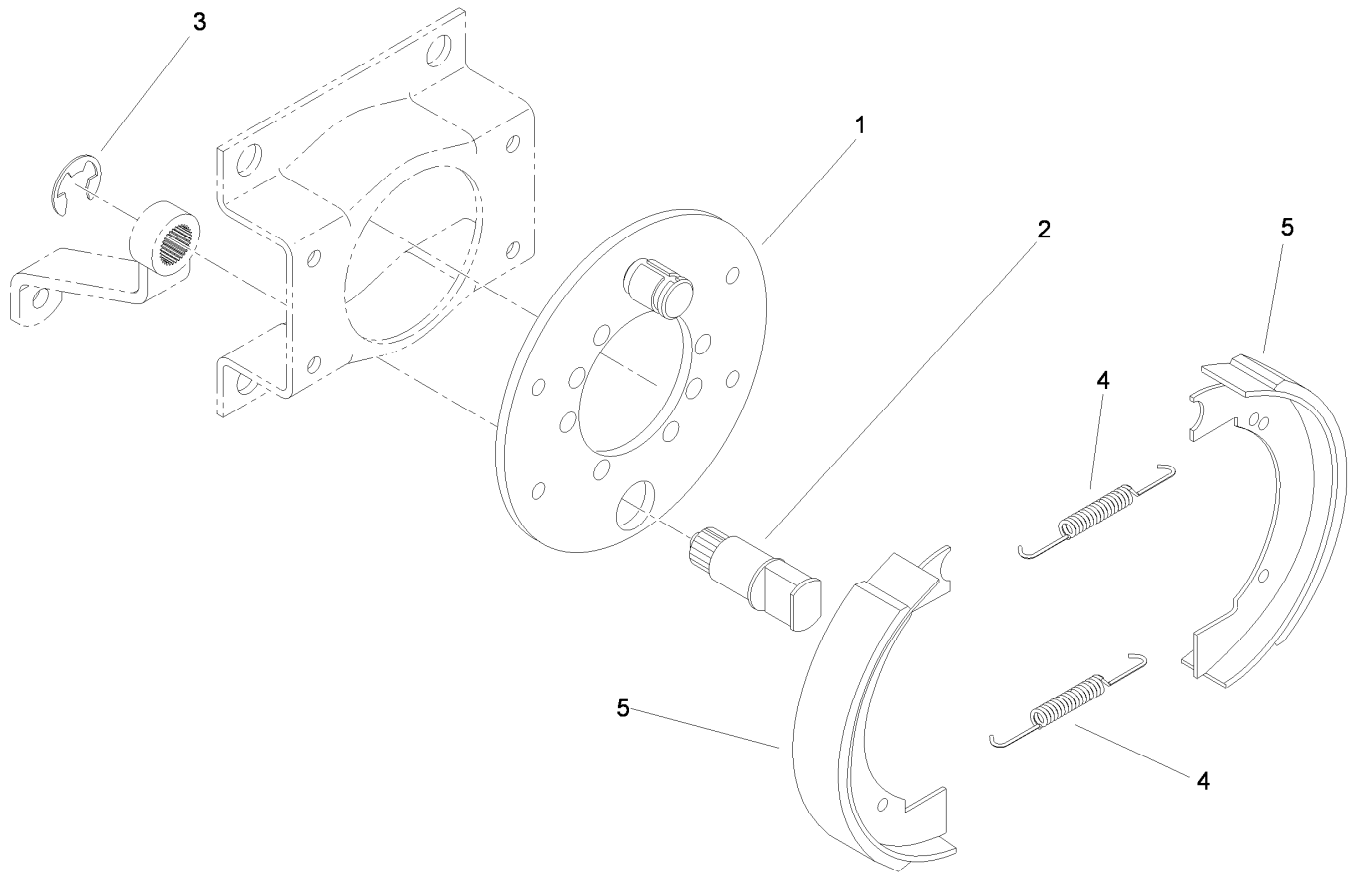

Brake Assembly No. 104-7705

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	70-9870	1	Plate-Backing
2	104-7707	1	Shaft-Cam, Brake
3	104-7706	1	E-Ring, Bowed
4	70-9880	2	Spring-Return
5	70-9840	2	Shoe-Brake

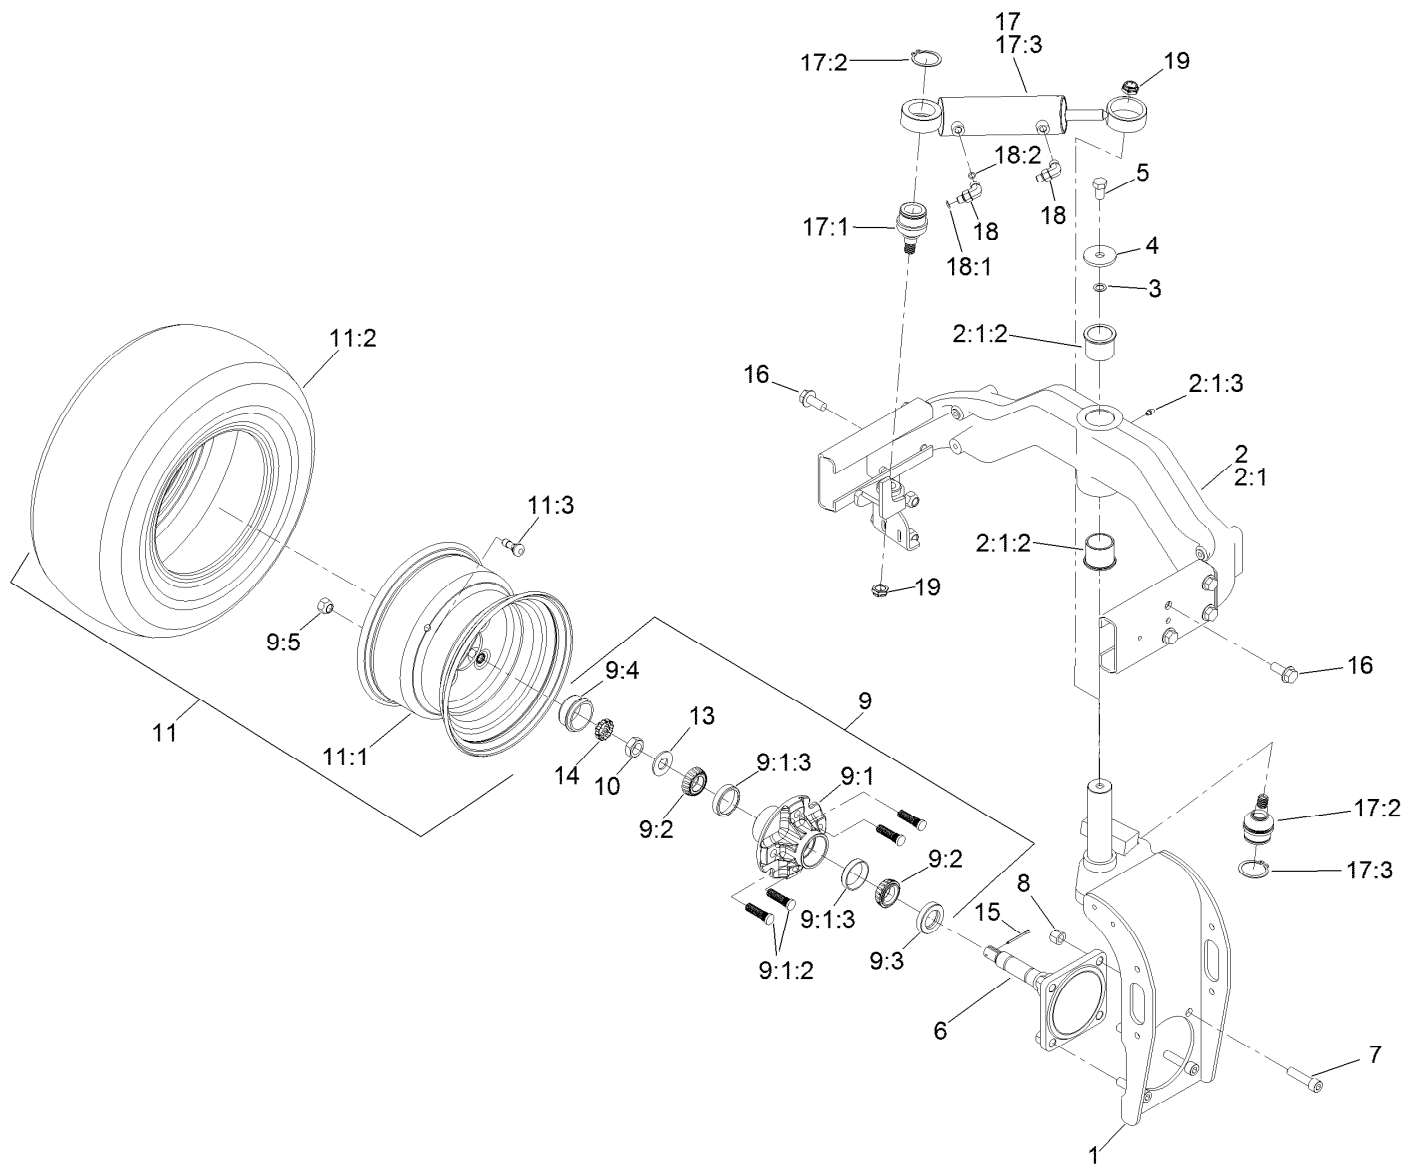 


Rear Caster Assembly

Ref.	Part Number	Qty.	Description
1	95-8905-01	1	Fork-Rear
2	107-7828-03	1	Casting-Rear
2:1		1	Rear Casting ASM ●
2:1:2	95-8805	2	Bushing
2:1:3	302-5	1	Fitting-Grease
3	3255-2	1	Washer-Lock, EXT
4	75-7730	1	Washer-Thrust
5	325-3	1	Screw-HH
6	115-6655-03	1	Spindle
7	3274-5	4	Screw-HSH
8	3296-23	4	Nut-Lock, NI
9	117-5115	1	Hub And Bearing ASM
9:1	117-8251	1	Hub ASM
9:1:2	114-3918	4	Stud-Wheel
9:1:3	254-72	2	Bearing-Cup, Tapered
9:2	254-94	2	Bearing-Cone, Tapered
9:3	112-1690	1	Seal-Oil
9:4	241-119	1	Cap-Dust

Ref.	Part Number	Qty.	Description
9:5	242-50	4	Nut-Lug
10	3220-7	1	Nut-Jam
11		1	Wheel And Tire ASM ●
11:1	117-5129	1	Rim
11:2	115-1572	1	Tire
11:3	232-27	1	Stem-Valve
13	93-0309	1	Washer-Tab
14	93-0307	1	Nut-Lock, Retainer
15	3272-13	1	Pin-Cotter
16	3234-38	8	Screw-HHF
17		1	Steering Cylinder ASM ●
17:1	121-3605	2	Ball Joint
17:2	32151-104	2	Ring-Retaining, External
17:3	121-3653	1	Cylinder-HYD
18	340-132	2	Fitting-Elbow, 90 DEG
18:1	237-78	1	O-Ring
18:2	237-21	1	O-Ring
19	121-3611	2	Nut-Hex, Flextop

 
● Not serviced separately

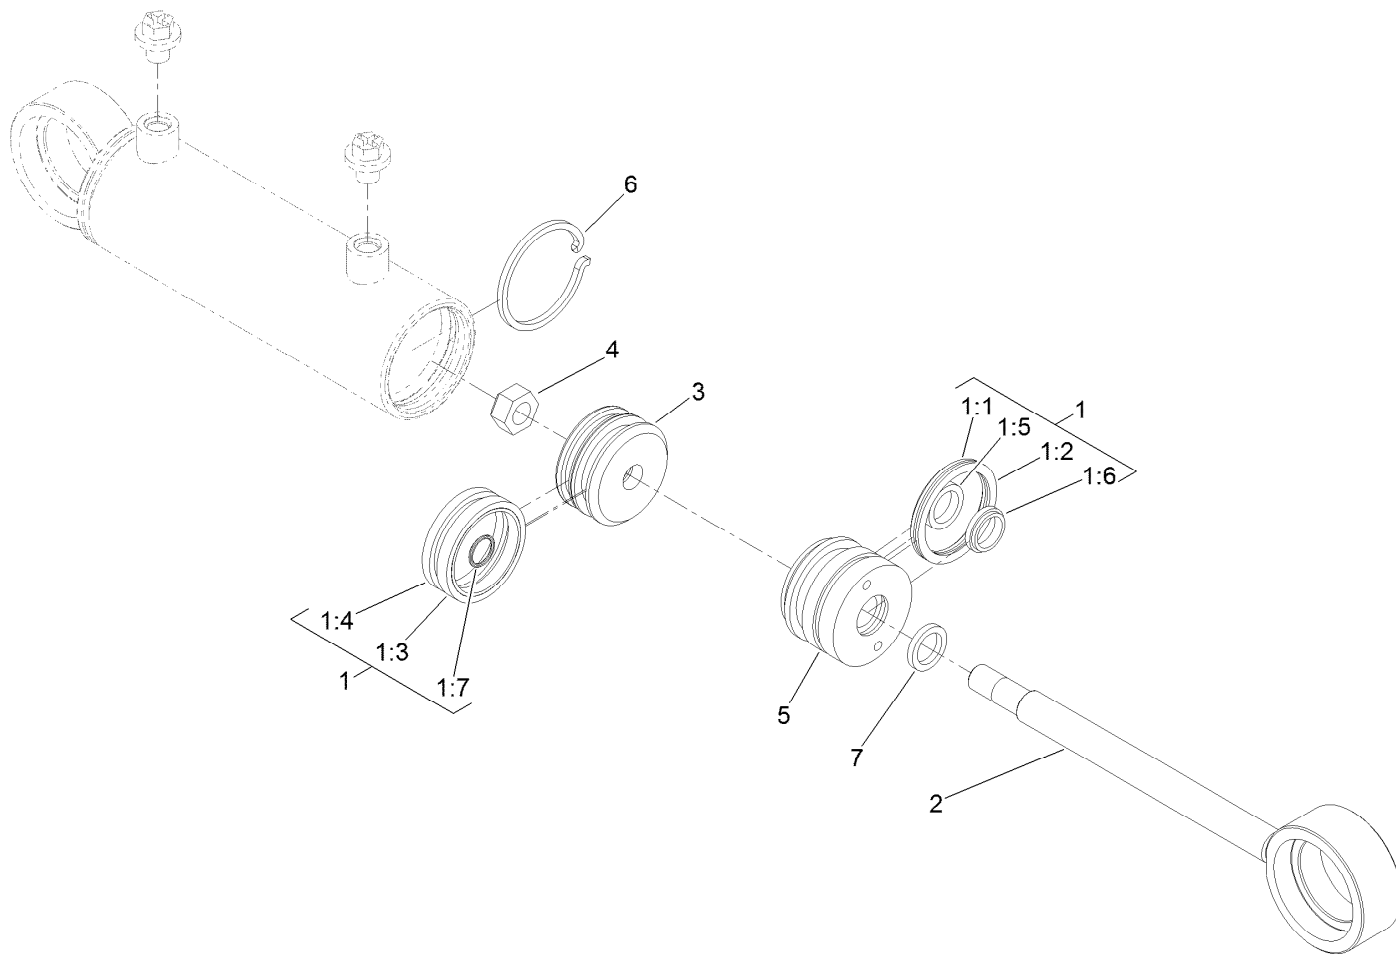

Hydraulic Cylinder Assembly No. 121-3653

Ref.	Part Number	Qty.	Description
1	136-3278	1	Seal Kit
1:1		1	O-Ring ●
1:2		1	Backup ●
1:3		1	Psp Seal ●
1:4		1	Wear Ring ●
1:5		1	Bt Seal ●
1:6		1	Dust Seal ●
1:7		1	O-Ring ●
2		1	Rod ●
3		1	Piston ●
4		1	Head ●
5		1	Lock Nut ●
6		1	Retaining Ring ●
7		1	Square O-Ring ●

 
● Not serviced separately

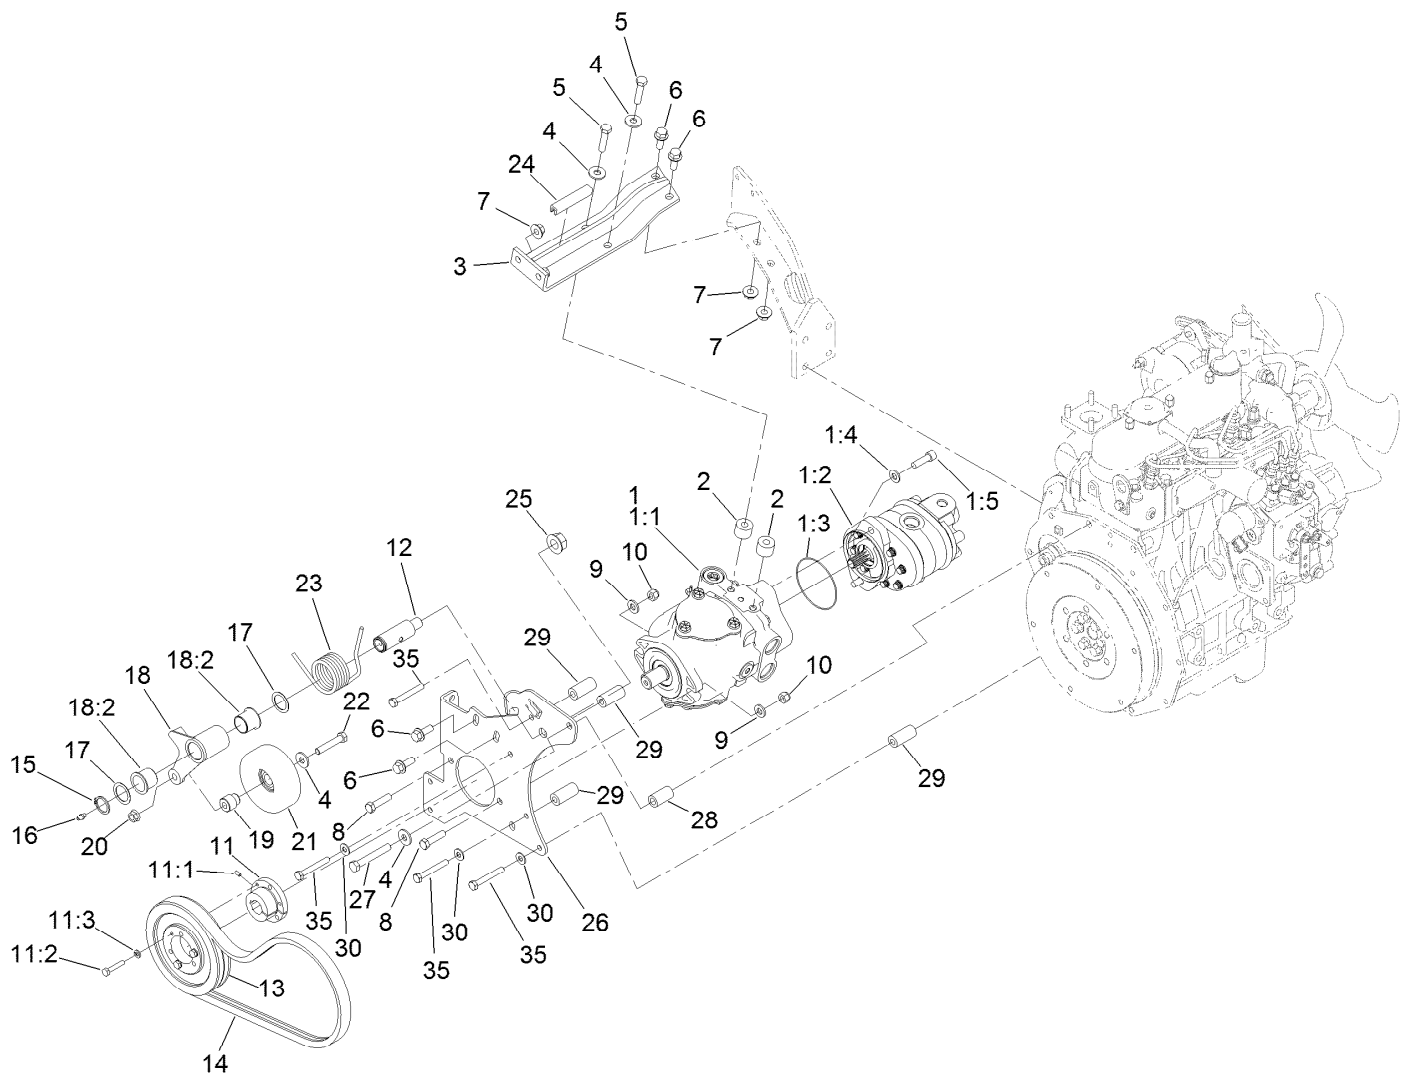

Tandem Hydraulic Pump Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Tandem Pump ASM ●	11:3	3253-3	3	Washer-Lock
1:1	104-4890	1	Piston Pump ASM	12	99-3529	1	Shaft-Pivot, Idler
1:2	95-8601	1	Gear Pump ASM	13	93-6841	1	Pulley
1:3	60-3520	1	O-Ring	14	95-8730	1	V-Belt
1:4	3256-24	2	Washer-Plain	15	32151-36	1	Ring-Retaining
1:5	3274-1	2	Screw-HSH	16	302-5	1	Fitting-Grease
2	99-3440	2	Spacer	17	74-1810	2	Washer
3	99-3436-0P	1	Support-Pump	18	137-1653	1	Idler Arm ASM
4	80-6990	4	Washer-Hardened	18:2	126-1963	2	Bushing-Pivot
5	323-19	2	Screw-HH	19	95-8806	1	Spacer
6	3234-11	4	Screw-HHF	20	32128-21	1	Nut-HF Lock
7	32128-43	4	Nut-Flange	21	95-8802	1	Pulley-Idler
8	323-8	2	Screw-HH	22	323-10	1	Screw-HH
9	100-4852	2	Washer-Hardened	23	95-8917	1	Spring-Torsion
10	3296-39	2	Nut-Lock, NI	24	70-2041	1	Trim - Edge
11	93-6842	1	Bushing-Lock, Taper	25	32128-54	1	Nut-HF
11:1	3245-36	1	Screw-Set, HSH	26	95-8933-0P	1	Plate - Pump Mount *b
11:2	321-13	3	Screw-HH	27	42-9370	1	Screw-HH

 ● Not serviced separately

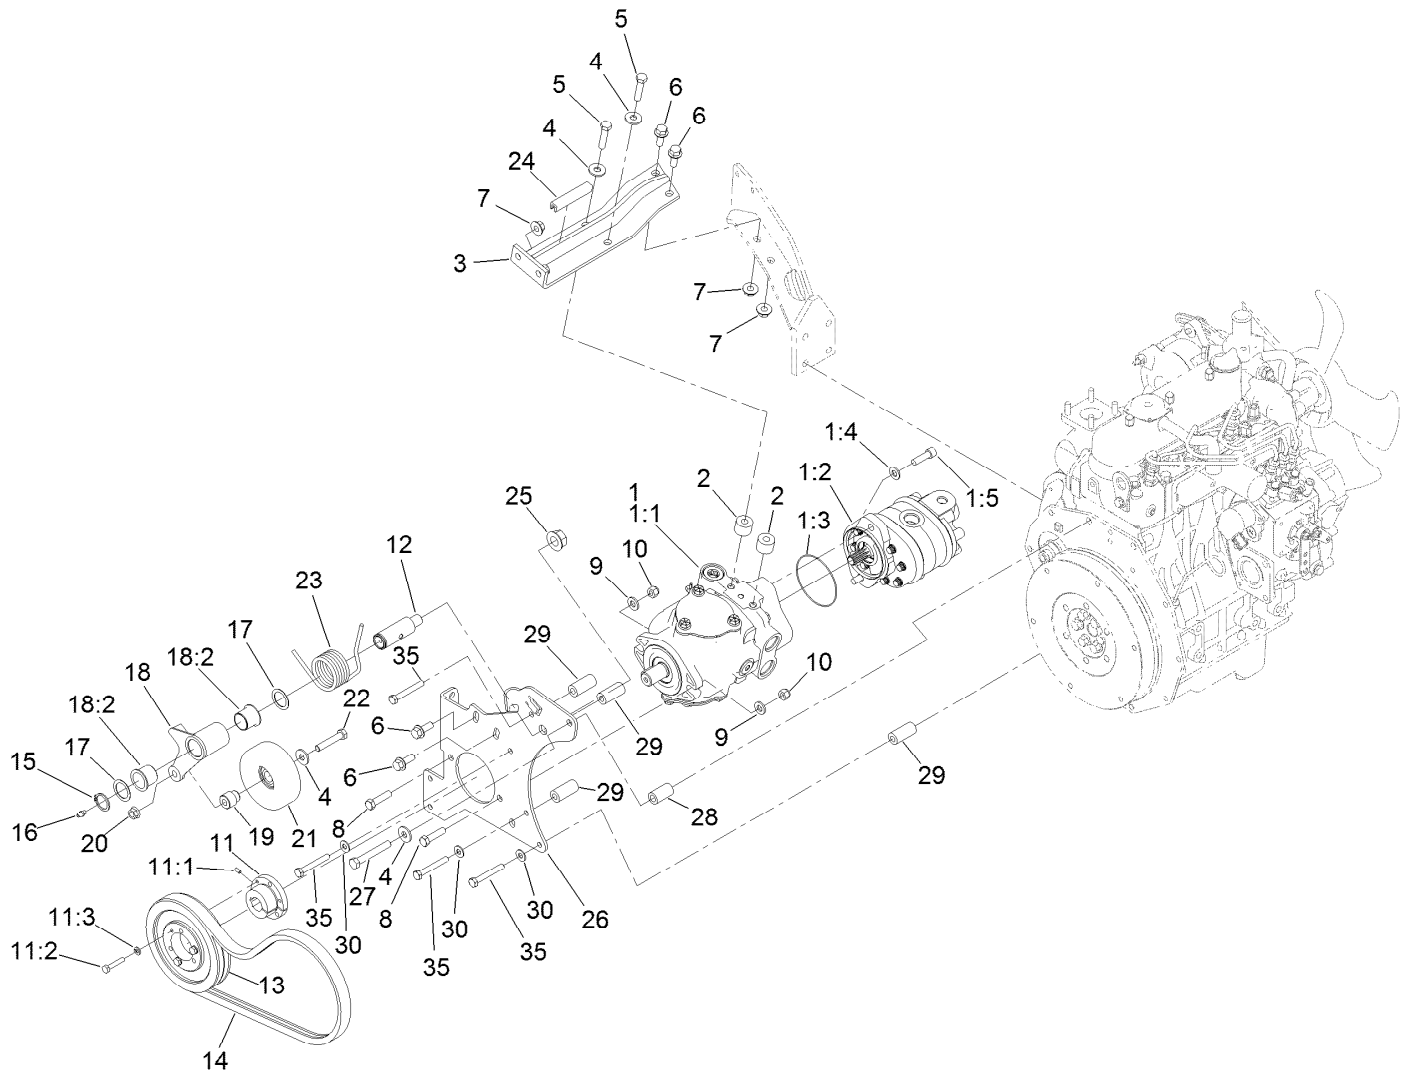


Tandem Hydraulic Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
28	95-8736	1	Spacer
29	95-8941	4	Spacer-Mount, Pump

Ref.	Part Number	Qty.	Description
30	87-8640	3	Washer-Flat
35	33114-060	4	Screw-HH

 ● Not serviced separately

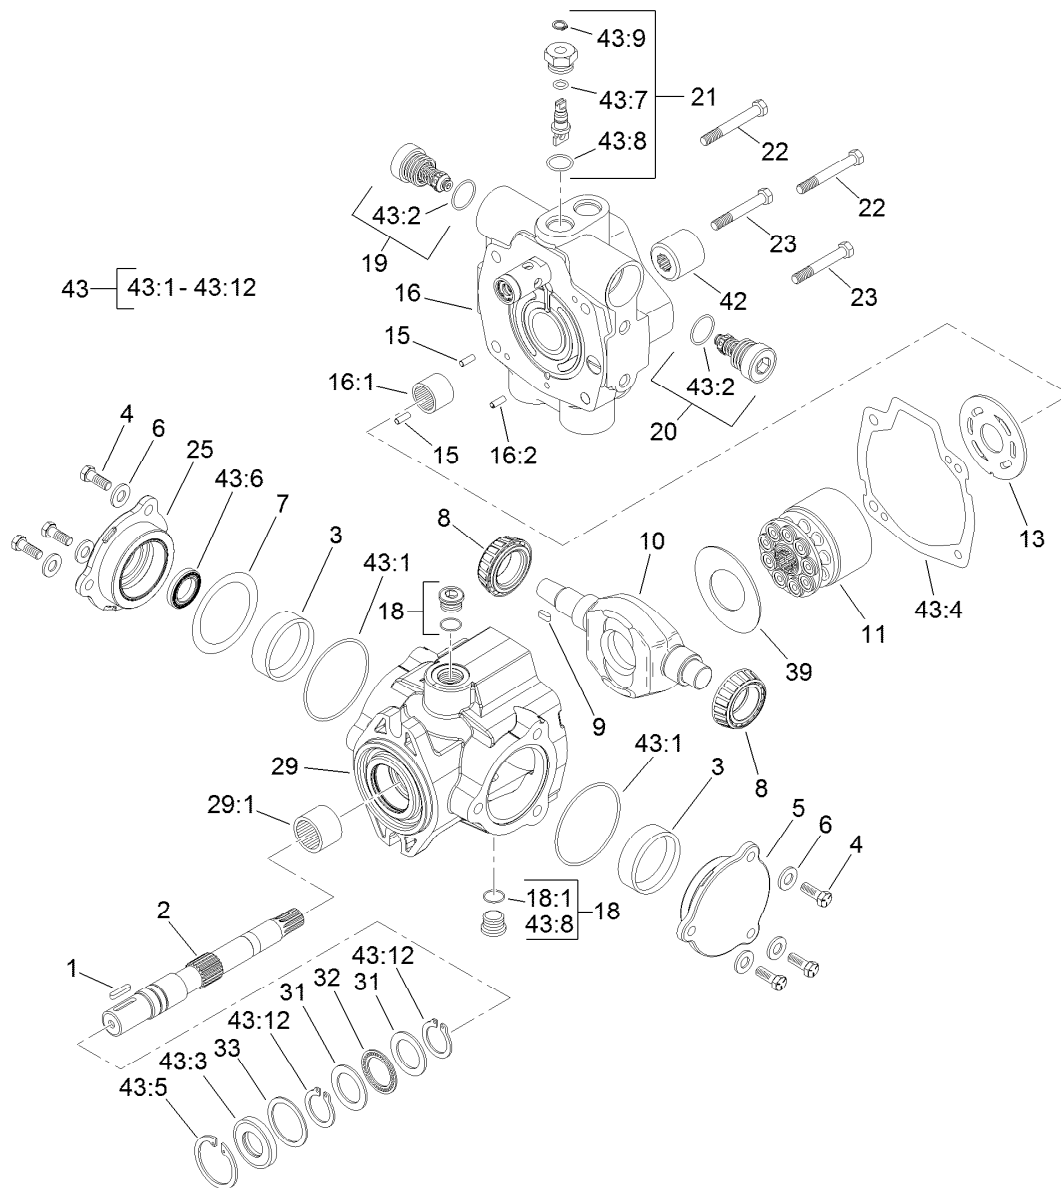


Hydraulic Pump Assembly No. 104-4890

Ref.	Part Number	Qty.	Description
1	94-3645	1	Key
2	94-6359	1	Shaft-Drive
3	104-4046	2	Bearing-Cup
4	98-4640	6	Screw-Cap
5	98-4644	1	Plate-Cover
6	105-9762	6	Washer
7	100-3182	2	Shim Kit
8	98-4639	2	Bearing-Cone
9	94-3646	1	Key
10	104-4888	1	Swashplate
11	76-6070	1	Rotating Kit
13	104-0429	1	Plate-Valve
15	76-6150	2	Pin-Dowel
16	105-3813	1	Endcover Sub ASM
16:1	94-6368	1	Bearing
16:2		1	Pin-Roll ■
18	74-9280	2	Plug ASM
18:1		1	O-Ring ■

Ref.	Part Number	Qty.	Description
19	104-4889	1	Relief Valve ASM
20	105-3812	1	Valve-Check
21	105-3811	1	Valve-Bypass
22	76-6170	2	Capscrew
23	76-6160	2	Capscrew
25	98-4645	1	Plate-Cover
29	100-3176	1	Housing ASM
29:1	94-6363	1	Bearing
31	252-71	2	Washer-Thrust
32	252-66	1	Bearing-Thrust
33	33-3720	1	Washer
39	98-4635	1	Insert-Plate, Cam
42	74-9040	1	Coupler
43	120-5754	1	Seal Kit
43:1		2	O-Ring ■
43:2		2	O-Ring ■
43:3		1	Seal-Shaft ■
43:4		1	Gasket ■

● Not illustrated

 ■ Not serviced separately

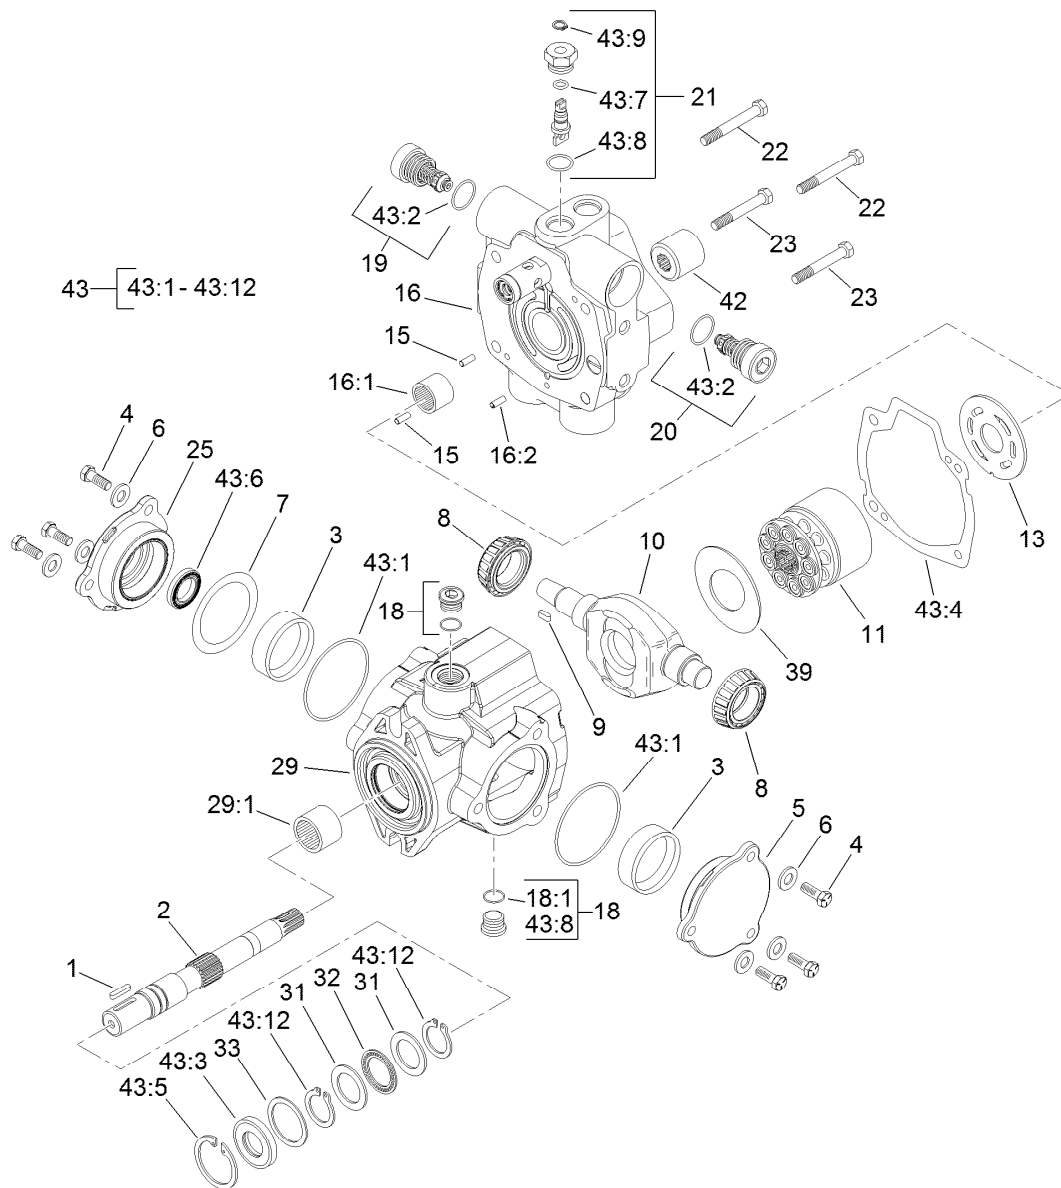


Hydraulic Pump Assembly No. 104-4890 (continued)

Ref.	Part Number	Qty.	Description
43:5		1	Ring-Retaining ■
43:6		1	Seal-Shaft ■
43:7		1	O-Ring ■
43:8		5	O-Ring ■
43:9		1	Ring-Retaining ■

Ref.	Part Number	Qty.	Description
43:10		1	O-Ring ●■
43:11		1	O Ring-Molded ●■
43:12		2	Ring-Retaining ■
43:13		1	O-Ring ■●

● Not illustrated

 ■ Not serviced separately

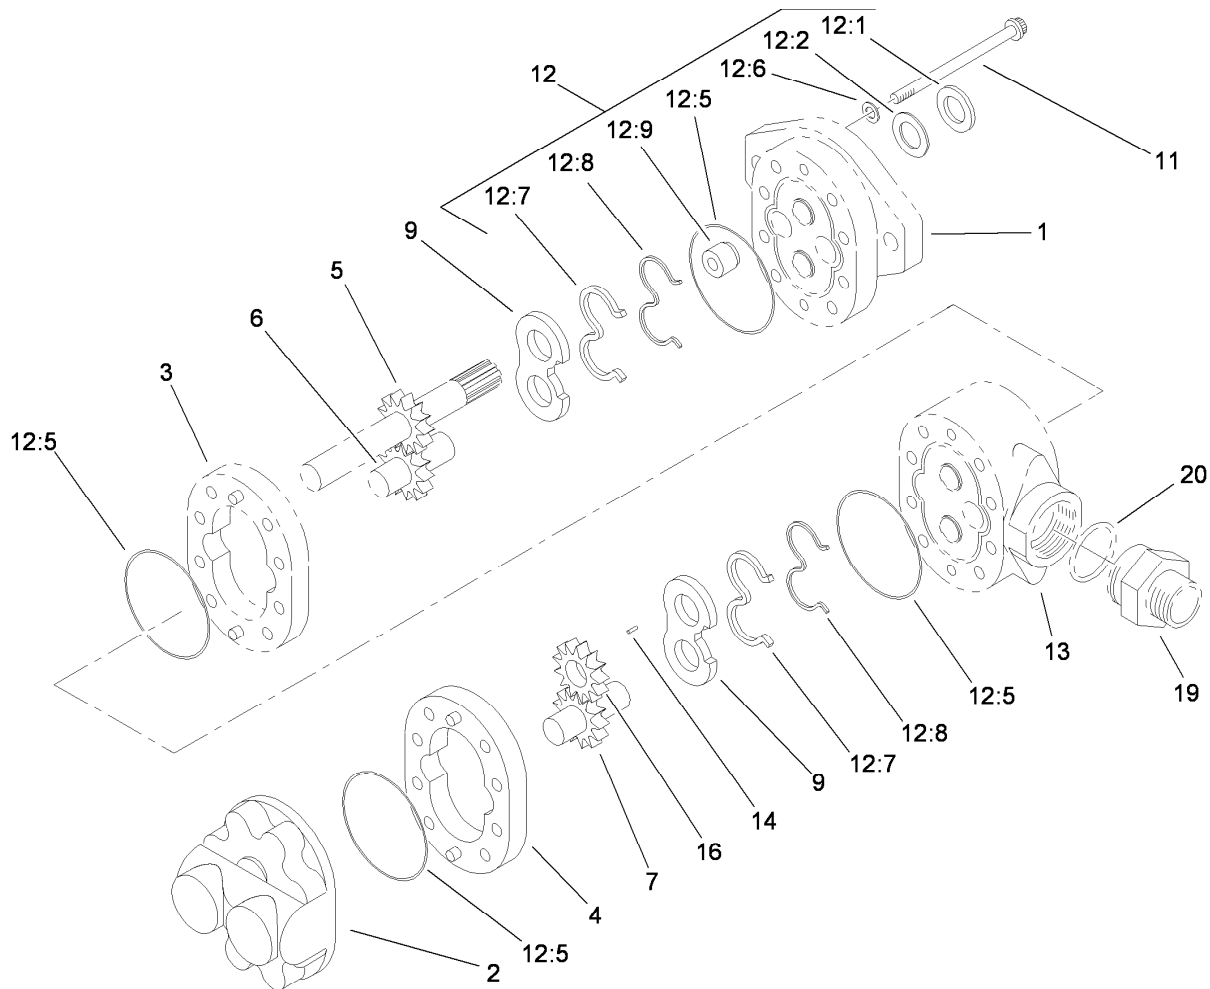


Gear Pump Assembly No. 95-8601

Ref.	Part Number	Qty.	Description
1		1	Plate-Front ■
2		1	Plate-Back ■
3		1	Body ■
4	95-4364	1	Body
5		1	Gear-Drive ■
6		1	Gear-Idler ■
7	95-4366	1	Gear-Idler
9	95-4368	2	Plate-Wear
11	94-8158	8	Screw-Cap
12	94-8161	1	Seal Repair Kit ●
12		4	O-Ring ■
12:1	49-2640	1	Seal-Shaft
12:2	60-5890	1	Washer
12:5		4	O-Ring ■
12:6	120-7576	4	Washer-Sealing
12:7	95-4369	2	Seal-Pressure
12:8	95-4368	2	Plate-Wear
12:9	94-3011	1	Plug
13		1	Plate-Adapter ■
14		1	Key ■
16	95-4373	1	Gear-Fit, Slip
19	49-2640	1	Seal-Shaft
20	60-5890	1	Washer

● Not illustrated

 
■ Not serviced separately

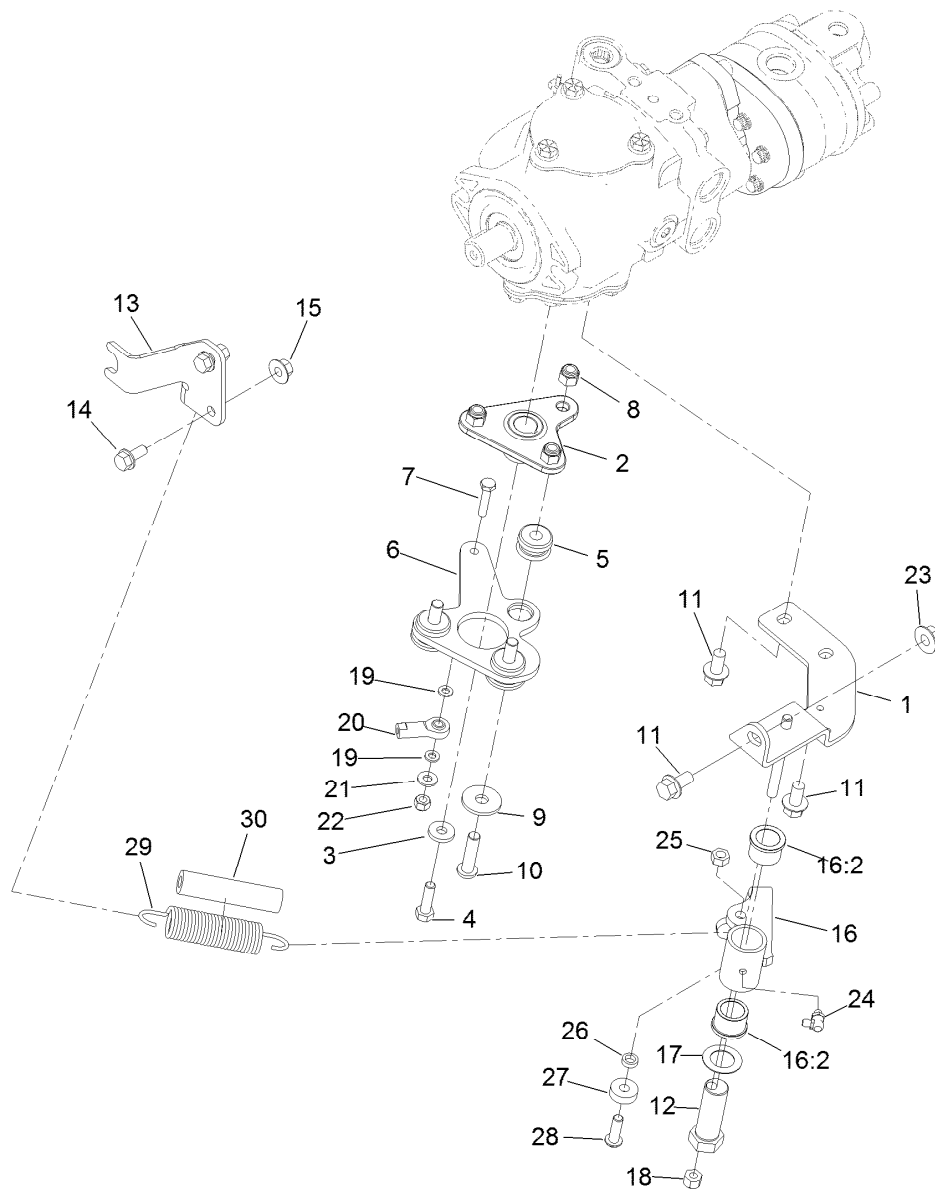

Tandem Pump Mount Assembly

Ref.	Part Number	Qty.	Description
1	95-8960-0P	1	Bracket-Neutral
2	120-5566	1	Hub
3	88-7200	1	Washer-Flat
4	3210-6	1	Screw-HH
5	63-9750	3	Mount
6	99-3594-0P	1	Lever-Pump
7	321-8	1	Screw-HH
8	3296-39	3	Nut-Lock, NI
9	2844	3	Washer
10	95-3857	3	Screw-HSBH
11	3234-1	3	Screw-HHF
12	76-8640	1	Stud-Traction
13	104-0464-03	1	Bracket-Support, Cable
14	3234-5	2	Screw-HHF
15	32128-44	2	Nut
16	104-0422	1	Neutral Arm ASM

Ref.	Part Number	Qty.	Description
16:2	256-113	2	Bushing-Flange
17	3-6498	1	Washer-Thrust
18	3296-29	1	Nut-Lock, NI
19	33093-00	2	Washer-Flat
20	2411-41	1	Rod End-Ball Joint
21	3256-22	1	Washer-Flat
22	3296-42	1	Nut-Lock, NI
23	32128-43	1	Nut-Flange
24	302-60	1	Fitting-Grease
25	32153-3	1	Nut-Hex, Side Deform
26	100-4817	1	Spacer
27	251-259	1	Bearing-Ball
28	3274-104	1	Screw-HSBH
29	94-1369	1	Spring-Extension
30	99-3556	1	Hose

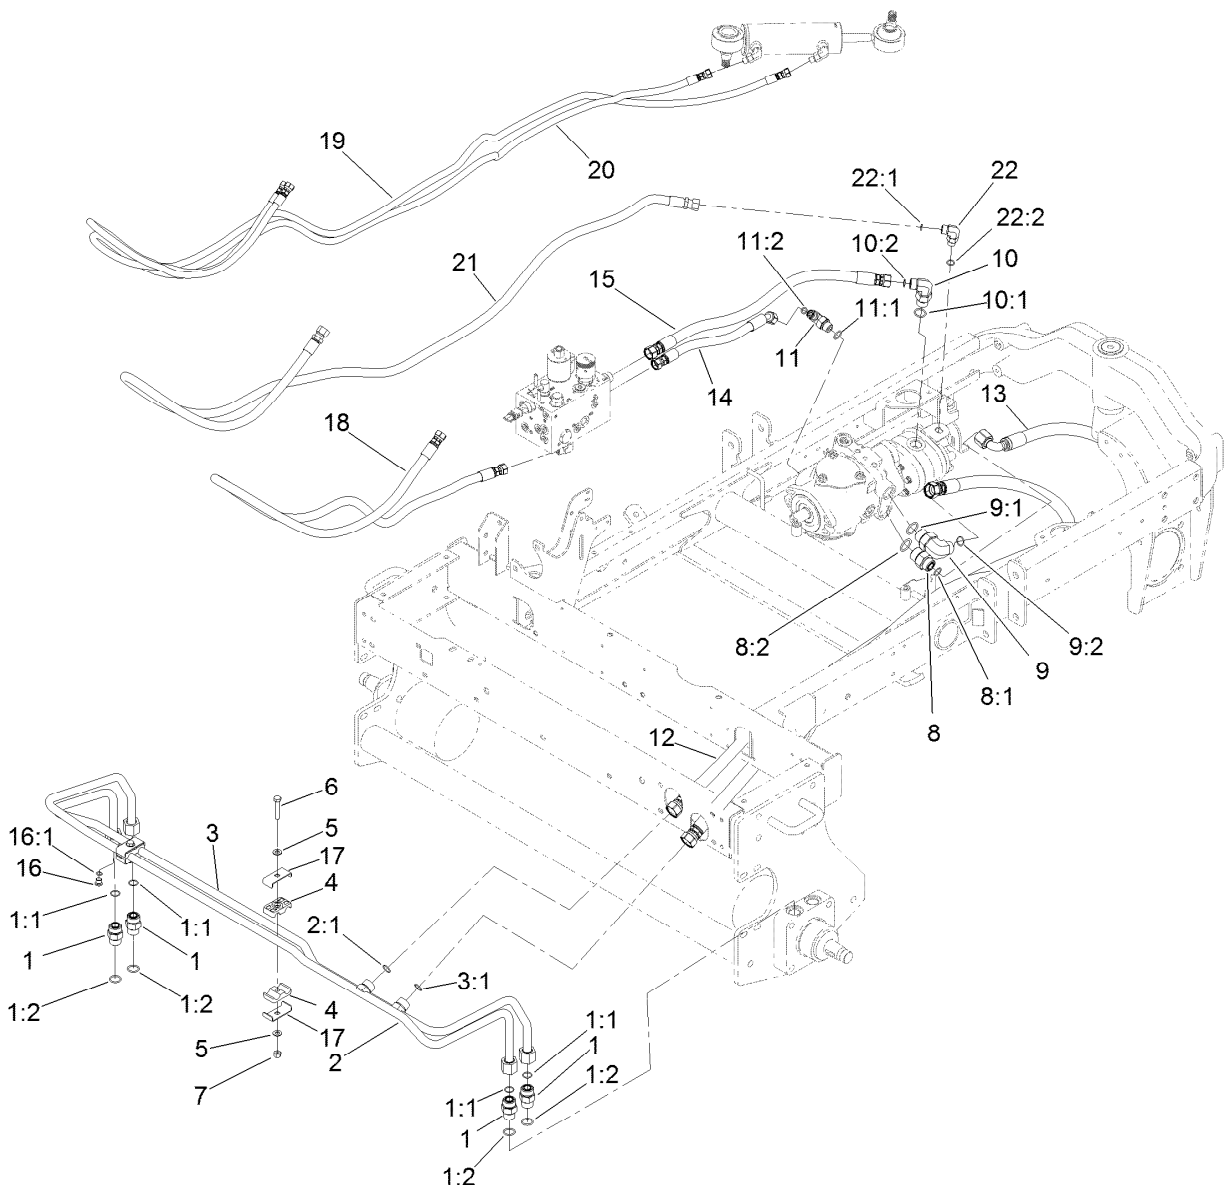 


Hydraulic Hose Assembly

Ref.	Part Number	Qty.	Description
1	340-7	4	Fitting-Straight
1:1	237-65	1	O-Ring
1:2	237-80	1	O-Ring
2	95-8783	1	Tube ASM
2:1	237-65	1	O-Ring
3	95-8784	1	Tube ASM
3:1	237-65	1	O-Ring
4	56-7971	4	Clamp-Tube
5	3256-23	4	Washer-Plain
6	322-9	2	Screw-HH
7	3296-29	2	Nut-Lock, NI
8	340-8	1	Fitting-Straight
8:1	237-65	1	O-Ring
8:2	237-81	1	O-Ring
9	340-139	1	Fitting-Elbow 90
9:1	237-81	1	O-Ring
9:2	237-65	1	O-Ring
10	340-105	1	Fitting-Elbow, 90 DEG
10:1	237-80	1	O-Ring

Ref.	Part Number	Qty.	Description
10:2	237-30	1	O-Ring
11	340-18	1	Fitting-HYD, 90 DEG
11:1	237-79	1	O-Ring
11:2	237-22	1	O-Ring
12	108-9008	1	Hose ASM
13	105-1214	1	Hose-HYD
14	106-4197	1	Hose ASM
15	95-8829	1	Hose ASM
16	353-990	1	Plug ASM
16:1	237-78	1	O-Ring
17	119-1419	4	Plate-Clamp
18	95-8842	1	Hose-HYD
19	95-8845	1	Hose ASM
20	95-8844	1	Hose ASM
21	95-8846	1	Hose-HYD
22	340-77	1	Fitting-Elbow, 90 DEG
22:1	237-22	1	O-Ring
22:2	237-42	1	O-Ring
99	3290-378	2	Tie-Cable ●

 
● Not illustrated

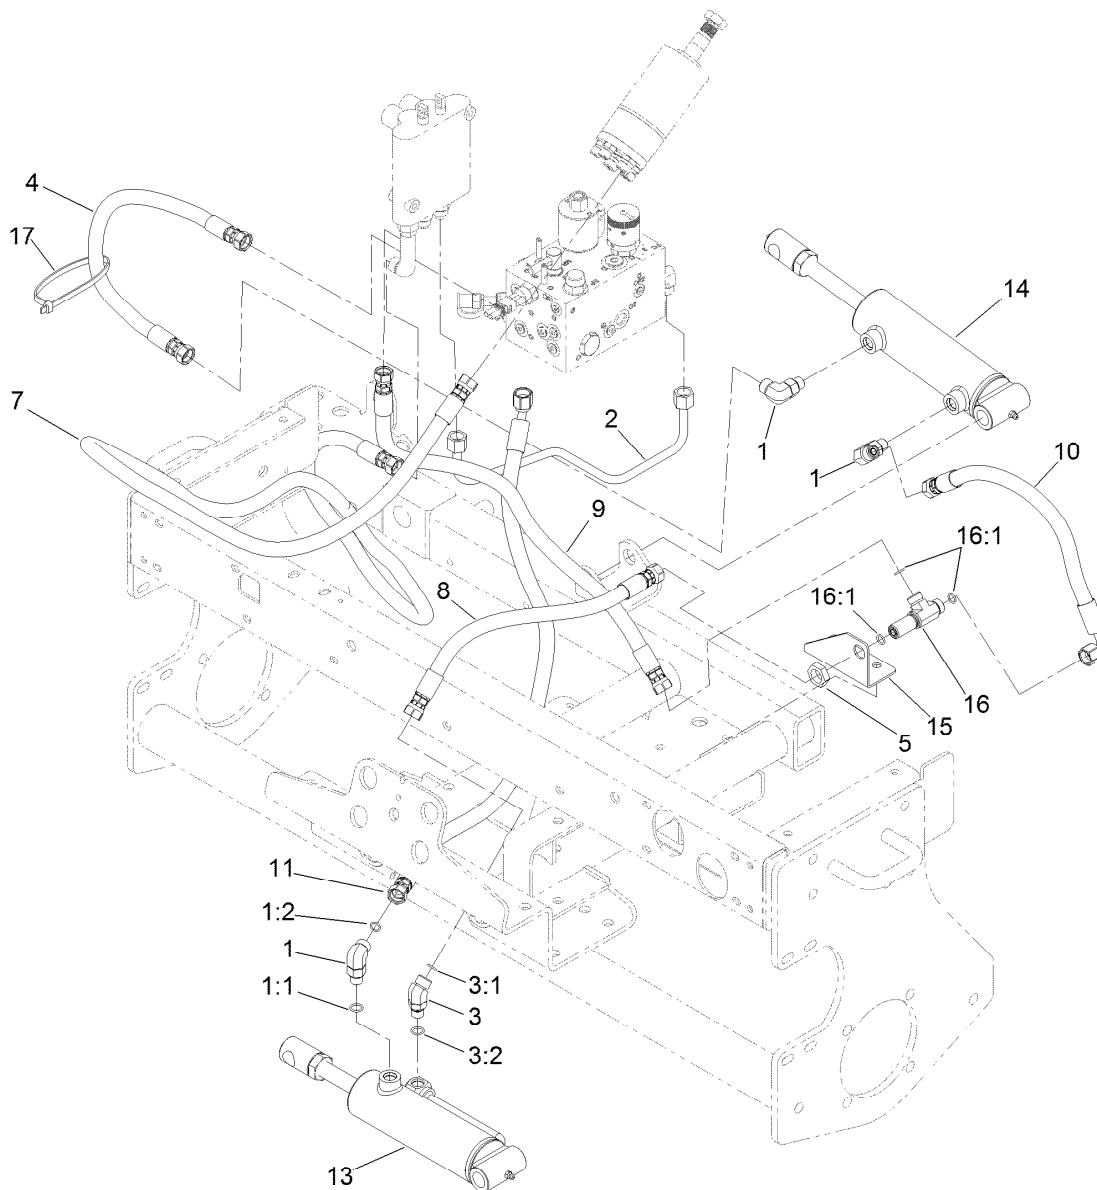

Steering Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	340-77	3	Fitting-Elbow, 90 DEG
1:1	237-22	1	O-Ring
1:2	237-42	1	O-Ring
2	99-3551	1	Tube-HYD
3	340-87	1	Fitting-Elbow, 45 DEG
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring
4	99-3576	1	Hose-HYD
5	340-70	1	Nut-Lock
7	95-8843	1	Hose-HYD


Ref.	Part Number	Qty.	Description
8	140-7460	1	Hose ASM
9	140-7457	1	Hose ASM
10	104-2234	1	Hose-HYD
11	140-7464	1	Hose ASM
13	117-5109	1	HYD Cylinder ASM
14	112-9916	1	HYD Cylinder ASM
15	140-7451-03	1	Bracket-Hoses, CYL
16	340-68	1	Fitting-Tee, Bulkhead
16:1	237-22	3	O-Ring
17	3334-945	1	Tie-Cable

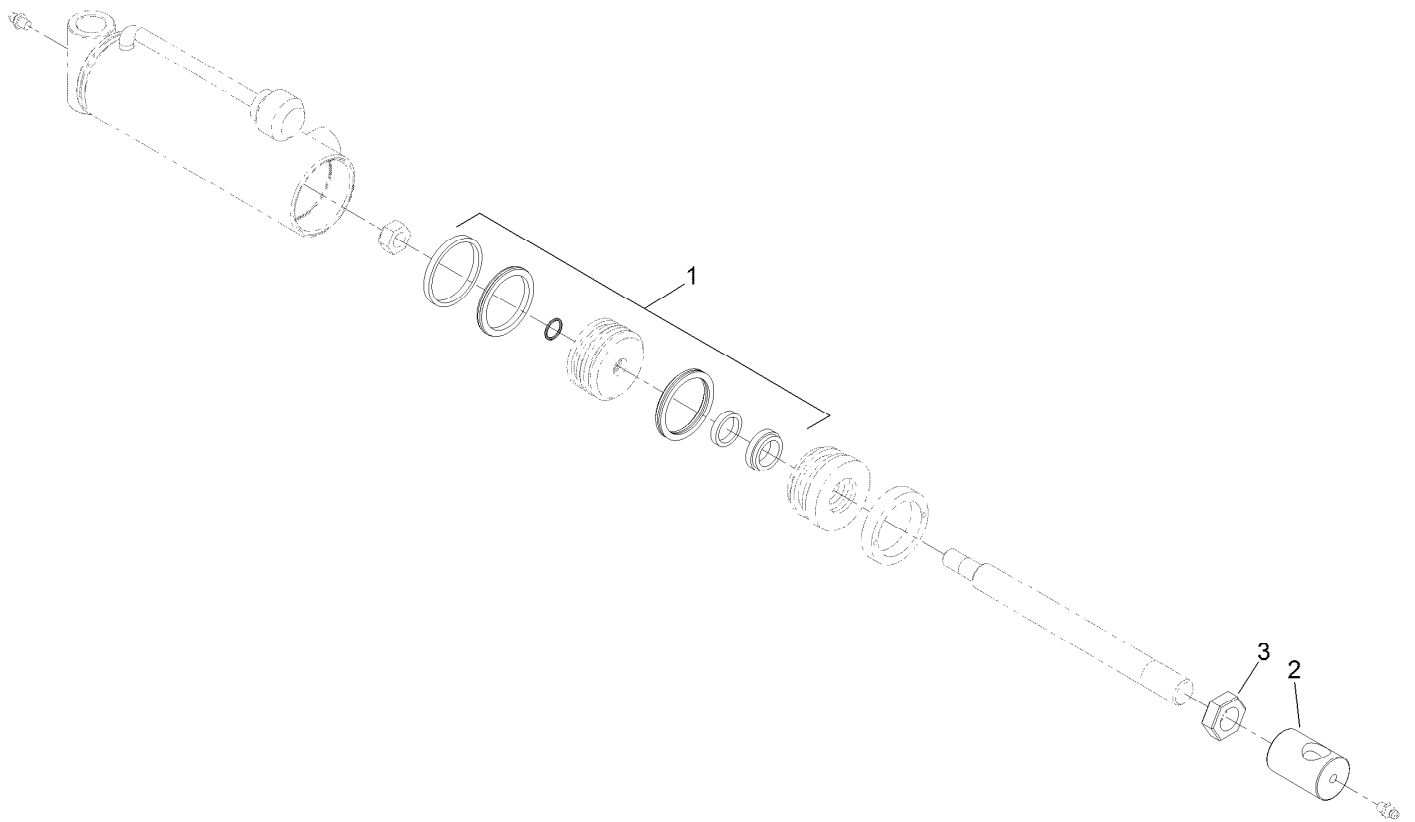 

Hydraulic Cylinder Assembly No. 117-5109


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-3410	1	Seal Kit
2	108-9035	1	Clevis
3	3220-7	1	Nut-Jam

 Hydraulic Cylinder Assembly No. 112-9916

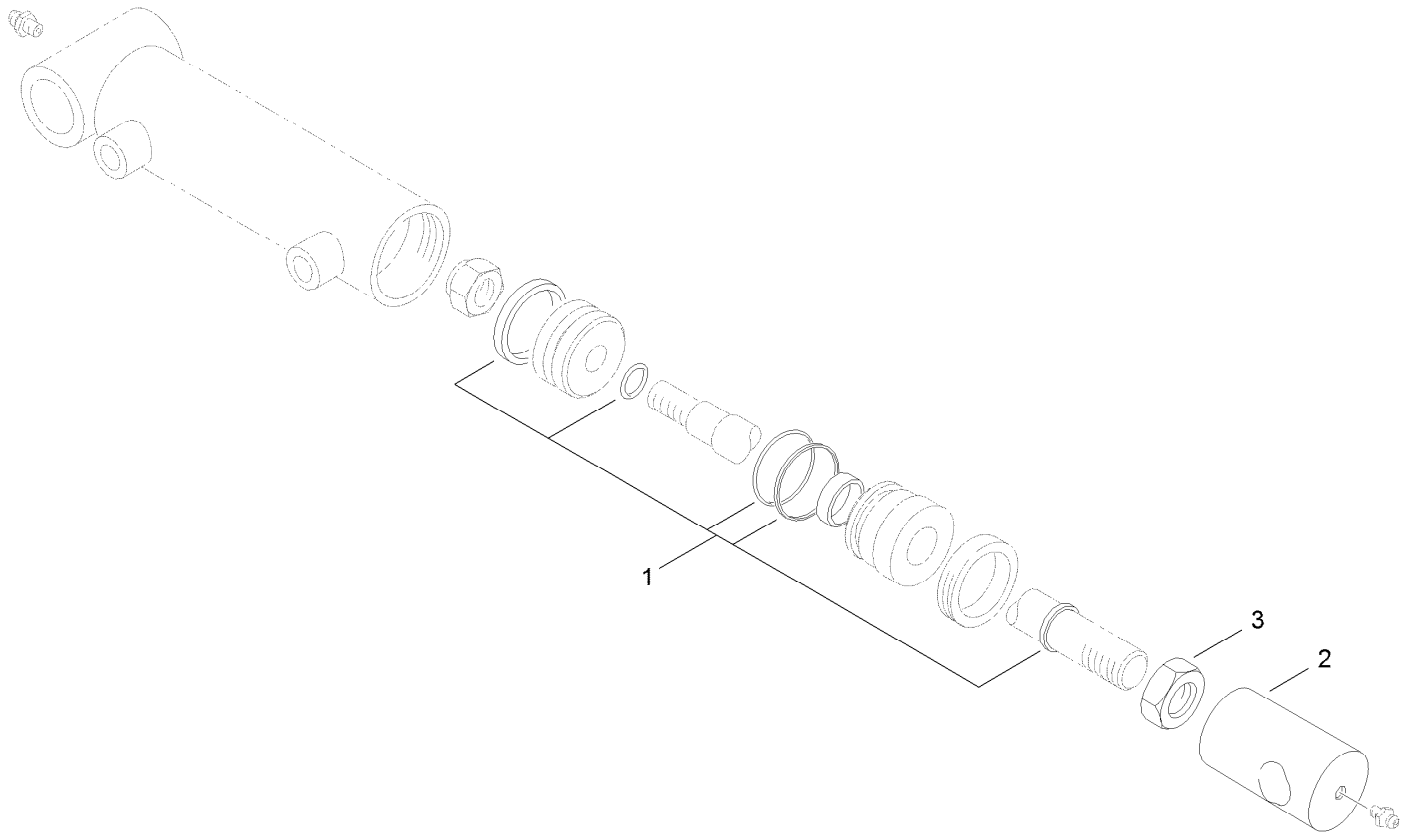

Hydraulic Cylinder Assembly No. 112-9916 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-3410	1	Seal Kit
2	108-9035	1	Clevis
3	3220-7	1	Nut-Jam

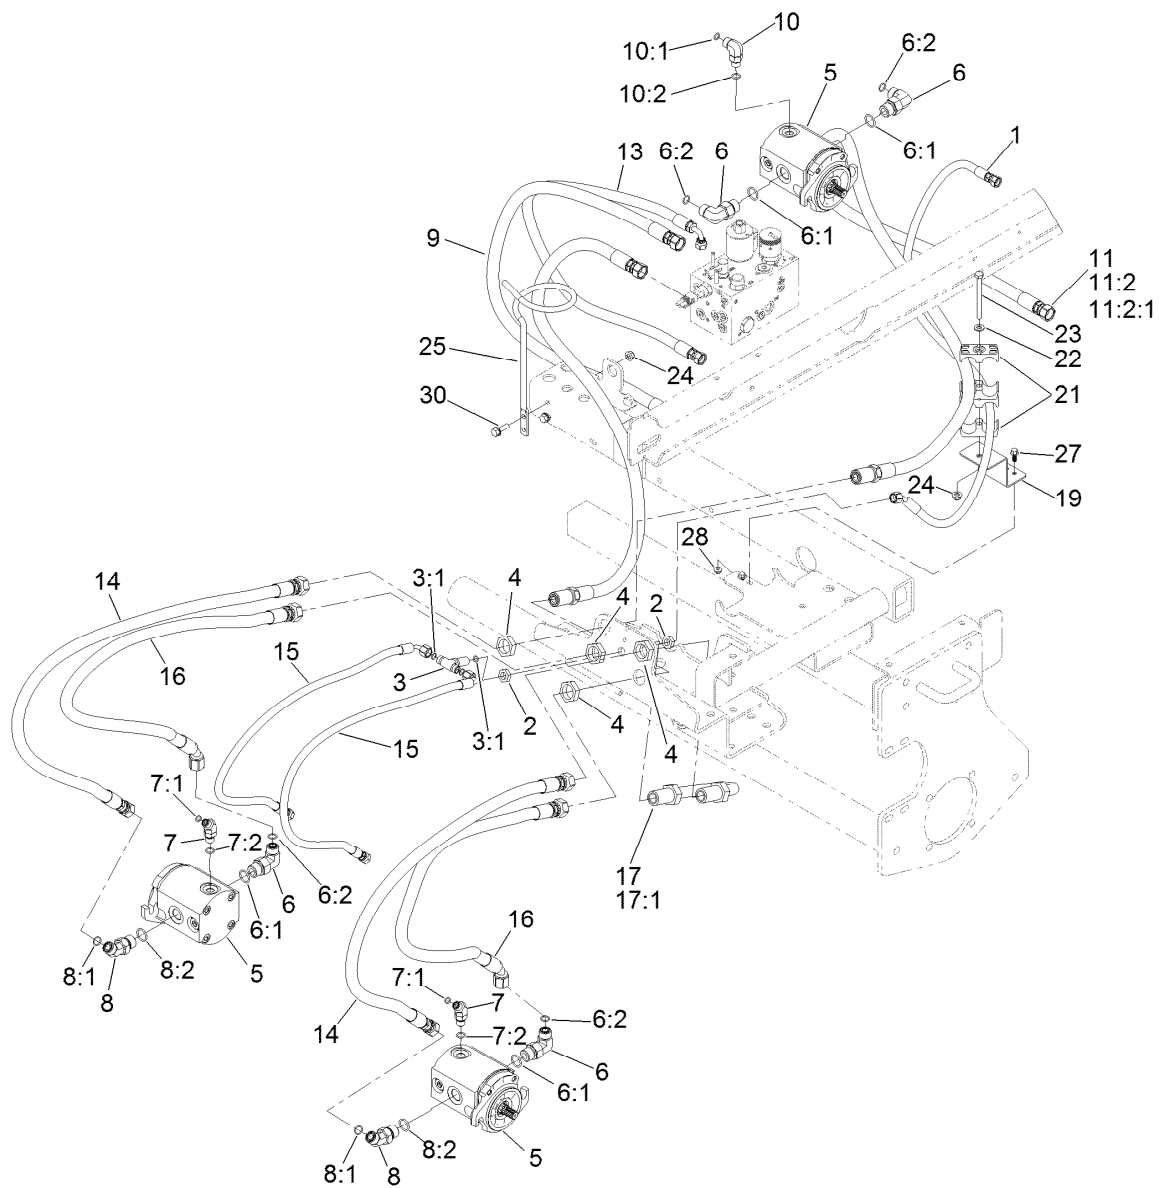 


Mow Circuit Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	140-7456	1	Hose ASM
2	340-78	2	Nut-Lock
3	140-7452	1	Fitting-Tee, Bulkhead
3:1	237-21	3	O-Ring
4	340-74	4	Nut-Lock, Bulkhead
5	115-8250	3	Gear Motor ASM
6	340-105	4	Fitting-Elbow, 90 DEG
6:1	237-80	1	O-Ring
6:2	237-30	1	O-Ring
7	340-137	2	Fitting
7:1	237-21	1	O-Ring
7:2	237-42	1	O-Ring
8	340-89	2	Fitting-HYD, 45 DEG
8:1	237-30	1	O-Ring
8:2	237-80	1	O-Ring
9	114-4044	1	HYD Hose ASM
10	340-77	1	Fitting-Elbow, 90 DEG
10:1	237-22	1	O-Ring
10:2	237-42	1	O-Ring


Ref.	Part Number	Qty.	Description
11	140-7455	1	Hose ASM
11:2		1	Fitting-Strt,Blkhd ●
11:2:1	237-65	1	O-Ring
13	140-7454	1	Hose ASM
14	117-5142	2	Hose-HYD
15	117-5144	2	Hose-HYD
16	117-5143	2	Hose-HYD
17	99-3640	1	Tube ASM
17:1	237-65	2	O-Ring
19	140-7449-03	1	Bracket-Hoses, Front Motor
21	56-7974	4	Clamp-Tube
22	3256-23	1	Washer-Plain
23	322-22	1	Screw-HH
24	104-8300	3	Nut-HF, NI
25	140-7462	1	Guide-Hose
27	99-6810	2	Screw-HHF
28	104-7201	2	Nut-HF, NI
30	3234-29	2	Screw-HHF

 ● Not serviced separately

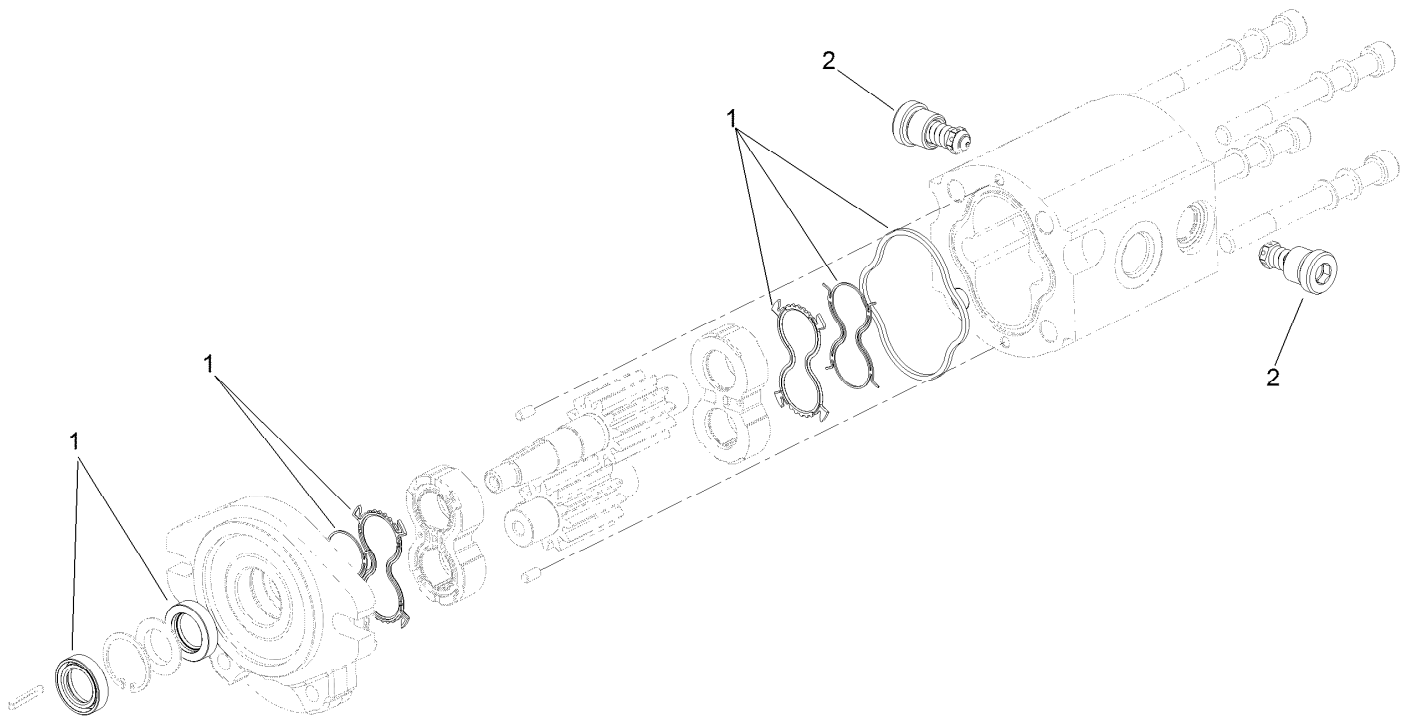

Gear Motor Assembly No. 115-8250

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1682	1	Motor Seal Kit
2	117-5107	2	Valve-Check

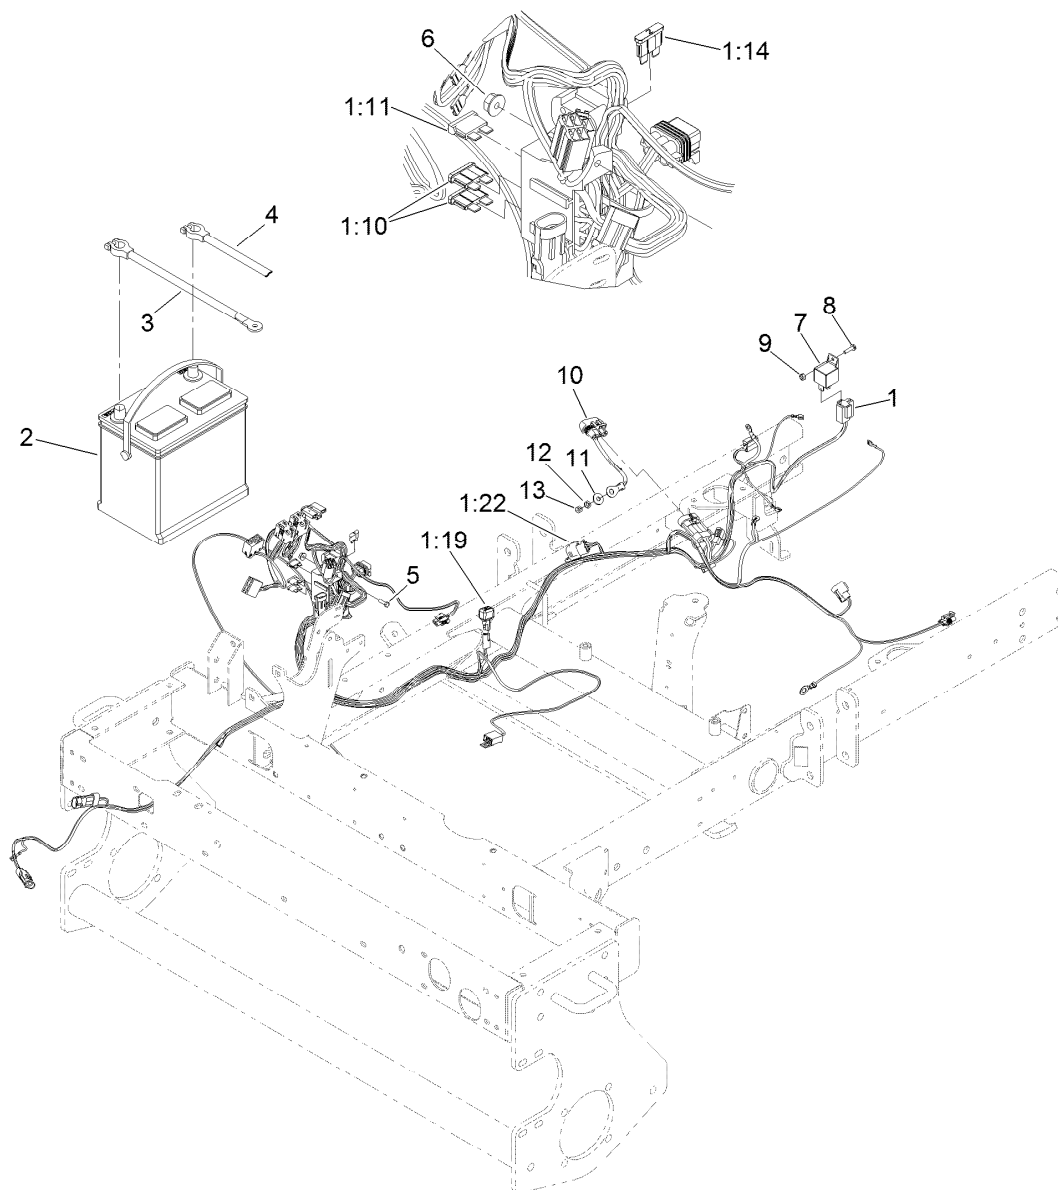 


Electrical Assembly

Ref.	Part Number	Qty.	Description
1	122-1523	1	Harness-Wire
1:10	218-578	2	Fuse-Blade, 10 Amp
1:11	109355	1	Fuse-Blade, 15 Amp
1:14	94-6710	1	Fuse-2 Amp
1:19	100-4918	1	Diode
1:22	32180-156	1	Cap-Plug, 6 Way ●
2	104-0496	1	Battery (Group 55, Wet)
3	95-8853	1	Cable-Battery, Positive
4	95-8854	1	Cable-Battery, Negative
5	3290-134	2	Screw


Ref.	Part Number	Qty.	Description
6	3290-148	2	Nut-HF
7	99-7435	1	Relay
8	32105-13	1	Screw-HWH
9	3296-2	1	Nut-Lock, NI
10	99-3441	1	Harness-Wire, Fusible Link
11	3256-78	1	Washer-Flat
12	43-5930	1	Washer-Lock, Spring
13	48-7890	1	Nut-Hex
99	3290-378	8	Tie-Cable ●
99	3290-379	4	Tie-Cable ●

 ● Not illustrated

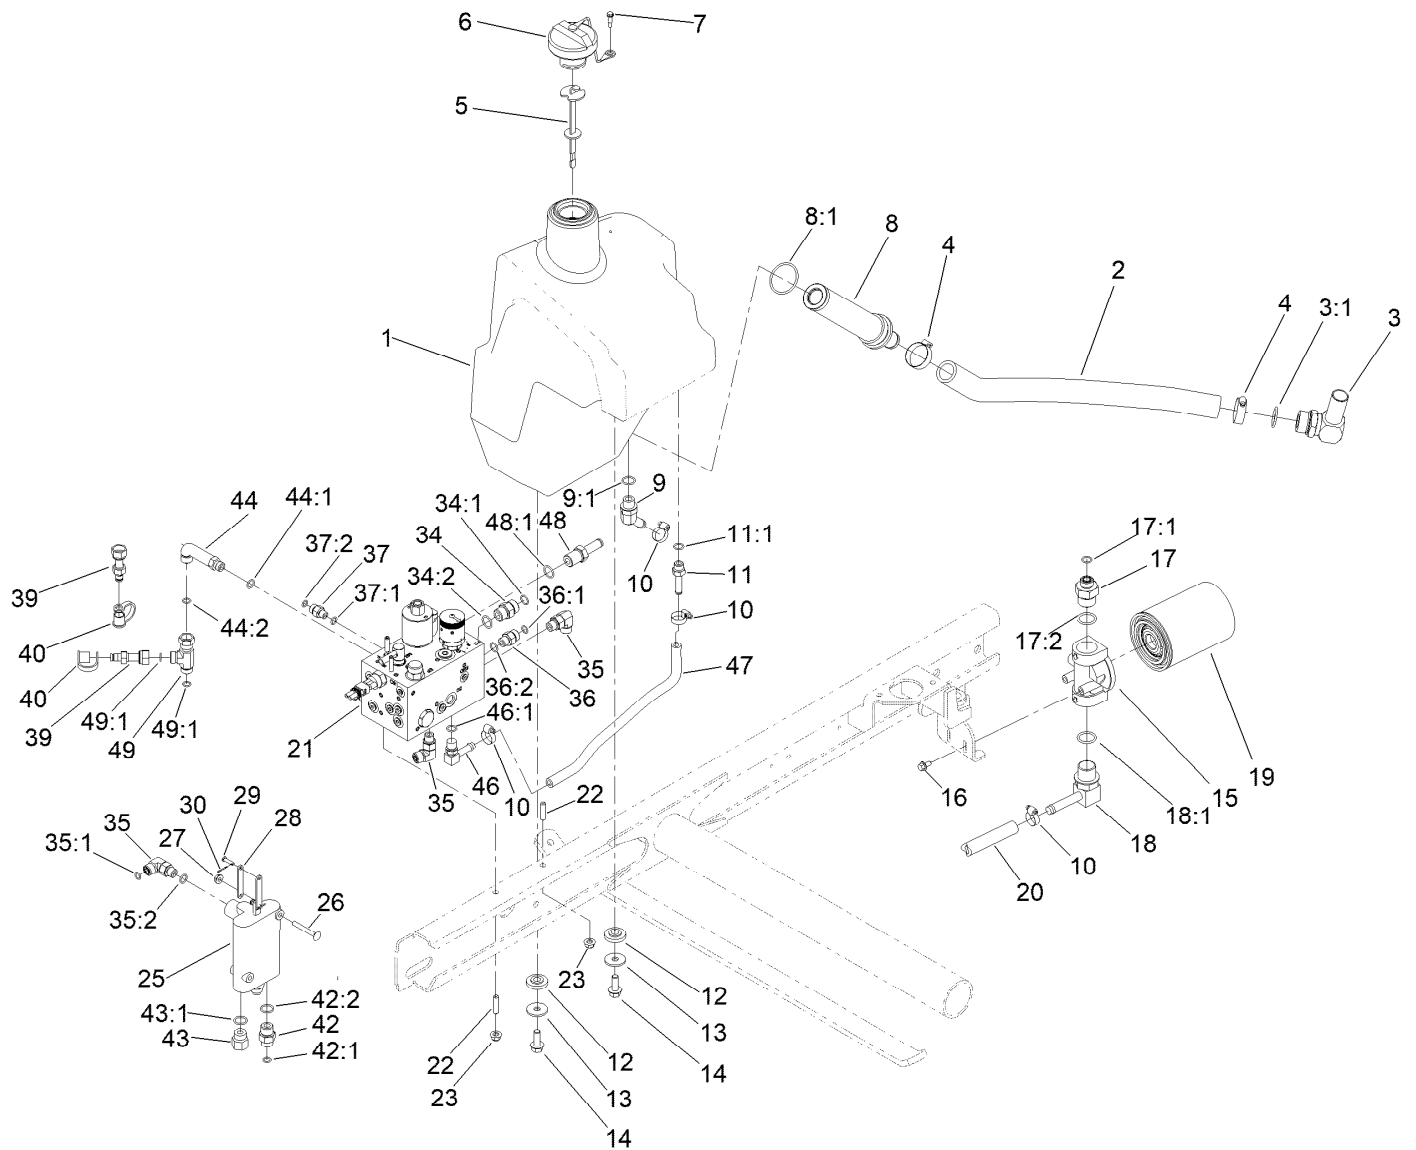

Hydraulic Tank and Valve Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	104-4840	1	Tank-HYD	17:1	237-30	1	O-Ring
2	104-4845	1	Hose-Suction	17:2	237-81	1	O-Ring
3	56-9530	1	Fitting-HYD, 90 DEG	18	95-8814	1	Fitting-90
3:1	237-117	1	O-Ring	18:1	237-81	1	O-Ring
4	2412-34	2	Clamp-Hose	19	86-3010	1	Filter-Oil
5	119-6968	1	Dipstick-Oil	20	99-3501	1	Hose
6	93-7160	1	Cap-Oil, HYD	21	108-9037	1	Manifold ASM
7	57-5420	1	Screw-Shoulder	22	104-0430	2	Stud
8	104-7546	1	Tank Strainer ASM	23	104-8300	2	Nut-HF, NI
8:1	340-136	1	O-Ring	25	95-8689	1	Single Spool Control Valve ASM
9	354-126	1	Fitting-Elbow, 45	26	3230-33	2	Screw-CARR
9:1	237-79	1	O-Ring	27	32128-33	2	Nut-HF
10	2412-36	4	Clamp-Hose	28	95-8634	2	Link
11	353-979	1	Fitting-STR	29	283-16	2	Pin-Clevis
11:1	237-42	1	O-Ring	30	3272-1	2	Pin-Cotter
12	240-11	4	Bushing-Flange	34	340-4	3	Fitting-Straight
13	63-8410	4	Washer	34:1	237-30	1	O-Ring
14	3234-11	4	Screw-HHF	34:2	237-79	1	O-Ring
15	92-5821	1	Head-Filter	35	340-77	2	Fitting-Elbow, 90 DEG
16	3234-13	2	Screw-HHF	35:1	237-22	1	O-Ring
17	100-4240	1	Fitting-STR				

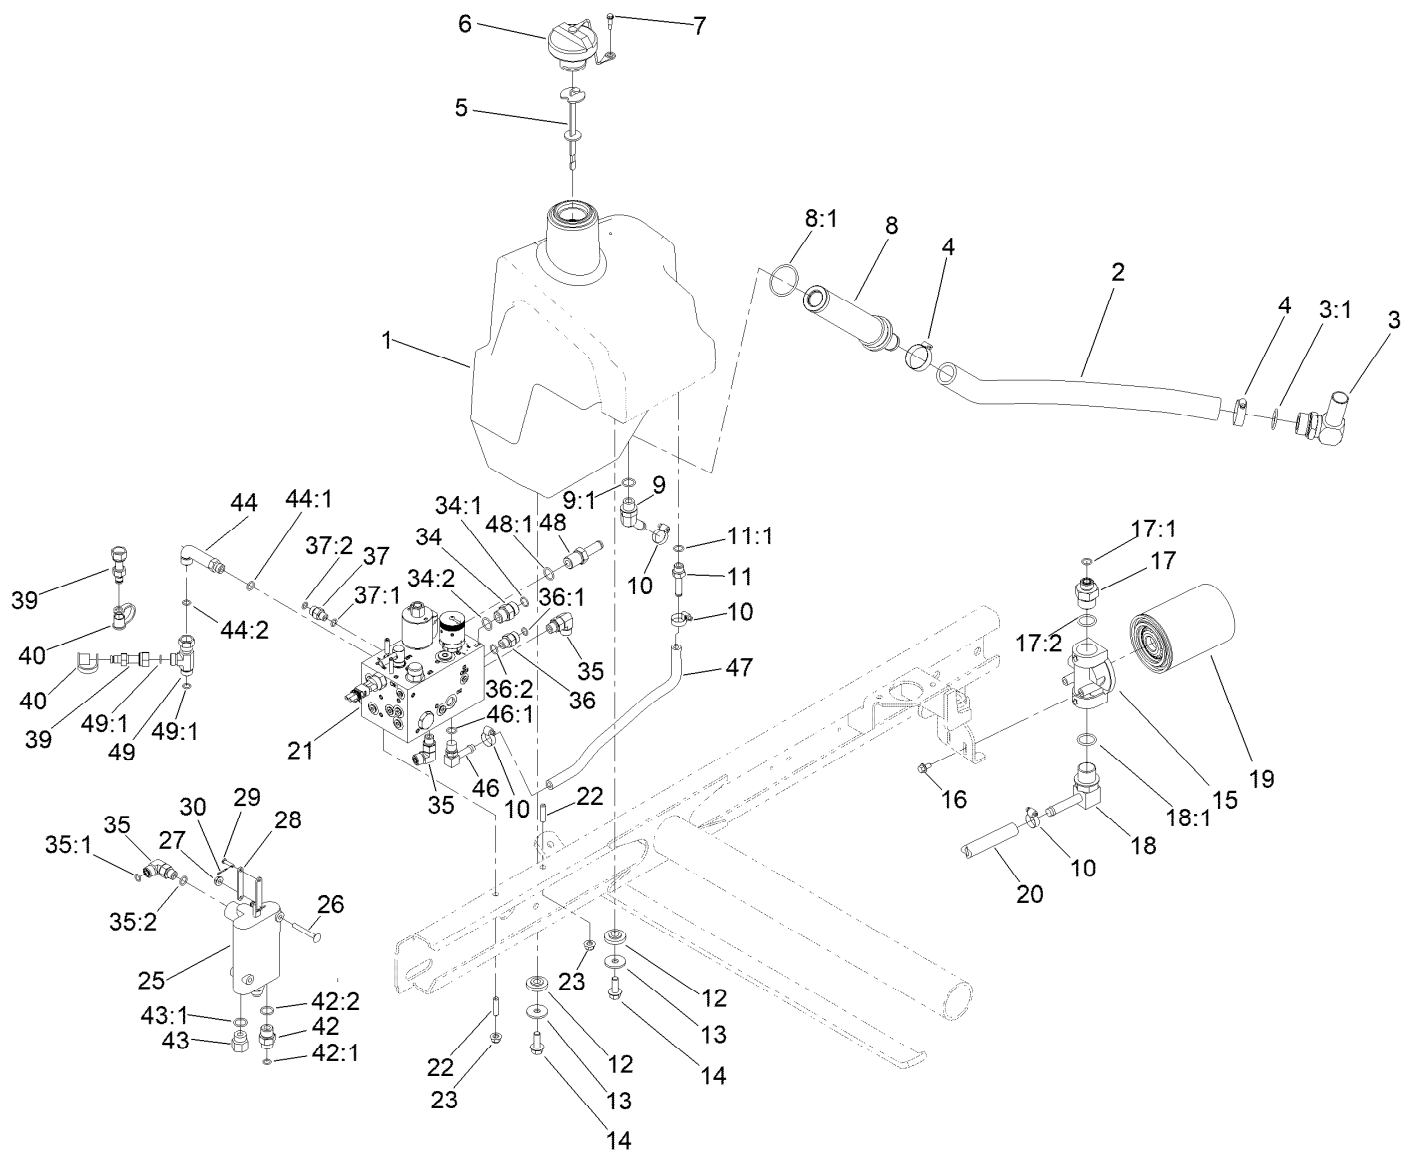 

Hydraulic Tank and Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
35:2	237-42	1	O-Ring
36	340-2	3	Fitting-Straight
36:1	237-22	1	O-Ring
36:2	237-42	1	O-Ring
37	340-140	1	Fitting-Tee
37:1	237-21	2	O-Ring
37:2	237-78	1	O-Ring
39	86-5480	1	Nipple-Test
40	354-79	1	Cap-Dust
42	340-3	1	Fitting-Straight
42:1	237-22	1	O-Ring
42:2	237-79	1	O-Ring

Ref.	Part Number	Qty.	Description
43	353-397	1	Reducer-Adapter
43:1	237-79	1	O-Ring
44	69-4320	2	Fitting-HYD, 90 DEG
44:1	237-22	1	O-Ring
44:2	237-42	1	O-Ring
46	100-4887	1	Fitting-Elbow, 90
46:1	237-42	1	O-Ring
47	80-7342	1	Hose-HYD
48	354-121	1	Fitting-STR
48:1	237-79	1	O-Ring
49	340-115	1	Fitting-Tee
49:1	237-22	2	O-Ring

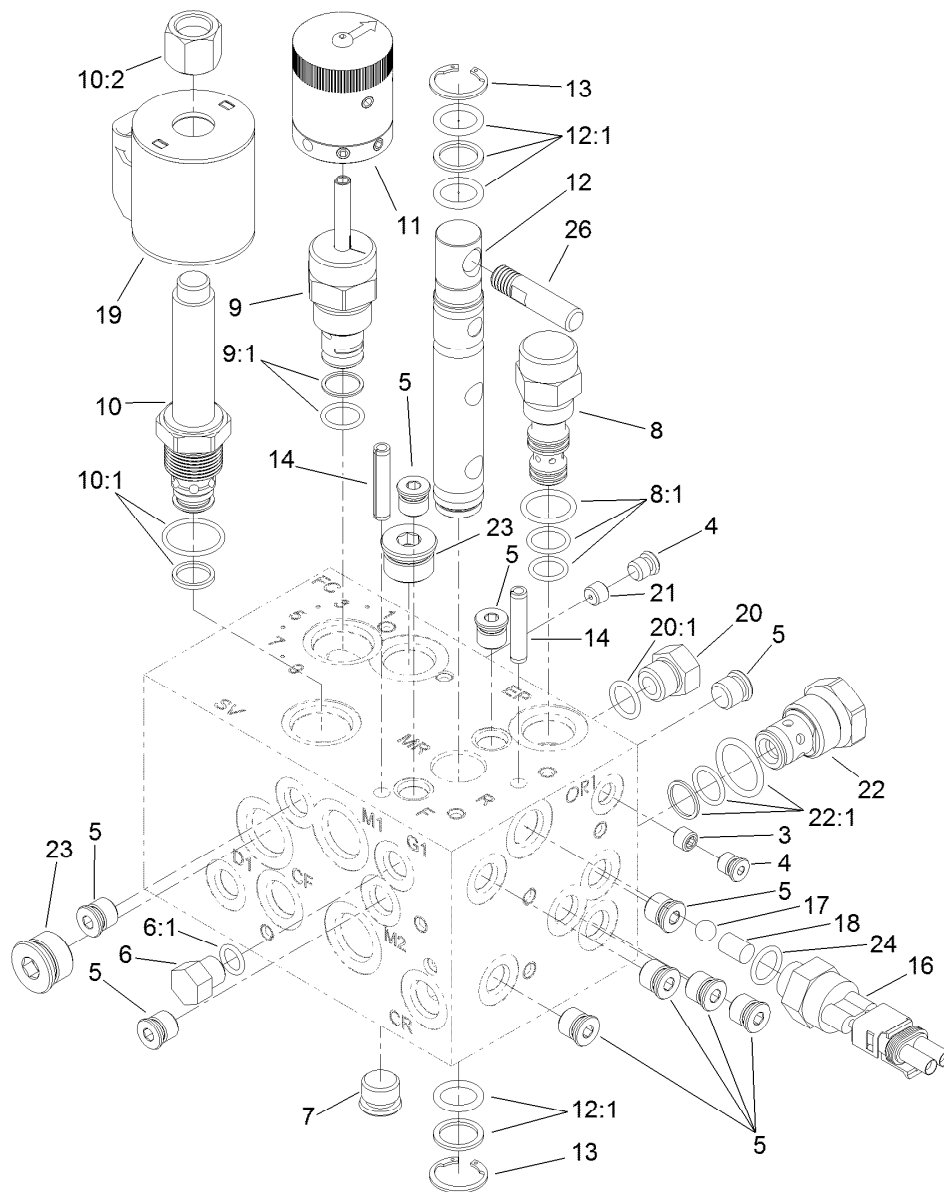 


Hydraulic Manifold Assembly No. 108-9037

Ref.	Part Number	Qty.	Description
3	110-8771	1	Orifice-.020
4	106-1024	2	Plug-Leak, Zero
5	106-1025	10	Plug-HYD
6	353-512	1	Plug
6:1	237-78	1	O-Ring
7	106-1026	1	Plug-HYD
8	110-8770	1	Logic Element
8:1	110-8773	1	Seal Kit
9	110-8769	1	Valve-Control, Manual Flow
9:1	110-2633	1	Seal Kit
10	110-8768	1	Valve-Relief, Solenoid (3000 PSI)
10:1	110-6316	1	Seal Kit
10:2	130-8180	1	Nut-Coil (9/16-24 Unef-2B)
11	110-8767	1	Rotary Handle ASM
12	117-0108	1	Spool-Rotary

Ref.	Part Number	Qty.	Description
12:1	117-0109	1	Seal Kit
13	112-6532	2	Ring-Retaining
14	112-6531	2	Pin-Spring
16	72-4310	1	Switch-Ball
17	110-8762	1	Ball-Chrome
18	110-8761	1	Pin-Dowel
19	110-6344	1	Coil-12V, DC
20	353-508	1	Plug-HH
20:1	237-42	1	O-Ring
21	110-8760	1	Orifice-.073
22	110-8759	1	Valve-Relief
22:1	110-8772	1	Seal Kit ●
23	106-1027	2	Plug
24	110-8757	1	O-Ring
26	110-8758	1	Handle-Spool

 ● Not illustrated

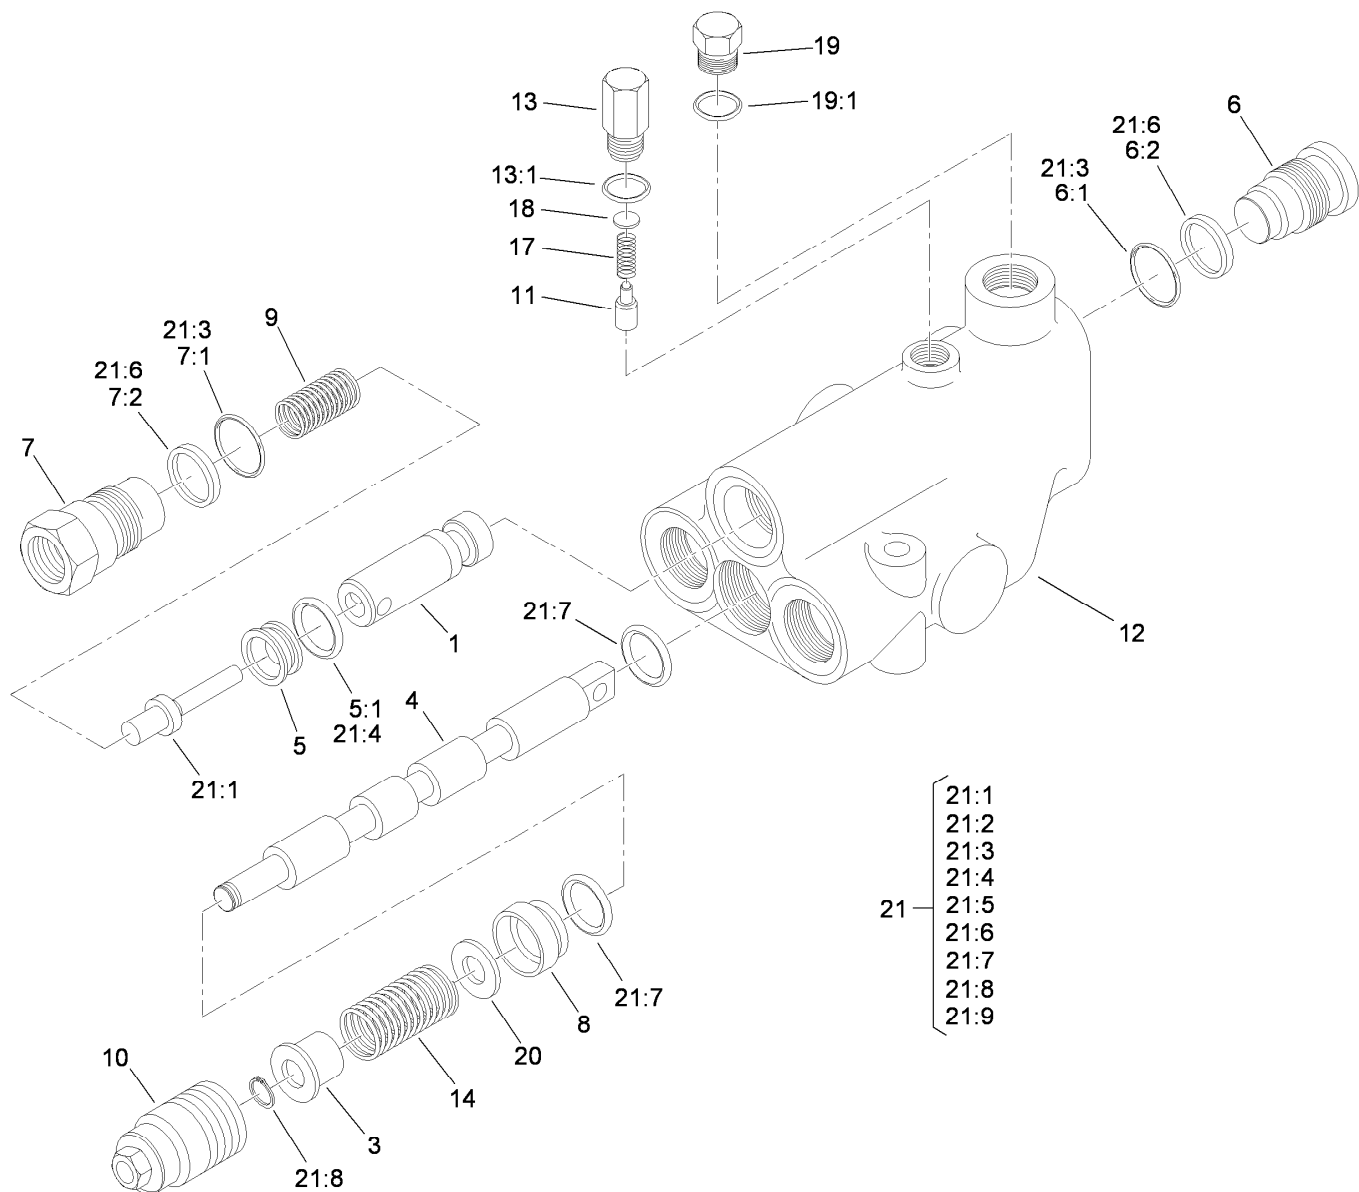


Single Spool Control Valve Assembly No. 95-8689

Ref.	Part Number	Qty.	Description
1	99-3586	1	Plunger
3	58-6310	1	Spacer
4		1	Spool ●
5	58-6330	1	Seat
5:1	58-6340	1	O-Ring
6	58-6350	1	Plug
6:1	60-5720	1	O-Ring
6:2	58-6370	1	Washer
7	69-1800	1	Plug ASM
7:1	60-5720	1	O-Ring
7:2	58-6370	1	Washer
8	58-6400	1	Bushing
9	69-1810	1	Spring
10	58-6420	1	Cap
11	99-3585	1	Detent-Plunger
12		1	Body ●
13	99-3588	1	Plug ASM

Ref.	Part Number	Qty.	Description
13:1	60-6410	1	O-Ring
14	99-3531	1	Spring
17	99-3587	1	Spring
18	60-6450	1	Disc
19	353-989	1	Plug-Hex, Hollow
19:1	237-42	1	O-Ring
20	65-2770	1	Washer
21	99-3589	1	Seal Kit
21:1	58-6290	2	Poppet
21:2	58-6320	1	Wiper
21:3	60-5720	2	O-Ring
21:4	58-6340	2	O-Ring
21:5	93-6314	1	O-Ring
21:6	58-6370	2	Washer
21:7	58-6450	2	O-Ring
21:8	58-6460	1	Ring-Retaining
21:9		1	O-Ring ●

 
● Not serviced separately

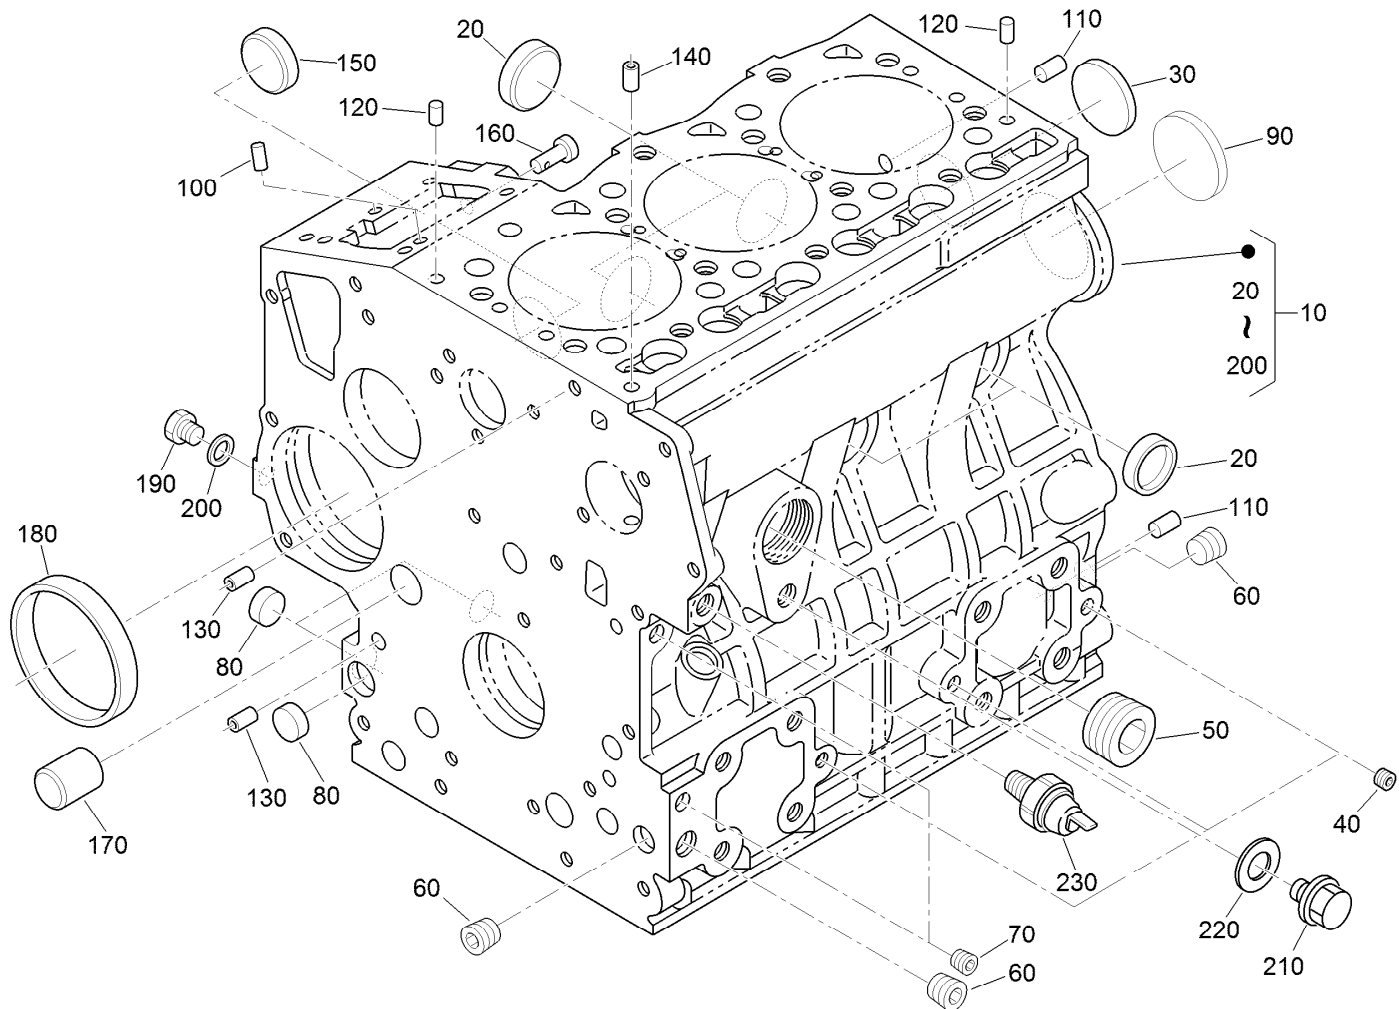

Crankcase Assembly


Ref.	Part Number	Qty.	Description
10	115-3443	1	Crankcase ASM
20	98-9398	4	Cap-Sealing
30	98-7539	1	Cap-Sealing
40	98-9687	3	Plug
50	105-3779	1	Plug
60	98-9597	3	Plug
70	98-7487	2	Plug
80	98-9379	3	Plug-Expansion
90	98-9668	1	Plug-Expansion
100	98-9375	2	Pin-Straight
110	98-9377	2	Pin-Straight
120	98-9376	2	Pin-Straight

Ref.	Part Number	Qty.	Description
130	98-9387	2	Pin-Pipe
140	98-9539	1	Pin-Pipe
150	98-9599	1	Plug
160	98-9630	1	Pin-Spring, Start
170	98-9675	1	Plug
180	98-9656	1	Bushing-Governor, Gear
190	120-2559	1	Plug
200	98-7428	1	Gasket
210	99-3447	1	Plug
220	106-7056	1	Gasket
230	98-9416	1	Switch-Oil

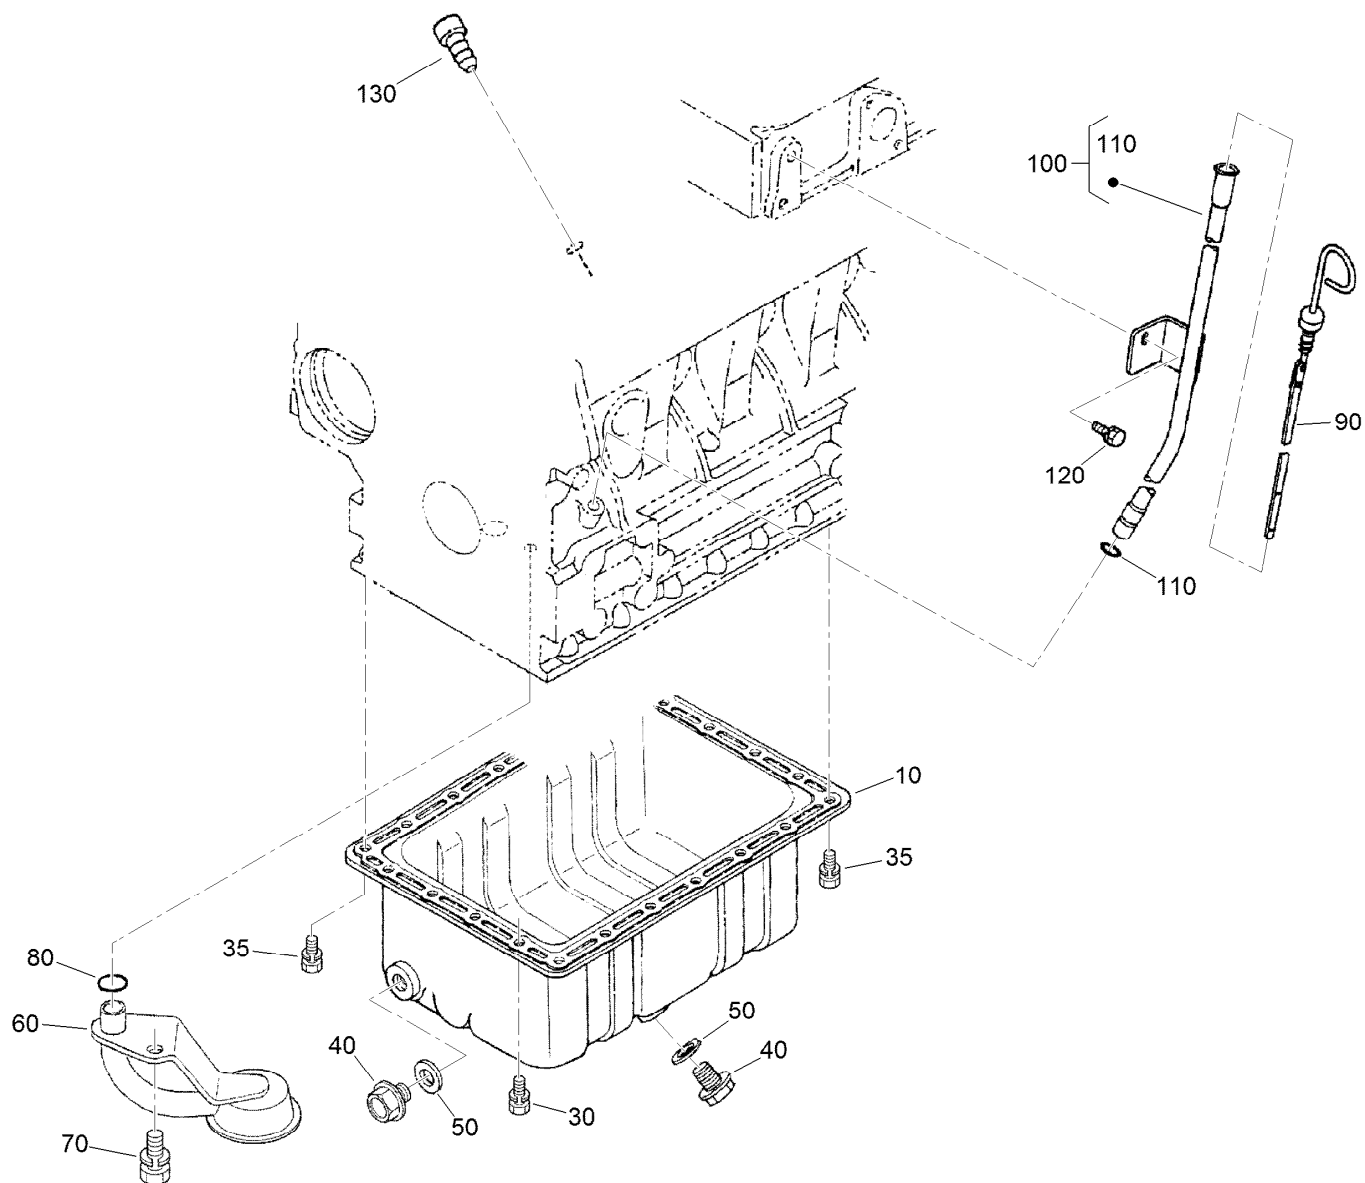 


Oil Pan and Dipstick Assembly

Ref.	Part Number	Qty.	Description
10	98-9685	1	Pan-Oil
30	98-9351	20	Bolt
35	98-9351	2	Bolt
40	114-8151	1	Plug-Drain
50	98-7524	1	Gasket
60	108-1401	1	Base-Filter
70	98-7526	1	Bolt
80	105-3776	1	O-Ring
90	98-9670	1	Gauge-Oil
100	98-9672	1	Oil Gauge Guide ASM
110	98-9722	1	O-Ring
120	100-9195	1	Bolt
130	110-3720	1	Plug-Gauge, Oil

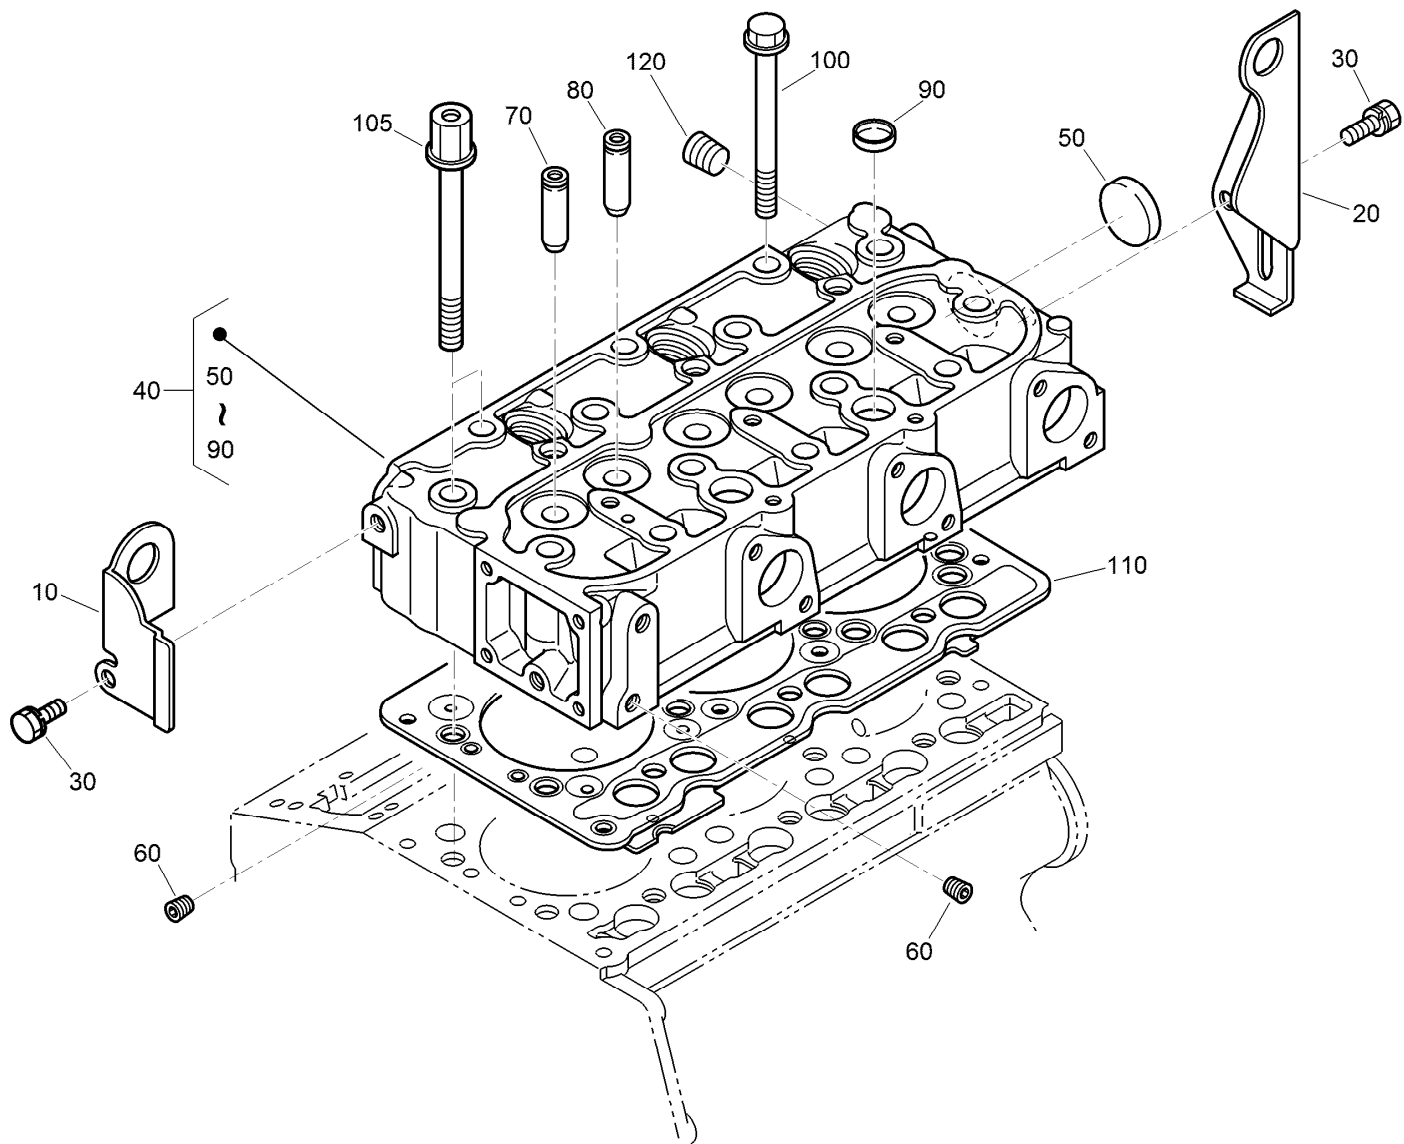 

Cylinder Head Assembly


Ref.	Part Number	Qty.	Description
10	130-1231	1	Hook-Engine
20	98-9478	1	Hook-Engine
30	100-9195	2	Bolt
40	138-6997	1	Cylinder Head ASM
50	105-3705	1	Cap-Sealing
60	98-9687	2	Plug
70	107-9066	3	Guide-Valve, Inlet
80	107-9067	3	Guide-Valve, Exhaust
90	98-9389	2	Cap-Sealing
100	98-9479	12	Bolt-Head, Cylinder
105	98-9647	2	Bolt-Head, Cylinder
110	108-6573	1	Gasket-Head, Cylinder
120	98-9444	1	Plug

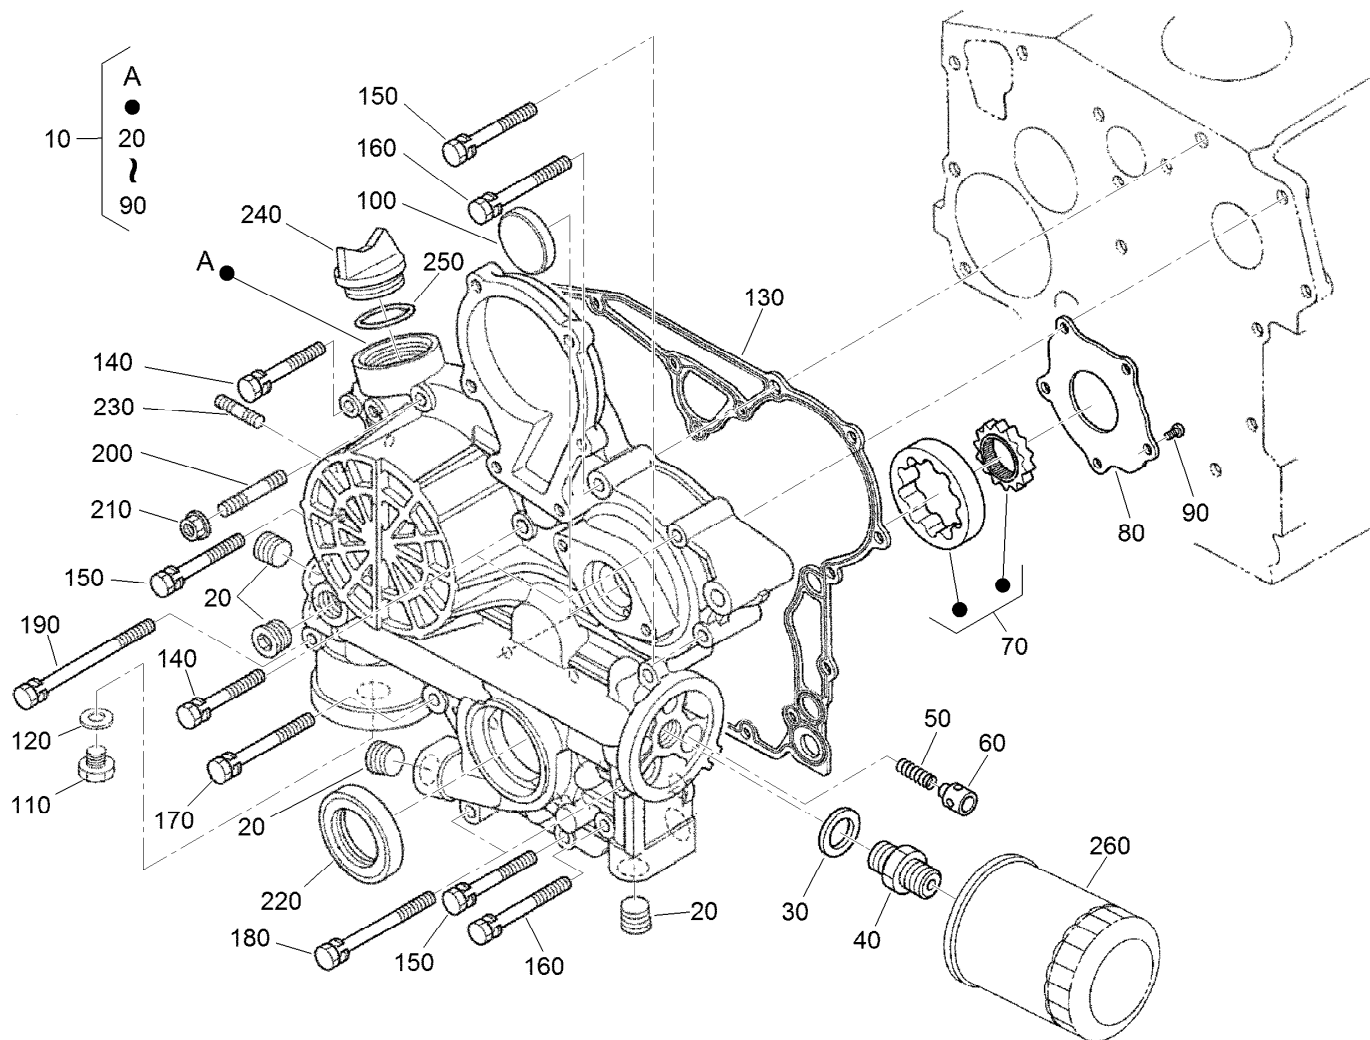 

Gear Case and Oil Filter Cartridge Assembly


Ref.	Part Number	Qty.	Description
10	115-3442	1	Comp Gear Case
20	127-0425	5	Plug
30	98-7562	1	Washer-Plain
40	98-9388	1	Joint-Pipe
50	130-1511	1	Spring
60	130-1510	1	Valve-Relief
70	130-1508	1	Rotor ASM
80	130-1509	1	Cover-Pump, Oil
90	130-1164	5	Screw-Binding
100	99-3515	1	Plug-Gearcase
110	99-3450	1	Plug
120	99-3451	1	Plug-Packing
130	98-9633	1	Gasket-Case, Gear

Ref.	Part Number	Qty.	Description
140	100-1765	3	Bolt
150	125-9063	4	Bolt-Sems
160	98-9356	2	Bolt
170	98-9437	1	Bolt
180	98-9586	2	Bolt
190	99-3511	1	Bolt
200	105-3709	1	Stud
210	100-2203	1	Nut-Flange
220	119-8038	1	Seal-Oil
230	105-3710	2	Stud
240	107-9075	1	Plug-Filler, Oil
250	99-3446	1	O-Ring
260	127-0511	1	Filter-Oil

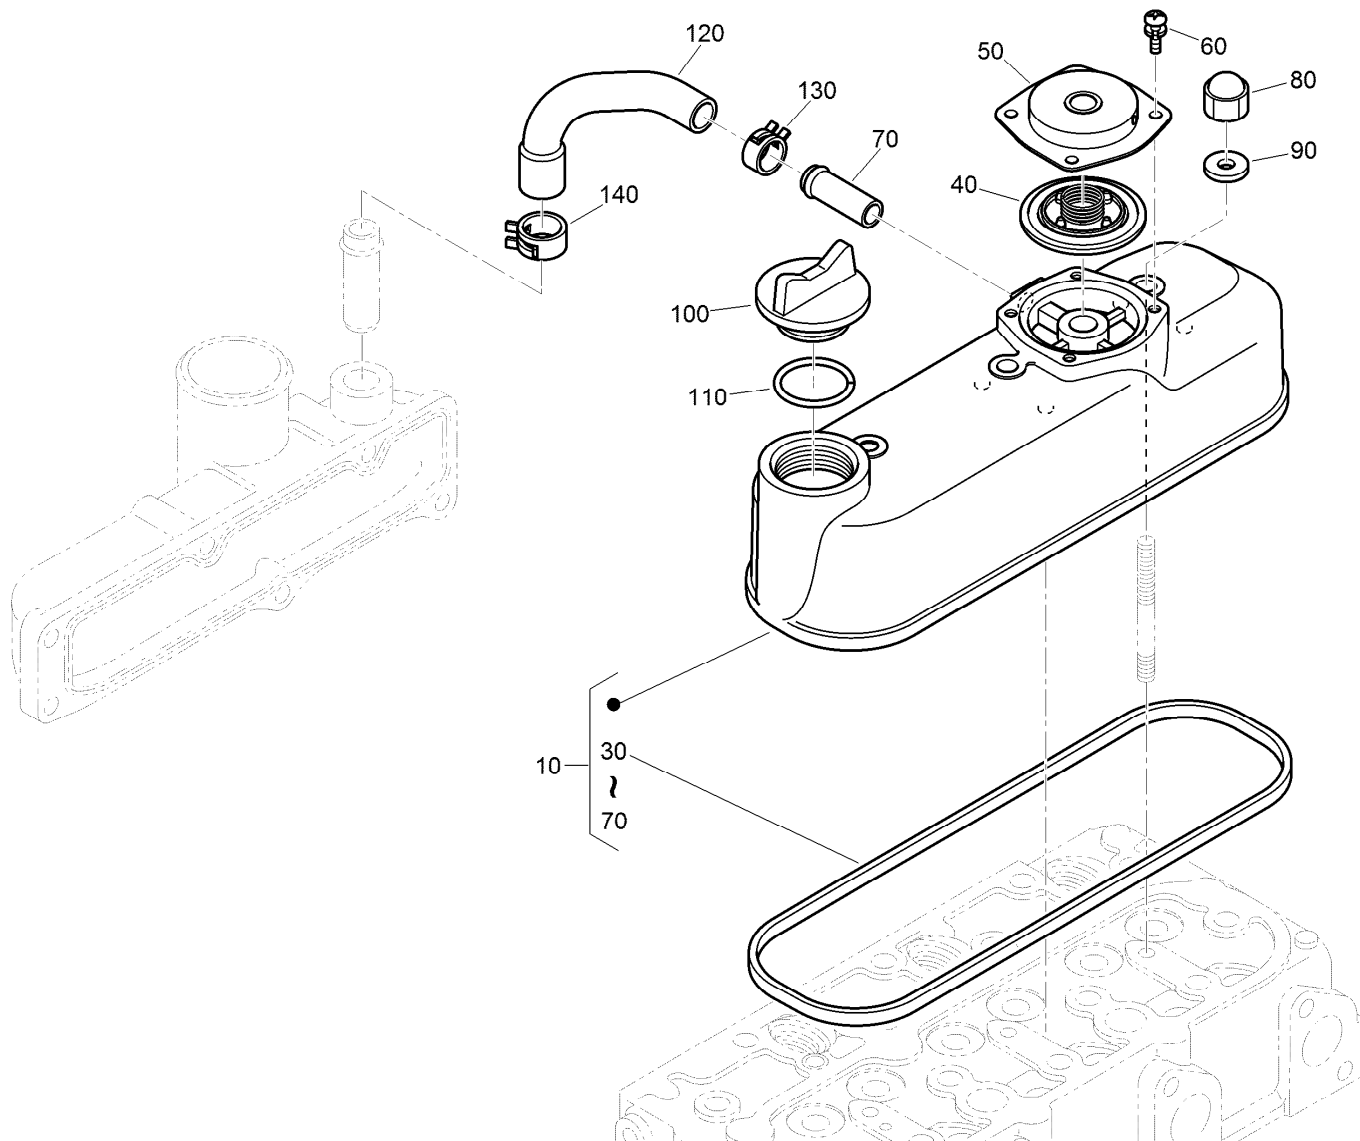 

Cylinder Head Cover Assembly


Ref.	Part Number	Qty.	Description
10	130-1372	1	Cylinder Head Cover ASM
30	98-9615	1	Gasket-Cover, Head
40	110-3715	1	Valve-Breather
50	110-3714	1	Cover-Breather
60	98-9364	4	Screw (With Washer)
70	98-7766	1	Pipe-Return, Water
80	98-9455	3	Nut-Cap
90	98-9454	3	Gasket
100	107-9075	1	Plug-Filler, Oil
110	99-3446	1	O-Ring
120	107-7836	1	Tube-Breather
130	108-2859	1	Clamp-Hose
140	108-2860	1	Clamp-Hose

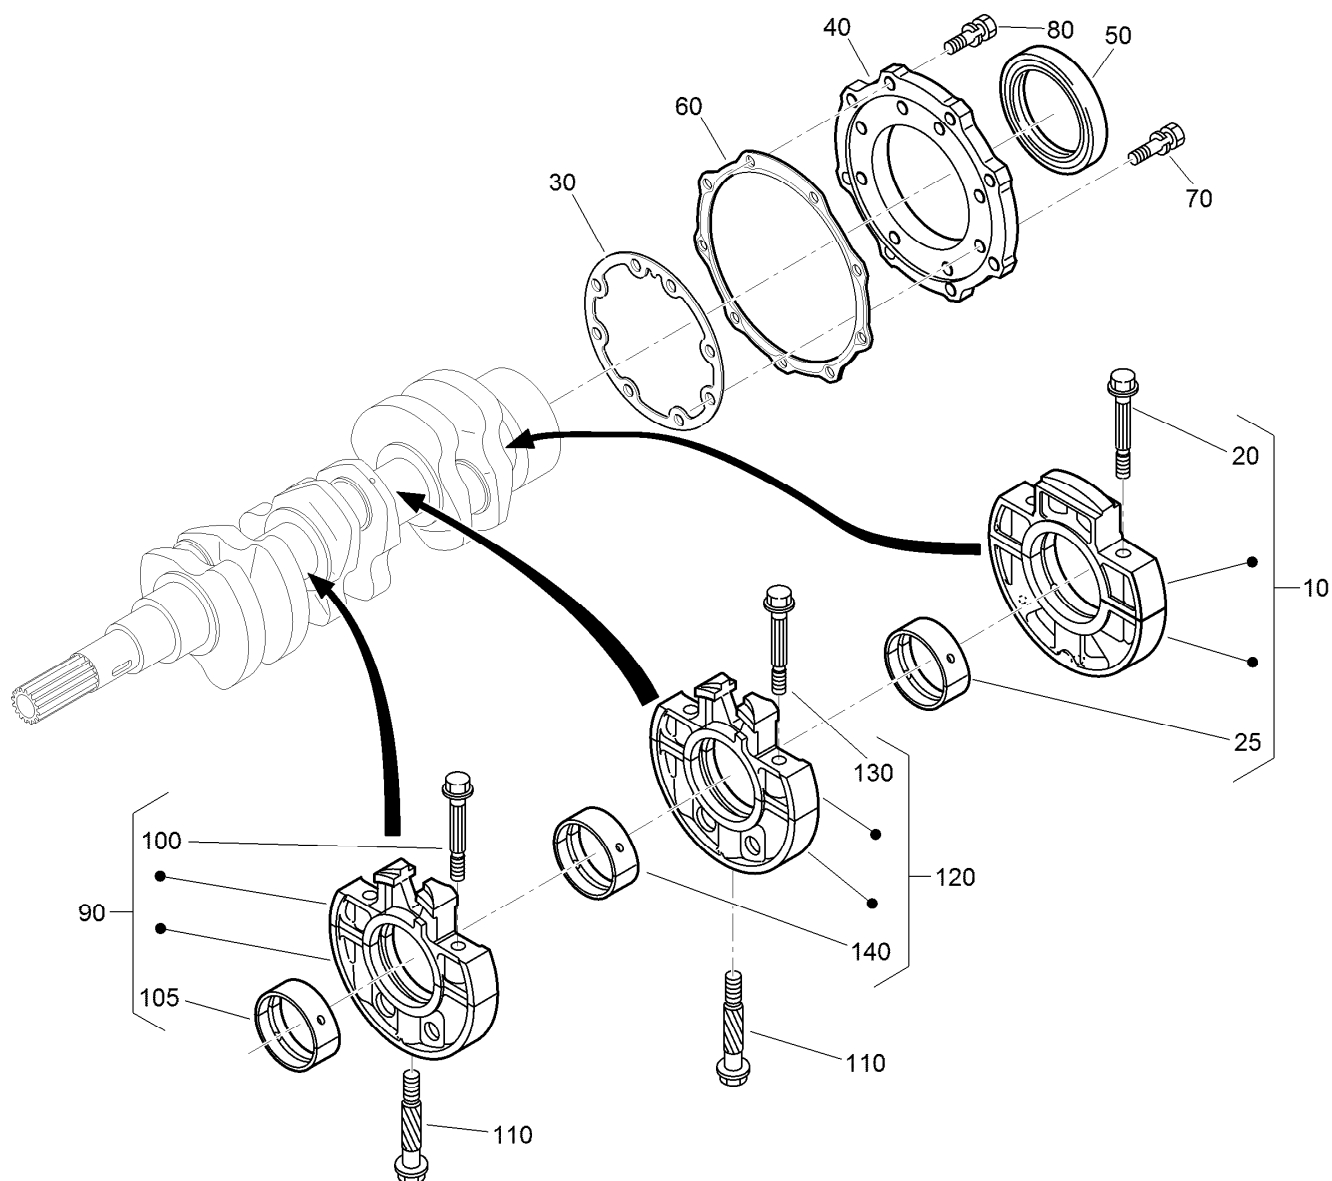 

Main Bearing Case Assembly


Ref.	Part Number	Qty.	Description
10	112-7026	1	Wheel Bearing Case ASM
20	98-9484	2	Bolt-Case, Bearing
25	115-4121	1	Metal-Crankshaft (STD)
25	112-7039	1	Metal-Crankshaft (0.2Mm)
25	112-7040	1	Metal-Crankshaft (-0.4Mm)
30	127-0440	1	Gasket-Case, Bearing
40	112-7046	1	Cover-Case, Bearing
50	112-0180	1	Seal-Oil
60	112-7037	1	Gasket-Cover, Case
70	127-0441	8	Bolt
80	127-0442	9	Bolt

Ref.	Part Number	Qty.	Description
90	115-4106	1	Main Bearing Case ASM
100	98-9484	2	Bolt-Case, Bearing
105	98-9524	1	Metal-Crankshaft (STD Set)
105	127-0433	1	Metal-Crankshaft (-0.2MM)
105	98-9531	1	Bearing-Main (0.4MM)
110	98-9485	2	Bolt-Case, Bearing
120	115-4107	1	Main Bearing Case ASM
130	98-9484	2	Bolt-Case, Bearing
140	98-9524	1	Metal-Crankshaft (STD Set)
140	127-0433	1	Metal-Crankshaft (-0.2MM)
140	98-9531	1	Bearing-Main (0.4MM)

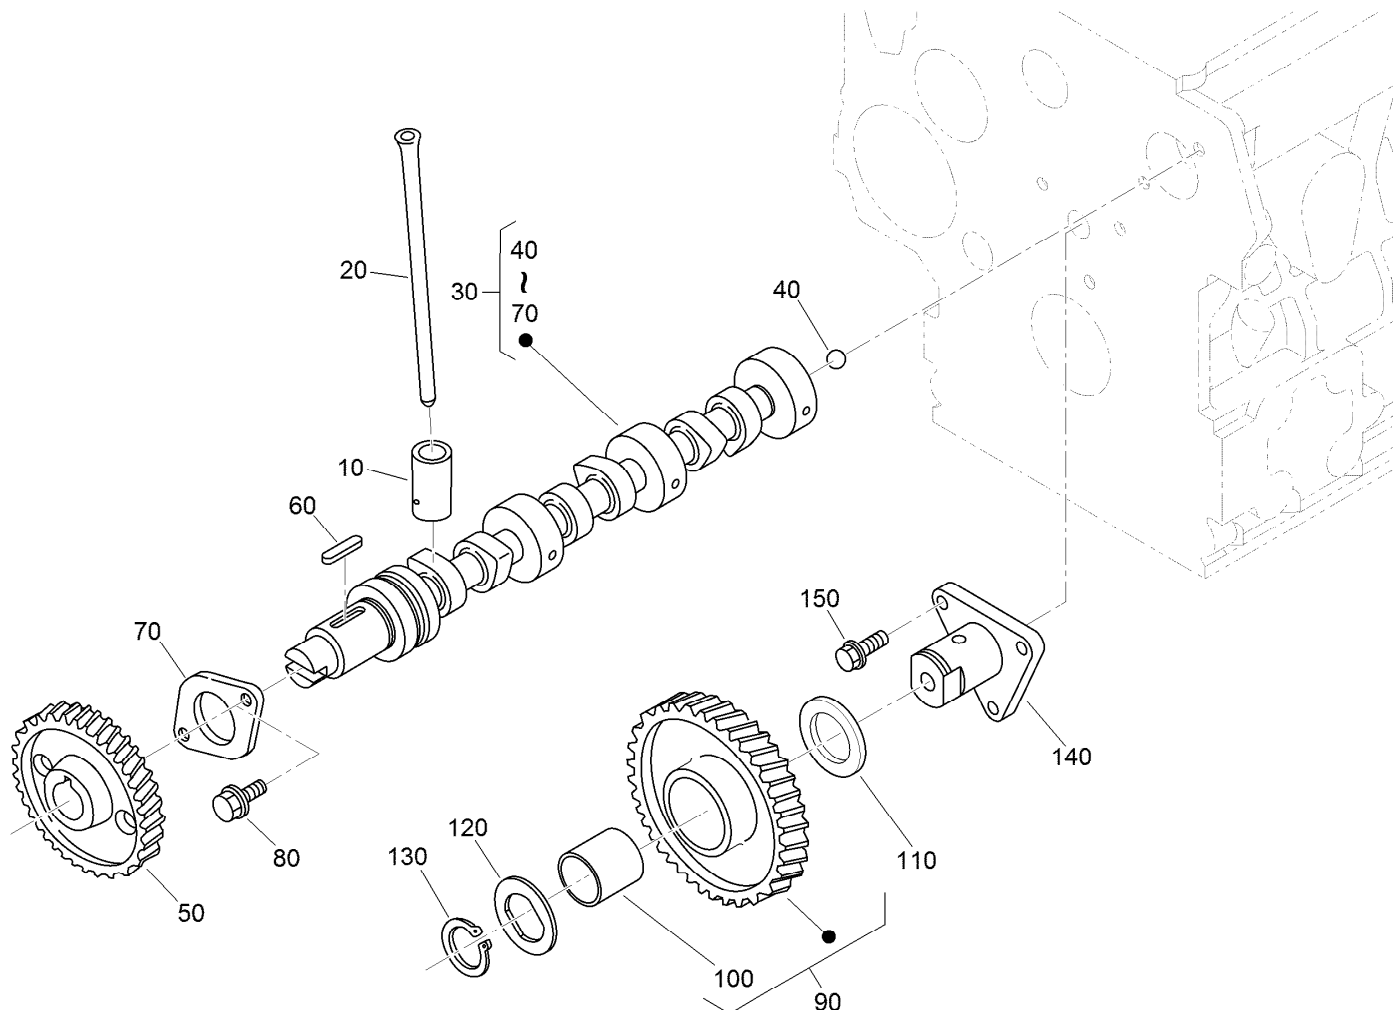 

Camshaft and Idle Gear Shaft Assembly


Ref.	Part Number	Qty.	Description
10	112-0185	6	Tappet
20	127-0421	6	Rod-Push
30	130-1505	1	Camshaft ASM
40	110-3729	1	Ball
50	98-9512	1	Gear-Cam
60	98-9378	1	Key-Feather
70	98-9510	1	Stopper-Camshaft
80	98-7692	2	Bolt
90	117-7584	1	Idler Gear ASM
100	117-7585	1	Bushing-Gear, Idle
110	98-9535	1	Collar-Gear, Idle
120	98-9536	1	Collar-Gear, Idle
130	98-9534	1	Circlip-Gear, Idle
140	98-9533	1	Shaft-Gear, Idle
150	98-7692	3	Bolt

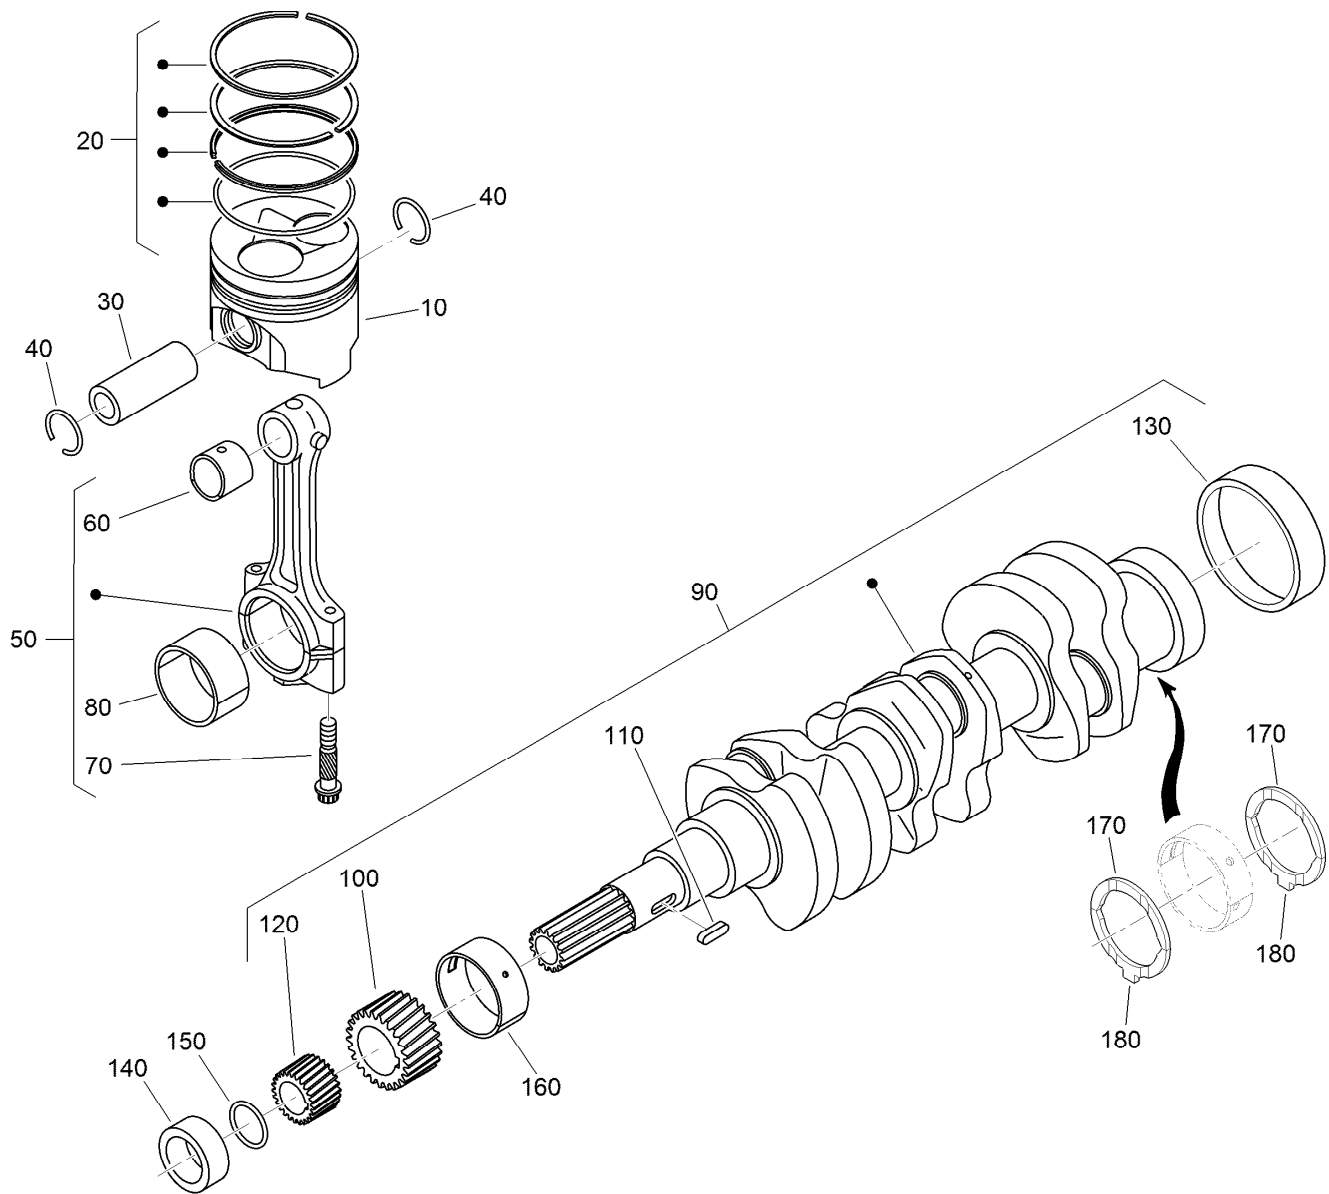 

Piston and Crankshaft Assembly

Ref.	Part Number	Qty.	Description
10	130-1546	3	Piston (STD)
10	130-1549	3	Piston (+0.50MM)
20	130-1506	3	Piston Ring ASM (STD)
20	130-1507	3	Piston Ring ASM (+0.50MM)
30	98-9513	3	Pin-Piston
40	98-9514	6	Circlip-Pin, Piston
50	117-7586	3	Connecting Rod ASM
60	115-3014	3	Bushing-Pin, Piston
70	98-9517	6	Bolt-Rod, Connecting
80	98-9553	3	Bearing-Rod (STD)
80	98-9519	3	Bearing-Rod (-0.2MM)
80	117-7588	3	Metal-Crankpin (-0.4MM)
90	130-1375	1	Crankshaft ASM
100	117-7561	1	Gear-Crankshaft


Ref.	Part Number	Qty.	Description
110	98-9666	1	Key
120	127-0445	1	Gear-Drive, Oil Pump
130	98-9522	1	Sleeve-Crankshaft
140	127-0444	1	Collar-Crankshaft
150	105-3783	1	O-Ring
160	112-7005	1	Bearing-Main (STD)
160	98-9528	1	Bearing-Main (-0.2MM)
160	130-1274	1	Metal-Crankshaft (-0.40Mm)
170	98-9413	2	Bearing-Thrust (STD)
170	127-0416	2	Metal-Side (+0.2Mm)
170	127-0417	2	Metal-Side (+0.40Mm)
180	98-9688	2	Bearing-Thrust (STD)
180	127-0437	2	Metal-Side (+0.2MM)
180	127-0438	2	Metal-Side (+0.40MM)

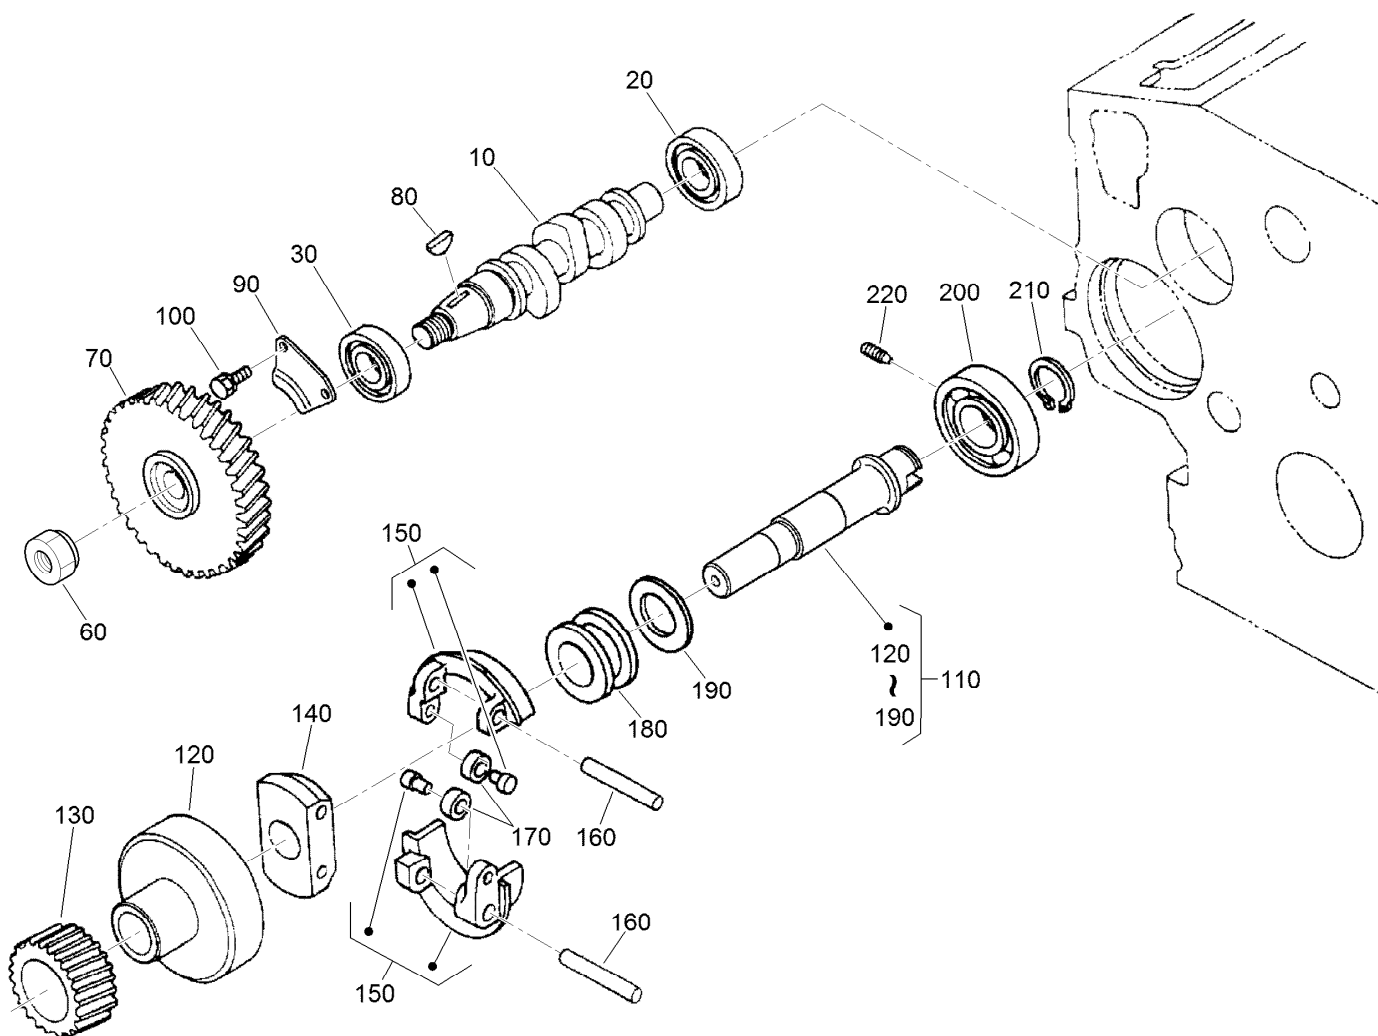 

Fuel Camshaft and Governor Shaft Assembly


Ref.	Part Number	Qty.	Description
10	98-9459	1	Camshaft-Fuel
20	107-9077	1	Bearing-Ball
30	107-9078	1	Bearing-Ball
60	130-1512	1	Nut
70	130-1378	1	Gear-Injection Pump
80	98-9595	1	Key-Woodruff
90	98-9511	1	Stopper-Fuel, Camshaft
100	98-7692	2	Bolt
110	130-1255	1	Governor Shaft ASM
120	98-9562	1	Holder-Gear, Governor

Ref.	Part Number	Qty.	Description
130	98-9673	1	Gear-Governor
140	98-9561	1	Holder-Weight, Governor
150	98-9559	2	Governor Weight ASM
160	98-9560	2	Shaft-Weight, Governor
170	98-9692	2	Roller
180	98-9563	1	Sleeve-Governor
190	98-9564	1	Washer-Thrust
200	107-9079	1	Bearing-Ball
210	98-9657	1	Circlip-Shaft, Governor
220	98-9565	1	Screw-Set

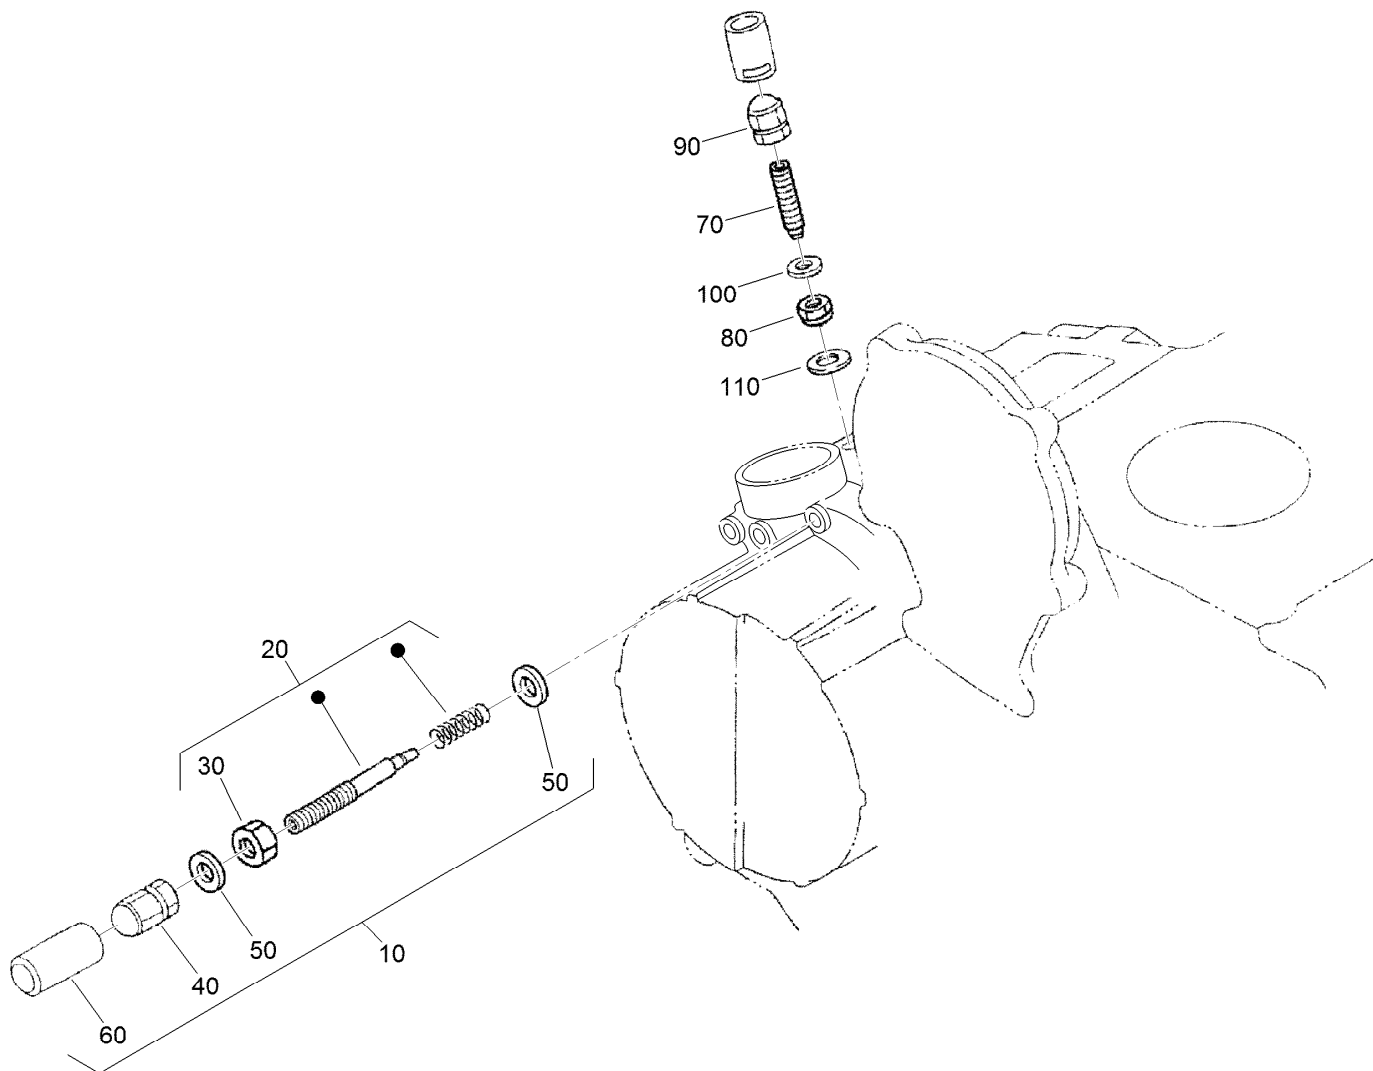 


Idle Apparatus Assembly

Ref.	Part Number	Qty.	Description
10	107-7838	1	Apparatus-Idling
20	130-1253	1	Adjusting Bolt ASM
30	98-9439	1	Nut
40	112-0181	1	Nut
50	98-7654	2	Gasket
60	98-7656	1	Cap
70	112-7015	1	Bolt-Adjusting
80	100-2175	1	Nut-Lock
90	112-0181	1	Nut
100	98-7654	1	Gasket
110	107-9081	1	Gasket

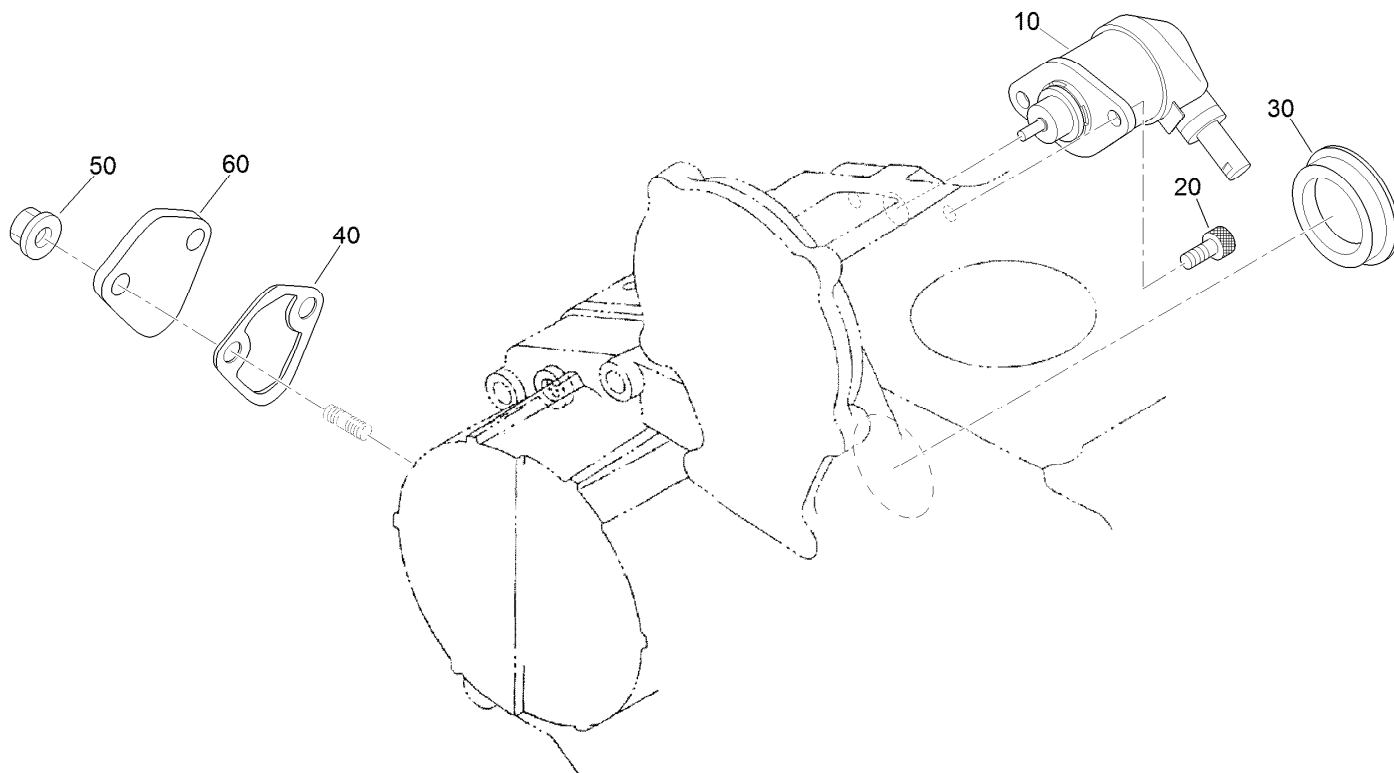 

Stop Solenoid and Fuel Pump Cover Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	104-5155	1	Solenoid-Stop
20	130-1155	2	Screw-HSH
30	99-3514	1	Cover
40	117-7562	1	Gasket-Pump, Fuel
50	100-2203	2	Nut-Flange
60	112-7016	1	Cover-Pump

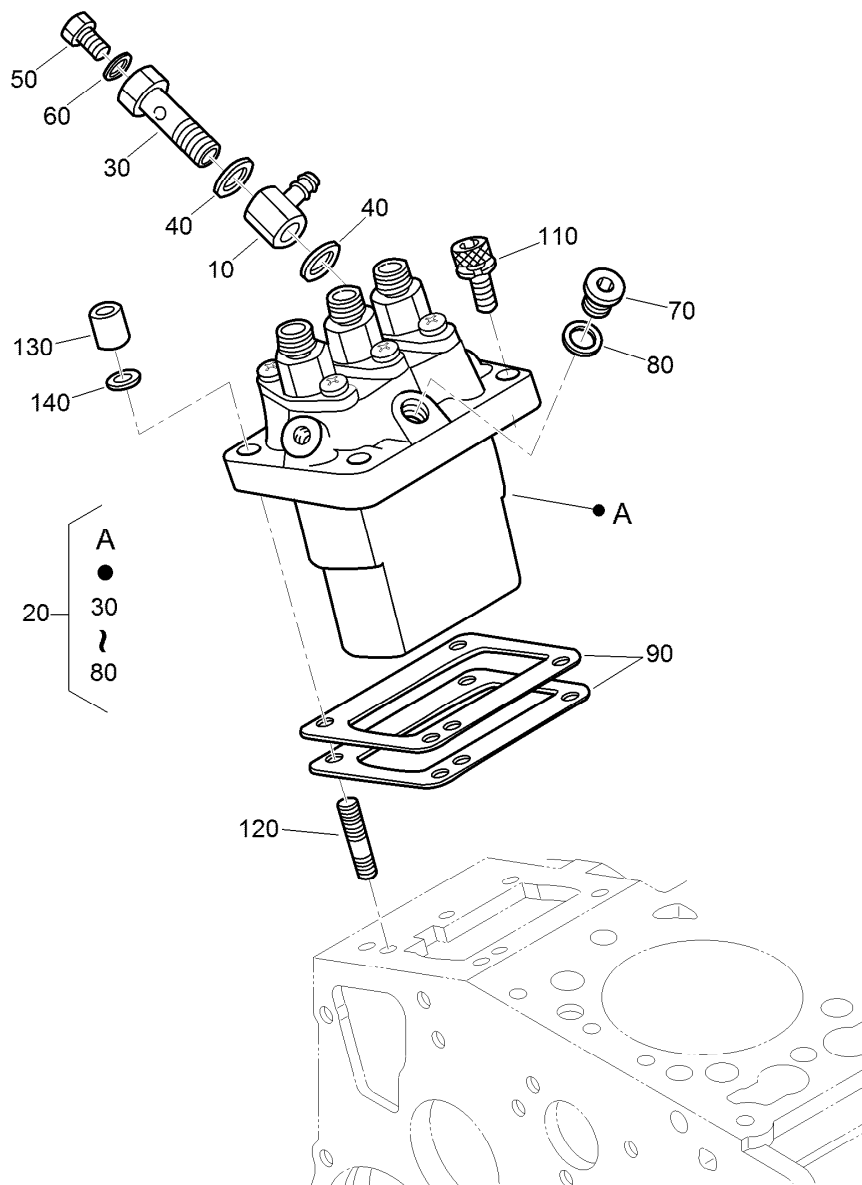 

Injection Pump Assembly


Ref.	Part Number	Qty.	Description
10	98-9596	1	Joint-Eye
20	98-9643	1	Injection Pump ASM
30	98-9464	1	Bolt-Joint
40	98-9445	2	Gasket
50	98-9430	1	Screw
60	98-9446	1	Gasket
70	98-9466	1	Plug
80	98-9451	1	Gasket
90	98-9456	1	Shim-Injection (0.20MM)

Ref.	Part Number	Qty.	Description
90	98-9457	1	Shim-Injection (0.25MM)
90	98-9458	1	Shim-Injection (0.30MM)
90	115-3046	1	Shim-Injection (0.35MM)
90	115-3045	1	Shim-Injection (0.175MM)
110	117-7564	2	Bolt-Hex Soc HD
120	98-9438	2	Stud
130	98-9440	2	Nut-Cap
140	98-7699	2	Washer-Spring

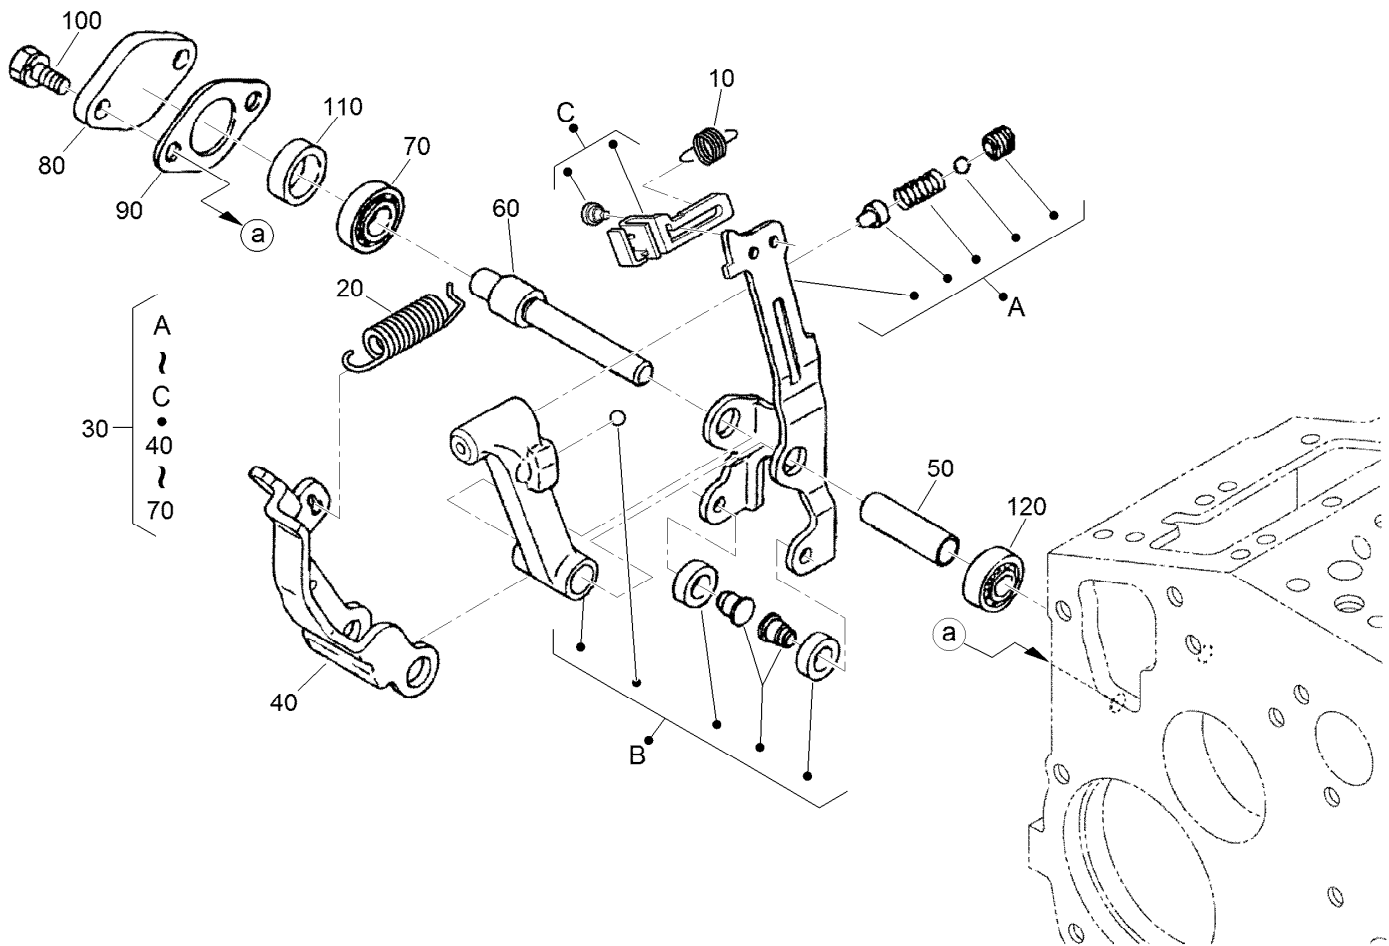 

Governor Assembly


Ref.	Part Number	Qty.	Description
10	105-3786	1	Spring-Start
20	107-7839	1	Spring-Governor
30	107-7840	1	Fork Lever ASM
40	107-9084	1	Lever-Fork
50	107-9085	1	Shaft-Lever, Fork
60	107-9086	1	Shaft-Lever, Fork
70	98-9570	1	Bearing-Miniaturize
80	115-4122	1	Cover-Shaft, Fork Lever
90	98-9682	1	Gasket
100	98-9350	2	Bolt
110	98-9567	1	Collar
120	98-9571	1	Bearing-Miniaturize

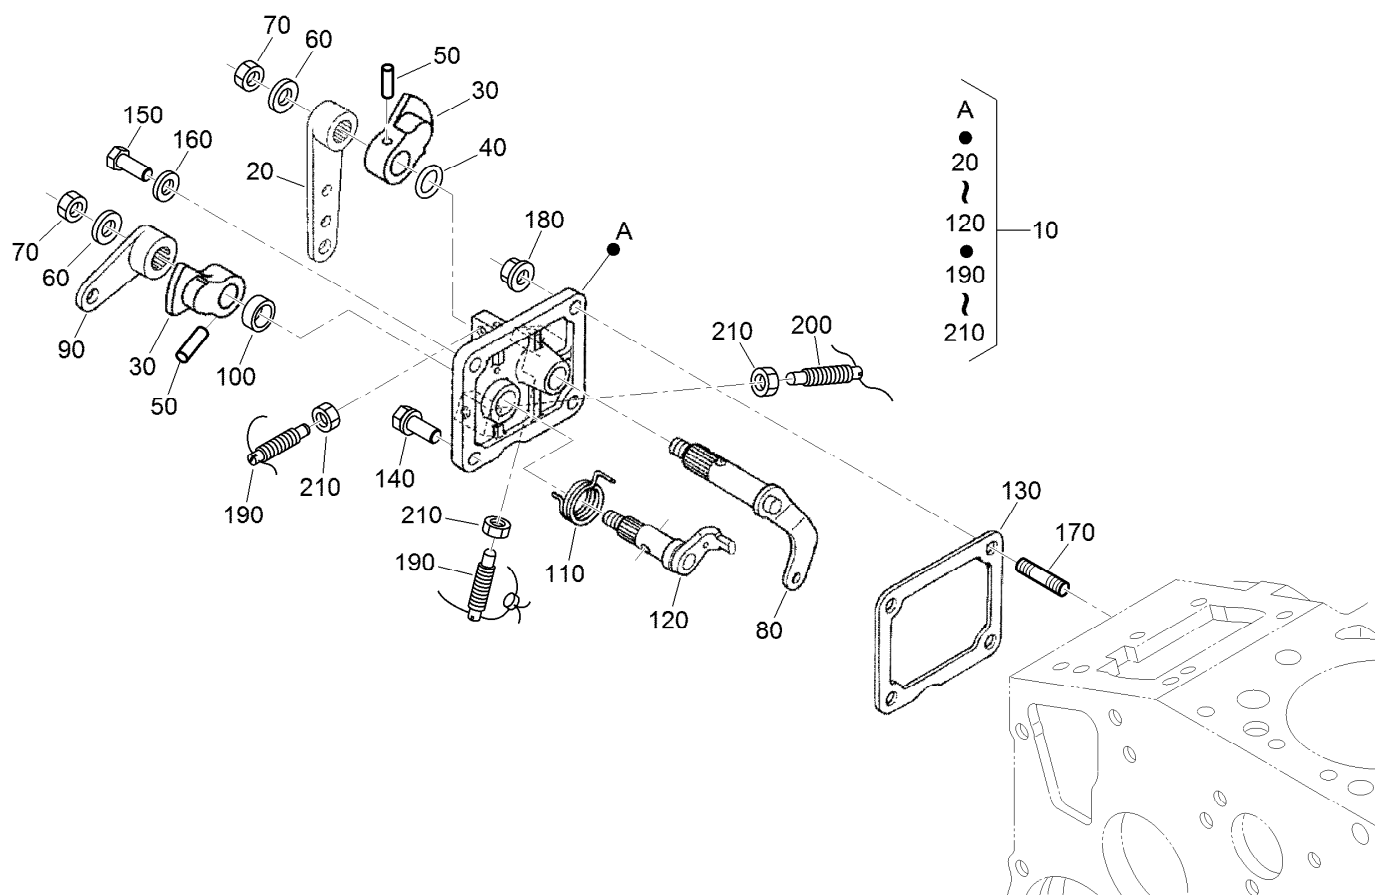 

Speed Control Plate Assembly

Ref.	Part Number	Qty.	Description
10	105-3735	1	Control Plate ASM
20	98-9662	1	Lever-Control, Speed
30	98-9572	2	Lever-Control, Speed
40	105-3788	1	O-Ring
50	98-7602	2	Pin-Spring
60	98-9594	2	Washer-Plain
70	98-9589	2	Nut
80	98-9658	1	Governor Lever ASM
90	98-9663	1	Lever-Stop, Engine
100	98-7601	1	Seal-Oil
110	98-9472	1	Spring-Return


Ref.	Part Number	Qty.	Description
120	98-9664	1	Shaft-Lever, Stop
130	98-9637	1	Gasket
140	98-7692	1	Bolt
150	127-0401	1	Bolt-Hex
160	98-7654	1	Gasket
170	105-3710	2	Stud
180	100-2203	2	Nut-Flange
190	117-7565	2	Bolt-Adjusting
200	117-7566	1	Bolt-Adjusting
210	98-7572	3	Nut

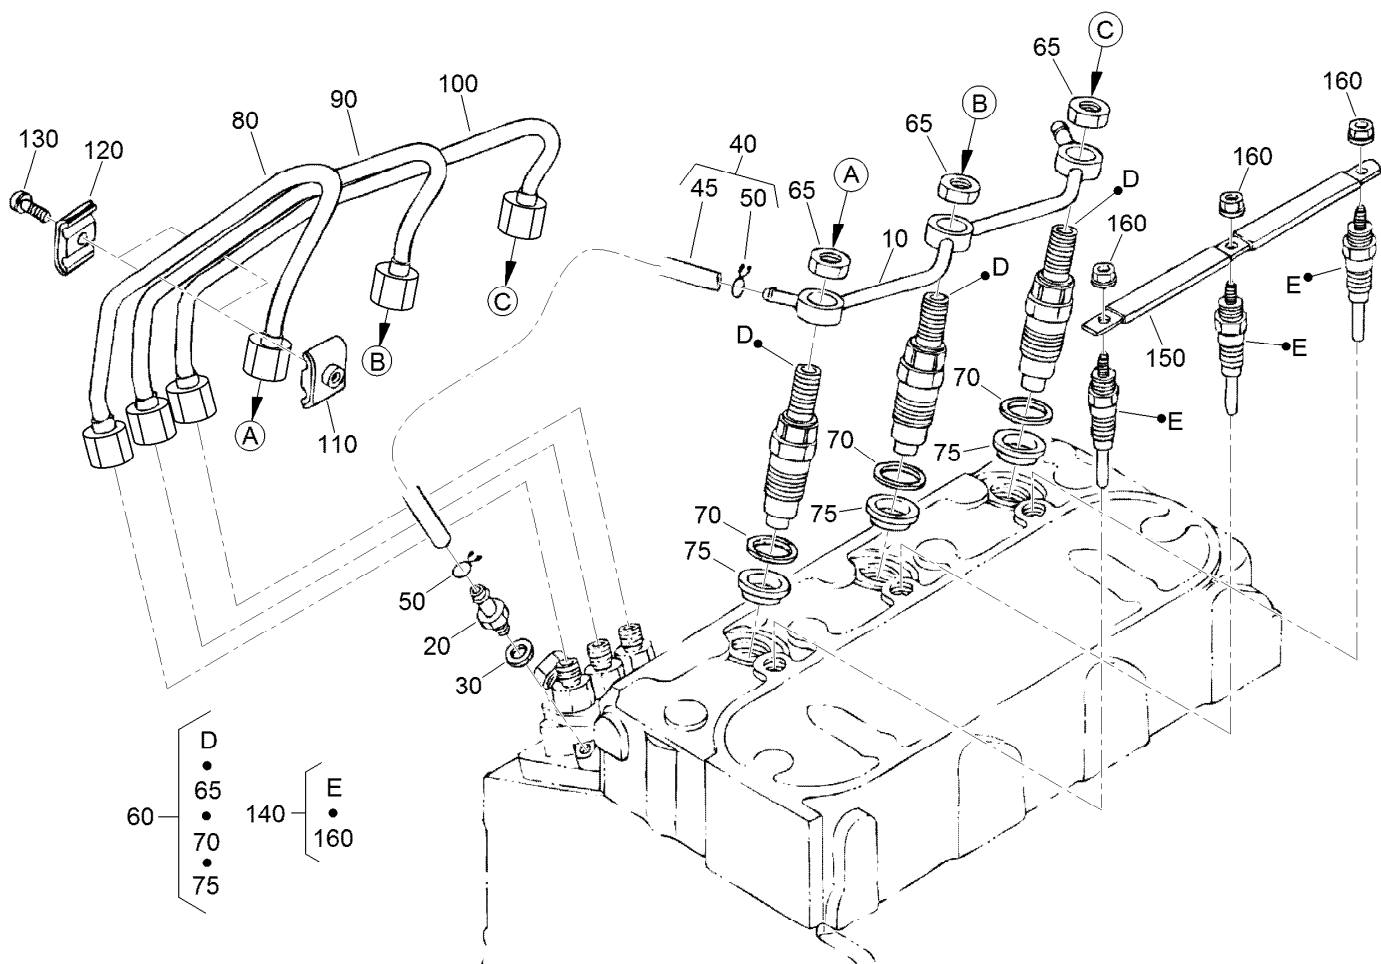 

Nozzle Holder and Glow Plug Assembly


Ref.	Part Number	Qty.	Description
10	98-9620	1	Overflow Pipe ASM
20	98-9431	1	Screw-Bleeder, Air
30	98-7654	1	Gasket
40	98-9420	1	Overflow Pipe ASM
45	112-0182	1	Pipe-Overflow
50	98-7671	2	Clip-Pipe
60	115-3018	3	Nozzle Holder Kit
65	121-2411	3	Nut
70	98-7676	3	Gasket
75	98-7677	3	Seal-Heat

Ref.	Part Number	Qty.	Description
80	98-9622	1	Pipe-Injection
90	98-9654	1	Pipe-Injection
100	98-9655	1	Pipe-Injection
110	98-7682	2	Clamp-Pipe
120	98-7683	2	Clamp-Pipe
130	98-7684	2	Screw (W/Washer)
140	130-1411	3	Plug-Glow
150	98-9631	1	Cord-Plug, Glow
160	99-8377	3	Nut-Flange

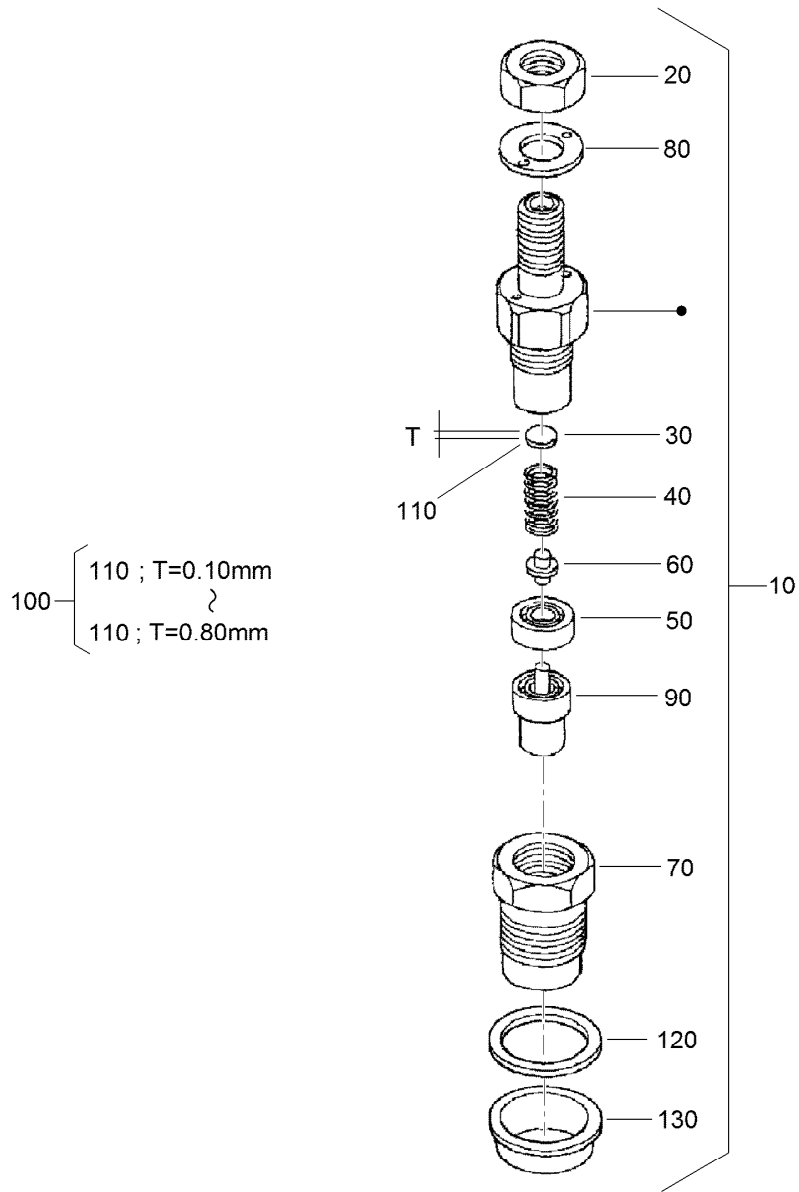 


Nozzle Holder Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
10	115-3018	3	Nozzle Holder Kit	110	99-8311	3	Washer-Adjust (0.20MM)
20	121-2411	3	Nut	110	99-8312	3	Washer-Adjust (0.30MM)
30	99-8302	3	Washer-Adjusting	110	99-8313	3	Washer-Adjust (0.40MM)
40	99-8303	3	Spring-Nozzle	110	99-8314	3	Washer-Adjust (0.50MM)
50	99-8304	3	Spacer-Distance	110	99-8315	3	Washer-Adjust (0.52MM)
60	99-8305	3	Rod-Push	110	99-8316	3	Washer-Adjust (0.54MM)
70	99-8306	3	Nut-Nozzle	110	99-8317	3	Washer-Adjust (0.56MM)
80	99-8307	3	Washer-Plain	110	99-8318	3	Washer-Adjust (0.58MM)
90	115-3020	3	Piece-Nozzle	110	99-8319	3	Washer-Adjust (0.80MM)
100	99-8309	3	Adjusting Washer ASM	120	98-7676	3	Gasket
110	99-8310	3	Washer-Adjust (0.10MM)	130	98-7677	3	Seal-Heat

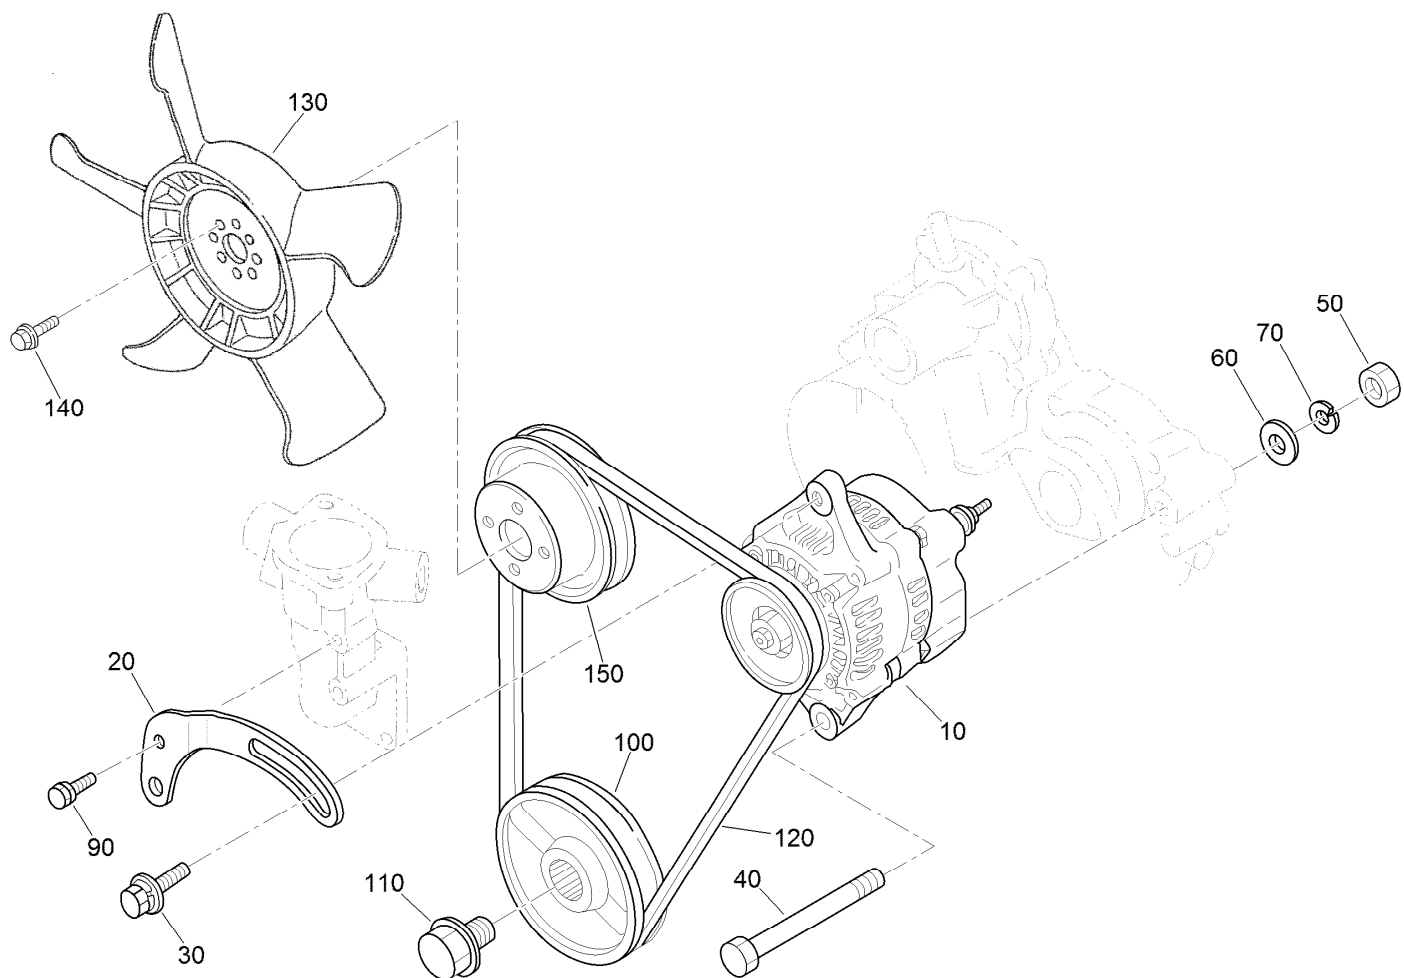 

Alternator, Pulley and Fan Assembly


Ref.	Part Number	Qty.	Description
10	98-9474	1	Alternator ASM
20	112-7047	1	Stay-Dynamo
30	108-7088	1	Bolt
40	98-9360	1	Bolt
50	98-7737	1	Nut
60	98-9366	1	Washer-Plain
70	98-7738	1	Washer-Spring
90	98-7692	1	Bolt
100	99-3456	1	Pulley-Drive, Fan
110	98-9585	1	Bolt
120	130-1241	1	V Belt
130	99-3461	1	Fan
140	99-8363	4	Bolt-Flange
150	99-3453	1	Pulley-Fan

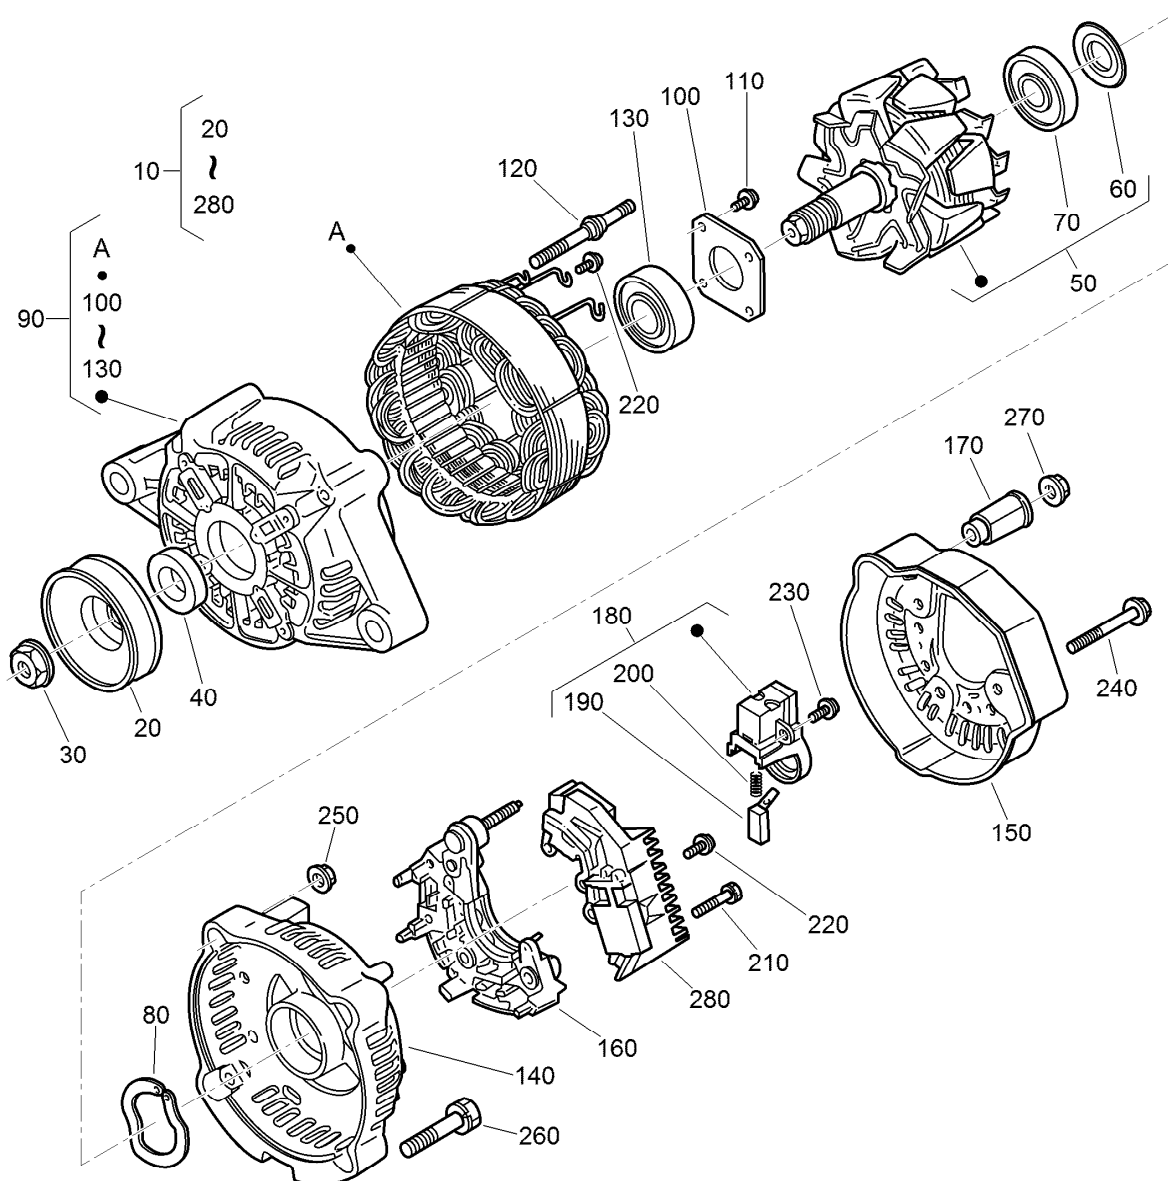 

Alternator Components Assembly


Ref.	Part Number	Qty.	Description
10	98-9474	1	Alternator ASM
20	98-9453	1	Pulley-Dynamo
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor ASM
60	98-7711	1	Cover-Bearing
70	107-0138	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	133-2811	1	Bearing
140	107-9087	1	Frame-End

Ref.	Part Number	Qty.	Description
150	107-0140	1	Cover-End
160	127-1612	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	107-0141	1	Brush Holder ASM
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	110-3799	1	Regulator ASM

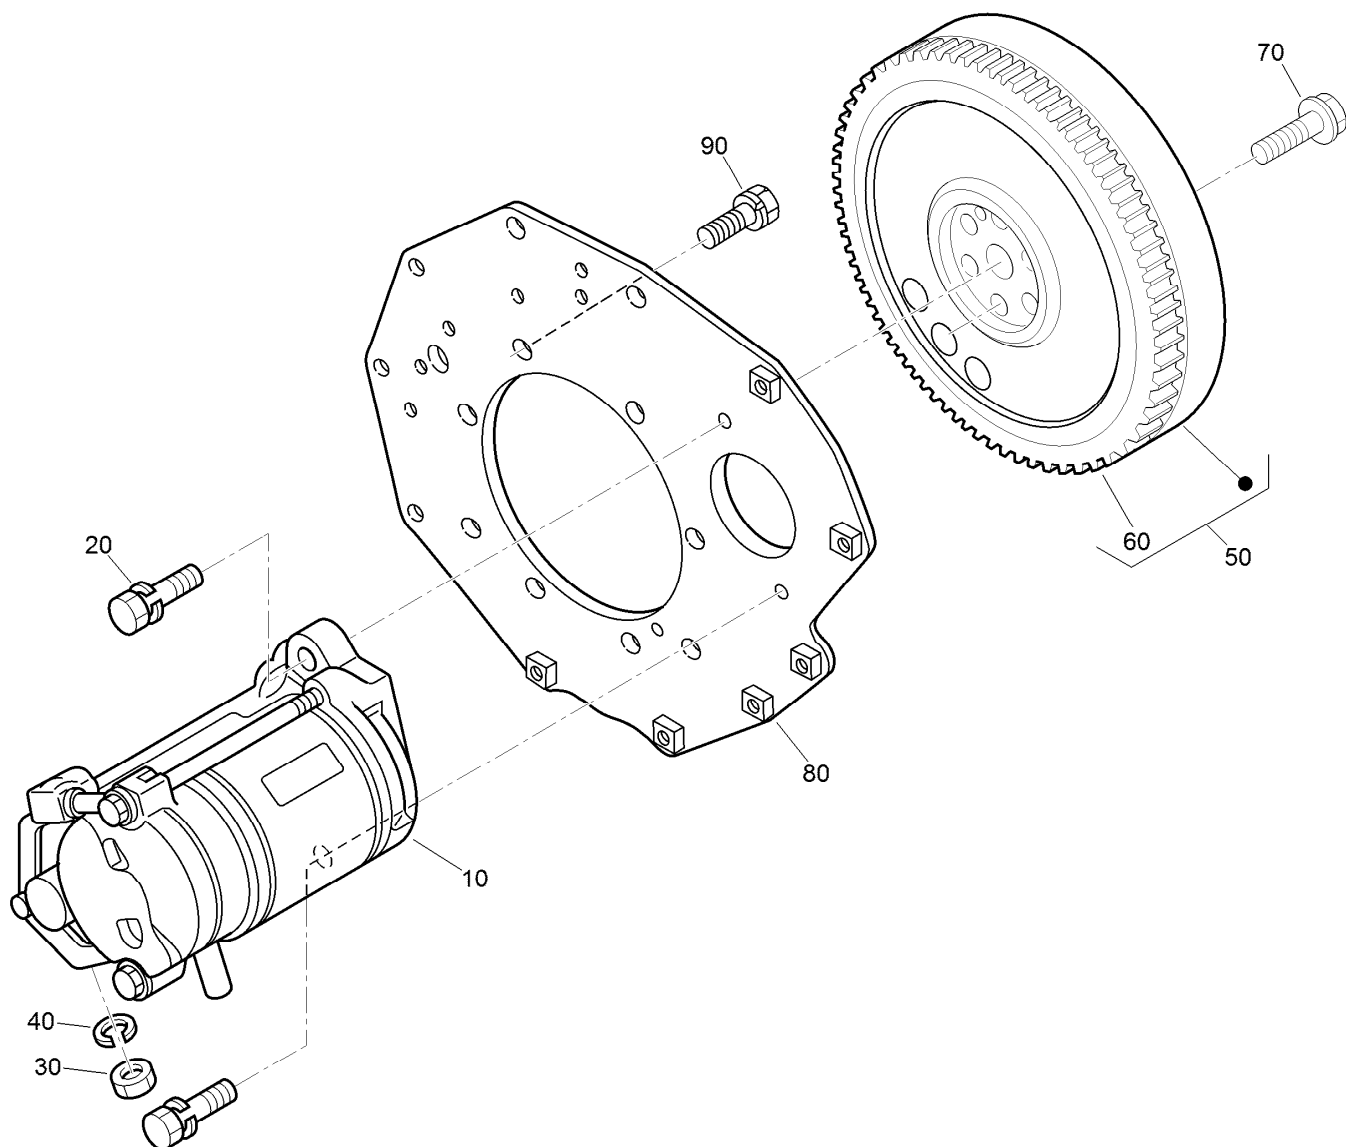 

Starter and Flywheel Assembly


Ref.	Part Number	Qty.	Description
10	98-9705	1	Starter ASM
20	98-7697	2	Bolt
30	98-7739	1	Nut
40	105-2893	1	Washer-Spring
50	105-3784	1	Flywheel ASM
60	115-3015	1	Gear-Ring
70	98-9537	6	Bolt-Flywheel
80	98-9486	1	Plate-End, Rear
90	98-9392	8	Bolt

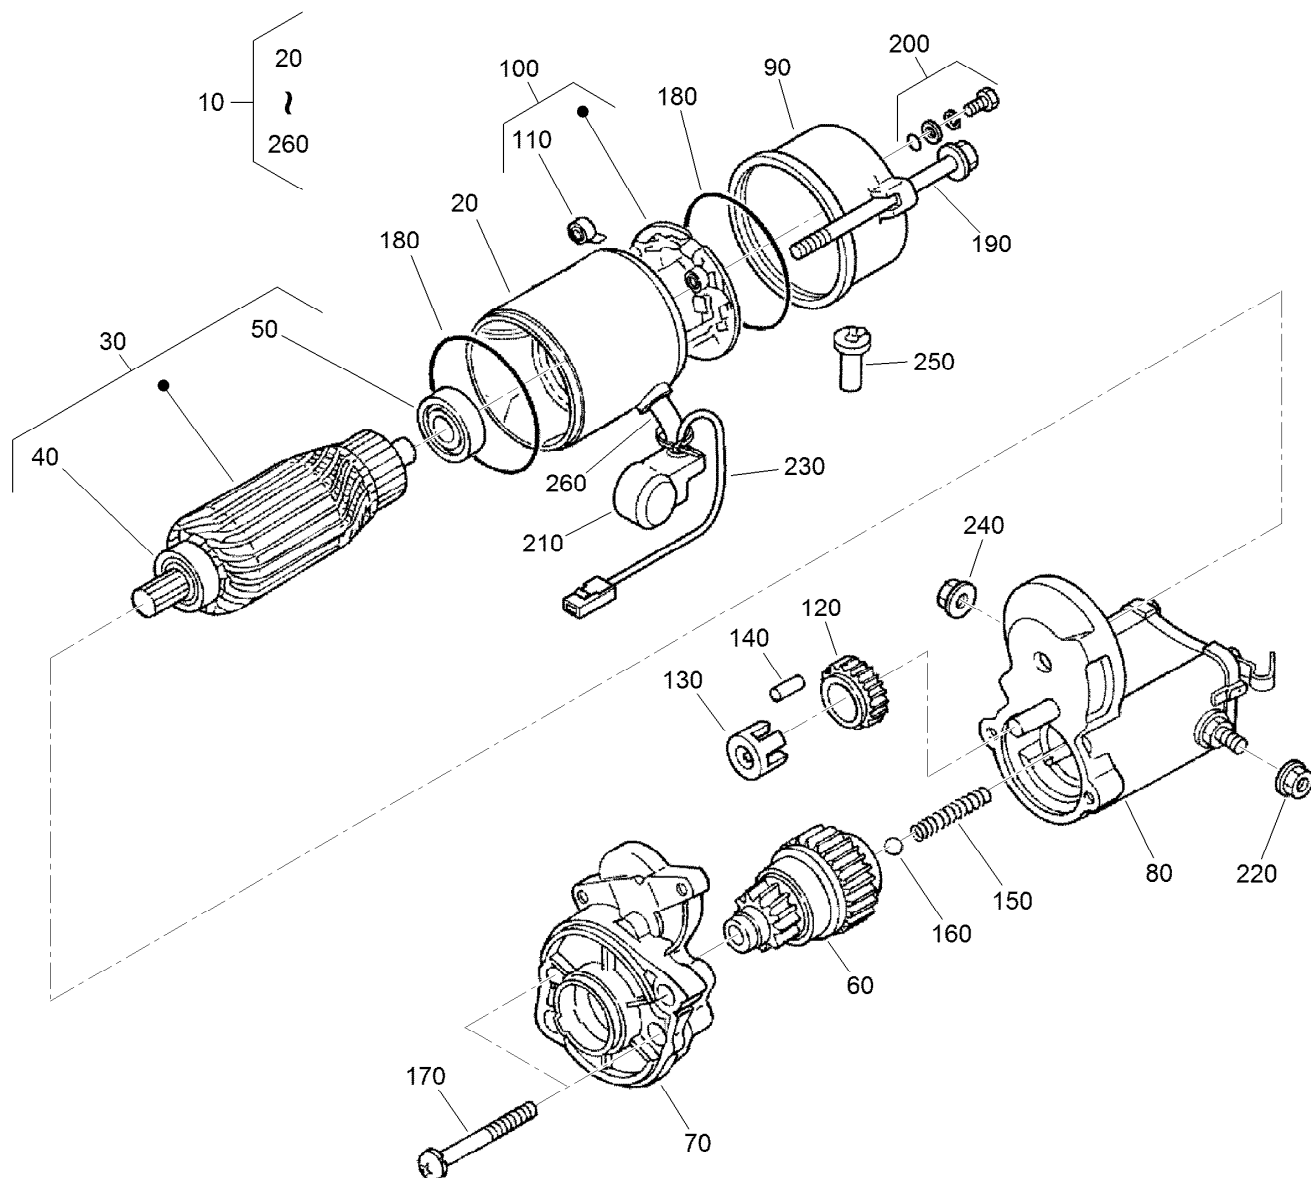 

Starter Component Assembly


Ref.	Part Number	Qty.	Description
10	98-9705	1	Starter ASM
20	104-8608	1	Yoke ASM
30	98-7742	1	Armature ASM
40	98-7744	1	Bearing
50	98-7743	1	Bearing
60	99-8373	1	Clutch-Running, Over
70	99-8374	1	Frame-End, Drive
80	105-3746	1	Magnetic Switch ASM
90	98-7748	1	Frame-End
100	98-7749	1	Brush Holder ASM
110	98-7750	4	Spring-Brush
120	98-7751	1	Gear
130	98-7752	1	Retainer

Ref.	Part Number	Qty.	Description
140	98-7753	5	Roller
150	98-7754	1	Spring
160	98-7755	1	Ball
170	98-7756	2	Bolt
180	98-7757	2	O-Ring
190	100-9240	2	Bolt
200	98-7758	2	Bolt ASM
210	99-8375	1	Cover
220	99-8371	1	Nut-Hex
230	98-9711	1	Cord-Solenoid, Stop
240	99-8376	1	Nut-Hex
250	98-7759	1	Pipe-Drain
260	98-9712	1	Band-Cover

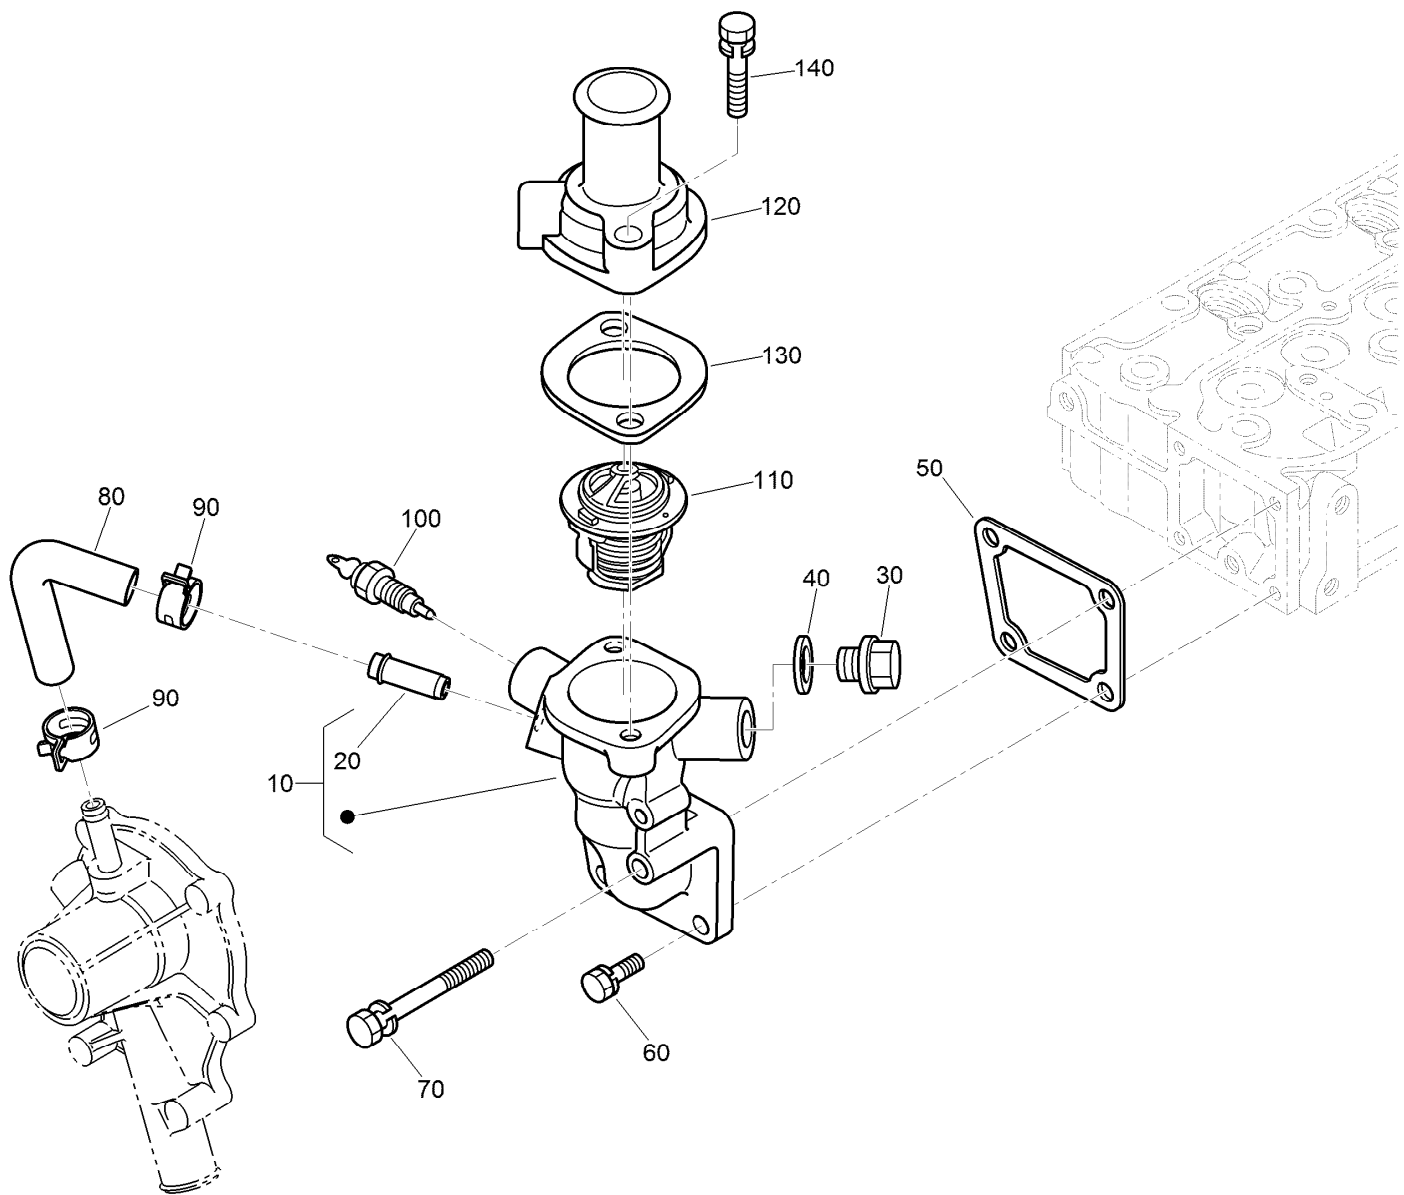 


Water Flange and Thermostat Assembly

Ref.	Part Number	Qty.	Description
10	98-9713	1	Water Flange ASM
20	98-9580	1	Pipe-Return, Water
30	105-3747	1	Plug
40	99-3583	1	Gasket
50	98-9638	1	Gasket-Flange, Water
60	98-7692	3	Bolt
70	98-9356	1	Bolt
80	98-9578	1	Pipe-Return, Water
90	125-9078	2	Clamp-Hose
100	98-9719	1	Thermoswitch
110	98-7778	1	Thermostat ASM
120	98-9471	1	Cover-Thermostat
130	105-3748	1	Gasket-Thermostat
140	98-7777	2	Bolt

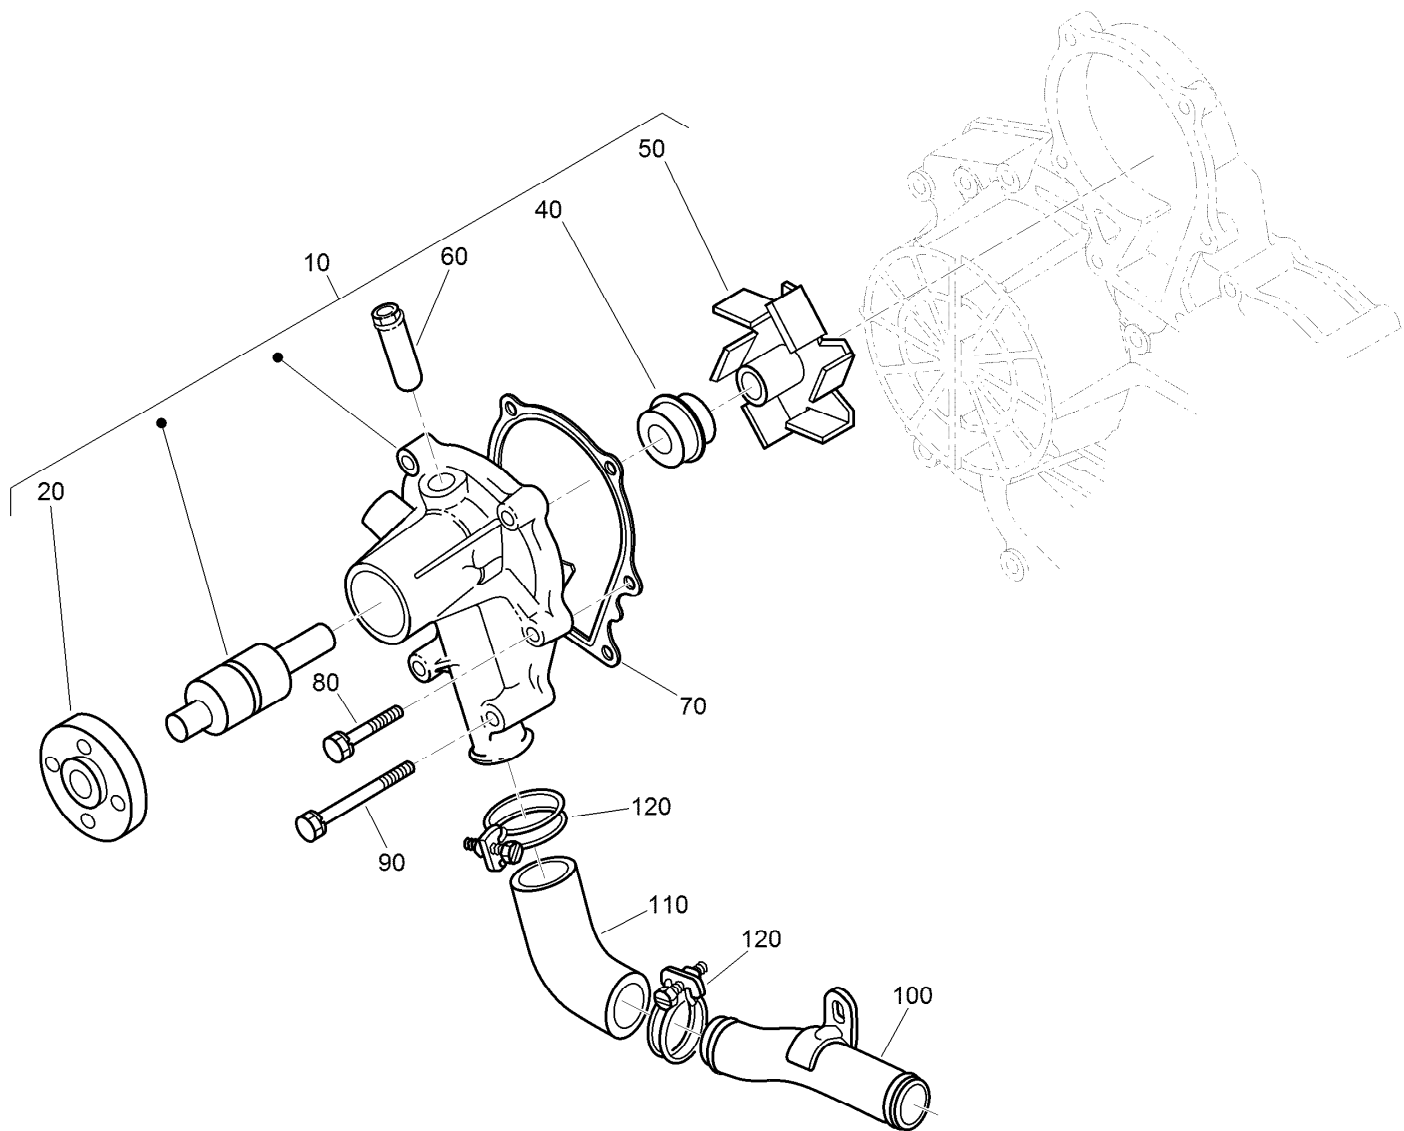 

Water Pump and Water Pipe Assembly


Ref.	Part Number	Qty.	Description
10	107-9089	1	Water Pump ASM
20	99-3516	1	Flange-Pump, Water
40	105-3750	1	Mechanical Seal ASM
50	112-7017	1	Impeller-Pump, Water
60	100-1932	1	Pipe-Return, Water
70	99-3454	1	Gasket-Pump, Water
80	98-9353	4	Bolt
90	98-9357	2	Bolt
100	98-9716	1	Pipe-Water
110	107-9091	1	Pipe-Water
120	127-0439	2	Clamp-Hose

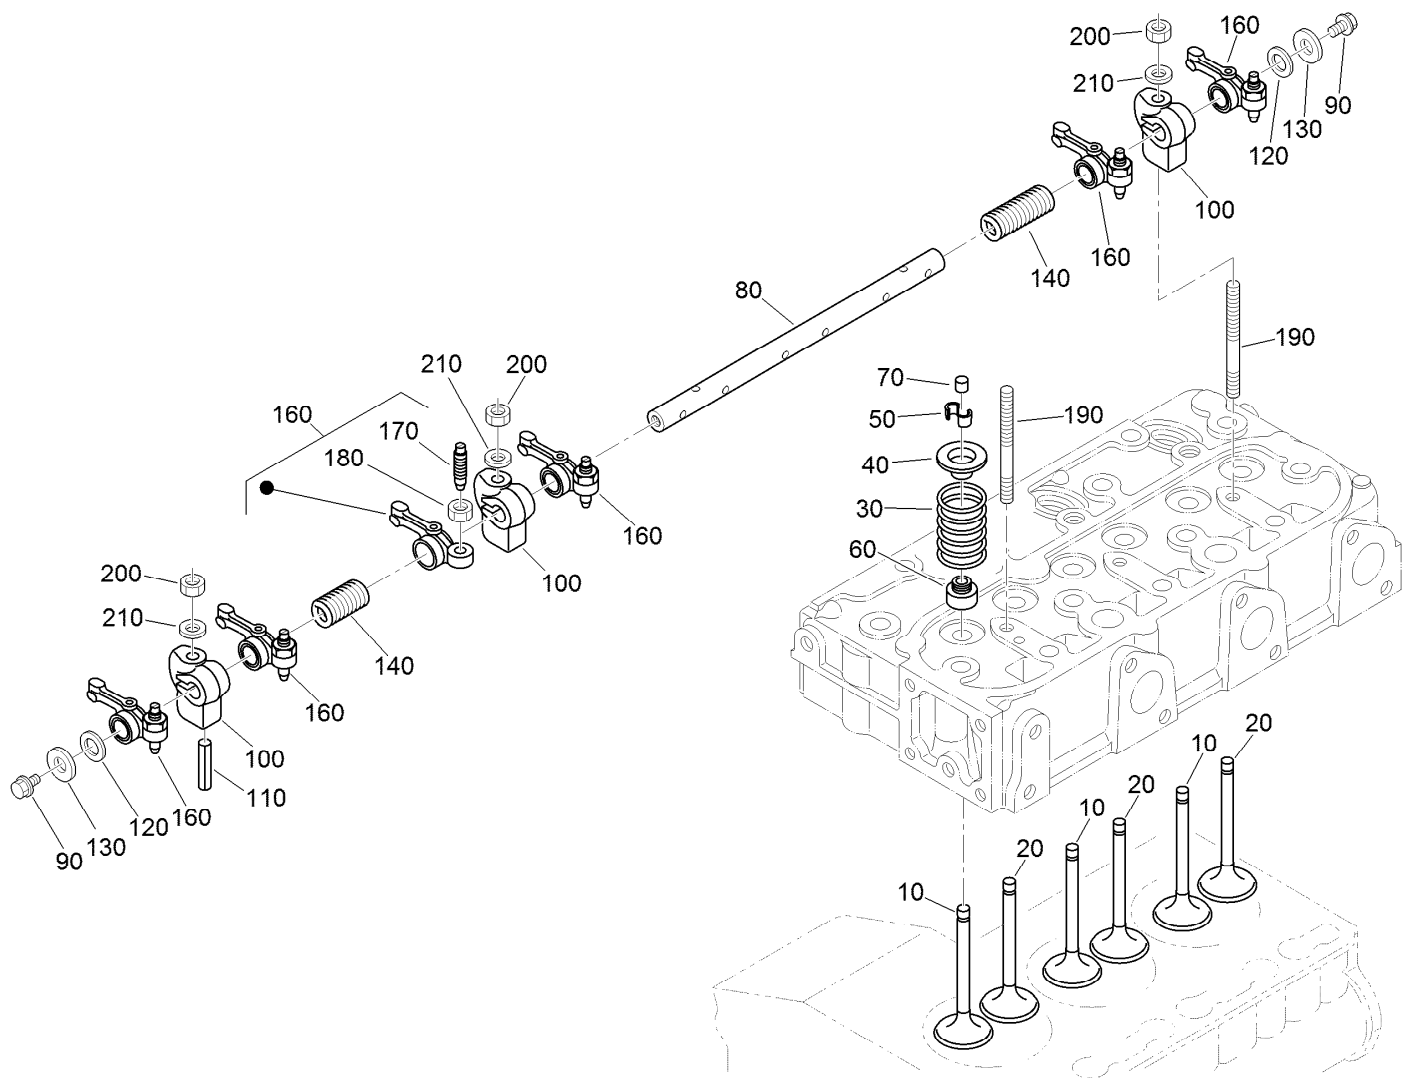 

Valve and Rocker Arm Assembly


Ref.	Part Number	Qty.	Description
10	112-7018	3	Valve-Inlet
20	120-2564	3	Valve-Exhaust
30	98-9648	6	Spring-Valve
40	107-9092	6	Retainer-Spring
50	117-7572	6	Collet-Spring, Valve
60	99-8385	6	Seal-Stem, Valve
70	98-9497	6	Cap-Valve
80	130-1248	1	Shaft-Arm, Rocker
90	99-8363	2	Bolt-Flange
100	98-9505	3	Bracket-Arm, Rocker

Ref.	Part Number	Qty.	Description
110	105-3758	1	Pin-Spring
120	98-9507	2	Washer-Shaft, Rocker Arm
130	110-3832	2	Washer-Plain
140	98-9504	2	Spring-Arm, Rocker
160	112-7020	6	Rocker Arm ASM
170	98-9502	6	Screw-Adjusting
180	98-9503	6	Nut
190	98-9506	3	Stud
200	98-9393	3	Nut
210	98-9385	3	Washer-Flat

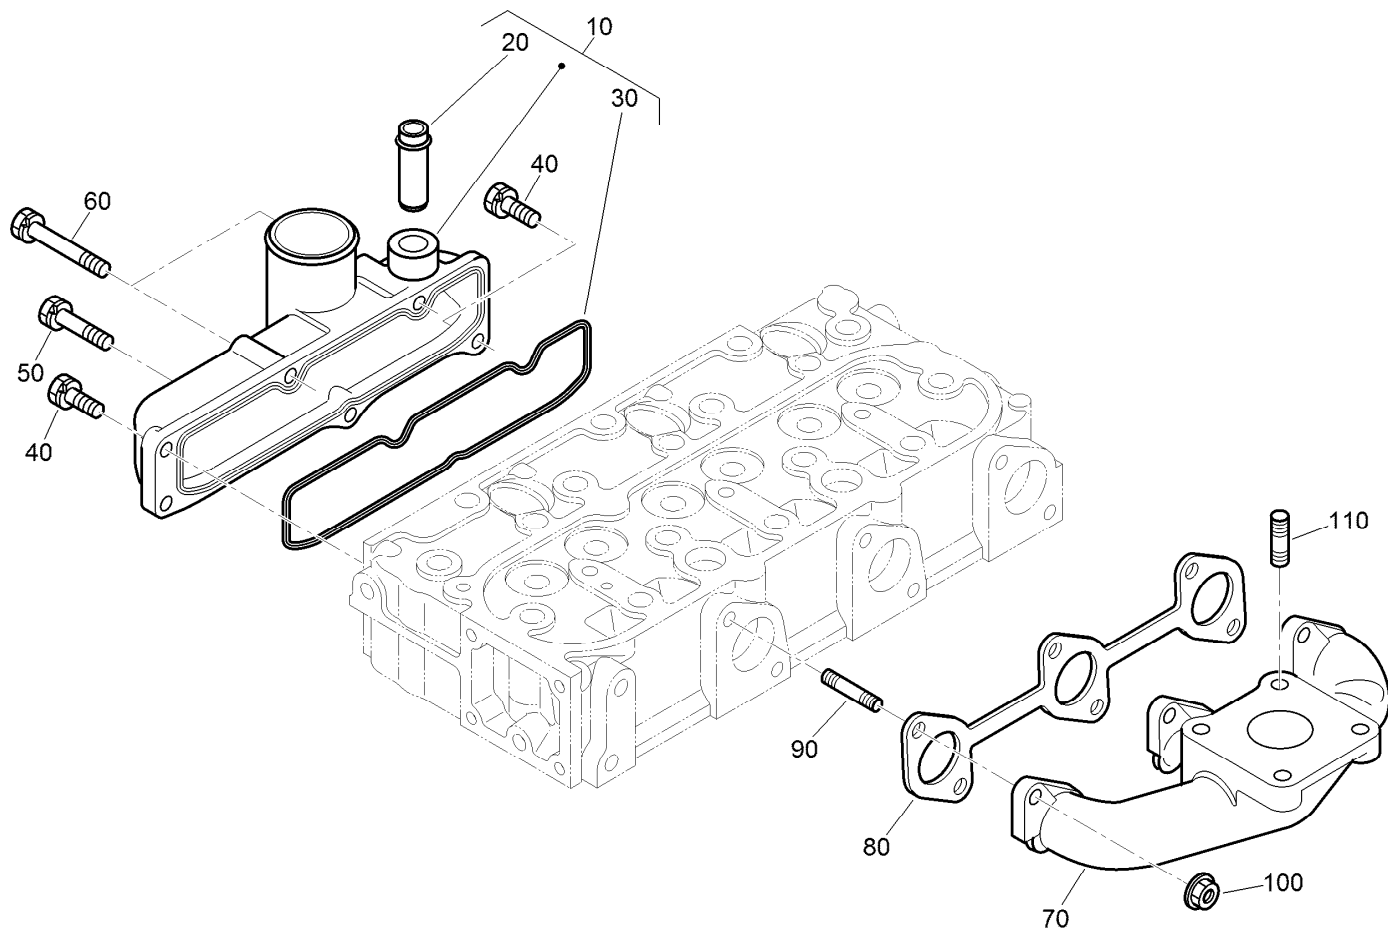 


Inlet and Exhaust Manifold Assembly

Ref.	Part Number	Qty.	Description
10	107-7843	1	Manifold Inlet ASM
20	98-9492	1	Joint-Pipe, Breather
30	98-9609	1	Gasket-Manifold, Inlet
40	127-0403	3	Bolt-Flange
50	98-9353	1	Bolt
60	125-9063	2	Bolt-Sems
70	107-9093	1	Manifold-Exhaust
80	99-8327	1	Gasket-Manifold, Exhaust
90	98-9588	6	Stud
100	98-9665	6	Nut
110	98-7769	4	Stud

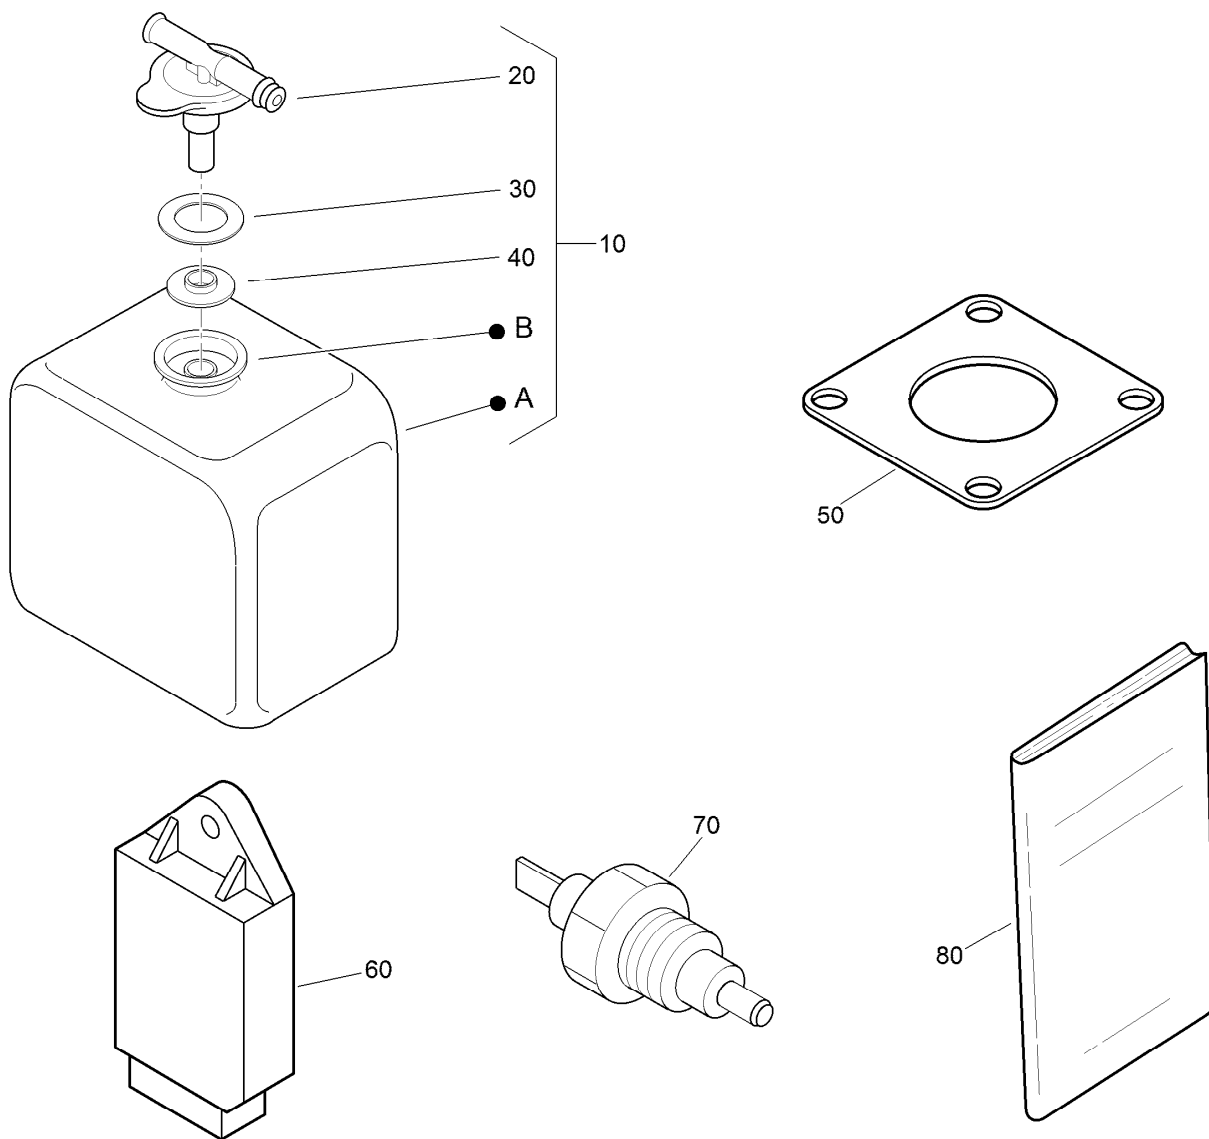 


Miscellaneous Engine Parts

Ref.	Part Number	Qty.	Description
10	104-9318	1	Bottle-Overflow
20	115-4132	1	Cap
30	105-3755	1	Gasket
40	105-3756	1	Plate
50	99-8343	1	Gasket-Muffler
60	98-7611	1	Controller-Glow
70	106-7772	1	Thermoswitch
80	130-1543	1	Manual-Operator

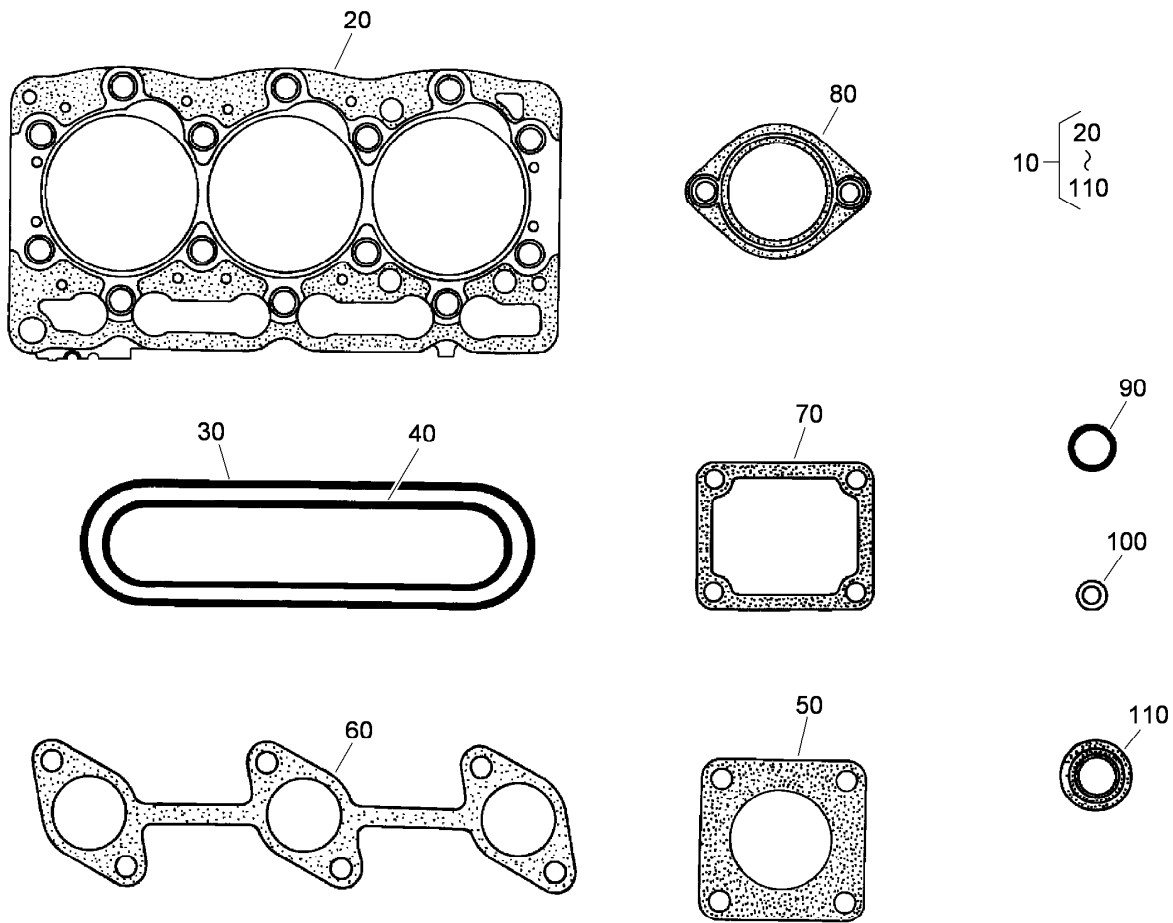 

Upper Gasket Kit

Ref.	Part Number	Qty.	Description
10	107-7848	1	Upper Gasket Kit
20	108-6573	1	Gasket-Head, Cylinder
30	98-9615	1	Gasket-Cover, Head
40	98-9609	1	Gasket-Manifold, Inlet
50	99-8343	1	Gasket-Muffler
60	99-8327	1	Gasket-Manifold, Exhaust
70	98-9638	1	Gasket-Flange, Water
80	105-3748	1	Gasket-Thermostat
90	99-3446	2	O-Ring
100	98-9454	3	Gasket
110	99-8385	6	Seal-Stem, Valve

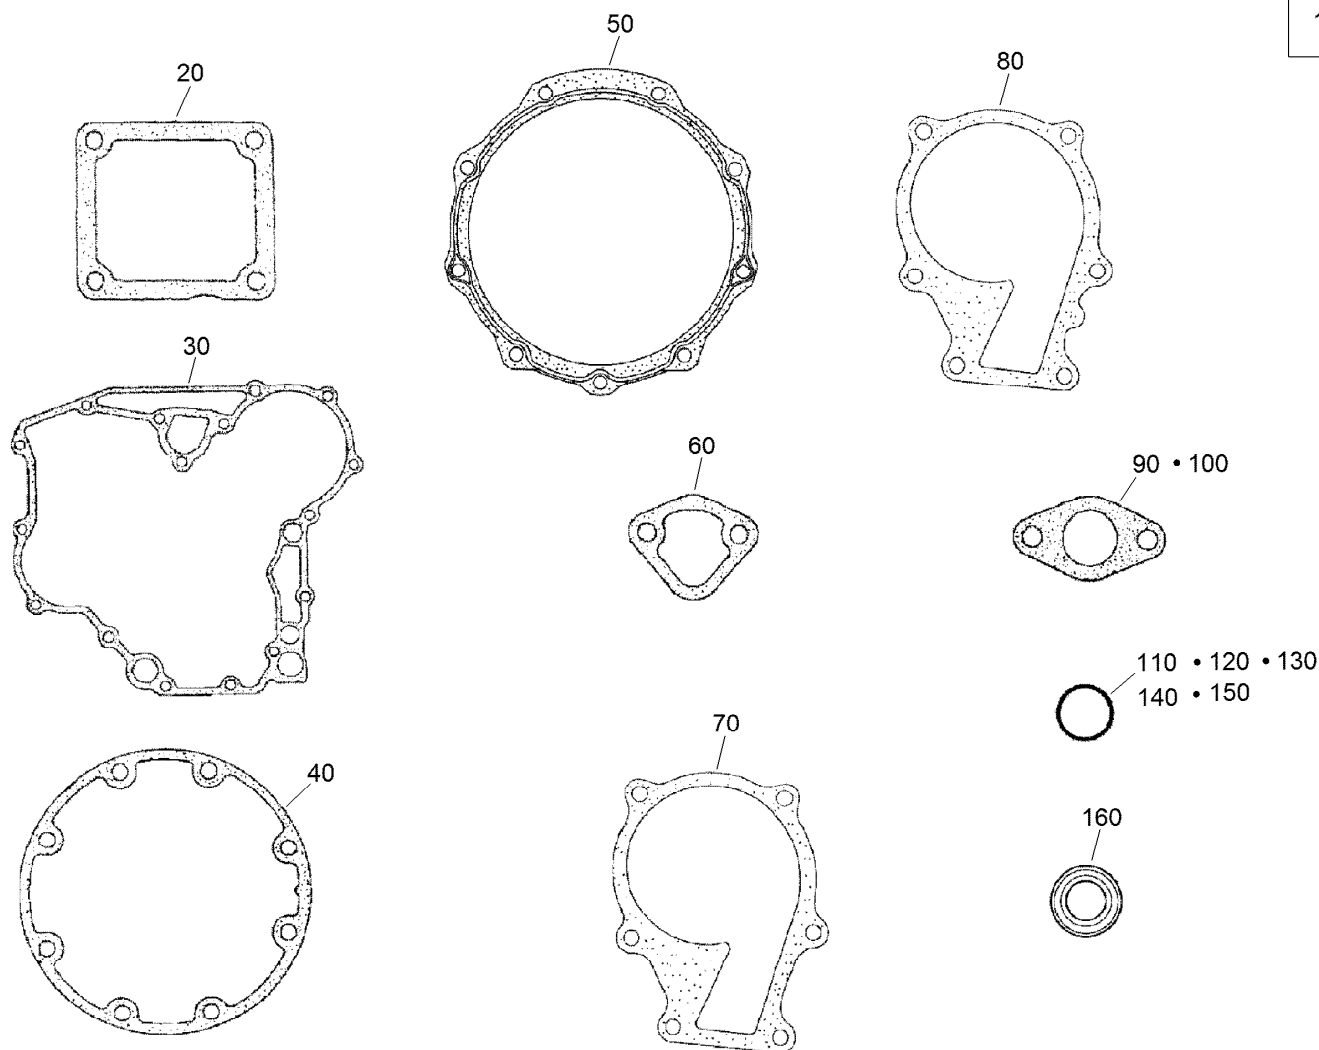 

Lower Engine Gasket Kit

Ref.	Part Number	Qty.	Description
10	130-1364	1	Lower Gasket Kit
20	98-9637	1	Gasket
30	98-9633	1	Gasket-Case, Gear
40	127-0440	1	Gasket-Case, Bearing
50	112-7037	1	Gasket-Cover, Case
60	117-7562	1	Gasket-Pump, Fuel
70	98-9632	1	Gasket-Pump, Water
80	99-3454	1	Gasket-Pump, Water

Ref.	Part Number	Qty.	Description
90	98-9682	1	Gasket
100	98-9683	1	Gasket-Cover, Solenoid
110	105-3781	2	O-Ring
120	105-3777	2	O-Ring
130	105-3783	1	O-Ring
140	105-3776	1	O-Ring
150	105-3788	1	O-Ring
160	98-7601	1	Seal-Oil

Attachments and Accessories

For 03174 Reelmaster 3105-D Traction Unit

Product Name	Model/Part
27in Lift Arm Kit	03172
32in Lift Arm Kit	03173
5-Blade 27in DPA Edge Series Cutting Unit.....	03188
8-Blade 27in DPA Edge Series Cutting Unit.....	03189
11-Blade 27in DPA Edge Series Cutting Unit	03190
8-Blade 32in DPA Edge Series Cutting Unit.....	03191
RM3105 27in, 8bld Rr Es No Frt Roller Cu.....	03192
27in Verticutter Cutting Unit	03203
Smooth Rear Tire	127-2796
Small Seat Cover.....	131-6690
Wheel Weight Kit	136-3315
Decal-Service, Japan	138-1190
Premium Seat Kit.....	30629
White Universal Sunshade	30669
Red Universal Sunshade	30671
Arm Rest Kit.....	30707
LED Work Light Kit.....	31692

Notes:

Notes:

Notes:



Count on it.