




Count on it.

Form No. 3460-550 Rev B

Operator's Manual

**Direct Drive Power Box Rake
Compact Utility Loaders**

Model No. 22426—Serial No. 314000001 and Up

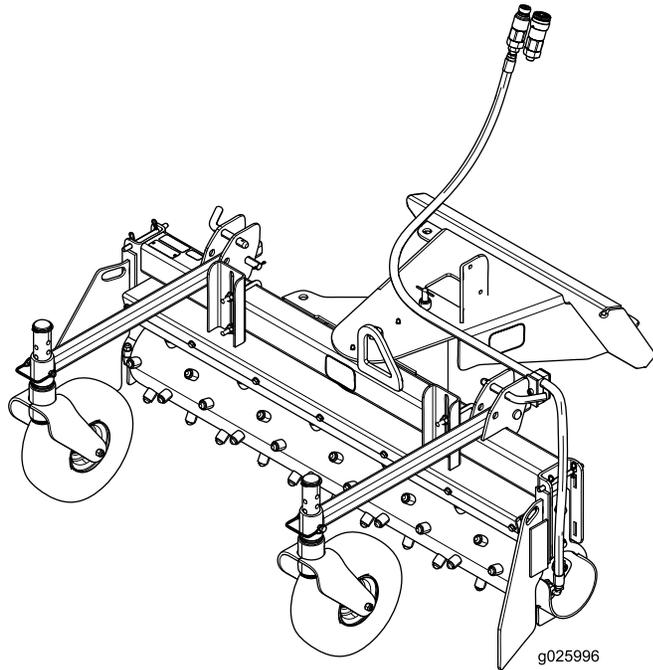

⚠ WARNING

**CALIFORNIA
Proposition 65 Warning**

Use of this product may cause exposure to chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Model No. _____

Serial No. _____

This manual identifies potential hazards and has safety messages identified by the safety alert symbol (Figure 2), which signals a hazard that may cause serious injury or death if you do not follow the recommended precautions.



Figure 2

g000502

1. Safety alert symbol

This manual uses 2 words to highlight information. **Important** calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

Introduction

This attachment is intended to be used on a Toro compact tool carrier. It is designed primarily to prepare seed and sod beds by pulverizing rough soil, dethatching, and removing rocks and debris. Using this product for purposes other than its intended use could prove dangerous to you and bystanders.

You may contact Toro directly at www.Toro.com for product and accessory information, help finding a dealer, or to register your product.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. Figure 1 illustrates the location of the model and serial numbers on the product. Write the numbers in the space provided.

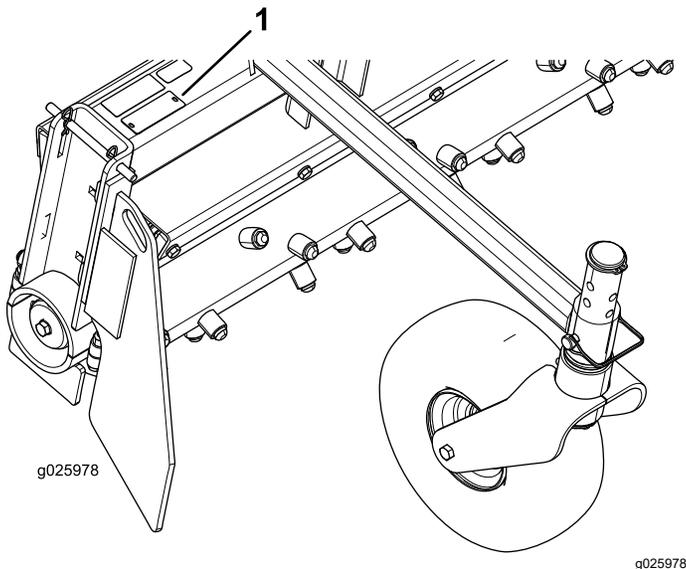


Figure 1

1. Model and serial number location

Contents

- Safety 3
 - General Safety 3
 - Slope Safety 3
 - Power Rake Safety 4
 - Maintenance and Storage Safety 4
 - Safety and Instructional Decals 4
- Product Overview 5
 - Specifications 5
- Operation 5
 - Extending the Caster Wheels 5
 - Starting the Power Rake 6
 - Setting the Barrier Gap 6
 - Using the End Plates 7
 - Angling the Roller 7
 - Transporting the Power Rake 8
 - Stopping the Power Rake 8
 - Transport Position 8
 - Operating Tips 9
- Maintenance 10
 - Recommended Maintenance Schedule(s) 10
 - Checking the Tire Pressure 10
 - Greasing the Power Rake 10
- Storage 11
- Troubleshooting 12

Safety

General Safety

Always follow all safety instructions to avoid serious injury or death.

- Do not exceed the rated operating capacity, as the machine may become unstable, which may result in loss of control.
- **Do not transport an attachment with the arms raised or extended (if applicable).** Always transport the attachment close to the ground; refer to [Transport Position \(page 8\)](#).
- Have the property or work area marked for buried lines and other objects, and do not dig in marked areas.
- Read and understand the content of this *Operator's Manual* before starting the machine.
- Use your full attention while operating the machine. Do not engage in any activity that causes distractions; otherwise, injury or property damage may occur.
- Never allow children or untrained people to operate the machine.
- Keep your hands and feet away from the moving components and attachments.
- Do not operate the machine without the guards and other safety protective devices in place and working on the machine.
- Keep bystanders and pets away from the machine.
- Stop the machine, shut off the machine, and remove the key before servicing, fueling, or unlogging the machine.

Improperly using or maintaining this machine can result in injury. To reduce the potential for injury, comply with these safety instructions and always pay attention to the safety-alert symbol ▲, which means Caution, Warning, or Danger—personal safety instruction. Failure to comply with these instructions may result in personal injury or death.

Slope Safety

- **Operate the machine up and down slopes with the heavy end of the machine uphill.** Weight distribution changes with attachments. This attachment makes the front of machine the heavy end.
- Raising or extending (if applicable) the loader arms on a slope affects the stability of the machine. Keep the loader arms in the lowered and retracted position when on slopes..

- Slopes are a major factor related to loss of control and tip-over accidents, which can result in severe injury or death. Operating the machine on any slope or uneven terrain requires extra caution.
- Establish your own procedures and rules for operating on slopes. These procedures must include surveying the site to determine which slopes are safe for machine operation. Always use common sense and good judgment when performing this survey.
- Slow down and use extra care on hillsides. Ground conditions can affect the stability of the machine.
- Avoid starting or stopping on a slope. If the machine loses traction, proceed slowly, straight down the slope.
- Avoid turning on slopes. If you must turn, turn slowly and keep the heavy end of the machine uphill.
- Keep all movements on slopes slow and gradual. Do not make sudden changes in speed or direction.
- If you feel uneasy operating the machine on a slope, do not do it.
- Watch for holes, ruts, or bumps, as uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Use caution when operating on wet surfaces. Reduced traction could cause sliding.
- Evaluate the area to ensure that the ground is stable enough to support the machine.
- Use caution when operating the machine near the following:
 - Drop-offs
 - Ditches
 - Embankments
 - Bodies of water

The machine could suddenly roll over if a track goes over the edge or the edge caves in. Maintain a safe distance between the machine and any hazard.

- Do not remove or add attachments on a slope.
- Do not park the machine on a hillside or slope.

Power Rake Safety

- Keep away from the rotating teeth while operating the power rake.
- Never directly discharge toward people, animals, or property.
- Never use the attachment to carry loads.
- After striking a foreign object, shut off the engine, remove the key, thoroughly inspect the attachment for any damage, and repair the damage before starting and operating the attachment.
- Always lower the attachment and shut off the machine each time you leave the operating position.


Maintenance and Storage Safety

- Check fasteners at frequent intervals for proper tightness to ensure that the equipment is in safe operating condition.
- Refer to the *Operator's Manual* for important details if you store the attachment for an extended period of time
- Maintain or replace safety and instruction labels, as necessary.

Safety and Instructional Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.

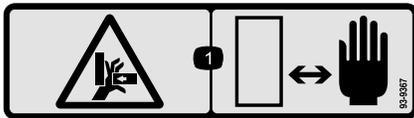

93-9367

decal93-9367

1. Crushing hazard of hand—keep hands away.



100-4708

decal100-4708


1. Thrown object hazard—keep bystanders away.



93-7321

decal93-7321


1. Cutting/dismemberment hazard of hands and feet, rotating knives/blades—stay away from moving parts.

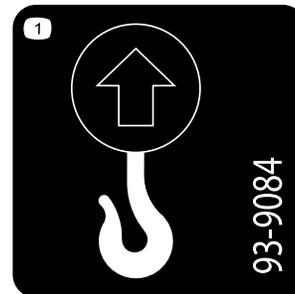

93-9084

decal93-9084

1. Lift point

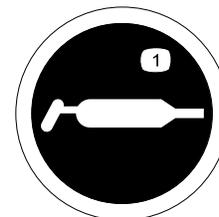

115-2903

decal115-2903

1. Grease



133-8061

decal133-8061

Product Overview

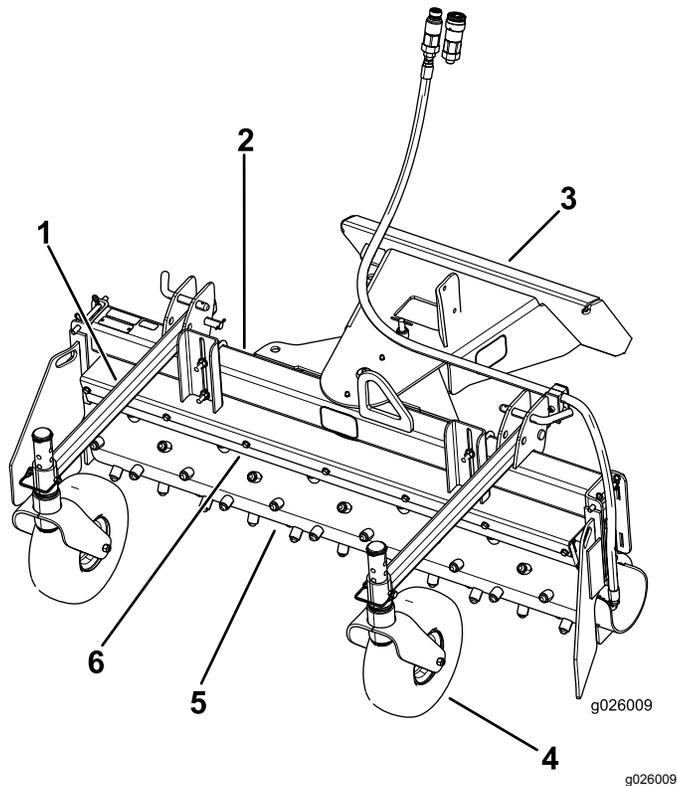


Figure 3

- | | |
|------------------------|-----------------|
| 1. Caster-arm assembly | 4. Tire |
| 2. Rake frame | 5. Tooth roller |
| 3. Attachment mount | 6. Rake barrier |

Specifications

Height	53.1 cm (20.9 inches)
Weight	166 kg (365 lb)
Raking width	122 cm (48 inches)
Roller type	Carbide toothed roller 22.4 cm (8.8 inches) diameter
Roller angle	20°
Gap (tube to barrier)	3.2 cm (1-1/4 inches)
Maximum pressure	20,684 kPa (3,000 psi)

Operation

Note: Determine the left and right sides of the machine from the normal operating position.

Note: Refer to your traction unit *Operator's Manual* before installing, operating, and removing the power rake.

Note: Refer to your traction unit *Operator's Manual* for information on installing and removing attachments on your traction unit.

Extending the Caster Wheels

Refer to your traction unit *Operator's Manual* for information on installing and removing attachments from your traction unit.

1. Extend the caster arms so that the caster wheel are in the operating position.
2. Secure the caster arms in place with the hitch pins (5/8 x 3 inches), clevis pins (5/8 x 3.5 inches), and the hairpin cotters (0.094 x 1 inch) as shown in [Figure 4](#).

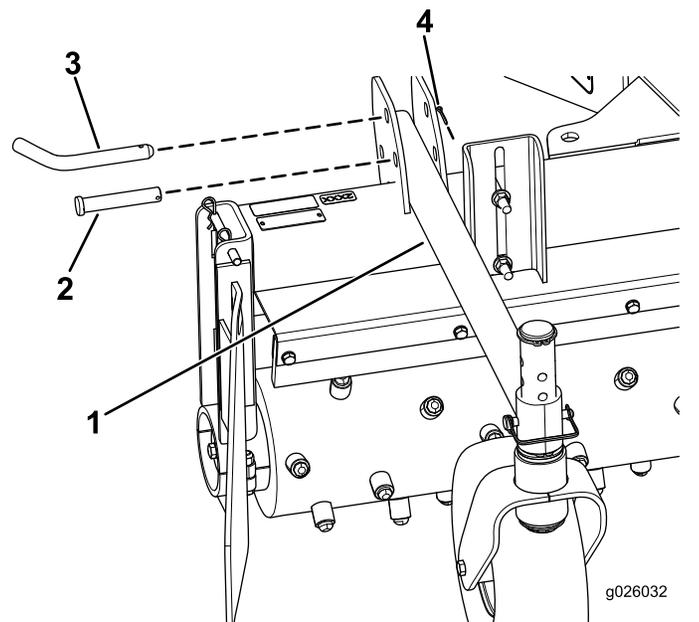


Figure 4

- | | |
|----------------------------------|------------------------------------|
| 1. Caster arm | 3. Hitch pin (5/8 x 3 inches) |
| 2. Clevis pin (5/8 x 3.5 inches) | 4. Hairpin cotter (0.094 x 1 inch) |

Starting the Power Rake

1. Start the traction unit engine.
2. Slowly lower the power rake to the ground.
3. Engage the hydraulic-control lever for auxiliary implements.
4. Move the traction unit forward or backward as desired.

Note: For the roller to operate effectively, rotate it in the opposite direction of the traction-unit track. The direction of the roller rotation is controlled by the traction unit hydraulic controls; refer to [Figure 5](#) below.

Roller Rotation	Travel Direction
	
	

g026004
g026004

Figure 5

Setting the Barrier Gap

The normal gap between the roller and the barrier for average conditions is approximately 3.2 cm (1-1/4 inches).

The barrier gap should be the same all the way across.

Set the barrier gap as follows:

- To widen the barrier gap, loosen the 2 U-bolts (3/8 inch) that hold the barrier mount ([Figure 6](#)).

Note: A wider opening will allow more dirt and rock to pass through.

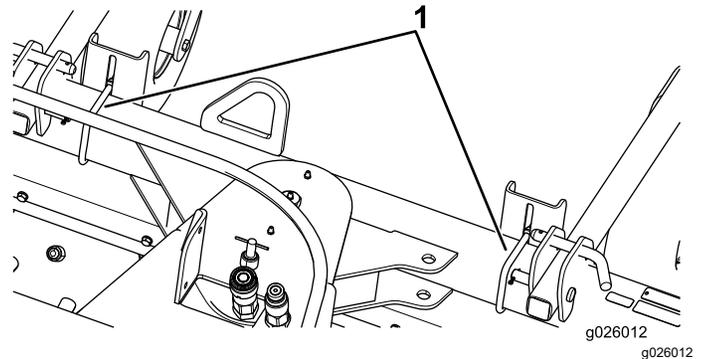


Figure 6

1. U bolts (3/8 inch)

- To narrow the barrier gap, tighten the 2 U-bolts (3/8 inch) that hold the barrier mount ([Figure 6](#)).

Important: Ensure that the roller does not hit the barrier, as the parts could be damaged.

Using the End Plates

The end plates contain the material in front of the roller, while the clean material passes between the roller and the barrier. With the end plates mounted in the working position and the rake straight (parallel with the traction unit track), the material can be moved, filling in the low spots.

You can mount the end plates to either the front or the back of the power rake, depending on the raking direction. When you move the end plates from front to back, you must move the left one to the right side and the right one to the left side.

To move the end plate, perform the following:

1. Remove the 2 hairpin cotters from the end-plate pin (Figure 7).

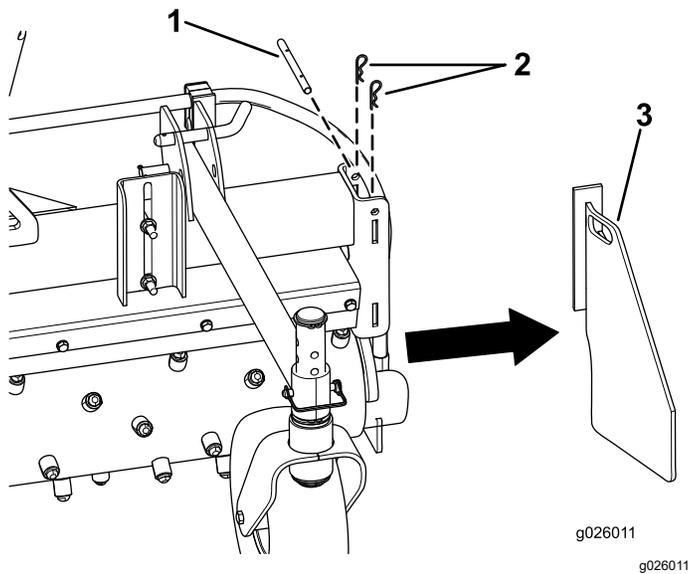


Figure 7

1. End-plate pin
2. Hairpin cotter
3. End plate

2. Remove the end-plate pin from the end plate (Figure 7).
3. Remove the end plate (Figure 7).

Angling the Roller

You can angle the roller 20° in either direction.

For windrowing, remove the angle-locking pin (Figure 8), slide the angle mount to a new set of holes, and insert the pin.

Important: Do not drop the power rake onto the ground with the roller turning. Sudden high-speed jolts multiply the stress to the drive line, and can cause damage.

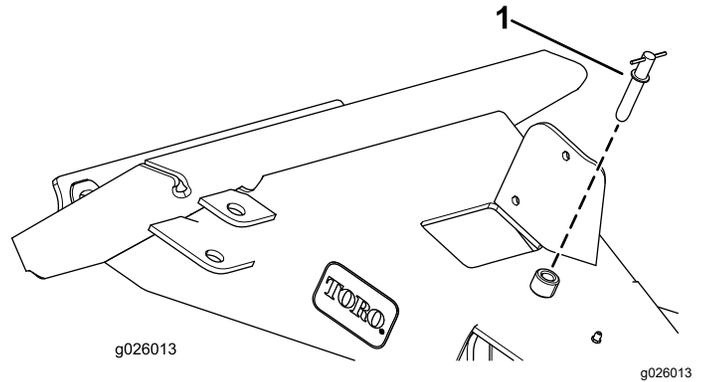


Figure 8

1. Angle-locking pin

Transporting the Power Rake

Transport the power rake by using the lift points shown in [Figure 9](#).

Important: Lifting the power rake at other points can damage the machine.

Note: Lift the machine carefully with proper lifting accessories.

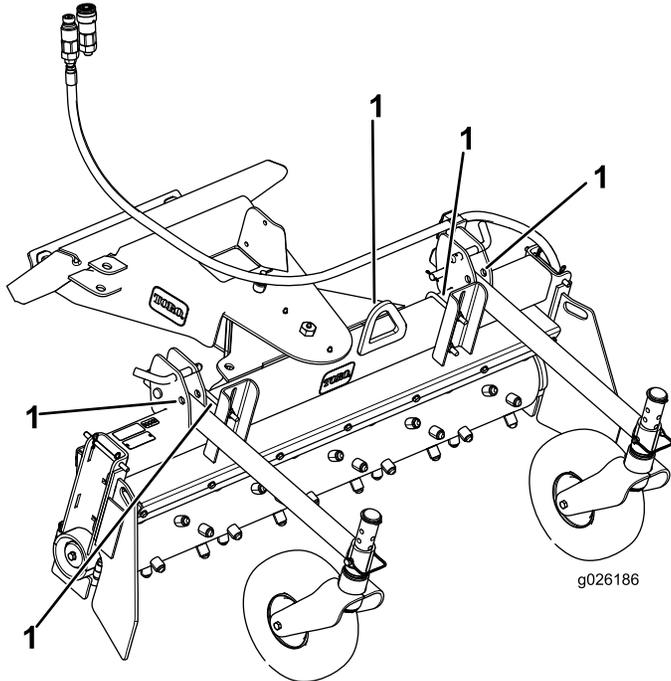


Figure 9

1. Lift point

Stopping the Power Rake

1. Stop the engine on the traction unit.
2. Lower the lift arms of the traction unit, and lower the power rake to the ground.
3. Turn off the engine, set the parking brake, and remove the key from the ignition of the traction unit.

Transport Position

When transporting the attachment, keep it as close to the ground as possible, no more than 15 cm (6 inches) above the lowest position. Tilt it rearward.

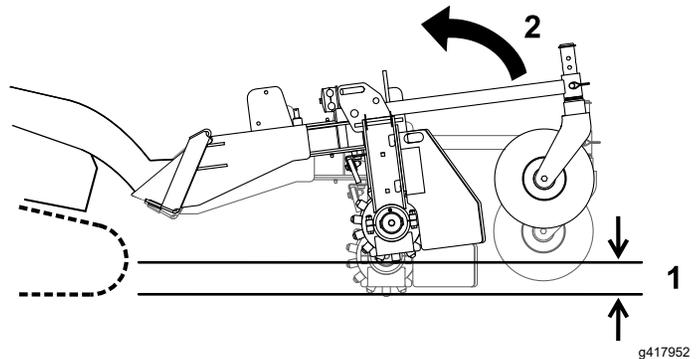


Figure 10

1. No more than 15 cm (6 inches) above the lowest position
2. Tilt the attachment rearward.

Operating Tips

Operating the Power Rake

- Always begin power raking at the slowest ground speed possible. Increase the ground speed if conditions permit.
- Always use full throttle (maximum engine speed).
- If a rock or other obstruction gets into the teeth, stop the hydraulics and drive the traction unit forward until the obstruction is dislodged.
- The roller should be level with the ground. The power rake should also be level with the ground from front to back. To accomplish this, raise or lower the gauge wheels and use the traction unit tilt cylinder.
- To allow the roller to penetrate deeper into the ground, loosen the handle and raise the gauge wheels. To raise the roller, lower the gauge wheels.
- You can achieve further depth control by tilting the rake forward on its gauge wheels to raise the roller, or tilt the rake back to raise the gauge wheels, and allow the roller to penetrate more deeply.
- Check the air pressure in each tire regularly to maintain an even and consistent grade.
- To break up compacted soil, roll back the attachment plate to take the guide wheels off the ground, so that only the toothed roller is in contact with the ground. Control the ground speed to avoid stalling the toothed roller. Remove the end plates to allow material to move out of the way if you are only trying to break up the soil.
- To remove loose debris, tilt the traction unit attachment plate until the guide wheels control the depth of the toothed roller. You can angle the rake at this time for windrowing debris or you can set the rake straight with both end plates installed to collect debris. You can increase the traction unit speed when you do this.
- For finish grading, tilt the rake forward until the teeth of the toothed roller are barely touching the soil. You can increase the traction unit speed to collect the material from the high spots and leave it in the lower areas.
- To thatch grassy areas, tilt the traction unit attachment plate forward to support the rake on the front gauge wheels and the toothed roller raised so that the teeth are just grazing the surface. The travel speed should be slow.

Maintenance

Recommended Maintenance Schedule(s)

Maintenance Service Interval	Maintenance Procedure
Before each use or daily	<ul style="list-style-type: none">• Check the tire pressure.
Every 40 hours	<ul style="list-style-type: none">• Grease all of the lubrication points.

Checking the Tire Pressure

Service Interval: Before each use or daily

Maintain the air pressure in the tires, as uneven tire pressure can cause uneven raking.

Check the tires when they are cold to get the most accurate pressure reading.

If the tire pressure is low, inflate the tire(s) to 345 kPa (50 psi).

Greasing the Power Rake

Service Interval: Every 40 hours

Grease Type: No. 2 general purpose, lithium-base grease

1. Turn off the engine, set the parking brake, and remove the key from the ignition of the traction unit.
2. Place the power rake on a level surface.
3. Clean the grease fittings with a rag.

Note: Make sure to scrape any paint off the front of the fitting(s).

4. Apply the necessary amount of grease to the grease fittings (Figure 11 and Figure 12).

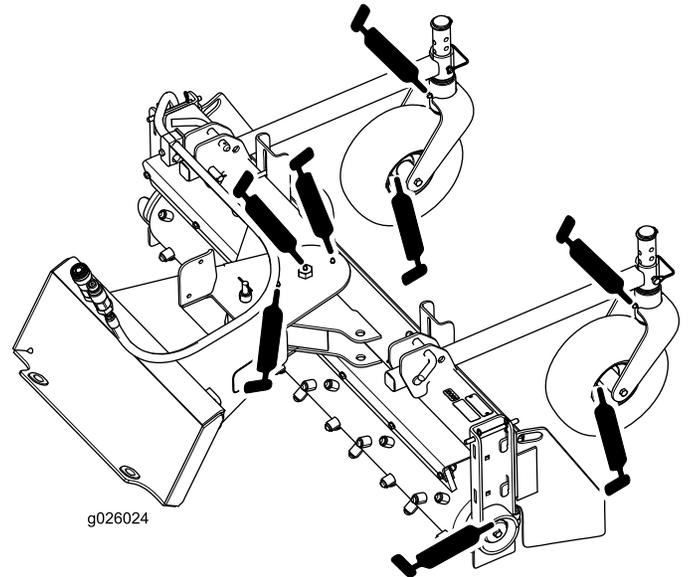


Figure 11

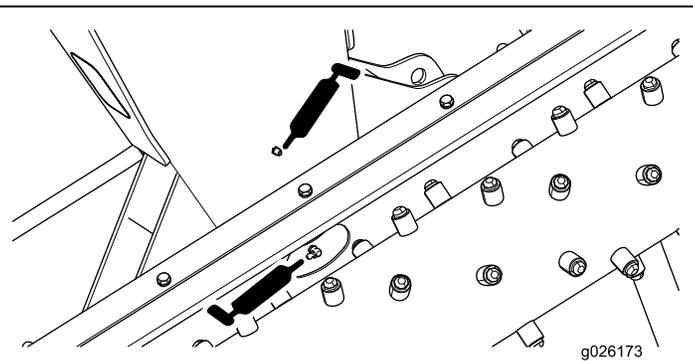


Figure 12

Storage

1. Turn off the engine, set the parking brake, and remove the key from the ignition.
2. Store the power rake on a hard, level surface.
3. Before long term storage, brush the dirt from the attachment.
4. Tighten any loose hydraulic connections, nuts, and capscrews.
5. Lubricate all of the grease fittings; refer to [Greasing the Power Rake \(page 10\)](#).
6. Seal the hydraulic system from any contaminants, and secure all of the hydraulic hoses off the ground to prevent damage.
7. Store the machine in a dry, protected place.
8. Paint any unpainted areas to avoid rust. Paint is available from your Authorized Toro Service Dealer.
9. Inflate the tires to the recommended tire pressure; refer to [Checking the Tire Pressure \(page 10\)](#).

Troubleshooting

Problem	Possible Cause	Corrective Action
The roller will not turn.	<ol style="list-style-type: none"> 1. The hydraulic valve on the loader is not engaged. 2. The relief-valve setting on the loader is not properly adjusted. 3. Worn or damaged hydraulic motor. 4. Insufficient oil in the system. 5. The hose ends are not completely engaged. 6. There is air in the hydraulic lines. 7. There is an obstruction in the hydraulic lines. 8. There is an obstruction between the roller and the barrier. 	<ol style="list-style-type: none"> 1. See the loader <i>Operator's Manual</i>. 2. Contact your Authorized Toro Service Dealer. 3. Repair or replace the hydraulic motor. 4. Service the loader hydraulic reservoir. 5. Check the hose couplings and engage properly. 6. Cycle the loader auxiliary system several time to remove air from the lines. 7. Replace the obstructed or damaged line. 8. Reverse the roller to clear the obstruction.
There are oil leaks.	<ol style="list-style-type: none"> 1. Worn or damaged seal. 2. Loose or damaged hoses. 3. Loose or damaged connections. 	<ol style="list-style-type: none"> 1. Replace the leaking seal. 2. Replace the damaged hoses and secure loose hoses. 3. Replace the damaged hose connections and tighten the loose fittings.

Notes:

Notes:

Declaration of Incorporation

The Toro Company, 8111 Lyndale Ave. South, Bloomington, MN, USA declares that the following unit(s) conform(s) to the directives listed, when installed in accordance with the accompanying instructions onto certain Toro models as indicated on the relevant Declarations of Conformity.

Model No.	Serial No.	Product Description	Invoice Description	General Description	Directive
22426	314000001 and Up	Direct Drive Power Box Rake	DIRECT DRIVE POWER BOX RAKE, CE	Power Box Rake	2006/42/EC

Relevant technical documentation has been compiled as required per Part B of Annex VII of 2006/42/EC.

We will undertake to transmit, in response to requests by national authorities, relevant information on this partly completed machinery. The method of transmission shall be electronic transmittal.

This machinery shall not be put into service until incorporated into approved Toro models as indicated on the associated Declaration of Conformity and in accordance with all instructions, whereby it can be declared in conformity with all relevant Directives.

Certified:



Chad Moe
Sr. Engineering Manager
8111 Lyndale Ave. South
Bloomington, MN 55420, USA
October 4, 2023

Authorized Representative:

Marcel Dutrieux
Manager European Product Integrity
Toro Europe NV
Nijverheidsstraat 5
2260 Oevel
Belgium

UK Declaration of Incorporation

The Toro Company, 8111 Lyndale Avenue South, Bloomington, MN, USA declares that the following unit(s) conform(s) to the regulations listed, when installed in accordance with the accompanying instructions onto certain Toro models as indicated on the relevant Declarations of Conformity.

Model No.	Serial No.	Product Description	Invoice Description	General Description	Regulation
22426	314000001 and Up	Direct Drive Power Box Rake	DIRECT DRIVE POWER BOX RAKE, CE	Power Box Rake	2006/42/EC

Relevant technical documentation has been compiled as required per Schedule 10 of S.I. 2008 No. 1597.

We will undertake to transmit, in response to requests by national authorities, relevant information on this partly completed machinery. The method of transmission shall be electronic transmittal.

This machinery shall not be put into service until incorporated into approved Toro models as indicated on the associated Declaration of Conformity and in accordance with all instructions, whereby it can be declared in conformity with all relevant regulations.

This declaration has been issued under the sole responsibility of the manufacturer.
The object of the declaration is in conformity with relevant UK legislation.



Chad Moe
Sr. Engineering Manager
8111 Lyndale Ave. South
Bloomington, MN 55420, USA
October 4, 2023

Authorized Representative:

Marcel Dutrieux
Manager European Product Integrity
Toro U.K. Limited
Spellbrook Lane West
Bishop's Stortford
CM23 4BU
United Kingdom

EEA/UK Privacy Notice

Toro's Use of Your Personal Information

The Toro Company ("Toro") respects your privacy. When you purchase our products, we may collect certain personal information about you, either directly from you or through your local Toro company or dealer. Toro uses this information to fulfil contractual obligations - such as to register your warranty, process your warranty claim or to contact you in the event of a product recall - and for legitimate business purposes - such as to gauge customer satisfaction, improve our products or provide you with product information which may be of interest. Toro may share your information with our subsidiaries, affiliates, dealers or other business partners in connection these activities. We may also disclose personal information when required by law or in connection with the sale, purchase or merger of a business. We will never sell your personal information to any other company for marketing purposes.

Retention of your Personal Information

Toro will keep your personal information as long as it is relevant for the above purposes and in accordance with legal requirements. For more information about applicable retention periods please contact legal@toro.com.

Toro's Commitment to Security

Your personal information may be processed in the US or another country which may have less strict data protection laws than your country of residence. Whenever we transfer your information outside of your country of residence, we will take legally required steps to ensure that appropriate safeguards are in place to protect your information and to make sure it is treated securely.

Access and Correction

You may have the right to correct or review your personal data, or object to or restrict the processing of your data. To do so, please contact us by email at legal@toro.com. If you have concerns about the way in which Toro has handled your information, we encourage you to raise this directly with us. Please note that European residents have the right to complain to your Data Protection Authority.

California Proposition 65 Warning Information

What is this warning?

You may see a product for sale that has a warning label like the following:



WARNING: Cancer and Reproductive Harm—www.p65Warnings.ca.gov.

What is Prop 65?

Prop 65 applies to any company operating in California, selling products in California, or manufacturing products that may be sold in or brought into California. It mandates that the Governor of California maintain and publish a list of chemicals known to cause cancer, birth defects, and/or other reproductive harm. The list, which is updated annually, includes hundreds of chemicals found in many everyday items. The purpose of Prop 65 is to inform the public about exposure to these chemicals.

Prop 65 does not ban the sale of products containing these chemicals but instead requires warnings on any product, product packaging, or literature with the product. Moreover, a Prop 65 warning does not mean that a product is in violation of any product safety standards or requirements. In fact, the California government has clarified that a Prop 65 warning "is not the same as a regulatory decision that a product is 'safe' or 'unsafe.'" Many of these chemicals have been used in everyday products for years without documented harm. For more information, go to <https://oag.ca.gov/prop65/faqs-view-all>.

A Prop 65 warning means that a company has either (1) evaluated the exposure and has concluded that it exceeds the "no significant risk level"; or (2) has chosen to provide a warning based on its understanding about the presence of a listed chemical without attempting to evaluate the exposure.

Does this law apply everywhere?

Prop 65 warnings are required under California law only. These warnings are seen throughout California in a wide range of settings, including but not limited to restaurants, grocery stores, hotels, schools, and hospitals, and on a wide variety of products. Additionally, some online and mail order retailers provide Prop 65 warnings on their websites or in catalogs.

How do the California warnings compare to federal limits?

Prop 65 standards are often more stringent than federal and international standards. There are various substances that require a Prop 65 warning at levels that are far lower than federal action limits. For example, the Prop 65 standard for warnings for lead is 0.5 µg/day, which is well below the federal and international standards.

Why don't all similar products carry the warning?

- Products sold in California require Prop 65 labelling while similar products sold elsewhere do not.
- A company involved in a Prop 65 lawsuit reaching a settlement may be required to use Prop 65 warnings for its products, but other companies making similar products may have no such requirement.
- The enforcement of Prop 65 is inconsistent.
- Companies may elect not to provide warnings because they conclude that they are not required to do so under Prop 65; a lack of warnings for a product does not mean that the product is free of listed chemicals at similar levels.

Why does Toro include this warning?

Toro has chosen to provide consumers with as much information as possible so that they can make informed decisions about the products they buy and use. Toro provides warnings in certain cases based on its knowledge of the presence of one or more listed chemicals without evaluating the level of exposure, as not all the listed chemicals provide exposure limit requirements. While the exposure from Toro products may be negligible or well within the "no significant risk" range, out of an abundance of caution, Toro has elected to provide the Prop 65 warnings. Moreover, if Toro does not provide these warnings, it could be sued by the State of California or by private parties seeking to enforce Prop 65 and subject to substantial penalties.



Toro Compact Utility Equipment Warranty

A One-Year Limited Warranty

Compact Utility Equipment
(CUE) Products

Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Compact Utility Equipment ("Product") to be free from defects in materials or workmanship. The following time periods apply from the date of purchase:

Products	Warranty Period
Pro Sneak Compact Utility Loaders, Trenchers, Stump Grinders, and Attachments	1 year or 1000 operating hours, whichever occurs first
Kohler Engines	3 years*
All other Engines	2 years*

Where a warrantable condition exists, we will repair the Product at no cost to you including diagnosis, labor, and parts.

*Some engines used on Toro Products are warranted by the engine manufacturer.

Instructions for Obtaining Warranty Service

If you think that your Toro Product contains a defect in materials or workmanship, follow this procedure:

- Contact any Authorized Toro Compact Utility Equipment (CUE) Service Dealer to arrange service at their dealership. To locate a dealer convenient to you, access our website at www.Toro.com. You may also call our Toro Customer Care Department toll free at the number below.
- Bring the product and your proof of purchase (sales receipt) to the Service Dealer.
- If for any reason you are dissatisfied with the Service Dealer's analysis or with the assistance provided, contact us at:

SWS Customer Care Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196
Toll Free: 888-384-9940

Owner Responsibilities

You must maintain your Toro Product by following the maintenance procedures described in the *Operator's Manual*. Such routine maintenance, whether performed by a dealer or by you, is at your expense. Parts scheduled for replacement as required maintenance ("Maintenance Parts"), are warranted for the period of time up to the scheduled replacement time for that part. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This express warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, modified, or unapproved accessories
- Product failures which result from failure to perform required maintenance and/or adjustments
- Product failures which result from operating the Product in an abusive, negligent or reckless manner
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal product operation include, but are not limited to, belts, wipers, spark plugs, tires, filters, gaskets, wear plates, seals, O-rings, drive chains, clutches.
- Failures caused by outside influence. Items considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved coolants, lubricants, additives, or chemicals, etc.
- Normal "wear and tear" items. Normal "wear and tear" includes, but is not limited to, worn painted surfaces, scratched decals, etc.
- Repairs necessary due to failure to follow recommended fuel procedure (consult *Operator's Manual* for more details)
 - Removing contaminants from the fuel system is not covered
 - Use of old fuel (more than one month old) or fuel which contains more than 10% ethanol or more than 15% MTBE
 - Failure to drain the fuel system prior to any period of non-use over one month
- Any component covered by a separate manufacturer's warranty
- Pickup and delivery charges

General Conditions

Repair by an Authorized Toro Compact Utility Equipment (CUE) Service Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty. Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Except for the engine warranty coverage and the Emissions warranty referenced below, if applicable, there is no other express warranty. The Emissions Control System on your Product may be covered by a separate warranty meeting requirements established by the U.S. Environmental Protection Agency (EPA) or the California Air Resources Board (CARB). The hour limitations set forth above do not apply to the Emissions Control System Warranty. Refer to the California Emission Control Warranty Statement supplied with your Product or contained in the engine manufacturer's documentation for details.

Countries Other than the United States or Canada

Customers who have purchased Toro products outside the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.

Australian Consumer Law: Australian customers will find details relating to the Australian Consumer Law either inside the box or at your local Toro Dealer.



Count on it.