



Form No. 3424-604 Rev D

**Count on it.**

# Parts Catalog

## **TITAN<sup>®</sup> HD 2000 Series Riding Mower**

**with 60in Rear-Discharge Deck**

**Model No. 74463—Serial No. 403351024 and Up**



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                        |    |
|--------------------------------------------------------|----|
| Frame and Roll-Over Protection System Assembly .....   | 4  |
| Roll-Over Protection System Assembly No. 126-9526..... | 6  |
| Hydraulic Assembly .....                               | 8  |
| LH Transaxle Assembly No. 126-2883.....                | 10 |
| RH Transaxle Assembly No. 126-2884 .....               | 12 |
| Discharge Tunnel Assembly No. 126-1985 .....           | 14 |
| Control Console and Guard Assembly .....               | 16 |
| Fuel Tank and Vent Hose System Assembly .....          | 18 |
| Fuel Tank Assembly No. 126-4724 .....                  | 20 |
| Seat Mount Assembly .....                              | 22 |
| Seat Pan and Latch Assembly No. 126-7309 .....         | 24 |
| Seat Assembly No. 136-9014 .....                       | 26 |
| Motion Control Assembly .....                          | 28 |
| LH and RH Motion Control Assembly .....                | 30 |
| Caster Wheel and Fork Assembly .....                   | 32 |
| Fork and Caster Wheel Assembly .....                   | 34 |
| Wheel and Tire Assembly No. 126-7592 .....             | 36 |
| Rear Wheel Assembly .....                              | 38 |
| Electrical System Assembly .....                       | 40 |
| Wire Harness Assembly No. 126-5803.....                | 42 |
| Deck Lift Assembly.....                                | 44 |
| Deck Strut Assembly No. 126-8365 .....                 | 46 |
| Engine, Clutch and Muffler Assembly .....              | 48 |
| Deck Assembly.....                                     | 50 |
| Deck Decal Assembly No. 126-8924 .....                 | 52 |
| Idler Assembly No. 126-0853.....                       | 54 |
| Idler Arm Assembly No. 126-0976 .....                  | 56 |
| Attachments and Accessories .....                      | 58 |

# Frame and Roll-Over Protection System Assembly

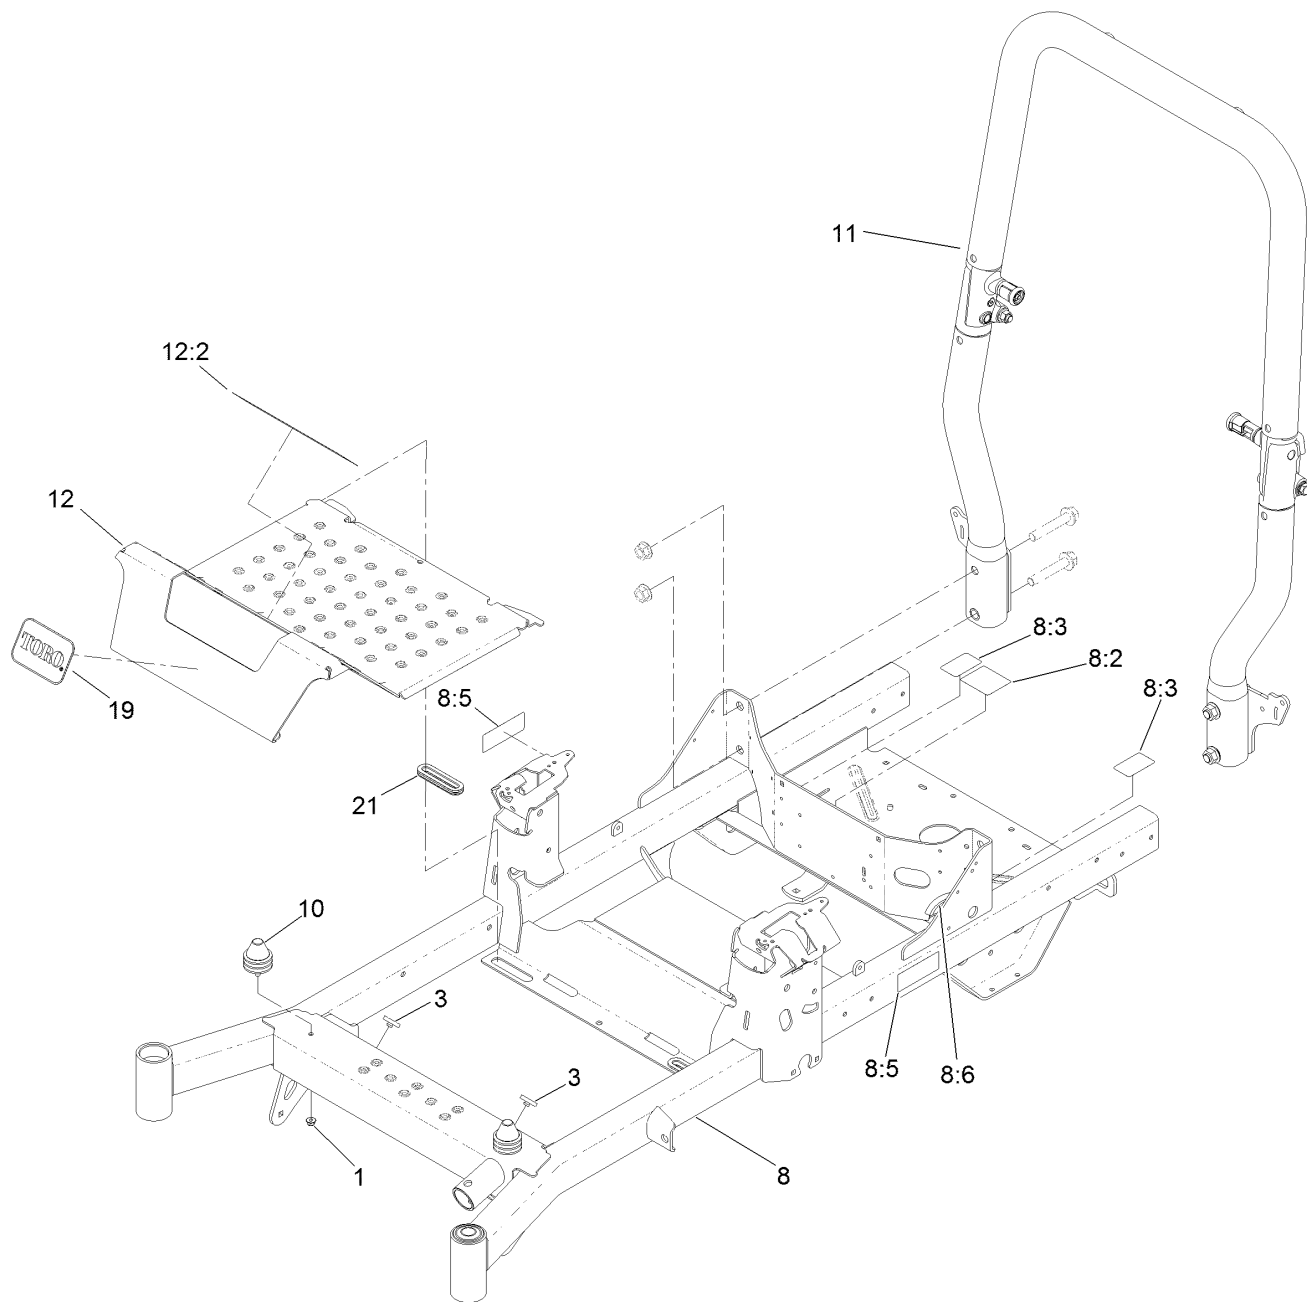


## Frame and Roll-Over Protection System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 104-8300           | 2           | Nut-HF, NI             |
| 3           | 109-9233           | 2           | Bumper-Push-In, Rubber |
| 8           | 126-4712           | 1           | Frame ASM              |
| 8:2         | 109-6014           | 1           | Decal-Routing, Belt    |
| 8:3         | 116-8588           | 2           | Decal-Release, Drive   |
| 8:5         | 126-4363           | 2           | Decal-Warning          |
| 8:6         | 127-6618           | 1           | Strip-Seal             |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 126-5491           | 2           | Isolator           |
| 11          | 126-9526           | 1           | ROPS ASM           |
| 12          | 126-5872           | 1           | Pan-Floor          |
| 12:2        | 126-8383           | 1           | Decal-Danger       |
| 19          | 67-1300            | 1           | Decal              |
| 21          | 126-7065           | 2           | Grommet-Rubber     |

# Roll-Over Protection System Assembly

## No. 126-9526

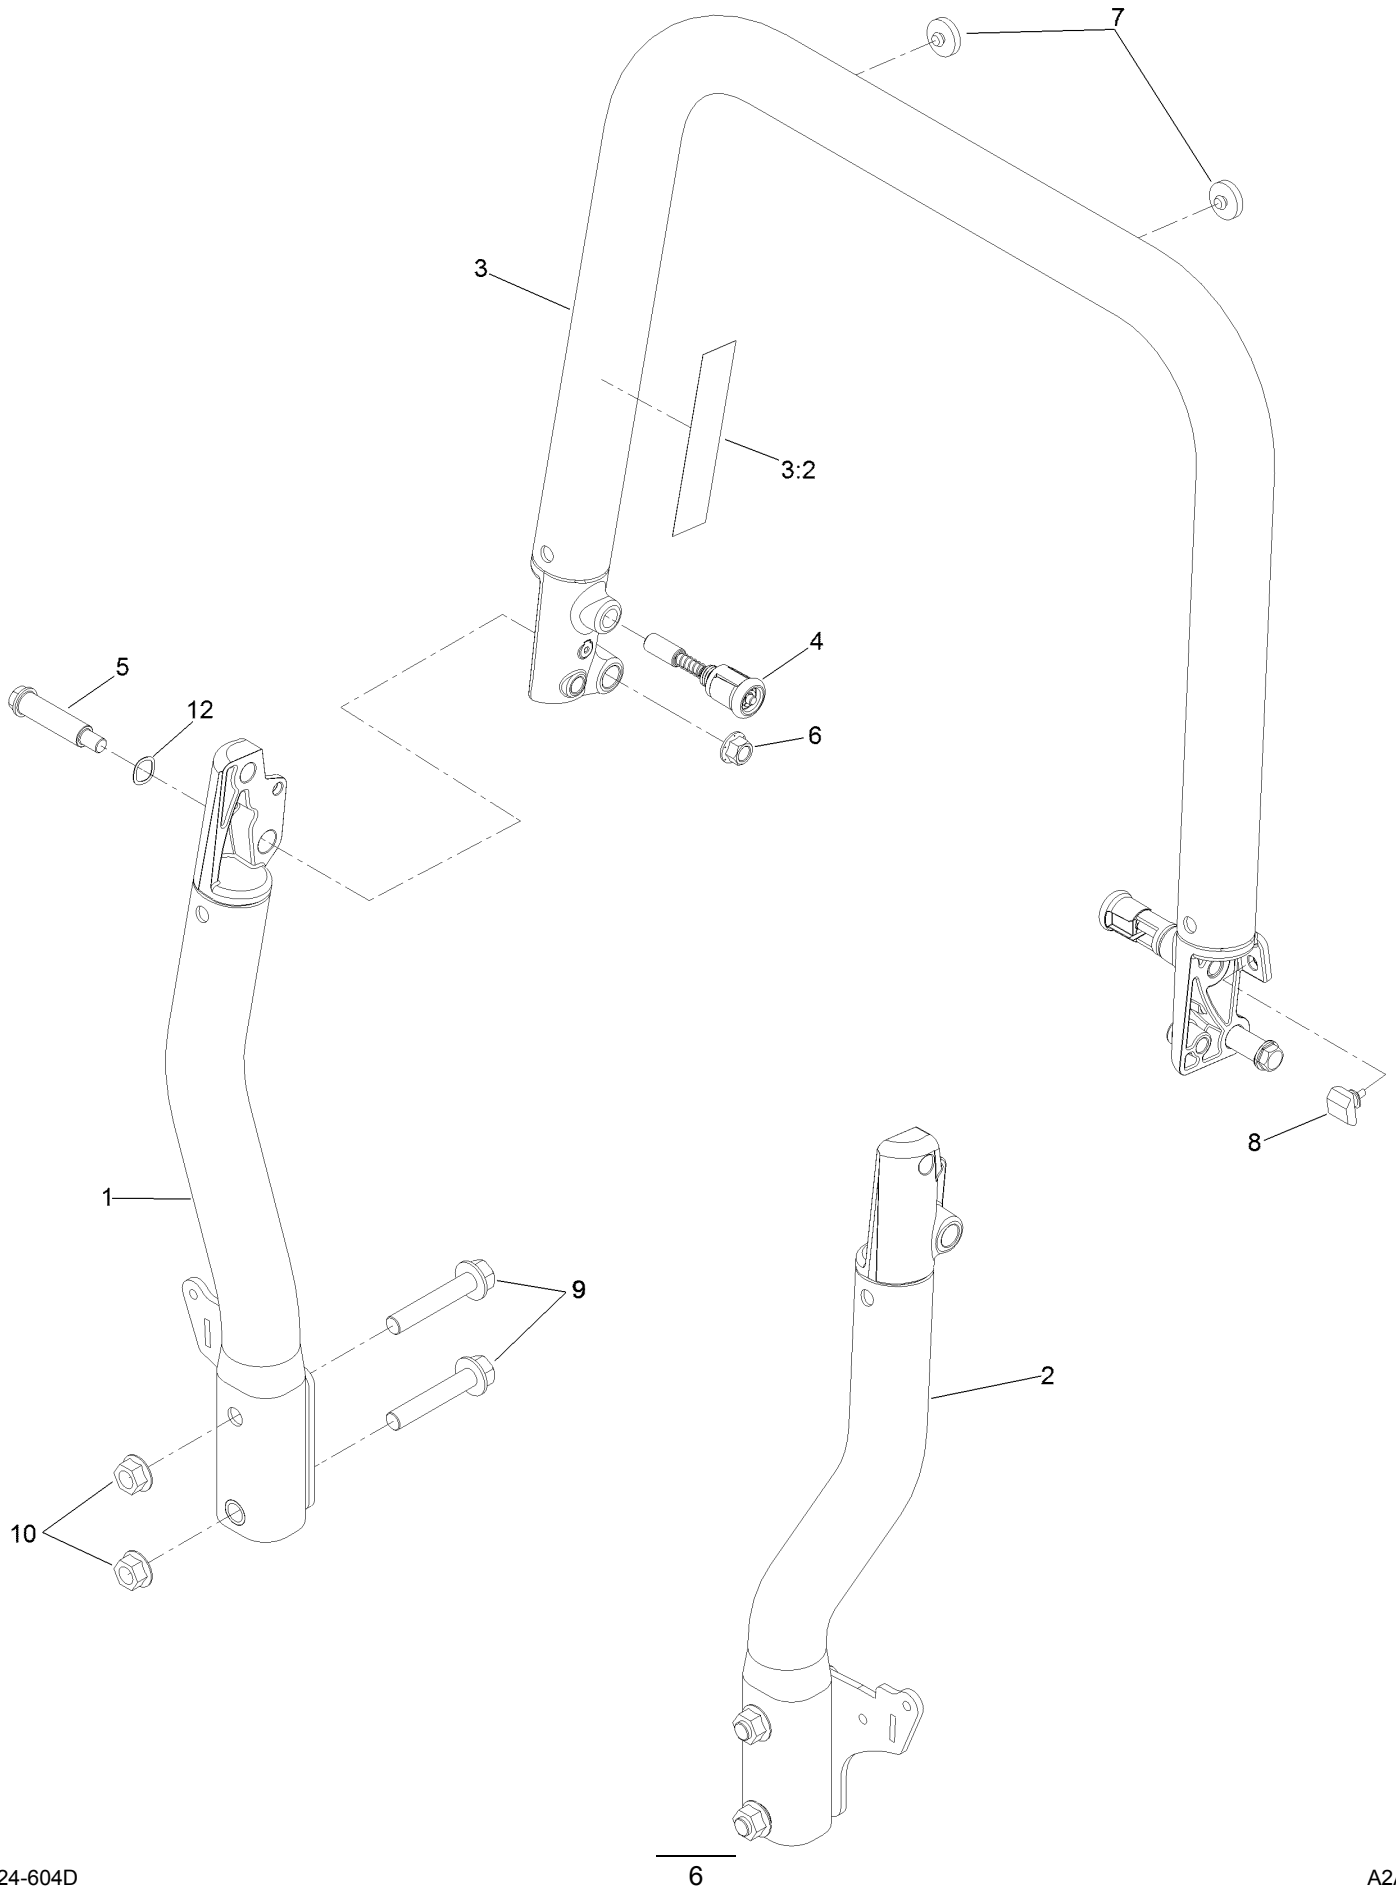


# Roll-Over Protection System Assembly

## No. 126-9526 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           |                    | 1           | Tube-Upright, RH ● | 6           | 99-5107            | 2           | Nut-Lock           |
| 2           |                    | 1           | Tube-Upright, LH ● | 7           | 135-0504           | 2           | Bumper-ROPS        |
| 3           |                    | 1           | Top Tube ASM ●     | 8           | 126-9966           | 2           | Bumper-ROPS        |
| 3:2         | 107-3069           | 1           | Decal-Warning      | 9           | 126-9488           | 4           | Screw-HHF          |
| 4           | 116-0104           | 2           | Pin-Spring         | 10          | 32128-50           | 4           | Nut-Flange         |
| 5           | 126-9209           | 2           | Bolt-Shoulder      | 12          | 119-4164           | 2           | Washer-Wave        |

● Not serviced separately

# Hydraulic Assembly

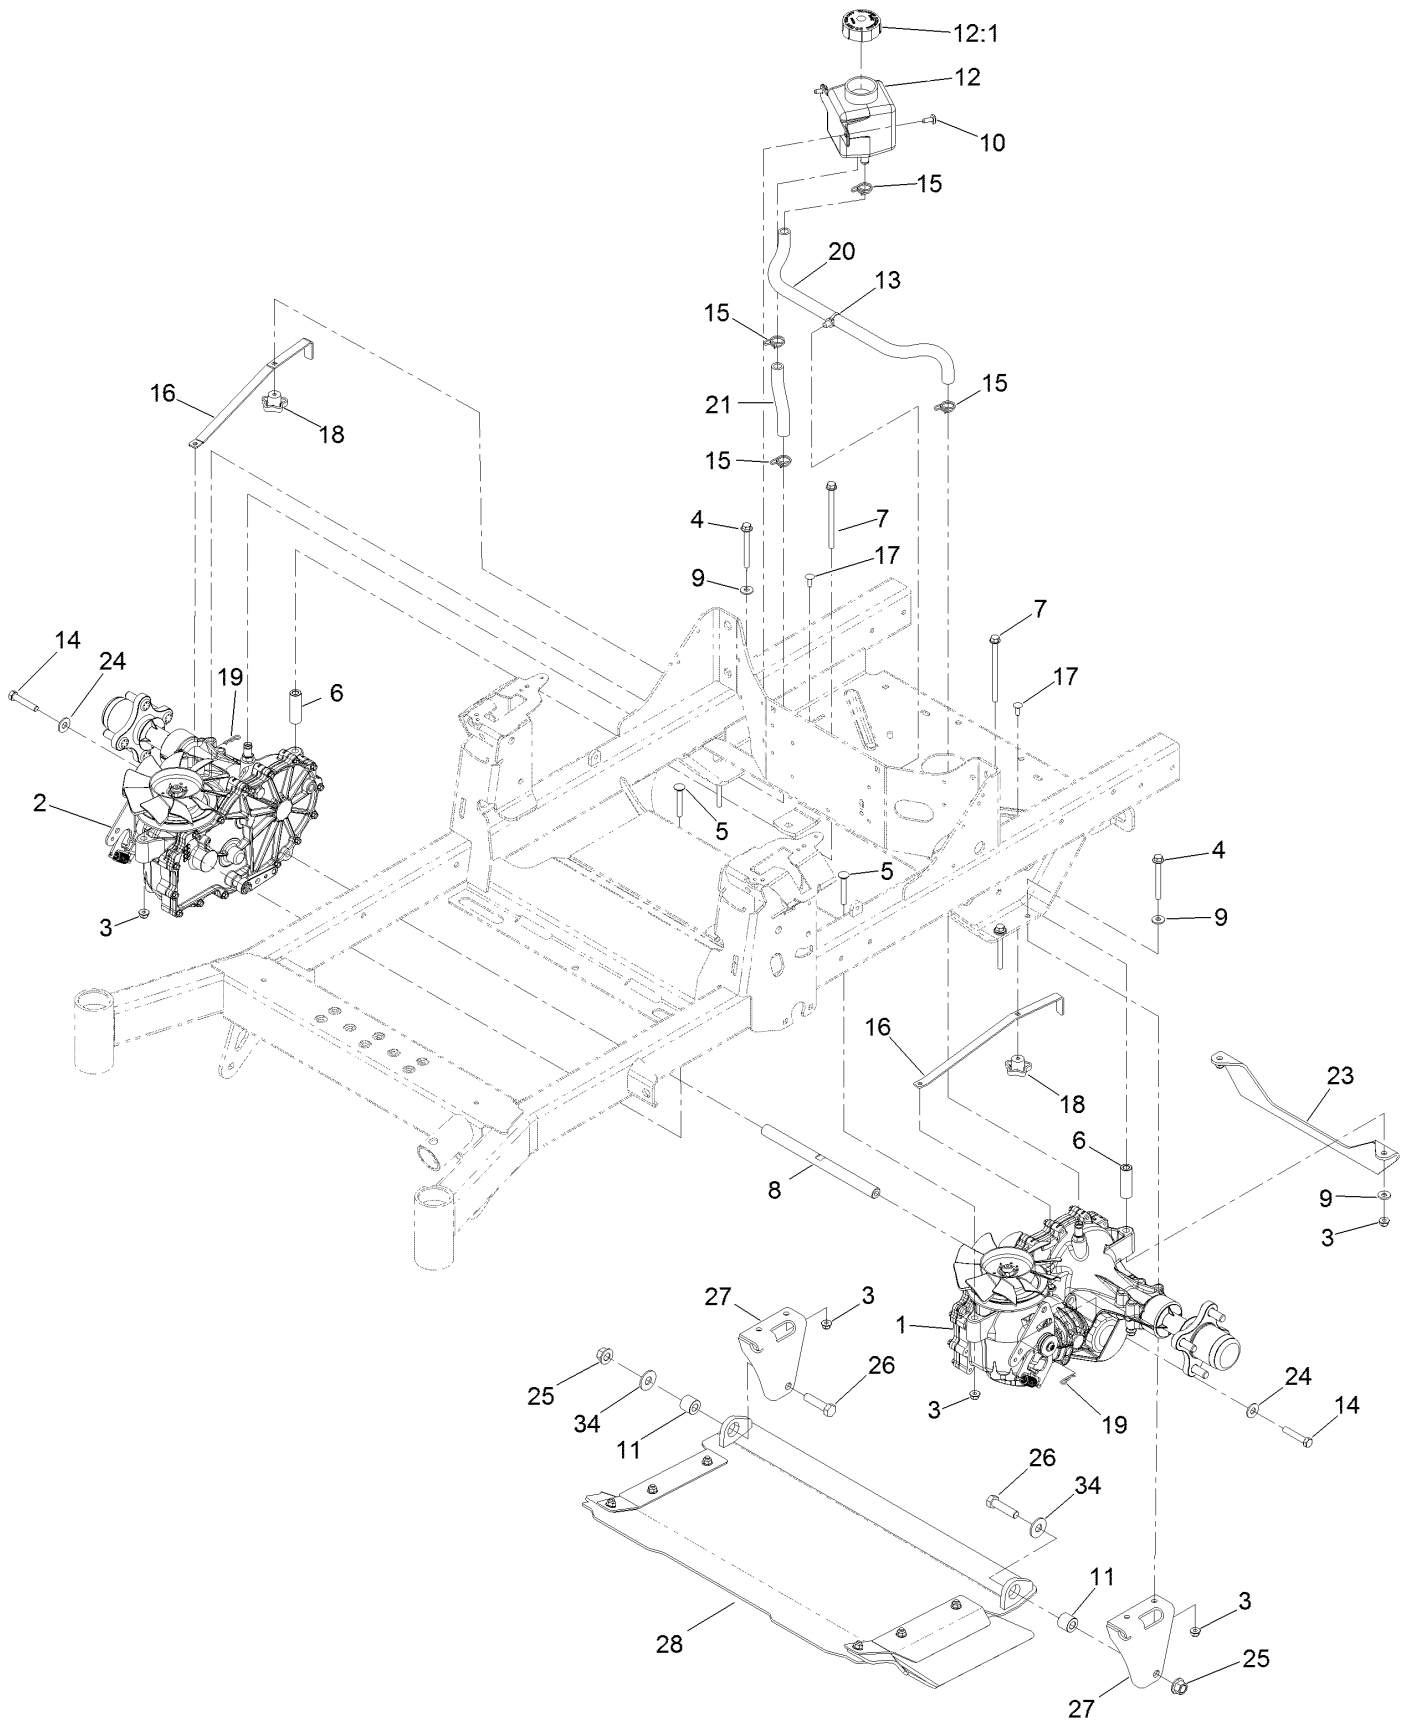


## Hydraulic Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 126-2883           | 1           | LH Transaxle ASM     | 15          | 126-0327           | 4           | Clamp-Hose               |
| 2           | 126-2884           | 1           | RH Transaxle ASM     | 16          | 109-5395           | 2           | Arm-Bypass, Hydro        |
| 3           | 104-8300           | 8           | Nut-HF, NI           | 17          | 3229-1             | 2           | Screw-CARR               |
| 4           | 126-4687           | 4           | Screw-HHF            | 18          | 108-6402           | 2           | Knob-Handle              |
| 5           | 3230-7             | 2           | Bolt-CARR            | 19          | 1-806003           | 2           | Pin-Cotter               |
| 6           | 116-5809           | 2           | Spacer-Hydro         | 20          | 126-5668           | 1           | Hose-Hydraulic           |
| 7           | 126-5896           | 2           | Screw HHF            | 21          | 126-5669           | 1           | Hose-Hydraulic           |
| 8           | 116-6833           | 1           | Shaft-Spacer         | 23          | 126-5672-03        | 1           | Support-Transmission     |
| 9           | 1-303334           | 6           | Washer-Spring        | 24          | 3256-4             | 2           | Washer-Flat              |
| 10          | 126-6266           | 2           | Screw-Tph            | 25          | 99-5107            | 2           | Nut-Lock                 |
| 11          | 126-1705           | 2           | Bushing-Sleeve       | 26          | 325-8              | 2           | Screw-HH                 |
| 12          | 109-2250           | 1           | Tank-HYD             | 27          | 126-1988-03        | 2           | Bracket-Mount, Discharge |
| 12:1        | 109-3320           | 1           | Cap-Reservoir, HYD   | 28          | 126-1985           | 1           | Discharge Tunnel ASM     |
| 13          | 32180-118          | 1           | Clip-Tie             | 34          | 3256-6             | 2           | Washer-Flat              |
| 14          | 94-7972            | 2           | Screw-HH W/Loctite ● |             |                    |             |                          |

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

# LH Transaxle Assembly No. 126-2883

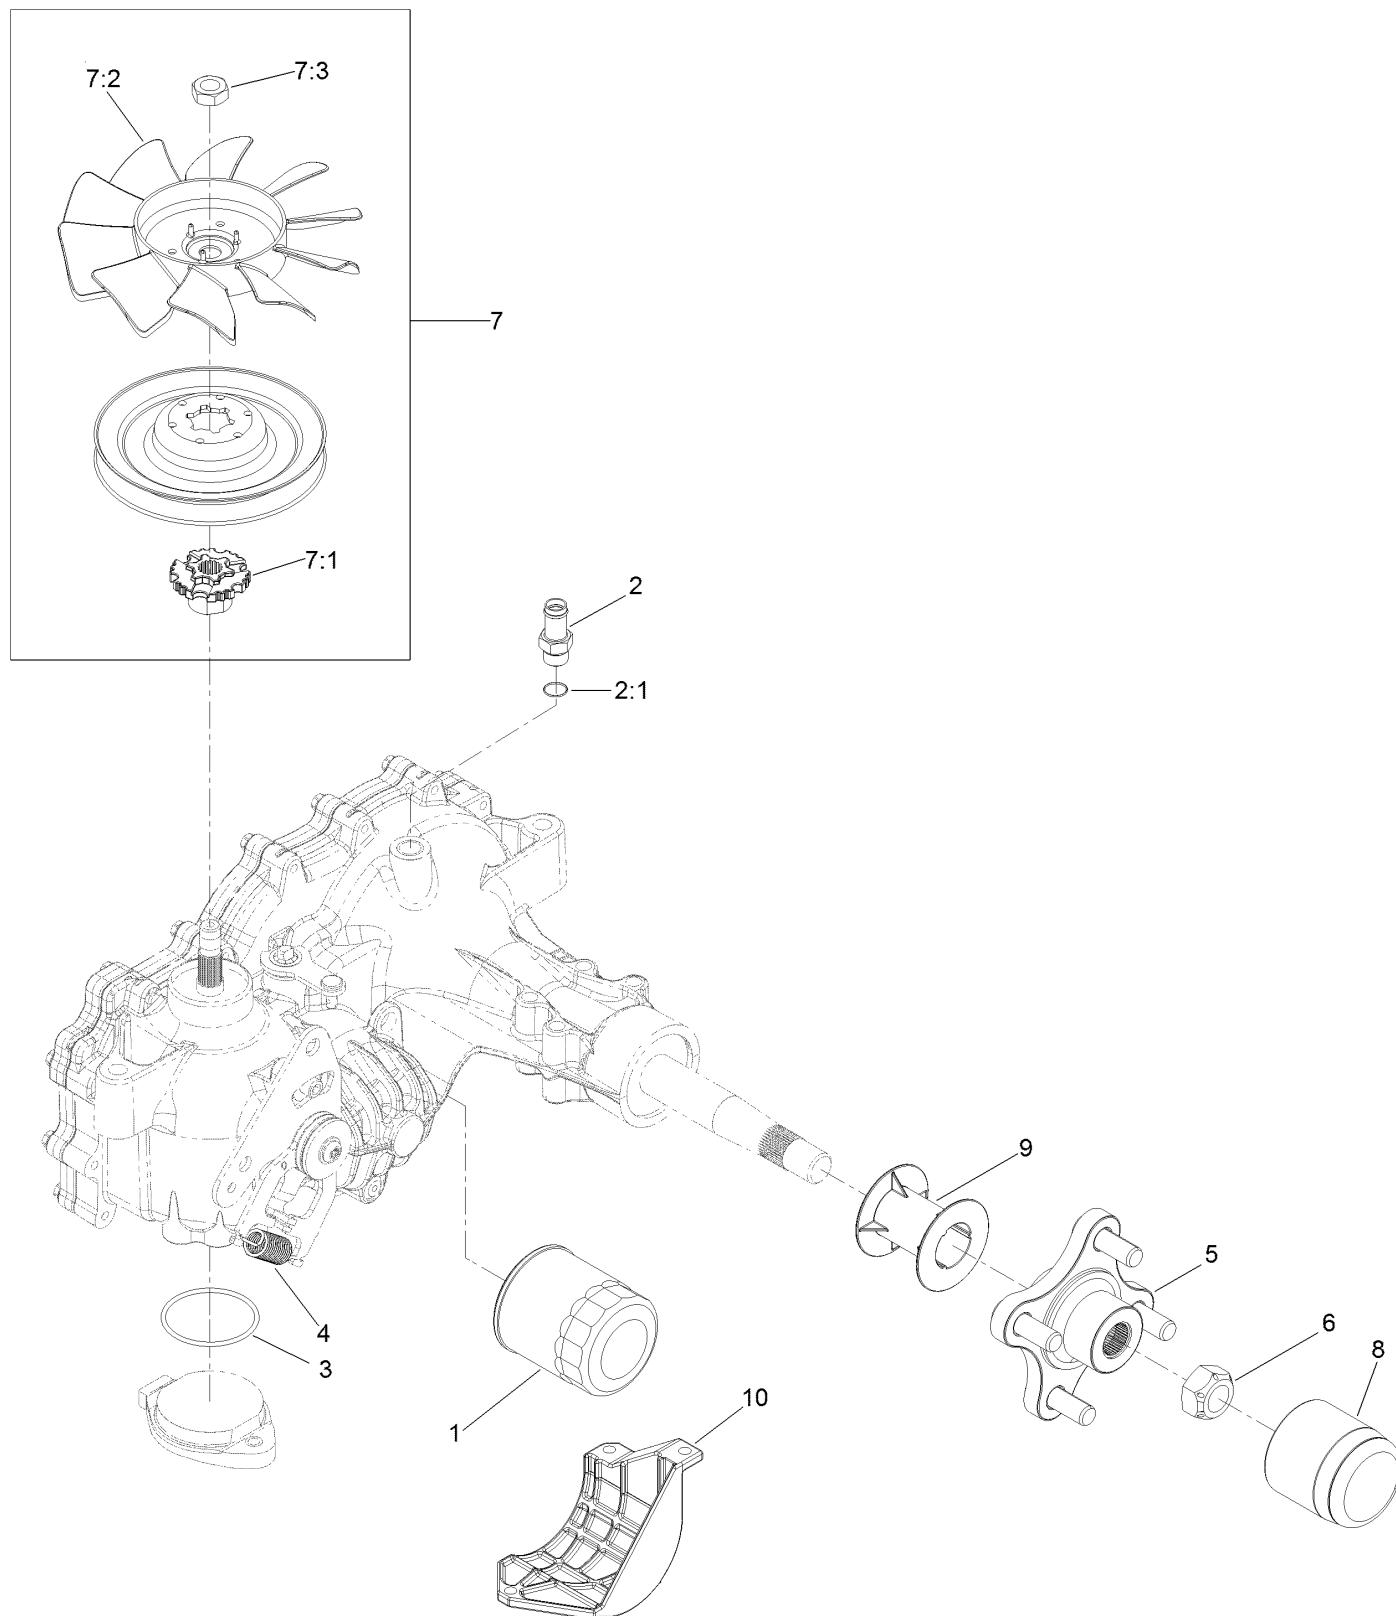


# LH Transaxle Assembly No. 126-2883 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 1           | 109-3321           | 1           | Element-Oil Filter, HYD |
| 2           | 109-3278           | 1           | Adapter-Straight        |
| 2:1         | 237-42             | 1           | O-Ring                  |
| 3           | 109-3540           | 1           | O Ring-Seal             |
| 4           | 109-5592           | 1           | Spring-Extension        |
| 5           | 116-3872           | 1           | Hub-Offset              |
| 6           | 109-3536           | 1           | Nut-Hub                 |
| 7           | 126-8904           | 1           | Fan And Pulley Kit      |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 7:1         | 126-8905           | 1           | Hub-Fan                |
| 7:2         | 126-0226           | 1           | Fan                    |
| 7:3         | 116-9714           | 1           | Nut-HJ                 |
| 8           | 116-6214           | 1           | Cap-Axle, Long         |
| 9           | 116-6213           | 1           | Tube-Axle              |
| 10          | 120-7979           | 1           | Guard-Filter, LH       |
| 99          | 135-3604           | 1           | Brake Shaft Seal Kit ● |
| 99          | 121-3243           | 1           | Seal Kit ●             |

● Not illustrated

# RH Transaxle Assembly No. 126-2884

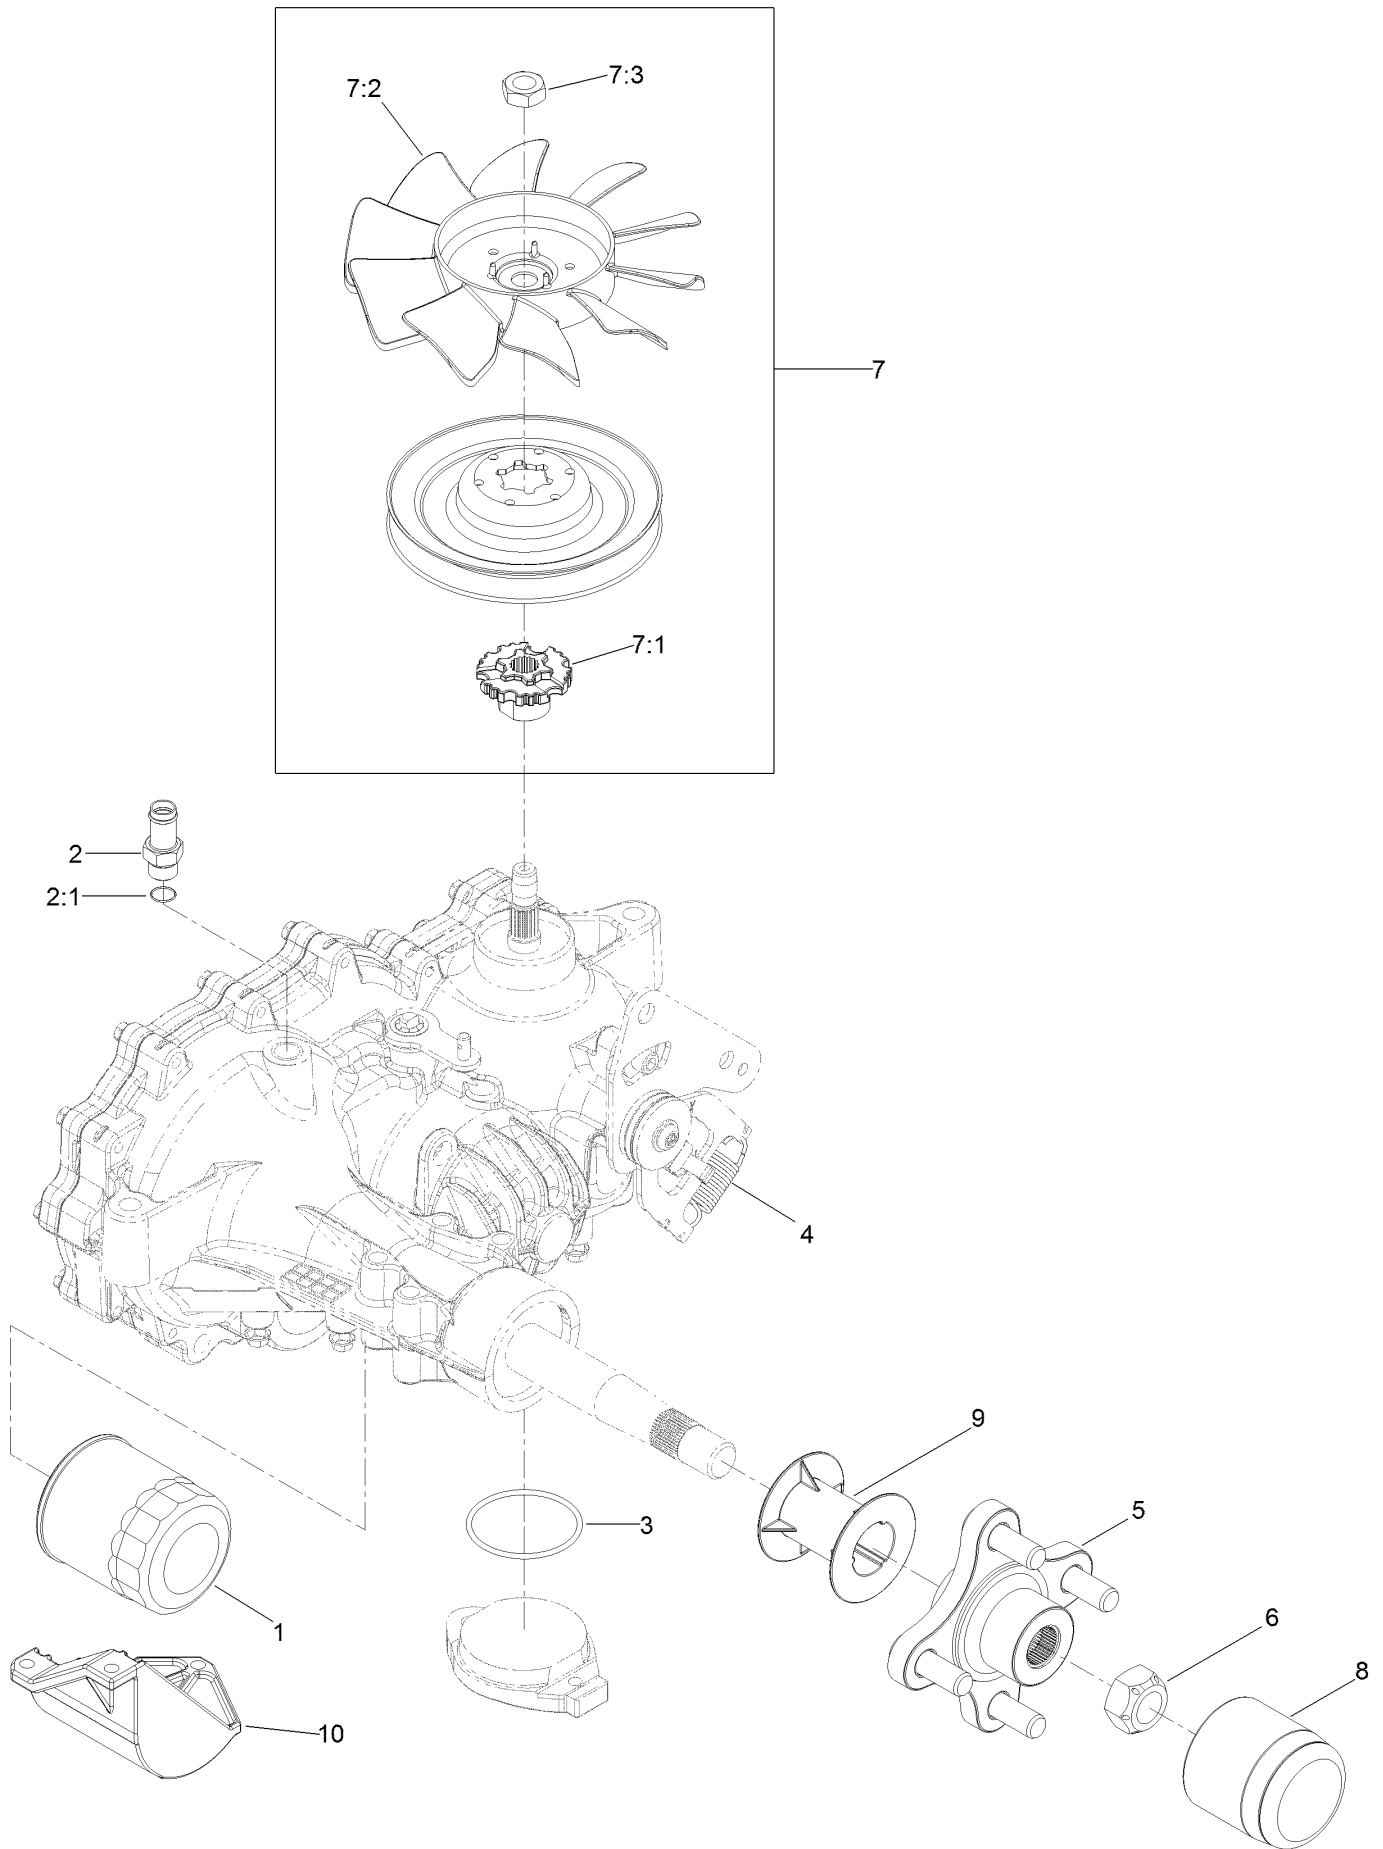


## RH Transaxle Assembly No. 126-2884 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 109-3321           | 1           | Element-Oil Filter, HYD | 7:1         | 126-8905           | 1           | Hub-Fan                |
| 2           | 109-3278           | 1           | Adapter-Straight        | 7:2         | 126-0226           | 1           | Fan                    |
| 2:1         | 237-42             | 1           | O-Ring                  | 7:3         | 116-9714           | 1           | Nut-HJ                 |
| 3           | 109-3540           | 1           | O Ring-Seal             | 8           | 116-6214           | 1           | Cap-Axle, Long         |
| 4           | 109-5592           | 1           | Spring-Extension        | 9           | 116-6213           | 1           | Tube-Axle              |
| 5           | 116-3872           | 1           | Hub-Offset              | 10          | 120-7981           | 1           | Guard-Filter, RH       |
| 6           | 109-3536           | 1           | Nut-Hub                 | 11          | 121-3243           | 1           | Seal Kit ●             |
| 7           | 126-8904           | 1           | Fan And Pulley Kit      | 99          | 135-3604           | 1           | Brake Shaft Seal Kit ● |

● Not illustrated

# Discharge Tunnel Assembly No. 126-1985

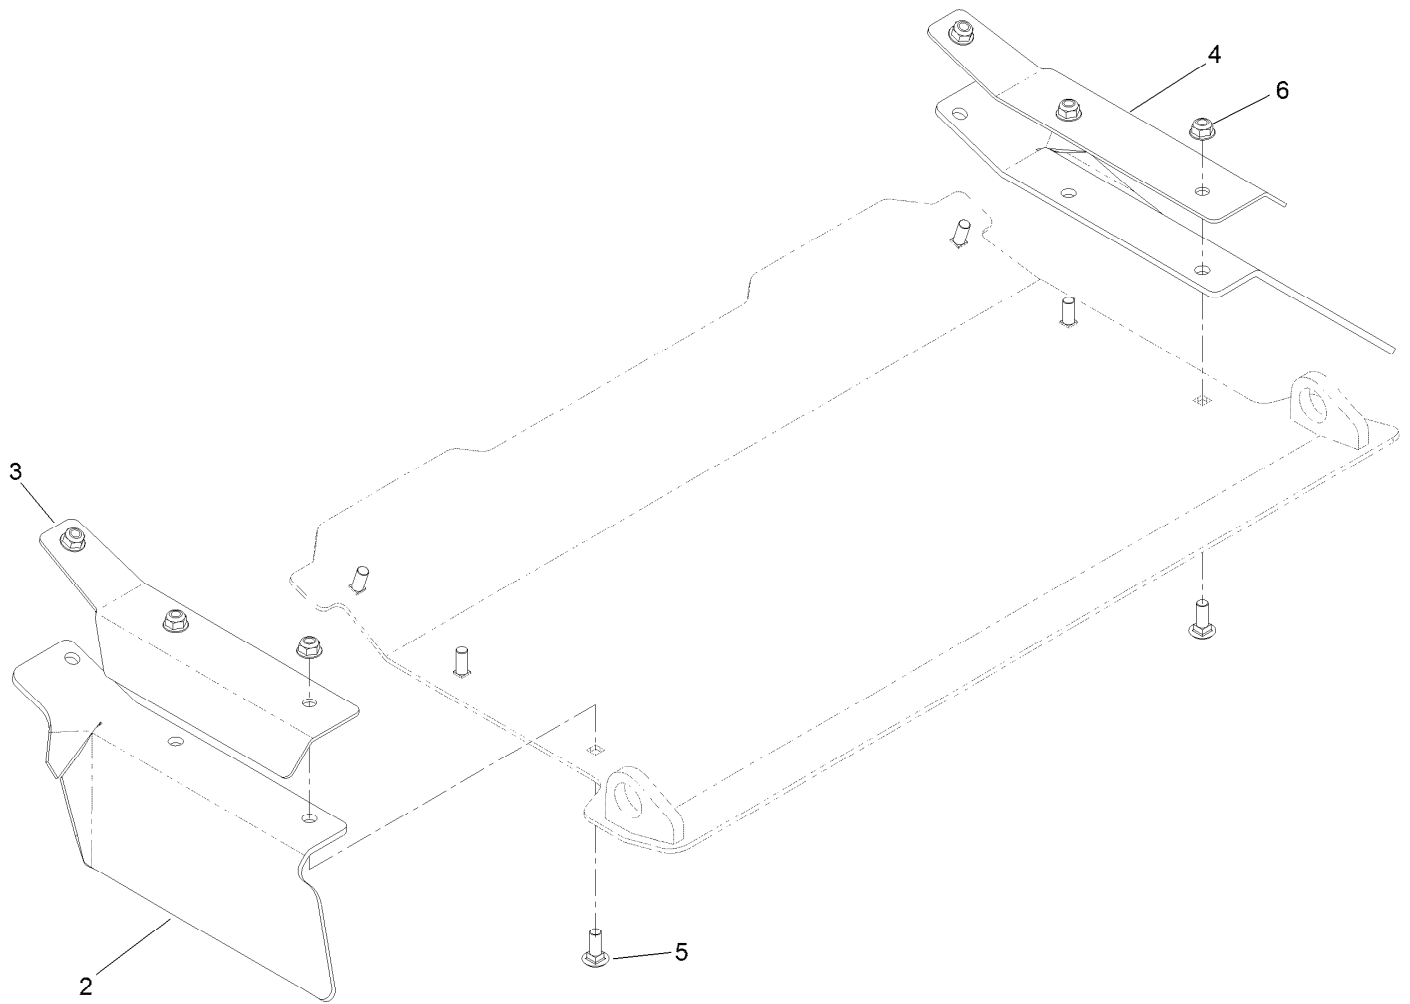


## Discharge Tunnel Assembly No. 126-1985 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 125-9368           | 2           | Flap-Rubber        |
| 3           | 125-9366-03        | 1           | Bracket-Flap, LH   |
| 4           | 125-9367-03        | 1           | Bracket-Flap, RH   |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 3230-16            | 6           | Screw-CARR         |
| 6           | 104-8300           | 6           | Nut-HF, NI         |


# Control Console and Guard Assembly

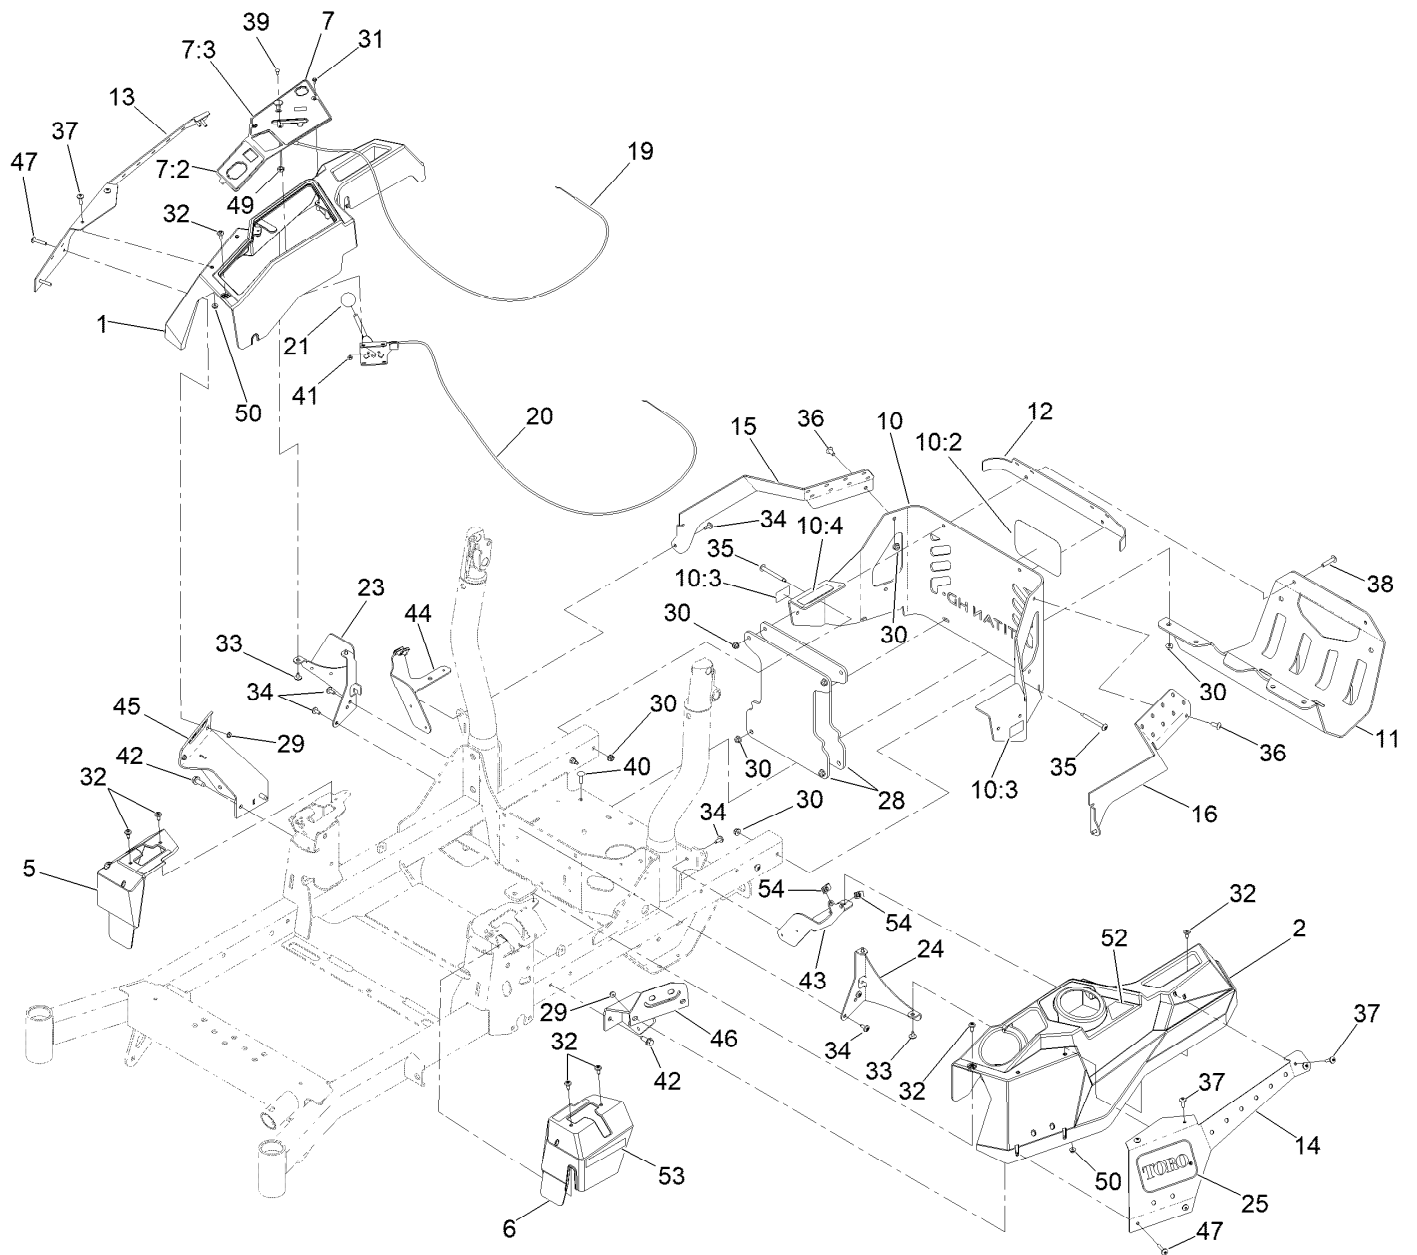

## Control Console and Guard Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 126-4983           | 1           | Console-RH                 | 29          | 104-7201           | 4           | Nut-HF, NI                 |
| 2           | 126-4984           | 1           | Console-LH                 | 30          | 104-8300           | 12          | Nut-HF, NI                 |
| 5           | 126-7371           | 1           | Cover-Control, Motion (RH) | 31          | 117-5036           | 2           | Screw-Plastic, HWH         |
| 6           | 126-7372           | 1           | Cover-Control, Motion (LH) | 32          | 120-7950           | 6           | Screw-Torx                 |
| 7           | 136-1673           | 1           | Control Panel ASM          | 33          | 126-5544           | 4           | Screw-Torx                 |
| 7:2         | 126-9115           | 1           | Decal-Panel, Control       | 34          | 126-6266           | 8           | Screw-Tph                  |
| 7:3         | 136-1305           | 1           | Decal-Panel, Control       | 35          | 126-6267           | 4           | Screw-TTH                  |
| 10          | 126-7803           | 1           | Rear Guard ASM             | 36          | 126-6268           | 2           | Screw-TTH                  |
| 10:2        | 99-4693            | 1           | Decal                      | 37          | 126-6269           | 8           | Screw-Truss                |
| 10:3        | 106-5517           | 2           | Decal-Warning              | 38          | 126-7439           | 4           | Screw-Torx                 |
| 10:4        | 133-8062           | 1           | Decal-Arrestor, Spark      | 39          | 1-807513           | 2           | Bolt-CARR                  |
| 11          | 126-7664-03        | 1           | Guard-Muffler              | 40          | 3230-22            | 2           | Screw-CARR                 |
| 12          | 126-6260-01        | 1           | Trim-Upper, Rear           | 41          | 3296-2             | 2           | Nut-Lock, NI               |
| 13          | 136-1745-01        | 1           | Cover-Pod, RH              | 42          | 126-1696           | 4           | Screw-HWHTF                |
| 14          | 136-1746-01        | 1           | Cover-LH                   | 43          | 126-9808-03        | 1           | Bracket-Support, Left Pod  |
| 15          | 126-9023-01        | 1           | Bracket-Guard, RH          | 44          | 126-9809-03        | 1           | Bracket-Support, Right Pod |
| 16          | 126-9022-01        | 1           | Bracket-Guard, LH          | 45          | 136-9030-01        | 1           | Bracket-Support, Pod (RH)  |
| 19          | 126-6947           | 1           | Cable-Control, Choke       | 46          | 136-9029-01        | 1           | Bracket-Support, Pod (LH)  |
| 20          | 126-6946           | 1           | Cable-Control, Throttle    | 47          | 126-8232           | 4           | Screw-Truss Hex Skt        |
| 21          | 1-603175           | 1           | Knob-Ball                  | 49          | 3220-3             | 1           | Nut-HJ                     |
| 23          | 126-9945           | 1           | Support-Console, RH        | 50          | 32149-2            | 4           | Nut-Keps                   |
| 24          | 126-5532-03        | 1           | Bracket-Console, LH        | 52          | 126-9939           | 1           | Decal-Fill, Fuel           |
| 25          | 68-3640            | 2           | Decal                      | 53          | 126-9299           | 2           | Decal                      |
| 28          | 126-9165-01        | 2           | Weight-Rear                | 54          | 126-3739           | 4           | Nut-Retainer               |


# Fuel Tank and Vent Hose System Assembly

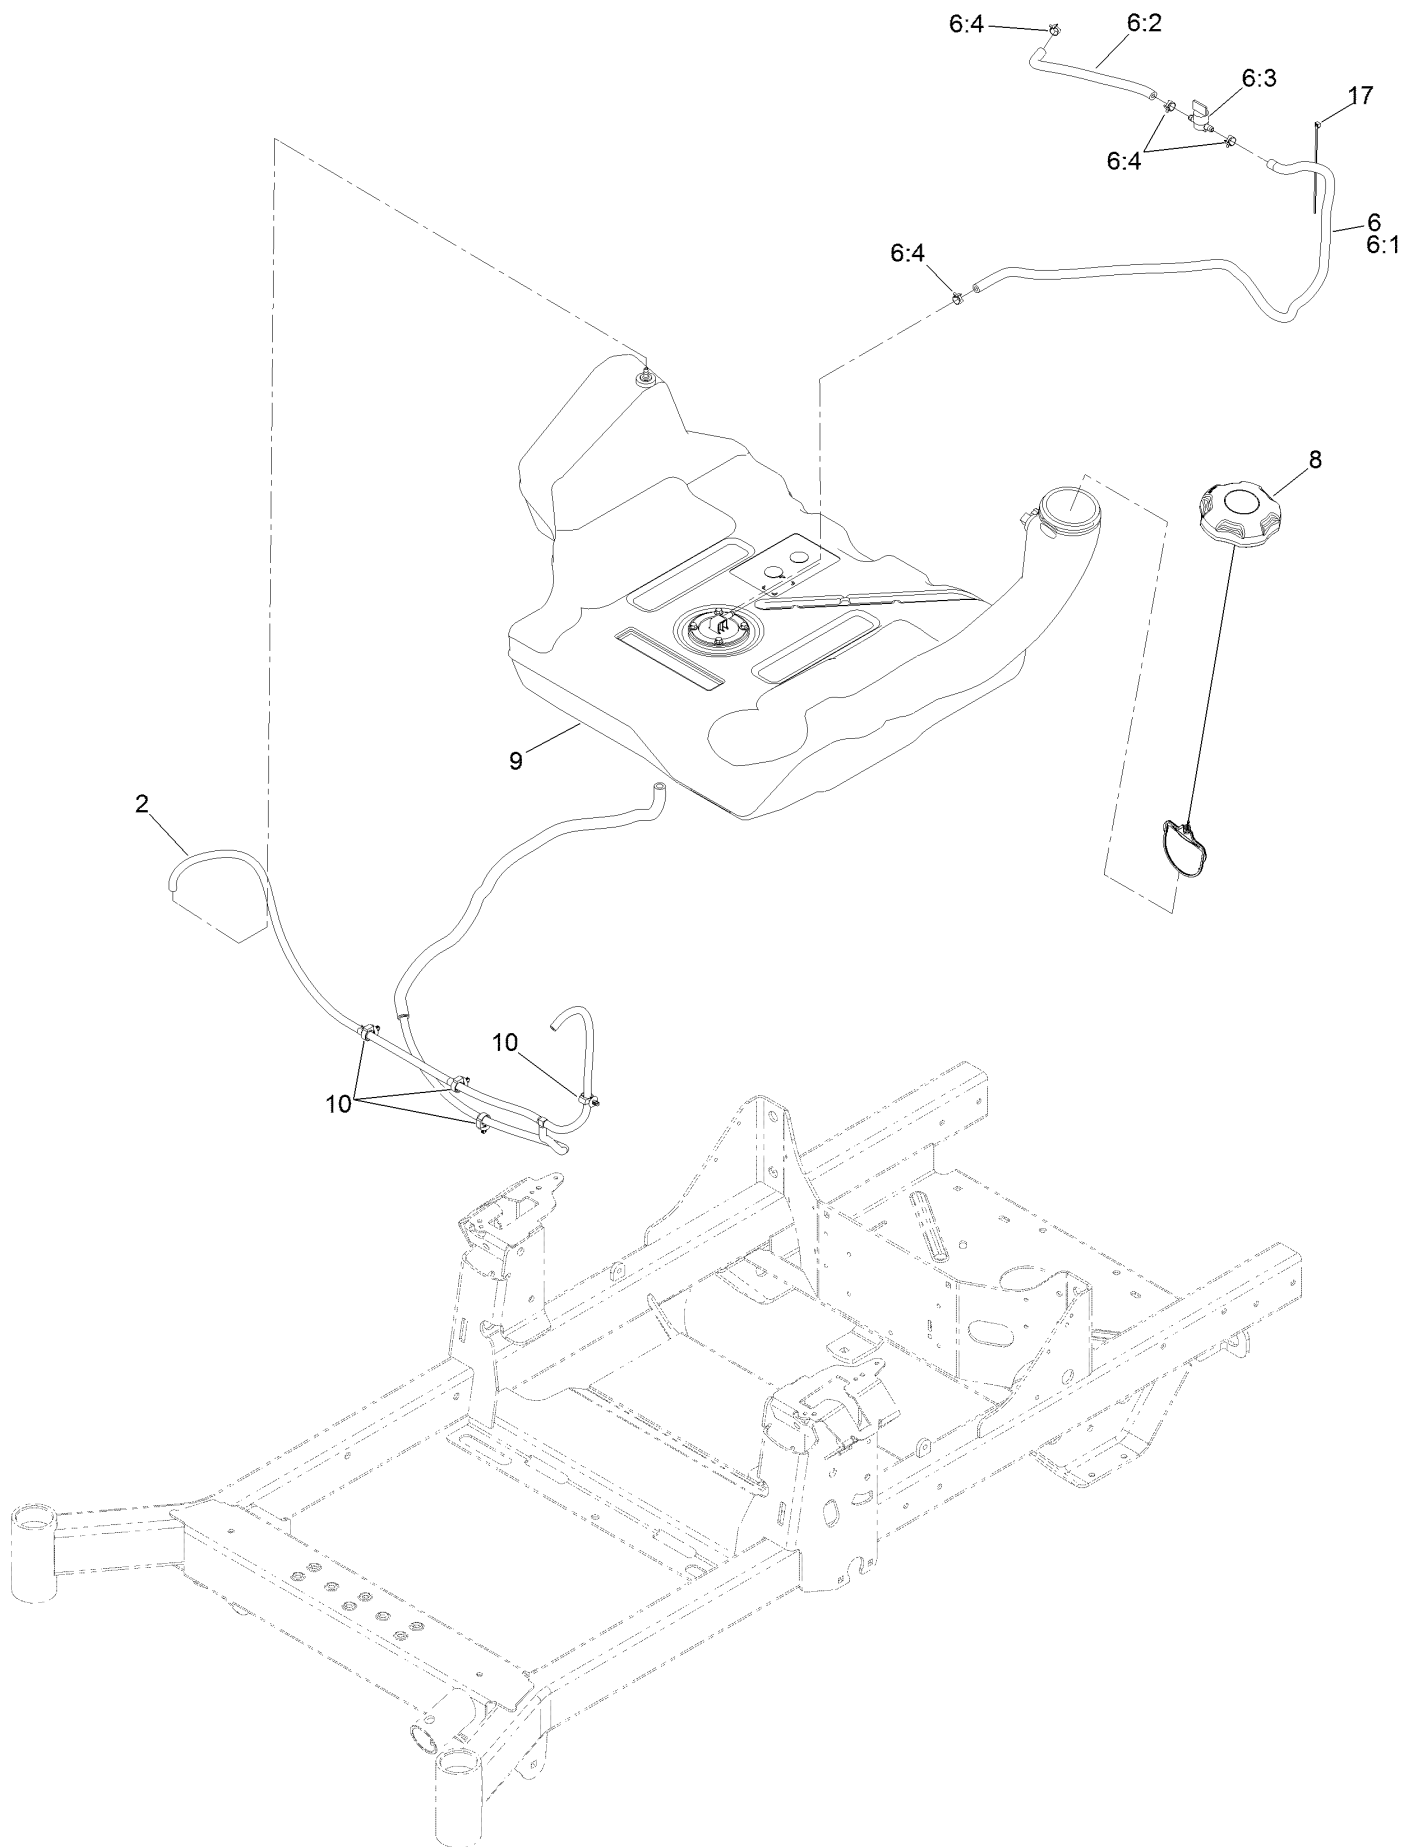

## Fuel Tank and Vent Hose System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------|
| 2           | 126-8735           | 1           | Hose-Vent          | 6:4         | 2412-98            | 4           | Clamp-Hose           |
| 6           | 126-8739           | 1           | Fuel Hose ASM      | 8           | 135-4801           | 1           | Cap-Fuel, Ratcheting |
| 6:1         | 110-5702           | 1           | Hose-Fuel          | 9           | 126-4724           | 1           | Tank-Fuel            |
| 6:2         | 109-0282           | 1           | Hose-Fuel          | 10          | 126-5523           | 4           | Clip                 |
| 6:3         | 1-603770           | 1           | Valve-Fuel         | 17          | 1-303287           | 1           | Tie-Cable            |

# Fuel Tank Assembly No. 126-4724

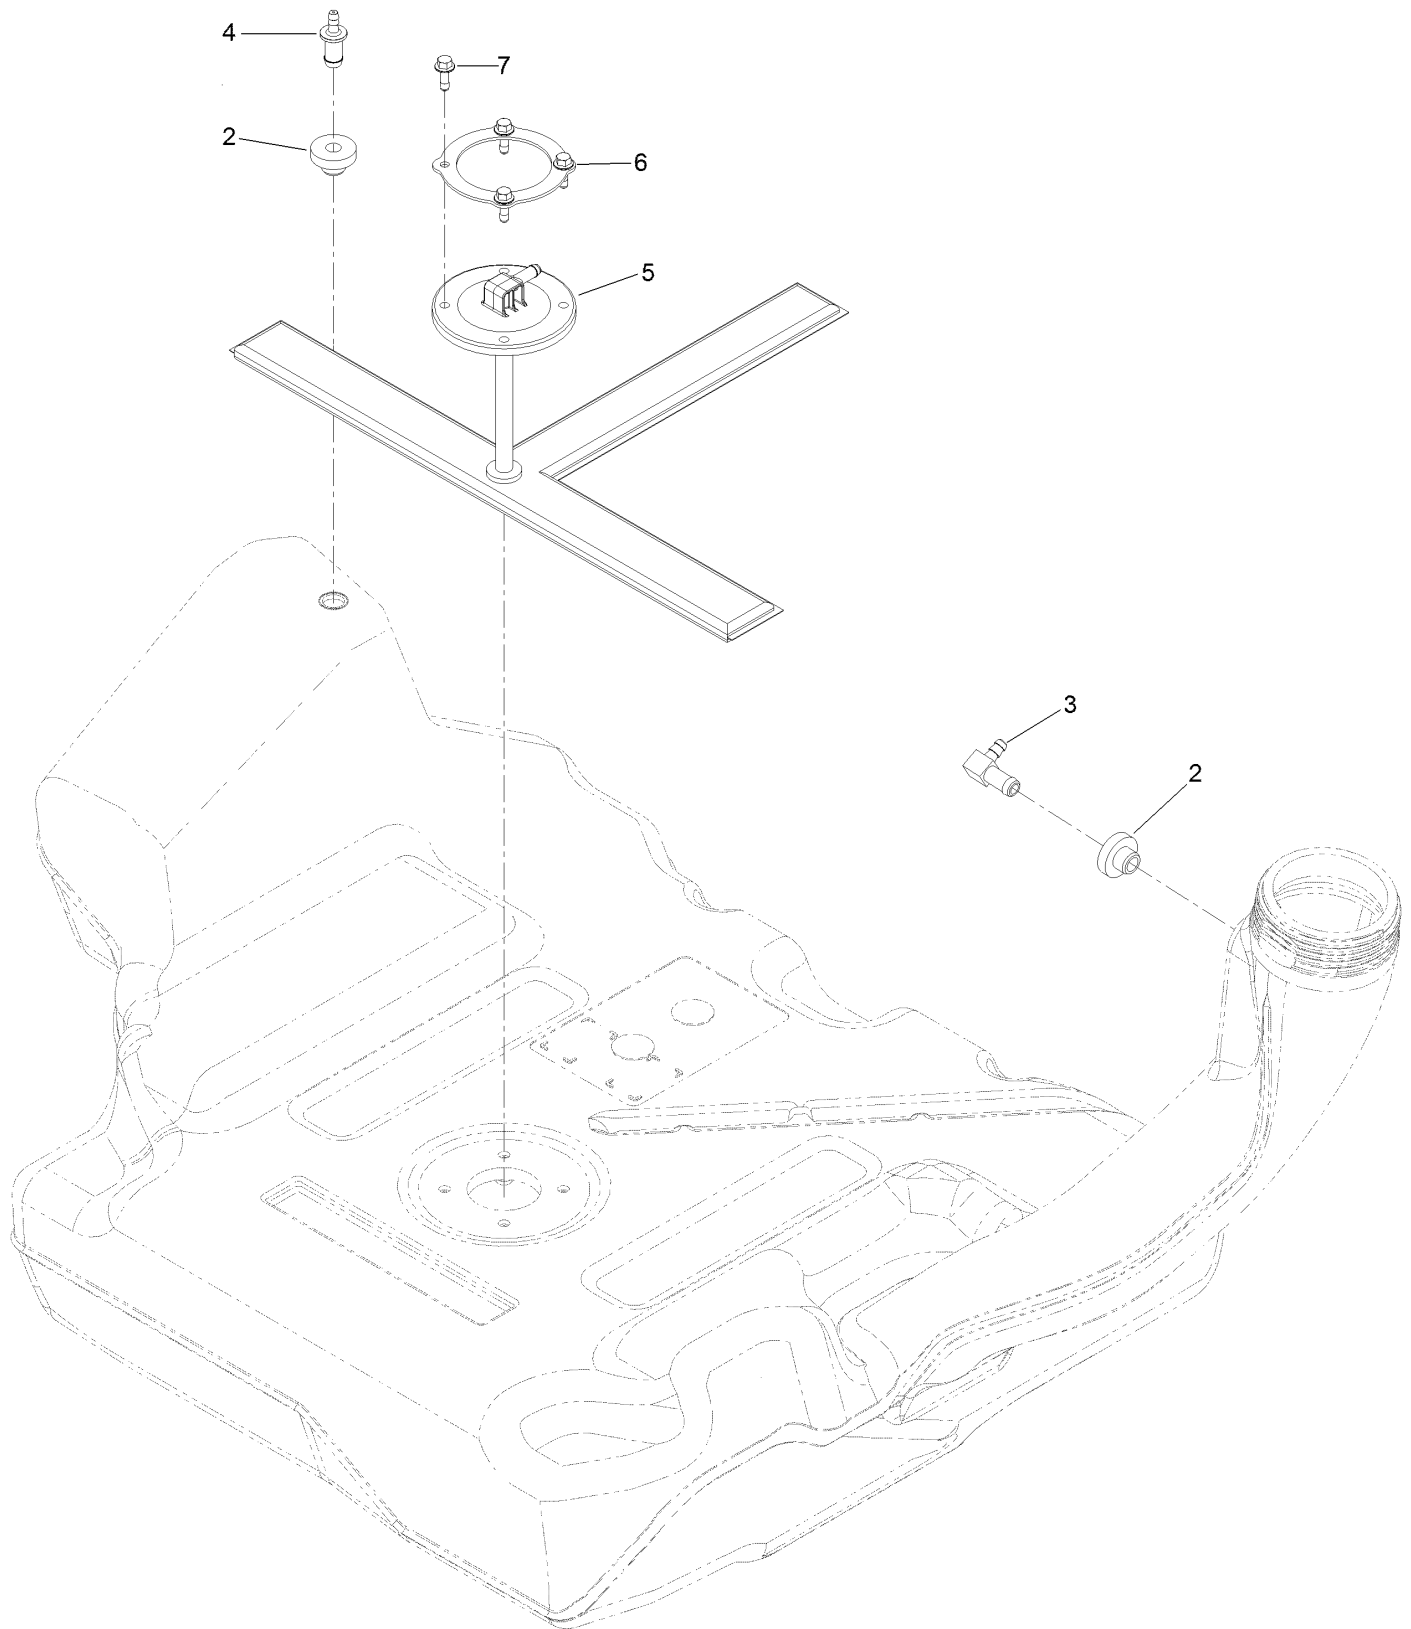


## Fuel Tank Assembly No. 126-4724 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|---------------------------|
| 2           | 46-6560            | 2           | Bushing                   |
| 3           | 126-9057           | 1           | Fitting-90 DEG            |
| 4           | 116-4630           | 1           | Fitting-Orifice, Straight |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 126-5528           | 1           | Pickup-Fuel        |
| 6           | 126-5527           | 1           | Ring-Retainer      |
| 7           | 126-5525           | 4           | Bolt               |


# Seat Mount Assembly

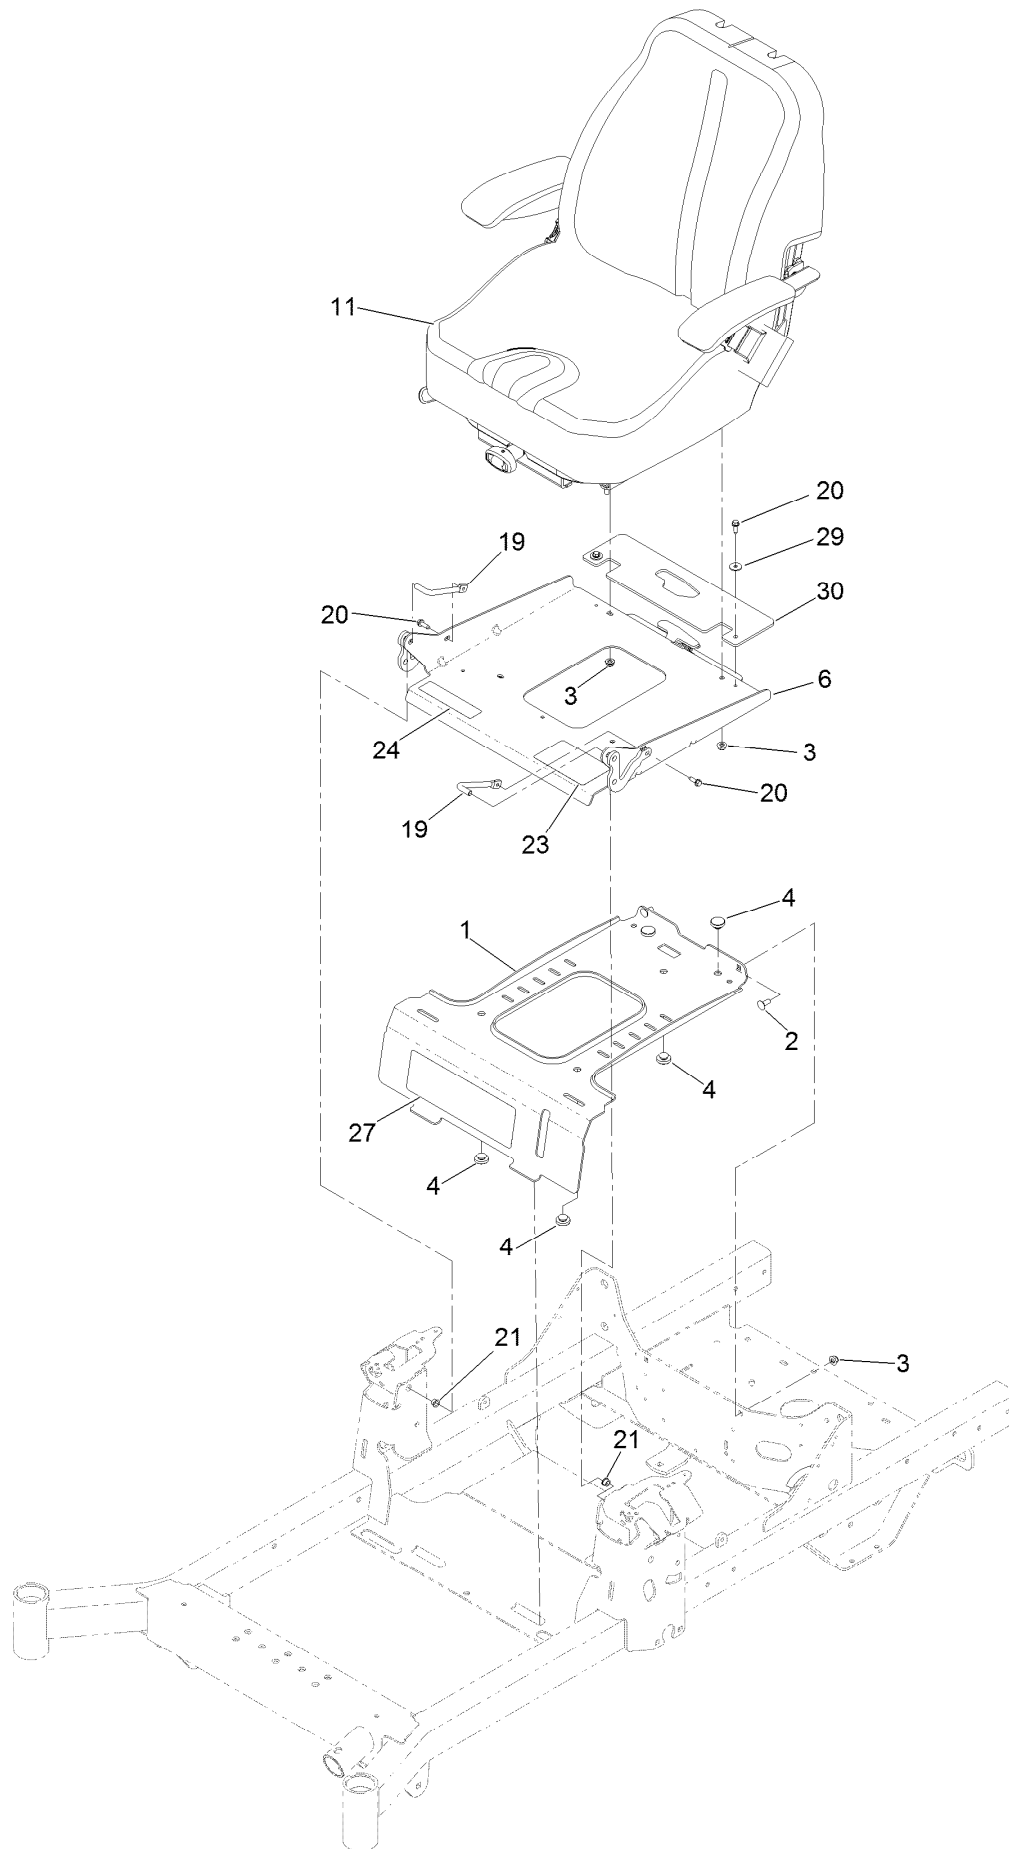

## Seat Mount Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 126-4082-03        | 1           | Plate-Retainer, Tank   | 20          | 32144-44           | 4           | Screw-HWH, Thread Roll |
| 2           | 3230-23            | 2           | Bolt-CARR              | 21          | 1-603735           | 2           | Bushing-Flanged        |
| 3           | 104-8300           | 6           | Nut-HF, NI             | 23          | 126-8151           | 1           | Decal-Aid, Service     |
| 4           | 135-0505           | 5           | Bumper-Seat            | 24          | 126-8161           | 1           | Decal-Latch, Seat      |
| 6           | 126-7309           | 1           | Seat Pan And Latch ASM | 27          | 126-9273           | 1           | Decal                  |
| 11          | 136-9014           | 1           | Seat ASM               | 29          | 3256-67            | 2           | Washer                 |
| 19          | 126-5914           | 2           | Pin-Pivot, Seat        | 30          | 135-0214           | 1           | Guard-Seat, Rubber     |

**Seat Pan and Latch Assembly No. 126-7309**

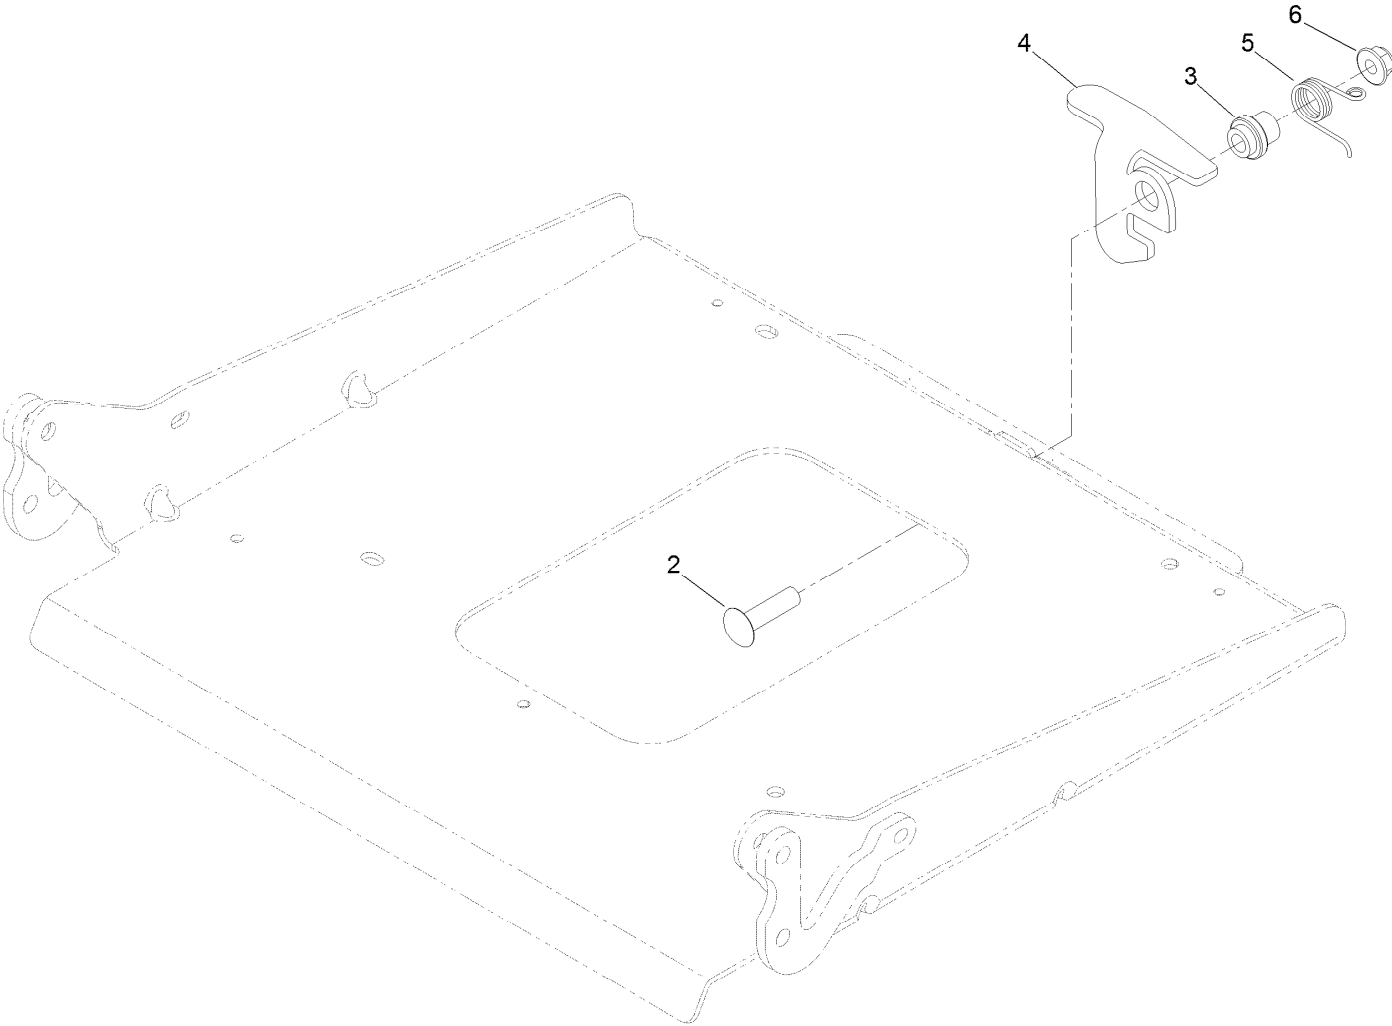


## Seat Pan and Latch Assembly No. 126-7309 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 2           | 3231-26            | 1           | Screw-CARR          |
| 3           | 107-0075           | 1           | Bushing-Latch, Seat |
| 4           | 126-6739           | 1           | Latch-Catch, Single |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 5           | 126-8923           | 1           | Spring-Torsion, Latch |
| 6           | 104-8301           | 1           | Nut-HF, NI            |

# Seat Assembly No. 136-9014

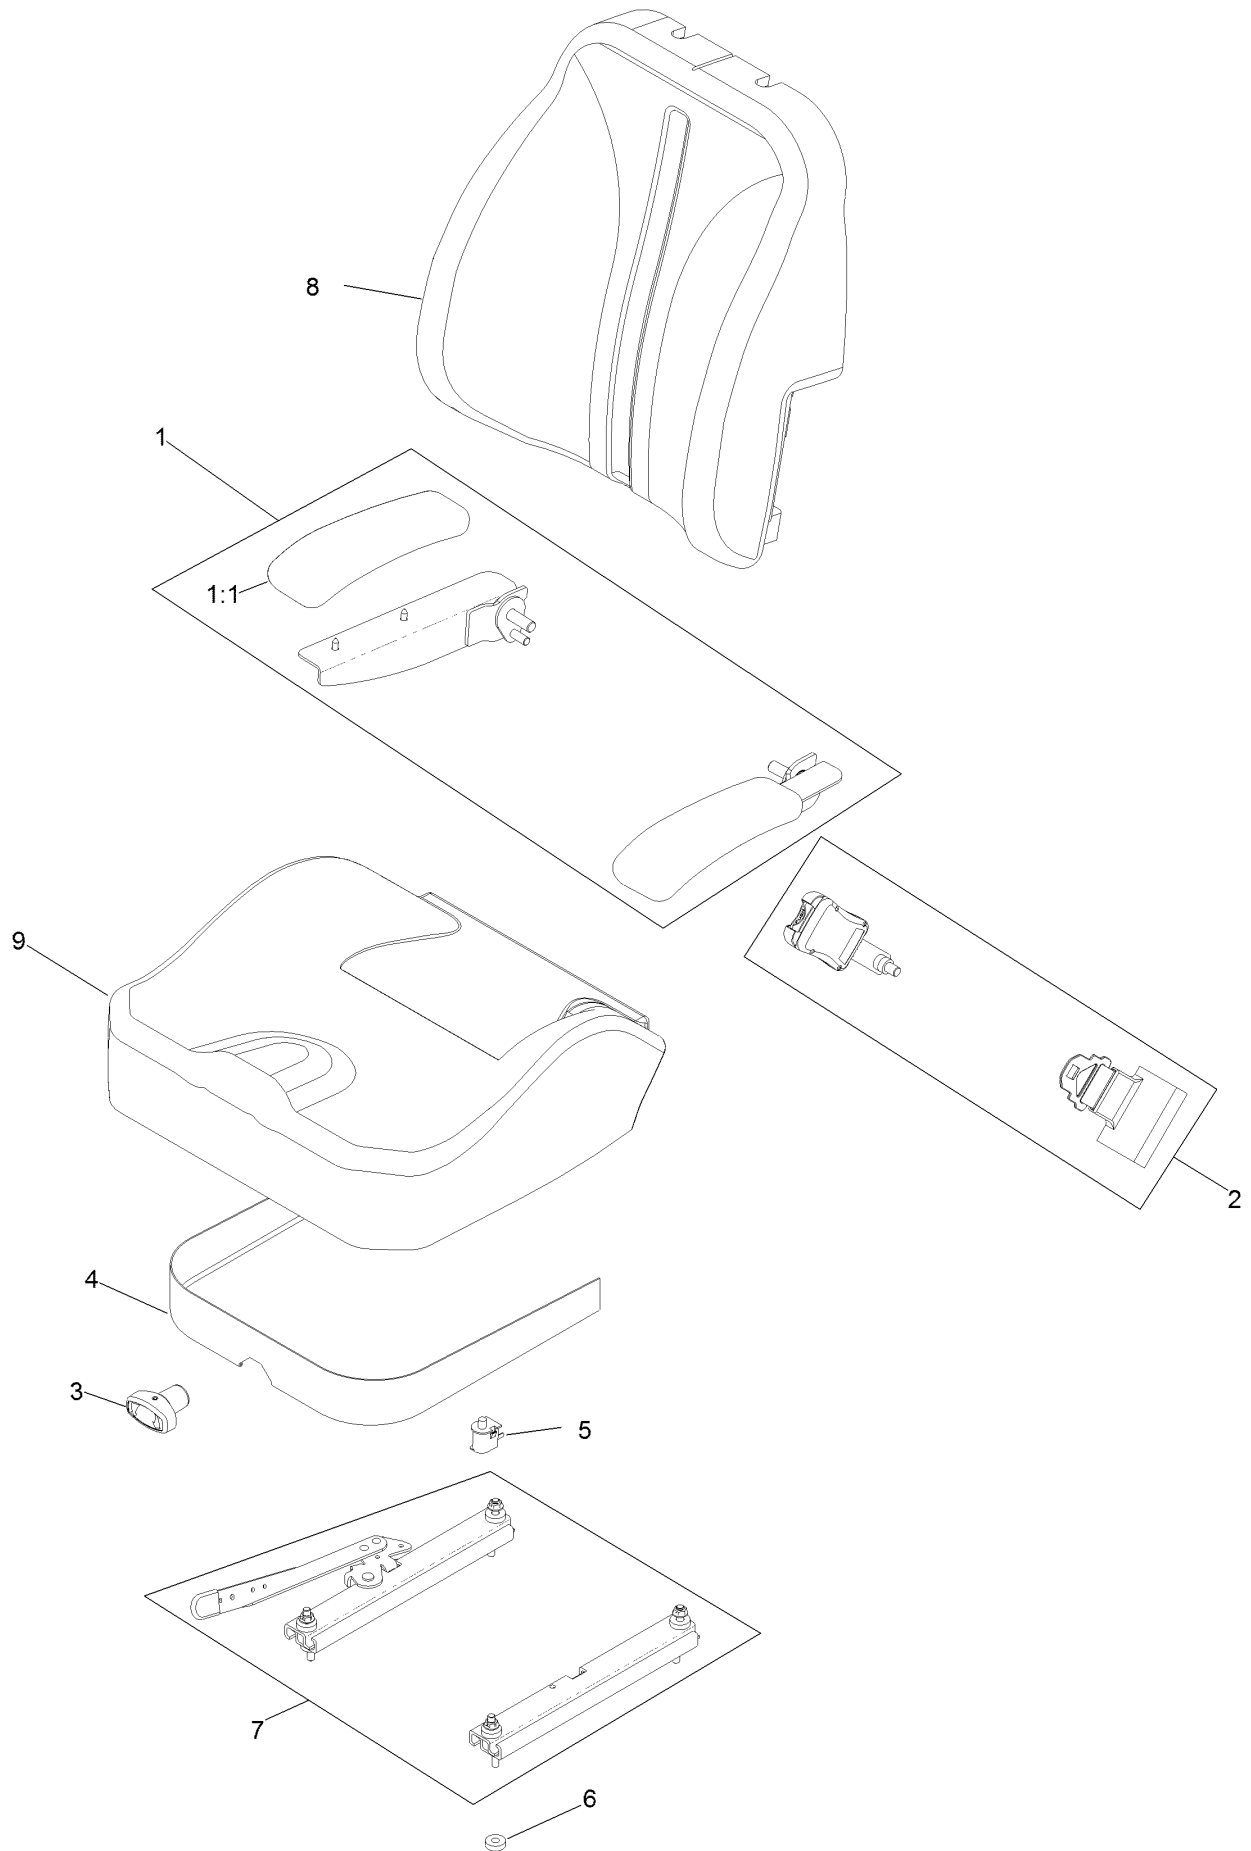


## Seat Assembly No. 136-9014 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 1           | 126-2058           | 1           | Armrest Kit             |
| 1:1         | 110-4163           | 2           | Cushion-Rest, Arm       |
| 2           | 130-0845           | 1           | Seat Belt Kit           |
| 3           | 130-0846           | 1           | Knob-Adjuster           |
| 4           | 126-3506           | 1           | Cover-Skirt W/Fasteners |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 5           | 82-2190            | 1           | Switch-Bail          |
| 6           | 26-4840            | 4           | Spacer-Pin, Mounting |
| 7           | 130-0844           | 1           | Track Set            |
| 8           | 136-9019           | 1           | Cover-Back, Seat     |
| 9           | 136-9020           | 1           | Cover-Bottom, Seat   |

Motion Control Assembly

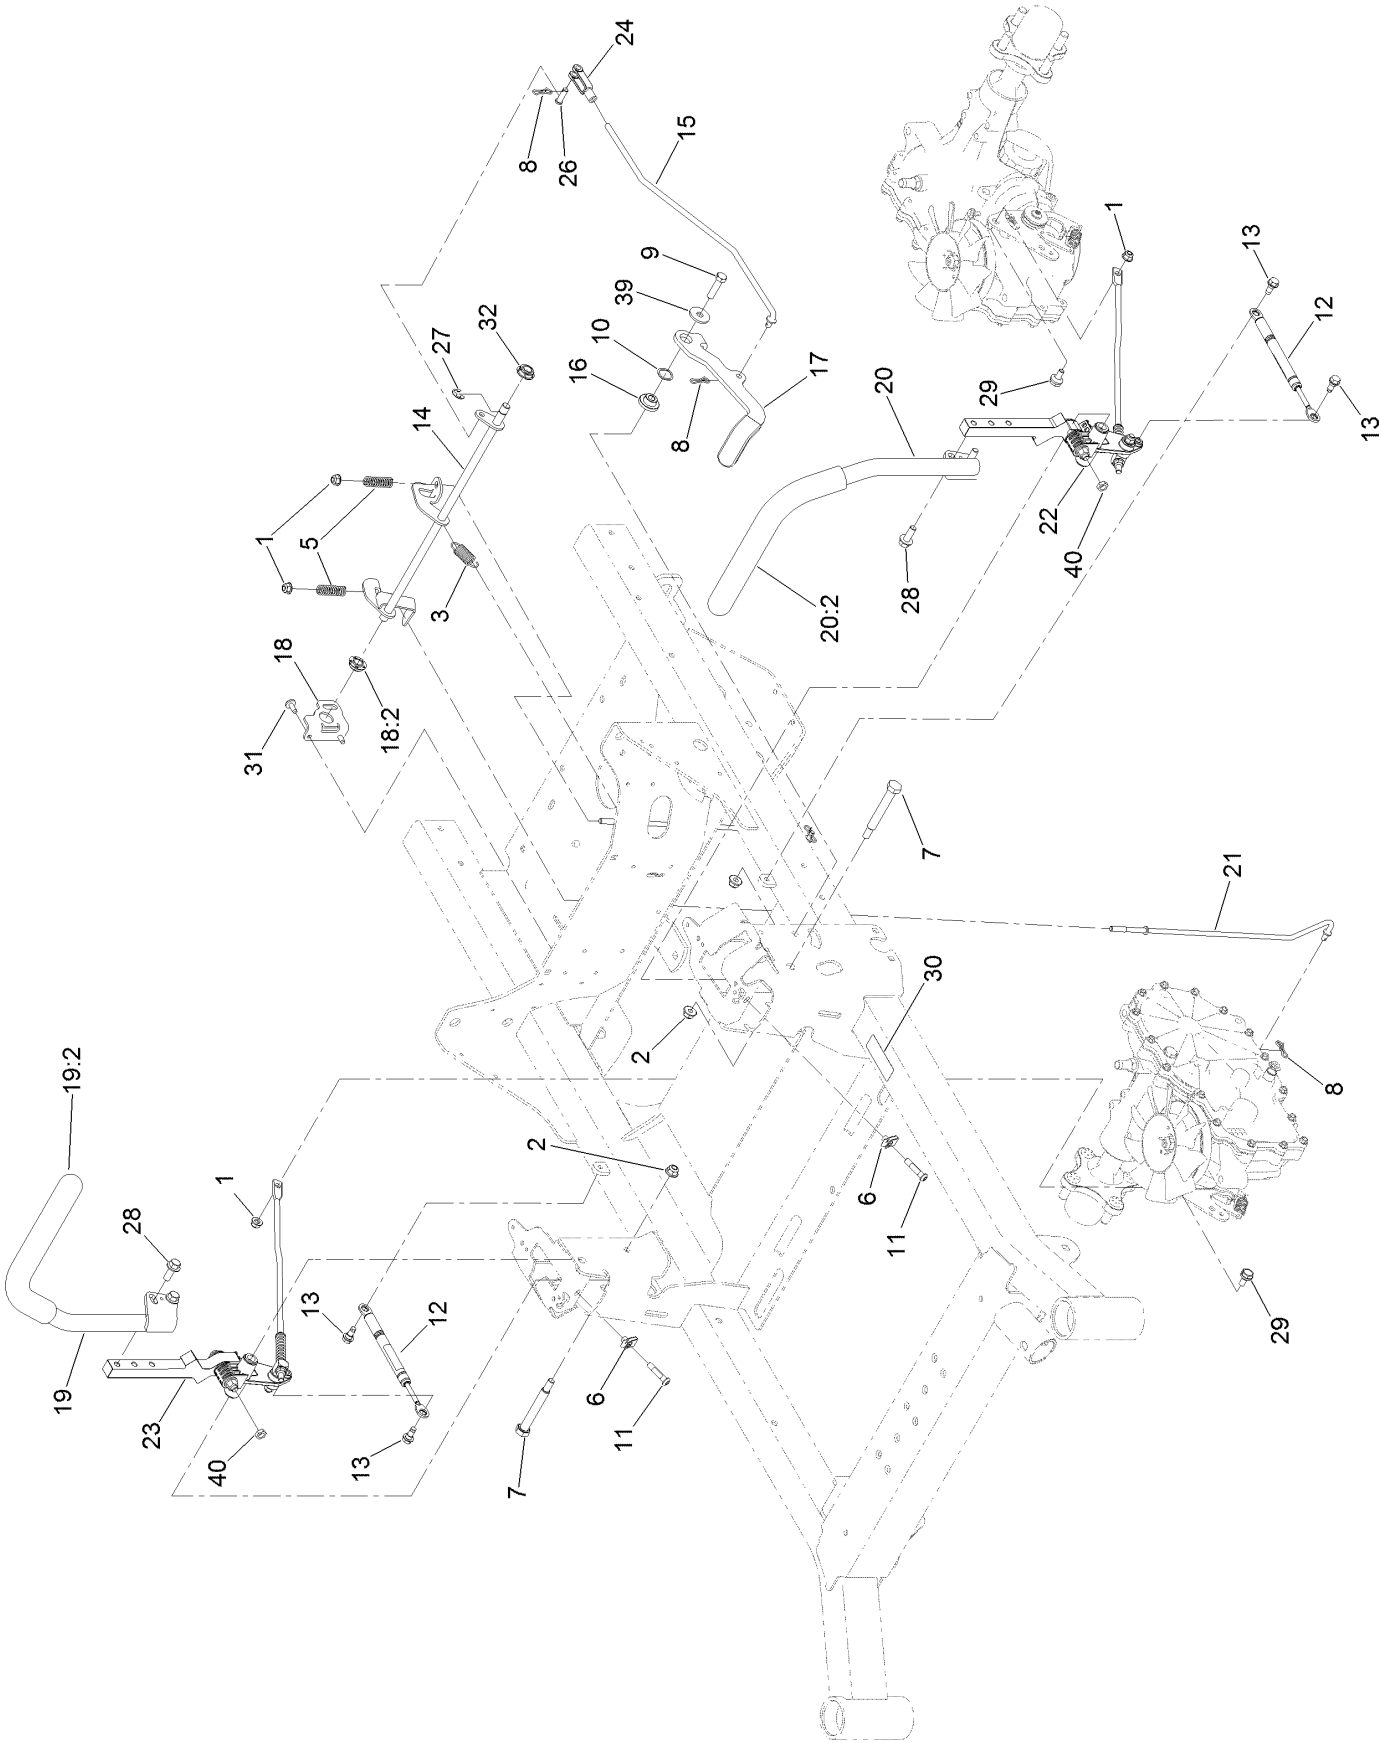


## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 104-8300           | 4           | Nut-HF, NI              | 19          | 126-9191           | 1           | RH Control Handle ASM    |
| 2           | 104-8301           | 3           | Nut-HF, NI              | 19:2        | 126-7359           | 1           | Grip                     |
| 3           | 107-1045           | 1           | Spring-Extension        | 20          | 126-9192           | 1           | LH Control Handle ASM    |
| 5           | 109-7694           | 2           | Spring-Compression      | 20:2        | 126-7359           | 1           | Grip                     |
| 6           | 112-3306           | 2           | Nut                     | 21          | 126-7217           | 2           | Linkage-Brake, Lower     |
| 7           | 115-5099           | 2           | Bolt-Pivot              | 22          |                    | 1           | LH Motion Control ASM ●  |
| 8           | 119-1415           | 4           | Pin-Cotter, Locking     | 23          |                    | 1           | RH Motion Control ASM ●  |
| 9           | 323-8              | 1           | Screw-HH                | 24          | 1-303105           | 1           | Yoke-Adjustable          |
| 10          | 119-4164           | 1           | Washer-Wave             | 26          | 1-808280           | 1           | Pin-Clevis               |
| 11          | 126-4299           | 2           | Screw-HSBH              | 27          | 32120-47           | 1           | Ring-Retaining, External |
| 12          | 126-4322           | 2           | Damper                  | 28          | 3234-42            | 4           | Screw-HHF                |
| 13          | 126-4424           | 4           | Screw-Shoulder          | 29          | 37-8771            | 2           | Bolt-Shoulder, HF        |
| 14          | 126-5813           | 1           | Shaft-Brake             | 30          | 115-9625           | 1           | Decal-Brake, Parking     |
| 15          | 126-5819           | 1           | Linkage-Brake, Upper    | 31          | 126-6266           | 2           | Screw-Tph                |
| 16          | 126-5989           | 1           | Pivot-Flange            | 32          | 126-5820           | 1           | Bearing-Spherical        |
| 17          | 126-9490           | 1           | Lever-Brake (With Grip) | 39          | 2844               | 1           | Washer                   |
| 18          | 126-6456           | 1           | Bracket-Brake           | 40          | 3218-3             | 2           | Nut-Jam                  |
| 18:2        | 126-5820           | 1           | Bearing-Spherical       |             |                    |             |                          |

● Not serviced separately


# LH and RH Motion Control Assembly

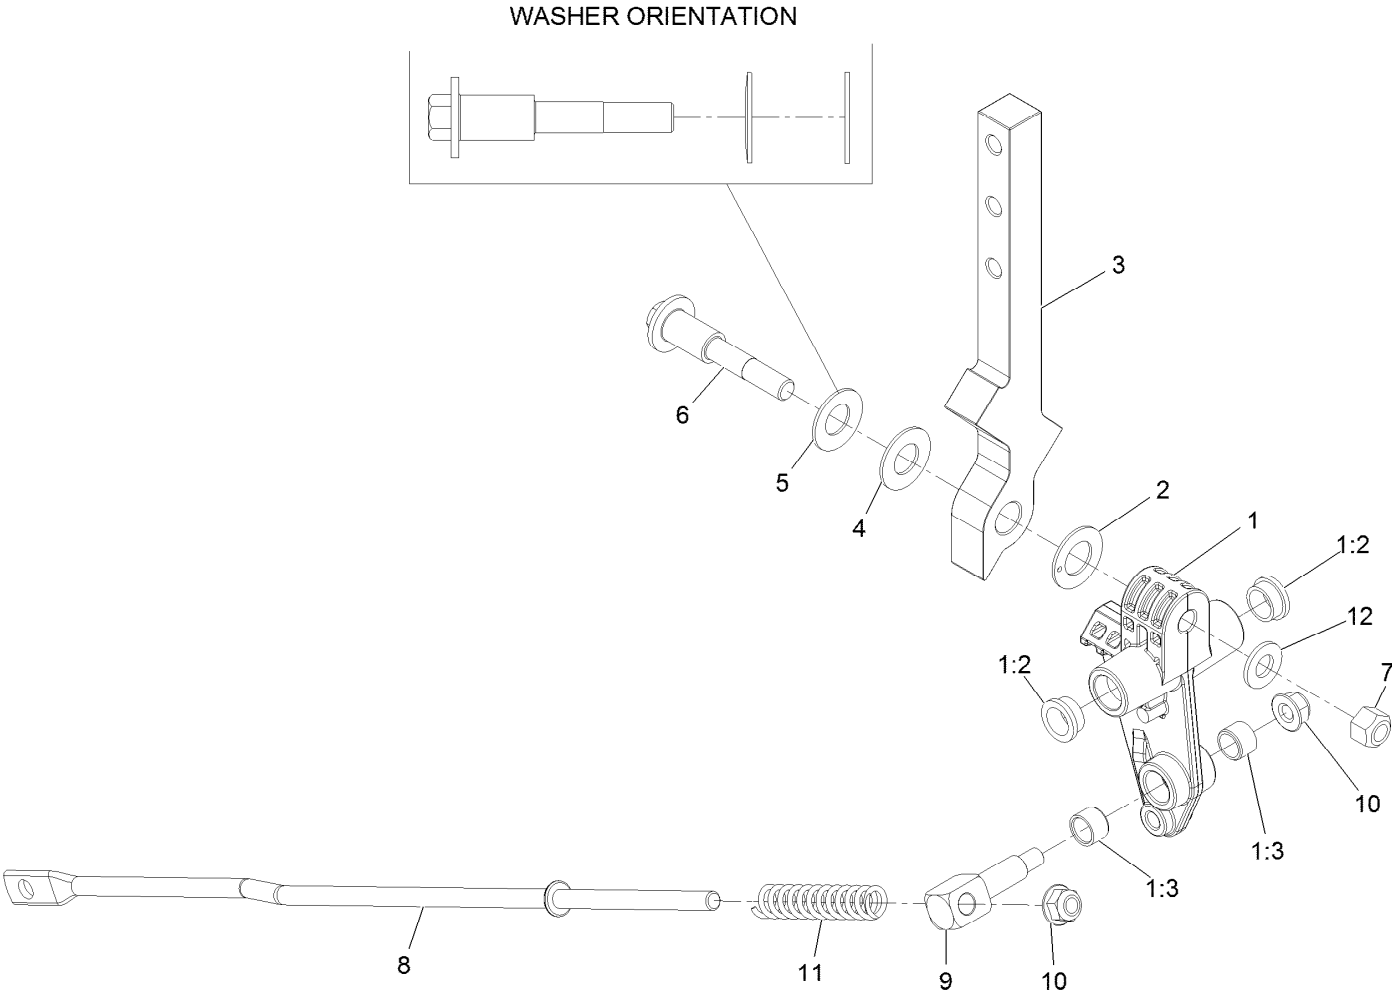

## LH and RH Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 126-3773           | 1           | Control Arm ASM    | 6           | 117-1198           | 1           | Bolt-Pivot             |
| 1:2         | 126-8909           | 2           | Bushing            | 7           | 32152-2            | 1           | Nut-Lock, Cone         |
| 1:3         | 1-413152           | 2           | Bushing-Sleeve     | 8           | 126-5435           | 1           | Link-Control           |
| 2           | 126-7296           | 1           | Washer-Friction    | 9           | 126-5434           | 1           | Swivel                 |
| 3           | 126-8182           | 1           | Arm-Control        | 10          | 104-8300           | 2           | Nut-HF, NI             |
| 4           | 117-1240           | 1           | Washer             | 11          | 126-8195           | 1           | Spring-Return, Neutral |
| 5           | 119-8925           | 1           | Washer-Belleville  | 12          | 3256-24            | 1           | Washer-Plain           |

# Caster Wheel and Fork Assembly

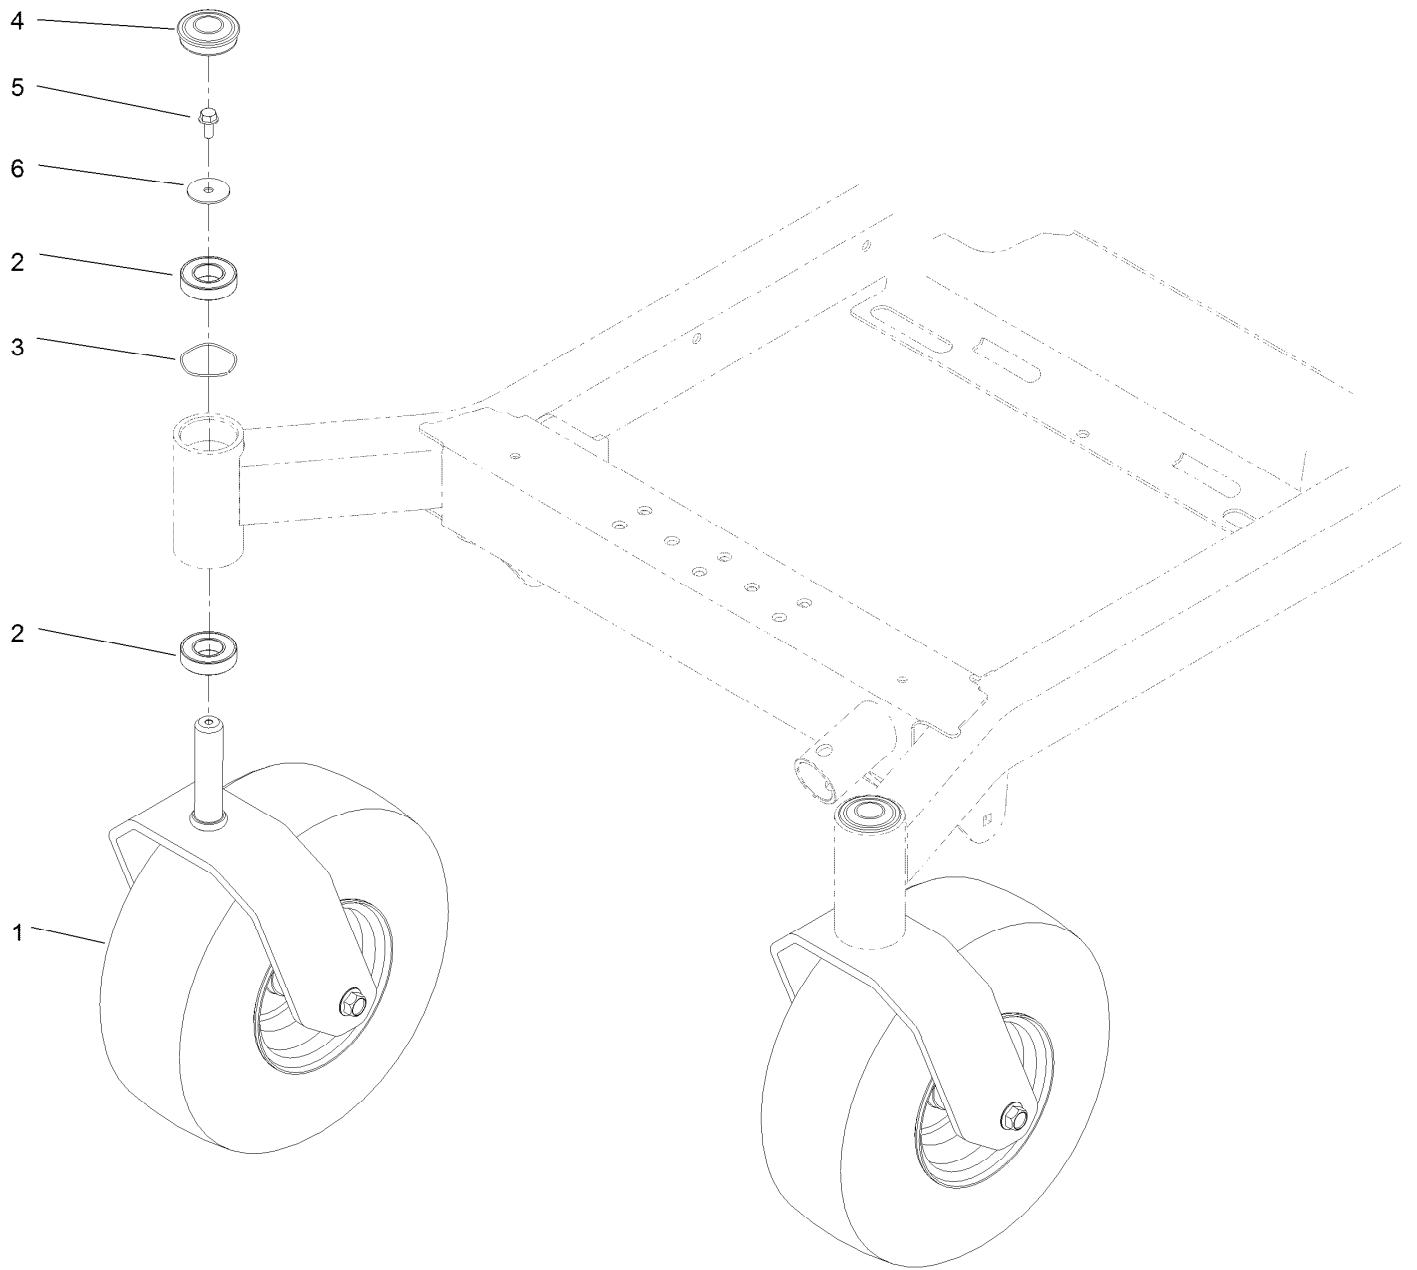


## Caster Wheel and Fork Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|--------------------------------|
| 1           |                    | 2           | Front Caster ASM (W/Fork)<br>● |
| 2           | 109-3678           | 4           | Bearing-Ball                   |
| 3           | 126-5897           | 2           | Spring                         |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 4           | 116-4348           | 2           | Cap-Grease         |
| 5           | 3234-5             | 2           | Screw-HHF          |
| 6           | 3256-68            | 2           | Washer-Flat        |

● Not serviced separately

# Fork and Caster Wheel Assembly

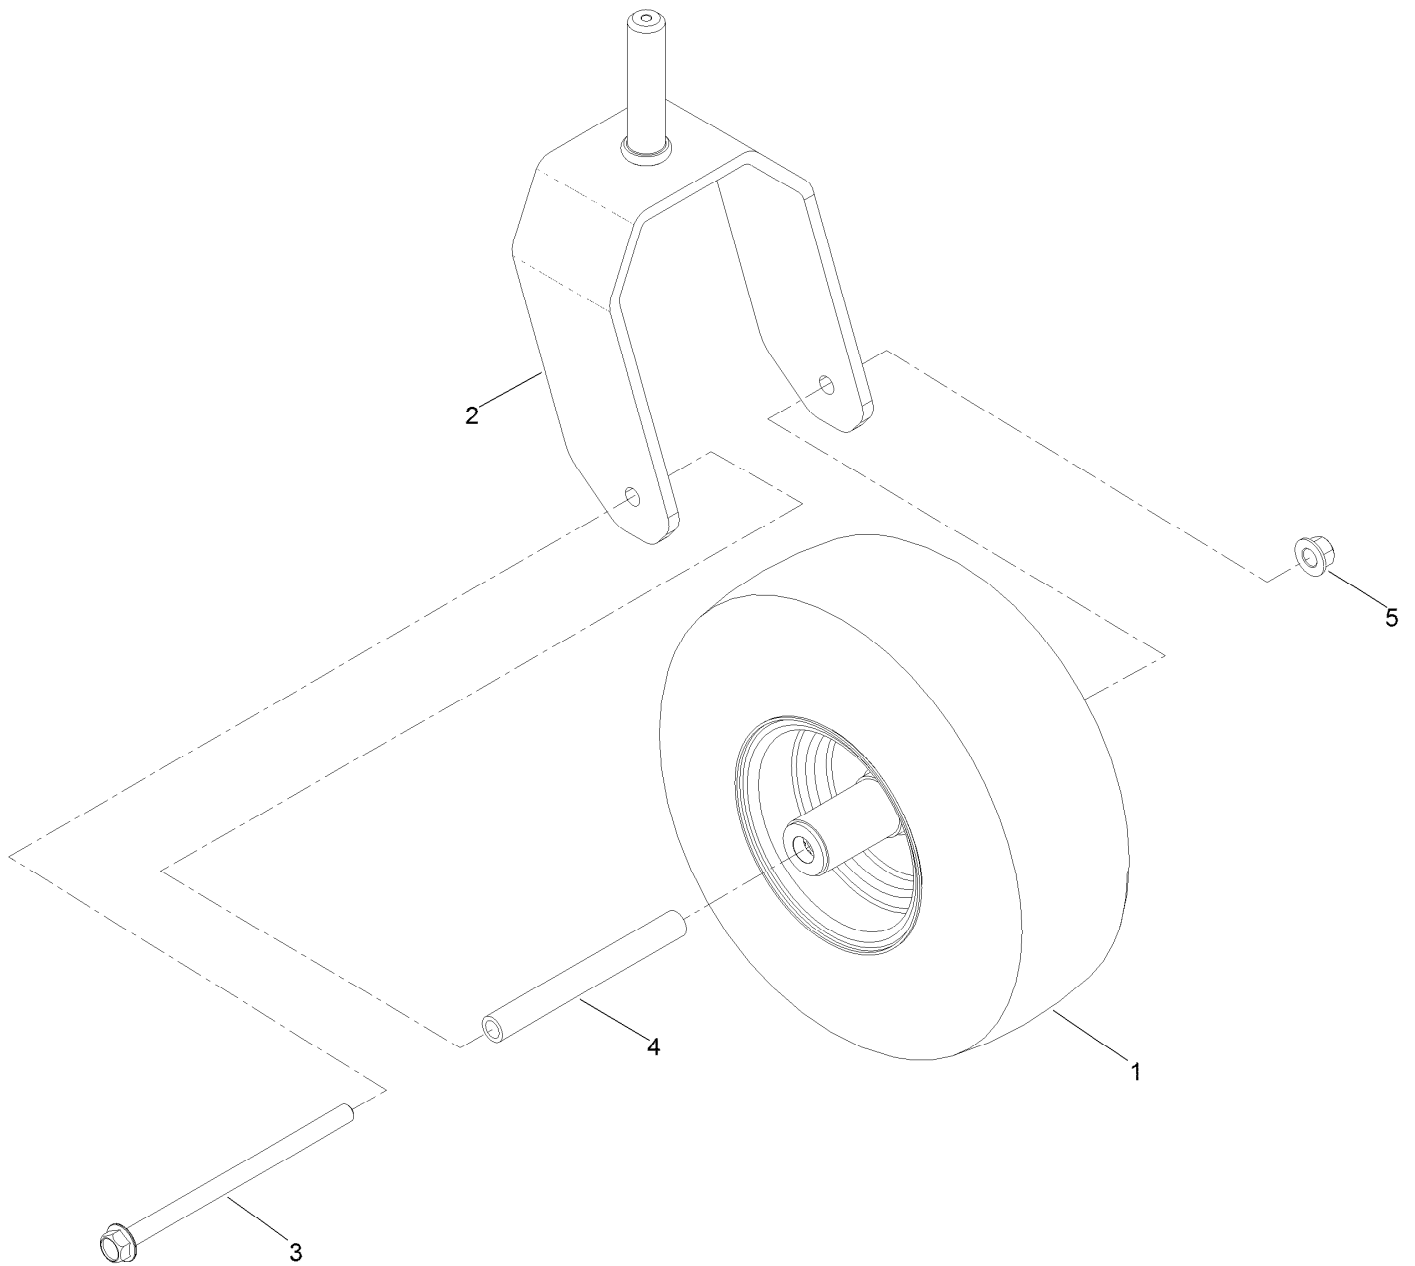


## Fork and Caster Wheel Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 126-7592           | 1           | Wheel And Tire ASM |
| 2           | 126-4312-01        | 1           | Fork-Caster        |
| 3           | 126-5389           | 1           | Screw-HHF          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 4           | 127-0068           | 1           | Spanner-Wheel, Caster |
| 5           | 99-5107            | 1           | Nut-Lock              |

Wheel and Tire Assembly No. 126-7592

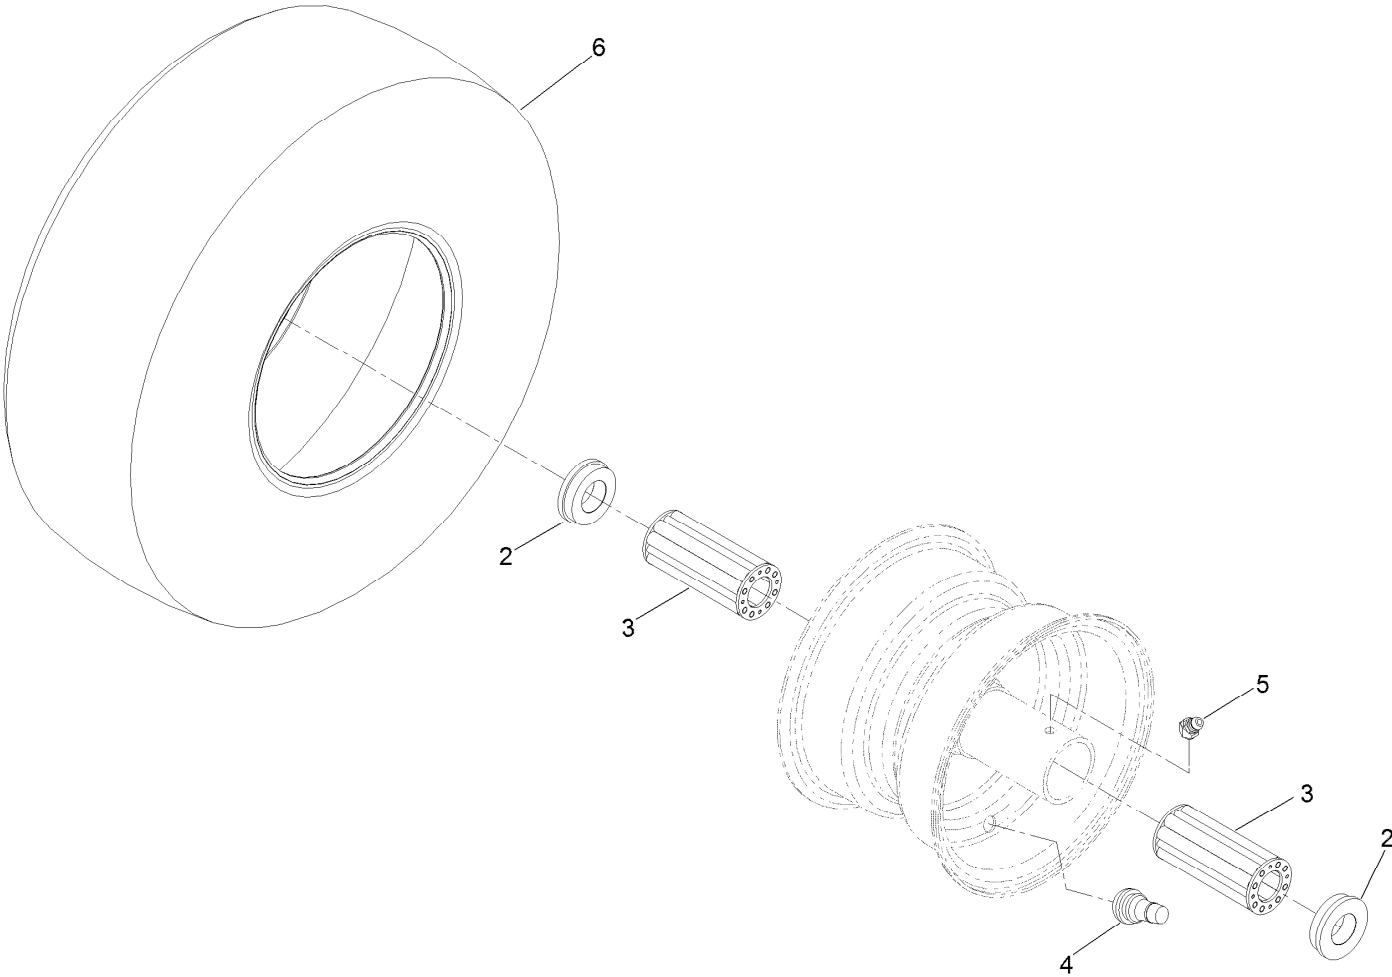


## Wheel and Tire Assembly No. 126-7592 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 2           | 130-0705           | 2           | Bushing-Flange        |
| 3           | 135-4489           | 2           | Bearing-Roller, Wheel |
| 4           | 5108               | 1           | Valve                 |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 120-7125           | 1           | Fitting-Zerk       |
| 6           | 126-5959           | 1           | Tire               |

# Rear Wheel Assembly

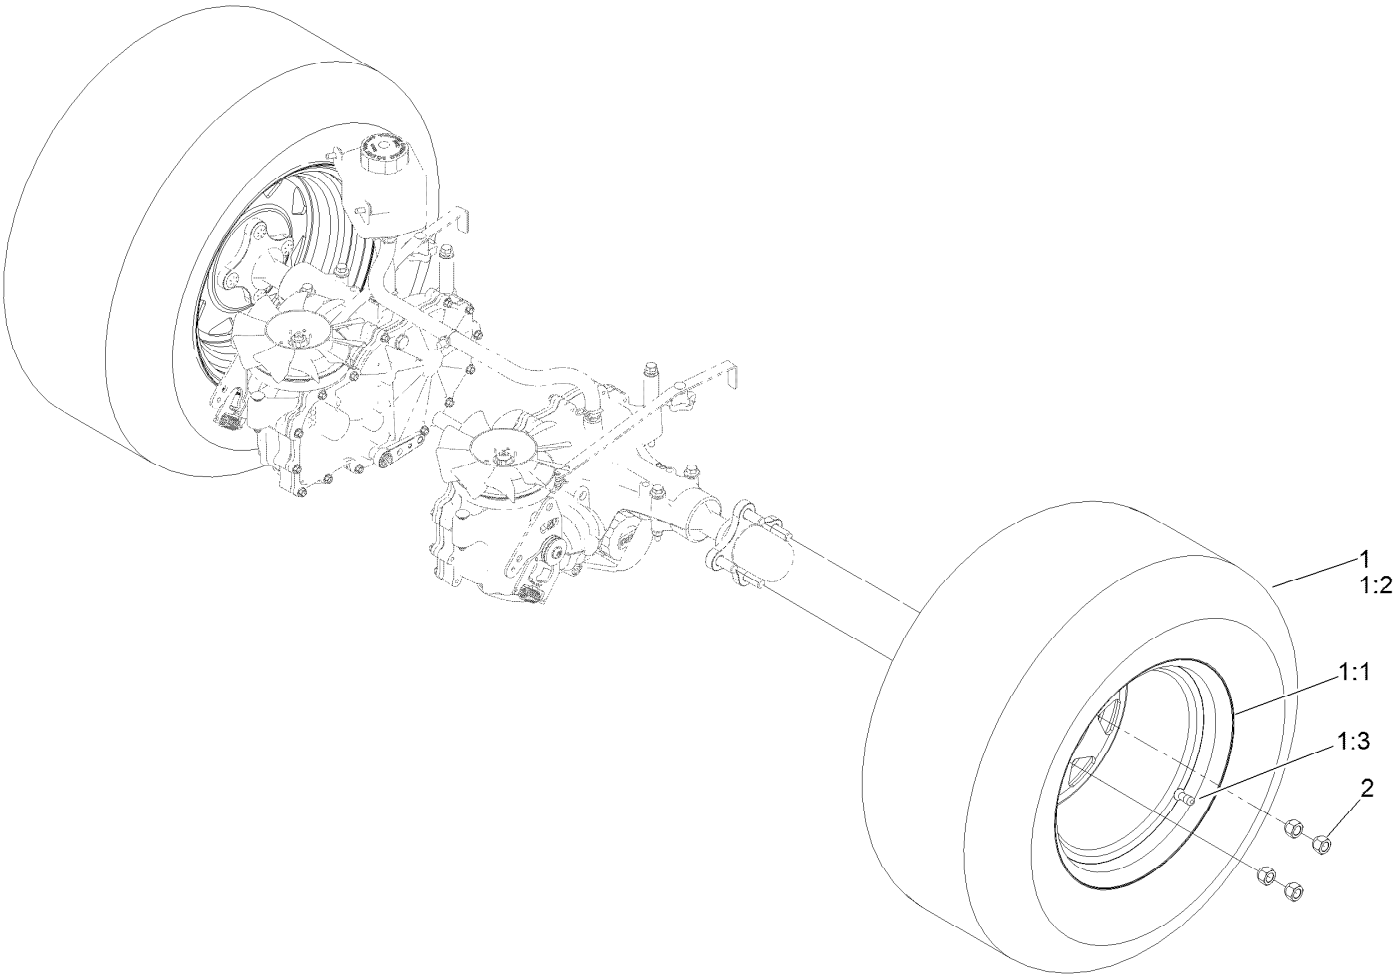


## Rear Wheel Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 126-7833           | 2           | Wheel And Tire ASM |
| 1:1         | 126-2878           | 1           | Rim-Wheel          |
| 1:2         | 120-3269           | 1           | Tire               |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1:3         | 232-27             | 1           | Stem-Valve         |
| 2           | 242-50             | 8           | Nut-Lug            |

# Electrical System Assembly

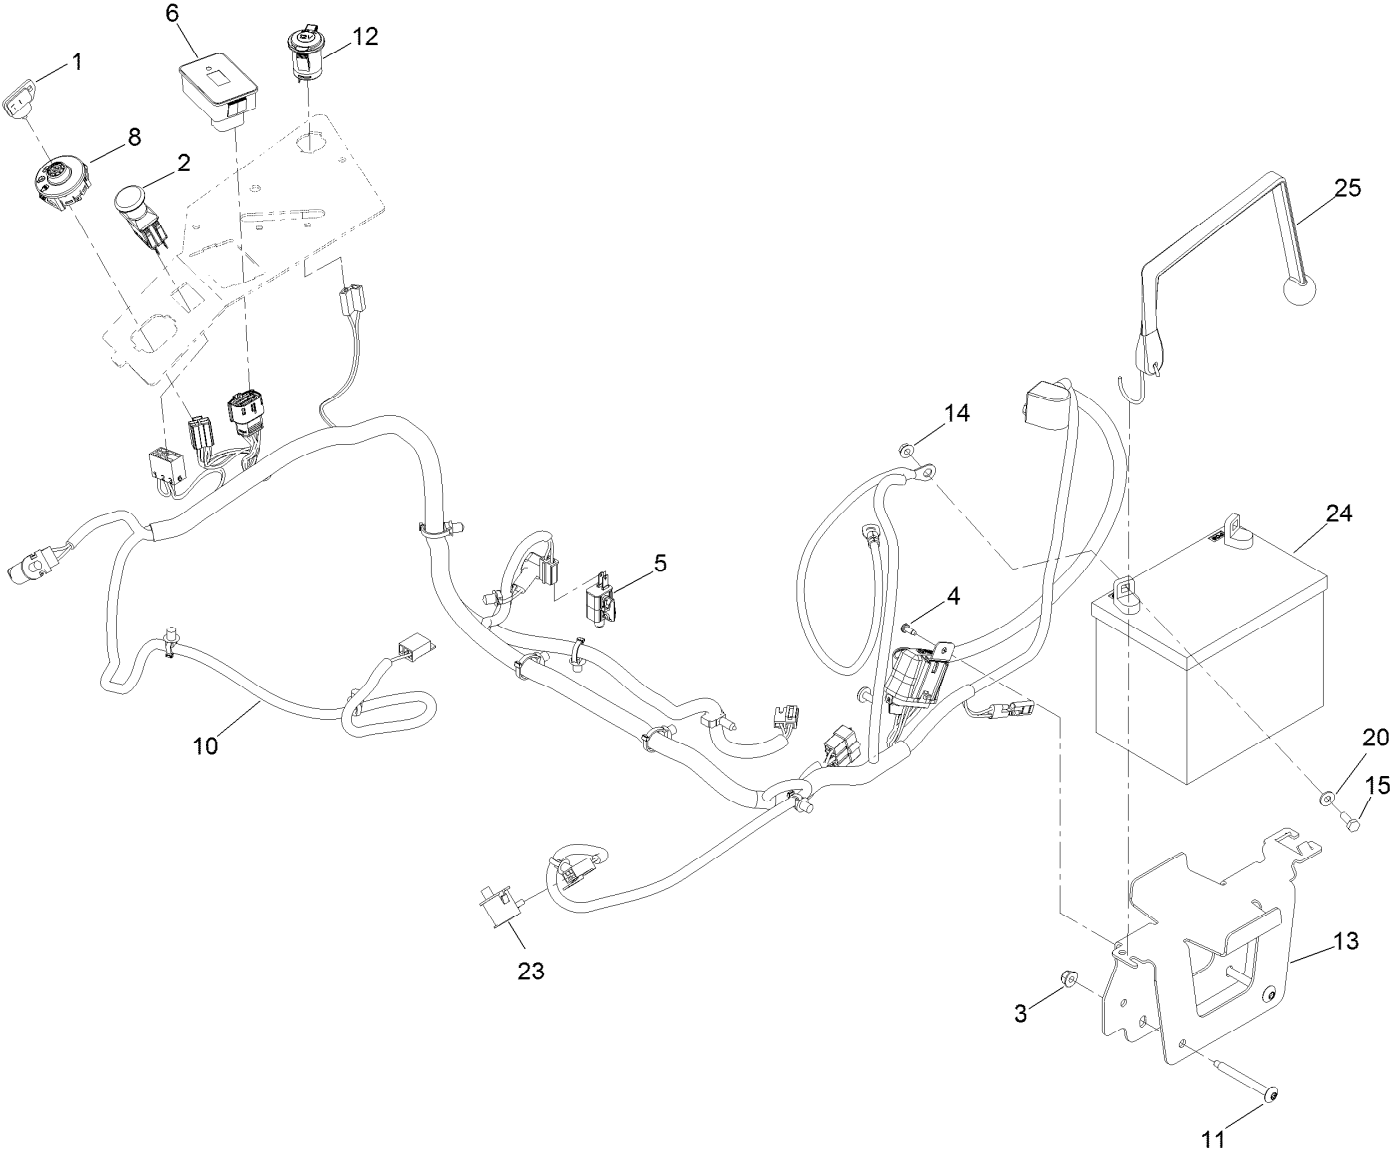

## Electrical System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 63-8360            | 1           | Key-Ignition          |
| 2           | 103-5221           | 1           | Switch-PTO            |
| 3           | 104-8300           | 2           | Nut-HF, NI            |
| 4           | 105-6849           | 1           | Screw-Forming, Thread |
| 5           | 110-6765           | 1           | Switch                |
| 6           | 116-5609           | 1           | Module ASM            |
| 8           | 137-4100           | 1           | Switch-Ignition       |
| 10          | 126-5803           | 1           | Harness-Wire ▲        |
| 11          | 126-6267           | 2           | Screw-TTH             |


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 12          | 126-6499           | 1           | Port-Power, 12V    |
| 13          | 126-6725-03        | 1           | Tray-Battery       |
| 14          | 32128-33           | 2           | Nut-HF             |
| 15          | 321-4              | 2           | Screw-HH           |
| 20          | 3256-22            | 2           | Washer-Flat        |
| 23          | 82-2190            | 2           | Switch-Bail        |
| 24          |                    | 1           | Battery ●■         |
| 25          | 126-7627           | 1           | Strap-Bungee       |

● Obtain locally.

■ Not serviced separately

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

**Wire Harness Assembly No. 126-5803**

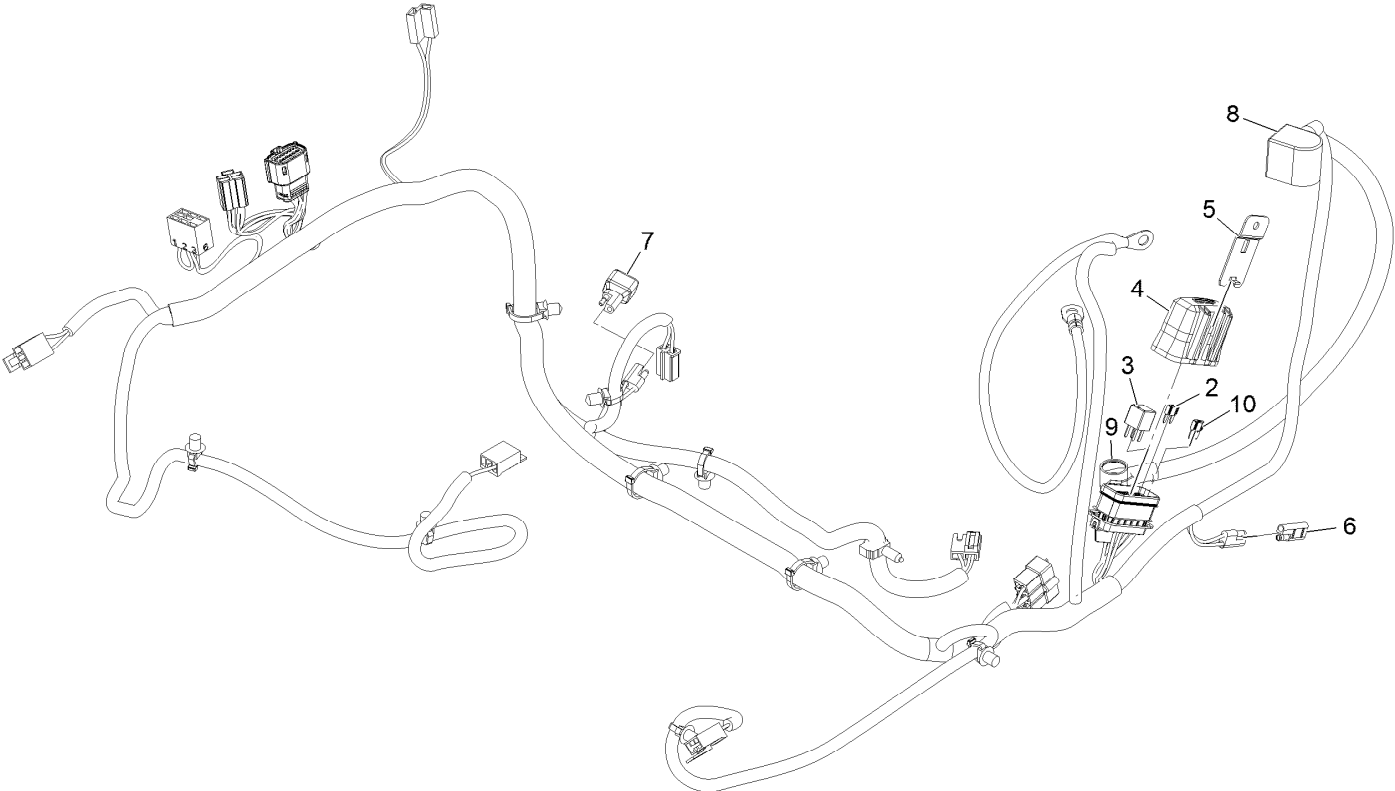


## Wire Harness Assembly No. 126-5803 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 2           | 121-8868           | 1           | Fuse-Mini Blade, 20 Amp |
| 3           | 126-3991           | 1           | Relay-Micro             |
| 4           | 32180-176          | 1           | Cover-Block, Fuse       |
| 5           | 32180-177          | 1           | Clip-Mounting           |
| 6           | 116-0053           | 1           | Cap-Plug                |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 7           | 103-3895           | 1           | Diode                   |
| 8           | 126-8876           | 1           | Insulator-Battery       |
| 9           | 1-543393           | 1           | Insulator-Solenoid      |
| 10          | 121-8867           | 1           | Fuse-Mini Blade, 15 Amp |


# Deck Lift Assembly

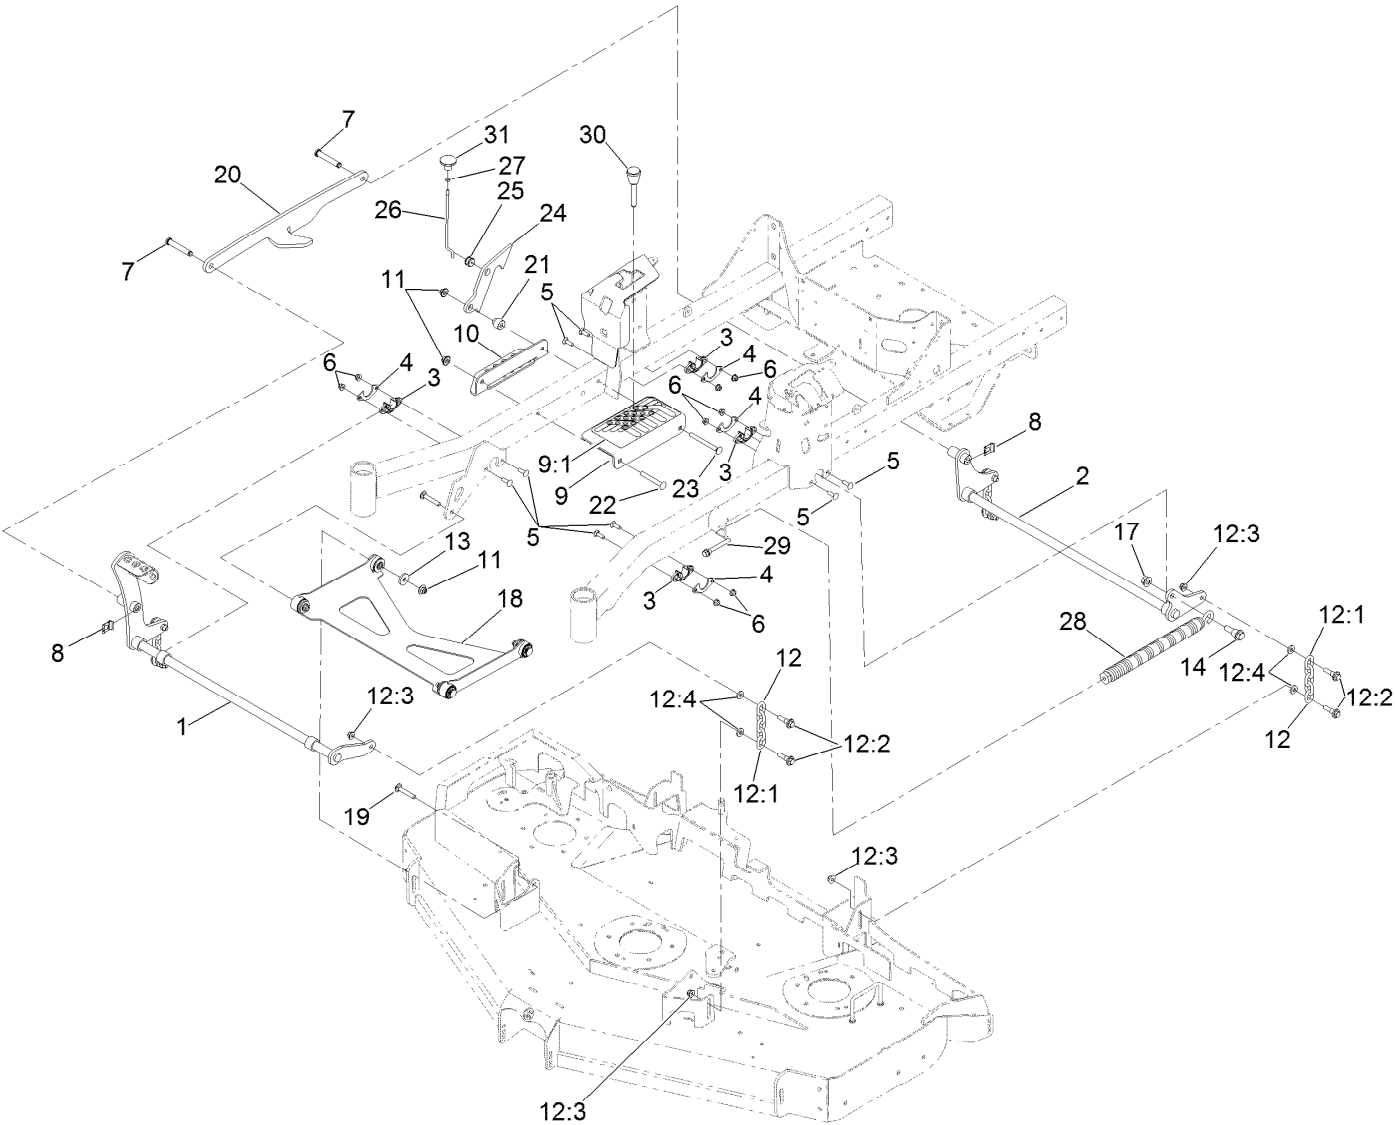

## Deck Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 126-3342-03        | 1           | Shaft-Lift, Deck        | 13          | 1-373034           | 2           | Washer                |
| 2           | 126-3343-03        | 1           | Shaft-Lift, Deck (Rear) | 14          | 116-0780           | 1           | Screw-Shoulder, HHF   |
| 3           | 115-5065           | 4           | Bushing-Flange          | 17          | 99-5107            | 1           | Nut-Lock              |
| 4           | 116-2887           | 4           | Gusset-Lift, Deck       | 18          | 126-8365           | 1           | Deck Strut ASM        |
| 5           | 3230-22            | 8           | Screw-CARR              | 19          | 3231-7             | 2           | Screw-CARR            |
| 6           | 104-8300           | 8           | Nut-HF, NI              | 20          | 126-4639-03        | 1           | Link-HOC              |
| 7           | 126-9181           | 2           | Pin-Clevis              | 21          | 126-5221           | 1           | Spacer-Stepped        |
| 8           | 95-4064            | 2           | Clip-Pin                | 22          | 3231-42            | 1           | Screw-CARR            |
| 9           | 126-4535           | 1           | Bracket ASM             | 23          | 135-0313           | 1           | Screw-CARR            |
| 9:1         | 126-4784           | 1           | Decal-HOC               | 24          | 126-5222           | 1           | Plate-Lock, Transport |
| 10          | 126-4640-03        | 1           | Angle-HOC, Lower        | 25          | 126-5593           | 1           | Grommet               |
| 11          | 109-6658           | 4           | Nut-Flange, NI          | 26          | 126-5223           | 1           | Rod-Lock, Transport   |
| 12          | 126-8877           | 4           | Deck Chain ASM          | 27          | 3218-1             | 1           | Nut-Jam               |
| 12:1        | 1-633447           | 1           | Chain-Lift, Deck        | 28          | 116-0886           | 1           | Spring-Extension      |
| 12:2        | 130-0742           | 2           | Bolt-Shoulder           | 29          | 92-7674            | 1           | Bolt-Shoulder         |
| 12:3        | 104-8301           | 2           | Nut-HF, NI              | 30          | 126-5401           | 1           | Pin-HOC               |
| 12:4        | 43-0940            | 2           | Spacer                  | 31          | 126-7019           | 1           | Knob                  |


# Deck Strut Assembly No. 126-8365

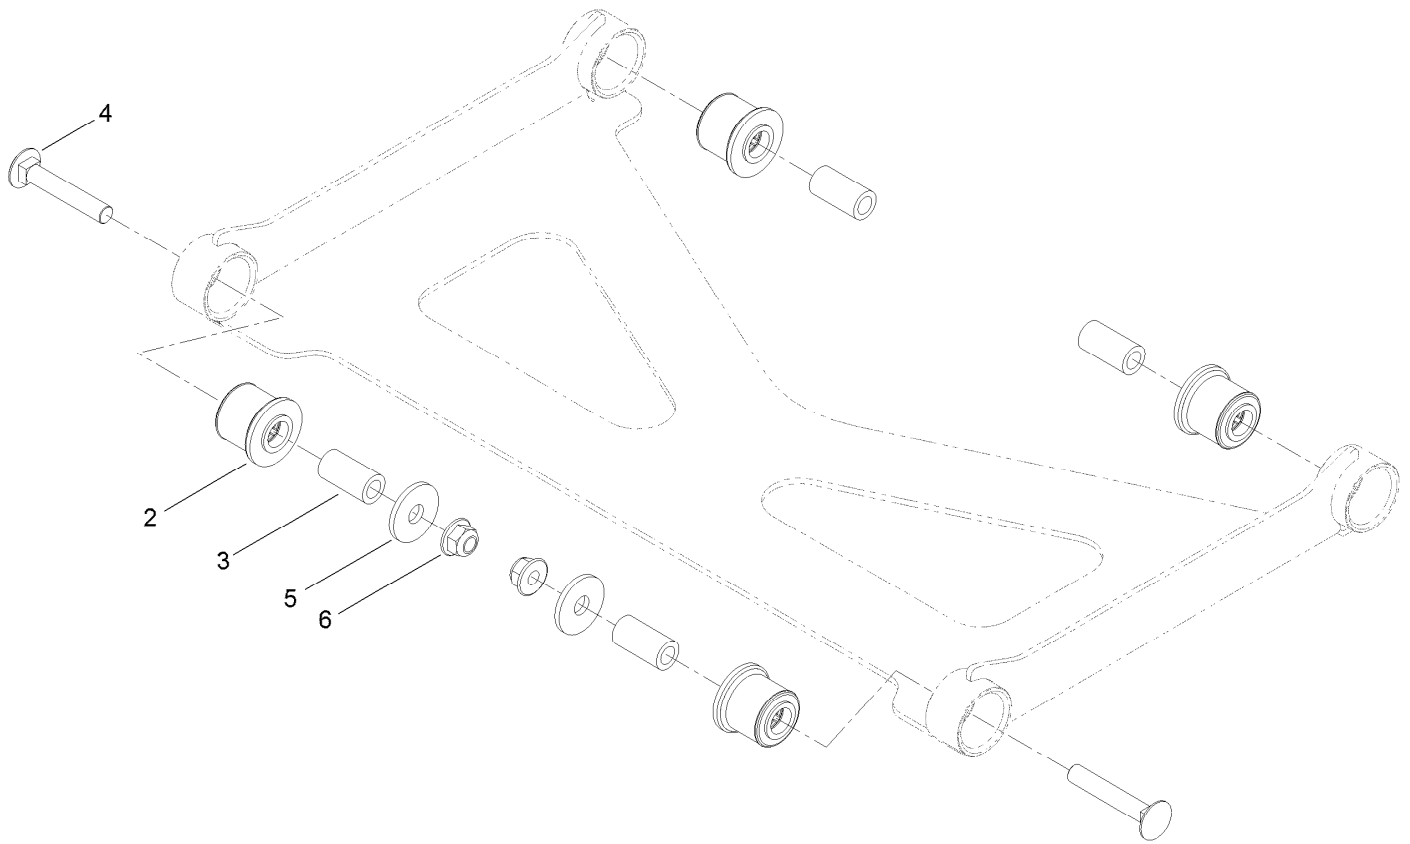

## Deck Strut Assembly No. 126-8365 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|--------------------|
| 2           | 126-8360           | 4           | Bushing-Rubber,<br>Suspension | 4           | 3231-7             | 2           | Screw-CARR         |
| 3           | 108-6544           | 4           | Spacer                        | 5           | 2844               | 2           | Washer             |
|             |                    |             |                               | 6           | 104-8301           | 2           | Nut-HF, NI         |

# Engine, Clutch and Muffler Assembly

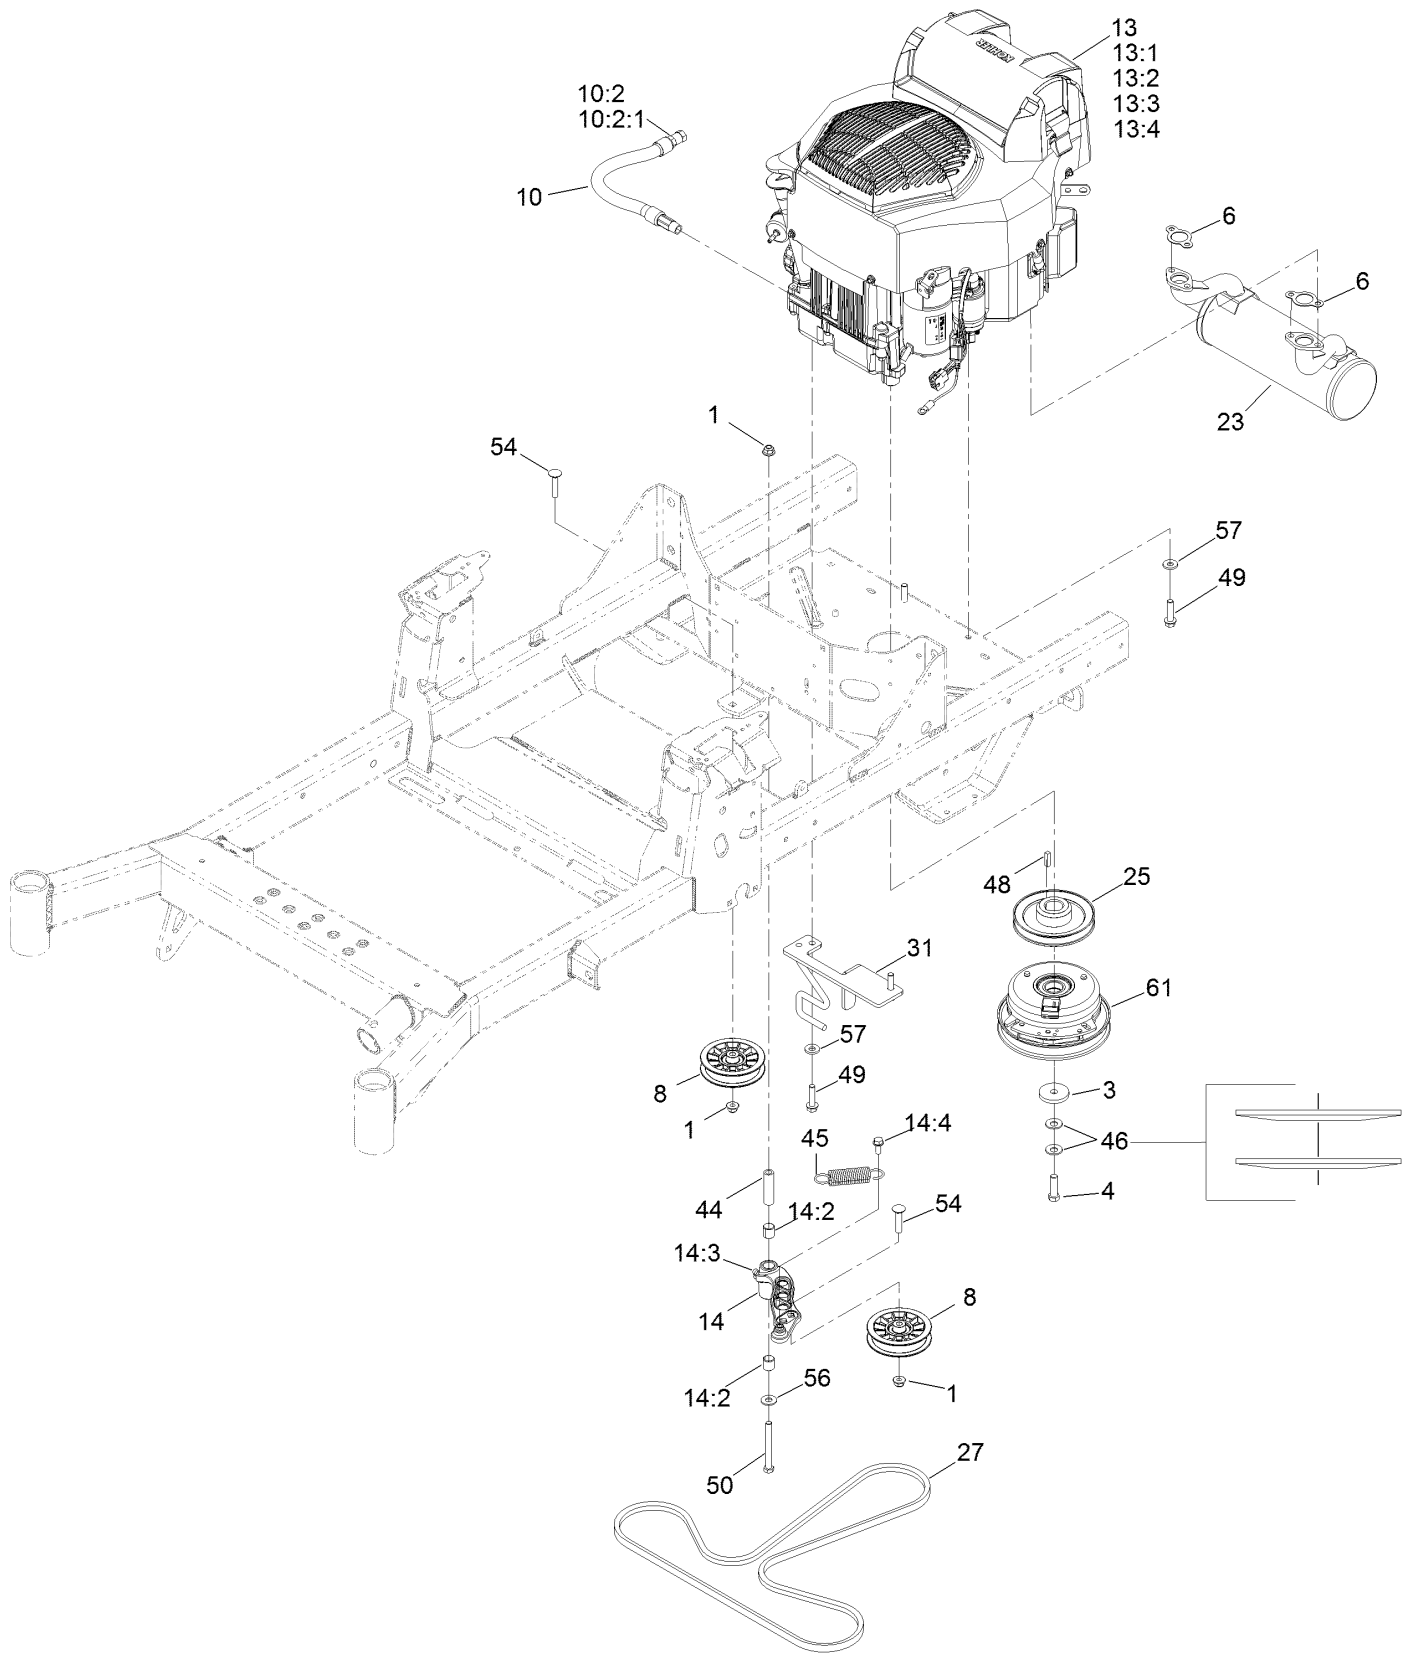

## Engine, Clutch and Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 104-8301           | 3           | Nut-HF, NI                                 | 14:2        | 1-513034           | 2           | Sleeve-Bearing         |
| 3           | 109-6919           | 1           | Washer-Clutch                              | 14:3        | 302-40             | 1           | Fitting-Grease, 90 DEG |
| 4           | 109-9761           | 1           | Screw-HH □                                 | 14:4        | 32144-11           | 1           | Screw-HWH              |
| 6           | 1-653291           | 2           | Gasket-Exhaust                             | 23          | 126-4359           | 1           | Muffler-Kohler Aes     |
| 8           | 116-2456           | 2           | Pulley-Flat Idler                          | 25          | 126-5358           | 1           | Sheave (W/Hub)         |
| 10          | 116-5108           | 1           | Oil Drain Hose ASM ■                       | 27          | 126-5993           | 1           | Belt-V                 |
| 10:2        | 353-508            | 1           | Plug-HH ●                                  | 31          | 126-6688-03        | 1           | Anchor-Clutch          |
| 10:2:1      | 237-42             | 1           | O-Ring                                     | 44          | 1-603384           | 1           | Bushing-Pivot, Idler   |
| 13          |                    | 1           | Engine -Kohler, Zt740-3011<br>▲            | 45          | 1-603402           | 1           | Spring-Extension       |
| 13:1        |                    | 1           | Kohler 16 083 01-S Engine<br>Air Filter ▲◆ | 46          | 1-603610           | 2           | Washer-Spring          |
| 13:2        |                    | 1           | Kohler 52 050 02-S Engine<br>Oil Filter ▲◆ | 48          | 1-807259           | 1           | Key                    |
| 13:3        |                    | 1           | Kohler 24 050 13-S Fuel<br>Filter ▲◆       | 49          | 32144-102          | 4           | Screw-HWH              |
| 13:4        |                    | 1           | Kohler 25 083 04-S Safety<br>Filter ▲◆     | 50          | 323-15             | 1           | Screw-HH               |
| 14          | 126-0973           | 1           | Idler Arm ASM                              | 54          | 3231-29            | 2           | Screw-CARR             |
|             |                    |             |                                            | 56          | 3256-4             | 1           | Washer-Flat            |
|             |                    |             |                                            | 57          | 98-5975            | 4           | Washer-Belleville      |
|             |                    |             |                                            | 61          | 126-8926           | 1           | Clutch                 |

● Torque to 24-26 ft-lb


▲ Not serviced separately

□ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Torque to 17-23 ft-lb

◆ Obtain parts from [www.kohlerplus.com](http://www.kohlerplus.com)


# Deck Assembly

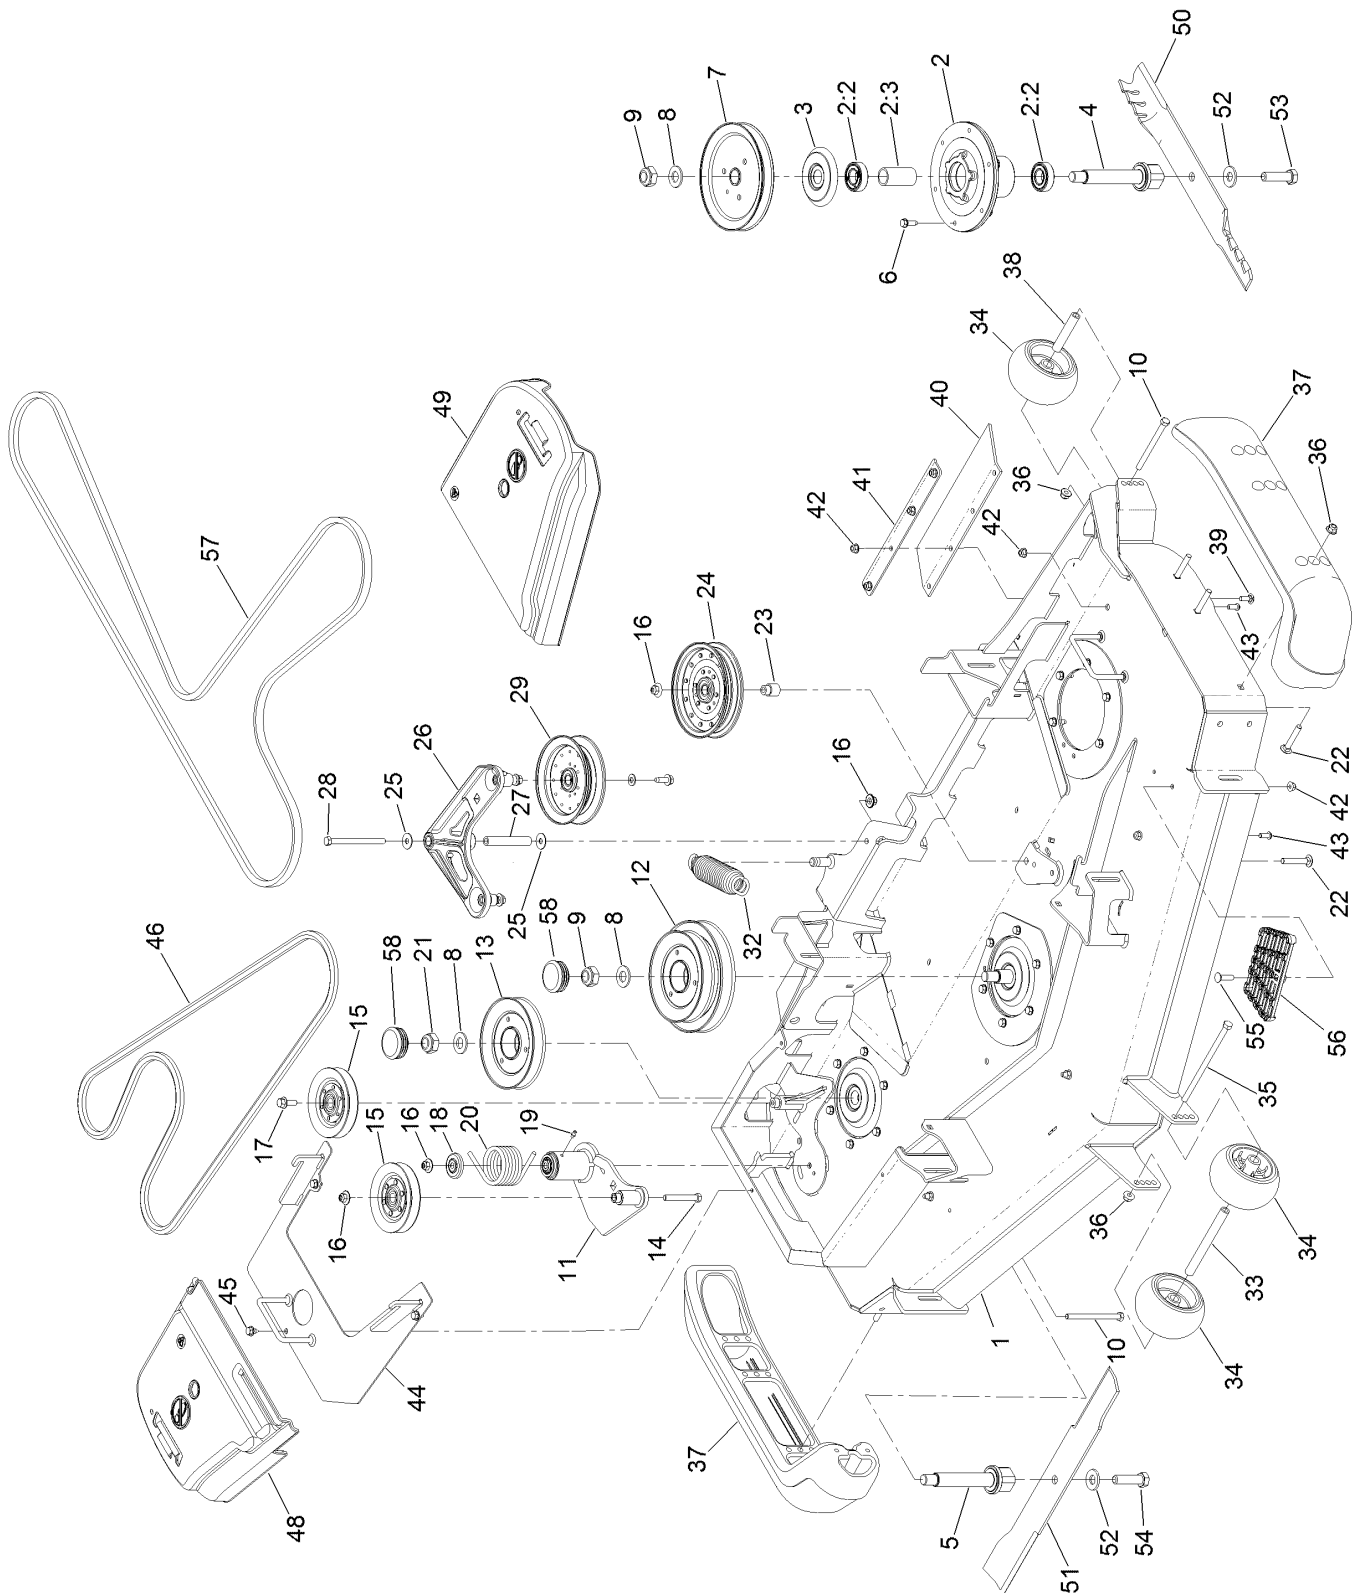

## Deck Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|------------------------------|-------------|--------------------|-------------|--------------------------------|
| 1           | 126-8924           | 1           | Deck Decal ASM               | 28          | 323-38             | 1           | Screw-HH                       |
| 2           | 120-5477           | 3           | Spindle ASM                  | 29          | 116-4668           | 1           | Idler-Pulley, Flanged          |
| 2:2         | 116-0720           | 2           | Bearing-Ball                 | 32          | 116-6317           | 1           | Spring-Extension               |
| 2:3         | 115-2641           | 1           | Spacer-Bearing               | 33          | 98-5967            | 1           | Spacer-Wheel                   |
| 3           | 117-7210           | 3           | Shield-Bearing               | 34          | 1-603299           | 4           | Roller-Scalp, Anti             |
| 4           | 133-2126           | 2           | Shaft-Spindle                | 35          | 108-5388           | 1           | Screw-HH                       |
| 5           | 126-8143           | 1           | Shaft-Spindle, LH Thread     | 36          | 104-8301           | 9           | Nut-HF, NI                     |
| 6           | 701243             | 18          | Screw-Thd Roll, HWH          | 37          | 112-1479           | 2           | Skid-Bumper, Deck              |
| 7           | 120-7856           | 1           | Pulley B Section             | 38          | 98-7912            | 2           | Tube-Spanner                   |
| 8           | 92-5836            | 3           | Washer                       | 39          | 3230-16            | 8           | Screw-CARR                     |
| 9           | 3296-67            | 2           | Nut-Lock, NI                 | 40          | 116-8191           | 2           | Guard-Tire                     |
| 10          | 323-23             | 3           | Screw-HH                     | 41          | 126-0413-01        | 2           | Support-Outer Flap             |
| 11          | 126-0853           | 1           | Idler ASM                    | 42          | 104-8300           | 15          | Nut-HF, NI                     |
| 12          | 126-4800           | 1           | Sheave-Double                | 43          | 3274-55            | 6           | Screw-HSBH                     |
| 13          | 126-4801           | 1           | Sheave                       | 44          | 126-5116-01        | 1           | Cover-Drive, Reverse           |
| 14          | 323-13             | 1           | Screw-HH                     | 45          | 9266934            | 3           | Screw                          |
| 15          | 126-1478           | 2           | Sheave                       | 46          | 116-8187           | 1           | Belt                           |
| 16          | 109-6658           | 4           | Nut-Flange, NI               | 48          | 116-0094           | 1           | Cover-Belt, RH                 |
| 17          | 3234-11            | 1           | Screw-HHF                    | 49          | 126-1989           | 1           | Cover-Belt, LH                 |
| 18          | 103-2916           | 1           | Guard-Top                    | 50          | 133-2157           | 2           | Blade-Rotary, Atomic 20.5      |
| 19          | 302-19             | 1           | Fitting-Grease               | 51          | 126-8142           | 1           | Blade-Rotary, Cr 20.5 Low Flow |
| 20          | 108-1921           | 1           | Spring-Torsion               | 52          | 125-1736           | 3           | Washer-Belleville              |
| 21          | 125-9325           | 1           | Nut-Lock,NI Left Hand Thread | 53          | 51-4060            | 2           | Screw-Blade                    |
| 22          | 3231-7             | 7           | Screw-CARR                   | 54          | 125-9326           | 1           | Screw-Blade, LH                |
| 23          | 1-633456           | 1           | Bushing, Idler               | 55          | 3230-3             | 1           | Screw-CARR                     |
| 24          | 116-4670           | 1           | Pulley-Idler, Flat           | 56          | 126-4781-03        | 1           | Step-Deck                      |
| 25          | 52-2860            | 2           | Washer                       | 57          | 126-6628           | 1           | Belt-V                         |
| 26          | 126-0976           | 1           | Idler Arm ASM                | 58          | 126-8204           | 2           | Caplug-Round                   |
| 27          | 116-5111           | 1           | Bushing                      |             |                    |             |                                |

Deck Decal Assembly No. 126-8924

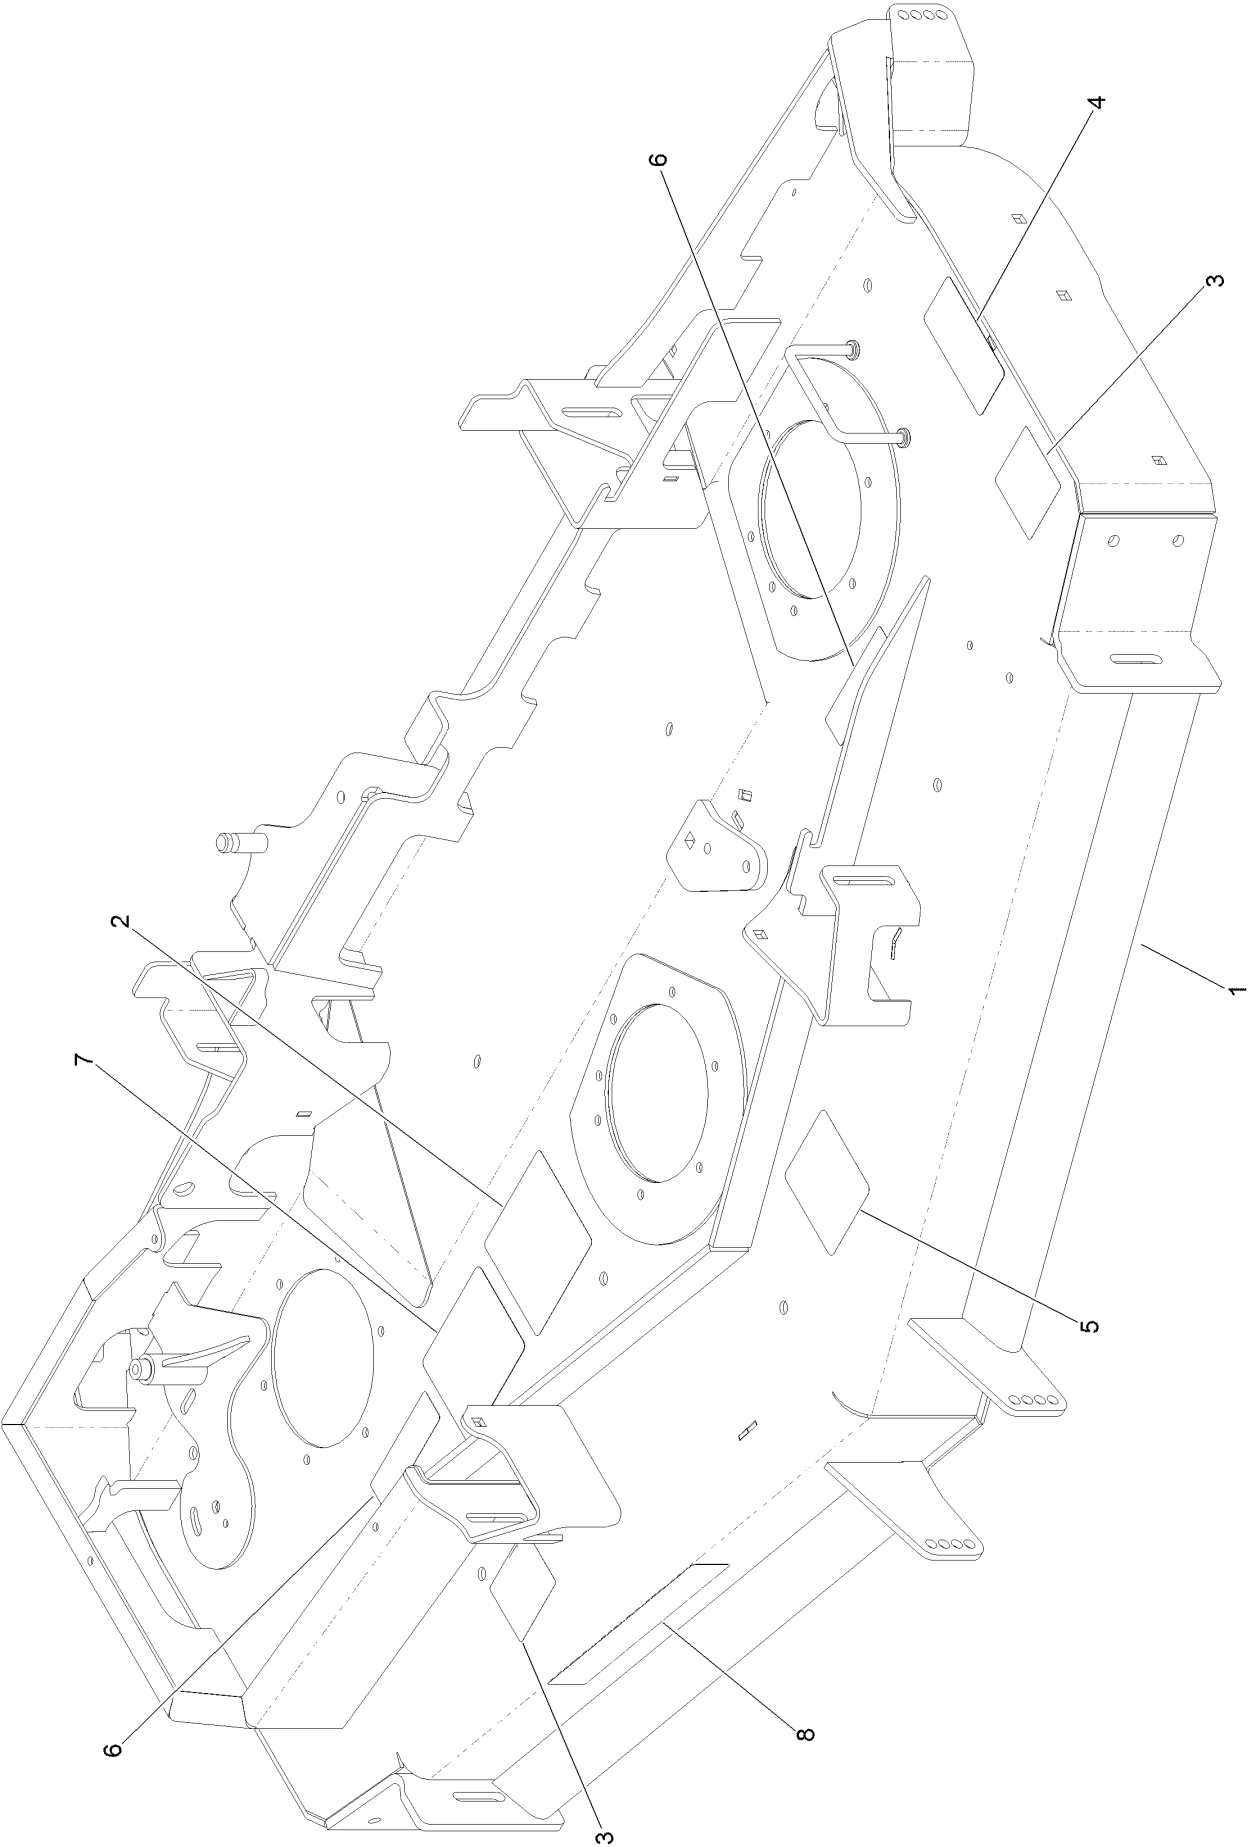


## Deck Decal Assembly No. 126-8924 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                 |
|-------------|--------------------|-------------|--------------------------------|-------------|--------------------|-------------|------------------------------------|
| 1           |                    | 1           | Deck Decal ASM ●               | 5           | 109-6036           | 1           | Decal-Roller, Anti-Scalp           |
| 2           | 126-0768           | 1           | Decal-Routing, Belt            | 6           | 112-9028           | 2           | Decal-Cover, Missing               |
| 3           | 135-0664           | 2           | Decal-Danger, Thrown<br>Object | 7           | 127-6662           | 1           | Decal-Spindle, Counter<br>Rotating |
| 4           | 93-7818            | 1           | Decal-Torque, Blade Bolt       | 8           | 121-3206           | 1           | Decal                              |

● Not serviced separately

# Idler Assembly No. 126-0853

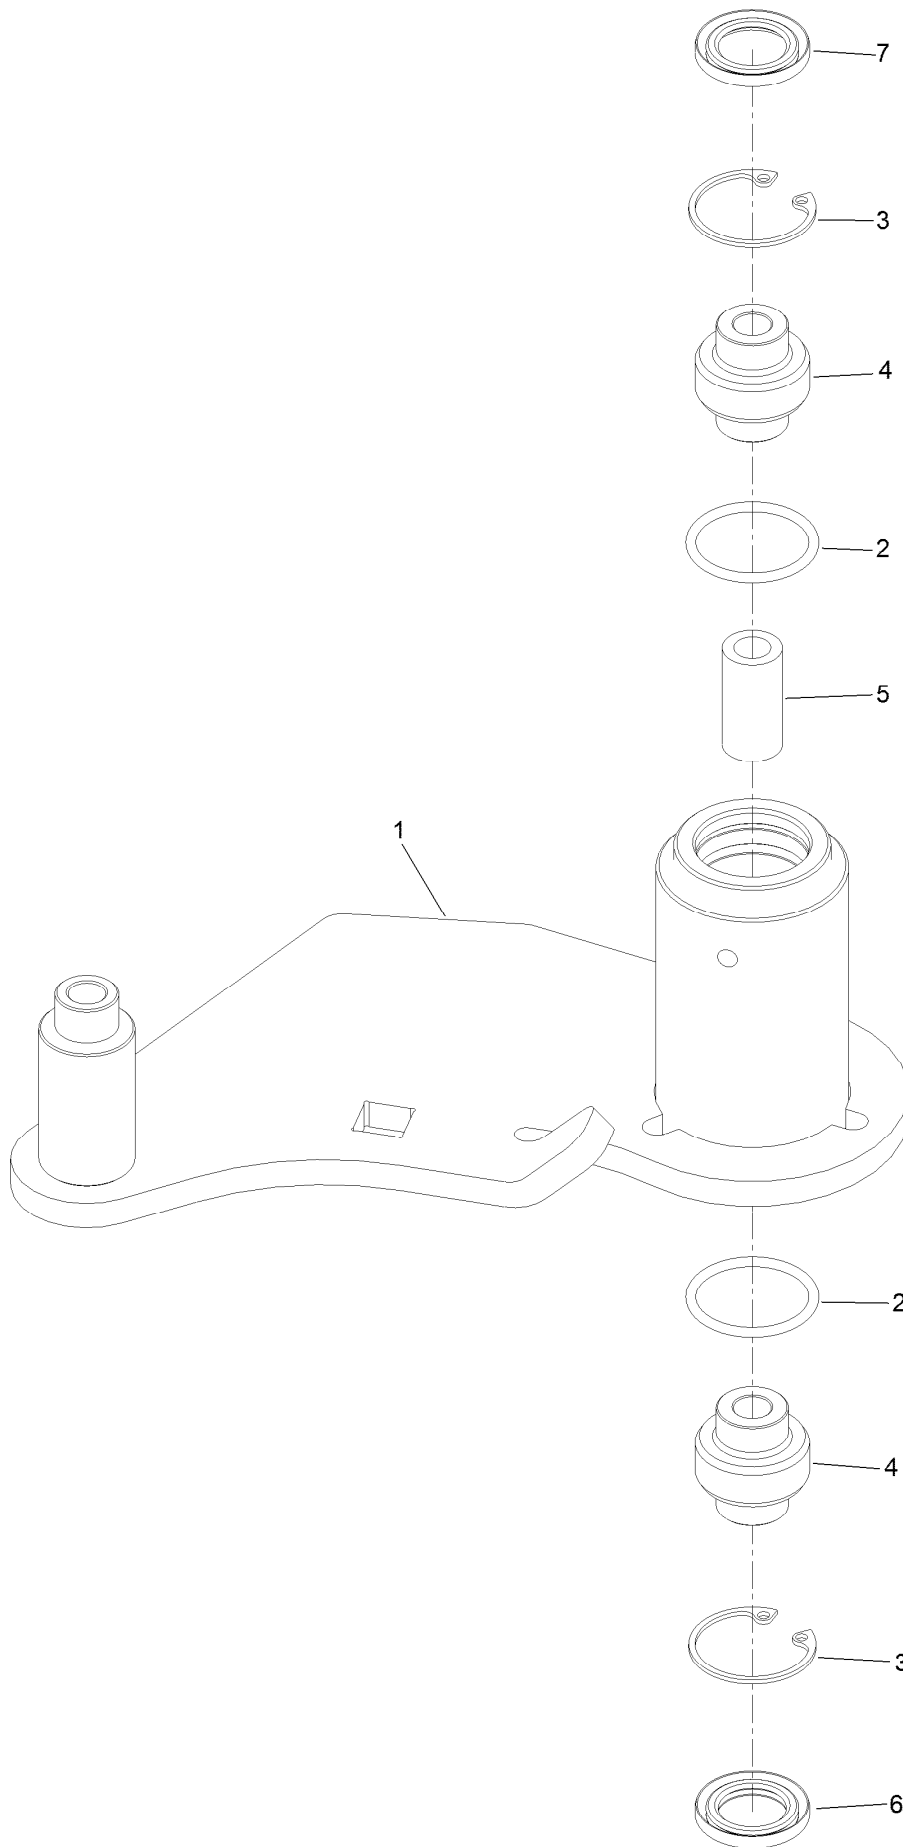


## Idler Assembly No. 126-0853 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           |                    | 1           | Idler-Deck ●       |
| 2           | 106-7159           | 2           | O-Ring             |
| 3           | 32120-10           | 2           | Ring-Snap          |
| 4           | 103-3504           | 2           | Bearing-Spherical  |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 108-6544           | 1           | Spacer             |
| 6           | 103-3505           | 1           | Seal-Lip, Double   |
| 7           | 103-3506           | 1           | Seal-Lip, Single   |

● Not serviced separately

# Idler Arm Assembly No. 126-0976

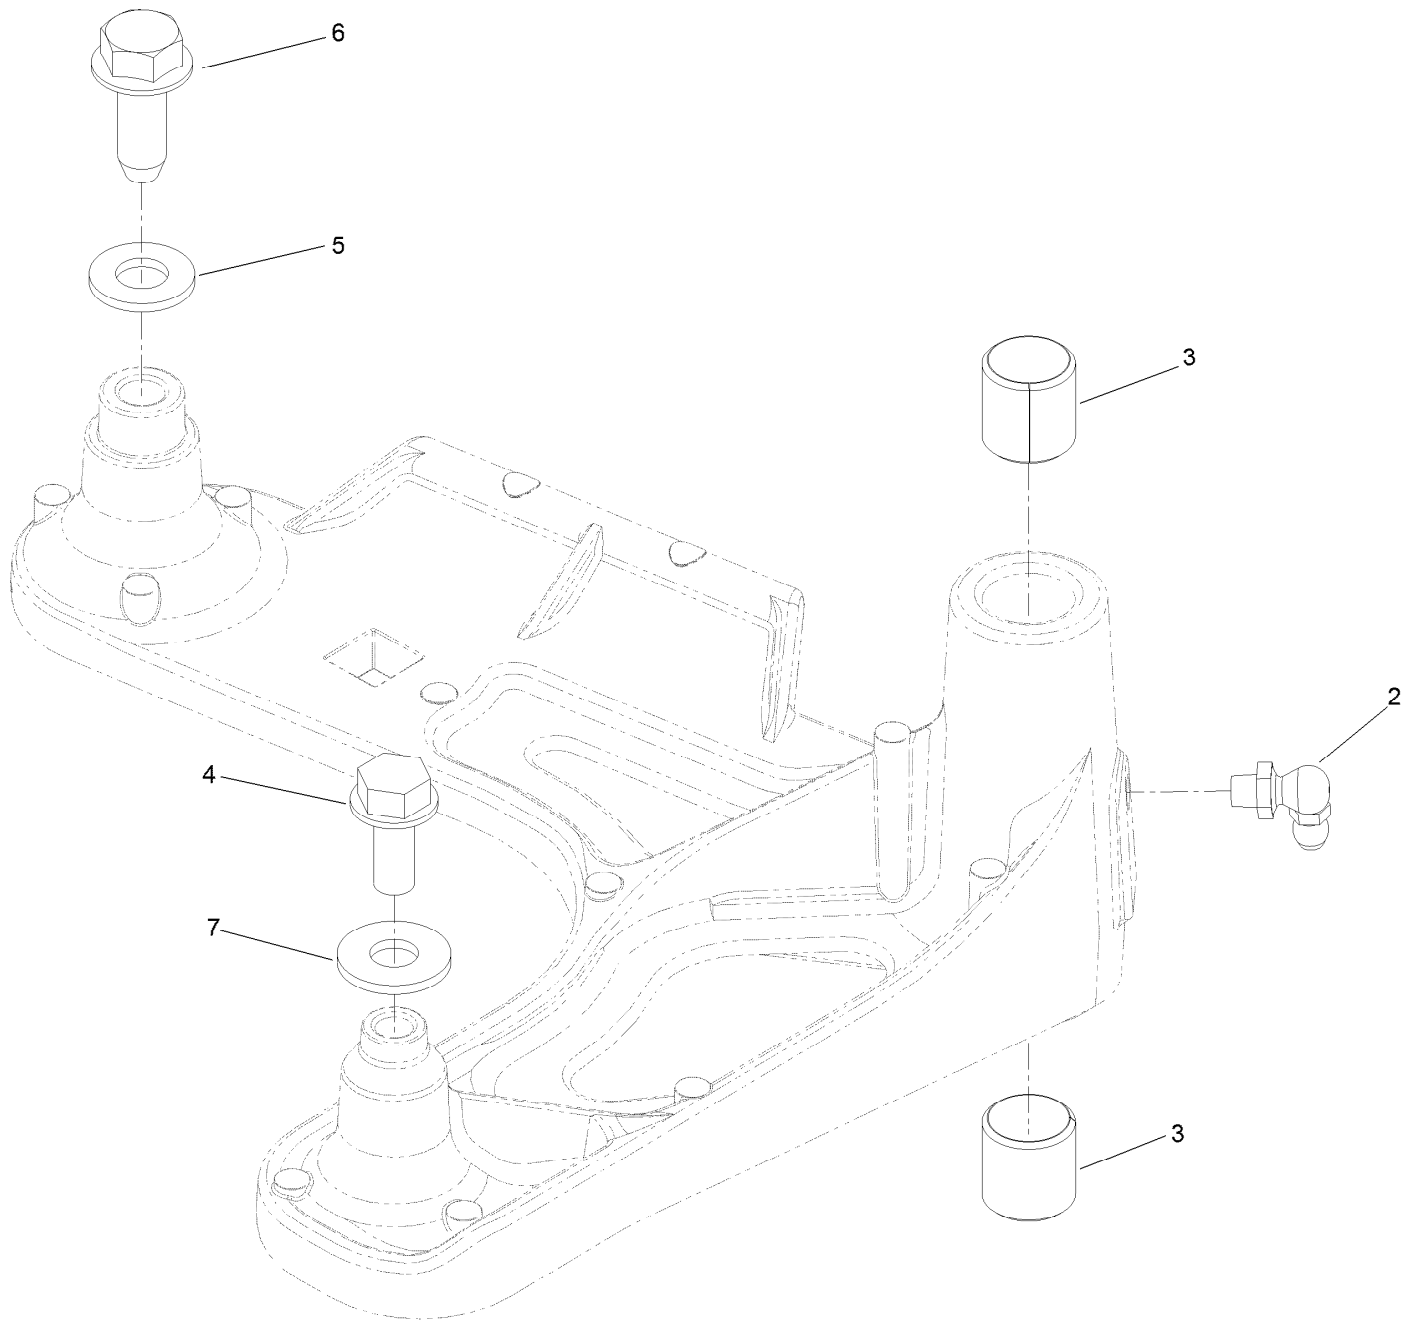

## Idler Arm Assembly No. 126-0976 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 2           | 302-40             | 1           | Fitting-Grease, 90 DEG |
| 3           | 1-513034           | 2           | Sleeve-Bearing         |
| 4           | 32144-11           | 1           | Screw-HWH              |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 3256-24            | 1           | Washer-Plain       |
| 6           | 126-1696           | 1           | Screw-HWHTF        |
| 7           | 3256-3             | 1           | Washer-Flat        |

# Attachments and Accessories

## For 74463 TITAN HD 2000 Series Riding Mower with 60in Rear-Discharge Deck

| Product Name                                                     | Model/Part |
|------------------------------------------------------------------|------------|
| Hypr-Oil 500 (quart) .....                                       | 114-4713   |
| Hypr-Oil 500 (gallon).....                                       | 114-4714   |
| Hypr-Oil 500-5 (5 gallon).....                                   | 114-4715   |
| Finish Cut Kit .....                                             | 116-8547   |
| Toro Hydro Kit.....                                              | 121-3783   |
| LED Light Kit.....                                               | 126-5382   |
| Front Bucket Bracket Kit .....                                   | 126-7011   |
| Sunshade Kit .....                                               | 126-8077   |
| Blade-Rotary, CR 20.5in Low Flow .....                           | 126-8142   |
| Cover-Hitch.....                                                 | 126-8299   |
| Trash Container Kit.....                                         | 126-8379   |
| Weight Caster Kit.....                                           | 126-8639   |
| Flat Free Wheel and Bearing Kit .....                            | 126-9368   |
| Jack Kit.....                                                    | 127-6666   |
| Engine Maint Kohler ZT Kit .....                                 | 133-1306   |
| Hi-Back Seat Cover .....                                         | 133-1308   |
| 5 Gallon Bucket .....                                            | 133-2533   |
| Trimmer Mount Kit .....                                          | 136-1682   |
| ROPS Pin Kit.....                                                | 136-1683   |
| Bucket Mount Kit.....                                            | 136-9045   |
| Universal Mount Kit Mower .....                                  | 136-9046   |
| Titan HD Triple Threat Attachment Kit.....                       | 136-9047   |
| Extended Control Levers Kit, Dedicated-Bagging Riding Mower..... | 138-6020   |
| Toro Deluxe Rider Cover.....                                     | 490-7319   |

**Notes:**



**Count on it.**