



Proline 21"

Recycler[®] /Rear Bagging Mower

Model No. 22162-200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Gear Case & Rear Wheel Assembly	9
Housing Assembly (Cont.)	4	Gear Case Assembly	10
Blade Brake Clutch Assembly	5	Grass Bag Assembly No. 99–2535	11
Fuel Tank Assembly	6	Rear Wheel & Tire Assembly	12
Handle Assembly	7	Engine GTS–200	13–21
Handle Control Assembly	8	Maintenance	22–23

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Discharge Kit	Model No. 59199		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

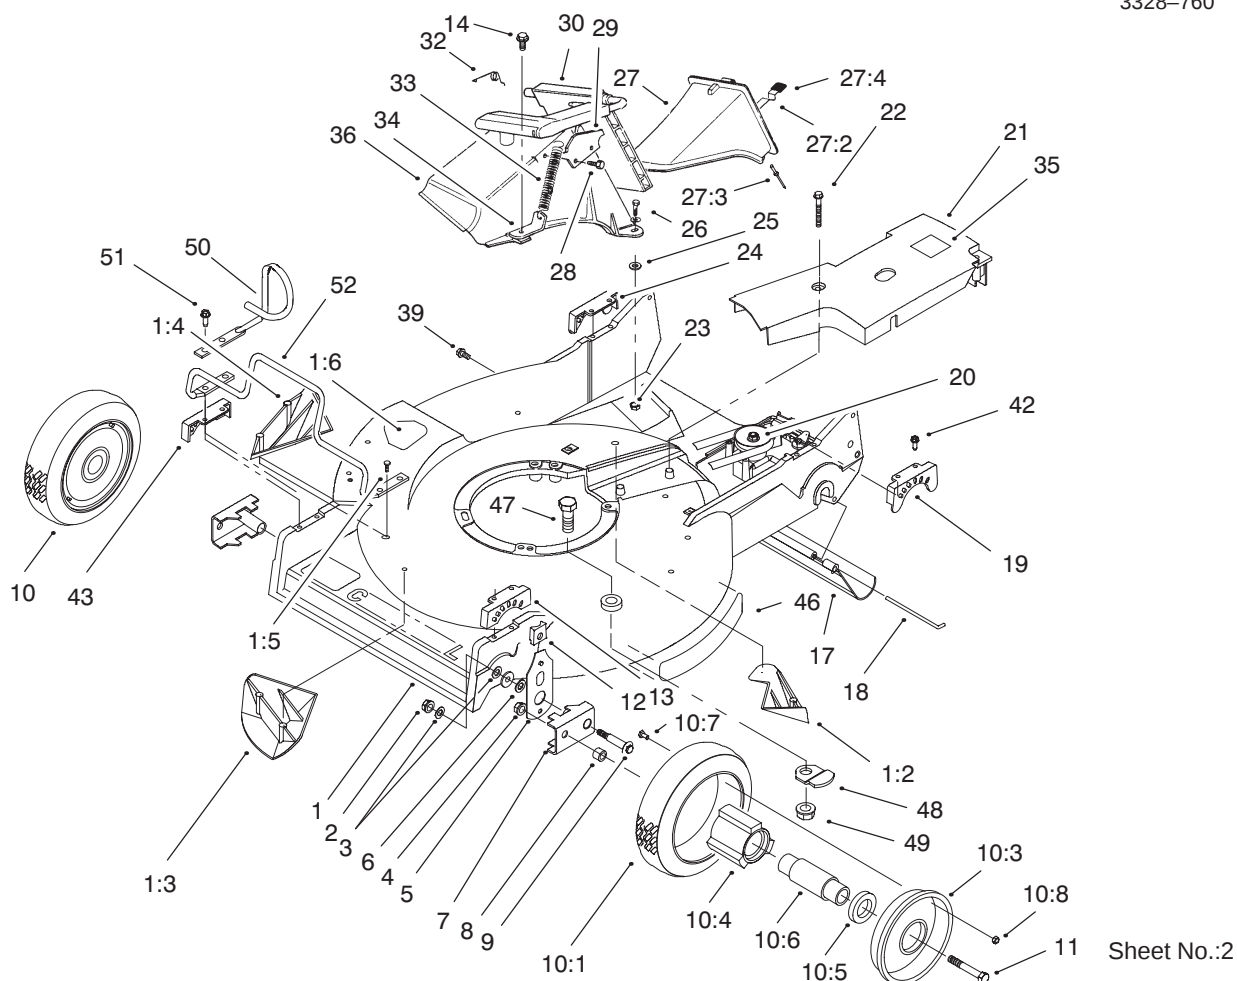


Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7146	1	Housing	14	46-6811	1	Screw-HWH
1:2	92-1750	1	Plate-Kicker Rear	17	44-0580	1	Shield-Trailing
1:3	92-1720	1	Kicker-RH	18	33-3208	1	Rod-Shield
1:4	92-1730	1	Kicker-LH	19	49-8740	1	Quadrant-Rear
1:5	32144-111	6	Screw - PPH	20	74-1861	1	ASM-Gearcase
1:6	43-8480	1	Decal-Danger	21	98-3214	1	Cover-Belt
2	3296-6	2	Nut-Lock	22	37-7260	2	Screw-TAP
3	40-1940	4	Washer	23	3296-42	2	Nut-Lock
4	32152-2	2	Nut-Lock HH	24	49-8750	1	Quadrant-Rear
5	66-7560	2	ASM-Arm	25	3256-22	2	Washer-Flat
6	257-3	2	Washer-Thrust	26	321-7	2	Screw-Cap
7	61-8300	2	ASM-Arm	27	77-0500	1	ASM-Plug
8	52-2480	2	Spacer	27:2	76-4640	1	Latch Discharge Plug
9	27-6232	2	Bolt-Wheel HH	27:3	3295-35	1	Rivet Solid
10	53-7720	2	ASM-Wheel & Tire	27:4	76-4650	1	Grip Latch
10:1	53-7740	2	Tire-8.00	28	46-8090	2	Screw-Tapping
†10:2		2	ASM-Wheel	29	93-3154	1	Plate-Latch
10:3	53-7780-03	4	Plate-Wheel Half	30	93-7351	1	ASM-Door
10:4	52-2410	2	Hub-Bearing Support	32	80-3770	1	Retainer-Door
10:5	52-2450	4	Ball Bearing	33	76-4660	1	Spring-Extension
10:6	52-2440	2	Spacer-Bearing	34	71-9350	1	Spring-Bracket
10:7	321-2	8	Screw-HH	35	52-2620	1	Label-Grease
10:8	3296-42	8	Nut-Lock	36	82-9152	1	Chute-Discharge
11	323-12	2	Screw	39	46-6810	1	Screw HWH
12	25-7740	2	Knob-Arm	42	49-2040	8	Screw-HH
13	49-8760	1	Quadrant-Front				

 
† Included in a service kit or in an assembly

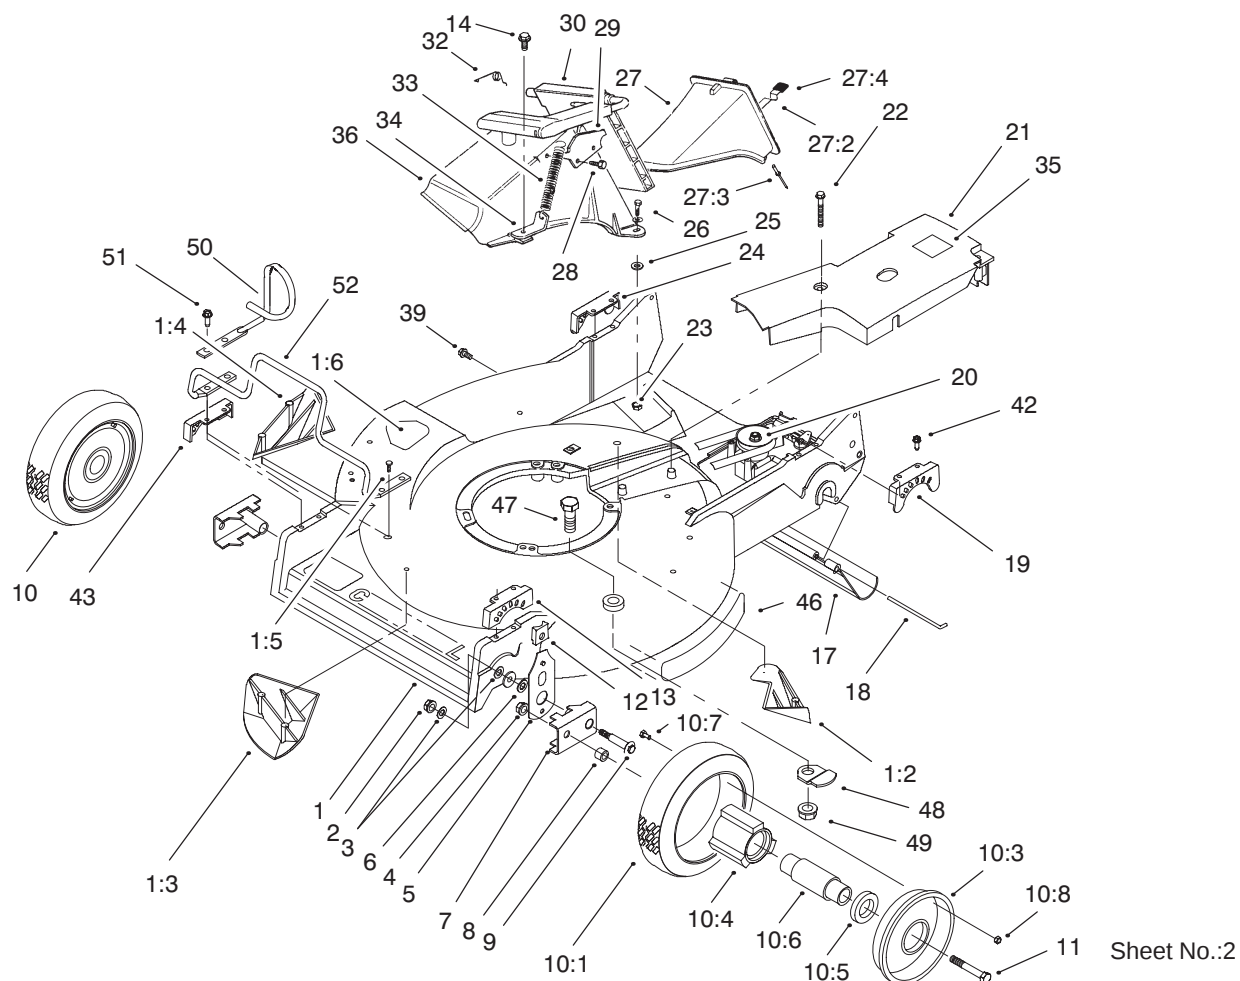

Housing Assembly (Cont.)

Ref. No.	Part No.	Qty.	Description
43	49-8770	1	Quadrant-Front
46	92-7988	1	Decal-Recycler
47	323-6	2	Screw-HH
48	84-8930	2	Retainer-Shield
49	3296-39	2	Nut-Lock
50	98-9227	1	Guard-Primer
51	32144-86	4	Screw-Hex HH
52	99-6722	1	Guard-Engine

Ref. No.	Part No.	Qty.	Description

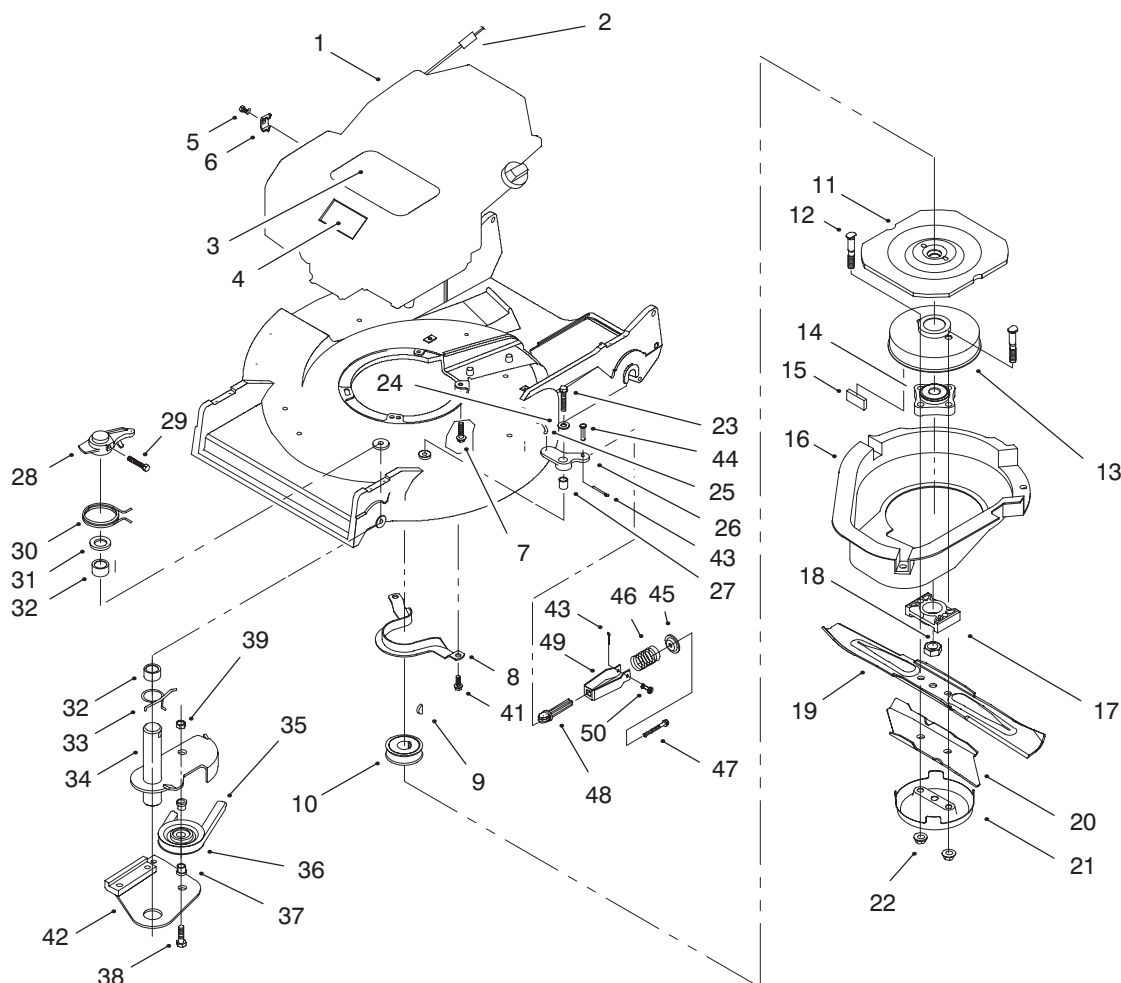 

Sheet No.:3

Blade Brake Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9246	1	Engine Gts 200 Bbc Pro
2	2210-316	1	Rope-Stop
3	98-2002	1	Decal-Engine
4	84-4960	1	Decal-Proline
5	93-8470	1	Screw-Clamp
6	2210-249	1	Clamp-Casing
7	32144-102	3	Screw
8	66-0570-03	1	Guide-Belt
9	3257-17	1	Key-Woodruff
10	56-6180	1	Pulley-Driver
11	56-6160	1	Flywheel-Bbc
12	42-3190	2	Bolt-Blade
13	94-9431	1	Drum-Brake
14	42-6890	1	ASM-Hub
15	52-3480	2	Damper-Vibration
16	46-5693	1	Shield-Bbc
17	62-4280	1	Spacer-Blade
18	3296-33	1	Nut-Lock
19	14-9419	1	Blade-Generation li
20	91-2255-03	1	Stiffener-Blade
21	80-2770	1	Cup-Anti Scalp
22	54-9190	2	Nut-Lock
23	32104-107	1	Screw-HH
24	3256-23	1	Washer-Flat
25	49-2810	1	Link-Control


Ref. No.	Part No.	Qty.	Description
26	49-7960	1	Bell Crank
27	49-7950	1	Sleeve-Bell Crank
28	49-2820	1	Lever
29	32104-96	1	Screw-HHST
30	49-7970	1	Spring-Torsion
31	70-1160	1	Washer-Pm
32	68-9780	2	Bearing
33	85-6880	1	Spring-Torsion
34	84-9130	1	Brake Plate
35	42-0884	1	V Belt-Bbc
36	46-5650	1	Pulley-Idler
37	46-5631	2	Hub-Idler Pulley
38	322-6	1	Screw-HH
39	3296-47	1	Nut-Lock
41	32144-70	2	Screw-TAP
42	84-9180	1	Brake Plate ASM
43	3272-1	2	Pin-Cotter
44	84-9050	1	Pin-Spring Guide
45	65-5280	1	Retainer-Spring
46	84-9100	1	Spring-Bbc
47	46-7040	1	Screw-HWH
48	84-8870	1	Guide-Spring
49	84-8880-03	1	Bracket-Spring
50	84-9040	1	Pin-Cable



Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3166	1	Tank-Gas
2	55-3570	1	Cap-Fuel
3	51-3210	2	Fuel Line
4	71-9280	1	Filter-Fuel
5	84-9170-03	1	Wa-Base
6	2412-95	4	Clamp
7	95-1727	2	Screw-HH
8	46-8091	2	Screw-Tapping
9	84-8930	1	Retainer-Shield


Ref. No.	Part No.	Qty.	Description

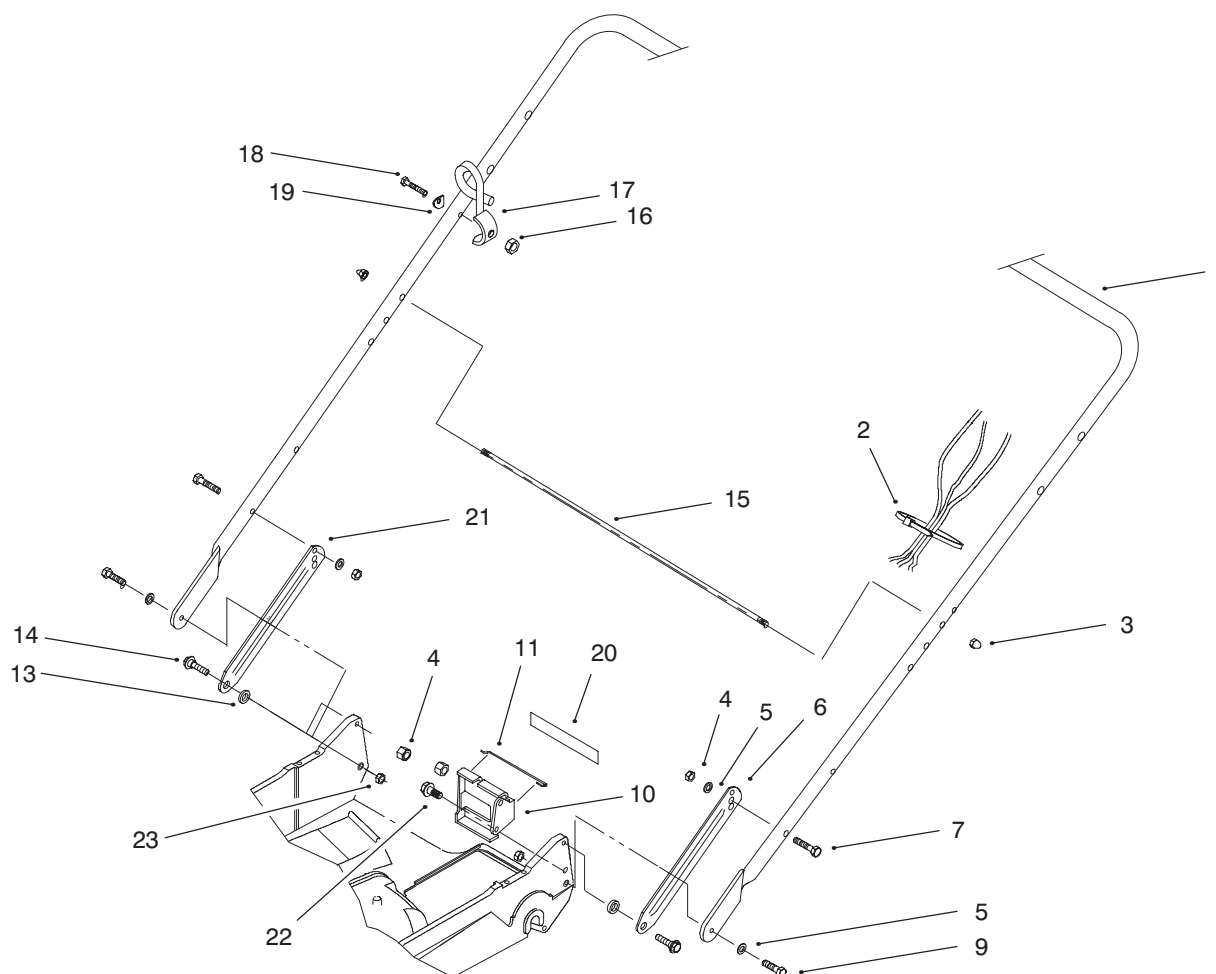 

Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2385-03	1	Handle
2	3290-378	1	Tie-Cable
3	32111-7	2	Nut-Cap
4	3296-29	4	Nut-Lock
5	3290-456	4	Washer-Lock
6	100-3298-03	1	Latch-Handle
7	322-7	2	Screw-HH
9	322-6	2	Screw-HH
10	74-1741-03	1	Bracket-Adjust
11	46-7030	1	Retainer-Cable
13	3-3287	2	Spacer
14	27-7210	2	Screw-Shoulder
15	48-2810	1	Rod-Support
16	3296-42	1	Nut-Lock
17	46-8081	1	Guide-Rope
18	321-9	1	Screw-HH
19	3-7501	1	Washer-Curved
20	74-1970	1	Decal-Drive
21	100-3297-03	1	Latch-Handle
22	32144-70	1	Screw-TAP
23	3296-47	2	Nut-Lock

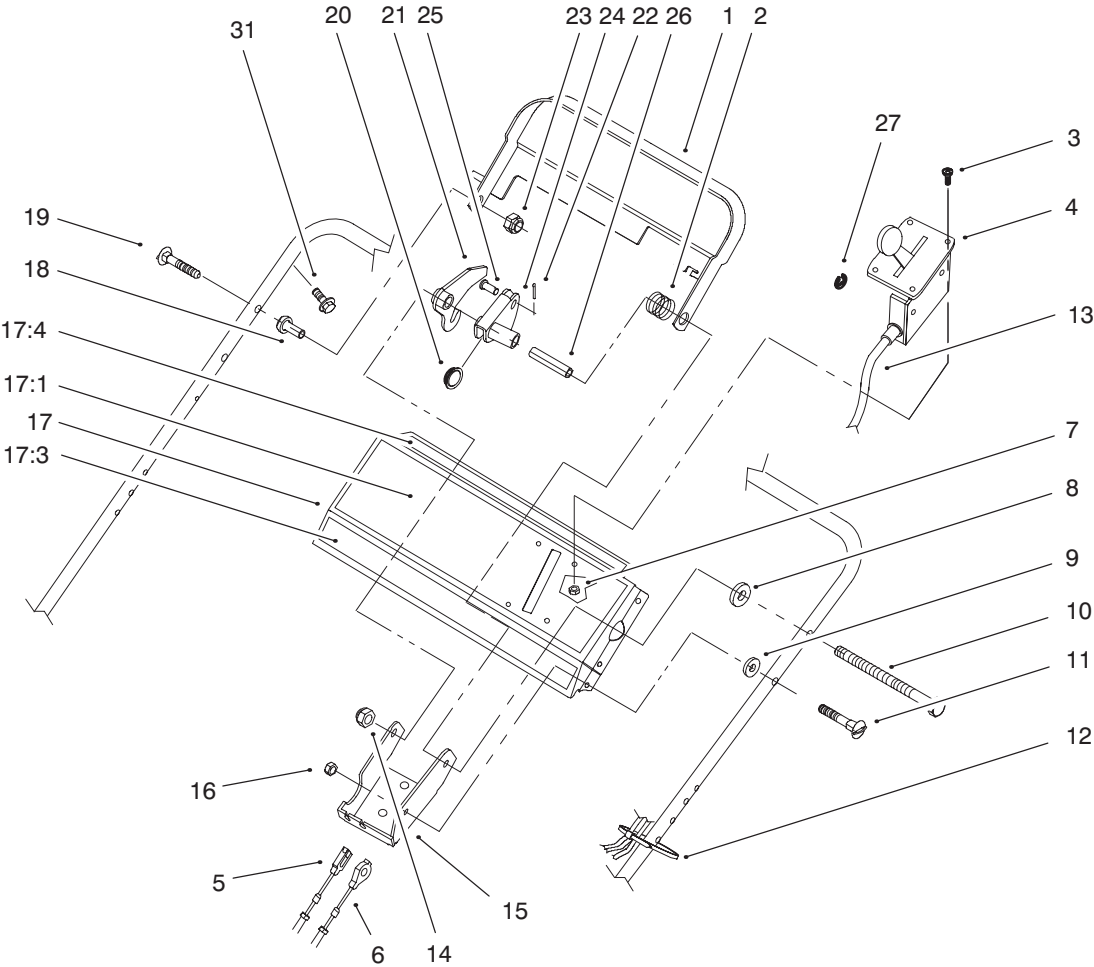 


Sheet No.:6

Handle Control Assembly

Ref. No.	Part No.	Qty.	Description
1	98-4995-03	1	Control Bar W.a.
2	85-6750	1	Spring-Control
3	3250-12	4	Screw
4	98-2005	1	Control-Throttle
5	84-9120	1	Cable-Traction
6	84-9110	1	Cable-Clutch
7	3296-2	4	Nut-Lock
8	71-9310	1	Spacer
9	71-9320	1	Spacer
10	322-19	1	Screw-Hex
11	46-6430	1	Screw-Handle
12	3290-378	1	Tie-Cable
13	98-2047	1	Cable-Throttle
14	3296-29	1	Nut-Lock
15	92-1778-03	1	Bracket-Control
16	3296-42	1	Nut-Lock
17	98-9245	1	Panel-Control
17:1	98-2003	1	Decal-Panel
17:3	85-6720	1	Decal-Proline Panel
17:4	63-9060	1	Decal-Danger
18	49-1631	1	Spacer-Support
19	17-9427	1	Screw-Handle
20	86-9320	1	Bushing-Nylon
21	84-9000	1	Traction Lever
22	3272-1	1	Pin-Cotter
23	3296-58	1	Nut-Flange


Ref. No.	Part No.	Qty.	Description
24	84-8990	1	Bbc Lever
25	84-9040	1	Pin-Cable
26	84-9030	1	Spacer-Control
27	32151-86	1	Ring-E
31	32104-76	6	Screw-Self TAP

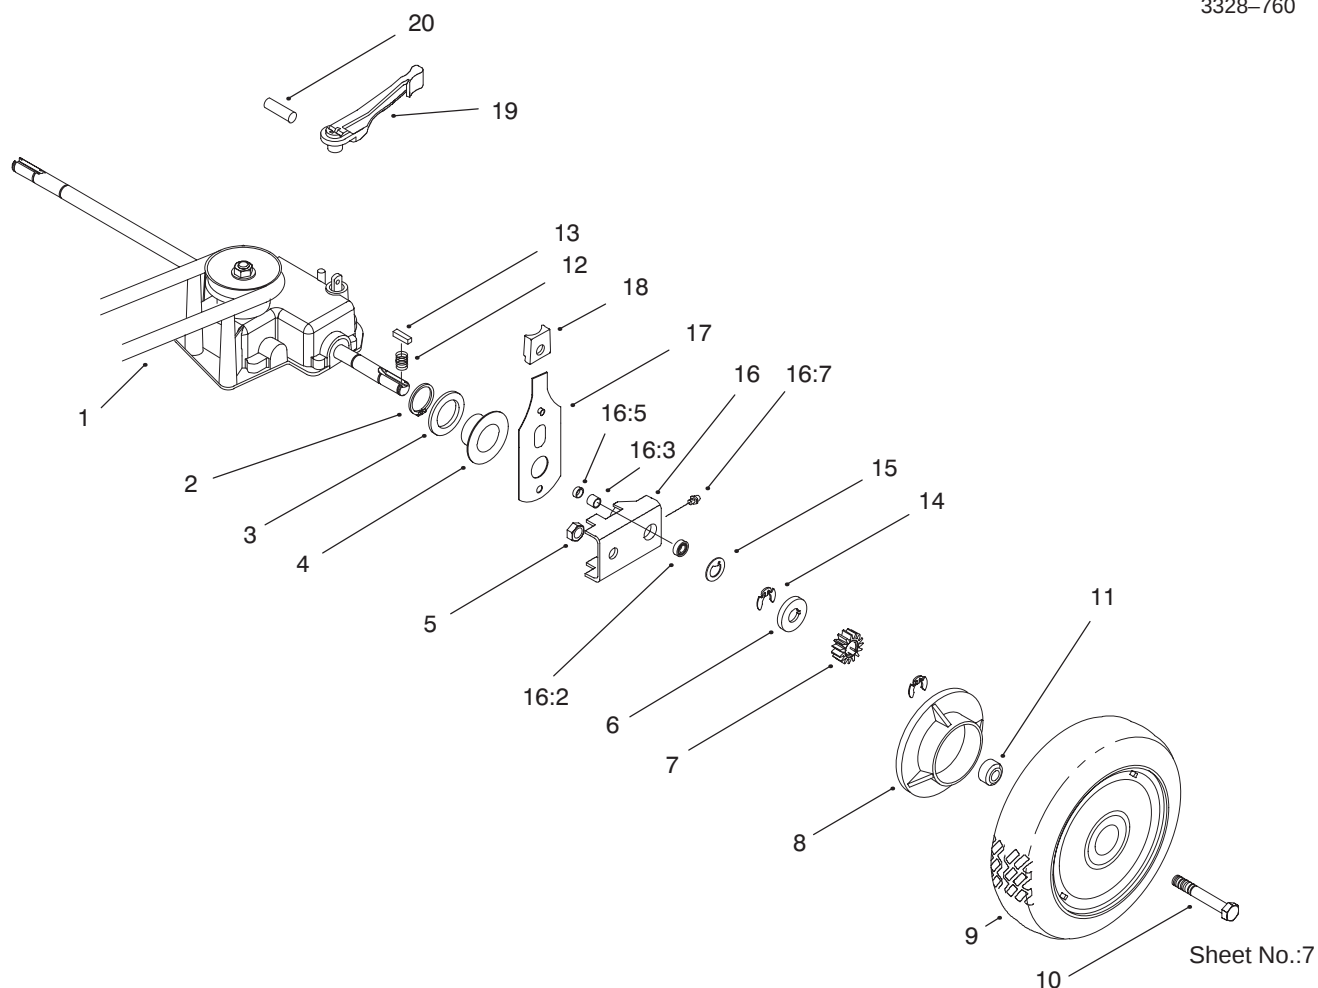 

Gear Case & Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	36-8070	1	"V" Belt
2	32151-36	2	Ring-Retaining Ext
3	74-1810	2	Washer-Thrust
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Lock HH
6	62-3830	2	Washer-Thrust
7	39-9160	2	Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	ASM-Wheel & Tire
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover
12	39-9650	2	Spring
13	612066	2	Key-Pinion
14	32151-68	4	Ring-Klip
15	49-7700	2	Washer-Thrust
16	74-1851	2	ASM-Arm
16:2	52-2450	2	Ball Bearing
16:3	48-2060	2	Bearing-Needle
16:5	47-6730	2	Seal-Oil
16:7	92-6316	2	Fitting-Grease
17	66-7561	2	ASM-Arm
18	25-7740	2	Knob-Arm
19	74-1960	1	Lever-Shift
20	32121-99	1	Pin-Roll

Ref. No.	Part No.	Qty.	Description

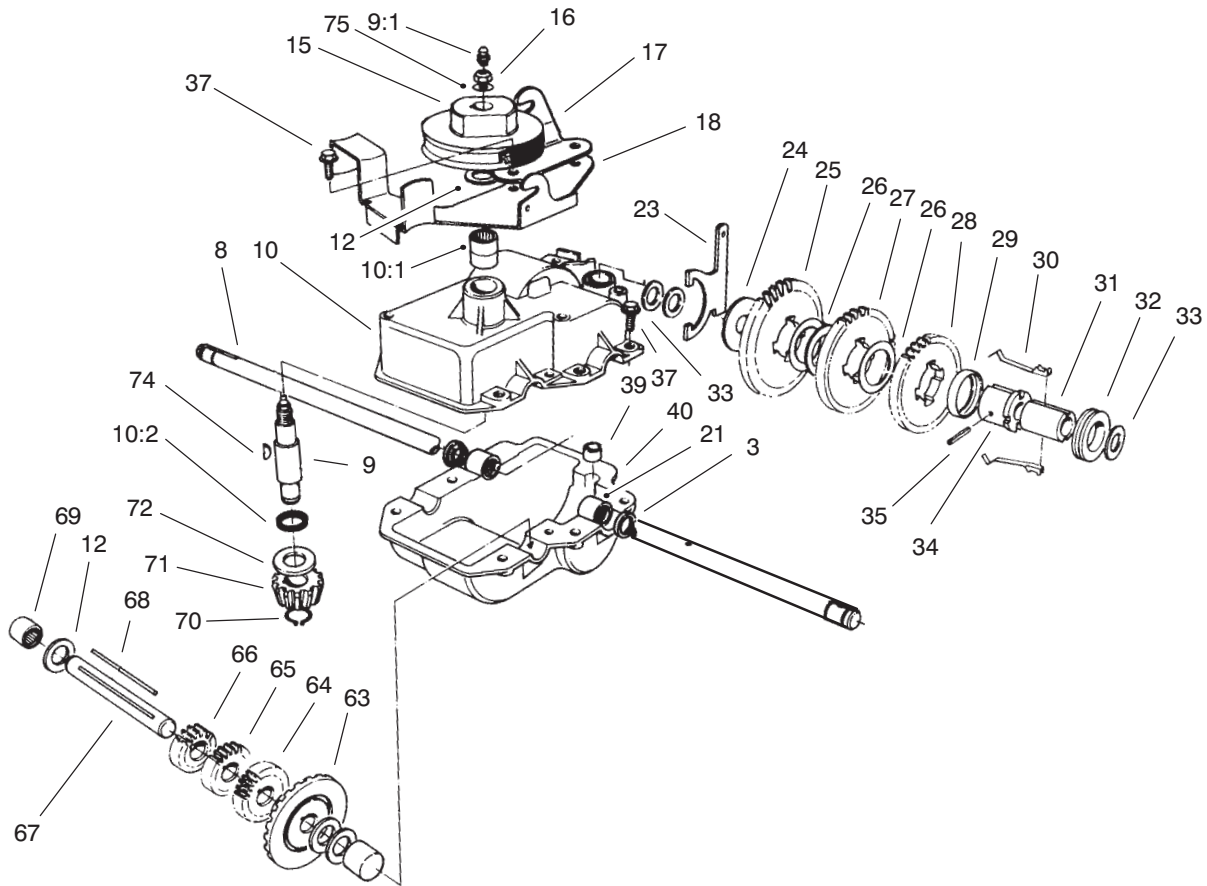 


Sheet No.:100

Gear Case Assembly

Ref. No.	Part No.	Qty.	Description
3	48-2060	2	Bearing-Needle
8	74-1890	1	Shaft-Output
9	13-5149	1	Shaft-Input
9:1	302-63	1	Fitting-Grease
10	13-9739	1	Upper Case Assembly
10:1	47-7270	2	Bearing-Needle
10:2	47-7260	1	Seal
12	36-4792	4	Washer-Thrust
15	39-6740	1	Pulley
16	3296-5	1	Nut-Lock
17	74-1750-03	1	Bracket-Traction Engage
18	49-8461-03	1	Bracket-Guide Belt
21	47-6730	2	Seal
23	60-8870	1	Yoke-Shift
24	29-9690	1	Washer-Flat
25	46-3560	1	Gear-52t
26	36-4770	3	Spacer-Gear
27	29-9271	1	Gear-42t
28	42-4740	1	Gear-38t
29	55-8020	1	Retainer-Key
30	29-9330	2	Key-Shift
31	39-6720	1	Sleeve
32	29-9340	1	Collar-Shift
33	36-4780	3	Washer-Flat
34	55-8010	1	Sleeve-Gear

Ref. No.	Part No.	Qty.	Description
35	3285-19	1	Pin-Groove
37	49-2040	6	Screw-Self Tapping
39	29-9570	1	Bushing-Yoke
40	74-1920	1	Case-Lower
63	74-1760	1	Gear-Bevel
64	39-6650	1	Gear-18t
65	46-3550	1	Gear-14t
66	46-3540	1	Gear-12t
67	53-7950	1	Shaft-Intermediate
68	39-7842	1	Key-Square
69	252-103	2	Bearing-Closed
70	32151-57	1	Ring-Retaining
71	39-6660	1	Pinion-bevel
72	47-2910	1	Washer-Thrust
74	3257-1	2	Key-Woodruff
75	3256-45	1	Washer-Flat
*	74-1861	1	Gear Case Assembly Complete

 * Not illustrated

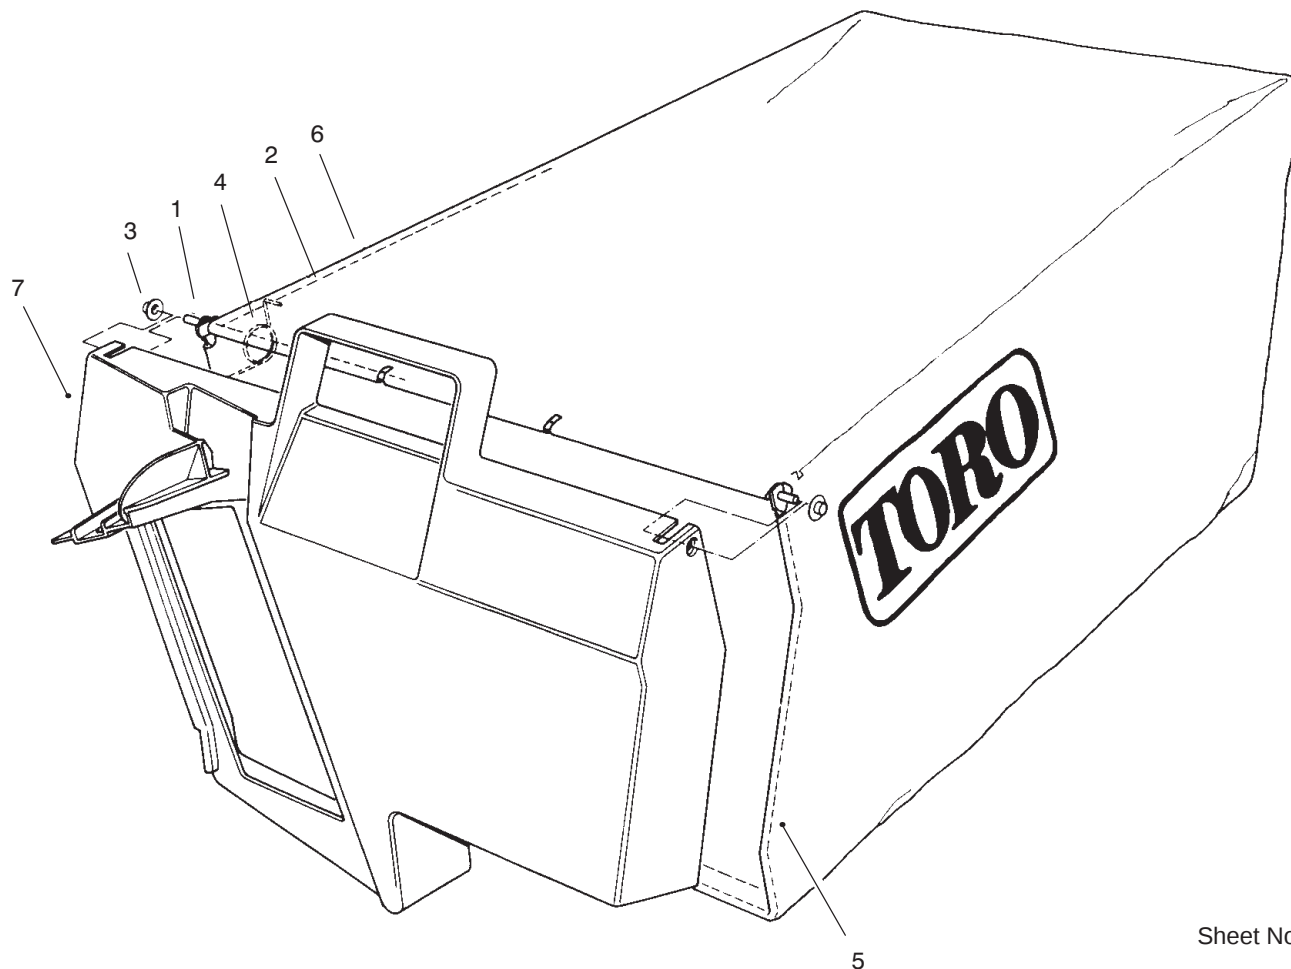

Sheet No.:300

Grass Bag Assembly No. 99-2535

Ref. No.	Part No.	Qty.	Description
*0	99-2535	1	Grass Bag-Proline
1	33-4820	1	Hinge-Door
2	42-4030	1	Frame-Bag
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	98-9225	1	Bag-Grass
7	48-2840	1	Door-Bag

Ref. No.	Part No.	Qty.	Description

* Not illustrated


Exploded view diagram of a mechanical assembly. The components are labeled with callouts:

- 1: Main housing or flange with a central bore.
- 2: A central shaft or pin.
- 3: A small cylindrical component, possibly a bush or spacer.
- 4: A small cylindrical component, possibly a bush or spacer.
- 5: A small cylindrical component, possibly a bush or spacer.
- 6: A small cylindrical component, possibly a bush or spacer.
- 7: A circular flange or end plate with a central bore and four mounting holes.

Rear Wheel & Tire Assembly

Ref. No.	Part No.	Qty.	Description

 12

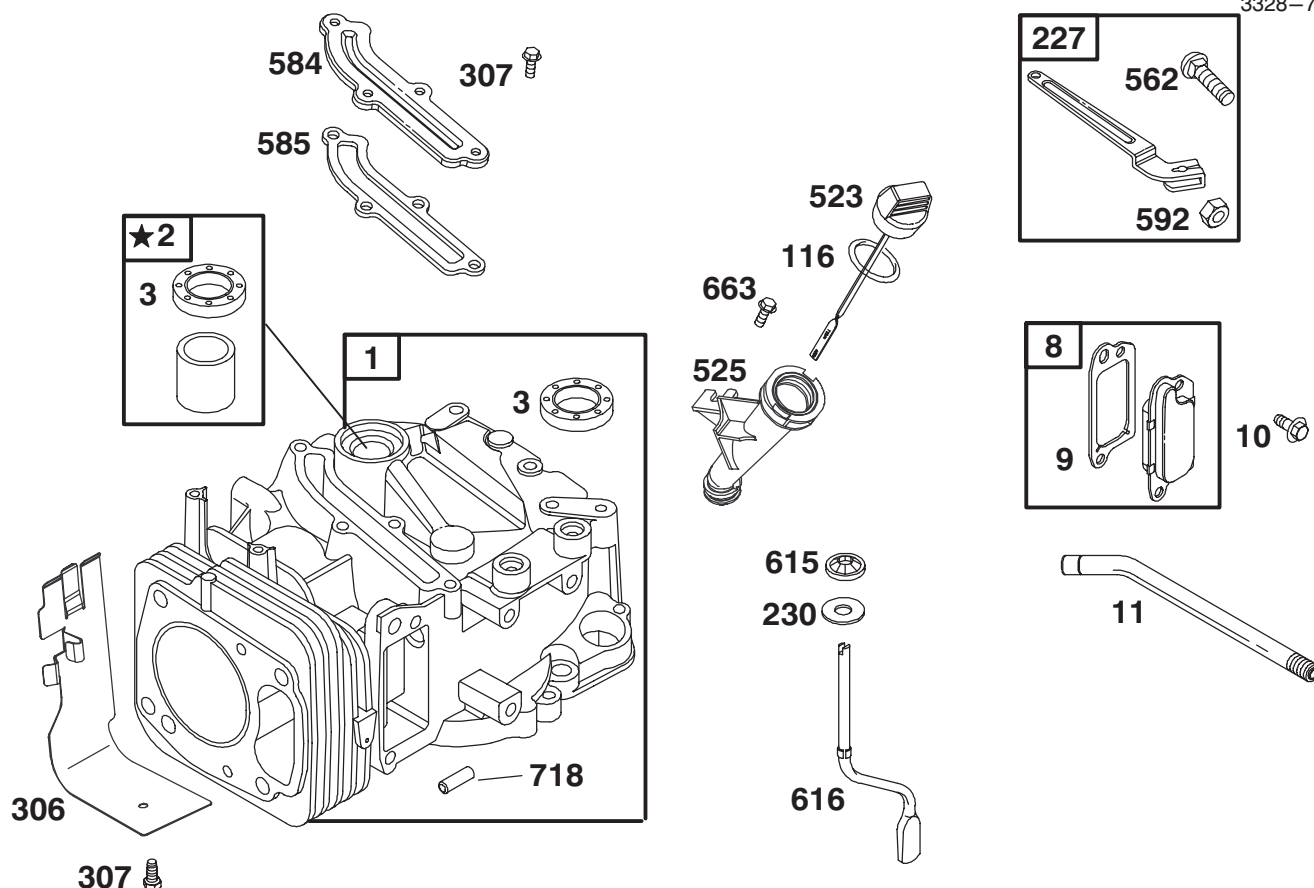

★ **REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
1	99-0900	Cylinder Assembly	1
2	99-0911	Bushing	1
★3	99-0912	Seal - Oil	1
8	77-9260	Breather Assy.	1
†★9	99-0913	Gasket - Breather	1
10	99-0914	Screw - Hex.	1
11	99-0915	Tube - Breather	1
★116	99-0916	Seal - O Ring	1
227	99-0917	Lever Assembly - Gov.	1
230	99-0918	Washer - Gov. Crank	1
306	99-0919	Shield - Cylinder	1
307	99-0920	Screw - Hex.	1

Ref. No.	Part No.	Description	No. Used
523	77-7260	Dipstick	1
525	99-0906	Tube - Oil Filler	1
562	99-0921	Screw - Hex.	1
584	99-0922	Baffle - Cylinder	1
★585	99-0923	Gasket - Breather	1
592	99-0924	Nut - Hex.	1
615	99-0925	Fastener	1
616	99-0926	Crank - Governor	1
663	99-0927	Screw - Hex.	1
718	99-0928	Dowel - Sleeve	1

★ Included in Gasket Set - Part No. 99-0902

 † Included in Vavel Overhaul Gasket Set - Part No. 99-0904

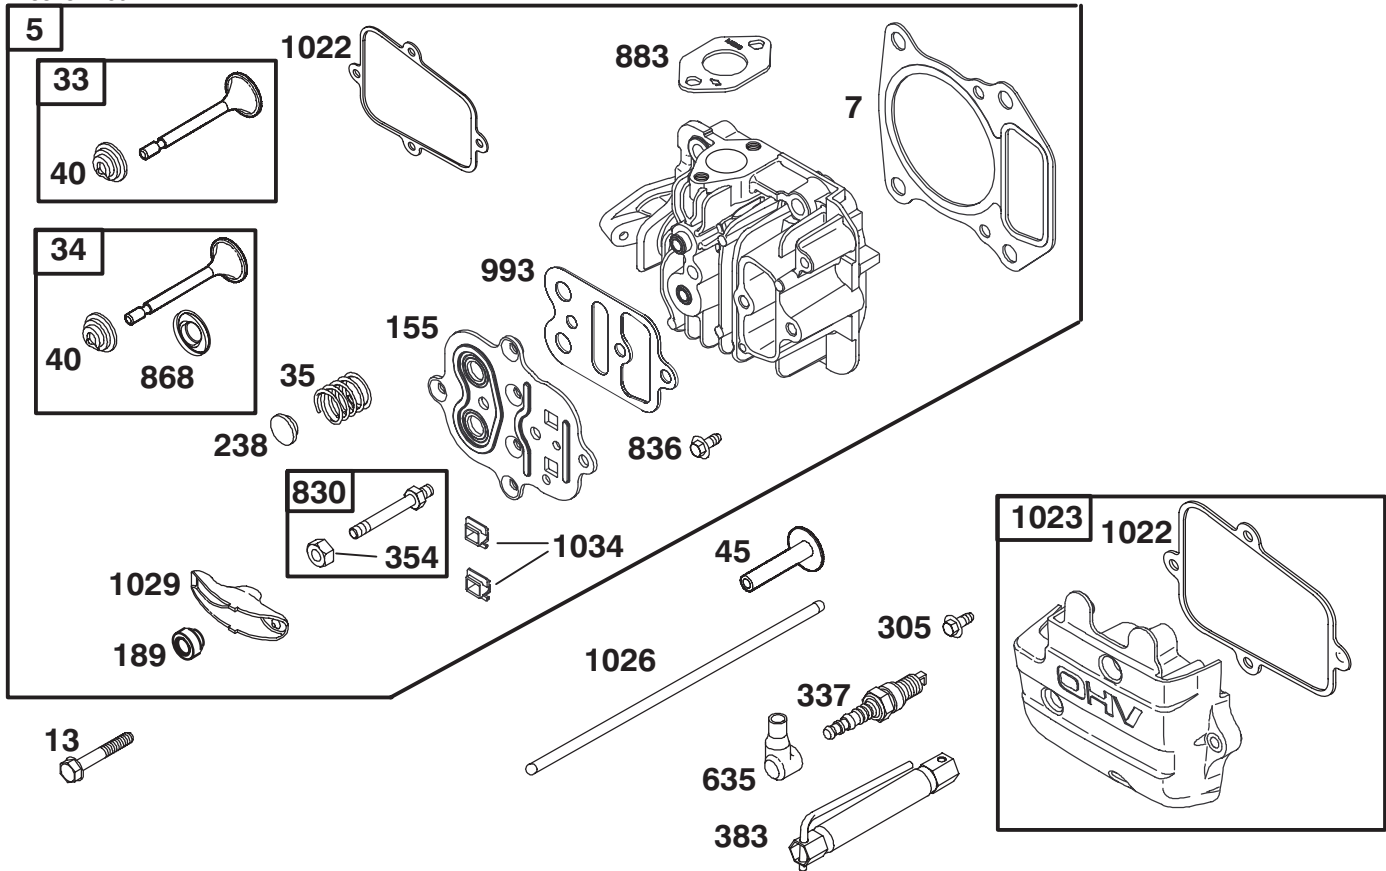

Assemblies include all parts shown in frames.


ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
5	99-0929	Head - Cylinder	1
†★7	99-0930	Gasket - Cylinder Head	1
13	99-0931	Screw - Hex.	1
33	99-0932	Valve - Exhaust	1
34	99-0933	Valve - Intake	1
35	99-0934	Spring - Valve	1
40	99-0935	Retainer - Valve Spring	1
45	99-0936	Tappet - Valve	1
155	99-0938	Plate - Cylinder Head	1
189	99-0939	Ball - Rocker Arm	1
238	99-0940	Cap - Valve	1
305	99-0942	Screw - Hex.	1
337	77-7330	Plug - Spark	1
354		Nut - Hex. (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
383	99-0944	Wrench - Spark Plug	1
635	77-9190	Elbow - Spark Plug	1
830	99-0945	Stud - Rocker Arm	1
836	99-0941	Screw - Hex.	1
†★868	99-0946	Seal - Valve	1
†★883	99-0947	Gasket - Exhaust	1
†★993	99-0948	Gasket - Plate	1
†★1022	99-0907	Gasket - Rocker Cover	1
1023	98-9211	Cover - Rocker	1
1026	99-0949	Rod - Push	1
1029	99-0950	Arm - Rocker	1
1034	99-0951	Guide - Push Rod	1

★ Included in Gasket Set - Part No. 99-0902

 † Included in Vavel Overhaul Gasket Set - Part No. 99-0904

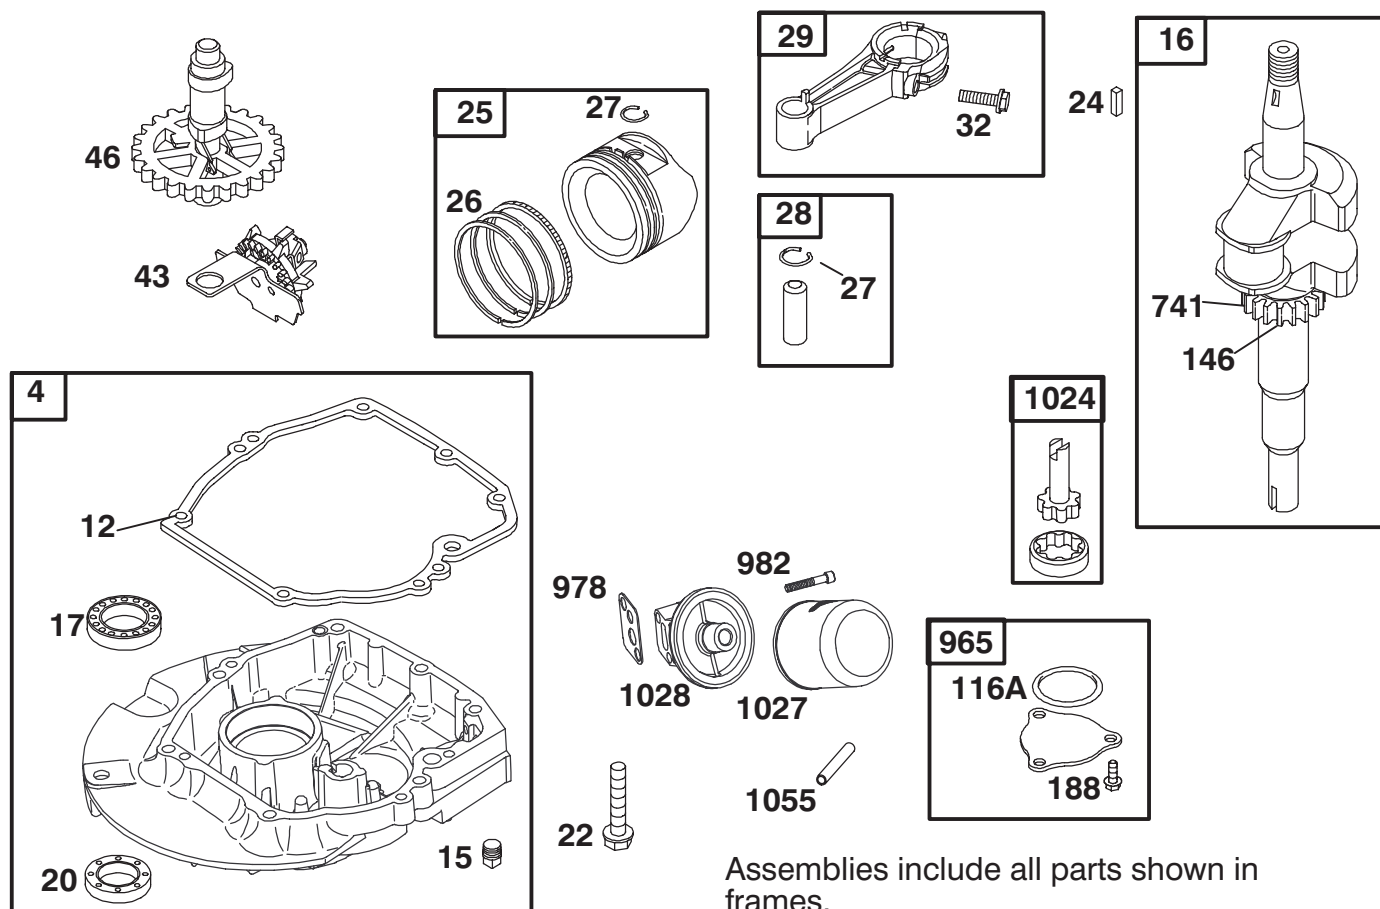


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
4	99-0980	Sump – Engine	1
★12	99-0953	Gasket – Crankcase	1
15	99-0954	Plug – Oil Drain	1
16	98-9213	Crankshaft	1
17	99-1031	Bearing – Ball	1
★20	77-7570	Seal – Oil	1
22	99-0956	Screw – Hex. Note: 99-1040 Screw – Hex. (One (1) Used in Hole Nearest Breather)	1
24	77-8340	Key – Flywheel	1
25	99-0958	Piston Assy. (Standard)	1
26	99-0959	Ring Set (Standard)	1
27	99-0960	Lock – Piston Pin	1
28	99-0961	Pin – Piston (Standard)	1

Ref. No.	Part No.	Description	No. Used
29	99-0962	Rod – Connecting	1
32	99-0963	Screw – Connecting Rod	1
43	99-0937	Governor/Oil Slinger	1
46	99-0965	Gear – Cam	1
116A	99-1032	Seal – O-Ring	1
146	99-0966	Key – Timing	1
188	99-1033	Screw – Hex.	1
741	99-0967	Gear – Timing	1
965	99-1034	Cover – Oil Pump	1
978	99-1035	Gasket – Adapter	1
982	99-1036	Screw – Soc. Hd.	1
1024	99-1037	Pump – Oil	1
1027	98-9217	Filter – Oil	1
1028	99-1038	Adapter – Oil Filter	1
1055	99-1039	Tube – Oil Pump	1

 ★ Included in Gasket Set – Part No. 99-0902

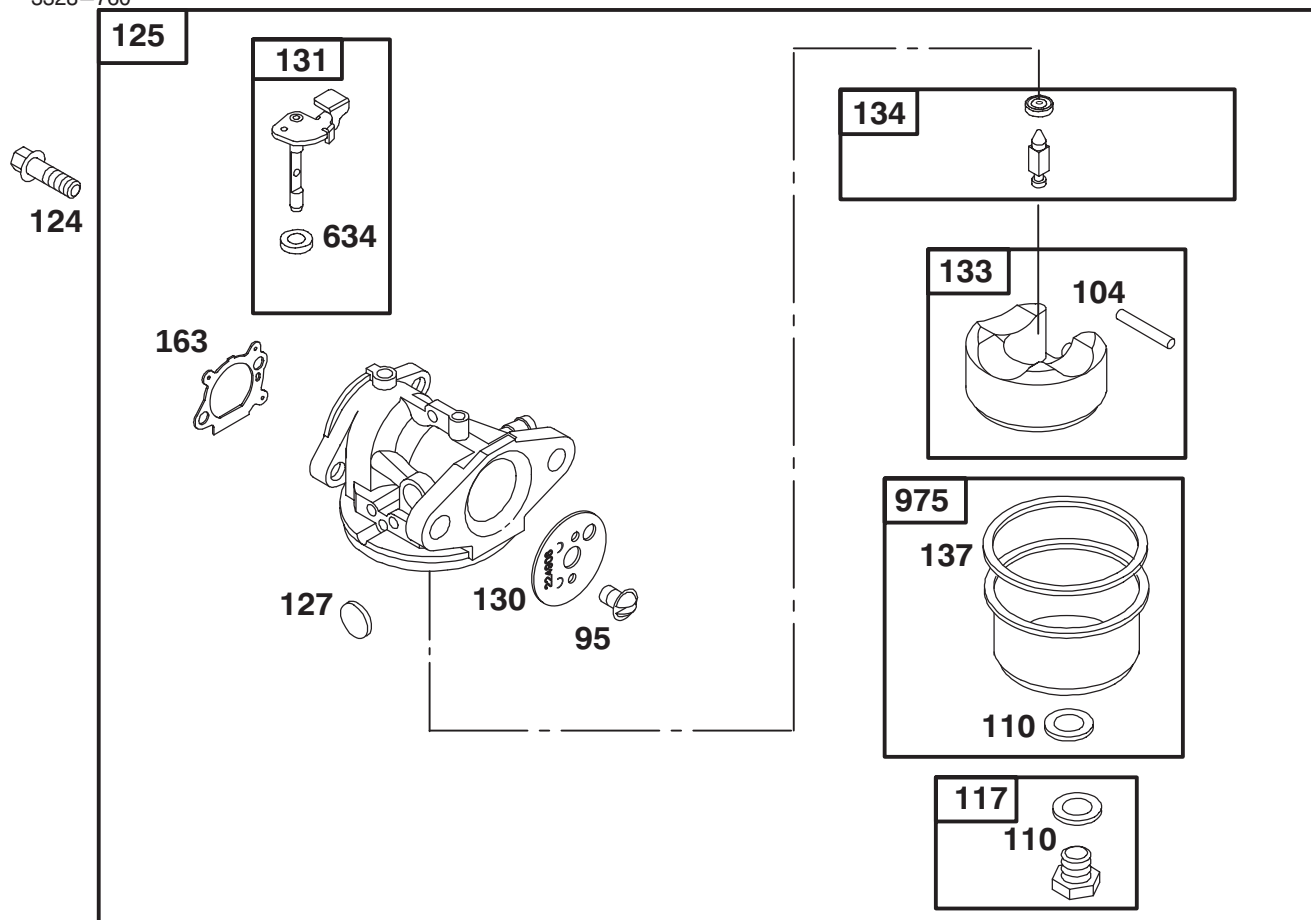

Assemblies include all parts shown in frames.

ENGINE GTS-200


Ref. No.	Part No.	Description	No. Used
95	99-0969	Screw - Slotted	1
●104	99-0970	Pin - Float Hinge	1
◆110		Washer - Bowl (Sold in Kit Only).	1
117	99-0971	Jet - Main (Std.) Note: 99-1041 Jet - Main (High Altitude)	1
124	99-0972	Screw - Shoulder	1
125	99-0973	Carburetor	1
●127		Plug - Welch	1

Ref. No.	Part No.	Description	No. Used
		(Sold in Kit Only).	1
130	99-0974	Valve - Throttle	1
131	99-0975	Shaft - Throttle	1
133	77-8170	Float - Carburetor	1
●134	77-8110	Valve - Needle	1
◆137		Gasket - Bowl (Sold in Kit Only).	1
◆◆163	99-0976	Gasket - Air Cleaner	1
◆◆634		Washer - Foam (Sold in Kit Only).	1
975	99-0977	Bowl - Float	1

● Included in Carburetor Kit - Part No. 99-0901

◆ Included in Carburetor Gasket Set - Part No. 99-0903

 ★ Included in Gasket Set - Part No. 99-0902

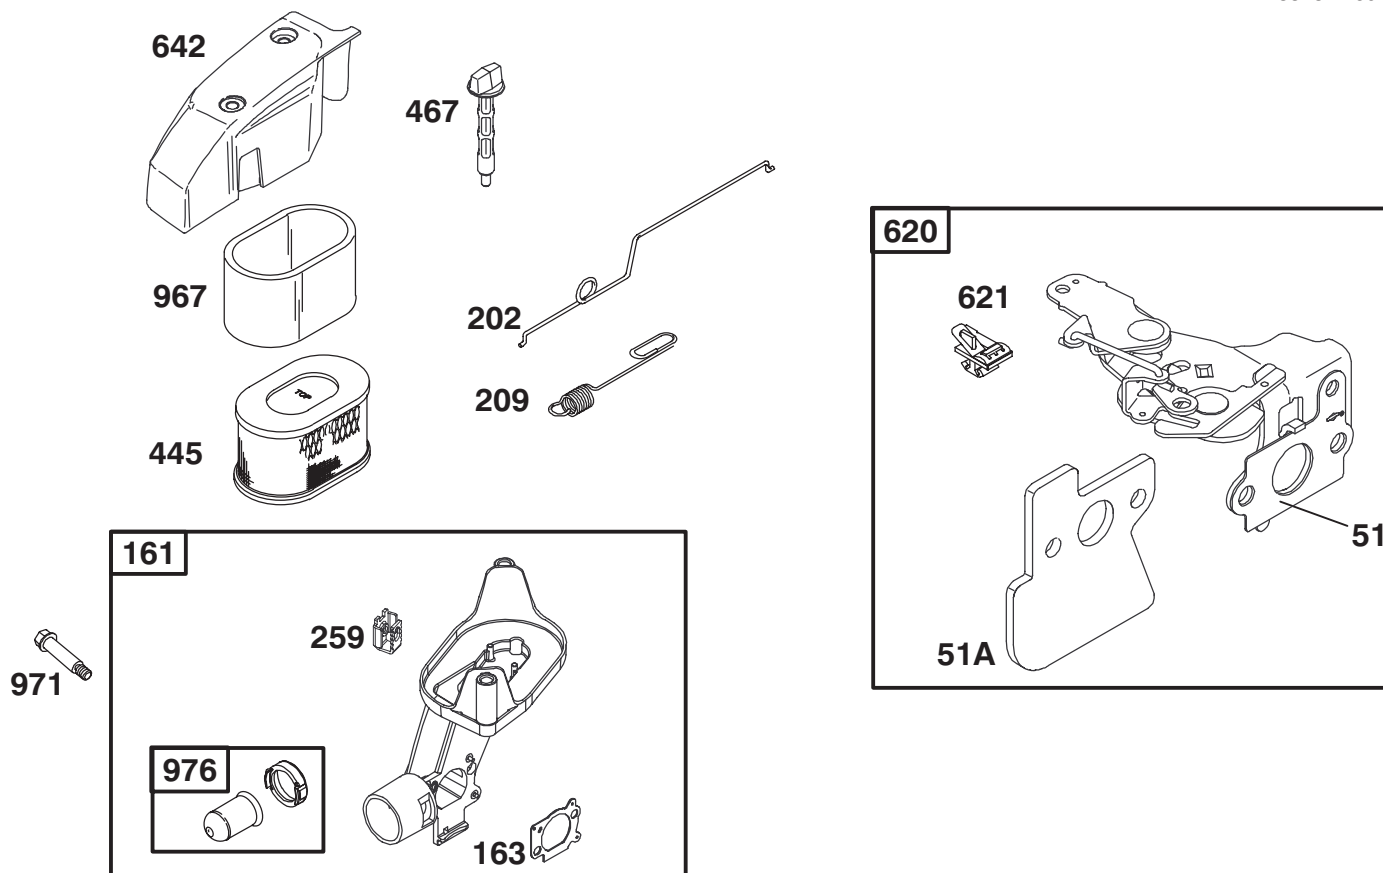

Assemblies include all parts shown in frames.

ENGINE GTS-200





Ref. No.	Part No.	Description	No. Used
51	99-0968	Gasket - Intake	1
51A	99-0978	Gasket - Intake	1
161	99-0979	Base - Air Cleaner/Primer	1
◆◆★163	99-0976	Gasket - Air Cleaner	1
202	99-0981	Link - Governor	1
209	99-0982	Spring - Governor	1
259	99-0984	Grommet	1
445	98-9212	Filter - Air	1

Ref. No.	Part No.	Description	No. Used
467	98-9208	Knob	1
620	99-0908	Bracket - Control	1
621	99-0986	Switch - Stop	1
642	98-9207	Cover - Air Cleaner	1
967	98-0989	Filter - Air	1
971	99-0990	Screw - Hex.	1
976	99-0991	Primer - Carburetor	1

◆ Included in Carburetor Kit - Part No. 99-0901

◆ Included in Carburetor Gasket Set - Part No. 99-0903

    ★ Included in Gasket Set - Part No. 99-0902

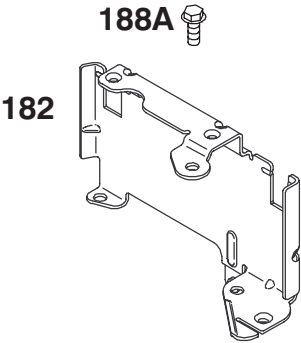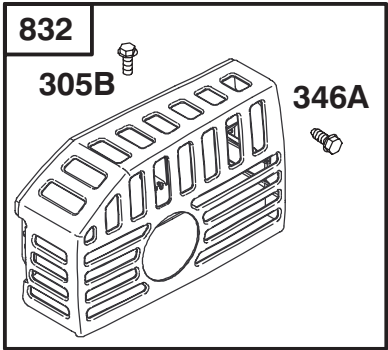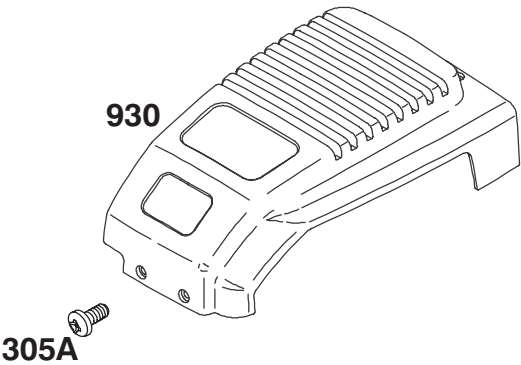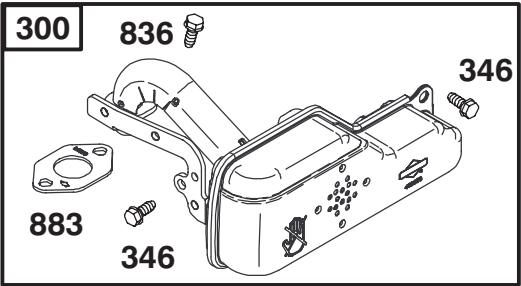


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
182	98-9205	Bracket - Tank Mounting	1
188A	98-9202	Screw - Hex.	1
300	99-0995	Muffler - Exhaust	1
305A	99-9204	Screw - Hex.	1
305B	99-0998	Screw - Hex.	1
346	99-1047	Screw - Hex.	1

Ref. No.	Part No.	Description	No. Used
346A	99-0999	Screw - Hex.	1
832	98-9206	Guard - Muffler	1
836	99-0941	Screw - Hex.	1
†★883	99-0947	Gasket - Exhaust	1
930	98-9203	Guard - Rewind	1

 
★ Included in Gasket Set - Part No. 99-0902
† Included in Vavel Overhaul Gasket Set - Part No. 99-0904

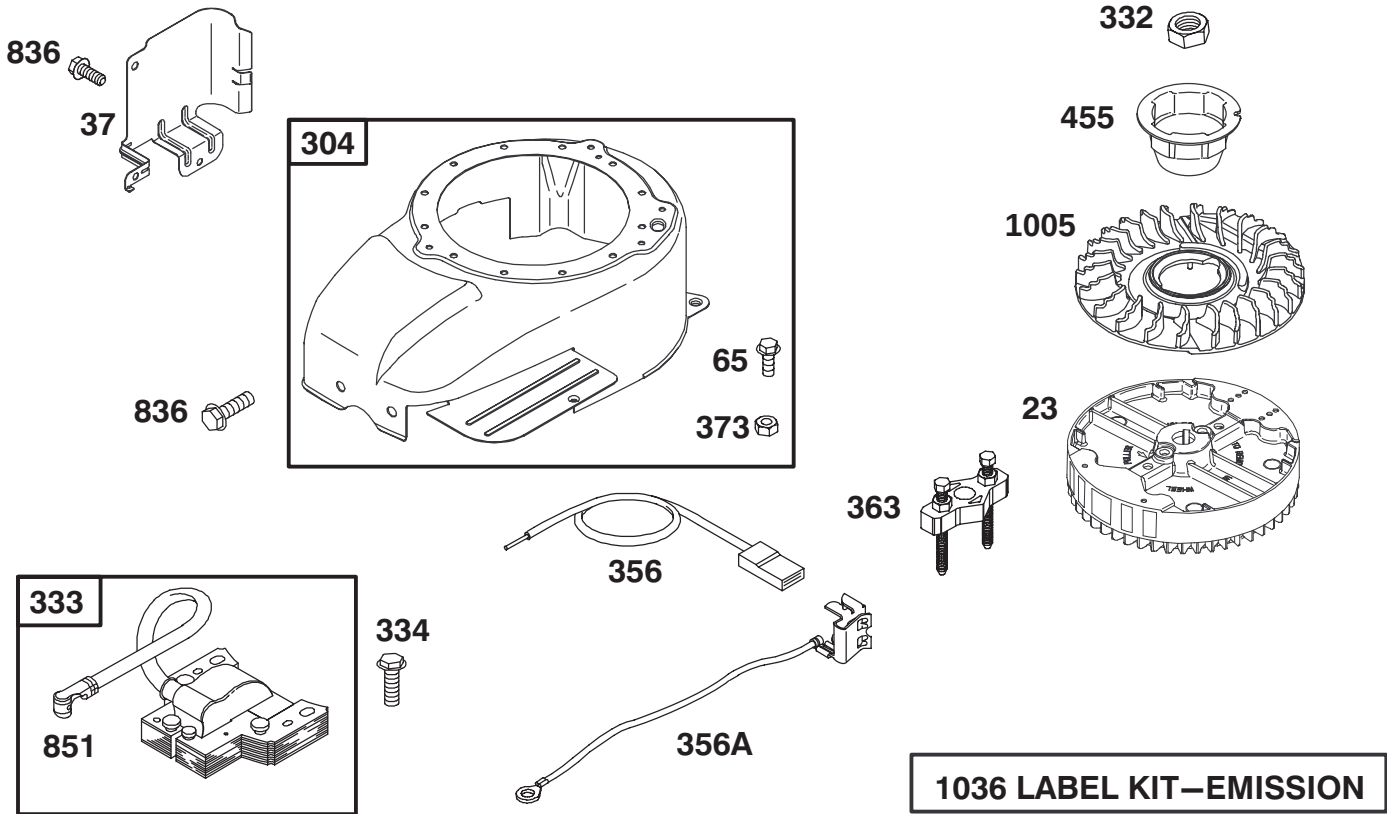

Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	99-1001	Flywheel	1	356A	99-0910	Wire - Stop	1
37	99-1013	Guard - Flywheel	1	363	99-1008	Puller - Flywheel	1
65	99-1002	Screw - Hex.	1	373	99-1009	Nut - Hex.	1
304	99-1003	Housing - Blower	1	455	99-1010	Cup - Flywheel	1
332	99-1004	Nut - Flywheel	1	836	99-0941	Screw - Hex.	1
333	99-1005	Armature - Magneto	1	851	77-9450	Terminal - Cable	1
334	99-1006	Screw - Hex.	1	1005	99-1015	Fan - Flywheel	1
356	99-1007	Wire - Stop	1	1036	99-1016	Label Kit - Emission	1




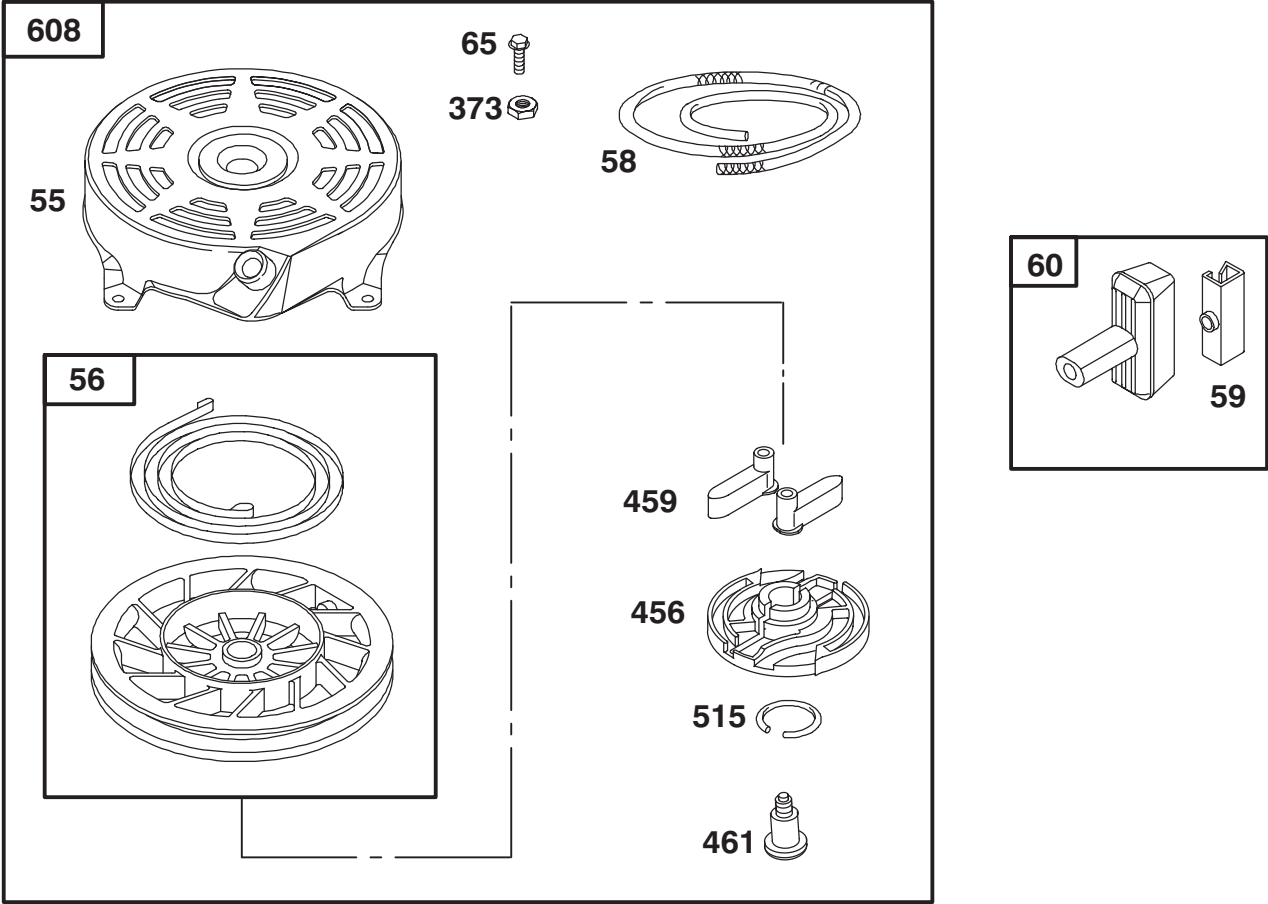 


Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used
55	99-1048	Housing - Rewind Starter	1
56	94-1657	Pulley - Starter	1
58	94-1668	Rope - Starter	1
59	77-7210	Insert - Starter Grip	1
60	77-8520	Grip - Starter Rope	1
65	99-1002	Screw - Hex.	1

Ref. No.	Part No.	Description	No. Used
373	99-1009	Nut - Hex.	1
456	94-1659	Retainer - Spring	1
459	94-1654	Pawl - Ratchet	1
461	94-1600	Screw - Shoulder	1
515	94-1655	Spring - Friction	1
608	98-9215	Starter - Rewind	1

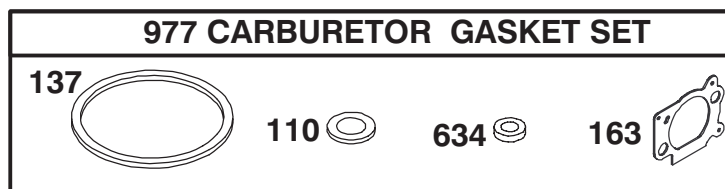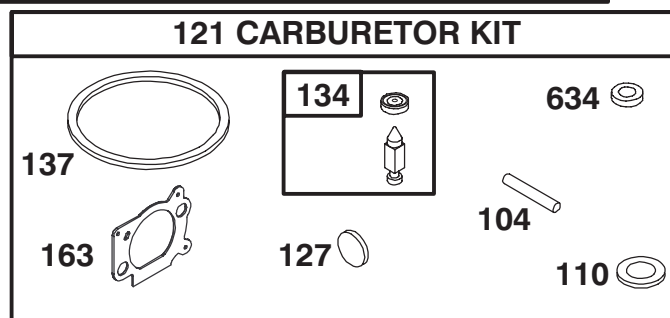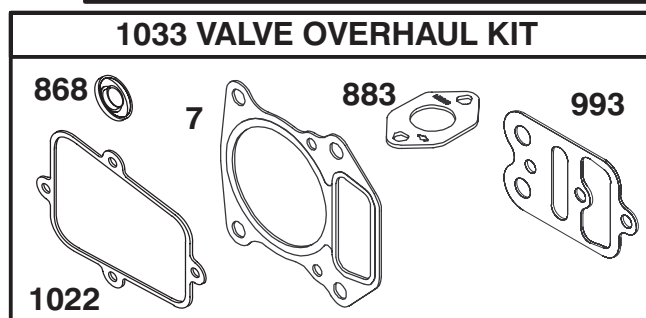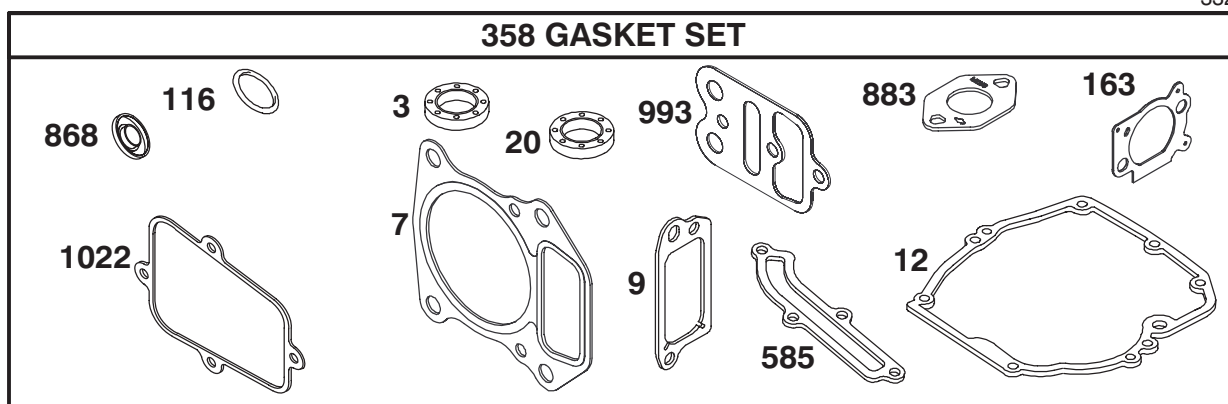    

Assemblies include all parts shown in frames.

ENGINE GTS-200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★3	99-0912	Seal – Oil	1	◆◆★163	99-0976	Gasket – Air Cleaner	1
†★7	99-0930	Gasket – Cylinder Head	1	358	99-0902	Gasket Set	1
†★9	99-0913	Gasket – Breather	1	★585	99-0923	Gasket – Breather	1
★12	99-0953	Gasket – Crankcase	1	◆◆634		Washer – Foam (Sold in Kit Only).	1
★20	77-7570	Seal – Oil	1	†★868	99-0946	Seal – Valve	1
●104	99-0970	Pin – Float Hinge	1	†★883	99-0947	Gasket – Exhaust	1
◆◆110		Washer – Bowl (Sold in Kit Only).	1	977	99-0903	Gasket Set – Carburetor	1
★116	99-0916	Seal – O Ring	1	†★993	99-0948	Gasket – Plate	1
121	99-0901	Carburetor Kit	1	†★1022	99-0907	Gasket – Rocker Cover	1
●127		Plug – Welch (Sold in Kit Only).	1	1033	99-0904	Gasket Set – Valve Overhaul	1
●134	77-8110	Valve – Needle	1				
◆◆137		Gasket – Bowl (Sold in Kit Only).	1				

★ Included in Gasket Set – Part No. 99-0902

◆ Included in Carburetor Gasket Set – Part No. 99-0903

† Included in Valve Overhaul Gasket Set – Part No. 99-0904

● Included in Carburetor Kit – Part No. 99-0901

Maintenance Record

[illegible]

Maintenance Record

[illegible]

