



Form No. 3352-364 Rev C

Count on it.

Parts Catalog

Dingo® TX 425 Wide Track Compact Utility Loader

Model No. 22307—Serial No. 250000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Main Frame and Fuel Tank Assembly	4
Track and Traction Assembly	5
Parking Brake Assembly	6
Loader Tower and Drive Assembly	7
Traction Hydraulics Assembly	8
Hydraulic Pump Assembly No. 106-5705 and 106-5706	10
Hydraulic Motor Assembly No. 106-7654	11
Engine and Mount Assembly	12
Hydraulic Pump and Filter Assembly	13
Control Panel Assembly	15
Traction Control Assembly	16
Principal Hydraulic Assembly	17
Two Spool Valve Assembly No. 106-9307	18
One Spool Valve Assembly No. 104-2831	19
Loader Arm Assembly	20
Loader Arm Hydraulic Assembly	21
Left Hand Hydraulic Lift Cylinder Assembly No. 104-6267	22
Right Hand Hydraulic Lift Cylinder Assembly No. 104-6269	23
Hydraulic Cylinder Assembly No. 105-8370	24
Quick Attach Assembly	25
Electrical System Assembly	26
Grill Assembly	27
Hydraulic Oil Cooler Assembly	28
Hood Assembly	29
Rear Access Cover Assembly	30
Crankshaft Assembly Kohler CH730-0132	31
Crankcase Assembly Kohler CH730-0132	32
Oil Pan and Lubrication Assembly Kohler CH730-0132	33
Head, Valve and Breather Assembly Kohler CH730-0132	34
Ignition and Electrical Assembly Kohler CH730-0132	36
Blower Housing and Baffle Assembly Kohler CH730-0132	37
Starting System Assembly Kohler CH730-0132	38
Fuel System Assembly Kohler CH730-0132	39
Engine Control Assembly Kohler CH730-0132	40
Air Intake and Filtration Assembly Kohler CH730-0132	41
Exhaust Assembly Kohler CH730-0132	42
Attachments and Accessories	43

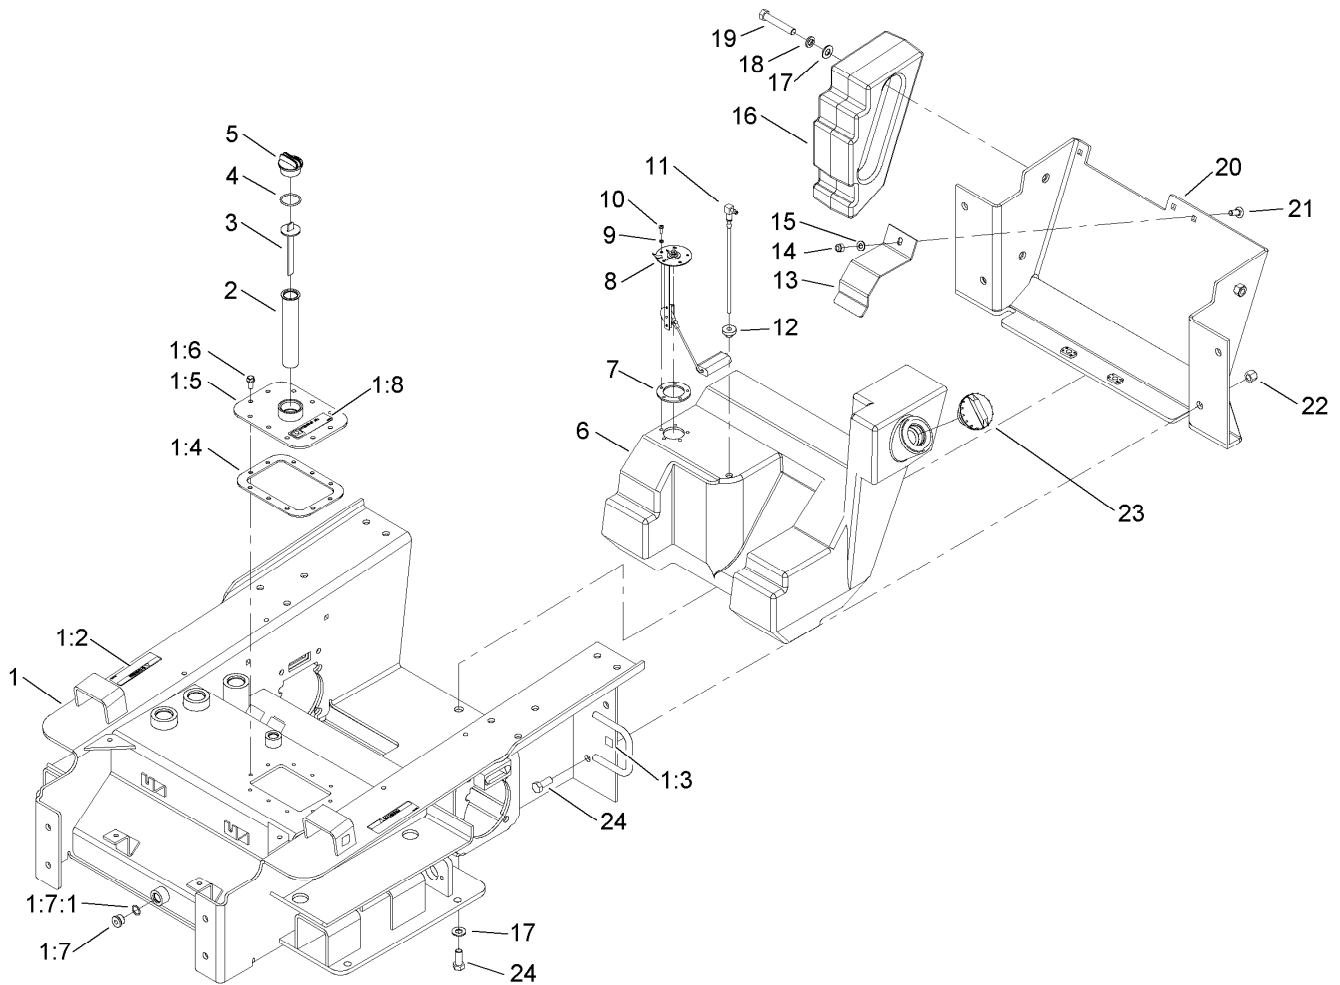

Main Frame and Fuel Tank Assembly


Ref.	Part Number	Qty.	Description
1	105-5890	1	Chassis ASM
1:2	100-6141	2	Decal-Pinch
1:3	93-9084	4	Decal-Point, Lift
1:4	100-1253	1	Gasket-Cover, Access
1:5	104-8389-01	1	Tank Cover ASM
1:6	98-9940	10	Screw-HHF
1:7	353-988	2	Plug-Hex
1:7:1	237-79	1	O-Ring
1:8	105-8432	1	Decal-Oil, HYD
2	61-2790	1	Filter-Screen
3	100-2097	1	Dipstick-Oil
4	237-123	1	O-Ring
5	93-7498	1	Plug-Plastic
6	95-3619	1	Tank-Fuel
7	113372	1	Gasket-Sender, Fuel
8	100-1298	1	Sender-Fuel

Ref.	Part Number	Qty.	Description
9	3253-17	5	Washer-Lock
10	3250-31	5	Screw-PPH
11	98-0185	1	Pipe-Stand
12	46-6560	1	Bushing
13	100-1257-03	1	Clamp-Tank, Fuel
14	3296-39	1	Nut-Lock, NI
15	3256-38	1	Washer-Flat
16	99-6165-01	2	Counterweight-Rear
17	3256-26	6	Washer-Flat
18	3253-7	4	Washer-Lock
19	325-12	4	Screw-HH
20	105-0373-01	1	Rear Frame Cover ASM
21	3231-22	1	Screw-CARR
22	3296-23	4	Nut-Lock, NI
23	93-3101	1	Cap-Fuel
24	325-5	6	Screw-HH

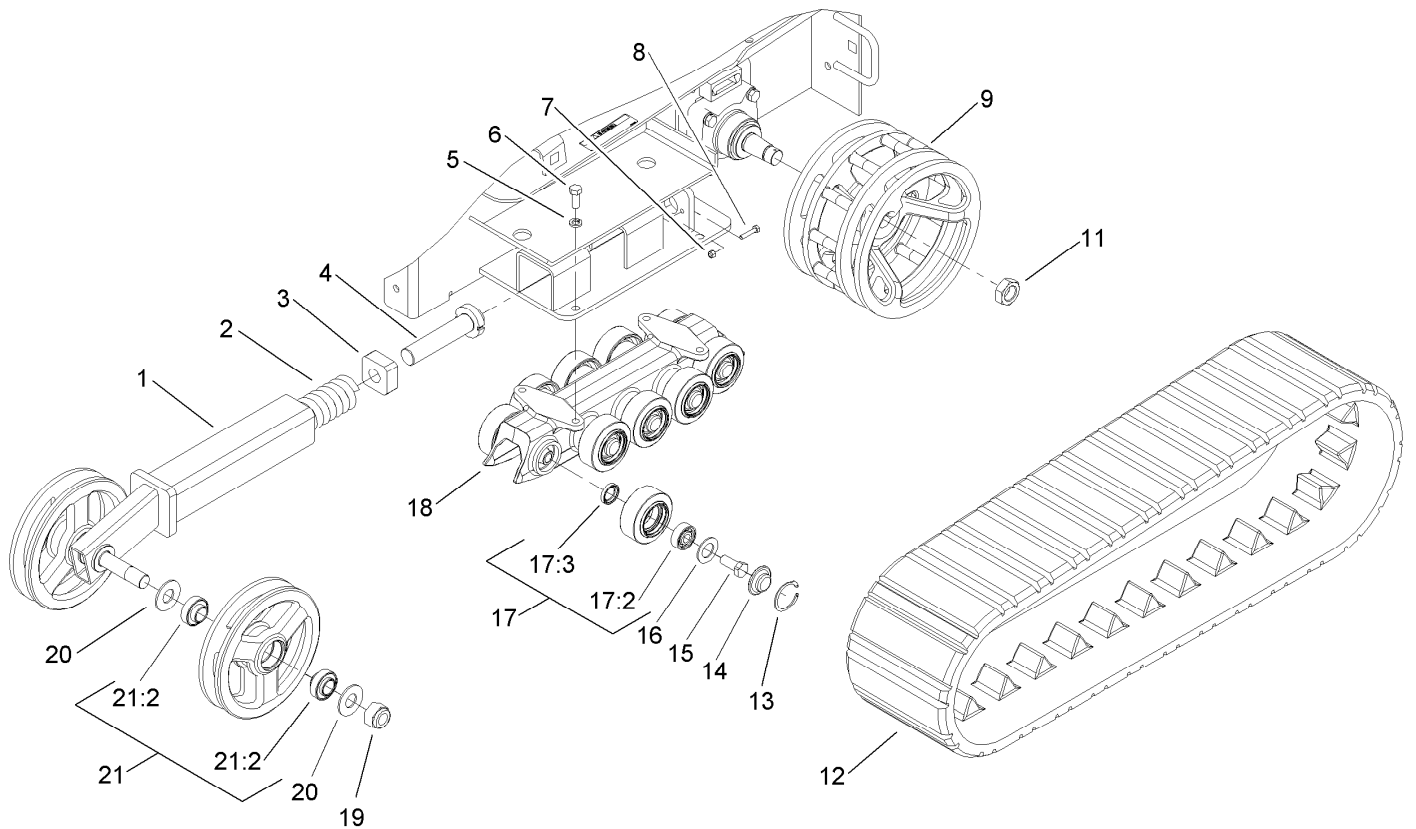 

Track and Traction Assembly


Ref.	Part Number	Qty.	Description
1	104-6127-03	2	Tensioner Arm ASM
2	95-3624	2	Spring-Compression
3	95-3626	2	Block-Tensioner
4	98-9846	2	Bolt-Tensioner
5	3253-7	8	Washer-Lock
6	325-5	8	Screw-HH
7	3296-42	2	Nut-Lock, NI
8	321-13	2	Screw-HH
9	106-7711-03	2	Wheel-Drive, Tx 425
11	107-9319	2	Nut-Hex
12	100-8931	2	Track
13	106-7595	20	Ring-Snap, Internal
14	106-7557	20	Cap-Wheel, Bearing
15	327-4	20	Screw-HH
16	106-7585	20	Gasket-Bogie
17	106-7621	20	Road Wheel ASM
17:2	93-4237	1	Bearing
17:3	253-118	1	Seal-Oil
18	106-7592-03	2	Guide-Track
19	104-2024	4	Nut-Hex, NI
20	104-6126	8	Washer-Flat
21	104-6123	4	Tensioner Wheel ASM
21:2	104-6129	2	Bearing-Ball

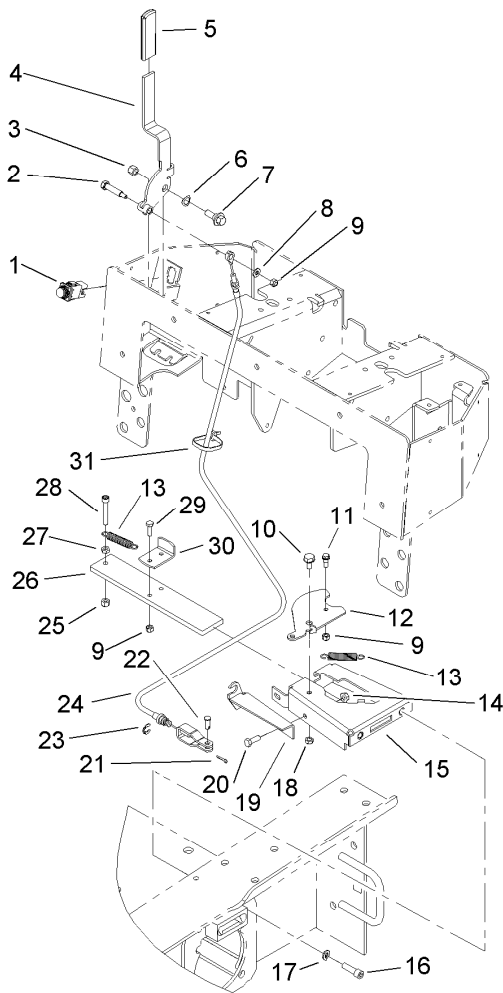 

Parking Brake Assembly

Ref.	Part Number	Qty.	Description
1	100-1268	1	Switch-Plunger
2	611792	1	Bolt-Shoulder
3	3296-6	1	Nut-Lock
4	106-9327-03	1	Brake Lever ASM
5	62-9130	1	Grip-Handle
6	3290-221	1	Washer-Spring
7	93-2364	1	Bolt-Shoulder
8	3256-22	1	Washer-Flat
9	3296-42	7	Nut-Lock, NI
10	37-8771	2	Bolt-Shoulder, HF
11	42-3560	2	Bolt-Shoulder
12	98-8443	2	Lever-Brake
13	87-4020	4	Spring-Extension
14	32128-20	4	Nut-HF
15	100-4200-03	2	Brake Housing ASM
16	3274-1	4	Screw-HSH


Ref.	Part Number	Qty.	Description
17	3253-5	4	Washer-Lock
18	3296-47	2	Nut-Lock,NI
19	98-8446-03	2	Bracket-Cable, Brake
20	322-4	4	Screw-HH
21	3272-9	2	Pin-Cotter
22	283-62	2	Pin-Clevis
23	32151-43	2	Ring-Clip
24	100-1283	2	Cable-Brake
25	3296-29	2	Nut-Lock, NI
26	106-7550-03	2	Plate-Brake
27	3218-2	2	Nut-Hex Jam
28	3274-86	2	Screw-HSH
29	321-5	4	Screw-HH
30	98-8448	2	Stop-Brake
31	3290-378	2	Tie-Cable

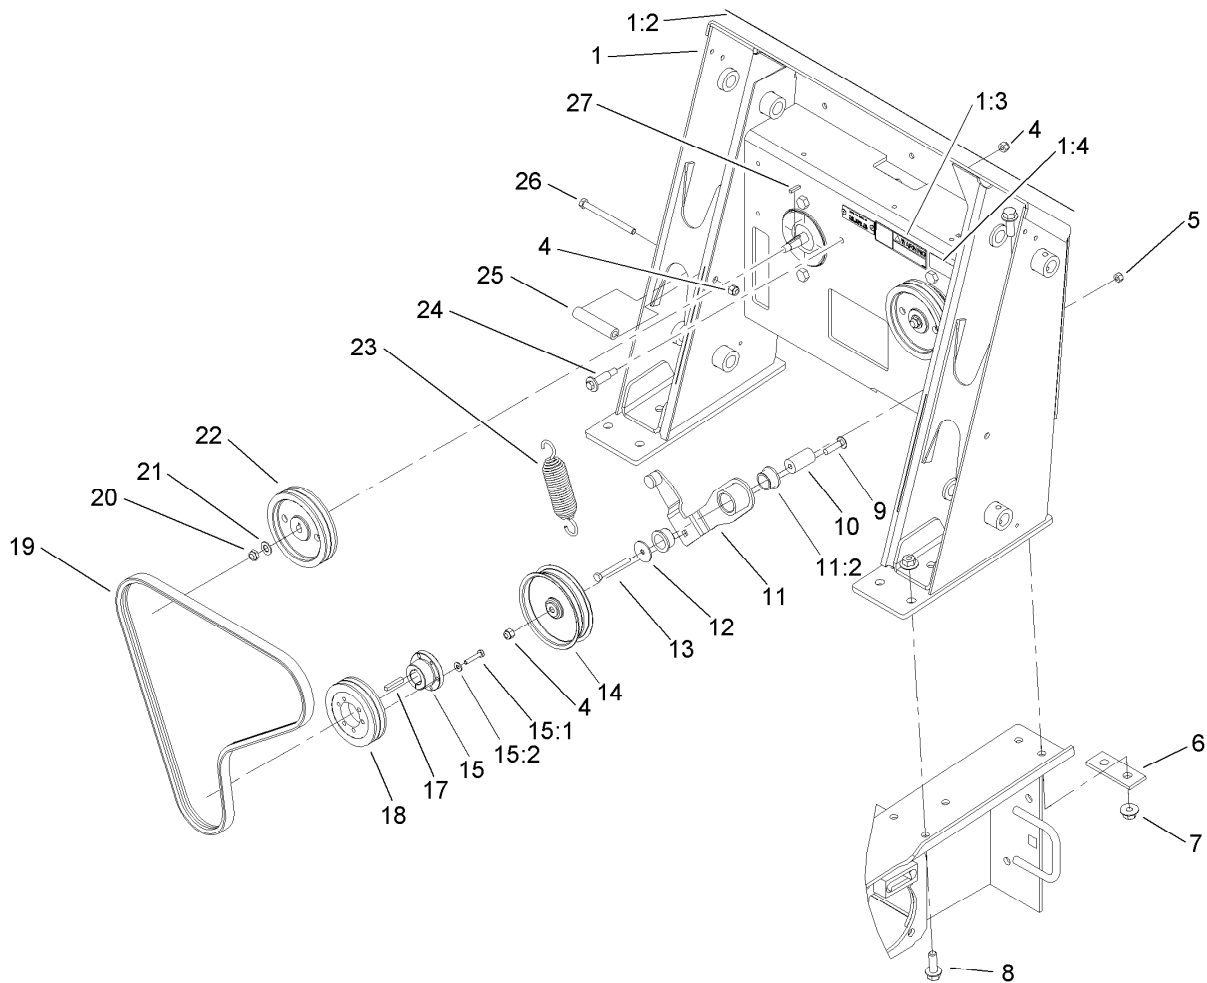 

Loader Tower and Drive Assembly

Ref.	Part Number	Qty.	Description
1	106-9300	1	Loader Tower ASM
1:2	106-9305	1	Decal-Panel, Control
1:3	80-8040	1	Decal-Warning
1:4	107-9323	1	Decal-Patent
4	3296-39	4	Nut-Lock, NI
5	3296-29	1	Nut-Lock, NI
6	100-6123-01	2	Plate-Stiffener
7	32128-52	10	Nut-Lock, Flange
8	100-6116	10	Screw-HHF
9	3231-26	1	Screw-CARR
10	104-5739	1	Spacer-Mounting
11	99-6167	1	Idler Arm ASM
11:2	256-132	2	Bushing-Flange
12	3256-68	1	Washer-Flat
13	322-13	1	Screw-HH


Ref.	Part Number	Qty.	Description
14	95-3707	1	Pulley-Idler
15	61-3340	1	Bushing
15:1	100-4208	3	Screw-HH
15:2	100-4209	3	Washer-Lock / Sp
17	67-7490	1	Key-Square
18	61-3330	1	Pulley
19	95-3611	1	V-Belt
20	3296-38	2	Nut-Lock, NI
21	3256-25	2	Washer-Flat
22	106-5710-03	2	Pulley
23	105-0383	1	Spring-Extension
24	56-6590	1	Bolt-Wheel
25	100-1271	2	Tube-Spacer
26	323-23	2	Screw-HH
27	3-6168	2	Key

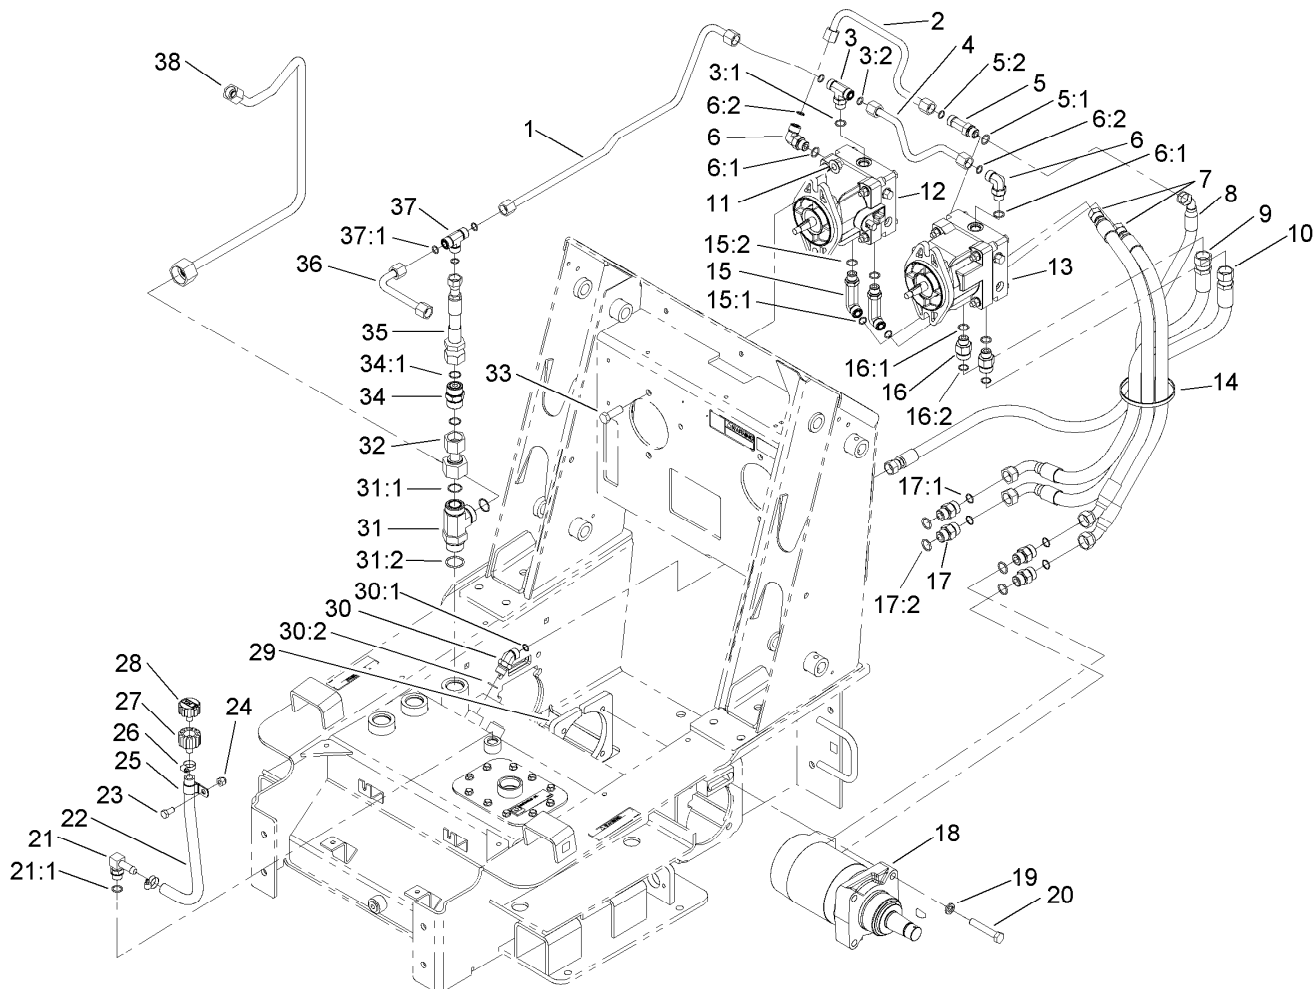 

Traction Hydraulics Assembly

Ref.	Part Number	Qty.	Description
1	106-9331	1	Hydraulic Tube ASM
2	98-0200	1	Tube-HYD
3	340-157	1	Fitting-HYD, Tee
3:1	237-79	1	O-Ring
3:2	237-30	2	O-Ring
4	106-9330	1	Tube-HYD
5	340-109	1	Fitting-Tee
5:1	237-79	1	O-Ring
5:2	237-30	2	O-Ring
6	340-98	2	Fitting-Elbow, 90 DEG
6:1	237-79	1	O-Ring
6:2	237-30	1	O-Ring
7	98-0233	2	Hose-HYD
8	98-0201	1	Hose-HYD
9	98-0235	1	HYD Hose ASM
10	98-0177	1	HYD Hose ASM
11	32128-23	4	Nut-HF
12	106-5706	1	RH HYD Pump ASM
13	106-5705	1	LH HYD Pump ASM
14	3334-945	1	Tie-Cable
15	99-6160	2	Fitting-Elbow, 90 Long
15:1	237-30	1	O-Ring
15:2	237-79	1	O-Ring
16	340-155	2	Fitting-Straight
16:1	237-79	1	O-Ring
16:2	237-151	1	O-Ring
17	340-7	4	Fitting-Straight


Ref.	Part Number	Qty.	Description
17:1	237-65	1	O-Ring
17:2	237-80	1	O-Ring
18	106-7654	2	HYD Motor ASM
19	3253-7	8	Washer-Lock
20	325-11	8	Screw-HH
21	354-120	1	Fitting-Elbow, 90
21:1	237-79	1	O-Ring
22	106-5709	1	Hose-Vent
23	323-4	1	Screw-HH
24	3296-39	1	Nut-Lock, NI
25	2412-4	1	Clamp-R
26	2412-36	2	Clamp-Hose
27	92-8020	1	Adapter-Breather
28	68-6150	1	Breather
29	98-2763-03	4	Plate-Mounting
30	340-101	1	Fitting-HYD, 45 DEG
30:1	237-30	1	O-Ring
30:2	237-79	1	O-Ring
31	104-3795	1	Fitting-Tee
31:1	340-65	2	O-Ring
31:2	237-146	1	O-Ring
32	105-0226	1	Tube-HYD
33	325-6	4	Screw-HH
34	99-6161	1	HYD Check Valve ASM
34:1	237-58	2	O-Ring
35	105-0225	1	HYD Hose ASM
36	95-3517	1	HYD Tube ASM

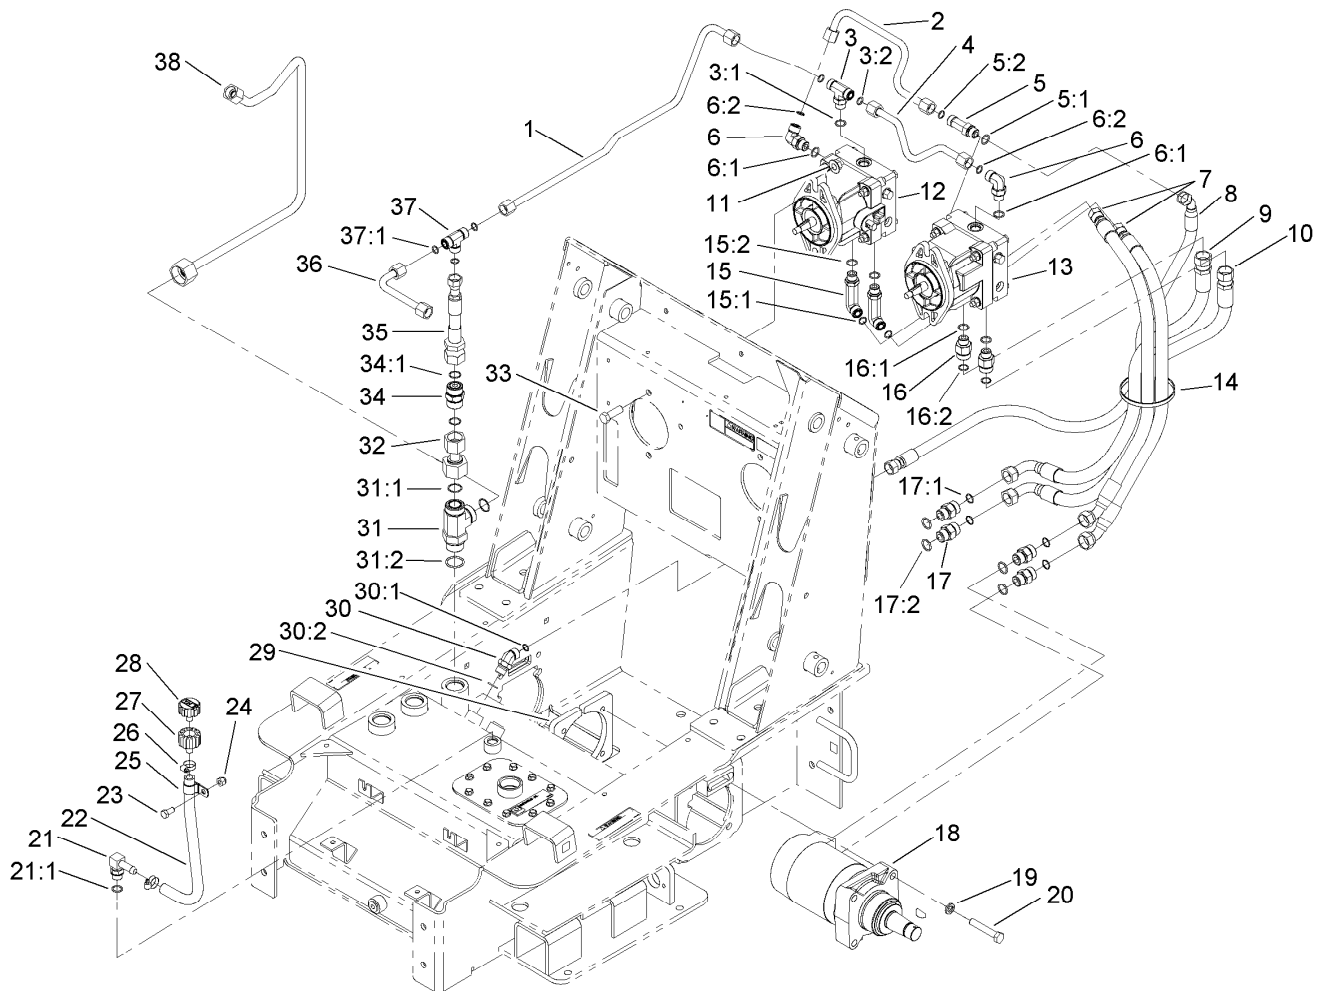 

Traction Hydraulics Assembly (continued)

Ref.	Part Number	Qty.	Description
37	340-102	1	Adapter


Ref.	Part Number	Qty.	Description
37:1	237-30	3	O-Ring
38	106-9332	1	HYD Tube ASM

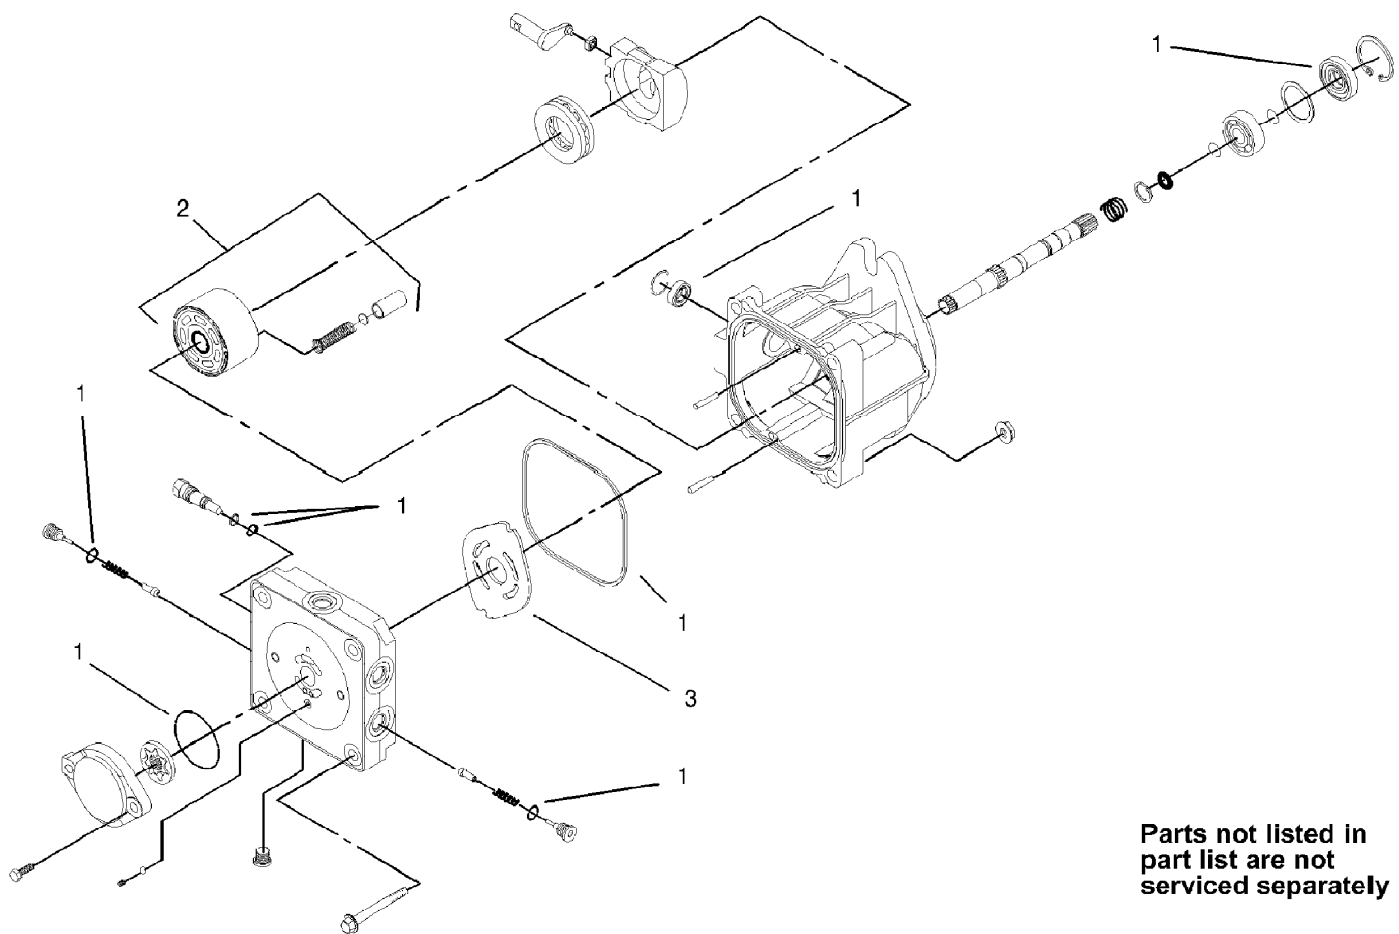 

Parts not listed in
part list are not
serviced separately


Hydraulic Pump Assembly No. 106-5705 and 106-5706

Ref.	Part Number	Qty.	Description
1	100-6110	1	Overhaul Seal Kit
2	94-1913	1	Cylinder Block ASM
3	100-6112	1	Plate-Valve

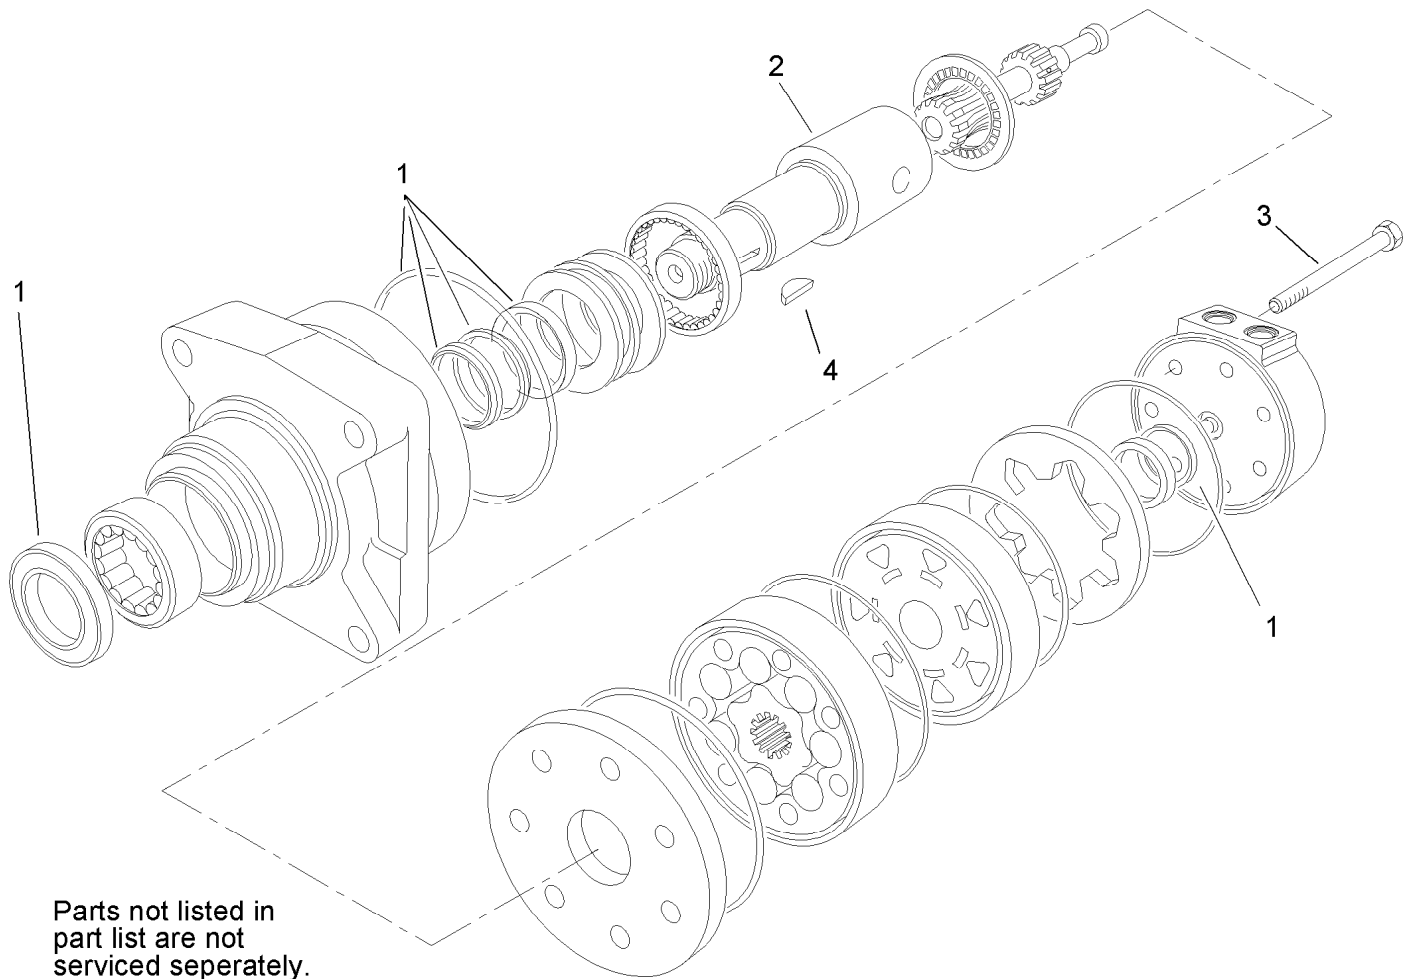 

Hydraulic Motor Assembly No. 106-7654


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-6131	1	Seal Kit
2	106-7645	1	Coupling-Shaft
3	100-4241	7	Screw-HH
4	3257-42	1	Key-Woodruff

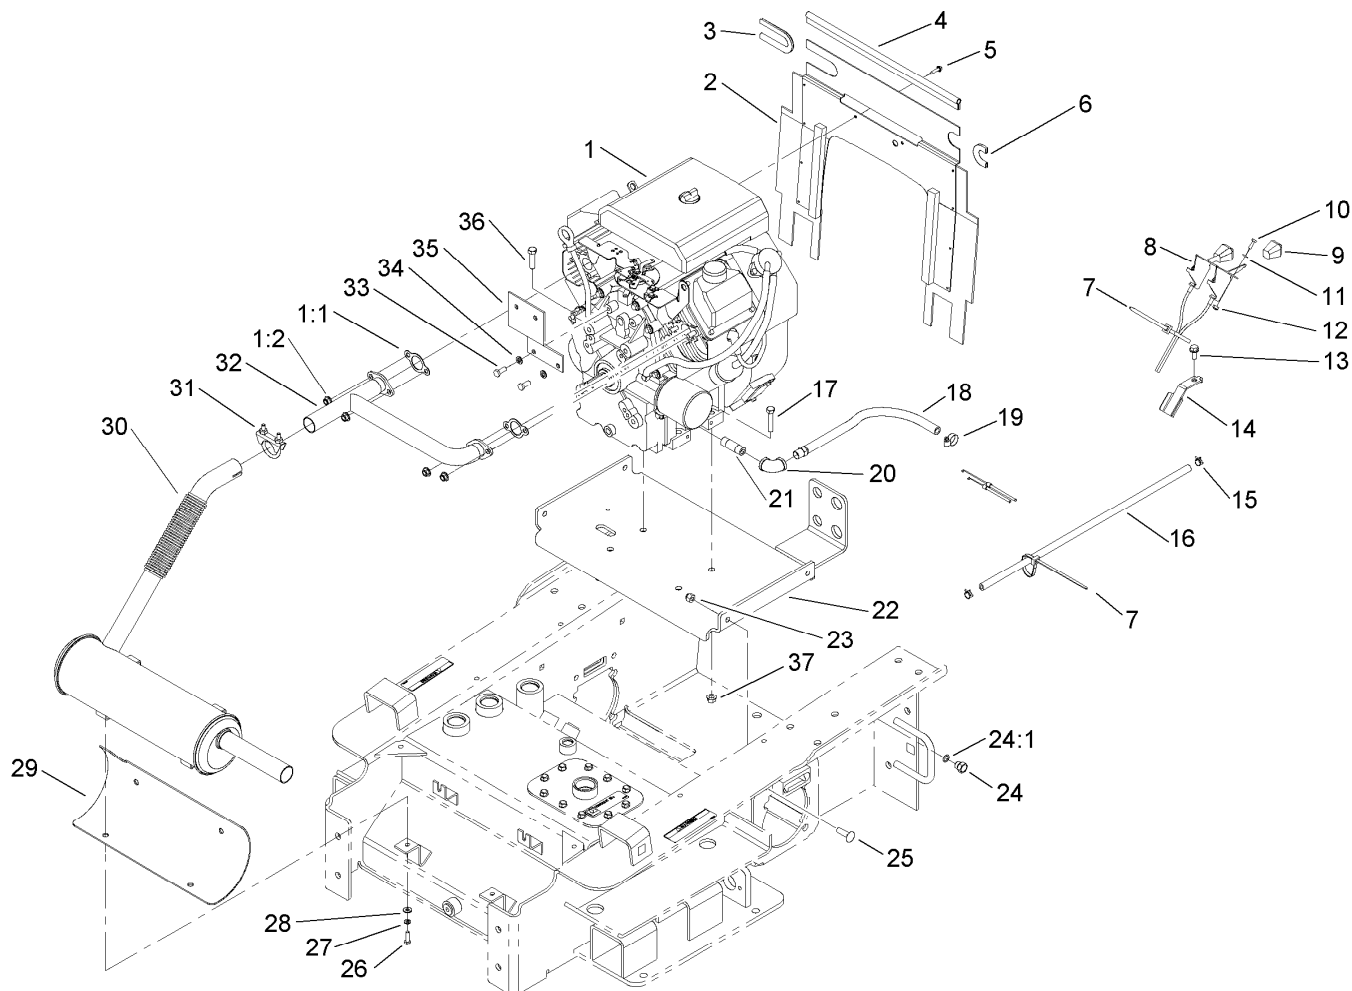 

Engine and Mount Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Engine-Kohler, Ch730-0132	19	2412-36	1	Clamp-Hose
1:1	93-0350	2	Gasket-Exhaust	20	94-9650	1	Elbow-90 DEG
1:2	92-6780	4	Nut-HF	21	289-42	1	Nipple
2	106-5748	1	Engine Baffle ASM	22	99-6175-03	1	Engine Mounting Plate ASM
3	105-0378	1	Seal-Strip, 6.5 Inch	23	3296-39	4	Nut-Lock, NI
4	106-5749	1	Seal-Strip, 16 Inch	24	353-508	1	Plug-HH
5	27-0220	2	Screw-Special	24:1	237-42	1	O-Ring
6	105-0377	1	Seal-Strip, 3 Inch	25	3231-28	4	Screw-CARR
7	3290-378	2	Tie-Cable	26	321-5	4	Screw-HH
8	99-6173	2	Cable-Throttle	27	3253-3	4	Washer-Lock
9	66-0120	2	Knob	28	3256-78	4	Washer-Flat
10	3290-134	4	Screw	29	98-2762	1	Shield-Heat, Muffler
11	3256-51	4	Washer-Flat	30	105-0249	1	Muffler
12	3296-2	4	Nut-Lock, NI	31	2112-11	1	Clamp-Muffler
13	32144-70	1	Screw-HWHTF	32	98-2761	1	Manifold-Crossover
14	100-1299-03	1	Guide-Cable	33	33114-020	2	Screw-HH
15	2412-98	2	Clamp-Hose	34	3253-4	2	Washer-Lock
16	105-0376	1	Hose-Fuel	35	99-6171-03	1	Bracket-Support, Oil Filter
17	323-53	3	Screw-HH	36	323-50	1	Bolt-HH
18	100-1256	1	Oil Hose ASM	37	32128-21	4	Nut-HF Lock

 ● Not serviced separately

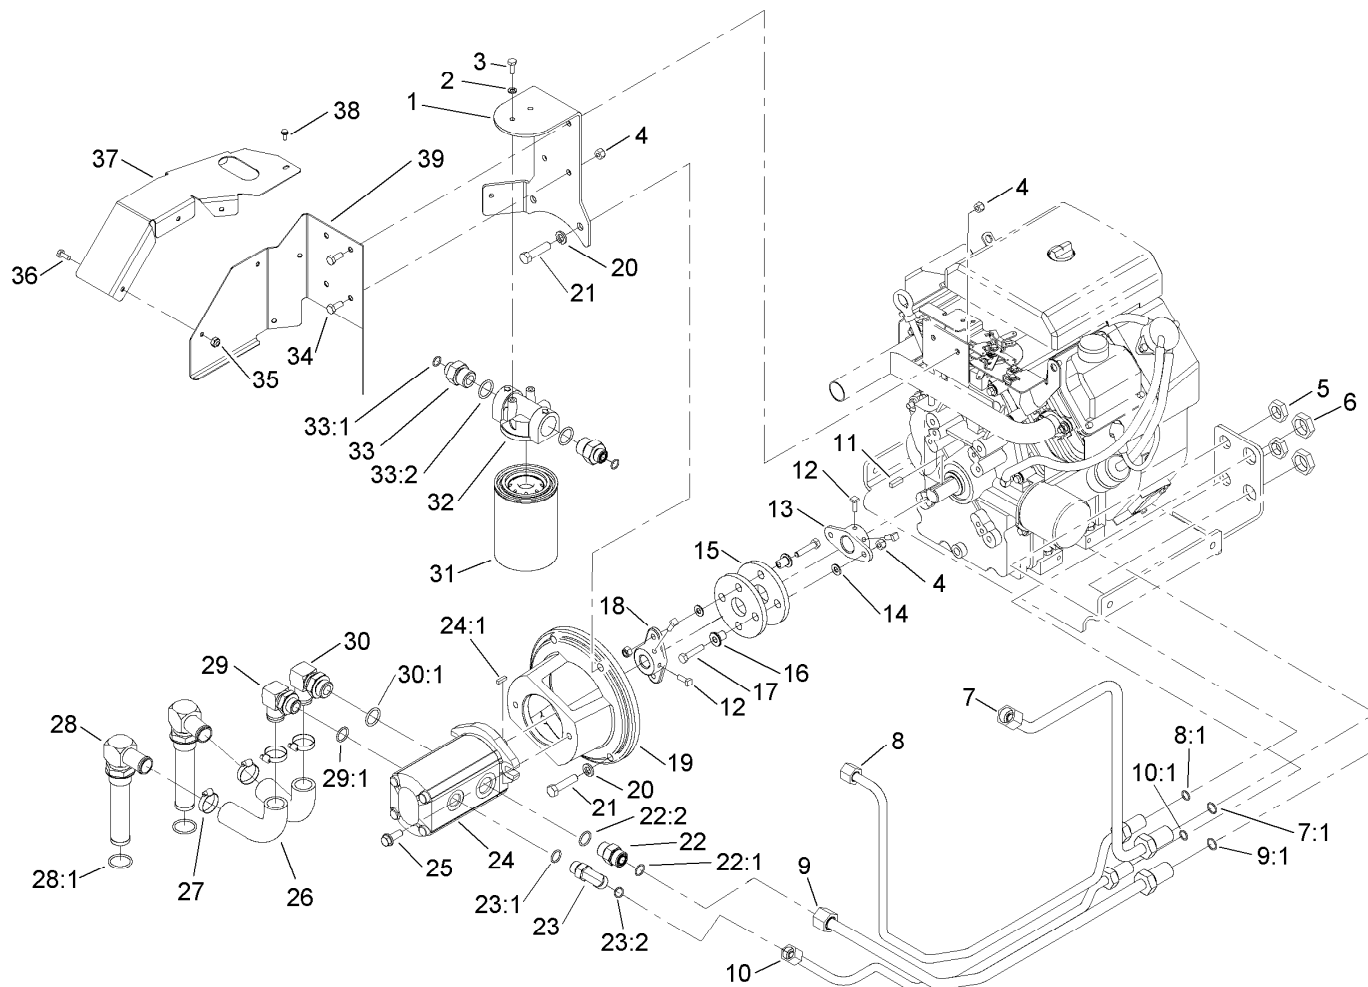


Hydraulic Pump and Filter Assembly

Ref.	Part Number	Qty.	Description
1	99-6172-03	1	Bracket-Support, Oil Filter
2	3253-3	2	Washer-Lock
3	321-4	2	Screw-HH
4	3296-29	8	Nut-Lock, NI
5	340-127	2	Nut-Bulkhead
6	340-74	2	Nut-Lock, Bulkhead
7	106-9333	1	HYD Tube ASM
7:1	237-65	1	O-Ring
8	98-2780	1	HYD Tube ASM
8:1	237-30	1	O-Ring
9	98-2783	1	HYD Tube ASM
9:1	237-65	1	O-Ring
10	106-9393	1	HYD Tube ASM
10:1	237-30	1	O-Ring
11	10-7070	1	Key-Square
12	3241-6	4	Screw-SQH
13	27-1960	1	Hub-Engine
14	3256-23	4	Washer-Plain
15	44-2230	2	Coupling-Rubber
16	71-4411	4	Spacer
17	322-7	4	Screw-HH
18	49-9600	1	Hub-Pump
19	98-2751-03	1	Mount-Pump
20	3253-6	4	Washer-Lock
21	324-7	4	Screw-HH

Ref.	Part Number	Qty.	Description
22	340-7	1	Fitting-Straight
22:1	237-65	1	O-Ring
22:2	237-80	1	O-Ring
23	340-98	1	Fitting-Elbow, 90 DEG
23:1	237-79	1	O-Ring
23:2	237-30	1	O-Ring
24	106-7650	1	HYD Pump ASM
24:1	100-4238	1	Key-Square
24:2	107-9316	1	Seal Kit ●
25	66-9300	2	Screw-HHF
26	105-0201	2	Hose-Suction, Formed
27	2412-34	4	Clamp-Hose
28	105-0204	2	Strainer Fitting ASM
28:1	237-146	1	O-Ring
29	61-2710	1	Stem-Hose, 90 DEG
29:1	237-117	1	O-Ring
30	100-4202	1	Fitting-90
30:1	237-81	1	O-Ring
31	86-3010	2	Filter-Oil
32	92-5821	1	Head-Filter
33	100-4240	2	Fitting-STR
33:1	237-30	1	O-Ring
33:2	237-81	1	O-Ring
34	322-3	4	Screw-HH
35	3296-16	4	Nut-Lock, NI

● Not illustrated

 ■ Not serviced separately

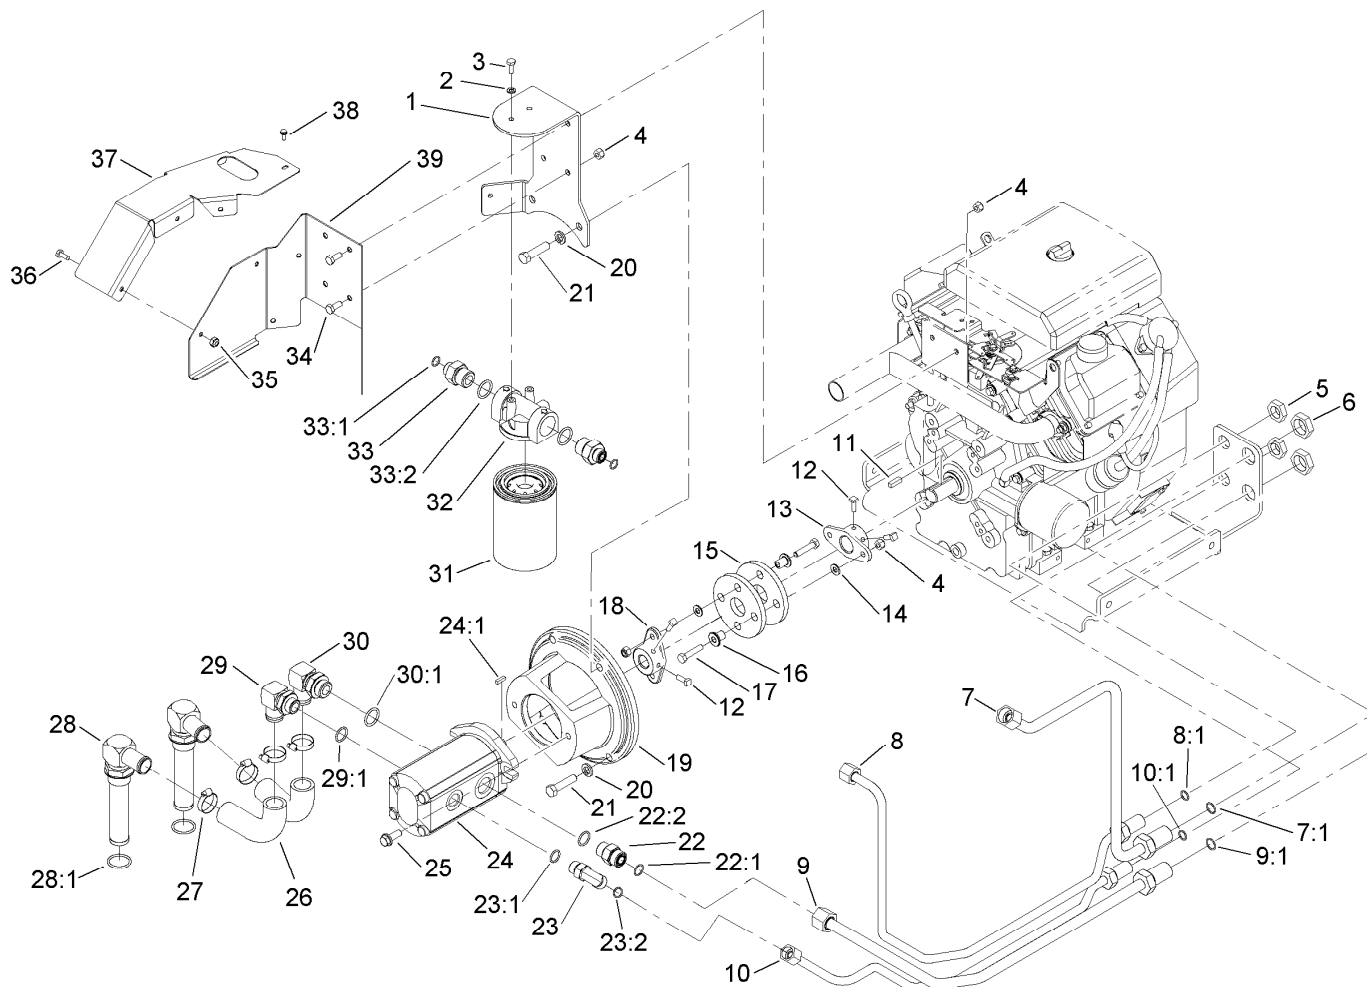


Hydraulic Pump and Filter Assembly (continued)

Ref.	Part Number	Qty.	Description
36	321-39	4	Screw-HH
37	104-9960	1	Shield-Heat

Ref.	Part Number	Qty.	Description
38	32144-112	1	Screw-HWH
39	100-6114	1	Shield-Heat, Filter

● Not illustrated

 
■ Not serviced separately

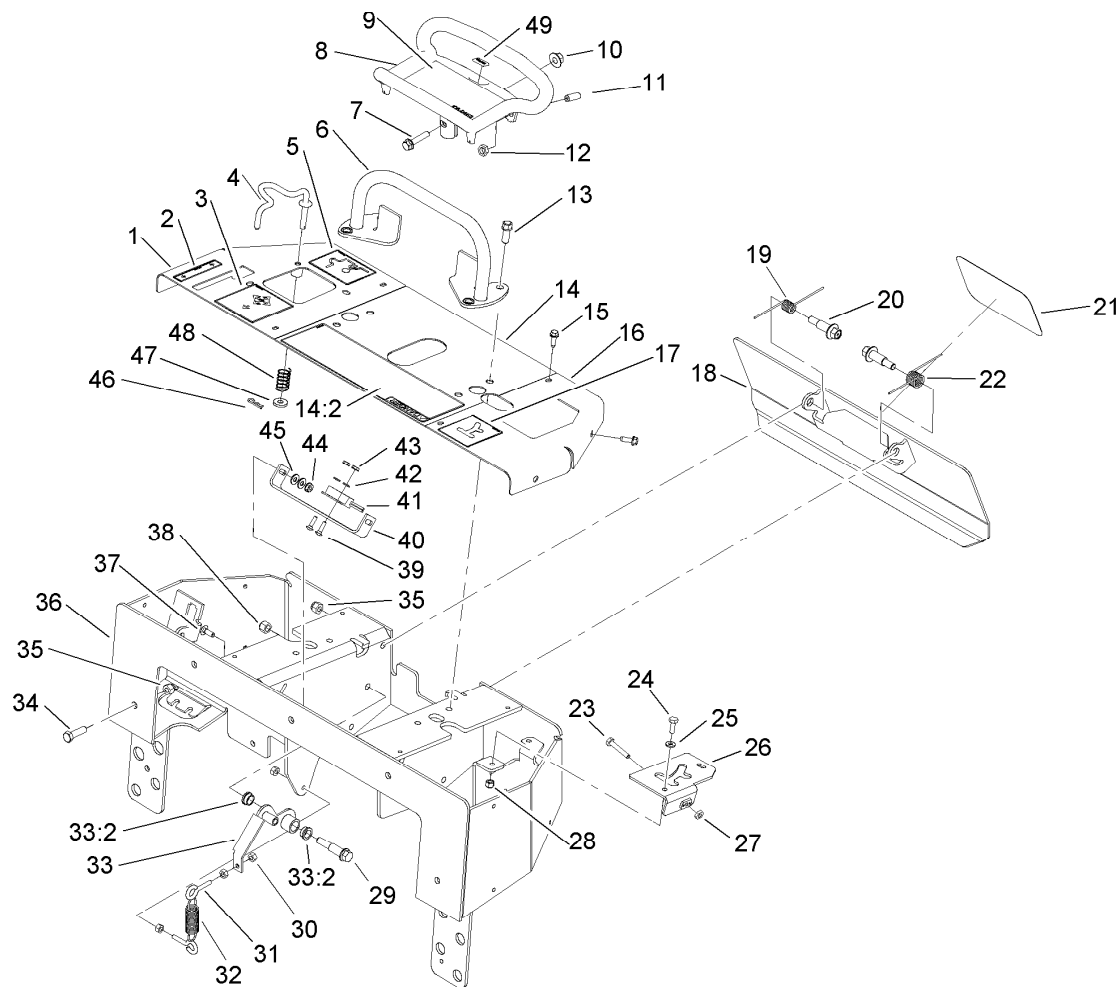

Control Panel Assembly

Ref.	Part Number	Qty.	Description
1	105-5824-01	1	RH Panel ASM
2	104-2838	1	Decal-Brake
3	104-2837	1	Decal-Loader
4	104-2833	1	Rod-Interlock
5	104-2844	1	Decal-Interlock
6	106-7715	1	Bar-Reference
7	3234-18	1	Screw-HHF
8	106-7614-03	1	Handle-Control
9	106-9453	1	Decal-Traction
10	32128-43	1	Nut-Flange
11	3247-6	2	Screw-Set
12	3218-3	2	Nut-Jam
13	95-1726	4	Screw-Taptite
14	100-6144	1	Center Panel ASM
14:2	100-6140	1	Decal-Danger
15	32144-44	8	Screw-HWH, Thread Roll
16	98-8428-01	1	Panel-LH
17	100-6136	1	Decal-Auxiliary
18	98-8417-03	1	Reverse Plate ASM
19	98-8425	1	Spring-Torsion, LH
20	62-1330	2	Bolt-Shoulder
21	105-1217	1	Decal
22	98-8424	1	Spring-Torsion, RH
23	321-9	1	Screw-HH
24	321-4	2	Screw-HH
25	3256-16	2	Washer-Flat


Ref.	Part Number	Qty.	Description
26	100-6126-01	1	Auxiliary Stop ASM
27	3218-1	1	Nut-Jam
28	3296-42	2	Nut-Lock, NI
29	66-0560	1	Bolt-Shoulder
30	3217-5	4	Nut-Hex
31	71-2870	2	Bolt-Eye
32	105-1210	1	Spring-Extension
33	100-4203	1	Neutral Centering Lever ASM
33:2	256-156	2	Bushing-Flange
34	323-7	5	Screw-HH
35	3296-39	7	Nut-Lock, NI
36	106-9320-01	1	Control Panel ASM
37	3229-1	2	Screw-CARR
38	3296-6	1	Nut-Lock
39	3229-20	2	Screw-CARR
40	100-1263	1	Plate-Switch
41	100-1270	1	Switch-Proximity
42	3256-51	2	Washer-Flat
43	32149-7	2	Nut-Keps
44	32149-2	2	Nut-Keps
45	3256-22	4	Washer-Flat
46	3290-307	1	Pin-Cotter
47	88-7200	1	Washer-Flat
48	85-6750	1	Spring-Control
49	98-1459	1	Decal

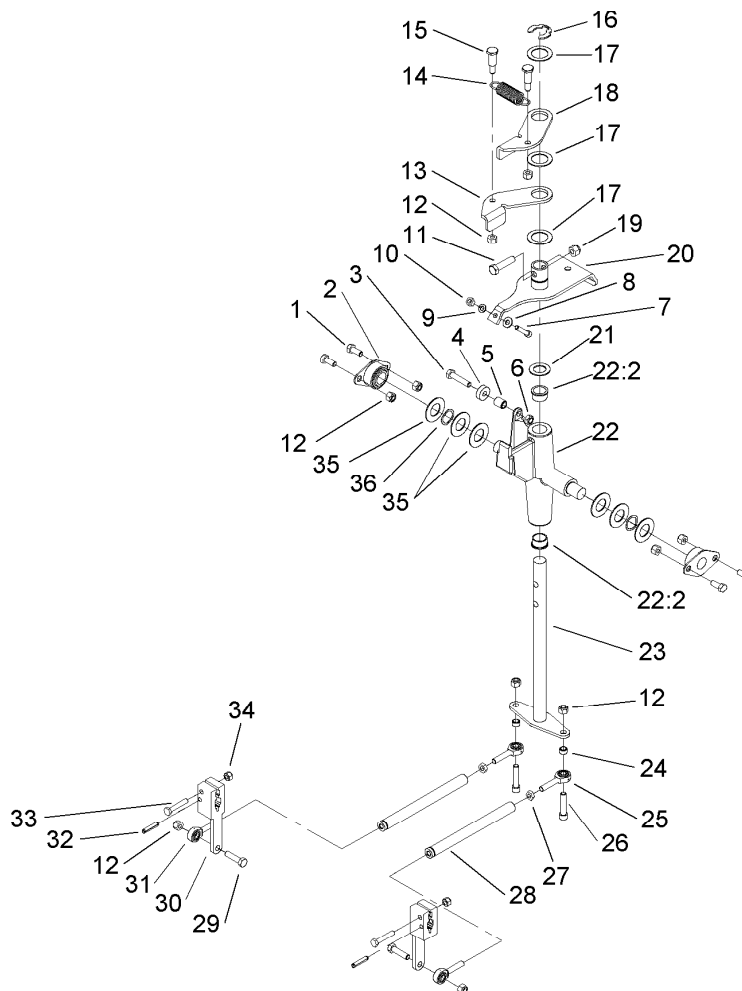 

Traction Control Assembly

Ref.	Part Number	Qty.	Description
1	322-3	4	Screw-HH
2	68-2970	2	Bushing
3	322-7	1	Screw-HH
4	251-259	1	Bearing-Ball
5	88-7450	1	Spacer-Lever, Control
6	3296-47	1	Nut-Lock, NI
7	3274-51	1	Screw-HSH
8	3256-22	1	Washer-Flat
9	3253-3	1	Washer-Lock
10	3217-5	1	Nut-Hex
11	323-8	1	Screw-HH
12	3296-29	10	Nut-Lock, NI
13	98-8407	1	Lever-Return, RH
14	105-1210	1	Spring-Extension
15	63-2650	2	Screw-Shoulder
16	32151-91	1	Ring-Retaining
17	3256-42	3	Washer-Flat
18	98-8408	1	Lever-Return, LH
19	3296-39	1	Nut-Lock, NI


Ref.	Part Number	Qty.	Description
20	104-9968	1	Pivot Lever ASM
21	257-8	1	Washer-Thrust
22	106-5737	1	Control Support ASM
22:2	256-252	2	Bearing-Flange
23	106-5745	1	Drive Rod ASM
24	92-3133	2	Spacer-Lever, Traction
25	2411-52	2	Bearing-Rod End, RH
26	3274-83	2	Screw-HSH
27	3220-2	2	Nut-Jam
28	95-3711	2	Rod-Linkage
29	322-6	2	Screw-HH
30	106-5739	2	Arm-Control, Pump
31	2411-53	2	Bearing-Rod End, LH
32	100-5440	2	Pin-Spring, Slotted
33	321-9	2	Screw-HH
34	3296-42	2	Nut-Lock, NI
35	3256-39	6	Washer-Flat
36	95-3703	2	Washer-Spring, Wave

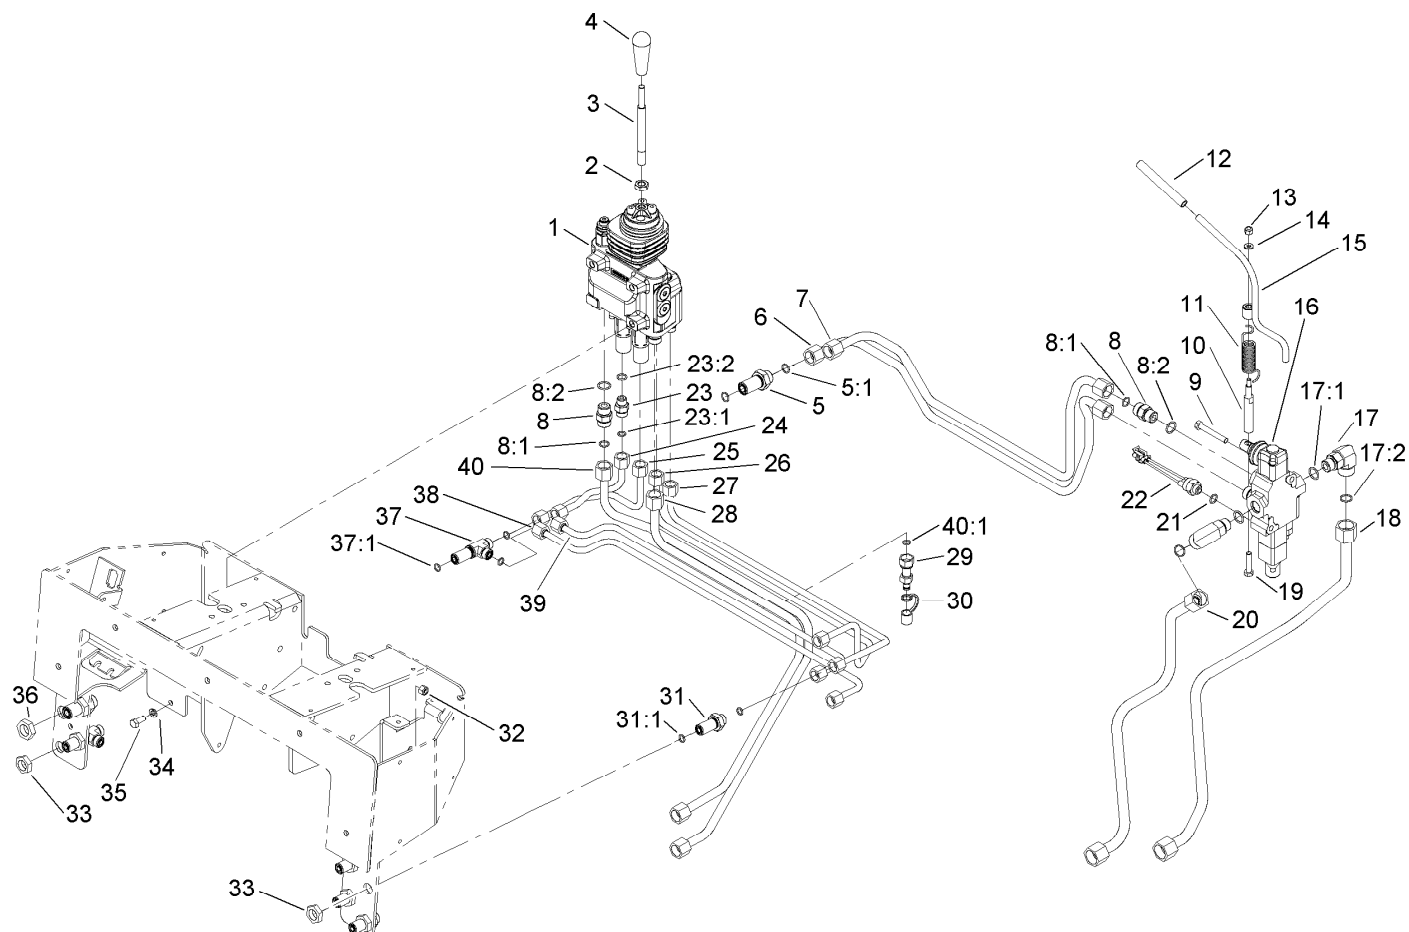 

Principal Hydraulic Assembly


Ref.	Part Number	Qty.	Description
1	106-9307	1	2 Spool Valve ASM
2	51-2070	1	Nut
3	95-3569	1	Shaft-Handle, Lift/Tilt
4	98-0152	1	Knob-Tapered
5	340-161	2	Fitting-Bulkhead
5:1	237-30	2	O-Ring
6	106-9310	1	Tube-HYD
7	106-9311	1	Tube-HYD
8	340-4	4	Fitting-Straight
8:1	237-30	1	O-Ring
8:2	237-79	1	O-Ring
9	322-11	2	Screw-HH
10	104-2827	1	Spacer-Hiflo
11	100-6129	1	Spring-Torsion
12	92-6798	1	Cap-Rod, Tilt
13	3296-42	1	Nut-Lock, NI
14	3256-16	1	Washer-Flat
15	100-4246	1	Auxiliary Lever ASM
16	104-2831	1	1 Spool Valve ASM
17	340-153	2	Fitting-Elbow, 90 DEG
17:1	237-79	1	O-Ring
17:2	237-151	1	O-Ring
18	106-9309	1	Tube-HYD
19	48-7740	1	Screw
20	104-5707	1	Tube-HYD

Ref.	Part Number	Qty.	Description
21	237-42	1	O-Ring
22	72-4310	1	Switch-Ball
23	340-2	4	Fitting-Straight
23:1	237-22	1	O-Ring
23:2	237-42	1	O-Ring
24	106-9315	1	Tube-HYD
25	106-9313	1	Tube-HYD
26	106-9312	1	Tube-HYD
27	106-9314	1	Tube-HYD
28	106-9318	1	Hydraulic Tube ASM
29	86-5480	1	Nipple-Test
30	354-79	1	Cap-Dust
31	340-71	4	Fitting-Straight, Bulkhead
31:1	237-22	2	O-Ring
32	3296-29	2	Nut-Lock, NI
33	340-70	6	Nut-Lock
34	3253-4	3	Washer-Lock
35	322-3	3	Screw-HH
36	340-127	2	Nut-Bulkhead
37	340-68	2	Fitting-Tee, Bulkhead
37:1	237-22	3	O-Ring
38	106-9316	1	Tube-HYD
39	106-9317	1	Tube-HYD
40	106-9319	1	Hydraulic Tube ASM
40:1	237-22	1	O-Ring

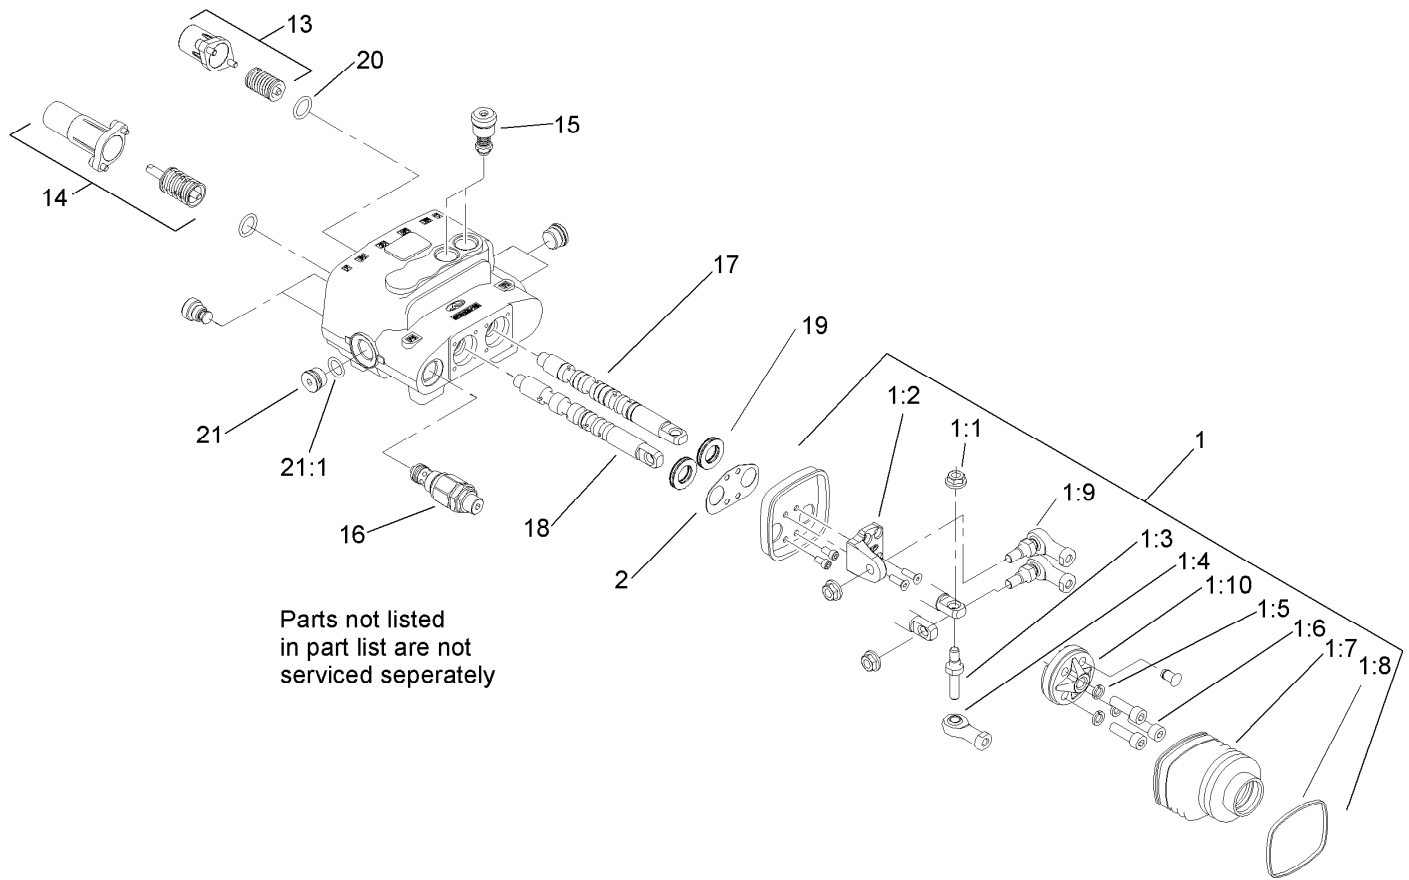 


Two Spool Valve Assembly No. 106-9307

Ref.	Part Number	Qty.	Description
1	106-7724	1	Joystick Kit
1:1	98-0668	3	Nut
1:2	106-7726	1	Pivot-Joystick
1:3	106-7727	1	Pin-Joystick
1:4	106-7728	1	End-Rod
1:5	42-9850	3	Washer-Lock, Spring
1:6	98-5828	3	Screw-HSH
1:7	106-7729	1	Bellow-Rubber
1:8	3290-379	1	Tie-Cable
1:9	106-7730	2	Joint-Joystick
1:10	106-7731	1	Holder-Articulated
2	106-7725	1	Seal-Joystick
13	106-7732	1	Valve Spring Kit
14	106-7733	1	Detent Spring Kit
15	106-7734	2	Valve-Relief
16	106-7735	1	Valve-Relief, Main
17	106-7736	1	Spool-Valve
18	106-7737	1	Spool-Valve
19	106-7738	2	Seal-Valve, Spool
20	106-7719	2	Seal-Valve
21	353-988	3	Plug-Hex
21:1	237-79	1	O-Ring

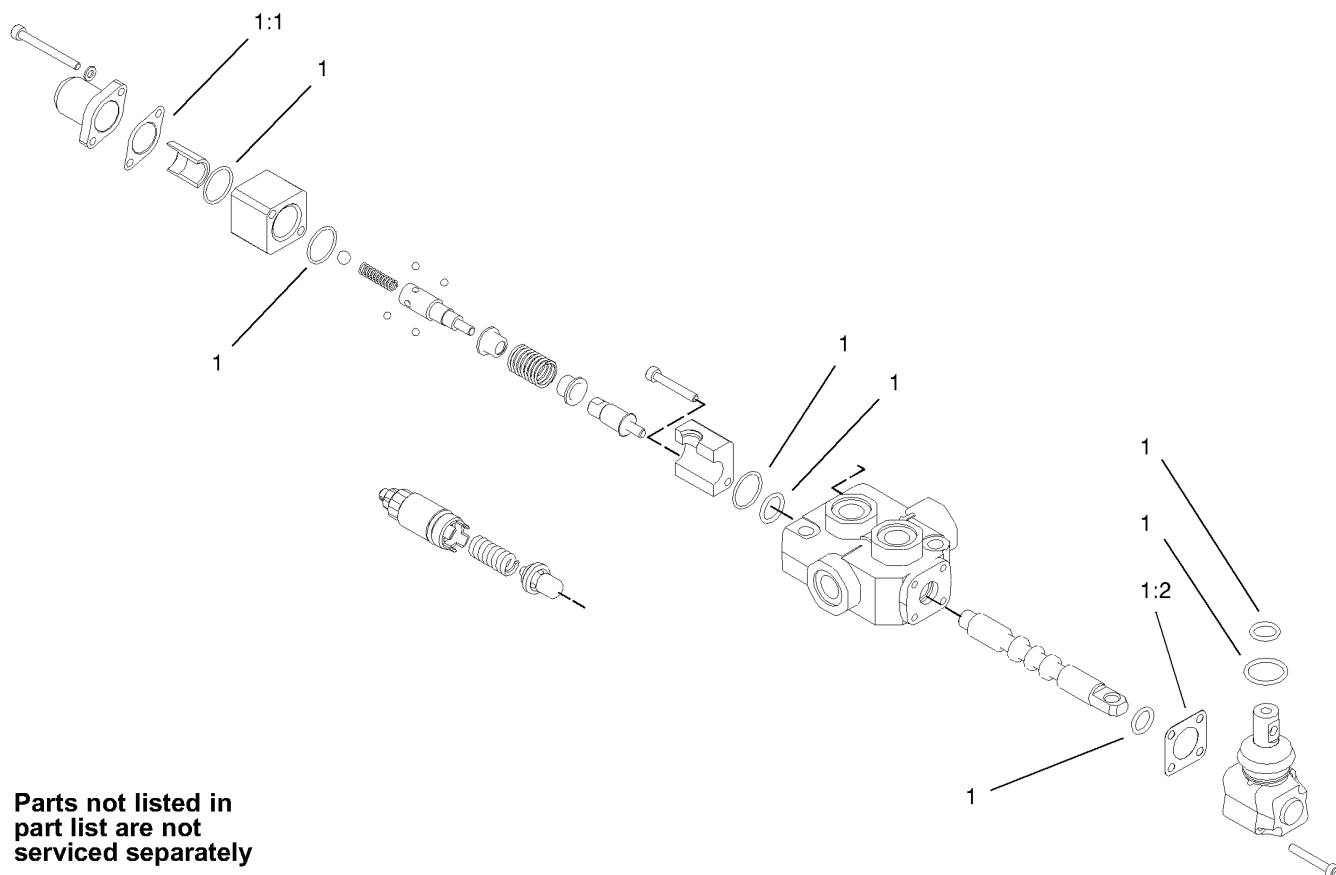 


One Spool Valve Assembly No. 104-2831

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	99-4391	1	Seal Kit
1:1	99-3074	1	Gasket
1:2	99-3075	3	Gasket

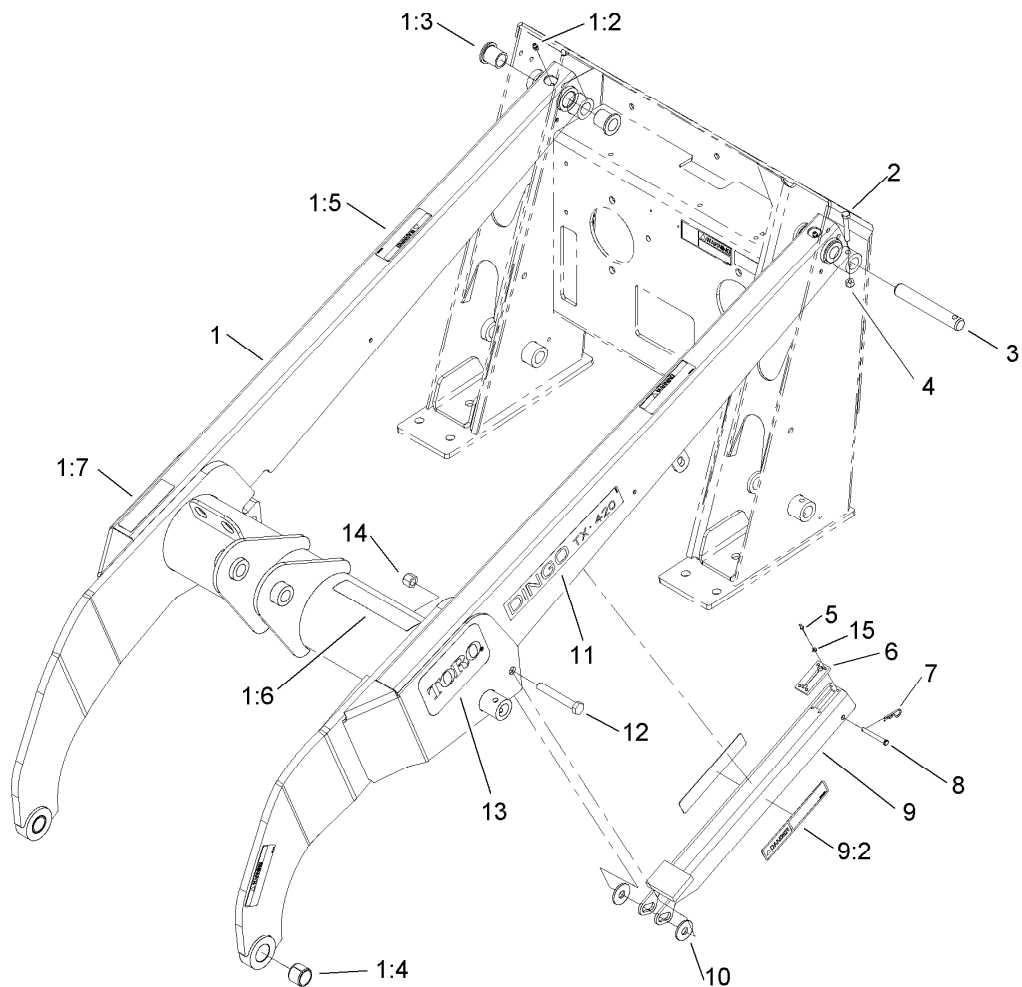 

Loader Arm Assembly

Ref.	Part Number	Qty.	Description
1	106-9350	1	Loader Arm ASM
1:2	302-5	2	Fitting-Grease
1:3	95-3577	4	Bushing
1:4	98-4871	2	Bushing-Tension
1:5	100-6141	4	Decal-Pinch
1:6	100-6132	1	Decal-Caution
1:7	100-6101	1	Decal-Caution
2	322-10	7	Screw-HH
3	104-2849	7	Pin-Locking
4	3296-29	7	Nut-Lock, NI
5	3269-8	4	Rivet-Blind
6	98-0083	1	Stop-Rubber
7	3290-250	1	Pin-Cotter
8	283-48	1	Pin-Clevis
9	100-6105	1	Locking Arm ASM
9:2	100-6135	2	Decal-Danger
10	68-1440	2	Washer-Rubber
11	105-8431	2	Decal
12	325-14	1	Screw-HH
13	105-1217	2	Decal
14	3296-23	1	Nut-Lock, NI
15	104-5112	4	Washer-Flat

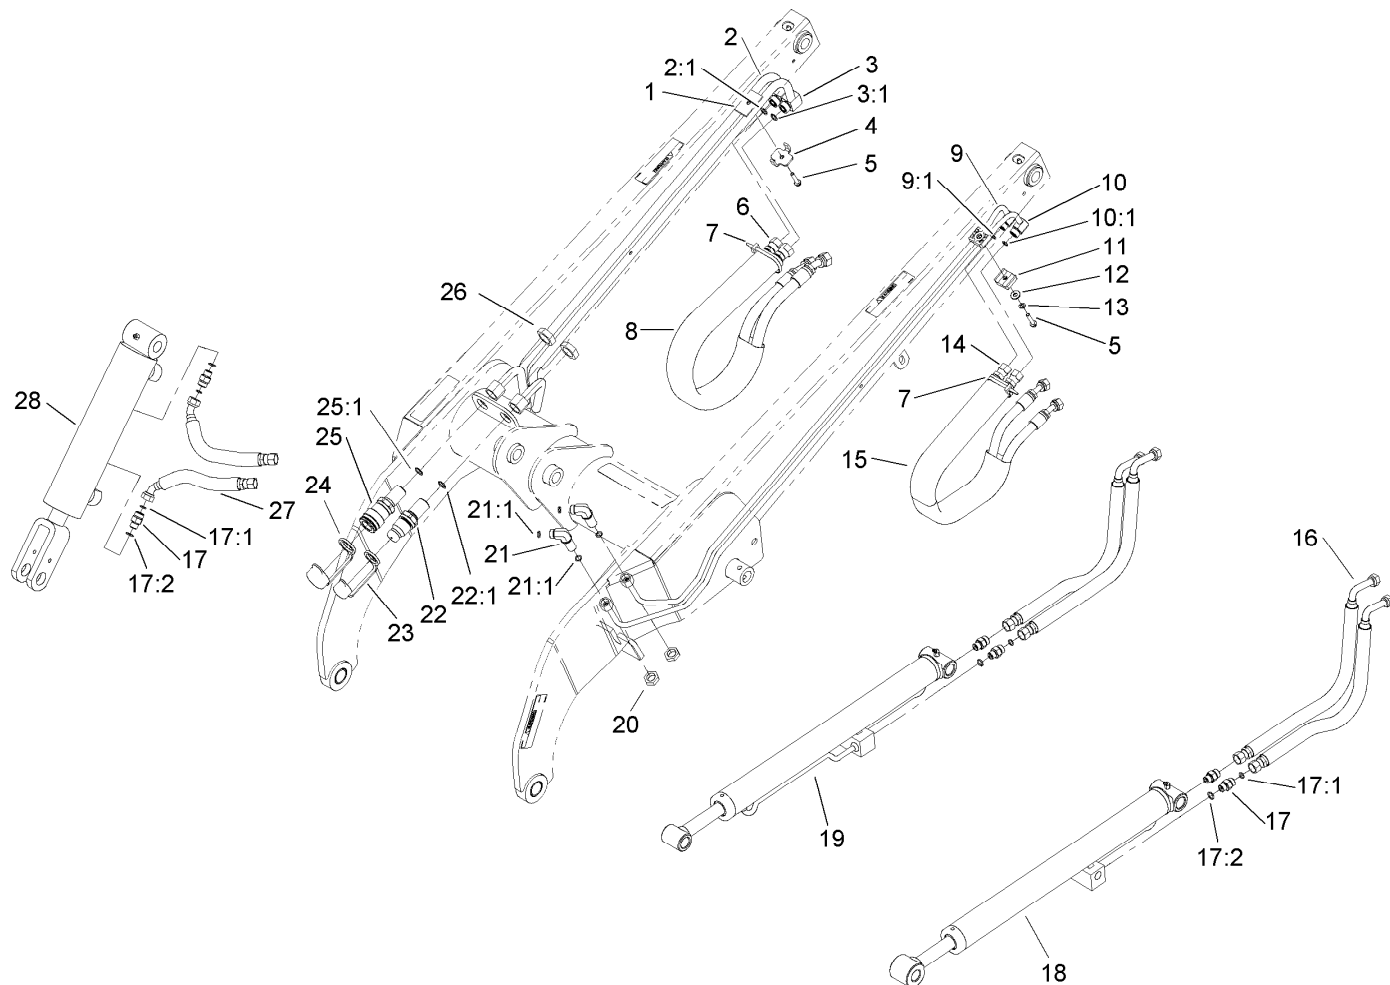 


Loader Arm Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	106-9366	1	Spacer-Hardline
2	106-9362	1	HYD Tube ASM
2:1	237-30	1	O-Ring
3	106-9363	1	HYD Tube ASM
3:1	237-30	1	O-Ring
4	98-0237	1	Plate-Clamp, Tube
5	32144-110	2	Screw-HWH
6	98-0242	2	Hose-HYD
7	3290-378	2	Tie-Cable
8	100-6128	1	Sleeve-Protective
9	106-9364	1	HYD Tube ASM
9:1	237-22	1	O-Ring
10	106-9365	1	HYD Tube ASM
10:1	237-22	1	O-Ring
11	56-7973	2	Clamp-Tube
12	3256-2	1	Washer-Flat
13	3253-3	1	Washer-Lock
14	98-0213	2	Hose-HYD
15	100-6127	1	Sleeve-Protective
16	98-0216	4	Hose-HYD

Ref.	Part Number	Qty.	Description
17	340-2	6	Fitting-Straight
17:1	237-22	1	O-Ring
17:2	237-42	1	O-Ring
18	104-6267	1	LH Lift Cylinder ASM
19	104-6269	1	RH Lift Cylinder ASM
20	340-70	2	Nut-Lock
21	340-154	2	Union-Bulkhead
21:1	237-22	2	O-Ring
22	105-8395	1	Bulkhead Nipple ASM
22:1	237-65	1	O-Ring
22:2	100-6120	1	Seal Kit ●
23	100-8815	1	Cap-Dust, Nipple
24	100-8816	1	Cap-Dust, Coupler
25	105-8394	1	Bulkhead Coupler ASM
25:1	237-65	1	O-Ring
25:2	105-8396	1	Seal Kit ●
26	340-74	2	Nut-Lock, Bulkhead
27	98-0207	2	Hose-HYD
28	105-8370	1	Tilt Cylinder ASM

● Not illustrated

 
■ Not serviced separately

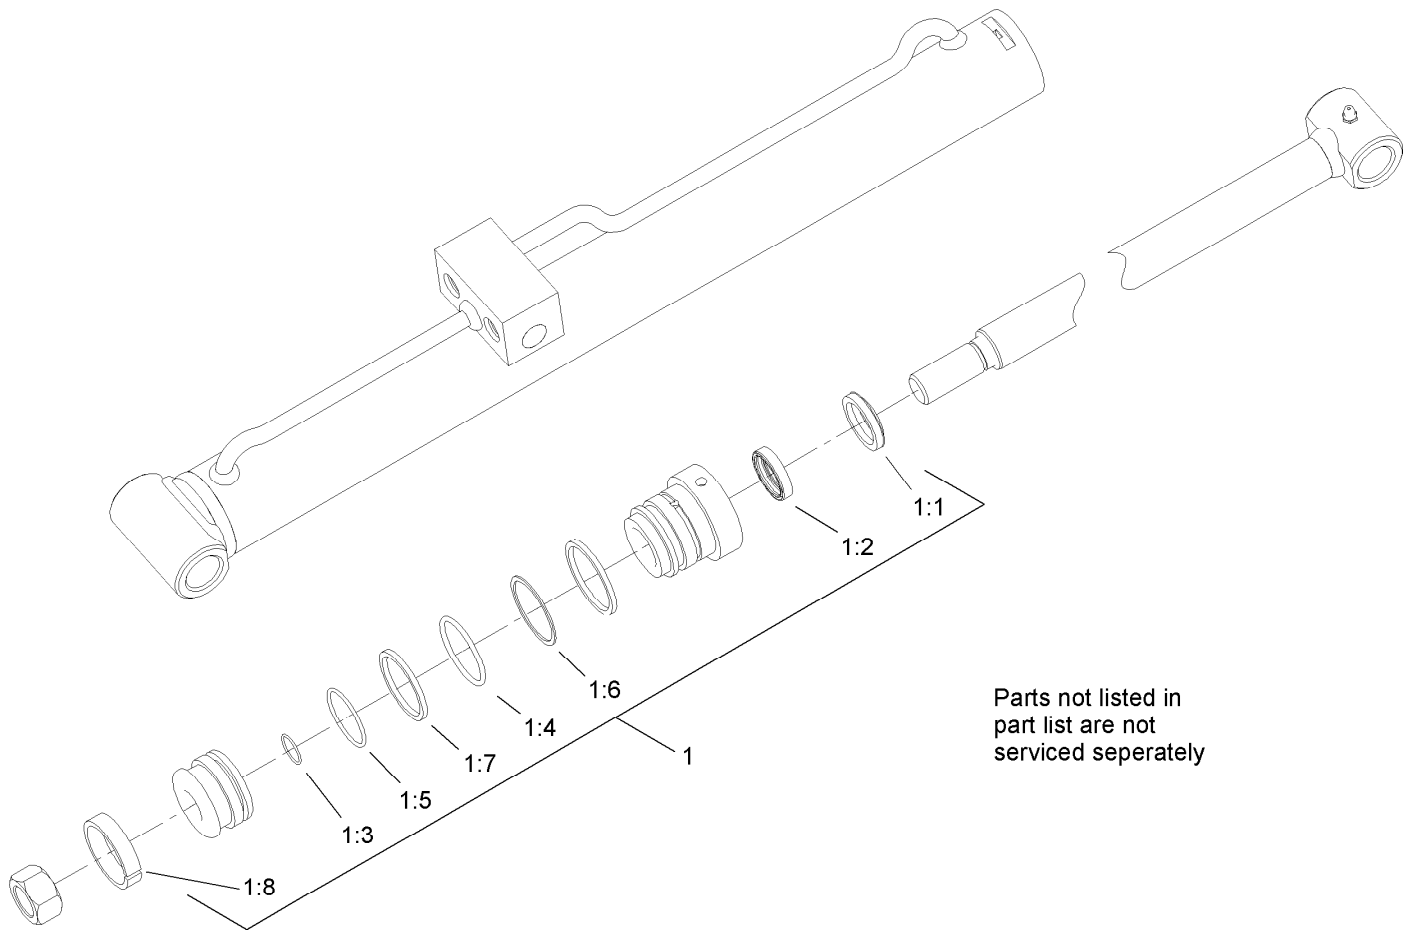

Left Hand Hydraulic Lift Cylinder Assembly No. 104-6267

Ref.	Part Number	Qty.	Description
1	104-6268	1	Seal Kit
1:1		1	Wiper ●
1:2		1	Seal ASM ●
1:3		1	Seal-Dust ●
1:4		1	Seal-Dust ●
1:5		1	Seal-Dust ●
1:6		1	Back-Up ●
1:7		1	Seal ASM ●
1:8		1	Ring-Wear ●

 
● Not serviced separately

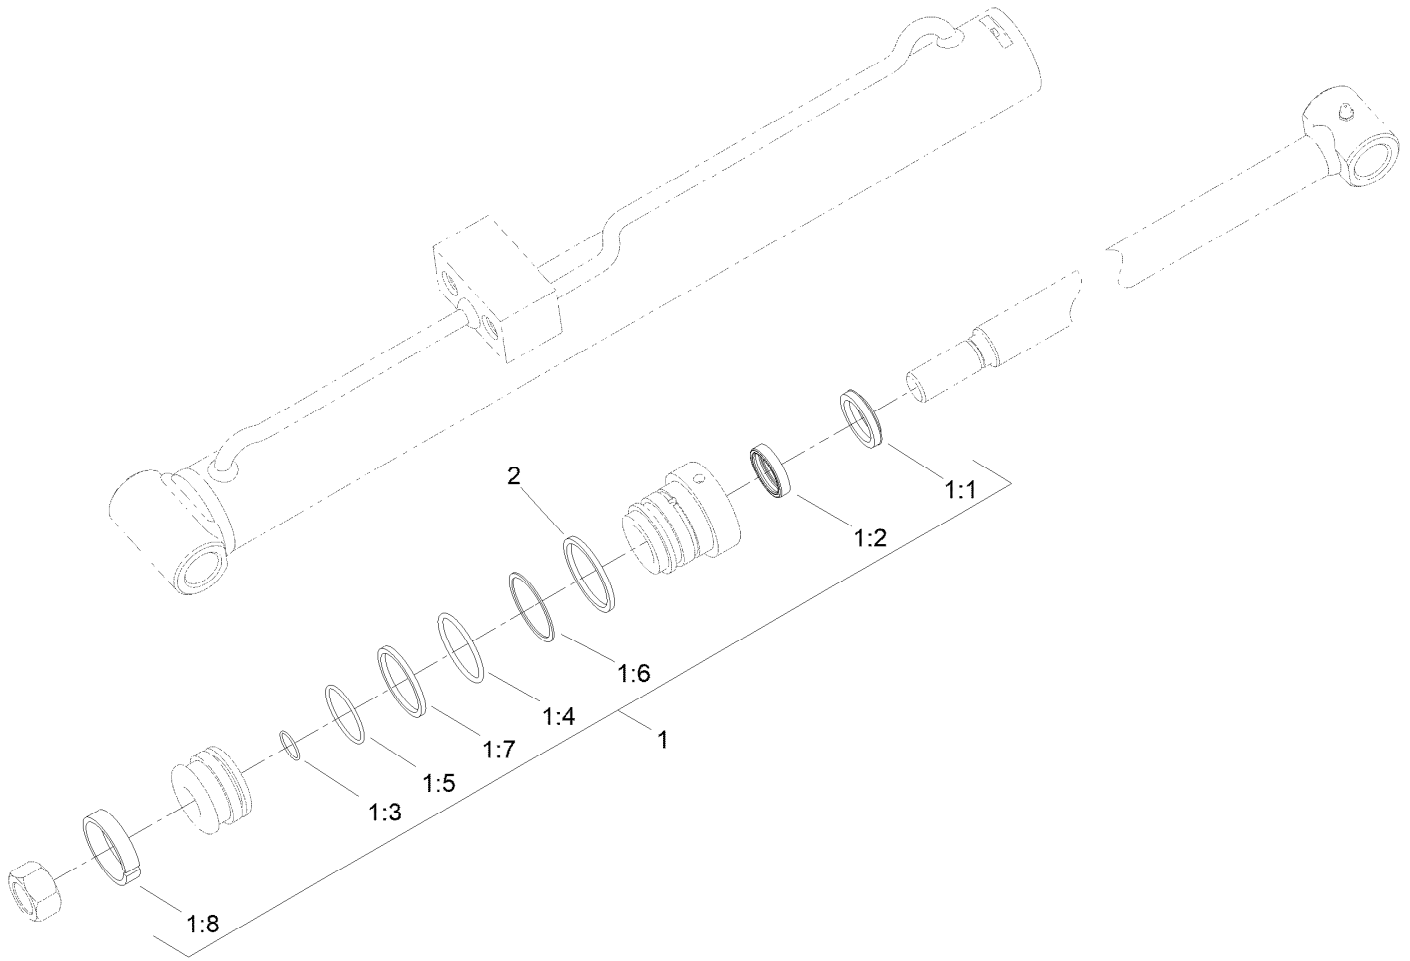

Right Hand Hydraulic Lift Cylinder Assembly No. 104-6269


Ref.	Part Number	Qty.	Description
1	104-6268	1	Seal Kit
1:1		1	Wiper ●
1:2		1	Seal ASM ●
1:3		1	Seal-Dust ●
1:4		1	Seal-Dust ●
1:5		1	Seal-Dust ●
1:6		1	Back-Up ●
1:7		1	Seal ASM ●
1:8		1	Ring-Wear ●
2	161-7281	1	Ring - Retaining

 ● Not serviced separately

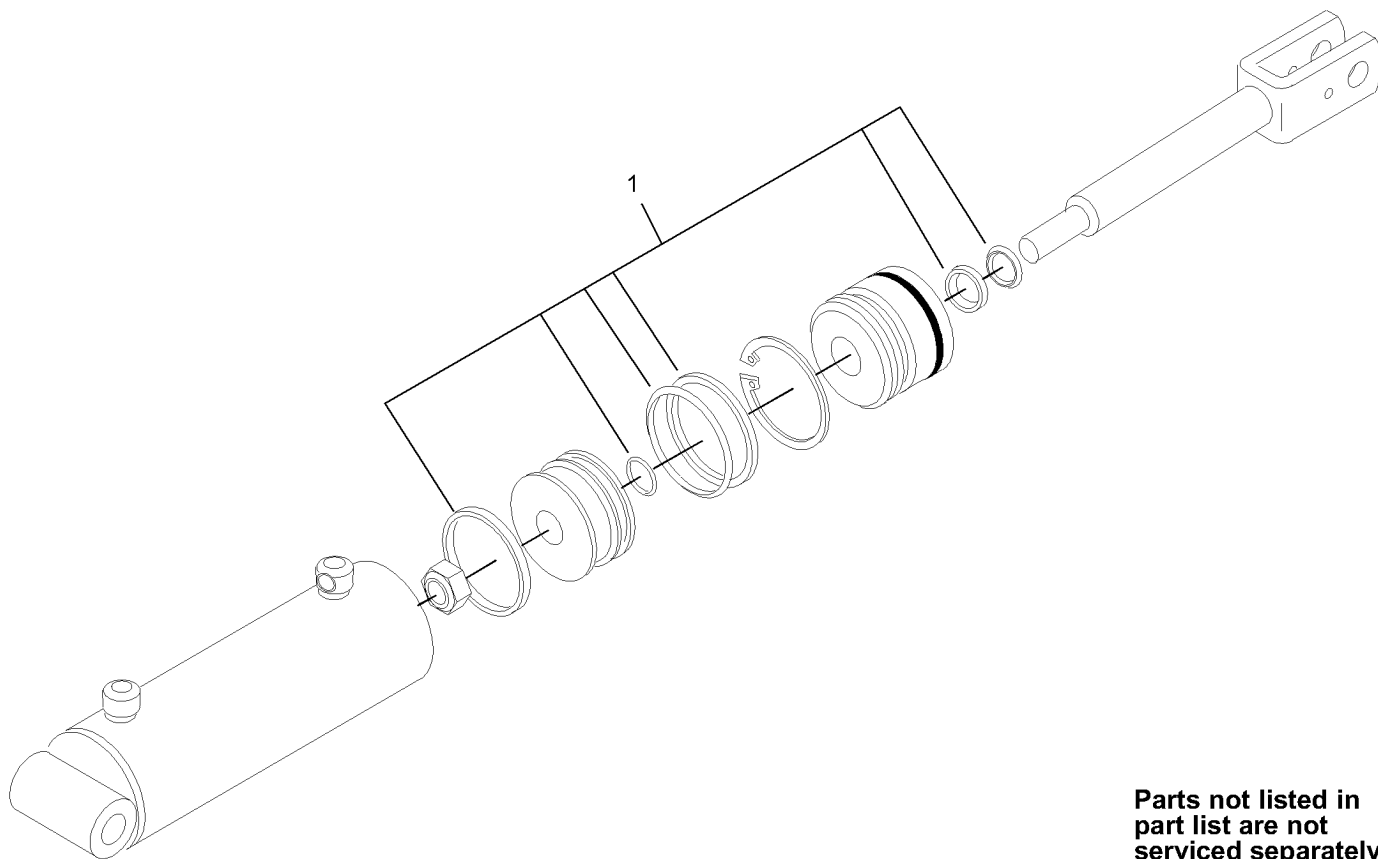


Hydraulic Cylinder Assembly No. 105-8370

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-7567	1	Seal Kit

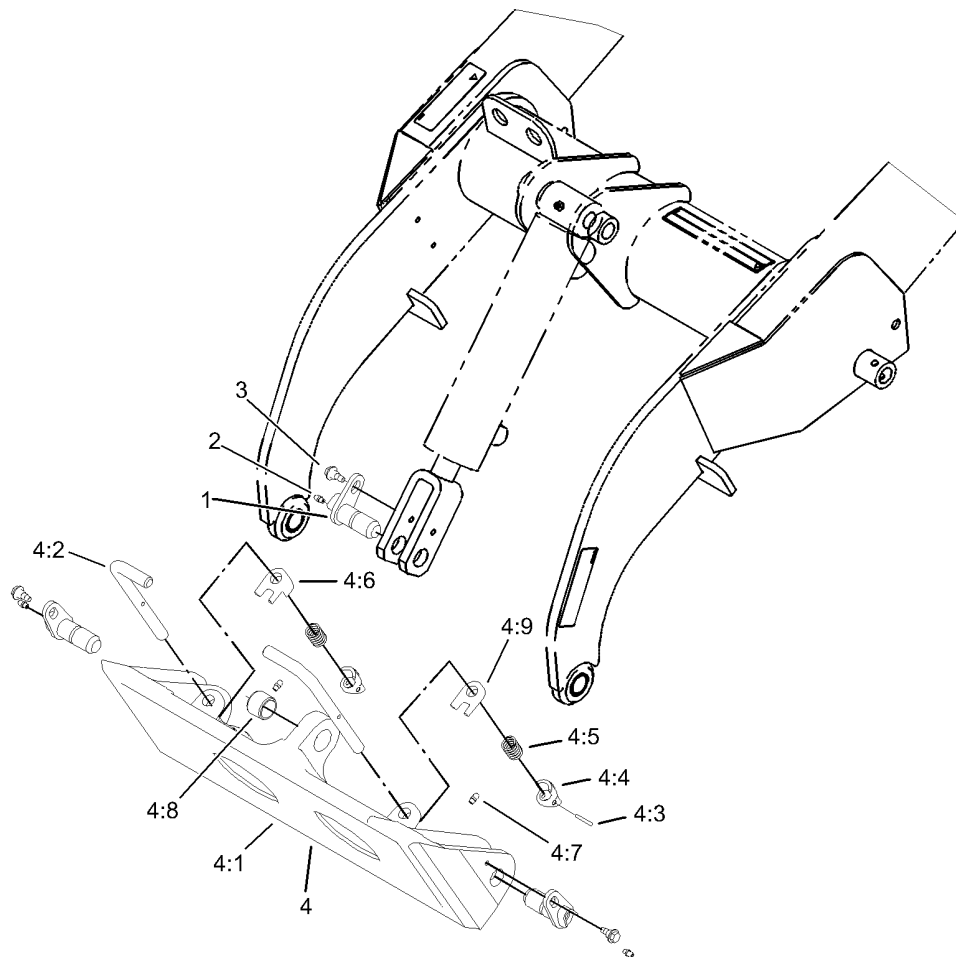 

Quick Attach Assembly


Ref.	Part Number	Qty.	Description
1	99-1414	3	Pin-Pivot
2	302-5	3	Fitting-Grease
3	99-5105	3	Screw-Shoulder
4	105-8364	1	Quick Attach ASM
4:1	105-0245-03	1	Mount-Attach, Quick
4:2	105-8367	2	Pin-Locking
4:3	3285-1	2	Pin-Grooved
4:4	105-0246	2	Cam
4:5	98-4694	2	Spring-Compression
4:6	104-5909	1	Stop-RH
4:7	302-5	2	Fitting-Grease
4:8	98-4871	1	Bushing-Tension
4:9	104-5903	1	Stop-LH

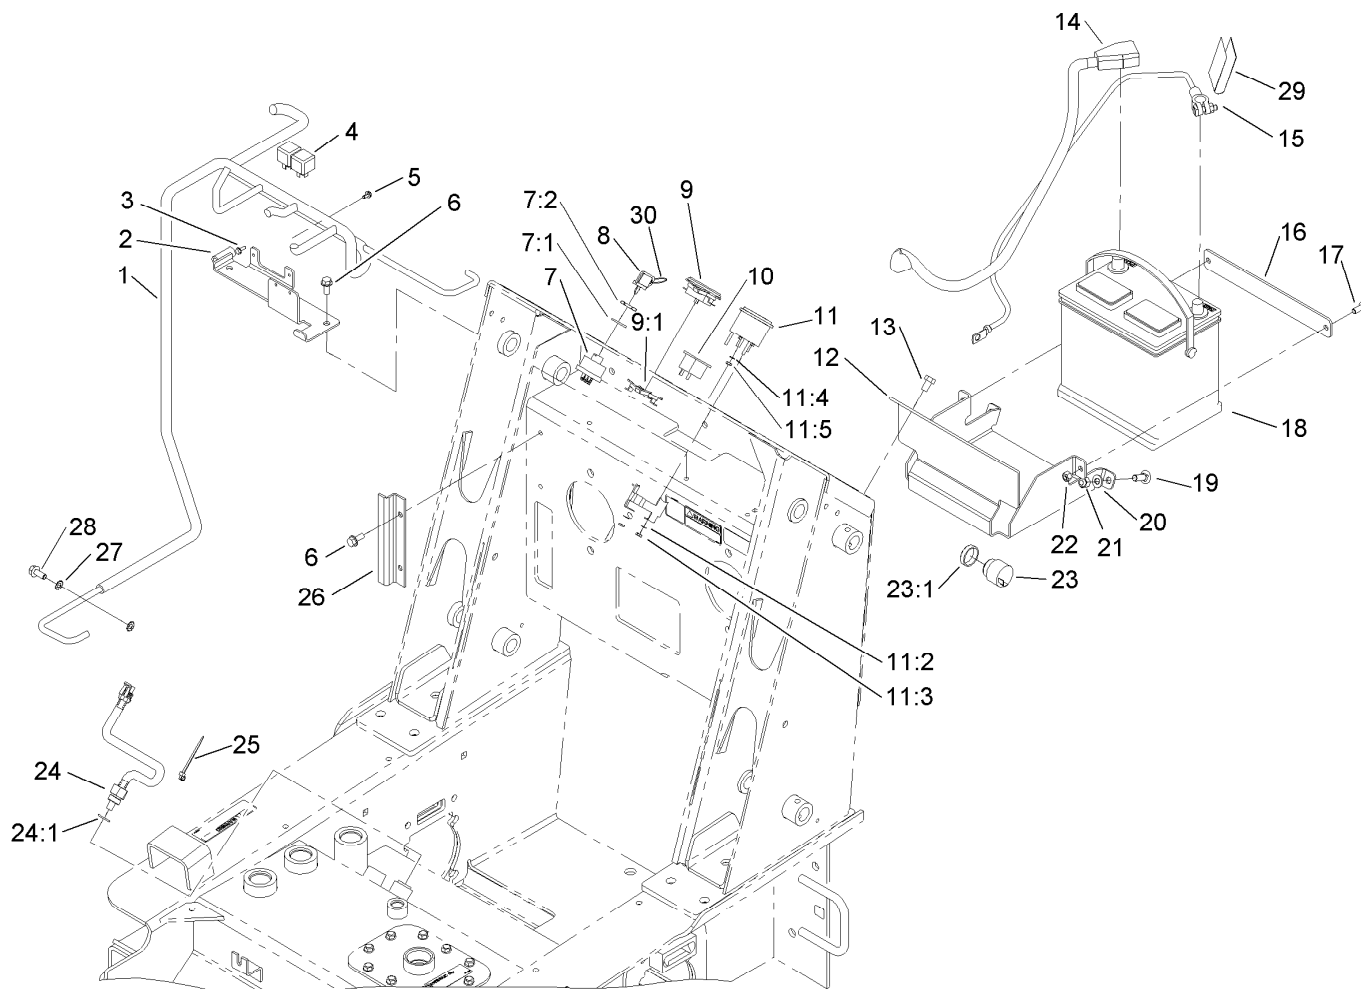 

Electrical System Assembly


Ref.	Part Number	Qty.	Description
1	106-5744	1	Harness-Wire
2	106-2558-03	1	Fuse/Relay Bracket ASM
3	32144-112	2	Screw-HWH
4	98-7249	2	Relay
5	104-2065	2	Screw-HWH
6	32144-70	4	Screw-HWHTF
7	88-9830	1	Key Switch ASM
7:1	3254-5	1	Washer-Lock
7:2	218-461	1	Nut-HH
8	63-8360	3	Key-Ignition
9	104-7427	1	Inductive Hourmeter ASM
9:1	104-4234	1	Clip-Mounting
10	104-2839	1	Light-Temp, Oil
11	66-2940	1	Gauge-Fuel
11:2	3254-1	2	Washer-Lock, Int
11:3	3217-27	2	Nut-Hex
11:4	3255-24	3	Washer-Lock / EXT
11:5	3217-16	3	Nut-Hex
12	105-0370-01	1	Tray-Mounting, Battery
13	32144-69	2	Screw-HWHTF

Ref.	Part Number	Qty.	Description
14	106-5707	1	Cable-Battery, Positive
15	106-5708	1	Cable-Battery, Negative
16	105-0371-01	1	Clamp-Battery
17	322-3	2	Screw-HH
18	104-9979	1	Battery
19	3231-22	2	Screw-CARR
20	3256-38	2	Washer-Flat
21	3296-39	2	Nut-Lock, NI
22	3296-29	2	Nut-Lock, NI
23	80-9330	1	Audio Alarm ASM
23:1	104-5107	1	Nut-Plastic, Knurled
24	98-2765	1	Switch-Temperature
24:1	237-79	1	O-Ring
25	3290-381	3	Tie-Cable
26	100-6117-01	1	Shield-Wiring
27	3255-8	2	Washer-Lock
28	33104-020	1	Screw-HHF
29	107-9309	1	Decal-Instructions, Charging
30	98-9321	1	Ring-Key

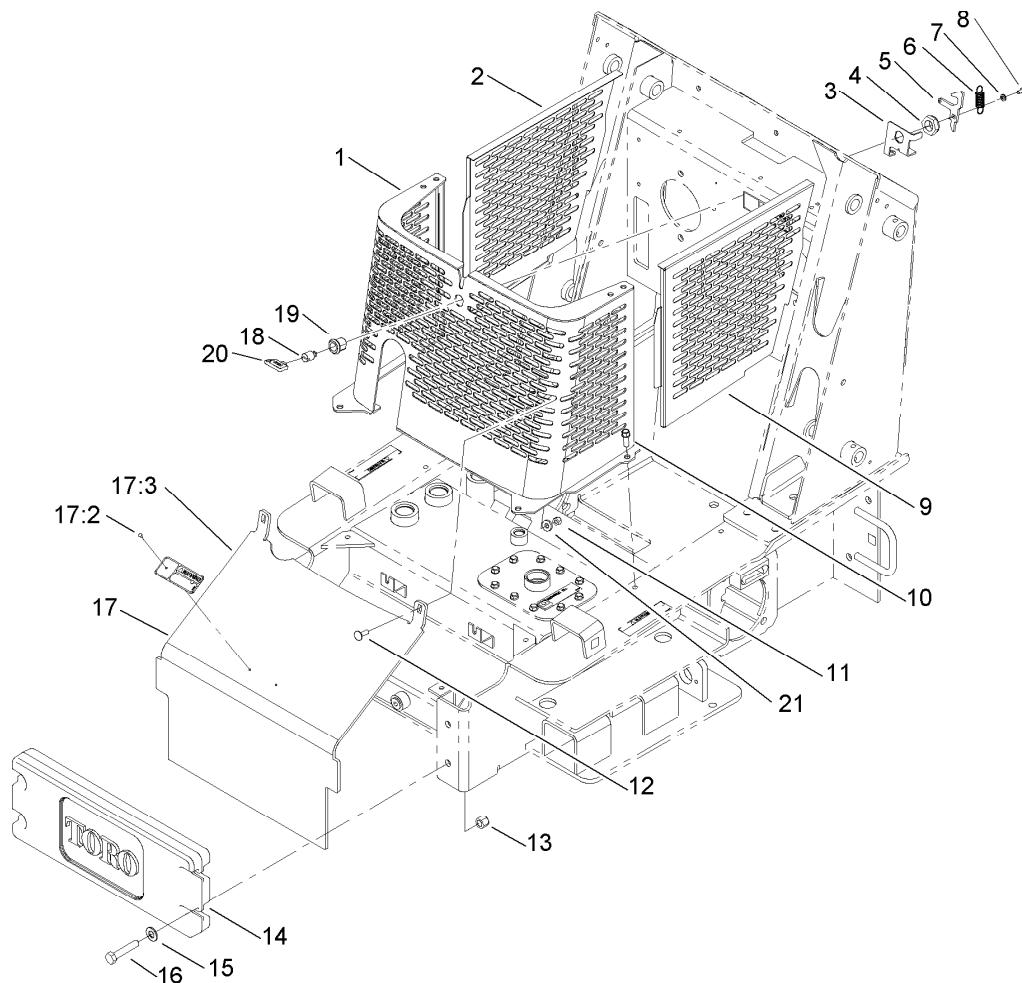 


Grill Assembly

Ref.	Part Number	Qty.	Description
1	106-5721-03	1	Grill ASM
2	106-5727-03	1	Panel-Side, RH
3	106-5729-03	1	Bracket-Latch
4	3296-60	1	Nut-Lock, NI
5	106-5728	1	Cam-Latch
6	104-0869	1	Spring
7	3253-3	1	Washer-Lock
8	321-2	1	Screw-HH
9	106-5726-03	1	Panel-Side, LH
10	95-1726	4	Screw-Taptite
11	3296-29	2	Nut-Lock, NI
12	3230-28	2	Screw-CARR
13	3296-23	4	Nut-Lock, NI
14	99-6166-01	1	Counterweight-Front
15	3256-26	4	Washer-Flat
16	325-10	4	Screw-HH
17	105-0395	1	Heat Shield ASM
17:2	80-8290	1	Plate-Surface, Hot
17:3	3269-31	2	Rivet-Pop
18	106-9336	1	Insert-Latch
19	106-9335	1	Housing-Latch
20	99-8970	1	Key-Latch, Hood
21	3256-23	2	Washer-Plain

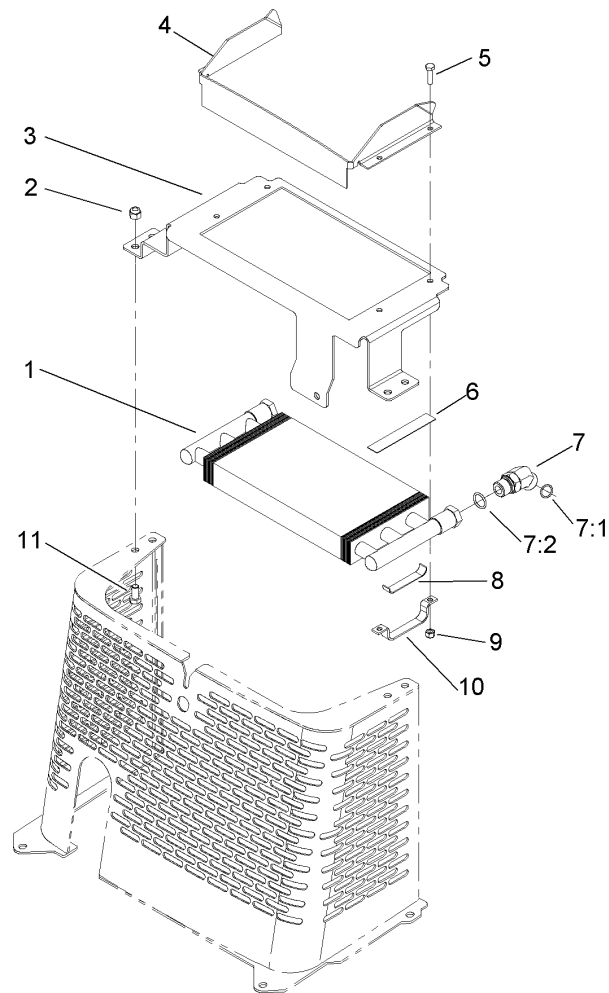 

Hydraulic Oil Cooler Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	105-0352	1	Exchanger-Heat
2	3296-39	4	Nut-Lock, NI
3	106-5716-03	1	Bracket-Mounting, Cooler
4	104-2802-03	1	Shield-Cooler
5	321-6	4	Screw-HH
6	94-9566	2	Pad-Footrest
7	340-14	2	Fitting-HYD, 45 DEG
7:1	237-65	1	O-Ring
7:2	237-80	1	O-Ring
8	104-2816	2	Pad-Support
9	3296-42	4	Nut-Lock, NI
10	104-2803	2	Support-Cooler
11	323-4	4	Screw-HH

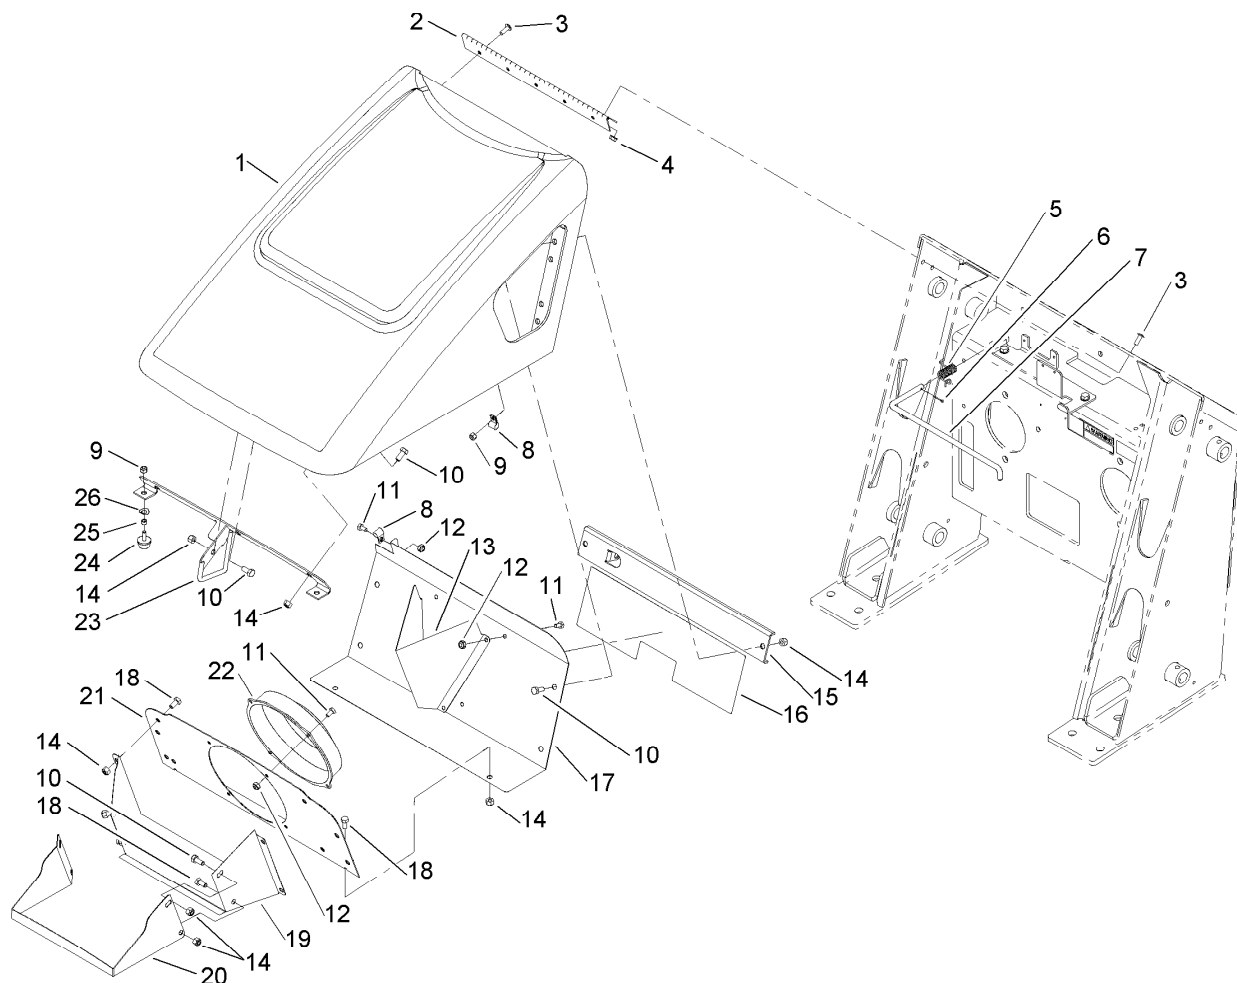 

Hood Assembly


Ref.	Part Number	Qty.	Description
1	106-2590	1	Engine Hood ASM
2	100-1284	1	Hinge-Hood
3	9114604	9	Screw-Head, Truss
4	32128-33	4	Nut-HF
5	106-2584	1	Spring-Torsion
6	3272-6	1	Pin-Cotter
7	106-2554	1	Rod-Support, Hood
8	2412-91	2	Clamp
9	3296-42	7	Nut-Lock, NI
10	322-3	14	Screw-HH
11	321-2	9	Screw-HH
12	3296-16	9	Nut-Lock, NI
13	104-2811-03	1	Baffle-Fan

Ref.	Part Number	Qty.	Description
14	3296-29	22	Nut-Lock, NI
15	106-2555-03	1	Bracket-Support, Hood
16	108-5599	1	Decal-Service
17	106-2596-03	1	Bracket-Fan, Back
18	322-2	8	Screw-HH
19	106-2597-03	1	Shroud-Fan
20	104-2813-03	1	Shroud-Fan, Front
21	106-2595-03	1	Bracket-Baffle, Fan
22	104-2809	1	Fan
23	106-5717-03	1	Rod Latch ASM
24	1-523420	2	Bumper
25	106-9308	2	Spacer
26	3290-301	2	Washer-Spring

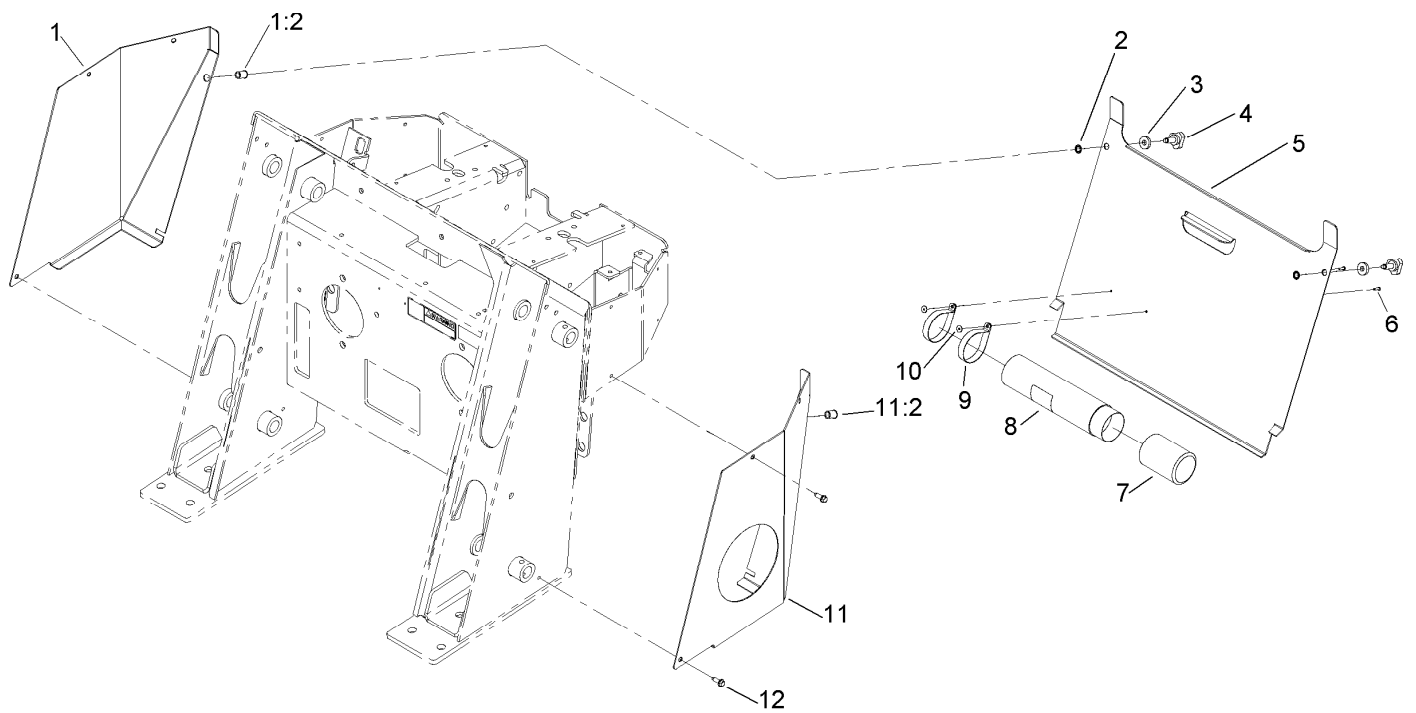 

Rear Access Cover Assembly


Ref.	Part Number	Qty.	Description
1	106-9342	1	RH Rear Cover Support ASM
1:2	32148-9	1	Nut-Clinch
2	32151-72	2	Ring-Retaining
3	106-0565	2	Washer-Rubber
4	95-9648	2	Knob
5	106-9339-01	1	Cover-Access, Rear
6	3269-17	2	Rivet-Pop
7	104-7048	1	Cap-Housing
8	104-7050	1	Tube-Manual
9	2412-120	2	Clamp-R
10	3269-10	2	Washer-Back
11	106-9343	1	LH Rear Cover Support ASM
11:2	32148-9	1	Nut-Clinch
12	32144-44	6	Screw-HWH, Thread Roll

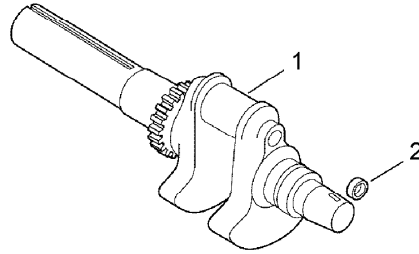 

Crankshaft Assembly Kohler CH730-0132

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	24 014 90-S	1	Crankshaft (Includes 2) ●
2	52 139 09-S	1	Plug-Cup ●

 ● Obtain parts from www.kohlerplus.com

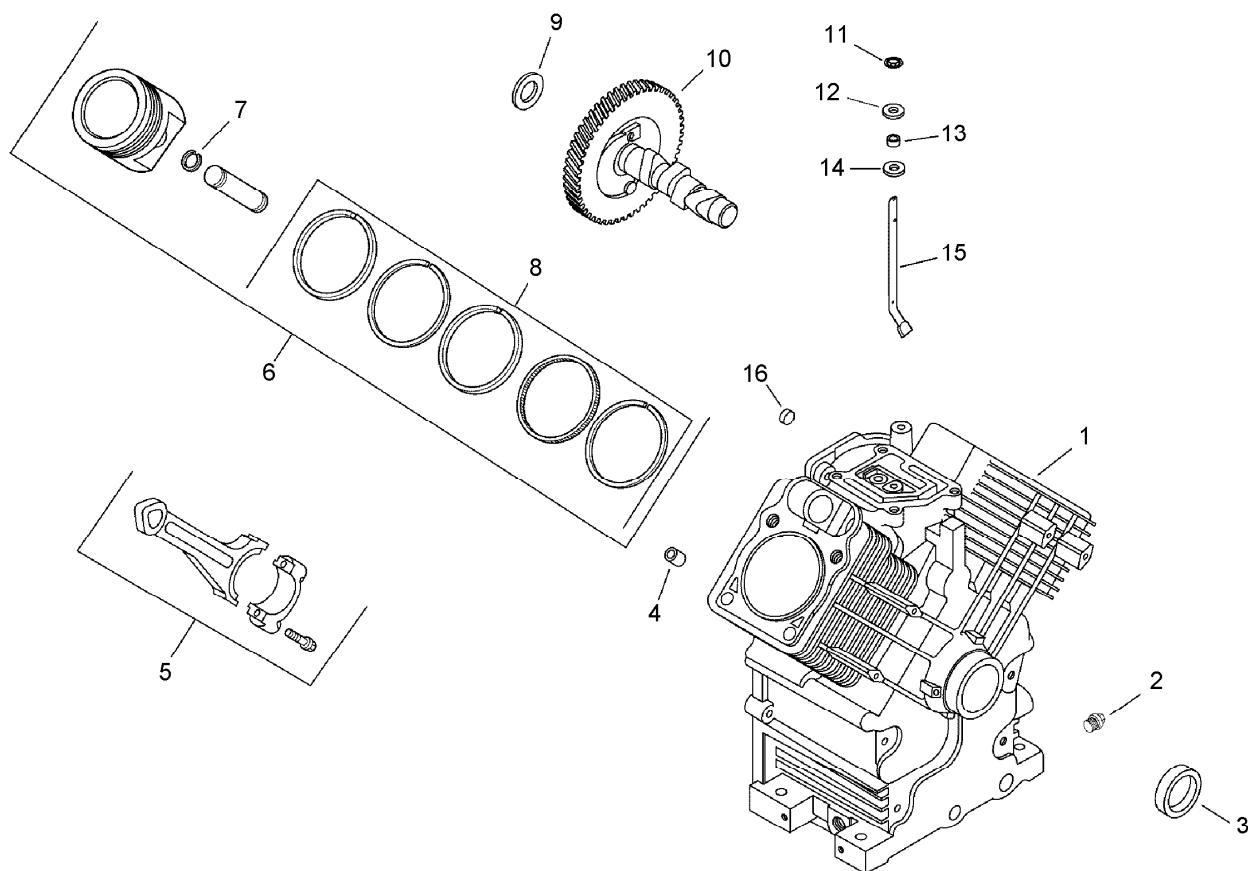


Crankcase Assembly Kohler CH730-0132

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Crankcase (Use: Miniblock 24 782 32) ● ■	9	12 422 07-S	1	Shim-Camshaft (White .028) ■
2	52 139 02-S	2	Plug-Pipe Head, 3/8 ■	9	12 422 08-S	1	Shim-Camshaft (Blue .03) ■
3	24 032 01-S	1	Seal-Oil ■	9	12 422 10-S	1	Shim-Camshaft (Yellow .034) ■
4	24 380 13-S	6	Pin-Locating ■	9	12 422 11-S	1	Shim-Camshaft (Green .036) ■
5	24 067 13-S	2	Rod-Connecting (Standard) ■	9	12 422 12-S	1	Shim-Camshaft (Gray .038) ■
5	24 067 14-S	2	Rod-Connecting (.25) ■	10	24 012 16-S	1	Camshaft ■
6	24 874 08-S	2	Piston And Ring Set (STD) ■	11	24 018 09-S	1	Retainer-Ring ■
6	24 874 16-S	2	Piston And Ring Set (.08) ■	12	M-931010-S	1	Washer (Top) ■
6	24 874 20-S	2	Piston And Ring Set (.25) ■	13	28 032 09-S	1	Seal-Cross Shaft, Governor ■
6	24 874 21-S	2	Piston And Ring Set (.50) ■	14	24 468 15-S	1	Washer (Bottom) ■
7	24 018 01-S	4	Retainer-Pin, Piston ■	15	24 144 38-S	1	Shaft-Cross, Governor ■
8	24 108 05-S	2	Ring Set (.25) ■	16	52 139 09-S	1	Plug-Cup ■
9	12 422 09-S	1	Shim-Camshaft (Red .032) ■				
9	12 422 13-S	1	Shim-Camshaft (Black .04) ■				

● Not serviced separately

 ■ Obtain parts from www.kohlerplus.com

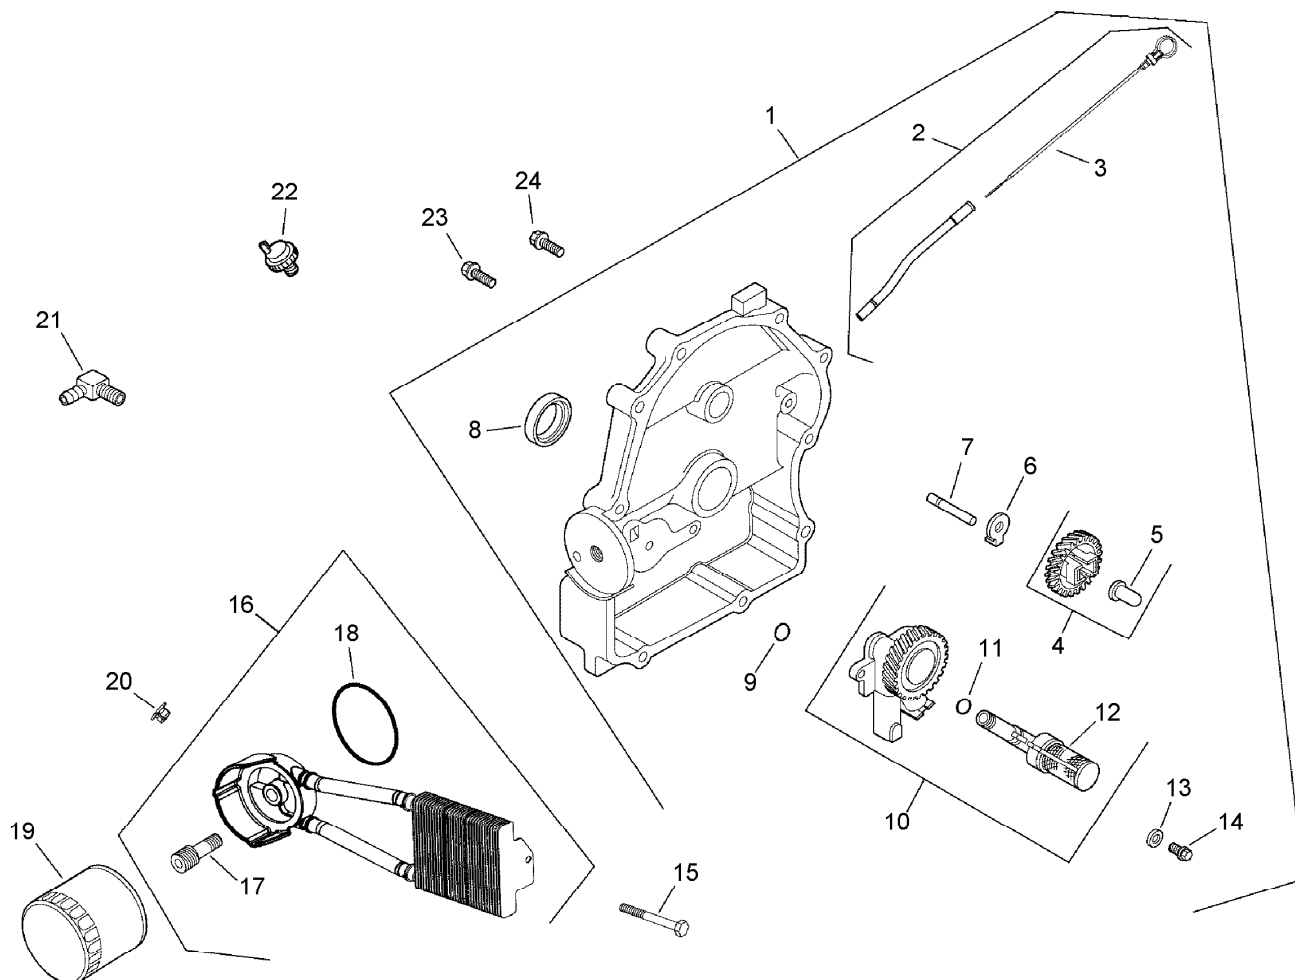


Oil Pan and Lubrication Assembly Kohler CH730-0132

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	24 009 92-S	1	Closure Plate ASM (Includes 2-14) ■	13	M-631005-S	2	Washer-Flat (6 MM) ■
2	24 755 121-S	1	Dipstick Tube ASM (Includes 3) ■	14	M-645025-S	2	Screw-Flange, Thread Forming (M6X1.0X25) ■
3	24 038 10-S	1	Dipstick ■	15	24 086 12-S	2	Screw-TAP (M6X1.7X18) ■
4	24 043 12-S	1	Governor Gear Kit (Includes 5) ■	16	54 755 21-S	1	Oil Cooler Kit (Includes 17, 18) ■
5	12 380 01-S	1	Pin-Regulating, Governor ■	17	28 136 01-S	1	Nipple-Filter, Oil ■
6	24 448 02-S	1	Tab-Locking ■	18	24 153 21-S	1	O-Ring ■
7	12 144 02-S	1	Shaft-Gear, Governor ■	19	52 050 02-S	1	Filter-Oil ■
8	52 032 08-S	1	Seal-Oil (P-T-O End) ■	20	24 100 01-S	2	Nut-Plastic ■
9	24 153 08-S	1	O-Ring ■	21	25 155 02-S	1	Connector-Hose, 90 Deg ■
10	24 393 37-S	1	Oil Pump ASM (Includes 11, 12) ■	22	24 099 03-S	1	Switch-Pressure, Oil ■
11	24 153 01-S	1	O-Ring ■	23	24 086 16-S	9	Screw-HF (M8X1.25X45) ■
12	24 381 04-S	1	Tube-Pick Up, Oil ■	24	24 086 17-S	1	Screw-Flange (M8X1.25X45) ■
					24 113 25-S	1	Decal-Cooler, Oil ● ■

● Not illustrated

 
■ Obtain parts from www.kohlerplus.com

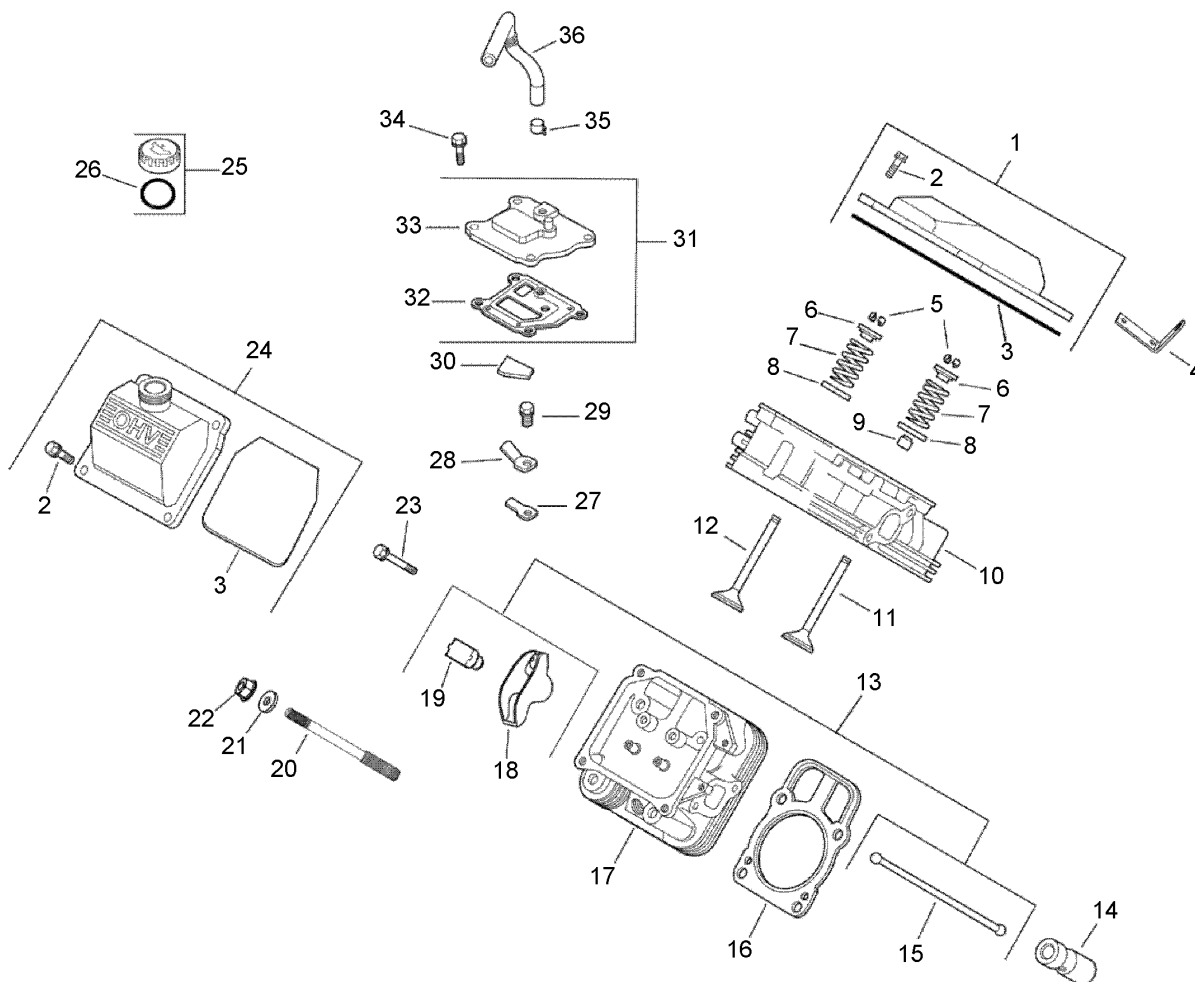

Head, Valve and Breather Assembly Kohler CH730-0132

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	24 755 141-S	1	Plain Valve Cover Kit (Includes 2, 3) ●	16	24 841 03-S	2	Cylinder Head Gasket Kit (Includes Head Mounting Hardware) ●
2	M-651030-S	4	Screw-Flange (M6X1.0X30) ●	17	24 318 66-S	1	Head ASM (No. 2 Cylinder) ●
3	24 153 28-S	1	O-Ring ●	18	25 186 01-S	4	Arm-Rocker ●
4	24 445 01-S	1	Strap-Lifting ●	19	24 599 01-S	4	Pivot-Arm, Rocker ●
5	12 755 03-S	4	Retainer Kit ●	20	24 072 09-S	8	Stud (M8X1.25Xm10X1.5X105MM) ●
6	12 173 01-S	4	Cap-Spring, Valve ●	21	24 468 16-S	8	Washer-Flat (8.6 MM) ●
7	24 089 02-S	4	Spring-Valve ●	22	24 100 10-S	8	Nut-Flange (M8X1.25) ●
8	235011-S	4	Retainer-Spring ●	23	66 086 07-S	4	Screw ●
9	66 032 05-S	2	Seal-Stem, Valve ●	24	24 755 140-S	1	Oil Fill Valve Cover Kit (Includes 2, 3) ●
10	24 318 65-S	1	Head ASM (No. 1 Cylinder) ●	25	24 755 46-S	1	Oil Fill Cap Kit (Includes 26) ●
11	24 017 01-S	2	Valve-Intake (STD) ●	26	25 153 02-S	1	O-Ring (Oil Fill Cap) ●
11	24 017 02-S	2	Valve-Intake (.25) ●	27	24 402 03-S	1	Reed-Breather ●
12	24 016 01-S	2	Valve-Exhaust (STD) ●	28	66 018 04-S	1	Retainer-Reed ●
12	24 016 02-S	2	Valve-Exhaust (.25) ●	29	M-545010-S	1	Screw-HHFTF (M5X.80X10) ●
13	24 755 66-S	1	Valve Train Kit (Includes 15, 18, 19) ●	30	24 050 01-S	1	Filter-Breather ●
14	25 351 01-S	4	Lifter-Valve ●				
15	24 411 05-S	4	Rod-Push ●				

 
● Obtain parts from www.kohlerplus.com

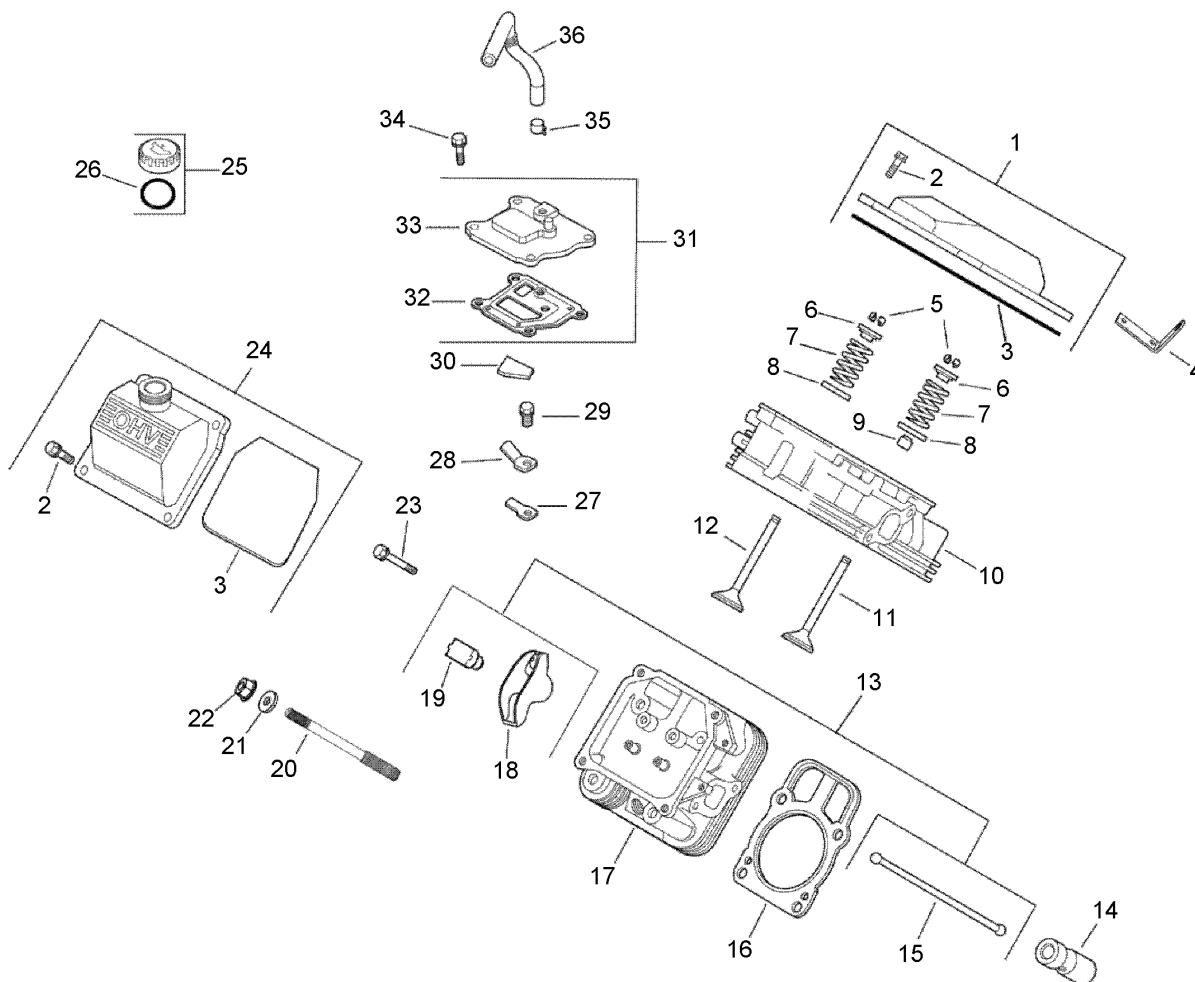

Head, Valve and Breather Assembly Kohler CH730-0132 (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
31	24 033 01-S	1	Breather Kit (Includes 32, 33) ●	34	M-645020-S	4	Screw-HHFTF (M6X1.0X20) ●
32	24 041 51-S	1	Gasket-Breather ●	35	25 237 14-S	1	Clamp-Hose, Spring (1/2) ●
33	24 096 86-S	1	Cover-Breather ●	36	24 326 26-S	1	Hose-Breather ●

 ● Obtain parts from www.kohlerplus.com

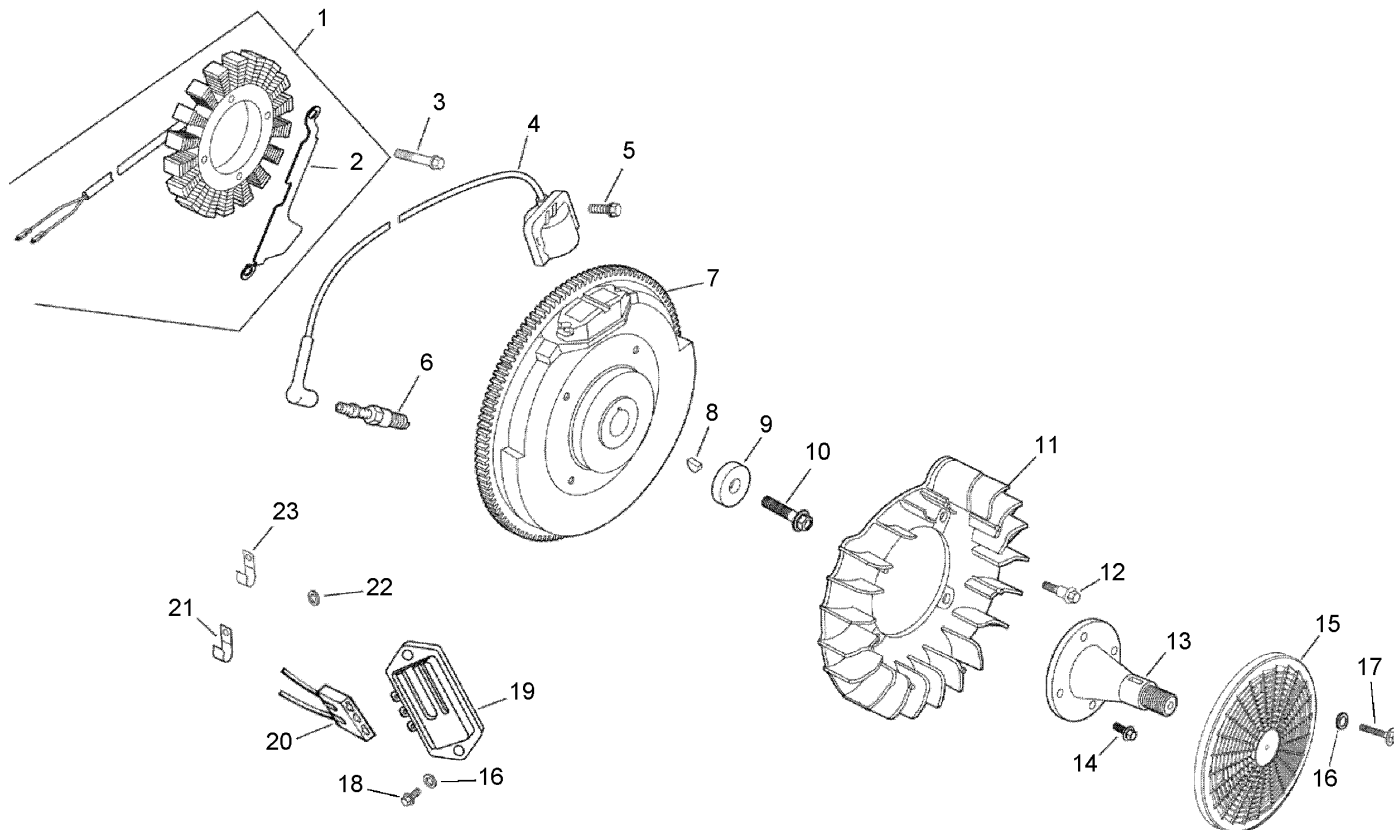


Ignition and Electrical Assembly Kohler CH730-0132

Ref.	Part Number	Qty.	Description
1	54 755 09-S	1	Stator Kit (Includes 2) ■
2	24 126 139-S	1	Bracket-Wire, Stator ■
3	M-548025-S	2	Screw-Thread Forming (M5X0.8X25) ■
4	24 584 01-S	2	Module-Ignition ■
5	M-545020-S	4	Screw-Flange, Thread Forming (M5X.8X20) ■
6	12 132 12-S	2	Spark Plug ■
7	24 025 01-S	1	Flywheel ■
8	X-42-15-S	1	Key (3/16 X 5/8) ■
9	12 468 03-S	1	Washer-Flat (13/32) ■
10	12 086 14-S	1	Screw-Flange (M10X1.5X45) ■
11	24 157 07-S	1	Fan ■
12	25 086 47-S	4	Bolt-Shoulder (M6X1.0X16) ■
13	24 144 13-S	1	Shaft-Drive, Front ■
14	M-839025-S	4	Screw-HF (M8X1.25X25) ■

Ref.	Part Number	Qty.	Description
15	24 162 34-S	1	Screen-Grass ■
16	X-25-92-S	2	Washer-Flat (.188) ■
17	25 086 117-S	4	Screw-Flange, Sems (M4X.7X25) ■
18	24 086 18-S	2	Screw-Phl HD (11-16X.88) ■
19	41 403 09-S	1	Rectifier-Regulator ■
20	236602-S	1	Connector (3 Contact) ■
21	48 154 02-S	1	Clip-Cable ■
22	X-25-63-S	1	Washer-Flat (1/4) ■
23	235173-S	1	Clip-Cable ■
	24 468 07-S	1	Washer-Flat ● ■
	24 126 137-S	1	Bracket-Strap, Ground ● ■
	24 176 08-S	1	Harness-Wiring ● ■
	25 454 03-S	2	Tie-Wire ● ■
	25 086 91-S	2	Screw (Mounts 5 Wire Connector Of Wiring Harness To Barrel Baffle Above Starter) ● ■

● Not illustrated

 ■ Obtain parts from www.kohlerplus.com

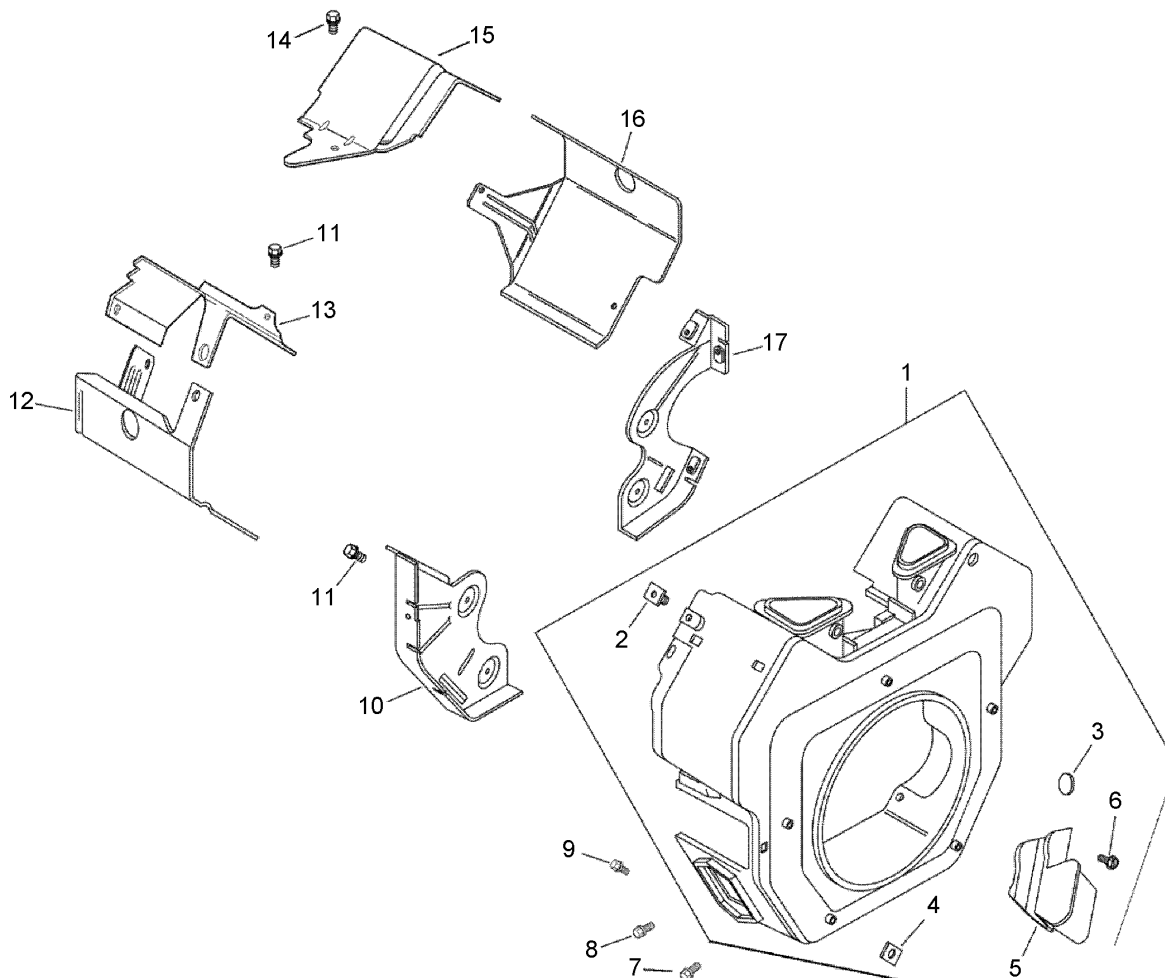


Blower Housing and Baffle Assembly Kohler CH730-0132

Ref.	Part Number	Qty.	Description
1	24 027 195-S	1	Blower Housing ASM (Includes 2-6) ■
2	24 100 01-S	3	Nut-Plastic ■
3	25 139 16-S	1	Plug-Button (9/16) ■
4	24 100 02-S	2	Nut-Plastic ■
5	24 096 85-S	1	Cover-Housing, Blower ■
6	25 086 91-S	1	Screw-Wsh HD Tap (8-18X.50) ■
7	M-551016-S	1	Screw-Hex Flange, Heavy (M5X0.8X16) ■
8	M-545016-S	2	Screw-Flange, Thread Forming (M5X0.8X16) ■
9	M-545020-S	4	Screw-Flange, Thread Forming (M5X.8X20) ■
10	24 146 19-S	1	Plate-Backing (No. 2 Side) ■
11	M-645016-S	6	Screw-Flange, Thread Forming (M6X1.0X16) ■
12	24 063 39-S	1	Baffle-Barrel, Cylinder (No. 2 Side) ■
13	24 063 70-S	1	Baffle-Valley (No. 2 Side) ■
14	M-545010-S	2	Screw-HHFTF (M5X.80X10) ■
15	24 063 59-S	1	Baffle-Valley (No. 1 Side) ■
16	24 063 58-S	1	Baffle-Barrel, Cylinder (No. 1 Side) ■
17	24 146 20-S	1	Plate-Backing (No. 1 Side) ■
	24 113 97-S	1	Decal-25 HP ● ■
	25 113 39-S	1	Decal-Laminate, Clear ● ■

● Not illustrated

 
■ Obtain parts from www.kohlerplus.com

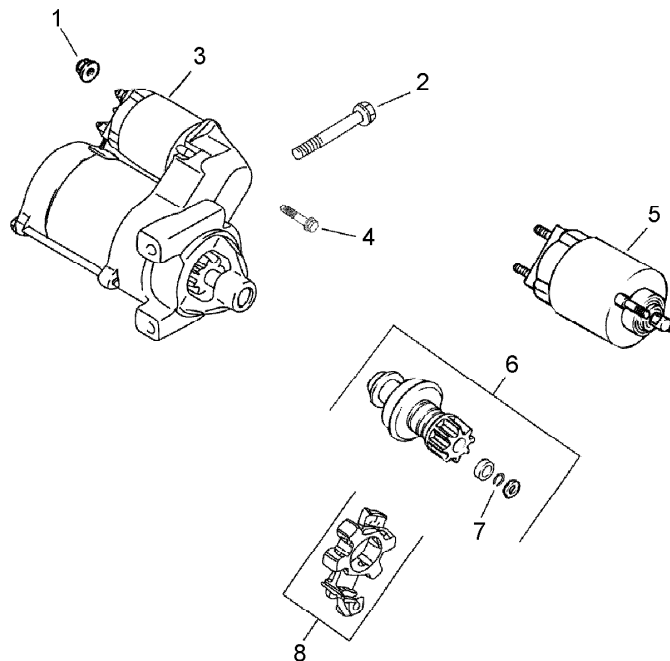

Starting System Assembly Kohler CH730-0132

Ref.	Part Number	Qty.	Description
1	M-841080-S	1	Nut-Flange (M8X1.25) ●
2	M-839080-S	2	Screw-Flg (M8X1.25X80) ●
3	25 098 09-S	1	Starter ASM (Includes 4-7) ●
4	25 086 113-S	3	Screw-Torx Head, External ●
5	25 435 05-S	1	Solenoid Kit (Includes 4) ●
6	25 755 33-S	1	Pinion Drive Kit (Includes 7) ●
7	25 141 05-S	1	Ring-Retaining ●
8	25 221 01-S	1	Brush Holder Kit ●

 ● Obtain parts from www.kohlerplus.com

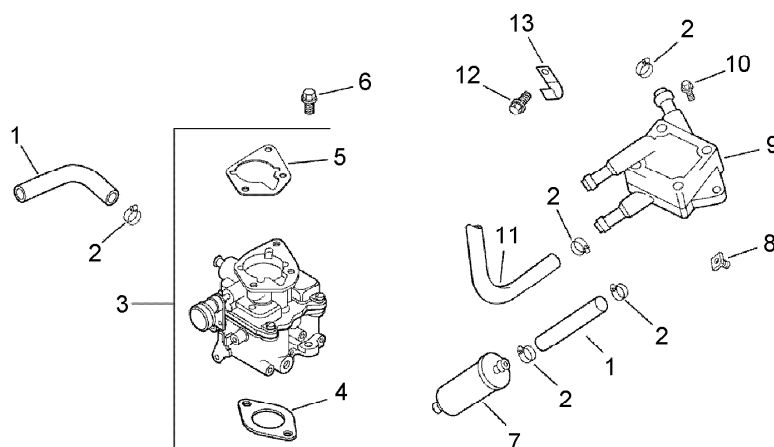


Fuel System Assembly Kohler CH730-0132

Ref.	Part Number	Qty.	Description
1	25 353 32-S	2	Line-Fuel (9.5) ■
2	25 237 14-S	6	Clamp-Hose, Spring (1/2) ■
3	24 853 91-S	1	Carburetor Kit (Includes 4, 5) ■
4	24 041 06-S	1	Gasket-Base, Air Cleaner ■
5	24 041 17-S	1	Gasket-Carburetor ■
6	M-651025-S	2	Screw-HF (M6X1.0X25) ■
7	24 050 10-S	1	Filter-Fuel ■
8	24 100 01-S	2	Nut-Plastic ■
9	24 393 16-S	1	Pump-Fuel ■
10	24 086 12-S	2	Screw-TAP (M6X1.7X18) ■
11	24 353 02-S	1	Line-Fuel, Flexible (15.5) ■
12	M-650012-S	1	Screw-HF (M6X1.0X12) ■
13	47 154 01-S	1	Clip-Cable ■
	24 518 24-S	1	Lead-Ground (Solenoid To Carburetor Mounting Screw) ● ■
	24 757 01-S	1	Solenoid Repair Kit ● ■
	24 757 02-S	1	Float Repair Kit ● ■
	24 757 03-S	1	Carburetor Repair Kit ● ■
	24 757 07-S	1	Choke Repair Kit ● ■
	24 757 08-S	1	Accelerator Pump Repair Kit ● ■
	24 757 09-S	1	Accelerator Pump Seal Repair Kit ● ■
	24 755 130-S	1	High Altitude Kit ● ■

● Not illustrated

 
■ Obtain parts from www.kohlerplus.com

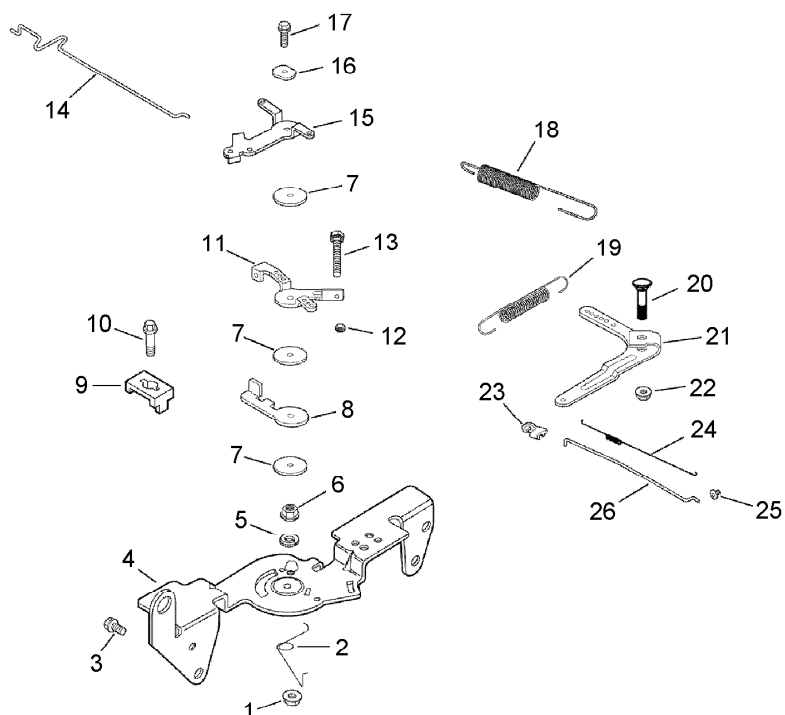

Engine Control Assembly Kohler CH730-0132

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	M-547050-S	1	Nut-Lock (M5X.8) ●	15	24 090 05-S	1	Lever-Choke ●
2	24 089 03-S	1	Spring-Return, Choke ●	16	41 468 03-S	1	Washer-Spring (1/4) ●
3	M-645016-S	4	Screw-Flange, Thread Forming (M6X1.0X16) ●	17	M-545020-S	1	Screw-Flange, Thread Forming (M5X.8X20) ●
4	24 126 56-S	1	Bracket-Control ●	18	24 089 51-S	1	Spring-Limiter, Throttle ●
5	X-20-1-S	1	Washer-Lock (.25) ●	19	24 089 44-S	1	Spring-Governor ●
6	M-541050-S	1	Nut-HF (M5X0.8) ●	20	24 211 03-S	1	Bolt-Sq Neck, Rd HD (M6X1.0X25) ●
7	24 468 01-S	3	Washer-Flat (5.5MM) ●	21	24 090 33-S	1	Lever-Governor ●
8	24 090 07-S	1	Lever-Actuator, Throttle ●	22	M-641060-S	1	Nut-Flange (M6X1.0) ●
9	12 237 01-S	2	Clamp-Cable ●	23	25 158 11-S	1	Bushing-Retaining, Linkage ●
10	M-545016-S	3	Screw-Flange, Thread Forming (M5X0.8X16) ●	24	24 089 01-S	1	Spring-Linkage ●
11	24 090 03-S	1	Lever-Control, Throttle ●	25	25 158 08-S	1	Bushing-Linkage, Throttle ●
12	M-446030-S	1	Nut (M4X0.7) ●	26	24 079 01-S	1	Linkage-Throttle ●
13	M-401030-S	1	Screw (M4X0.7X30) ●				
14	24 079 21-S	1	Linkage-Choke ●				

 
● Obtain parts from www.kohlerplus.com

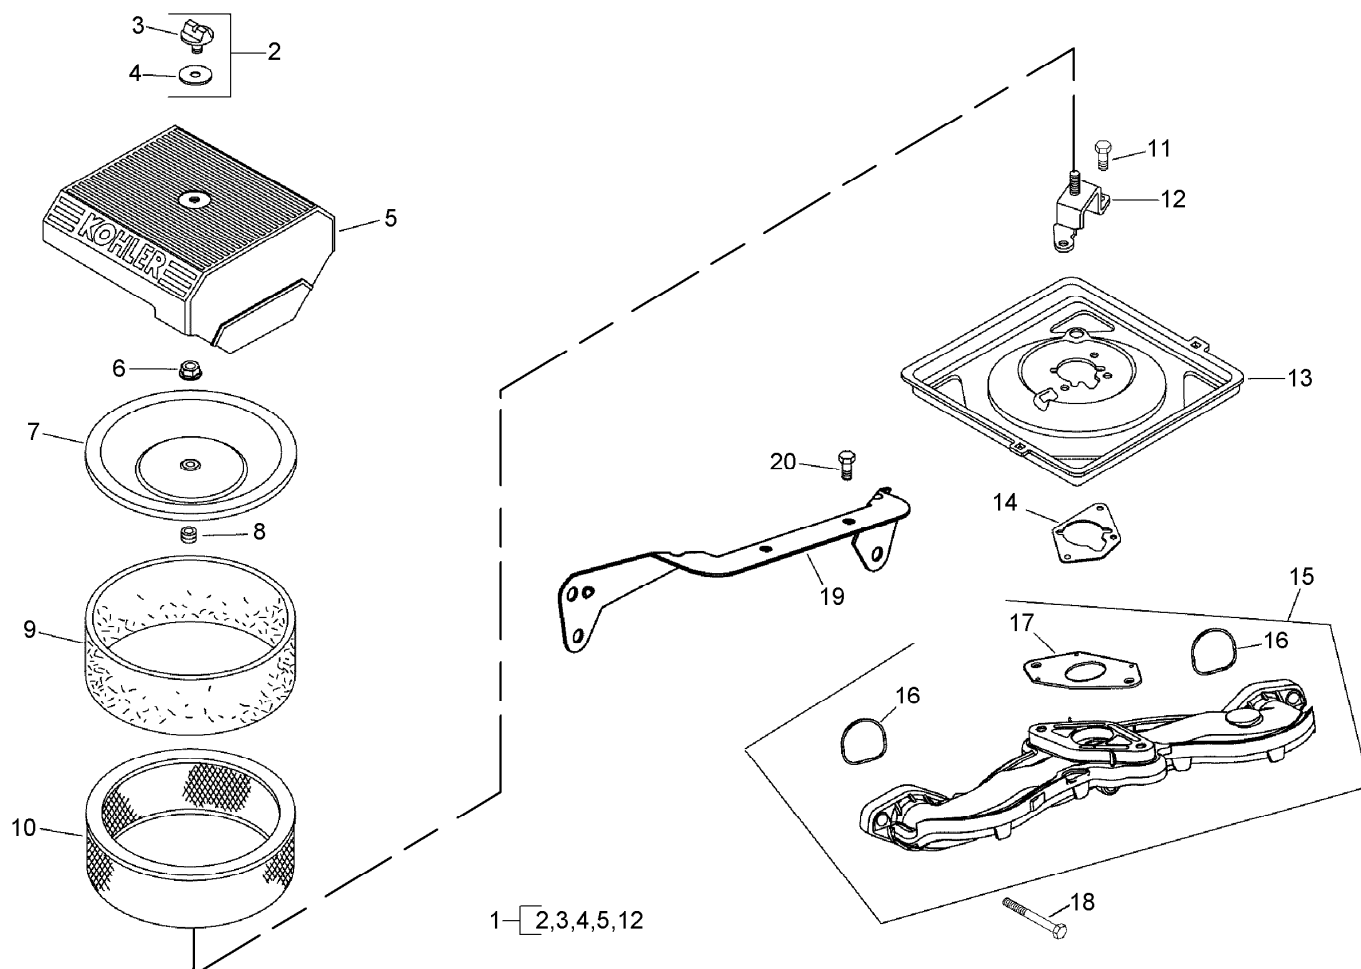

Air Intake and Filtration Assembly Kohler CH730-0132

Ref.	Part Number	Qty.	Description
1	24 743 05-S	1	Air Cleaner Cover Kit (Includes 2-5, 12)
2	54 755 01-S	1	Knob Kit (Includes 3, 4) ●
3	25 341 04-S	1	Knob-Cover ●
4	24 153 20-S	1	O-Ring ●
5	24 096 67-S	1	Cover-Cleaner, Air ●
6	M-641060-S	1	Nut-Flange (M6X1.0) ●
7	24 096 01-S	1	Cover-Air Cleaner, Inner ●
8	230046-S	1	Seal ●
9	24 083 05-S	1	Pre-Cleaner ●
10	24 083 03-S	1	Element-Filter, Air ●
11	24 086 53-S	3	Screw-Flange, Thread Forming (M6X1.0X16) ●
12	24 126 141-S	1	Bracket-Base, Air Cleaner ●
13	24 094 37-S	1	Base-Cleaner, Air ●
14	24 041 06-S	1	Gasket-Base, Air Cleaner ●
15	24 164 54-S	1	Intake Manifold ASM (Includes 16, 17) ●
16	24 153 27-S	2	O-Ring (Intake Port) ●
17	24 051 53-S	1	Gasket-Carburetor ●
18	M-651040-S	4	Screw-Flange (M6X1.0X40) ●
19	24 126 130-S	1	Bracket-Base, Air Cleaner ●
20	M-545010-S	2	Screw-HHFTF (M5X.80X10) ●

 ● Obtain parts from www.kohlerplus.com

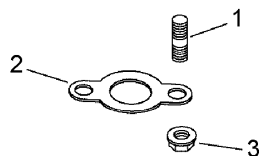

Exhaust Assembly Kohler CH730-0132

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	25 072 04-S	4	Stud (M8X1.25X33) ■
2	24 041 49-S	2	Gasket-Exhaust ■
3	M-841080-S	4	Nut-Flange (M8X1.25) ■
	24 522 323	1	Short Block ● ■
	24 782 32	1	Mini Block (C I Bore) ● ■
	24 755 113-S	1	Gasket Set ● ■

● Not illustrated

■ Obtain parts from www.kohlerplus.com

Attachments and Accessories

For 22307 Dingo TX 425 Wide Track Compact Utility Loader

Product Name	Model/Part
Track Kit.....	104-6107
Brake Kit	106-7581
Straight Track Tensioner Kit	106-7610
Right-Hand Track Tensioner Kit	106-7611
Left-Hand Track Tensioner Kit	106-7612
Road Wheel Kit.....	106-7620
Road Wheel Kit (5-Pack)	106-7627
Wheel-Drive.....	106-7710-03
Reference Guide Kit	107-9310
Replacement Hood Latch Kit	108-4650
Ce Decal Kit.....	22362



Count on it.