



Form No. 3466-963 Rev A

Count on it.

Parts Catalog

Log Splitter

Model No. 23618—Serial No. 414456951 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Engine and Axle Assembly 4

Frame and Jack Assembly 6

Hydraulic Pump Assembly 8

Attachments and Accessories 10


Engine and Axle Assembly

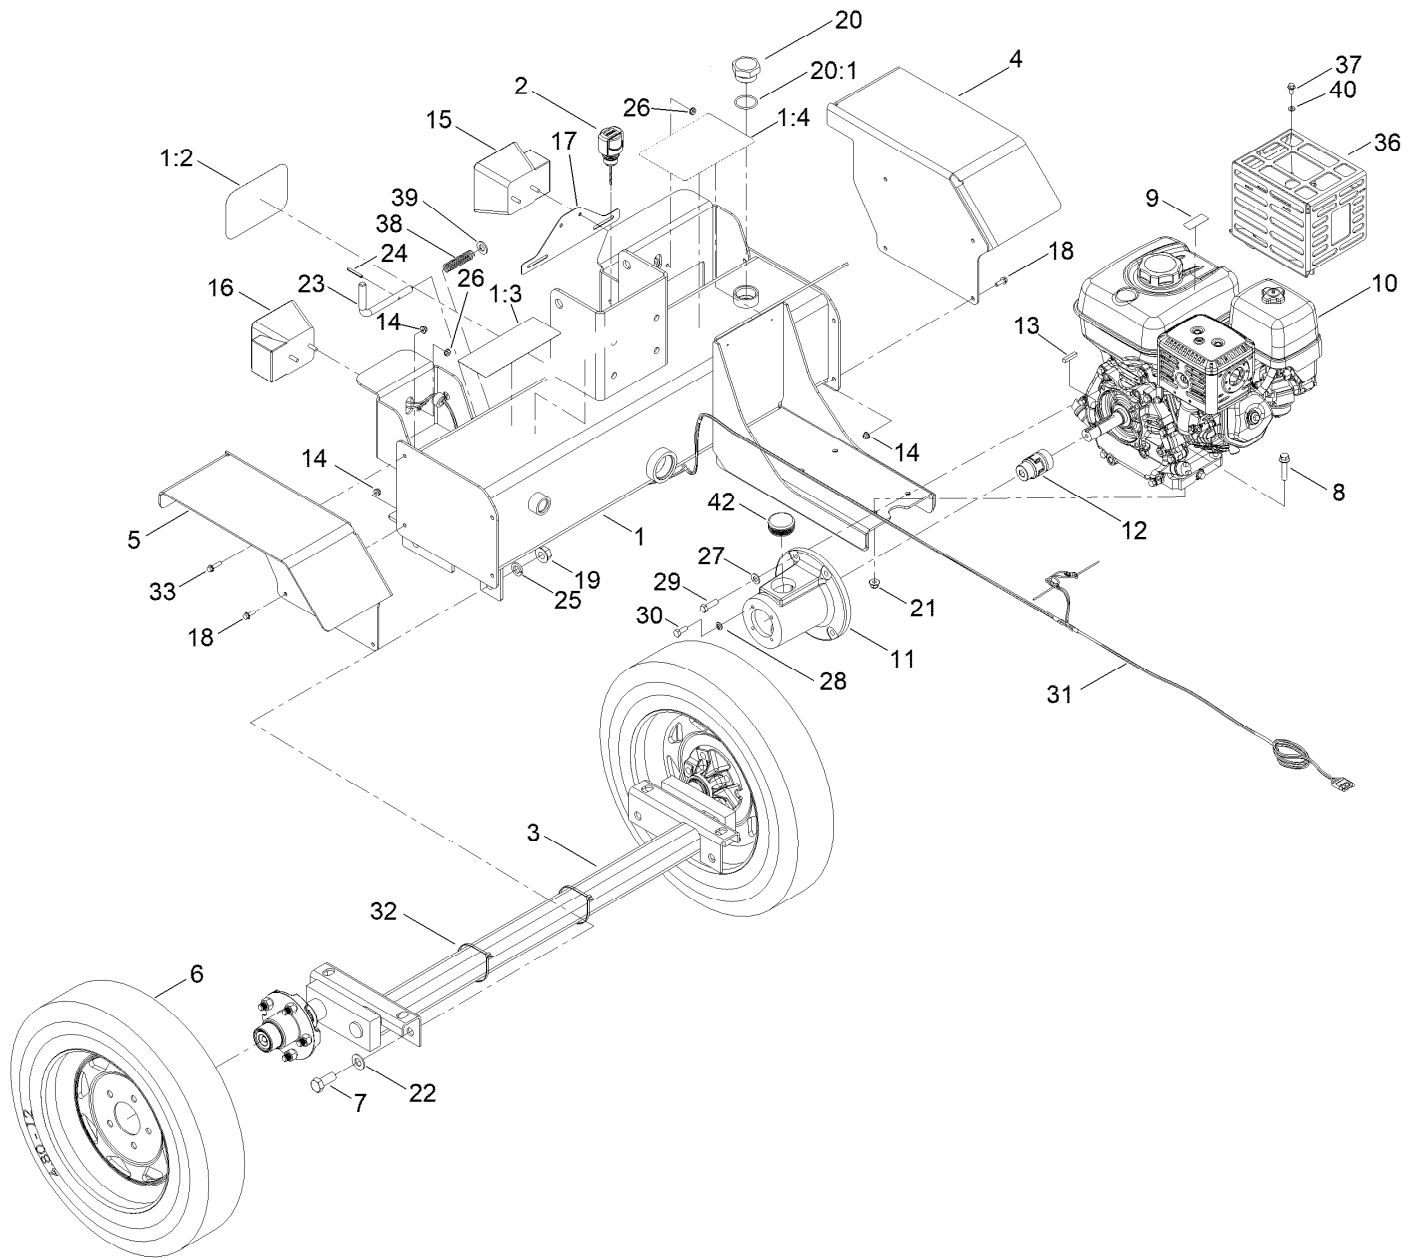

Engine and Axle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-0637	1	HYD Tank ASM	20	108-8468	1	Plug-HH
1:2	62-5550	1	Decal	20:1	237-101	1	O-Ring
1:3	137-0551	1	Decal-Warning	21	104-8301	4	Nut-HF, NI
1:4	145-4999	1	Decal-Service , 23618[hd]]	22	119-1868	4	Washer
2	132-9292	1	Breather	23	137-0601	1	Pin-Latch
3	136-4575	1	Axle ASM	24	32121-34	1	Pin-Roll
4	137-0639-03	1	Fender-LH	25	3253-23	4	Washer-Lock
5	137-0638-03	1	Fender-RH	26	32149-2	4	Nut-Keps
6	120-1206	2	Wheel And Tire ASM	27	3256-24	4	Washer-Plain
7	327-4	4	Screw-HH	28	3253-4	4	Washer-Lock
8	3234-19	4	Screw-HHF	29	323-7	4	Screw-HH
9	130-8322	1	Decal-Warning, Ethanol	30	322-4	4	Screw-HH
10	145-3189	1	Engine-Honda, Gx270	31	136-4571	1	Harness-Wire
11	144-7106-03	1	Mount-Pump [black]	32	3290-379	2	Tie-Cable
12	137-0566	1	Coupler-Flex	33	120-4654	2	Screw-HHF
13	13-2840	1	Key-Square	36	137-0595-03	1	Guard-Muffler
14	104-7201	8	Nut-HF, NI	37	33103-016	2	Screw-HHF
15	120-3735	1	Light-Tail, LH	38	95-4256	1	Spring-Compression
16	120-3734	1	Light-Tail, RH	39	106-9888	1	Washer-Flat
17	125-8659-03	1	Holder-Plate, License	40	3256-14	2	Washer-Flat
18	115-5103	6	Screw-HHF	42	137-6827	1	Plug-Plastic
19	32128-50	4	Nut-Flange				


Frame and Jack Assembly

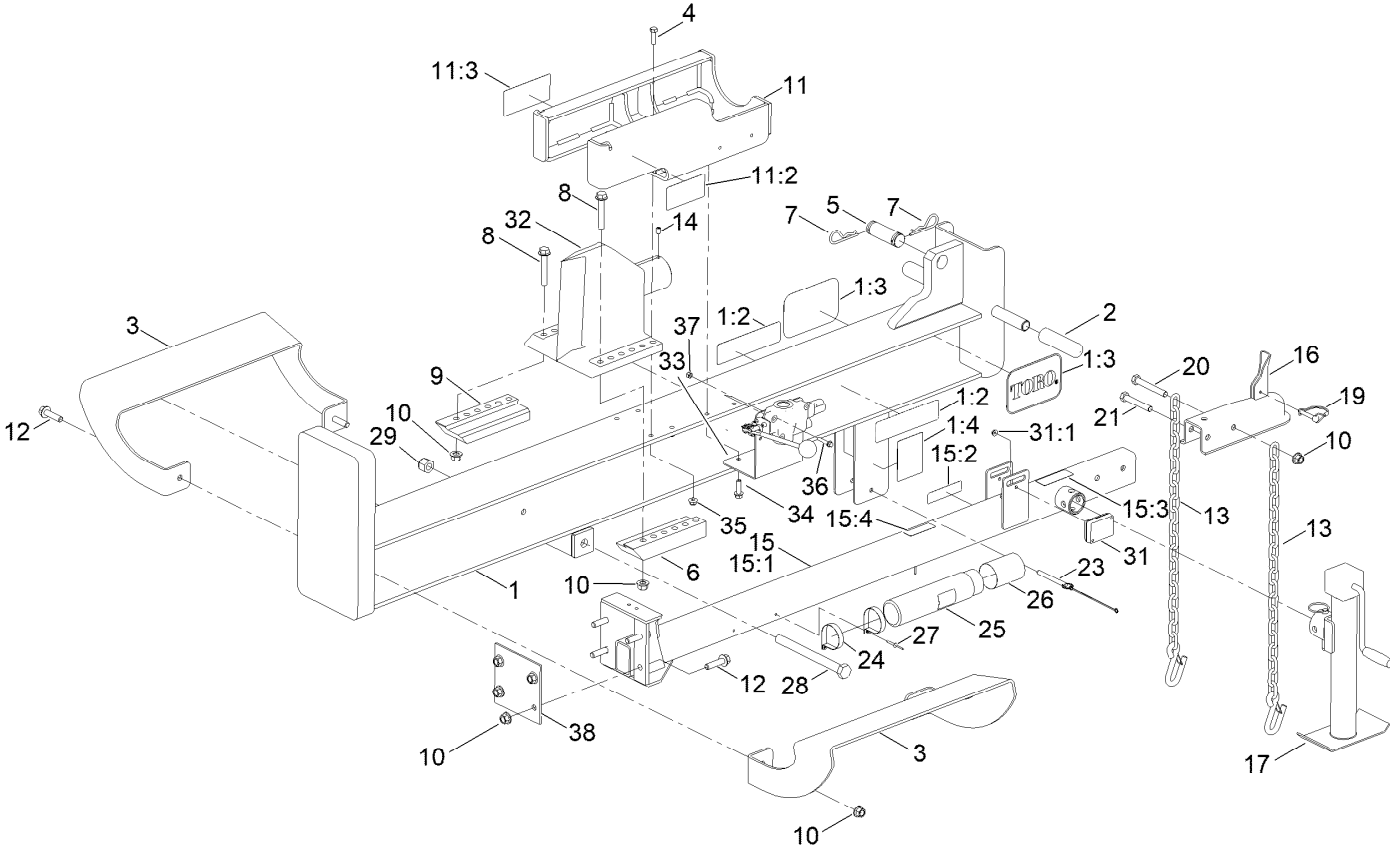

Frame and Jack Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-0634	1	Beam ASM	15:3	137-0554	1	Decal-Caution
1:2	137-0552	2	Decal	15:4	120-0625	1	Decal-Warning
1:3	62-5550	2	Decal	16	145-3188	1	Receiver-Ball Hitch
1:4	137-0588	1	Decal-Warning, Pin	17	145-3186	1	Jack
2	120-1333	2	Grip-Handle	19	105-9245	1	Pin-Lock
3	136-4668-03	2	Plate-Catch	20	325-15	1	Screw-HH
4	323-7	4	Screw-HH	21	325-13	1	Screw-HH
5	120-1420	1	Pin-Pivot	23	136-4588	1	Pin
6	145-0635-03	1	Bar-Slide, LH	24	2412-120	2	Clamp-R
7	3290-256	2	Pin-Hair	25	104-7050	1	Tube-Manual
8	3234-40	12	Screw-HF	26	104-7048	1	Cap-Housing
9	145-0634-03	1	Bar-Slide, RH	27	107-0386	3	Rivet-Blind
10	99-5107	20	Nut-Lock	28	120-1796	1	Bolt-HH
11	161-7259	1	Dislodge Bracket W/Decals	29	3296-51	1	Nut-Lock, NI
11:2	137-0555	1	Decal-Warning, Pinch Point	31	127-7562	2	Lamp-Marker, Front Side
11:3	137-0564	1	Decal-Caution, Dangerous Area	31:1	32149-2	1	Nut-Keps
12	133-0041	6	Screw-HF	32	136-4674-03	1	Wedge [black]
13	119-3045	2	Chain-Safety, Trailer	33	147-9009-03	1	Bracket-Valve
14	3247-4	1	Screw-Set	34	119-4061	2	Screw-HHF
15	147-3205	1	Decal ASM-Tube	35	104-8301	4	Nut-HF, NI
15:1	145-4996-01	1	Tongue ASM [red]	36	94-5781	3	Screw-HHF
15:2	133-8062	1	Decal-Arrestor, Spark	37	3296-42	3	Nut-Lock, NI
				38	144-2034-01	1	Plate - Backing

Hydraulic Pump Assembly

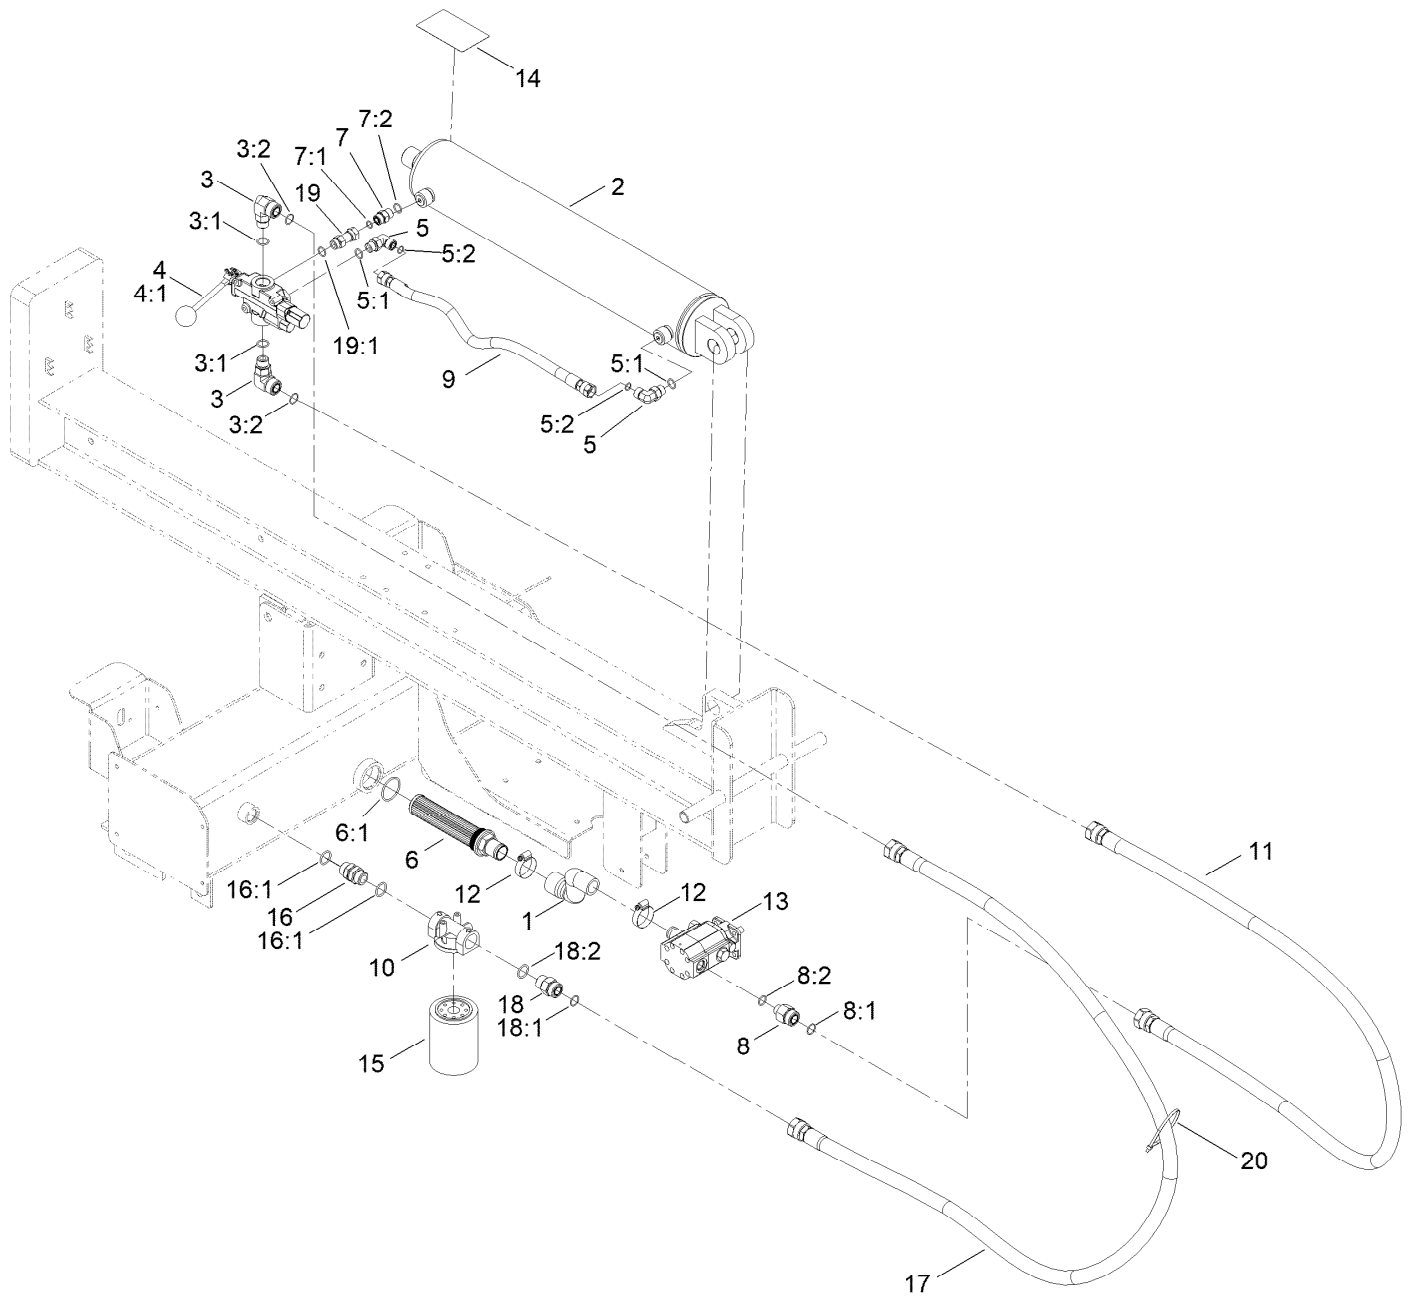

Hydraulic Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-4675	1	Hose-Molded	8:2	237-79	1	O-Ring
2	145-0623	1	Cylinder-Hydraulic	9	144-7460	1	Hose ASM-HYD
2:1	147-3204	1	Kit-Seal ●	10	92-5821	1	Head-Filter
3	340-16	2	Fitting-HYD, 90 DEG	11	144-7461	1	Hose ASM-HYD
3:1	237-80	1	O-Ring	12	2412-111	2	Clamp-Hose, W/Liner
3:2	237-58	1	O-Ring	13	136-4569	1	Pump-HYD
4	136-4583	1	Valve-Control	14	137-0587	1	Decal- Caution, Control
4:1	144-2041	1	Kit-Handle, Valve	15	54-0110	1	Filter-Oil, Transmission
5	340-98	2	Fitting-Elbow, 90 DEG	16	98-9906	1	Fitting-Thread, Straight
5:1	237-79	1	O-Ring	16:1	237-81	2	O-Ring
5:2	237-30	1	O-Ring	17	144-7462	1	Hose ASM-HYD
6	145-2463	1	Strainer-Tank, Hydraulic	18	340-9	1	Fitting-STR
6:1	340-136	1	O-Ring	18:1	237-58	1	O-Ring
7	340-4	1	Fitting-Straight	18:2	237-81	1	O-Ring
7:1	237-30	1	O-Ring	19	100-7671	1	Adapter-HYD
7:2	237-79	1	O-Ring	19:1	237-79	1	O-Ring
8	98-9921	1	Fitting-Straight	20	3290-379	3	Tie-Cable
8:1	237-145	1	O-Ring				

● Not illustrated

Attachments and Accessories

For 23618 Log Splitter

Product Name	Model/Part
Spark Arrester Kit	137-0592
Pump Service Kit	137-4850
Cylinder Service Kit	137-4852

Notes:



Count on it.