 


3 UNIT (5 BLADE) MODEL NO.
03385 — 20001 THRU 40001 & UP
3 UNIT (7 BLADE) MODEL NO.
03387 — 20001 THRU 40001 & UP

PARTS CATALOG


SUPER PRO®

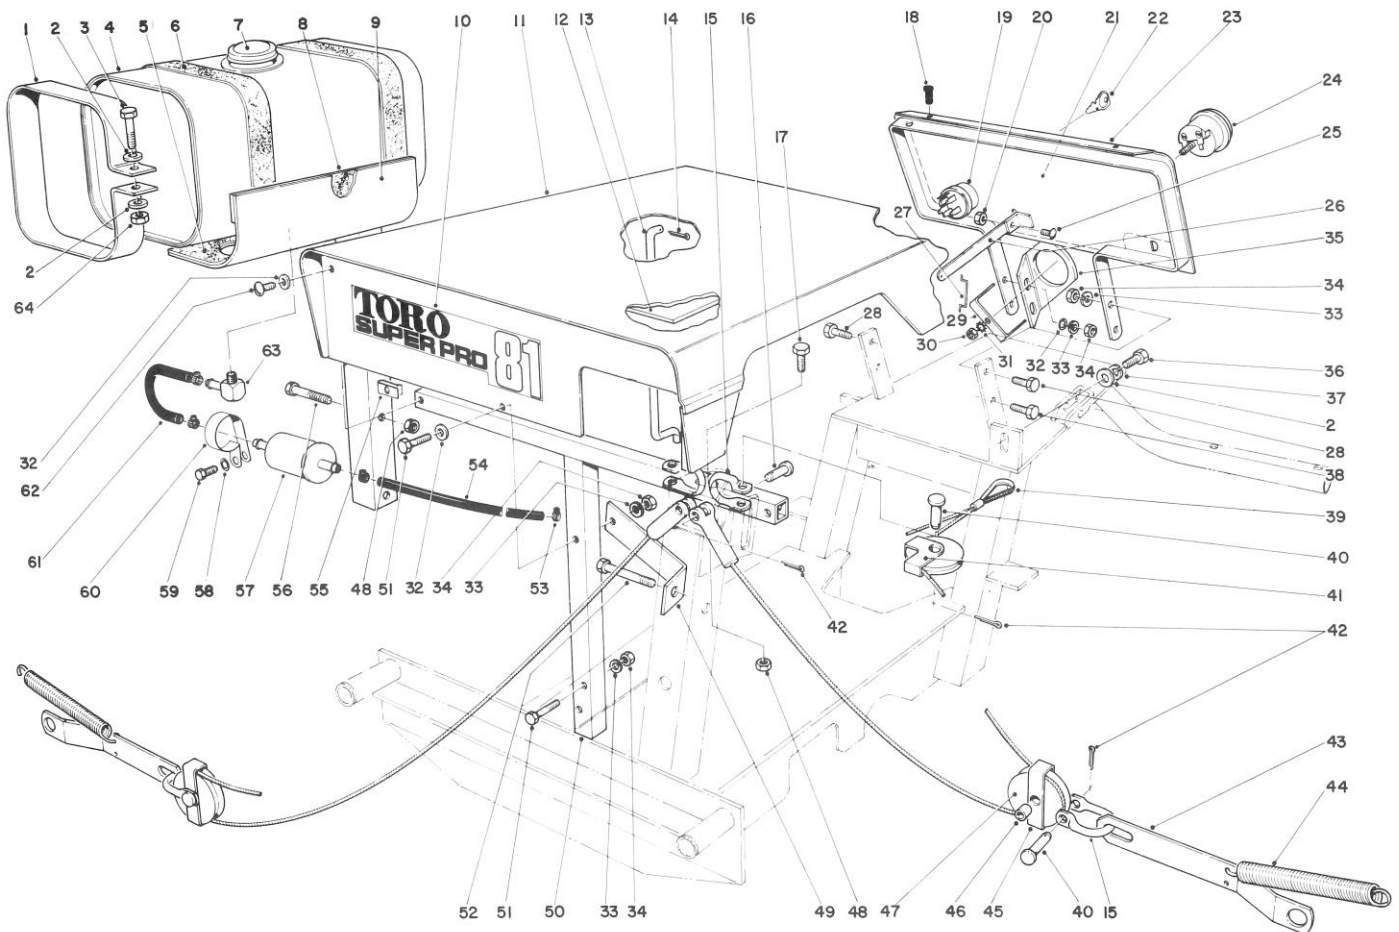

GAS TANK, HOOD AND INSTRUMENT PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-6991	Strap — Tank	2
2	3256-24	Washer	5
3	323-10	Capscrew	2
4	3-9022	Tank — Fuel	1
5	3-9161	Felt Base	1
6	3-6987	Felt Strap	2
7	222-8	Fuel Cap	1
8	3-9158	Felt Side	1
9	40-7840	Saddle — Fuel Tank	1
10	38-7520	Decal — Toro Super Pro	1
11	5-3902	Hood	1
12	40-9740	Foam — Sound Reduction	1
13	3-9037	Rod	1
14	3272-5	Cotter Pin	2
15	5-2942	Shackle	4


Ref. No.	Part No.	Description	No. Used
16	283-6	Clevis Pin	2
17	322-3	Capscrew	1
18	237-37	Rubber Bumper	2
19	27-2360	Switch	1
20	3296-2	Locknut	1
21	40-7470	Decal — Operation	1
22	218-412	Key (Set of 2)	1
23	40-7390	Instrument Panel	1
24	12-9990	Hour Meter	1
25	32122-30	Screw	1
26	5-3954	Choke Lever	1
27	5-4543	Wire — Choke	1
28	321-6	Capscrew	3
29	218-515	Mounting Bracket	1
30	3217-26	Nut	1

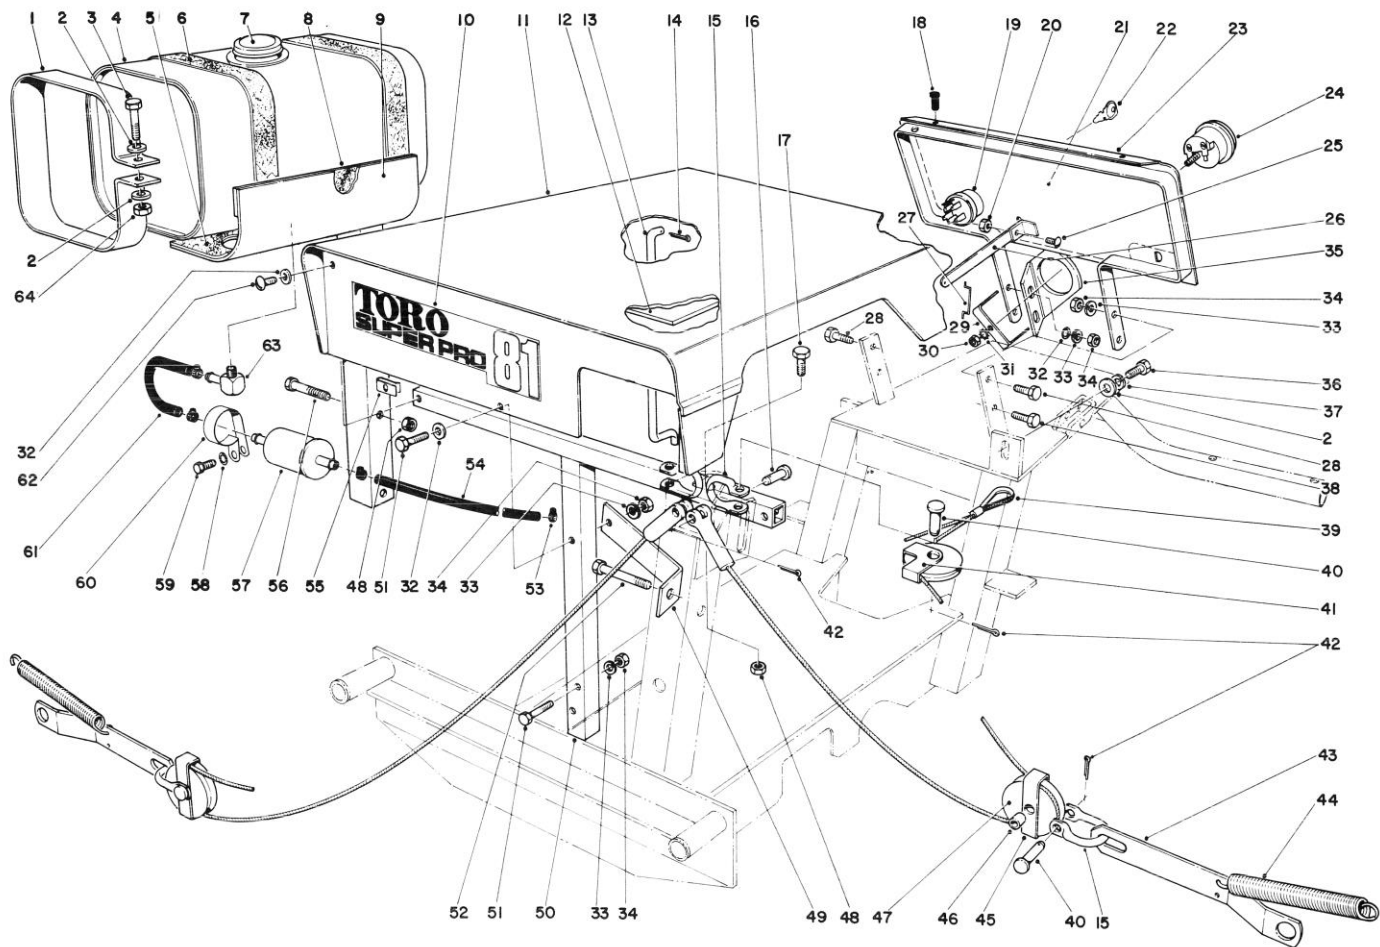 

GAS TANK, HOOD AND INSTRUMENT PANEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	3254-1	Lockwasher	1
32	3256-22	Washer	5
33	3253-3	Lockwasher	7
34	3217-5	Nut	7
35	43-7890	Bracket Hour Meter	1
36	323-6	Capscrew	1
37	3253-21	Lockwasher	1
38	321-4	Capscrew	1
39	5-2938	Cable Assembly	1
40	283-15	Clevis Pin	4
41	5-2656	Cable Keeper	2
42	3272-10	Cotter Pin	6
43	3-9031	Link	2
44	5-1706	Spring	2
45	5-2655	Cable Keeper	2
46	256-2	Bushing	4
47	5-2653	Pulley (Incl. Ref. #46)	4


Ref. No.	Part No.	Description	No. Used
48	32146-5	Locknut	3
49	5-2724	Bracket	1
50	5-3906	Shroud Support	1
51	321-9	Capscrew	3
52	3211-15	Capscrew	1
53	2412-36	Clamp Worm Gear	4
54	44-0270	Hose — Filter to Engine	1
55	3290-192	Nut — Tinnerman	2
56	322-10	Capscrew	2
57	18-1520	Gasoline Filter Assembly	1
58	3256-2	Washer	1
59	32144-10	Screw Thread Forming	1
60	2412-44	Clamp — R	1
61	44-0260	Hose Tank to Filter	1
62	32122-20	Screw	2
63	353-561	Fitting 90° Elbow	1
64	3296-39	Locknut	2

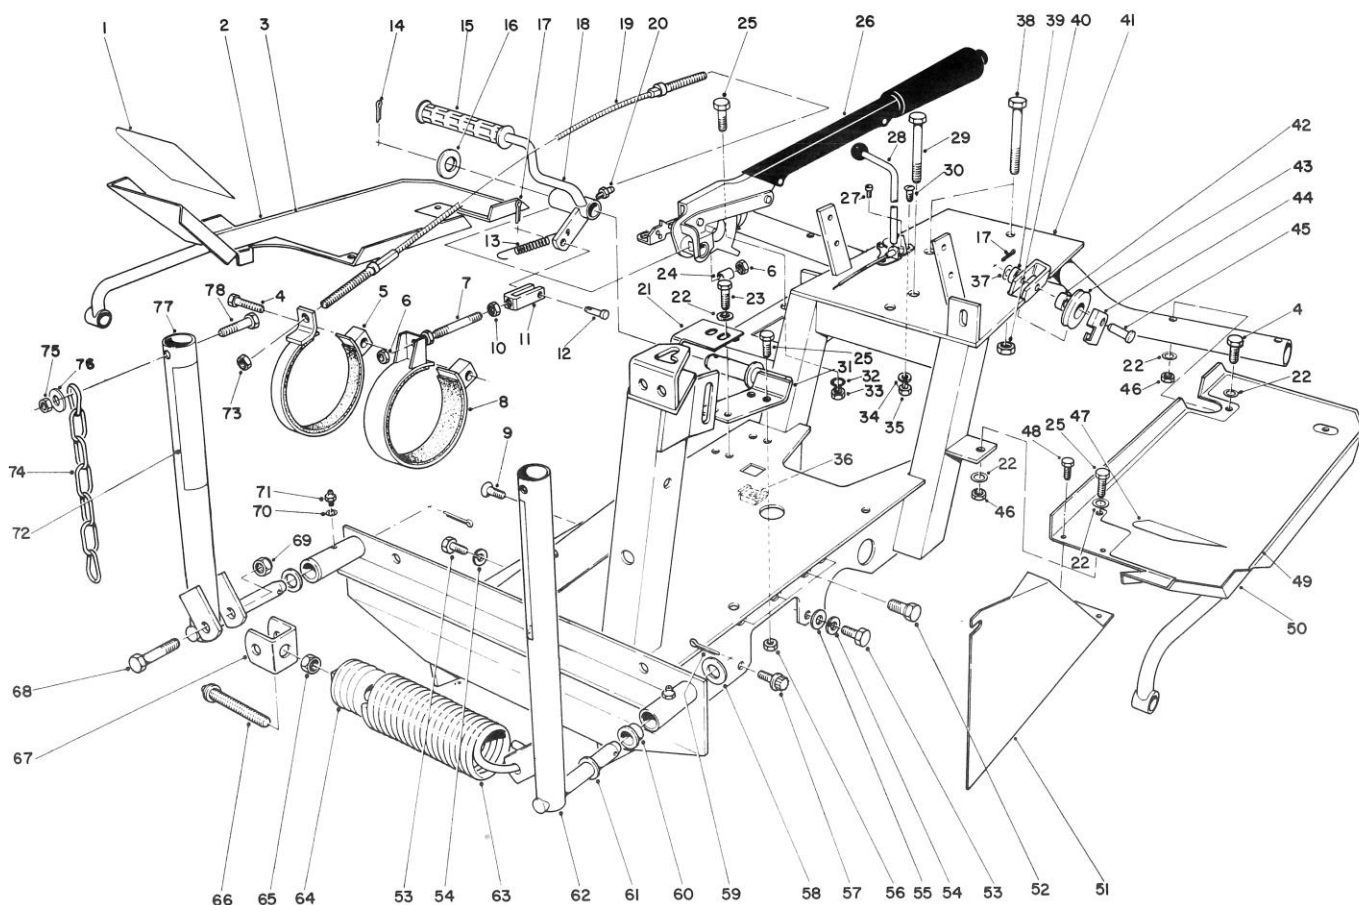 

MAIN FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	40-7250	Pad — Footrest	1
2	40-7210	Footrest R.H.	1
3	40-7240	Pad — Footrest R.H.	1
4	322-9	Capscrew	5
5	44-0360	Band — Parking Brake	1
6	3296-4	Locknut	2
7	40-7590	Rod — Service Brake	1
8	40-7680	Band — Service Brake	1
9	3273-30	Flat Head Capscrew	1
10	3220-2	Jam Nut	2
11	282-2	Clevis	1
12	283-1	Clevis Pin	1
13	40-7860	Spring	1
14	3272-14	Cotter Pin	1
15	28-2470	Pad — Foot	1
16	3256-44	Washer	1
17	3272-6	Cotter Pin	2
18	40-7630	Lever — Service Brake	1
19	44-0280	Cable Parking Brake	1
20	302-11	Grease Fitting	1
21	40-7090	Stop — Service Brake	1
22	3256-23	Washer	14
23	322-5	Capscrew	2


Ref. No.	Part No.	Description	No. Used
24	29-4750	Spacer	1
25	322-3	Capscrew	8
26	37-2740	Lever — Parking Brake	1
27	3274-33	Socket Head Capscrew	1
28	5-3323	Throttle Control	1
29	323-21	Capscrew	1
30	3251-3	Machine Screw	2
31	40-7570	Pivot Pin	1
32	3253-4	Lockwasher	2
33	3217-6	Nut	2
34	3253-17	Lockwasher	2
35	3217-26	Nut	2
36	3290-265	Nut — Retainer	1
37	3290-212	Spring Washer	1
38	323-23	Capscrew	2
39	5-1531	Bushing	1
40	3296-39	Locknut	3
41	44-0310	Main Frame (Incl. Ref. #60)	1
42	256-159	Bushing	1
43	3-8775	Pulley (Incl. Ref. #42)	1
44	3-8778	Cable Keeper	1
45	283-10	Clevis Pin	1
46	32146-5	Locknut	6

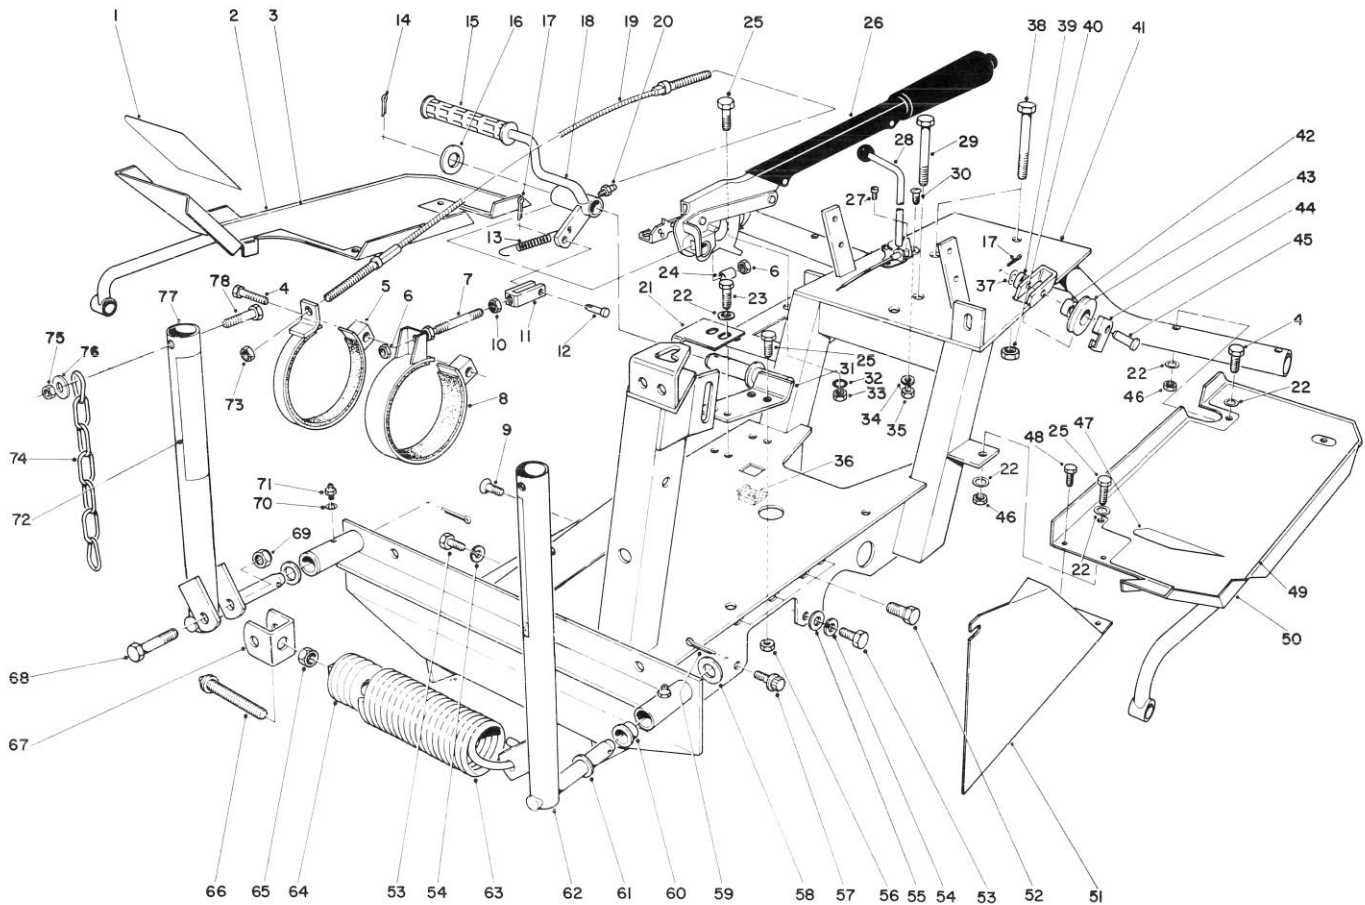 

MAIN FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	40-7300	Pad – Footrest	1
48	321-2	Capscrew	2
49	40-7290	Pad – Footrest L.H.	1
50	40-7260	Footrest L.H.	1
51	40-7330	Pulley Guard	1
52	217-34	Lug Bolt	8
53	3212-2	Capscrew	2
54	3253-6	Lockwasher	2
55	3256-25	Washer	1
56	3296-29	Locknut	4
57	3273-32	Capscrew	1
58	3-9274	Spacer	2
59	3272-11	Cotter Pin	2
60	256-90	Bushing	4
61	5-1183	Washer	2
62	3-8826	Arm – Counterbalance	1


Ref. No.	Part No.	Description	No. Used
63	3-8844	Spring	1
64	3-8845	Connector – Spring	1
65	3218-5	Jam Nut	1
66	5-4002	Bolt Spring Anchor	1
67	5-2568	Anchor – Spring	1
68	325-13	Capscrew	1
69	3296-25	Locknut	1
70	3254-8	Washer	2
71	302-5	Grease Fitting	2
72	40-7490	Decal – Warning	2
73	3296-5	Locknut	1
74	5-4693	Chain	2
75	3296-39	Locknut	2
76	3256-24	Washer	2
77	5-2567	Arm – Counterbalance	1
78	323-11	Capscrew	2

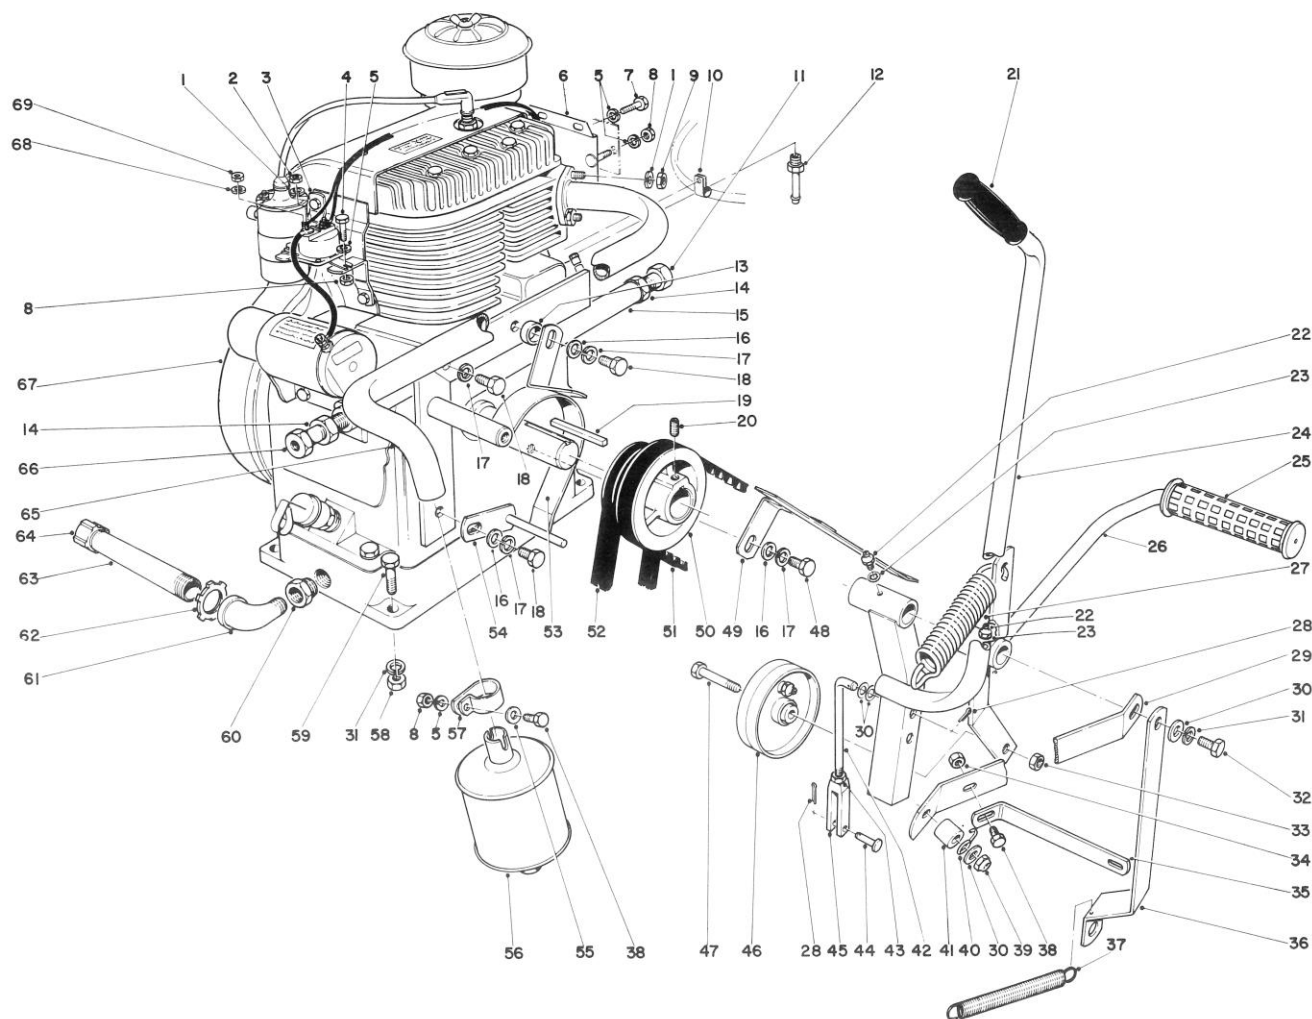 

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3253-4	Lockwasher	4
2	3218-13	Jam Nut	2
3	8-8150	Bracket, Solenoid	2
4	321-4	Capscrew	2
5	3253-3	Lockwasher	7
6	38-8680	Rectifier Plate	1
7	321-2	Capscrew	2
8	3217-5	Nut	5
9	3217-6	Nut	2
10	2412-31	Clamp, Control	1
11	3-8947	Bolt, Compression	1
12	353-711	Connector Straight	1
13	5-4541	Spacer	1
14	3220-7	Jam Nut	2
15	3-8928	Pivot Assembly	1
16	3256-25	Washer	3
17	3253-6	Lockwasher	4
18	324-6	Capscrew	3
19	5-0786	Square Key	1
20	3246-4	Set Screw	2
21	235-11	Handle Grip	1
22	302-5	Grease Fitting	2
23	3254-8	Lockwasher	2

Ref. No.	Part No.	Description	No. Used
24	5-1671	Control Lever	1
25	28-2470	Foot Pad	1
26	40-7310	Clutch Pedal	1
27	3-9351	Spring	1
28	3272-6	Cotter Pin	2
29	3-8997	Brace Horizontal	1
30	3256-24	Washer	4
31	3253-21	Lockwasher	5
32	323-7	Capscrew	1
33	3218-3	Jam Nut	1
34	3296-42	Locknut	1
35	40-8090	Bracket Muffler	1
36	5-1853	Vertical Brace	1
37	5-2933	Spring	1
38	321-6	Capscrew	2
39	3296-6	Locknut	1
40	5-0701	Anchor	1
41	3-9026	Spacer	1
42	3-8945	Rod Adjusting	1
43	3220-3	Jam Nut	1
44	283-2	Clevis Pin	1
45	282-1	Yoke	1
46	5-3840	Pulley Idler	1

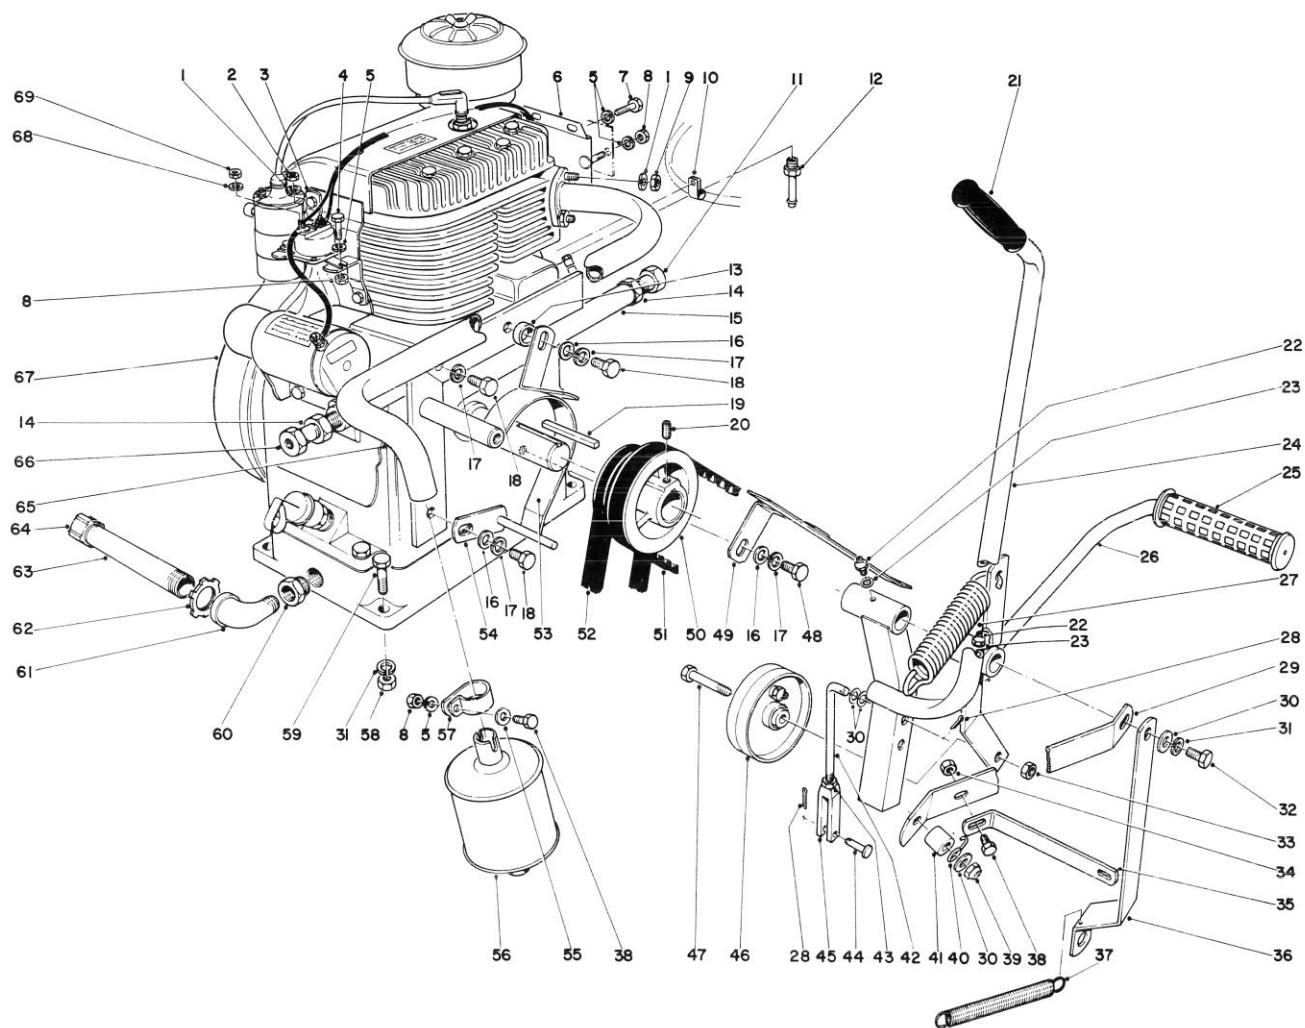 


ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	323-9	Capscrew	1
48	324-4	Capscrew	1
49	5-2390	Belt Guide	1
50	5-1626	Engine Pulley	1
51	5-1628	Traction Belt	1
52	3-9066	Belt, Reel (Matched Set)	1
53	3-9001	Retainer Assembly	1
54	5-3270	Keeper, Belt	1
55	3256-2	Washer	1
56	40-8100	Muffler	1
*	42-3930	Spark Arrestor Muffler (Optional)	1
57	3-9263	Clamp, Muffler Bracket	1

Ref. No.	Part No.	Description	No. Used
58	3217-7	Nut	3
59	323-8	Capscrew	4
60	2812-4	Bushing, Reducing Pipe	1
61	2811-9	Street Elbow	1
62	3290-153	Nut, Conduit	1
63	289-25	Pipe Nipple	1
64	288-3	Pipe Cap	1
65	40-8070	Exhaust Pipe	1
66	3-8946	Bolt, Compression	1
67	221-709	Engine (Kohler Model K321S Type No. 60387)	1
68	3253-17	Lockwasher	1
69	3219-14	Nut	1

 * Not Illustrated

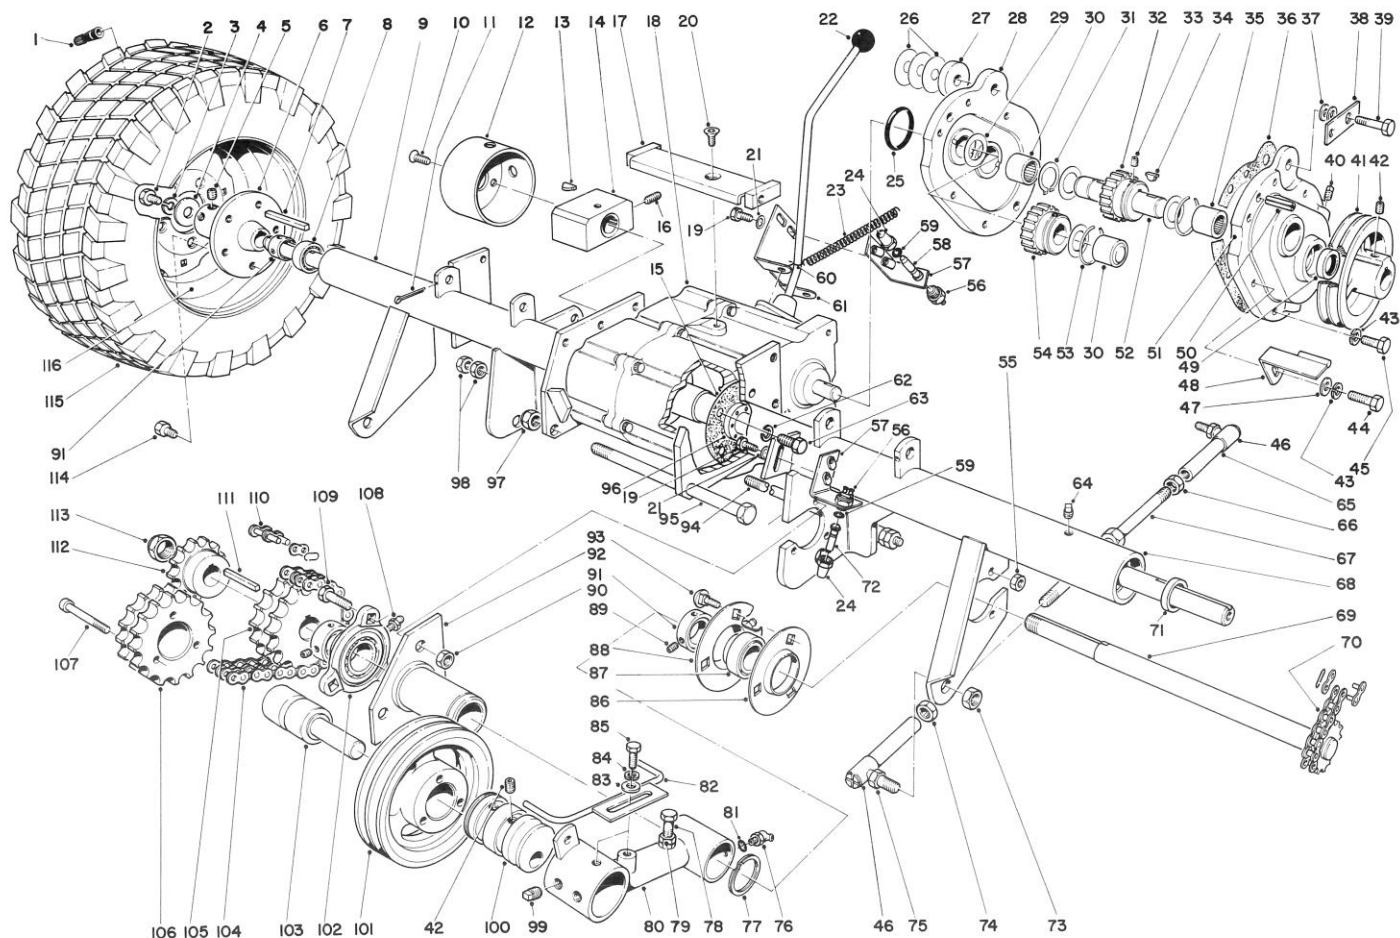


TRANSAXLE AND FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	232-31	Valve Stem	1
2	324-4	Capscrew	2
3	3253-22	Lockwasher	2
4	5-3177	Washer	2
5	3248-4	Setscrew	8
6	5-2570	Hub Wheel	2
7	5-0786	Key Square	2
8	251-206	Bearing w/Collar	2
9	38-7080	Axle Housing R.H.	1
10	32108-20	Flat Hd. Machine Screw	4
11	3272-15	Cotter Pin	2
12	40-7520	Drum Brake	1
13	3257-23	Key — Hi Pro	1
14	40-7530	Hub — Brake Drum	1
15	38-6990	Gasket — Axle Housing	2
16	3247-2	Set Screw	2
17	5-3956	Plate	1
18	38-7110	Transaxle	1
19	321-2	Capscrew	4
20	3274-34	Capscrew — Flat Head Socket	1
21	3256-22	Washer	4
22	233-13	Knob	1
23	3-2461	Spring Return	1

Ref. No.	Part No.	Description	No. Used
24	353-704	Tube Nut	2
25	237-61	O-Ring	1
26	5-3271	Shim .002	A/R
*	5-3272	Shim .005	A/R
*	5-3273	Shim .010	A/R
27	5-3275	Spacer	1
28	5-3278	Base Gear Case	1
29	3-6498	Washer	4
30	252-65	Bearing — Needle	2
31	32151-21	Ring — Snap	1
32	3-9358	Gear — Spur	1
33	3245-32	Set Screw	4
34	3257-30	Key Hi-Pro	3
35	252-6	Bearing — Needle	1
36	3-9362	Gasket — Gear Case	1
37	3256-24	Washer	2
38	5-3914	Tab — Locking	1
39	323-32	Capscrew	1
40	281-1	Pipe Plug	2
41	5-1665	Pulley Input	1
42	3246-3	Set Screw	6
43	3253-3	Lockwasher	6
44	321-8	Capscrew	1

 
* Not Illustrated

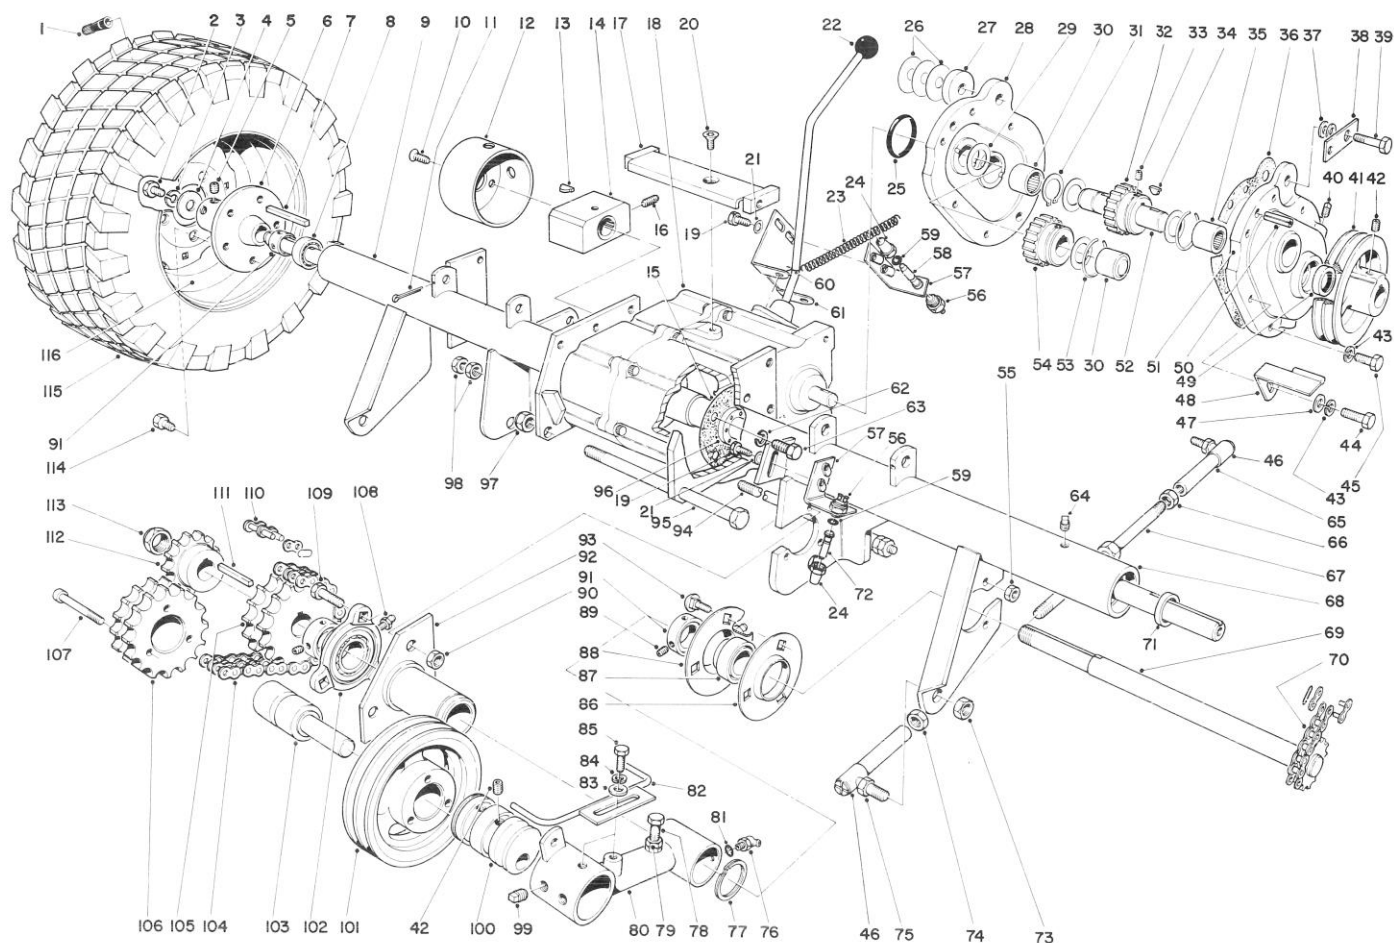

TRANSAXLE AND FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	321-6	Capscrew	5
46	237-82	Grommet	4
47	3256-2	Washer	1
48	5-3268	Keeper Belt	1
49	253-44	Oil Seal	1
50	32121-41	Roll Pin	2
51	5-3277	Case Gear	1
52	3-9357	Shaft — Output	1
53	3-9356	Ring	2
54	3-9355	Spur Gear	1
55	32146-5	Locknut	3
56	38-0430	Switch — Neutral	2
57	40-7420	Bracket — Switch	2
58	40-7450	Pin Switch	1
59	237-7	O-Ring	2
60	2412-33	Spring Clip	1
61	40-7460	Bracket Switch	1
62	3253-5	Lockwasher	8
63	323-33	Capscrew	8
64	281-3	Pipe Plug	1
65	3-8863	Ball Joint (Incl. Ref. #46)	2
66	3220-7	Jam Nut	2
67	5-3927	Rod — Push	2

Ref. No.	Part No.	Description	No. Used
68	40-7030	Axle Housing L.H.	1
69	5-2643	Countershaft	1
70	3-8952	Chain	1
71	253-142	Oil Seal	2
72	38-3260	Pin Switch	1
73	3296-50	Locknut	4
74	3220-17	Jam Nut	2
75	5-3928	Ball Joint (Incl. Ref. #46)	2
76	302-11	Grease Fitting	1
77	32120-30	Snap Ring	1
78	323-10	Capscrew	1
79	3218-3	Jam Nut	1
80	5-2638	Pivot — Countershaft	1
81	3254-8	Washer	1
82	3-9011	Retainer	1
83	3256-23	Washer	2
84	3253-4	Lockwasher	2
85	322-1	Capscrew	2
86	251-221	Flange — Bearing	1
87	251-219	Bearing w/Collar	1
88	251-220	Flange Bearing	1
89	3245-31	Set Screw	4
90	3296-39	Locknut	3

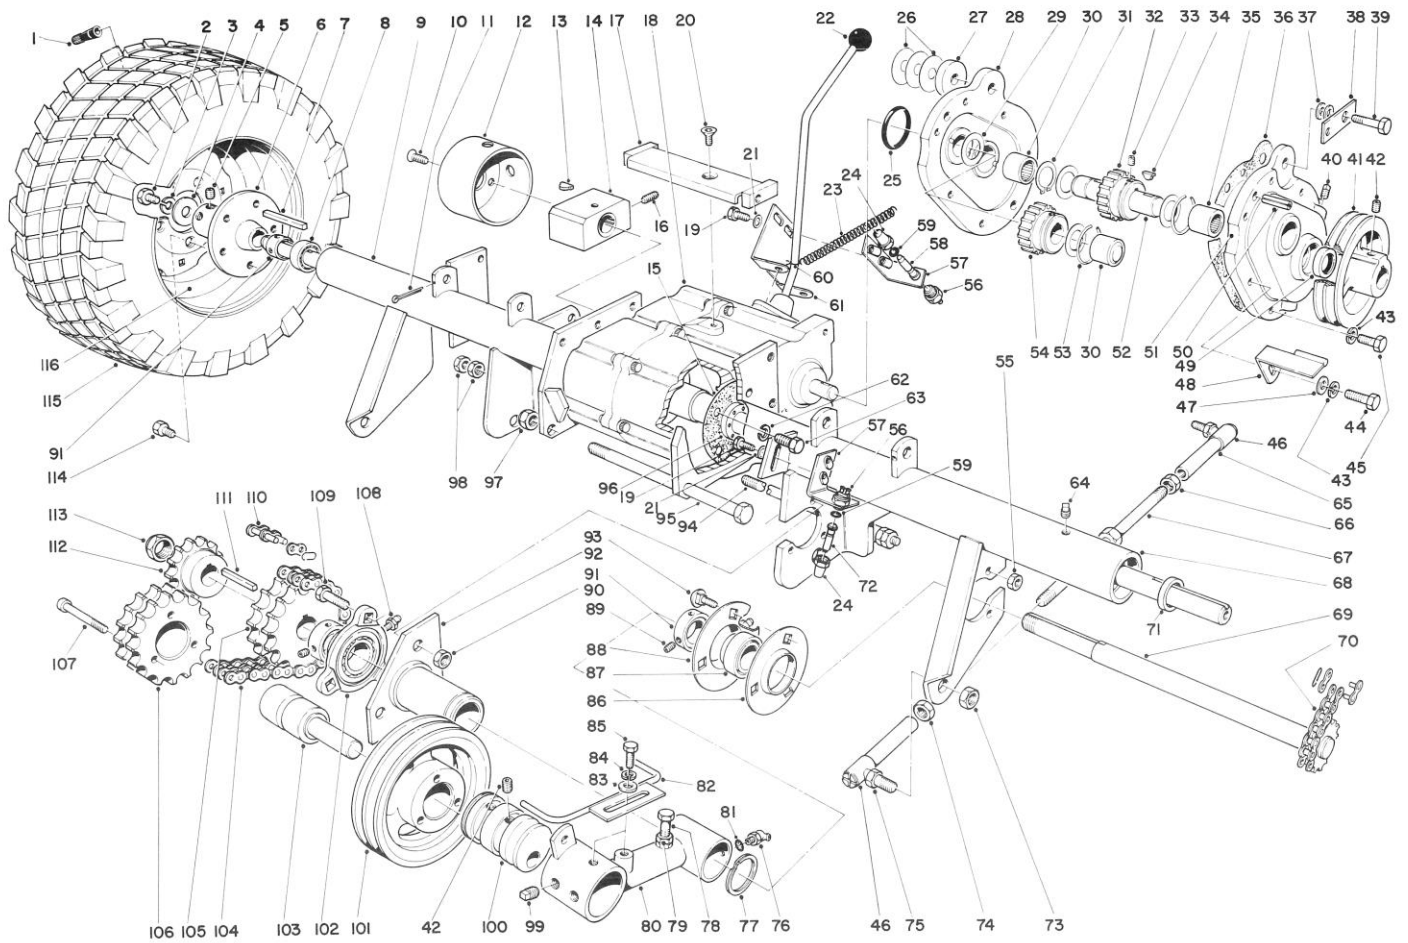 

TRANSAXLE AND FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
91	251-77	Collar	4
92	5-2635	Pivot Countershaft	1
93	3230-1	Carriage Bolt	3
94	3-9024	Bolt — Tension	1
95	327-20	Capscrew	1
96	38-7840	Thrust Washer	2
97	3296-24	Locknut	1
98	3220-5	Jam Nut	4
99	3242-2	Set Screw	2
100	3-8943	Eccentric Sleeve	1
101	5-2651	Pulley	1
102	5-3281	Bearing (Incl. Ref. #108)	1
103	3-6998	Bearing Spindle	1

Ref. No.	Part No.	Description	No. Used
104	5-2648	Chain	1
105	5-2646	Sprocket	1
106	5-2652	Sprocket — Input	1
107	3274-19	Capscrew — Socket Head	3
108	302-5	Grease Fitting	1
109	323-8	Capscrew	3
110	2710-32	Link — Connecting	1
111	5-1336	Key	1
112	5-2647	Sprocket	1
113	3296-36	Locknut	1
114	217-74	Bolt — Lug	10
115	231-101	Tire — Tubeless	2
116	242-44	Wheel	2


This diagram is an exploded view of a mechanical assembly, likely a pump or motor component. It shows the following parts and their assembly sequence:

- Top Section:** A housing (1) with a central shaft (7) and a pulley (5). A cap screw (3) secures the pulley. A pin (4) and a nut (2) are used to secure the shaft. A seal (6) is shown at the base of the shaft.
- Intermediate Section:** A bracket (30) is shown with a pin (31) and a nut (63). A cap screw (49) is shown for the housing (48).
- Bottom Section:** A base plate (77) with a central shaft (15) and a pulley (72). A pin (18) and a nut (53) are used to secure the shaft. A cap screw (50) is shown for the base plate.
- Internal Components:** A series of gears (19, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100) and shafts (15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100) are shown in their relative positions.

TRANSAXLE ASSEMBLY MODEL NO. 2307-C

Ref. No.	Part No.	Description	No. Used
1	784106	Lever & Housing Assy., Shift (Incl. Nos. 2 thru 7)	1
2	792016	Ring, Snap	1
3	792001	Ring, Quad	1
4	792049	Pin, Roll	1
5	784093	Housing, Shift Lever	1
6	784094	Keeper, Shift Lever	1
7	784107	Lever, Shift	1
8	784054	Rod Assy., Shift (Incl. Nos. 9 thru 12 & 24)	1
9	792003	Spring	1
10	792004	Ball, Steel	1
11	784004	Fork, Shifter	1
12	784055	Rod, Shifter (3rd & 4th)	1
13	784056	Rod Assy., Shift (Incl. Nos. 9, 10, 11 & 14)	1
14	784057	Rod, Shifter (low)	1
15	774163	Axle	2
16	780042	Washer, Thrust	6
17	792056	Screw, Hex Hd. Cap	4
18	792006	Lockwasher	8
19	778080	Gear, Ring	1
21	786052	Core, Body	2
22	778078	Gear, Pinion	5
23	776029A	Shaft & Gear, Brake	1
24	792017	Ring, Snap	1
25	776189A	Shaft & Bearing Assy., Pinion (Incl. No. 26)	1
26	780018	Bearing	1
27	778034	Gear Cluster Assy. (Incl. No. 28)	1
28	780053	Bushing	3
29	784074	Stop, Shifter	1
30	788023	Gasket, Case & Cover	1
31	788022	Gasket, Shift Lever Housing	1
32	778050	Gear, Shifting (3rd & 4th)	1
33	778020	Gear, Shifting (1st, 2nd, & Rev.)	1
34	778079	Gear, Side	2
35	778037	Gear, Idler	1
36	778049	Gear, Cluster Assy. (Incl. No. 28)	1


Ref. No.	Part No.	Description	No. Used
37	786024	Spacer	1
38	792018	Ring, Snap	2
39	776053	Shaft, Input	1
40	778024	Spur Gear, Input Shaft	1
41	780052	Washer, Thrust	2
43	778036	Gear, Output	1
44	778052	Pinion, Output	1
47	772041	Cover Assy., Transaxle (Incl. Nos. 54, 55, 57, 59, 63)	1
48	770029	Case Assy., Transaxle (Incl. Nos. 54, 55, 57 & 63)	1
49	792007	Screw, Socket Hd. Cap	8
49A	792031	Screw, Socket Hd. Cap	3
50	786026	Pin, Dowel	2
52	792019	Plug, Magnetic Drain	1
53	792055	Nut, Socket Hd.	8
54	780049	Bearing, Needle	1
55	530105	Bearing, Needle	1
57	780047	Bearing, Needle	1
59	780046	Bearing, Needle	1
61	780001	Washer	1
62	776031	Shaft & Pinion	1
63	780048	Bearing, Needle	2
64	776030	Shaft, Reverse Idler	1
65	786025	Spacer, Reverse Idler	1
66	778051	Idler, Reverse	1
67	778038	Spur Gear (22 teeth)	1
68	780039	Bearing, Thrust	2
69	774238	Carrier Assy., Differential (Incl. No. 76)	1
70	774239	Carrier Assy., Differential (Incl. No. 76)	1
71	792060	Tab, Locking	2
72	788024	"O" Ring	1
73	780007	Washer, Thrust	1
74	780051	Washer, Thrust	1
75	792010	Plug, Pipe	1
76	780041	Bushing (Not Used in Early Production)	1
77	774164	Differential Assy. (Incl. Nos. 15 thru 19, 21, 22, 34, 38, 68 thru 71)	1

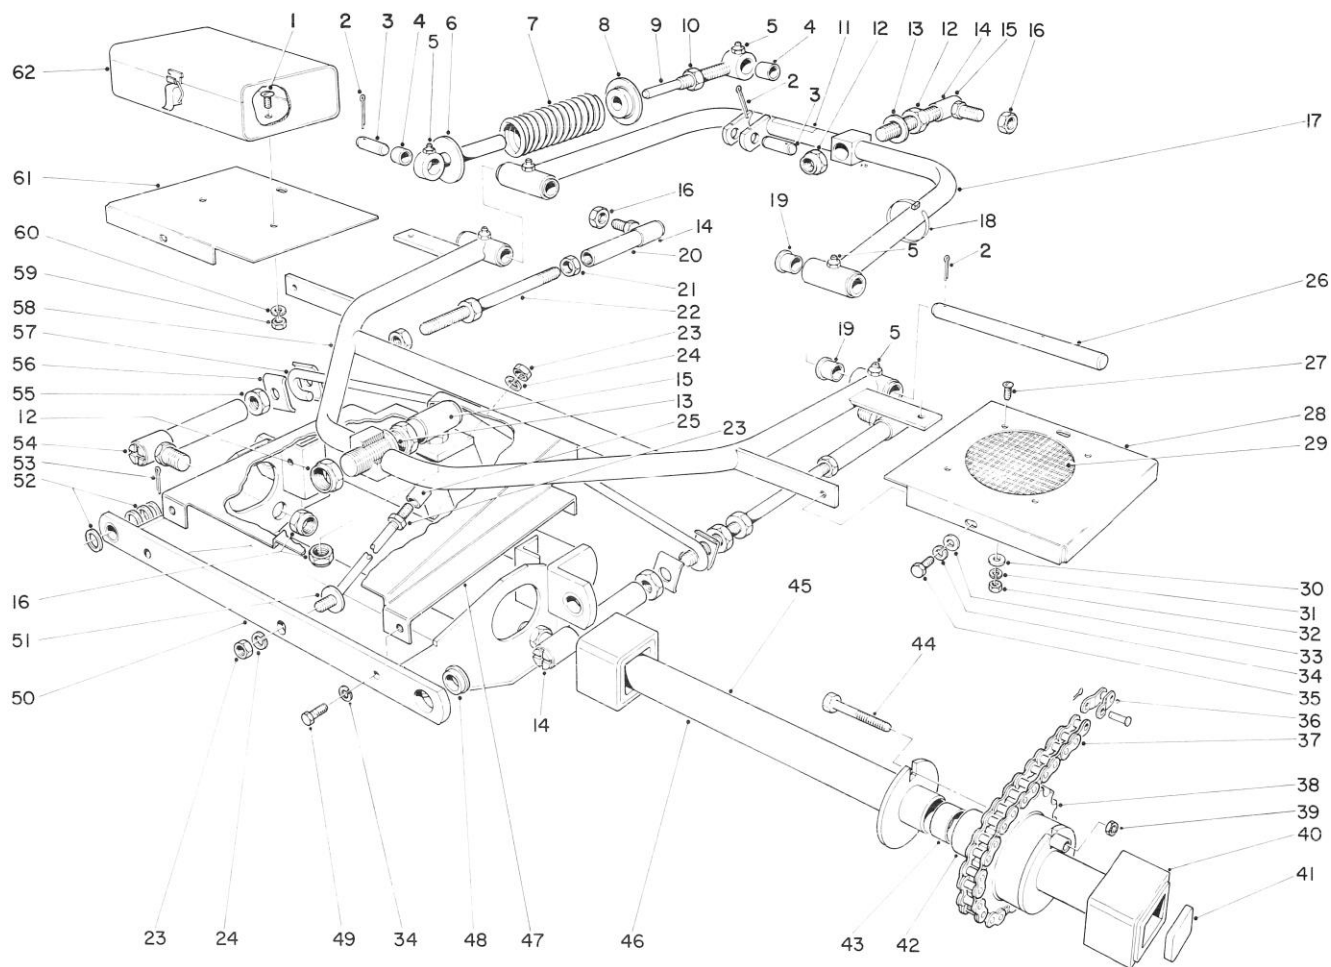 

INTERMEDIATE FRAME AND BAIL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32122-14	Screw Truss Head	2
2	3272-15	Cotter Pin	4
3	3-8993	Pin Pivot	2
4	5-2512	Bushing	2
5	302-5	Grease Fitting	6
6	5-1636	Rod End w/Bushing (Incl. Ref. #4)	1
7	3-8991	Spring Compression	1
8	3-8988	Anchor Spring	1
9	5-1635	Rod End w/Bushing (Incl. Ref. #4)	1
10	3217-12	Nut	1
11	40-7490	Decal — Warning	1
12	3296-49	Locknut	4
13	3-8514	Washer Thrust	2
14	237-82	Grommet	6
15	3-8864	Joint, Ball	2
16	3296-50	Locknut	6
17	3-8975	Rear Bail w/Bushings (Incl. Ref. #19)	1
18	3290-381	Cable Tie	1
19	256-149	Bushing	8
20	5-3928	Ball Joint (L.H. Thread)	2


Ref. No.	Part No.	Description	No. Used
21	3220-17	Nut (L.H. Thread)	2
22	5-4785	Rod, Push	2
23	3217-9	Nut	3
24	3253-7	Lockwasher	2
25	5-1091	Spacer	1
26	3-8992	Shaft Bail	2
27	3251-2	Machine Screw	4
28	3-9347	Shield Grass	1
29	3-9373	Screen	1
30	3256-1	Washer	4
31	3253-17	Lockwasher	4
32	3217-26	Nut	4
33	3256-22	Washer	4
34	3253-3	Lockwasher	8
35	321-2	Capscrew	4
36	2710-20	Connecting Link	1
37	5-3887	Chain	1
38	28-1220	Sprocket (Incl. Ref. #42)	1
39	32146-17	Locknut	1
40	42-3320	Drive Shaft — Short	1
41	5-1895	Pad, Reel Drive	2
42	256-161	Bushing	1
43	256-205	Bushing	2

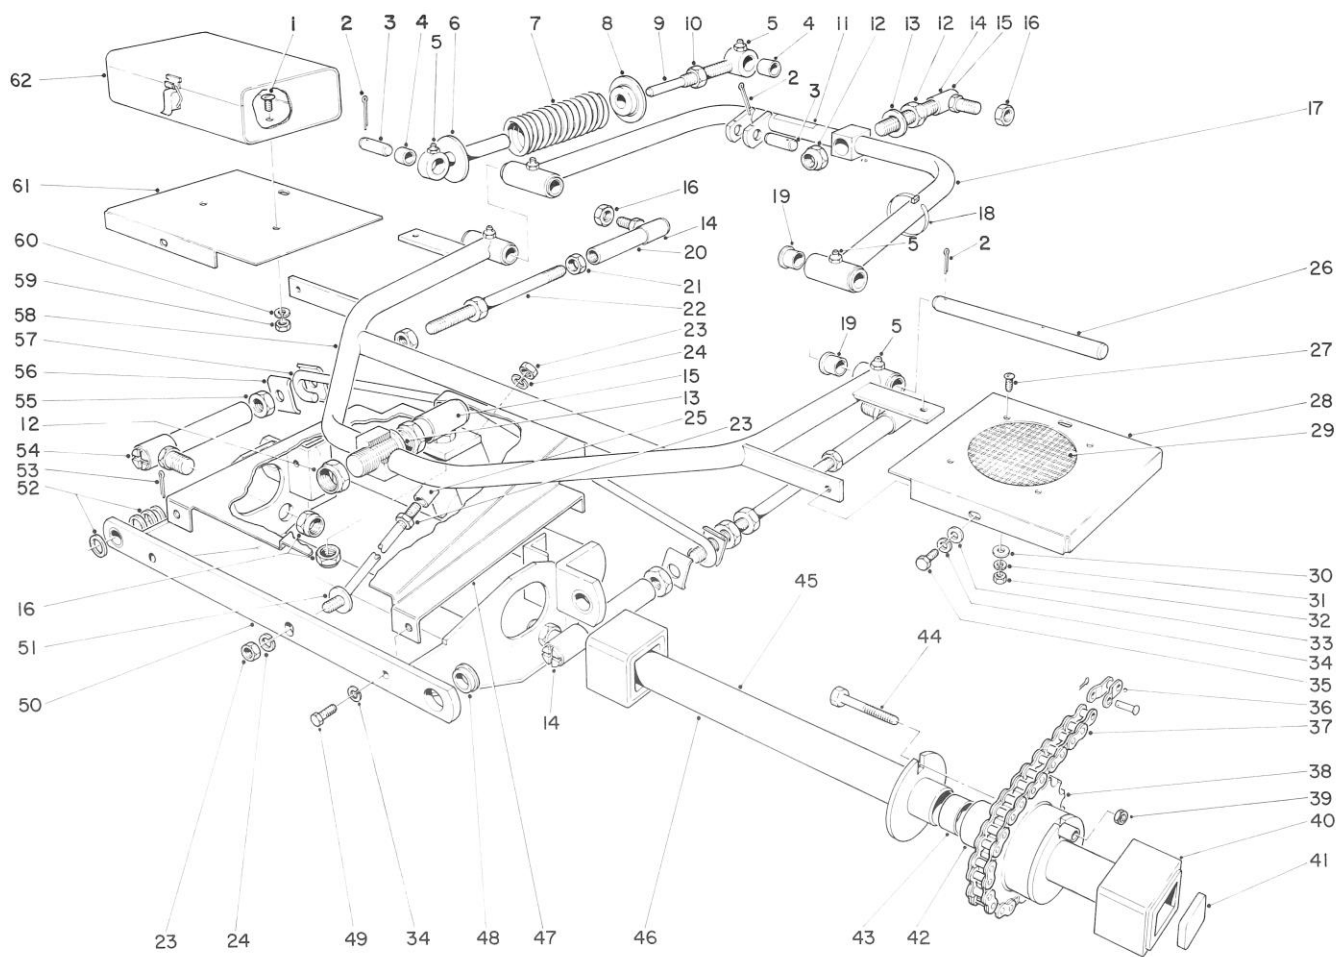 

INTERMEDIATE FRAME AND BAIL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
44	321-14	Capscrew	1
45	42-3310	Drive Shaft (Incl. Ref. #43)	1
46	42-3300	Torque Limiter (Complete)	1
47	40-7150	Chain Guard	1
48	3-8786	Bushing Frame	4
49	321-4	Capscrew	4
50	40-7170	Frame (Incl. Ref. #48)	1
51	5-1937	Bolt Tension	1
52	3-8664	Washer	4-28
53	3272-22	Cotter Pin	2


Ref. No.	Part No.	Description	No. Used
54	3-8863	Ball Joint R.H.	2
55	3220-7	Nut	4
56	5-1627	Washer	4
57	3-8955	Spring, Stabilizer	1
58	5-3877	Front Bail w/Bushings (Incl. Ref. #19)	1
59	3217-6	Nut	2
60	3253-4	Lockwasher	2
61	3-9038	Grass Shield	1
62	5-0746	Tool Box	1

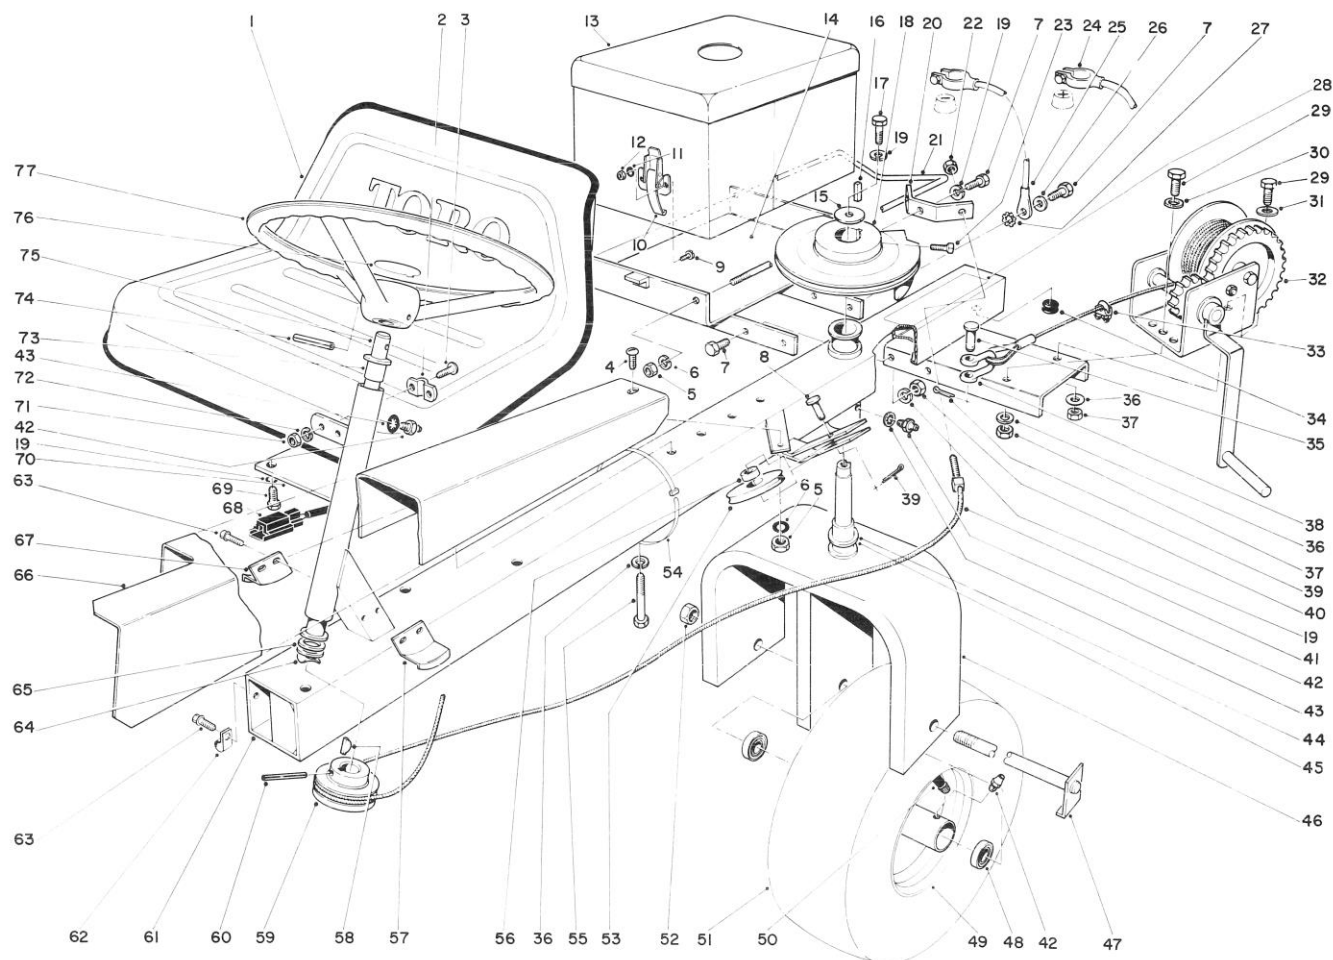 

SULKY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	47-2350	Seat	1
2	3-9337	Clip — Throttle	1
3	3251-3	Machine Screw	2
4	32122-20	Screw — Truss Head	1
5	3217-5	Nut	3
6	3253-3	Lockwasher	3
7	322-5	Capscrew	5
8	283-10	Pin	1
9	32122-30	Screw — Truss Hd.	4
10	249-10	Clamp Hook	2
11	3253-17	Lockwasher	4
12	3217-26	Nut	4
13	8-0030	Cover — Battery	1
14	5-3276	Base — Battery	1
15	40-7830	Washer	1
16	5-0946	Key	1
17	322-3	Capscrew	1
18	5-1894	Drum Steering	1
19	3253-4	Lockwasher	10
20	3-8516	Anchor Cable	1
21	6-9930	Rod, Battery Clamp	1
22	3296-4	Locknut	2
23	3242-7	Set Screw	2


Ref. No.	Part No.	Description	No. Used
24	3-9374	Cable — Battery	1
25	218-219	Cable — Ground	1
26	3256-23	Washer	1
27	3290-244	Lockwasher	1
28	40-7480	Decal — Cutting Unit Lift	1
29	323-6	Capscrew	2
30	3256-24	Washer	1
31	20-9530	Washer	1
32	38-6150	Winch Assembly	1
33	298-8	Cable Clamp	1
34	237-62	Grommet	1
35	283-15	Pin	1
36	3253-21	Lockwasher	4
37	3217-7	Nut	2
38	3-8782	Shackle	1
39	3272-10	Cotter Pin	2
40	3217-6	Nut	4
41	3-8524	Steering Cable Assembly	1
42	302-5	Grease Fitting	4
43	3254-8	Washer	2
44	256-268	Bushing	2
45	257-4	Thrust Washer	1
46	40-7870	Caster Fork	1

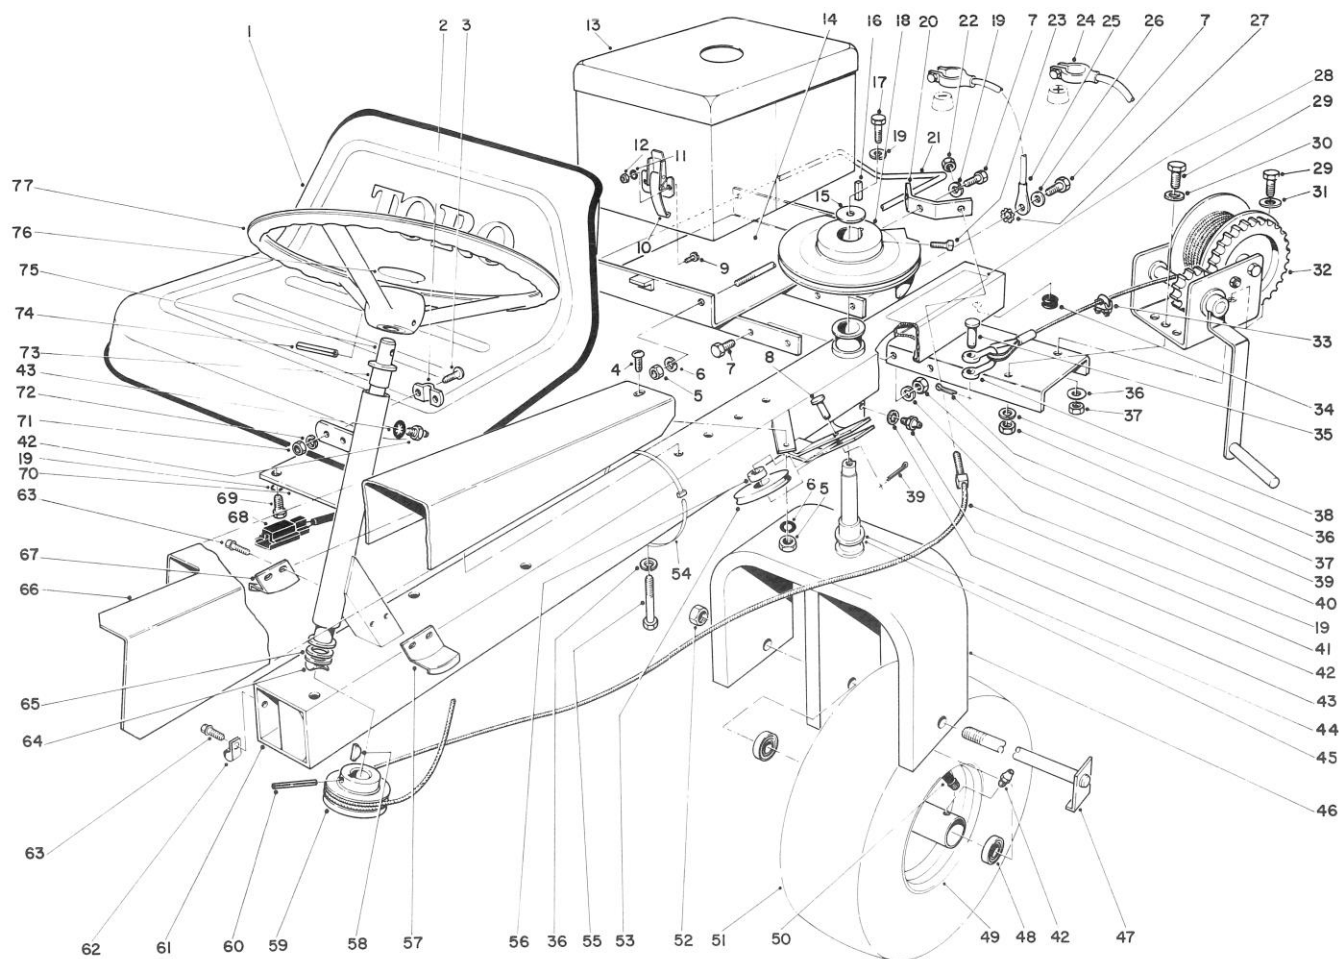 

SULKY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	40-7050	Bolt	1
48	251-182	Bearing	4
49	242-36	Wheel	2
50	232-3	Tube	2
51	231-21	Tire	2
52	3296-33	Locknut	1
53	3-8542	Pulley Assembly (Incl. Ref. #56)	1
54	3290-379	Cable Tie	1
55	323-20	Capscrew	2
56	256-2	Bushing	1
57	3-8523	Cable Guide	1
58	3257-30	Key	1
59	3-8521	Pulley, Front Steering	1
60	32121-34	Roll Pin	1
61	44-0290	Sulky Frame Assembly (Incl. Ref. #44 & 73)	1

Ref. No.	Part No.	Description	No. Used
62	2412-31	Clip — Boden	1
63	32144-10	Self Tapping Screw	5
64	3290-239	Spring Washer	1
65	3-6498	Thrust Washer	3
66	3-9046	Tunnel, Cable	1
67	3-8522	Cable Guide	1
68	38-1420	Switch — Seat	1
69	322-1	Capscrew	4
70	40-7120	Seat Mount	1
71	3217-26	Nut	2
72	3253-17	Lockwasher	2
73	256-136	Bushing	2
74	32121-10	Roll Pin	1
75	25-6250	Steering Shaft	1
76	24-2090	Cap Steering Wheel	1
77	25-6260	Steering Wheel	1

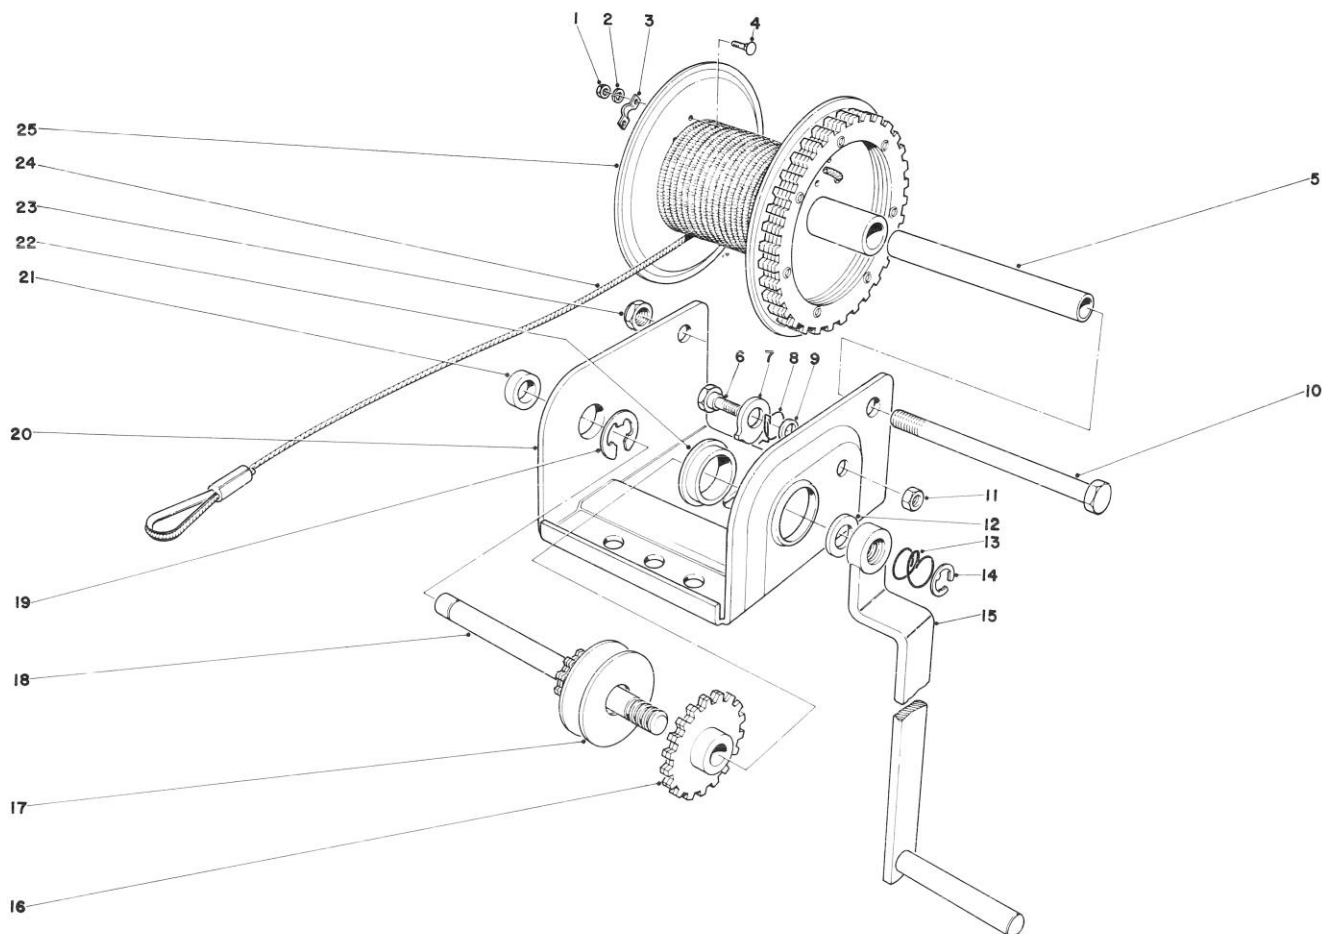 


WINCH NO. 38-6150

Ref. No.	Part No.	Description	No. Used
1		Hex Nut	2
2		Lockwasher	2
3		Rope Keeper	1
4		Carriage Bolt	2
5		Frame Spacer	1
6		Ratchet Bolt	1
7		Ratchet Pawl	1
8		Ratchet Spring	1
9		Ratchet Spacer	1
10		Special Capscrew	1
11		Locknut	1
12		Handle Disc	1
13		Coil — Spring	1
14		Retaining Ring	1
15	38-6250	Handle Assembly	1
16		Ratchet Gear Assembly	1
17		Brake Face	1

Ref. No.	Part No.	Description	No. Used
18		Pinion Shaft Assembly	1
19		Retaining Ring	1
20		Frame & Plate Assembly	1
21		Bushing	1
22		Bushing	1
23		Locknut	1
24	3-8721	Cable	1
25		Drum Assembly	1
*	38-6260	Rope Keeper Kit (Incl. Ref. #1-4 & 12-14)	1
*	38-6270	Ratchet Kit (Incl. Ref. #6-9 & 11)	1
*	38-6280	Brake Face Kit (Incl. Ref. #12 & 17)	1
*	38-6290	Pinion Shaft/Gear Kit (Incl. Ref. #12-14, 16-19 & 21-22)	1

 *Not Illustrated

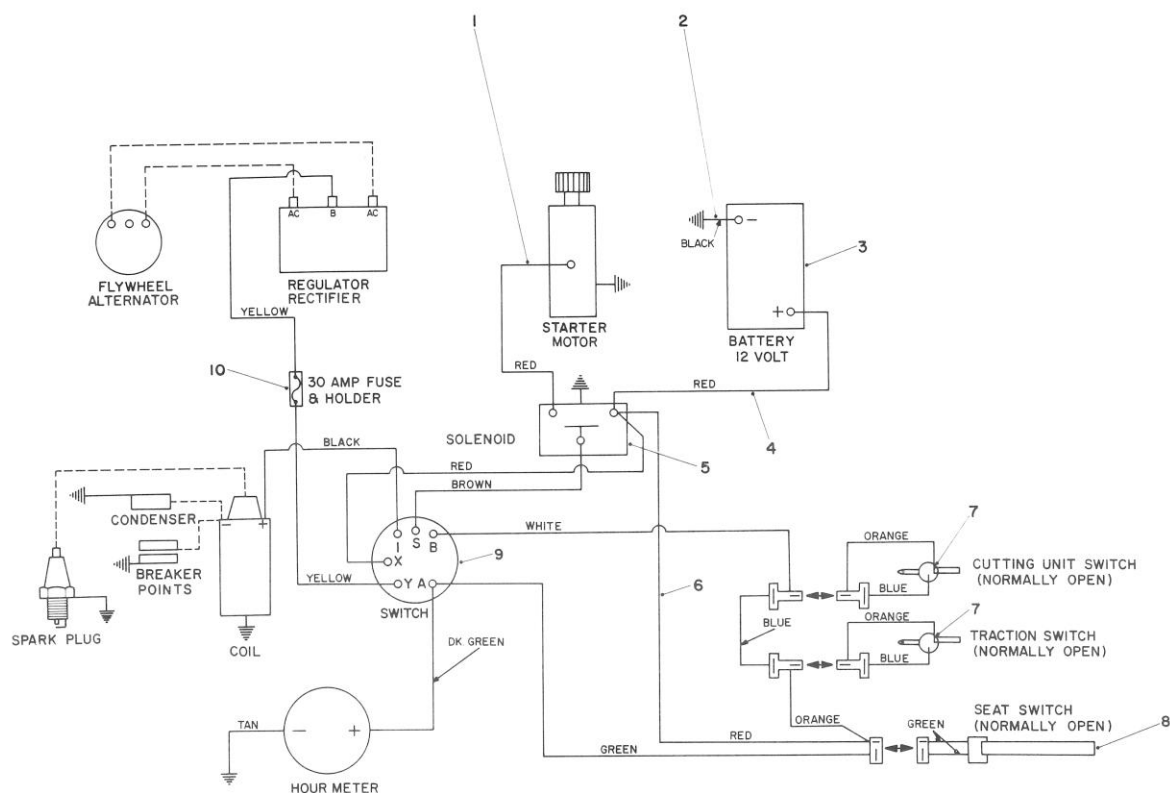


ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	6-1400	Wire — Solenoid Starter	1
2	218-219	Ground Cable	1
3	13-6480	Battery — 12 Volt	1
4	3-9374	Battery Cable — Red	1
5	6-1600	Solenoid	1
6	43-7940	Wiring Harness	1

Ref. No.	Part No.	Description	No. Used
7	38-0430	Switch	2
8	38-1420	Switch — Seat	1
9	27-2360	Switch — Key	1
10	218-489	Fuse Holder	1
†		30 Amp Fuse (AGC-30)	1

 †Obtain Locally

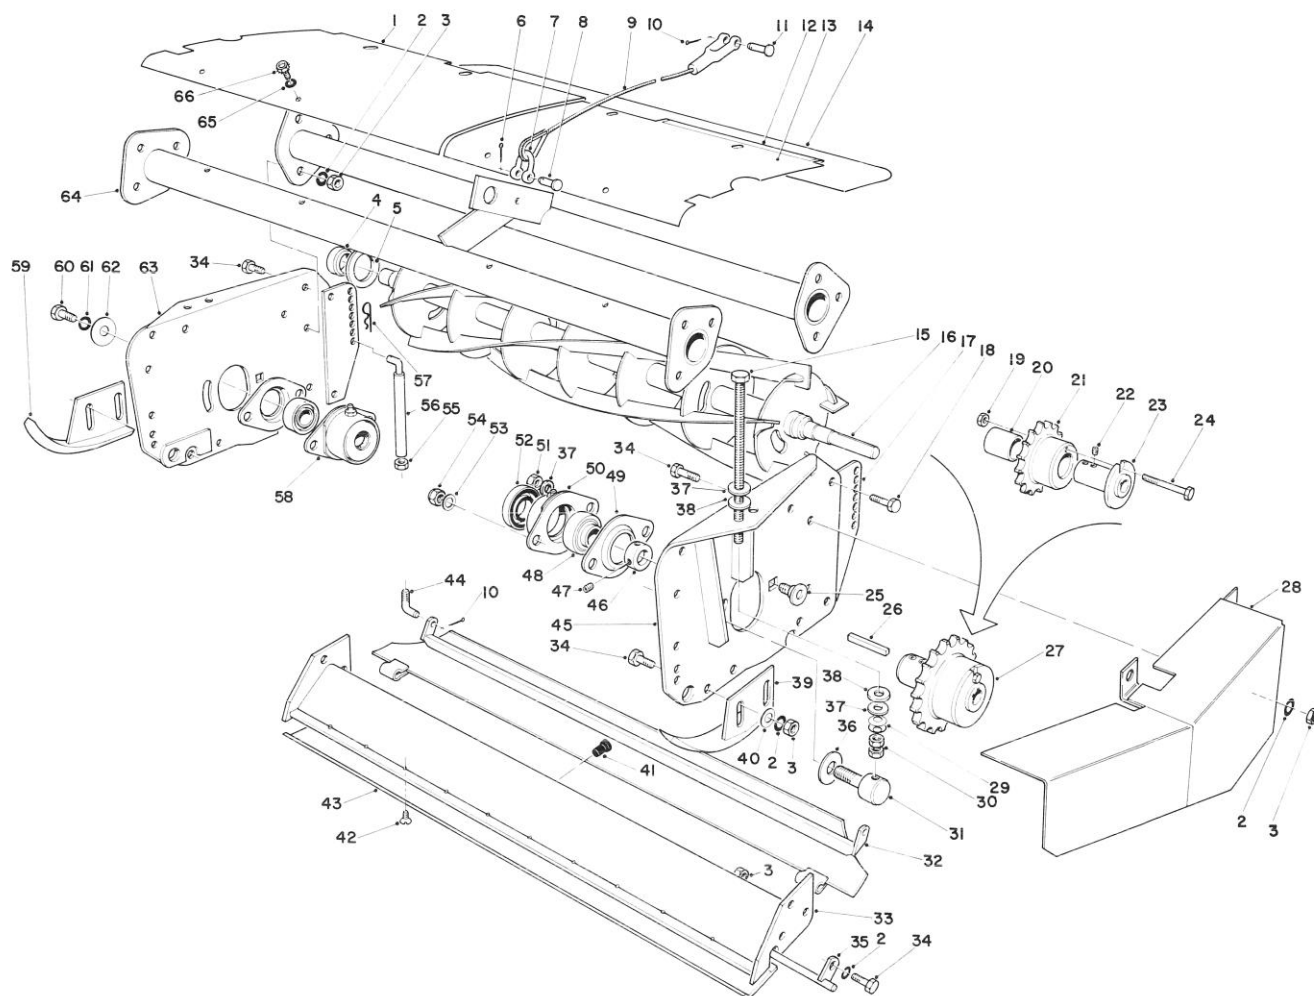


NO. 1 CUTTING UNIT

Ref. No.	Part No.	Description	No. Used
1	3-8602	Grass Shield	1
2	3253-21	Lockwasher	21
3	3217-7	Nut	19
4	5-3915	Wear Sleeve	2
5	38-7330	Grass Shield	2
6	3272-10	Cotter Pin	1
7	282-4	Shackle Chain	1
8	283-6	Pin Clevis	1
9	3-8718	Cable	1
10	3272-6	Cotter Pin	3
11	283-1	Pin Clevis	1
12	27-5560	Decal — Warning	1
13	3-8601	Grass Shield	1
14	6-9960	Grass Shield Extension	1
15	38-7410	Capscrew Adjusting	2
16	8-5129	Reel Assembly, 5 Blade	1
*	8-5159	Reel Assembly, 7 Blade	1
17	5-4033	Bracket Height Adjustment	2
18	323-7	Capscrew	2
19	32146-17	Locknut	1
20	256-161	Bushing	1
21	28-1220	Sprocket (Incl. Ref. #20)	1
22	3246-3	Set Screw	2

Ref. No.	Part No.	Description	No. Used
23	28-1230	Hub	1
24	321-11	Capscrew	1
25	5-3942	Pivot Screw	2
26	5-1865	Key Square	1
27	28-1520	Torque Limiter Assembly (Incl. Ref. #19-24)	1
28	40-7350	Chain Guard	1
29	3290-414	Belleville Washer	4
30	3219-3	Nut	4
31	38-7780	Block Adjusting	2
32	38-6820	Skid	1
33	40-8060	Bed Bar	1
34	323-6	Capscrew	19
35	38-9510	Pivot Pin Skid	2
36	38-7790	Washer	2
37	3256-24	Washer	6
38	29-3910	Thrust Washer	4
39	5-1705	Skid	1
40	3256-4	Washer	4
41	237-37	Plug	1
42	3-6462	Screw Special	10
43	38-7420	Bedknife	1
44	5-4048	Rod — Height of Cut	2

 
*Not Illustrated

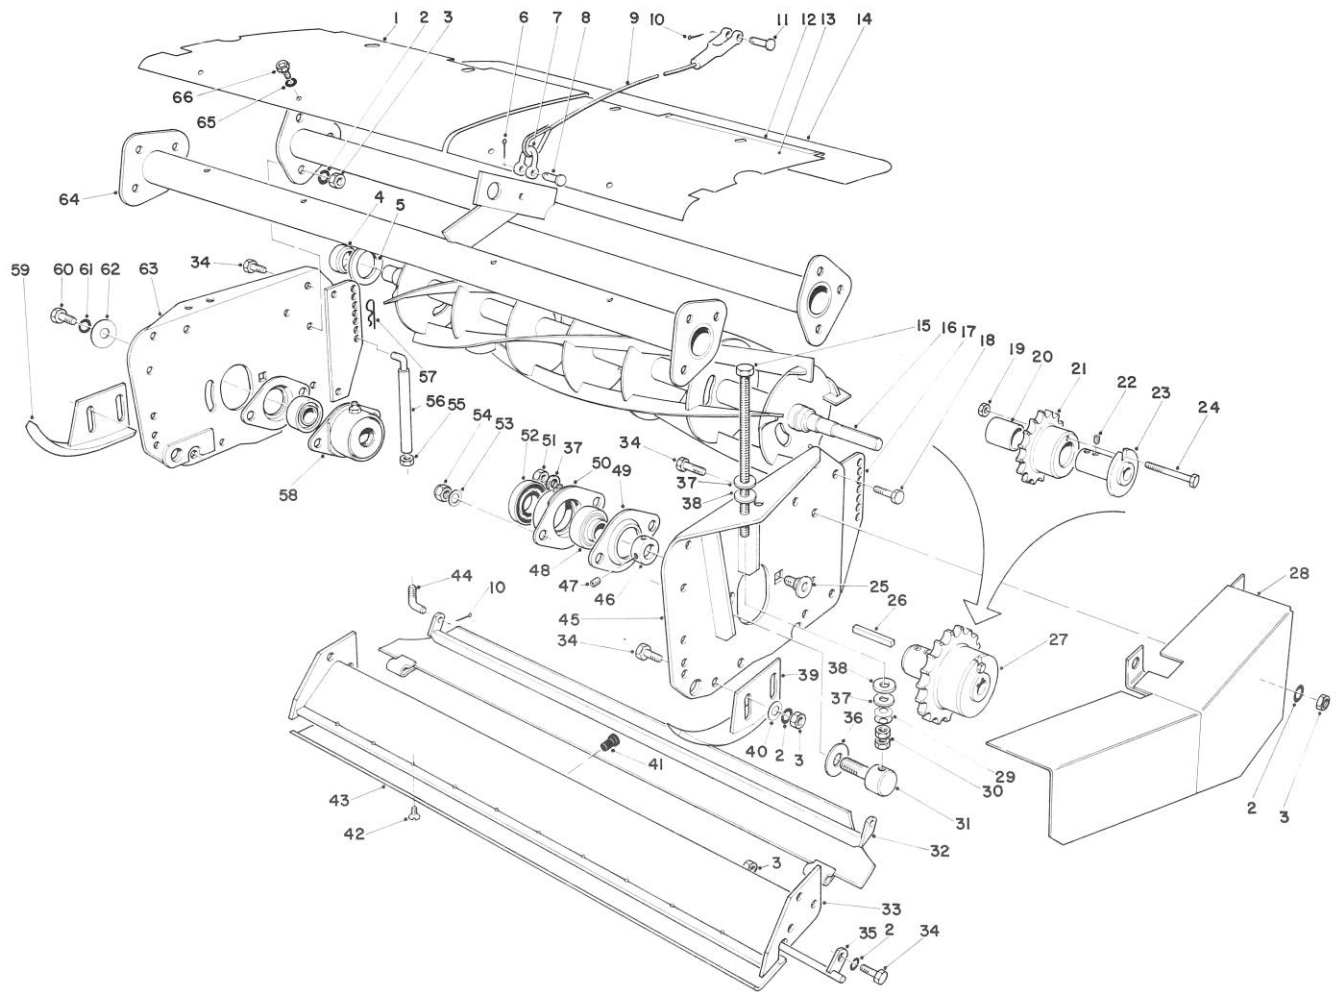

NO. 1 CUTTING UNIT (Continued)

Ref. No.	Part No.	Description	No. Used
45	38-6870	Side Plate Left	1
46	5-3824	Locking Collar	1
47	3245-35	Set Screw	1
48	5-2186	Bearing	2
49	38-7800	Bearing Cup	2
50	5-3838	Bearing Cup	1
51	3296-39	Locknut	2
52	253-121	Oil Seal	2
53	3256-26	Washer	2
54	3296-45	Locknut	2
55	3220-3	Nut	2

Ref. No.	Part No.	Description	No. Used
56	38-7730	Link Adjustment	2
57	3290-255	Hair Pin Cotter	2
58	5-3837	Bearing Cup	1
59	5-1704	Skid End	1
60	322-2	Capscrew	1
61	3253-4	Lockwasher	1
62	2-1590	Washer	1
63	38-6860	Side Plate Right	1
64	38-6910	Cross Tube	1
65	3256-22	Washer	8
66	32140-79	Screw w/Lockwasher	8

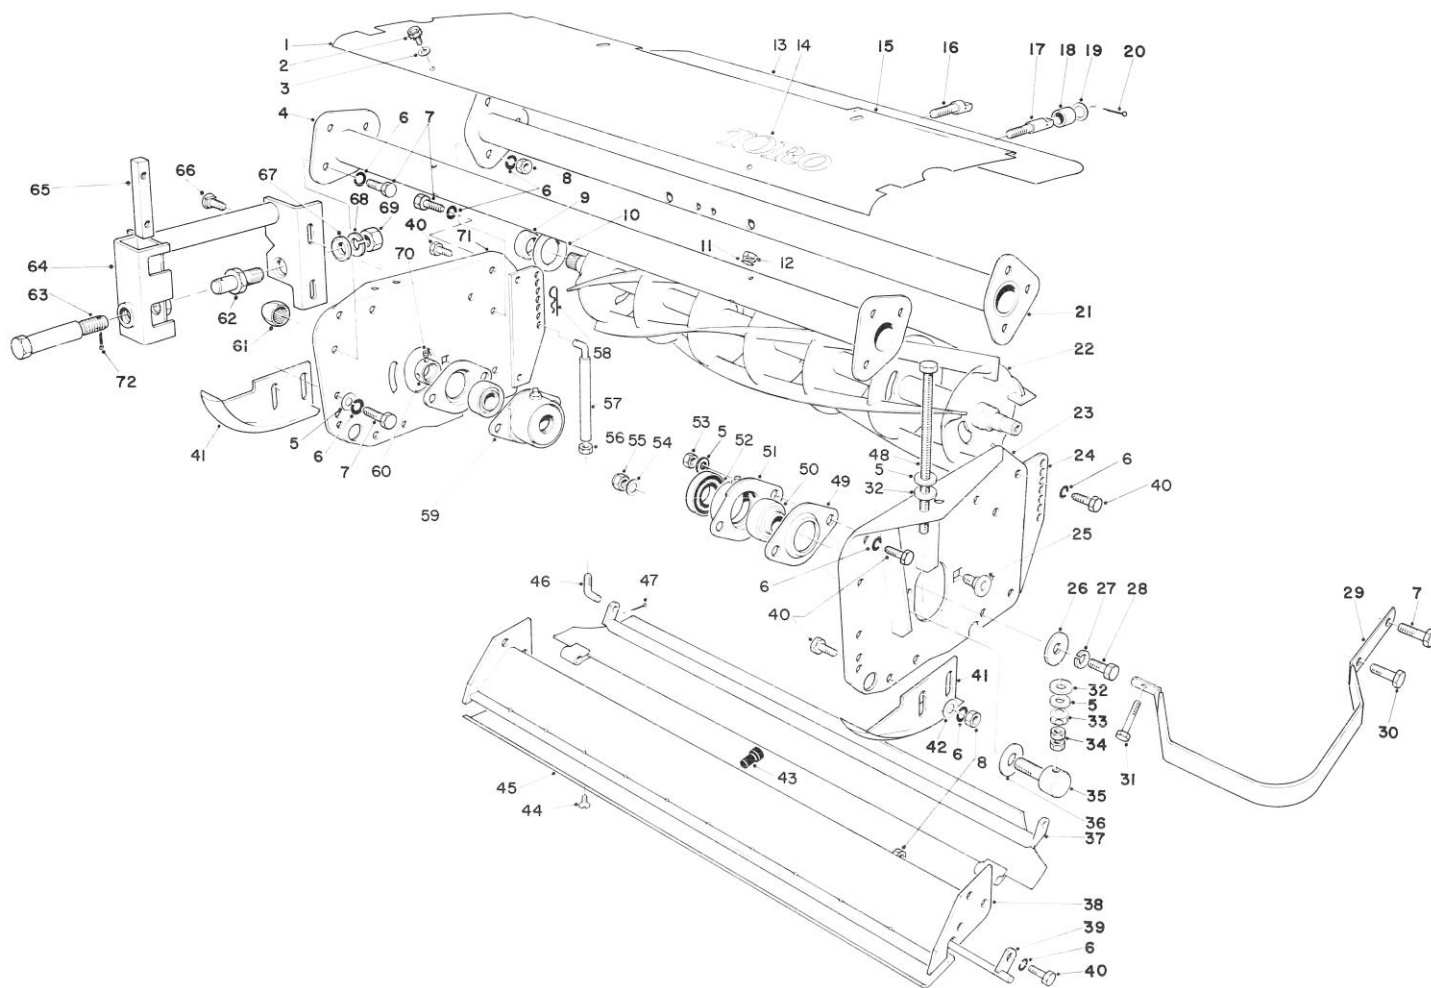 


NO. 2 CUTTING UNIT

Ref. No.	Part No.	Description	No. Used
1	5-1675	Shield Grass	1
2	32140-79	Screw w/Lockwasher	4
3	3256-22	Washer	4
4	3-8608	Cross Tube	1
5	3256-24	Washer	7
6	3253-21	Lockwasher	24
7	323-7	Capscrew	4
8	3217-7	Nut	20
9	5-3915	Wear Sleeve	2
10	38-7330	Grass Shield	2
11	3254-2	Lockwasher	1
12	3217-6	Nut	1
13	6-9960	Grass Shield Extension	1
14	27-4600	Decal — Toro	1
15	27-5560	Decal — Warning	1
16	5-2723	Pin, Lift	1
17	5-3998	Pin, Lift	1
18	5-4000	Spacer	1
19	3256-27	Washer	2
20	3272-14	Cotter Pin	2
21	38-6920	Tube Cross	1
22	8-5139	Reel Assembly 5-Blade	1
*	8-5169	Reel Assembly 7-Blade	1

Ref. No.	Part No.	Description	No. Used
23	38-6890	Side Plate Left	1
24	5-4033	Bracket Height Adjustment	2
25	5-3942	Screw Pivot	2
26	2-1590	Washer	1
27	3253-4	Lockwasher	1
28	322-2	Capscrew	1
29	3-9382	Reel Guard	1
30	323-5	Capscrew	1
31	322-10	Capscrew	1
32	29-3910	Thrust Washer	4
33	3290-414	Belleville Washer	4
34	3219-3	Nut	4
35	38-7780	Adjustment Block	2
36	38-7790	Washer	2
37	38-6820	Skid	1
38	40-8060	Bed Bar	1
39	38-9510	Pivot Pin — Skid	2
40	323-6	Capscrew	17
41	5-1703	Skid End	2
42	3256-4	Washer	4
43	237-37	Plug	1
44	3-6462	Screw Special	10
45	38-7420	Bed Knife	1

 
*Not Illustrated

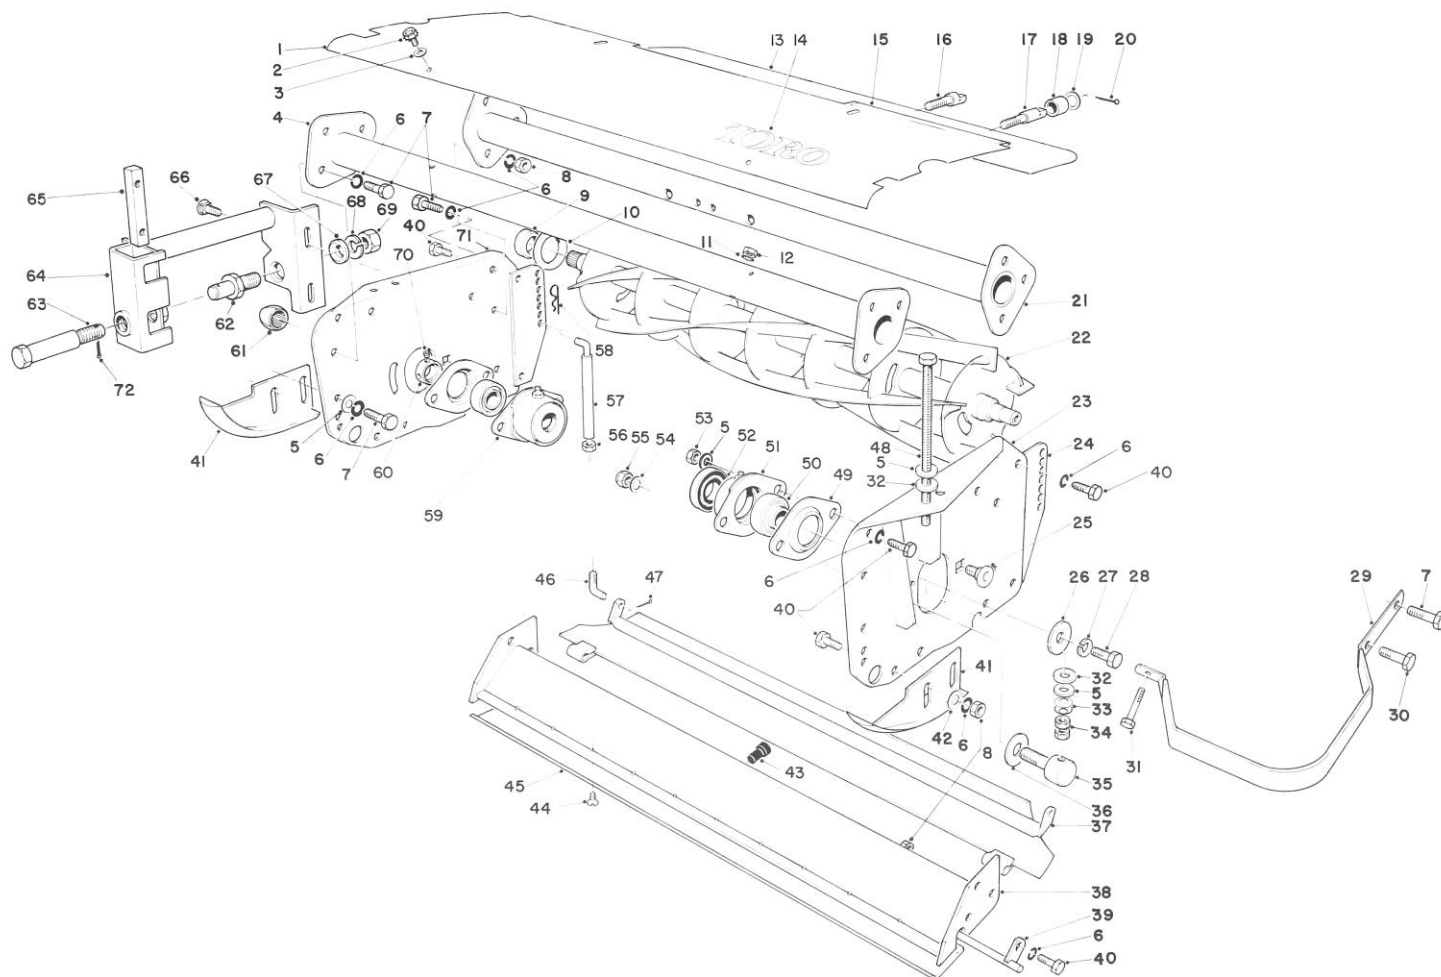

NO. 2 CUTTING UNIT (Continued)

Ref. No.	Part No.	Description	No. Used
46	5-4048	Rod Height of Cut	2
47	3272-6	Cotter Pin	2
48	38-7410	Capscrew Adjustment	2
49	38-7800	Cup Bearing	2
50	5-2186	Bearing	2
51	5-3838	Bearing Cup	1
52	253-121	Oil Seal	2
53	3296-39	Locknut	2
54	3256-26	Washer	2
55	3296-45	Locknut	2
56	3220-3	Jam Nut	2
57	38-7730	Link Adjustment	2
58	3290-255	Hair Pin Cotter	2
59	5-3837	Bearing Cup	1

Ref. No.	Part No.	Description	No. Used
60	5-3824	Locking Collar	1
61	3-8623	Drive Ball	1
62	5-2932	Stud	1
63	42-4120	Bolt — Pivot Frame	1
64	42-4100	Frame Pivot	1
65	5-1618	Position Lock	1
66	3231-25	Carriage Bolt	2
67	3-8635	Spherical Spacer	1
68	3253-9	Lockwasher	1
69	3218-7	Nut	1
70	3245-35	Setscrew	1
71	38-6880	Side Plate Right	1
72	3272-12	Cotter Pin	1

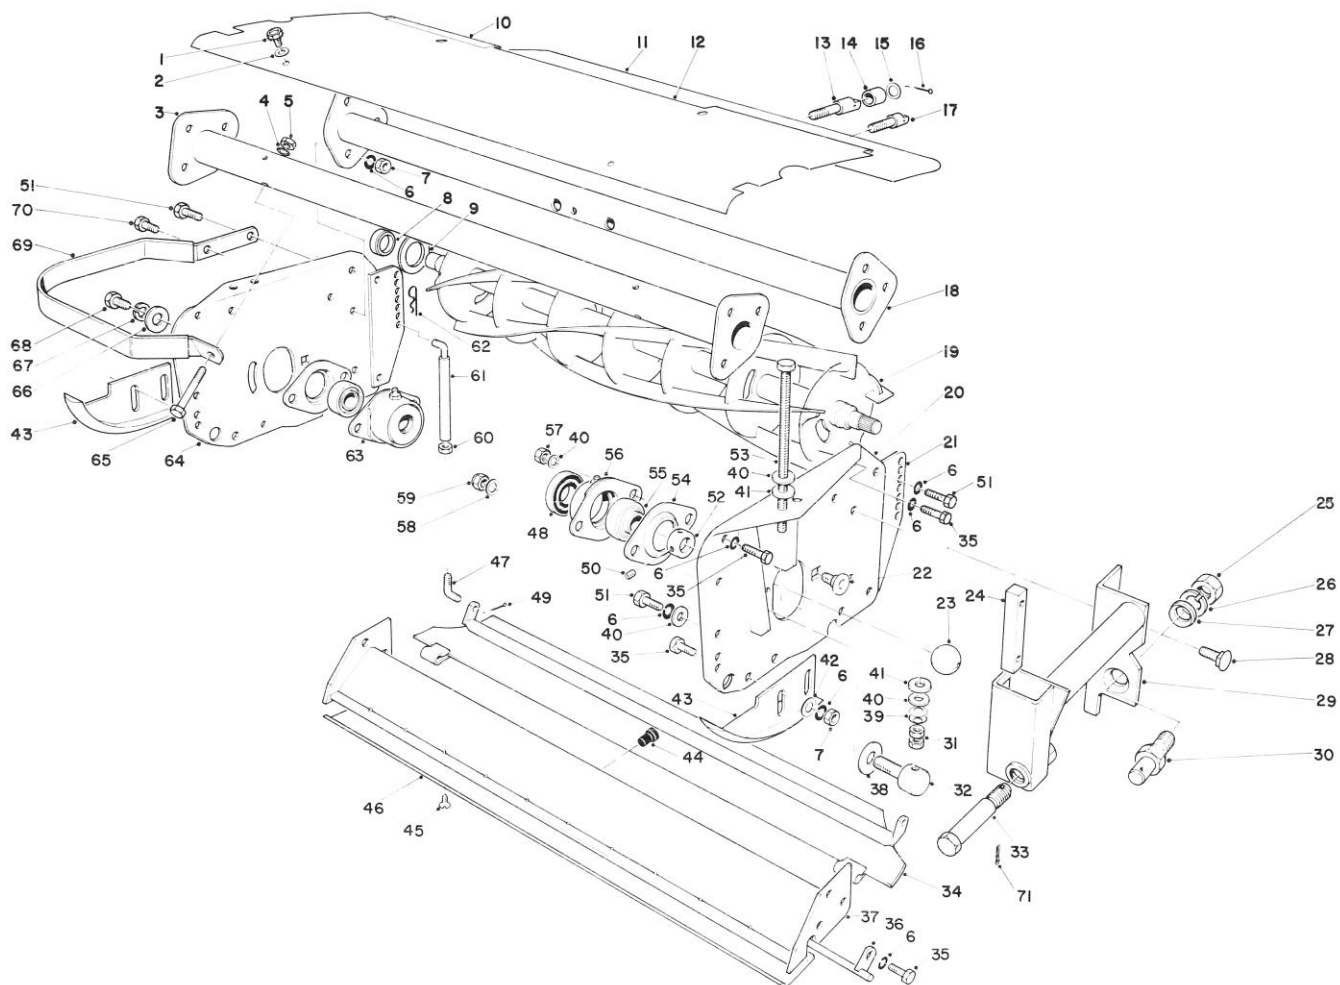 


NO. 3 CUTTING UNIT

Ref. No.	Part No.	Description	No. Used
1	32140-79	Screw w/Lockwasher	4
2	3256-22	Washer	4
3	3-8608	Cross Tube	1
4	3254-2	Lockwasher	1
5	3217-6	Nut	1
6	3253-21	Lockwasher	24
7	3217-7	Nut	20
8	5-3915	Wear Sleeve	2
9	38-7330	Grass Shield	2
10	27-5560	Warning Decal	1
11	6-9960	Grass Shield Extension	1
12	5-1675	Grass Shield	1
13	5-3998	Lift Pin	1
14	5-4000	Spacer	1
15	3256-27	Washer	2
16	3272-14	Cotter Pin	2
17	5-2723	Lift Pin	1
18	38-6930	Cross Tube	1
19	8-5149	Reel Assembly, 5 Blade	1
*	8-5179	Reel Assembly, 7 Blade	1
20	38-6890	Side Plate	1
21	5-4033	Bracket Height Adjustment	2
22	5-3942	Pivot Screw	2

Ref. No.	Part No.	Description	No. Used
23	3-8623	Drive Ball	1
24	5-1618	Position Lock	1
25	3218-7	Nut	1
26	3253-9	Lockwasher	1
27	3-8635	Spherical Washer	1
28	3231-25	Carriage Bolt	2
29	42-4130	Pivot Frame	1
30	5-2932	Pivot Pin	1
31	3219-3	Nut	4
32	38-7780	Adjusting Block	2
33	42-4120	Bolt — Pivot Frame	1
34	38-6820	Skid	1
35	323-6	Capscrew	17
36	38-9510	Pivot Pin Skid	2
37	40-8060	Bed Bar	1
38	38-7790	Washer	2
39	3290-414	Belleville Washer	4
40	3256-24	Washer	7
41	29-3910	Thrust Washer	4
42	3256-4	Washer	4
43	5-1703	End Skid	2
44	237-37	Plug	1
45	3-6462	Screw Special	10

 *Not Illustrated









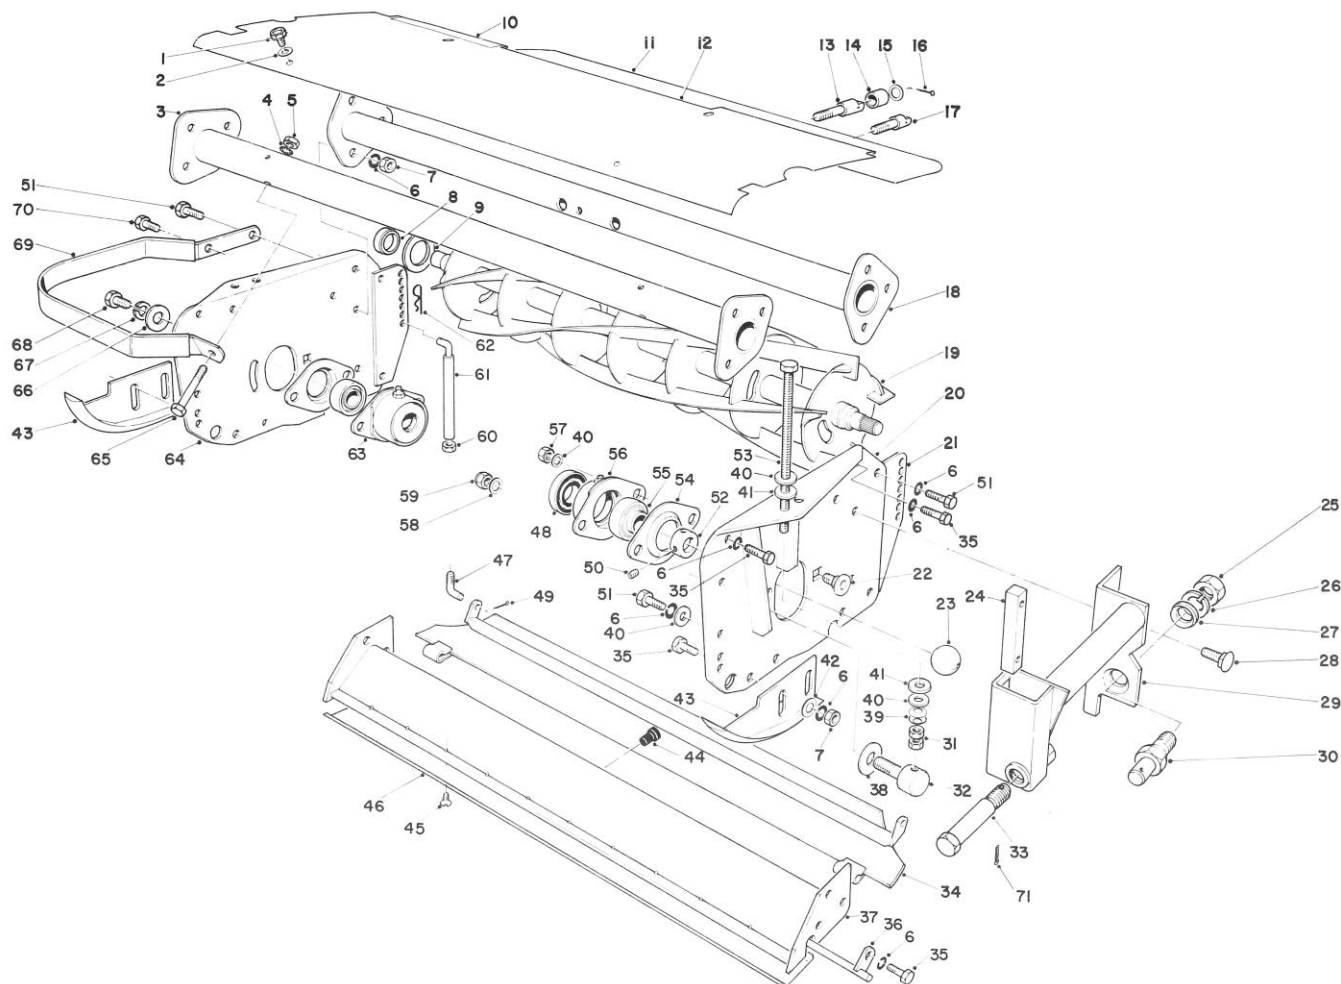


NO. 3 CUTTING UNIT (Continued)

Ref. No.	Part No.	Description	No. Used
46	38-7420	Bed Knife	1
47	5-4048	Rod, Height-of-Cut	2
48	253-121	Oil Seal	2
49	3272-6	Cotter Pin	2
50	3245-35	Setscrew	1
51	323-7	Capscrew	4
52	5-3824	Locking Collar	1
53	38-7410	Adjusting Capscrew	2
54	38-7800	Bearing Cup	2
55	5-2186	Bearing	2
56	5-3838	Bearing Cup	1
57	3296-39	Locknut	2
58	3256-26	Washer	2

Ref. No.	Part No.	Description	No. Used
59	3296-45	Locknut	2
60	3220-3	Jam Nut	2
61	38-7730	Adjusting Link	2
62	3290-255	Hair Pin Cotter	2
63	5-3837	Bearing Cup	1
64	38-6880	Side Plate	1
65	322-10	Capscrew	1
66	2-1590	Washer	1
67	3253-4	Lockwasher	1
68	322-2	Capscrew	1
69	3-9381	Reel Guard	1
70	323-5	Capscrew	1
71	3272-12	Cotter Pin	1

         ENGINE KOHLER MODEL K321S TYPE 60387

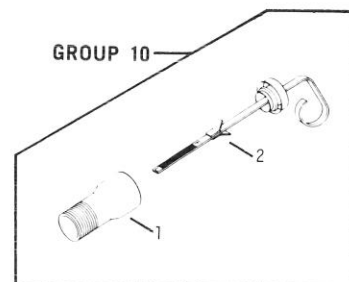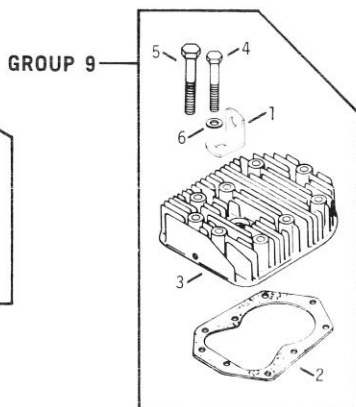
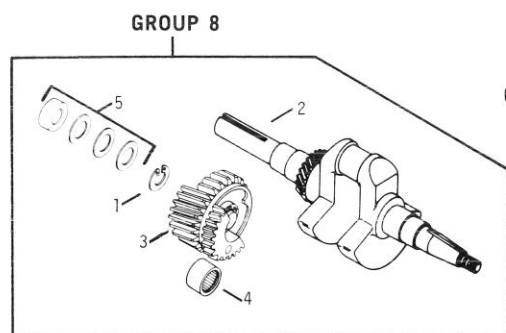
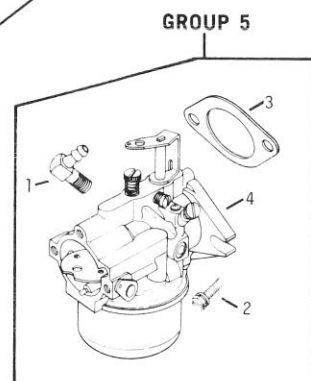
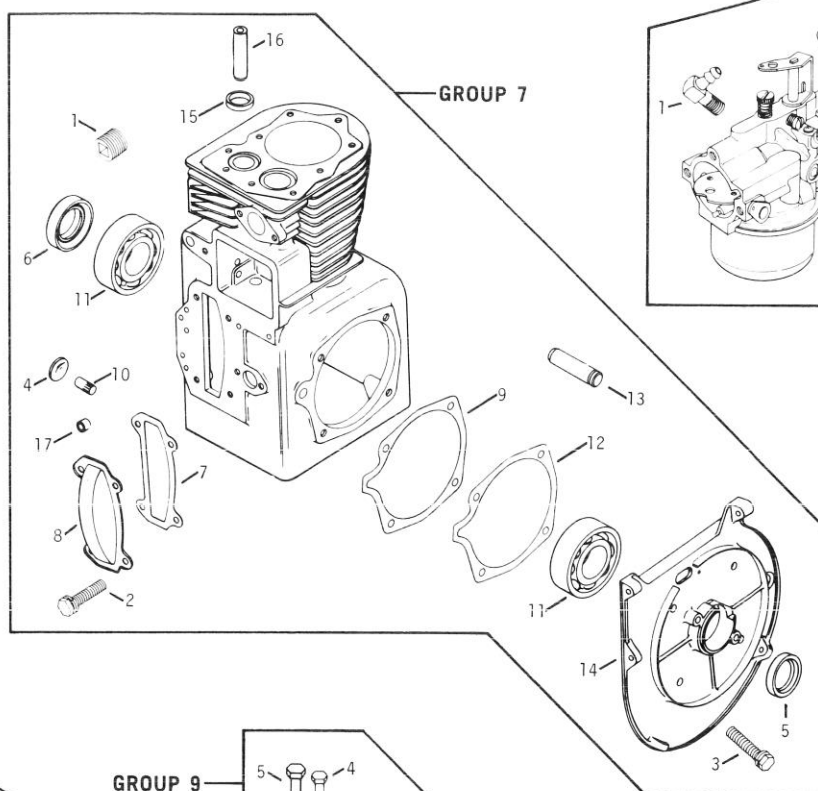
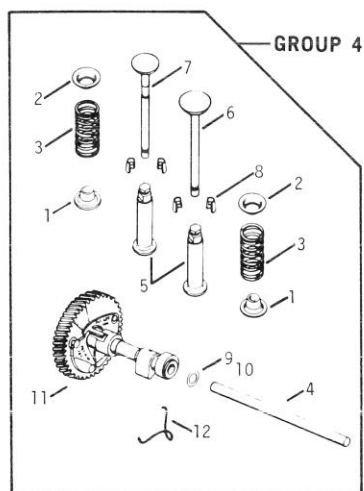
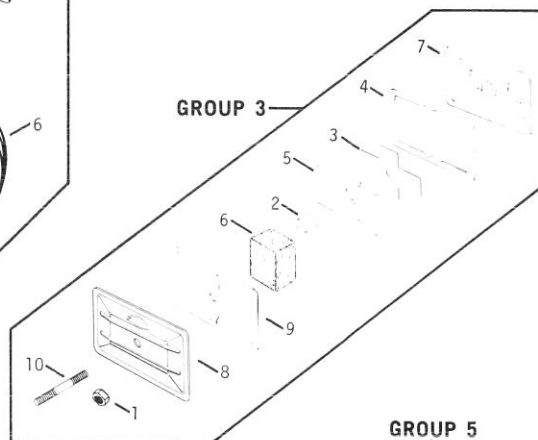
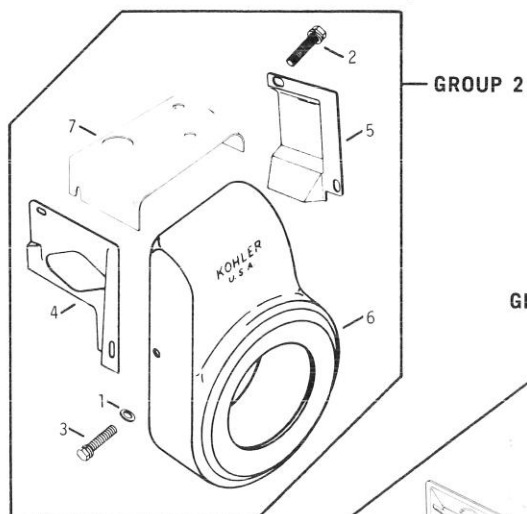
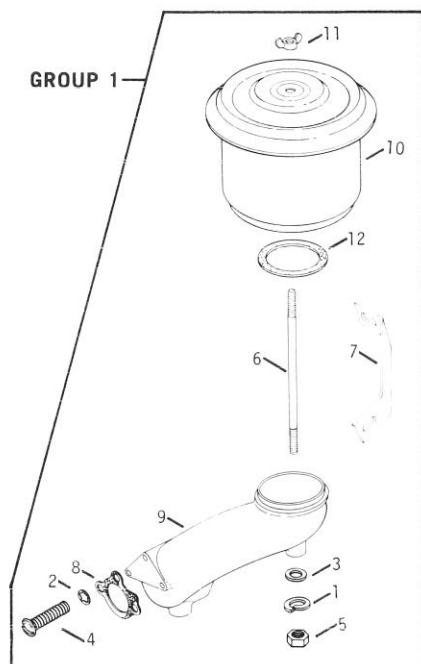


ENGINE KOHLER MODEL K321S TYPE 60387

Ref. No.	Part No.	Description	No. Used
		AIR INTAKE — GROUP 1	
1	X-20-1	Washer, Lock	1
2	X-22-9	Washer, Lock	3
3	X-25-63	Washer	1
4	X-50-37	Screw, R.H.M.	3
5	X-81-1	Nut, Hex	1
6	210186-1	Stud, Cleaner	1
7	235339	Brace, Cleaner	1
8	275341	Gasket, Air Horn	1
9	45 054 03	Elbow, Air Cleaner	1
10	151834	Cleaner, Air	1
11	X-276-7	Nut, Wing	1
12	AC-1787	Gasket	1
		BAFFLES & SHROUD — GROUP 2	
1	X-25-53	Washer	1
2	X-132-2	Screw, H.C.	4
3	X-132-6	Screw, H.C.	2
4	235652	Baffle, Side Air	1
5	236676	Baffle, Cylinder	1
6	236865	Housing, Blower	1
7	237677	Baffle, Head	1
		BREATHER & VENT — GROUP 3	
1	X-799-1	Nut, Hex	1
2	231032	Seal, Breather	1
3	235047	Reed, Breather	1
4	235048	Gasket, Breather Plate	1
5	235117	Baffle, Breather	1
6	235118	Filter, Breather	1
7	235631	Plate, Breather	1
8	275143	Cover, Valve	1
9	275144	Gasket, Valve Cover	1
10	275220	Stud, Valve Cover	1
		CAMSHAFT & VALVES — GROUP 4	
1	230020	Rotator	2
2	235011	Retainer, Spring Upper	2
3	235168	Spring, Valve	2
4	235193	Pin, Camshaft	1
5	D-235327	Tappet	2
6	235582	Valve, Intake	1
7	237672	Valve, Exhaust	1
8	41 755 10	Kit, Retainer	2
9	275066	Spacer, Camshaft .005	A.R.

Ref. No.	Part No.	Description	No. Used
10	275067	Spacer, Camshaft .010	A.R.
11	47 010 09	Camshaft — Assembly	1
12	47 089 01	Spring, Actuating	1
		CARBURETOR — GROUP 5	
1	X-391-1	Elbow, Hose	1
2	X-770-1	Screw, Slt'd. Hd.	2
3	271030	Gasket, Carburetor	1
4	47 053 16	Carburetor — Assembly	1
		CRANKCASE — GROUP 7	
1	47 139 01	Plug, Pipe	1
2	X-132-6	Screw, H.C.	4
3	X-159-2	Screw, H.C.	4
4	X-230-11	Plug	1
5	4703206	Seal, Front Oil	1
6	4703207	Seal, Rear Oil	1
7	235025	Gasket, Cover	1
8	235026	Cover, Camshaft	1
9	235070	Gasket	A.R.
10	235125-S	Shaft, Governor	1
11	235376	Bearing, Ball	2
12	235757	Gasket	1
13	236559	Shaft	2
14	45 156 04	Plate, Bearing	1
		Block, Cylinder — Assem. (USE: B-237835 Miniblock)	1
15	230265	Insert	2
16	235007-S	Guide, Valve	2
17	234866	Bearing	1
		CRANKSHAFT — GROUP 8	
1	X-269-34	Retainer	2
2	45 014 01	Crankshaft	1
3	47 042 01	Gear — Assembly	2
4	47 030 01	Bearing, Needle	2
5	47 755 01	Spacer Kit	1
		CYLINDER HEAD — GROUP 9	
1	47 445 01	Strap, Lifting	1
2	237658	Gasket, Head	1
3	237670	Head, Cylinder	1
4	270158	Screw, H.C.	8
5	270721	Screw, H.C.	1
6	270889	Washer	10
		DIPSTICK — GROUP 10	
1	4712308	Tube, Oil Fill	1
2	237013	Dipstick	1

        
ENGINE KOHLER MODEL K321S TYPE 60387

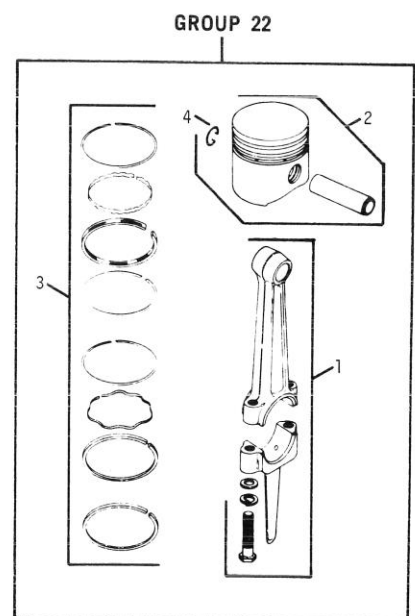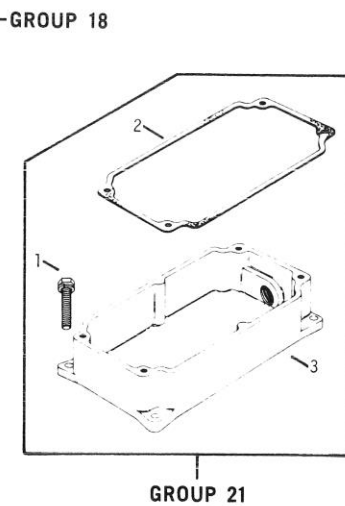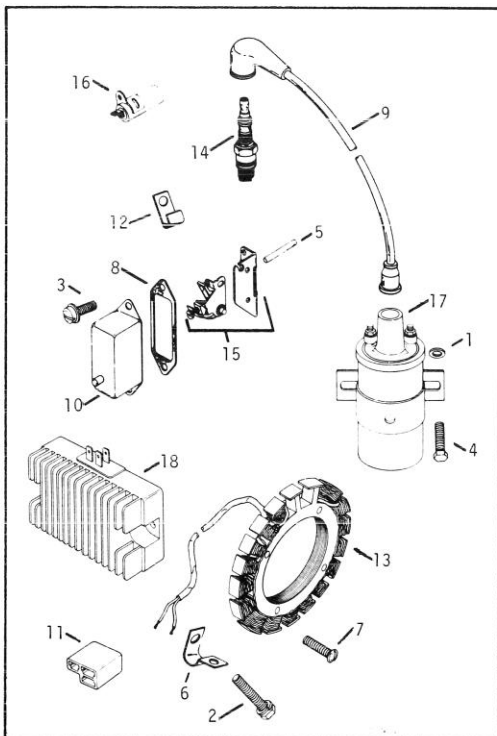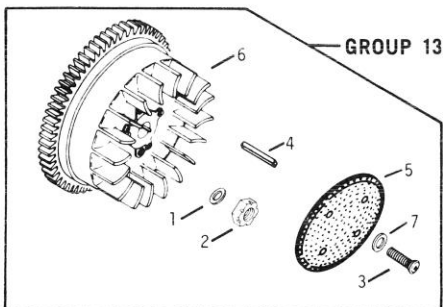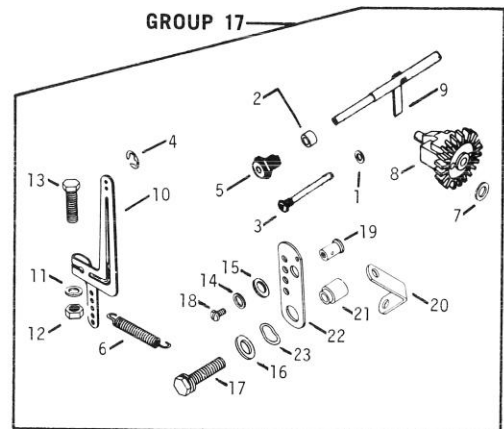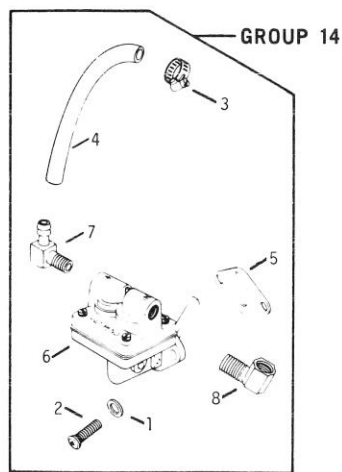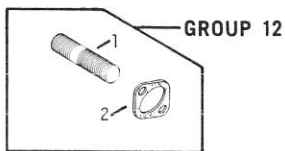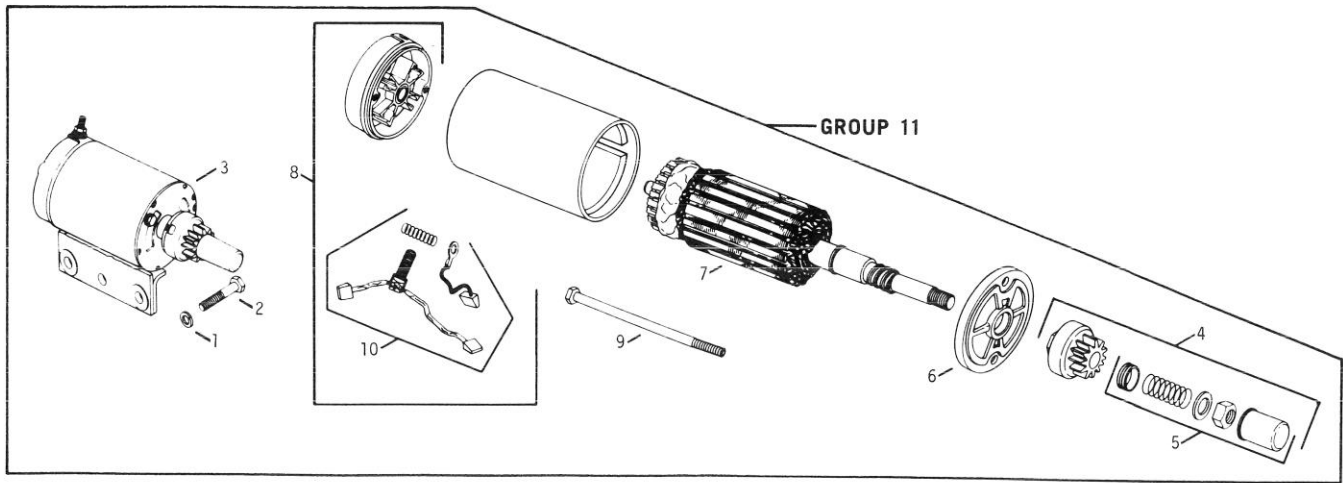

ENGINE KOHLER MODEL K321S TYPE 60387

Ref. No.	Part No.	Description	No. Used
		ELECTRIC START – GROUP 11	
1	X-22-1	Washer	2
2	234948	Screw, H.C.	2
3	A-237534	Starter – Assembly	1
4	47 755 07	Kit, Drive	1
5	47 755 13	Kit, Drive Parts	1
6	237650	Cap, Drive End	1
7	47 170 01	Armature	1
8	48 227 04	Cap, Commutator End	1
9	237649	Thru Bolt w/Washer	2
10	48 755 15	Kit, Brush	1
		EXHAUST – GROUP 12	
1	235899	Stud	2
2	235122	Gasket	2
		FLYWHEEL – GROUP 13	
1	X-25-104	Washer	1
2	X-119-14	Nut, Lock	1
3	4708608	Screw, T.H.	4
4	X-286-17	Key	1
5	236688	Screen, Grass	1
6	47 025 24	Flywheel	1
7	X-25-52	Washer – Plain	4
		FUEL PUMP – GROUP 14	
1	X-25-63	Washer Plain	2
2	X-174-2	Screw, F.H.M.	2
3	X-426-9	Clamp, Hose	2
4	X-810-1	Line, Fuel	1
5	47 041 04	Gasket, Fuel Pump	1
6	47 599 04	Pump, Fuel	1
7	X-391-1	Connector	1
8	X-555-2	Elbow	1
		GOVERNOR – GROUP 17	
1	X-25-12	Washer	1
2	X-400-80	Spacer	1
3	231355	Pin, Governor Stop	1
4	235278	Retainer, Rod	1
5	235476	Bushing	1
6	235496	Spring, Governor	1
7	237022	Washer, Thrust	1
8	A-235743-S	Gear, Governor	1
9	237455	Shaft, Governor Cross	1
10	A-237653	Lever, Governor – Assembly	1
11	X-25-72	Washer	1

Ref. No.	Part No.	Description	No. Used
12	X-81-1	Nut, Hex	1
13	X-776-1	Screw	1
14	X-25-58	Washer	1
15	X-25-63	Washer	1
16	X-25-102	Washer	1
17	X-132-9	Screw, H.C.	1
18	X-102-3	Screw	1
19	48 237 02	Clamp, Wire	1
20	235084	Bracket, Adjusting Screw	1
21	235085	Spacer	1
22	236249	Bracket, Speed Control	1
23	275690	Washer, Tension	1
		IGNITION – GROUP 18	
1	X-25-52	Washer	2
2	X-67-59	Screw, Sht. Mtl.	1
3	X-131-1	Screw, F.H.M.	4
4	X-174-2	Screw, H.C.	2
5	4741104	Rod, Breaker	1
6	X-728-1	Clip	1
7	X-778-1	Screw, R.H.	4
8	52 041 11	Gasket, Breaker	1
9	238057	Lead, High Tension	1
10	232535	Cover, Breaker	1
11	237429	Connector	1
12	275303	Clip	1
13	237878	Stator	1
14	235041-S	Plug, Spark	1
15	47 150 03	Breaker	1
16	230722	Condenser	1
17	231281	Coil	1
18	41 403 06	Rectifier-Regulator	1
		OIL PAN – GROUP 21	
1	X-159-3	Screw, H.C.	4
2	235057	Gasket, Pan	1
3	235115	Base, Oil Pan	1
		PISTON & ROD – GROUP 22	
1	A-237344	Rod, Connecting – Std.	1
2	48 074 21	Piston Assembly – Std.	1
3	236763	Ring Set – Std. & .003	1
4	47 018 01	Retainer	2
	47 522 34	Short Block	1
	B-237835	Miniblock	1
	47 755 08	Gasket Set w/Seals	1
	47 004 01	Gasket Set w/o Seals	1

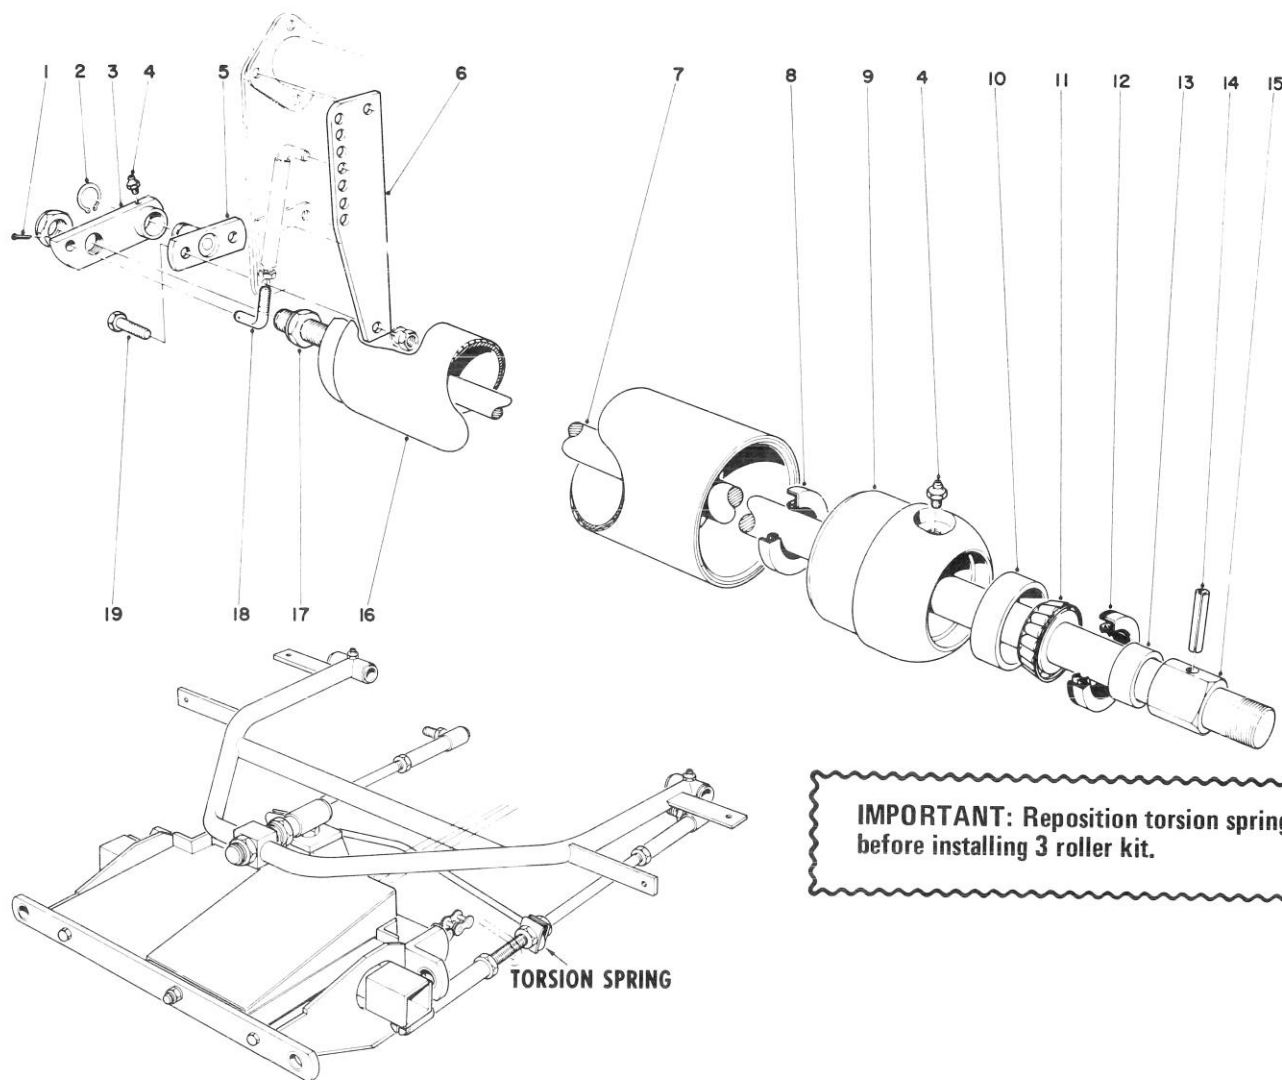 

REAR ROLLER-KIT 3 ROLLERS (Optional)

Ref. No.	Part No.	Description	No. Used
1	3276-6	Pin, Cotter	6
2	32120-93	Ring, Retaining	6
3	5-4042	Hanger Bracket #2 & #3 Cutting Units (Left)	2
4	302-5	Fitting, Grease	12
5	5-4045	Pivot Bracket	6
6	5-4033	Bracket, Height Adj.	6
7	5-4041	Shaft, Roller	3
8	253-122	Seal, Oil	6
9	5-4035	Cap, End	6
10	254-79	Cup, Bearing	6
11	254-78	Cone, Bearing	6

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
12	253-117	Seal, Oil	6
13	5-4038	Wear Sleeve	6
14	32121-24	Pin, Roll	3
15	5-4040	Nut — Adjusting	3
16	5-4034	Roller Ass'y (Complete (Incl. Ref. #4 & 7-15 & 17)	3
17	3296-15	Locknut	9
18	5-4048	Rod, Height-of-Cut	6
19	323-7	Capscrew	12
*	5-4050	Hanger Bracket (Right)	3
*	5-4658	Hanger Bracket Assy. #1 Cutting Unit (Left)	1

INSTALLATION INSTRUCTIONS

1. Mount pivot bracket (ref. no. 5) to side plate and secure with capscrews (ref. no. 19).
2. Slip hanger bracket (ref. no. 3) onto pivot bracket and secure in place with snap ring (ref. no. 2).
3. Screw roller axle (ref. no. 7) into hanger bracket and secure with locknut (ref. no. 17).
4. Lubricate roller with a good grade of gun grease every 30 days.

The Toro Promise

A ONE YEAR LIMITED WARRANTY ON COMMERCIAL PRODUCTS OTHER THAN WALK ROTARY MOWERS, TRIMMERS AND BLOWERS.

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Commercial Products 1 Year

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers, trimmers and blowers.

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Commercial Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Super Pro has two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is located on left hand side of sulky mounting tube. In any correspondence concerning the Super Pro, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Distributor, supply the following information:

1. Model and serial number of the Super Pro.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the **PART NUMBER**.

INDEX

Description	Page	Description	Page
Gas Tank, Hood, and		Winch Assembly No. 38-6150	16
Instrument Panel Assembly	1-2	Electrical Schematic	17
Main Frame Assembly	3-4	No. 1 Cutting Unit Assembly	18-19
Engine Assembly	5-6	No. 2 Cutting Unit Assembly	20-21
Transaxle and Frame Assembly	7-9	No. 3 Cutting Unit Assembly	22-23
Transaxle Assembly No. 2307-C.	10-11	Kohler Engine Model K321S	
Intermediate Frame and Bail Assembly	12-13	Type 60387	24-27
Sulky Assembly	14-15	Rear Roller-Kit 3 Rollers (optional)	28

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]