




PARKMASTER 7
MODEL NO. 33677 - 10001 & UP
PARKMASTER 9
MODEL NO. 33699 - 10001 & UP

PARTS CATALOG


PARKMASTER 7 AND 9 DIESEL

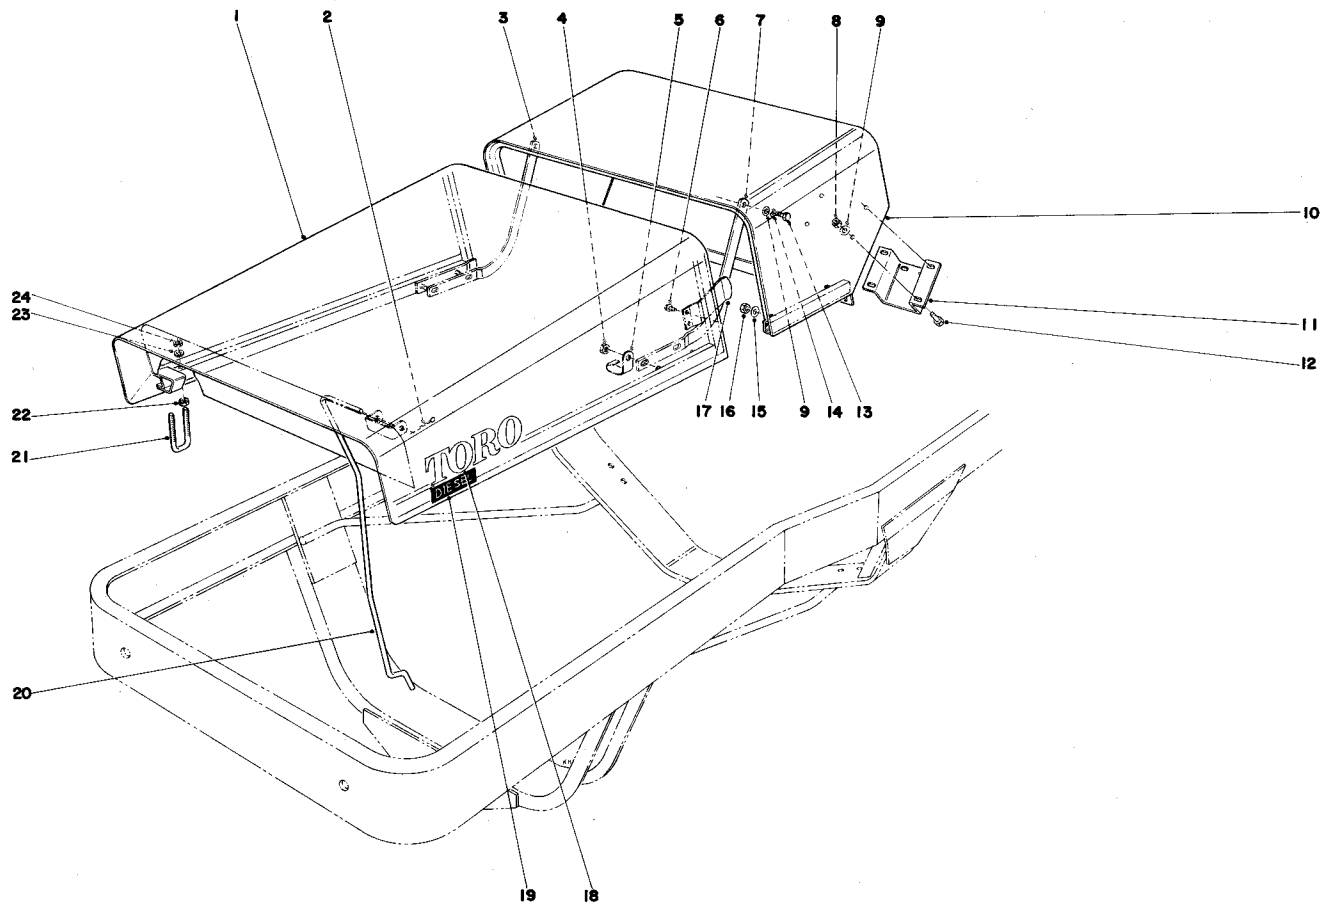

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-0630	Hood	1
2	3272-9	Cotter Pin	1
3	18-0760	Pivot Arm R.H.	1
4	32128-29	Locknut	4
5	18-1270	Hood Clip	1
6	32140-32	Screw	4
7	18-0750	Pivot Arm L.H.	1
8	32146-5	Locknut	4
9	3256-23	Flat Washer	6
10	18-0560	Cowl	1
11	18-0770	Steering Column Support	1
12	322-2	Capscrew	4

Ref. No.	Part No.	Description	No. Used
13	322-1	Capscrew	2
14	3253-4	Lockwasher	2
15	3256-24	Flat Washer	4
16	32146-2	Locknut	4
17	18-3230	Hood Support Spring	2
18	18-2180	Decal - Hood	2
19	19-6060	Decal - Diesel	2
20	19-2970	Hood Prop	1
21	18-1290	U-Bolt	2
22	3218-1	Jam Nut	4
23	3253-3	Lockwasher	4
24	3217-5	Nut	4

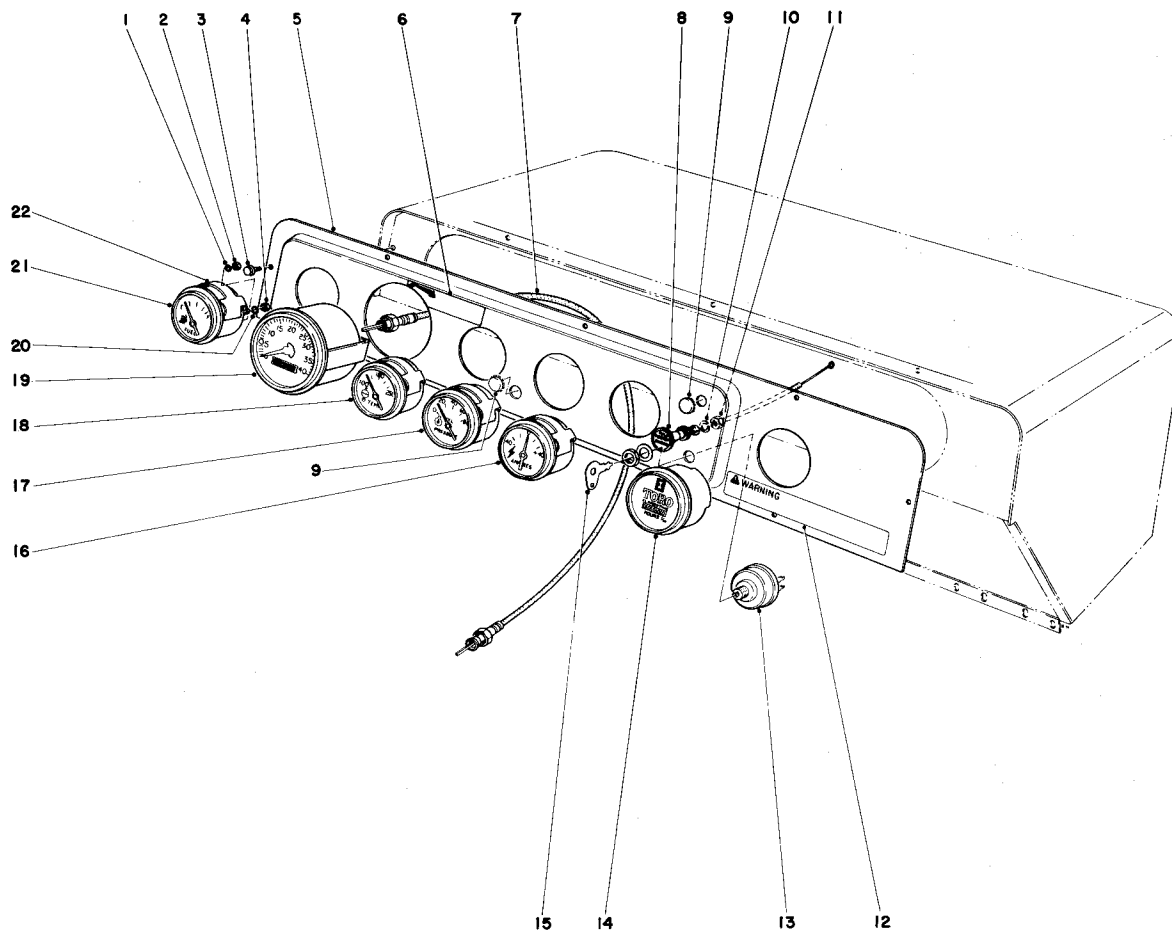


DASH ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	3253-17	Lockwasher	8
2	3219-14	Nut	8
3	32104-77	Screw Self Tapping	8
4	3217-29	Nut	8
5	18-1390	Instrument Panel	1
6	28-1030	Decal — Caution	1
7	18-2670	Flexible Shaft	1
8	19-2930	Fuel Shut-Off Cable	1
9	2410-13	Plug Button	2
10	3253-21	Lockwasher	1
11	3220-3	Jam Nut	1
12	39-3680	Warning Decal	1

Ref. No.	Part No.	Description	No. Used
13	12-8140	Ignition Switch	1
14	12-9990	Hour Meter	1
15	218-412	Key (Set of 2)	1
16	38-1660	Ammeter	1
17	38-1630	Oil Pressure Gauge	1
18	38-1640	Water Temperature Gauge	1
19	18-2230	Speedometer	1
20	3254-9	Lockwasher	8
21	38-1650	Fuel Gauge (Incl. Ref. #22)	1
22		Mounting Bracket	4
*	38-1940	Wiring Harness	1

*Not Illustrated

ELECTRICAL SCHEMATIC (12 Volt, Negative Ground)

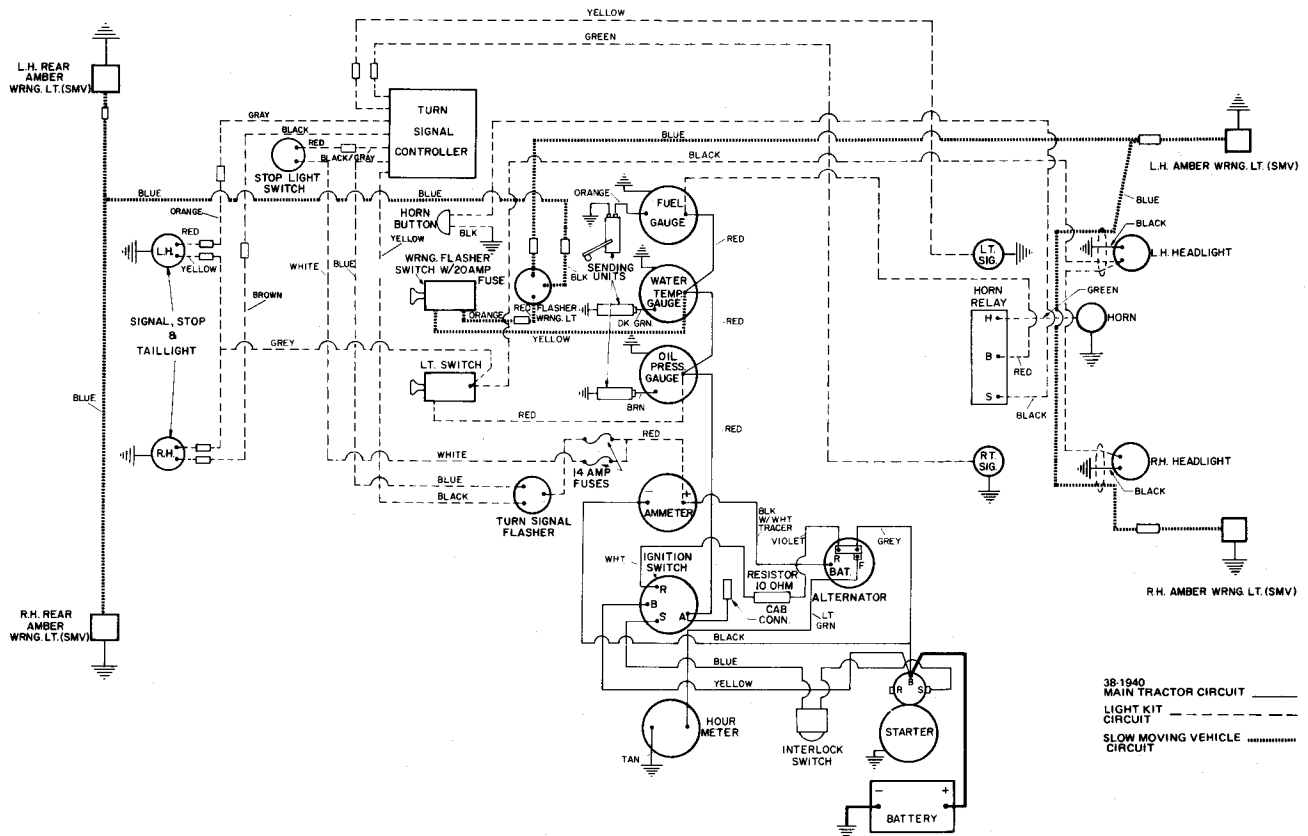

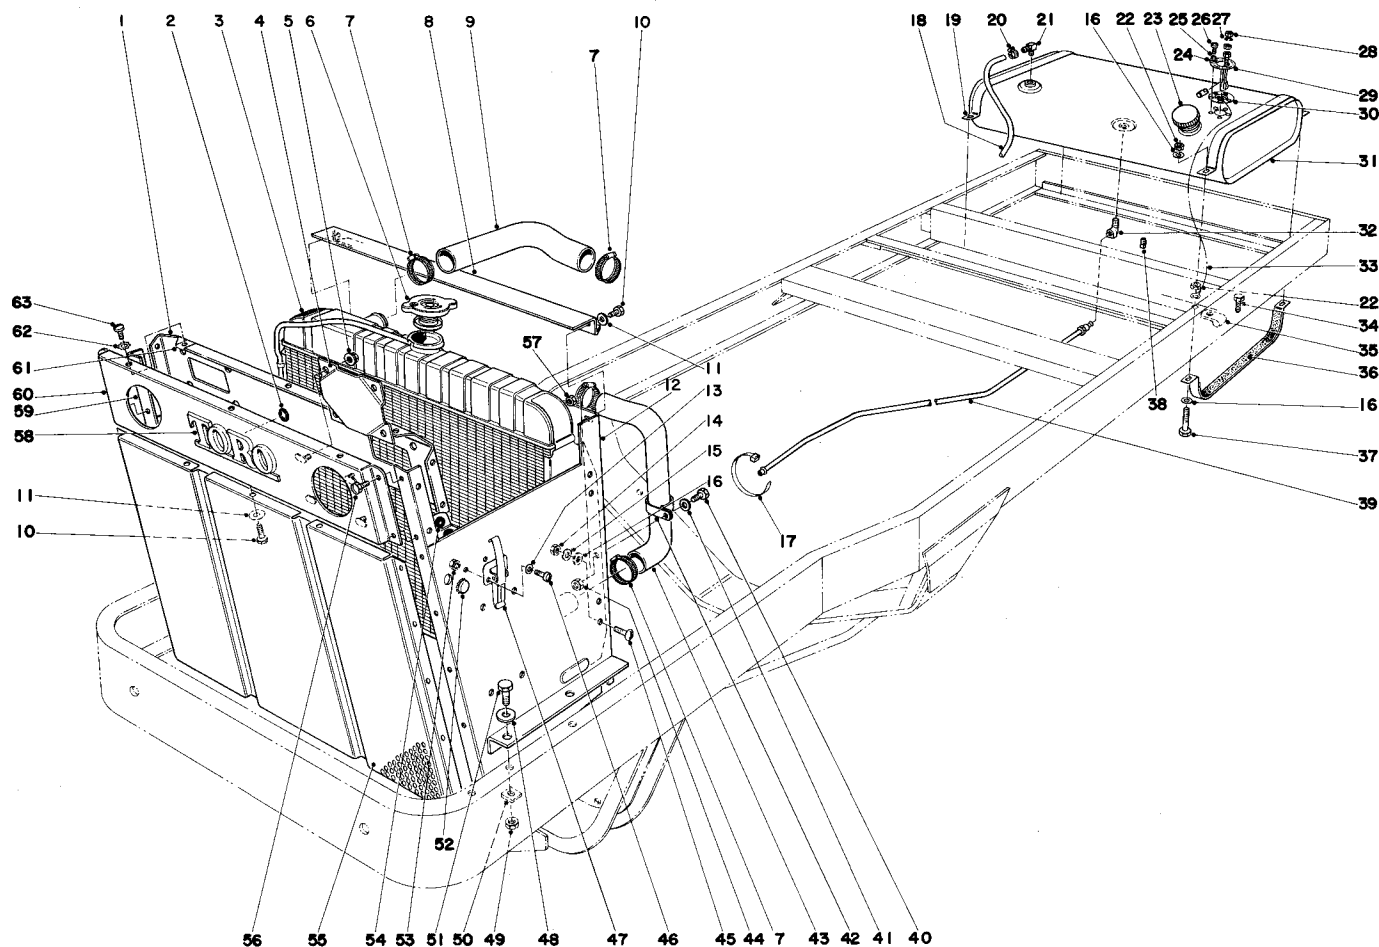


RADIATOR AND FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-1020	Headlight Cover	1
2	3290-363	Tinnerman Clip	5
3	19-3080	Radiator	1
4	18-4350	Headlight Hole Cover	2
5	32128-17	Flange Nut	8
16	861042	Radiator Cap AC (15 P.S.I.)	1
7	2412-3	Hose Clamp	4
8	19-3040	Brace Front Side Plate	1
9	19-3550	Upper Radiator Hose	1
10	321-2	Capscrew	7
11	3256-22	Flat Washer	7
12	19-3010	Front Side Panel, L.H.	1
13	3253-17	Lockwasher	4
14	3217-6	Nut	8
15	3253-4	Lockwasher	8
16	3256-23	Flatwasher	16
17	3290-336	Locking Strap	2
18	19-3260	Hose — Bleed Off	1
19	36-8280	Fuel Tank Strap	4
20	2412-36	Clamp	1
21	304-75	Fitting	1
22	32146-5	Locknut	8
23	222-8	Gas Cap	1

Ref. No.	Part No.	Description	No. Used
24	237-49	Nylon Washer	5
25	3254-1	Lockwasher	5
26	3252-16	Machine Screw	5
27	3255-17	Lockwasher	1
28	3219-14	Nut	1
29	18-2370	Fuel Sender	1
30	18-2380	Gasket	1
31	36-8290	Fuel Tank (Incl. Ref. #23)	1
32	27-0130	90° Elbow Assembly	1
33	3-3868	Ground Wire	1
34	32104-32	Self Tapping Screw	1
35	18-2970	Clamp	1
36	3-3824	Felt Strip	4
37	3290-319	Machine Screw	4
38	281-5	Square Head Pipe Plug	1
39	19-3240	Fuel Line	1
40	323-4	Capscrew	1
41	3256-24	Flat Washer	1
42	2412-44	Hose Clamp	1
43	19-3560	Lower Radiator Hose	1
44	32146-2	Nut	1
45	32122-14	Machine Screw	8
46	3252-2	Screw	4


†Obtain from your local auto supply store

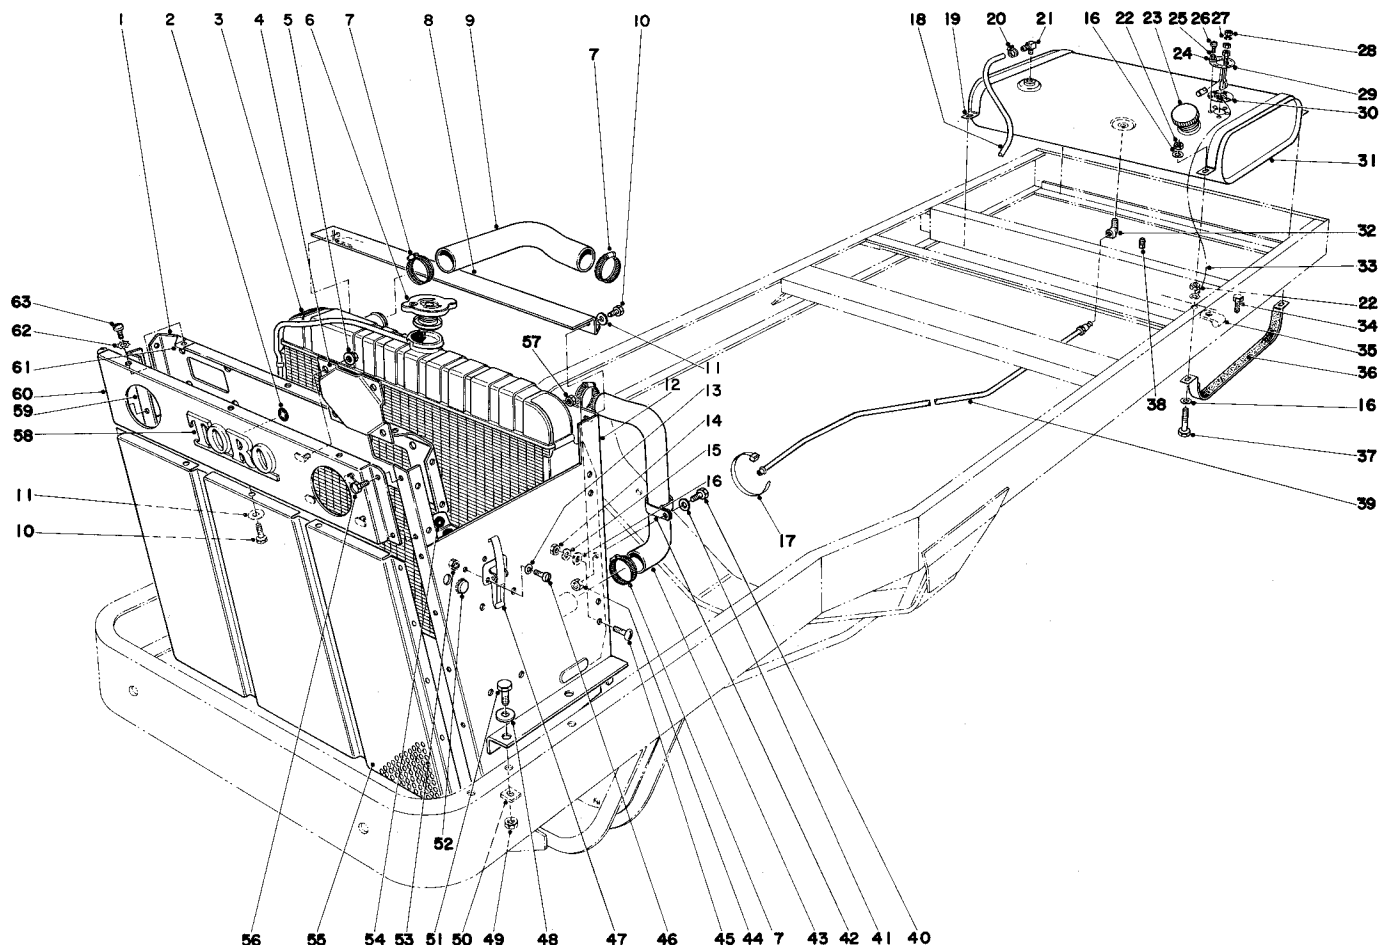

RADIATOR AND FUEL TANK ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	249-10	Hood Clamp	2
48	3256-26	Flat Washer	4
49	32146-13	Locknut	4
50	3290-216	Bevel Washer	4
51	325-6	Capscrew	4
52	2410-13	Plug Button	2
53	3217-26	Nut	4
54	237-37	Rubber Bumper	4
55	18-0960	Grille	1

Ref. No.	Part No.	Description	No. Used
56	32140-42	Self-Tapping Screw	14
57	32146-17	Locknut	4
58	25-9650	Toro Emblem	1
59	19-2980	Front Side Panel, R.H.	1
60	37-2230	Headlight Panel	1
61	3290-192	Tinnerman Clip	7
62	3255-7	Washer	7
63	3290-145	Screw	7

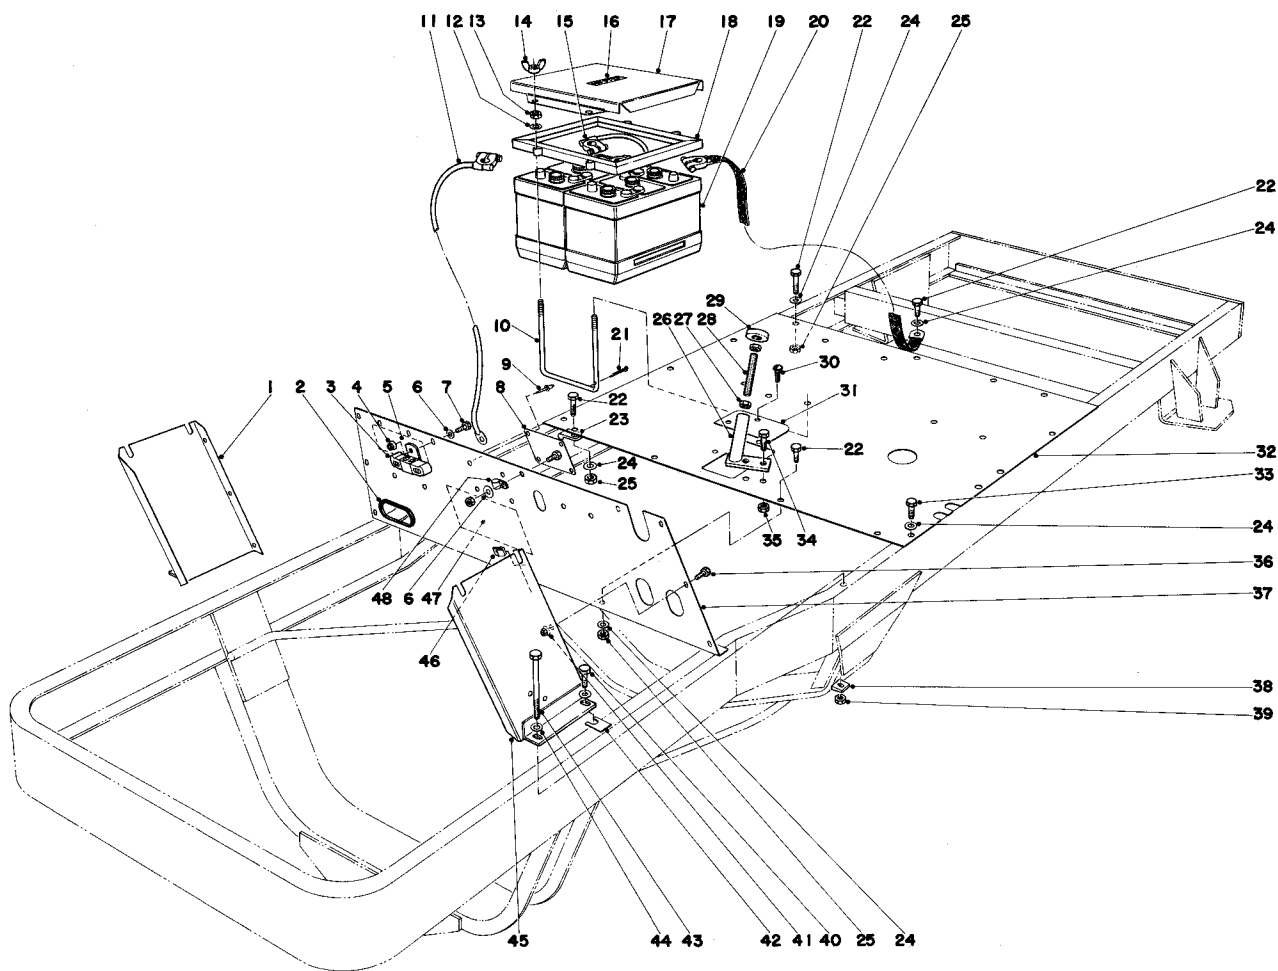


TOE BOARD AND BATTERY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-0800	Rear Side Plate R.H.	1
2	18-2310	Grommet	1
3	18-2680	Resistor (10 ohm)	1
4	32146-17	Locknut	1
5	43-8460	Name Plate	1
6	3256-22	Flat Washer	2
7	321-4	Capscrew	1
8	18-3200	Instruction Plate	1
9	3290-56	Pop Rivet	6
10	19-3180	U-Bolt	2
11	19-3220	Cable (Hot)	1
12	3256-23	Flat Washer	4
13	3217-6	Nut	4
14	32103-2	Wing Nut	4
15	19-3210	Cable-Jumper	1
16	3-5582	Decal	1
17	19-3520	Battery Cover	1
18	19-3140	Hold Down	1
*19		Battery SAE Size 1M4 (6 Volt)	2
20	19-3200	Ground Cable	1
21	3272-6	Cotter Pin	2
22	323-5	Capscrew	5
23	18-2970	Clip Fuel Line	1
24	3256-24	Washer	11

Ref. No.	Part No.	Description	No. Used
25	32146-2	Locknut	5
26	10-3150	Foot Rest	1
27	3219-2	Jam Nut	2
28	5-2973	Rod	1
29	5-2967	Button	1
30	32104-77	Self Tapping Screw	6
31	36-9440	Plate Closure	1
32	36-9480	Floor Plate	1
33	32104-6	Self Tapping Screw	6
34	322-3	Capscrew	2
35	32146-5	Locknut	2
36	3290-321	Capscrew	9
37	18-0850	Toe Board	1
38	3290-216	Bevel Washer	3
39	32146-13	Locknut	4
40	325-9	Capscrew	3
41	32128-17	Flanged Locknut	9
42	20-5040	Shim	A/R
43	325-23	Capscrew	1
44	3256-26	Washer	4
45	18-0790	Rear Side Plate L.H.	1
46	218-214	Tinnerman Clip	1
47	38-1690	Starting Instructions	1
48	2412-10	Clamp	1


*Obtain locally

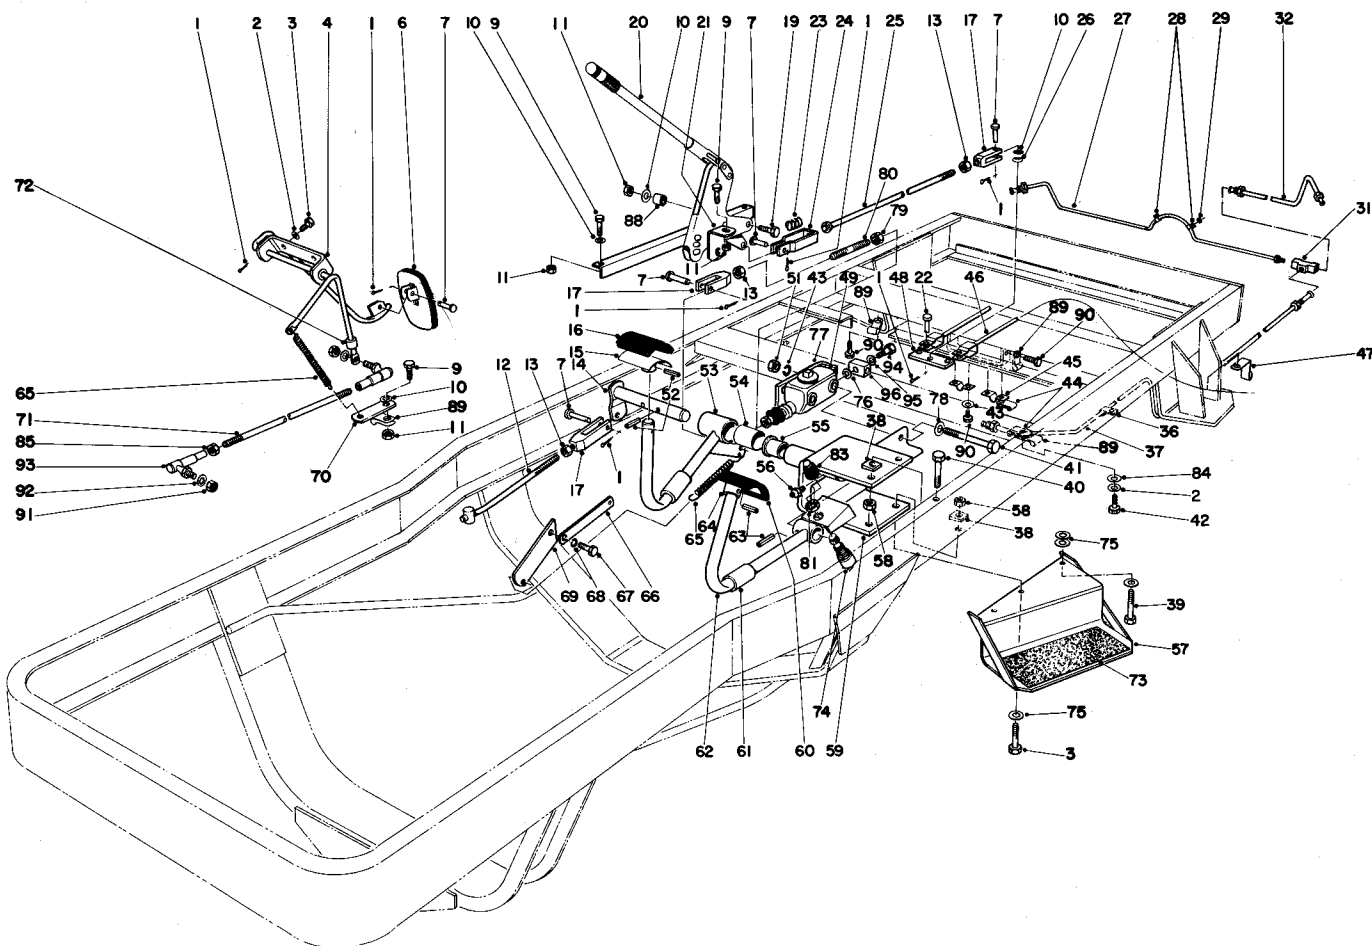

BRAKE, CLUTCH, THROTTLE CONTROLS

Ref. No.	Part No.	Description	No. Used
1	3272-6	Cotter Pin	9
2	3253-4	Lockwasher	3
3	32104-32	Self Tapping Screw	2
4	19-2950	Foot Throttle	1
6	10-2670	Accelerator Pedal	1
7	283-2	Clevis Pin	5
9	323-5	Capscrew	4
10	3256-24	Flatwasher	6
11	32146-2	Locknut	6
12	19-3090	Clutch Link	1
13	3220-3	Jam Nut	3
14	18-1160	Pedal Shaft	1
15	10-0670	Pedal	1
16	7-3900	Brake Pad	1
17	282-1	Clevis	3
19	323-7	Capscrew	2
20	36-9270	Parking Brake	1
21	18-3260	Parking Brake Bracket	1
22	283-1	Yoke Pin	2
23	3-1768	Compression Spring	1
24	3-5300	Front Clevis	1
25	3-1772	Brake Rod	1
26	3290-211	Spring Washer	1


Ref. No.	Part No.	Description	No. Used
27	37-3330	Brake Tube Ass'y., L.H.	1
28	3-3075	Clip	2
29	3254-6	Lockwasher	2
31	304-2	Tee	1
32	37-3340	Brake Tube Ass'y., R.H.	1
36	212-93	Clip-Wire	3
37	42-3700	Brake Tubing Assembly	1
38	3290-216	Bevel Washer	5
39	325-7	Capscrew	3
40	325-6	Capscrew	2
41	323-20	Capscrew	2
42	322-1	Capscrew	1
43	3253-21	Lockwasher	6
44	18-2970	Fuel Line Clip	2
45	215-23	Clamp	2
46	36-9730	Cable Assembly	2
47	37-9840	Support Brake Line	2
48	3-3137	Plate — Equalizer	1
49	37-4180	Master Cylinder (Incl. Ref. #76)	1
51	3217-7	Nut	2
52	32121-34	Retaining Pin	3
53	3-8760	Brake Pedal & Bushing Assembly (Incl. Ref. #54)	1

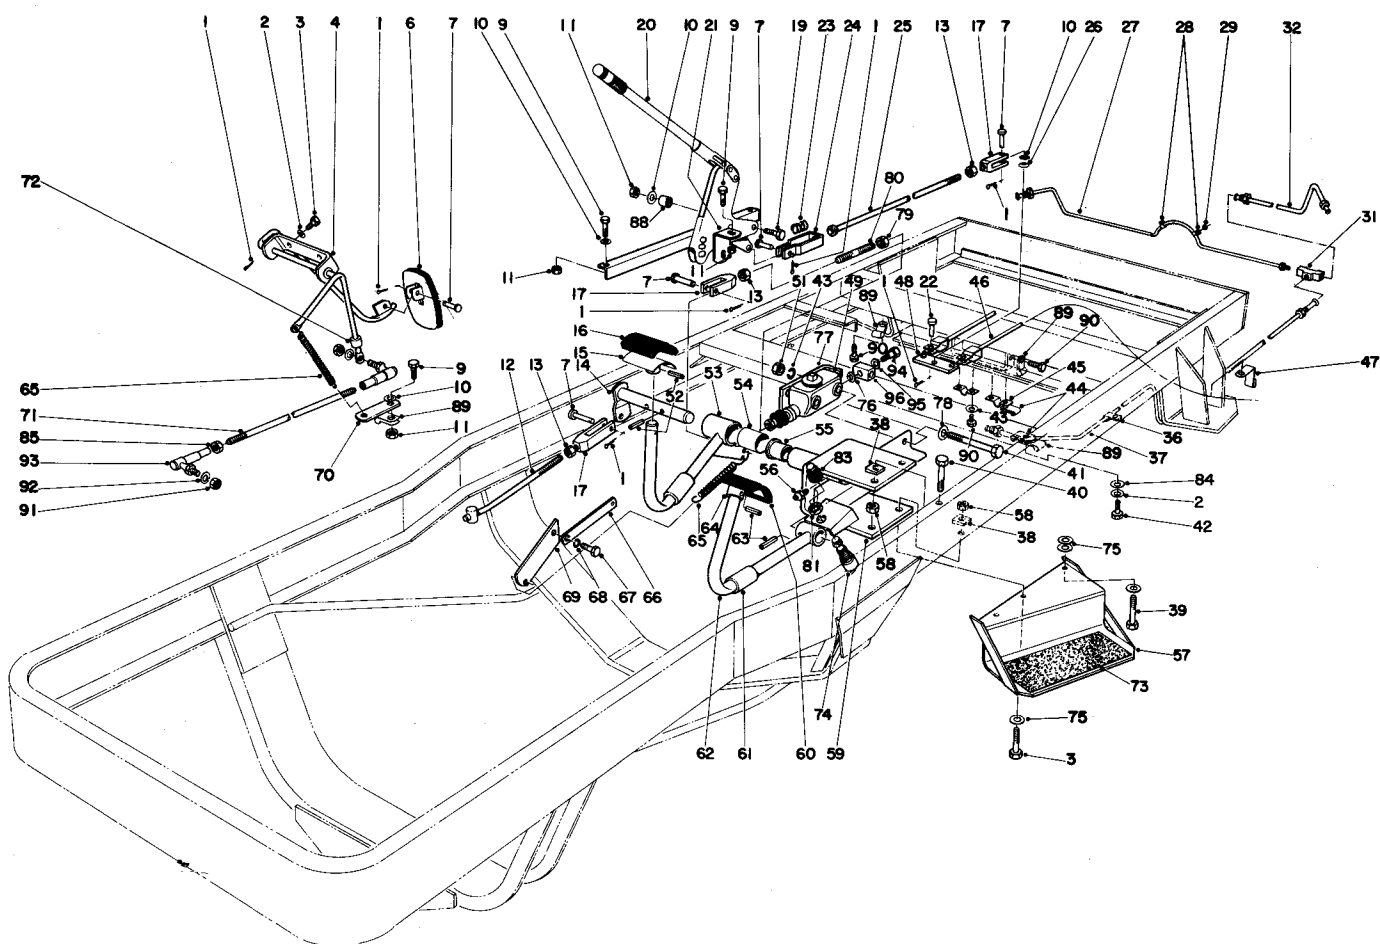

BRAKE, CLUTCH, THROTTLE CONTROLS (Continued)

Ref. No.	Part No.	Description	No. Used
54	256-143	Bushing	1
55	256-10	Bushing	2
56	302-5	Grease Fitting	1
57	33-2190	Step	1
58	32146-13	Lock Nut	5
59	37-3120	Pedal Shaft Bracket Assembly (Incl. Ref. #55)	1
60	7-3901	Clutch Pad	1
61	3-3107	Rubber Bumper	2
62	3-3750	Clutch Pedal	1
63	32121-34	Roll Pin	2
64	10-0680	Pedal Pad	1
65	5-1706	Throttle Return Spring	2
66	18-1050	Return Spring Bracket	1
67	322-3	Capscrew	2
68	3253-4	Lockwasher	2
69	19-3710	Clutch Return Spring Bracket	1
70	38-2090	Throttle Spring Bracket	1
71	19-3380	Rod — Foot Throttle	1
72	18-2860	Foot Throttle Bumper	1
73	33-2230	Pad Step	1


Ref. No.	Part No.	Description	No. Used
74	23-8010	Interlock Switch (Incl. Ref. #81 & 83)	1
75	3256-26	Washer	5
76	353-689	Sealing Washer	1
77	42-3690	Shield — Brake Fitting	1
78	3256-3	Flat Washer	2
79	3218-3	Jam Nut	1
80	37-2060	Shaft — Brake Cylinder	1
81	218-461	Nut	2
83	39-0770	Rubber Boot	1
84	3256-23	Washer	1
85	3220-1	Jam Nut	2
88	37-1530	Spacer	2
89	2412-10	Clamp	4
90	32104-6	Self-Tapping Screw	6
91	3219-1	Nut	2
92	3253-3	Lockwasher	2
93	18-1720	Ball Joint	2
94	42-3720	Connection Bolt	1
95	42-3730	Inlet Connecting Gasket	1
96	42-3710	Fitting	1

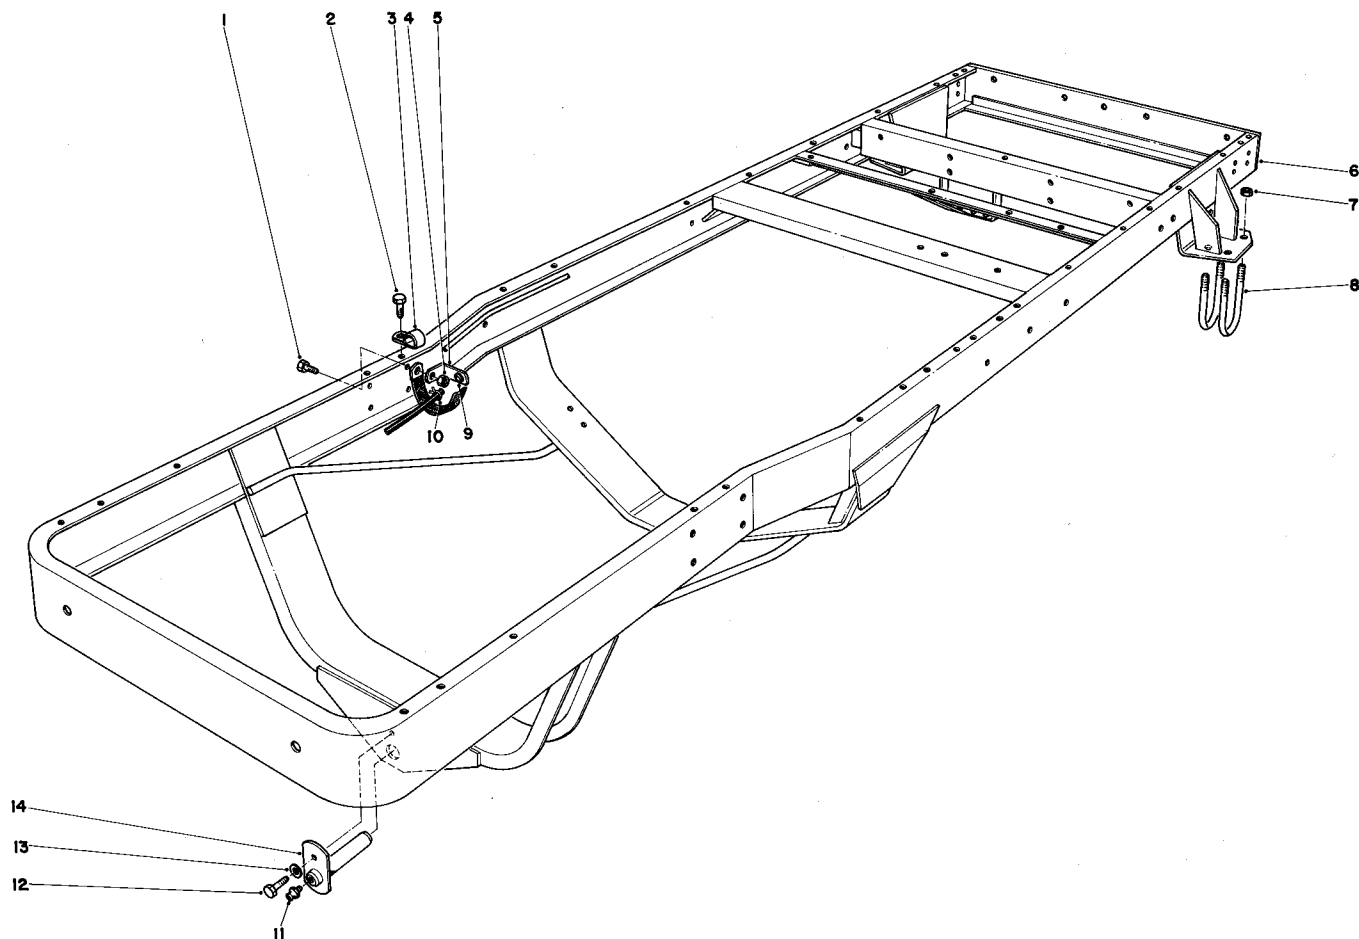

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-4	Capscrew	1
2	32144-13	Capscrew	1
3	304-61	Clamp	1
4	32146-13	Locknut	1
5	18-2730	Support Fuel Line	1
6	26-8550	Frame	1
7	3296-24	Locknut	8

Ref. No.	Part No.	Description	No. Used
8	37-4230	U-Bolt	4
9	237-73	Grommet	1
10	2412-73	Hose Clamp	1
11	302-2	Grease Fiting	1
12	32104-6	Screw	1
13	3256-24	Flat Washer	1
14	3-3760	Pivot Pin	1

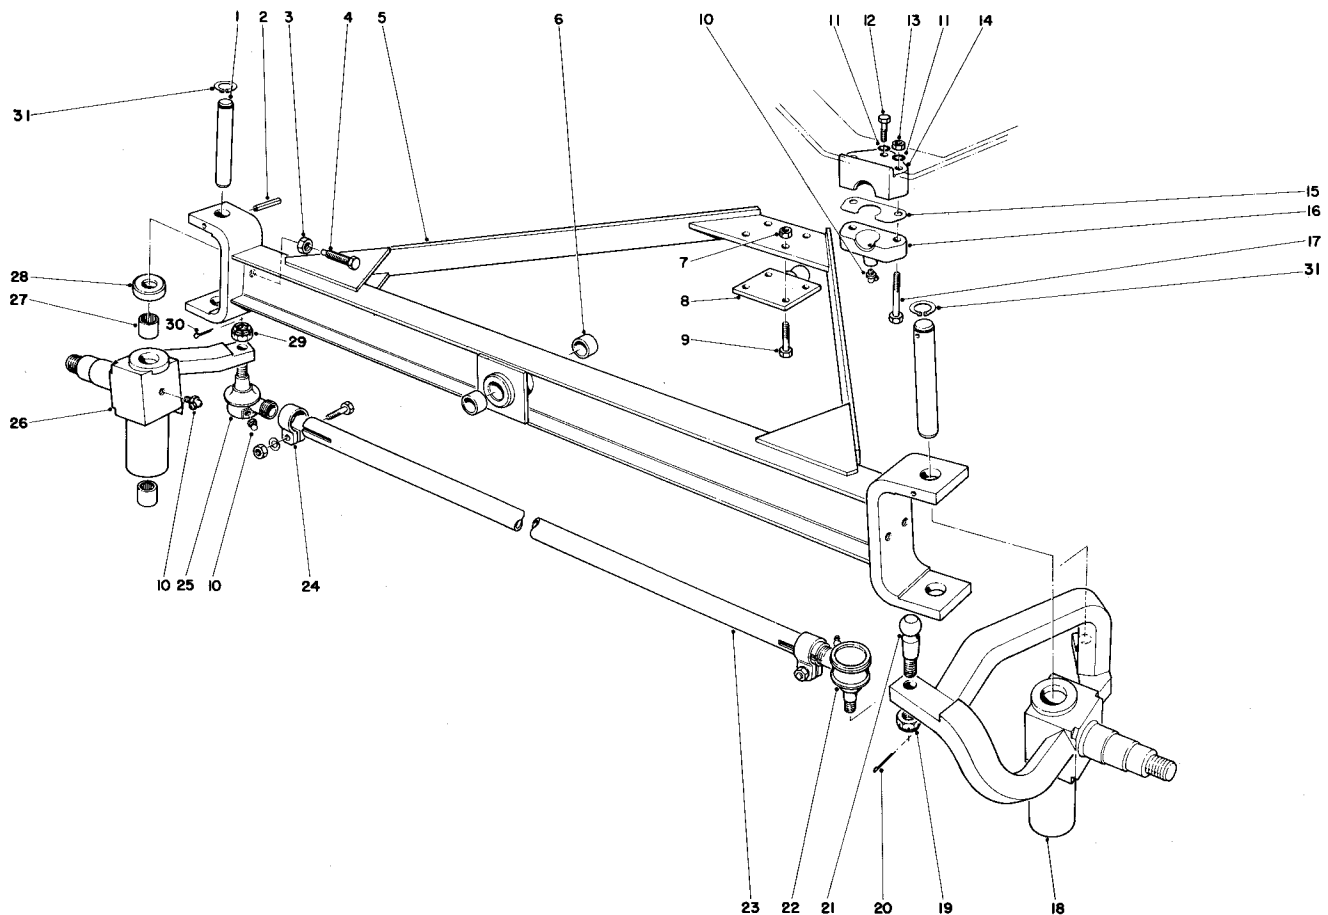


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	24-6900	Spindle Pin	2
2	32121-34	Roll Pin	4
3	3218-5	Jam Nut	3
4	32102-14	Set Screw	3
5	26-2320	Front Axle	1
6	256-126	Bushing	2
7	32146-13	Locknut	4
8	12-0360	Pivot Block	1
9	325-7	Capscrew	4
10	302-33	Grease Fitting	5
11	3253-8	Lockwasher	3
12	327-4	Capscrew	1
13	3219-6	Nut	2
14	3-2968	Lower Ball Socket	1
15	3-3825	Shim	A/R
16	3-2967	Upper Ball Socket	1

Ref. No.	Part No.	Description	No. Used
17	3214-13	Capscrew	2
18	23-5300	Spindle L.H.	1
19	32136-3	Slotted Nut	1
20	3272-7	Cotter Pin	1
21	5-2966	Ball Stud	1
22	2116-3	Ball Joint L.H.	1
23	3-3710	Tie Rod Ass'y. (Incl. Ref. #10, 22, 24, 25 & 29)	1
24	2412-7	End Clamp	2
25	2116-4	Ball Joint R.H.	1
26	20-9900	Spindle R.H.	1
27	252-52	Needle Bearing	4
28	251-32	Thrust Bearing	2
29	32136-2	Slotted Nut	2
30	3272-17	Cotter Pin	2
31	32151-36	Retaining Ring	2



Ref. No.	Part No.	Description	No. Used
8	232-27	Valve Stem	2
9	3272-23	Cotter Pin	2
10	217-33	Hub Cap	2
11	32136-1	Slotted Hex Nut	2
12	3256-9	Washer	2
13	254-42	Outer Bearing Cone	2
14	217-34	Wheel Bolt	12

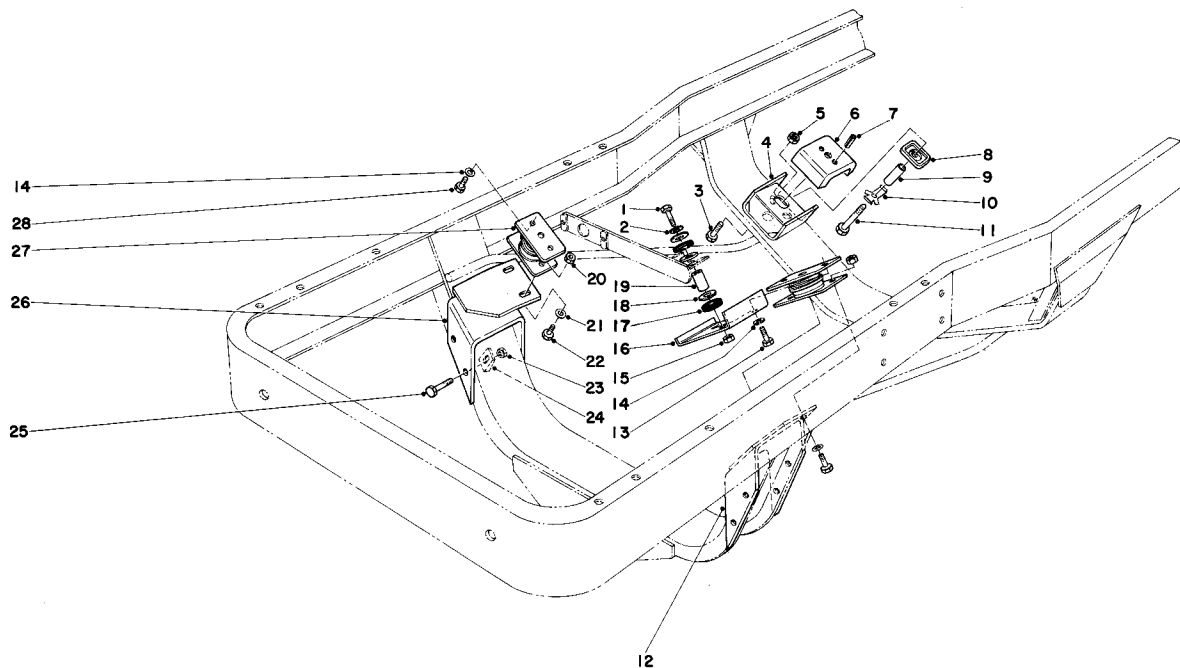


ENGINE MOUNTING COMPONENTS

Ref. No.	Part No.	Description	No. Used
1	324-23	Capscrew	1
2	3256-25	Flat Washer	1
3	3213-3	Capscrew	4
4	19-3490	Engine Mount Rear	2
5	32128-15	Flange Nut	4
±6	3705444	Upper Mount	2
7	32121-46	Roll Pin	2
±8	14009321	Lower Mount	2
±9	14009322	Spacer	2
±10	3763763	Lock	2
11	325-14	Capscrew	2
12	19-3340	Front Engine Mount L.H.	1
13	3211-4	Capscrew	2
14	3253-21	Lockwasher	4
15	3296-48	Locknut	1

Ref. No.	Part No.	Description	No. Used
16	19-3540	Plate - Torque Arm	1
17	3-3461	Washer Rubber	2
18	3256-27	Flat Washer	3
19	19-3970	Spacer	1
20	32146-2	Locknut	4
21	3256-24	Flat Washer	4
22	323-6	Capscrew	4
23	32146-13	Locknut	8
24	3290-216	Bevel Washer	8
25	325-6	Capscrew	8
26	19-3300	Front Engine Mount R.H.	1
†27	0550053	Front Engine Mount	2
28	3211-2	Capscrew	2

†Obtain from your local Perkins Dealer

±Obtain from your local GM, Chevrolet Dealer.

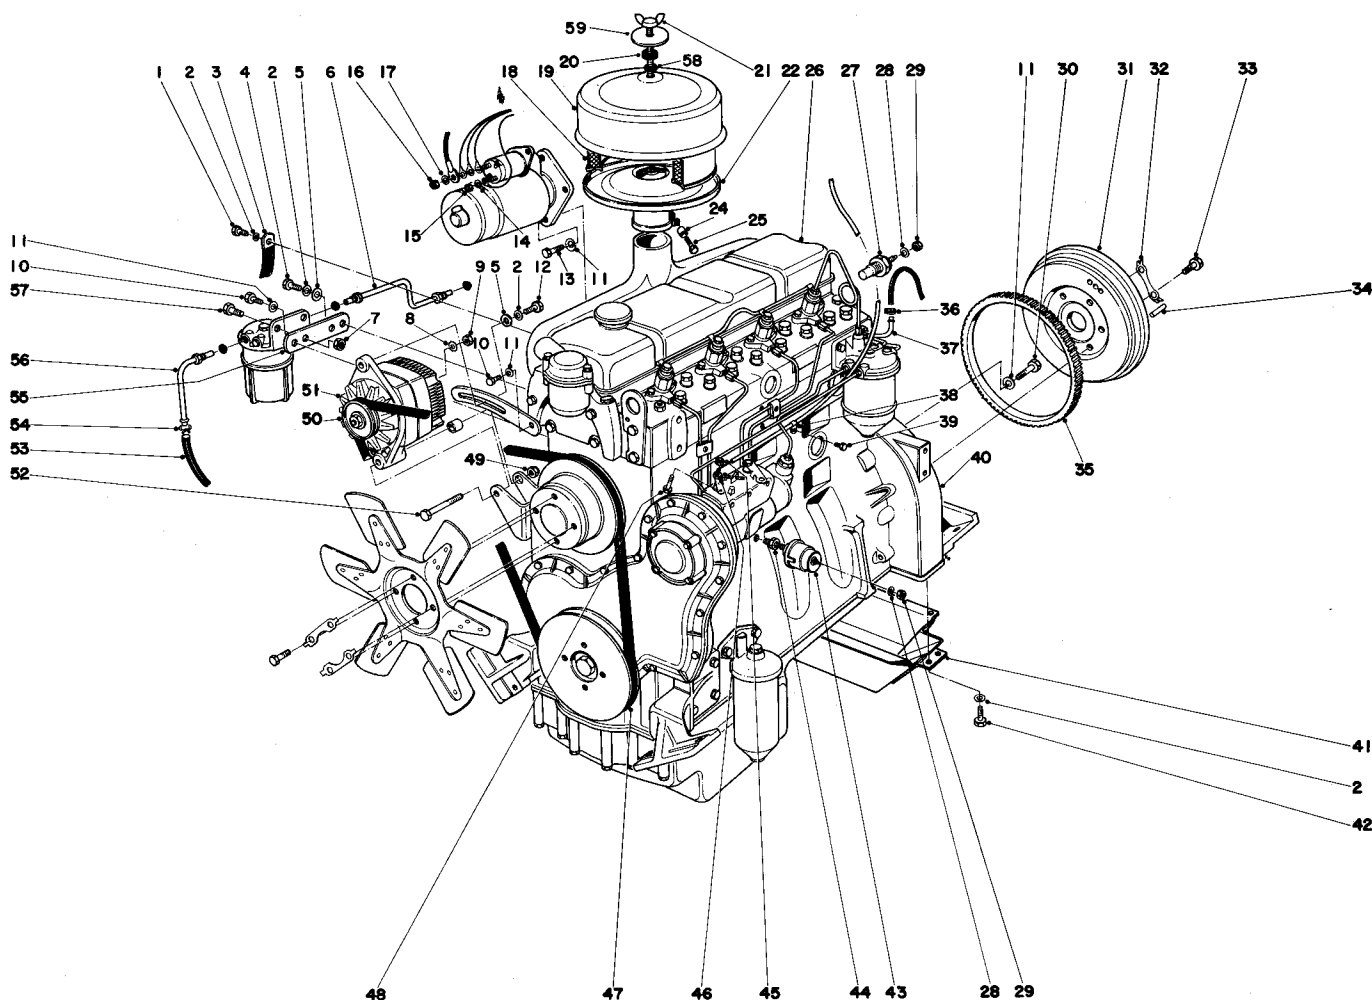


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3210-2	Capscrew	1
2	3253-4	Lockwasher	7
3	18-2770	Cable Ground	1
4	3210-3	Capscrew	1
5	3256-23	Flat Washer	2
6	19-3750	Fuel Line	1
7	32146-2	Locknut	2
8	3254-8	Lockwasher	1
9	39-7530	Nut	1
10	3211-2	Capscrew	2
11	3253-21	Lockwasher	11
12	21-0350	Capscrew	1
13	3219-3	Nut	3
14	3255-20	Washer	1
15	3217-25	Nut	1
16	3218-3	Jam Nut	1
17	3255-9	Lockwasher	1
18	226-11	Cartridge	1
19	226-12	Air Cleaner Cover	1
20	226-10	Gasket	1
21	226-13	Wing Bolt	1
22	42-1580	Air Cleaner Base (Incl. Ref.#21)	1
24	22-7810	Spacer	1

Ref. No.	Part No.	Description	No. Used
25	321-9	Capscrew	1
†26		Perkins Engine (Model 4-236)	1
27	38-1680	Sending Unit — Water Temp.	1
28	3255-17	Lockwasher	2
29	3219-14	Nut	2
30	3211-24	Capscrew	6
†31	31222555	Flywheel	1
†32	0921062	Tab Washer — Flywheel	3
33	3213-1	Capscrew	6
†34	0350025	Dowel Pin	2
†35	0410276	Ring Gear	1
36	2412-36	Clamp	1
37	19-3390	Adapter Fuel Bleed Off	1
38	2412-31	Clamp	1
39	32140-32	Screw	1
40	36-5040	Clutch Housing	1
41	39-7480	Cover Flywheel	1
42	322-4	Capscrew	4
43	18-1760	Sending Unit — Oil Pressure	1
44	353-421	Adapter	1
45	3296-12	Locknut	1
46	3217-26	Nut	1


†Obtain from your local Perkins Dealer

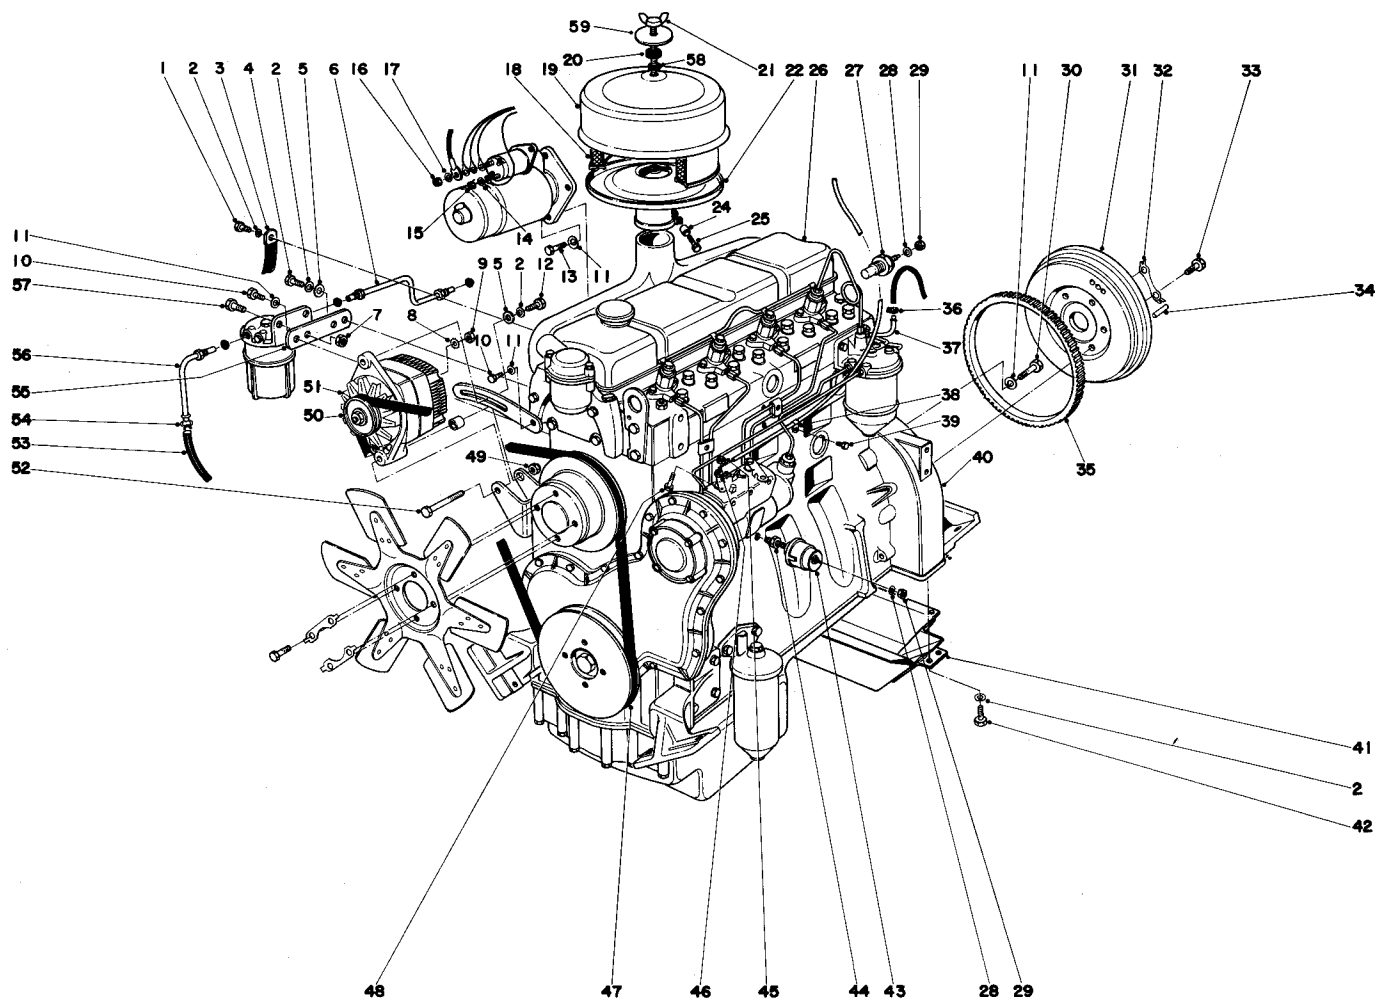

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	19-3480	V-Belt	1
48	3290-134	Machine Screw	1
49	32146-6	Locknut	1
50	19-3470	Pulley	1
51	18-1600	Fan	1
52	3211-15	Capscrew	1
53	19-3250	Hose — Line to Filter	1


Ref. No.	Part No.	Description	No. Used
54	2412-6	Hose Clamp	1
55	19-3680	Mount — Water Trap	1
56	19-3740	Tube — Hose to Water Trap	1
57	323-6	Capscrew	2
58	237-131	O-Ring	1
59	13-3710	Washer	1

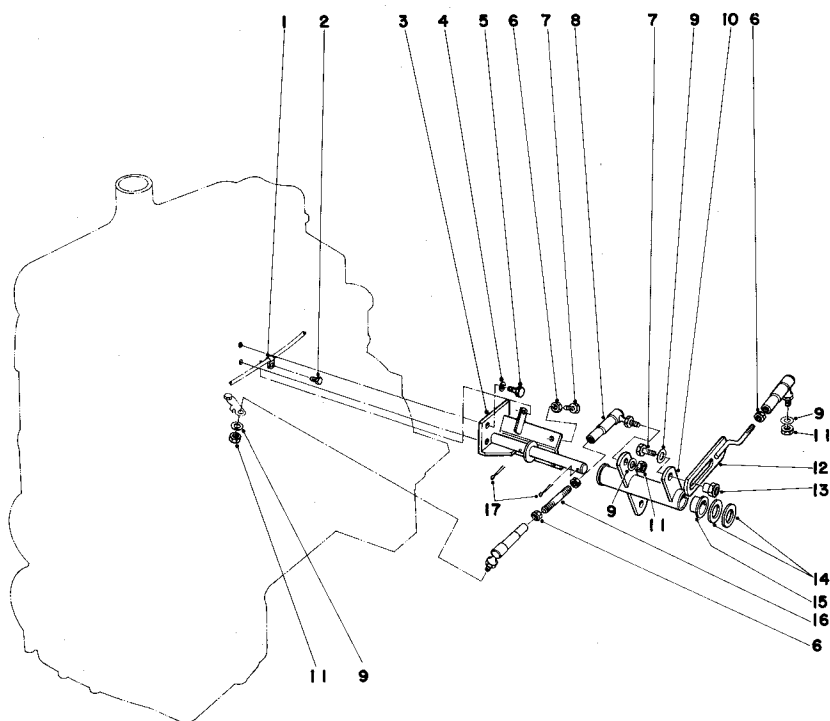

PIVOT SHAFT AND ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2412-31	Support Clamp	1
2	32140-32	Self Tapping Screw	1
3	38-1950	Pivot Shaft	1
4	3253-4	Lockwasher	2
5	3210-3	Capscrew	2
6	3220-1	Jam Nut	5
7	329-4	Capscrew	3
8	18-1720	Ball Joint	3
9	3253-3	Lockwasher	4

Ref. No.	Part No.	Description	No. Used
10	38-1970	Pivot Arm (Incl. Ref. #15)	1
11	3219-1	Nut	3
12	19-3400	Slide - Hand Throttle	1
13	19-3430	Special Nut	1
14	3256-28	Washer	4
15	256-244	Bushing	2
16	19-3850	Rod - Pivot Arm To Inj. Pump	1
17	3272-12	Cotter Pin	2

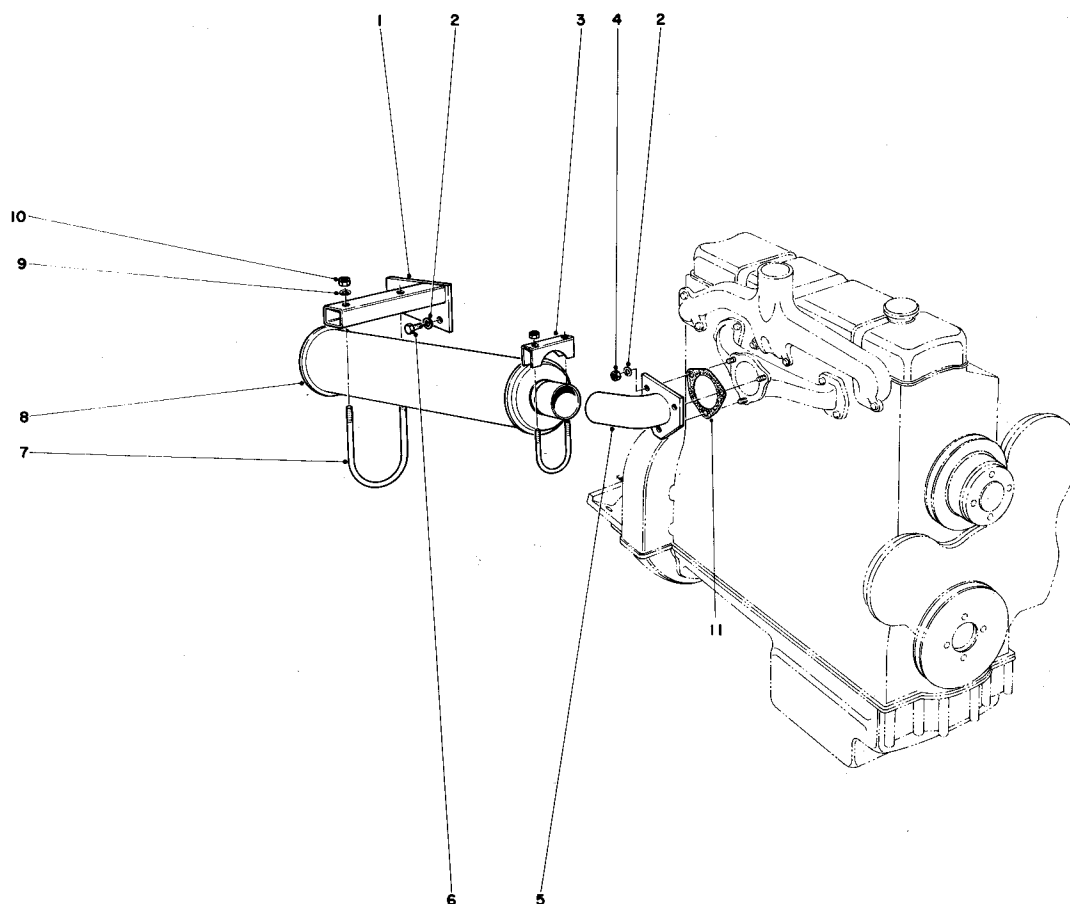


ENGINE EXHAUST ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	36-9450	Muffler Support	1
2	3253-21	Lockwasher	5
3	20-4840	Clamp - Muffler	1
4	3219-3	Nut	3
5	19-8510	Exhaust Elbow	1
6	323-5	Capscrew	2
7	19-7440	U-Bolt	1

Ref. No.	Part No.	Description	No. Used
8	19-3860	Muffler	1
*	37-4250	Spark Arresting Muffler (Optional)	1
9	3256-23	Flat Washer	2
10	32146-5	Lockwasher	2
†11		Gasket (Perkins No. 36822111)	1

*Not Illustrated

†Obtain from local Perkins Dealer.

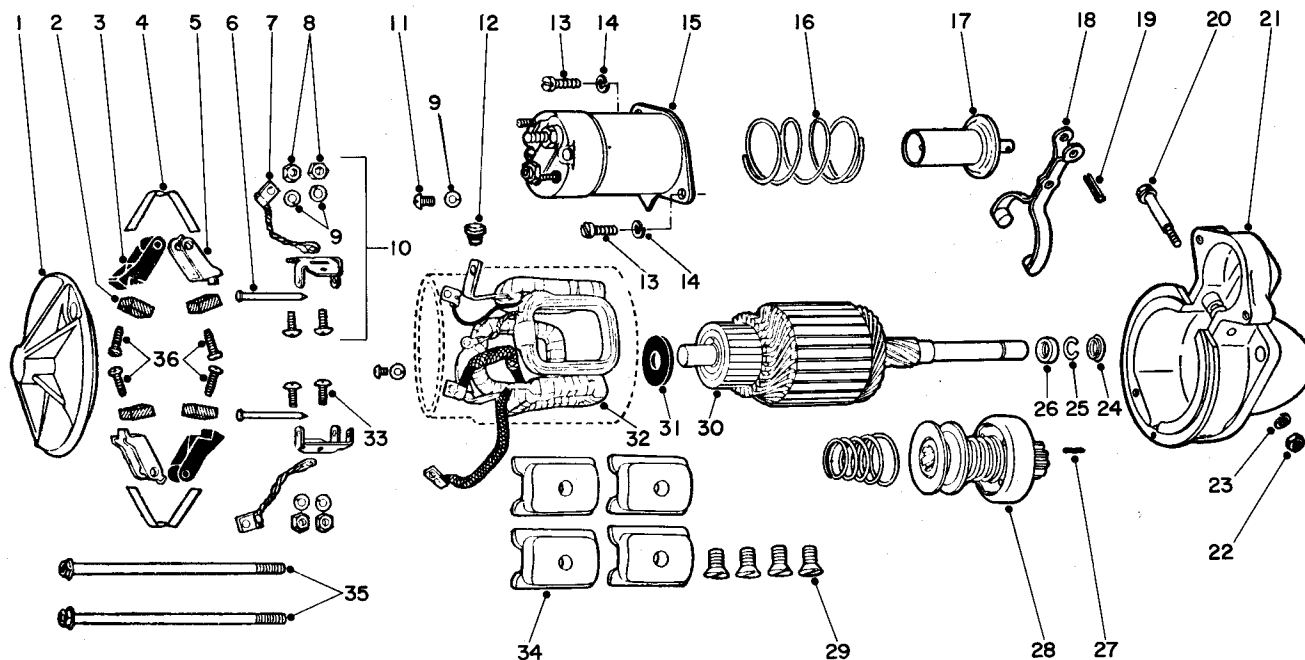


STARTER MOTOR ASSEMBLY NO. 19-3460

Ref. No.	Part No.	Description	No. Used
1	1940385	Frame (Incl. Bushing 1872678)	1
2	1946434	Brushes	4
3	1926618	Holder (Insulation)	2
4	1926622	Springs	2
5	1940477	Holder (Ground)	2
6	1938058	Brush Holder Pin	2
7	1960864	Lead (Ground)	2
8	120361	Brush Holder Nut	4
9	453435	Lockwasher	5
10	1928015	Support Package	2
11	453468	Screw	1
12	1955946	Grommet	1
13	132255	Screw	2
14	9421423	Lockwasher	2
15	1114356	Switch	1
16	1958679	Spring Plunger	1
17	1941113	Plunger	1
18	1951567	Shift Lever	1
19	455106	Lever Pin	1

Ref. No.	Part No.	Description	No. Used
20	1932197	Lever Stud	1
21	1965225	Drive Housing (Incl. Connector 1964954)	1
22	1926640	Nut	1
23	9421424	Lockwasher	1
24	1838568	Thrust Collar	1
25	1928022	Retainer Ring	1
26	1928021	Collar Stop	1
27	809593	Dowel Pin	1
28	1941157	Drive Assembly	1
29	1913960	Screw	4
30	1950417	Armature	1
31	1914842	Leather Washer	1
32	1955951	Coil Assembly	1
33	274738	Screw	4
34	1887021	Pole Shoe	4
35	1960908	Bolt	2
36	274875	Screw	4
*	19-3460	Starter Motor Complete	1

*Not Illustrated

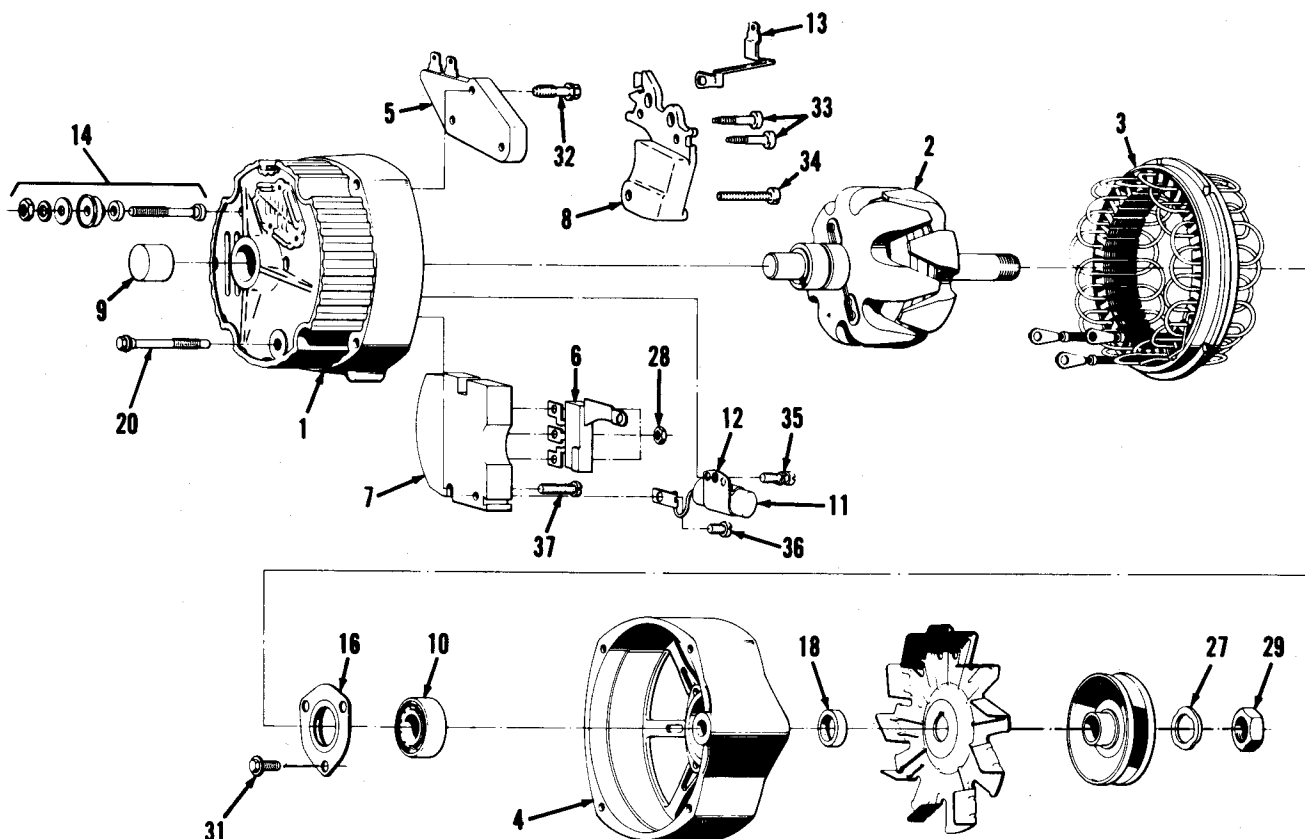


42 AMP. ALTERNATOR ASSEMBLY NO. 39-7370

Ref. No.	Part No.	Description	No. Used
1	1975718	S.R.E. Frame (Incl. Ref. #9-14)	1
2	1876163	Rotor Assembly	1
3	1894594	Stator Assembly	1
4	1976808	Frame D.E.	1
5	1116392	Regulator	1
6	1971528	Diode Trio	1
7	1891055	Rectifier Bridge	1
8	1894559	Brush Holder & Brush Assembly	1
9	1974862	Roller Bearing — S.R.E.	1
10	1974861	Ball Bearing D.E.	1
11	1971411	Capacitor	1
12	1869573	Bracket — Capacitor	1
13	1894568	Terminal — Relay	1
14	1975471	Terminal Package	1
16	1971993	Plate — Ball Bearing Retainer — D.E.	1
18	1976138	Collar — Shaft Outside — D.E.	1

Ref. No.	Part No.	Description	No. Used
20	1956975	Bolt Thru	4
27	1941978	Lockwasher Shaft Nut D.E.	1
28	120622	Nut-Rectifier Bridge	3
29	1915172	Nut-Shaft D.E.	1
31	1965104	Screw-Bearing Retainer	3
32	1894586	Screw & Washer — Brush Holder Attaching (Ground)	1
33	1876681	Screw Assy. — Brush Holder Attaching (Insulated)	2
34	1974020	Screw — Brush Holder Attaching Pivot	1
35	1851612	Screw Capacitor Bracket	1
36	1851612	Screw — Capacitor Lead Attaching	1
37	1876668	Screw & Washer — Rectifier Bridge Attaching	1
*	39-7370	42 AMP Alternator Complete	1

*Obtain from local Toro Distributor.


18 Obtain all other parts from your local GM, Chevrolet Dealer, or Delco-Remy Dealer

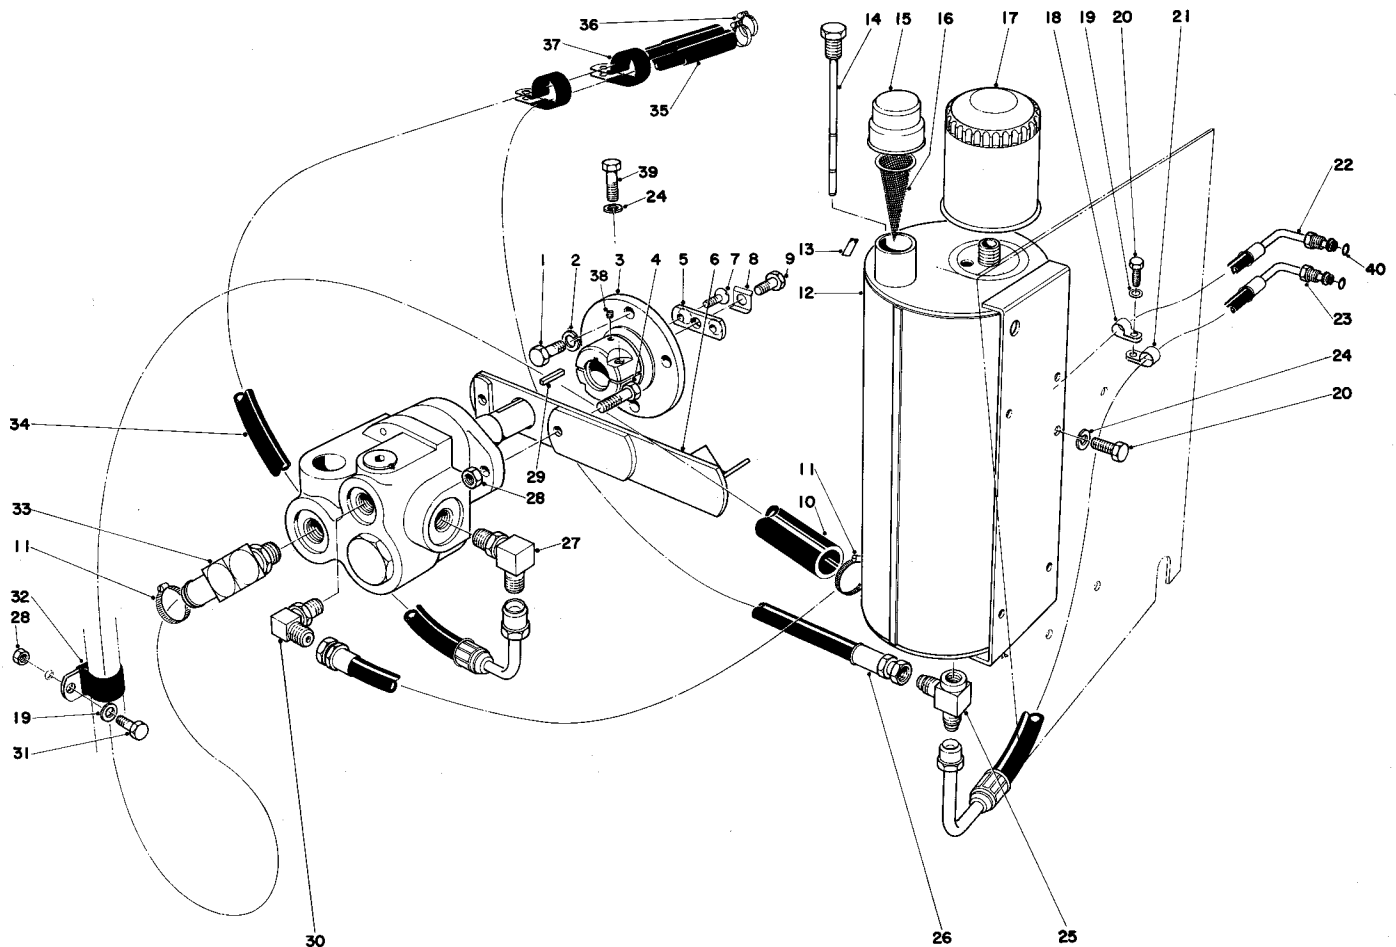

HYDRAULIC PUMP AND RESERVOIR

Ref. No.	Part No.	Description	No. Used
1	3212-5	Capscrew	4
2	3253-6	Lockwasher	4
3	33-2800	Hub-Hydraulic Pump	1
4	323-19	Capscrew	2
5	23-9810	Retainer	1
6	23-8080	Torque Arm	1
7	32108-21	Flat Head Machine Screw	2
8	23-9800	Clip Retainer	1
9	323-6	Capscrew	1
10	19-3050	Suction Hose	1
11	2412-3	Hose Clamp	2
12	18-2250	Hydraulic Reservoir	1
13	3-1553	Decal	1
14	18-2980	Dipstick	1
15	353-119	Filler Cap	1
16	3-2197	Filler Screen	1
17	18-4360	Oil Filter (AC No. PF-28)	1
18	2412-41	Clamp	1
19	3256-24	Flat Washer	2
20	32104-6	Screw Self Tapping	5
21	2412-4	Clamp	1

Ref. No.	Part No.	Description	No. Used
22	39-7290	Hose Assembly Power Steering Pressure	1
23	39-7300	Hose Assembly Power Steering Return	1
24	3253-21	Lockwasher	6
25	353-468	Fitting	1
26	19-4010	Hose - Valve to Reservoir Return	1
27	353-370	90° Elbow	1
28	32146-2	Locknut	3
29	3-9668	Key	1
30	353-371	90° Elbow	1
31	323-4	Capscrew	1
32	304-61	Clamp	1
33	23-8910	90° Elbow	1
34	23-8140	Hose - Pump to Valve, Pressure	1
35	28-9020	Sleeve Hose Protection	2
36	2412-3	Hose Clamp	2
37	2412-64	Hose Clamp	2
38	3246-4	Set Screw	1
39	323-8	Capscrew	2
40	39-7310	O-Ring	2

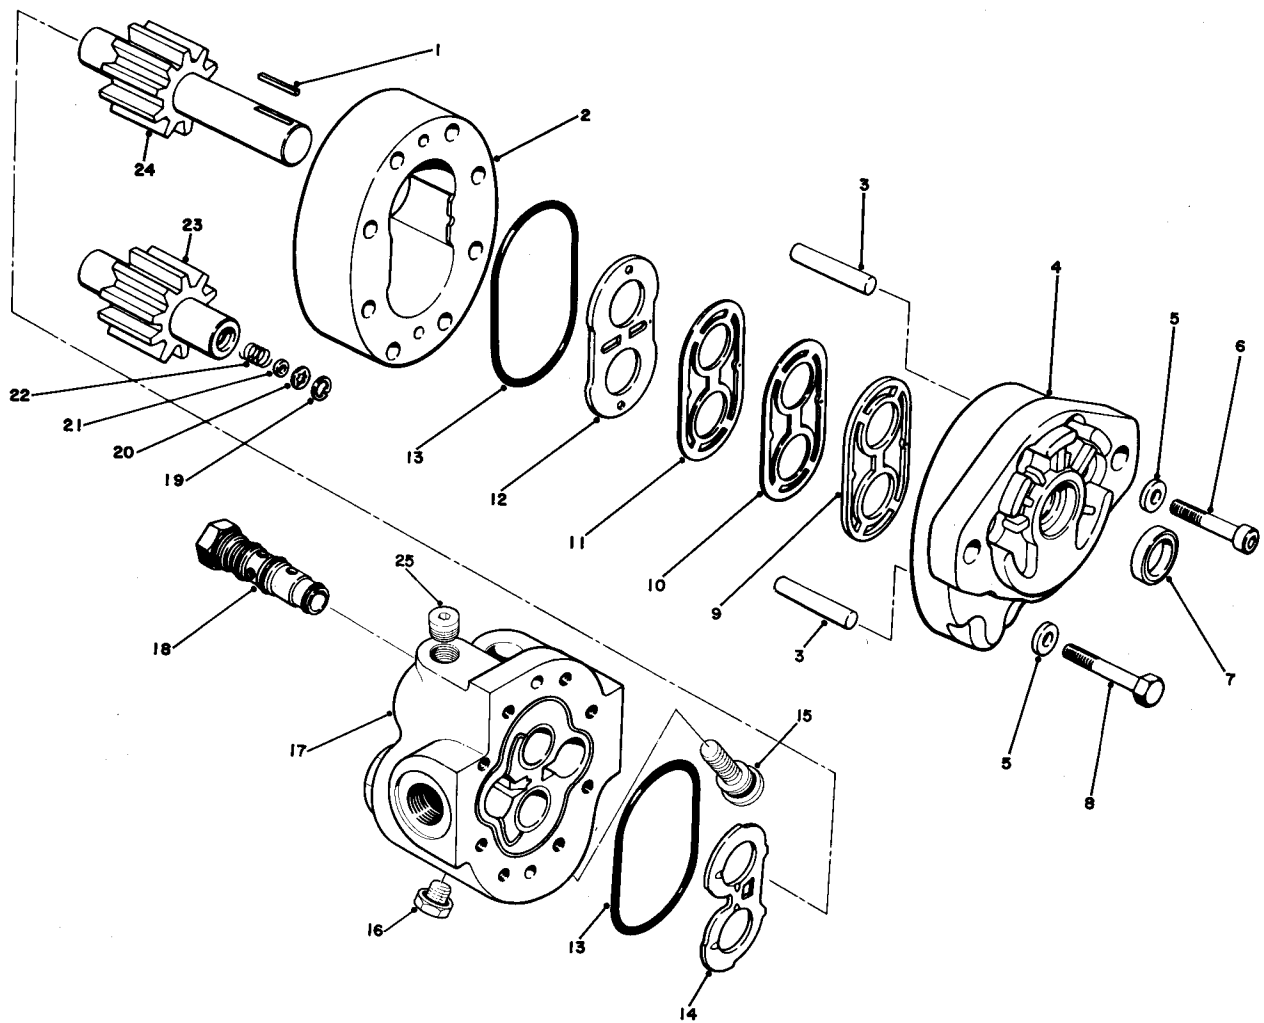


HYDRAULIC PUMP ASSEMBLY NO. 23-8420

Ref. No.	Part No.	Description	No. Used
1	3-9668	Key	1
2	23-8310	Center Section	1
3	23-8300	Dowel Pin	2
4	23-8320	Front Cover	1
5	23-8180	Washer	8
6	23-8190	Capscrew Socket Head	2
7	23-8340	Rotary Seal	1
8	23-8370	Capscrew	6
9	23-8410	V-Seal	1
10	23-8400	Gasket	1
11	23-8390	Heat Shield	1
12	23-8380	Wear Plate	1
13	23-8360	O-Ring	2
14	23-8290	Thrust Plate	1

Ref. No.	Part No.	Description	No. Used
15	23-8270	Relief Valve	1
16	23-8280	Plug	1
17	23-8240	Back Cover	1
18	23-8250	Flow Divider	1
19		Snap Ring	1
20		Ring	1
21		Plate	1
22		Spring	1
23		Driven Gear	1
24		Drive Gear	1
25	23-8260	Plug	1
*	24-9460	Repair Kit (Incl. Ref. #7 & 19-14)	1
*	23-8420	Hydraulic Pump Assy. Complete	1
*	40-4410	Gear Set (Incl. Ref. #19-24)	1

*Not Illustrated

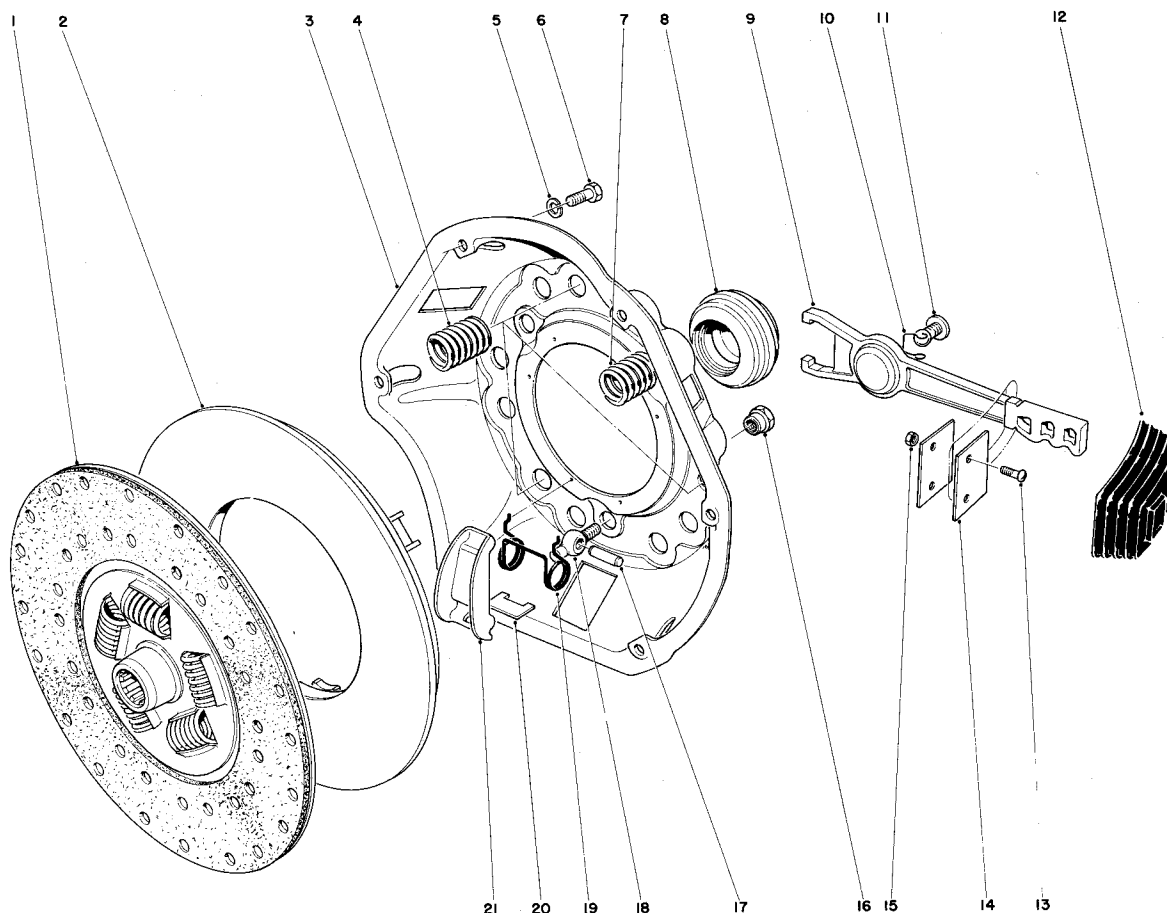


CLUTCH ASSEMBLY NO. 20-0450

Ref. No.	Part No.	Description	No. Used
1	19-3570	Clutch Plate	1
2	19-4700	Pressure Plate	1
3	19-4650	Cover	1
4	19-4710	Spring (Orange)	6
5	3253-21	Lockwasher	6
6	5-1533	Capscrew	6
7	19-4720	Spring (Yellow)	3
8	39-3810	Clutch Release Bearing	1
9**	3765372	Fork Assy. (Incl. Ref. #10)	1
10**	838987	Ball Retainer Spring	1
11**	3725240	Stud - Clutch Fork Ball	1

Ref. No.	Part No.	Description	No. Used
12**	3765360	Boot	1
13	3251-4	Machine Screw	2
14	19-3600	Cover - Flywheel Housing	2
15	3296-12	Locknut	2
16	19-4660	Nut	3
17	19-4680	Pin	3
18	19-4670	Stud	3
19	19-4640	Release Finger Spring	3
20	19-4690	Lift Strut	3
21	19-4630	Release Finger	3
*	20-0450	Clutch Assembly Complete (Incl. Ref. #1-4, 7 & 16-21)	1

*Not Illustrated

**Obtain from your local GM Chevrolet Dealer.

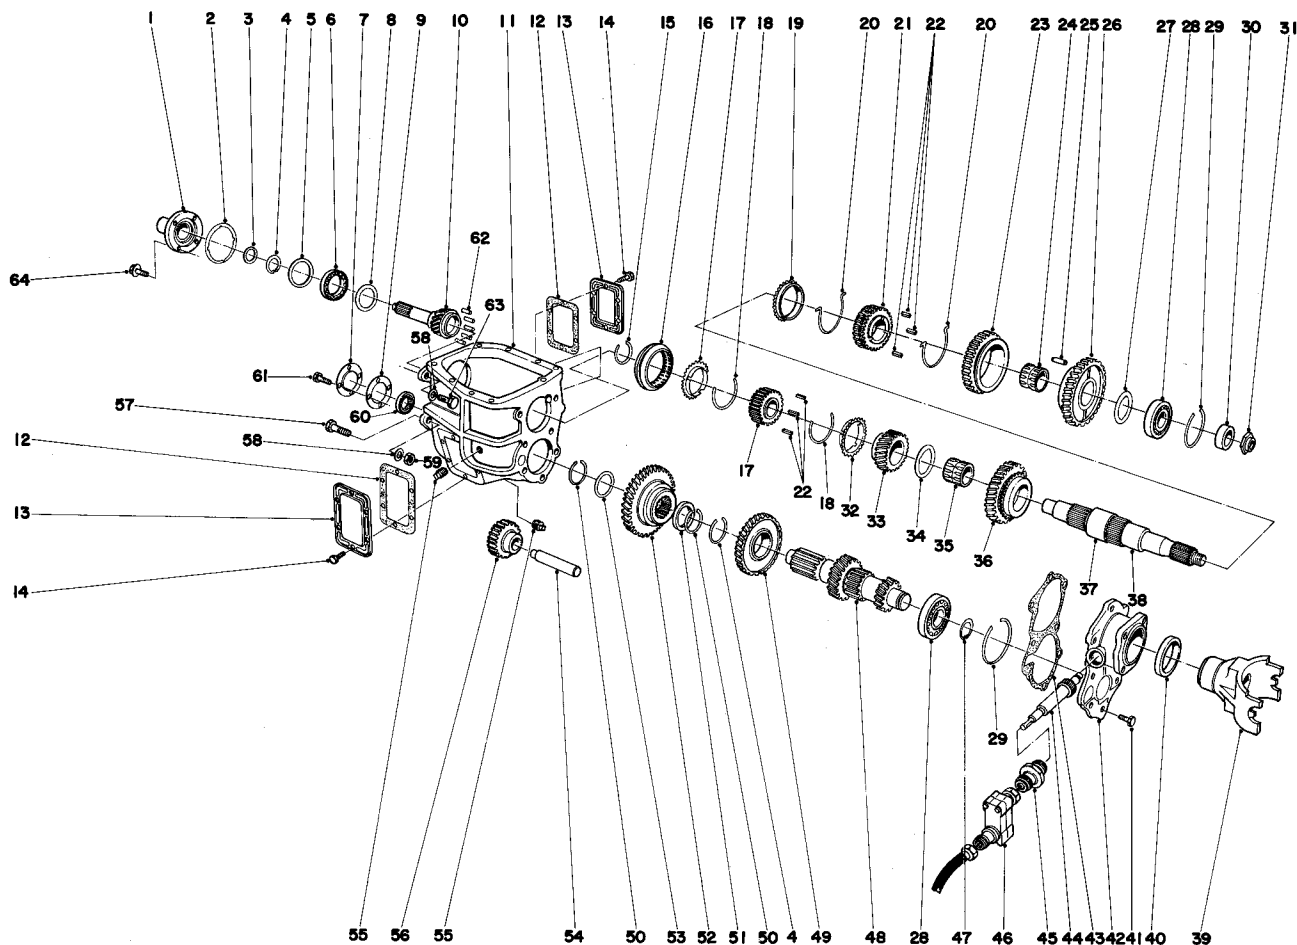

TRANSMISSION ASSEMBLY NO. 36-9320


Ref. No.	Part No.	Description	No. Used
1	3901178	Retainer Pilot Gear	1
2	3930800	Gasket	1
3	3987937	Seal	1
4	3901152	Ring Retaining	2
5	3866655	Ring	1
6	907993	Bearing	1
7	3866347	Cap	1
8	3901177	Slinger	1
9	3866348	Gasket	1
10	3901175	Gear - Clutch	1
11	465453	Case With Plugs	1
12	6273214	Gasket - Power Take-Off	2
13	6273213	Cover - Power Take-Off	2
14	3905486	Bolt - Power Take-Off Cover	12
15	3901166	Ring	1
16	3901165	Clutch	1
17	3901164	Hub	1
18	3866359	Spring	2
19	3950367	Cone	1
20	3866646	Spring	2
21	3946776	Hub	1
22	3866358	Key	6
23	3901170	Gear	1

Ref. No.	Part No.	Description	No. Used
24	465455	Bushing	1
25	456587	Pin	2
26	476766	Gear	1
27	465450	Thrust Washer	1
28	907474	Bearing	2
29	3830051	Ring	2
*	907474	Ring (Optional For Item #29)	2
30	3866742	Gear	1
31	3830575	Nut	1
32	3993036	Cone	2
33	3901161	Gear	1
34	3932267	Washer	1
35	3932274	Bushing	1
36	3901158	Gear	1
37	3932253	Bushing	1
38	3932265	Shaft	1
39	3915056	Universal Flange Front	1
40	3911917	Seal	1
41	3911926	Bolt	8
42	465217	Retainer	1
43	3930800	Gasket	1
44	3866917	Driven Gear	1
††45	40-9330	Sleeve Assembly	1

*Not Illustrated

NOTE: Obtain from your local GM, Chevrolet Dealer.

††Obtain from your local Toro Dealer.

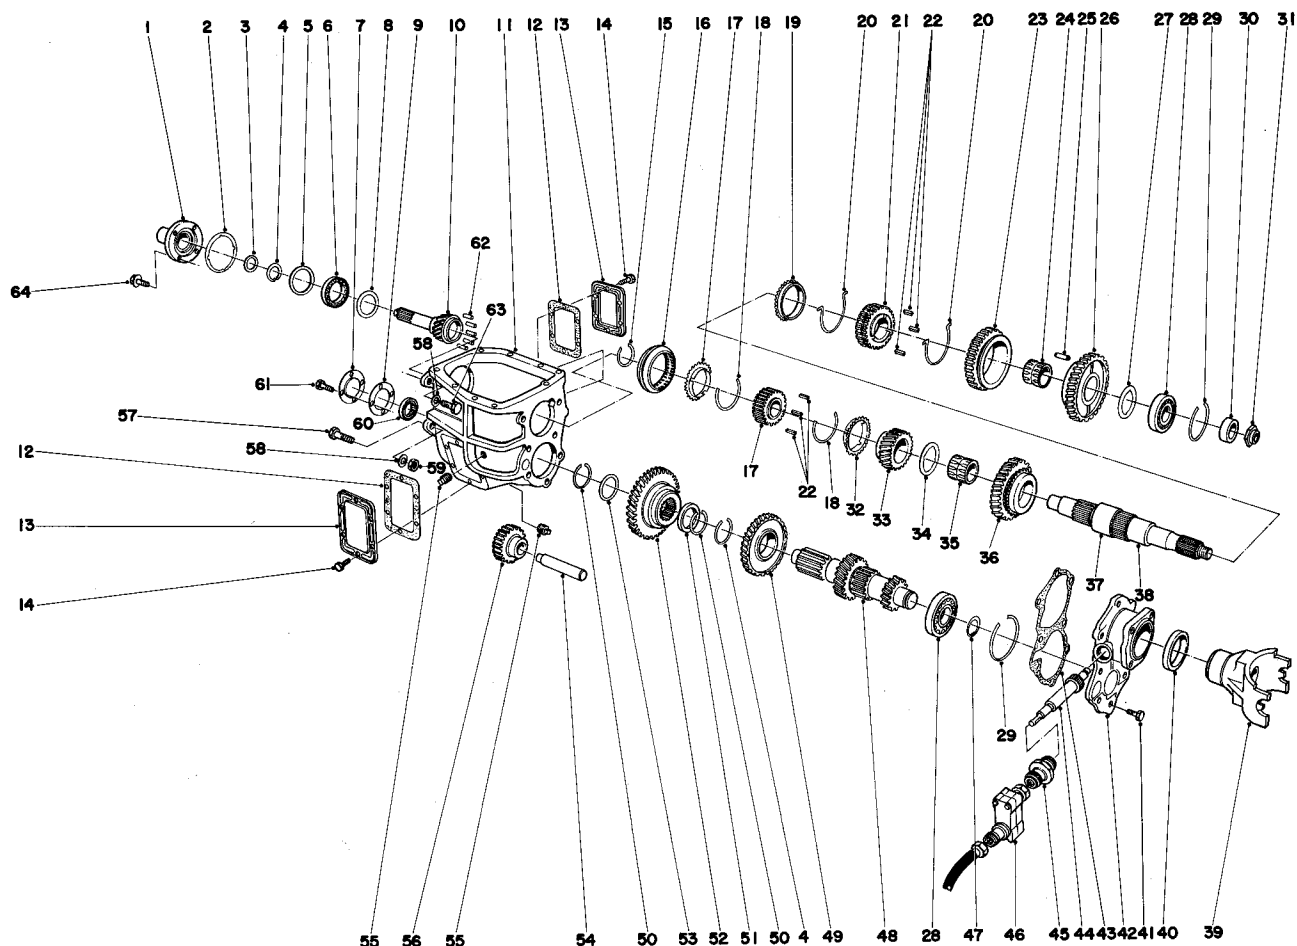


TRANSMISSION ASSEMBLY NO. 36-9320 (Continued)

Ref. No.	Part No.	Description	No. Used
††46	36-9290	Adapter - Gear Reducer	1
47	3866346	Ring	1
48	465449	Gear	1
49	3968038	Gear	1
50	3920703	Ring	2
51	3946795	Spacer	1
52	3955570	Gear	1
53	3901153	Thrust Washer	1
54	3901144	Shaft - Rev. Idle	1
55	444746	Plug	2
*	444744	Plug (Optional For Item #55)	2

Ref. No.	Part No.	Description	No. Used
56	3901141	Gear	1
††57	325-8	Capscrew	2
††58	3253-7	Lockwasher	4
††59	3217-9	Nut	2
60	7451785	Bearing	1
61	435141	Screw	4
62	9422666	Roller Bearing	17
*	7451535	Roller Bearing (Optional For Item #62)	17
††63	325-6	Capscrew	2
64	3920784	Screw	4

*Not Illustrated

††Obtain from your local Toro Dealer. Obtain all other parts from your local GM, Chevrolet Dealer.

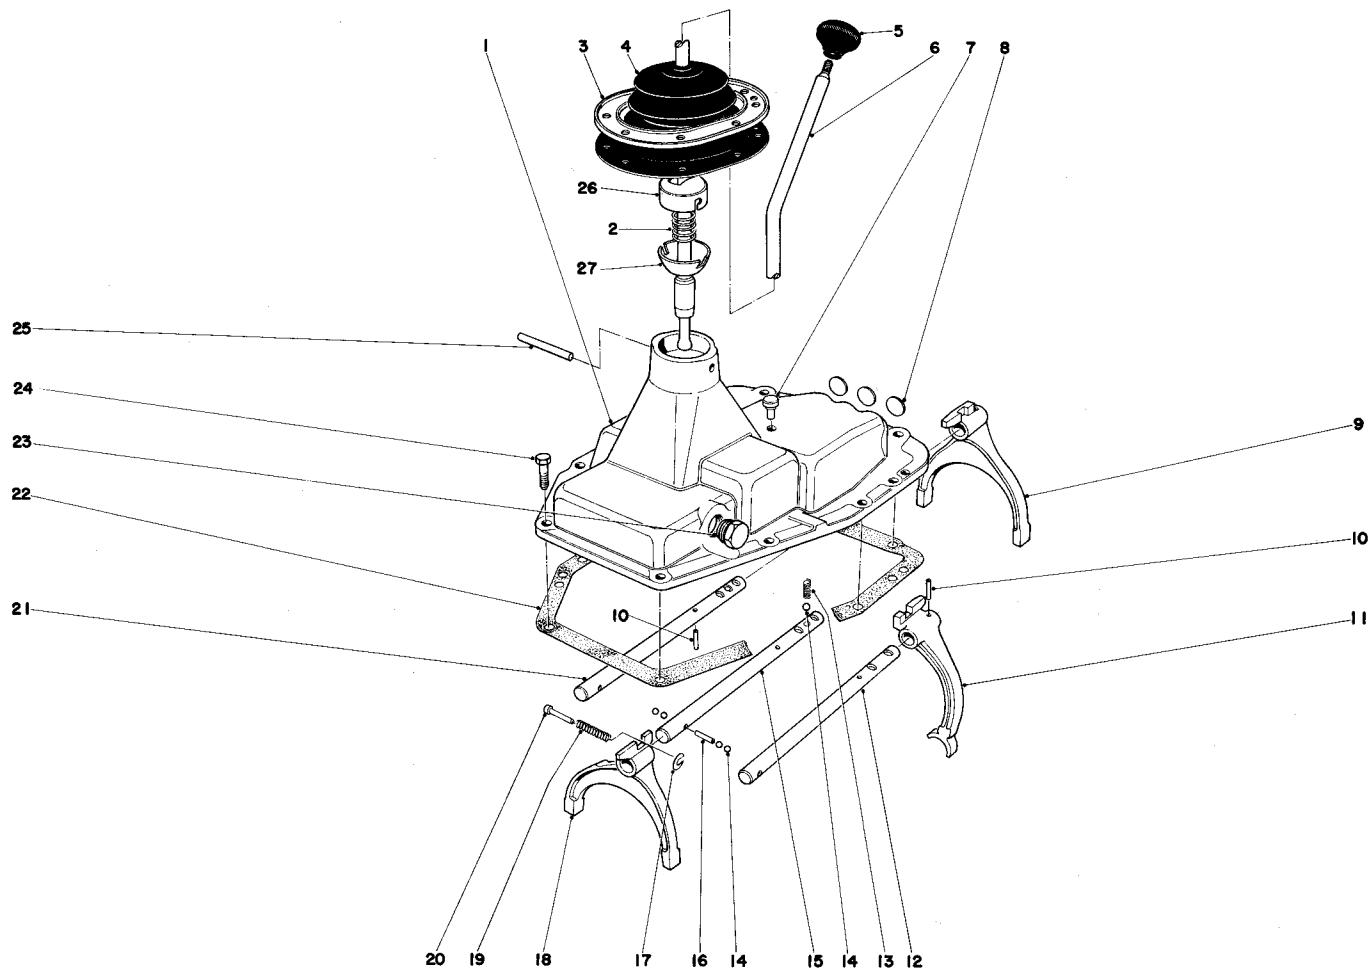


TRANSMISSION COVER

Ref. No.	Part No.	Description	No. Used
1	3952668	Cover	1
2	3683582	Spring Transmission Control	1
3	378351	Retainer — Transmission	1
4	378340	Boot Transmission	1
†5	233-10	Knob Gear Shift Lever	1
†6	36-9710	Lever Transmission Control	1
7	3820840	Ventilator Assembly	1
8	103894	Plug	3
9	3901137	Fork 1st & 2nd	1
10	273503	Pin	3
11	3978730	Fork Rev.	1
12	3901132	Shaft Rev.	1
13	551946	Spring	3
14	453593	Ball	7

Ref. No.	Part No.	Description	No. Used
15	3952669	Shaft 3rd & 4th	1
16	3901139	Pin	1
17	3727182	Retainer — Rev. Shaft	1
18	3901138	Fork 3rd & 4th	1
19	3978731	Spring	1
20	3864968	Plunger	1
21	3901133	Shaft 1st & 2nd	1
22	3901128	Gasket Transmission Cover	1
†23	36-9430	Plug — Transmission	1
24	3911926	Screw	8
25	456587	Pin	2
26	3988627	Cap Transmission Control	1
27	3988628	Cup Transmission Control	1


†Order from Toro. Obtain all other parts from your local GM, Chevrolet Dealer.

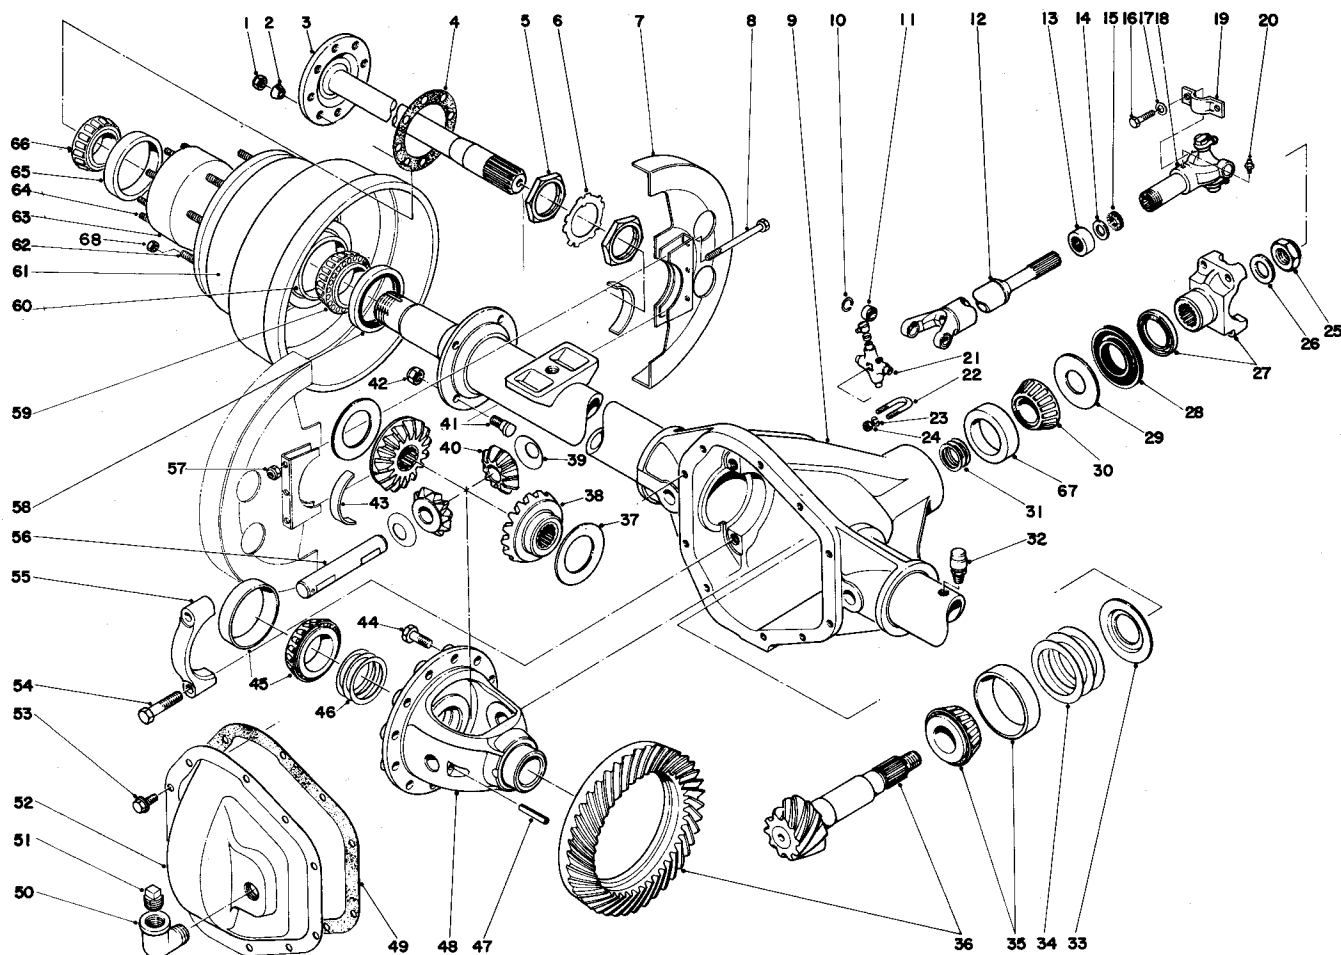

REAR AXLE (36-9830) AND DRIVE LINE (36-9490)

Ref. No.	Part No.	Description	No. Used
1	3296-7	Locknut	16
2	19-6810	Stud Adapter	16
3	37-8640	Shaft Axle	2
4	24-8660	Gasket Drive Flange	2
5	19-6820	Nut Spindle	4
6	19-6840	Lock — Spindle Nut	2
7	38-1870	Grass Shield	4
8	321-36	Capscrew	4
9		Case Differential Assembly	1
10	18-4650	Retaining Ring	4
11		Bearing Assembly	8
12	18-4720	Shaft Assembly	1
13	18-4730	Retainer Cap	1
14	18-4710	Washer	1
15	18-4700	Felt Dust Seal	1
16	3210-8	Capscrew	4
17	3253-4	Lockwasher	4
18	18-4680	Slip Yoke	1
19	36-9400	Retainer	2
20	18-4690	Grease Fitting	1
21	18-8700	Cross Journal (Incl. Ref. #10, 11, 15 & 20)	2
22	214-229	U-Bolt	2

Ref. No.	Part No.	Description	No. Used
23	3253-21	Lockwasher	4
24	32146-6	Nut	4
25	18-9360	Nut Pinion	1
26	18-9370	Washer Pinion Nut	1
27	19-6700	End Yoke Assembly	1
28	18-9390	Seal Pinion	1
29		Slinger — Pinion Bearing	1
30	18-9410	Bearing Cone	1
31	37-8560	Pinion Bearing Shim Kit	1
32	37-7570	Vent	1
33		Baffle — Pinion Bearing	1
34	37-8550	Drive Pinion Adj. Shim Kit	1
35	37-8540	Inner Pinion Bearing Kit	1
36	37-8530	Gear, Pinion & Nut Assembly Hypoid Drive	1
37		Thrust Washer Gear	2
38		Gear Differential	2
39		Thrust Washer Pinion	2
40		Pinion Gear	2
41	19-6830	Brake Flange Bolt	8
42	3296-19	Locknut	8
43	38-2100	Shim	A/R
44	18-9340	Bolt — Drive Gear	12

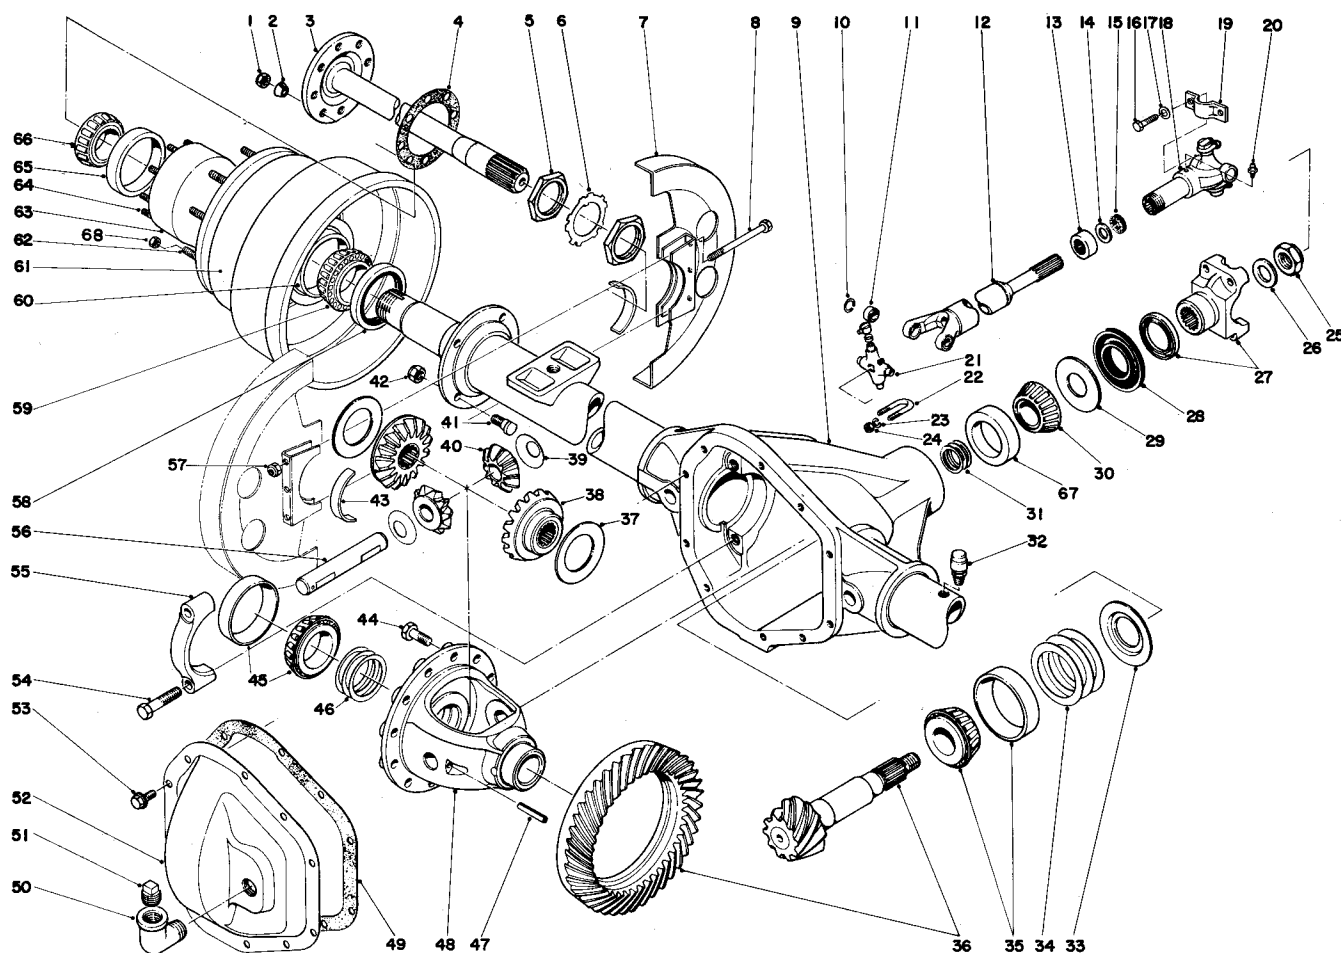


REAR AXLE (36-9830) AND DRIVE LINE (36-9490) (Continued)

Ref. No.	Part No.	Description	No. Used
45	37-8610	Differential Bearing Kit	2
46	37-8590	Differential Bearing Shim Kit	2
47	19-6630	Lock — Differential	1
48		Case Differential	1
49	37-8580	Gasket Carrier Cover	1
50	2811-8	Street Elbow	1
51	19-7090	Pipe Plug	1
52		Gear Carrier Cover	1
53	18-9200	Bolt Carrier Cover	10
54	325-9	Differential Bearing Cup Bolt	4
55		Cup Differential Bearing	2
56		Shaft Differential	1
57	32146-17	Locknut	4
58	253-128	Oil Seal	2
59	254-98	Bearing Cone	2
60	254-100	Bearing Cup	2
61	37-8490	Wheel Drum	2
62	242-67	Wheel Bolt	16
63	37-8500	Wheel Hub	2
64	242-68	Flange Stud	16
65	254-99	Bearing Cup	2

Ref. No.	Part No.	Description	No. Used
66	254-101	Bearing Cone	2
67	18-9420	Bearing Cup	1
68	242-69	Wheel Nut	16
*	37-8520	Gear & Pinion Drive Assy. Kit (Incl. Ref. #25-26, 28-31, 33-36, 44, 46 & 49)	1
*	37-8600	Differential Case Assy. Kit (Incl. Ref. #37-40, 45, 47-48 & 56)	1
*	37-8620	Differential Parts Kit (Incl. Ref. #37-40, 44, 47, 49 & 56)	1
*	37-8630	Carrier Cover Assembly (Incl. Ref. #49 & 51-53)	1
*	18-8700	Journal & Bearing (Incl. Ref. #10, 11, 15 & 20-21)	1
*	36-9830	Rear Axle (Incl. Ref. #2-6, 9, 25-41, 44-49, 51-56 & 67)	1
*	36-9490	Drive Line (Incl. Ref. #10-15, 18 & 20-24)	1

* Not Illustrated

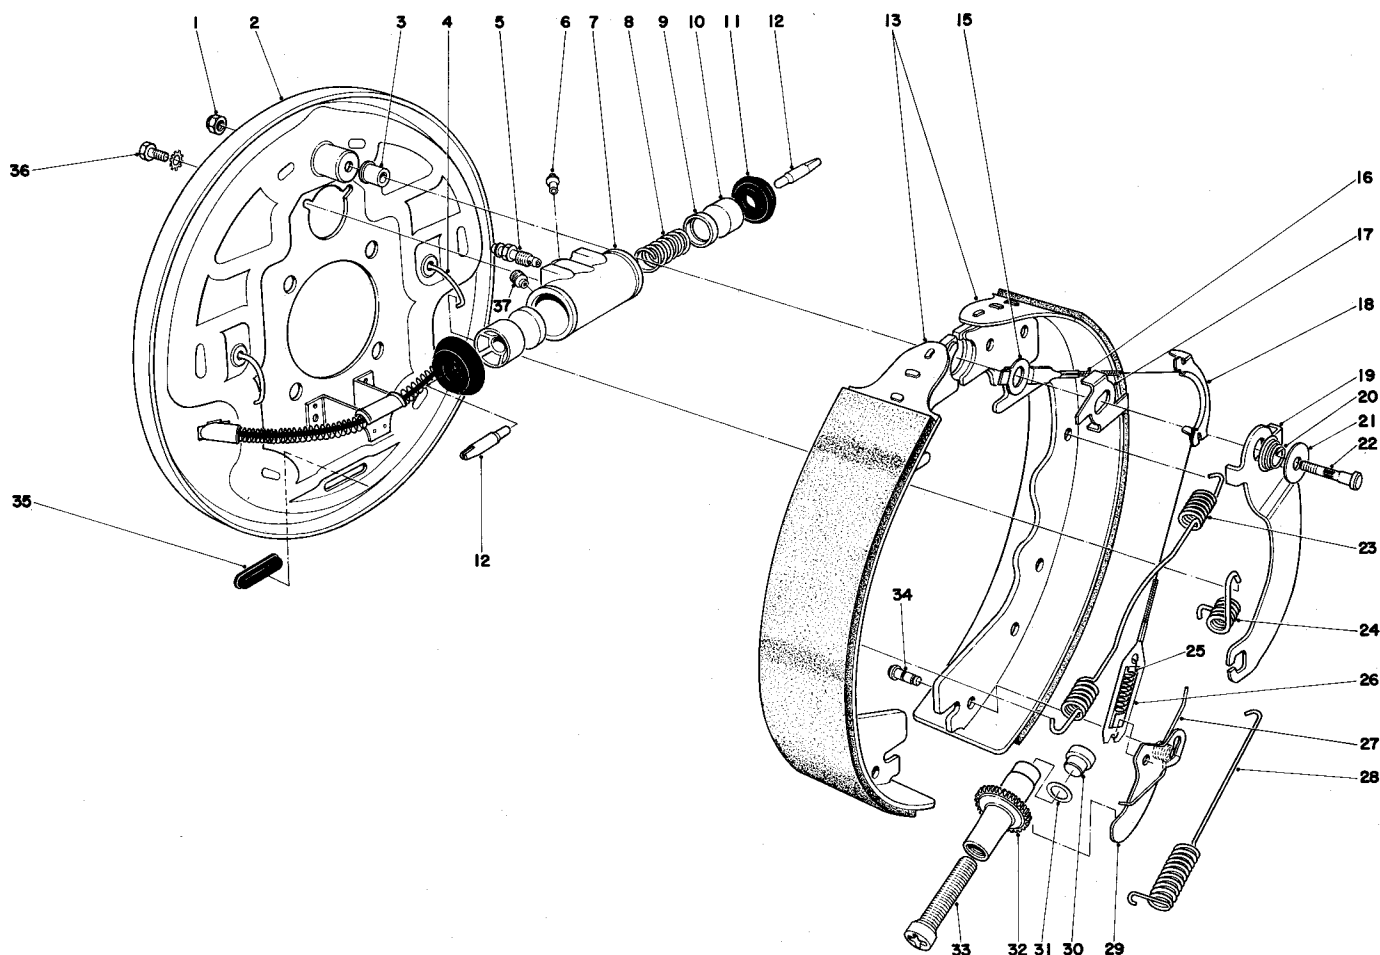


REAR BRAKE ASSEMBLY (37-1010 R.H. & 37-1020 L.H.)

Ref. No.	Part No.	Description	No. Used
1	37-3770	Locknut	2
2	37-3840	Back Plate & Guide L.H.	1
*	37-3850	Back Plate & Guide R.H.	1
3	37-3710	Bushing Anchor Post	2
4	37-3970	Pin Shoe Hold Down Spring	4
5	19-6460	Bleeder Screw	2
6	19-6450	Tube Seat Inlet	2
7	37-4040	Wheel Cylinder L.H. (Incl. Ref. #8-11)	1
*	37-4050	Wheel Cylinder R.H. (Incl. Ref. #8-11)	1
8		Spring	2
9		Cup	4
10		Piston	4
11		Boot	4
12	37-4010	Connecting Link Wheel Cylinder	4
13	40-9250	Shoe and Lining Set Front & Rear	1
15		Fitting Anchor End	2
16		Cable	2
17	37-3690	Cam Plate — Preg. Br. Lever L.H.	1

Ref. No.	Part No.	Description	No. Used
*	37-3700	Cam Plate — Preg. Br. Lever L.R.	1
18	37-3780	Cable Guide	2
19	37-3630	Lever Parking Brake L.H.	1
*	37-3640	Lever Parking Brake R.H.	1
20	37-3620	Spring Anti Rattle Cam & Lever	2
21	37-3600	Washer Parking Lever Retainer	2
22	37-3610	Anchor Bolt	2
23	37-3990	Spring — Shoe to Shoe	2
24	37-3790	Spring Shoe Hold Down L.H.	4
25		Spring Over Travel	2
26		Fitting Lever End	2
27	37-3800	Spring Auto Adjusting L.H.	1
*	37-3810	Spring Auto Adjusting R.H.	1
28	37-4000	Spring Shoe to Shoe	2
29	37-3830	Lever Auto Adjuster	2
30	37-3940	Socket Pivot	2
31	37-3950	Washer Adjusting Nut	2
32	37-3900	Adjusting Nut L.H.	1
*	37-3910	Adjusting Nut R.H.	1
33	37-3930	Pivot Screw R.H.	1

*Not Illustrated

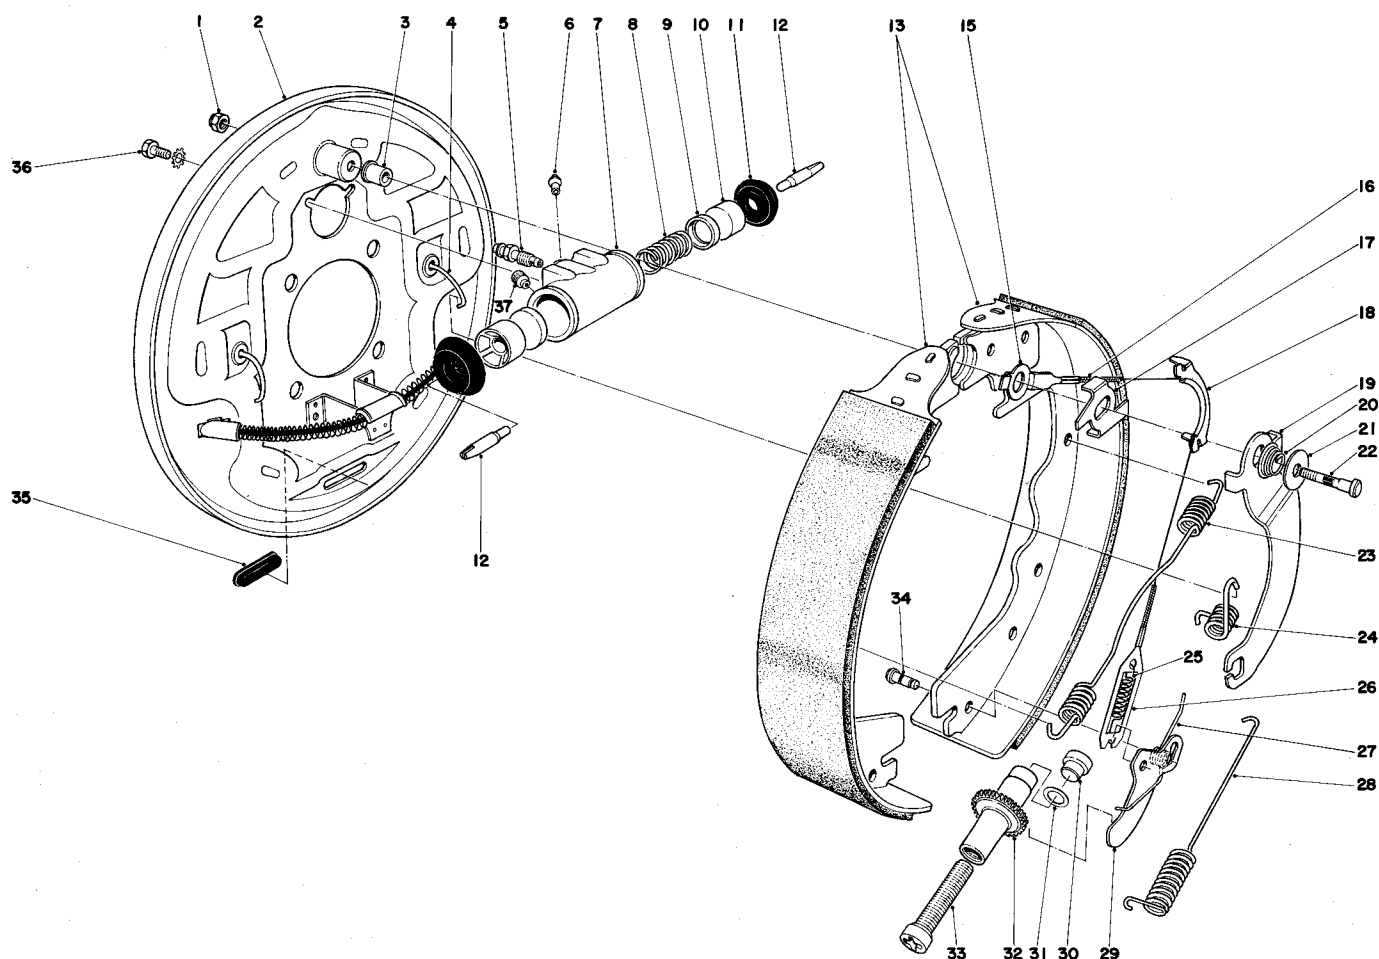


REAR BRAKE ASSEMBLY (37-1010 R.H. & 37-1020 L.H.) (Continued)

Ref. No.	Part No.	Description	No. Used
*	37-3920	Pivot Screw L.H.	1
34	37-3820	Pin Auto Adjuster Lever	2
35	37-3960	Cover Adjusting Hole	2
36	37-3980	Screw & Lockwasher	4
37		Body Screw	1
*	37-3580	Lever Cable Cam Bolt Assy. L.H. (Incl. Ref. #3, 15-17, 19-22 & 25-26)	1

Ref. No.	Part No.	Description	No. Used
*	37-3590	Lever Cable Cam Bolt Assy. R.H. (Incl. Ref. #3, 15-17, 19-22 & 25-26)	1
*	37-3720	Cable & Fitting Assembly (Incl. Ref. #15-16 & 25-26)	2
*	37-1010	Brake Assembly R.H. (Complete)	1
*	37-1020	Brake Assembly L.H. (Complete)	1


*Not Illustrated

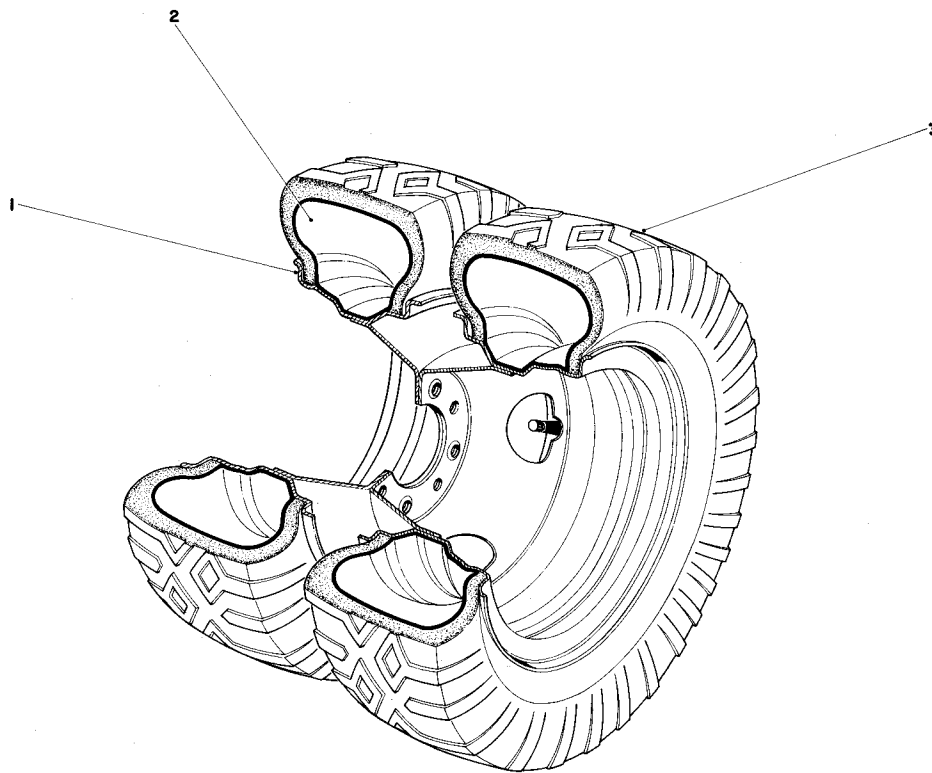

REAR TIRES & WHEELS 7.50 X 16 FIELD INSTALLED KIT NO. 70230 (Parkmaster 7)

Ref. No.	Part No.	Description	No. Used
1	37-4320	Wheel Assembly	4
2	28-9650	Inner Tube	4

Ref. No.	Part No.	Description	No. Used
3	231-5	Tire	4

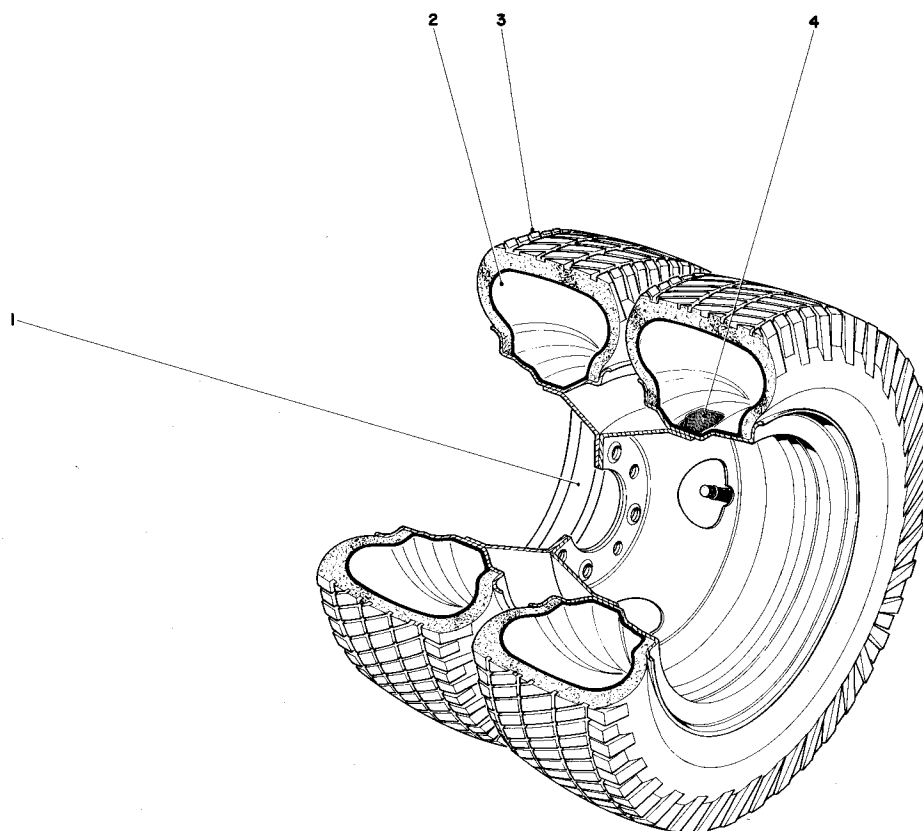


REAR TIRES & WHEELS 8.00 X 16 FIELD INSTALLED KIT NO. 70200 (Parkmaster 7 and 9)

Ref. No.	Part No.	Description	No. Used
1	37-4320	Wheel Assembly	4
2	28-9650	Inner Tube	4

Ref. No.	Part No.	Description	No. Used
3	28-9640	Tire Traction	4
4	28-9660	Flap	2
*†	231-58	Rear Tire 9.50 x 16	4

*Not Illustrated


†Optional

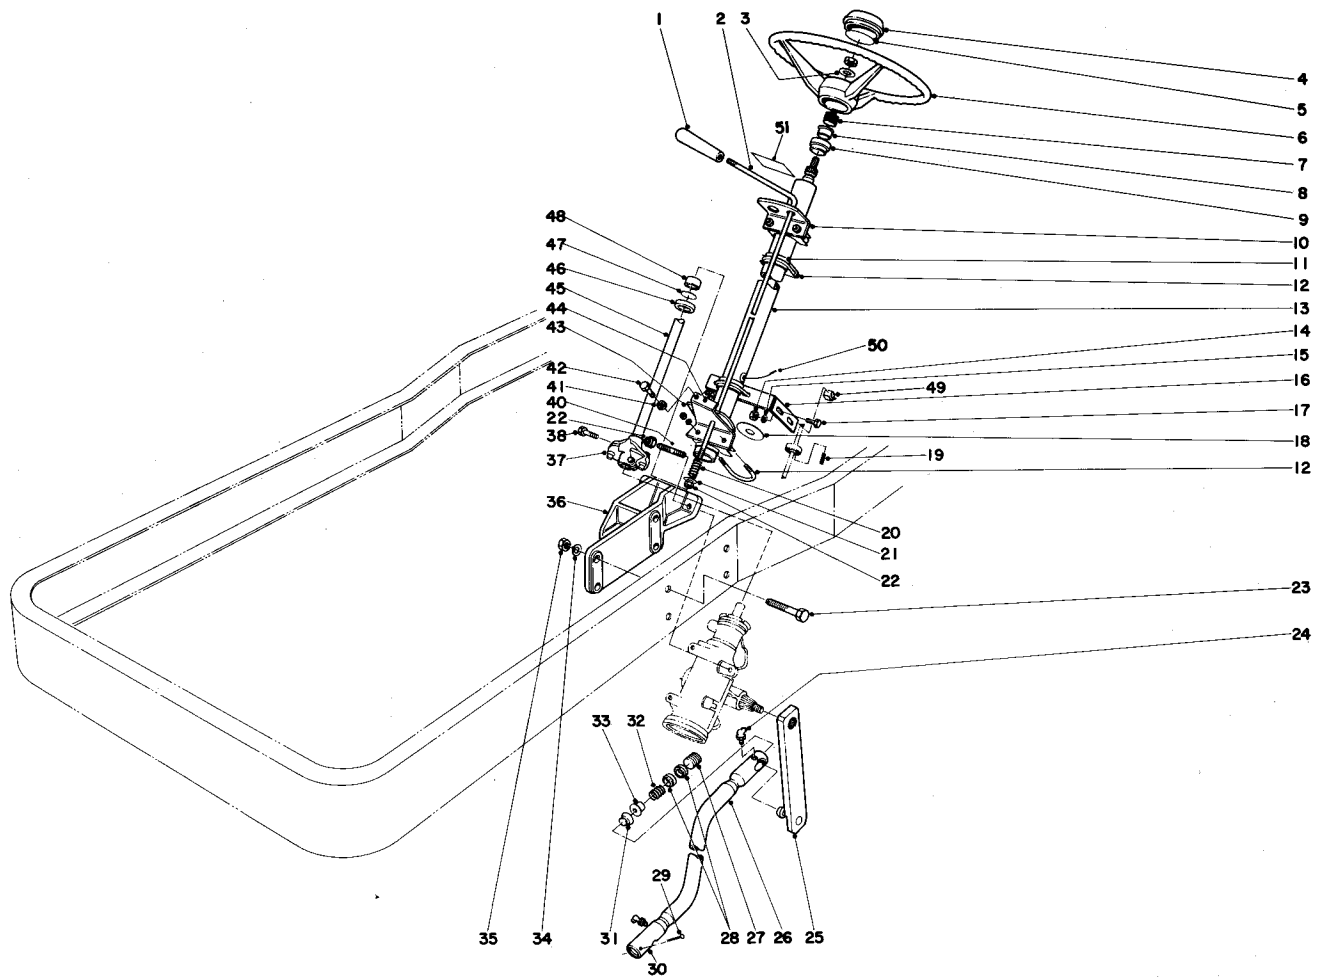

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-2640	Handle	1
2	18-2710	Lever — Handle Throttle	1
3	18-3130	Washer	1
4	18-2140	Steering Wheel Cap	1
5	18-3170	Decal	1
6	18-2110	Steering Wheel	1
7	18-3120	Spring	1
8	18-3110	Spring Seat	1
9	18-3030	Bearing Assembly	1
10	18-2480	Support — Throttle Lever	1
11	18-1310	Saddle	8
12	18-2130	Clamp	4
13	18-3050	Steering Jacket Assembly	1
14	32146-5	Locknut	2
15	3256-23	Flat Washer	2
16	18-0830	Steering Column Support	1
17	322-2	Capscrew	2
18	3-2858	Friction Disc	1
19	32121-2	Roll Pin	2
20	3-8596	Spring Compression	1
21	3256-25	Flat Washer	1
22	3296-7	Locknut	4
23	327-10	Capscrew	4
24	302-33	Grease Fitting	2
25	18-2070	Pitman Arm	1
26	18-0330	Drag Link Tube	1

Ref. No.	Part No.	Description	No. Used
27	2116-5	End Plug	2
28	2116-6	Spherical Seat	4
29	3272-15	Cotter Pin	2
30	18-0320	Drag Link (Incl. Ref. #24, 26-28 & 31-33)	1
31	2116-8	Inner Plug	2
32	2116-7	Spring	2
33	2116-11	Spring Seat	2
34	3253-8	Lockwasher	4
35	3217-11	Nut	4
36	19-3290	Engine & Power Steering Mount	1
37	18-3010	Flange Assembly	1
38	18-3100	Bolt	1
40	43-7570	Stud — Steering Gear	3
41	3218-2	Jam Nut	1
42	322-5	Capscrew	1
43	38-1760	Friction Plate	1
44	38-1740	Bracket Friction Plate	1
45	18-3090	Steering Shaft Assembly	1
46	18-3070	Bearing Seal Retainer	1
47	18-3080	Seal	1
48	18-3060	Bushing	1
49	218-214	Tinnerman Clip	1
50	18-3040	Horn Cable Assembly	1
51	26-5260	Decal — Throttle Control	1

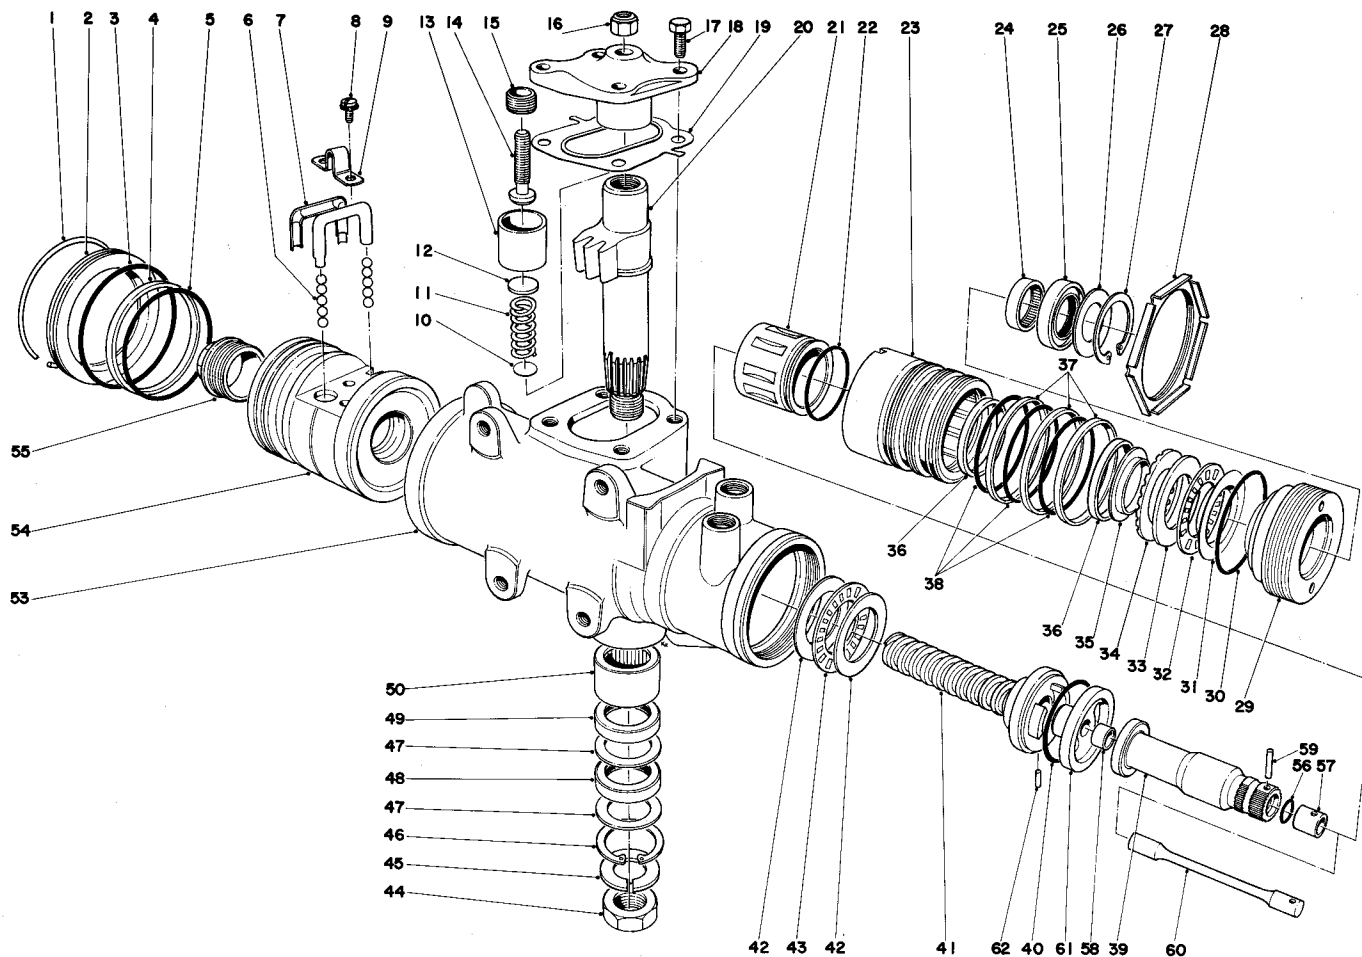


STEERING GEAR 39-7330

Ref. No.	Part No.	Description	No. Used
1	18-4330	Ring, Retaining	1
2		Plug, Housing End	1
3		Seal, Housing End Plug	1
4		Ring, Rack Piston	1
5	18-4280	Seal, O-Ring, Rack Piston	1
6		Ball, Chrome Alloy (.2812 Dia.)	11
*	18-4260	Ball, (.2806 Dia.)	11
7		Guide Ball Return	2
8	18-4270	Screw & Lockwasher Assembly	2
9		Clamp, Ball Return Guide	1
10	18-4280	Washer, Lash Adjuster Wear	1
11		Spring, Adjuster	1
12	18-4260	Washer, Lash Adjuster	1
13		Bushing, Side Cover	1
14	18-4270	Adjuster, Lash	1
15		Retainer, Lash Adjuster	1
16	28-8220	Nut, Lash Adjuster	1
17	28-8210	Bolt, Flange Hex Hd.	4
18	18-4180	Cover, Housing Side	1
19		Seal - Assembly Gasket	1
20	39-7430	Gear Pitman Shaft	1
21		Spool Valve	1
22	18-4240	Seal, O-Ring, Spool Valve	1
23		Valve Body	1
24		Bearing Assembly, Needle	1

Ref. No.	Part No.	Description	No. Used
25	18-4320	Seal, Stub Shaft	1
26		Seal, Stub Shaft Dust	1
27		Ring Retaining	1
28		Nut, Adjuster Plug Lock	1
29	28-8200	Plug Adjuster	1
30		Seal, O-Ring	1
31	39-7440	Race, Upper Thrust Bearing	1
32		Bearing Assembly Roller Thrust	1
33	39-7420	Race, Thrust Bearing	1
34		Spacer, Thrust Bearing	1
35	18-4200	Retainer, Bearing	1
36		Sleeve, Valve Body	2
37	39-7440	Ring, Valve Body	3
38		Seal O-Ring	3
39	39-7420	Shaft, Stub	1
40		Seal O-Ring	1
41	18-4200	Worm, Steering	1
42		Race Thrust Bearing	2
43	39-7440	Bearing Assembly, Roller Thrust	1
44		Nut, Pitman, Arm	1
45	39-7420	Lockwasher	1
46		Ring, Retaining	1
47	18-4200	Washer, Seal Back Up	2
48		Seal, Pitman Shaft	1
49	18-4200	Seal, Pitman Shaft	1
50		Bearing, Pitman Shaft	1

*Not Illustrated

* Saginaw pn 5667628

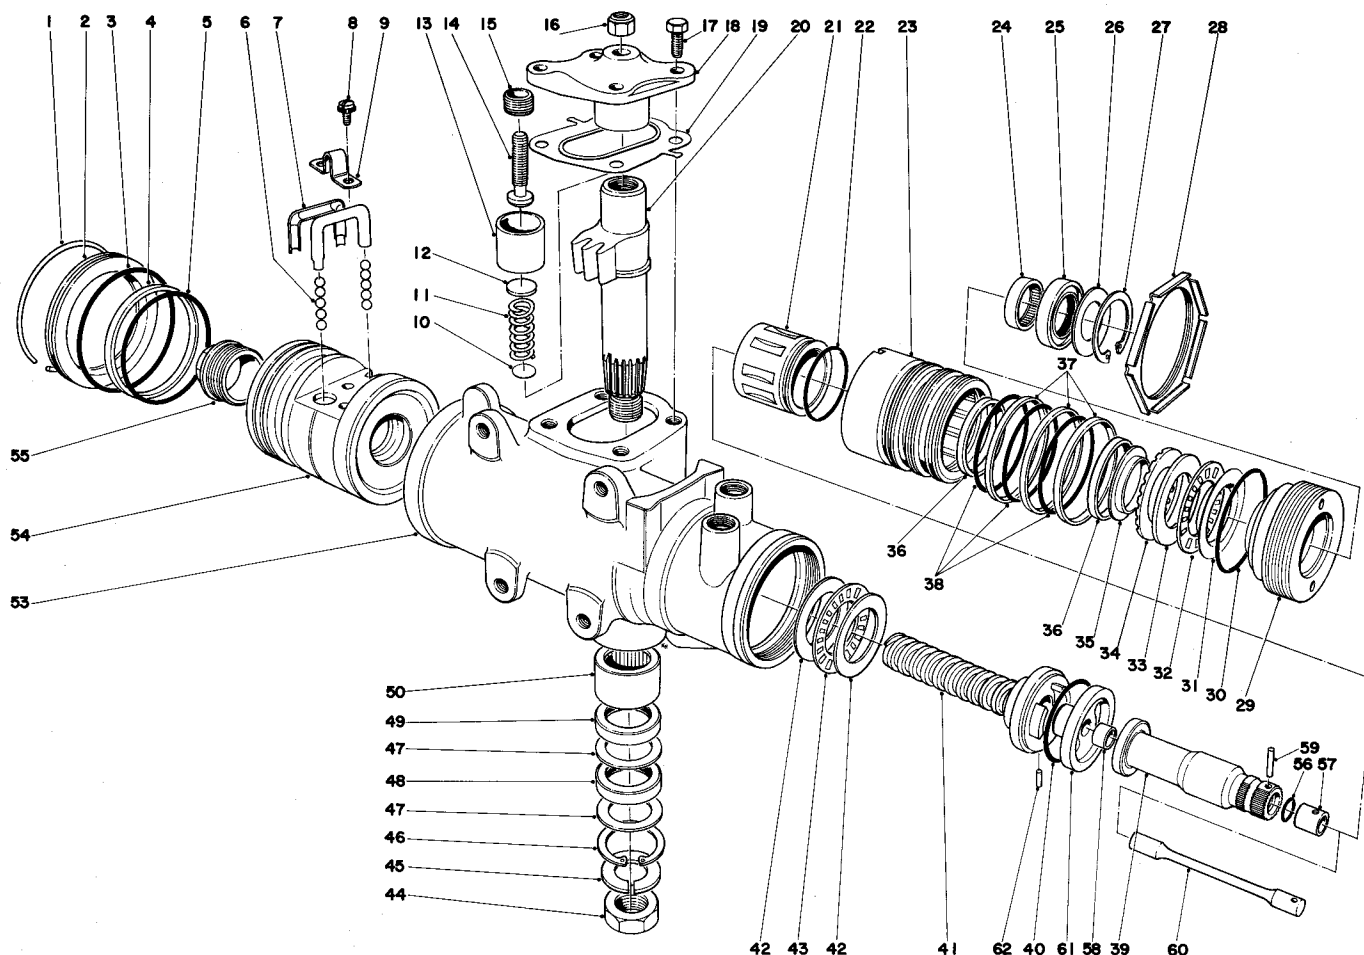


STEERING GEAR 39-7330 (Continued)

Ref. No.	Part No.	Description	No. Used
53	18-4340	Housing, Steering Gear	1
54		Nut, Rack Piston	1
55		Plug, Rack Piston End	1
56		Seal O-Ring	1
57		Sleeve, Torsion Bar	1
58		Bushing Torsion Bar	1
59		Pin, Torsion Bar	1
60		Torsion Bar	1
61		Cap Valve Body	1
62		Pin Dowel	1
*	28-8230	Bearing Service Kit — Upper Thrust (Incl. Items 31-35)	1
*	18-5150	Seal Service Kit — Adjustment Plug (Incl. Items 25-27 & 30)	1
*	18-5160	Seal Service Kit — Pitman Shaft (Incl. Items 17, 46-49)	1
*	18-5170	Seal Service Kit — Valve Ring (Incl. Items 22, 37-38 & 40)	1
*	18-5180	Bearing Service Kit — Lower Thrust (Incl. Items 42-43)	1
*	18-5190	Ball Service Kit, Recirculating (Incl. Item #6)	1
*	43-7660	Cover Service Assembly, Housing Side (Incl. Ref. #16-19)	1

Ref. No.	Part No.	Description	No. Used
*	28-8270	Seal Service Kit, End Plug (Incl. 1 & 3)	1
*	39-7410	Steering Gear Housing Assembly (Incl. Items 46, 50 & 53)	1
*	18-4230	Plug Service Assembly Adjuster (Incl. Items 24-27 & 29-35)	1
*	28-8290	Seal Service Kit (Rack-Piston) (Incl. Items 4 & 5)	1
*	28-8250	Pitman Shaft, Gear Service Assembly (Incl. 12, 14-15 & 20)	1
*	39-7330	Steering Gear Complete	1
*	18-4310	Valve Assy. Hyd. Gear (Incl. Ref. #21-23, 36-40 & 56-62)	1
*	18-4250	Rack/Piston/Nut Assy. Worm & Pin (Incl. Ref. #4-9, 41, 54 & 62)	1

*Not Illustrated


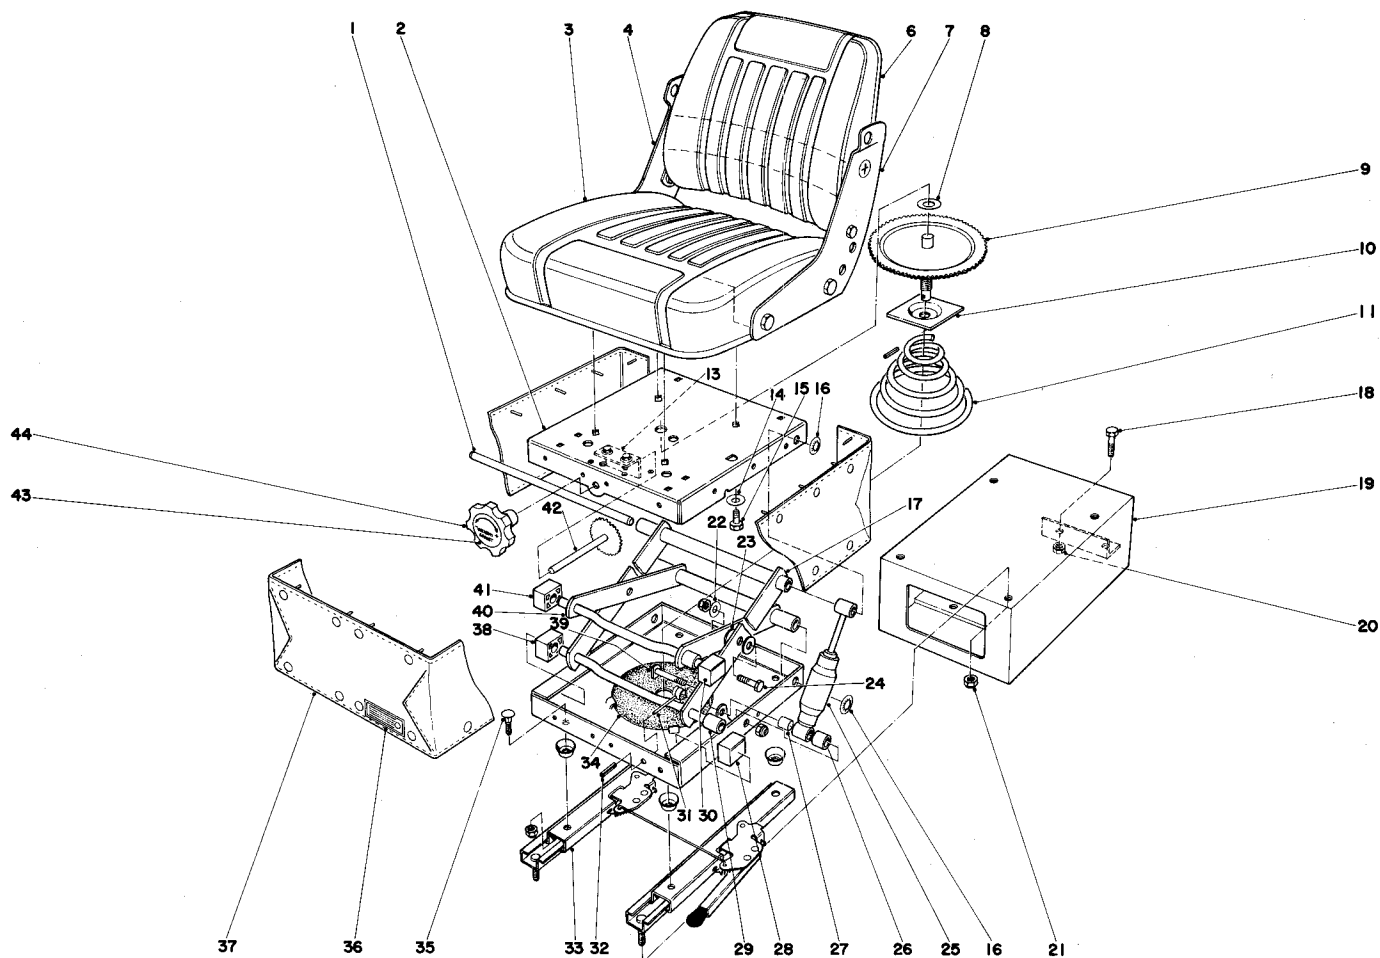


SEAT ASSEMBLY (37-0930) AND SUSPENSION ASSEMBLY (37-0610)

Ref. No.	Part No.	Description	No. Used
1	37-0710	Shaft	2
2	37-0690	Upper Housing Assembly	1
3	37-0600	Seat Cushion Assembly	1
4	37-0580	R. H. Side Bracket	1
6	37-0590	Backrest Cushion Assembly	1
7	37-0570	L. H. Side Bracket	1
8	37-0740	Thrust Washer	1
9	37-0840	Gear Assembly	1
10	37-0830	Washer Assembly	1
11	37-0820	Spring	1
13	37-0860	Bracket	1
14	3256-24	Washer	4
15	323-4	Capscrew	4
16	37-0720	Push On Fasteners	2
17	37-0890	Outer Arm Assembly	1
18	323-7	Capscrew	4
19	36-9630	Seat Base	1
20	32146-2	Locknut	4
21	32146-5	Locknut	4
22	37-0900	Washer	2
23	37-0910	Bearing	2
24	37-0920	Bolt	2
25	37-0660	Shock Absorber	1

Ref. No.	Part No.	Description	No. Used
26	37-0700	Bumper	2
27	37-0670	Bearing	2
28	37-0650	Slides Block - Lower L. H.	1
29	37-0880	Bearing	4
30	37-0640	Slides Block - Upper L. H.	1
31	37-0780	Ride Indicator	1
32	32121-24	Roll Pin	1
33	37-0790	Base Housing Assembly	1
34	37-0810	Pad	1
35	37-0550	Special Bolt	4
36	37-0770	Decal - Ride Instructions	1
37	37-0760	Boot Assembly	1
38	37-0630	Slides Block - Lower R. H.	1
39	37-0680	Bolt	1
40	37-0870	Inner Arm Assembly	1
41	37-0620	Slides Block - Upper R. H.	1
42	37-0850	Gear Assembly	1
43	37-0750	Decal	1
44	37-0730	Knob	1
*	37-0930	Seat Assembly (Incl. Ref. #3, 4, 6 & 7)	1
*	37-0610	Suspension Assembly (Incl. Ref. #1,2,9-11,13,16-17,22-26, 28-34 & 36-44)	1


*Not Illustrated

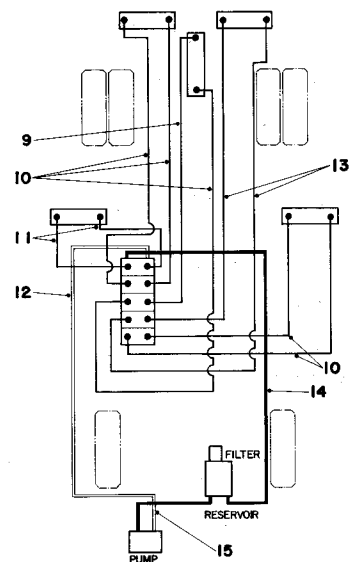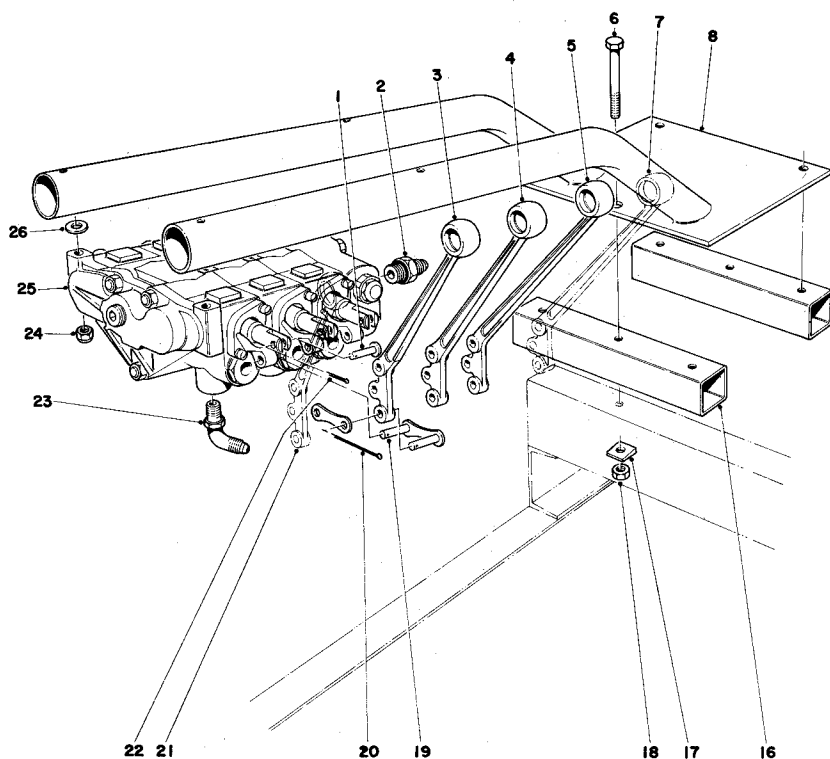

VALVE BANK AND HOSES — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	353-322	Pin	5
2	353-433	Straight Swivel — Female	2
3	5-7840	Modified Lever	1
4	353-323	Lever	1
5	5-7830	Modified Lever	1
6	325-13	Capscrew	3
7	5-7860	Modified Lever	1
8	28-9030	Valve Stand	1
9	26-8520	Hydraulic Hose	1
10	5-0200	Hydraulic Hose (77")	5
11	5-0220	Hydraulic Hose (46")	2
12	36-2480	High Pressure Hose (94")	1
13	5-0230	Hydraulic Hose (102")	2


Ref. No.	Part No.	Description	No. Used
14	28-9010	Hose Return (62")	1
15	18-2350	Suction Hose	1
16	3-0166	Spacer Tube	2
17	3290-216	Bevel Washer	3
18	32146-13	Locknut	3
19	353-319	Connecting Link	5
20	353-320	Cotter Pin	5
21	5-7850	Modified Lever	1
22	353-321	Cotter Pin	5
23	353-212	Male Elbow	10
24	3296-29	Locknut	3
25	44-7701	Hydraulic Control Valve Complete	1
26	3256-23	Washer	3

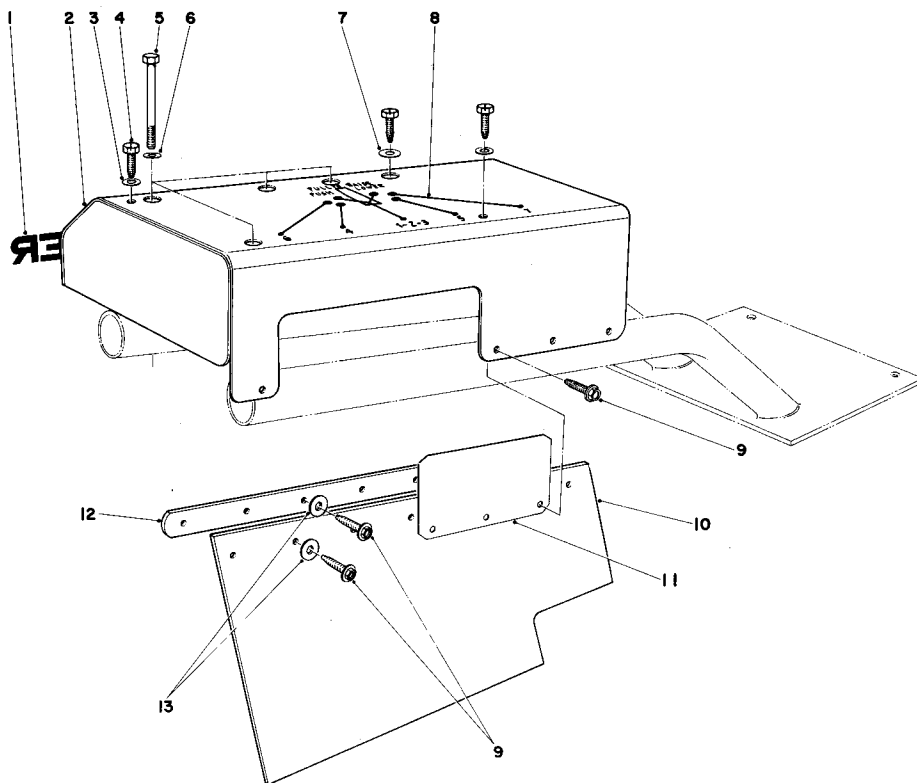

VALVE COVER AND SHIELD ASSEMBLY — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	19-2270	Decal	1
2	28-8960	Valve Cover	1
3	3256-24	Washer	2
4	32104-6	Screw Self Tapping	3
5	322-38	Capscrew	3
6	3256-23	Washer	3
7	3256-4	Washer	1

Ref. No.	Part No.	Description	No. Used
8	5-8080	Decal	1
9	12-3270	Screw Special	7
10	28-8980	Flap Valve	1
11	28-9000	Closure Cover	1
12	28-8990	Strap Support	1
13	3256-22	Washer	2

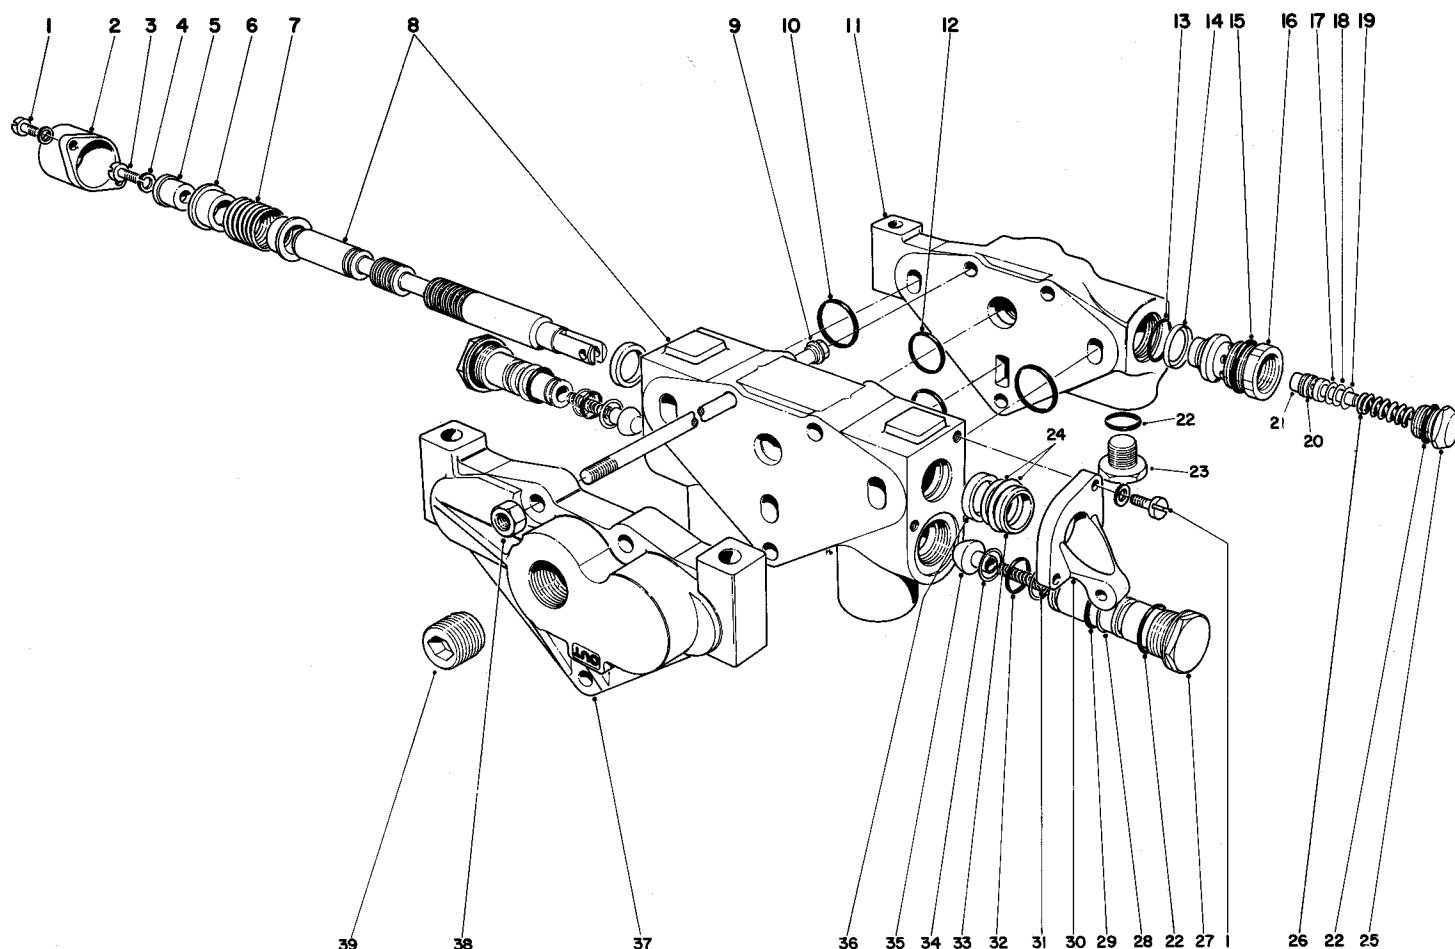


HYDRAULIC VALVE ASSEMBLY NO. 44-7701 — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	353-315	Screw & Wash. Assy.	20
2	353-310	Bonnet	5
3	353-312	Screw	5
4	353-314	Washer	5
5	353-313	Spool Collar	5
6	353-417	Stop Collar	10
7	44-7650	Spring	5
8		Housing & Spool Assy.	5
9	44-7612	Bolt Hex Washer Hd.	3
10	353-528	Section Seal Kit (Incl. Ref. #12)	16
11	44-7621	End Cover	1
12		Sect. Seal, Pressure	16
13	353-758	O-Ring	1
14	353-759	Seal, Back Up	1
15	353-331	O-Ring Seal	1
16	353-760	Rel. Body	1
17	353-328	Shim (.040)	1
18	353-329	Shim (.020)	1
19	353-330	Shim (.010)	1
20	353-392	Seal Relief Poppet	1
21	353-531	Poppet Relief Assembly	1
22	237-80	O-Ring Seal	12
23	353-721	Plug	2

Ref. No.	Part No.	Description	No. Used
24	353-515	Seal Kit (Incl. Ref. #34)	10
25	353-334	Cap, Relief Valve	1
26	46-2370	Spring	1
27	44-7660	Lift Check Plug	10
28	353-306	Back-Up Washer Cover	10
29	353-305	O-Ring Check	10
30	353-324	Handle Bracket	5
31	353-304	Lift Check Spring	10
32	353-302	O-Ring, Check Plug Seal (Inner)	10
33	353-318	Secondary Spool Wiper Seal	5
34	353-303	Back-Up Washer (Inner)	20
35	353-301	Lift Check Poppet	10
36	353-570	Spool Seal	10
37	353-554	End Cover	1
38	3219-3	Locknut	3
39	353-325	Plug	1
*	44-7680	Valve Section Complete (Incl. Ref. #1-8 & 27-36)	5
*	353-481	Plug Load Check (Incl. Ref. #27-29, 32 & 34)	10
*	353-743	Seal Kit (Incl. Ref. #29, 32 & 34)	1


*Not Illustrated

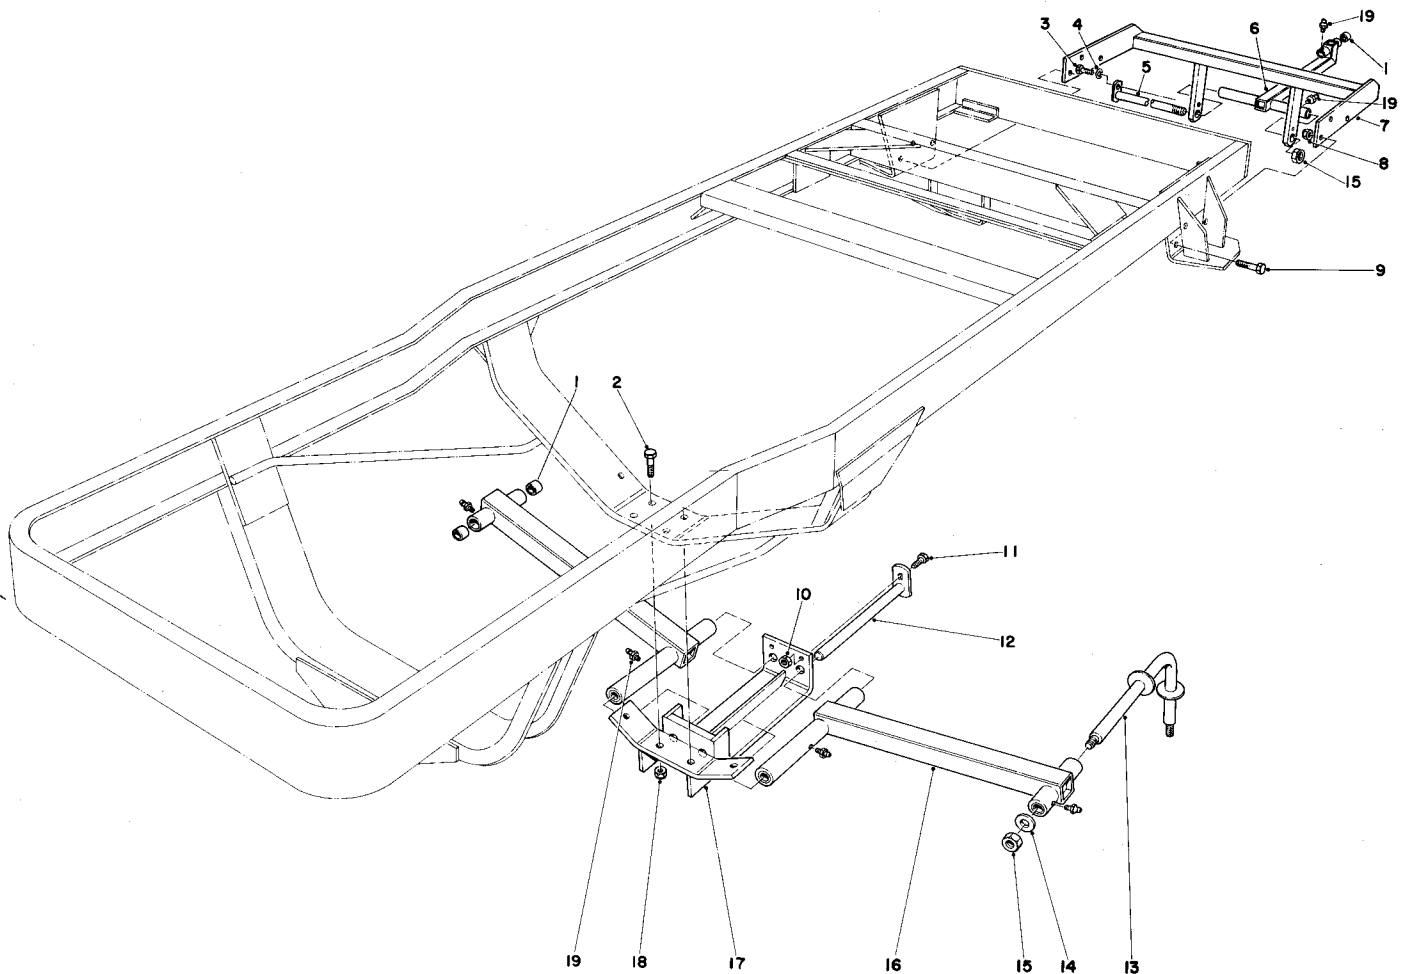

DRAWBAR ASSEMBLY NO. 1, 2 AND 3 POSITION Parkmaster 7 Unit

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	18
2	327-22	Capscrew	4
3	322-3	Capscrew	1
4	3253-4	Lockwasher	1
5	37-2760	Pin — Bail Lift	1
6	26-8390	Lift Arm	1
7	26-8270	Pivot Support	1
8	3296-51	Locknut	6
9	328-24	Capscrew	6
10	32153-3	Locknut	2


Ref. No.	Part No.	Description	No. Used
11	322-6	Capscrew	2
12	26-8250	Lift Arm Pin	2
13	26-8310	Lift Bail Pin	3
14	3-8448	Washer	3
15	3296-50	Locknut	4
16	26-8340	Lift Arm	2
17	26-8160	Lift Arm Support	1
18	3296-24	Locknut	4
19	302-5	Grease Fitting	6

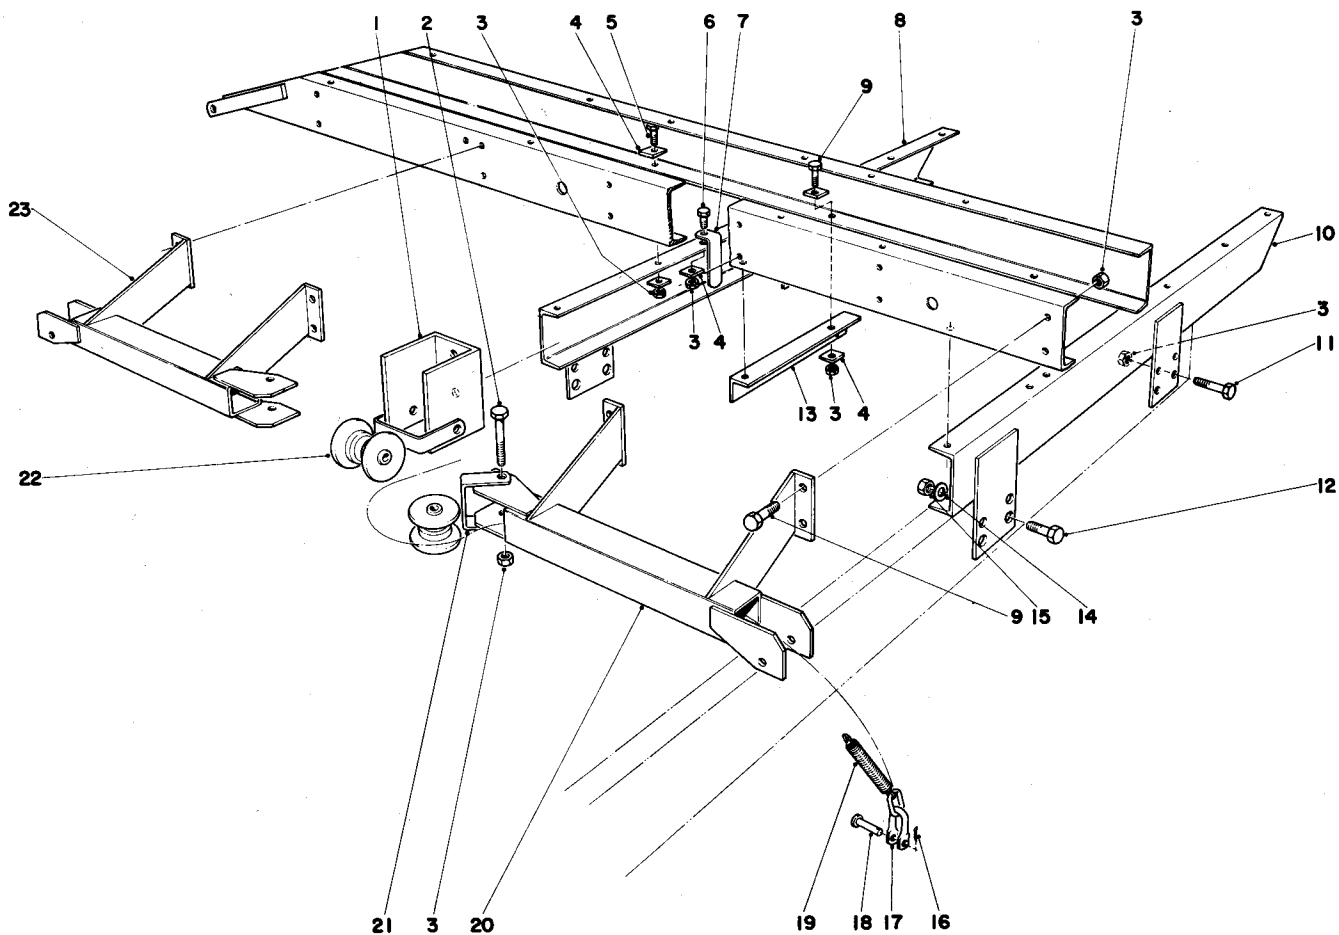

MAIN FRAME ASSEMBLY — Front Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	3-0112	Sheave Bracket	1
2	325-18	Capscrew	5
3	32146-13	Locknut	25
4	3290-216	Washer	10
5	325-8	Capscrew	4
6	325-5	Capscrew	2
7	3-0236	Hose Clip	2
8	3-4608	Side Channel Right	1
9	325-6	Capscrew	12
10	3-4606	Side Channel Left	1
11	325-7	Capscrew	2
12	327-4	Capscrew	6

Ref. No.	Part No.	Description	No. Used
13	26-8580	Chain Support	1
14	3253-8	Lockwasher	6
15	3217-11	Nut	6
16	3272-10	Cotter Pin	2
17	5-2942	Shackle	2
18	283-10	Pin	2
19	5-1706	Spring	2
20	3-6690	Side Mower Tube L.H.	1
21	3-0136	Chain Keeper	5
22	3-2196	Sheave	5
23	3-6680	Side Mower Tube R.H.	1

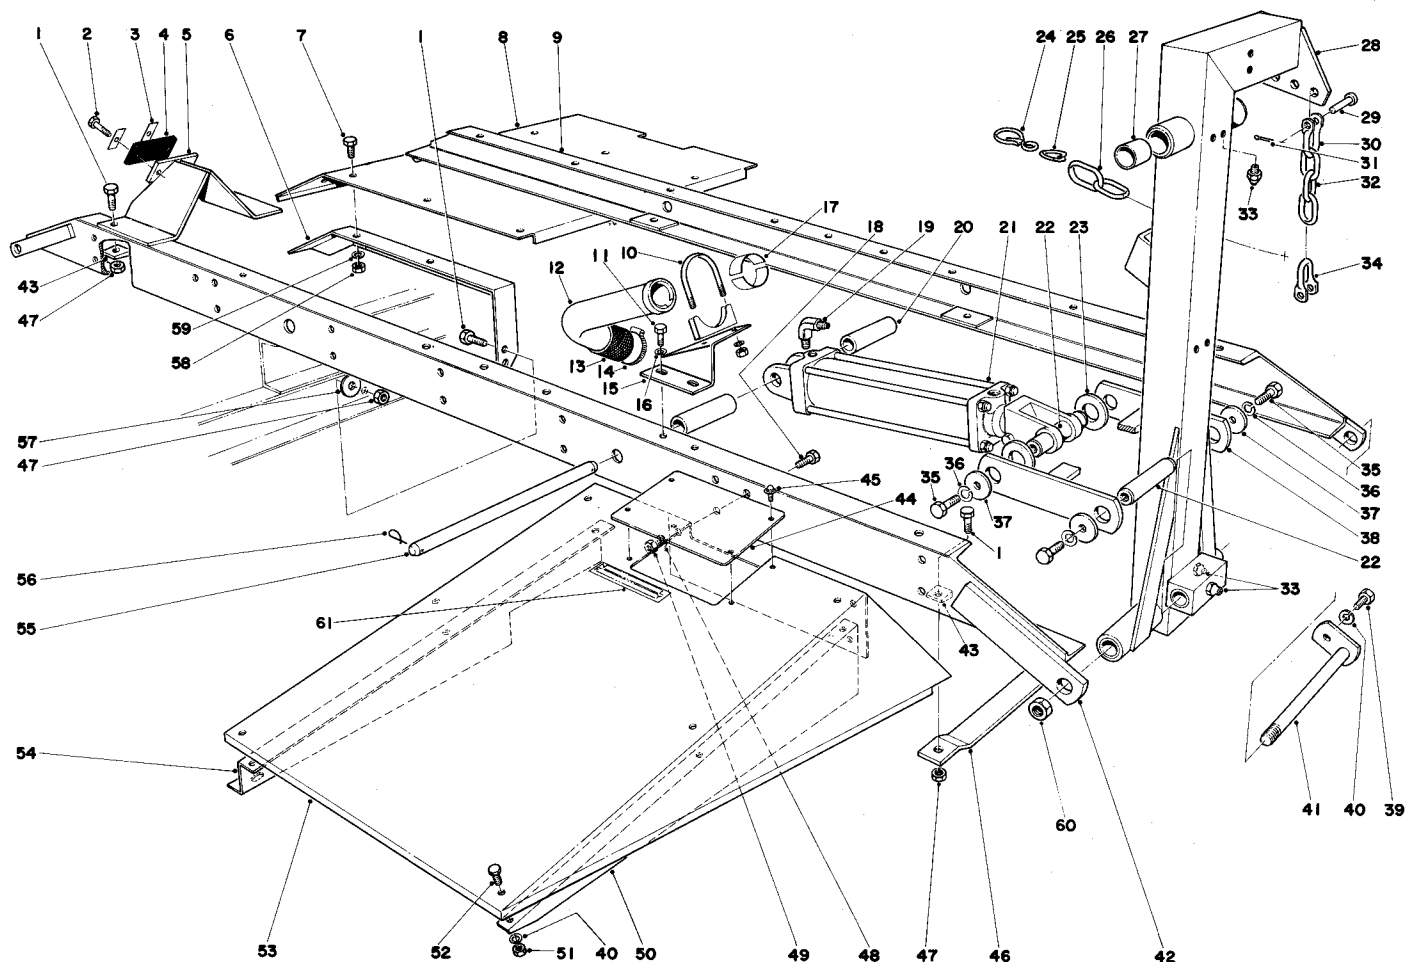


MAIN FRAME ASSEMBLY — Front Center Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	325-6	Capscrew	10
2	3290-319	Machine Screw	4
3	11-5270	Washer Bumper	4
4	11-4590	Bumper Pad	2
5	11-5630	Stop Arm	2
6	3-6520	Bracket	4
7	325-3	Capscrew	16
8	3-4596	Mudguard R.H.	1
*	3-4597	Mudguard L.H.	1
9	37-2840	Front Cross Channel Rear	1
10	18-8590	Clamp	1
11	32104-6	Self-Tapping Screw	2
12	18-2410	Fill Tube	1
13	18-2790	Extension Hose	1
14	2412-42	Hose Clamp	2
15	18-2420	Fill Tube Bracket	1
16	3256-24	Washer	2
17	18-8600	Saddle	2
18	323-6	Capscrew	6
19	5-6560	Elbow (78)	4
20	20-4390	Tube Spacer	4
21	22-7530	Cylinder 12"	2
22	3-0128	Shaft	4

Ref. No.	Part No.	Description	No. Used
23	3256-30	Washer	4
24	286-3	Snap Hook	4
25	287-2	Cold Shut	4
26	3-1365	Safety Chain (15 Links)	2
27	3-0348	Bushing	16
28	37-2800	Lift Arm L.H. No. 6 (Incl. Ref. #27)	1
*	37-2810	Lift Arm R.H. No. 7 (Incl. Ref. #27)	1
29	283-10	Pin	4
30	5-2942	Shackle	2
31	3272-10	Cotter Pin	4
32	3-4636	Lift Chain (7 Links)	2
33	302-5	Grease Fitting	6
34	8-0280	Shackle	2
35	3211-4	Screw	8
36	3253-5	Lockwasher	8
37	5-1720	Washer	8
38	23-2610	Link	2
39	322-3	Capscrew	2
40	3253-4	Lockwasher	14
41	37-2760	Bail Lift Pin	2
42	37-2860	Front Cross Channel Front	1

*Not Illustrated

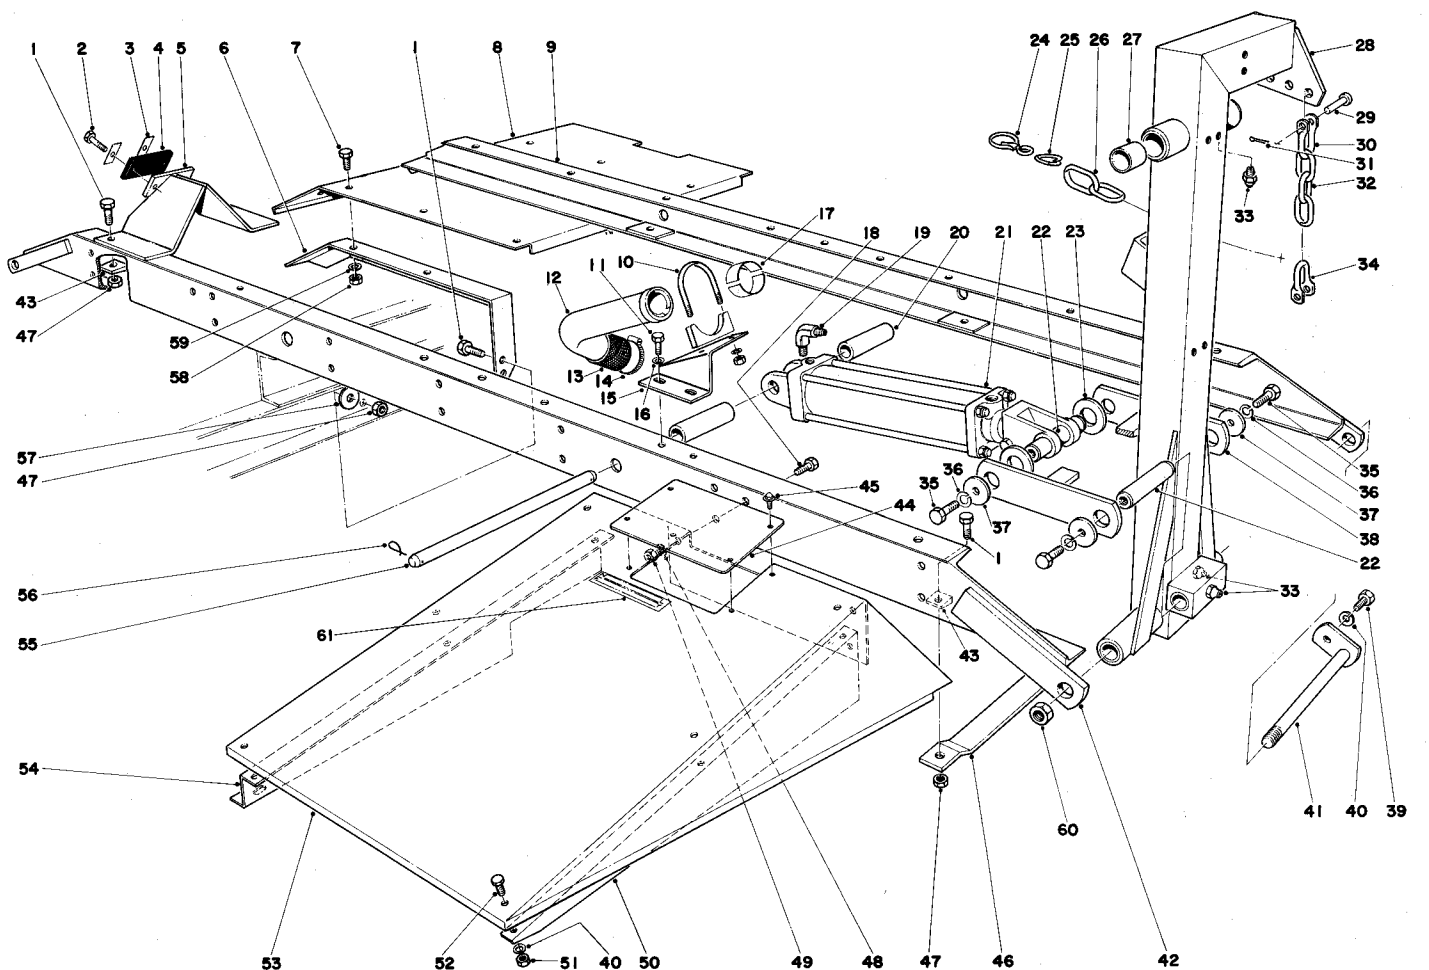


MAIN FRAME ASSEMBLY — Front Center Parkmaster 7 (Continued)

Ref. No.	Part No.	Description	No. Used
43	3290-216	Bevel Washer	8
44	21-5610	Cover	2
45	32104-77	Self-Tapping Screw	8
46	37-2910	Cylinder Rest	2
47	32146-13	Locknut	10
48	3253-21	Lockwasher	6
49	3217-7	Nut	6
50	5-2262	Fender Brace	2
51	3217-6	Nut	12
52	322-2	Capscrew	12
53	21-5480	Fender L.H.	1

Ref. No.	Part No.	Description	No. Used
*	21-5490	Fender R.H.	1
54	5-2263	Fender Mount L.H.	1
*	5-2264	Fender Mount R.H.	1
55	3-0144	Shaft	2
56	5-3126	Spring Pin	4
57	3-1615	Spacer	2
58	3217-9	Nut	16
59	3253-7	Lockwasher	16
60	3296-50	Locknut	2
61	19-3700	Decal-Diesel Fuel	1


*Not Illustrated

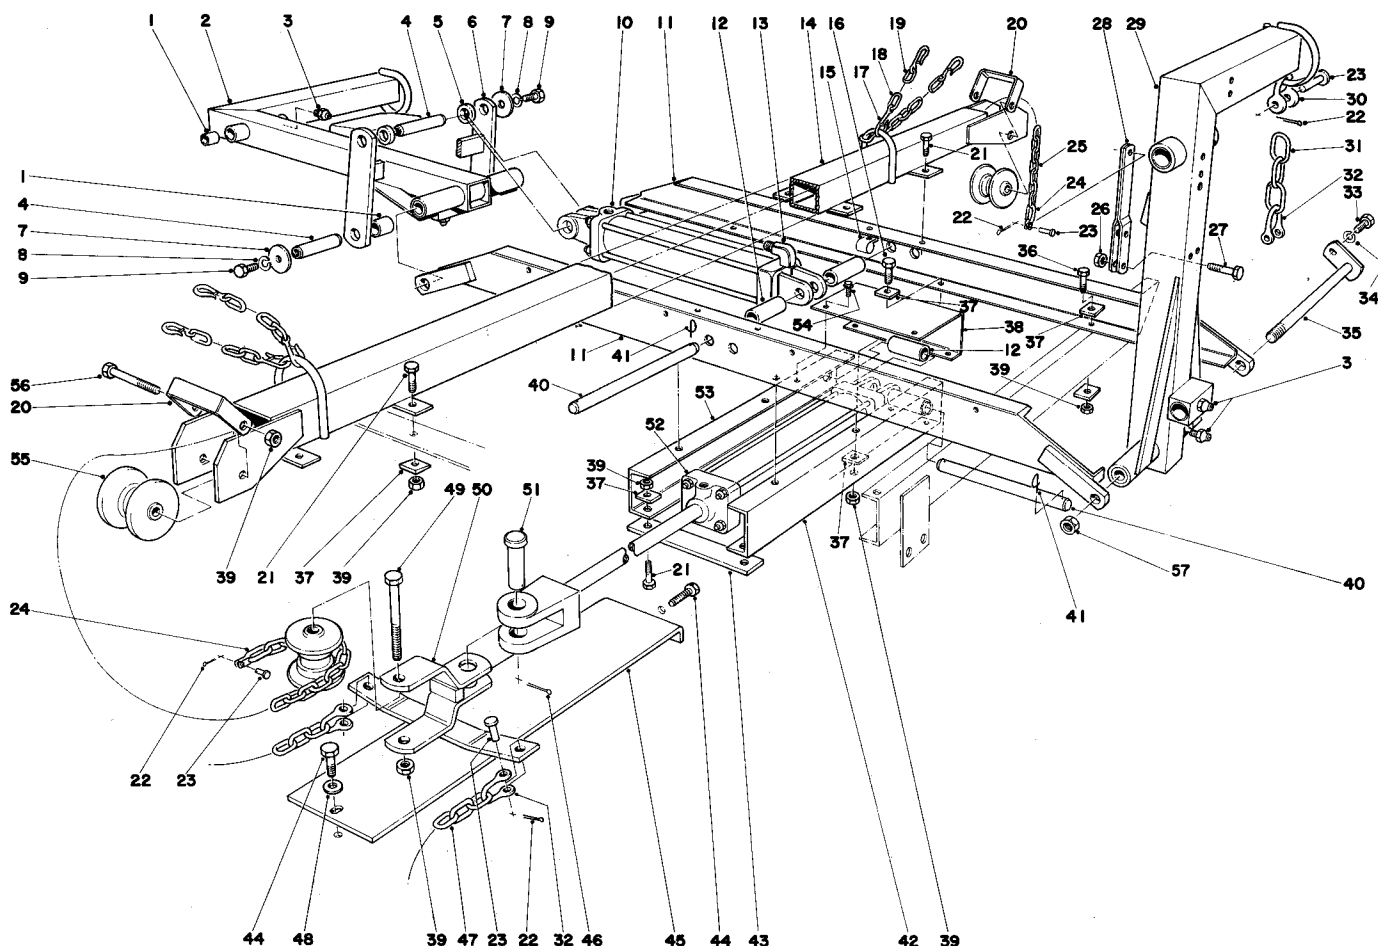

MAIN FRAME ASSEMBLY — Rear Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	16
2	37-2890	Arm Short (Incl. Ref. #1)	1
3	302-5	Grease Fitting	6
4	3-0128	Shaft	4
5	3256-30	Washer	4
6	23-2610	Link	2
7	5-1720	Washer	8
8	3253-5	Lockwasher	8
9	3211-4	Capscrew	8
10	22-7520	Hydraulic Cylinder 10"	2
11	8-1280	Rear Cross Channel	2
12	20-4390	Tube Spacer	6
13	5-6560	Elbow	6
14	26-8460	Channel Brace	1
15	304-61	Hose Clamp	1
16	325-7	Capscrew	4
17	286-3	Safety Hook	4
18	287-2	Repair Link — Chain	4
19	3-1365	Chain	2
20	3-0136	Chain Keeper	2
21	325-6	Capscrew	10
22	3272-10	Cotter Pin	8
23	283-10	Pin	8


Ref. No.	Part No.	Description	No. Used
24	5-2942	Shackle	2
25	26-8540	Lift Chain	1
26	32146-2	Locknut	1
27	323-8	Capscrew	1
28	26-8370	Lift	1
29	37-2880	Arm Short (Incl. Ref. #1)	1
30	8-0280	Chain Shackle	2
31	3-4636	Chain Lift Bail	2
32	8-0280	Shackle	4
33	322-3	Capscrew	2
34	3253-4	Lockwasher	2
35	37-2760	Pin Bail Lift	2
36	325-8	Capscrew	4
37	3290-216	Washer	18
38	42-3550	Cover Cylinder Mount	1
39	32146-13	Locknut	18
40	3-0144	Shaft	3
41	5-3126	Pin Spring	6
42	26-8490	Channel L.H.	1
43	26-9690	Cylinder Rest	1
44	32104-6	Screw Self Tapping	2
45	18-2620	Plate	1
46	3272-13	Cotter Pin	1

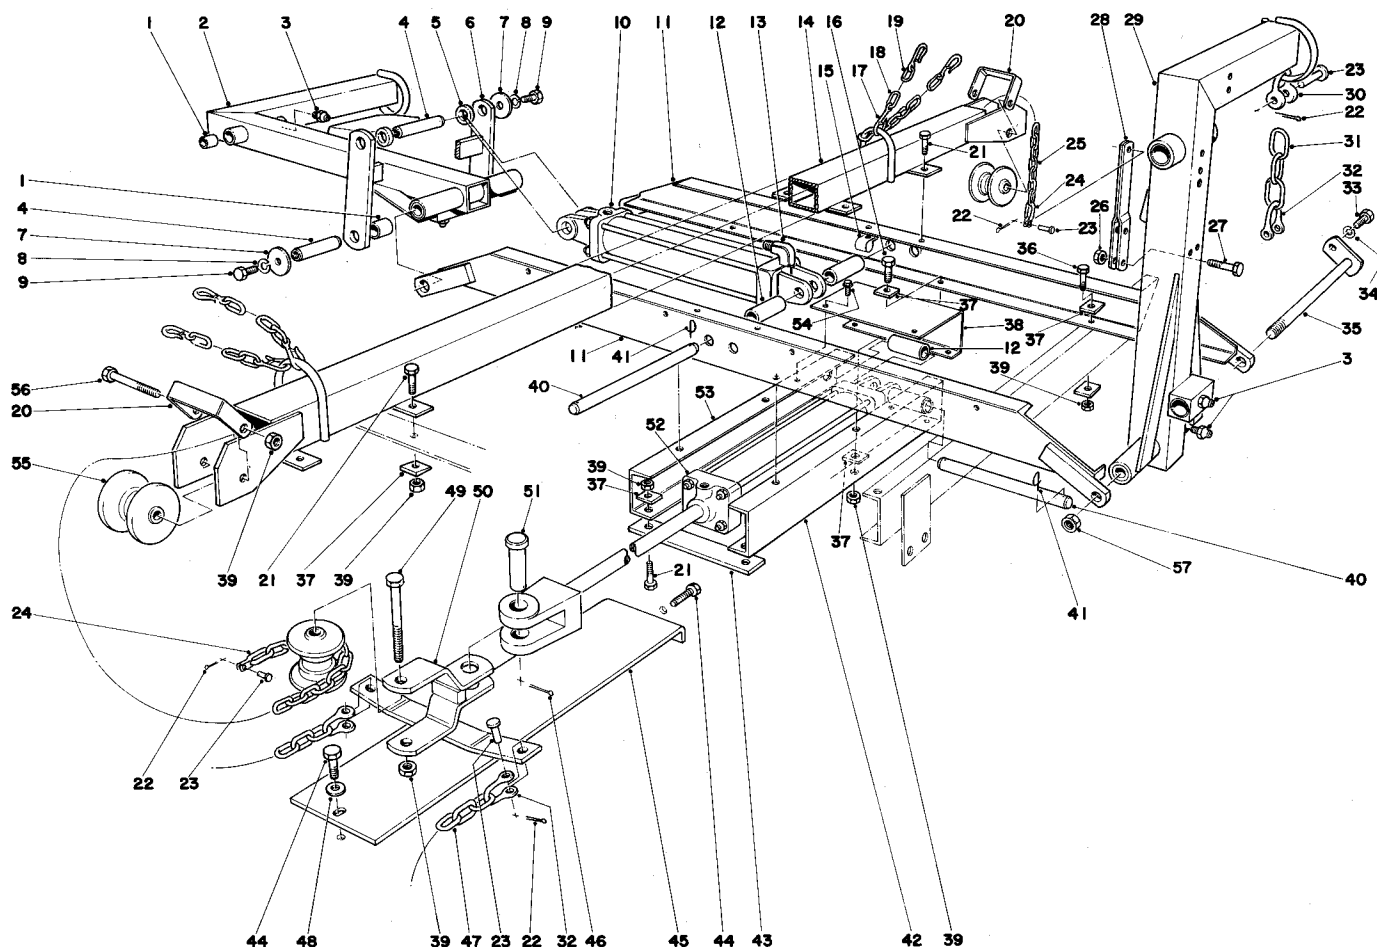

MAIN FRAME ASSEMBLY — Rear Parkmaster 7 (Continued)

Ref. No.	Part No.	Description	No. Used
47	26-8530	Lift Chain	2
48	3256-24	Flat Washer	1
49	325-14	Capscrew	1
50	26-8210	Pulley Support	1
51	26-8590	Pin Cylinder	1
52	22-7530	Cylinder 12"	1


Ref. No.	Part No.	Description	No. Used
53	37-2790	Channel R.H.	1
54	32104-17	Hex Hd. Self-Tapping Screw	4
55	3-2196	Sheave	3
56	325-18	Capscrew	2
57	3296-50	Locknut	2

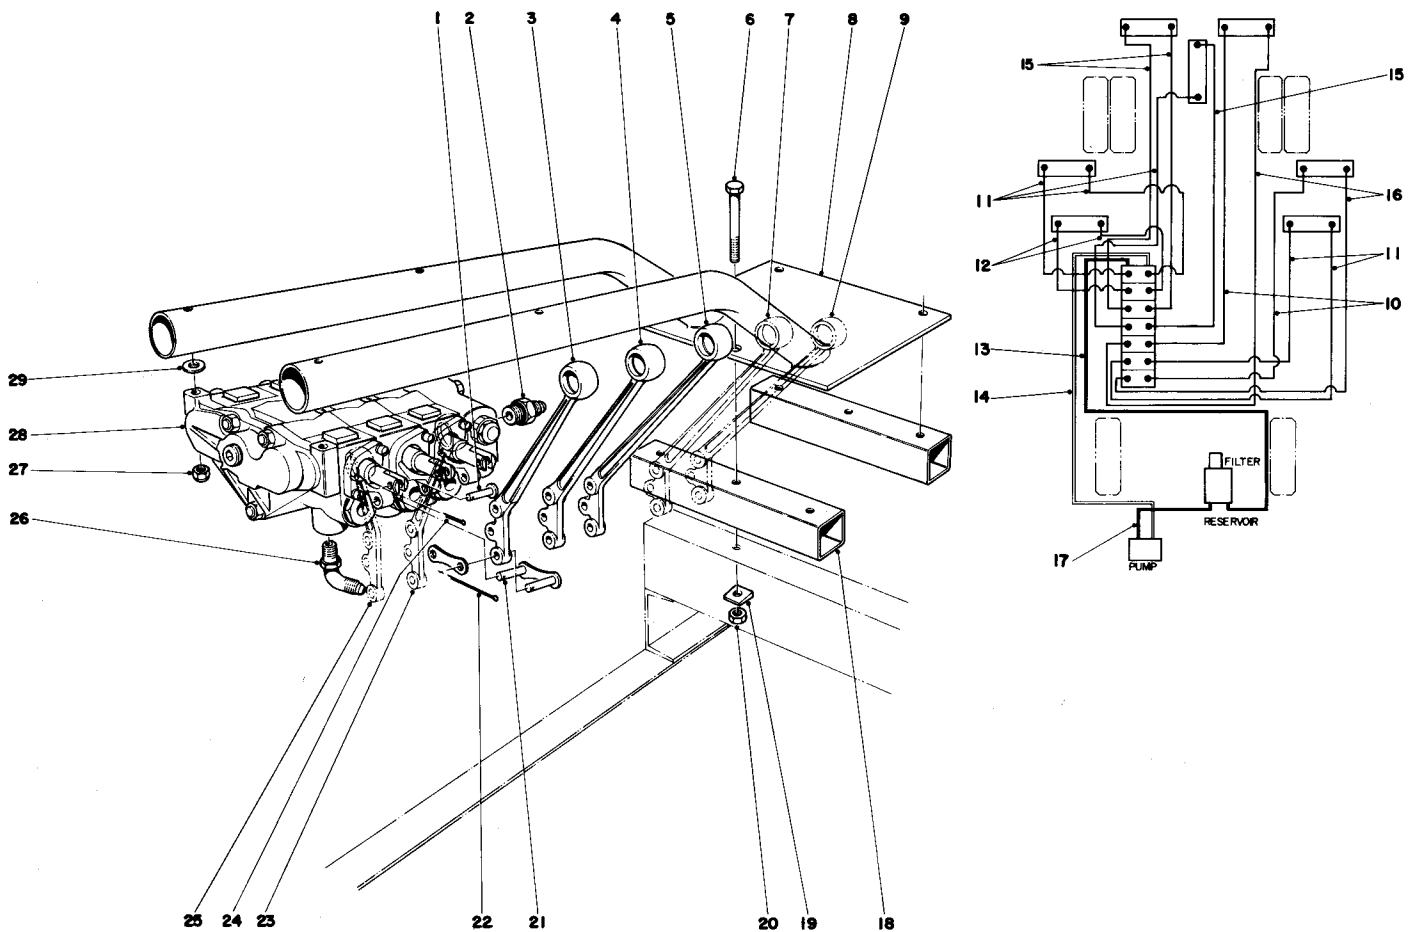

VALVE BANK AND HOSES — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	353-322	Pin	7
2	353-433	Straight Swivel	2
3	5-7840	Lever Modified	1
4	353-323	Lever	1
5	5-7830	Lever Modified	1
6	325-13	Capscrew	3
7	5-7860	Lever Modified	1
8	28-9030	Valve Stand	1
9	11-4780	Lever Modified	1
10	5-0230	Hydraulic Hose 102"	2
11	5-0200	Hydraulic Hose 77"	5
12	5-0220	Hydraulic Hose 46"	2
13	28-9010	Low Pressure Hose (62")	1
14	36-2480	High Pressure Hose (94")	1
15	26-8520	Hydraulic Hose (84")	3


Ref. No.	Part No.	Description	No. Used
16	5-0210	Hydraulic Hose 116"	2
17	18-2350	Suction Hose	1
18	3-0166	Tube Spacer	2
19	3290-216	Bevel Washer	3
20	32146-13	Locknut	3
21	353-319	Connecting Link	7
22	353-320	Cotter Pin	7
23	5-7850	Modified Lever	1
24	353-321	Cotter Pin	7
25	11-4790	Modified Lever	1
26	353-212	Male Elbow	14
27	32146-5	Locknut	3
28	44-7700	Hydraulic Control Valve Complete	1
29	3256-23	Washer	3

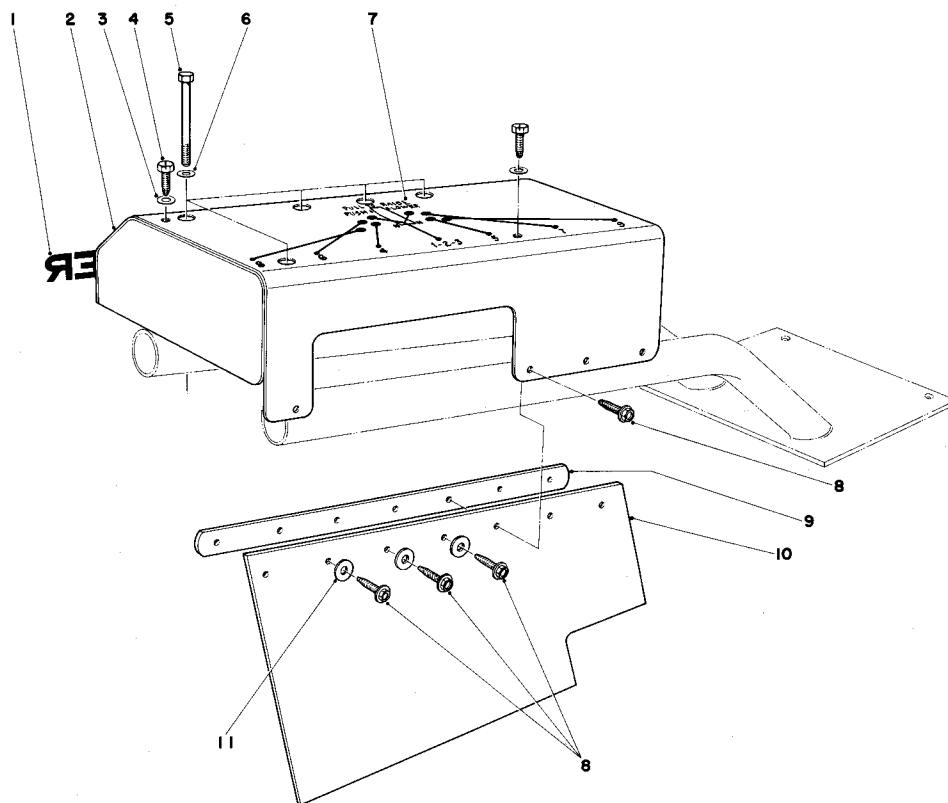

VALVE COVER & SHIELD ASSEMBLY — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	19-2280	Decal	1
2	28-8960	Valve Cover	1
3	3256-24	Washer	2
4	32104-6	Self-Tapping Screw	2
5	322-38	Capscrew	3
6	3256-23	Washer	3

Ref. No.	Part No.	Description	No. Used
7	11-4770	Decal	1
8	12-3270	Screw Special	7
9	28-8990	Strap Support	1
10	28-8980	Flap Valve	1
11	3256-22	Washer	3

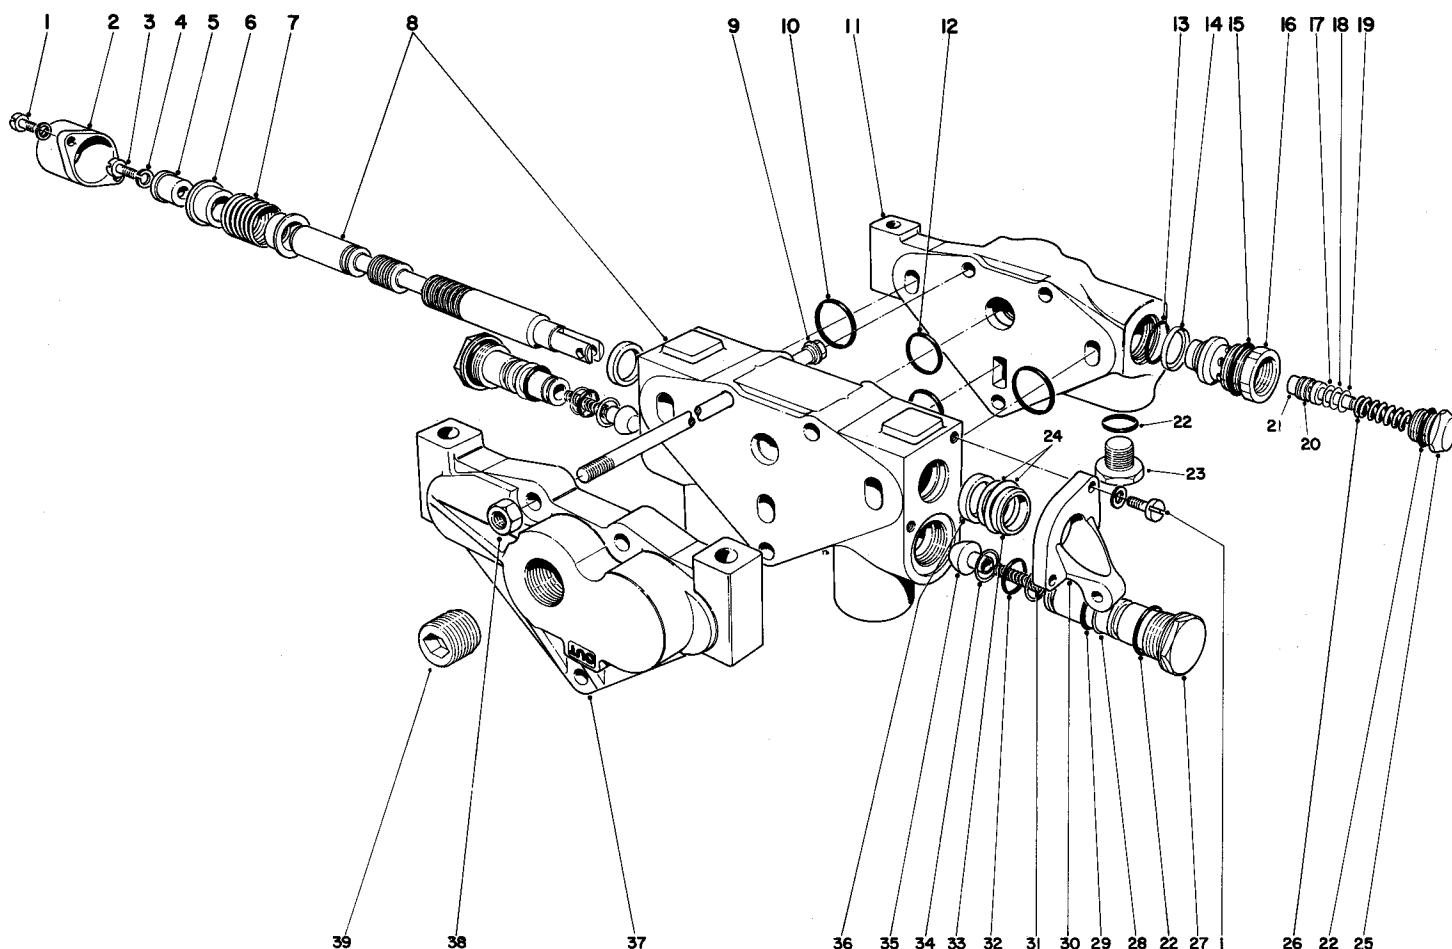


HYDRAULIC VALVE ASSEMBLY NO. 44-7700 — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	353-315	Screw & Wash. Assy.	20
2	353-310	Bonnet	5
3	353-312	Screw	5
4	353-314	Washer	5
5	353-313	Spool Collar	5
6	353-417	Stop Collar	10
7	44-7650	Spring	5
8		Housing & Spool Assy.	5
9	44-7611	Bolt Hex Washer Hd.	3
10	353-528	Section Seal Kit (Incl. Ref. #12)	16
11	44-7621	End Cover	1
12		Sect. Seal, Pressure	16
13	353-758	O-Ring	1
14	353-759	Seal, Back Up	1
15	353-331	O-Ring Seal	1
16	353-760	Rel. Body	1
17	353-328	Shim (.040)	1
18	353-329	Shim (.020)	1
19	353-330	Shim (.010)	1
20	353-392	Seal Relief Poppet	1
21	353-531	Poppet Relief Assembly	1
22	237-80	O-Ring Seal	12
23	353-721	Plug	2

Ref. No.	Part No.	Description	No. Used
24	353-515	Seal Kit (Incl. Ref. #34)	10
25	353-334	Cap, Relief Valve	1
26	46-2380	Spring	1
27	44-7660	Lift Check Plug	10
28	353-306	Back-Up Washer Cover	10
29	353-305	O-Ring Check	10
30	353-324	Handle Bracket	5
31	353-304	Lift Check Spring	10
32	353-302	O-Ring, Check Plug Seal (Inner)	10
33	353-318	Secondary Spool Wiper Seal	5
34	353-303	Back-Up Washer (Inner)	20
35	353-301	Lift Check Poppet	10
36	353-570	Spool Seal	10
37	353-554	End Cover	1
38	3219-3	Locknut	3
39	353-325	Plug	1
*	44-7680	Valve Section Complete (Incl. Ref. #1-8 & 27-36)	7
*	353-481	Plug Load Check (Incl. Ref. #27-29, 32 & 34)	10
*	353-743	Seal Kit (Incl. Ref. #29, 32 & 34)	1


*Not Illustrated

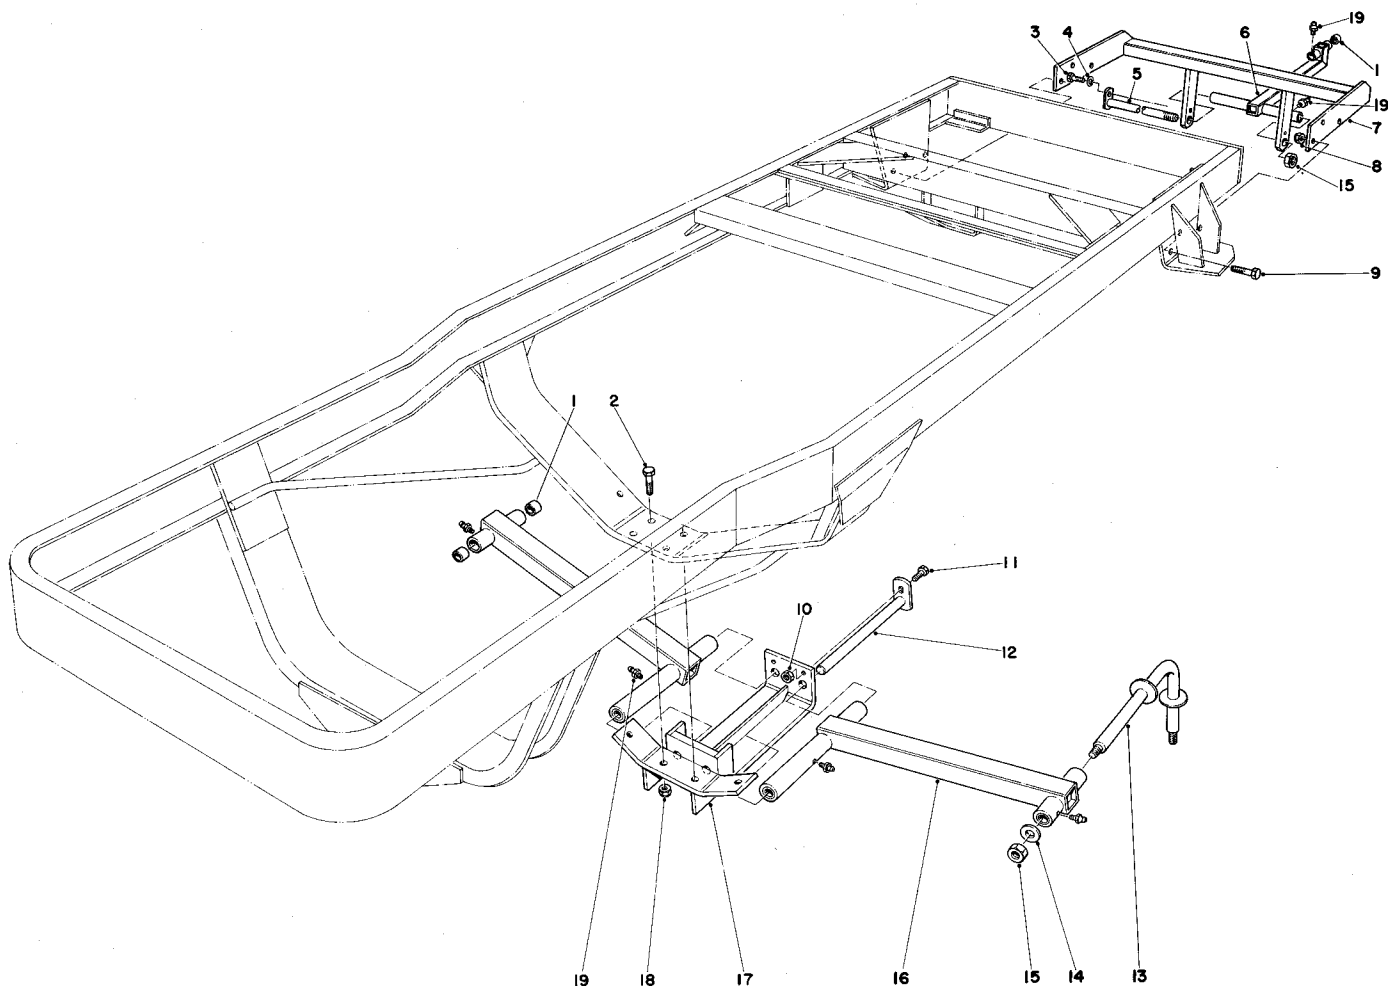

DRAWBAR ASSEMBLY NO. 1, 2 & 3 POSITION — Parkmaster 9 Unit

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	18
2	327-22	Capscrew	4
3	322-3	Capscrew	1
4	3253-4	Lockwasher	1
5	37-2760	Pin — Bail Lift	1
6	26-8390	Lift Arm	1
7	26-8270	Pivot Support	1
8	3296-51	Locknut	6
9	328-24	Capscrew	6
10	32153-3	Locknut	2


Ref. No.	Part No.	Description	No. Used
11	322-6	Capscrew	2
12	26-8250	Lift Arm Pin	2
13	26-8310	Lift Bail Pin	3
14	3-8448	Washer	3
15	3296-50	Locknut	4
16	26-8340	Lift Arm	2
17	26-8160	Lift Arm Support	1
18	3296-24	Locknut	4
19	302-5	Grease Fitting	6

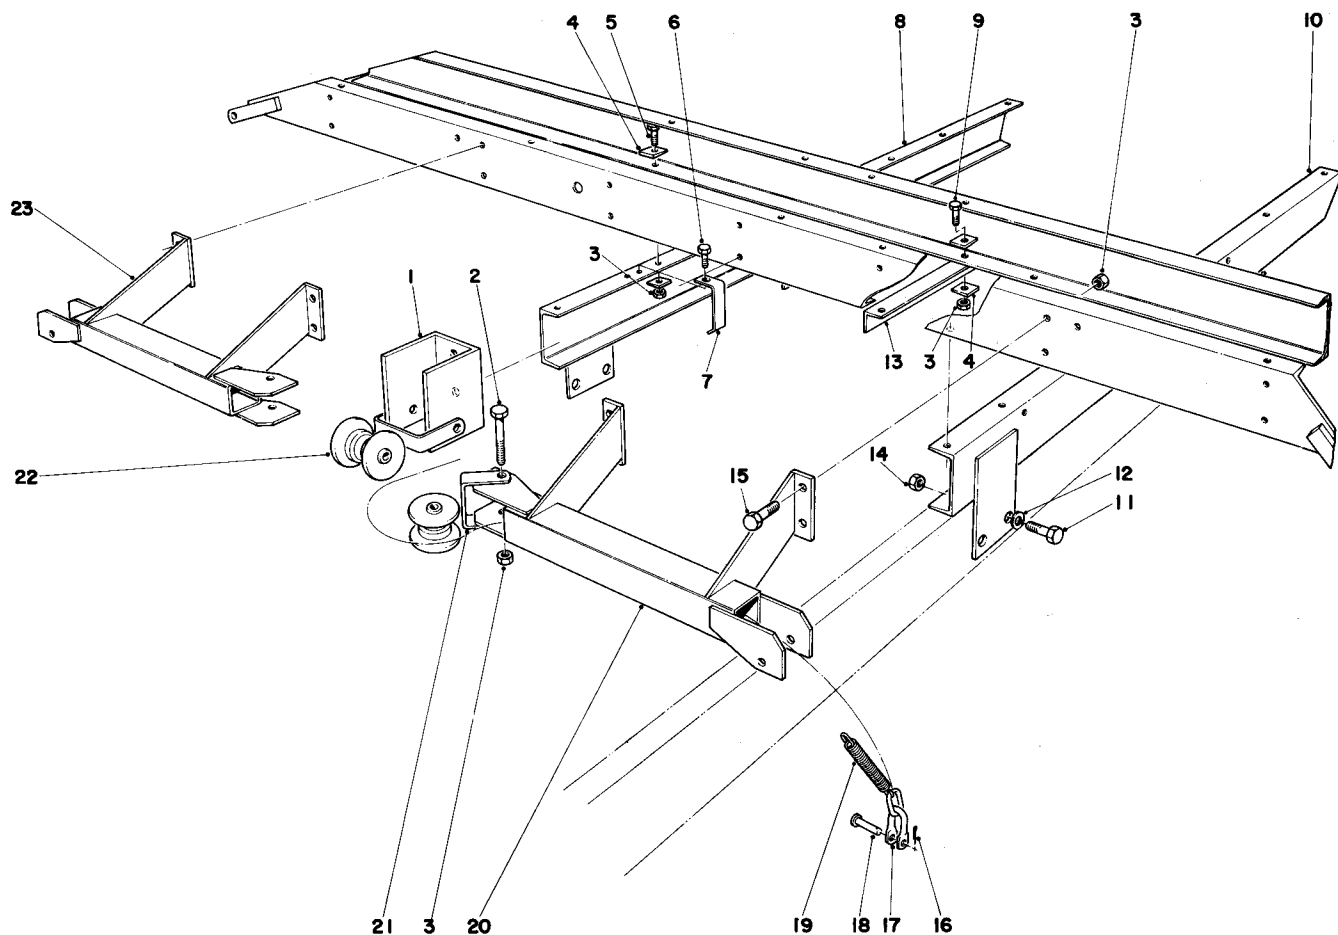

MAIN FRAME ASSEMBLY — Front Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3-0112	Sheave Bracket	1
2	325-18	Capscrew	5
3	32146-13	Locknut	19
4	3290-216	Washer	14
5	325-8	Capscrew	4
6	32104-6	Screw Self Tapping	2
7	11-4630	Hose Retainer	2
8	11-3980	Side Channel Right	1
9	325-6	Capscrew	2
10	11-4000	Side Channel Left	1
11	327-4	Capscrew	8
12	3253-8	Lockwasher	8

Ref. No.	Part No.	Description	No. Used
13	26-8580	Chain Support	1
14	3217-11	Nut	8
15	325-5	Capscrew	10
16	3272-10	Cotter Pin	2
17	5-2942	Shackle — Long	2
18	283-10	Pin	2
19	5-1706	Spring	2
20	3-6690	Tube L.H.	1
21	3-0136	Chain Keeper	5
22	3-2196	Sheave	5
23	3-6680	Tube R.H.	1

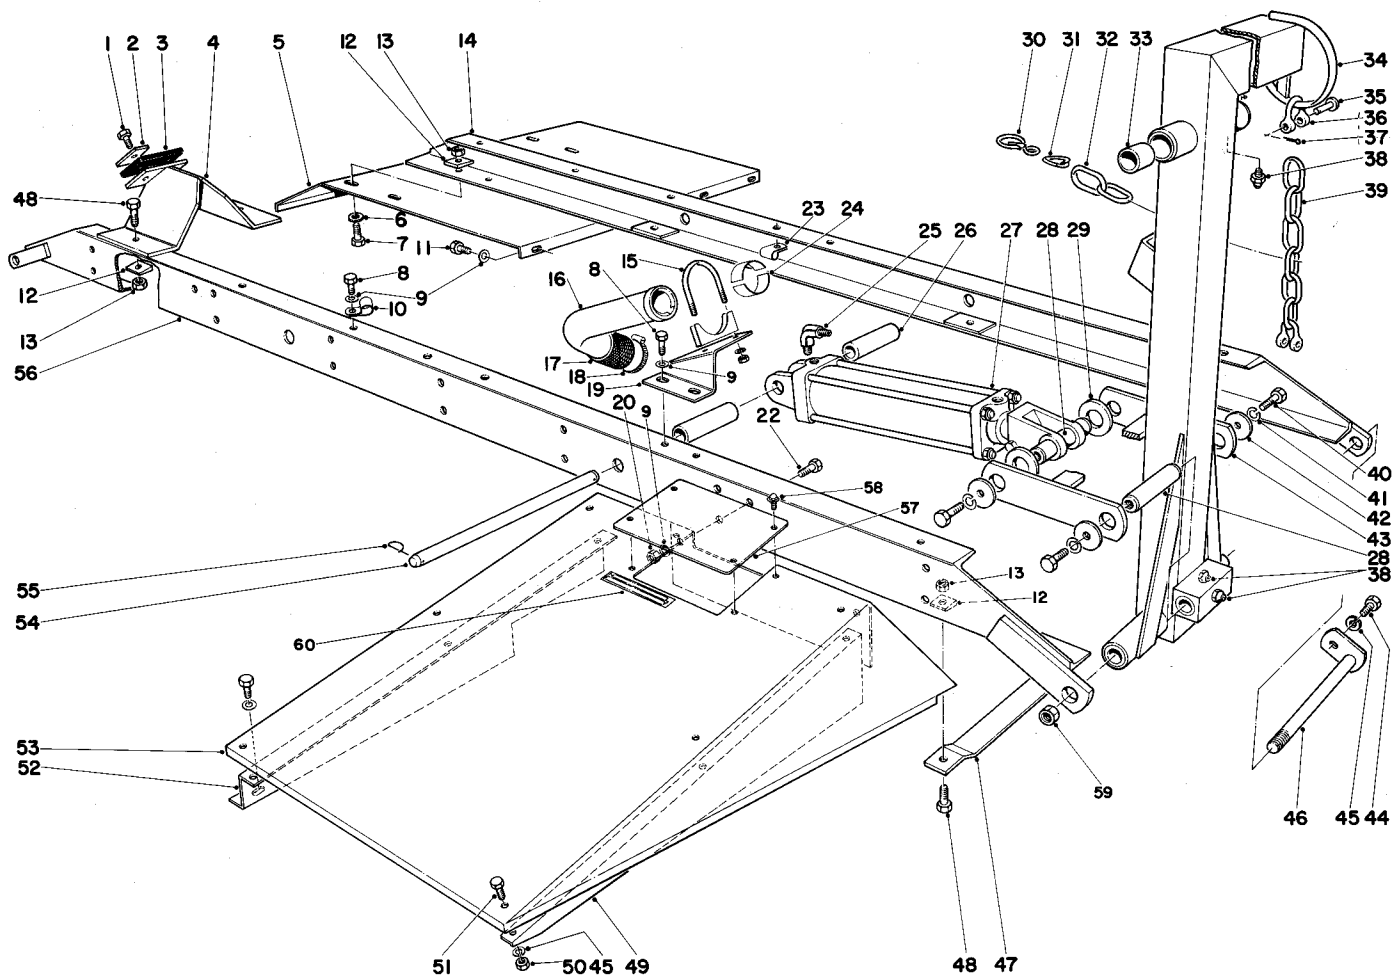


MAIN FRAME ASSEMBLY — Front Center Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3290-319	Machine Screw	4
2	11-5270	Bumper Washer	4
3	11-4590	Bumper Pad	4
4	11-5630	Stop	2
5	11-4620	Fender R.H.	1
*	11-4610	Fender L.H.	1
6	3256-26	Washer	4
7	325-5	Capscrew	4
8	32104-6	Self-Tapping Screw	3
9	3256-24	Washer	15
10	2412-39	Hose Clamp	1
11	32104-98	Self-Tapping Screw	8
12	3290-216	Bevel Washer	12
13	32146-13	Locknut	12
14	37-2840	Rear Cross Channel	1
15	18-8590	Fuel Tank Extension Clamp	1
16	18-2410	Fill Tube	1
17	18-2790	Extension Hose	1
18	2412-42	Hose Clamp	2
19	18-2420	Fill Tube Bracket	1
20	32146-2	Nut	6
22	323-6	Capscrew	6
23	304-61	Hose Clamp	1

Ref. No.	Part No.	Description	No. Used
24	18-8600	Saddle	2
25	5-6560	Elbow (No. 78)	4
26	20-4390	Spacer Tube	4
27	22-7530	Cylinder 12"	2
28	3-0128	Shaft	4
29	3256-30	Washer	4
30	286-3	Safety Hook	4
31	287-2	Cold Shut	4
32	3-1365	Chain (15 Links)	2
33	3-0348	Bushing	8
34	11-4220	Lift Arm (No. 6)	1
		(Incl. Ref. #33)	
*	11-4250	Lift Arm (No. 7)	1
		(Incl. Ref. #33)	
35	283-10	Pin	4
36	8-0280	Short Shackle	4
37	3272-10	Cotter Pin	4
38	302-5	Grease Fitting	6
39	11-4260	Lift Chain (6 Links)	2
40	3211-2	Capscrew	8
41	3253-5	Lockwasher	8
42	5-1720	Washer	8
43	23-2610	Link	4

*Not Illustrated

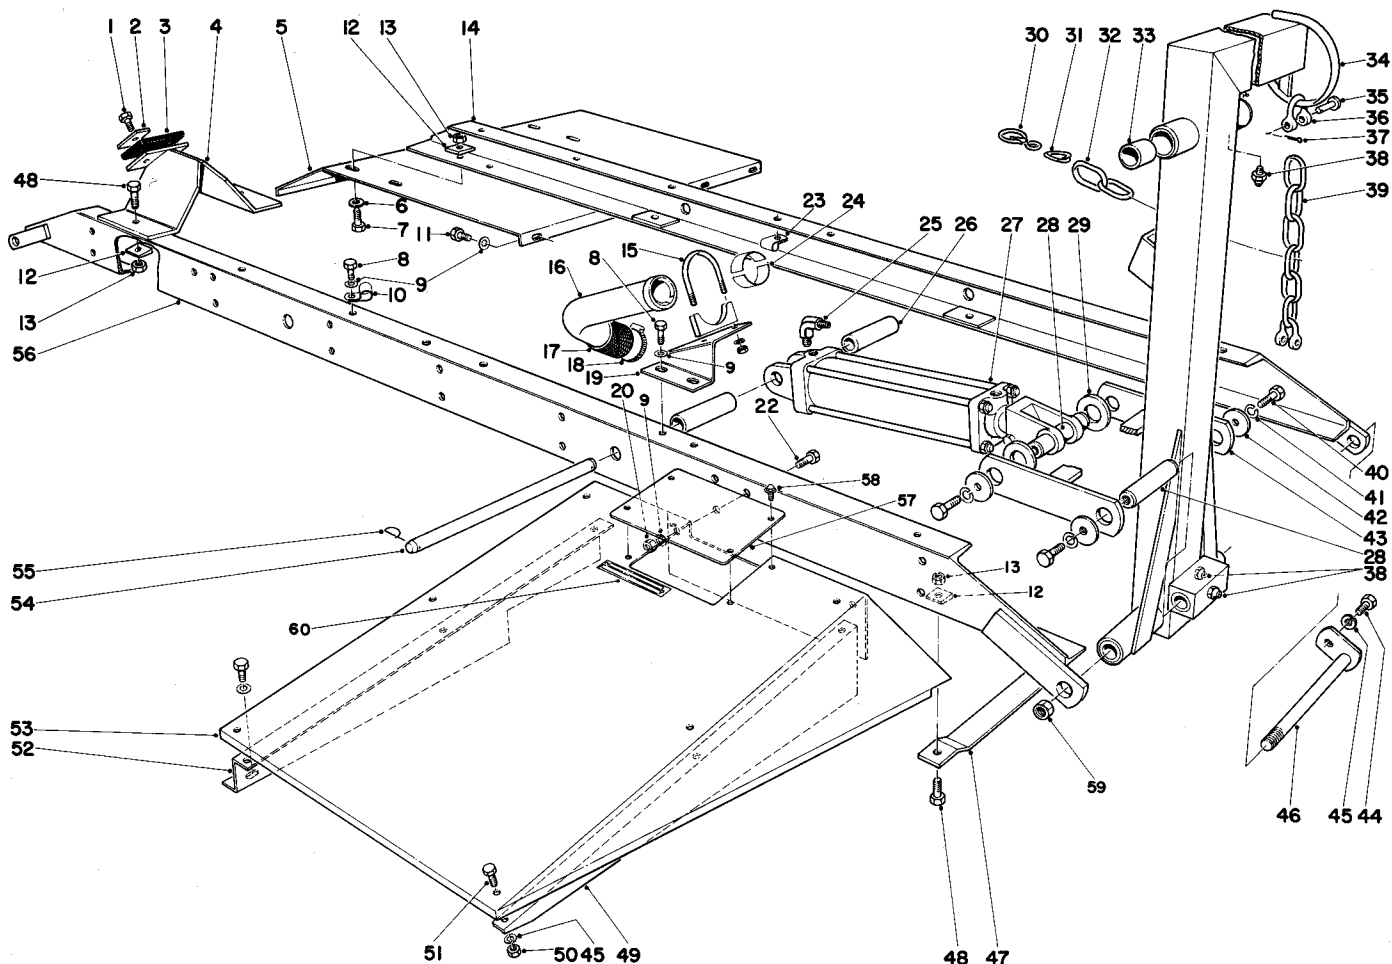


MAIN FRAME ASSEMBLY — Front Center Parkmaster 9 (Continued)

Ref. No.	Part No.	Description	No. Used
44	322-3	Capscrew	2
45	3253-4	Lockwasher	14
46	37-2760	Lift Bail Pin	2
47	37-2910	Cylinder Rest	2
48	325-6	Capscrew	8
49	5-2262	Fender Brace	2
50	3217-6	Nut	12
51	322-2	Capscrew	12
52	5-2263	Fender Mount L.H.	1
*	5-2264	Fender Mount R.H.	1

Ref. No.	Part No.	Description	No. Used
53	21-5480	Fender L.H.	1
*	21-5490	Fender R.H.	1
54	3-0144	Shaft	2
55	5-3126	Spring Pin	4
56	37-2860	Front Cross Channel (Front Position)	1
57	21-5610	Cover Fender	2
58	32104-77	Self-Tapping Screw	8
59	3296-50	Locknut	2
60	19-3700	Decal - Diesel Fuel	1

*Not Illustrated

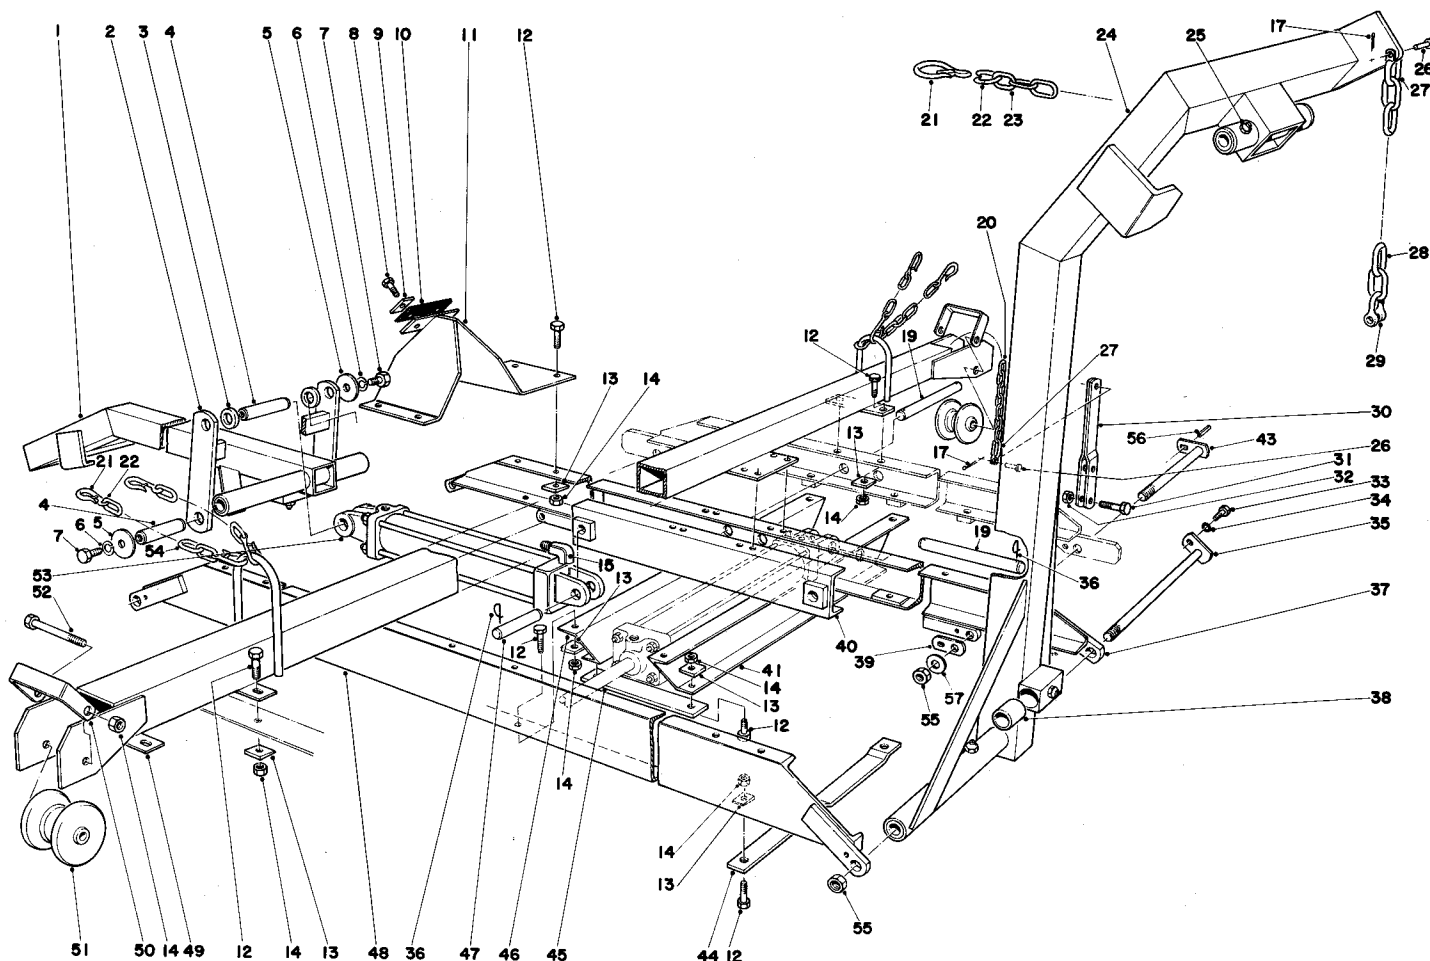


MAIN FRAME ASSEMBLY — Rear Center Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	11-4280	Lift Arm No. 9 (Incl. Ref. #38)	1
2	23-2620	Link	2
3	3256-30	Washer	4
4	11-4490	Shaft	4
5	5-1720	Washer	8
6	3253-5	Lockwasher	8
7	3211-2	Cap screw	8
8	3290-319	Machine Screw	4
9	11-5270	Washer Bumper	4
10	11-4590	Pad Bumper	2-6
11	11-4540	Stop R.H.	1
*	11-4580	Stop L.H.	1
12	325-6	Cap screw	36
13	3290-216	Bevel Washer	42
14	32146-13	Locknut	36
15	11-9800	Elbow (55)	4
17	3272-10	Cotter Pin	5
19	3-0144	Pin	3
20	26-8540	Lift Chain	1
21	286-3	Snap Hook	10
22	287-2	Repair Link — Chain	10
23	11-4710	Safety Chain	1
24	11-4270	Lift Arm No. 8 (Incl. Ref. #38)	1
25	302-5	Grease Fitting	6
26	283-10	Pin	5
27	5-2942	Shackle — Long	3
28	3-4636	Lift Chain 7 Link	2
29	8-0280	Shackle Short	2

*Not Illustrated


Ref. No.	Part No.	Description	No. Used
30	26-8370	Lift Bracket	1
31	323-8	Cap screw	1
32	32146-2	Nut	1
33	322-3	Cap screw	2
34	3253-4	Lockwasher	2
35	37-4570	Pin Bail Lift	2
36	5-3126	Spring Pin	10
37	11-4060	Center Cross Channel	1
38	3-0348	Bushing	16
39	8-0410	Tab — Lift Arm	2
40	11-4440	Mount Cylinder	1
41	26-8440	Channel L.H.	1
43	37-2760	Pin — Bail Lift	2
44	20-4430	Cylinder Rest	2
45	26-9690	Cylinder Rest	1
46	26-8430	Channel R.H.	1
47	24-9510	Pin	2
48	11-4080	Front Cross Channel	1
49	26-8480	Channel Brace	1
50	3-0136	Chain Keeper	2
51	3-2196	Sheave	2
52	325-18	Cap screw	2
53	22-7530	Cylinder 12"	2
54	3-1365	Safety Chain	4
55	3296-50	Locknut	4
56	32121-96	Roll Pin	2
57	3256-10	Washer	2

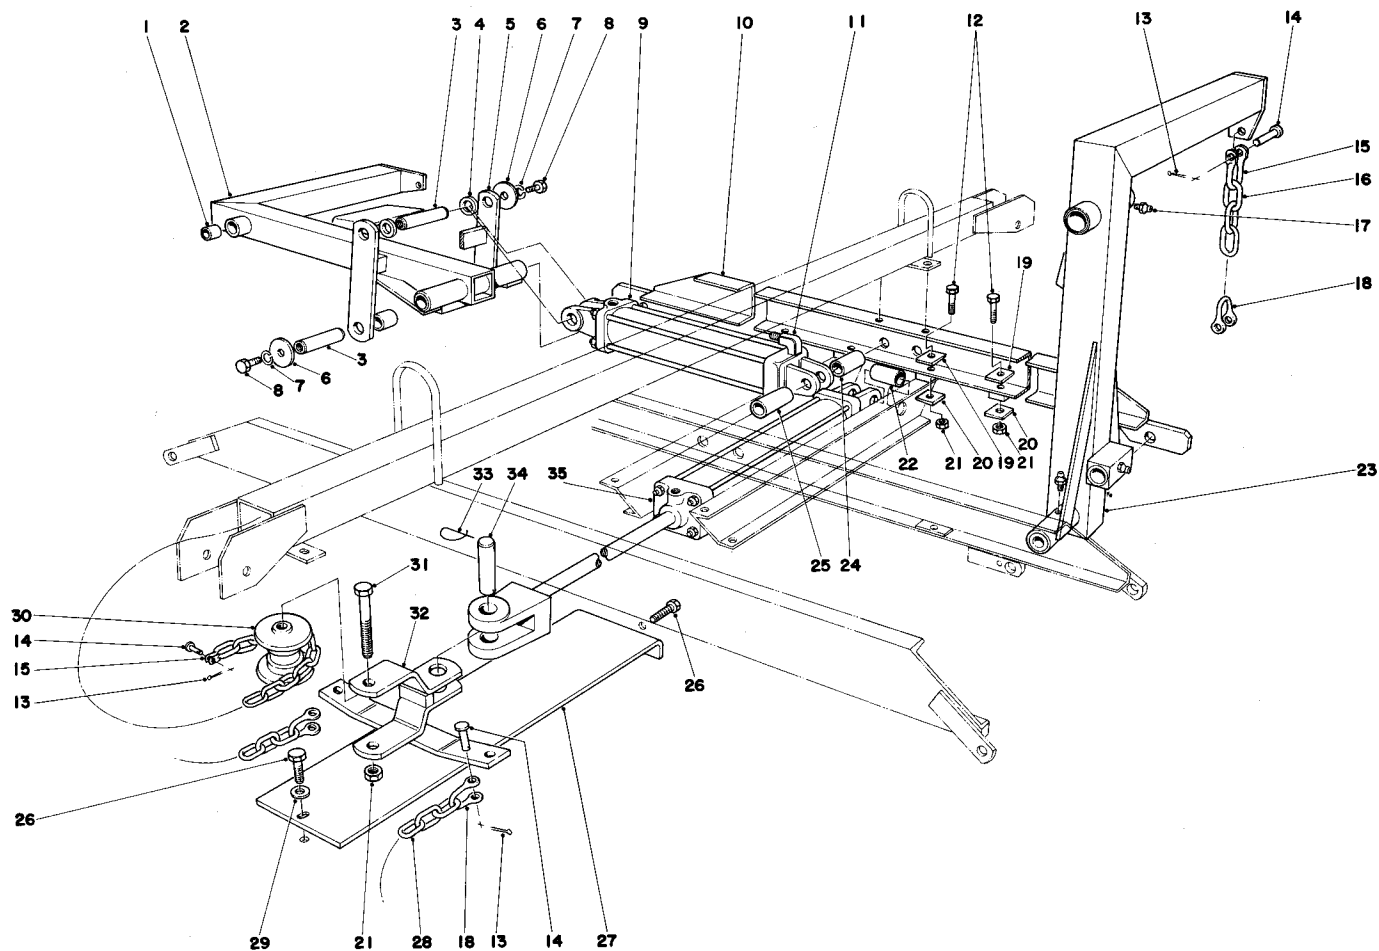

MAIN FRAME ASSEMBLY — Rear Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	16
2	11-4210	Lift Arm Assy. (Incl. Ref. #1)	1
3	3-0128	Shaft	4
4	3256-30	Washer	4
5	23-2610	Link	2
6	5-1720	Washer	8
7	3253-5	Lockwasher	8
8	3211-2	Capscrew	8
9	22-7520	Cylinder 10"	2
10	37-4590	Rear Cross Channel	1
11	5-6560	Elbow	4
12	325-11	Capscrew	4
13	3272-10	Cotter Pin	7
14	283-10	Pin	7
15	5-2942	Shackle	3
16	12-0400	Lift Chain	2
17	302-5	Grease Fitting	6

Ref. No.	Part No.	Description	No. Used
18	8-0280	Shackle	4
19	11-4920	Bevel Washer	4
20	3290-216	Bevel Washer	4
21	32146-13	Locknut	5
22	20-4390	Tube Spacer	2
23	11-4180	Lift Arm Assy. (Incl. Ref. #1)	1
24	20-4410	Tube Spacer	2
25	20-4400	Tube Spacer	2
26	32104-6	Screw Self Tapping	2
27	18-2620	Plate Cylinder Rest	1
28	26-8530	Lift Chain	2
29	3256-24	Washer	1
30	3-2196	Sheave	1
31	325-14	Capscrew	1
32	26-8210	Pulley Support	1
33	3272-13	Cotter Pin	1
34	26-8590	Cylinder Pin	1
35	22-7530	Hydraulic Cylinder 12"	1

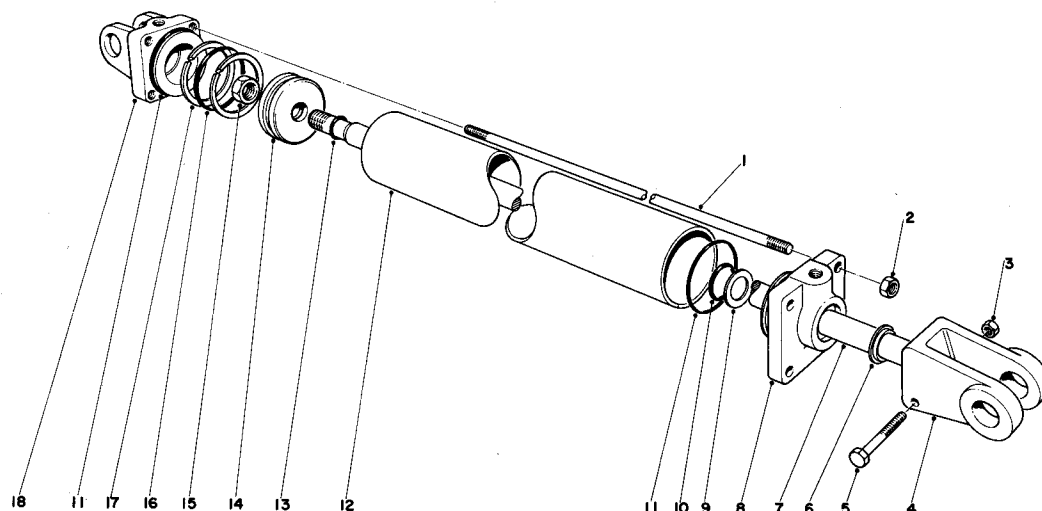


10" (22-7520) AND 12" (22-7530) CYLINDERS — Parkmaster 7 And 9

Ref. No.	Part No.	Description	No. Used
1	22-8670	Tie Rod 10"	4
*	22-8710	Tie Rod 12"	4
2	3217-9	Nut	4
3	32146-5	Locknut	1
4	22-8680	Clevis Assembly	1
5	322-11	Capscrew	1
6	22-8660	Wiper Ring Seal	1
7	22-8610	Piston Rod 10"	1
*	22-8690	Piston Rod 12"	1
8	22-8630	Head	1
9	22-8650	Back-Up Washer	1

Ref. No.	Part No.	Description	No. Used
10	22-8640	"O" Ring Seal	1
11	22-8550	"O" Ring Seal	2
12	22-8620	Barrel 10"	1
*	22-8700	Barrel 12"	1
13	22-8600	"O" Ring Seal	1
14	22-8590	Piston	1
15	22-8560	Locknut	1
16	22-8570	"O" Ring Seal	1
17	22-8580	Back Up Washer	2
18	22-8540	Butt-End Cap	1
*	22-8720	Seal Kit (Incl. Ref. #6, 9-11, 13 & 16-17)	1

*Not Illustrated

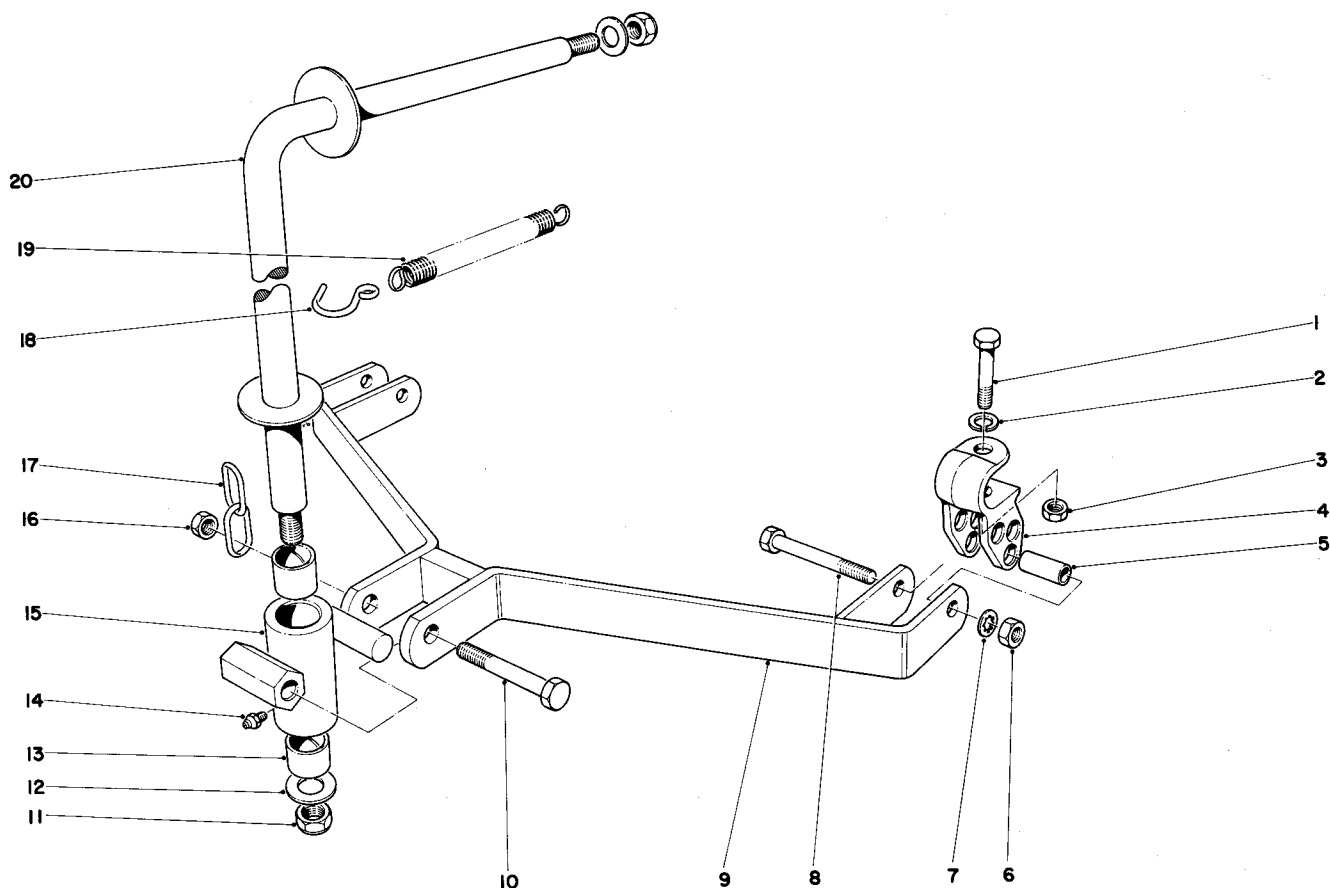


DRAWBAR ASSEMBLY — Parkmaster 7 And 9

Ref. No.	Part No.	Description	7-Un.	9-Un.
1	324-10	Capscrew	14	18
2	3253-6	Lockwasher	14	18
3	3217-8	Nut	14	18
4	5-1090	Clamp, Drawbar	14	18
5	5-1091	Spacer	14	18
6	3217-9	Nut	14	18
7	3254-4	Lockwasher	14	18
8	325-14	Capscrew	14	18
9	3-9280	Drawbar	7	9
10	325-17	Capscrew	7	9
11	3296-50	Locknut	14	18
12	3-8448	Washer	14	18

Ref. No.	Part No.	Description	7-Un.	9-Un.
13	3-0348	Bushing	14	18
14	302-5	Grease Fitting	7	9
15	1-6559	Housing (Incl. Ref. No. 13)	7	9
16	32146-13	Locknut	7	9
17	3-0293	Chain	4	6
18	3-2198	S-Hook	5	7
19	5-1706	Spring	7	9
20	28-8720	Bail, Lift	4	—
*	28-8730	Bail, Lift	—	6
*	26-8310	Bail, Lift 1, 2 & 3 Position	3	3

NOTE: When used on 9 unit, item No. 9 to be rotated 180 degrees.


*Not Illustrated

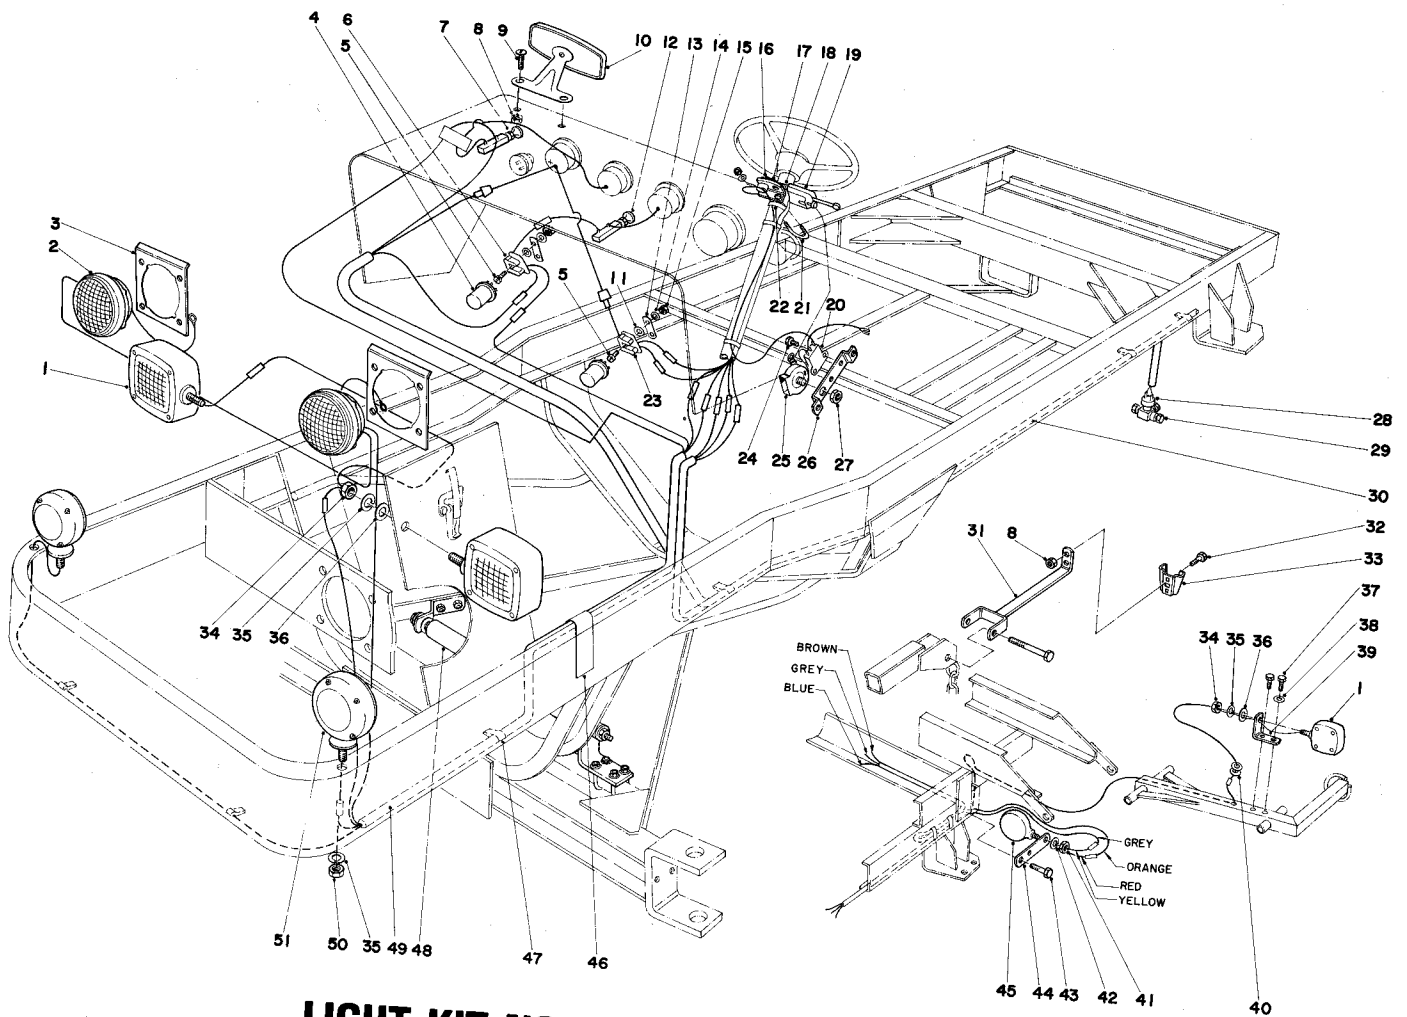

LIGHT KIT NO. 38-6310 — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	38-6190	Signal Lamp (SMV)	4
2	7-1646	Headlight	2
3	18-1010	Headlight Holder	2
4	218-456	Flasher	2
5	3252-2	Screw	2
6	38-2110	Connector Assembly	2
7	218-213	Light Switch	1
8	32146-5	Nut	1
9	3258-158	Screw Round Head	4
10	38-6180	Mirror	2
11	19-2430	Plastic Washer	1
12	38-2130	Switch Flasher	2
13	18-4370	Flasher Connector Bracket	1
14	3253-12	Lockwasher	2
15	3217-26	Nut	2
16	18-2830	Horn Button	2
17	18-2480	Throttle Lever Support	1
18	2412-3	Hose Clamp	1
19	42-6820	Signal Controller	1
20	218-212	Horn Relay	1
21	18-2130	Clamp	1
22	18-1310	Saddle	1
23	11-6440	Flasher Connector	2
24	32104-77	Self-Tapping Screw	1
25	19-6050	Horn	2
26	18-2820	Horn Mount	1


Ref. No.	Part No.	Description	No. Used
27	32112-2	Nut	
28	218-242	Stoplight Switch	1
29	218-243	Brake Line Tee	1
30	38-2150	Wire Harness	1
31	38-6170	Support—Slow Moving Vehicle	1
32	322-3	Capscrew	1
33	38-6200	Socket—Slow Moving Vehicle Emblem	2
34	3219-5	Nut	1
35	3253-7	Lockwasher	4
36	3256-6	Washer	6
37	32144-11	Screw Self Tapping	4
38	3256-3	Washer	4
39	18-8860	Bracket Rear	2
40	237-73	Grommet	2
41	3217-11	Nut	2
42	3253-8	Lockwasher	2
43	327-4	Capscrew	2
44	3-3402	Bracket	2
45	11-6390	Tail, Stop & Turn Light	4
46	18-8570	Wire Harness Clip	2
47	212-93	Wire Clip	1
48	26-1980	Steering Stabilizer	13
49	38-2150	Wire Harness	1
50	3219-19	Nut	1
51	11-6250	Front Signal Light	2

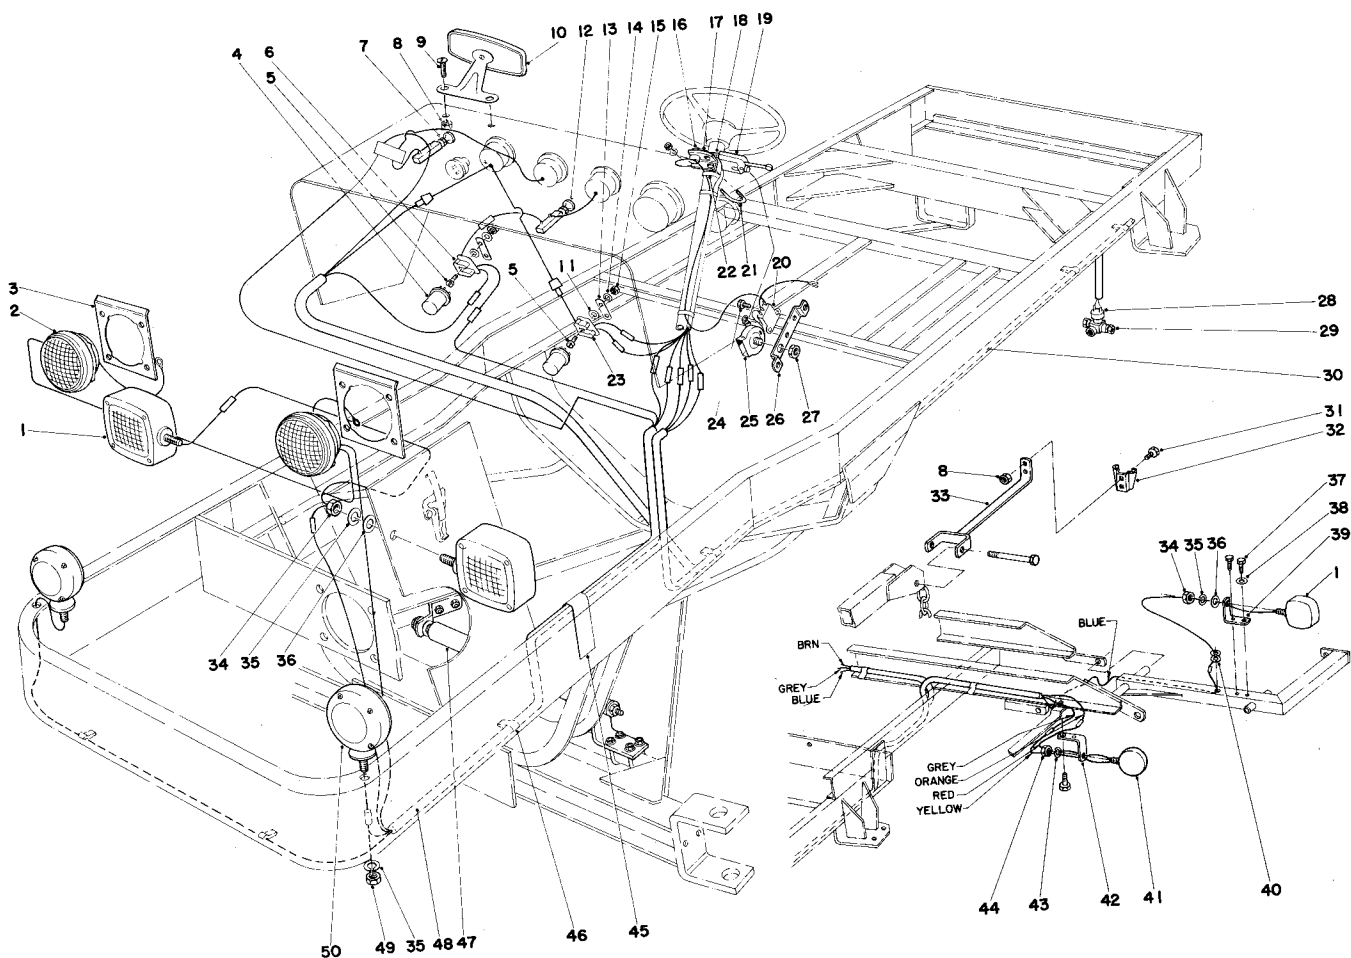

LIGHT KIT NO. 38-6310 — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	38-6190	Signal Lamp (SMV)	4
2	7-1646	Headlight	2
3	18-1010	Headlight Holder	2
4	218-456	Flasher	2
5	3252-2	Screw	1
6	38-2110	Connector Assembly	1
7	218-213	Light Switch	4
8	32146-5	Nut	2
9	3258-158	Screw Round Head	1
10	38-6180	Mirror	2
11	19-2430	Plastic Washer	1
12	38-2130	Switch Flasher	2
13	18-4370	Flasher Connector Bracket	2
14	3253-12	Lockwasher	2
15	3217-26	Nut	1
16	18-2830	Horn Button	1
17	18-2480	Throttle Lever Support	1
18	2412-3	Hose Clamp	1
19	42-6820	Signal Controller	1
20	218-212	Horn Relay	1
21	18-2130	Clamp	2
22	18-1310	Saddle	1
23	11-6440	Flasher Connector	2
24	32104-77	Self-Tapping Screw	1
25	19-6050	Horn	


Ref. No.	Part No.	Description	No. Used
26	18-2820	Horn Mount	1
27	32112-2	Nut	1
28	218-242	Stoplight Switch	1
29	218-243	Brake Line Tee	1
30	38-2150	Wire Harness	2
31	322-3	Capscrew	1
32	38-6200	Socket SMV Emblem	1
33	38-6170	Support — SMV	4
34	3219-5	Nut	6
35	3253-7	Lockwasher	4
36	3256-6	Washer	4
37	32144-11	Self-Tapping Screw	2
38	3256-3	Washer	2
39	18-8860	Bracket Rear	2
40	237-73	Grommet	2
41	11-6390	Tail, Stop & Turn Light	2
42	18-8860	Bracket Rear	2
43	3253-8	Lockwasher	2
44	3217-11	Nut	1
45	18-8570	Wire Harness Clip	13
46	212-93	Wire Clip	1
47	26-1980	Steering Stabilizer	1
48	38-2140	Wire Harness	2
49	3219-19	Nut	2
50	11-6250	Front Signal Light	2

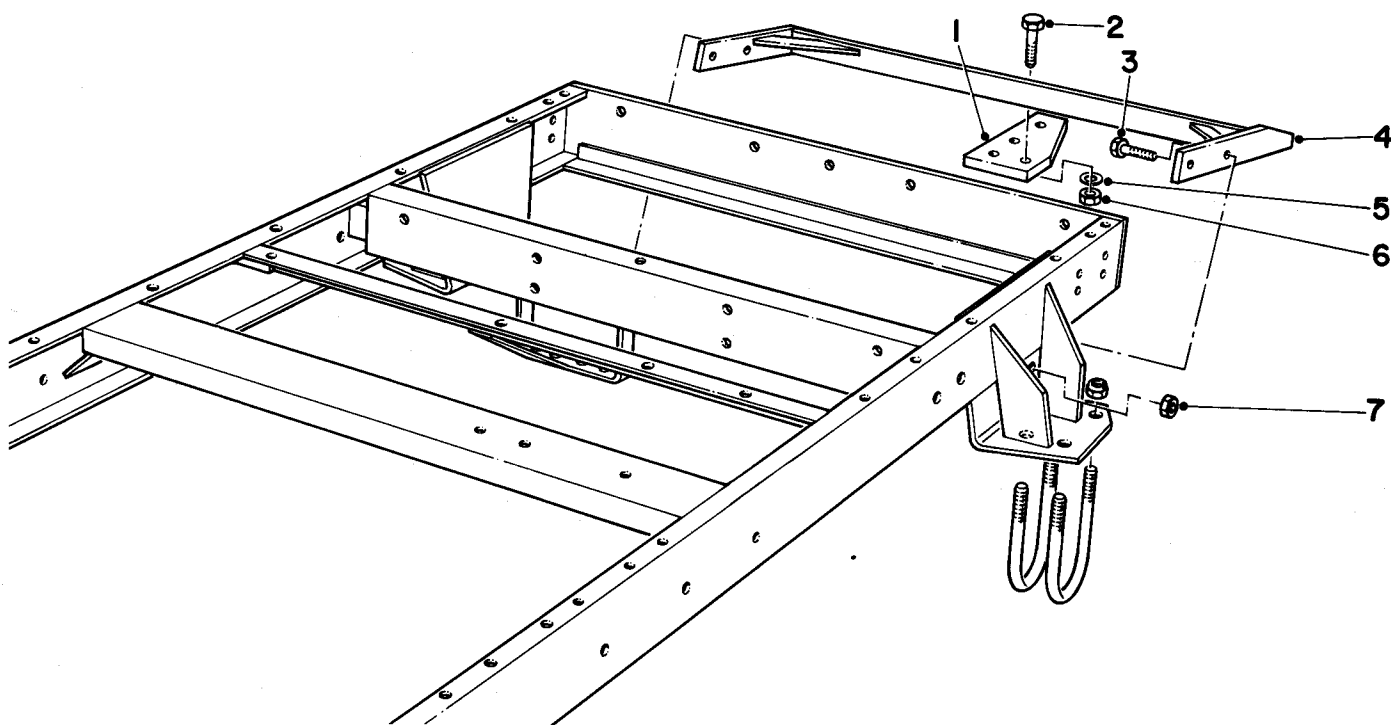

DRAWBAR KIT

Ref. No.	Part No.	Description	No. Used
1	3-3218	Hitch	1
2	328-2	Capscrew	2
3	328-24	Capscrew	4
4	26-9250	Drawbar	1

Ref. No.	Part No.	Description	No. Used
5	3253-9	Lockwasher	2
6	3217-12	Nut	2
7	3296-51	Nut	4

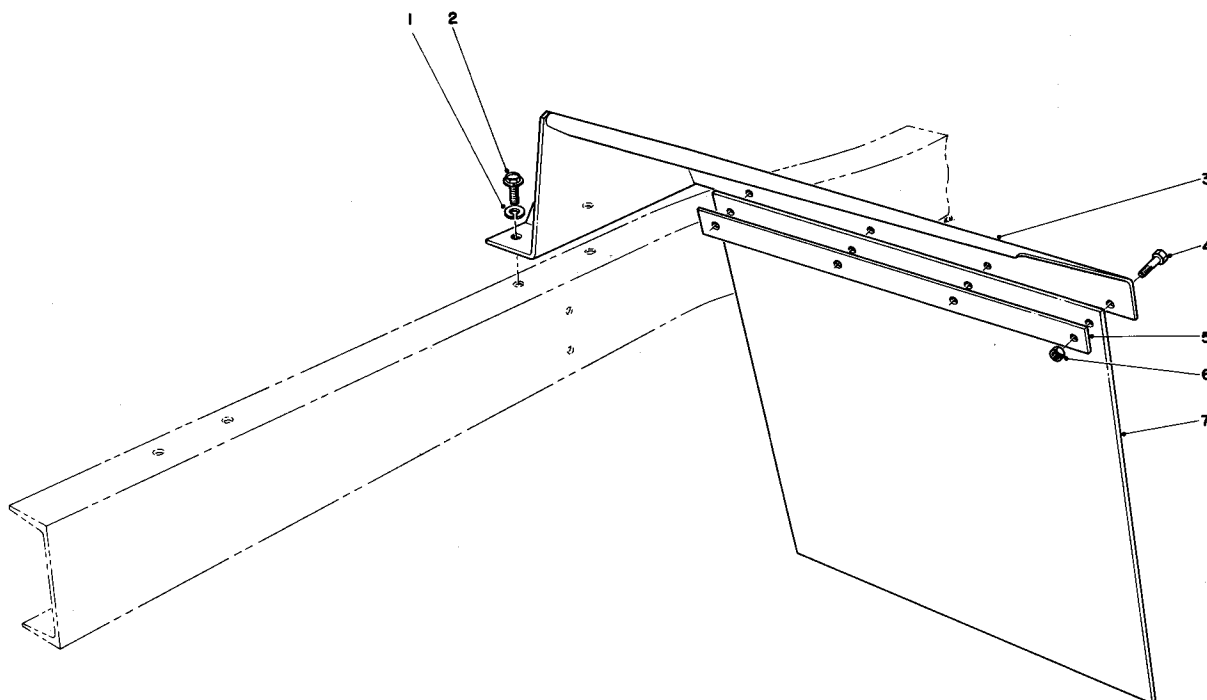


FRONT FENDER KIT

Ref. No.	Part No.	Description	No. Used
1	3253-7	Lockwasher	4
2	32144-13	Thread Forming Capscrew	4
3	10-2780	Fender L.H.	1
*	10-2770	Fender R.H.	1

Ref. No.	Part No.	Description	No. Used
4	323-6	Capscrew	8
5	10-2820	Backing Flap	2
6	32146-2	Nut	8
7	10-2810	Flap	2


*Not Illustrated

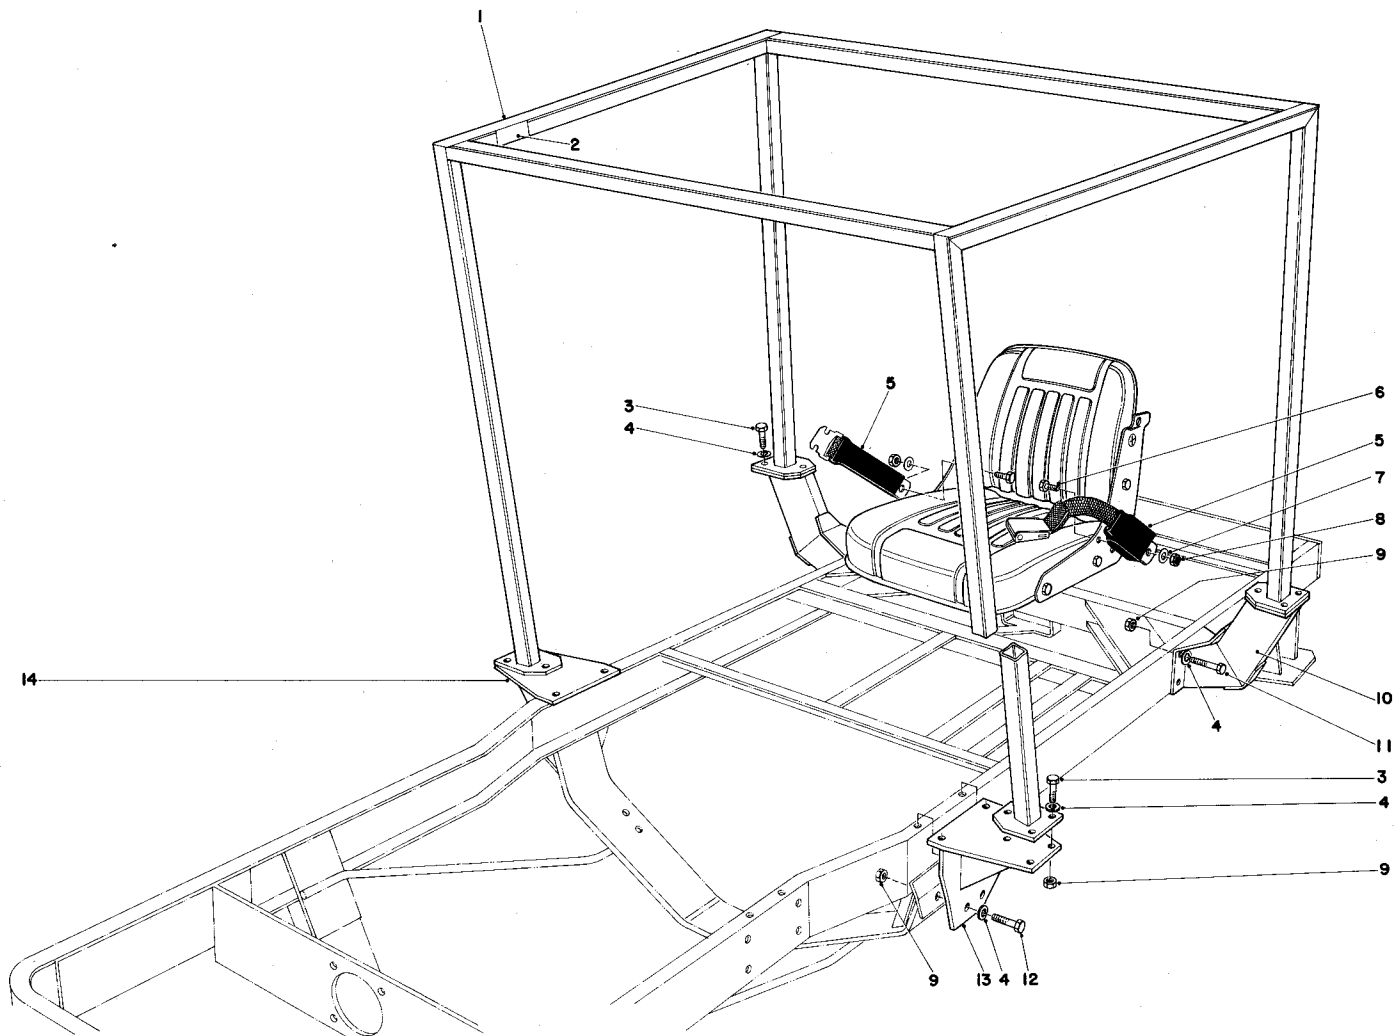

ROLL OVER PROTECTION KIT NO. 77021

Ref. No.	Part No.	Description	No. Used
1	21-4120	Roll Bar Assembly	1
2	36-7910	Warning Decal	1
3	325-7	Capscrew	6
4	3253-7	Lockwasher	24
5	21-4190	Seat Belt	1
6	324-4	Capscrew	2
7	3256-25	Washer	2

Ref. No.	Part No.	Description	No. Used
8	3296-48	Locknut	2
9	32146-13	Locknut	18
10	21-4310	Rear Mount	2
11	325-14	Capscrew	8
12	325-9	Capscrew	4
13	21-4390	Front Mount L.H.	1
14	21-4400	Front Mount R.H.	1

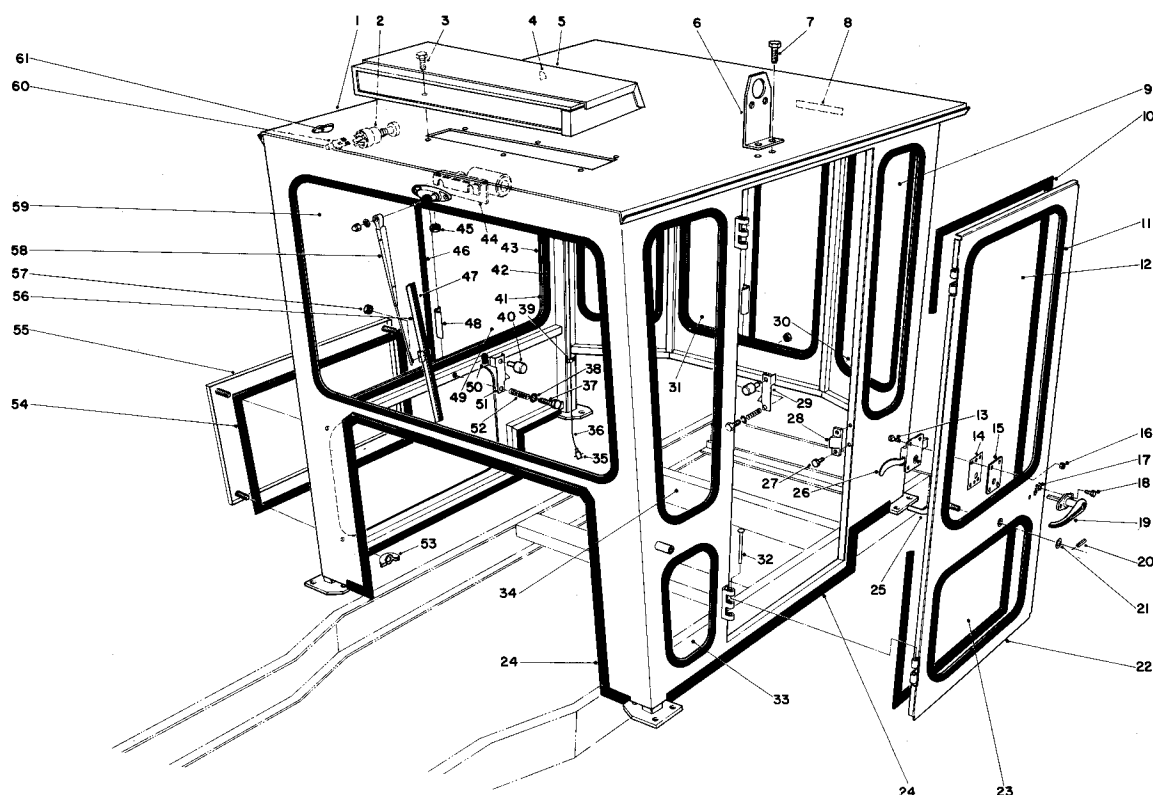


CAB ASSEMBLY KIT NO. 70155

Ref. No.	Part No.	Description	No. Used
1	300622	Cab	1
2	000562	Wiper Switch	1
3	000057	Capscrew	6
4	001657	Decal - Emergency Exit	1
5	000576	Pressurizer Assembly	1
6	300610	Lifting Eye	2
7	000263	Capscrew	4
8	000773	Warning Emblem	1
9	300558	Glass - Rear Lift	1
10	000356	Seal - Door 168" Lg.	1
11	000336	Window Seal 672" Lg.	1
12	300564	Glass - Door (Upper)	1
13	000205	Hex Hd. Machine Screw	4
14	315172	Shim Lock	1
15	315174	Stand Lock	1
16	000113	Nut	4
17	000202	Weld Nut	2
18	000204	Bolt Hex Hd.	2
19	000625	Outside Door Lock Handle	1
20	000293	Roll Pin	1
21	000289	Washer	1
22	300553	Door Assembly	1
23	300565	Glass - Door (Lower)	1
24	000354	Seal - Moulding 204" Lg.	1
25	315114	Door Holder Crank	1
26	000648	Door Lock L.H.	1
27	000191	Capscrew	2
28	000631	Lock Striker	1
29	300647	Window Lock L.H.	1
30	300648	Glass - Rear	2
31	300649	Glass - Rear Slider	2

Ref. No.	Part No.	Description	No. Used
32	315151	Pin	1
33	300557	Glass - Lower Left	1
34	300556	Glass - Upper Left	1
35	000930	Terminal - Female Spade	1
36	000642	Wire	1
37	000057	Capscrew	2
38	000089	Lockwasher	2
39	000686	Wire Clip	4
40	000440	Window Lock Knob	2
41	000338	Blank Spacer 156" Lg.	1
42	000306	Flexible Channel 276" Lg.	1
43	000339	Channel - Slider Glass	1
44	000542	Wiper Motor Assembly	1
45	000078	Locknut	6
46	000320	Rigid Slider Channel 72"	1
47	300562	Glass - Front Right Slider	1
48	000717	Handle - Glass Window	4
49	300563	Glass - Rear Right Slider	1
50	000398	Edge Trim 2" Lg.	2
51	300646	Window Lock	1
52	000907	Spring - Window Latch	2
53	000905	Wing Nut	4
54	000356	Seal Universal	1
55	300627	Inspection Panel	1
56	000557	Wiper Blade	1
57	000867	Locknut	2
58	000556	Adjustable Blade Arm	1
59	300555	Glass - Front	1
60	000906	Tab Adapter	1
61	300573	Vinyl Roof Lines	1

Note: Obtain parts from Palm Industries, Box 680, Litchfield, Minn.

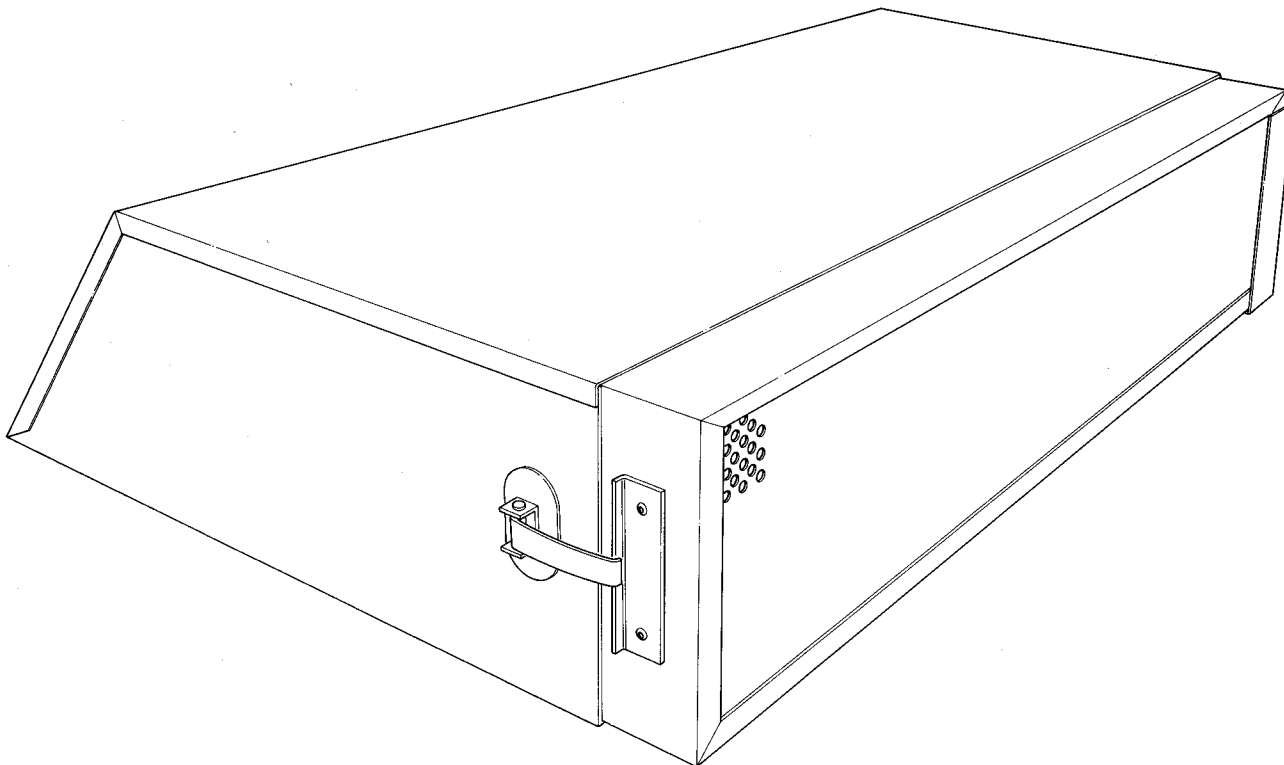


CAB ASSEMBLY KIT NO. 70155 (Continued)
PRESSURIZER ASSEMBLY NO. 39-8300

Ref. No.	Part No.	Description	No. Used
*	700B-14Y	Blower	1
*	64925-G1	Filter Panel Assembly	1
*	62807-G1	Motor Assembly 12 Volt	1
*	63487-G1	Clip, Compression — Filter	2
*	63208-G1	Wheel, Blower	1
*	64939-G1	Control Panel Assembly Complete	1

Ref. No.	Part No.	Description	No. Used
*	63654-G1	Louver Assembly	1
*	63258-G1	Louver	4
*	M-37001-63	Clip (Mount Louvers)	4
*	62489-G1	Knob	1
*	62307-G1	Switch	1

*Not Illustrated

Note: Obtain parts from Hubb Inc. Mobile Products Div., 1135 Ivanhoe Road, Cleveland, Ohio 44110 (216) 851-6200.

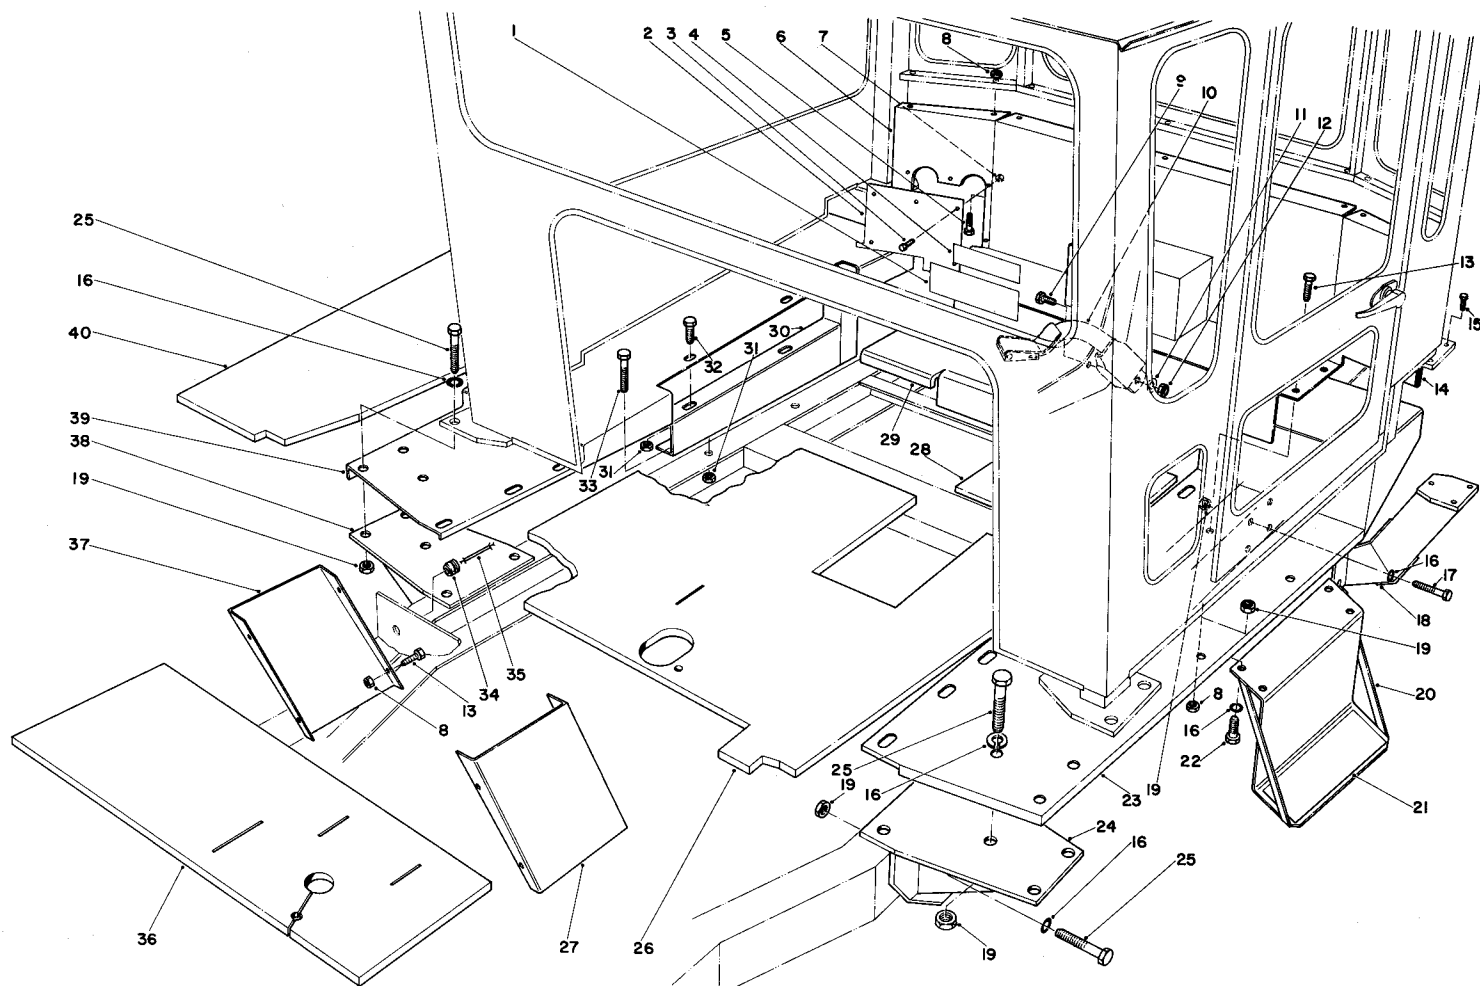


CAB MOUNTING KIT NO. 70157

Ref. No.	Part No.	Description	No. Used
1†	42-4680	Decal — Warning	1
2	300595	Seal Panel Cover (Ser 6 Tractor)	1
*	300538	Seal Panel (Tractor w/Parkmaster)	1
3†	3290-321	Machine Screw — Hex Hd.	5
4†	39-8440	Decal — Warning (Blower)	1
5†	321-9	Capscrew	7
6	300639	Filter Seal Panel	1
7†	32146-18	Locknut	5
8†	32146-17	Locknut	19
9†	324-4	Capscrew	2
10†	21-4190	Seat Belt	1
11†	3256-25	Washer — Plain	2
12†	3296-48	Locknut	2
13†	321-2	Capscrew	12
14	000354	Hollow Globe Clipon 108" Lg.	1
15†	325-6	Capscrew Hex Hd.	6
16†	3253-7	Lockwasher	22
17†	325-14	Capscrew	8
18	300514	Rear Mount	2
19†	32146-13	Locknut	22

Ref. No.	Part No.	Description	No. Used
20	300596	Foot Step	1
21†	33-2230	Step Pad	1
22†	325-4	Capscrew	4
23	300531-2	Left Fender	1
24	300506-1	Mount — Front L.H.	1
25†	325-9	Capscrew	10
26	300652	Floor Mat	1
27	300506-2	Mount — Front (R.H.)	1
28	300618	Floor Mat	1
29	300650	Floor Mat Rear	1
30	300641	Fender Filler	1
31†	32146-5	Locknut	8
32†	322-5	Capscrew	2
33†	322-10	Capscrew	6
34†	218-480	Grommet	1
35†	39-9660	Wire Harness	1
36	300615	Floor Mat (Front)	1
37	300548-2	Cowl Filler (Right)	1
38	300506-2	Mount — Front (R.H.)	1
39	300634	Right Fender	1
40	300651	Floor Mat Right Fender	1
*†	39-7400	Alternator Assembly (61 Amp Metric)	1

*Not Illustrated

†Obtain parts from your local Toro Distributor. Obtain all other parts from Palm Industries, Box 680, Litchfield, Minn.

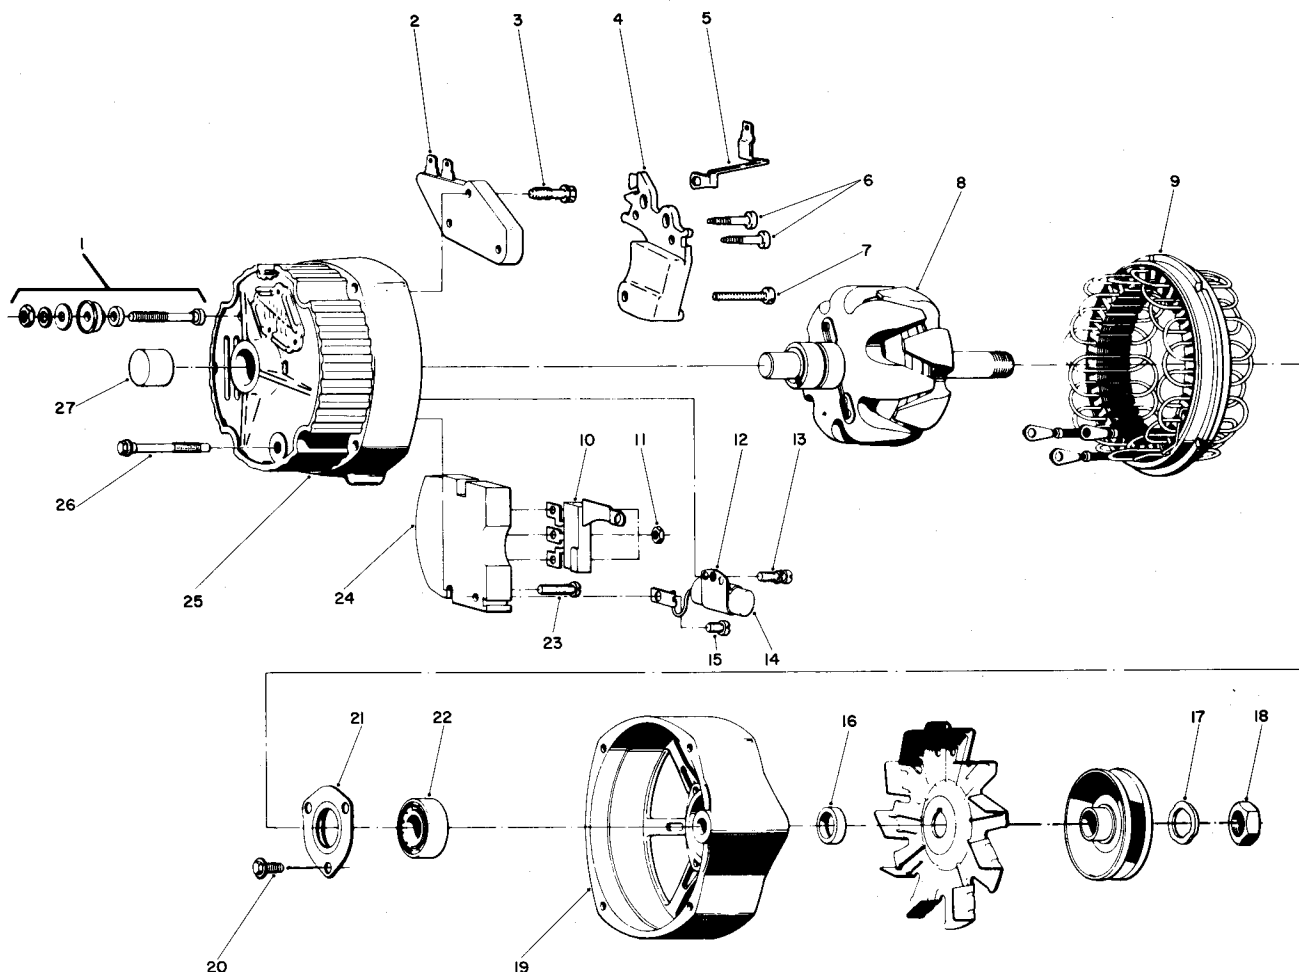


CAB MOUNTING KIT NO. 70157 (Continued) 61 AMP ALTERNATOR ASSEMBLY NO. 39-7400

Ref. No.	Part No.	Description	No. Used
1	1975471	Terminal Package	1
2	1116392	Regulator	1
3	1894586	Screw and Washer Brush Holder/Attaching (Ground)	1
4	1894559	Brush Holder and Brush Assembly	1
5	1894568	Terminal – Relay	1
6	1876681	Screw Assembly – Brush Holder Attaching (Insulated)	1
7	1974020	Screw – Brush Holder Attaching (Pivot)	1
8	1876163	Rotary Assembly	1
9	1894562	Stator Assembly	1
10	1971528	Diode Trio	1
11	120622	Nut – Rectifier Bridge	3
12	1869573	Bracket – Capacitor	1
13	1851612	Screw – Capacitor Bracket	1
14	1971411	Capacitor	1

Ref. No.	Part No.	Description	No. Used
15	1851612	Screw – Capacitor Lead Attaching	1
16	1976138	Collar Shaft – Outside	1
17	1941978	Lockwasher – Shaft Nut D.E.	1
18	1915172	Nut – Shaft – D.E.	1
19	1976808	Frame D.E.	1
20	1965104	Screw Bearing Retainer	3
21	1971993	Plate – Ball Bearing Retainer D.E.	1
22	1974861	Ball Bearing D.E.	1
23	1876668	Screw and Washer Rectifier Bridge Attaching	1
24	1891055	Rectifier Bridge	1
25	1975718	S.R.E. Frame (Incl. Ref. #1, 5, 12, 14, 22 & 27)	1
26	1956975	Bolt – Thru	4
27	1974862	Roller Bearing S.R.E.	1
† *	39-7400	61 Amp. Alternator Assembly Complete	1

*Not Illustrated

†Obtain from your local Toro Distributor. Obtain all other parts from your local GM, Chevrolet Dealer, or Delco-Remy Dealer.

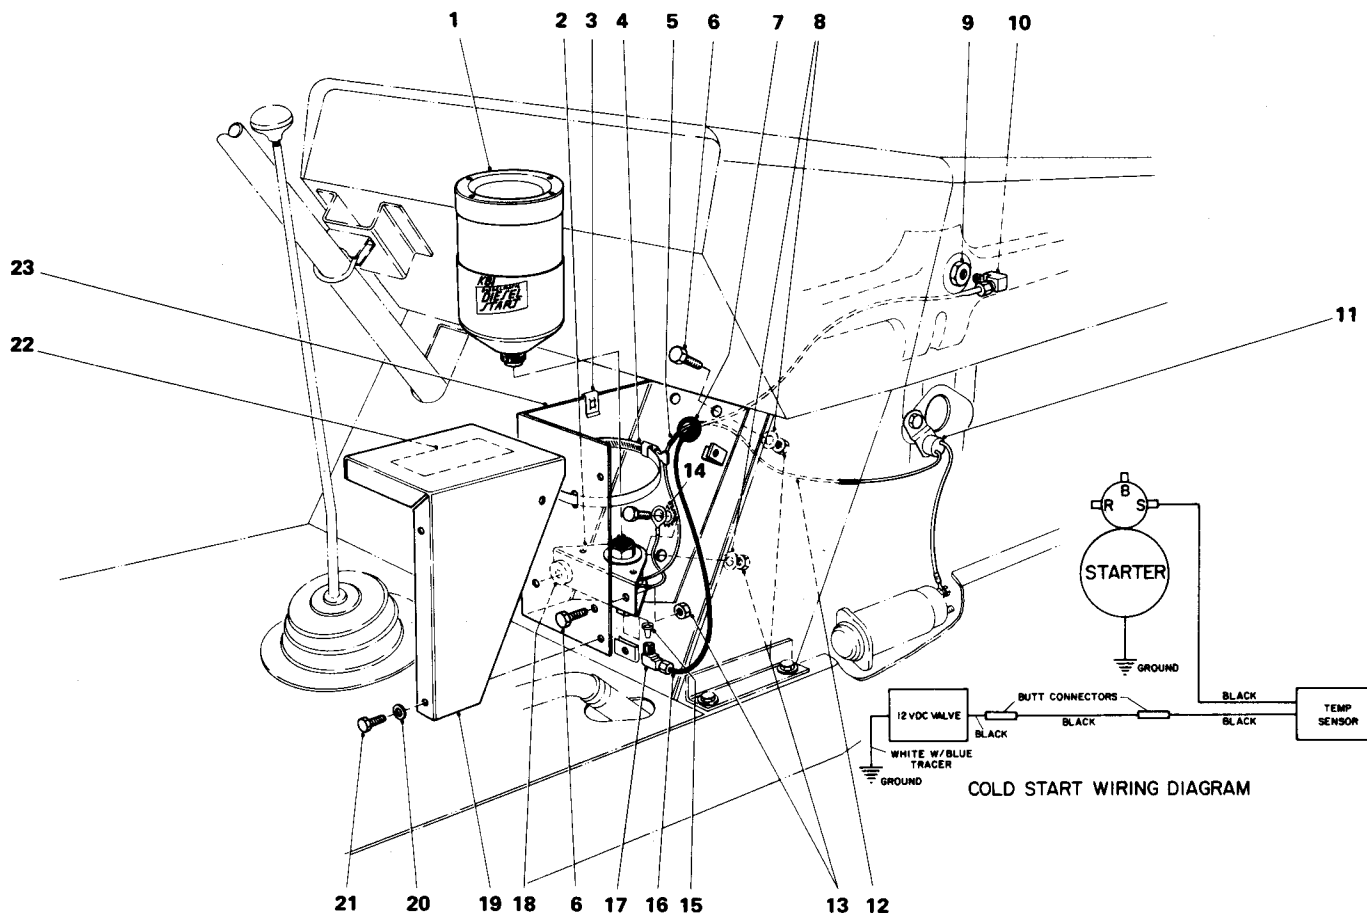


COLD START KIT MODEL NO. 44-0400 (WITHOUT CAB)

Ref. No.	Part No.	Description	No. Used
1	11-1749	Starting Fluid Canister	1
2	43-2610	Valve Assembly – 12 Volt D.C. (Incl. Ref. #15 & 17)	1
3	3290-192	Tinnerman Nut	3
4	43-2630	Clamp – Fuel Canister	1
5	218-250	Butt Connector	2
6	321-5	Hex Hd. Capscrew	6
7	237-62	Grommet	1
8	3256-1	Plain Washer	4
9	44-0170	Plug	1
10	43-7700	Nozzle – Atomizer Manifold	1
11	43-2620	Switch – Engine Temp.	1
12	43-2670	Wire – Jumper, Valve to Temp. Sensor	1

Ref. No.	Part No.	Description	No. Used
13	3296-42	Locknut	6
14	3255-7	Lockwasher, Ext. Tooth	1
15	43-7740	Filter	1
16	43-2640	Tubing – Starting Fuel	1
17	43-7610	Fitting Assembly (Incl. Ref. #15)	1
18	7-4318	Spacer	2
19	43-6920	Cover	1
20	3253-3	Lockwasher	4
21	321-2	Hex Hd. Capscrew	4
22	43-7780	Decal – Cold Start Kit	1
23	43-6930	Mounting Plate	1
*	44-0400	Cold Start Kit – Complete	1

*Not Illustrated

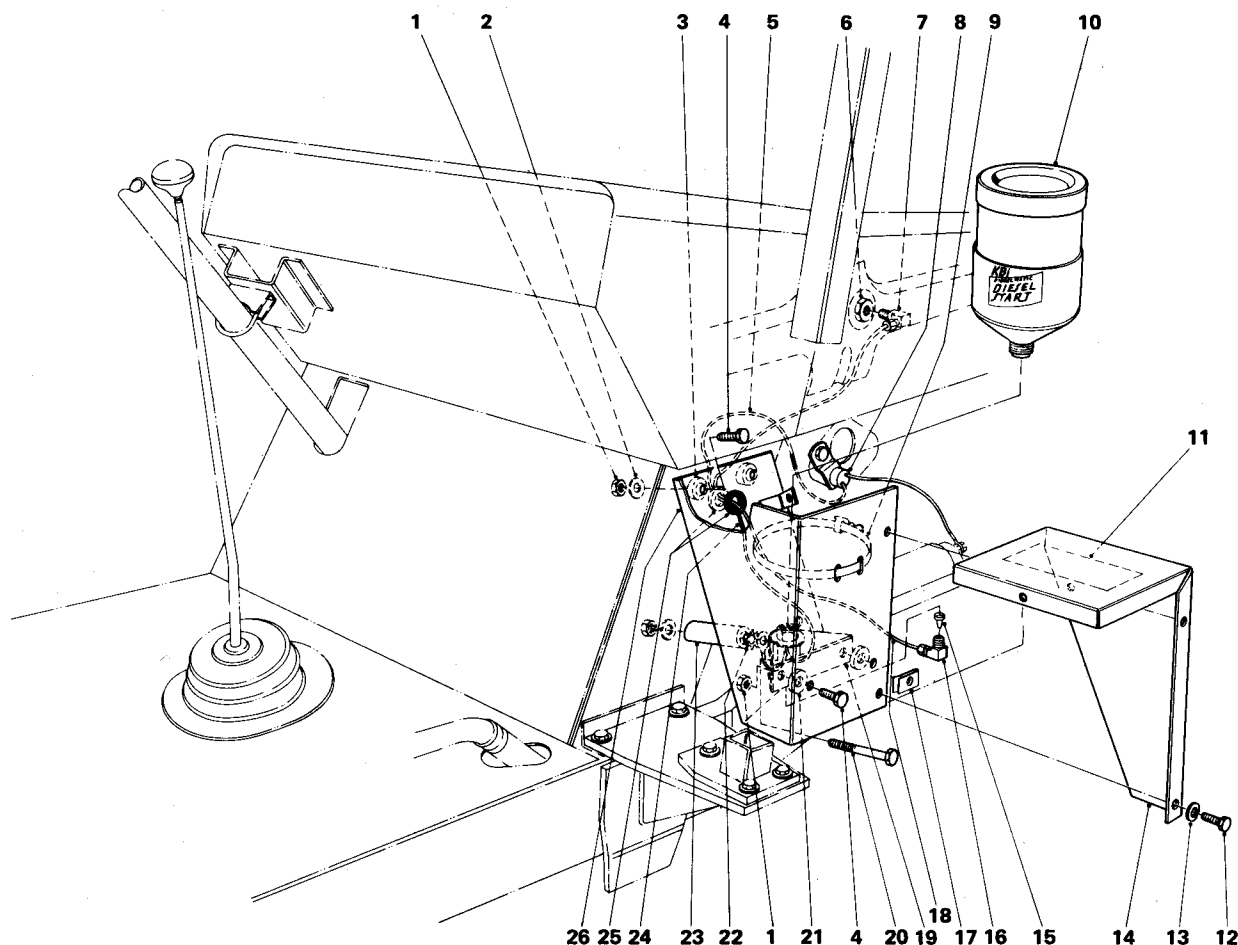

COLD START KIT MODEL NO. 44-0400 (Continued)

(WITH CAB INSTALLED)

Ref. No.	Part No.	Description	No. Used
1	3296-42	Locknut	5
2	3256-1	Plain Washer	3
3	44-0190	Spacer – Top	2
4	321-5	Hex Hd. Capscrew	4
5	43-2670	Wire – Jumper, Valve to Temp. Sensor	1
6	44-0170	Plug	1
7	43-7700	Nozzle – Atomizer Manifold	1
8	43-2620	Switch – Engine Temp.	1
9	43-2630	Clamp – Fuel Canister	1
10	11-1749	Starting Fluid Canister	1
11	43-7780	Decal – Cold Start Kit	1
12	321-2	Hex Hd. Capscrew	4
13	3253-3	Lockwasher	4
14	43-6920	Cover	1

Ref. No.	Part No.	Description	No. Used
15	43-7740	Filter	1
16	43-7610	Fitting Assembly (Incl. Ref. #15)	1
17	3290-192	Tinnerman Nut	3
18	43-2640	Tubing – Starting Fuel	1
19	43-2610	Valve Assembly – 12 Volt D.C. (Incl. Ref. #15 & 16)	1
20	321-19	Hex Hd. Capscrew	1
21	7-4318	Spacer	2
22	3255-7	Lockwasher, Ext. Tooth	1
23	44-0180	Spacer – Bottom	1
24	218-250	Butt Connector	2
25	237-62	Grommet	2
26	43-6930	Mounting Plate	1
*	44-0400	Cold Start Kit – Complete	1

*Not Illustrated

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Tractor has two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is located on right side of toe board. In any correspondence concerning the Tractor, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Distributor, supply the following information:

1. Model and serial numbers of the Tractor.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A ONE YEAR LIMITED WARRANTY ON COMMERCIAL PRODUCTS OTHER THAN WALK ROTARY MOWERS, TRIMMERS AND BLOWERS.

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Commercial Products	1 Year
Hevi-Duty Walk Rotary Mowers	90 Days

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers, trimmers and blowers.

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Commercial Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

INDEX

Description	Page	Description	Page
Hood Assembly	1	Hydraulic Valve Assembly No. 44-7701 –	
Dash Assembly	2	Parkmaster 7	37
Electrical Schematic (12 Volt Negative Ground)	3	Drawbar Assembly No. 1, 2 and 3 Position	
Radiator and Fuel Tank Assembly	4-5	Parkmaster 7 Unit	38
Toe Board and Battery Assembly	6	Main Frame Assembly – Front Parkmaster 7	39
Brake, Clutch, Throttle Controls	7-8	Main Frame Assembly – Front Center	
Frame Assembly	9	Parkmaster 7	40-41
Front Axle Assembly	10	Main Frame Assembly – Rear Parkmaster 7	42-43
Front Wheels and Rim 9.5 L-14	11	Valve Bank and Hoses – Parkmaster 9	44
Engine Mounting Components	12	Valve Cover & Shield Assembly – Parkmaster 9	45
Engine Assembly	13-14	Hydraulic Valve Assembly No. 44-7700	
Pivot Shaft and Arm Assembly	15	Parkmaster 9	46
Engine Exhaust Assembly	16	Drawbar Assembly 1, 2 & 3 Position –	
Starter Motor Assembly No. 19-3460	17	Parkmaster 9 Unit	47
42 Amp Alternator Assembly No. 39-7370	18	Main Frame Assembly – Front Parkmaster 9	48
Hydraulic Pump and Reservoir	19	Main Frame Assembly – Front Center	
Hydraulic Pump Assembly No. 23-8420	20	Parkmaster 9	49-50
Clutch Assembly No. 20-0450	21	Main Frame Assembly – Rear Center Parkmaster 9	51
Transmission Assembly No. 36-9320	22-23	Main Frame Assembly – Rear Parkmaster 9	52
Transmission Cover	24	10" (22-7520) and 12" (22-7530) Cylinders –	
Rear Axle (36-9830) and Drive		Parkmaster 7 and 9	53
Line (36-9490)	25-26	Drawbar Assembly – Parkmaster 7 and 9)	54
Rear Brake Assembly		Light Kit No. 38-6310 – Parkmaster 7	55
(37-1010 R.H. & 37-1020 L.H.)	27-28	Light Kit No. 38-6310 – Parkmaster 9	56
Rear Tires & Wheels 7.50 x 16 Field Installed Kit		Drawbar Kit	57
No. 70230 (Parkmaster 7)	29	Front Fender Kit	58
Rear Tires & Wheels 8.00 x 16 Field Installed Kit		Roll Over Protection Kit No. 77021	59
NO. 70200 (Parkmaster 7 & 9)	30	Cab Assembly Kit No. 70155	60
Steering Assembly	31	Cab Assembly Kit No. 70155 (Continued)	
Steering Gear 39-7330	32-33	Pressurizer Assembly No. 39-8300	61
Seat Assembly (37-0930) and Suspension		Cab Mounting Kit No. 70157	62
Assembly (37-0610)	34	Cab Mounting Kit No. 70157 61 Amp Alternator	
Valve Bank and Hoses – Parkmaster 7	35	Assembly No. 39-7400	63
Valve Cover and Shield Assembly – Parkmaster 7	36	Cold Start Kit Model No. 44-0400	64-65

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor for information and part numbers.

MAINTENANCE RECORD

[illegible]