 




MODEL NO. 38072-8900001 & UP
MODEL NO. 38073-8900001 & UP

PARTS CATALOG

724 SNOWTHROWER

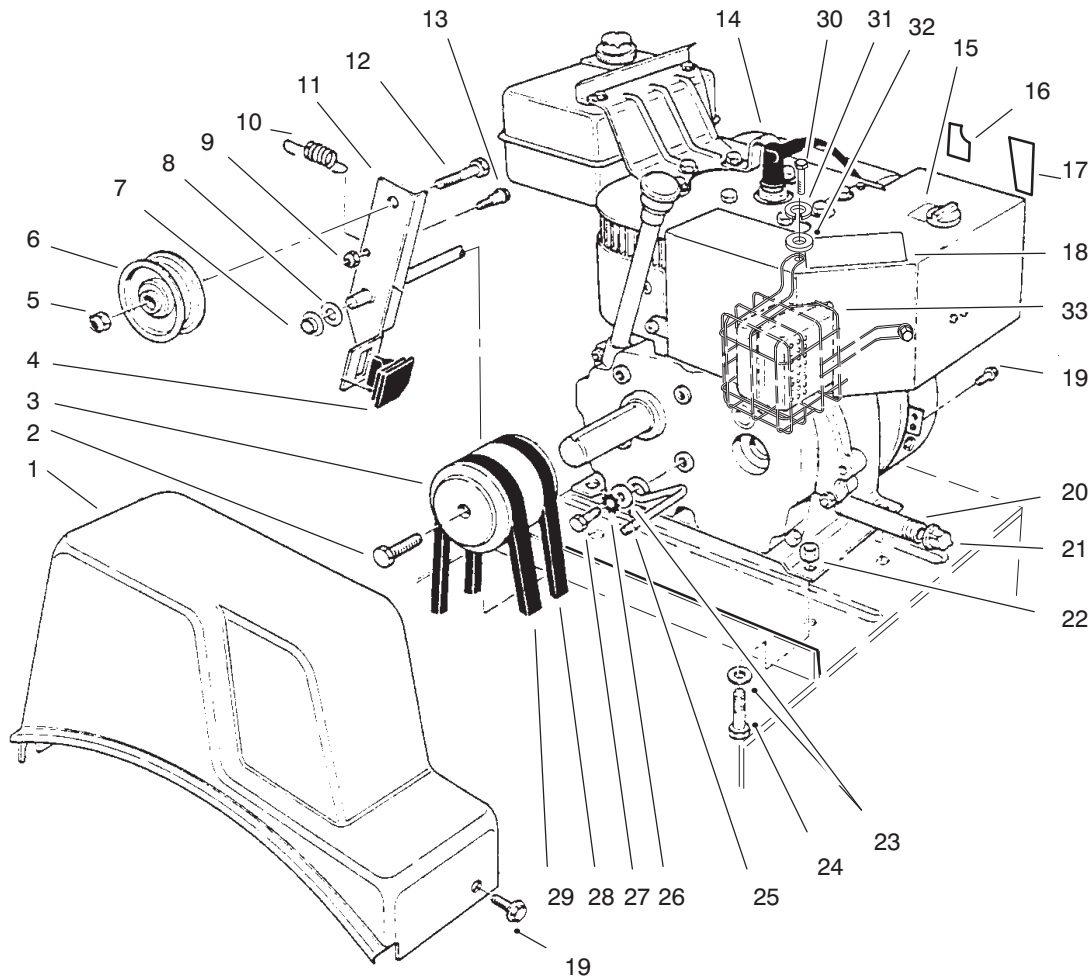

C-1278

ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	37-6900	Cover - Belt	1
2	43-7290	Screw - Special	1
3	74-1370	Engine Pulley	1
4	66-8060	Molded Brake Asm.	1
5	3296-59	Nut - Lock	1
6	3-4244	Idler Pulley	1
7	3290-320	Nut - Push On	1
8	3256-24	Washer - Flat	1
9	3296-56	Nut - Lock	1
10	53-7570	Spring - Auger Disengage	1
11	14-7959	Auger Clutch (Incl. Ref. #4)	1
12	323-29	Screw	1
13	42-3560	Bolt - Shoulder	1

Ref. No.	Part No.	Description	No. Used
14		Engine	1
15	63-2420	Decal - Choke (Model No. 38072)	1
*	63-2430	Decal - Choke (Model No. 38073)	1
16	94-2572	Decal - Primer (Model No. 38073)	1
17	63-2450	Decal - Throttle	1
18	66-6840	Decal - Hot (Model No. 38072)	1
*	94-2576	Decal - Hot (Model No. 38073)	1
19	32144-4	Screw - Self Tap.	3
20	289-9	Pipe Nipple	1

*Not Illustrated

© The TORO Company -1997
All Rights Reserved

 TPS

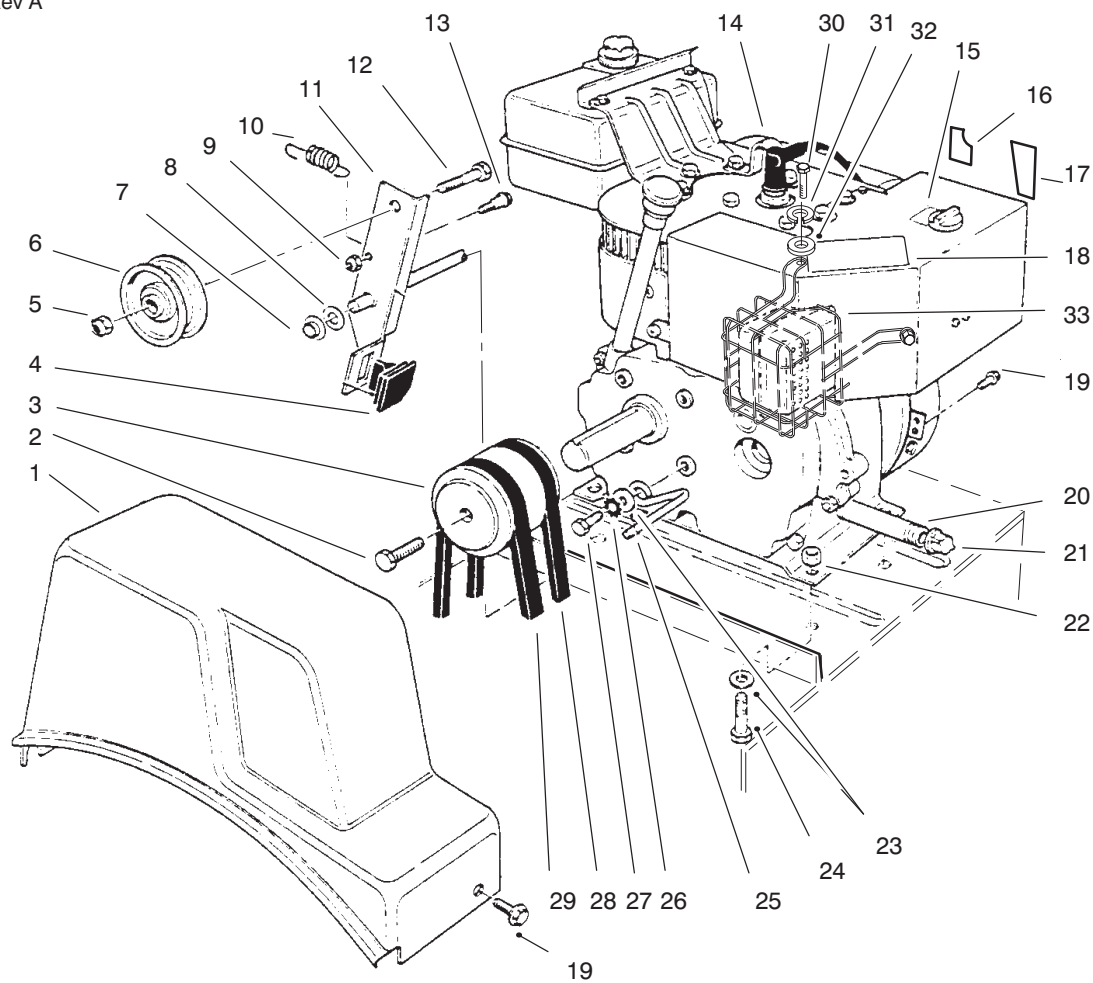


C-1278

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
21	288-2	Cap	1	28	37-9090	V-Belt - Traction	1
22	3296-29	Nut - Lock	4	29	26-9672	V-Belt - Auger	1
23	3256-23	Washer - Flat	5	†30	42-671	Screw	3
24	322-4	Screw	4	†31	36-180	Washer - Lock	3
25	37-8990	Retainer - Belt	1	†32	36-195-1	Washer - Flat	3
26	3255-8	Washer -Lock Ext. Tooth	1	†33	127-19	Guard - Muffler	1
27	3210-3	Screw	1				

 † Order these parts from Tecumseh

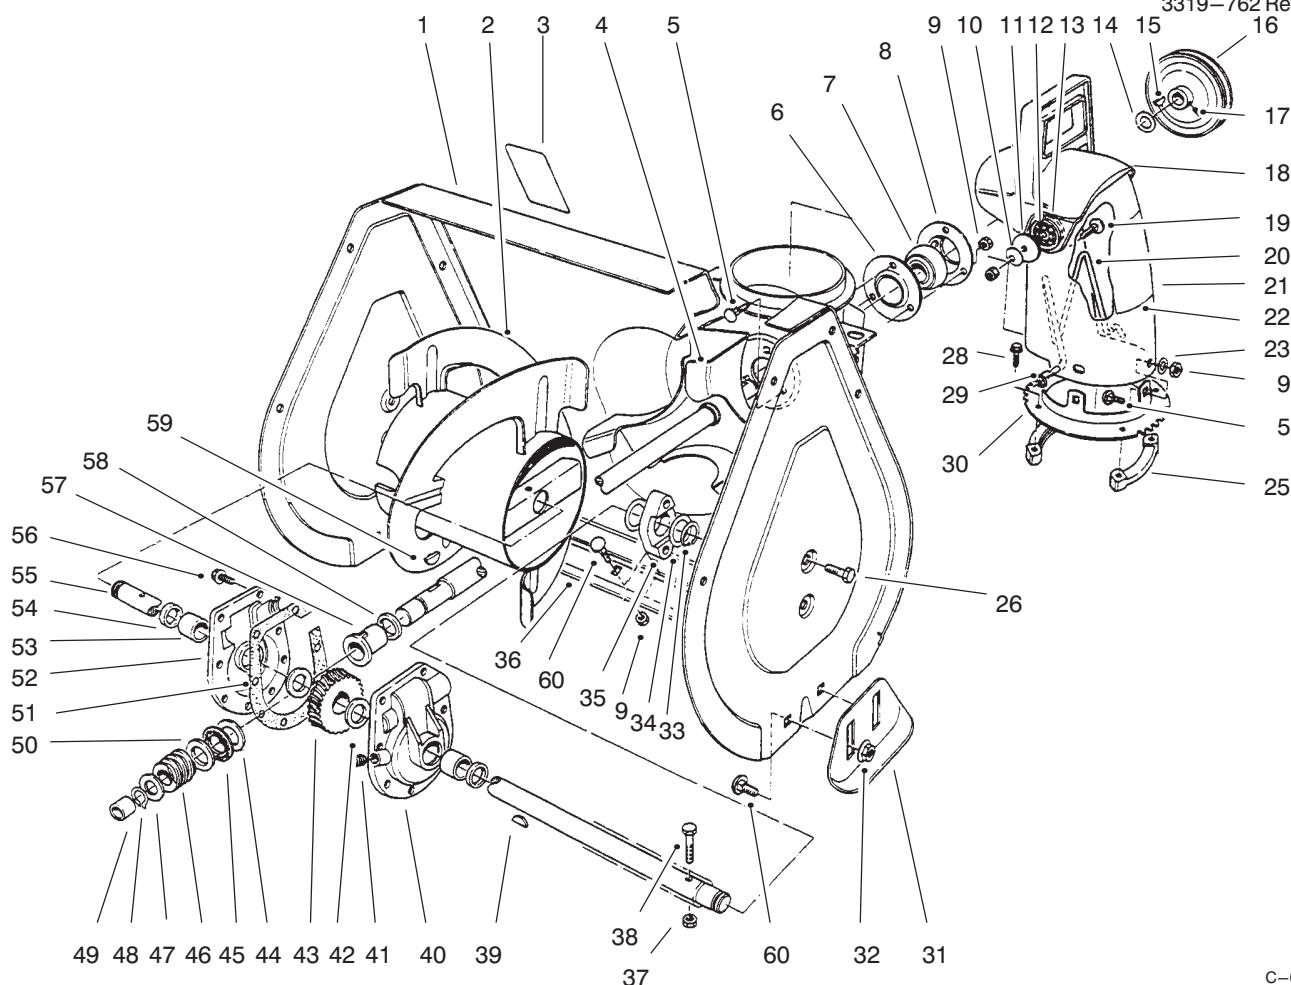


C-0031

AUGER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	94-2786	Housing—Auger (Model No. 38072) (Incl. Ref. #3)	1	14	3-0737	Washer	1
*	94-2785	Housing—Auger (Model No. 38073) (Incl. Ref. #3)	1	15	3257-23	Key	1
2	74-1600	Auger — R.H.	1	16	37-6890	Pulley	1
*	74-1590	Auger — L.H.	1	17	3242-4	Screw — Set	2
3	53-7670	Decal — Auger Warning (Model No. 38072)	1	18	56-2680	Deflector	1
*	94-2568	Decal — Auger Warning (Model No. 38073)	1	19	3230-22	Bolt — Carriage	2
4	37-6990	Shaft & Impeller	1	20	56-2670	Chute — Wire	1
5	3230-18	Bolt — Carriage	6	21	94-2793	Chute — Discharge (Model No. 38072) (Incl. Ref. #22)	1
6	26-6120	Flange — Bearing Front	1	*	94-2792	Chute — Discharge (Model No. 38073) (Incl. Ref. #22)	1
7	63-3450	Bearing — Ball	1	22	94-8079	Decal — Discharge (Model No. 38072)	1
8	26-6110	Flange — Bearing Rear	1	*	94-2558	Decal — Discharge (Model No. 38073)	1
9	3296-29	Nut — Lock	13	23	3256-23	Washer	3
10	3290-340	Washer — Belleville	2	25	37-6490	Retainer — Chute Ring	3
11	3256-68	Washer — Flat	2	26	32144-70	Screw — Self Tap.	4
12	55-8950	Plate — Friction	2	28	27-0220	Screw — Self Tap.	6
13	20-4320	Washer — Rubber	2				

 *Not Illustrated

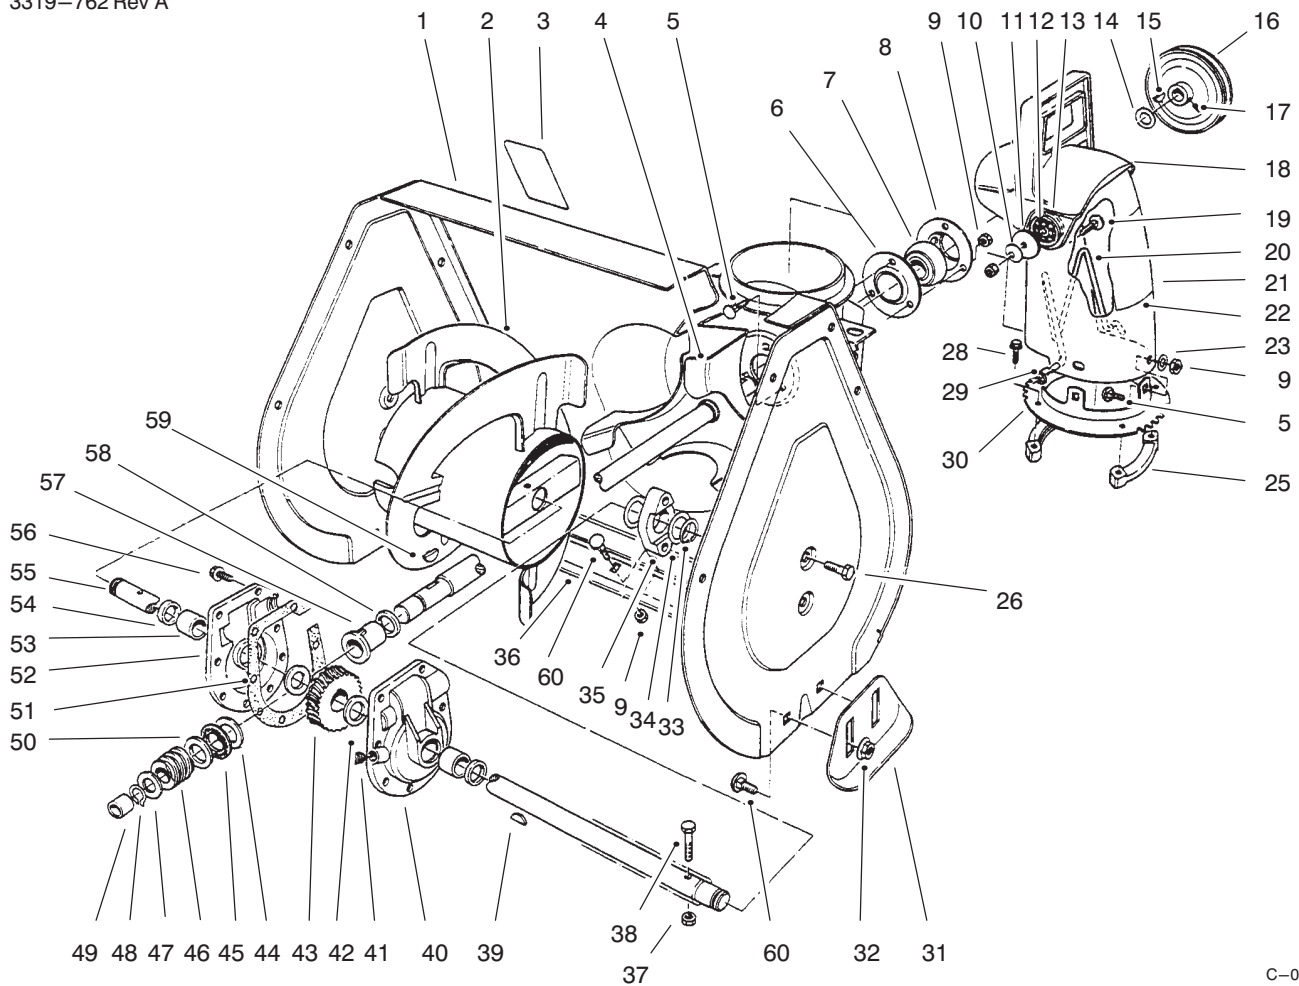


C-0031

AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	3290—326	Pushnut	1
30	37—8941	Ring — Chute	1
31	40—8160	Skid	2
32	32128—20	Nut — Flange	4
33	32151—36	Ring — Retaining	2
34	5—1550	Washer — Thrust	4
35	37—6550	Bearing — Auger	2
36	74—1420	Blade — Scraper	1
37	3296—42	Nut — Lock	2
38	321—10	Screw	2
39	3257—33	Key — Woodruff	1
40	14—2459	Gear Case L.H. (Incl. Ref. #53 & 54)	1
41	281—1	Pipe — Plug	1
42	252—71	Bearing — Thrust	2
43	5—7180	Gear	1
44	257—3	Washer — Thrust	1
45	252—76	Bearing — Needle, Thrust	1
46	5—7170	Gear — Worm	1

Ref. No.	Part No.	Description	No. Used
47	3—8664	Washer	1
48	32120—72	Ring — Retaining	1
49	256—32	Bushing	1
50	252—80	Washer — Thrust	1
51	51—0460	Gasket	1
52	14—2449	Gear Case R.H. (Incl. Ref. #53 & 54)	1
53	256—237	Bushing	2
54	7—0045	Seal — Oil	2
55	37—6801	Shaft — Auger	1
56	32144—41	Screw — Self Tap.	8
57	37—6560	Bushing — Input	1
58	237—87	Seal	1
59	3257—23	Key — Woodruff	1
60	3230—1	Bolt — Carriage	9
*	37—6961	Gear Case Asm.	1
*	12—8789	Bearing Assembly (Incl. Ref. #6—8)	1

 *Not Illustrated

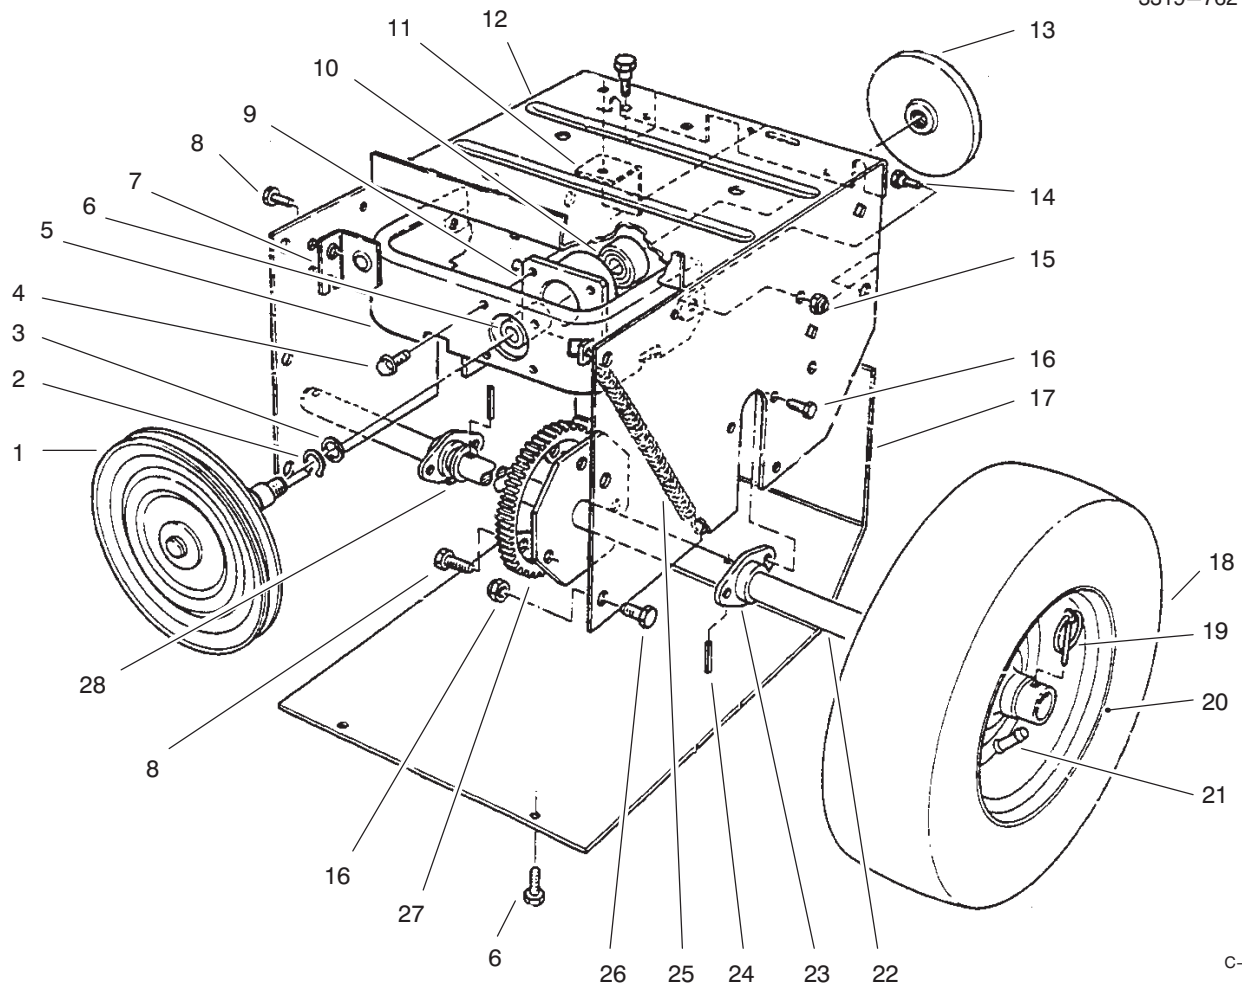


C-2371

TRACTION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	88-0850	Pulley & Shaft	1
2	32151-103	Ring - Snap	1
3	252-80	Washer - Thrust	1
4	12-3270	Screw - Tapping	8
5	88-0550	Frame - Friction Plate	1
6	256-322	Bushing	1
7	66-6790	Mount - Clutch Rod Front	1
8	32144-70	Screw - Self Tap.	5
9	88-0560	Hub - Frame	1
10	38-7820	Bearing	1
11	37-9070	Mount - Clutch Rod Rear	1
12	37-8900	Frame - Traction	1
13	38-0800	Plate - Friction	1
14	37-8770	Bolt - Shoulder	2

Ref. No.	Part No.	Description	No. Used
15	3296-29	Nut - Lock	6
16	32144-4	Screw - Self Tap.	6
17	37-6830	Cover - Bottom	1
18	231-120	Tire	2
19	3290-243	Pin - Klik	2
20	241-131	Rim	2
21	232-46	Tube	2
22	74-1350	Shaft - Axle	1
23	37-6850	Bearing - Axle	2
24	32121-31	Pin - Roll	2
25	37-8870	Spring-Friction Plate Frame	1
26	322-2	Screw - Hex. Hd.	6
27	37-6520	Gear - Axle	1
28	3-8664	Washer - Thrust	2

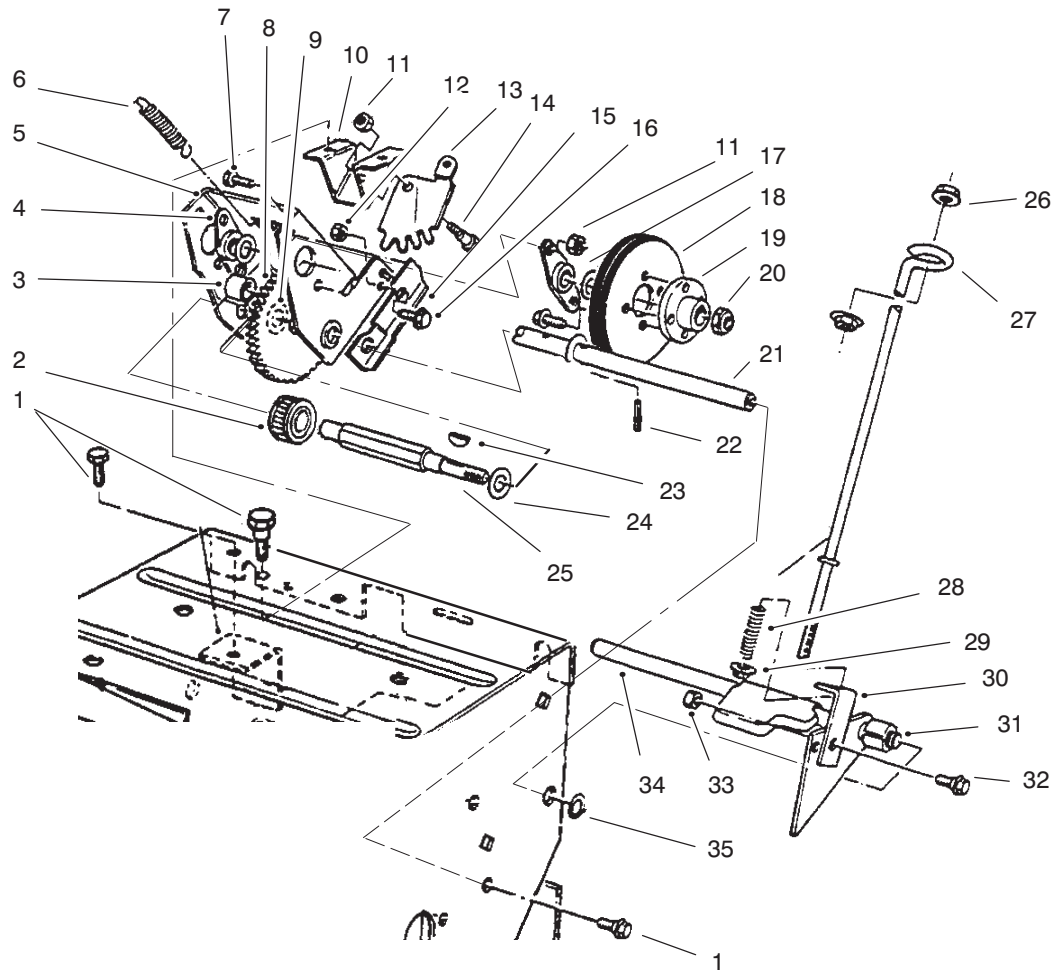 


C-2372

TRACTION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw — Self Tap.	4
2	37-6500	Gear — Sliding	1
3	256-86	Bushing	1
4	20-1620	Bearing — Friction Wheel	2
5	39-1230	Bracket — Sliding	1
6	37-8880	Spring — Traction Engage	1
7	322-2	Screw — Hex. Hd.	4
8	37-9160	Intermediate Gear & Bushing (Incl. Ref. #4)	1
9	10-9280	Washer — Thrust	2
10	37-8790	Mount — Quadrant Gear	1
11	3296-29	Nut — Lock	1
12	3296-16	Nut — Lock	1
13	37-8800	Quadrant — Gear	1
14	37-8770	Bolt — Shoulder	1
15	39-1250	Cam — Receiver	1
16	321-4	Screw — Hex. Hd.	1
17	36-4790	Washer — Thrust	2

Ref. No.	Part No.	Description	No. Used
18	37-6570	Wheel — Friction	1
19	39-1520	Hub — Friction Wheel Mount	1
20	3296-48	Nut — Lock	1
21	37-6760	Shaft — Pivot	1
22	32121-45	Pin — Roll	2
23	3257-24	Key	1
24	5-7570	Washer — Thrust	2
25	37-6780	Shaft — Hex	1
26	32128-33	Nut — Flange	2
27	39-3060	Rod — Lower Traction	1
28	38-4520	Spring — Compression	1
29	32128-32	Nut — Flange	1
30	38-4490	Bracket — Traction	1
31	40-9680	Spacer	1
32	40-8350	Screw — Shoulder	1
33	3296-42	Nut — Lock	1
34	43-7310	Traction Engagement Asm.	1
35	32151-61	Ring — Retaining	1

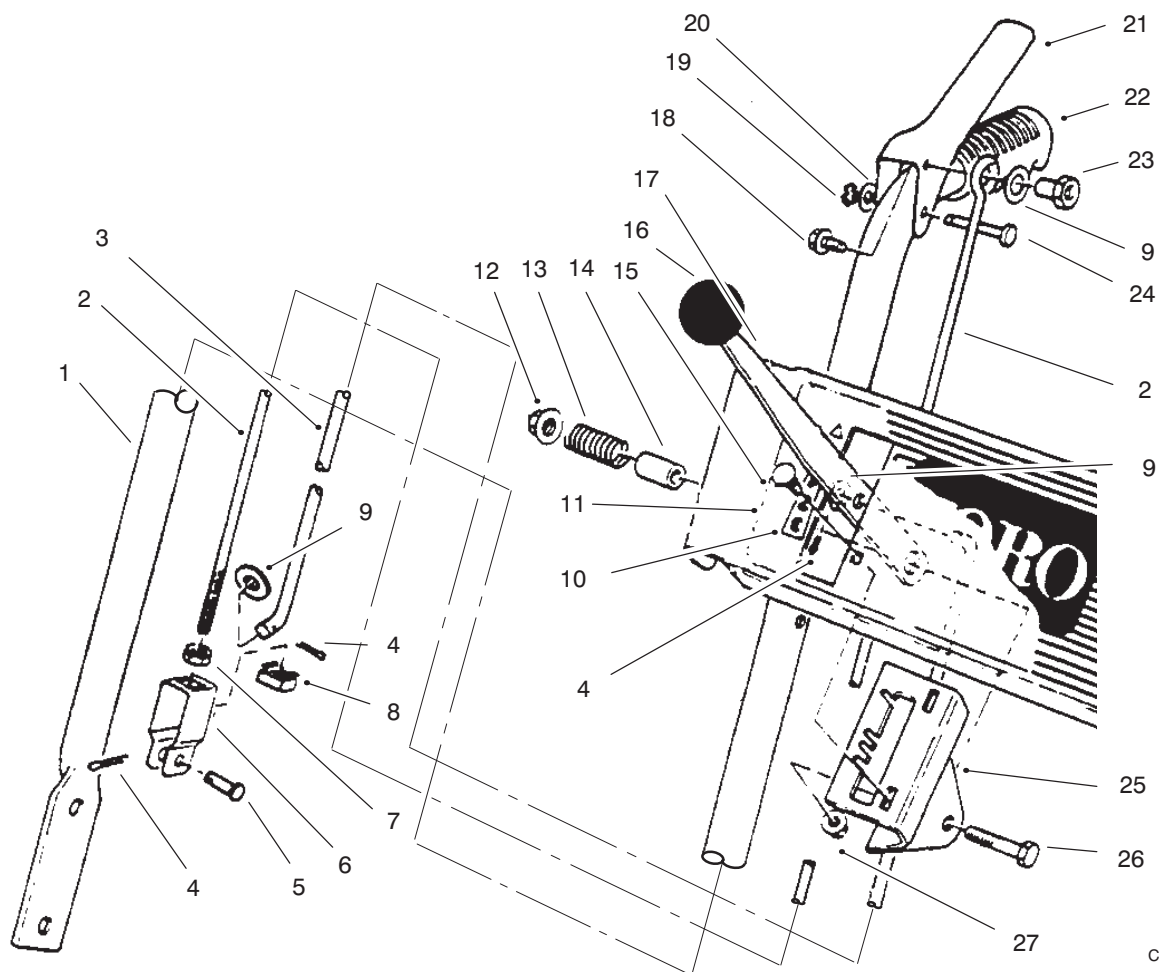 


C-2373

HANDLE ASSEMBLY RIGHT SIDE

Ref. No.	Part No.	Description	No. Used
1	52-5561	Handle - Right (Model No. 38072)	1
*	52-5560	Handle - Right (Model No. 38073)	1
2	52-5590	Link - Upper	1
3	74-1490	Rod - Speed Selector	1
4	3272-4	Pin - Cotter	3
5	283-3	Pin - Clevis	1
6	39-3080	Clevis	1
7	3218-1	Nut - Jam	1
8	32115-5	Retainer - Nut	1
9	3256-23	Washer	4
10	43-7360	Panel - Escutcheon	1
11	94-9876	Decal - 724	1
12	32128-13	Nut - Flange Lock	1
13	37-9150	Spring	1

Ref. No.	Part No.	Description	No. Used
14	40-8130	Spacer - Speed Selector	1
15	3229-11	Bolt - Carriage	2
16	233-21	Knob	1
17	37-8821	Selector - Speed	1
18	3234-13	Screw - Hex. Flange Hd.	1
19	32151-73	Ring - Clip	1
20	3256-24	Washer	1
21	63-3640	Handle - Control	1
22	74-1360	Grip - Handle	1
23	47-4990	Post - Linkage Mounting	1
24	52-5600	Pin - Control Lever	1
25	39-1280	Mount - Speed Selector	1
26	322-7	Screw	1
27	32128-33	Nut - Flange Lock	2
*	3290-378	Cable Tie	1

 *Not Illustrated

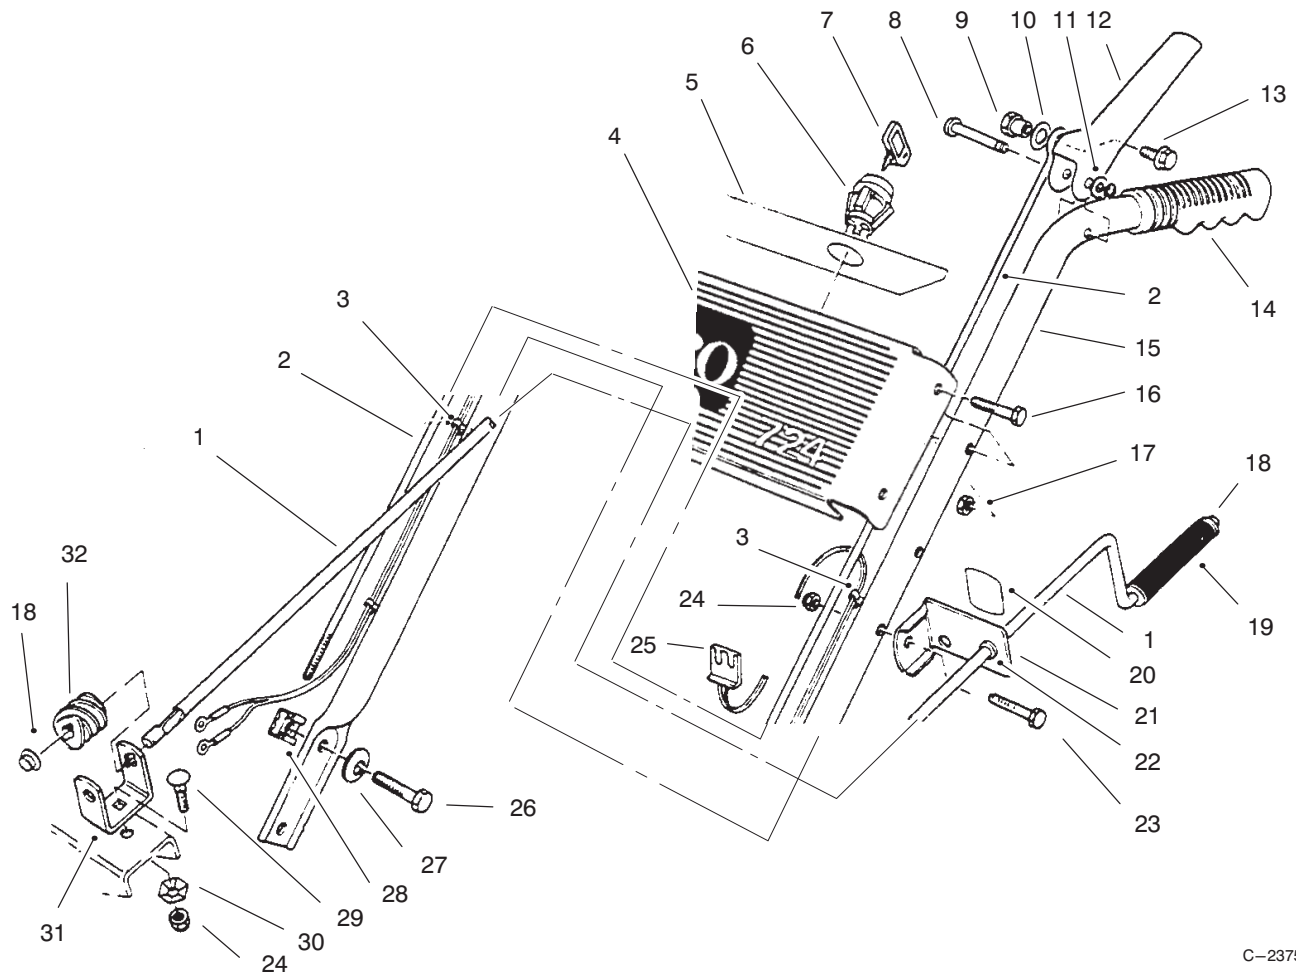


C-2375

HANDLE ASSEMBLY LEFT SIDE

Ref. No.	Part No.	Description	No. Used
1	40-8270	Rod - Chute Control	1
2	52-5590	Link - Upper	1
3	17-9120	Mount - Wire	3
4		Panel - Escutcheon Ref.	
5	66-6830	Decal - Escutcheon Back (Model No. 38072)	1
*	94-2563	Decal - Escutcheon Back (Model No. 38073)	1
6	40-5940	Switch - On/Off	1
7	63-8360	Key - Ignition	1
8	52-5600	Pin - Control Lever	1
9	47-4990	Post - Linkage Mounting	1
10	3256-24	Washer	1
12	63-3640	Handle - Control	1
13	3234-13	Screw - Hex. Flange Hd.	1
14	74-1360	Grip - Handle	1
15	52-5571	Handle - Left (Model No. 38072)	1
*	52-5570	Handle - Left (Model No. 38073)	1

Ref. No.	Part No.	Description	No. Used
16	321-9	Screw - Hex. Head	2
17	3296-42	Nut - Lock	2
18	3290-320	Nut - Push	2
19	40-8230	Grip - Rod	1
20	63-3510	Decal - Chute Direction	1
21	12-7739	Bracket - Chute Control (Incl. Ref.# 20 & 22)	1
22	256-249	Nyliner	1
23	322-7	Screw - Hex. Hd.	1
24	3296-29	Nut - Lock	2
25	43-7390	Wire Harness Asm. (Incl. Ref.# 3)	1
26	322-2	Screw - Hex. Hd.	4
27	3290-456	Washer - Belleville	4
28	3290-196	Retainer - Nut	4
29	3230-22	Bolt - Carriage	1
30	3290-238	Washer - Pyramidal	1
31	40-8280	Bracket - Chute Worm	1
32	40-8250	Gear - Worm	1
*	3290-378	Cable Tie	1

 *Not Illustrated

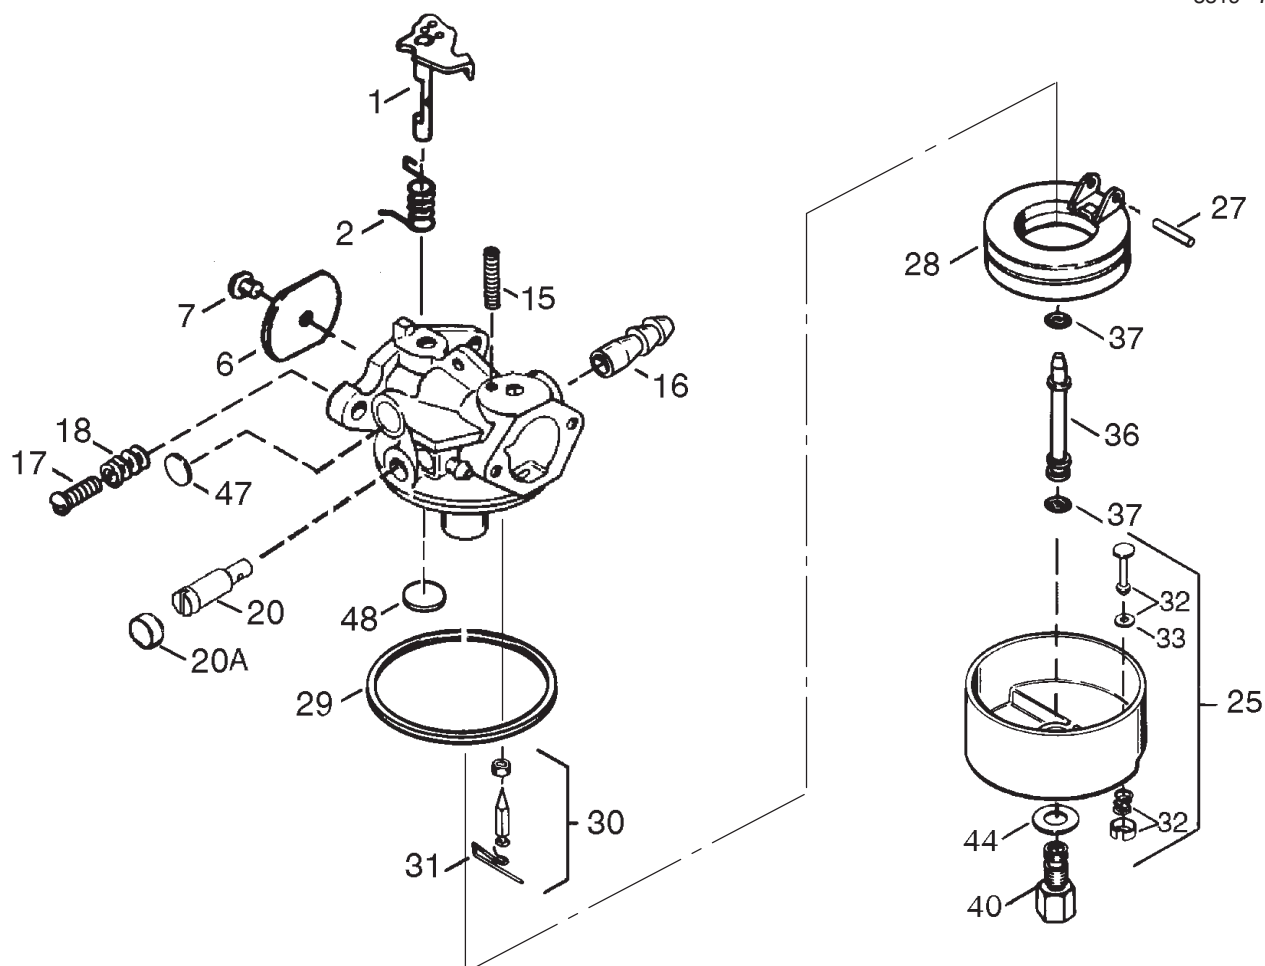

CARBURETOR NO. 640082


Ref. No.	Part No.	Description	No. Used
1	31834	Shaft & Lever Assembly	1
2	631767	Spring – Throttle Return	1
6	640070	Shutter – Throttle	1
7	650506	Screw	2
15	630735	Spring – Choke Stop	1
16	632164	Fitting – Fuel Inlet	1
17	651025	Screw – Idle	1
18	630766	Spring – Idle Screw	2
20	640018	Screw – Idle Restrictor	1
20A	640053	Screw – Idle Restrictor Cap	1
25	631951	Bowl – Assembly (Incl. Ref. #32 & 33)	1
27	631024	Shaft – Float	1
28	632019	Float – Carburetor	1
29	631028	Gasket – Bowl-to-Body	1

Ref. No.	Part No.	Description	No. Used
30	631021	Inlet Needle – Seat & Clip (Incl. Ref. #31)	1
31	631022	Clip – Inlet Needle	1
32	27136A	Drain Assembly – Bowl)	1
33	27554	Gasket – Bow Drain	1
36	632735	Tube – Main Nozzle	1
37	632547	O-Ring – Main Nozzle Tube	1
40	640083	Nut – High Speed Bowl	1
44	27110	Washer – Bowl Nut	1
47	630748	Welch Plug – Idle Mix Well	1
48	631027	Welch Plug – Atmospheric Vent	1
*	640082	Carburetor (Incl. Ref. #1-48)	1

Note: Order individual parts from your local Tecumseh dealer.

* Not Illustrated

 ENGINE TECUMSEH MODEL HSK70—130282U

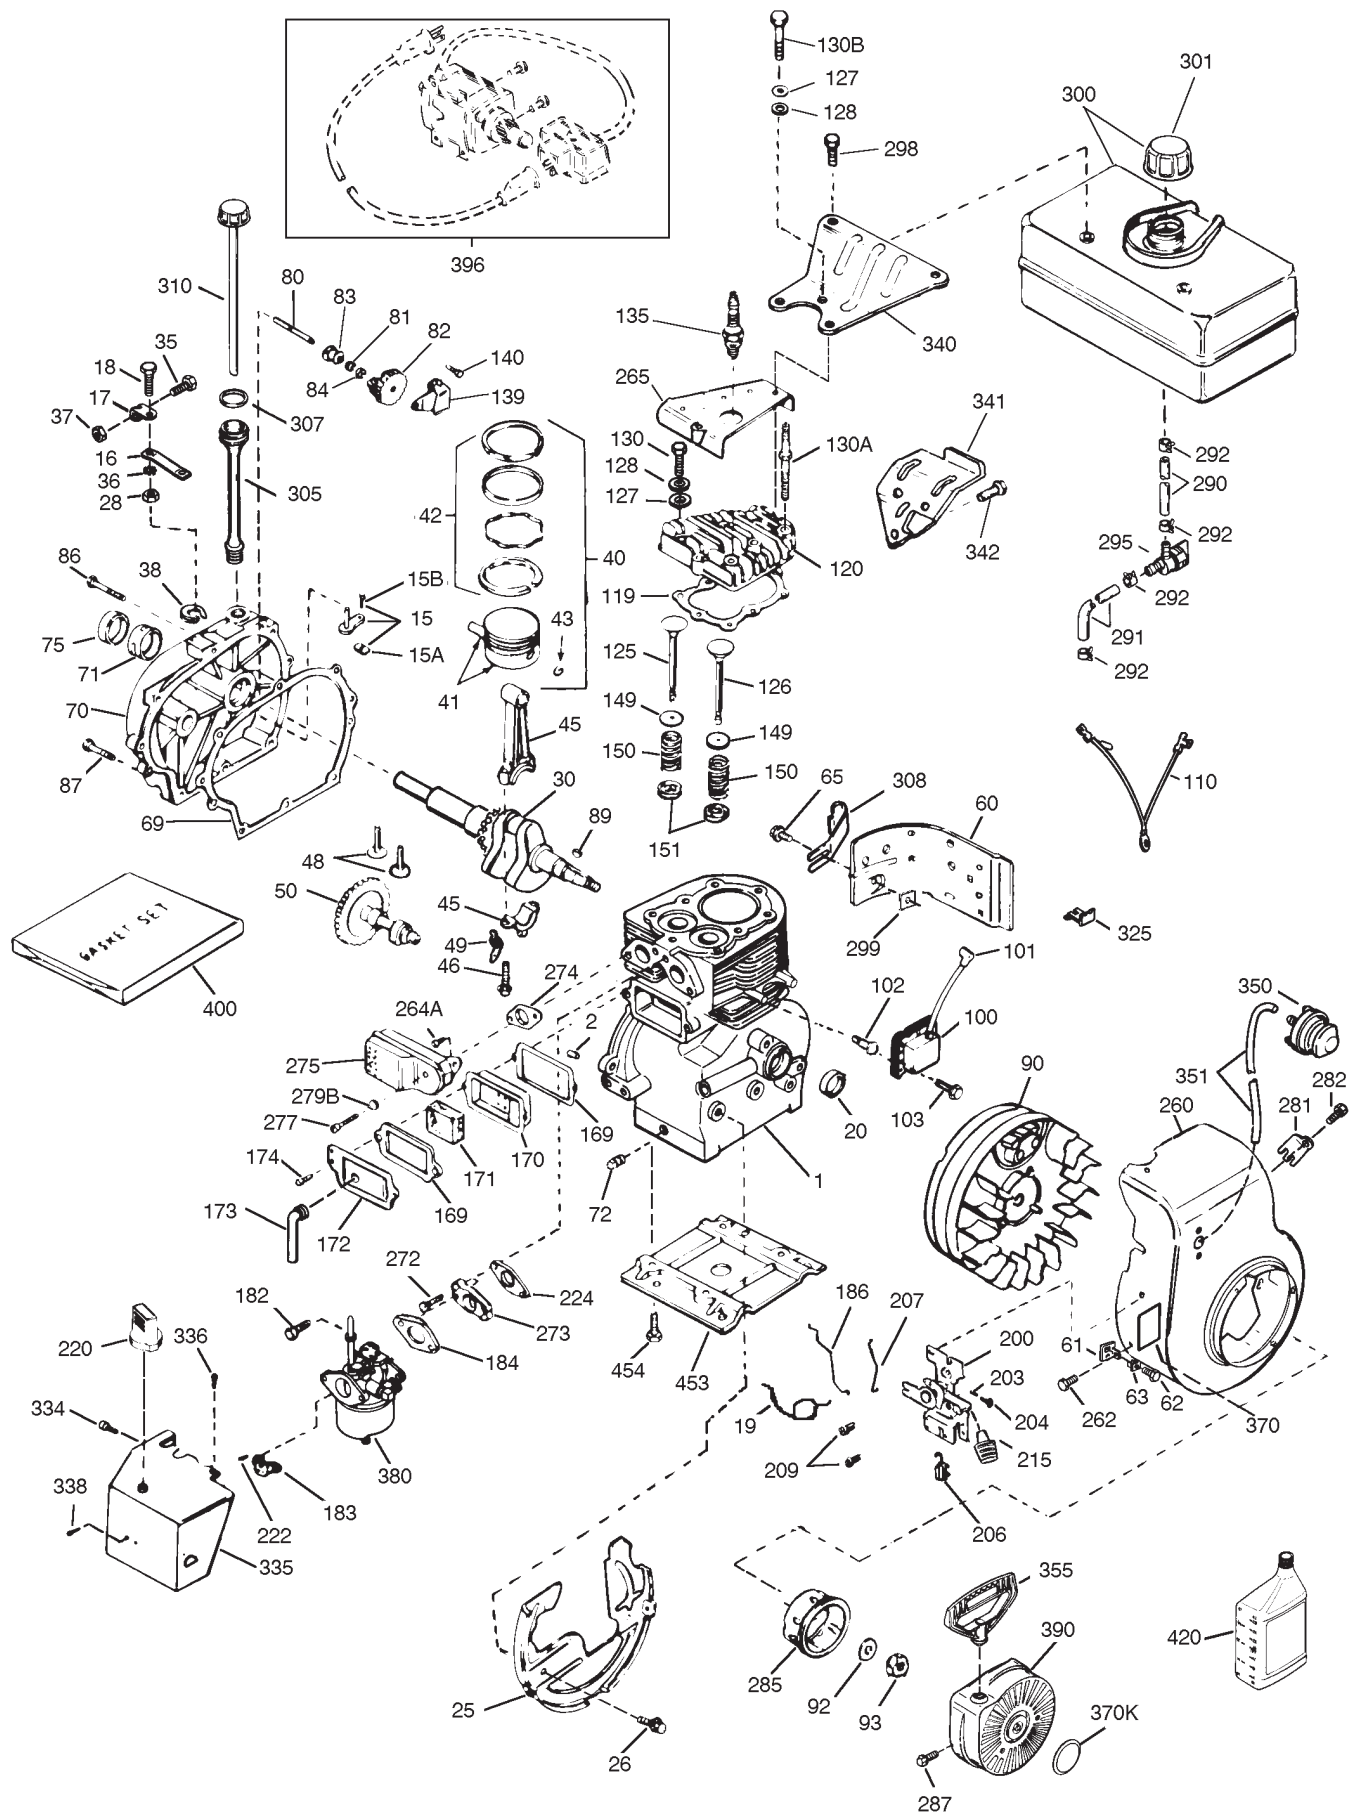


ENGINE TECUMSEH MODEL HSK70-130282U

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32586C	Cylinder (Incl. Ref. #2,20 & 72)	1	86	650488	Screw	7
2	27652	Dowel Pin	2	87	650493	Screw	1
15	30699C	Governor Rod (Incl. Ref. #15A & 15B)	1	89	32589	Flywheel Key	1
15A	30700	Governor Yoke	1	90	611085	Flywheel	1
15B	650494	Screw	1	92	650815	Belleville Washer	1
16	33454	Governor Lever	1	93	8116	Flywheel Nut	1
17	29916	Governor Lever Clamp	1	100	34443B	Solid State Ignition	1
18	651028	Screw	1	101	610118	Spark Plug Cover	1
19	34663	Speed Control Spring	1	102	651024	Solid State Mounting Stud	2
20	32630	Oil Seal	1	103	651007	Screw, Torx T-15	2
25	36460	Blower Housing Baffle	1	110	35253	Ground Wire	1
26	650561	Screw	2	*119	36453	Cylinder Head Gasket	1PK
28	30322	Lock Nut	1	120	36446	Cylinder Head (Incl. 3 of 131)	1
30	35272	Crankshaft	1	125	27878A	Exhaust Valve (Std.) (Incl. Ref. #151)	1
35	29826	Screw	1	125	27880A	Exhaust Valve (1/32" OS) (Incl. Ref. #151)	1
36	29918	Lock Washer	1	126	32784	Intake Valve (1/32" OS) (Incl. Ref. #151)	1
37	29216	Lock Nut	1	126	32783	Intake Valve (Std.) (Incl. Ref. #151)	1
38	29642	Retaining Ring	1	127	650691	Washer	3
40	34517	Piston, Pin & Ring Set (.010" OS)	1	128	650690	Belleville Washer	3
40	34518	Piston, Pin & Ring Set (.020" OS)	1	130	650697A	Screw	2
40	34519	Piston, Pin & Ring Set (Std.)	1	130A	650697A	Screw	3
41	32592B	Piston & Pin Ass'y (.010" OS) (Incl. Ref. #43)	1	130B	650697A	Screw	3
41	32593B	Piston & Pin Ass'y (.020" OS) (Incl. Ref. #43)	1	135	35395	Resistor Spark Plug (RJ19LM)	1
41	32594B	Piston & Pin Ass'y (Std.) (Incl. Ref. #43)	1	139	31843A	Governor Gear Bracket	1
42	34595	Ring Set (Std.)	1	140	650965	Screw, Torx T-25	2
42	34596	Ring Set (.020" OS)	1	149	27882	Valve Spring Cap	2
42	34597	Ring Set (.010" OS)	1	150	27881	Valve Spring	2
43	27888	Piston Pin Retaining Ring	2	151	32581	Valve Spring Keeper	2
45	32591C	Connecting Rod Ass'y (Incl. Ref. #46 & 49)	1	*169	27896A	Valve Cover Gasket	2PK
46	650662C	Connecting Rod Bolt	2	170	28423	Breather Body	1
48	34034	Valve Lifter	2	171	28424	Breather Element	1
49	34242	Oil Dipper	1	172	28425	Valve Cover	1
50	32115	Camshaft (MCR)	1	173	35350	Breather Tube	1
60	30622A	Blower Housing Extension	1	174	650128	Screw	2
61	34126	Grommet Mounting Bracket	1	182	650517	Screw	2
62	650760	Screw	1	183	32398	Choke Bracket	1
63	28545	Grommet	1	*184	31688A	Carburetor To Intake Pipe Gasket	1PK
65	650128	Screw	1	186	34661	Governor Link	1
69	30684	Cylinder Cover Gasket	1PK	200	34677	Control Bracket (Incl. Ref. #203, 204, & 206)	1
*70	31303C	Cylinder Cover (Incl. Ref. #71, 75, & 80)	1	203	31342	Compression Spring	1
71	31546	Crankshaft Bushing	1	204	651029	Screw	1
72	27642	Oil Drain Plug	2	206	610973	Terminal	1
75	28427	Oil Seal	1	207	34662	Throttle Link	1
80	31845	Governor Shaft	1	209	650821	Screw	2
81	30590A	Washer	1	215	35440	Control Knob	1
82	30591	Governor Gear Ass'y	1	220	35439	Control Knob	1
83	30588A	Governor Spool	1	222	28820	Screw	2
84	29193	Retaining Ring	1	*224	27915A	Intake Pipe Gasket	1PK
				260	36254	Blower Housing	1
				262	29747B	Screw, Torx T-40	2
				264A	30196	Screw	1
				265	30939A	Cylinder Head Cover	1
				272	30196	Screw	2

Note: Order individual parts from your local Tecumseh dealer.

*Included in Gasket Set Ref. #400.

 ENGINE TECUMSEH MODEL HSK70—130282U

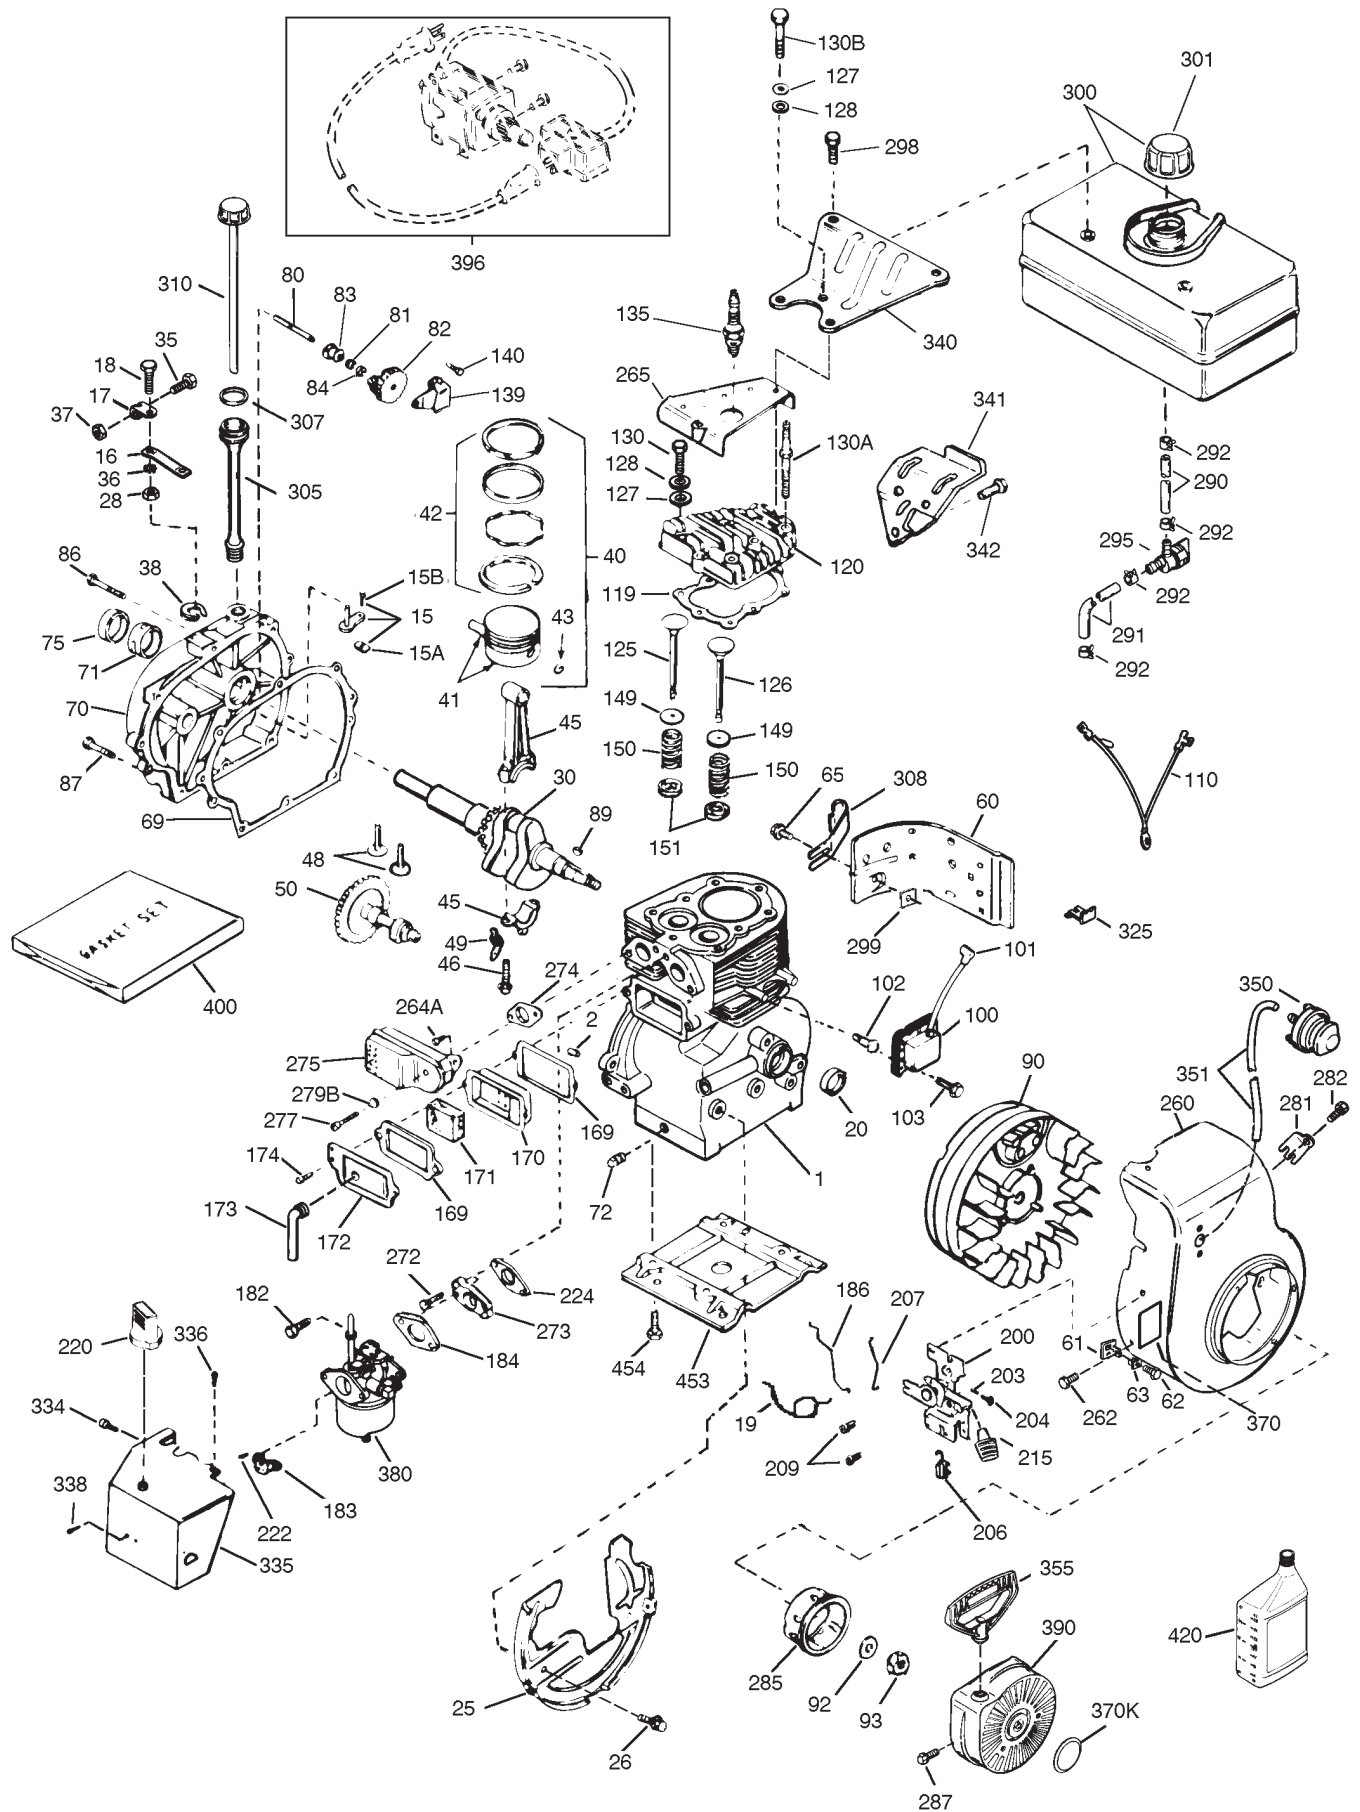


ENGINE TECUMSEH MODEL HSK70—130282U

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
273	34712	Carburetor Flange	1	334	650257	Screw	2
274	35865	Exhaust Manifold Gasket	1PK	335	35060	Carburetor Cover	1
275	32401	Muffler	1	336	650765	Screw	1
277	650694A	Screw	1	338	650760	Screw	1
279B	26073	Washer	1	340	34159	Fuel Tank Bracket	1
281	33013	Starter Bubble Cover	1	341	34158	Fuel Tank Bracket	1
282	650760	Screw	1	342	650561	Screw	1
285	35287B	Starter Cup	1	350	570682	Primer Ass'y	1
287	650926	Screw	3	351	32180C	Primer Line	1
290	29774	Fuel Line	1	355	590574	Starter Handle	1
291	30962	Fule Line	1	370	36261	Instruction Decal	1
292	26460	Fuel Line Clamp	4	370K	36695	Starter Decal	1
295	35857	Fuel Shut—Off Valve	1	380	640084	Carburetor	
298	650665	Screw	2			(Incl. Ref. #184)	1
299	650764	"U" Type Nut	1	390	590742	Rewind Starter	1
300	34186A	Fuel Tank		396	33328D	Electric Starter Motor	
		(Incl. Ref. #292 & 301)	1			(Optional)	1
301	36246	Fuel Cap	1	400	33239A	Gasket Set	1
305	35554	Oil Fill Tube	1	420	730225	Sae 30 4—Cycle Engine	
307	35499	"O" Ring	1			Oil (Quart)	1
308	35540	Fill Tube Clip	1	453	29538	Engine Mounting Base	1
310	36205	Dipstick	1	454	650542	Screw	4
325	29443	Wire Clip	1				

Note: Order individual parts from your local Tecumseh dealer.

 
*Included in Gasket Set Ref. #400.

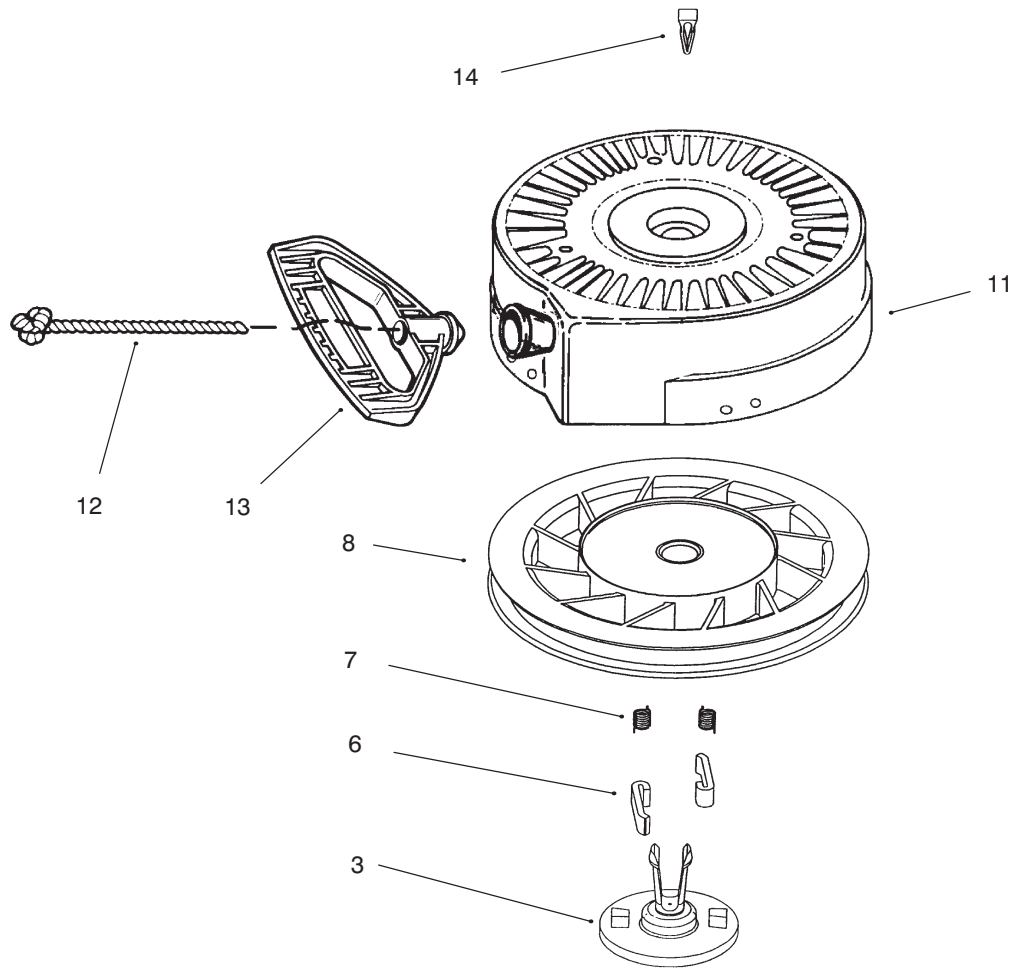

RECOIL STARTER NO. 590742

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
3	590740	Retainer	1	11	590647	Starter Housing Asm.	1
6	590616	Starter Dog	2	12	590535	Starter Rope	1
7	590617	Dog Spring	2	13	590574	Mitten Grip Handle	1
8	590645A	Pulley & Rewind Spring Asm.	1	14	590741	Locking Tab	1

 Note: Order individual parts from your local Tecumseh dealer.

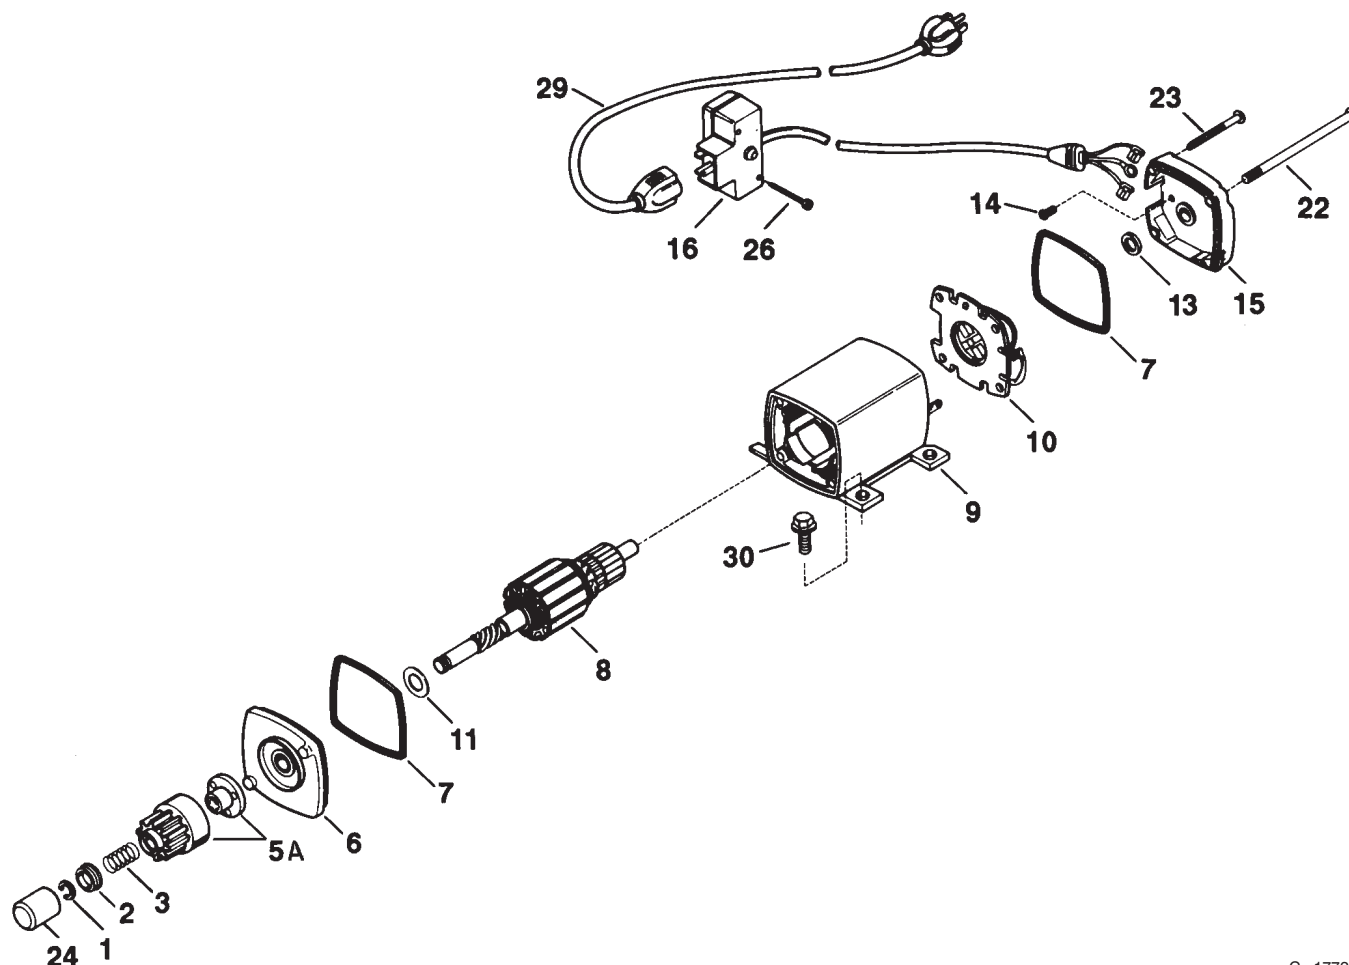

C-1772

ELECTRIC STARTER KIT NO. 38-7590 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	33842	Ring - Retainer	1
2	33430	Retainer - Spring	1
3	33431	Spring - Anti-Drift	1
5A	35913	Gear & Nut (Incl. Ref. #1)	1
6	35449	Cap Assembly - Drive End (Incl. Ref. #7)	1
7	35450	"O" Ring	2
8	35914	Armature	1
9	35457A	Housing Assembly	1
10	35452A	Card Assembly - Brush	1
11	35911	Washer - Thrust	1
13	590500	Washer - Thrust	1

Ref. No.	Part No.	Description	No. Used
14	33441	Screw - Ground	1
15	35453	Cap Assy., Commutator End (Incl. Ref. #7)	1
16	35454	Box Assembly - Switch (Incl. Ref. #26)	1
22	35458	Bolt - Case	2
23	35456	Screw - Grounding	1
24	33451	Cover - Dust	1
26	650819	Screw - Hex. Hd.	2
29	32450B	Cord - Extension, 10' 6"	1
30	30063	Screw - Hex. Hd.	4
*	730623	Switch Repair Kit	1

Note: Order individual parts from your local Tecumseh dealer.

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0737	Washer	3 14 1	42-671	Screw	2 30 3
3-4244	Idler Pulley	1 6 1	42-3560	Bolt — Shoulder	1 13 1
3-8664	Washer	4 47 1	43-7290	Screw — Special	1 2 1
3-8664	Washer — Thrust	5 28 2	43-7310	Traction Engagement Asm.	6 34 1
5-1550	Washer — Thrust	4 34 4	43-7360	Panel — Escutcheon	7 10 1
5-7170	Gear — Worm	4 46 1	43-7390	Wire Harness Asm.	8 25 1
5-7180	Gear	4 43 1	47-4990	Post — Linkage Mounting	8 9 1
5-7570	Washer — Thrust	6 24 2	47-4990	Post — Linkage Mounting	7 23 1
7-0045	Seal — Oil	4 54 2	51-0460	Gasket	4 51 1
10-9280	Washer — Thrust	6 9 2	52-5560	Handle — Right	7 * 1
12-3270	Screw — Tapping	5 4 8	52-5561	Handle — Right	7 1 1
12-7739	Bracket — Chute Control	8 21 1	52-5570	Handle — Left	8 * 1
12-8789	Bearing Assembly	4 * 1	52-5571	Handle — Left	8 15 1
14-2449	Gear Case R.H.	4 52 1	52-5590	Link — Upper	7 2 1
14-2459	Gear Case L.H.	4 40 1	52-5590	Link — Upper	8 2 1
14-7959	Auger Clutch	1 11 1	52-5600	Pin — Control Lever	8 8 1
17-9120	Mount — Wire	8 3 3	52-5600	Pin — Control Lever	7 24 1
20-1620	Bearing — Friction Wheel	6 4 2	53-7570	Spring — Auger Disengage	1 10 1
20-4320	Washer — Rubber	3 13 2	53-7670	Decal — Auger Warning	3 3 1
26-6110	Flange — Bearing Rear	3 8 1	55-8950	Plate — Friction	3 12 2
26-6120	Flange — Bearing Front	3 6 1	56-2670	Chute — Wire	3 20 1
26-9672	V-Belt — Auger	2 29 1	56-2680	Deflector	3 18 1
27-0220	Screw — Self Tap.	3 28 6	63-2420	Decal — Choke	1 15 1
36-180	Washer — Lock	2 31 3	63-2430	Decal — Choke	1 * 1
36-195-1	Washer — Flat	2 32 3	63-2450	Decal — Throttle	1 17 1
36-4790	Washer — Thrust	6 17 2	63-3450	Bearing — Ball	3 7 1
37-6490	Retainer — Chute Ring	3 25 3	63-3510	Decal — Chute Direction	8 20 1
37-6500	Gear — Sliding	6 2 1	63-3640	Handle — Control	8 12 1
37-6520	Gear — Axle	5 27 1	63-3640	Handle — Control	7 21 1
37-6550	Bearing — Auger	4 35 2	63-8360	Key — Ignition	8 7 1
37-6560	Bushing — Input	4 57 1	66-6790	Mount — Clutch Rod Front	5 7 1
37-6570	Wheel — Friction	6 18 1	66-6830	Decal — Escutcheon Back	8 5 1
37-6760	Shaft — Pivot	6 21 1	66-6840	Decal — Hot	1 18 1
37-6780	Shaft — Hex	6 25 1	66-8060	Molded Brake Asm.	1 4 1
37-6801	Shaft — Auger	4 55 1	74-1350	Shaft — Axle	5 22 1
37-6830	Cover — Bottom	5 17 1	74-1360	Grip — Handle	8 14 1
37-6850	Bearing — Axle	5 23 2	74-1360	Grip — Handle	7 22 1
37-6890	Pulley	3 16 1	74-1370	Engine Pulley	1 3 1
37-6961	Gear Case Asm.	4 * 1	74-1420	Blade — Scraper	4 36 1
37-6990	Shaft & Impeller	3 4 1	74-1490	Rod — Speed Selector	7 3 1
37-8770	Bolt — Shoulder	5 14 2	74-1590	Auger — L.H.	3 * 1
37-8770	Bolt — Shoulder	6 14 1	74-1600	Auger — R.H.	3 2 1
37-8790	Mount — Quadrant Gear	6 10 1	88-0550	Frame — Friction Plate	5 5 1
37-8800	Quadrant — Gear	6 13 1	88-0560	Hub — Frame	5 9 1
37-8821	Selector — Speed	7 17 1	88-0850	Pulley & Shaft	5 1 1
37-8870	Spring—Friction Plate Frame	5 25 1	94-2558	Decal — Discharge	3 * 1
37-8880	Spring — Traction Engage	6 6 1	94-2563	Decal — Escutcheon Back	8 * 1
37-8900	Frame — Traction	5 12 1	94-2568	Decal — Auger Warning	3 * 1
37-8941	Ring — Chute	4 30 1	94-2572	Decal — Primer	1 16 1
37-9070	Mount — Clutch Rod Rear	5 11 1	94-2576	Decal — Hot	1 * 1
37-9090	V-Belt — Traction	2 28 1	94-2785	Housing—Auger	3 * 1
37-9150	Spring	7 13 1	94-2786	Housing—Auger	3 1 1
37-9160	Intermediate Gear & Bushing	6 8 1	94-2792	Chute — Discharge	3 * 1
38-0800	Plate — Friction	5 13 1	94-2793	Chute — Discharge	3 21 1
38-4490	Bracket — Traction	6 30 1	94-8079	Decal — Discharge	3 22 1
38-4520	Spring — Compression	6 28 1	94-9876	Decal — 724	7 11 1
38-7820	Bearing	5 10 1	127-19	Guard — Muffler	2 33 1
39-1230	Bracket — Sliding	6 5 1	231-120	Tire	5 18 2
39-1250	Cam — Receiver	6 15 1	232-46	Tube	5 21 2
39-1280	Mount — Speed Selector	7 25 1	233-21	Knob	7 16 1
39-1520	Hub — Friction Wheel Mount	6 19 1	237-87	Seal	4 58 1
39-3060	Rod — Lower Traction	6 27 1	241-131	Rim	5 20 2
39-3080	Clevis	7 6 1	252-71	Bearing — Thrust	4 42 2
40-5940	Switch — On/Off	8 6 1	252-76	Bearing — Needle, Thrust	4 45 1
40-8130	Spacer — Speed Selector	7 14 1	252-80	Washer — Thrust	5 3 1
40-8160	Skid	4 31 2	252-80	Washer — Thrust	4 50 1
40-8230	Grip — Rod	8 19 1	256-32	Bushing	4 49 1
40-8250	Gear — Worm	8 32 1	256-86	Bushing	6 3 1
40-8270	Rod — Chute Control	8 1 1	256-237	Bushing	4 53 2
40-8280	Bracket — Chute Worm	8 31 1	256-249	Nyliner	8 22 1
40-8350	Screw — Shoulder	6 32 1	256-322	Bushing	5 6 1
40-9680	Spacer	6 31 1	257-3	Washer — Thrust	4 44 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
281-1	Pipe — Plug	4 41 1	3290-340	Washer — Belleville	3 10 2
283-3	Pin — Clevis	7 5 1	3290-378	Cable Tie	7 * 1
288-2	Cap	2 21 1	3290-378	Cable Tie	8 * 1
289-9	Pipe Nipple	1 20 1	3290-456	Washer — Belleville	8 27 4
321-4	Screw — Hex. Hd.	6 16 1	3296-16	Nut — Lock	6 12 1
321-9	Screw — Hex. Head	8 16 2	3296-29	Nut — Lock	6 11 1
321-10	Screw	4 38 2	3296-29	Nut — Lock	5 15 6
322-2	Screw — Hex. Hd.	6 7 4	3296-29	Nut — Lock	2 22 4
322-2	Screw — Hex. Hd.	5 26 6	3296-29	Nut — Lock	8 24 2
322-2	Screw — Hex. Hd.	8 26 4	3296-29	Nut — Lock	3 9 13
322-4	Screw	2 24 4	3296-42	Nut — Lock	8 17 2
322-7	Screw	7 26 1	3296-42	Nut — Lock	6 33 1
322-7	Screw — Hex. Hd.	8 23 1	3296-42	Nut — Lock	4 37 2
323-29	Screw	1 12 1	3296-48	Nut — Lock	6 20 1
3210-3	Screw	2 27 1	3296-56	Nut — Lock	1 9 1
3218-1	Nut — Jam	7 7 1	3296-59	Nut — Lock	1 5 1
3229-11	Bolt — Carriage	7 15 2	32115-5	Retainer — Nut	7 8 1
3230-1	Bolt — Carriage	4 60 9	32120-72	Ring — Retaining	4 48 1
3230-18	Bolt — Carriage	3 5 6	32121-31	Pin — Roll	5 24 2
3230-22	Bolt — Carriage	3 19 2	32121-45	Pin — Roll	6 22 2
3230-22	Bolt — Carriage	8 29 1	32128-13	Nut — Flange Lock	7 12 1
3234-13	Screw — Hex. Flange Hd.	8 13 1	32128-20	Nut — Flange	4 32 4
3234-13	Screw — Hex. Flange Hd.	7 18 1	32128-32	Nut — Flange	6 29 1
3242-4	Screw — Set	3 17 2	32128-33	Nut — Flange	6 26 2
3255-8	Washer — Lock Ext. Tooth	2 26 1	32128-33	Nut — Flange Lock	7 27 2
3256-23	Washer	7 9 4	32144-4	Screw — Self Tap.	5 16 6
3256-23	Washer	3 23 3	32144-4	Screw — Self Tap.	1 19 3
3256-23	Washer — Flat	2 23 5	32144-41	Screw — Self Tap.	4 56 8
3256-24	Washer	8 10 1	32144-70	Screw — Self Tap.	3 26 4
3256-24	Washer	7 20 1	32144-70	Screw — Self Tap.	6 1 4
3256-24	Washer — Flat	1 8 1	32144-70	Screw — Self Tap.	5 8 5
3256-68	Washer — Flat	3 11 2	32151-36	Ring — Retaining	4 33 2
3257-23	Key	3 15 1	32151-61	Ring — Retaining	6 35 1
3257-23	Key — Woodruff	4 59 1	32151-73	Ring — Clip	7 19 1
3257-24	Key	6 23 1	32151-103	Ring — Snap	5 2 1
3257-33	Key — Woodruff	4 39 1			
3272-4	Pin — Cotter	7 4 3			
3290-196	Retainer — Nut	8 28 4			
3290-238	Washer — Pyramidal	8 30 1			
3290-243	Pin — Klik	5 19 2			
3290-320	Nut — Push	8 18 2			
3290-320	Nut — Push On	1 7 1			
3290-326	Pushnut	4 29 1			

OPTIONAL EQUIPMENT

110 Vac Electric Starter Kit	38037
Tire Chain Kit	56-2700
Drift Breaker Kit	37-7022
Snow Cab	88-0600

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]