



Mid-Size Mower

ProLine Hydro 15hp with 48in Side Discharge Mower

Model No. 30528—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel System Assembly	3	Cylinder Head, Valve and Breather Assembly	
Transmission and Drive Pulley Assembly	4	Kohler Model CV15T–41608	18
Linkage Assembly	5	Ignition and Electrical Assembly	
Wheel Drive Assembly	6	Kohler Model CV15T–41608	19
Hydraulic Assembly	7	Blower Housing And Baffle Assembly	
Lower Control Assembly	8	Kohler Model CV15T–41608	20
Upper Handle Assembly	9	Starter Assembly	
Electrical Assembly	11	Kohler Model CV15T–41608	21
Deck Assembly	12	Fuel System Assembly	
Front Castor, Belt Tension, and		Kohler Model CV15T–41608	22
Blade Brake System Assembly	13	Engine Controls Assembly	
Spindle, Blade and Belt Assembly	15	Kohler Model CV15T–41608	23
Crankcase Assembly		Air Cleaner Assembly	
Kohler Model CV15T–41608	16	Kohler Model CV15T–41608	24
Oil Pan and Lubrication Assembly		Exhaust Assembly	
Kohler Model CV15T–41608	17	Kohler Model CV15T–41608	25


Accessories

Description	Model / Part No.	Description	Model / Part No.
Recycler Kit	30142	Parking Brake	106–2746
Bagging Kit	30198	Atomic Blade	104–8590
Low Sail Blades	103–2508		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

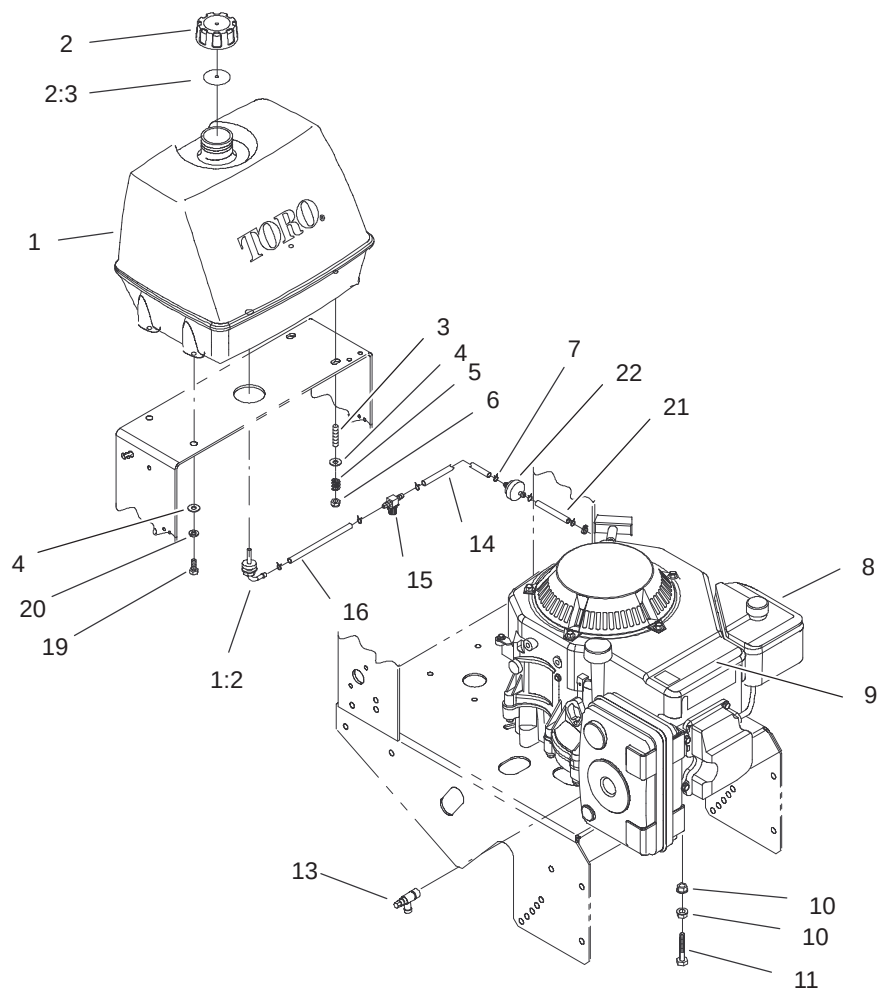


Sheet No.:2

Engine and Fuel System Assembly

Ref. No.	Part No.	Qty.	Description
1	106-0730	1	Fuel Tank ASM
1:2	103-2605	1	Fitting-Fuel, Bulkhead
2	88-3980	1	Gas Cap ASM
2:3	88-4010	1	Gasket-Cap, Gas
3	1-633023	2	Stud
4	3256-23	4	Washer-Flat
5	1-633349	2	Spring-Tank, Fuel
6	3296-47	2	Nut-Lock, NI
7	1-303077	6	Clamp
☆8		1	Engine-Kohler, Cv15t-41608
9	106-0699	1	Decal-Warning, Hot Surfaces
10	3290-357	2	Nut-HHF
11	323-13	1	Screw-HH
13	103-1965	1	Valve-Drain, Oil
14	103-2944	1	Line-Fuel
15	1-603776	1	Hose-Line, Fuel
16	1-603955	1	Hose-Fuel
19	322-3	2	Screw-HH
20	1-805005	2	Washer-Lock
21	1-603954	1	Hose-Line, Fuel
22	1-303197	1	Filter-Fuel

☆ Not serviced separately

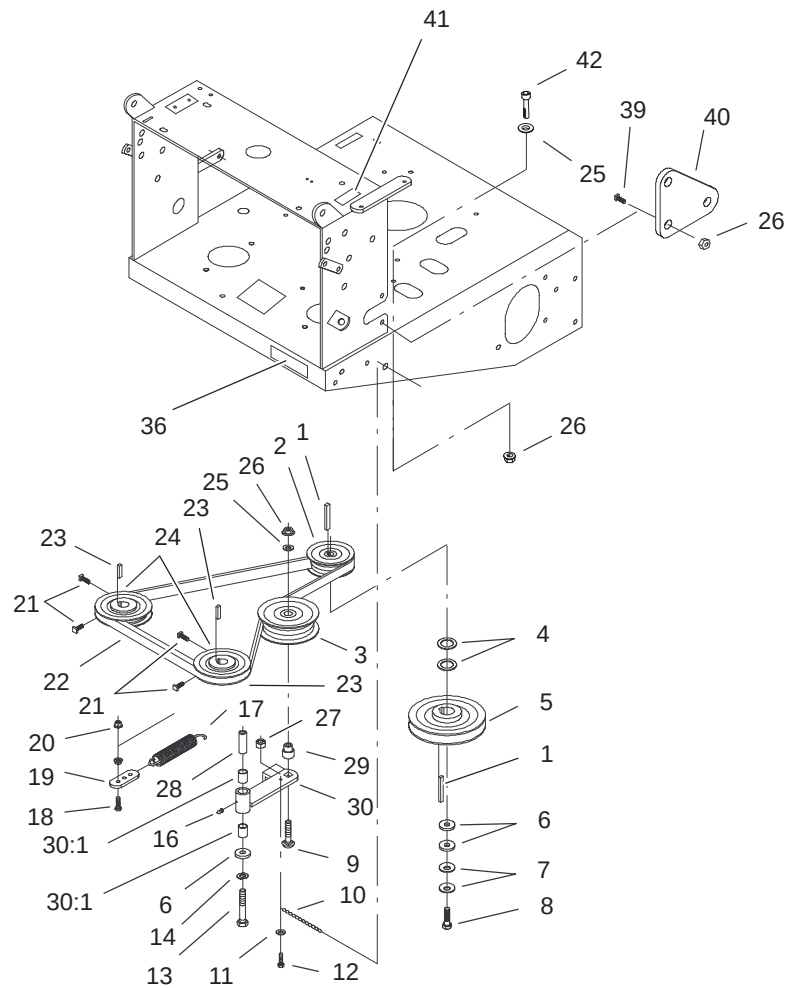


Sheet No.:3

Transmission and Drive Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	1-807259	2	Key
2	1-653035	1	Sheave W/Hub
3	1-603843	1	Pulley-Idler
4	1-523157	2	Washer-Spacer
5	103-1667	1	Sheave
6	1-373034	3	Washer
7	1-603610	2	Washer-Spring
8	3212-6	1	Screw-HH
9	3231-29	1	Screw-CARR
10	1-323365	1	Chain-Link, Twist
11	3256-14	1	Washer-Flat
12	1-809069	1	Screw-Cap HH
13	323-12	1	Screw-HH
14	3253-5	1	Washer-Lock
16	302-19	1	Fitting-Grease
17	1-603402	1	Spring-Extension
18	322-5	1	Screw-HH
19	1-603801	1	Anchor-Spring
20	32128-20	6	Nut-HF
21	1-803050	4	Screw-Set
22	106-2740	1	V-Belt-Hydro Drive
23	1-807272	2	Key
24	1-413010	2	Sheave W/Hub
25	3256-24	2	Washer-Flat
26	3290-357	7	Nut-HHF
27	3296-2	1	Nut-Lock


Ref. No.	Part No.	Qty.	Description
28	1-603044	1	Bushing
29	1-603496	1	Bushing-Idler
30	1-602521	1	Idler Arm ASM
30:1	1-513034	2	Sleeve-Bearing
36	98-0776	1	Decal-Caution
39	323-4	2	Screw-HH
40	1-413497	1	Bellcrank
41	95-2814	1	Decal-Shut Off, Fuel
42	323-7	1	Screw-HH

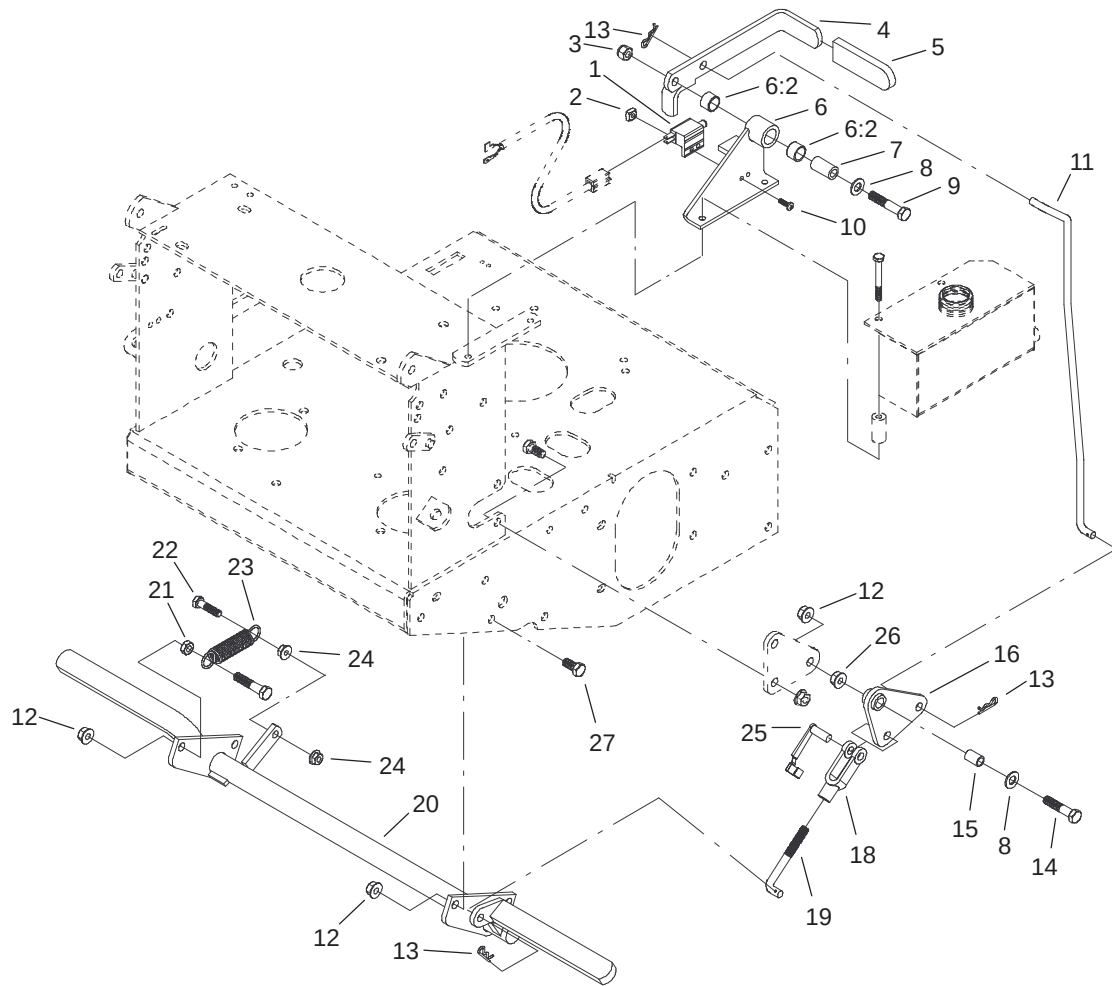

Sheet No.:4

Linkage Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	1-513051	1	Switch-Open, Normally	26	32128-21	1	Nut-HF
2	1-633181	1	Plate-Tapped	27	323-4	3	Screw-HH
3	3296-39	1	Nut-Lock, NI				
4	1-412501-03	1	Lever-Parkbrake				
5	1-303020	1	Grip-Lever				
6	1-414504	1	Bracket ASM				
6:2	1-413347	2	Sleeve-Bushing				
7	1-413344	1	Bushing-Pivot				
8	3256-24	2	Washer-Flat				
9	323-10	1	Screw-HH				
10	3290-500	2	Screw-PPH				
11	1-413496	1	Linkage-Upper				
12	3290-357	5	Nut-HHF				
13	1-806003	3	Pin-Hair				
14	323-9	2	Screw-HH				
15	1-303548	1	Bushing-Plastic				
16	1-414508	1	Bellcrank ASM				
18	1-633131	1	Yoke-Linkage, Brake				
19	1-413489	1	Linkage-Lower				
20	103-2004-03	1	Brake				
21	3218-3	1	Nut-Jam				
22	322-6	1	Screw-HH				
23	1-323161	1	Spring-Idler				
24	32128-20	2	Nut-HF				
25	103-2399	1	Pin-Spring, Clevis				

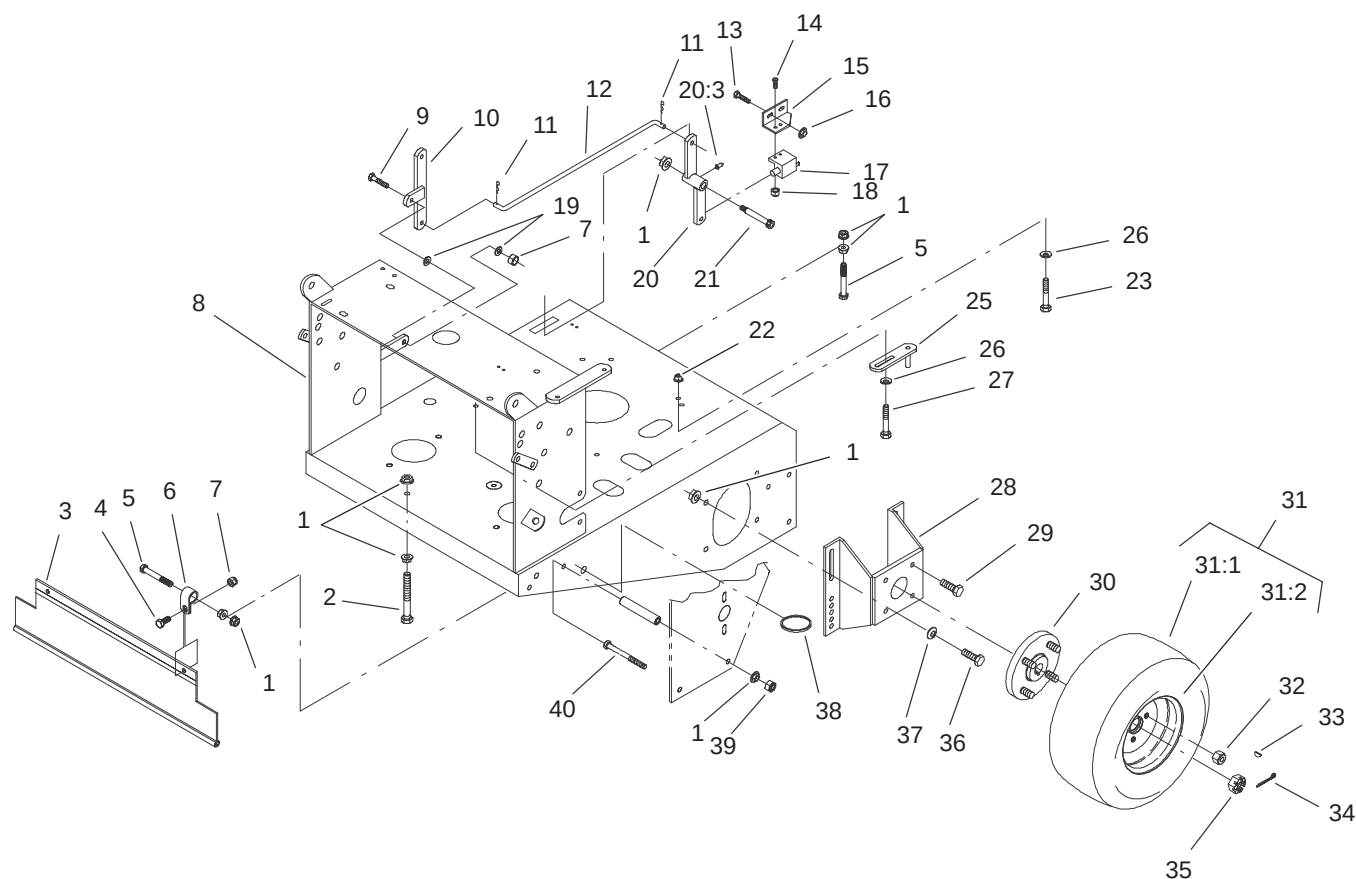


Sheet No.:5

Wheel Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-357	8	Nut-HHF
2	323-11	1	Screw-HH
3	103-2056	1	Shield-Drag
4	322-3	2	Screw-HH
5	323-13	4	Screw-HH
6	1-413510	2	Clip-Loom
7	3296-29	3	Nut-Lock, NI
8	103-2908-01	1	Deck-Rear
9	322-6	2	Screw-HH
10	1-322090-01	1	Bellcrank
11	1-806003	3	Pin-Hair
12	1-323172	1	Linkage-Engage, Blade
13	321-3	2	Screw-HH
14	3290-500	1	Screw-PPH
15	1-323213	1	Bracket-Switch, Blade
16	32128-33	2	Nut-HF
17	1-513051	1	Switch-Open, Normally
18	1-633181	1	Plate-Tapped
19	3256-23	5	Washer-Flat
20	1-322108	1	Bellcrank ASM
20:3	302-40	1	Fitting-Grease
21	1-809062	1	Screw
22	32128-20	6	Nut-HF
23	33114-025	3	Screw-HH

Ref. No.	Part No.	Qty.	Description
25	1-322110	1	Guide-Belt
26	1-303334	4	Washer-Spring
27	33114-030	1	Screw-HH
28	1-402062-01	2	Mount-Motor
29	3234-12	8	Screw-HHF
30	1-602997	2	Hub W/Studs
☆31		2	Wheel And Tire ASM
31:1	1-413474	1	Tire-Turfmaster
31:2	1-603715	1	Wheel-Rim
32	242-50	8	Nut-Lug
33	1-807019	2	Key-Woodruff
34	1-806800	2	Pin-Cotter
35	32136-5	2	Nut-Slotted
36	323-6	8	Screw-HH
37	98-5975	12	Washer-Belleville
38	1-323366	1	Ring-Split
39	3296-39	1	Nut-Lock, NI
40	323-23	1	Screw-HH


☆ Not serviced separately

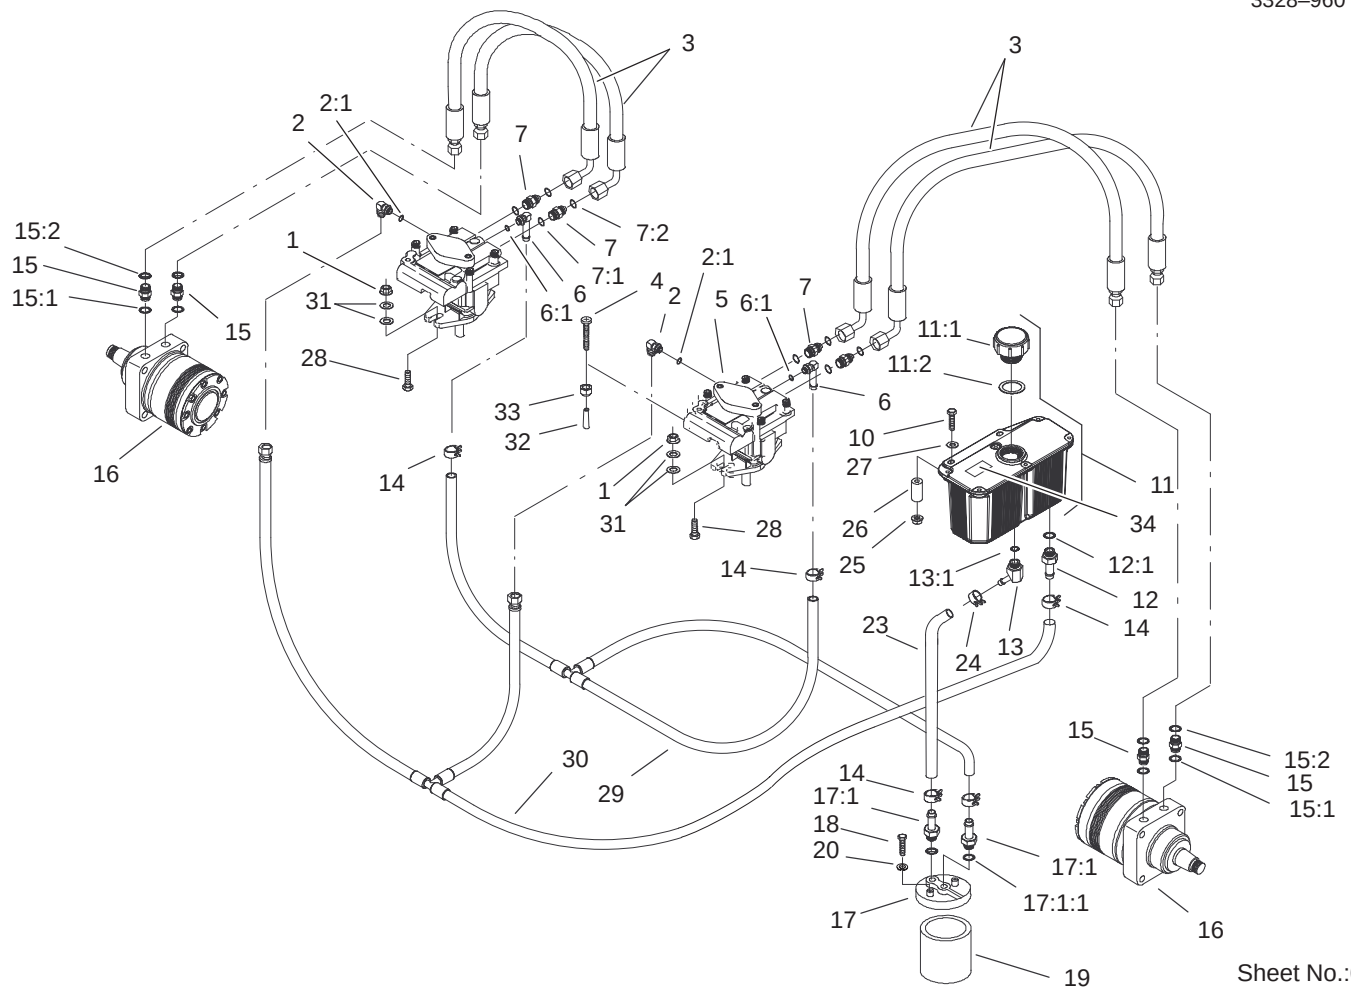

Sheet No.:6

Hydraulic Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3290-357	4	Nut-HHF	17:1:1	237-42	1	O-Ring
2	1-513840	2	Fitting-90°	18	321-3	2	Screw-HH
2:1	237-42	1	O-Ring	19	1-633750	1	Filter-HYD
3	1-403102	4	Hose-Pressure, High	20	1-805004	2	Washer-Lock
4	1-801063	2	Screw	23	103-2959	1	Hose-Charge
5	1-613042	2	Pump	24	103-1716	1	Clamp-Hose
6	1-603989	2	Fitting	25	32128-33	2	Nut-HF
6:1	237-78	1	O-Ring	26	103-2191	2	Spacer
7	1-603990	4	Fitting-Straight	27	3256-22	2	Washer-Flat
7:1	237-79	1	O-Ring	28	323-7	4	Screw-HH
7:2	1-603992	1	O-Ring	29	103-2057	1	HYD Hose ASM
10	321-15	2	Screw-HH	30	103-2073	1	HYD Hose ASM
11	103-1946	1	Reservoir-HYD	31	3256-3	8	Washer-Flat
11:1	103-1948	1	Cap-Reservoir, HYD	32	1-613073	2	Grip-Valve, Dump
11:2	103-1949	1	Gasket-Cap	33	3296-42	2	Nut-Lock, NI
12	103-1801	1	Adapter-Straight	34	1-523552	1	Decal-Tank, HYD
12:1	237-42	1	O-Ring				
13	103-1807	1	Elbow-45°				
13:1	237-42	1	O-Ring				
14	103-1988	5	Clamp-Hose				
15	1-603991	4	Fitting-Straight				
15:1	237-80	1	O-Ring				
15:2	1-603992	1	O-Ring				
16	1-603718	2	Motor-Wheel				
17	103-2889	1	Filter Head ASM				
17:1	103-1912	2	Adapter-Straight				

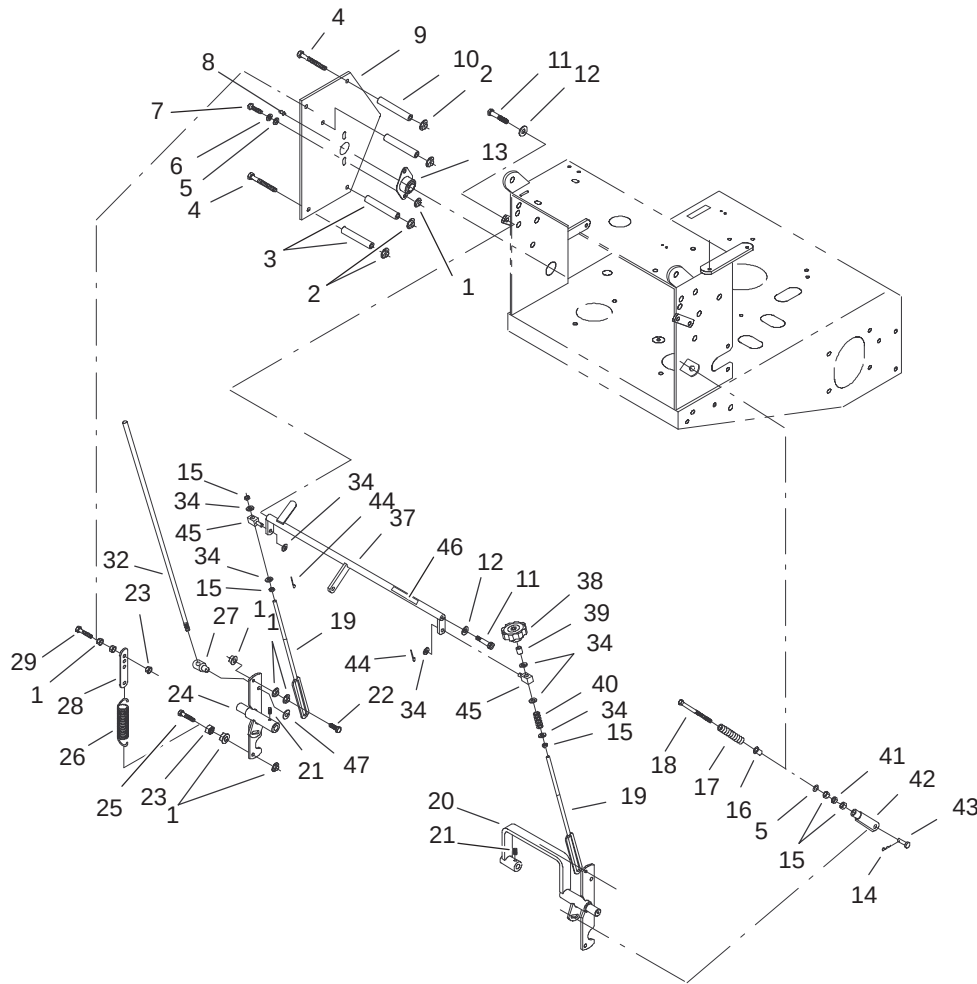


Sheet No.:7

Lower Control Assembly

Ref. No.	Part No.	Qty.	Description
1	32128-20	12	Nut-HF
2	3290-357	8	Nut-HHF
3	1-323197-01	4	Spacer-Shield
4	323-16	7	Screw-HH
5	3256-2	6	Washer-Flat
6	1-805005	4	Washer-Lock
7	322-3	4	Screw-HH
8	302-19	2	Fitting-Grease
9	1-413201-01	2	Shield
10	1-323195-01	4	Spacer-Shield
11	1-809056	2	Screw
12	3256-24	2	Washer-Flat
13	1-633102	2	Bearing-Flange, Side
14	1-806003	2	Pin-Hair
15	3219-2	7	Nut-Hex
16	1-603735	2	Bushing-Flanged
17	1-603807	2	Spring-Return, Neutral
18	1-603737	2	Bolt-Return, Neutral
19	1-413350	2	Link-Control, Speed
20	103-1191-01	1	Shaft-Control, RH
21	1-803022	2	Screw-Set
22	1-403180	2	Screw-HH
23	3296-29	4	Nut-Lock, NI
24	103-1190-01	1	Shaft-Control, LH
25	322-6	2	Screw-HH


Ref. No.	Part No.	Qty.	Description
26	1-603693	2	Spring-Extension
27	103-1235	2	Swivel-Lever, Drive
28	1-613089	2	Tab-Spring, Extension
29	1-800016	2	Bolt-TAP HH
32	1-413219	2	Rod-Lever, Drive
34	3256-23	7	Washer-Flat
37	1-412203-01	1	Crank-Control, Speed
38	1-413151	1	Knob-Tracking
39	1-603903	1	Spacer
40	1-323245	1	Spring-Compression
41	3220-2	2	Nut
42	1-303105	2	Yoke-Adjustable
43	1-808280	2	Pin-Clevis
44	3272-5	2	Pin-Cotter
45	1-603676	2	Swivel-Adjustable, Short
46	105-4109	1	Decal-Tracking
47	32151-47	2	Ring-Retaining

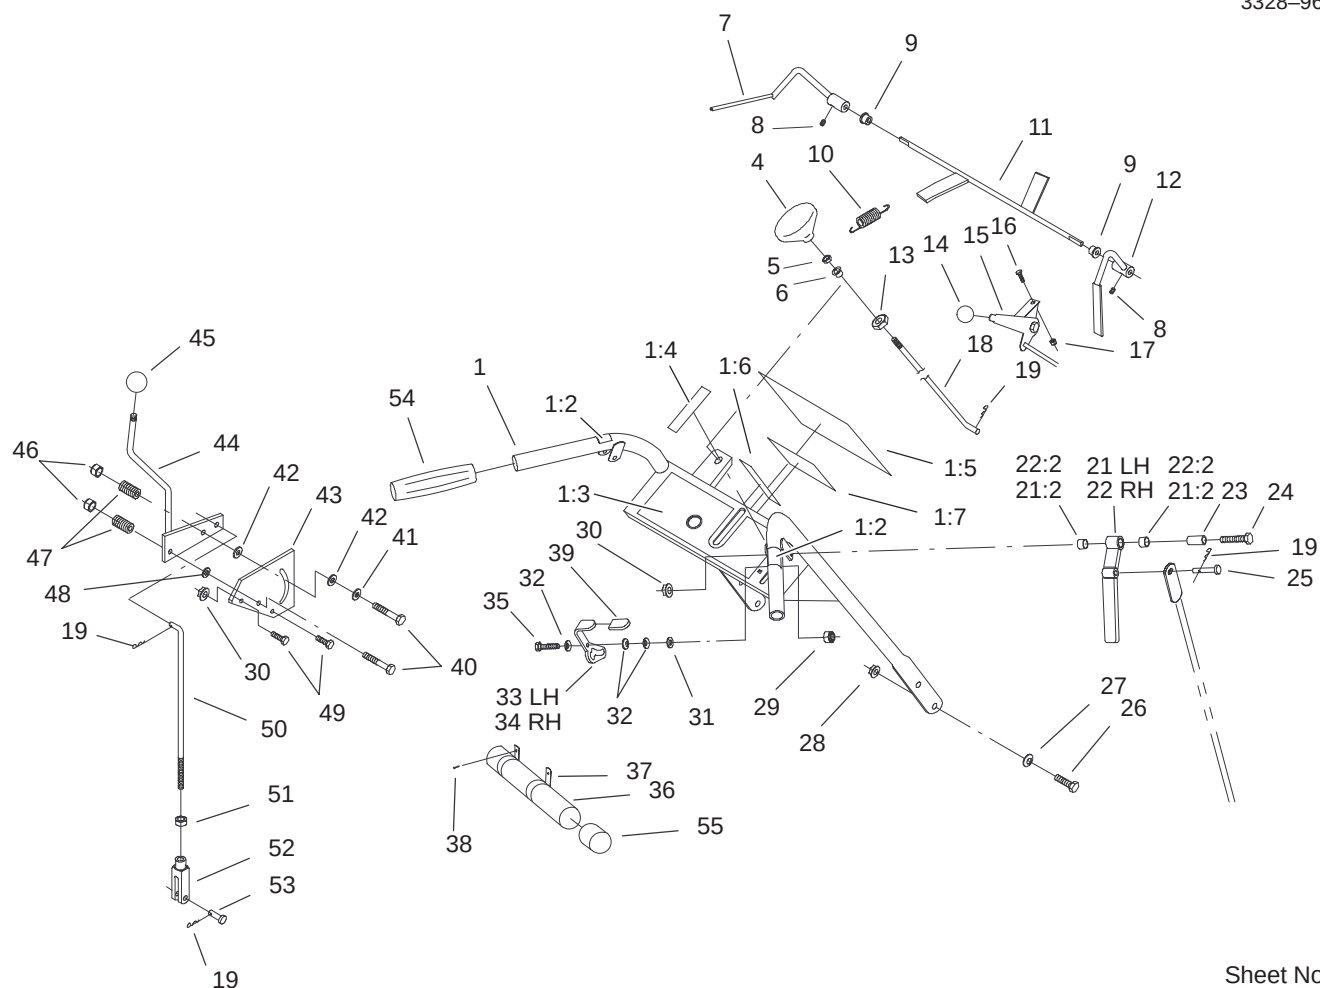

Sheet No.:8

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-0751	1	Handle ASM	21:2	1-413152	2	Sleeve-Bushing
1:2	105-4110	2	Decal-Lock, Neutral	22	103-0219	1	RH Drive Lever ASM
1:3	106-2738	1	Decal-Warning	22:2	1-413152	2	Sleeve-Bushing
1:4	1-323689	1	Decal-Throttle	23	1-603749	2	Bushing-Lever, Drive
1:5	106-0750	1	Decal-Proline	24	321-9	2	Screw-HH
1:6	95-5537	1	Decal-Engage, Deck	25	1-613055	2	Pin-Clevis
1:7	106-2743	1	Decal-Caution, Brake	26	323-6	4	Screw-HH
4	1-323134	1	Knob-Push/Pull	27	98-5975	4	Washer-Belleville
5	3218-2	1	Nut-Jam	28	3290-357	4	Nut-HHF
6	1-323143	1	Bearing-Nylon	29	3296-42	2	Nut-Lock, NI
7	1-412183-03	1	Lever-LH	30	32128-33	4	Nut-HF
8	1-803322	2	Screw-Set	31	3256-2	2	Washer-Flat
9	1-303365	2	Bushing-Nylon	32	1-303435	6	Washer-Spring
10	1-303363	1	Spring-Extension	33	1-413148	1	Latch-Lever, LH Drive
11	106-2717-03	1	Operator Presence Control Rod ASM	34	1-413150	1	Latch-Lever, RH Drive
12	1-412185-03	1	Lever-RH	35	321-10	2	Screw-HH
13	1-323142	1	Nut-Push	36	104-7050	1	Housing-Manual
14	1-513592	1	Knob-Ball	37	2412-120	2	R-Clamp
15	1-323322	1	Cable-Control, Throttle	38	32104-76	2	Screw
16	1-807513	2	Bolt-CARR	39	1-303019	2	Grip-Latch
17	3296-2	2	Nut-Lock	40	322-10	2	Screw-HH
18	1-323181	1	Linkage-Blade	41	1-603716	1	Washer-Friction
19	1-806003	3	Pin-Hair	42	1-323244	2	Washer-Friction
21	103-0218	1	LH Drive Lever ASM	43	1-603730	1	Plate-Lever, Shifter
				44	106-2748	1	Lever-Shift
				45	1-603175	1	Knob-Ball

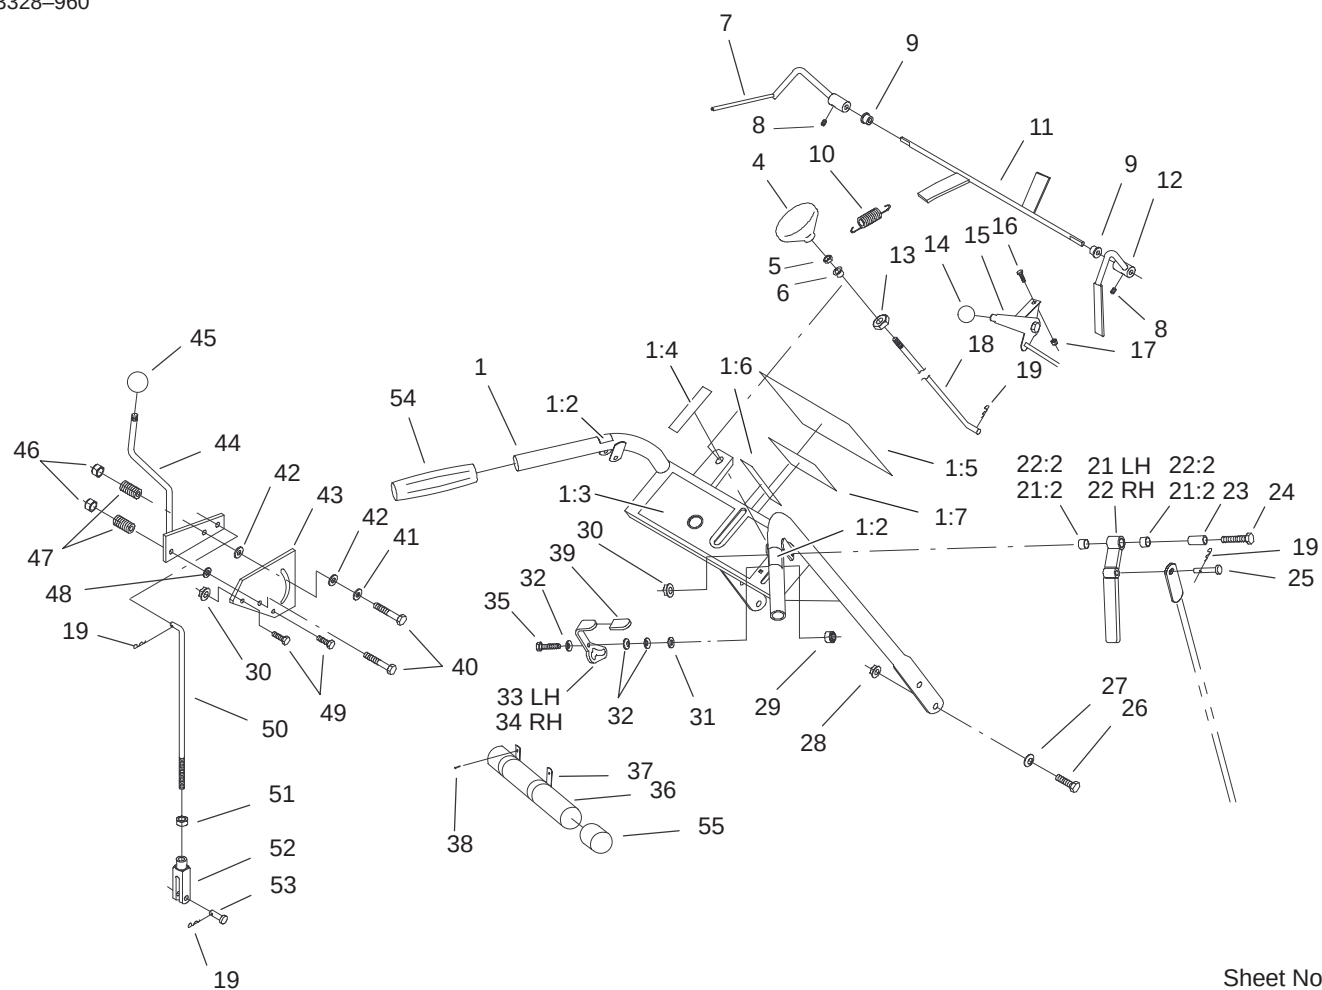


Sheet No.:8

Upper Handle Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
46	3296-29	2	Nut-Lock, NI
47	1-323245	2	Spring-Compression
48	3256-23	1	Washer-Flat
49	321-3	2	Screw-HH
50	1-323522	1	Rod-Control, Speed
51	3220-2	1	Nut
52	1-303105	1	Yoke-Adjustable
53	1-808280	1	Pin-Clevis
54	1-303097	2	Grip-Handle
55	104-7048	1	Cap-Housing

Ref. No.	Part No.	Qty.	Description

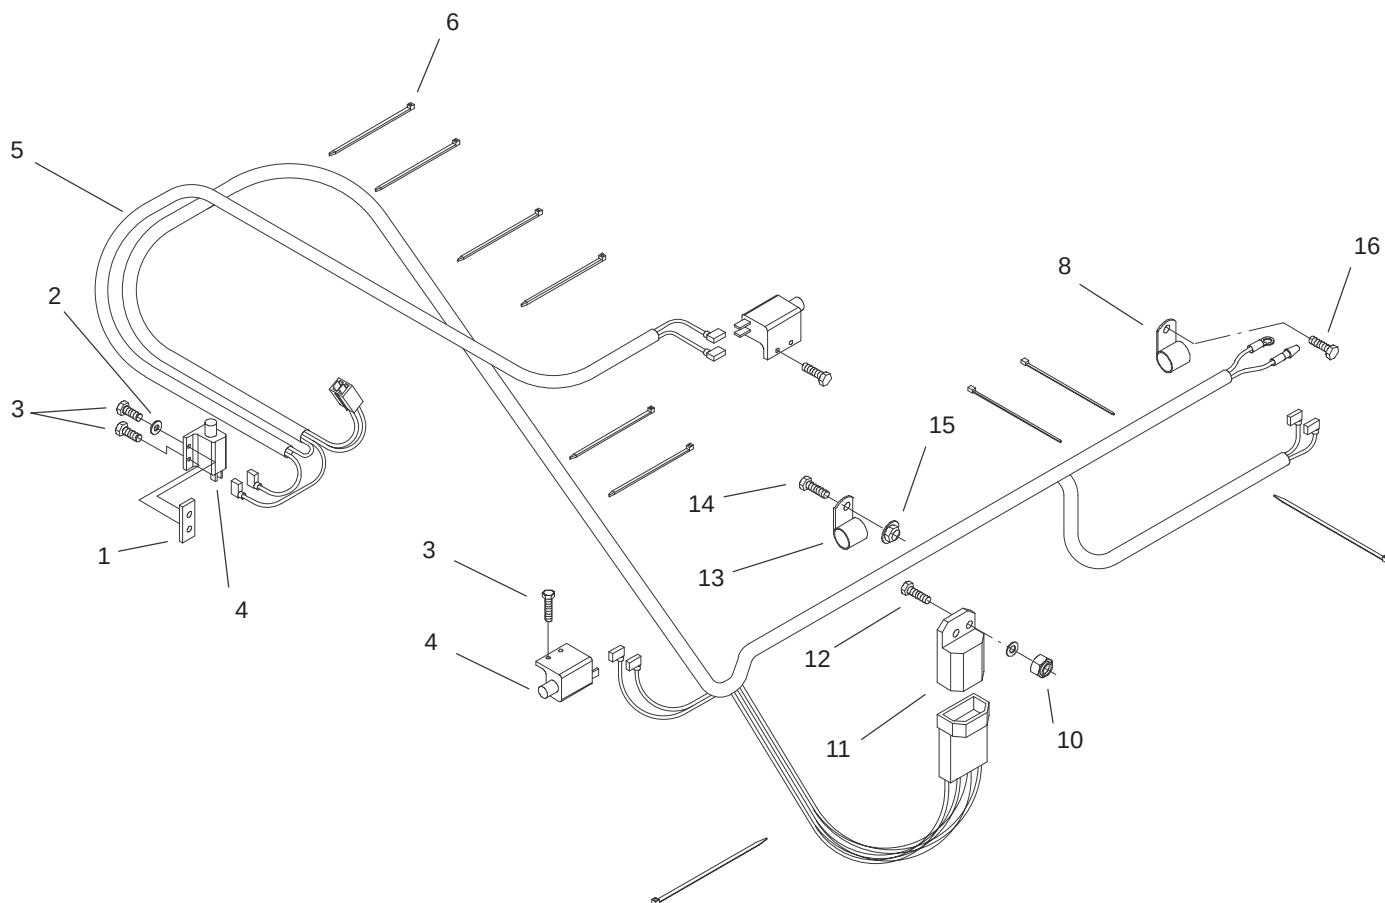


Sheet No.:9

Electrical Assembly

Ref. No.	Part No.	Qty.	Description
1	1-633181	2	Plate-Tapped
2	3256-14	1	Washer-Flat
3	3290-500	3	Screw-PPH
4	1-513051	2	Switch-Open, Normally
5	103-2286	1	Harness-Wire
6	1-303287	6	Tie-Plastic
8	1-413510	1	Clip-Loom
10	3296-42	2	Nut-Lock, NI
11	1-323430	1	Module-Interlock
12	321-4	1	Screw-HH
13	1-603727	1	Clip-Loom
14	321-3	1	Screw-HH
15	32128-33	1	Nut-HF
16	33114-016	1	Screw-HH

Ref. No.	Part No.	Qty.	Description

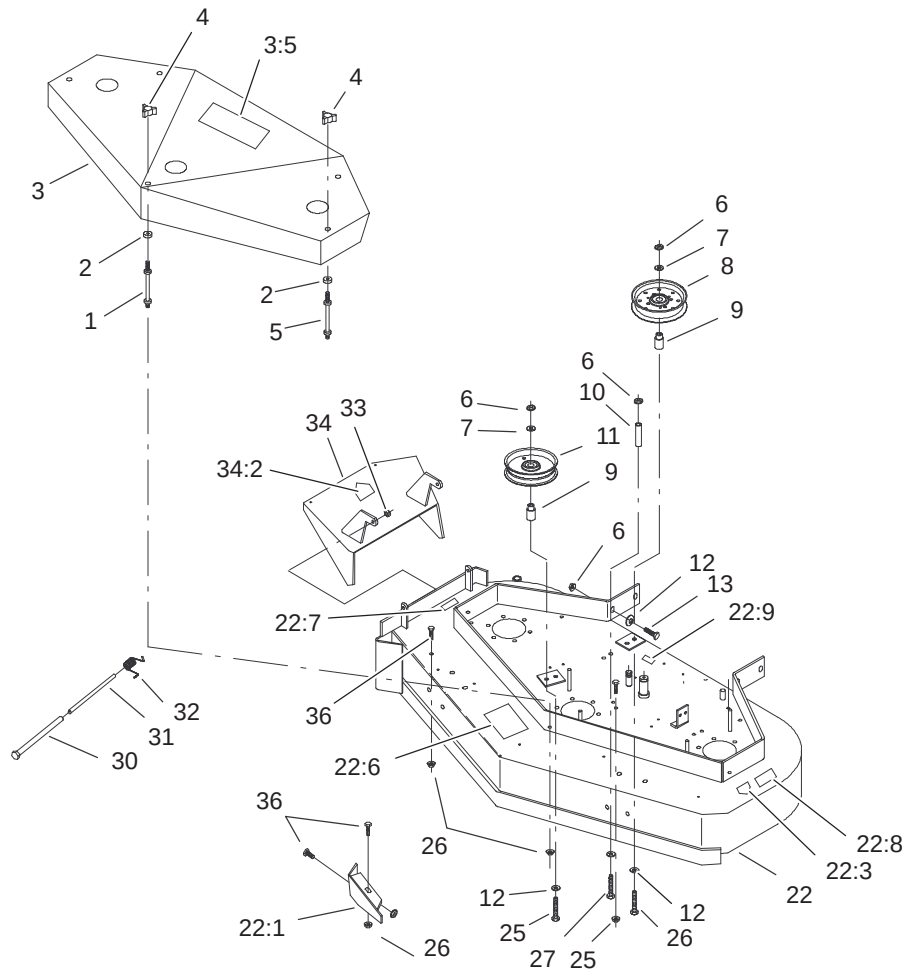


Sheet No.:11

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	1-303536	3	Stud-Shield, Belt (Long)
2	1-323417	5	Washer
3	1-404246	1	Shield-Belt
3:5	106-0712	1	Decal-Proline 48
4	1-323385	5	Knob-3 Prong
5	1-303537	2	Stud-Shield, Belt (Short)
6	3290-357	9	Nut-HHF
7	3256-24	2	Washer-Flat
8	1-403186	1	Idler-Pulley, Flat
9	1-403184	2	Bushing-Idler
10	1-403188	1	Spacer
11	1-613098	1	Pulley-Idler
12	98-5975	9	Washer-Belleville
13	323-8	6	Screw-HH
22	1-404270	1	Deck
22:1	1-402107-01	1	Baffle-Dogleg
22:3	1-403005	1	Decal-Danger
22:6	66-1340	1	Decal-Danger
22:7	98-5954	1	Decal-Missing, Cover
22:8	98-5130	1	Decal-Torque
22:9	99-3943	1	Decal-Routing, Belt
25	323-13	2	Screw-HH
26	32128-20	14	Nut-HF
27	323-20	1	Screw-HH

Ref. No.	Part No.	Qty.	Description
30	1-800291	1	Screw-Cap HH
31	1-323636	1	Spacer-Spring
32	98-3280	1	Spring-Deflector
33	3296-29	1	Nut-Lock, NI
34	1-404245	1	Chute
34:2	54-9220	1	Decal-Danger
36	322-2	12	Screw-HH

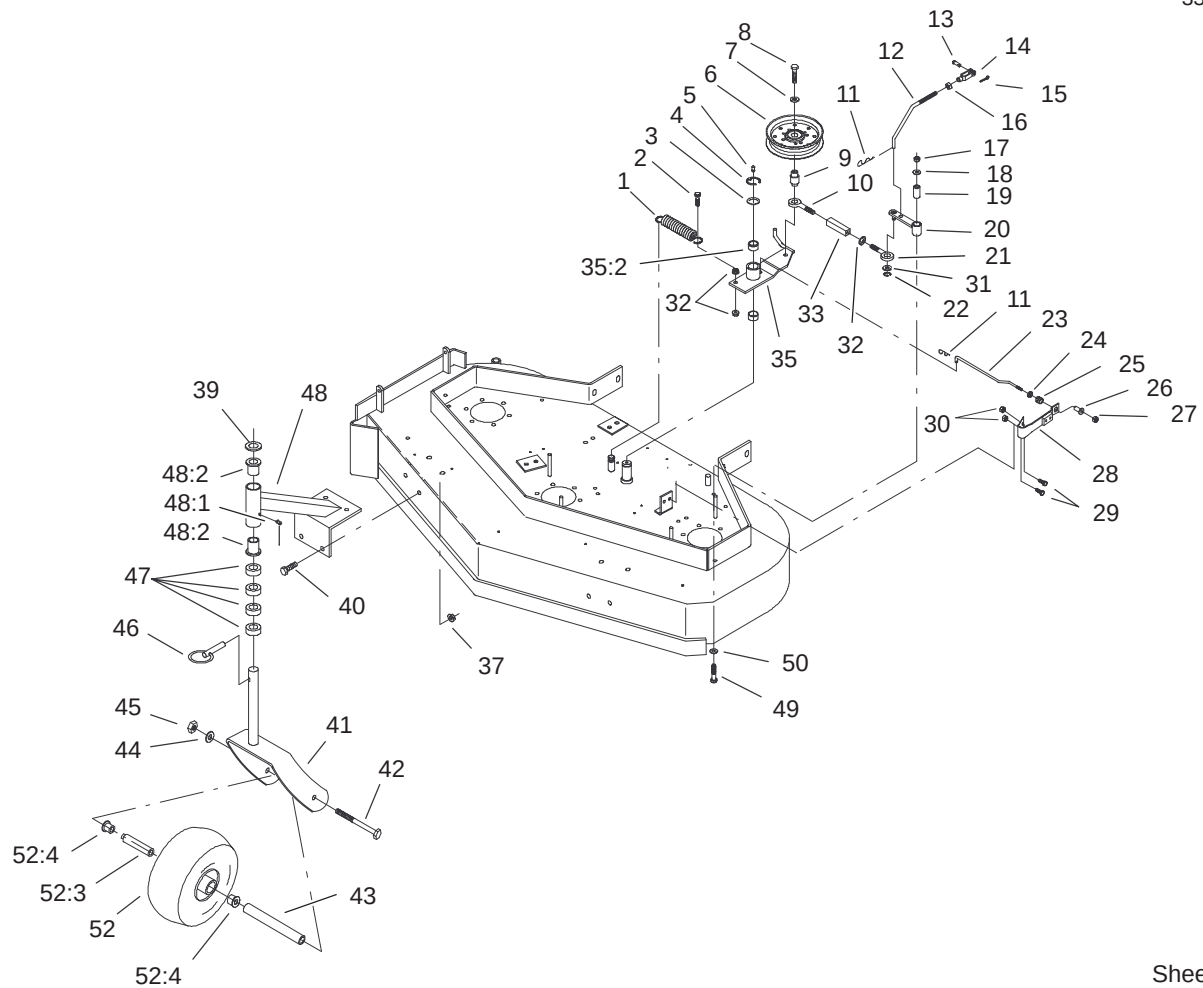


Sheet No.:12

Front Castor, Belt Tension, and Blade Brake System Assembly

Ref. No.	Part No.	Qty.	Description
1	1-323071	1	Spring-Extension
2	322-6	2	Screw-HH
3	1-303352	1	Washer-Spindle
4	32151-103	1	Ring-Snap
5	302-19	1	Fitting-Grease
6	1-603843	1	Pulley-Idler
7	98-5975	3	Washer-Belleville
8	702809	1	Screw-Cap
9	1-303434	1	Bushing-Engagement
10	1-303348	1	Eyebolt-Thread, LH
11	1-806003	3	Pin-Hair
12	1-323174	1	Linkage-Arm, Assist
13	1-808280	1	Pin-Clevis
14	1-303105	1	Yoke-Adjustable
15	3272-5	1	Pin-Cotter
16	3219-2	1	Nut-Hex
17	3296-29	1	Nut-Lock, NI
18	3256-3	1	Washer-Flat
19	1-403179	1	Tube-Pivot
20	1-322235	1	Arm-Assist
21	1-303238	1	Eyebolt-Thread, RH
22	32120-35	1	E-Ring
23	1-323714	1	Rod-Brake
24	1-323748	1	Ring-Push On

Ref. No.	Part No.	Qty.	Description
25	1-323747	1	Spring-Compression
26	1-323746	1	Spacer-Flanged
27	3296-56	1	Nut-Lock, NI
28	1-324372	1	Pad/Spring ASM
29	321-4	2	Screw-HH
30	3296-42	2	Nut-Lock, NI
31	3256-23	1	Washer-Flat
32	32128-20	3	Nut-HF
33	1-303236	1	Body-Turnbuckle
35	103-3600	1	Idler Arm ASM
35:2	1-323729	2	Sleeve-Bearing
37	3290-357	8	Nut-HHF
39	1-513338	2	Washer-Flat
40	323-4	8	Screw-HH
41	1-322145-01	2	Fork
42	325-20	2	Screw-HH
43	1-513547	2	Spacer
44	3253-7	2	Washer-Lock
45	3217-9	2	Nut-HH
46	1-809020	2	Pin
47	1-303314	8	Spacer-Caster
48	1-302203	2	Support ASM
48:1	302-52	1	Fitting-Grease
48:2	1-303514	2	Bearing-Flanged

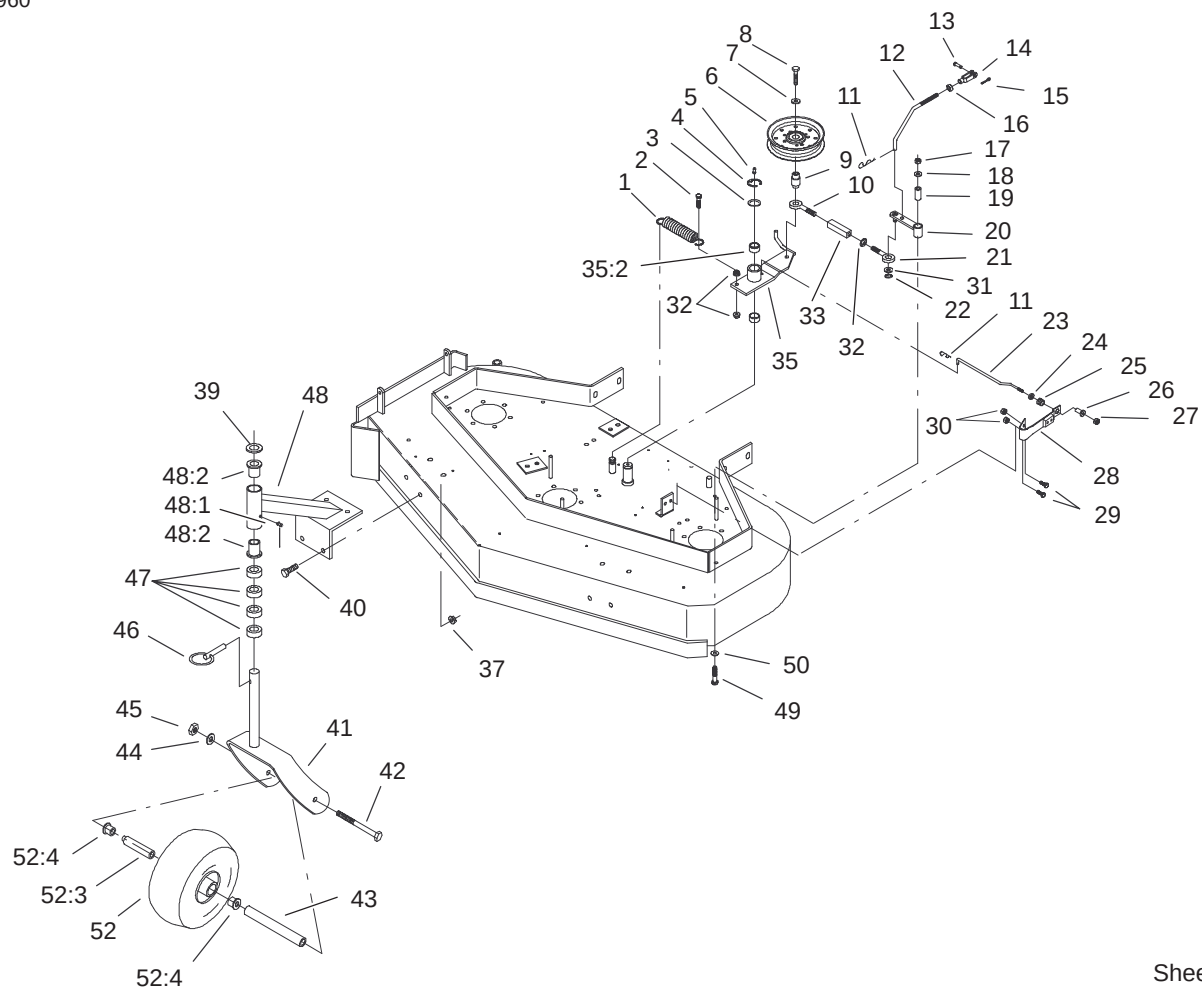


Sheet No.:12

Front Castor, Belt Tension, and Blade Brake System Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
49	322-10	1	Screw-HH
50	1-303334	1	Washer-Spring
52	1-513648	2	Wheel And Tire ASM
52:3	1-513809	1	Bearing
52:4	1-513810	2	Bushing


Ref. No.	Part No.	Qty.	Description

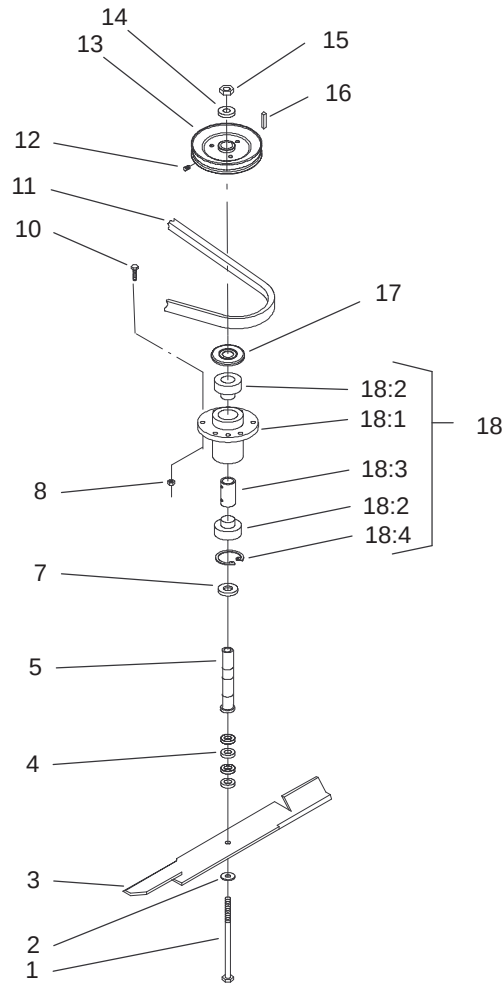

Sheet No.:13

Spindle, Blade and Belt Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	1-800861	3	Screw-Cap, HH				
2	1-513208	3	Washer-Spring				
3	103-2507	3	Blade-Lift, Low				
3	103-2527	3	Blade-Notched				
4	1-323539	12	Spacer-Drive, Blade				
5	1-323529	3	Tube-Spindle, Short				
7	103-2535	3	Spacer-Guard, Bottom				
8	3296-39	18	Nut-Lock, NI				
10	323-7	18	Screw-HH				
11	1-403171	1	Belt-Drive, Blade				
12	1-803310	3	Screw-Set				
13	1-403183	3	Sheave				
14	1-323339	3	Washer-Retainer, Sheave				
15	3219-6	3	Nut-Hex				
16	1-807267	3	Key				
17	103-1330	3	Guard-Bearing, Top				
18	103-2533	3	Cutter Housing ASM				
18:1	1-323532	1	Housing-Spindle				
18:2	103-2477	2	Bearing-Ball				
18:3	103-2534	1	Spacer-Bearing				
18:4	32120-8	1	Ring-Snap				

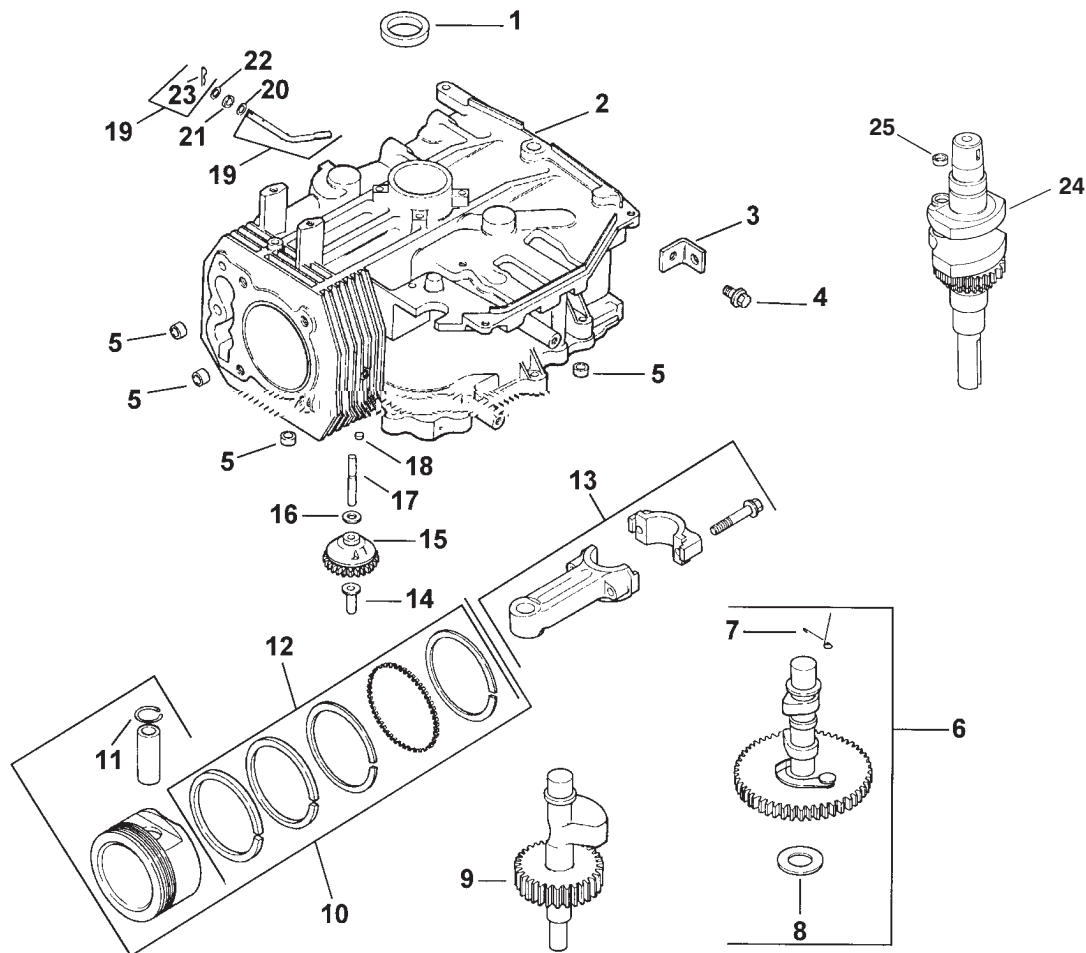


Crankcase Assembly Kohler Model CV15T-41608

Ref. No.	Part No.	Qty.	Description
1	12 032 03-S	1	Seal-Crankshaft
2	12 522 18-S	1	Shortblock
3	12 445 02-S	1	Strap-Lifting
4	M-839025-S	1	Screw-HF M8x1.25x25
5	24 380 13-S	4	Dowel-Locating
6	12 755 49-S	1	Kit-Camshaft (Incl. 7-8)
7	12 089 31-S	1	Spring-Actuating
8	12 422 07-S	A/R	Shim-Camshaft, White
8	12 422 08-S	1	Shim-Camshaft, Blue
8	12 422 09-S	A/R	Shim-Camshaft, Red
8	12 422 10-S	A/R	Shim-Camshaft, Yellow
8	12 422 11-S	A/R	Shim-Camshaft, Green
8	12 422 12-S	A/R	Shim-Camshaft, Gray
8	12 422 13-S	A/R	Shim-Camshaft, Black
9	12 144 27-S	1	Shaft-Balance
10	12 874 07-S	1	Piston w/Ring Set STD (Incl. 11,12)
10	12 874 08-S	1	Set-Piston w/Ring .25
10	12 874 09-S	1	Set-Piston w/Ring .50
10	12 874 11-S	1	Set-Piston w/Ring .08
11	12 018 02-S	2	Retainer-Piston Pin
12	12 108 07-S	1	Ring Set STD
12	12 108 08-S	1	Ring Set .25
12	12 108 09-S	1	Ring Set .50

Ref. No.	Part No.	Qty.	Description
13	12 067 05-S	1	Rod-Connecting, STD
13	12 067 06-S	1	Rod-Connecting .25
14	12 380 01-S	1	Pin-Governor Regulating
15	12 043 05-S	1	Gear-Governor
16	M-631005-S	1	Washer-Plain, 6mm
17	12 144 02-S	1	Shaft-Governor Gear
18	52 139 09-S	1	Plug-Cup
19	12 755 64-S	1	Kit-Governor Cross Shaft (Incl. 23)
20	X-25-102-S	1	Washer-Plain, 1/4
21	12 032 01-S	1	Seal-Governor Cross Shaft
22	M-631015-S	1	Washer-Plain, 6mm
23	12 154 05-S	1	Clip-Hitch Pin
24	12 014 30-S	1	Crankshaft ASM (Incl. 25)
25	12 139 01-S	1	Plug-Cup
*	12 755 93-S	1	Set-Gasket


* Not illustrated
Order Parts from Kohler

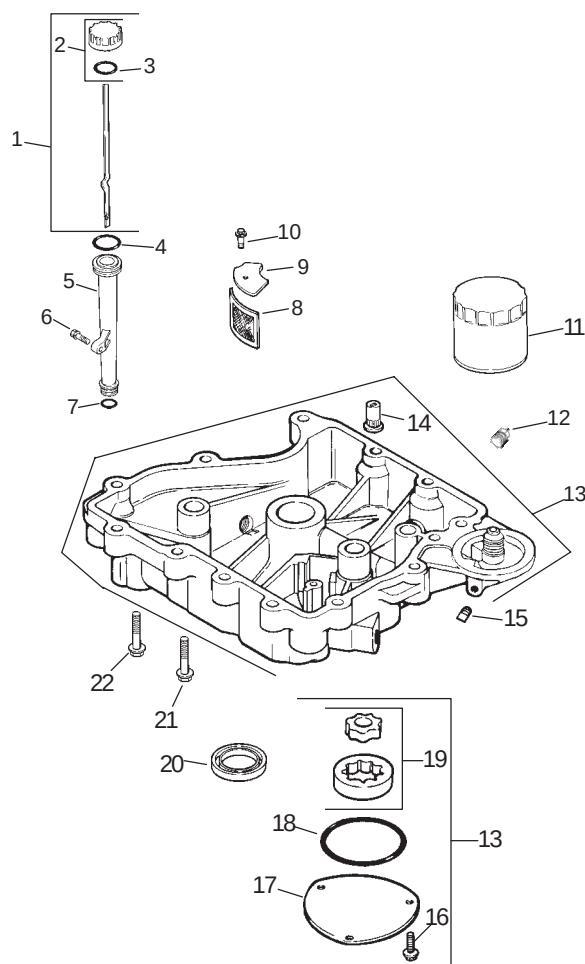

Oil Pan and Lubrication Assembly Kohler Model CV15T-41608

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 038 01-S	1	Dipstick ASM(Incl. 2-3)	19	12 393 01-S	1	Pump-Oil
2	25 755 13-S	1	Kit-Oil Fill Cap (Incl. 3)	20	12 032 03-S	1	Seal-Oil (PTO End)
3	12 153 03-S	1	O Ring-Dipstick	21	24 086 16-S	11	Screw-HF,
4	12 153 02-S	1	O Ring-Upper Oil Fill Tube				M8x1.25x45
5	12 123 04-S	1	Tube-Oil Fill	22	24 086 17-S	1	Screw-HF,
6	M-545020-S	1	Screw-HF, M5x0.8x20				M8x1.25x45
7	12 153 01-S	1	O Ring-Lower Oil Fill Tube				
8	25 162 07-S	1	Screen-Oil Pickup				
9	12 096 03-S	1	Cover-Oil Pickup Screen				
10	M-545016-S	1	Screw-HF, M5x0.8x16				
11	52 050 02-S	1	Filter-Oil				
12	25 139 57-S	1	Plug-Pipe, 3/8 SH				
13	12 199 50-S	1	Oil Pan ASM (Incl.14, 16-19)				
14	25 462 09-S	1	Valve-Oil Pressure Relief				
15	25 139 52-S	1	Plug-Pipe,1/8				
16	M-545016-S	3	Screw-HF, M5x0.8x16				
17	12 096 34-S	1	Cover-Oil Pump				
18	12 153 06-S	1	O Ring-Oil Pump Cover				

Order Parts From Kohler

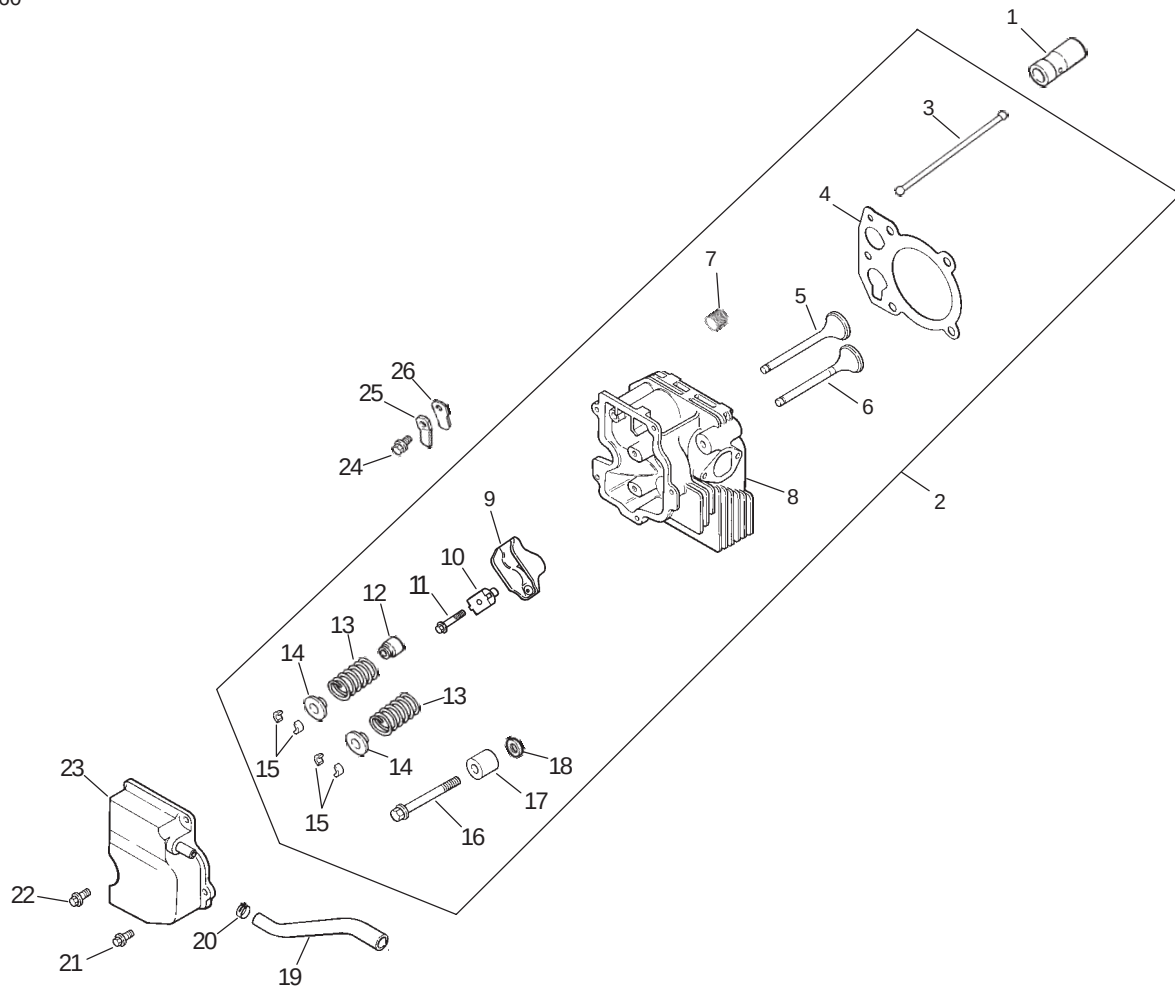


Cylinder Head, Valve and Breather Assembly Kohler Model CV15T-41608

Ref. No.	Part No.	Qty.	Description
1	12 351 01-S	2	Lifter-Valve
2	12 755 81-S	1	Kit-Cylinder Head (Incl. 3-13, 18-21, 25, Carburator Gasket 12 041 01-S(2), Exhaust Manifold Gasket 12 041 03-S, Air Cleaner Gasket 12 041 02-S)
3	12 411 01-S	2	Rod-Push
4	12 041 10-S	1	Gasket-Cylinder Head
5	12 017 01-S	1	Valve-Intake STD
5	12 017 02-S	1	Valve-Intake .25
6	12 016 01-S	1	Valve-Exhaust STD
6	12 016 02-S	1	Valve-Exhaust, .25
7	25 139 60-S	1	Plug-Pipe, HSH 1/8
8	12 318 19-S	1	Head - Cylinder
9	25 186 01-S	2	Arm-Rocker
10	12 599 03-S	2	Pivot-Rocker Arm
11	M-640034-S	2	Screw-HF M6x1.0x34
12	24 032 05-S	1	Seal-Valve Stem
13	12 089 01-S	2	Spring-Valve
14	12 173 01-S	2	Cap-Valve Spring
15	12 755 03-S	2	Kit-Retainer

Ref. No.	Part No.	Qty.	Description
16	12 086 15-S	5	Screw-HF M10x1.5x81
17	12 112 13-S	1	Spacer-Head Bolt Exhaust Port
18	12 468 05-S	1	Washer-Plain 13/32
19	12 326 03-S	1	Hose-Breather
20	25 237 14-S	2	Clamp-Hose
21	M-645020-S	3	Screw-HF M6x1.0x20
22	M-640034-S	2	Screw-HF M6x1.0x34
23	12 096 07-S	1	Cover-Valve w/Nipple
24	M-545010-S	1	Screw-HF M5x0.8x10
25	12 018 01-S	1	Retainer-Breather Reed
26	12 402 02-S	1	Reed-Breather

Order Parts from Kohler

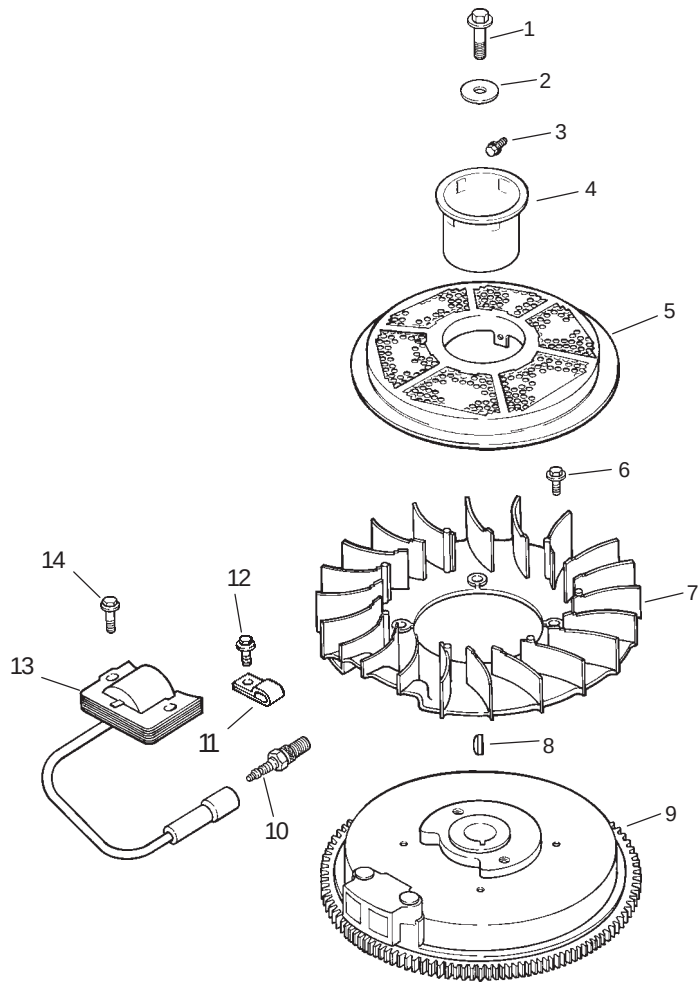

Ignition and Electrical Assembly **Kohler Model CV15T-41608**

Ref. No.	Part No.	Qty.	Description
1	12 086 14-S	1	Screw-HF,M10x1.5x46
2	12 468 03-S	1	Washer-Plain, 3/8
3	M-545010-S	3	Screw-HF,M5x0.8x10
4	12 109 07-S	1	Cup-Drive, Starter
5	12 162 09-S	1	Screen-Grass
6	25 086 47-S	4	Bolt-Shoulder
7	12 157 03-S	4	Fan
8	X-42-15-S	1	Key
9	12 025 31-S	1	Flywheel
8	12 403 01-S	1	Rectifier-Unregulated, 15 amp
9	X-22-11-S	2	Washer - Lock
10	12 132 06-S	1	Spark Plug

Ref. No.	Part No.	Qty.	Description
11	X-728-1-S	2	Clip-Cable
10	M-639016-S	2	Screw-HF, M6x1.0x16
11	41 155 03-S	1	Connector
12	M-545010-S	2	Screw-HF, M5x0.8x10
13	12 584 05-S	1	Module-Ignition
13	M-548025-S	2	Screw-HH M5x0.8x25
14	M-545020-S	2	Screw-HF, M5x0.8x20
*	25 518 05-S	1	Lead-Black, Rectifier/ Regulator,(5"-14Gauge Uninsulated Push On Tab Terminals)
*	12 454 03-S	1	Tie-Wire


* Not illustrated
 Order Parts From Kohler

Blower Housing And Baffle Assembly Kohler Model CV15T-41608

Ref. No.	Part No.	Qty.	Description
1	12 314 10 S	1	Guard—Grass Screen
2	M—545010—S	9	Screw—HF, M5x0.8x10
3	M—550010—S	6	Screw—HF, M5x0.8x10
4	12 096 29—S	1	Cover—Starter
5	12 027 53—S	1	Housing—Blower
6	12 096 27—S	1	Cover—Rectifier/ Regulator
7	M—6390 16—S	2	Screw—HF, M6x1.0x16
8	12 063 10—S	1	Baffle—Intake, Side
9	12 063 08—S	1	Baffle—Cylinder Head
10	12 313 03—S	1	Grommet—Spark Plug leads
11	12 063 19—S	1	Baffle—Cylinder
12	12 146 07—S	1	Plate—Blower Housing
*	12 113 112—S	1	Decal—Horsepower

Ref. No.	Part No.	Qty.	Description


* Not illustrated
Order Parts From Kohler

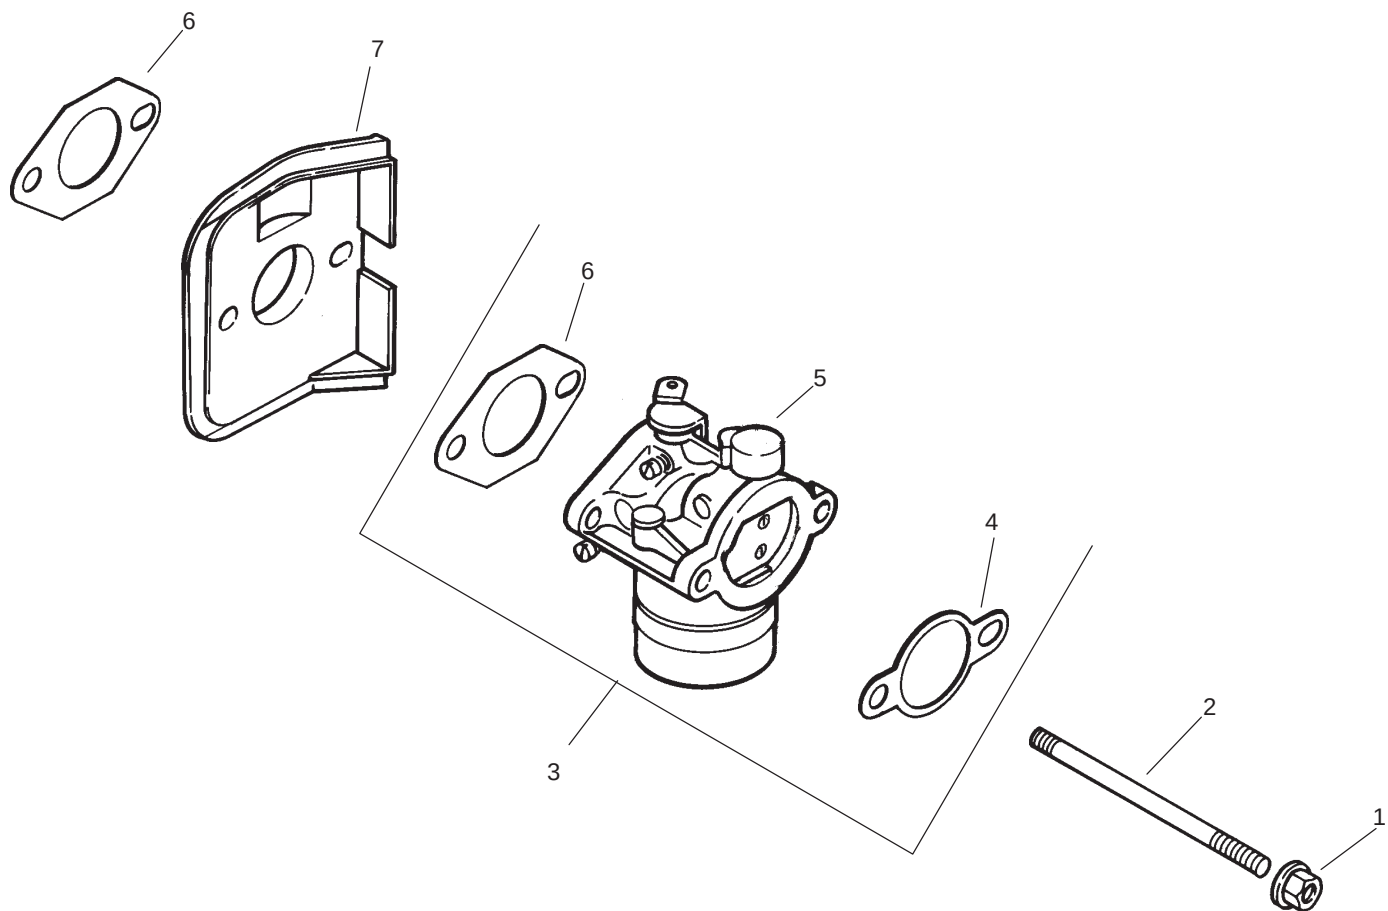

Fuel System Assembly
Kohler Model CV15T-41608

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-641060-S	2	Nut-HF M6x1.0				
2	M-629116-S	2	Stud M6x1.0x116				
3	12 853 80-S	1	Kit-Carburetor				
			w/Gaskets (Incl. 4-6)				
4	12 041 02-S	1	Gasket-Air Cleaner				
5	12 053 80	1	Carburetor ASM (For				
			Information Only Not				
			Available Separately)				
			(Service With Kits				
			12 757 02-S Float Kit				
			12 757 03-S Carb.				
			Repair Kit and				
			12 757 08-S Choke				
			Repair Kit)				
6	12 041 01-S	2	Gasket-Carburetor				
7	12 265 04-S	1	Deflector-Heat				
8	47 154 01-S	1	Clip-Cable				
*	12 757 02-S	1	Kit-Float				
*	12 757 08-S	1	Kit-Choke Repair				
*	12 757 03-S	1	Kit-Carburetor Repair				
*	12 755 92-S	1	Kit-High Altitude with				
			Gaskets				

* Not illustrated
Order Parts From Kohler

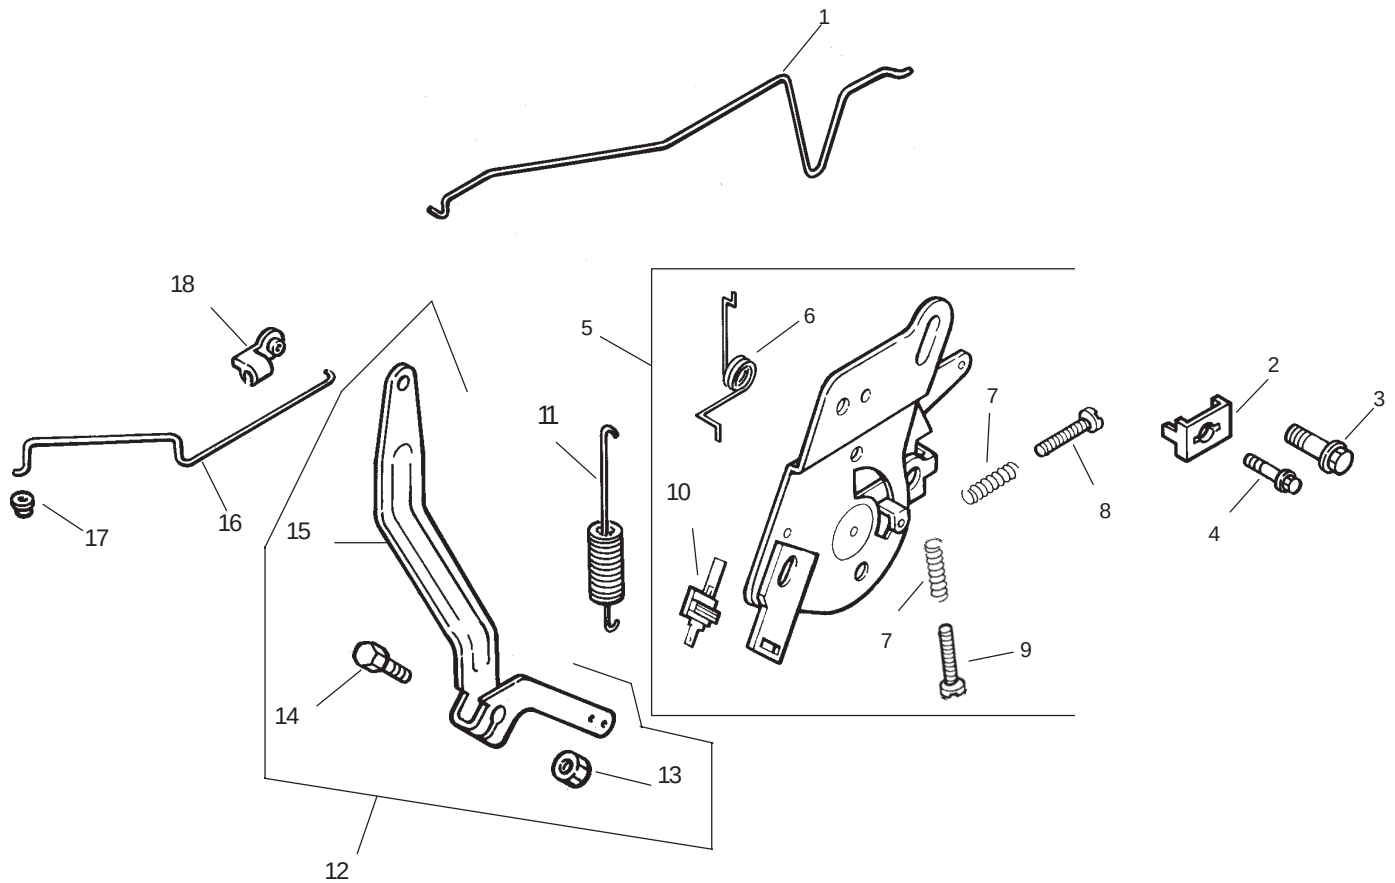


Engine Controls Assembly Kohler Model CV15T-41608

Ref. No.	Part No.	Qty.	Description
1	12 079 07-S	1	Linkage-Choke
2	12 237 01-S	1	Clamp-Cable
3	M-664020-S	2	Screw-Lobed Socket M6x1.0x20
4	M-545016-S	1	Screw-HF M5x .08x16
5	12 536 06-S	1	Control-Speed ASM
6	12 089 23-S	1	Spring-Choke Return (Incl. 6-10)
7	12 089 11-S	2	Spring-Speed Control
8	12 086 38-S	1	Screw-Pan Hd with Loctite
9	M-443020-S	1	Screw-SPH, M4x0.7x20
10	25 452 14	1	Terminal-Kill Switch
11	12 089 19-S	1	Spring-Governor
12	12 755 83-S	1	Kit - Governor Lever (Incl. 13-15)
13	12 100 07-S	1	Nut-HF
14	52 211 04-S	1	Bolt-Round HD
15	12 090 28-S	1	Lever-Governor
16	12 079 01-S	1	Linkage-Throttle
17	25 158 08-S	1	Bushing-Linkage Retaining

Ref. No.	Part No.	Qty.	Description
18	25 158 11-S	1	Bushing-Throttle Linkage


Order Parts From Kohler

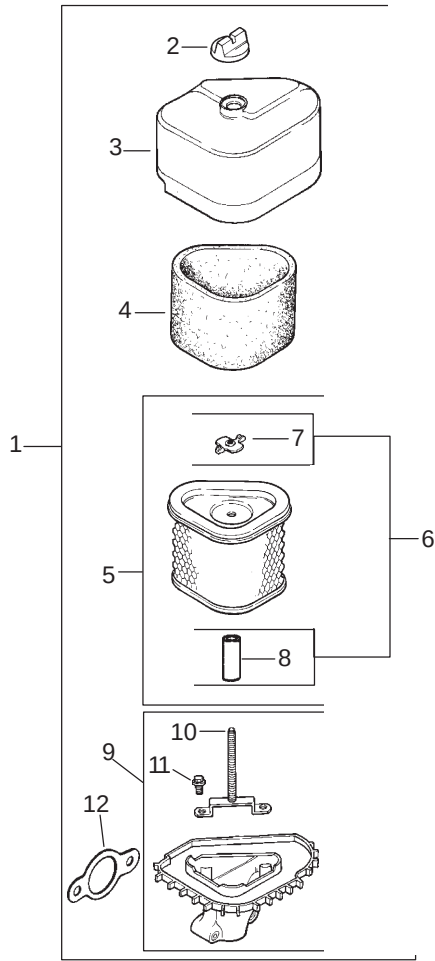

Air Cleaner Assembly
Kohler Model CV15T-41608

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 743 02-S	1	Kit-Air Cleaner (Incl. 2-12)				
2	25 341 03-S	1	Knob-Air Cleaner Cover				
3	12 096 38-S	1	Cover-Air Cleaner				
4	12 083 12-S	1	Element-Precleaner				
5	12 083 10-S	1	Element-Air Cleaner (Incl. 6-8)				
6	12 743 12-S	1	Kit-Seal (Incl. 7-8)				
7	12 100 08-S	1	Nut-Wing				
8	12 032 11-S	1	Seal				
9	12 094 07-S	1	Base-Air Cleaner (Incl. 10,11)				
10	12 072 04-S	1	Stud-M6x1.0x66				
11	12 086 01-S	2	Screw-#10 Hi-Lo Thread Forming				
12	12 041 02-S	1	Gasket-Air Cleaner				
*	12 113 04-S	1	Decal-Air Cleaner				

* Not illustrated
Order Parts From Kohler

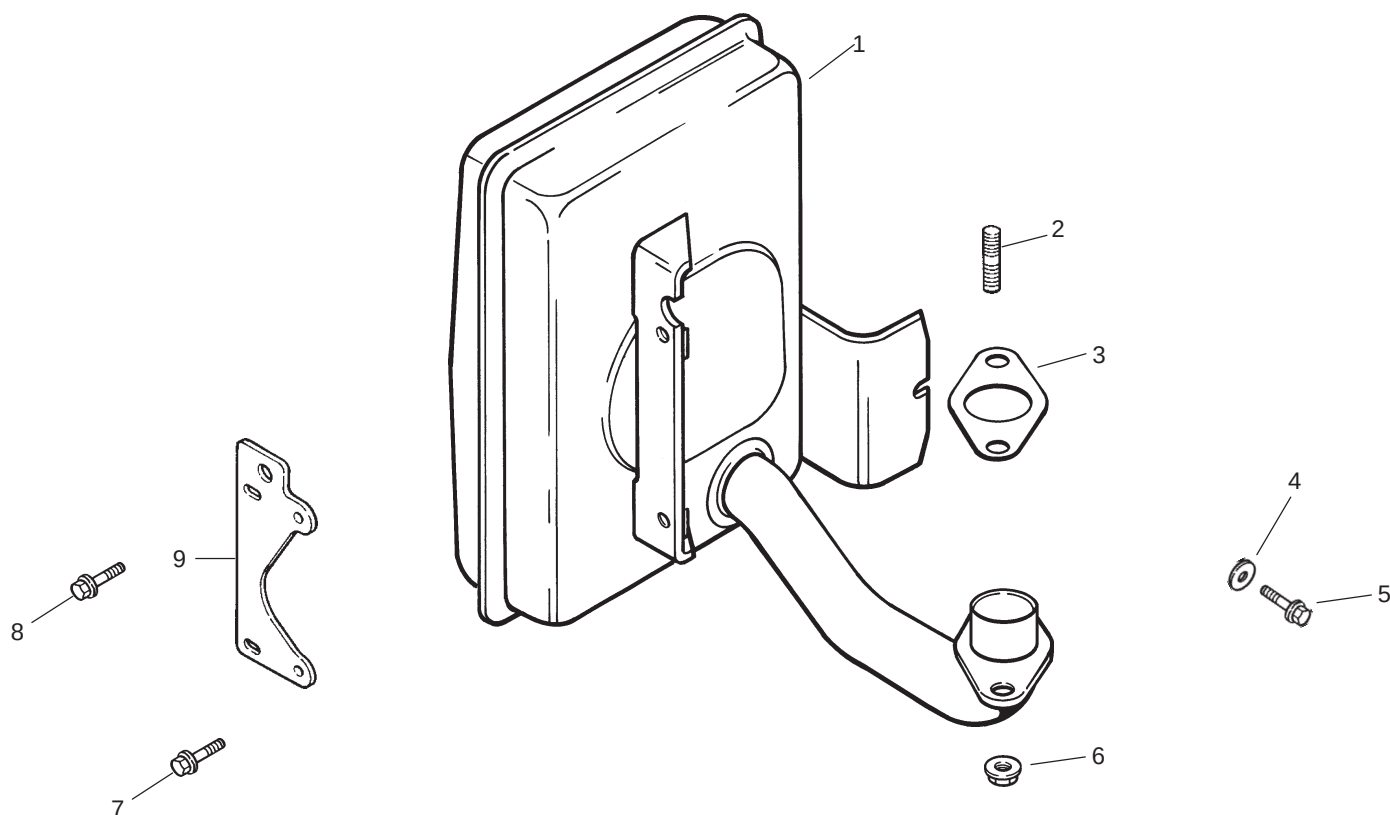

Exhaust Assembly Kohler Model CV15T-41608

Ref. No.	Part No.	Qty.	Description
1	12 068 44-S	1	Muffler
2	25 072 04-S	2	Stud M8x1.25x33
3	12 041 03-S	1	Gasket-Exhaust Manifold
4	X-25-78-S	1	Washer-Plain,1/4
5	M-545016-S	1	Screw-HF, M5x0.8x16
6	M-841080-S	2	Nut-HF, M8x1.25
7	M-645016-S	2	Screw-HF, M6x1.0x16
8	M-645025-S	2	Screw-HF, M6x1.0x25
9	12 126 71-S	1	Bracket-Muffler
*	12 112 20-S	2	Spacer

* Not illustrated
Obtain Parts From Kohler

Maintenance Record

[illegible]

Maintenance Record

[illegible]

