



Count on it.

Form No. 3433-194 Rev B

Parts Catalog

TimeCutter® SW 4200

Riding Mower

Model No. 74676—Serial No. 402262594 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly 4

Deck Lift Assembly 6

Caster Wheel Assembly 8

Traction Drive Assembly 10

Left Hand Hydro Transaxle Assembly No. 119-3330 12

Right Hand Hydro Transaxle Assembly No. 119-3331 14

Brake Assembly 16

Tire Assembly No. 131-3671 18

Seat Assembly 20

Motion Control Assembly 22

Engine Assembly 24

Fuel System Assembly with Non-Canister Style Air Filter 26

Carburetor Assembly 28

Air Intake and Filtration Assembly 30

Ignition and Cooling Fan 32

Crankcase and Crankshaft Assembly 34

Governor Control Assembly 36

Piston and Cylinder Head Assembly 38

Blower Housing Assembly 40

Gasket and Seal Assembly 42

Body Styling and Fuel Tank Assembly 44

Battery and Electrical Assembly 46

42 Inch Deck Assembly 48

42 Inch Deck Decal Assembly No. 137-7041 50

Mulch Plug Assembly No. 137-5034 52

Model Specific Decal Assembly 54

Steering Assembly 56

 
HOC and Service Decal Assembly 58

Clutch Assembly 60

Steering Gear and Cable Assembly 62

Attachments and Accessories 64


Frame Assembly

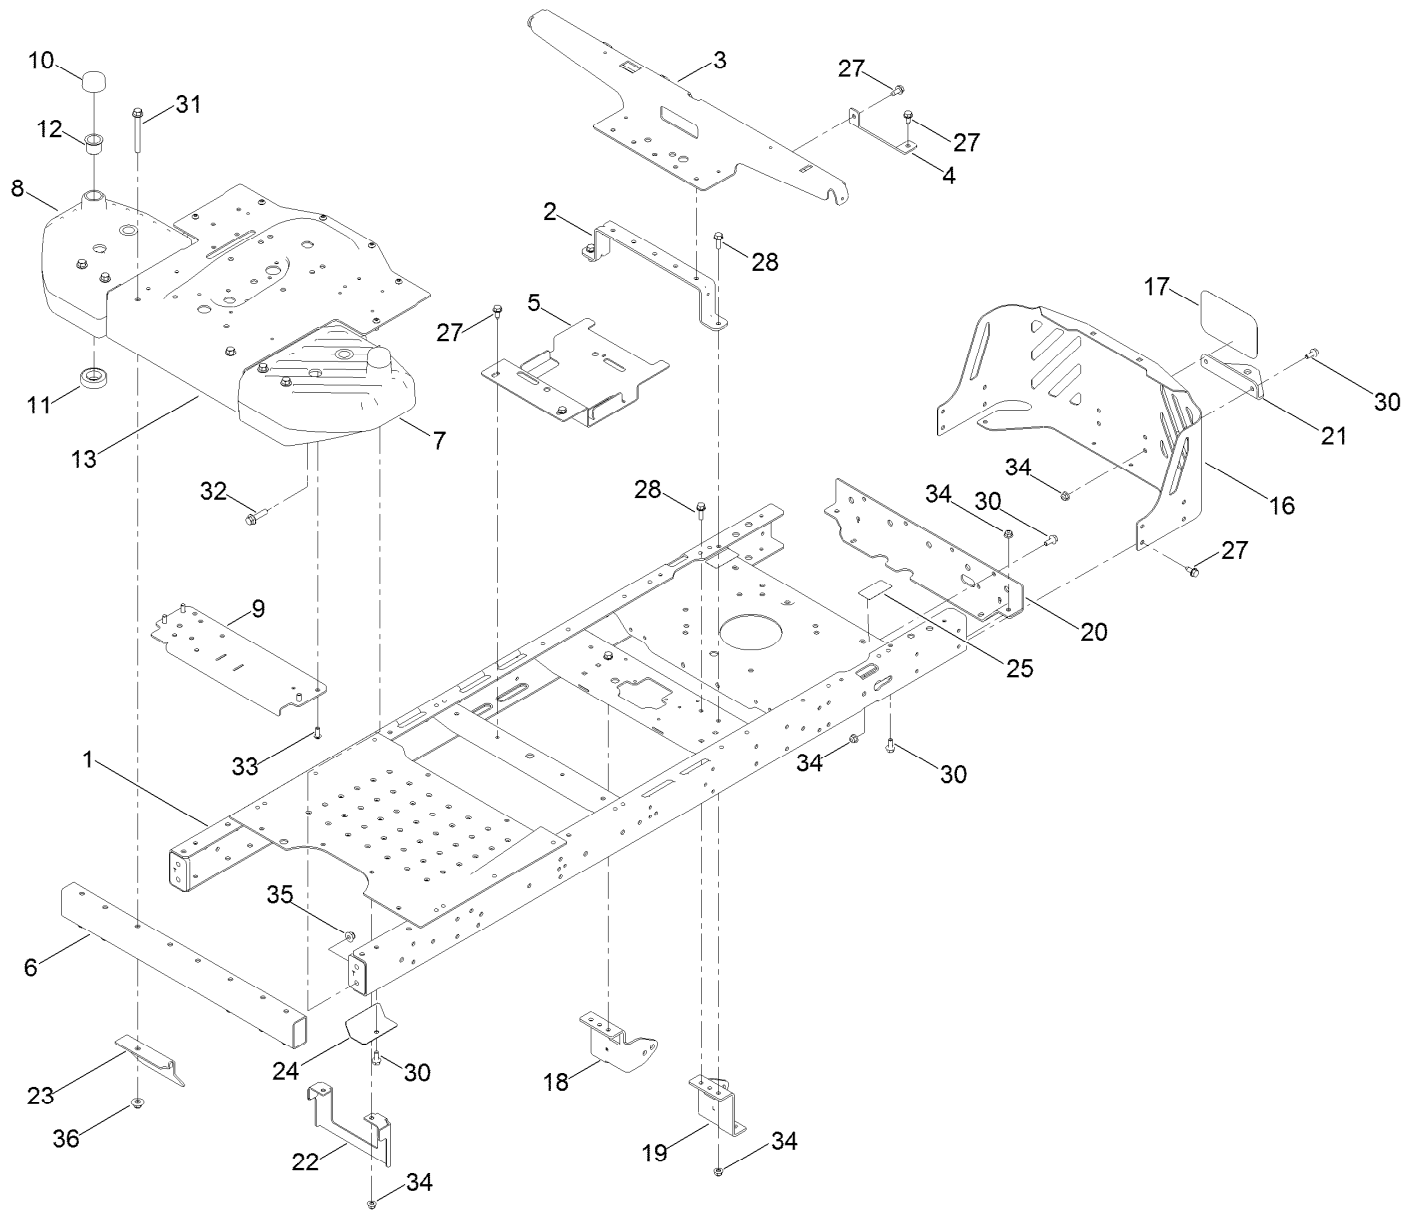

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-0804-01	1	Frame ASM	19	137-7021-01	1	Mount-Hydro, Front (Left)
2	135-0686-03	1	Brace-Seat, Rear (Narrow)	20	130-6950-01	1	Crossmember-Rear, Narrow
3	131-1040-03	1	Support-Pod	21	117-1232-03	1	Bracket-Hitch
4	119-3431-03	2	Support-Tank, Rear	22	132-0941-03	1	Bracket-Upstop
5	135-0507-03	1	Bracket-Battery	23	132-0868-03	1	Guard-Front
6	130-6902-03	1	Tube-Front, Narrow	24	132-0901-03	1	Plate-Guard
7	130-0748-05	1	Housing-Spindle, LH	25	121-2989	2	Decal-Bypass
8	130-0746-05	1	Housing-Spindle, RH	27	32144-70	16	Screw-HWHTF
9	130-6983-03	1	Plate-Bridge, Narrow	28	3234-29	4	Screw-HHF
10	130-7015	2	Cap-Caster	30	3234-47	9	Screw-HHF
11	109-3678	2	Bearing-Ball	31	115-7660	6	Screw-HHF
12	126-1963	2	Bushing-Pivot	32	114-4681	4	Screw-HHF
13	132-9345-05	1	Pan-Steer, Front	33	3274-55	10	Screw-HSBH
16	127-3353-03	1	Guard-Engine, Narrow	34	104-8300	19	Nut-HF, NI
17	99-4693	1	Decal	35	104-8301	4	Nut-HF, NI
18	137-7020-01	1	Mount-Hydro, Front (Right)	36	109-6658	6	Nut-Flange, NI

 
Deck Lift Assembly

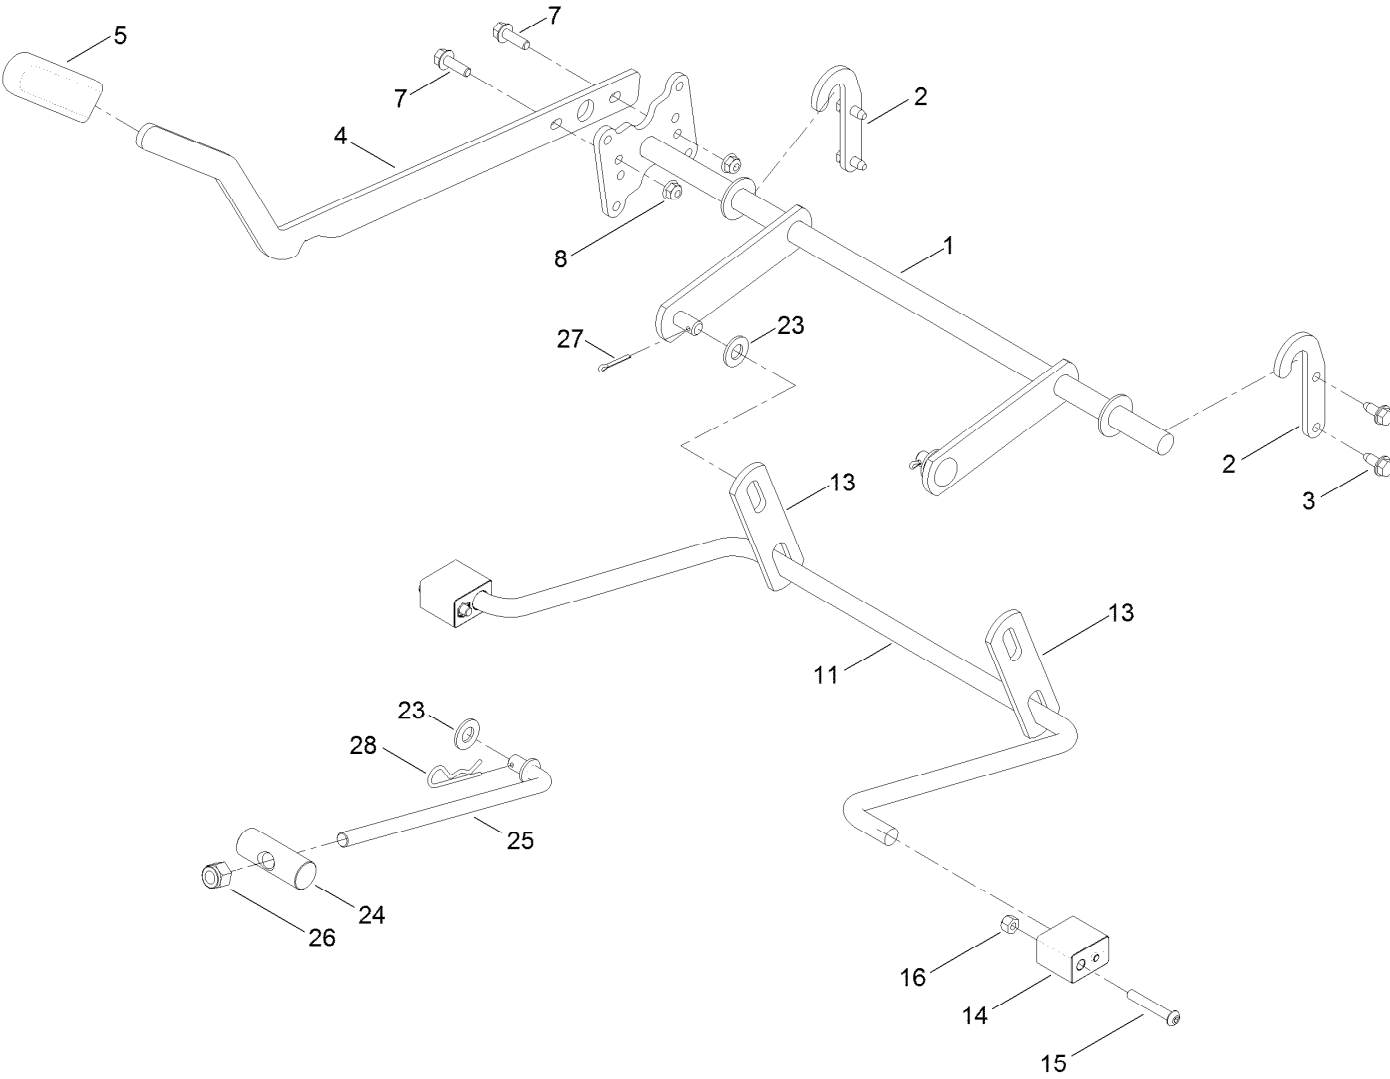

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-6872-03	1	Lift-Deck, Narrow	14	108-7845	2	Block-Pivot
2	119-8875	2	Bracket-Lift	15	120-5499	2	Screw-HSBH
3	32144-70	4	Screw-HWHTF	16	3296-29	2	Nut-Lock, NI
4	119-3427-03	1	Lever-Lift	23	3256-26	3	Washer-Flat
5	1-633268	1	Grip-Lever	24	119-8810	1	Pin-Pivot
7	3234-29	2	Screw-HHF	25	133-4319	1	Rod-Mount, Deck
8	104-8300	2	Nut-HF, NI	26	3296-19	1	Nut-Hex
11	108-7839	1	Arm-Lift, Rear	27	3272-11	2	Pin-Cotter
13	108-7840	2	Link-Lift	28	1-806005	1	Pin-Cotter

 Caster Wheel Assembly

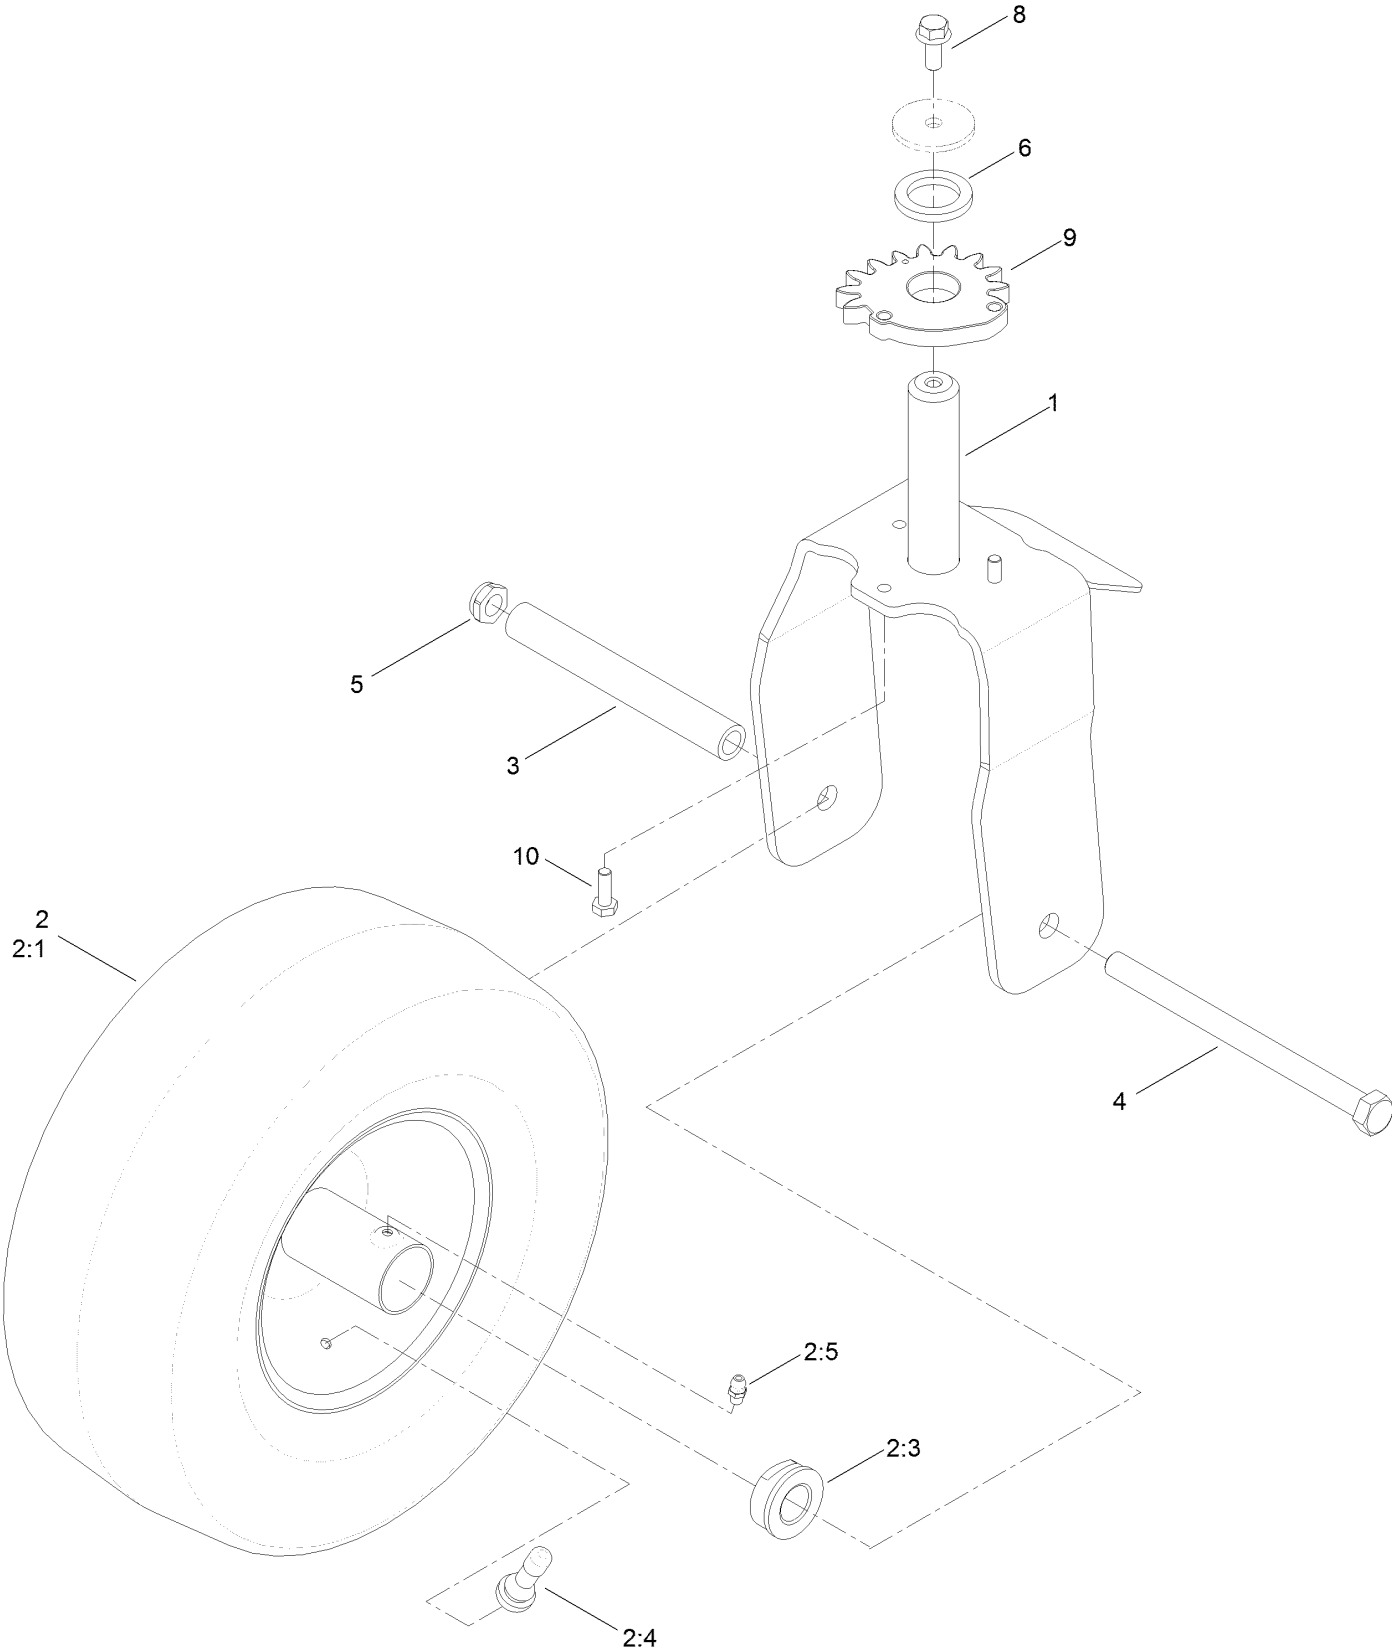


Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-0670-03	2	Caster Fork ASM	3	119-3475	2	Spanner
2	119-3473	2	13 Inch Wheel And Tire ASM	4	325-37	2	Screw-HH
2:1	119-3471	1	Tire-13 Inch	5	3296-45	2	Nut-Hex
2:3	114-1640	2	Bushing-Flange	6	117-7394	2	Washer-Thrust
2:4	232-27	1	Stem-Valve	8	3234-47	2	Screw-HHF
2:5	302-5	1	Fitting-Grease	9	130-0689	2	Gear-Wheel, 15 Tooth
2:99	232-46	1	Tube-Inner ●	10	321-4	4	Screw-HH

● Not illustrated

 
Traction Drive Assembly

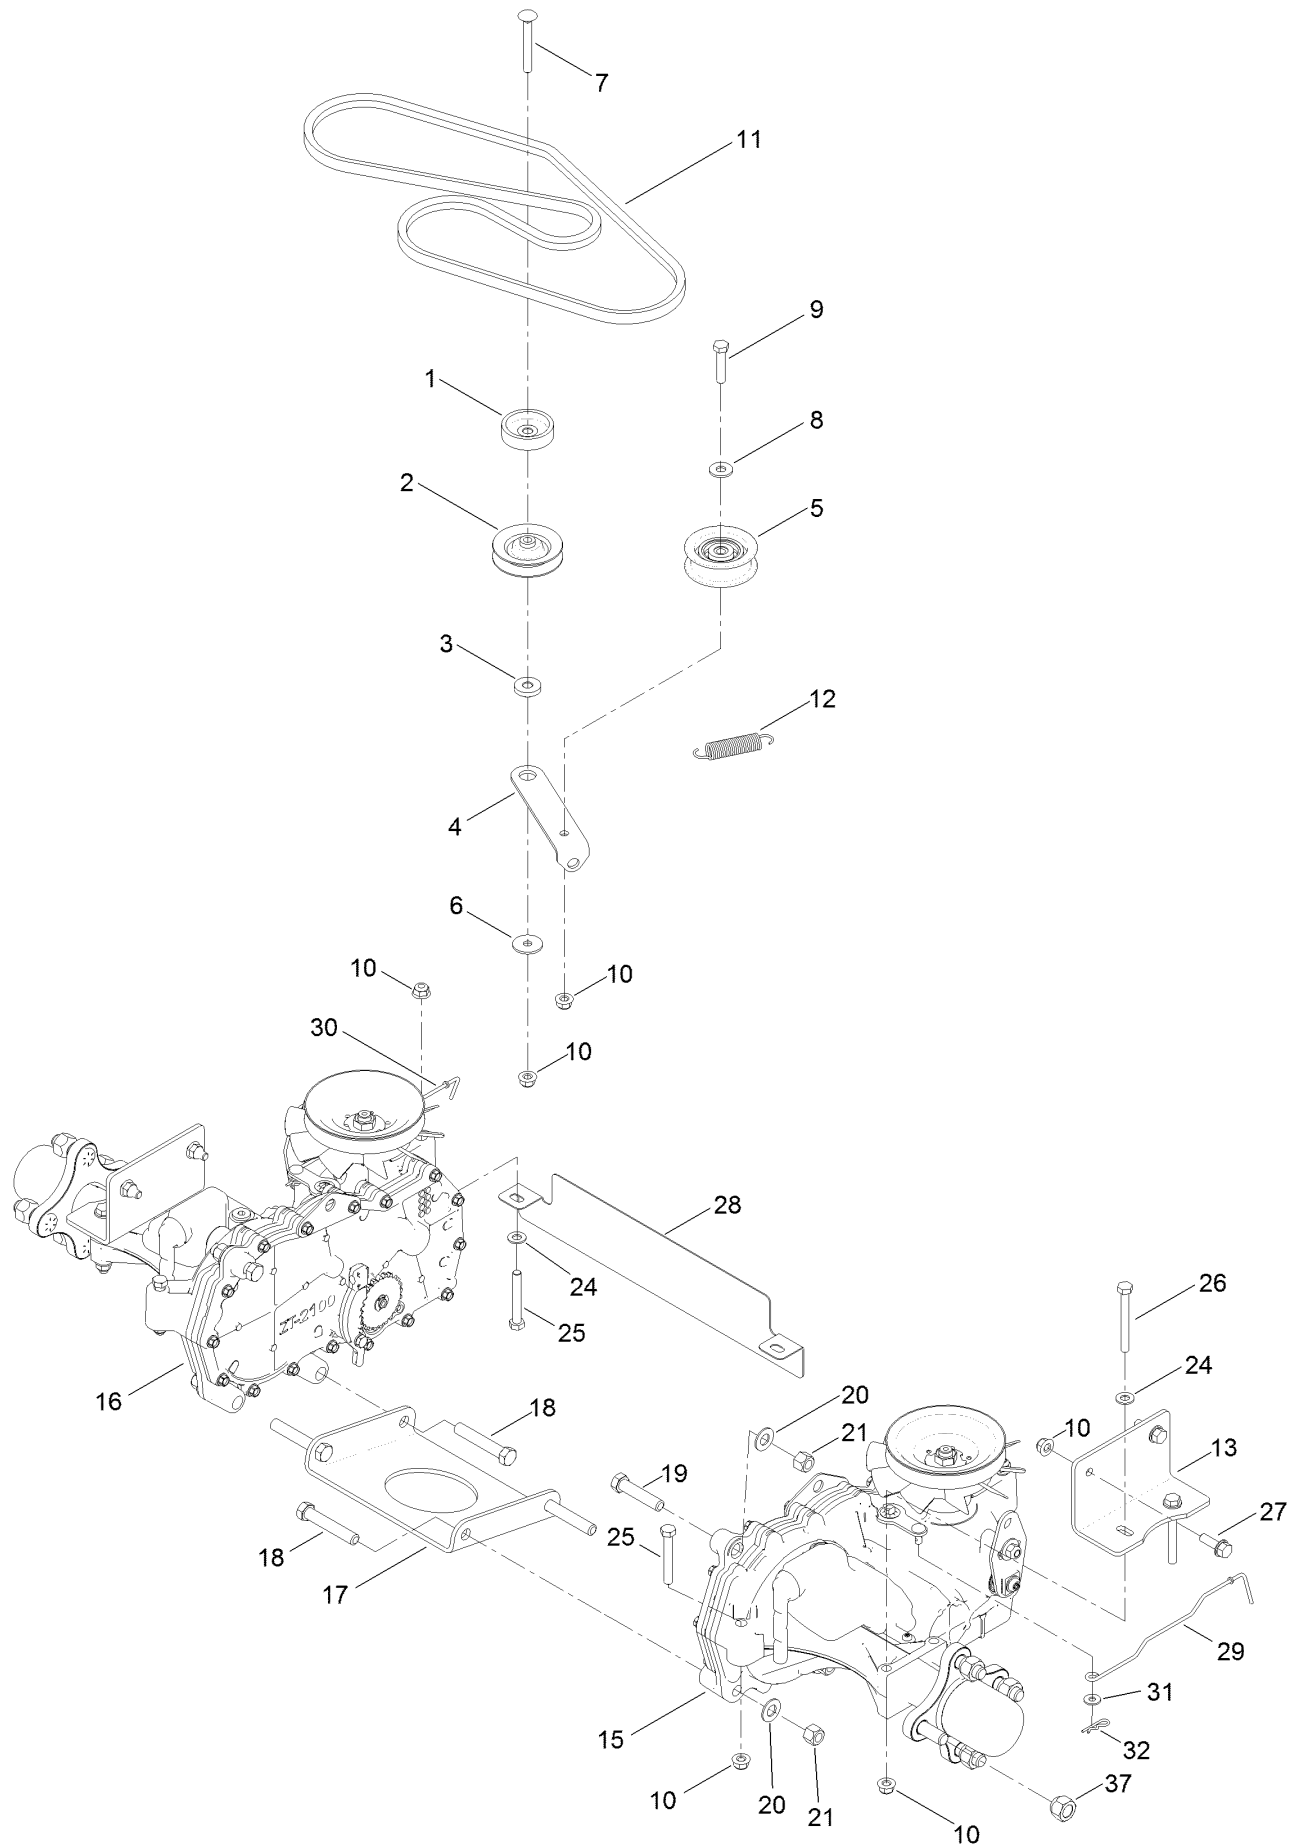

Traction Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3353	1	Spacer	17	119-3339-03	1	Plate-Cross, Hydro
2	119-8822	1	Pulley-Idler	18	324-10	4	Screw-HH
3	119-3327	1	Spacer-Arm, Idler	19	324-8	2	Screw-HH
4	119-3326	1	Arm-Idler	20	3256-25	6	Washer-Flat
5	106-2176	1	Pulley-Idler	21	3296-48	6	Nut-Hex
6	5-4460	1	Washer-Pivot	24	3256-23	6	Washer-Plain
7	3230-8	1	Screw-CARR	25	322-11	4	Screw-HH
8	3256-3	1	Washer-Flat	26	322-13	4	Screw-HH
9	322-7	1	Screw-HH	27	3234-29	4	Screw-HHF
10	104-8300	14	Nut-HF, NI	28	131-3668-03	1	Guard Rear, Narrow
11	130-6975	1	V-Belt	29	131-0900	1	*obs* Rod-Bypass, LH
12	104-6415	1	Spring-Return, Pedal	30	130-7049	1	Rod-Bypass, RH
13	117-7264-03	2	Mount-Hydro	31	119-8952	2	Washer
15	119-3330	1	LH Hydro Transaxle ASM	32	3290-307	2	Pin-Cotter
16	119-3331	1	RH Hydro Transaxle ASM	37	242-50	8	Nut-Lug

 Left Hand Hydro Transaxle Assembly No. 119-3330

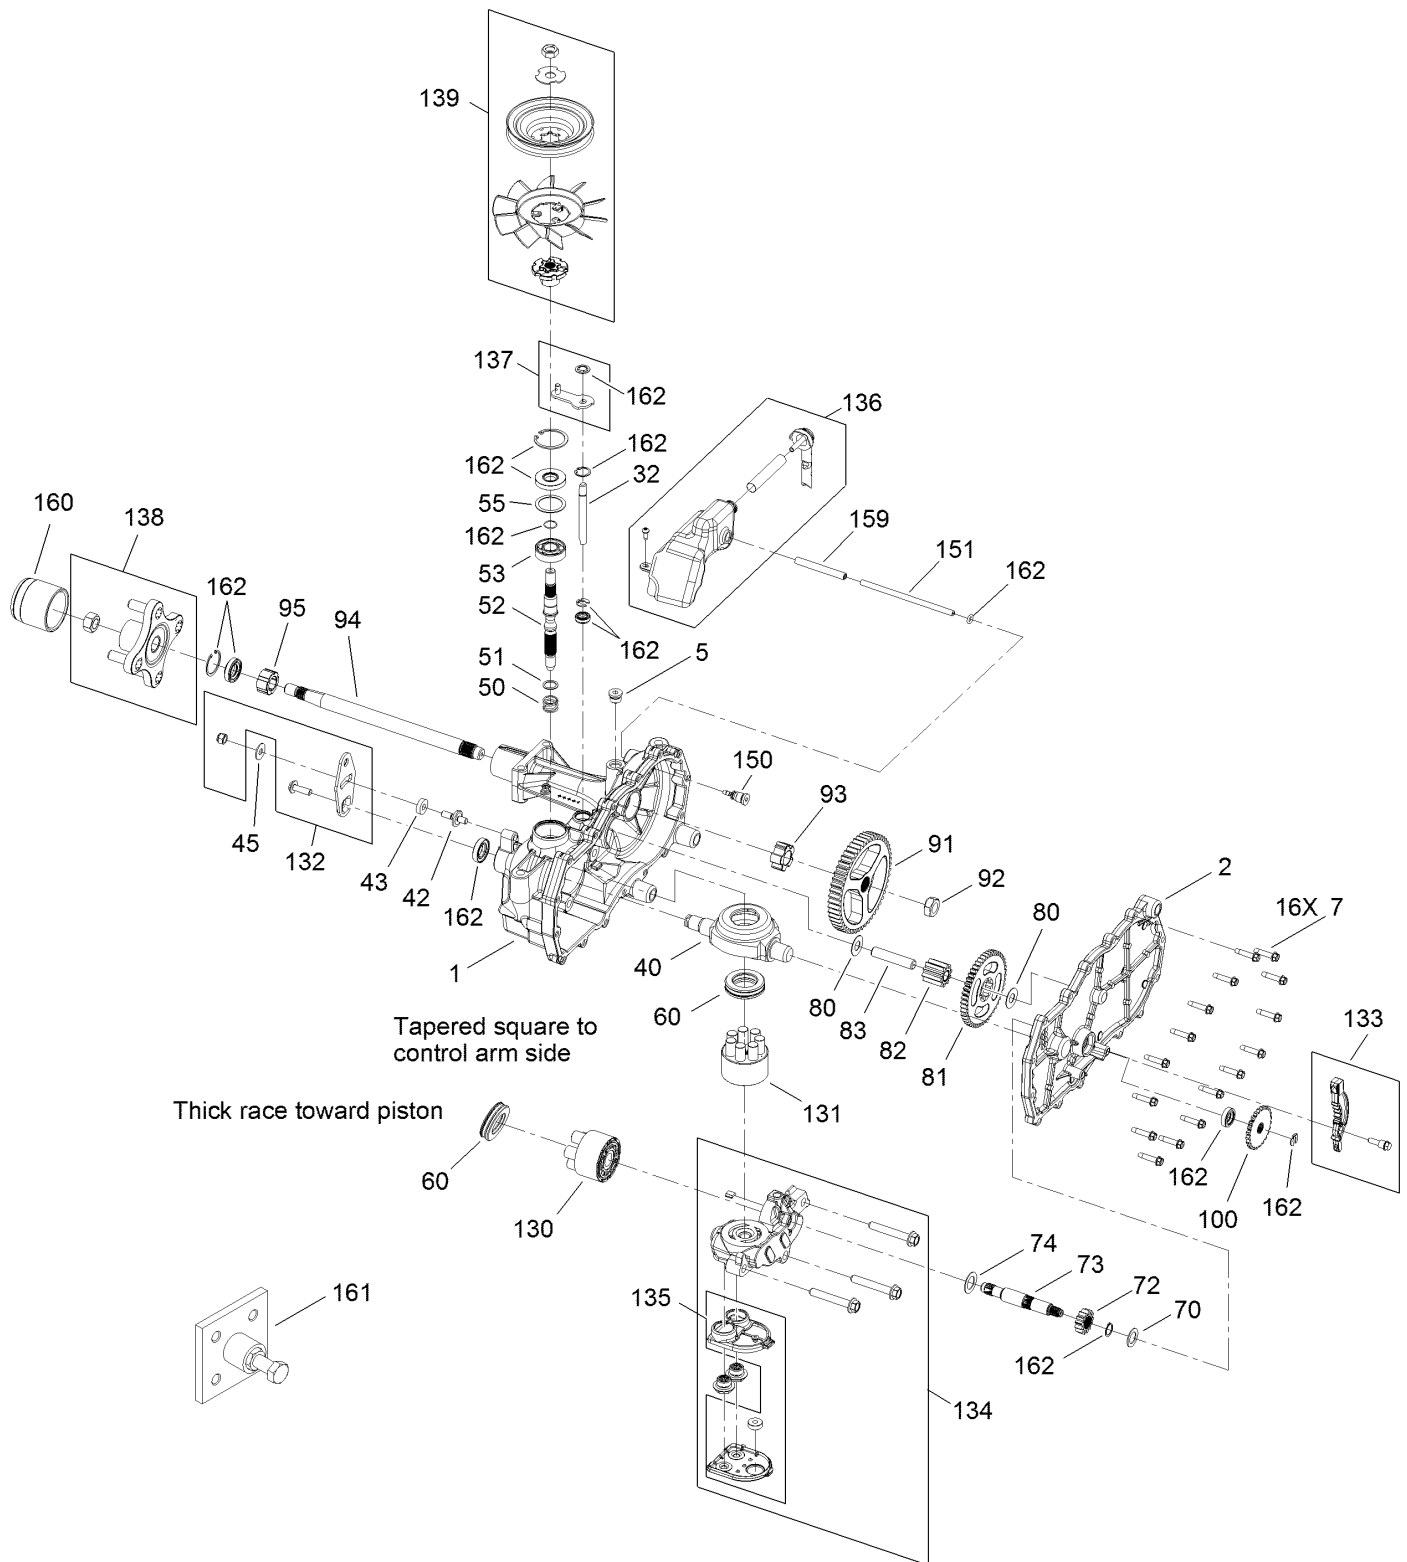


Left Hand Hydro Transaxle Assembly No. 119-3330 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-5532	1	Main Housing ASM	83	104-5329	1	Pin-Jackshaft
2	120-5534	1	Housing Side Kit	91	120-5539	1	Gear-Bull
5	104-2189	1	Plug-Thread, Straight	92	104-2142	1	Nut-HJ
7	117-5359	16	Screw-HHF	93	115-8314	1	Bushing-Inboard
13	104-2147	1	Sealant, Silicone - Non-Flammable ●	94	120-5540	1	Shaft-Axle
32	106-8678	2	Rod-Bypass	95	120-5541	1	Bearing-Sleeve
40	104-5304	1	Swashplate-Trunnion	100	106-8694	1	Disc-Brake, Cog
42	104-2116	1	Stud	130	103-2666	1	Cylinder Block Kit
43	112-9853	1	Puck-Friction	131	110-8561	1	Pump Block ASM
45	114-8491	1	Washer	132	117-5362	1	Control Arm Kit
50	120-5537	1	*obs*spring-Compression	133	106-8688	1	Brake Arm Kit
51	120-5538	1	Washer	134	112-9861	1	Center Section Filter Kit
52	104-5306	1	Shaft-Input	135	114-1634	1	Filter Kit
53	104-5311	1	Bearing-Ball	136	121-5730	1	RH Expansion Tank Kit
55	104-5308	1	Spacer	137	120-5549	1	Bypass Kit
60	94-6922	1	Bearing-Thrust	138	121-5731	1	Hub Kit
70	104-5339	1	Washer-Flat	139	121-5729	1	Fan Pulley Kit
72	104-5316	1	Gear-Pinnion, 13T	150	104-5349	1	Fitting-SAE
73	106-8683	1	Shaft-Motor	151	115-8302	1	Hose
74	104-5360	1	Washer	159	121-5728	1	Case-Tube
80	119-5541	2	*obs* Washer	160	125-0041	1	Cap-Axle
81	104-5317	1	Gear-10T/48T	161	114-8467	1	Puller-Hub, 4 Bolt
82	104-5318	1	Gear-Jackshaft, 10T	162	120-7103	1	Seal And Ring Kit

● Not illustrated

 Right Hand Hydro Transaxle Assembly No. 119-3331

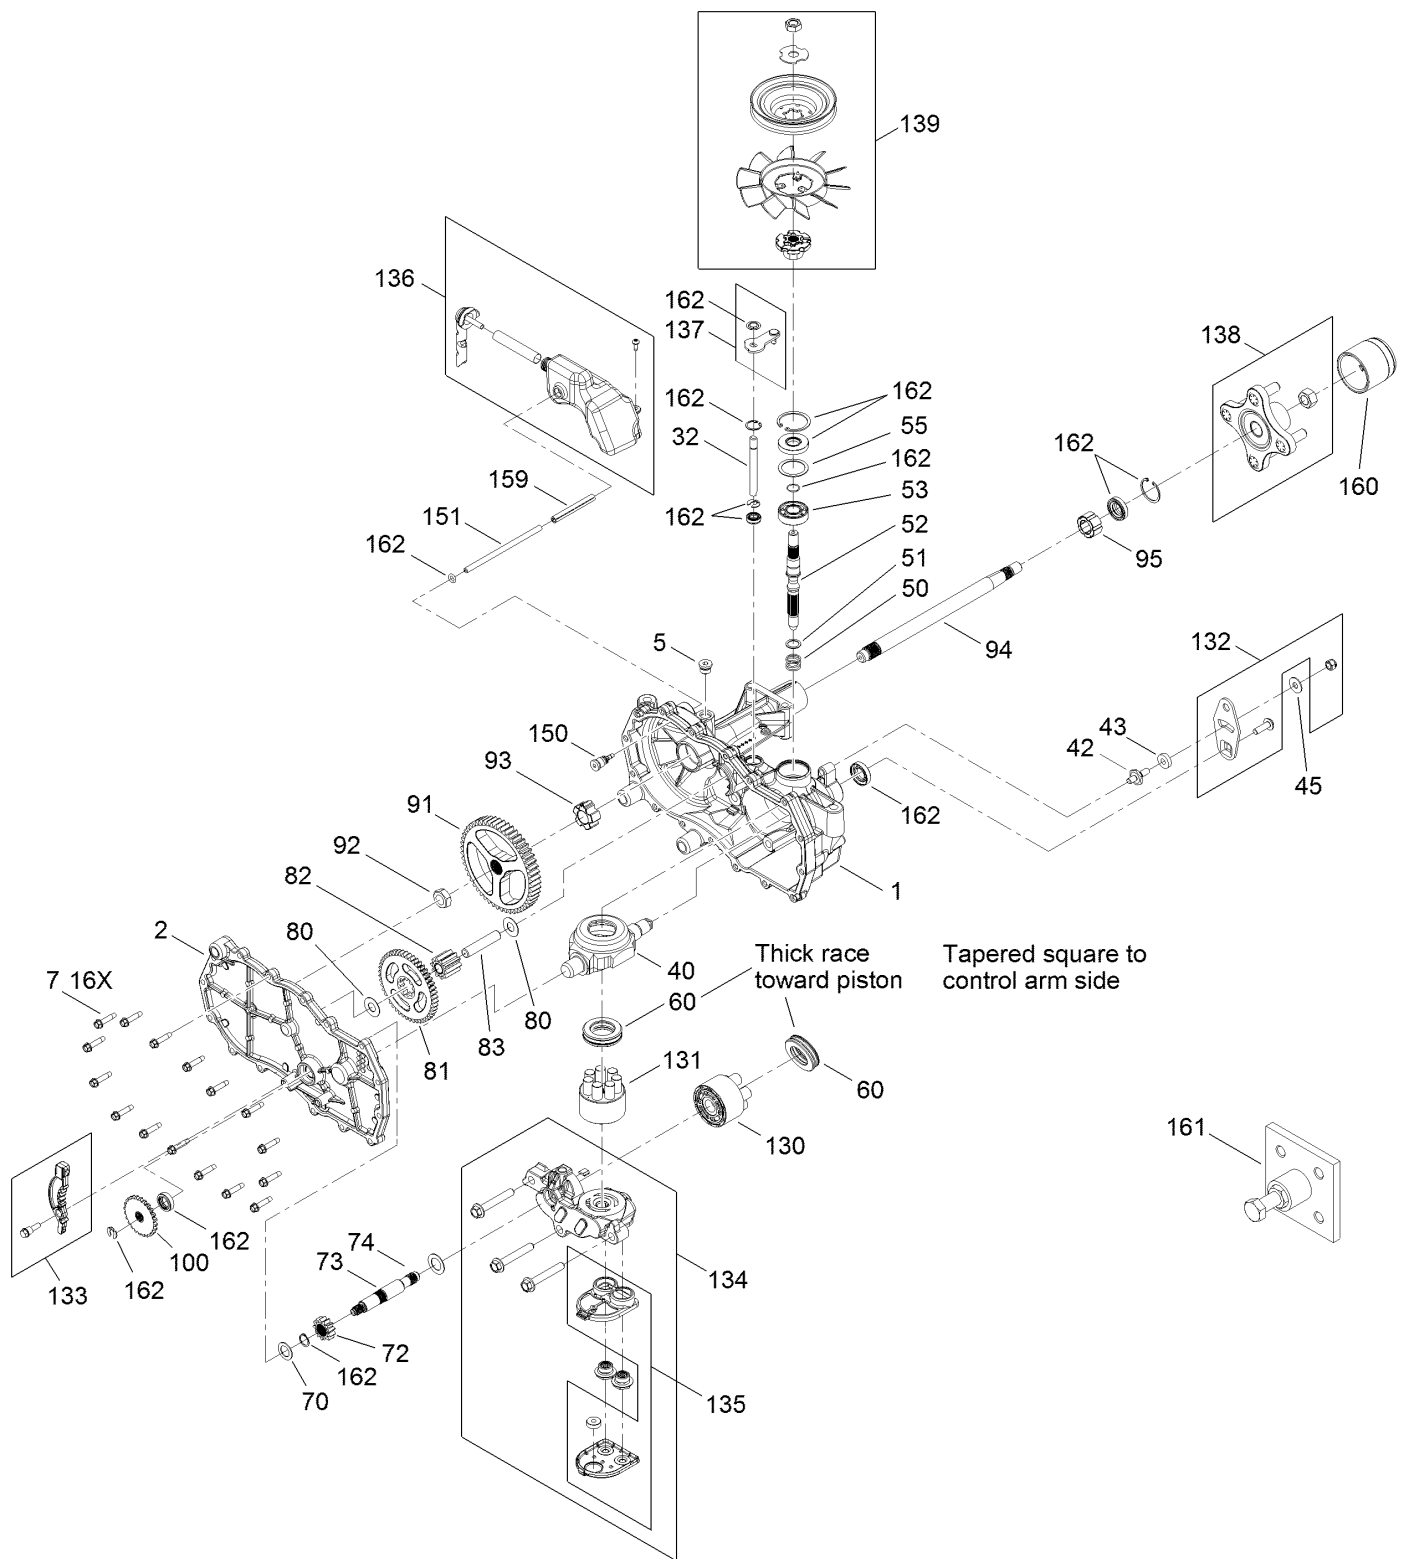


Right Hand Hydro Transaxle Assembly No. 119-3331 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-5531	1	Main Housing ASM	83	104-5329	1	Pin-Jackshaft
2	120-5533	1	Housing Side Kit	91	120-5539	1	Gear-Bull
5	104-2189	1	Plug-Thread, Straight	92	104-2142	1	Nut-HJ
7	117-5359	16	Screw-HHF	93	115-8314	1	Bushing-Inboard
13	104-2147	1	Sealant, Silicone - Non-Flammable ●	94	120-5540	1	Shaft-Axle
32	106-8678	2	Rod-Bypass	95	120-5541	1	Bearing-Sleeve
40	104-5304	1	Swashplate-Trunnion	100	106-8694	1	Disc-Brake, Cog
42	104-2116	1	Stud	130	103-2666	1	Cylinder Block Kit
43	112-9853	1	Puck-Friction	131	110-8561	1	Pump Block ASM
45	114-8491	1	Washer	132	117-5362	1	Control Arm Kit
50	120-5537	1	*obs*spring-Compression	133	106-8688	1	Brake Arm Kit
51	120-5538	1	Washer	134	112-9862	1	Center Section Filter Kit
52	104-5306	1	Shaft-Input	135	114-1634	1	Filter Kit
53	104-5311	1	Bearing-Ball	136	121-5735	1	LH Expansion Tank Kit
55	104-5308	1	Spacer	137	107-2489	1	Bypass Arm Kit
60	94-6922	1	Bearing-Thrust	138	121-5731	1	Hub Kit
70	104-5339	1	Washer-Flat	139	121-5729	1	Fan Pulley Kit
72	104-5316	1	Gear-Pinnion, 13T	150	104-5349	1	Fitting-SAE
73	106-8683	1	Shaft-Motor	151	115-8302	1	Hose
74	104-5360	1	Washer	159	121-5728	1	Case-Tube
80	119-5541	2	*obs* Washer	160	125-0041	1	Cap-Axle
81	104-5317	1	Gear-10T/48T	161	114-8467	1	Puller-Hub, 4 Bolt
82	104-5318	1	Gear-Jackshaft, 10T	162	120-7103	1	Seal And Ring Kit

● Not illustrated

 
Brake Assembly

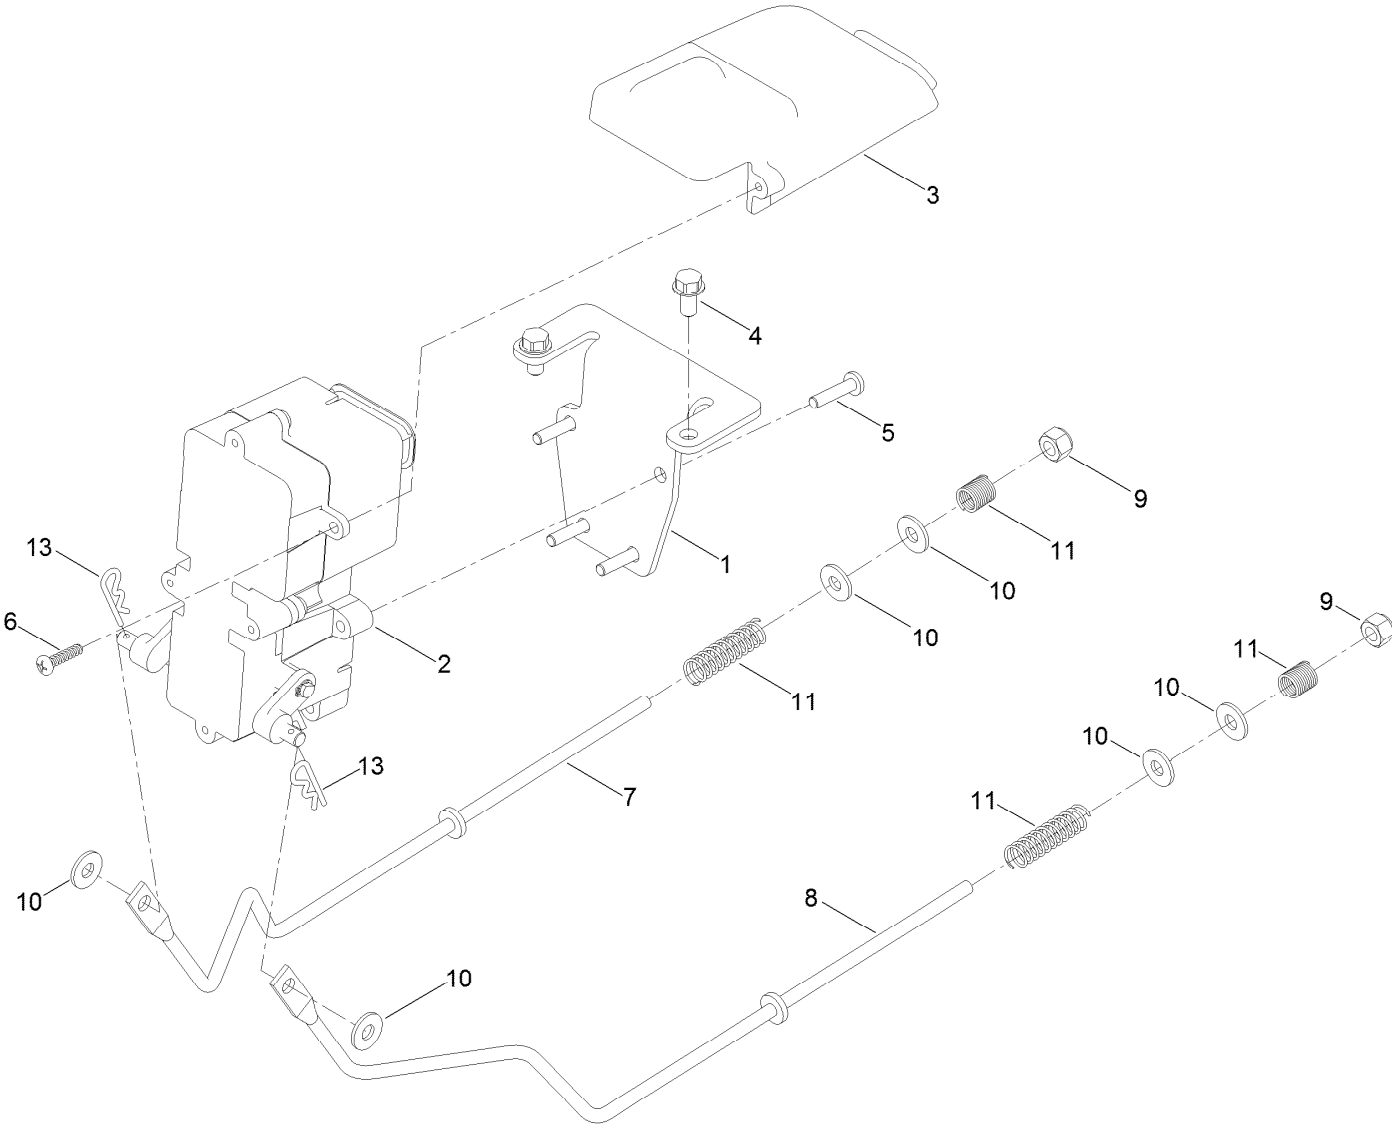

Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-0790-03	1	Bracket-Mount, Brake	7	121-2974	1	Rod-Brake, RH
2	136-4214	1	Brake Box ASM	8	121-2975	1	Rod-Brake, LH
3	132-6949	1	Cover-Connector	9	3296-42	2	Nut-Lock, NI
4	32144-4	2	Screw-HWH	10	119-8952	6	Washer
5	32144-36	4	Screw-PPH	11	117-1169	4	Spring-Compression
6	94-4496	2	Screw-PPH	13	3290-307	2	Pin-Cotter

 Tire Assembly No. 131-3671

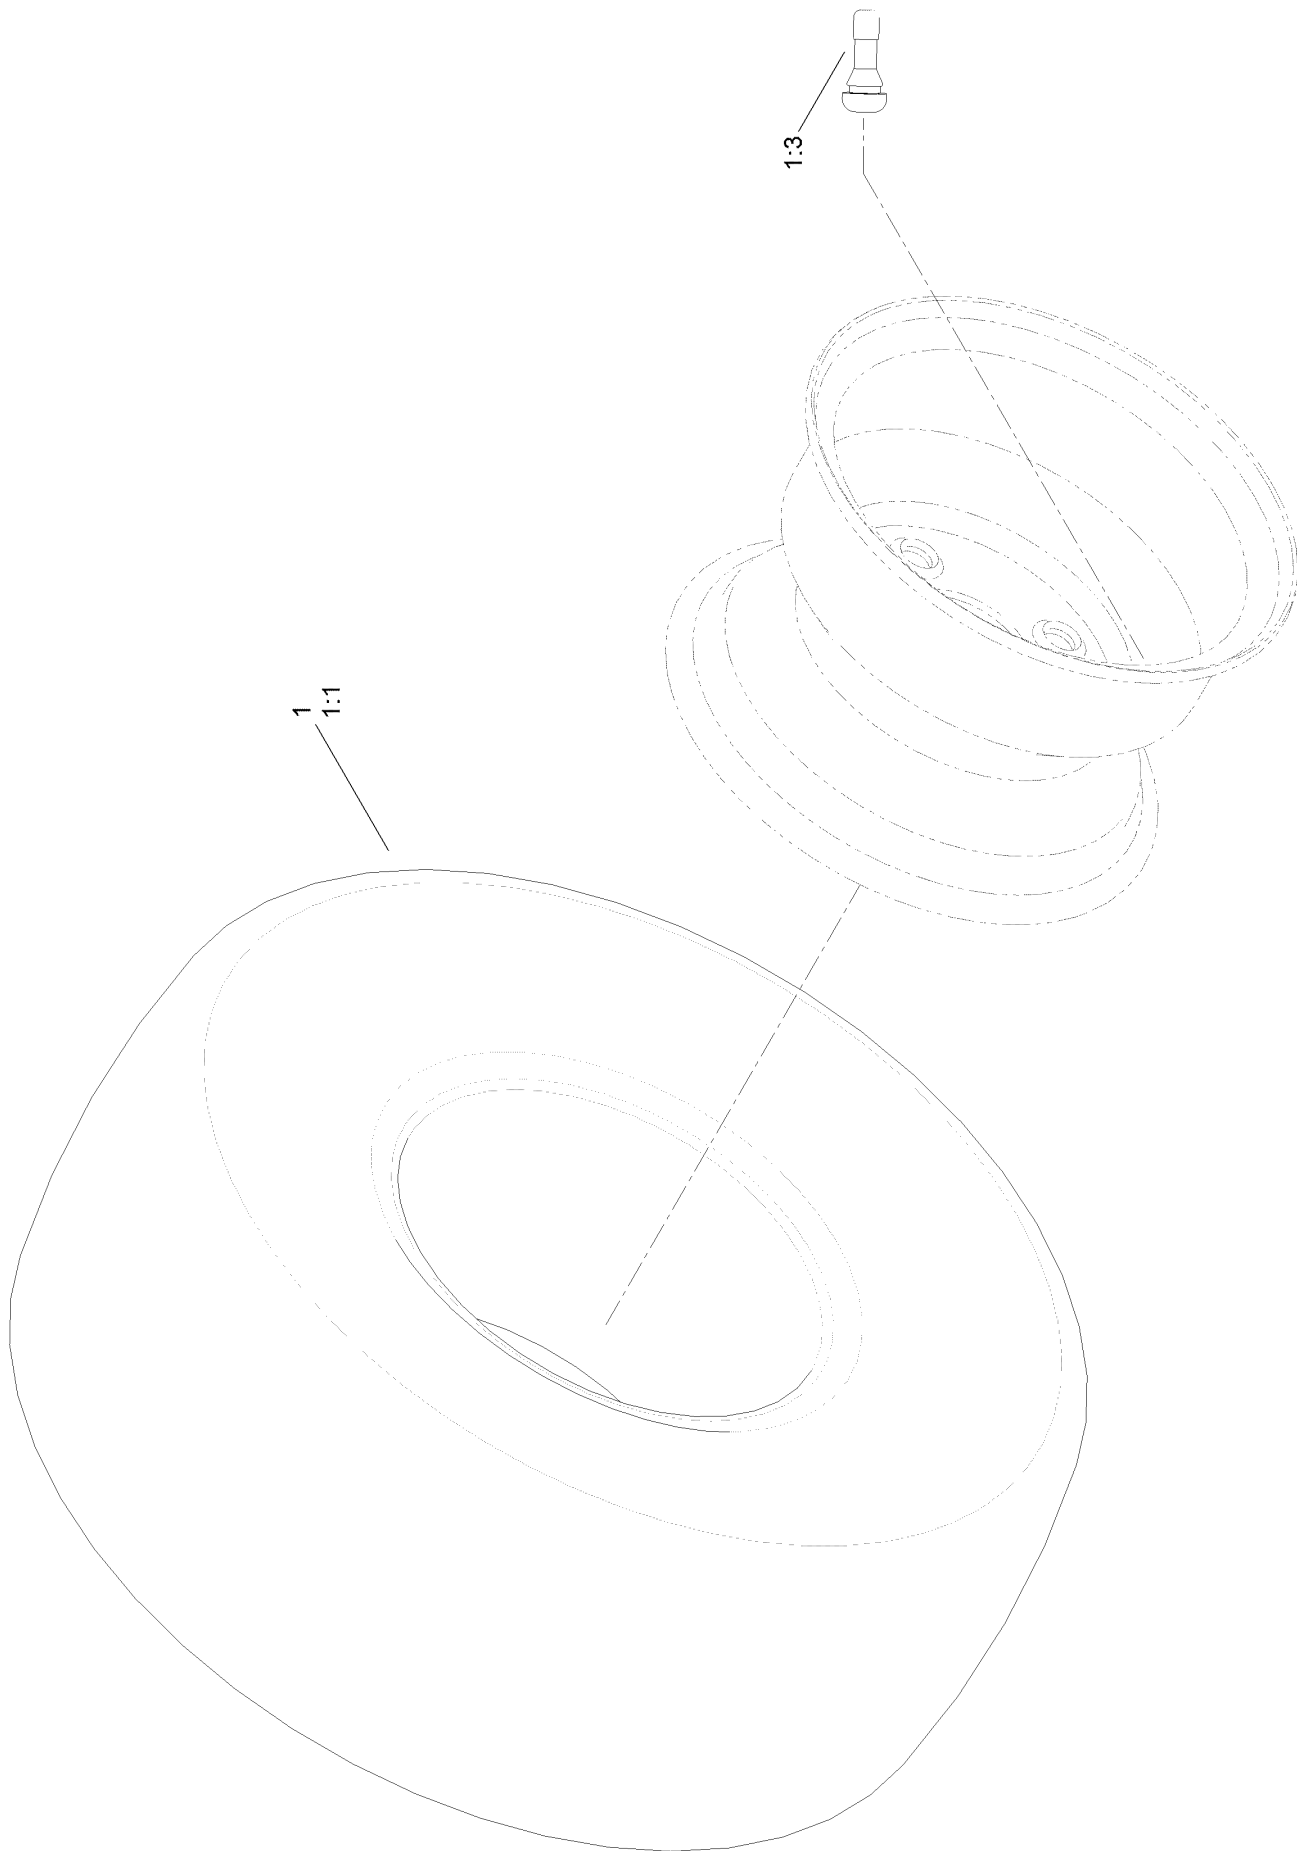


Tire Assembly No. 131-3671 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-3671	2	2 Ply Wheel And Tire ASM
1:1	131-3678	1	Tire-2 Ply

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:3	232-27	1	Stem-Valve
1:99	107-2491	1	Tube-Tire ●

● Not illustrated

 
Seat Assembly

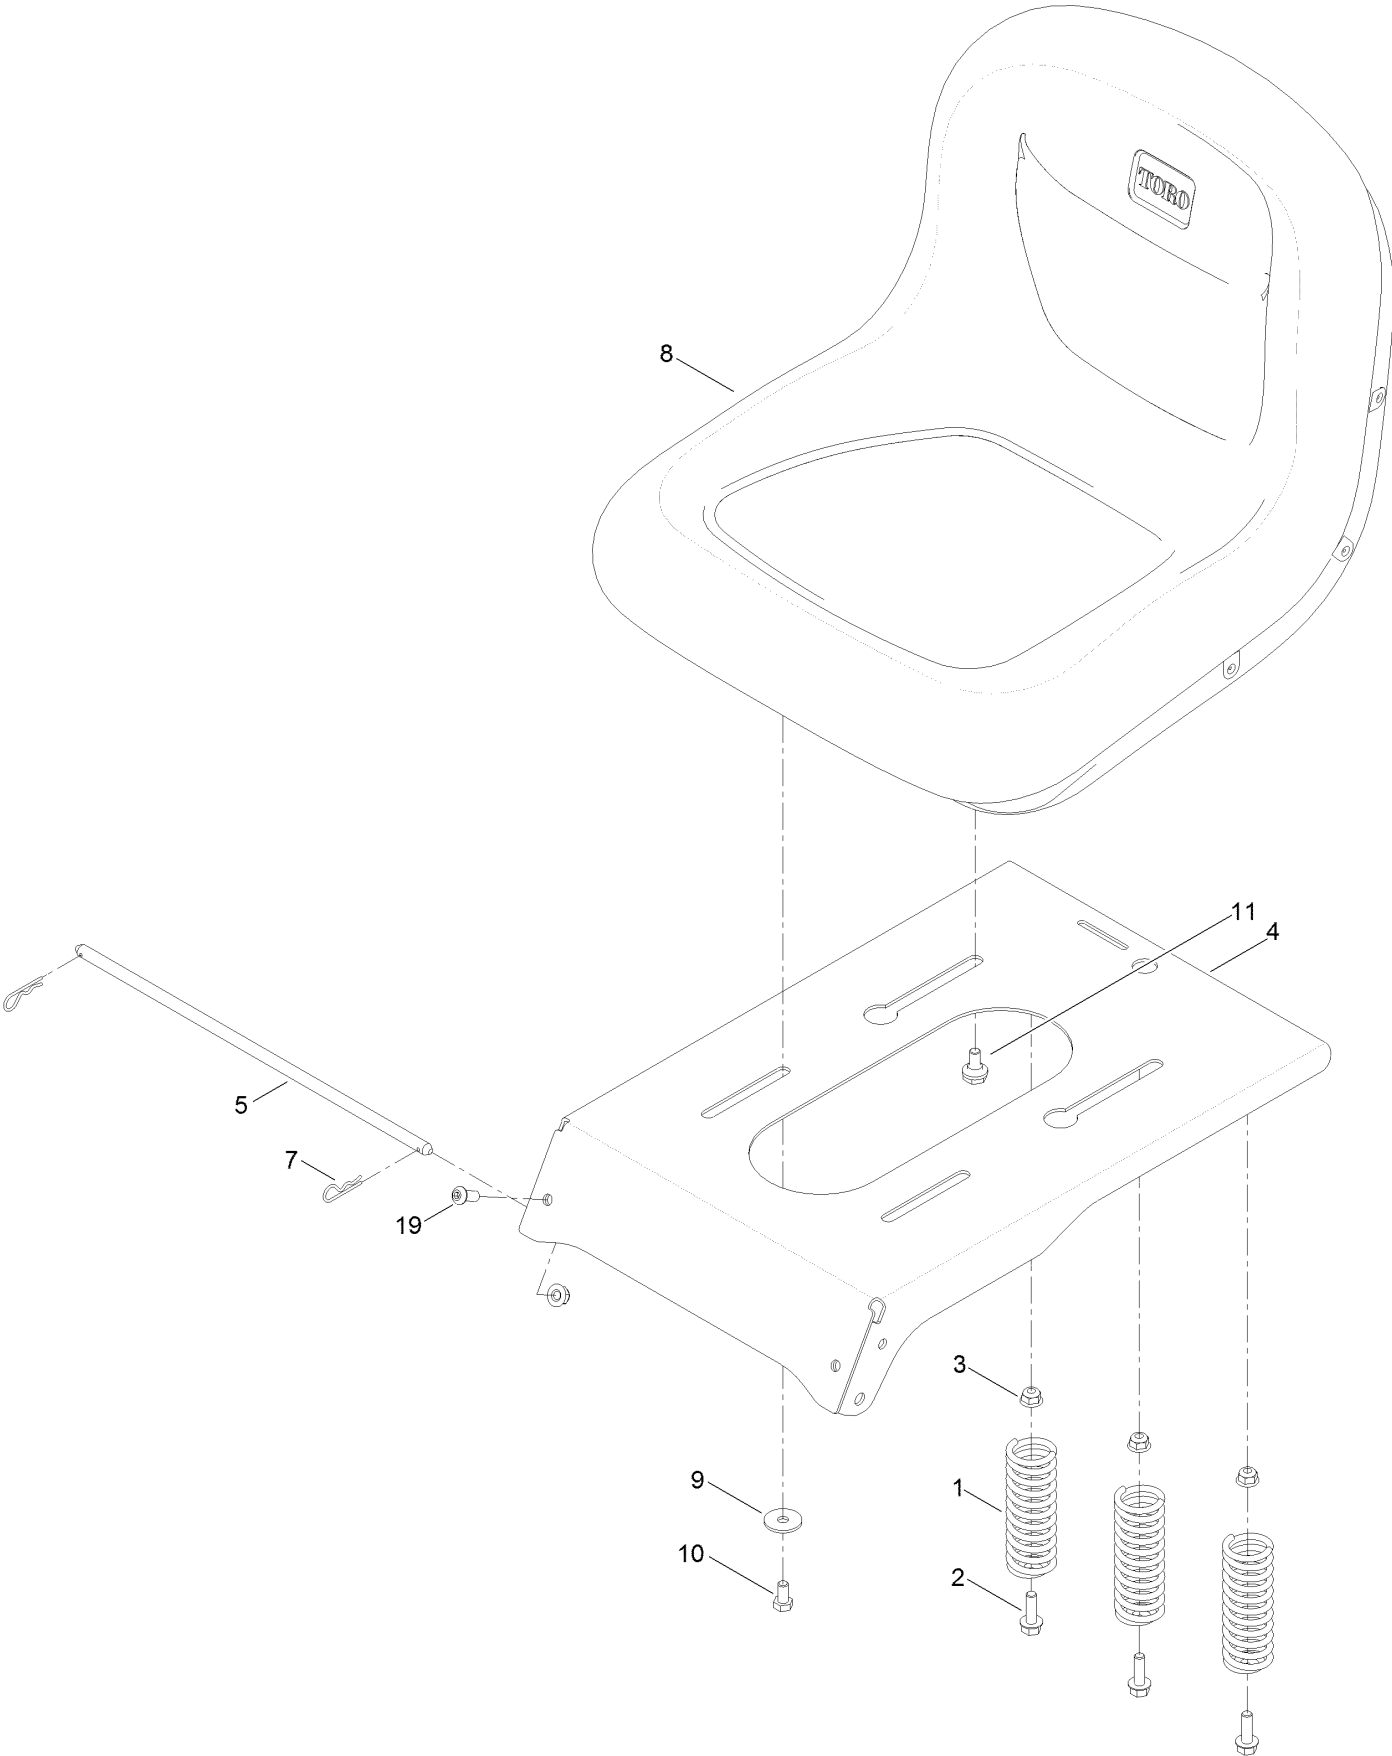

Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-7054	3	Spring-Compression	8	119-8828	1	Seat-15 Inch
2	3234-29	3	Screw-HHF	9	5-4460	2	Washer-Pivot
3	104-8300	5	Nut-HF, NI	10	322-2	2	Screw-HH
4	131-4037-01	1	Pan-Seat	11	37-8771	2	Bolt-Shoulder, HF
5	119-3433	1	Rod-Pivot, Narrow	19	3274-55	2	Screw-HSBH
7	3290-250	2	Pin-Cotter				

 
Motion Control Assembly

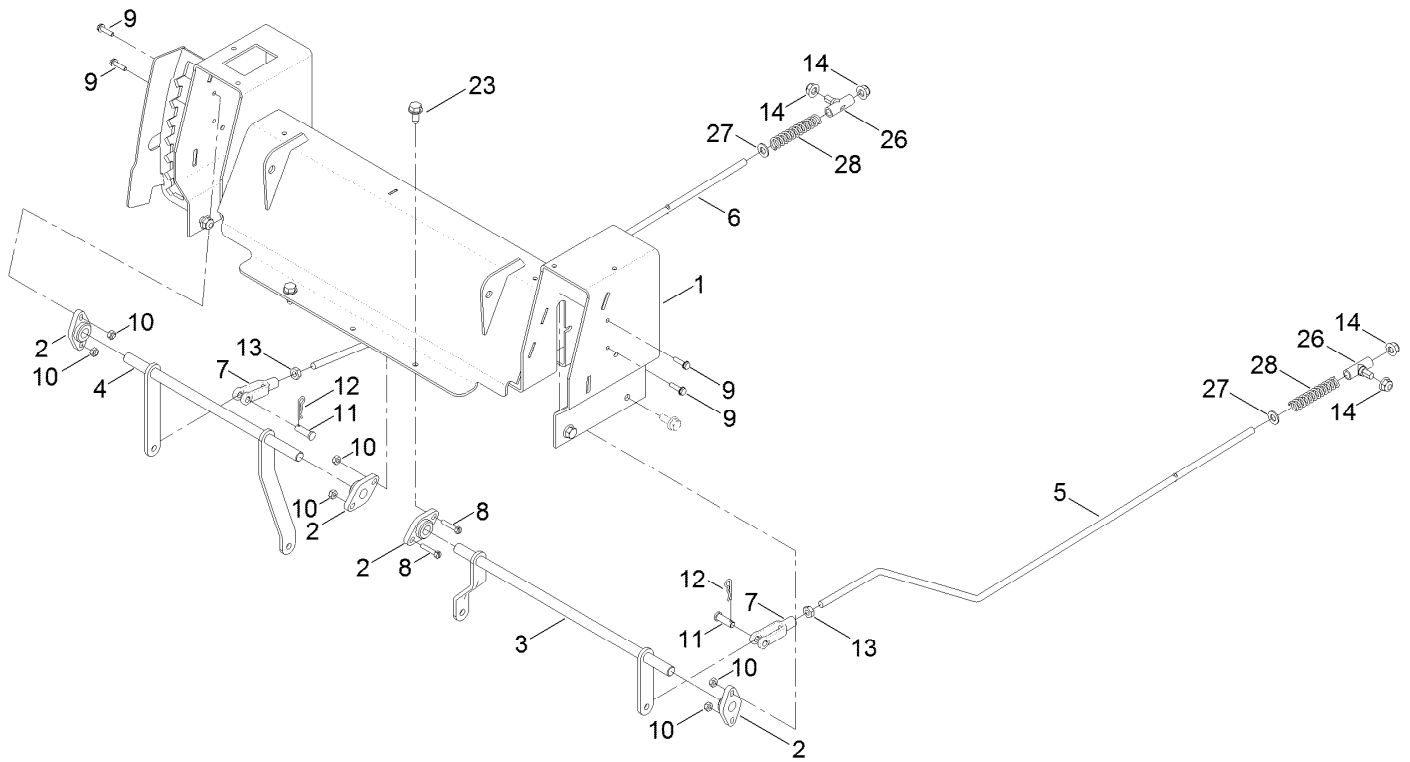

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-6898-03	1	Control Box ASM	11	1-808280	2	Pin-Clevis
2	127-0146	4	Bearing-Flange	12	1-806003	2	Pin-Cotter
3	132-6884	1	Bellcrank-LH	13	3220-2	2	Nut-Jam
4	132-6890	1	Bellcrank-RH	13	3234-47	6	Screw-HHF
5	125-1812	1	Rod-Hydro, LH	14	104-8300	10	Nut-HF, NI
6	127-3378	1	Rod-Hydro, RH	23	32144-70	2	Screw-HWHTF
7	1-303105	2	Yoke-Adjustable	26	119-8842	2	Mount-Rod, Hydro
8	32105-12	2	Screw	27	3256-23	2	Washer-Plain
9	3290-126	4	Screw-HWH	28	1-603807	2	Spring-Return, Neutral
10	3296-2	6	Nut-Lock, NI				

 Engine Assembly

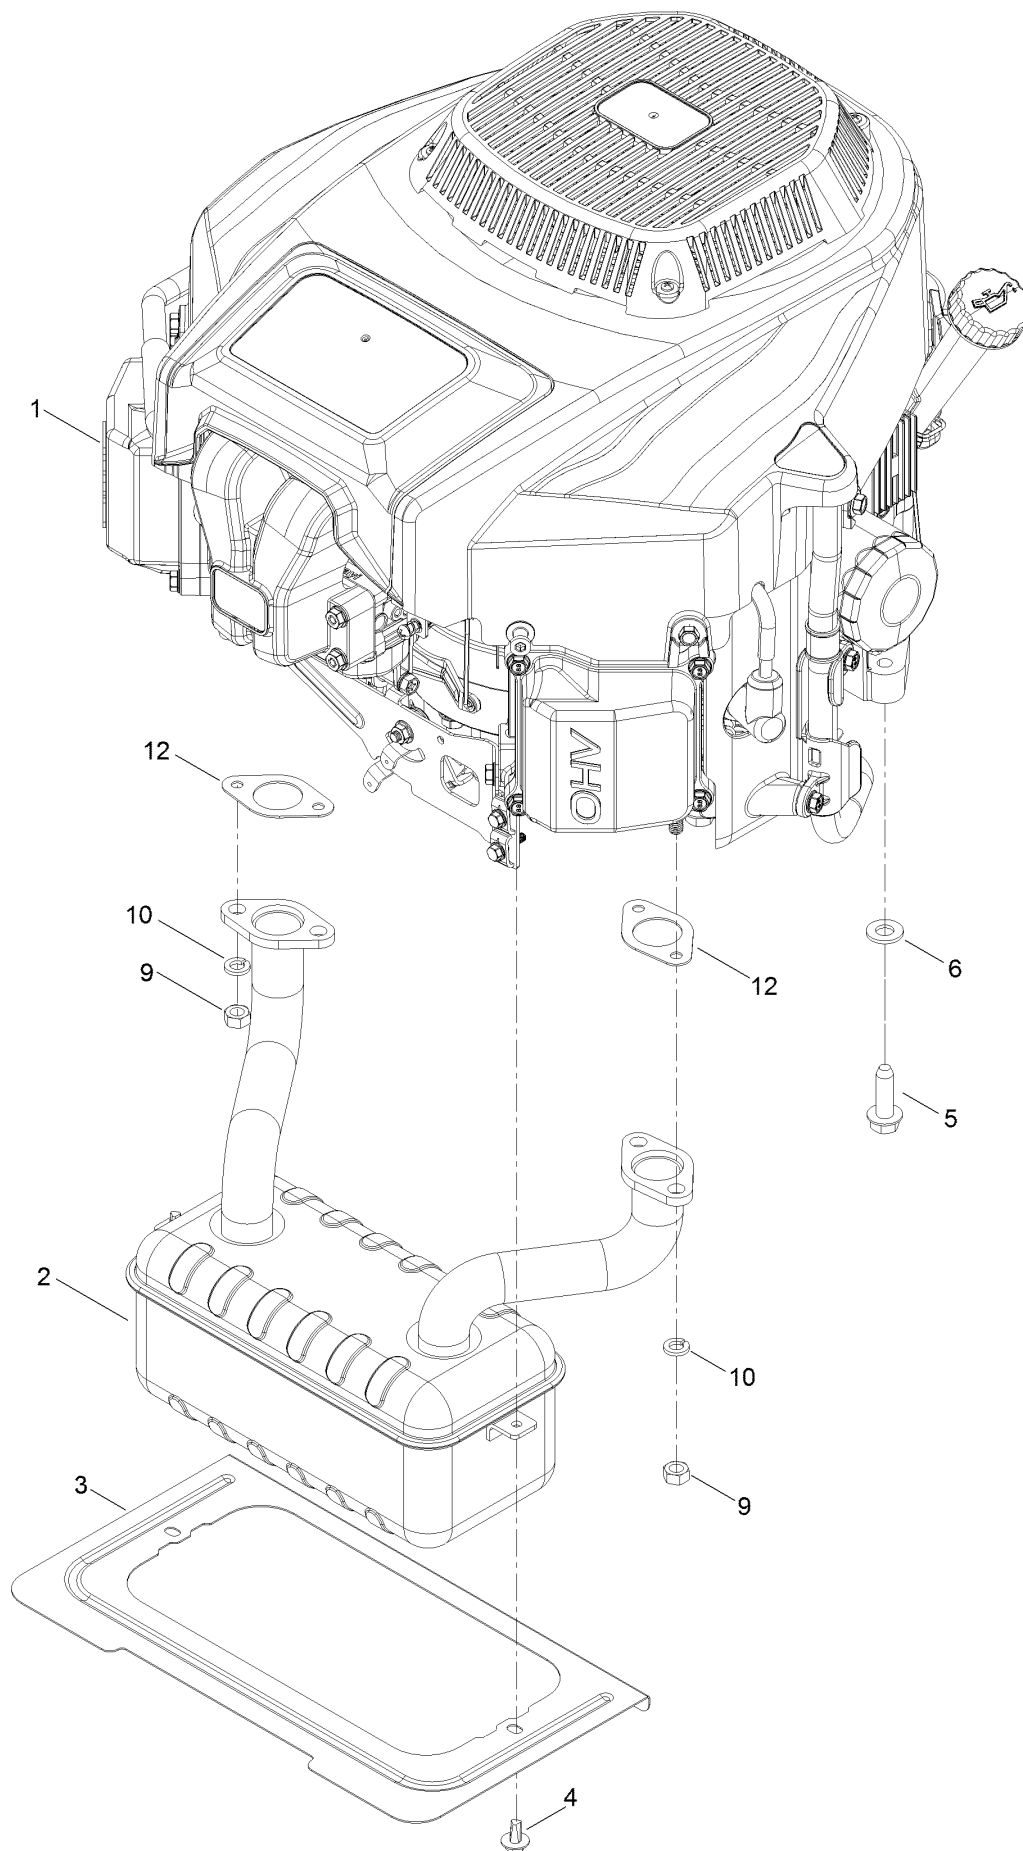

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-7816	1	Engine-2P77F	6	3256-24	3	Washer-Plain
2	130-6851	1	Muffler	9	121-0199	4	Nut-HH
3	131-1071-03	1	Shield-Heat	10	127-9279	4	Washer-Lock, Split
4	46-8560	2	Screw-HHFTF	12	120-4317	2	Gasket-Exhaust
5	32144-109	4	Screw-Thd				


Diagram illustrating the assembly of a carburetor. The main assembly includes the carburetor body (1), various hoses (2, 3, 4, 5, 6, 7, 16), gaskets (8), and fasteners (9, 10, 11, 12, 13, 14, 15). The diagram shows the carburetor body with various ports and connections. Hoses are connected to the ports using clamps (2). Gaskets (8) are used to seal the connections. Fasteners (9, 10, 11, 12, 13, 14, 15) are used to secure the assembly. Callouts 97, 98, and 99 point to specific sub-assemblies or components.

Fuel System Assembly with Non-Canister Style Air Filter (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-1563	1	Filter-Fuel	11	127-9245	4	Stud
2	120-4251	6	Clamp-Fuel Line	12	127-9246	2	Gasket-Carburetor
3	120-4371	1	Hose-Fuel	13	127-9247	1	Insulator-Carburetor
4	127-9206	1	Pump-Fuel	14	133-9963	1	Linkage-Throttle
5	120-4225	2	Screw-HHF	15	133-9964	1	Spring-Return, Throttle
6	127-9205	1	Hose-Fuel	16	127-9355	1	Sleeve-Fuel Line Protector
7	127-9207	1	Hose-Fuel	96	136-7840	1	Carburetor Replacement Kit
8	127-9230	2	Gasket-Intake	97	127-9290	1	Carburetor Repair Kit
9	120-4284	4	Screw-HHF	98	127-9292	1	Solenoid Kit
10	127-9244	1	Manifold-Intake	99	133-9833	1	High Altitude Kit ●

● Not illustrated

 
Carburetor Assembly

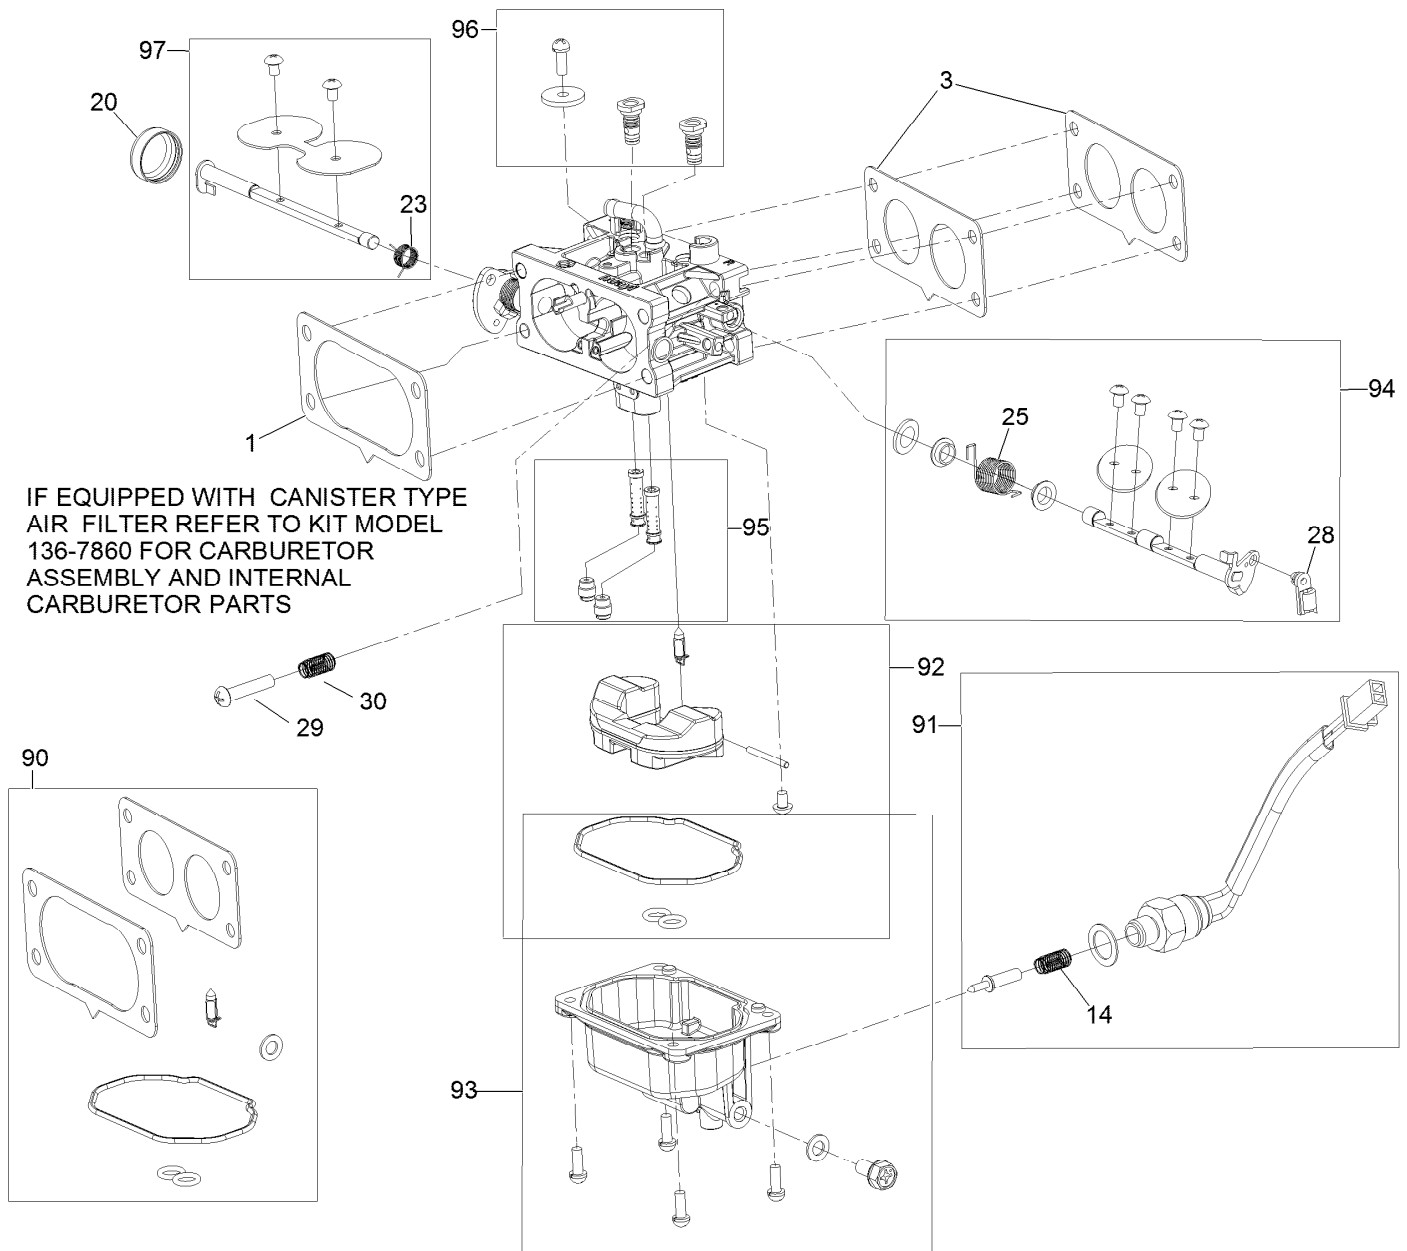

Carburetor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9251	1	Gasket-Carburetor	90	127-9290	1	Carburetor Repair Kit
3	127-9246	2	Gasket-Carburetor	91	127-9292	1	Solenoid Kit
14	127-9319	1	Spring	92	127-9340	1	Float Kit
20	127-9325	1	Cover-Shaft, Choke	93	127-9341	1	Bowl Kit
23	127-9328	1	Spring	94	133-9817	1	Throttle Shaft Kit
25	127-9330	1	Spring	95	136-7844	1	Nozzle And Jet Kit
28	127-9333	1	Clamp-Lock	96	136-7899	1	Idle Jet Kit
29	127-9334	1	Screw-PPH	97	127-9345	1	Choke Shaft Kit
30	127-9335	1	Spring				

 
Air Intake and Filtration Assembly

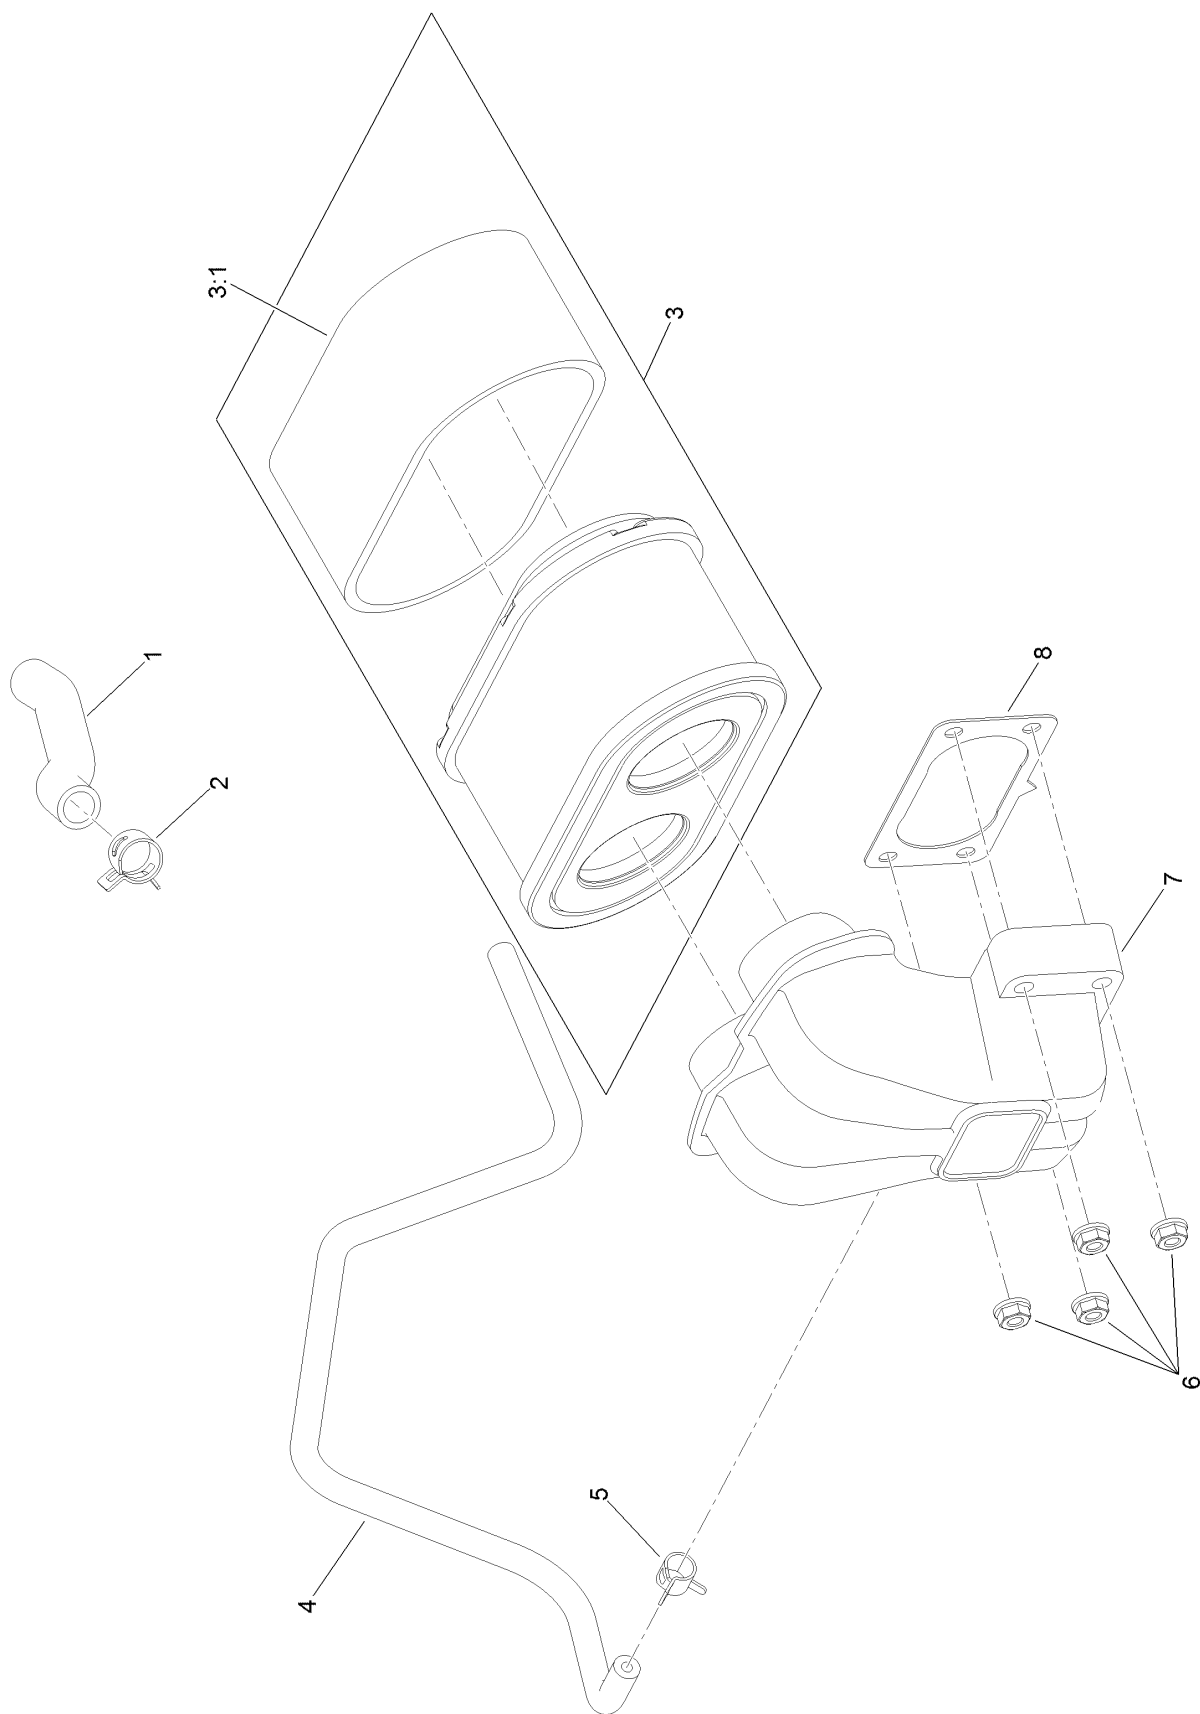

Air Intake and Filtration Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9235	1	Tube-Breather	5	127-9187	1	Clamp-Hose
2	127-9234	2	Clamp-Hose	6	120-4236	4	Nut-Flange
3	127-9252	1	Filter-Air, Complete	7	127-9047	1	Manifold-Filter, Air
3:1	127-9288	1	Filter-Pre, Foam	8	127-9251	1	Gasket-Carburetor
4	127-9253	1	Hose-Fuel				

 Ignition and Cooling Fan

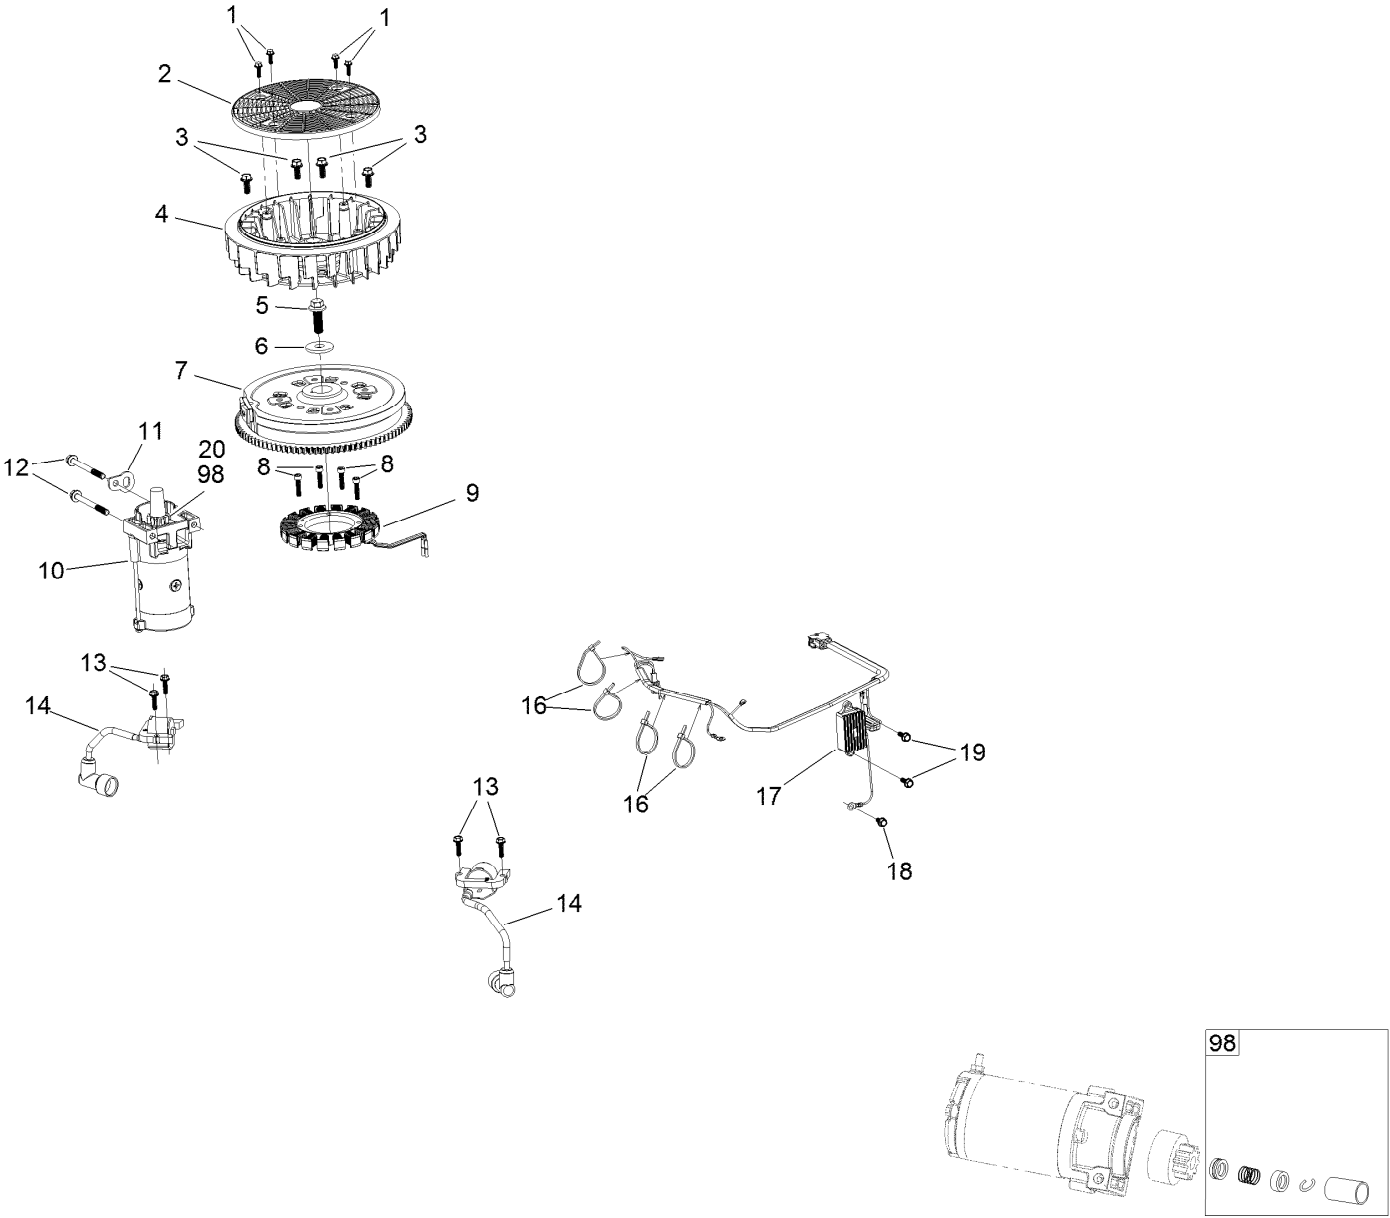


Ignition and Cooling Fan (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9197	4	Screw-HWH
2	127-9198	1	Screen-Rotating
3	127-9199	4	Screw-HWH
4	127-9200	1	Fan-Cooling
5	127-9201	1	Screw-HWH
6	127-9202	1	Washer-Spring
7	127-9306	1	Flywheel
8	127-9210	4	Screw-HSH
9	136-7876	1	Alternator
10	136-7880	1	Motor-Starter
11	127-9208	1	Bracket-Lift

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	120-4231	2	Screw-HHF
13	121-0007	4	Bolt-Flange
14	136-7883	2	Ignition Coil ASM
16	127-9220	4	Tie-Zip
17	136-7879	1	Regulator-Voltage, W/Harness
18	120-4216	1	Screw-HHF
19	120-4232	2	Screw-HHF
20	133-1562	1	Pinion-Starter
98	133-1566	1	Starter Repair Kit

 
Crankcase and Crankshaft Assembly

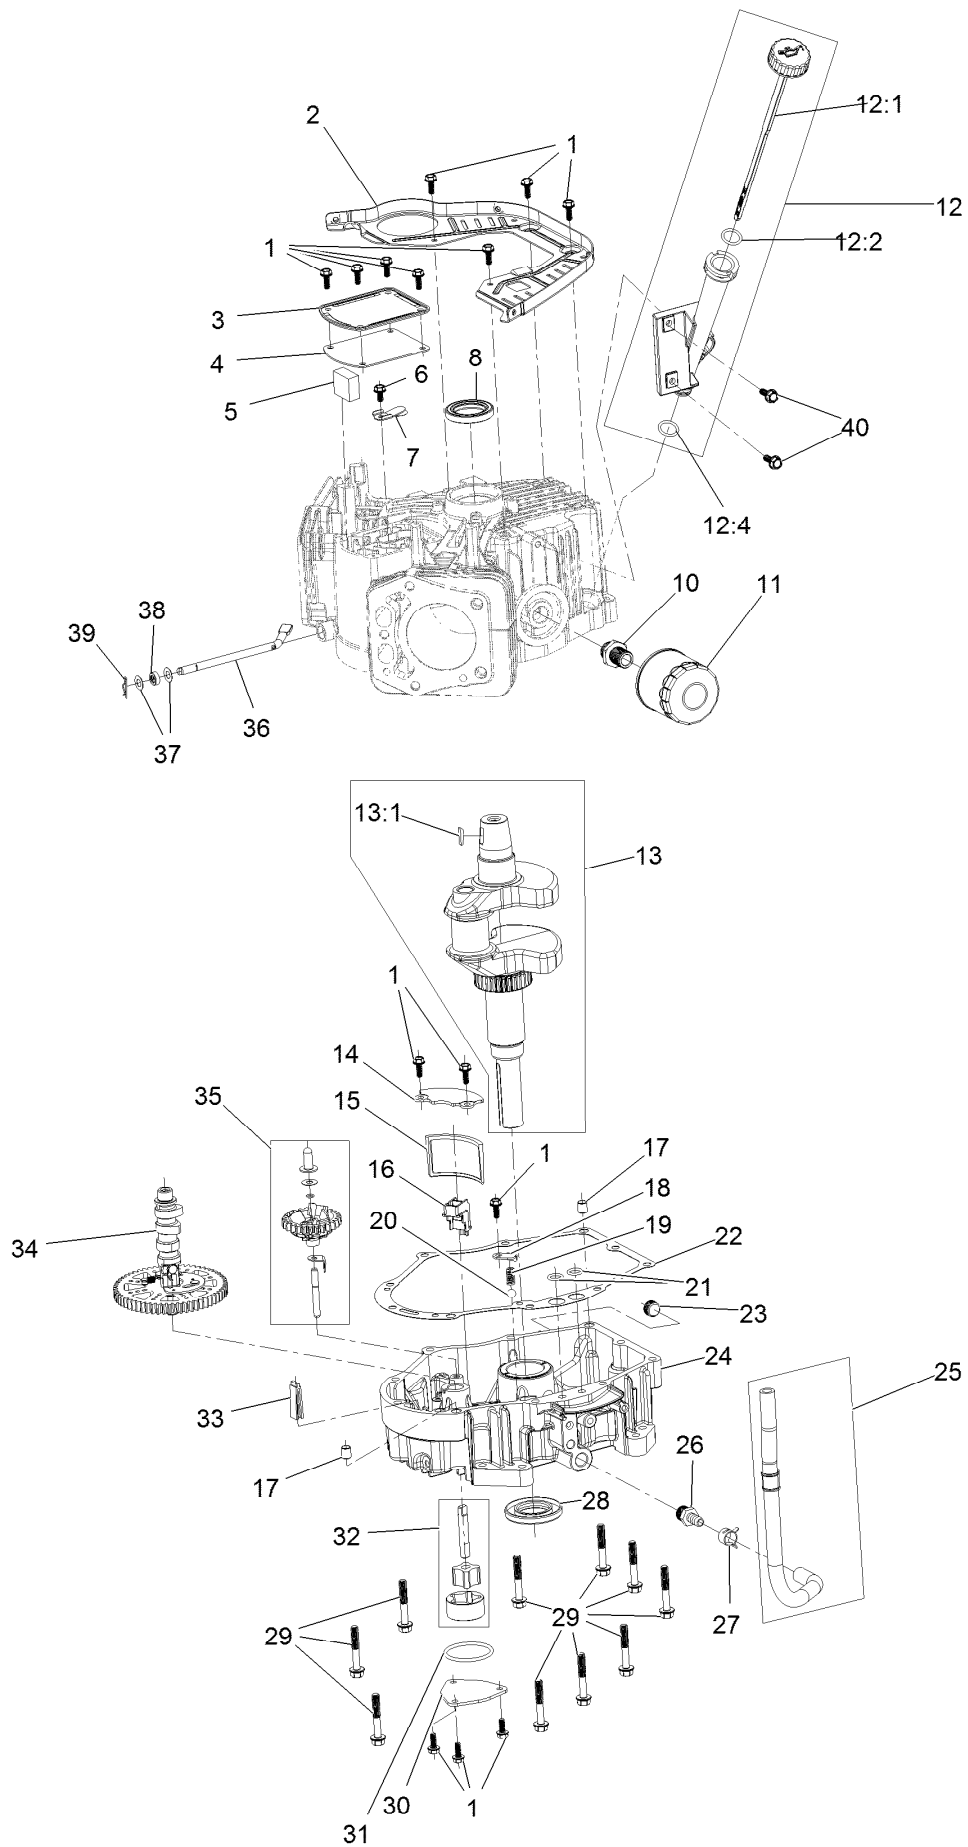

Crankcase and Crankshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-4232	14	Screw-HHF	20	127-9266	1	Valve-Ball
2	127-9212	1	Baffle	21	120-4262	2	O-Ring
3	127-9213	1	Cover-Breather	22	127-9267	1	Gasket-Cover, Crankcase
4	127-9214	1	Gasket-Breather	23	133-9805	1	Plug-Drain
5	127-9215	1	Filter-Breather	24	133-9806	1	Cover-Crankcase
6	120-4216	1	Screw-HHF	25	127-9293	1	Oil Drain Hose ASM
7	127-9217	1	Valve-Breather	26	127-9275	1	Fitting-Hose
8	120-4267	1	Seal-Oil	27	127-9276	1	Clamp-Hose
10	136-7884	1	Adaptor-Filter, Oil	28	127-9271	1	Seal
11	136-7848	1	Filter-Oil	29	121-0473	10	Screw-HHF
12	127-9218	1	Oil Tube ASM	30	127-9274	1	Cover-Oil Pump
12:1	127-9283	1	Dipstick	31	127-9273	1	O-Ring
12:2	127-9284	1	O-Ring	32	127-9272	1	Oil Pump ASM
12:4	127-9286	1	O-Ring	33	120-4275	1	Deflector-Oil, Rubber
13	127-9255	1	Crankshaft	34	133-1568	1	Camshaft
13:1	120-4320	1	Key-Woodruff	35	136-7882	1	Governor ASM
14	127-9261	1	Cover-Screen, Oil	36	127-9238	1	Shaft-Governor
15	127-9262	1	Screen-Oil	37	120-4258	2	Washer-Plain
16	127-9263	1	Retainer-Screen	38	120-4257	1	Seal-Oil
17	120-4274	2	Pin-Dowel	39	120-4256	1	Pin-Hair
18	127-9264	1	Plate-Retainer	40	120-4232	2	Screw-HHF
19	127-9265	1	Spring				


 
Governor Control Assembly

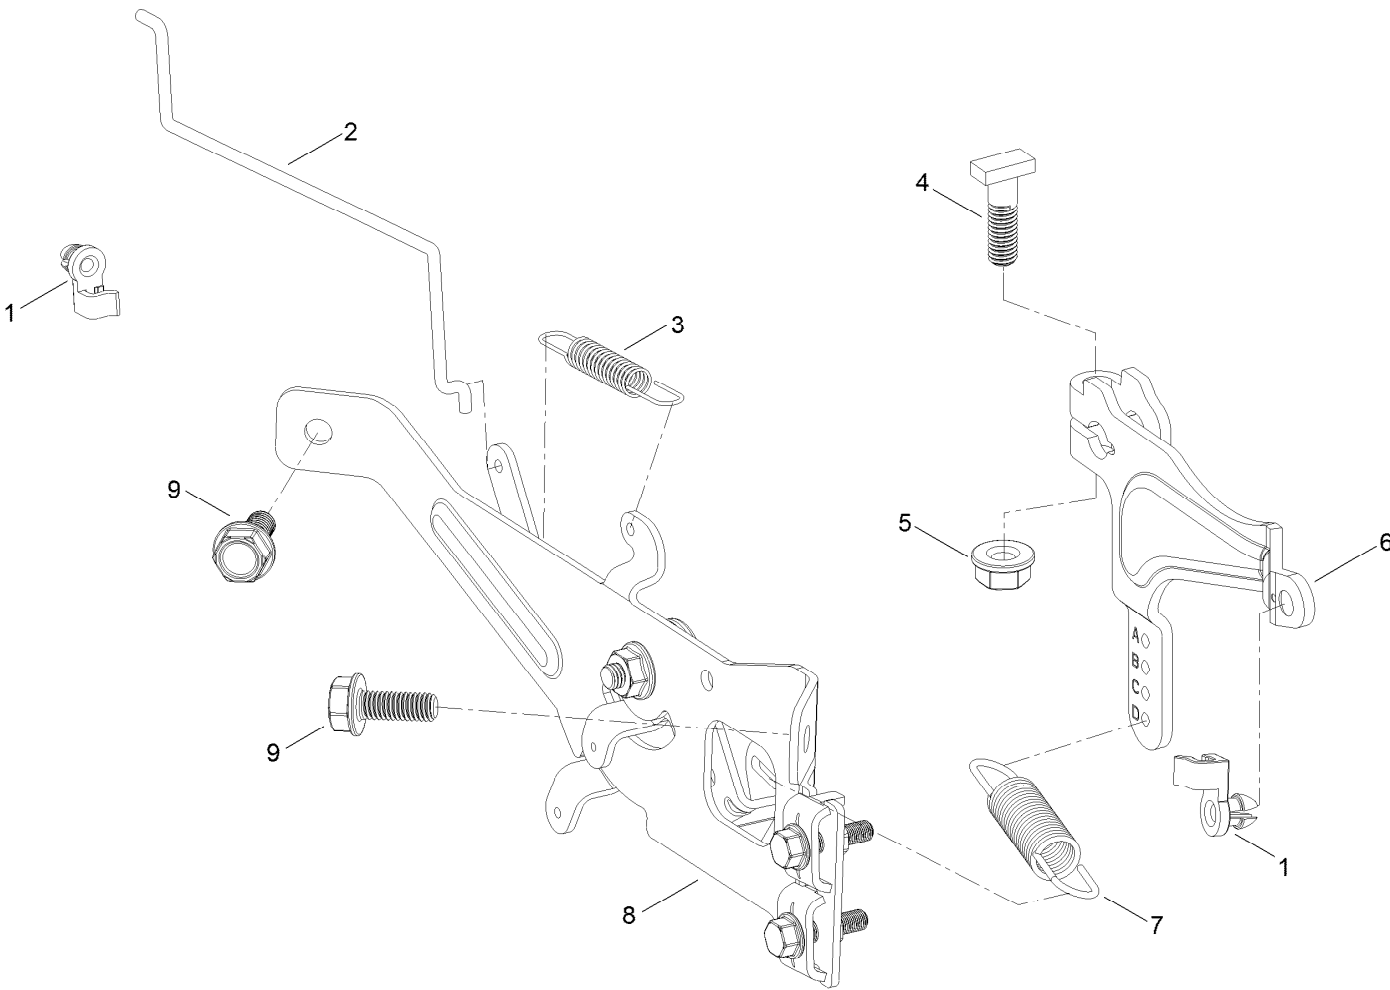

Governor Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9250	2	Clip-Linkage	6	133-9961	1	Arm-Governor
2	127-9242	1	Linkage-Choke	7	133-9962	1	Spring-Governor
3	127-9241	1	Spring-Governor	8	133-1570	1	Control Plate ASM
4	120-4238	1	Bolt-Arm, Governor	9	120-4232	2	Screw-HHF
5	120-4236	1	Nut-Flange				

  
Piston and Cylinder Head Assembly

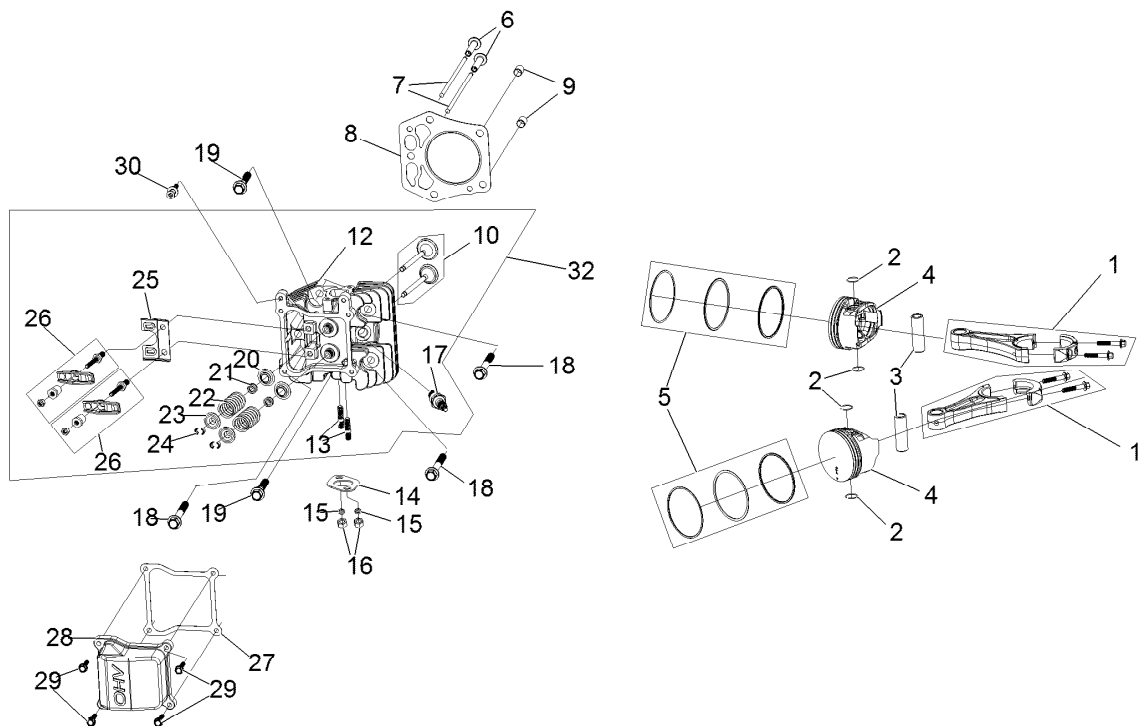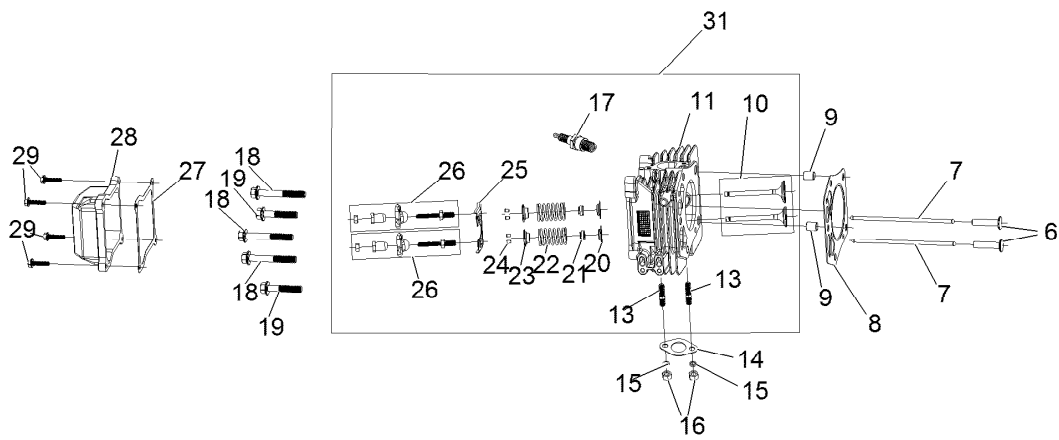

Piston and Cylinder Head Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9256	2	Connecting Rod ASM	17	81-3250	2	Spark Plug
2	127-9258	4	Clip-Pin, Piston	18	127-9231	6	Screw-HWH
3	127-9257	2	Pin-Piston	19	127-9232	4	Screw-HWH
4	127-9259	2	Piston	20	120-4303	4	Seat-Spring, Valve
5	127-9260	2	Piston Ring Set	21	120-4304	4	Seal-Stem, Valve
6	127-9224	4	Lifter-Valve	22	120-4305	4	Spring-Valve
7	127-9225	4	Rod-Push	23	120-4306	4	Retainer-Spring, Valve
8	127-9226	2	Gasket-Head, Cylinder	24	120-4307	8	Keeper-Valve
9	127-9227	4	Pin-Dowel	25	127-9233	2	Plate-Guide, Push Rod
10	127-9228	2	Valve Set	26	136-7881	4	Rocker Arm ASM
11	133-9802	1	Head-Cylinder, Right	27	127-9295	2	Gasket-Valve Cover
12	133-9804	1	Head-Cylinder, Left	28	127-9050	2	Cover-Valve
13	121-0464	4	Stud-Exhaust	29	120-4225	8	Screw-HHF
14	120-4317	2	Gasket-Exhaust	30	120-4214	1	Screw-Shoulder, HH
15	127-9279	4	Washer-Lock, Split	31	136-7891	1	Complete Right Head ASM
16	121-0199	4	Nut-HH	32	136-7892	1	Complete Left Head ASM

 
Blower Housing Assembly

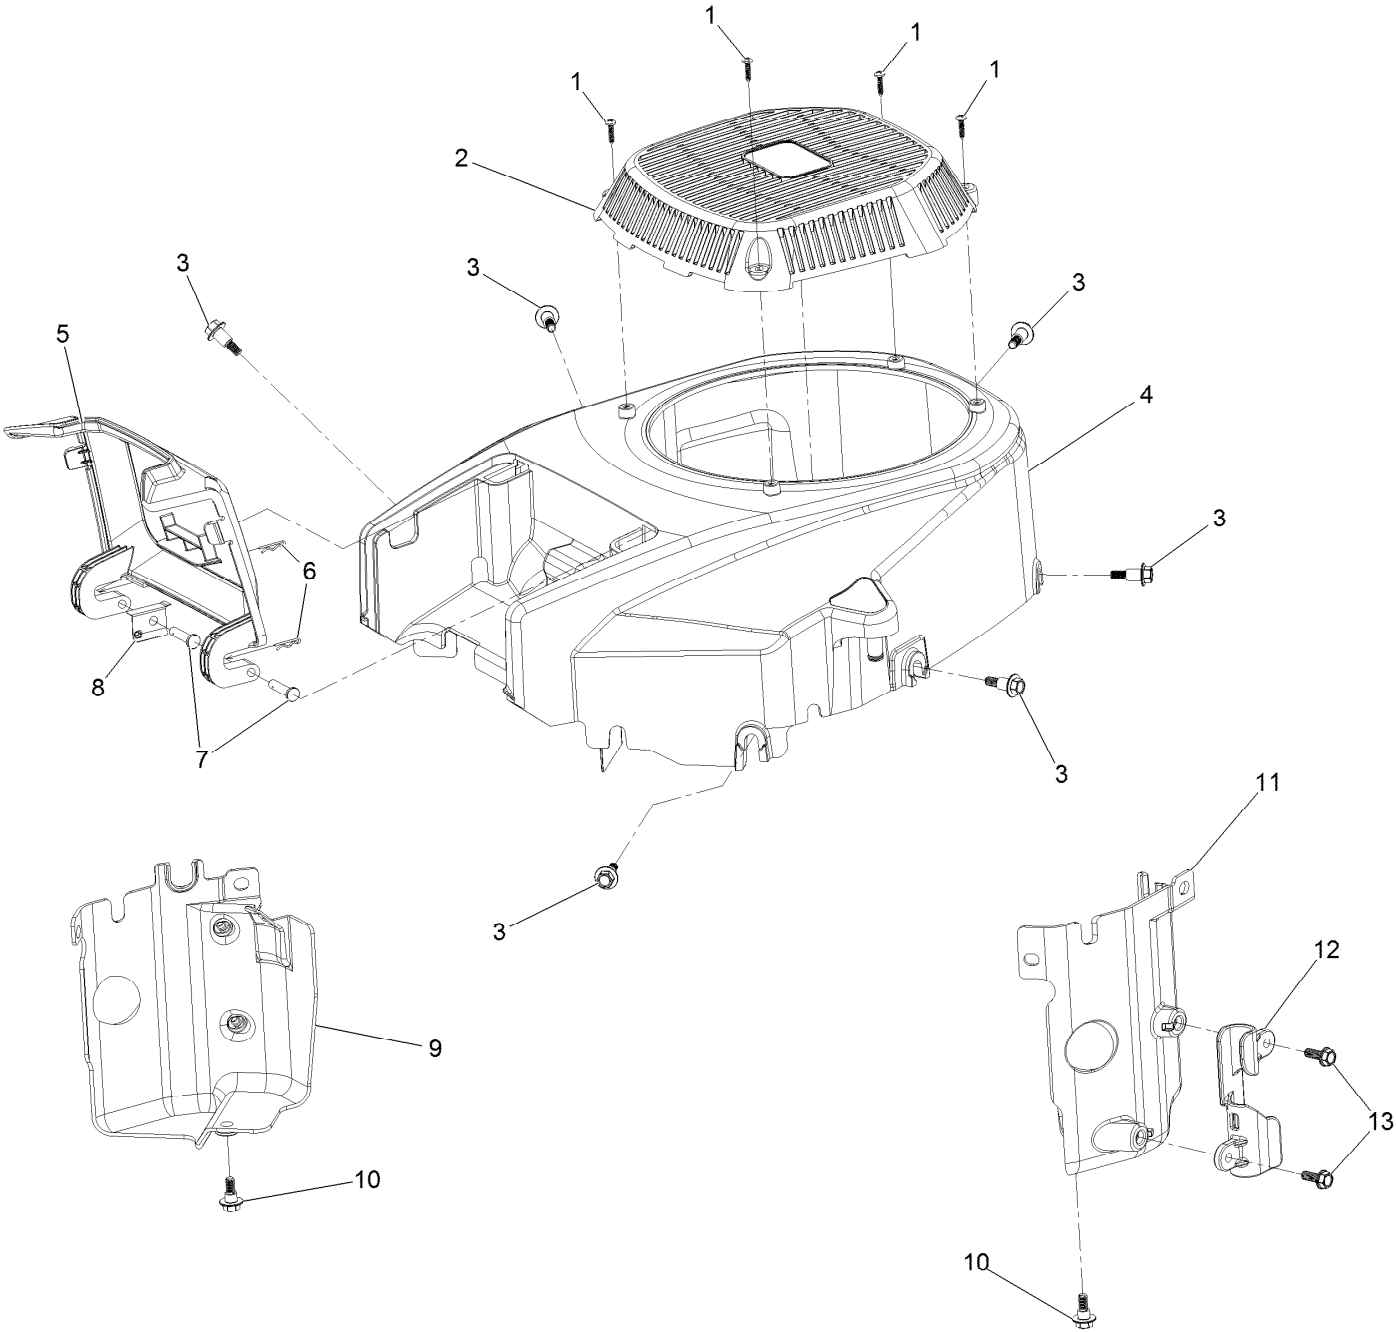

Blower Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-1571	4	Screw-PPH, Plastic	8	127-9281	1	Plate-Spring
2	127-9045	1	Cover-Fan	9	136-7877	1	Baffle-Air, Left
3	127-9196	6	Screw-Shoulder, HWH	10	120-4210	2	Screw-Shoulder, HHF
4	133-1572	1	Shroud-Engine	11	136-7878	1	Baffle-Air, Right
5	127-9046	1	Door-Filter, Air	12	127-9287	1	Cleat-Hose
6	127-9280	2	Pin-Hair	13	120-4232	2	Screw-HHF
7	127-9282	2	Pin				

 
Gasket and Seal Assembly

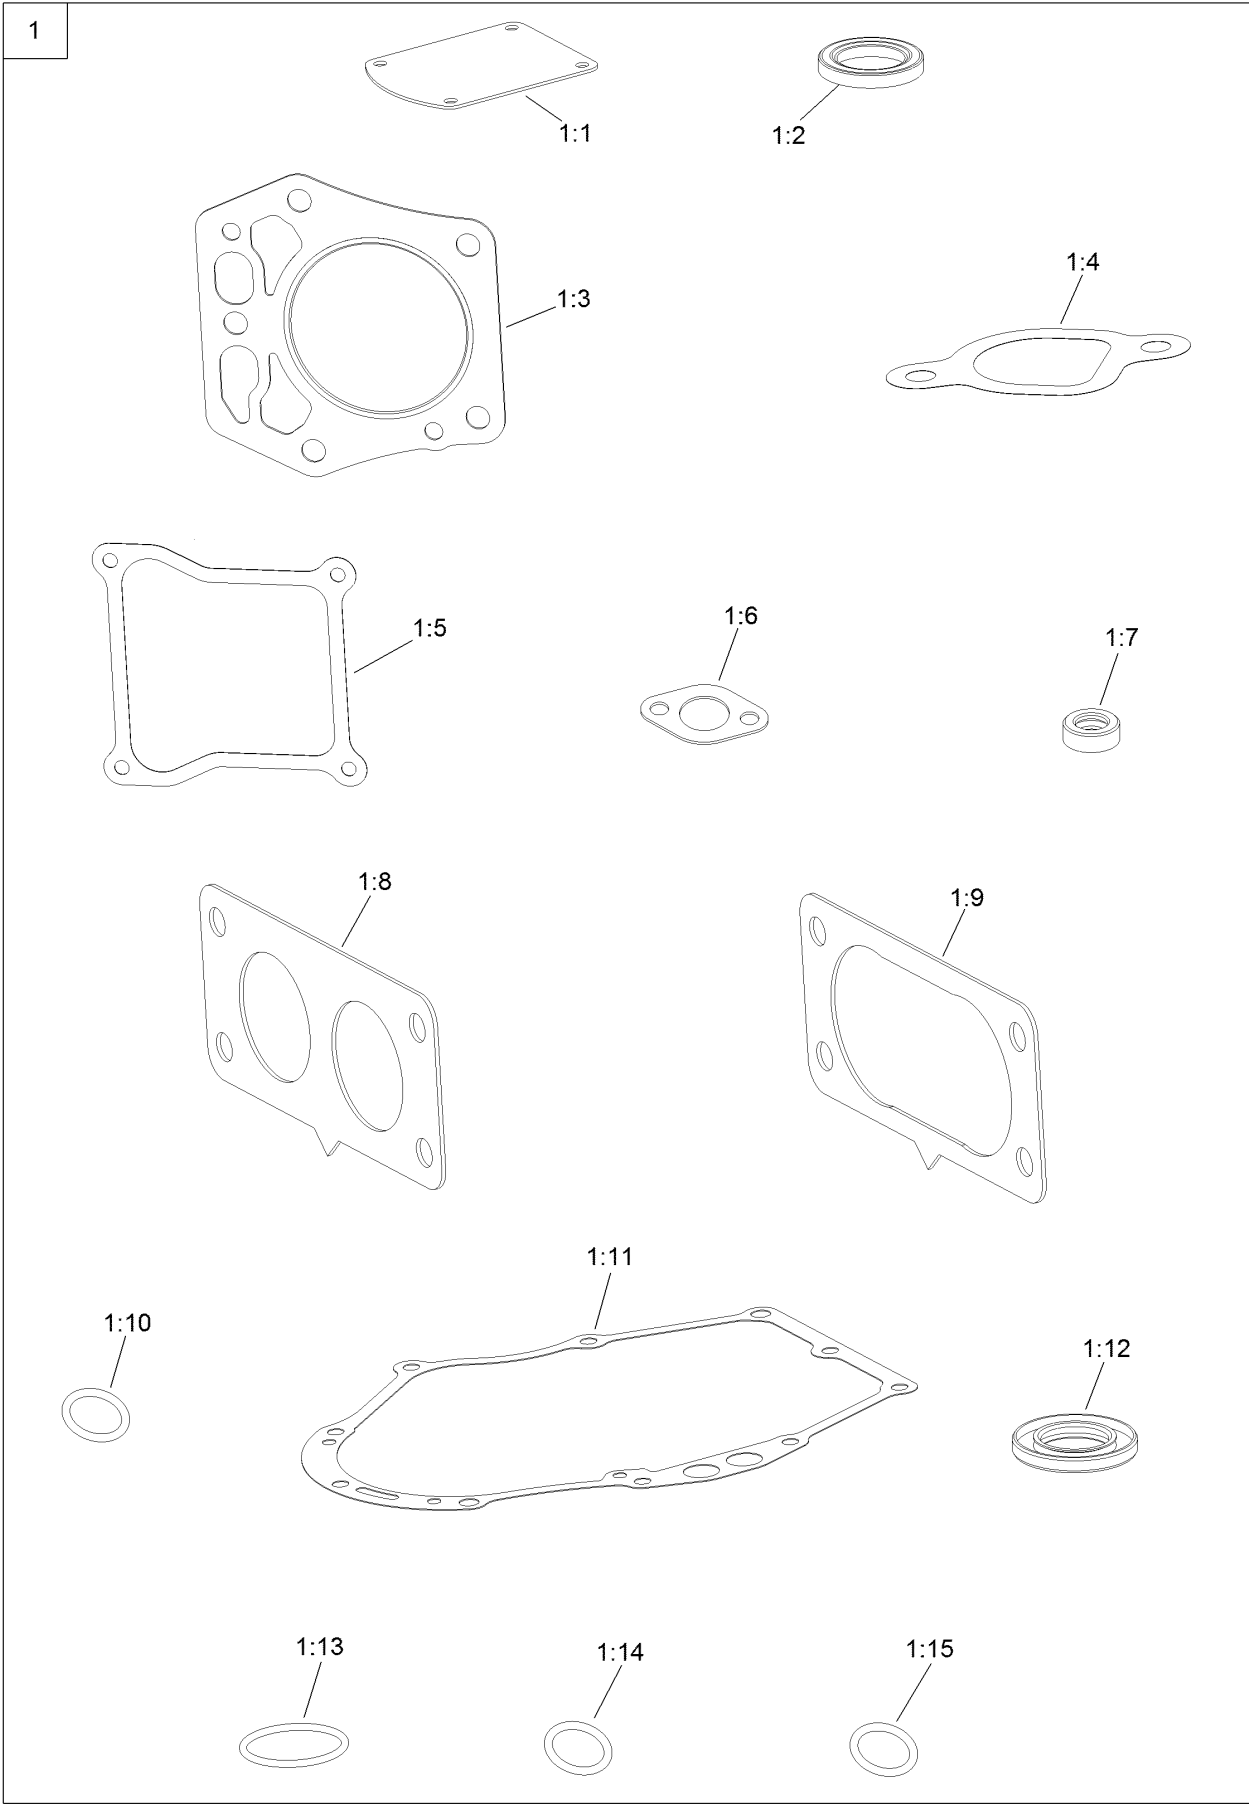

Gasket and Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9296	1	Gasket And Seal Kit	1:8	127-9246	2	Gasket-Carburetor
1:1	127-9214	1	Gasket-Breather	1:9	127-9251	1	Gasket-Carburetor
1:2	120-4267	1	Seal-Oil	1:10	120-4262	2	O-Ring
1:3	127-9226	2	Gasket-Head, Cylinder	1:11	127-9267	1	Gasket-Cover, Crankcase
1:4	127-9230	2	Gasket-Intake	1:12	127-9271	1	Seal
1:5	127-9295	2	Gasket-Valve Cover	1:13	127-9273	1	O-Ring
1:6	120-4317	2	Gasket-Exhaust	1:14	127-9284	1	O-Ring
1:7	120-4257	1	Seal-Oil	1:15	127-9286	1	O-Ring

 Body Styling and Fuel Tank Assembly

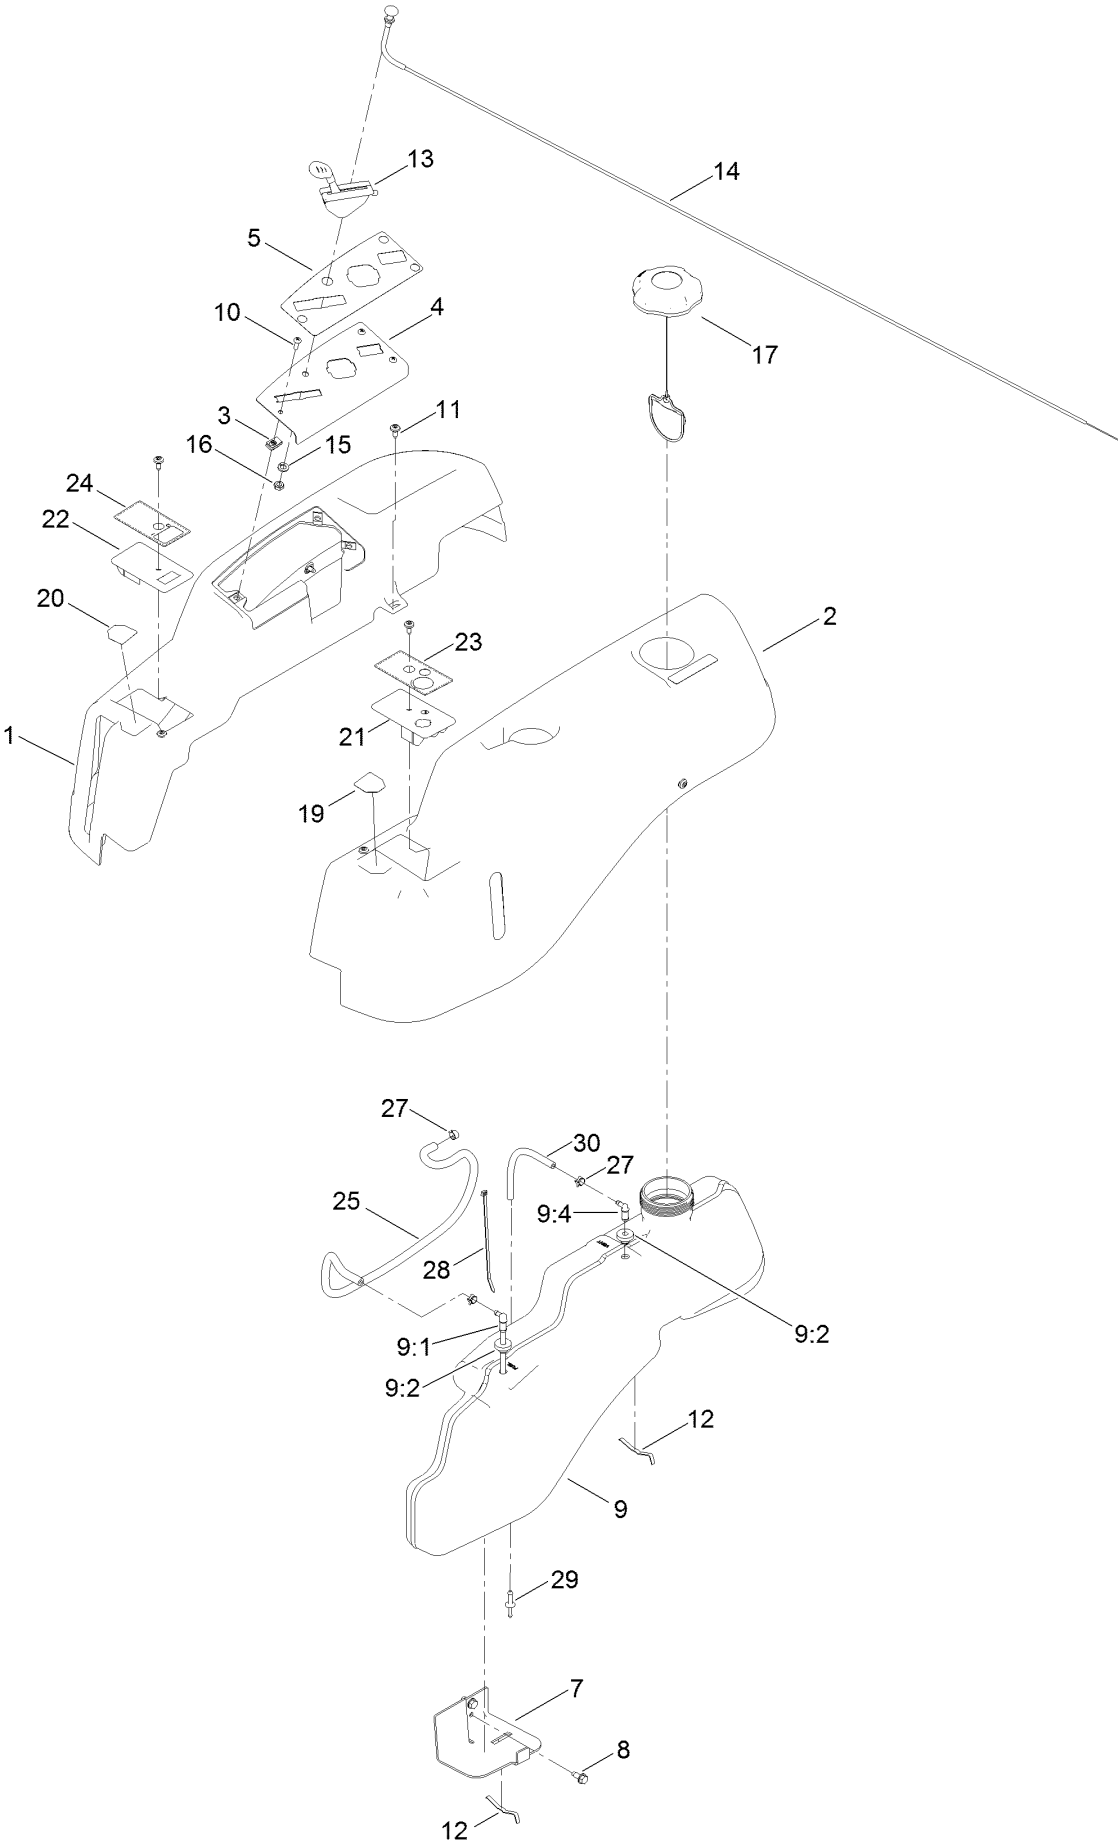


Body Styling and Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-3335	1	Pod-RH	14	112-9753	1	Cable-Choke
2	137-7008	1	Pod-LH	15	3253-21	1	Washer-Lock
3	107069	3	Clip	16	3220-3	1	Nut-HJ
4	119-3378-03	1	Plate-Control	17	137-4119	1	Cap-Fuel, Ratcheting
5	121-0772	1	Decal-Panel, Control	19	131-3621	1	Decal-Nmir
7	119-3476-03	1	Support-Tank, Front	20	131-3620	1	Decal-Control, Pedal
8	32144-70	4	Screw-HWHTF	21	130-7042	1	Cover-LH
9	119-3324	1	Fuel Tank ASM	22	130-7041	1	Cover-RH
9:1	121-0793	1	Connector-Elbow, 90 DEG	23	131-3665	1	Decal-Keychoice
9:2	46-6560	2	Bushing	24	131-3955	1	Decal-Brake, Parking
9:4	117-7400	1	Fitting-Plastic	25	109-0281	1	Hose-Fuel
10	3258-166	3	Screw-PRH	27	2412-98	3	Clamp-Hose
11	120-7950	8	Screw-Torx	28	614249	1	Tie-Cable ●
12	609830	2	Spring	29	117-5399	1	Adaptor-Orifice
13	121-0769	1	Cable-Throttle	30	110-1876	1	Hose-Fuel

● Not illustrated

 Battery and Electrical Assembly

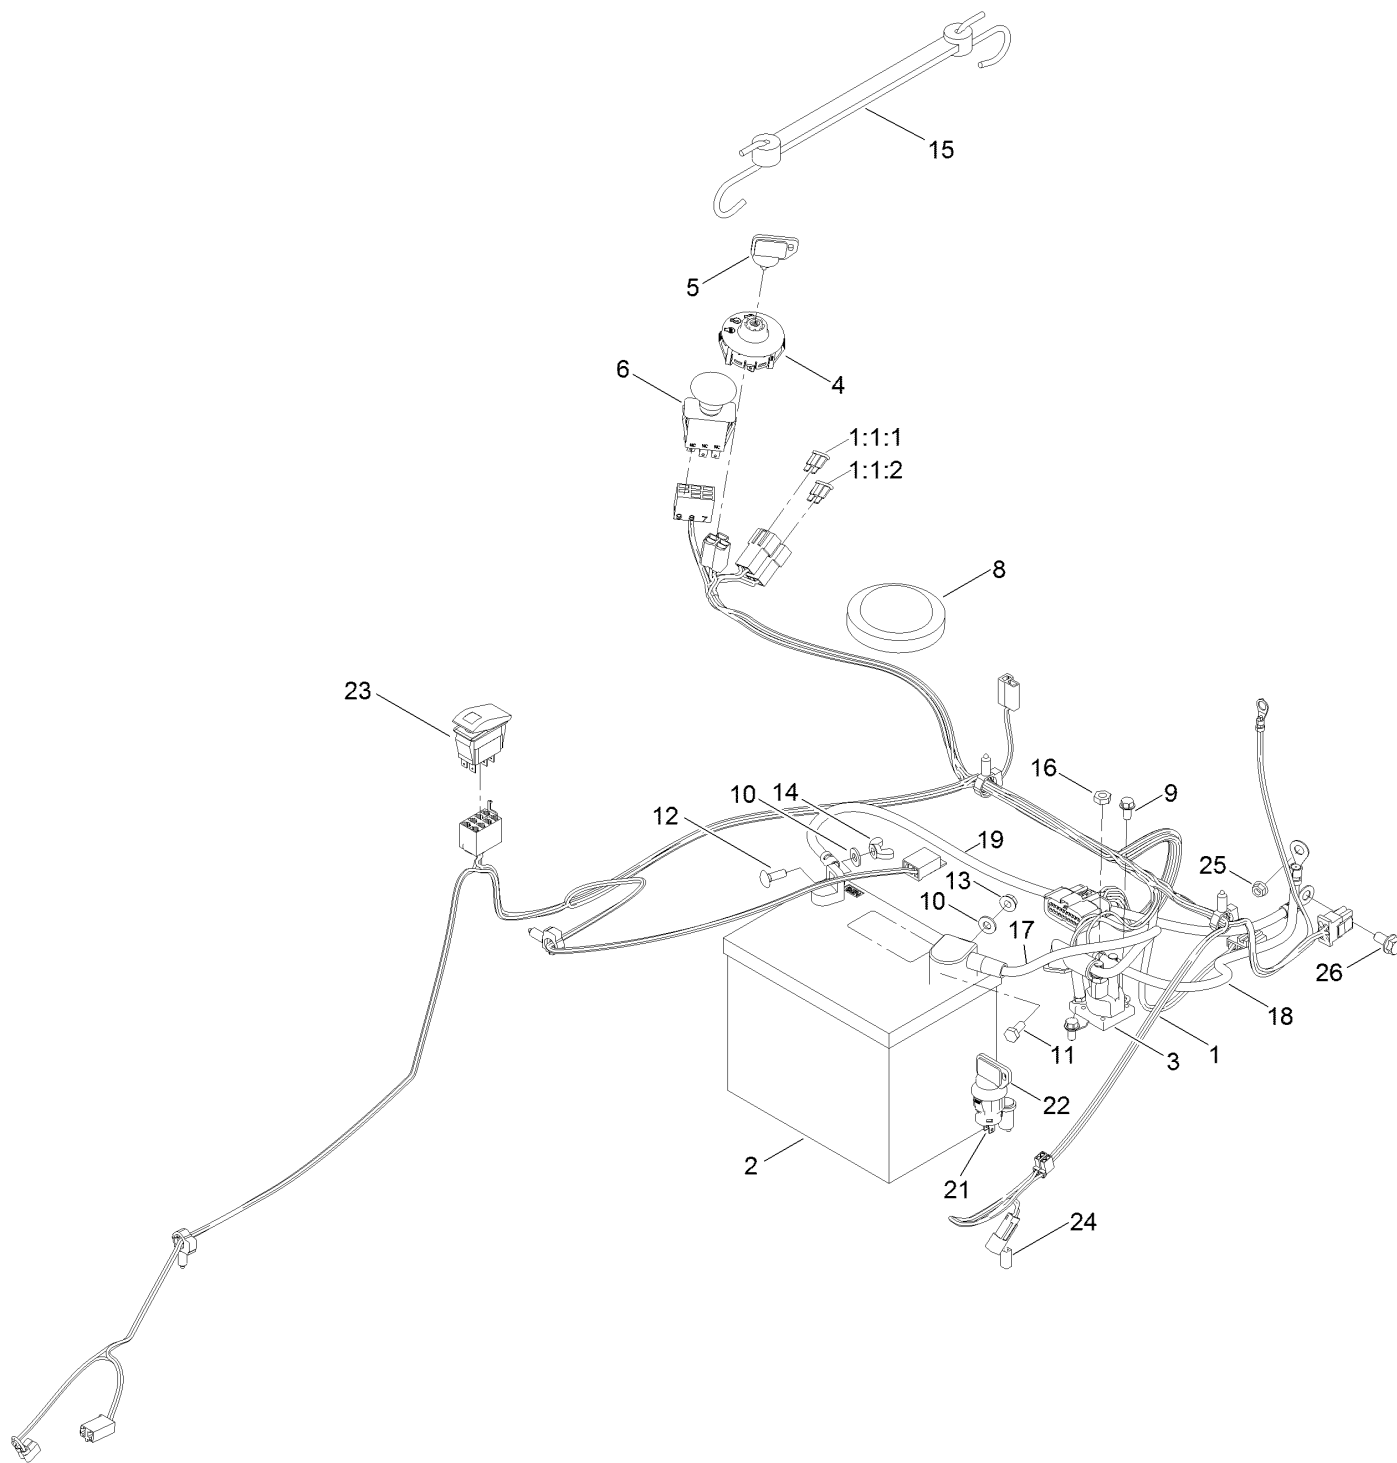


Battery and Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-7483	1	Harness-Wire	13	32128-33	1	Nut-HF
1:1		1	Harness-Wire ●■	14	32103-22	1	Nut-Wing
1:1:1	109103	1	Fuse-Blade, 30 Amp	15	104-2466	1	Holddown-Battery
1:1:2	109102	1	Fuse-Blade, 25 Amp	16	3220-2	2	Nut-Jam
2	105-1692	1	Battery- Dry, 12V, 230 CCA	17	119-8897	1	Cable-Battery, Red
3	117-1197	1	Solenoid	18	121-0711	1	Cable-Battery, Positive
4	137-4100	1	Switch-Ignition	19	119-8899	1	Cable-Battery, Black
5	63-8360	1	Key-Ignition	21	119-3068	1	Switch-Momentary, N.O.
6	114-0279	1	Switch-PTO, On-On	22	131-3639	1	Key-Toro
8	100-3524	1	Switch-Seat	23	132-9302	1	Switch-Rocker, (On)-Off-(On)
9	32144-4	2	Screw-HWH	24	131-4136	1	Light-Indicator
10	3256-22	2	Washer-Flat	25	33003-00	1	Nut-HF
11	321-3	1	Screw-HH	26	3234-14	1	Screw-HHF
12	3229-1	1	Screw-CARR				

● Not illustrated

■ Not serviced separately

 
42 Inch Deck Assembly

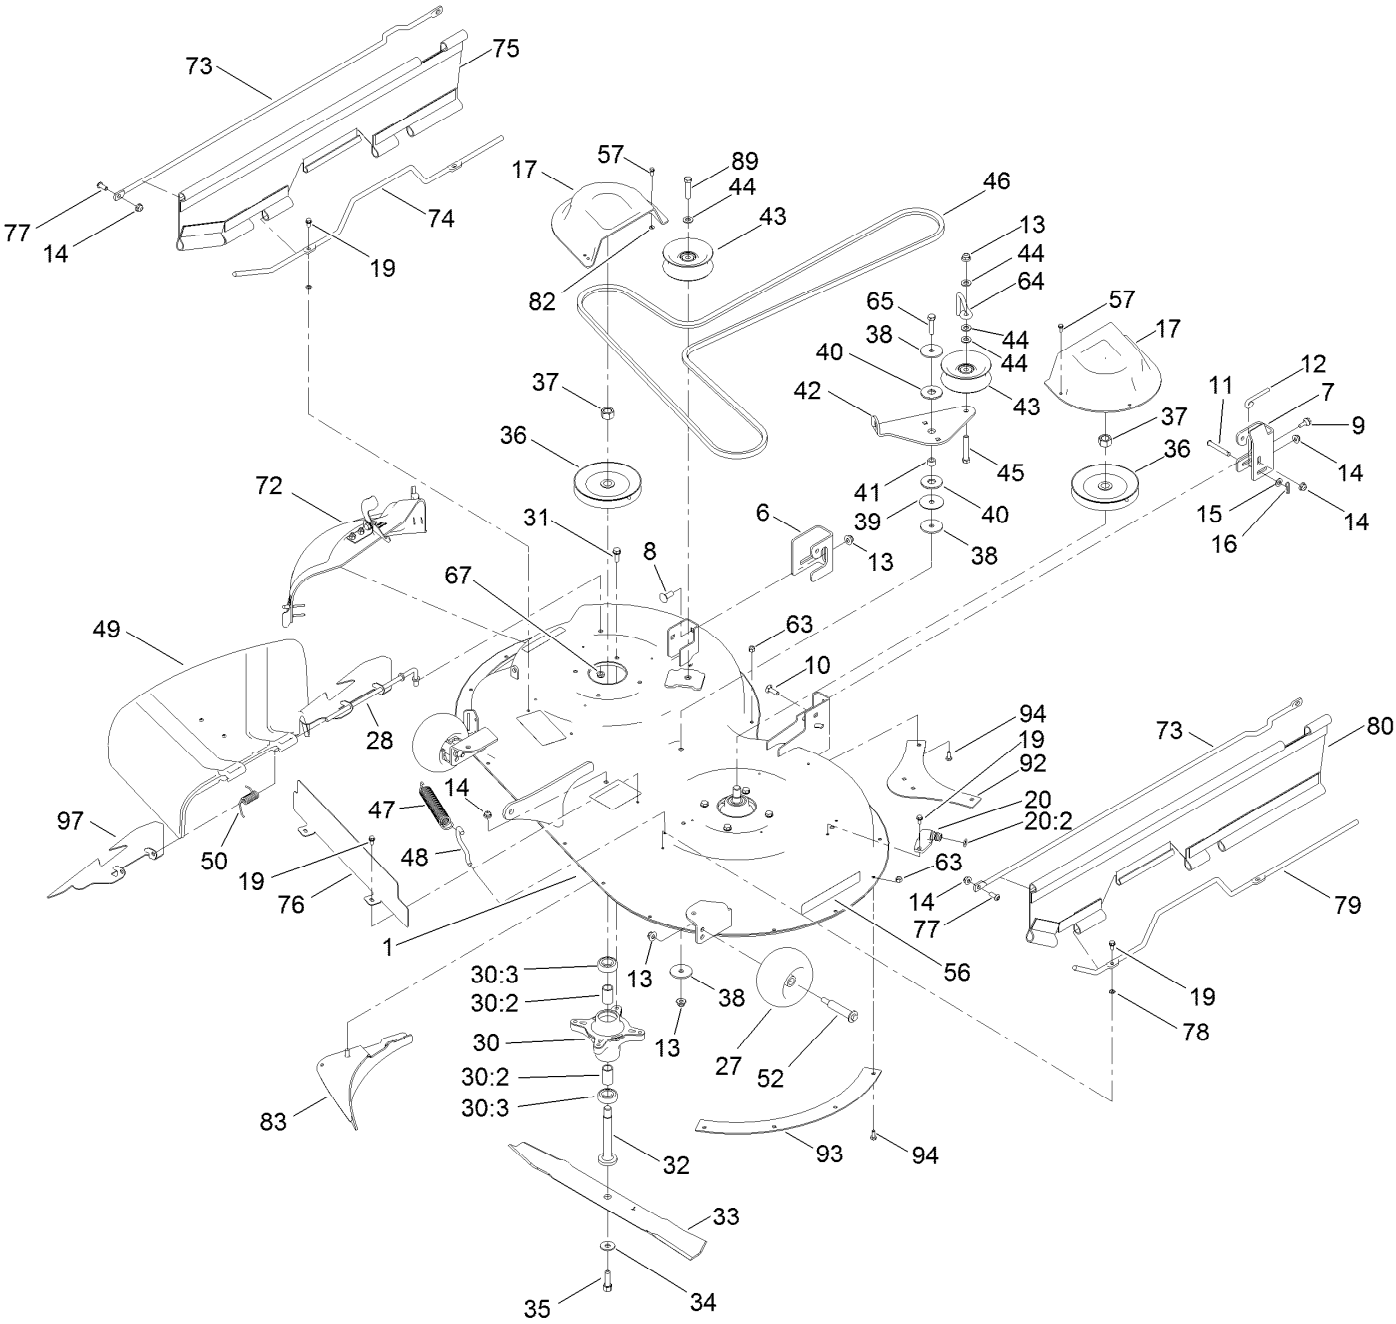

42 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-7041	1	42 Inch Deck And Decal ASM	42	114-8540	1	Arm-Idler
6	131-4138	1	Bracket-Hanger, RH	43	132-9420	2	Pulley-Idler, Flat
7	131-1091	1	Bracket-Hanger, LH	44	3256-24	4	Washer-Plain
8	3231-2	2	Bolt-CARR	45	323-11	1	Screw-HH
9	120-7024	1	Screw-Shoulder, HWH	46	119-8819	1	V-Belt
10	3230-22	1	Screw-CARR	47	106-2177	1	Spring-Extension
11	110-0618	1	Pin-Clevis	48	88-5970	1	Hook-Return, Spring
12	131-0955	1	Rod-Level, Deck	49	137-7046	1	Deflector
13	104-8301	6	Nut-HF, NI	50	110-6694	1	Spring-Torsion
14	104-8300	6	Nut-HF, NI	52	112-3977	2	Bolt-Shoulder
15	3256-23	1	Washer-Plain	56	119-2368	1	Decal-Recycler
16	1-806003	1	Pin-Cotter	57	32144-1	6	Screw-Taptite
17	108-7889	2	Cover-Belt	63	3296-42	9	Nut-Lock, NI
19	32144-4	8	Screw-HWH	64	107-7307	1	Guide-Idler, Belt
20	133-9289	1	Fitting-Washout	65	323-8	1	Screw-HH
20:2	133-9290	1	O-Ring	67	3296-59	1	Nut-Lock, NI
27	1-603299	2	Roller-Scalp, Anti	72	137-5034	1	42 Inch Mulch Plug ASM
28	137-2019	1	Rod-Pivot	73	131-3669	2	Rod-Support, Upper
30	121-0751	2	Spindle ASM	74	137-5020	1	Rod-Support, Lower (RH)
30:2	120-7935	2	Spacer	75	137-5026	1	Right Guard ASM
30:3	136-5441	2	Bearing-Ball	76	137-2039-03	1	Shield-Front
31	32144-41	8	Screw-Taptite	77	3274-55	4	Screw-HSBH
32	117-7268	2	Shaft-Spindle	78	1-803037	4	Nut-Retaining
33	117-5376-03	2	Blade-Mulch	79	137-5019	1	Rod-Support, Lower (LH)
34	3290-465	2	Washer-Belleville	80	137-5025	1	Left Guard ASM
35	26-0671	2	Screw-HH	82	132-0900	6	Nut-Retaining
36	125-5574	2	Pulley	83	137-7034-03	1	Baffle-Clipping
37	3219-6	2	Nut-Hex	89	323-9	1	Screw-HH
38	63-7400	3	Washer-Rebound	92	137-2036-03	1	Baffle-Blowout, Rear
39	120-2229	1	Washer	93	137-2037-03	1	Baffle-Blowout, Side
40	114-0463	2	Washer-Friction, Composite	94	321-3	8	Screw-HH
41	115-4986	1	Spacer	97	138-2555-03	1	Deflector Insert

 
42 Inch Deck Decal Assembly No. 137-7041

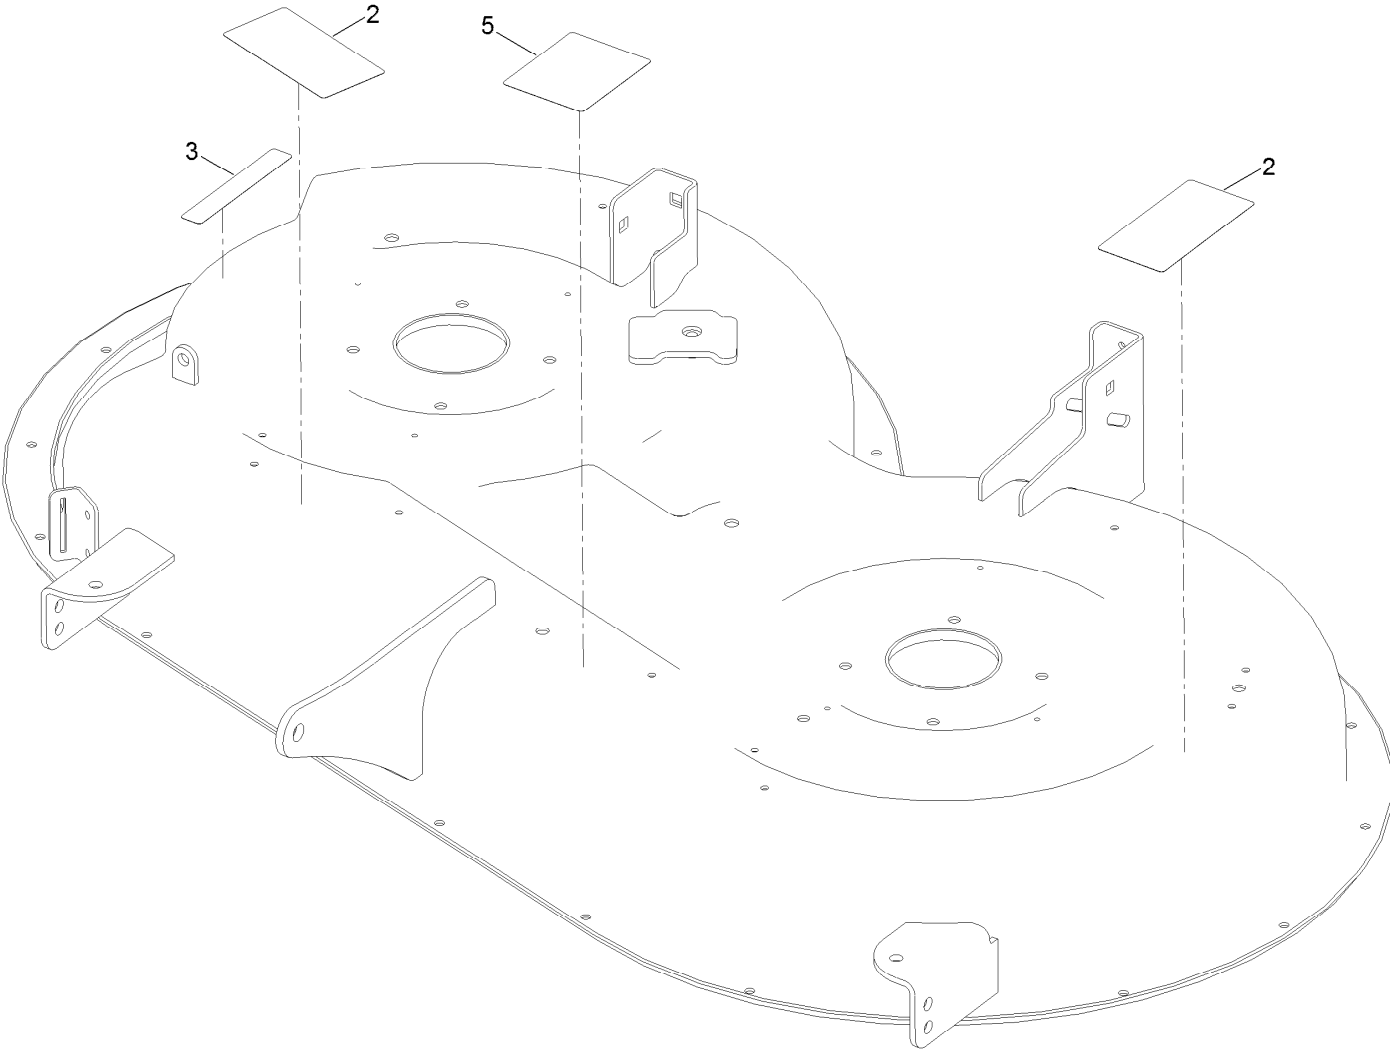

42 Inch Deck Decal Assembly No. 137-7041 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	132-0872	2	Decal-Danger, Deck
3	93-7009	1	Decal-Danger
5	105-7015	1	Decal-Routing, Belt

 
Mulch Plug Assembly No. 137-5034

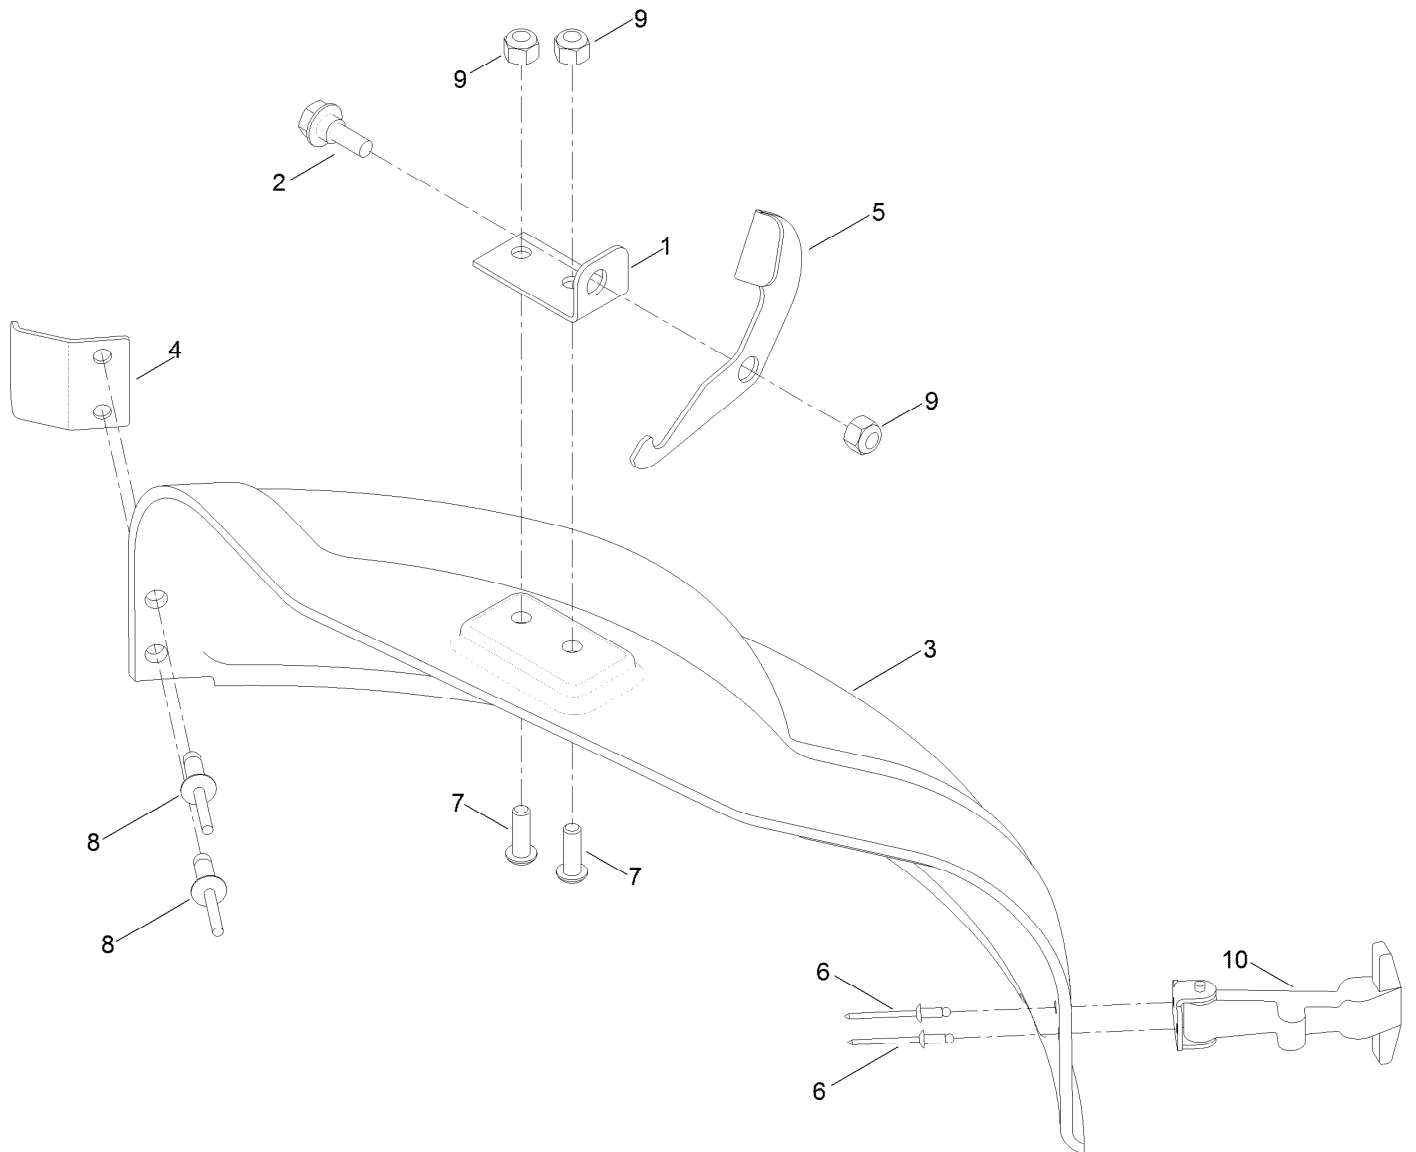

Mulch Plug Assembly No. 137-5034 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-4038	1	Plate-Pivot	6	3269-31	2	Rivet-Pop
2	120-7024	1	Screw-Shoulder, HWH	7	3274-69	2	Screw-HSBH
3	137-2009	1	Plug-Mulch, 42 Inch	8	3290-412	2	Rivet-Blind
4	137-2023	1	Bracket-Elbow	9	3296-42	3	Nut-Lock, NI
5	137-2024	1	Latch	10	117344	1	Handle ASM

 Model Specific Decal Assembly

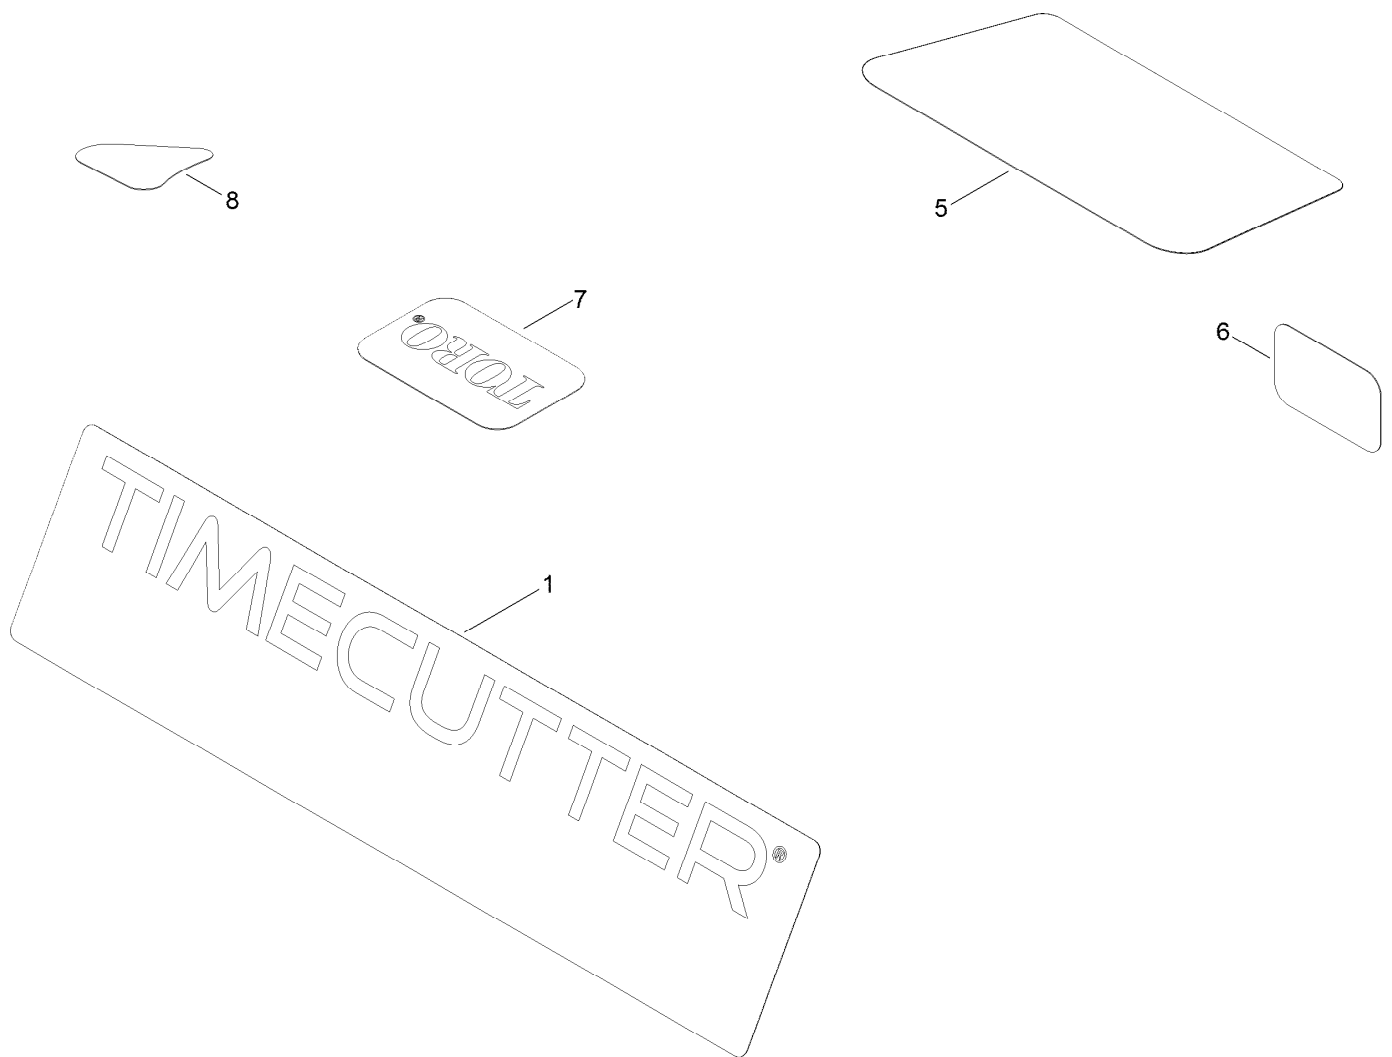


Model Specific Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-3657	1	Decal-Timecutter
5	136-5597	1	Decal-Engine
6	127-9076	1	Placard-Intake

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	131-4157	1	Decal
8	131-1097	1	Decal-Drain, Oil


 
Steering Assembly

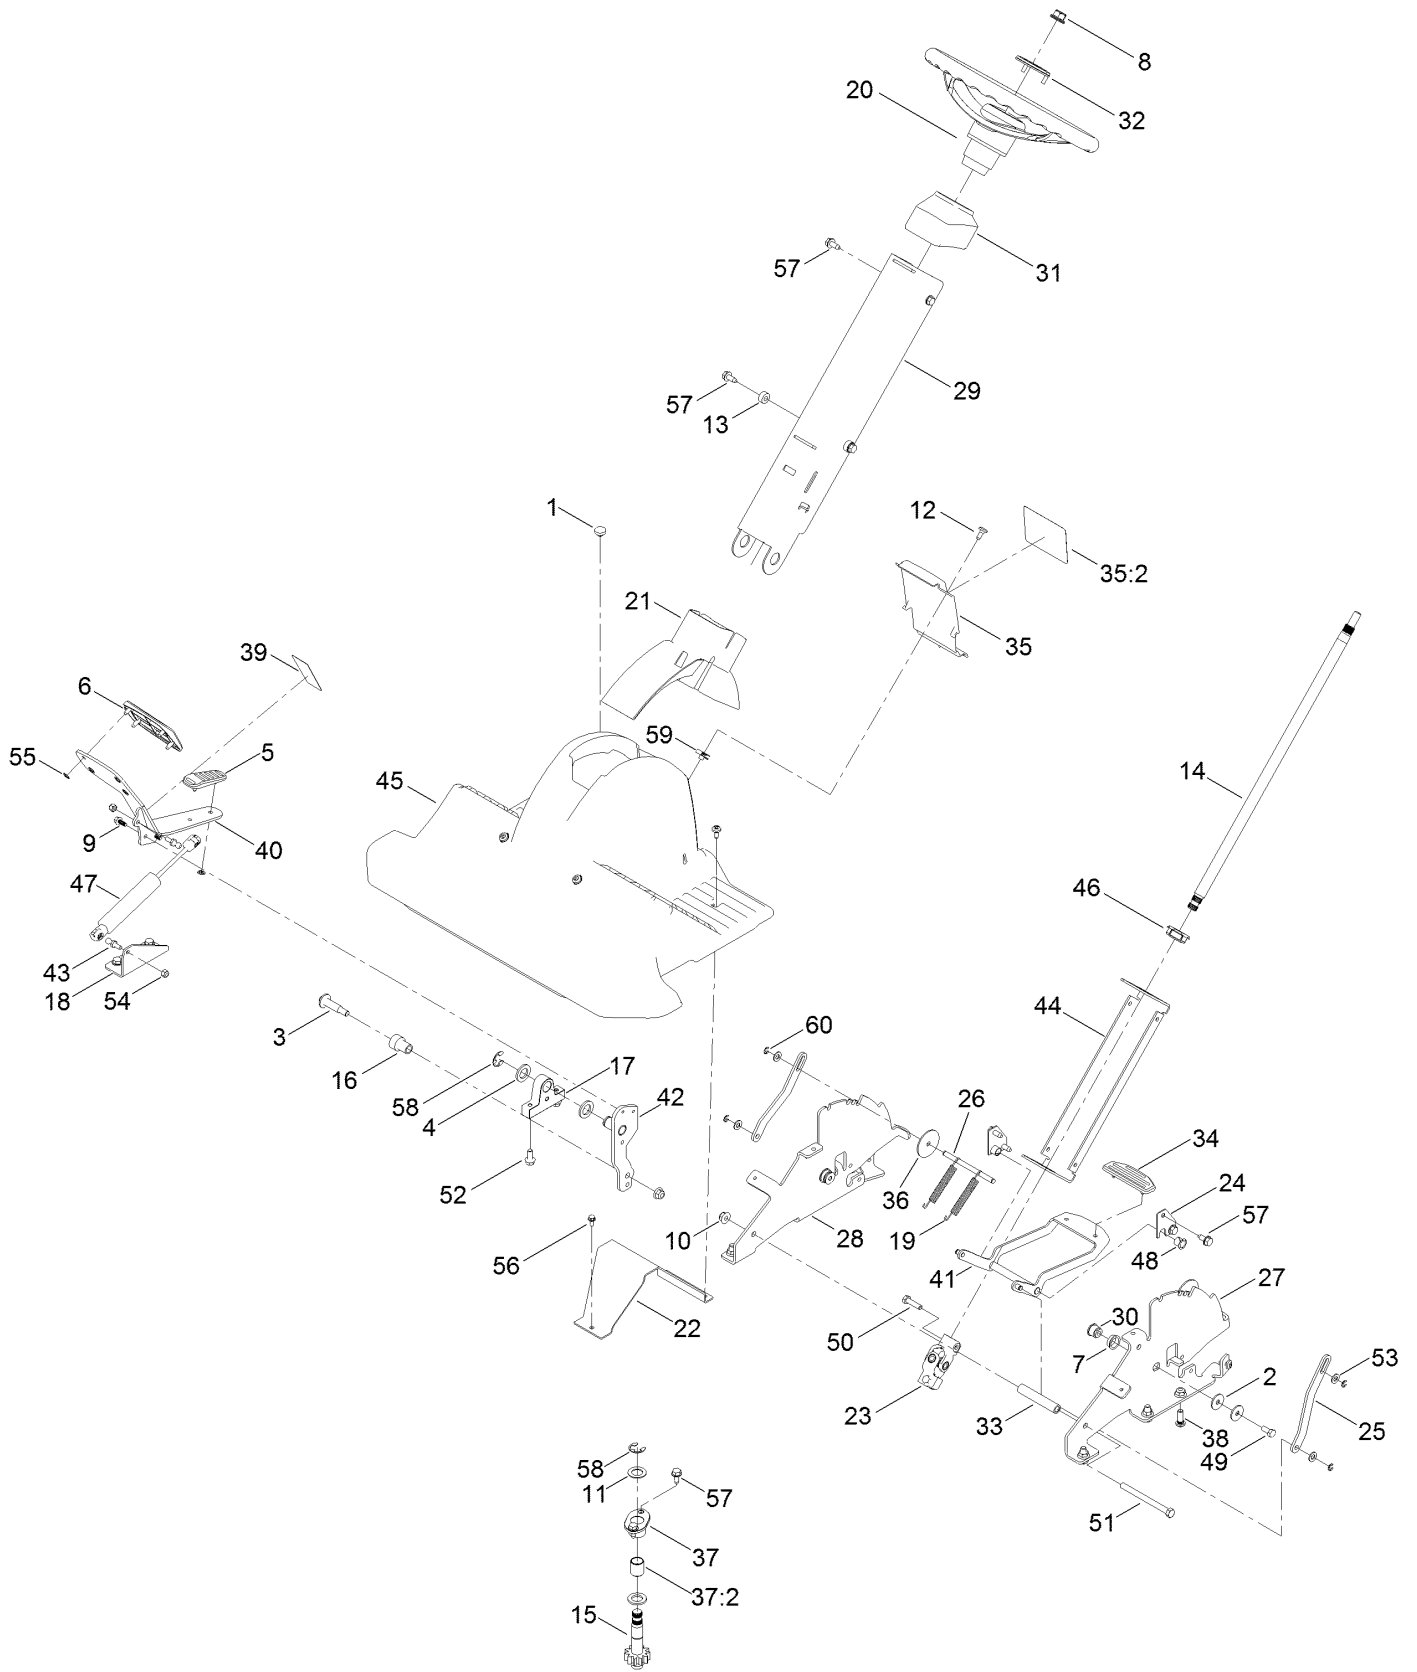

Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-513658	1	Bumper	32	131-3630	1	Cap-Wheel, Steering
2	5-4460	5	Washer-Pivot	33	131-3697	1	Spacer
3	136-7198	1	Bolt-Shoulder	34	131-4096	1	Pad-Tilt Pedal
4	70-1160	3	Washer	35	131-4099	1	Rear Cover And Decal ASM
5	98-9039	1	Pad-Heel, Hydro Pedal	35:2	132-0870	1	Decal-Danger
6	98-9040	1	Pad-Toe, Hydro Pedal	36	131-8729	2	Washer-Shaft, Tilt
7	99-4243	2	Bushing-Flange	37	131-8733	1	Flange Bearing ASM
8	99-5107	2	Nut-Lock	37:2	115-7019	1	Bushing-Straight
9	99-6810	2	Screw-HHF	38	132-0921	6	Stud-Push-In
10	104-8301	8	Nut-HF, NI	39	132-6863	1	Decal-Release, Break
11	119-7640	1	Washer-Thrust	40	132-6865-01	1	Pedal-Traction
12	120-7950	9	Screw-Torx	41	132-6868	1	Release Pedal ASM
13	121-1759	2	Spacer	42	132-6907	1	Pivot Lever ASM
14	125-5507	1	Shaft-Steering, Upper	43	132-6917	2	Ball Stud
15	125-5508	1	Lower Steering Shaft ASM	44	132-9315-01	1	Column-Back
16	127-3397	1	Roller	45	133-1152	1	Shroud-Styling, Front
17	130-6887	1	Mount-Pedal Pivot	46	133-1160	1	Bearing-Spherical
18	130-6910-03	1	Bracket-Damper	47	133-1171	1	Damper-Non Cavitating
19	130-6998	2	Spring-Extension	48	256-257	2	Bushing-Nyliner
20	131-0957	1	Wheel-Steering	49	322-3	2	Screw-HH
21	131-1028	1	Cover-Pivot, Column	50	322-6	2	Screw-HH
22	131-1029-03	1	Support-Footrest	51	323-23	1	Screw-HH
23	131-1030	1	U-Joint ASM	52	3234-47	2	Screw-HHF
24	131-1043	2	Plate-Retainer	53	3256-23	4	Washer-Plain
25	131-1049	2	Plate-Plunger	54	3296-42	2	Nut-Lock, NI
26	131-1050	1	Rod-Plunger	55	32112-6	8	Nut-Push
27	131-1052-03	1	Bracket-Pivot, Column (LH)	56	32144-4	3	Screw-HWH
28	131-1053-03	1	Bracket-Pivot, Column (RH)	57	32144-70	12	Screw-HWHTF
29	131-1054-01	1	Column-Front	58	32151-48	2	E-Ring
30	131-1056	2	Spacer-Pivot, Column	59	107069	2	Clip
31	131-1066	1	Cap-Column	60	701197	4	E-Ring

  
HOC and Service Decal Assembly

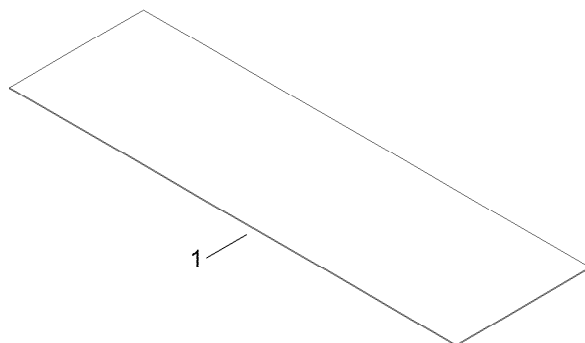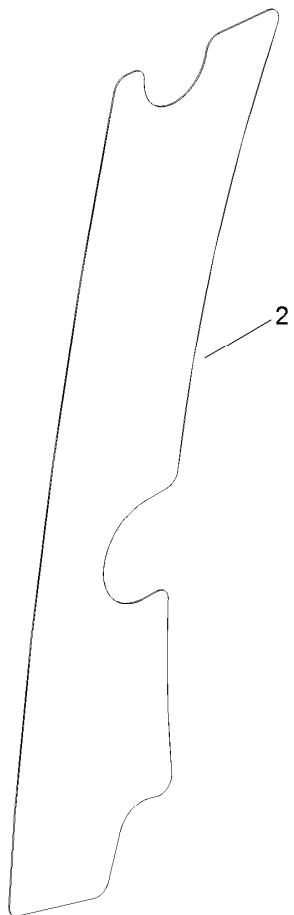

HOC and Service Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-8717	1	Decal-Service, CE
2	120-5469	1	Decal-HOC, CE

 
Clutch Assembly

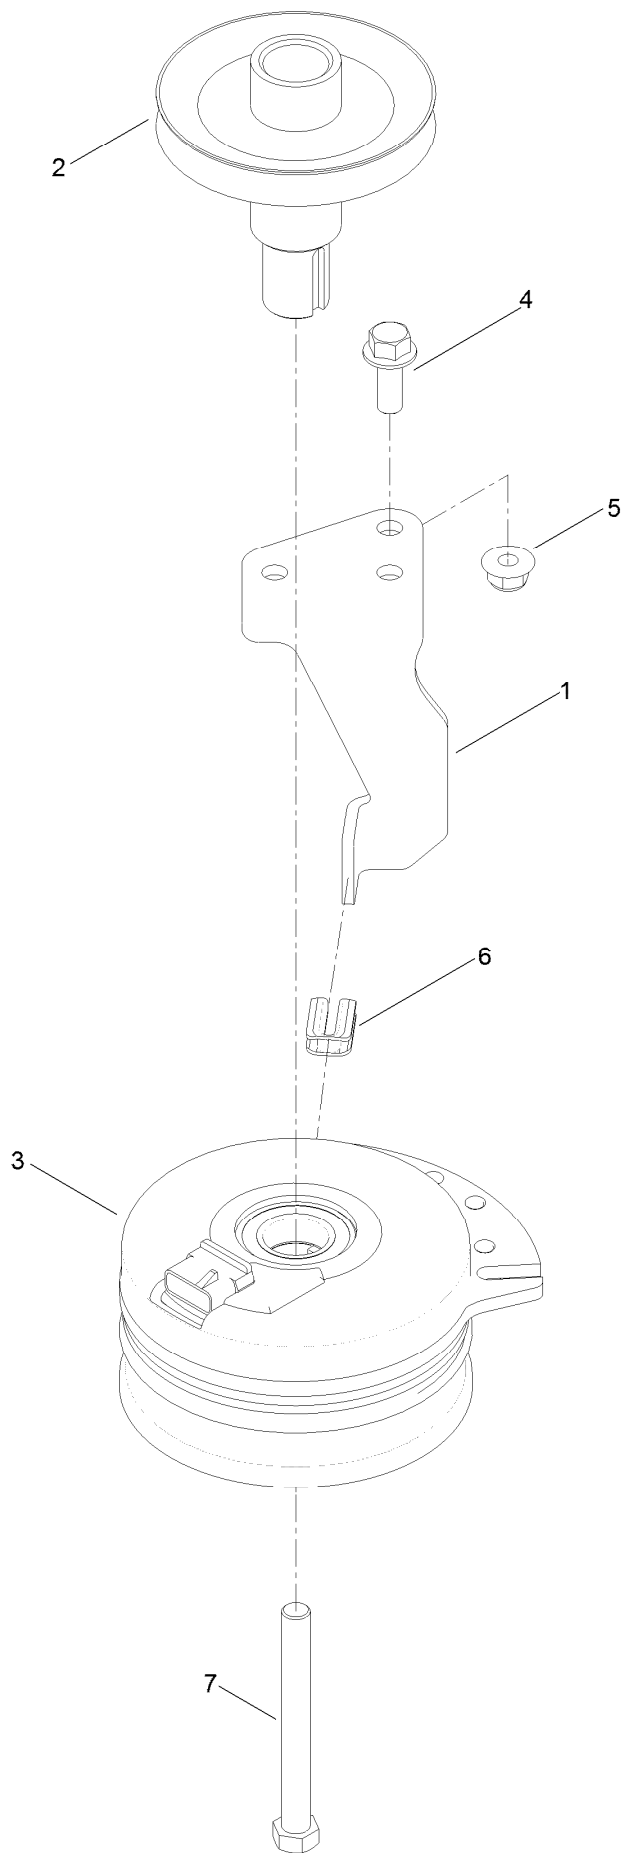

Clutch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-8884	1	Stop-Clutch (Narrow)	5	104-8301	1	Nut-HF, NI
2	130-6854	1	Pulley-Engine	6	120-2217	1	Isolator-Clutch
3	117-7468	1	Clutch-Electric	7	3212-16	1	Screw-HH
4	3234-42	1	Screw-HHF				

 Steering Gear and Cable Assembly

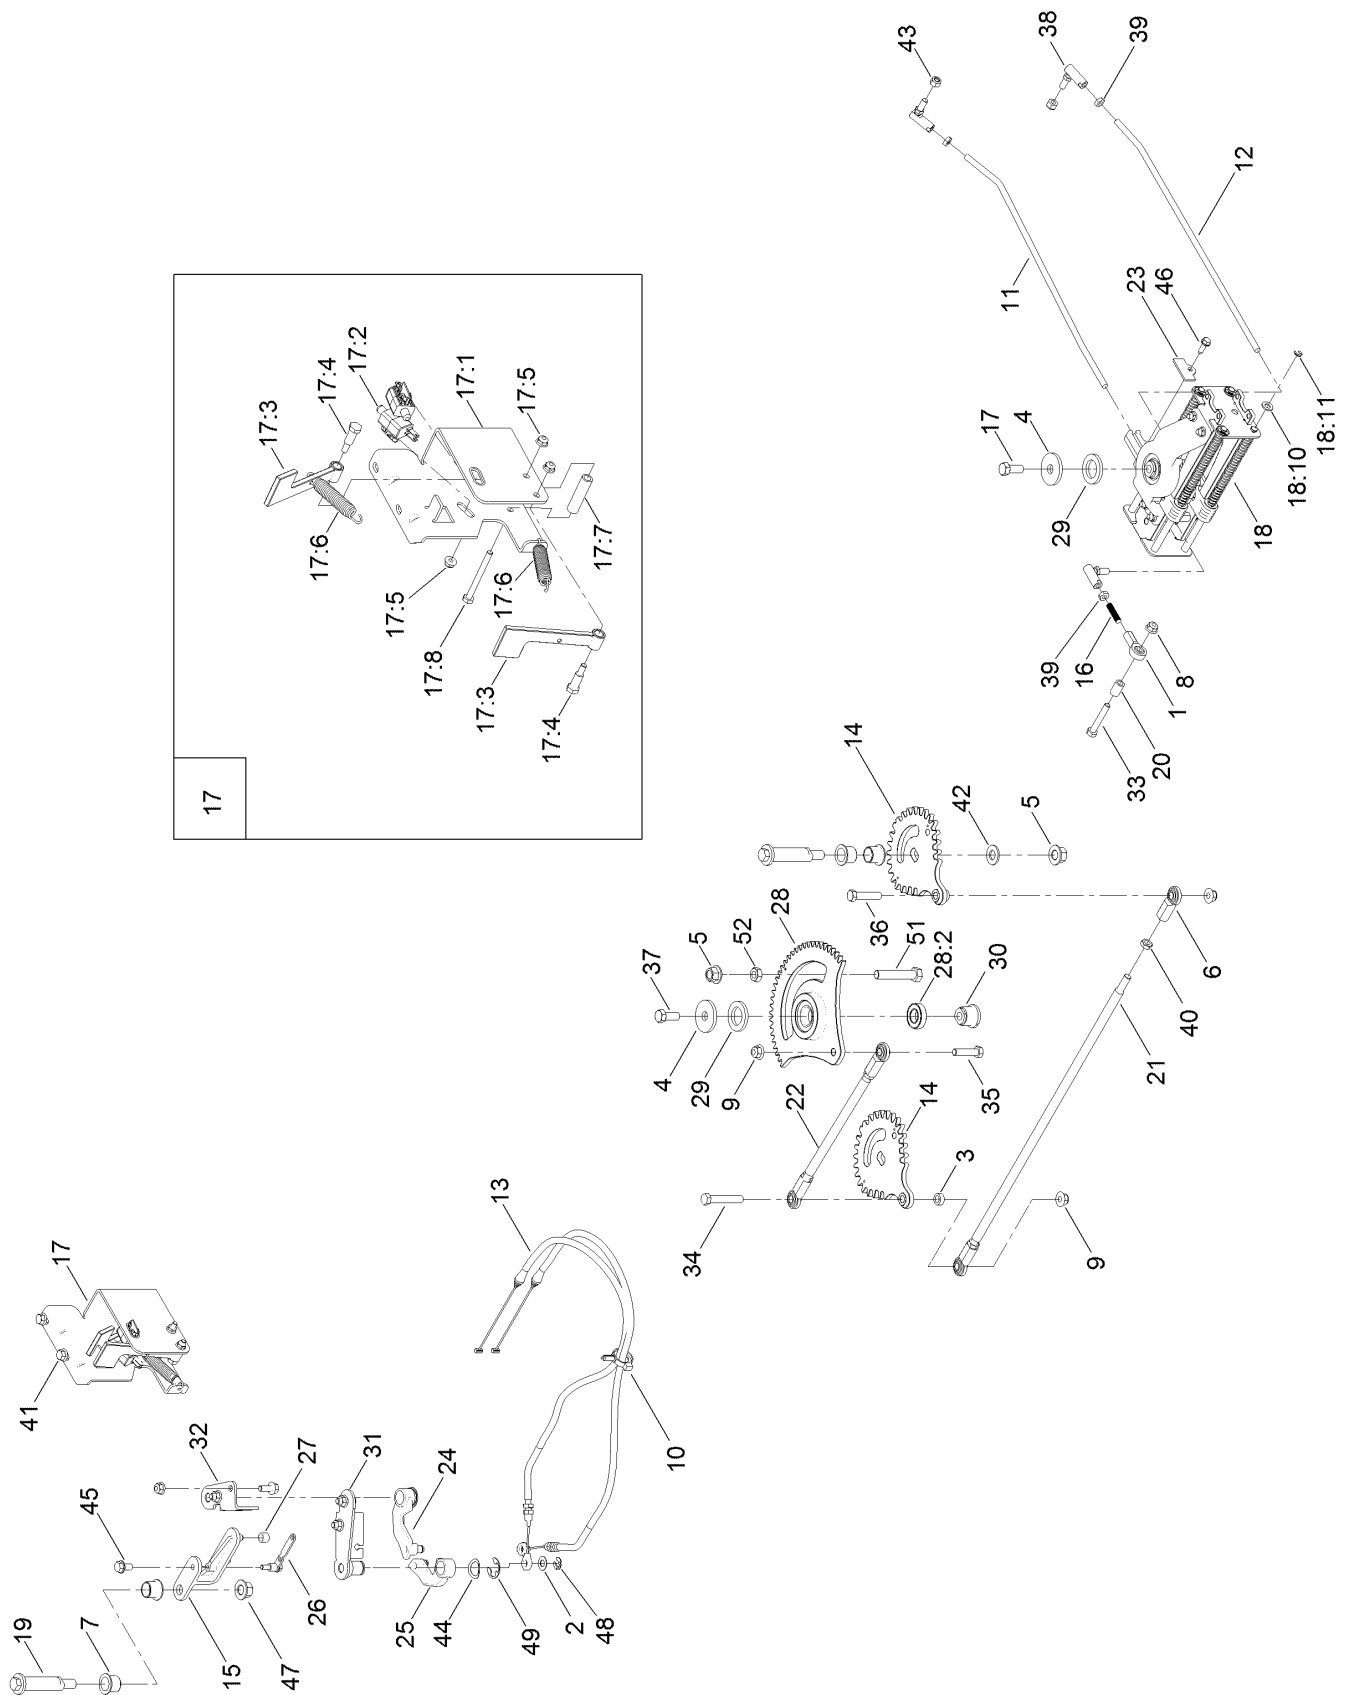

Steering Gear and Cable Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-543017	1	Balljoint-RH	22	131-1036	1	Rod-Steering, Narrow
2	37-8080	2	Washer-Thrust	23	131-1041	2	Cover-End Rod
3	83-1050	3	Spacer	24	131-3623	1	Arm-Cable, RH
4	84-1560	2	Washer-Thrust	25	131-3647	1	Arm-Cable, LH
5	99-5107	3	Nut-Lock	26	131-3950	1	Strap-Roller
6	103-0608	4	Joint-Ball, End	27	131-3951	2	Bushing
7	103-4398	4	Bearing-Flange, Iglide	28	131-8731	1	Sector Gear ASM
8	104-8300	7	Nut-HF, NI	28:2	109-3678	1	Bearing-Ball
9	104-8301	3	Nut-HF, NI	29	131-8736	2	Spacer-Bearing
10	105-1853	1	Clamp-Hose	30	131-8737	1	Pivot-Bearing
11	127-0115	1	Rod-Hydro, RH	31	132-6943	1	Cable Bracket ASM
12	127-0116	1	Rod-Hydro, LH	32	132-6944	1	Cable Bracket ASM
13	127-0118	2	Cable-Steering	33	322-10	1	Screw-HH
14	130-0830	2	Gear-Wheel, 30 Tooth	34	323-11	1	Screw-HH
15	130-6878	1	Lever-Cable	35	323-8	1	Screw-HH
16	130-6906	1	Rod-Threaded	36	323-9	1	Screw-HH
17	131-0903	1	Neutral Return ASM	37	324-4	2	Screw-HH
17:1	132-0909-03	1	Bracket-Switch	38	2411-33	3	Balljoint-RH (W/Grommet)
17:2	110-6765	2	Switch	39	3220-2	8	Nut-Jam
17:3	130-0782	2	Arm-Switch	40	3220-3	4	Nut-HJ
17:4	119-2309	2	Bolt-Shoulder	41	3234-47	6	Screw-HHF
17:5	104-7201	3	Nut-HF, NI	42	3256-26	1	Washer-Flat
17:6	132-6915	2	Spring-Extension	43	3296-4	3	Nut-Lock
17:7	131-3976	1	Spacer	44	7896	2	Washer-Bowed
17:8	321-14	1	Screw-HH	45	32144-14	1	Screw-HWHTF
18	131-0904	1	Speed Control ASM	46	32144-44	2	Screw-HWH, Thread Roll
18:10	131-8667	12	Washer-Thrust	47	32144-86	1	Screw-HWHTF
18:11	32120-18	8	E-Ring	48	32151-47	2	Ring-Retaining
19	131-1031	2	Bolt-Shoulder	49	32151-48	2	E-Ring
20	131-1034	1	Spacer	51	325-11	1	Screw-HH
21	131-1035	1	Rod-Cross, Narrow	52	3218-5	1	Nut-Jam

Attachments and Accessories

For 74676 TimeCutter SW 4200 Riding Mower

Product Name	Model/Part
Arm Rest Kit.....	110-5719
Hourmeter Kit	116-5461
All Season Synthetic Oil (10W30, QT)	117-0066
Seat Cover W/O Arm Rest - TC 18in.....	117-0096
Bagging Enhancement Kit	121-5692
Striping Kit	121-5706
Jack Mount Kit	126-5251
Jack Kit	127-6666
Fuel Stabilizer .05 oz	130-2393
4-Cycle Fuel, Snow And Lawn 32oz Can	131-3823
Attachment Mount Kit	131-3966
Toro Premium Fuel Treatment 12oz Bottle.....	131-6572
Weight Kit	131-7658
Deluxe Seat Kit.....	131-7699
Toro V-Twin Engine Maintenance Kit	132-4878
Floor Mat Kit	132-6921
Maintenance Kit Toro V-Twin HD Engine	136-7847
HD Air Cleaner Kit	136-7860
Pro-Control Damper Kit	138-7588
10W30 4-Cycle Engine Oil (32oz Bottle).....	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903
Storage Cover	490-7516
Foot Assist Deck Lift Kit, 2011 and After Zero-Turn-Radius Riding Mower	79010
Sunshade Kit	79011
Blade Kit	79016P
50in Recycler Kit.....	79024
Assist Handle and Step Kit	79339
50in Bagger	79395

Notes:

Notes:

Notes:



Count on it.