



Form No. 3453-520 Rev B

Count on it.

Parts Catalog

e-Dingo 500 Compact Tool Carrier

Model No. 22219G—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly 4

Hood and Service Panel Assembly 6

Counterweights, Skid Plates and Foot Pad Assembly 8

Drivetrain Assembly 10

Drivetrain Assembly Motor/Generator Assembly 12

Drivetrain Assembly Planetary Gearbox Assembly 14

Drivetrain Assembly Brake Assembly 16

Motor/Generator and Hydraulic Pump Assembly 18

Hydraulic Pump Assembly No. 139-7665 20

Hydraulic Tank Filter and Hydraulic Bulkhead Assembly 22

Hydraulic Loader Valve Assembly 24

Hydraulic Loader Valve Assembly No. 144-2909 26

Hydraulic Loader Cylinder Assembly 28

Loader Arm Assembly 30

Quick Attach Assembly No. 132-8418 32

Battery Assembly 34

Onboard Charger Assembly 36

Inverter Assembly 38


Main Wire Harness Assembly 40

Drivetrain Electrical Connection Assembly 42

Control Panel Assembly 44

Attachments and Accessories 46


Main Frame Assembly

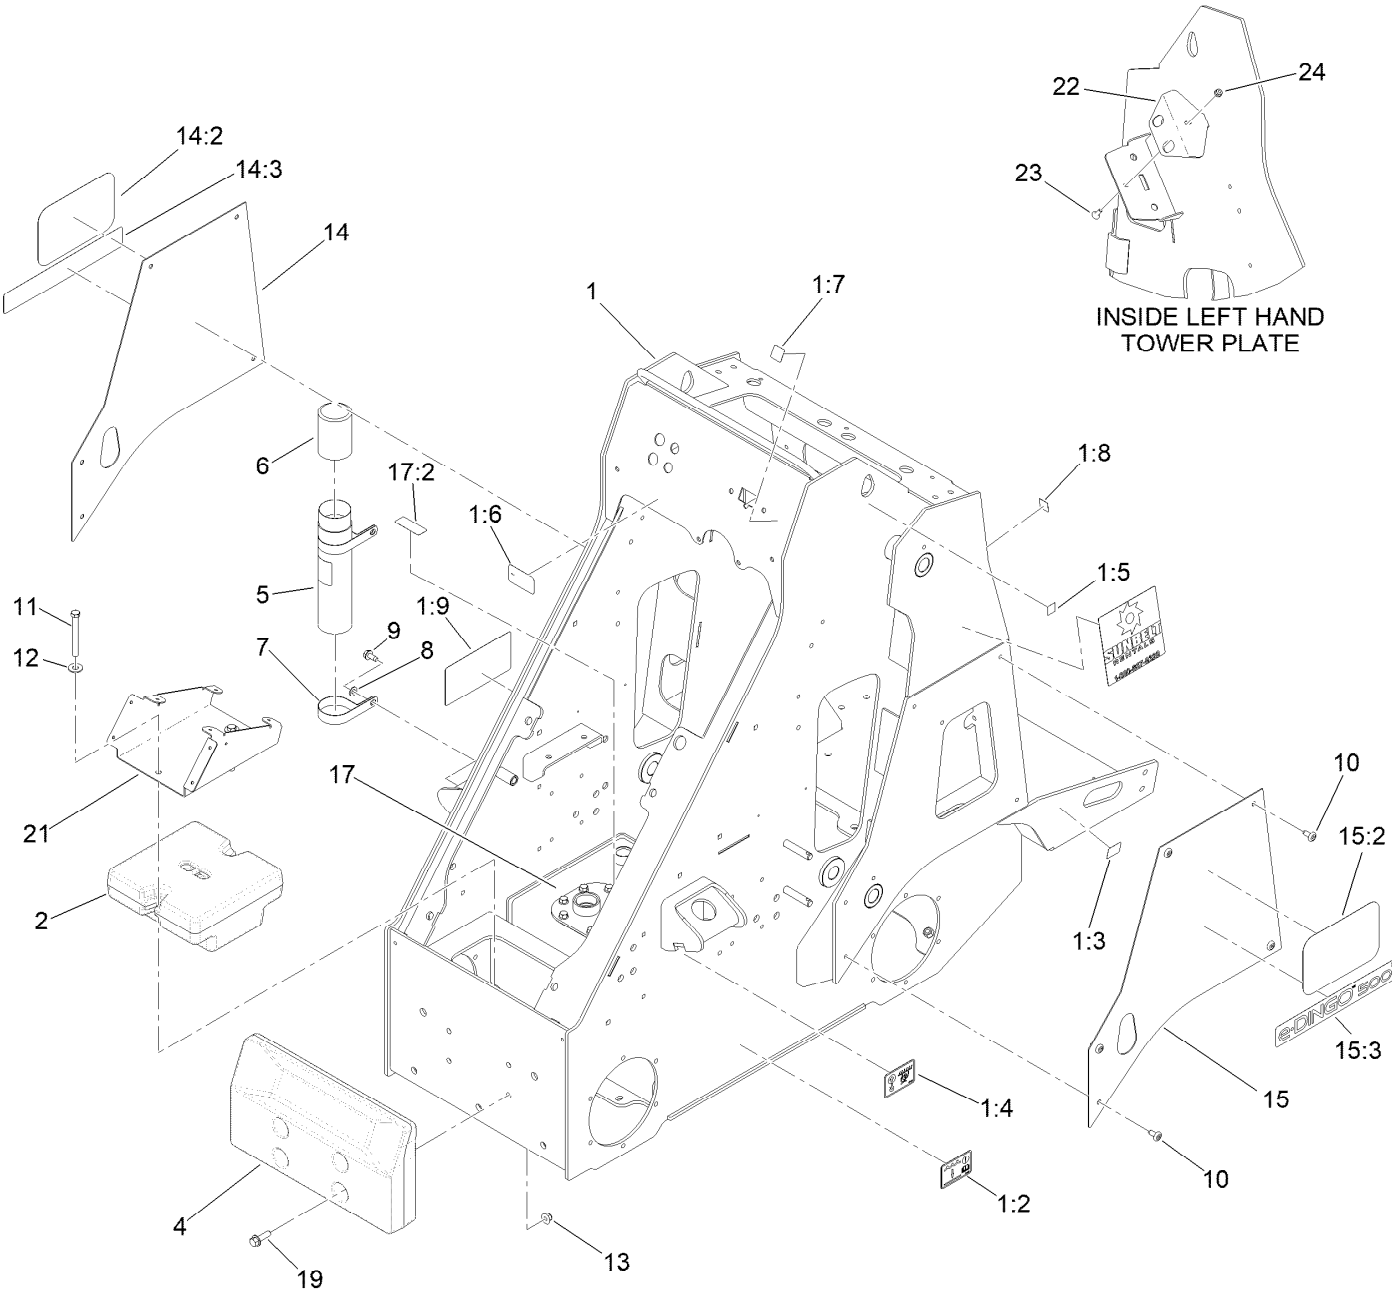

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-6010	1	Main Frame ASM [sunbelt]	11	323-15	2	Screw-HH
1:2	139-7709	2	Decal-Water Level	12	3256-4	2	Washer-Flat
1:3	132-9051	2	Decal-Tiedown	13	104-8301	4	Nut-HF, NI
1:4	125-6139	2	Decal-Lift/Tie Down	14	145-4723	1	Panel-Access, RH
1:5	93-9084	2	Decal-Point, Lift	14:2	145-1978	1	Decal-Logo, Silver
1:6	145-4779	1	Decal - Fuses	14:3	139-7658	1	Decal- E-Dingo
1:7	147-0290	1	Decal-Light, Warning	15	145-4728	1	Panel-Access, LH
1:8	125-1414	1	Decal-Ground, Earth	15:2	145-1978	1	Decal-Logo, Silver
1:9	145-4789	1	Decal - Quick Reference Aid	15:3	139-7658	1	Decal- E-Dingo
2	145-4706-0P	1	Counterweight-Front	17	145-4790	1	Plate - Cover
4	145-2399-03	1	Counterweight-Front	17:2	93-6686	1	Decal-Oil, HYD
5	104-7050	1	Tube-Manual	19	3234-24	4	Screw-HHF
6	104-7048	1	Cap-Housing	21	145-4751-03	1	Bracket-Mount, Fan
7	2412-133	2	Clamp-R	22	145-4772-07	1	Bracket-Fitting, Adjustable
8	3256-23	2	Washer-Plain	23	1-807512	1	Bolt-CARR
9	32144-70	2	Screw-HWHTF	24	119-4040	1	Nut-HF, NI
10	138-9753	10	Screw				


Hood and Service Panel Assembly

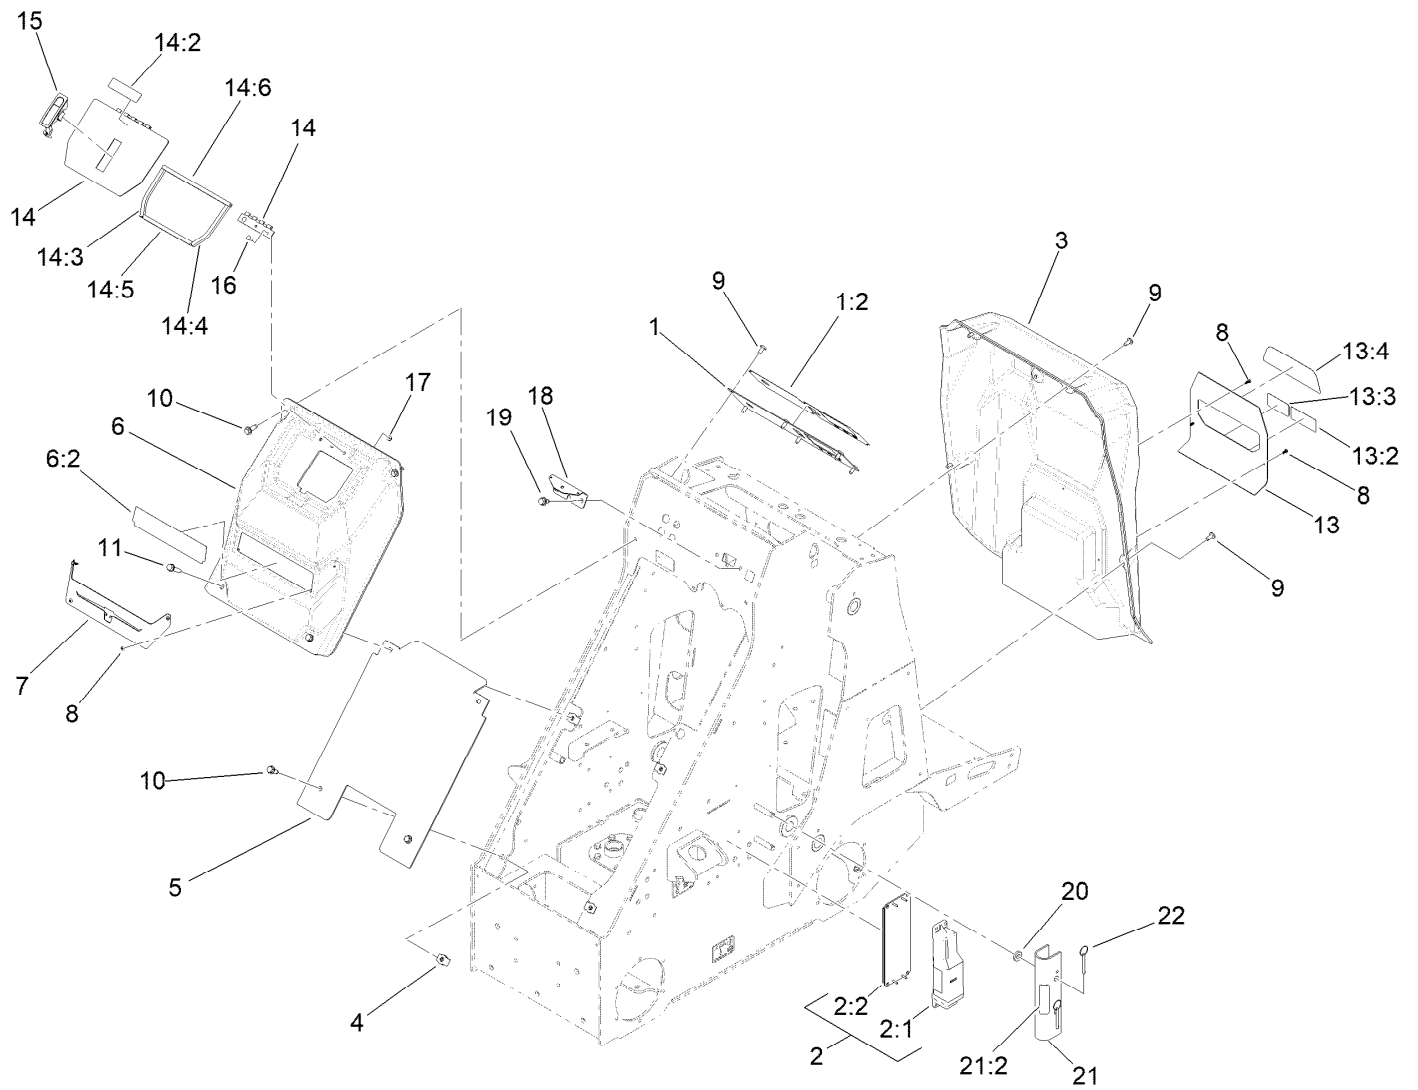

Hood and Service Panel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-6011	1	Panel-Instrument [sunbelt]	13:3	145-1174	1	Decal-Battery Charger
1:2	145-2442	1	Decal - Controls	13:4	145-1172	1	Decal-Hypercell
2	140-7679	1	M4 Kit ASM	14	145-4787	1	Door - Access
2:1	140-7676	1	M4, Ztr	14:2	145-1175	1	Decal-Service, Shut-Off
2:2	140-7678	1	M4 Mounting Bracket Kit	14:3	145-4799	1	Foam - Door, RH
3	145-4749	1	Panel-Service	14:4	147-6019	1	Foam - Door, LH
4	105-4886	4	Nut-Tinnerman	14:5	147-6020	1	Foam - Door, Bottom
5	145-2393-03	1	Cover-Front,Lower	14:6	147-6021	1	Foam - Door, Top
6	145-4722	1	Hood ASM, Front	15	145-4788	1	Latch - Compression
6:2	145-4757	1	Decal - Backer, Red	16	1-807533	2	Bolt-CARR
7	145-4761-03	1	Plate-Hood	17	138-0719	2	Nut-HF
8	127-6843	7	Screw-Plastite, Torx Pan	18	145-4777-07	1	Bracket - Light
9	138-9753	12	Screw	19	110-9380	2	Screw-HWH
10	139-2428	4	Screw-HWH	20	83-1470	4	Washer-Neoprene
11	32144-102	2	Screw-HWH	21	147-6016	2	Lock Cylinder ASM [sunbelt]
13	147-6015	1	Plate - Cord [sunbelt]	21:2	145-4729	1	Decal - Cylinder Lock
13:2	145-2445	1	Decal - Charging Port	22	108-0094	4	Pin-Cotterless


Counterweights, Skid Plates and Foot Pad Assembly

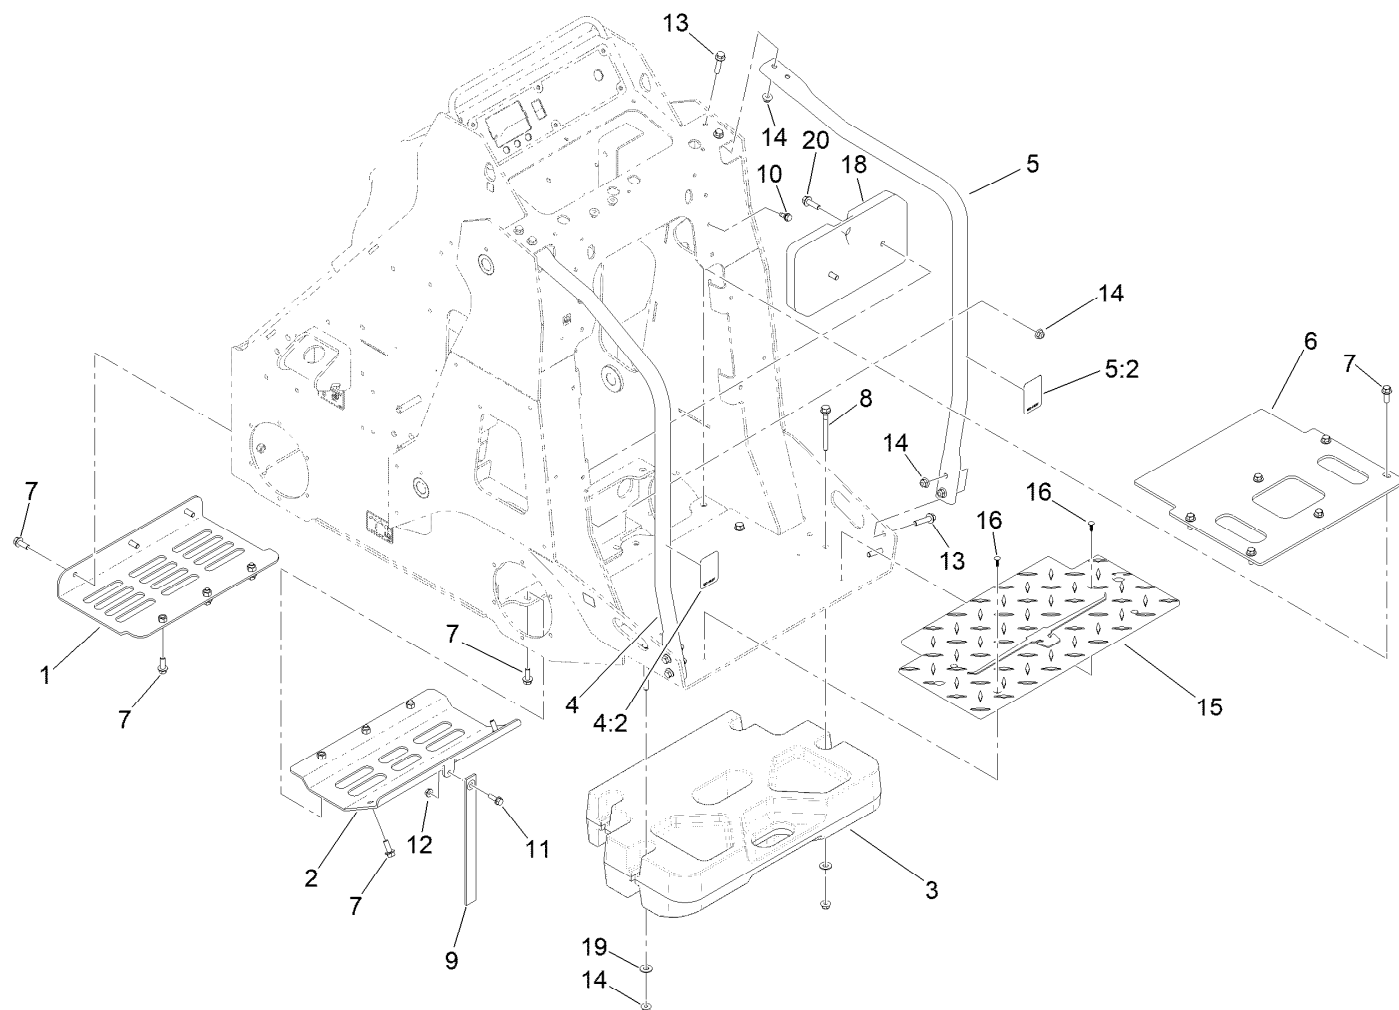

Counterweights, Skid Plates and Foot Pad Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-7260-07	1	Skid Plate ASM, Front	10	126-4424	2	Screw-Shoulder
2	140-7261-07	1	Skid Plate ASM, Rear	11	3234-17	1	Screw-HHF
3	145-2398-03	1	Counterweight	12	32128-26	1	Nut-HF
4	147-6012	1	Tube-Handle,LH [sunbelt]	13	3234-19	8	Screw-HHF
4:2	100-4627	1	Reflector	14	104-8301	14	Nut-HF, NI
5	147-6013	1	Tube-Handle,RH [sunbelt]	15	145-4784	1	Pad - Foot
5:2	100-4627	1	Reflector	16	125-8067	4	Plug-Plastic
6	145-2350-07	1	Plate-Cover,Motor	18	145-4719-0P	1	Counterweight
7	3234-42	17	Screw-HHF	19	3256-4	4	Washer-Flat
8	140-5522	4	Screw-HHF 5/8, Patch	20	3234-24	2	Screw-HHF
9	139-7731	1	Strap, Static				

Drivetrain Assembly

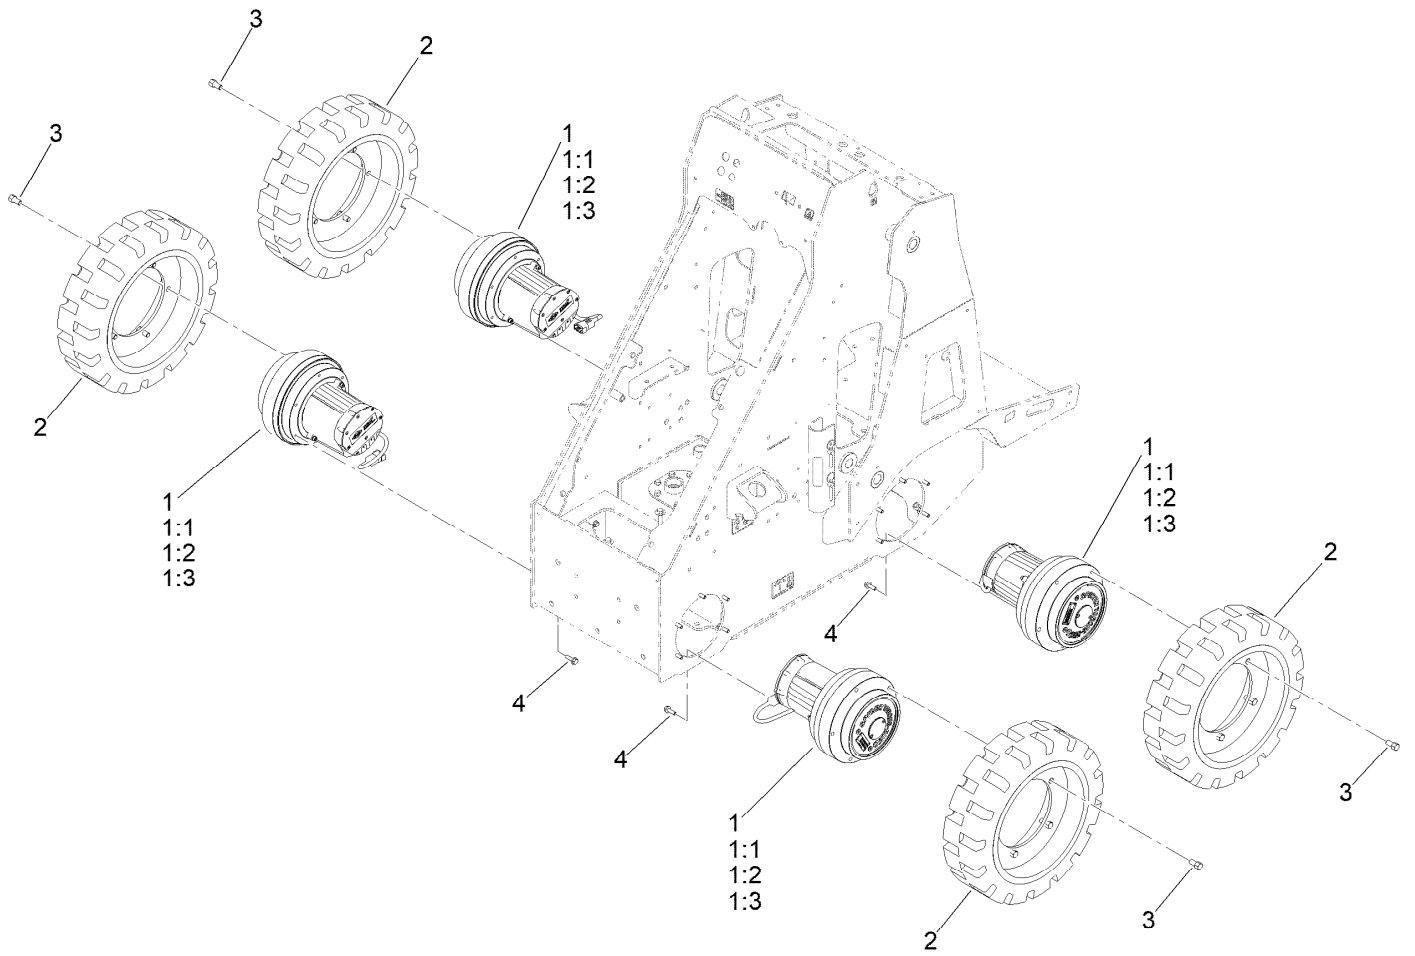


Drivetrain Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-8973	4	Motor/Gen Torquehub ASM-3Kw 45:1 Rdctn	1:3		1	Brake,Parking-Torquehub ●
1:1		1	Motor/Gen-48V,3Kw ●	2	145-2376	4	Tire-Solid
1:2		1	Gearbox,Plntry-45:1 Rdctn ●	3	144-1739	20	Screw-HH, Lug M12 X 1.50
				4	33104-025	24	Screw-HHF

● Not serviced separately

Drivetrain Assembly

Motor/Generator Assembly

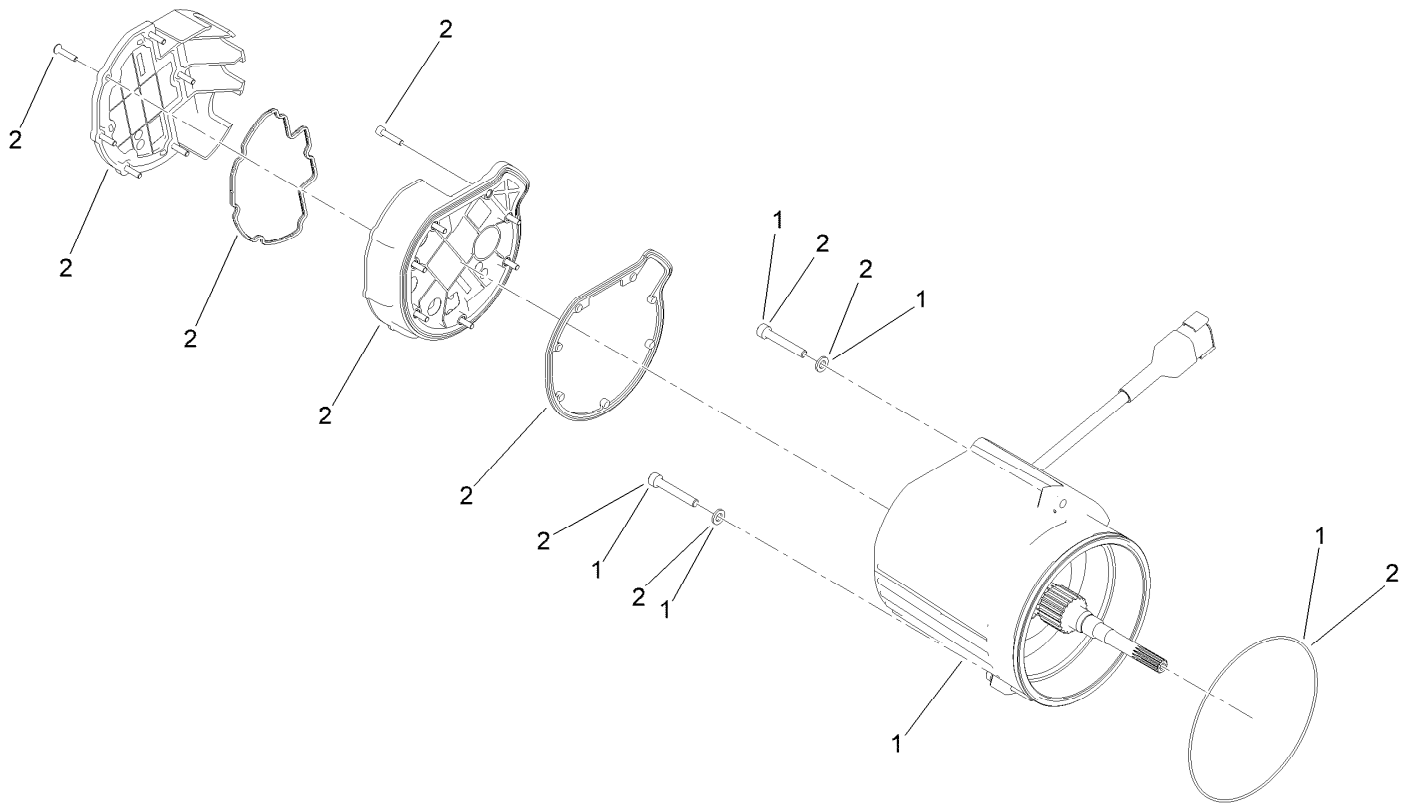


Drivetrain Assembly

Motor/Generator Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-5055	1	Kit-Motor, Service
2	145-5057	1	Kit-Cover/Seal, Motor

Drivetrain Assembly

Planetary Gearbox Assembly

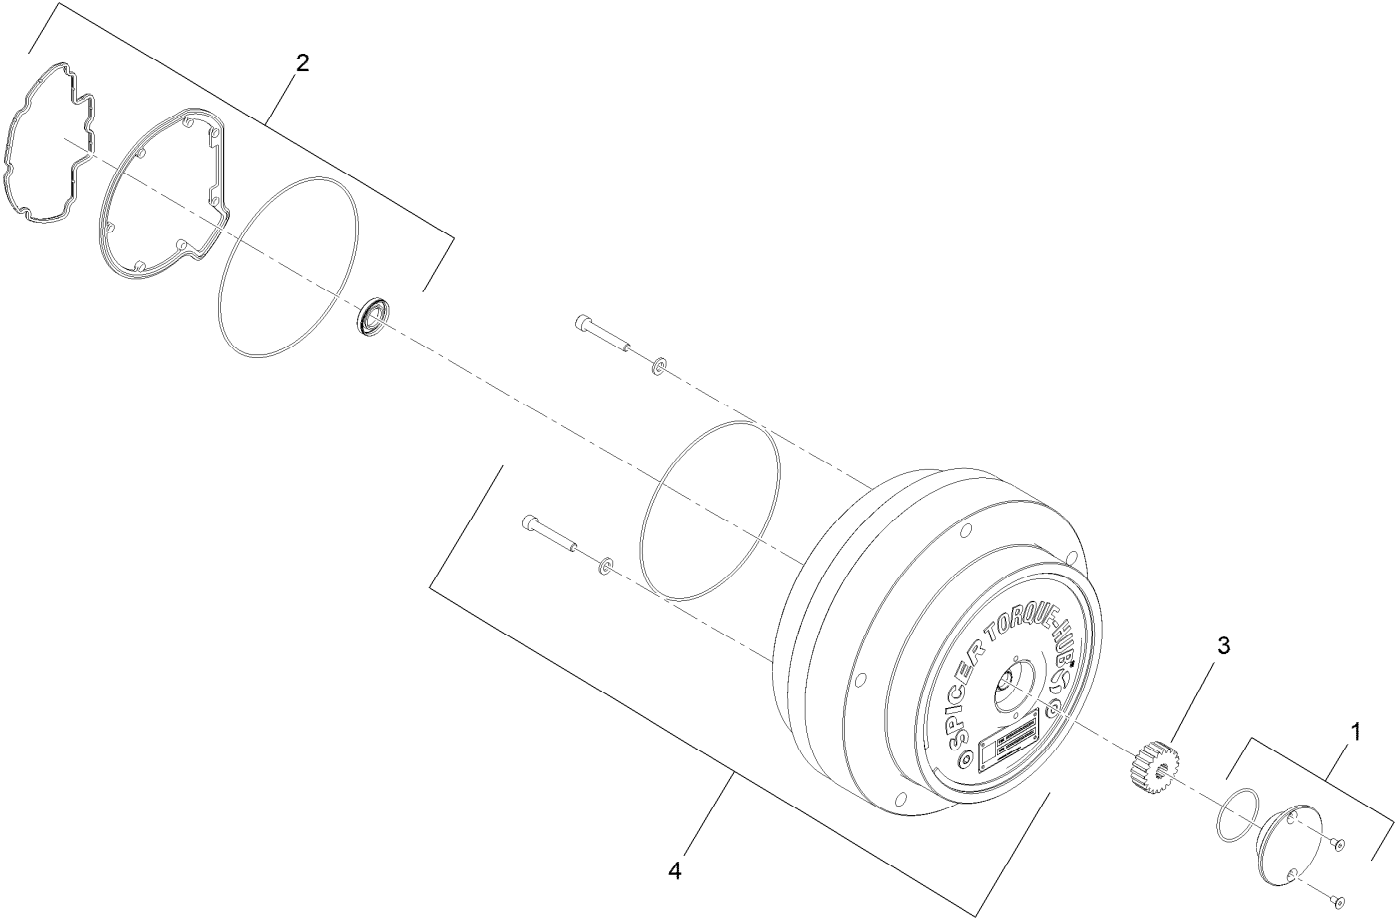


Drivetrain Assembly

Planetary Gearbox Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-5060	1	Kit-Cover, Sun Gear
2	145-5061	1	Kit-Seal, Main

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	145-5063	1	Gear-Sun
4	145-5064	1	Kit-Gearbox


Drivetrain Assembly Brake Assembly

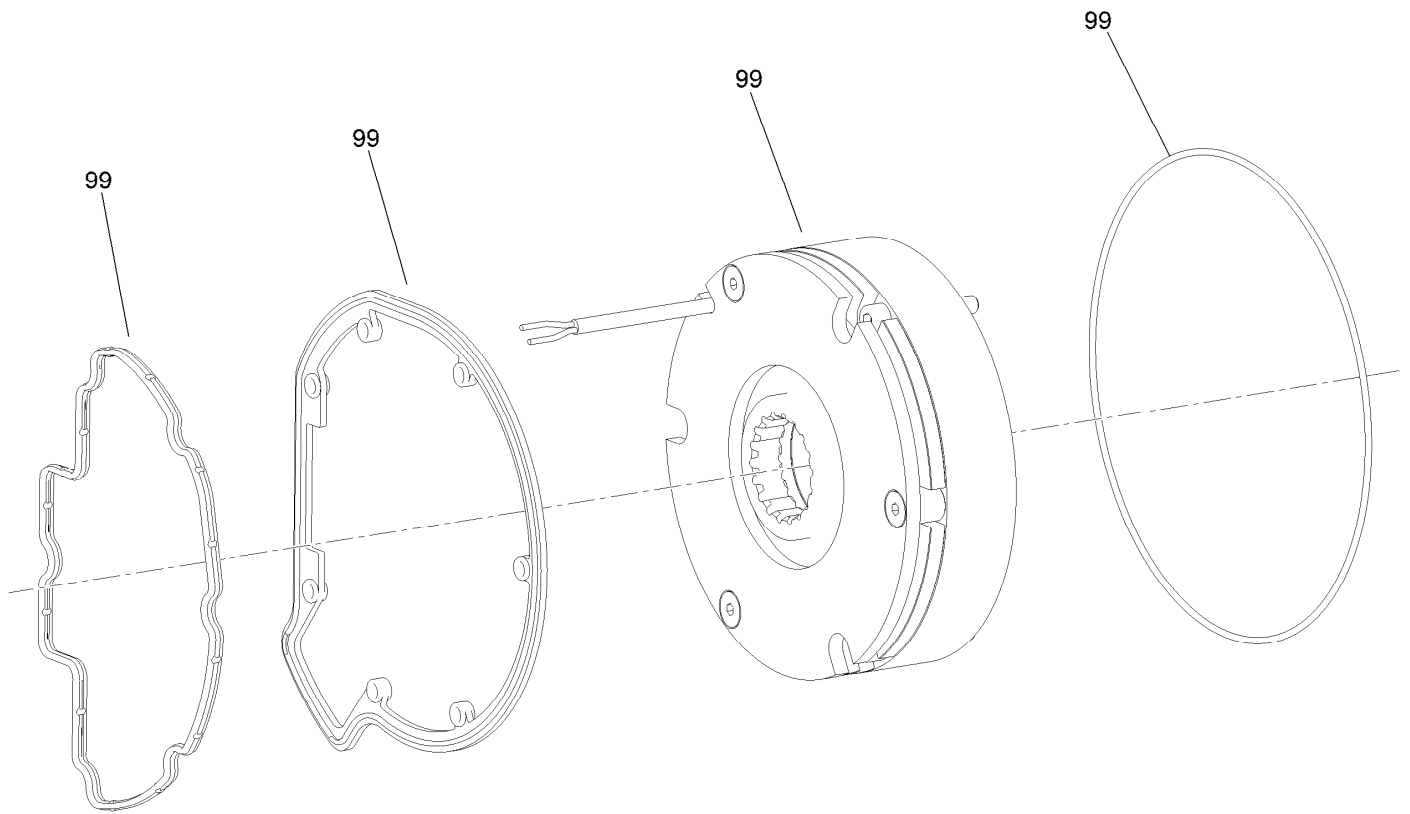

Drivetrain Assembly Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
99	145-5058	1	Kit-Brake


Motor/Generator and Hydraulic Pump Assembly

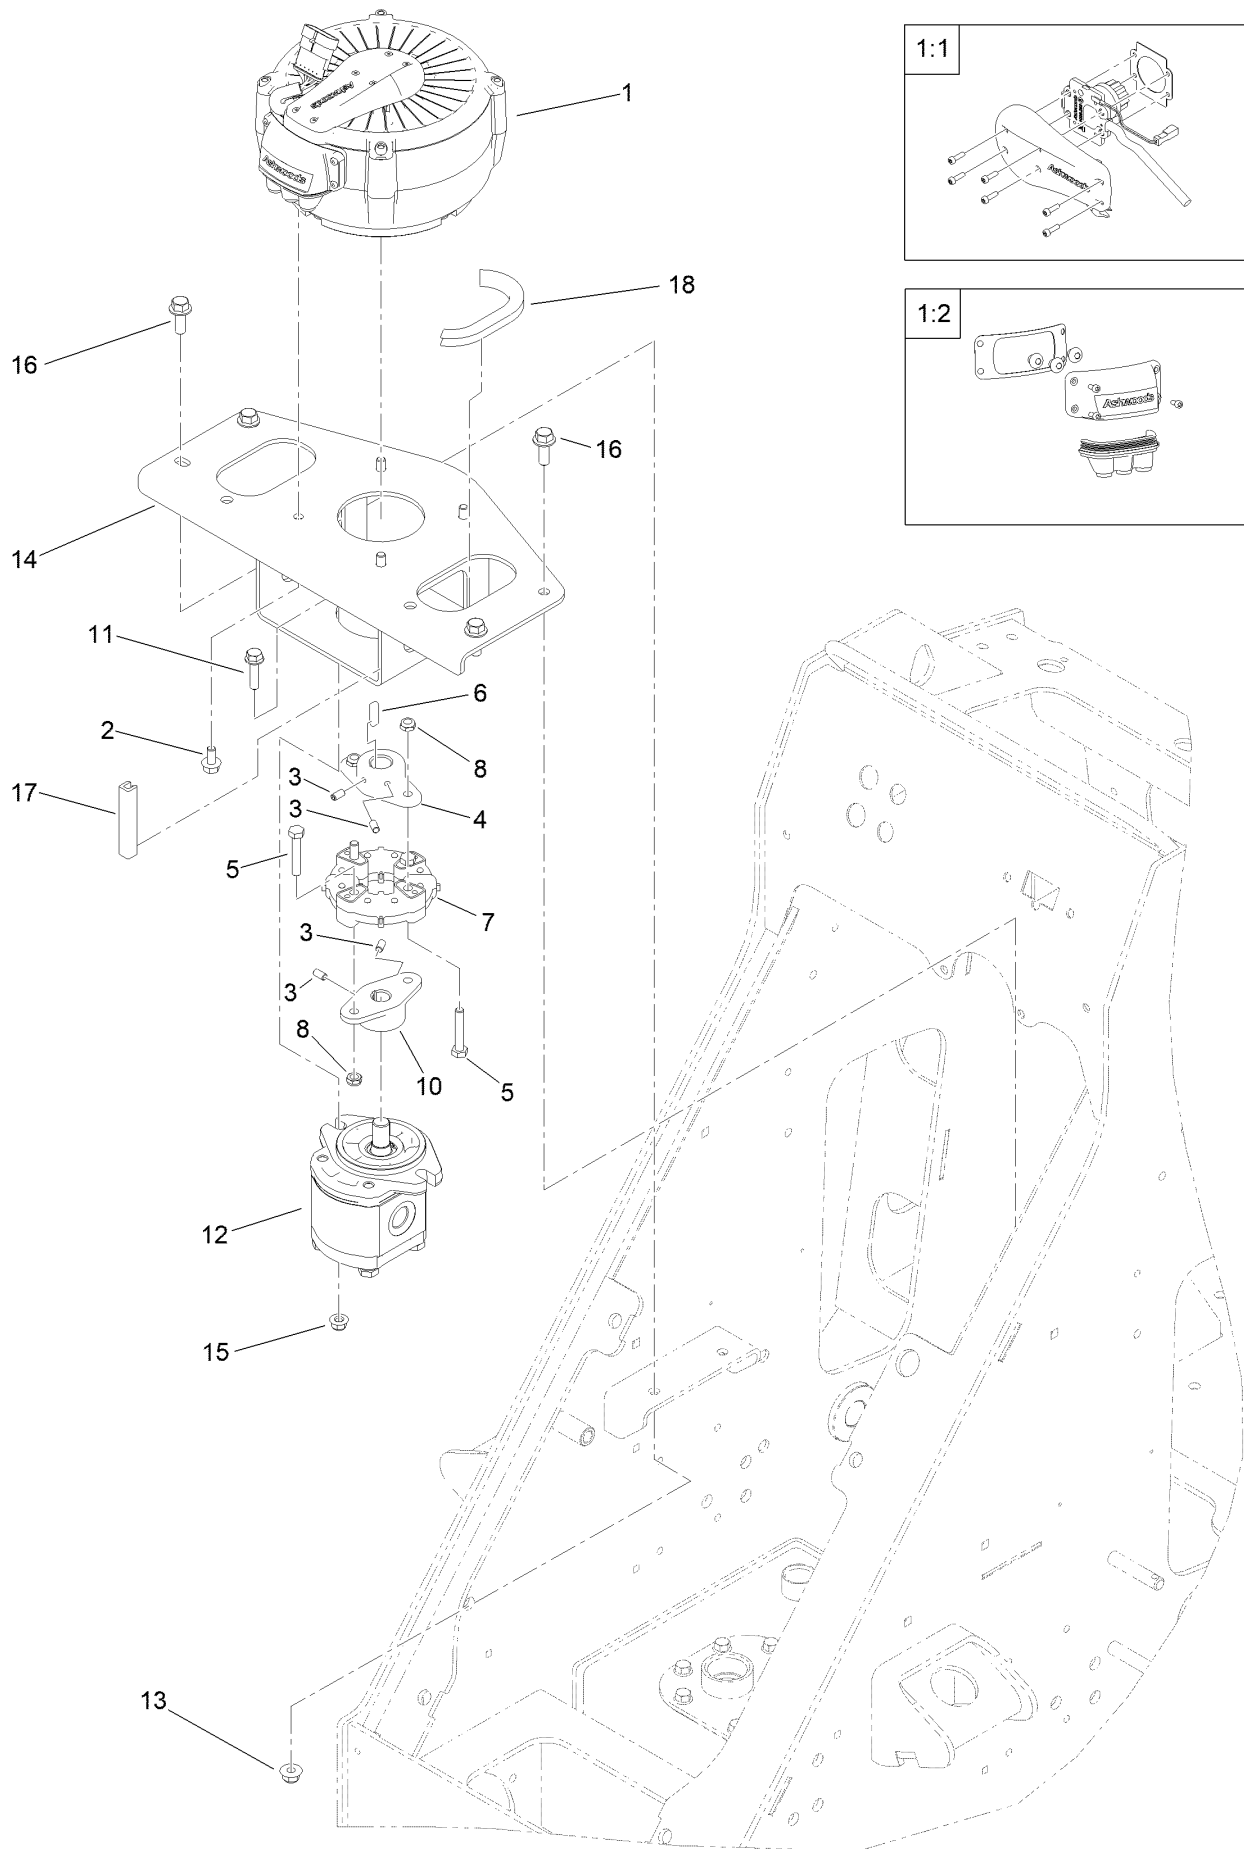

Motor/Generator and Hydraulic Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-8926	1	Motor/Gen	10	98-4701	1	Hub-Pump
1:1	138-8941	1	Kit-Encoder, Mtr/Gen	11	3234-36	2	Screw-HHF
1:2	138-8942	1	Kit-Terminal Cover	12	139-7665	1	Pump-Hydraulic
2	33104-016	4	Screw-HHF	13	104-8301	4	Nut-HF, NI
3	3245-9	4	Screw-Set, HSH	14	144-2948-07	1	Plate-Motor ASM [500-164]
4	139-7664	1	Hub-Pump	15	104-8300	2	Nut-HF, NI
5	322-9	4	Screw-HH	16	3234-42	4	Screw-HHF
6	104-3097	1	Key-Square	17	70-2041	1	Trim - Edge
7	119-0652	1	Coupler-Rubber	18	133-8571	1	Trim-Seal
8	3296-47	4	Nut-Lock,NI				

Hydraulic Pump Assembly No. 139-7665

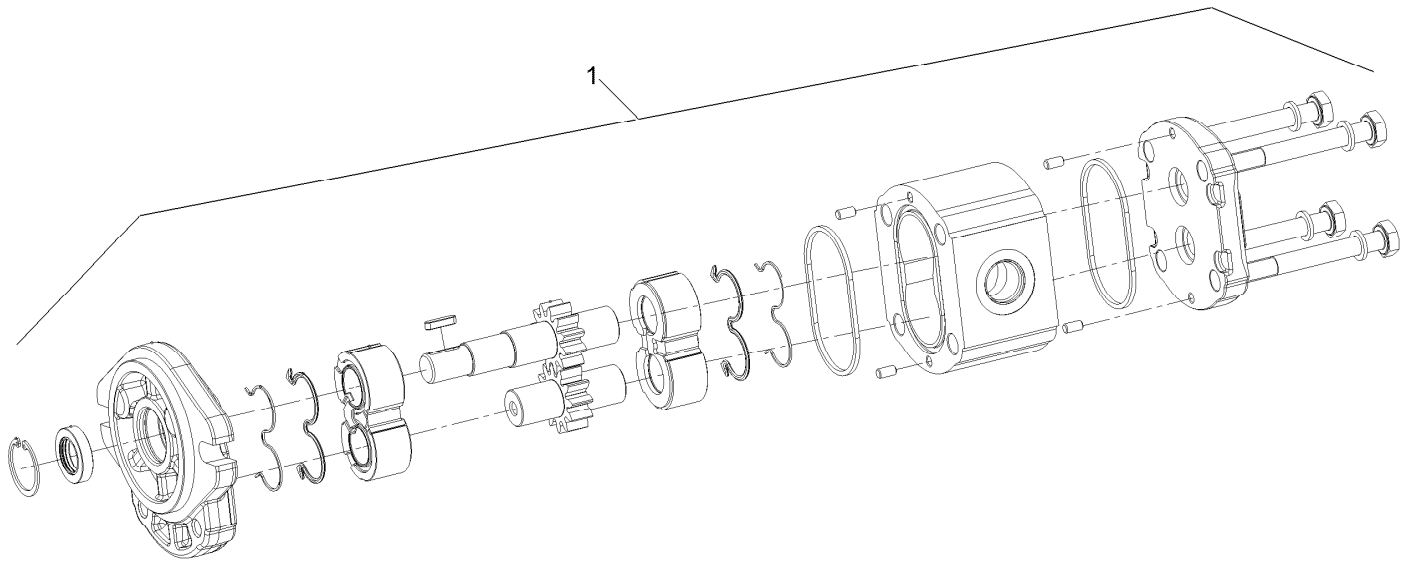


Hydraulic Pump Assembly No. 139-7665 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-7705	1	Kit-Seal ●

● Not illustrated

Hydraulic Tank Filter and Hydraulic Bulkhead Assembly

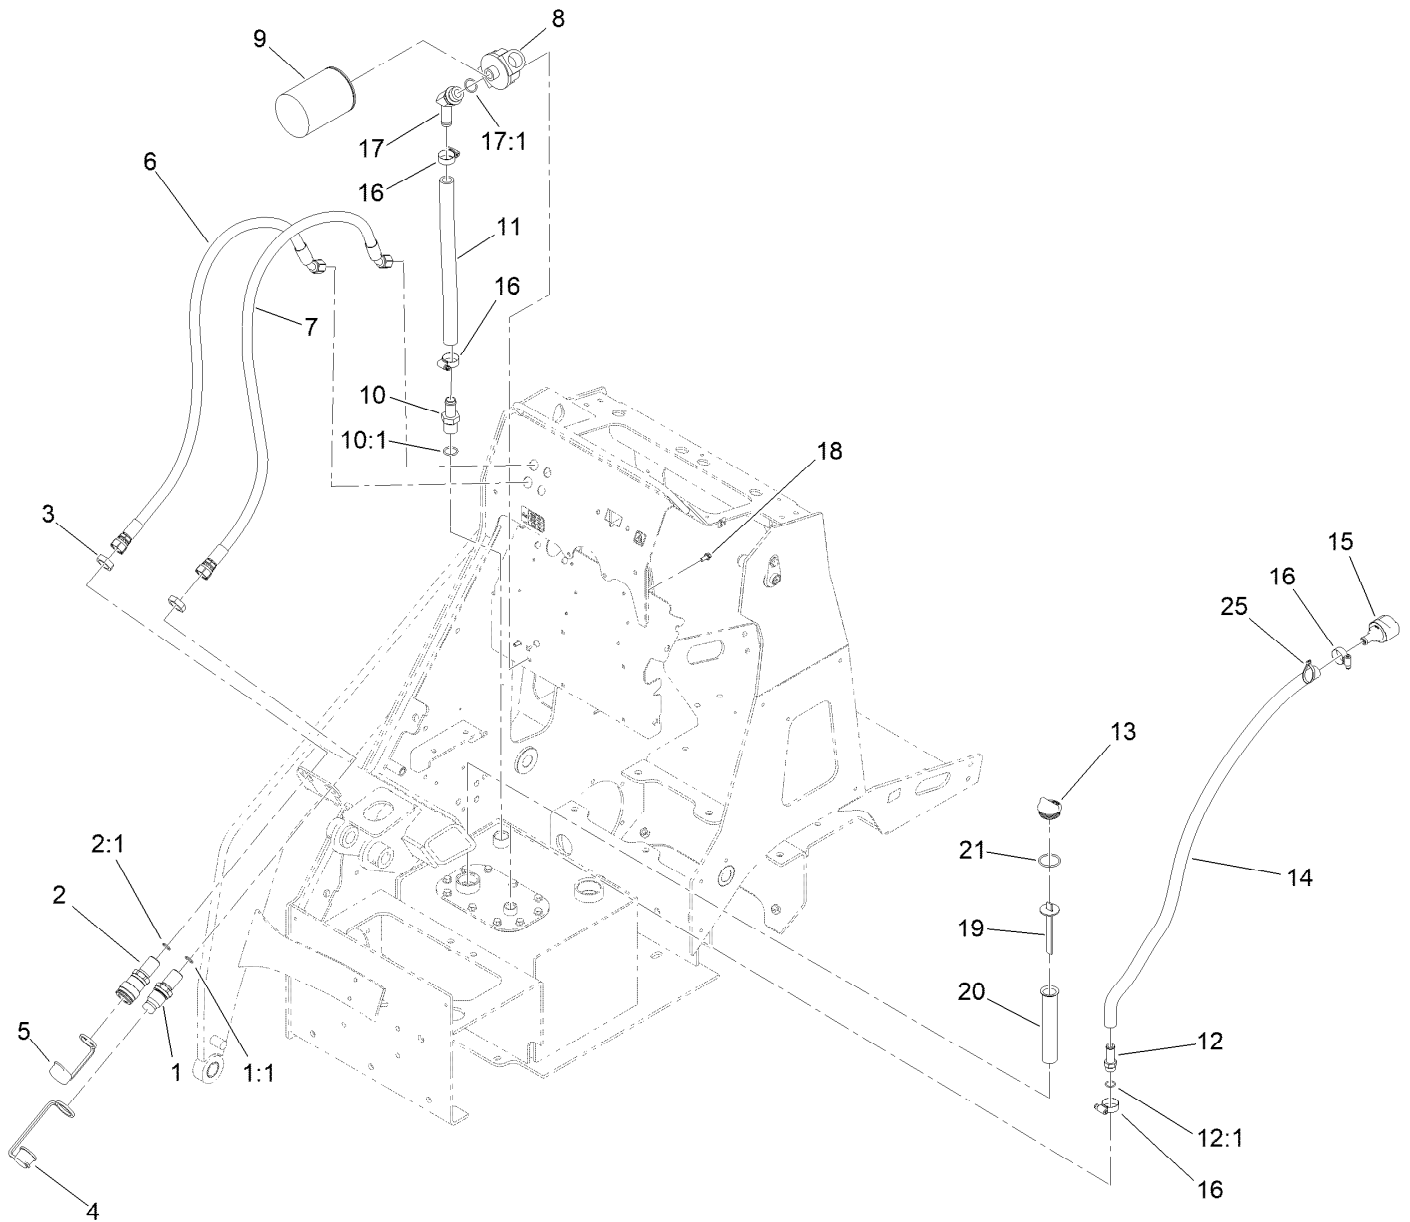


Hydraulic Tank Filter and Hydraulic Bulkhead Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	105-8395	1	Bulkhead Nipple ASM	11	145-4701	1	Hose-HYD, Return
1:1	237-65	1	O-Ring	12	107-7569	1	Fitting-STR
1:2	100-6120	1	Seal Kit ●	12:1	237-79	1	O-Ring
2	105-8394	1	Bulkhead Coupler ASM	13	93-7498	1	Plug-Plastic
2:1	237-65	1	O-Ring	14	147-6018	1	Hose - Vent
3	340-74	2	Nut-Lock, Bulkhead	15	147-6017	1	Breather (Air)
4	100-8815	1	Cap-Dust, Nipple	16	2412-129	4	Clamp-Hose
5	100-8816	1	Cap-Dust, Coupler	17	354-127	1	Fitting-Elbow45
6	144-2973	1	Hose ASM-HYD	17:1	237-81	1	O-Ring
7	144-2974	1	Hose ASM-HYD	18	3234-33	2	Screw-HHF
8	92-5821	1	Head-Filter	19	147-6024	1	Dipstick - Oil,
9	86-3010	1	Filter-Oil	20	61-2790	1	Filter-Screen
10	354-73	1	Fitting	21	237-101	1	O-Ring
10:1	237-81	1	O-Ring	25	3290-378	1	Tie-Cable

● Not illustrated


Hydraulic Loader Valve Assembly

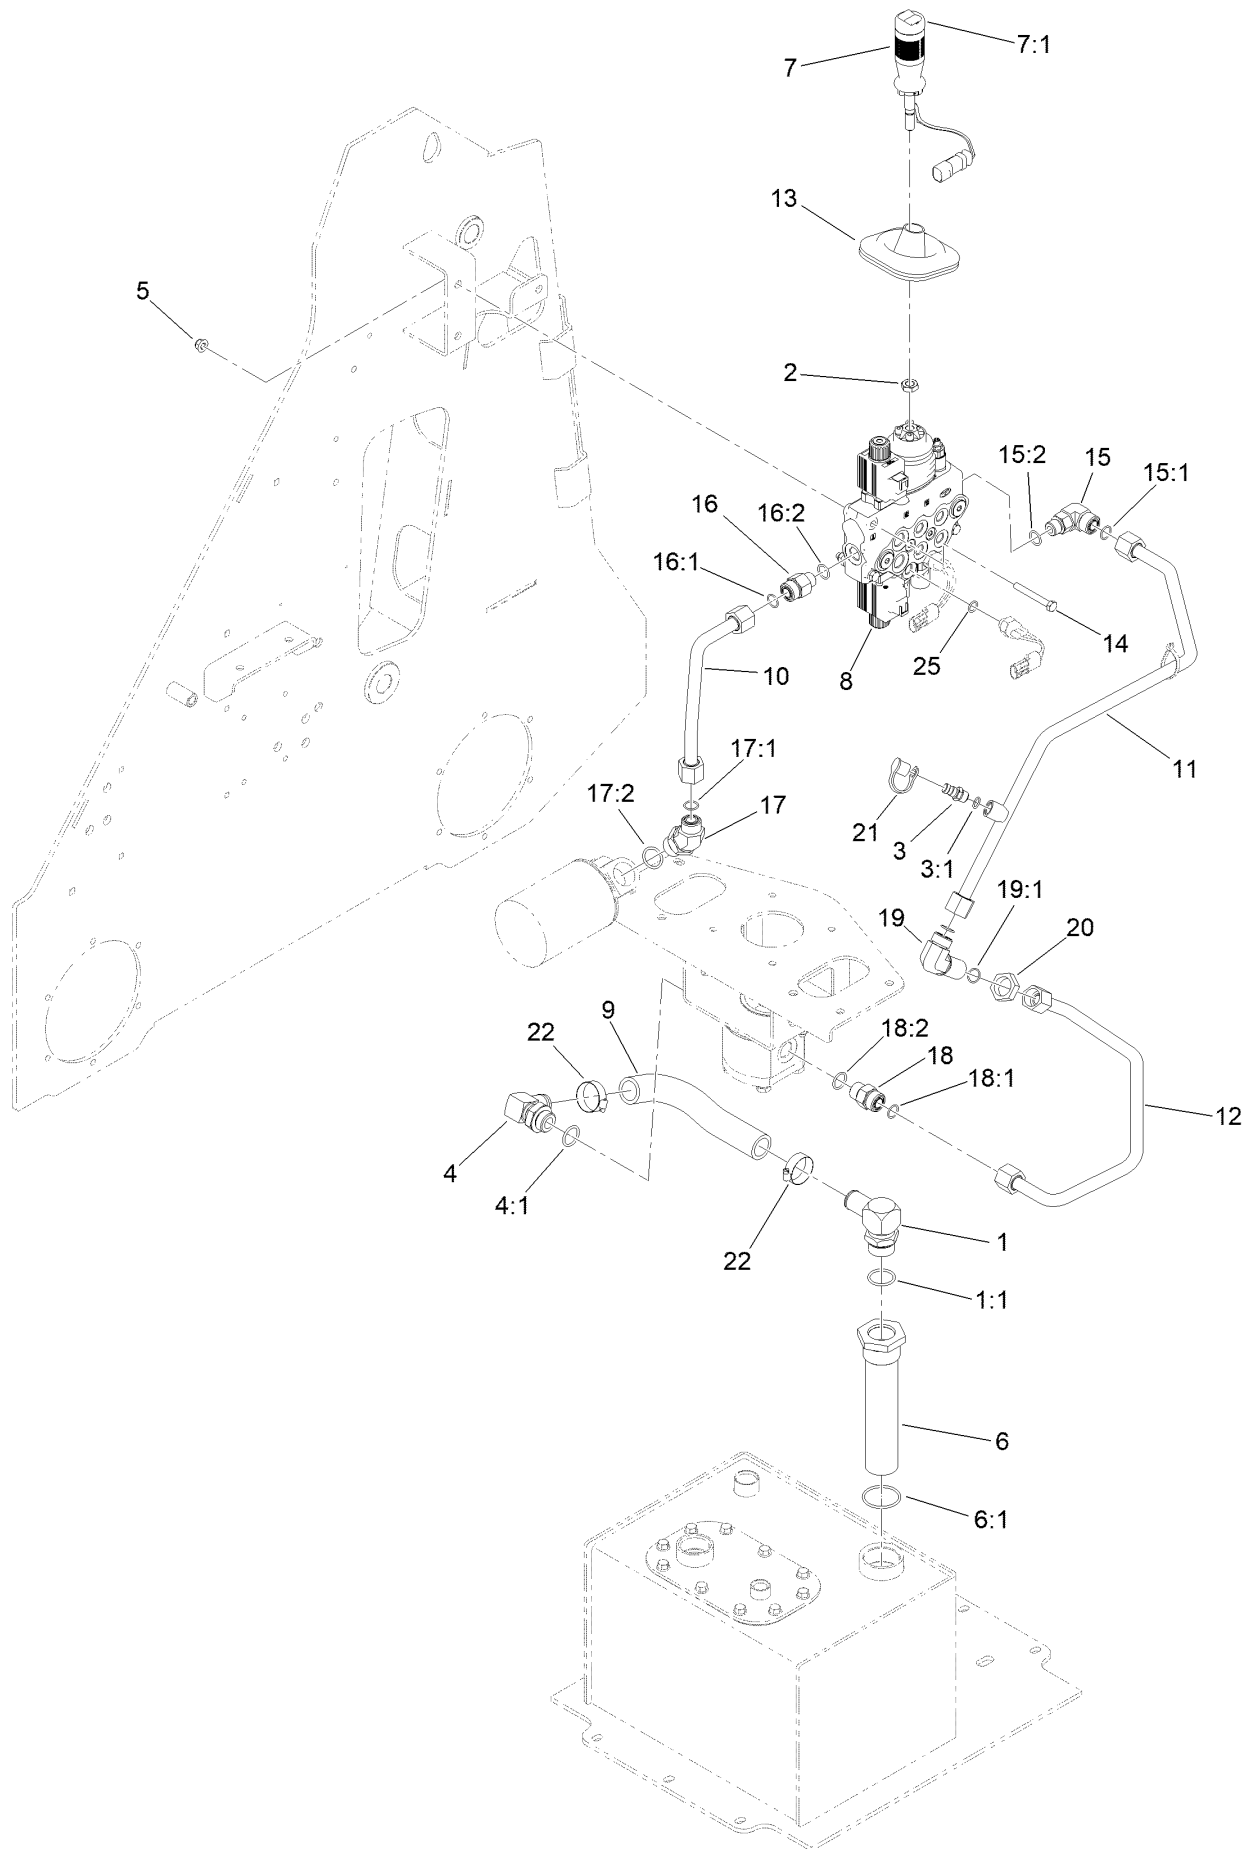

Hydraulic Loader Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	23-8910	1	Stem-Barb-90	15	340-153	1	Fitting-Elbow, 90 DEG
1:1	237-146	1	O-Ring	15:1	237-79	1	O-Ring
2	51-2070	1	Nut	15:2	237-151	1	O-Ring
3	59-7410	1	Fitting-Diagnostic	16	340-155	1	Fitting-Straight
3:1	237-42	1	O-Ring	16:1	237-79	1	O-Ring
4	100-4202	1	Fitting-90	16:2	237-151	1	O-Ring
4:1	237-81	1	O-Ring	17	340-156	1	Fitting-Elbow 45
5	104-8300	3	Nut-HF, NI	17:1	237-65	1	O-Ring
6	115-2230	1	Strainer-In Tank	17:2	237-81	1	O-Ring
6:1	340-136	1	O-Ring	18	340-7	1	Fitting-Straight
7	140-5742	1	Handle-Auxiliary ASM	18:1	237-65	1	O-Ring
7:1	147-6873	1	Boot-Switch, Joystick	18:2	237-80	1	O-Ring
8	144-2909	1	Valve-HYD-Loader	19	340-72	1	Fitting-Bulkhead, 90 DEG
9	144-3009	1	Hose	19:1	237-65	2	O-Ring
10	145-2373	1	Hydraulic Tube ASM	20	340-74	1	Nut-Lock, Bulkhead
11	145-2401	1	Hydraulic Tube ASM	21	353-947	1	Cap-Dust, Black
12	145-2402	1	Hydraulic Tube ASM	22	2412-34	2	Clamp-Hose
13	145-4746	1	Boot-Joystick	25	237-42	2	O-Ring
14	322-12	3	Screw-HH				


Hydraulic Loader Valve Assembly No. 144-2909

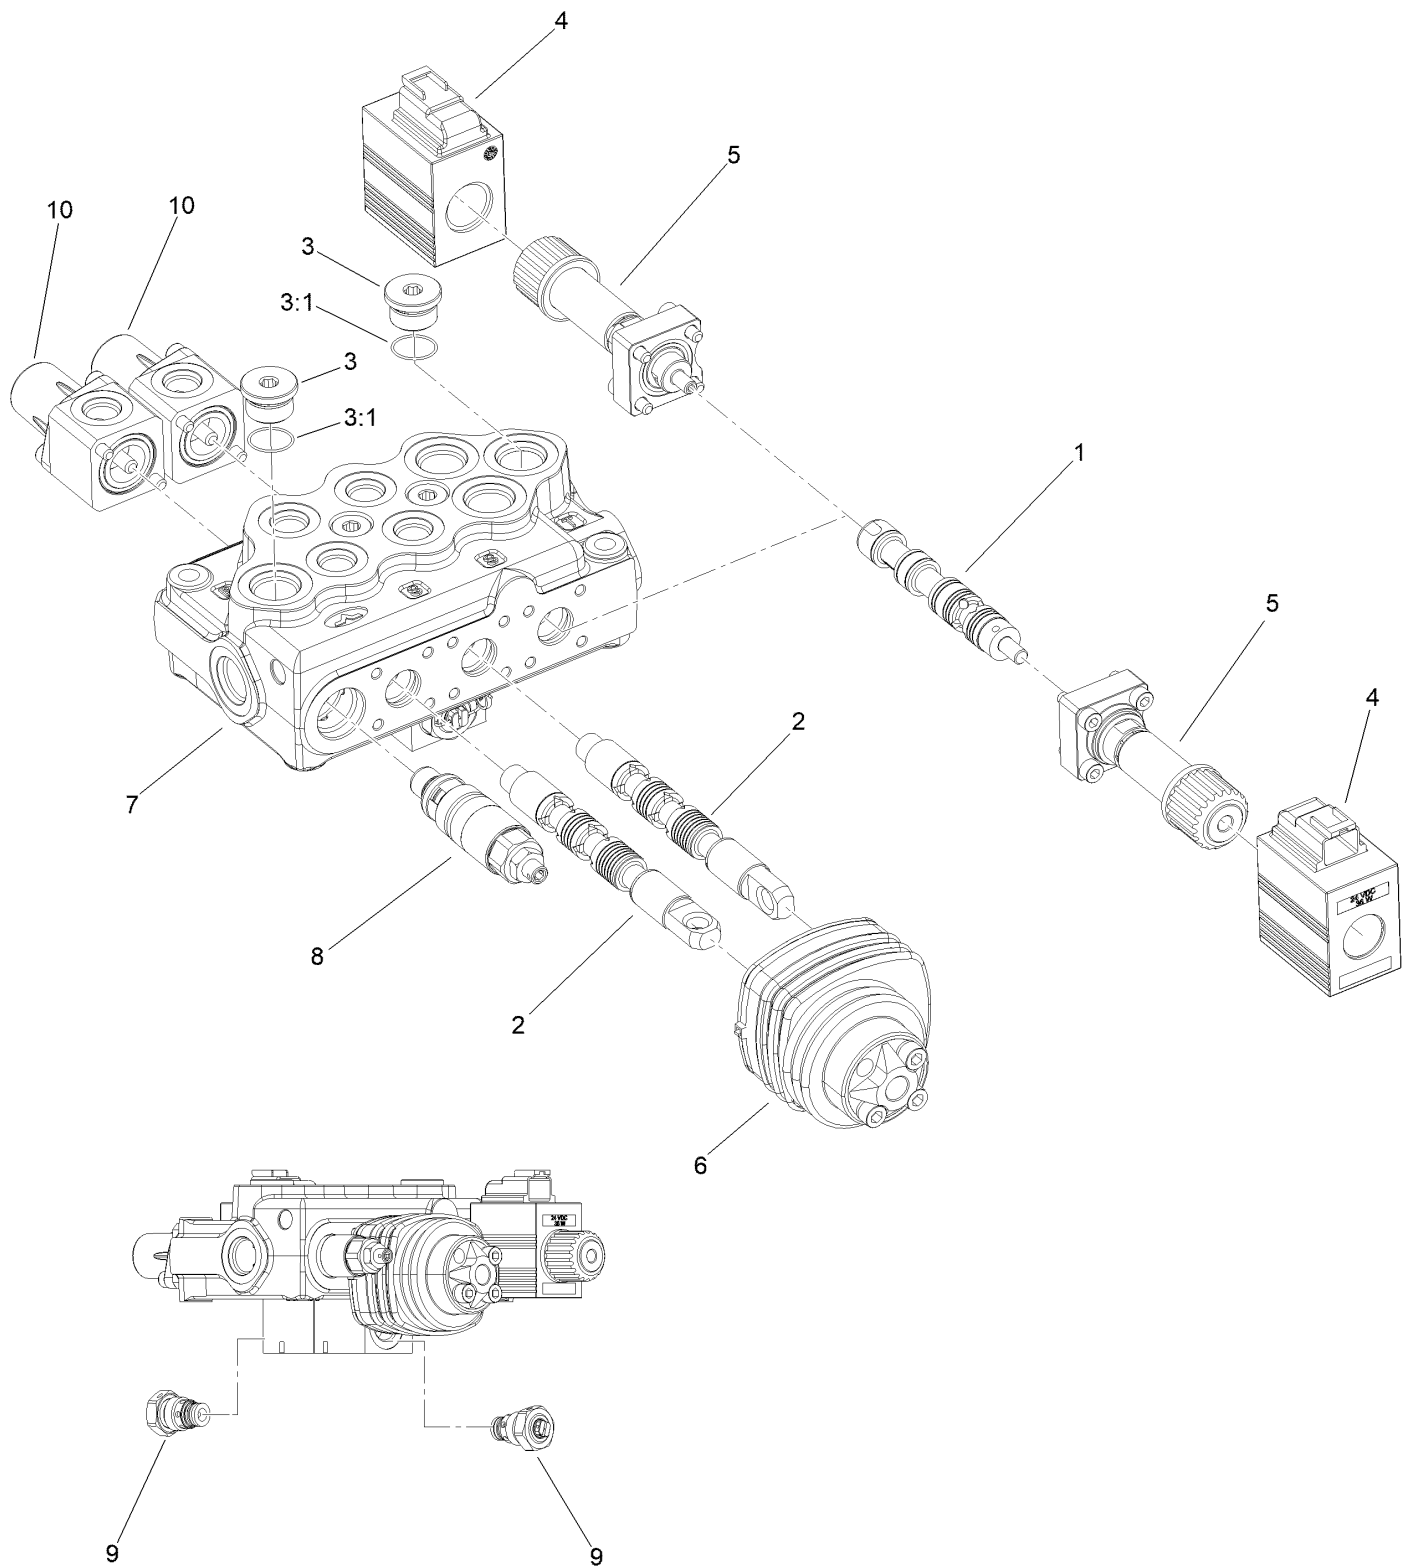

Hydraulic Loader Valve Assembly No. 144-2909 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-6043	1	Valve-Spool	6	147-6046	1	Kit - Joystick
2	114-8624	2	Valve-Spool	7	147-6047	1	Kit - Body
3	353-988	2	Plug-Hex	8	147-6048	1	Kit - Valve
3:1	237-79	1	O-Ring	9	147-6049	2	Kit - Valve [100 - 155 Bar]
4	147-6044	2	Coil	10	115-4093	2	Switch Spring Return Kit
5	147-6045	1	Kit - Controller				

Hydraulic Loader Cylinder Assembly

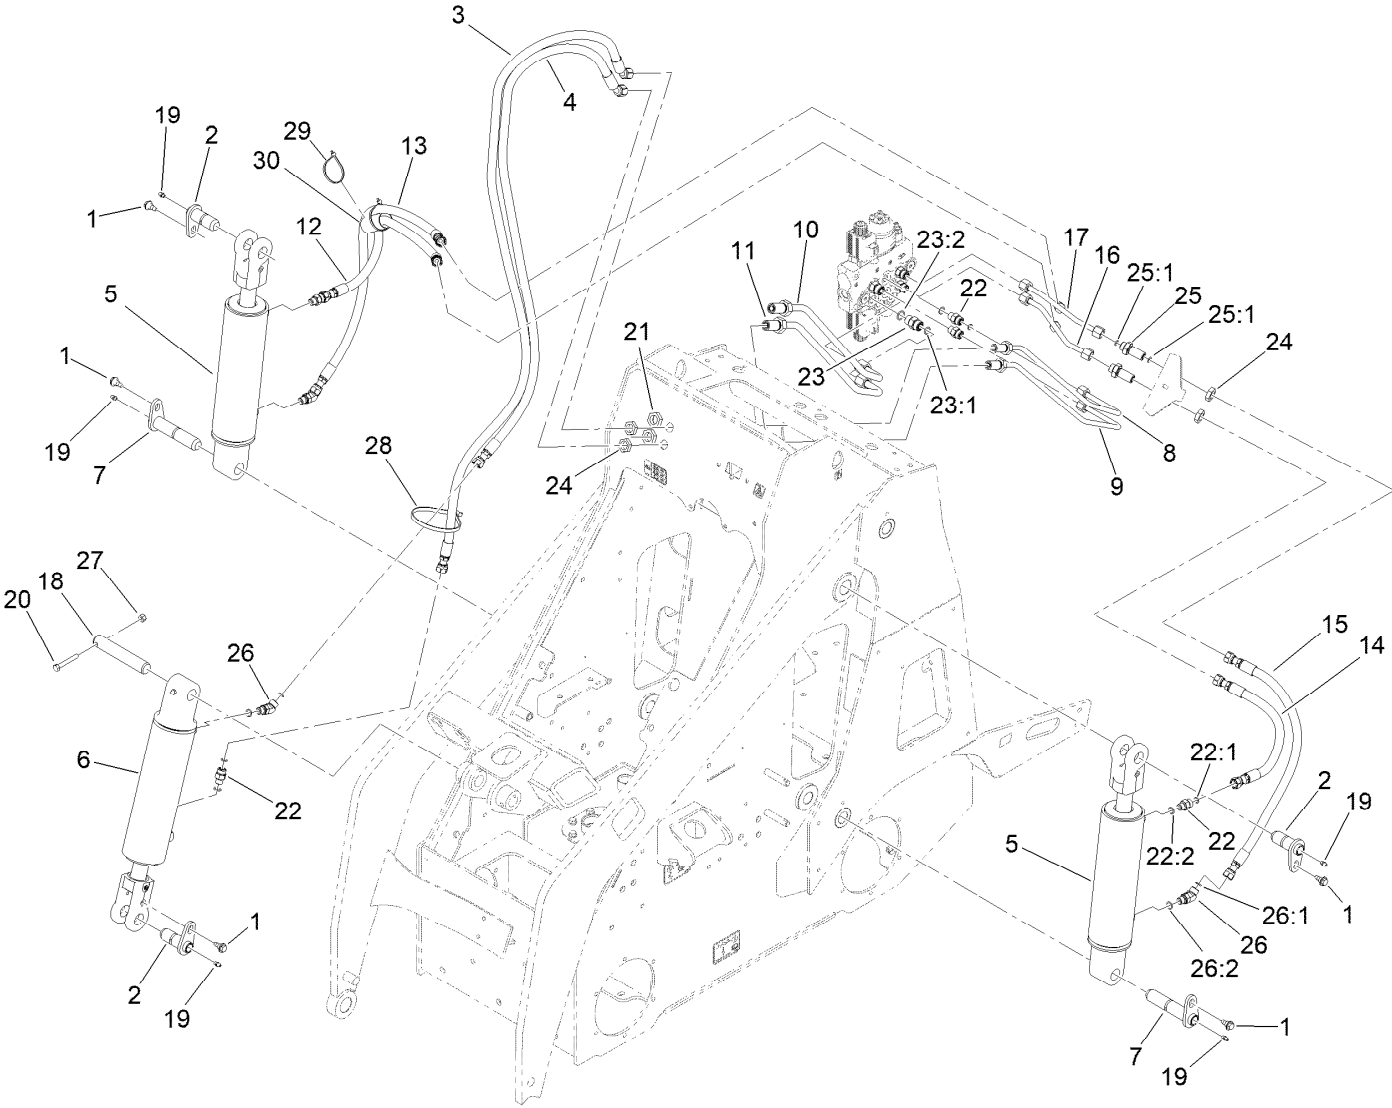


Hydraulic Loader Cylinder Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	99-5105	5	Screw-Shoulder	19	302-5	5	Fitting-Grease
2	112-2609	3	Pin-Pivot	20	322-11	1	Screw-HH
3	140-7253	1	Hose ASM-HYD	21	340-127	2	Nut-Bulkhead
4	140-7254	1	Hose ASM-HYD	22	340-2	7	Fitting-Straight
5	140-7290	2	Cylinder-Hydraulic	22:1	237-22	1	O-Ring
5:99	139-7713	1	Kit-Seal, Hydraulic CYL ●	22:2	237-42	1	O-Ring
6	140-7292	1	HYD-Cylinder	23	340-4	2	Fitting-Straight
6:99	139-7713	1	Kit-Seal, Hydraulic CYL ●	23:1	237-30	1	O-Ring
7	144-2910	2	Pin-Pivot	23:2	237-79	1	O-Ring
8	144-2959	1	Hydraulic Tube ASM	24	340-70	4	Nut-Lock
9	144-2960	1	Hydraulic Tube ASM	25	340-71	2	Fitting-Straight, Bulkhead
10	144-2961	1	Hydraulic Tube ASM	25:1	237-22	2	O-Ring
11	144-2962	1	Hydraulic Tube ASM	26	340-87	3	Fitting-Elbow, 45 DEG
12	144-2971	1	Hose ASM-HYD	26:1	237-22	1	O-Ring
13	144-2972	1	Hose ASM-HYD	26:2	237-42	1	O-Ring
14	144-2976	1	Hose ASM-HYD	27	3296-29	1	Nut-Lock, NI
15	144-2977	1	Hose ASM-HYD	28	3334-945	1	Tie-Cable
16	145-2374	1	Hydraulic Tube ASM	29	3290-378	2	Tie-Cable
17	145-2375	1	Hydraulic Tube ASM	30	AU112950	1	Protector-Hose
18	145-2394	1	Pin-Locking				

● Not illustrated


Loader Arm Assembly

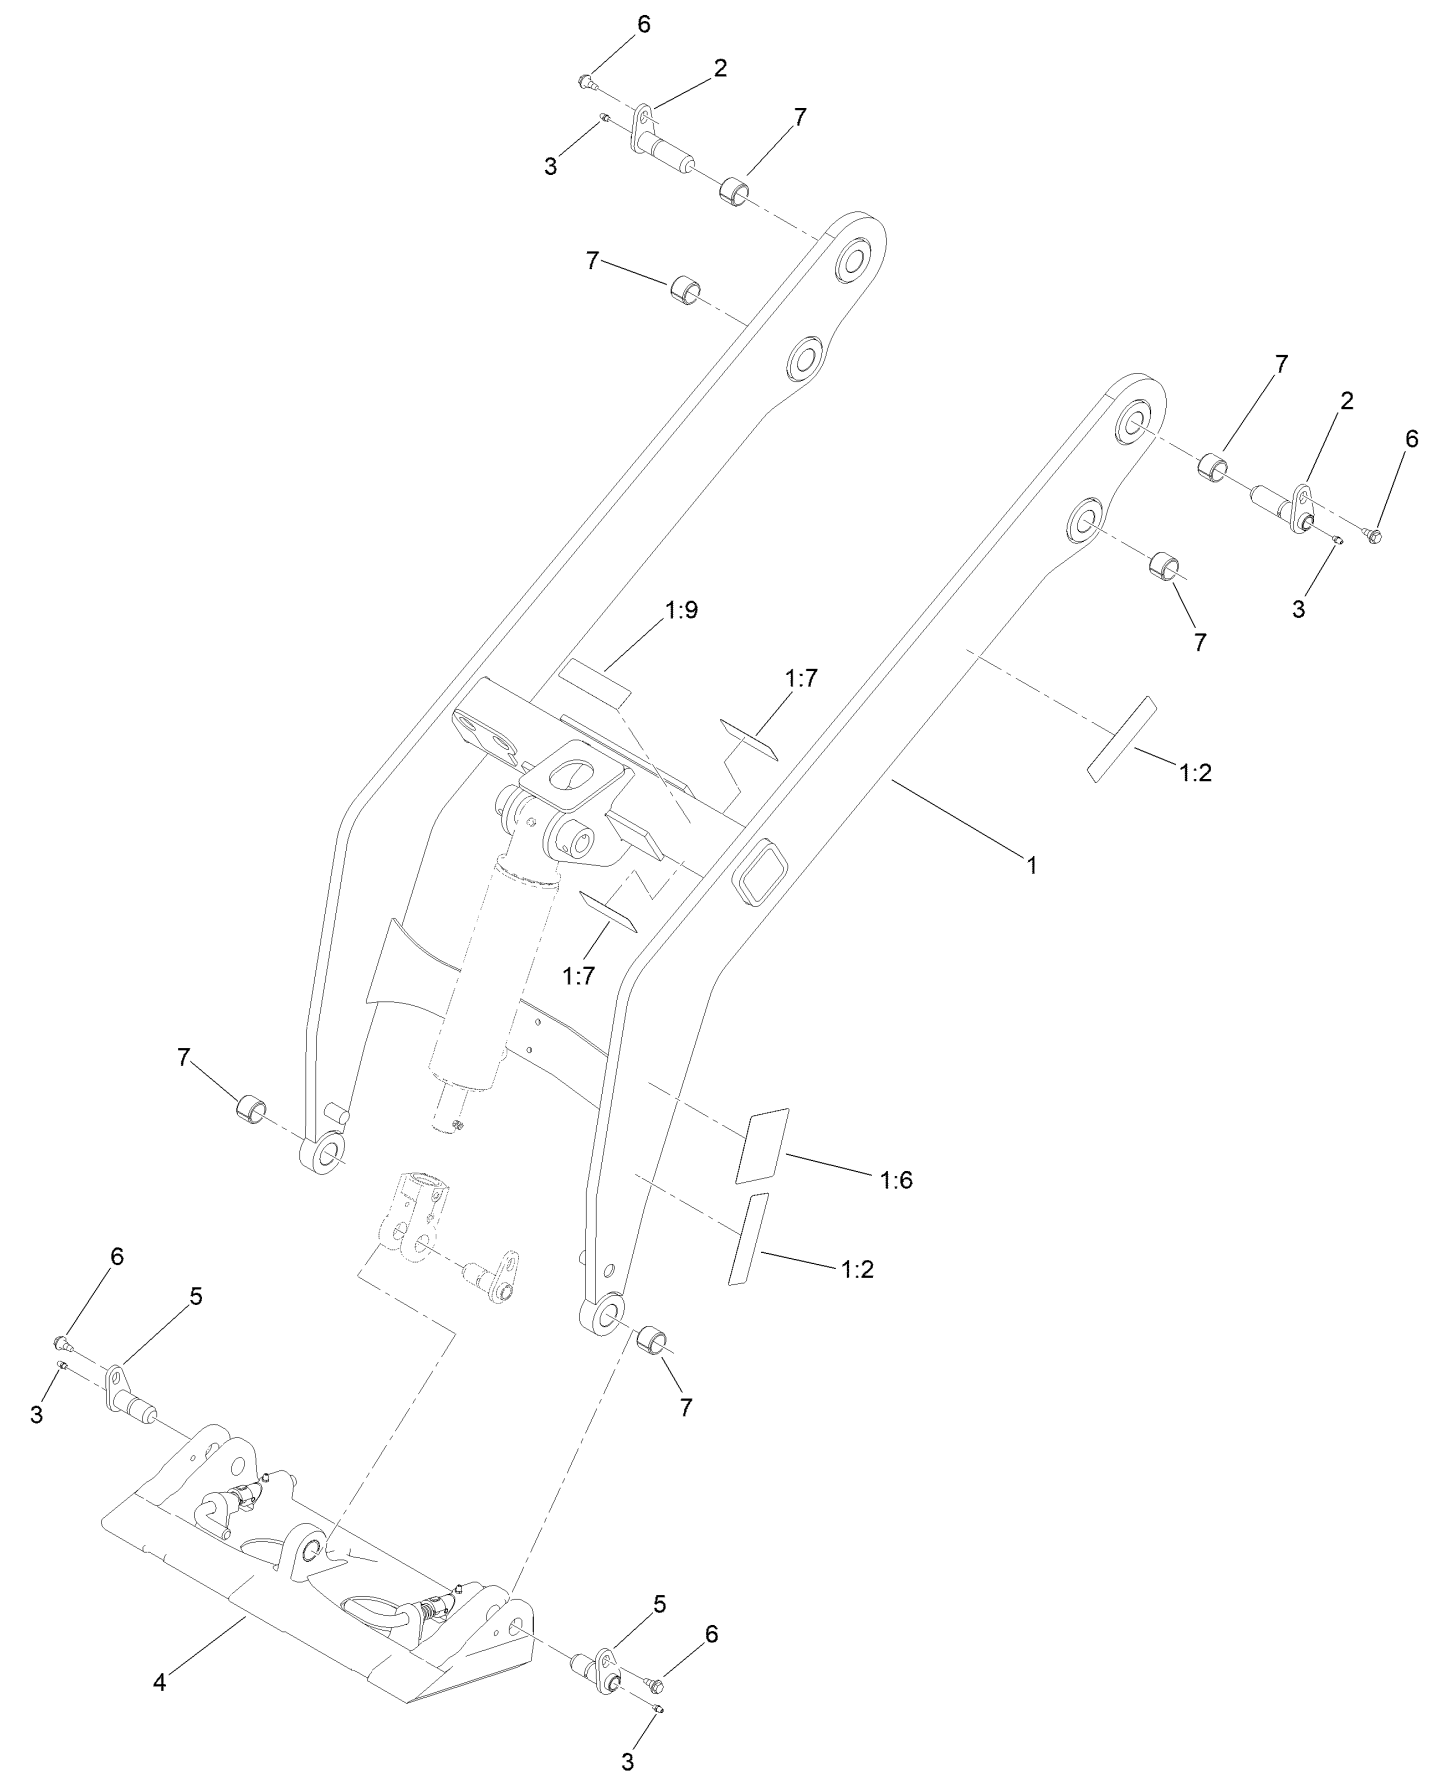

Loader Arm Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-2908	1	Loader And Decal ASM	3	302-5	4	Fitting-Grease
1:2	130-2836	4	Decal-Warning, Crushing	4	132-8418	1	Quick Attach ASM
1:6	139-7708	2	Decal-Warning, Bucket	5	112-2609	2	Pin-Pivot
1:7	130-2837	2	Decal-Warning, No Rider	6	99-5105	4	Screw-Shoulder
1:9	115-4855	1	Decal-Caution	7	98-4871	6	Bushing-Tension
2	120-5363	2	Pin-Pivot				

Quick Attach Assembly No. 132-8418

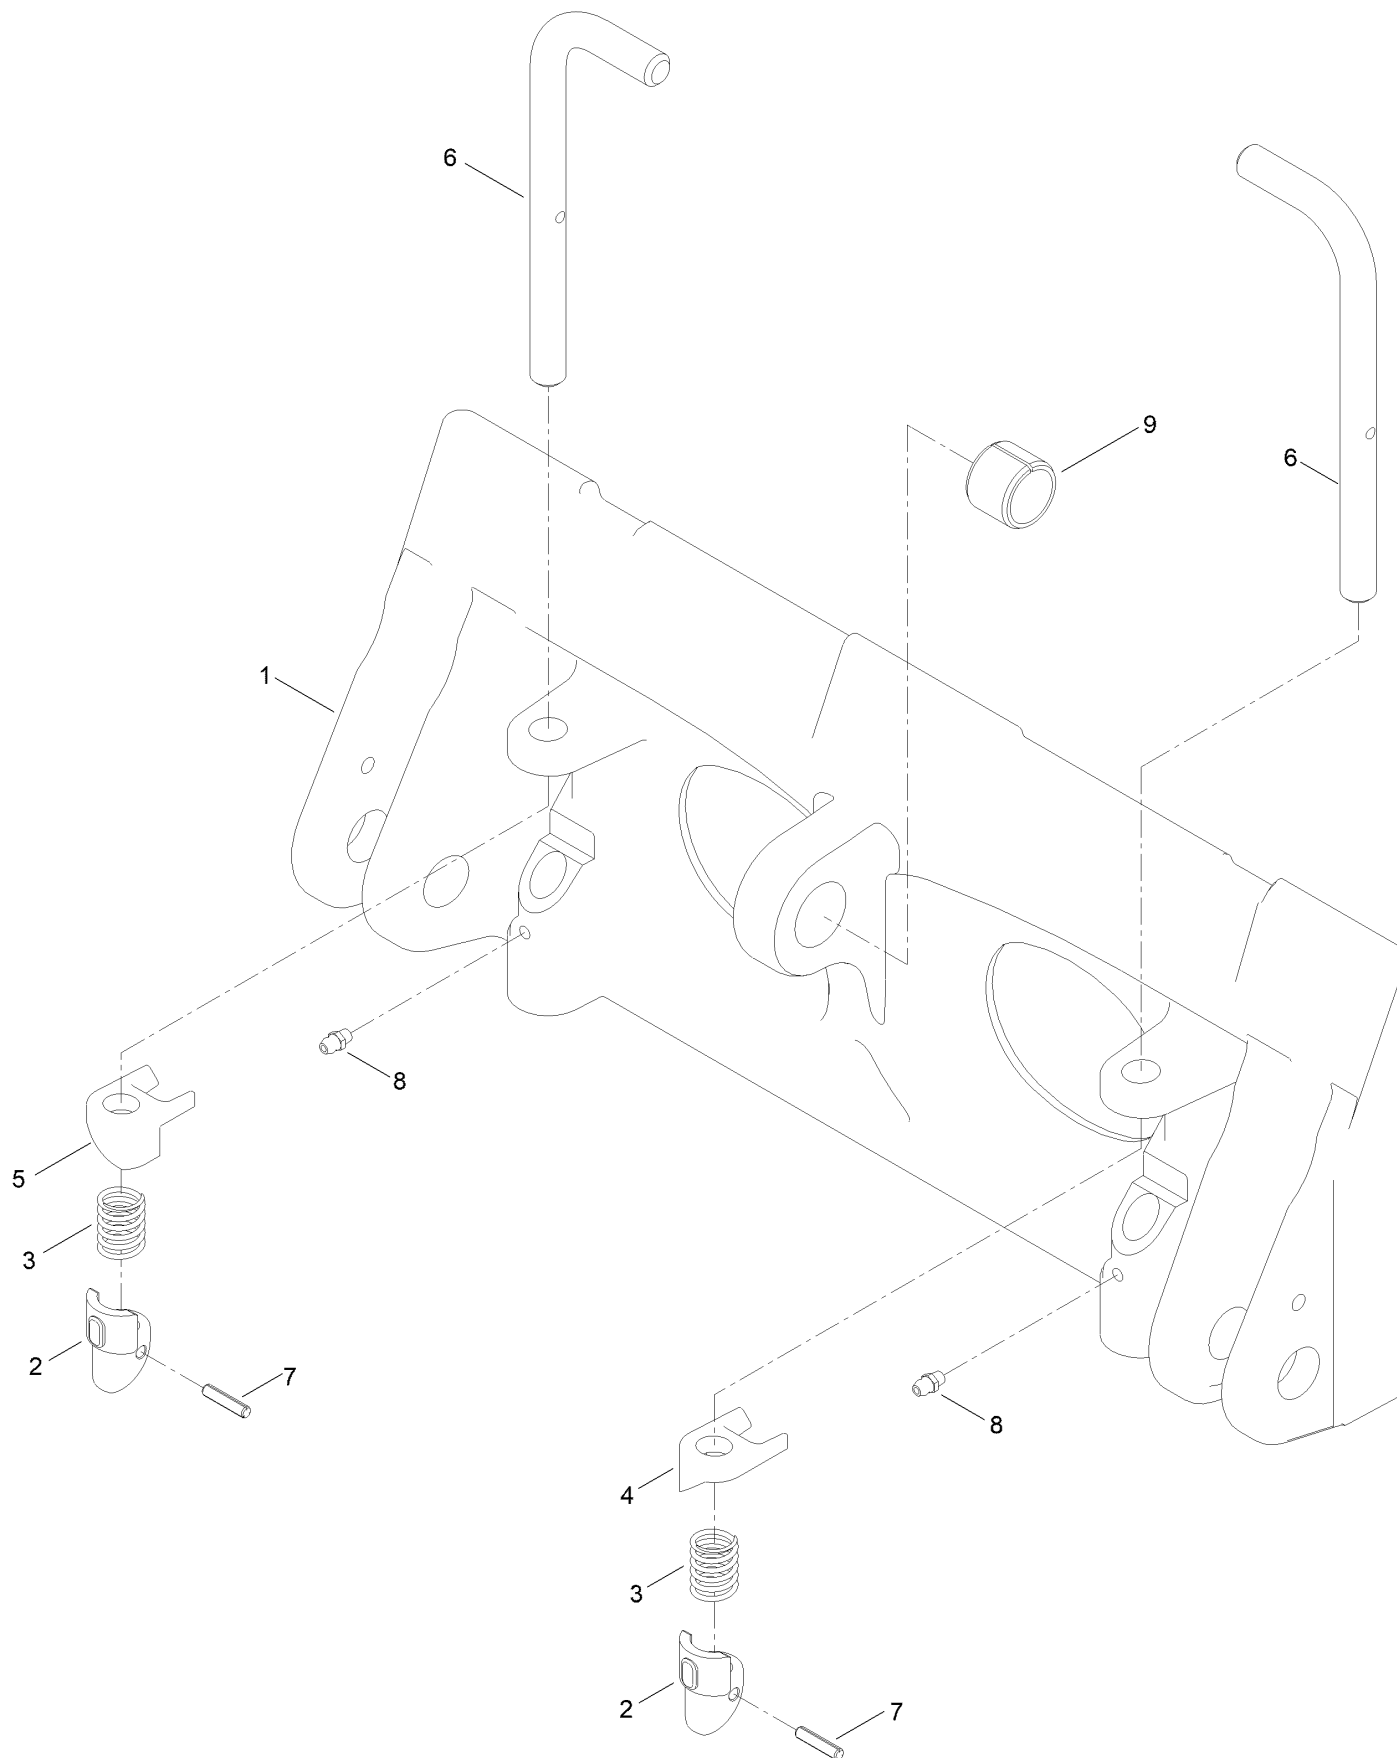


Quick Attach Assembly No. 132-8418 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-7708-03	1	Mount-Qtach
2	105-0246	2	Cam
3	98-4694	2	Spring-Compression
4	104-5909	1	Stop-RH
5	104-5903	1	Stop-LH

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	132-8419	2	Pin-Locking
7	3285-1	2	Pin-Grooved
8	302-5	2	Fitting-Grease
9	98-4871	1	Bushing-Tension


Battery Assembly

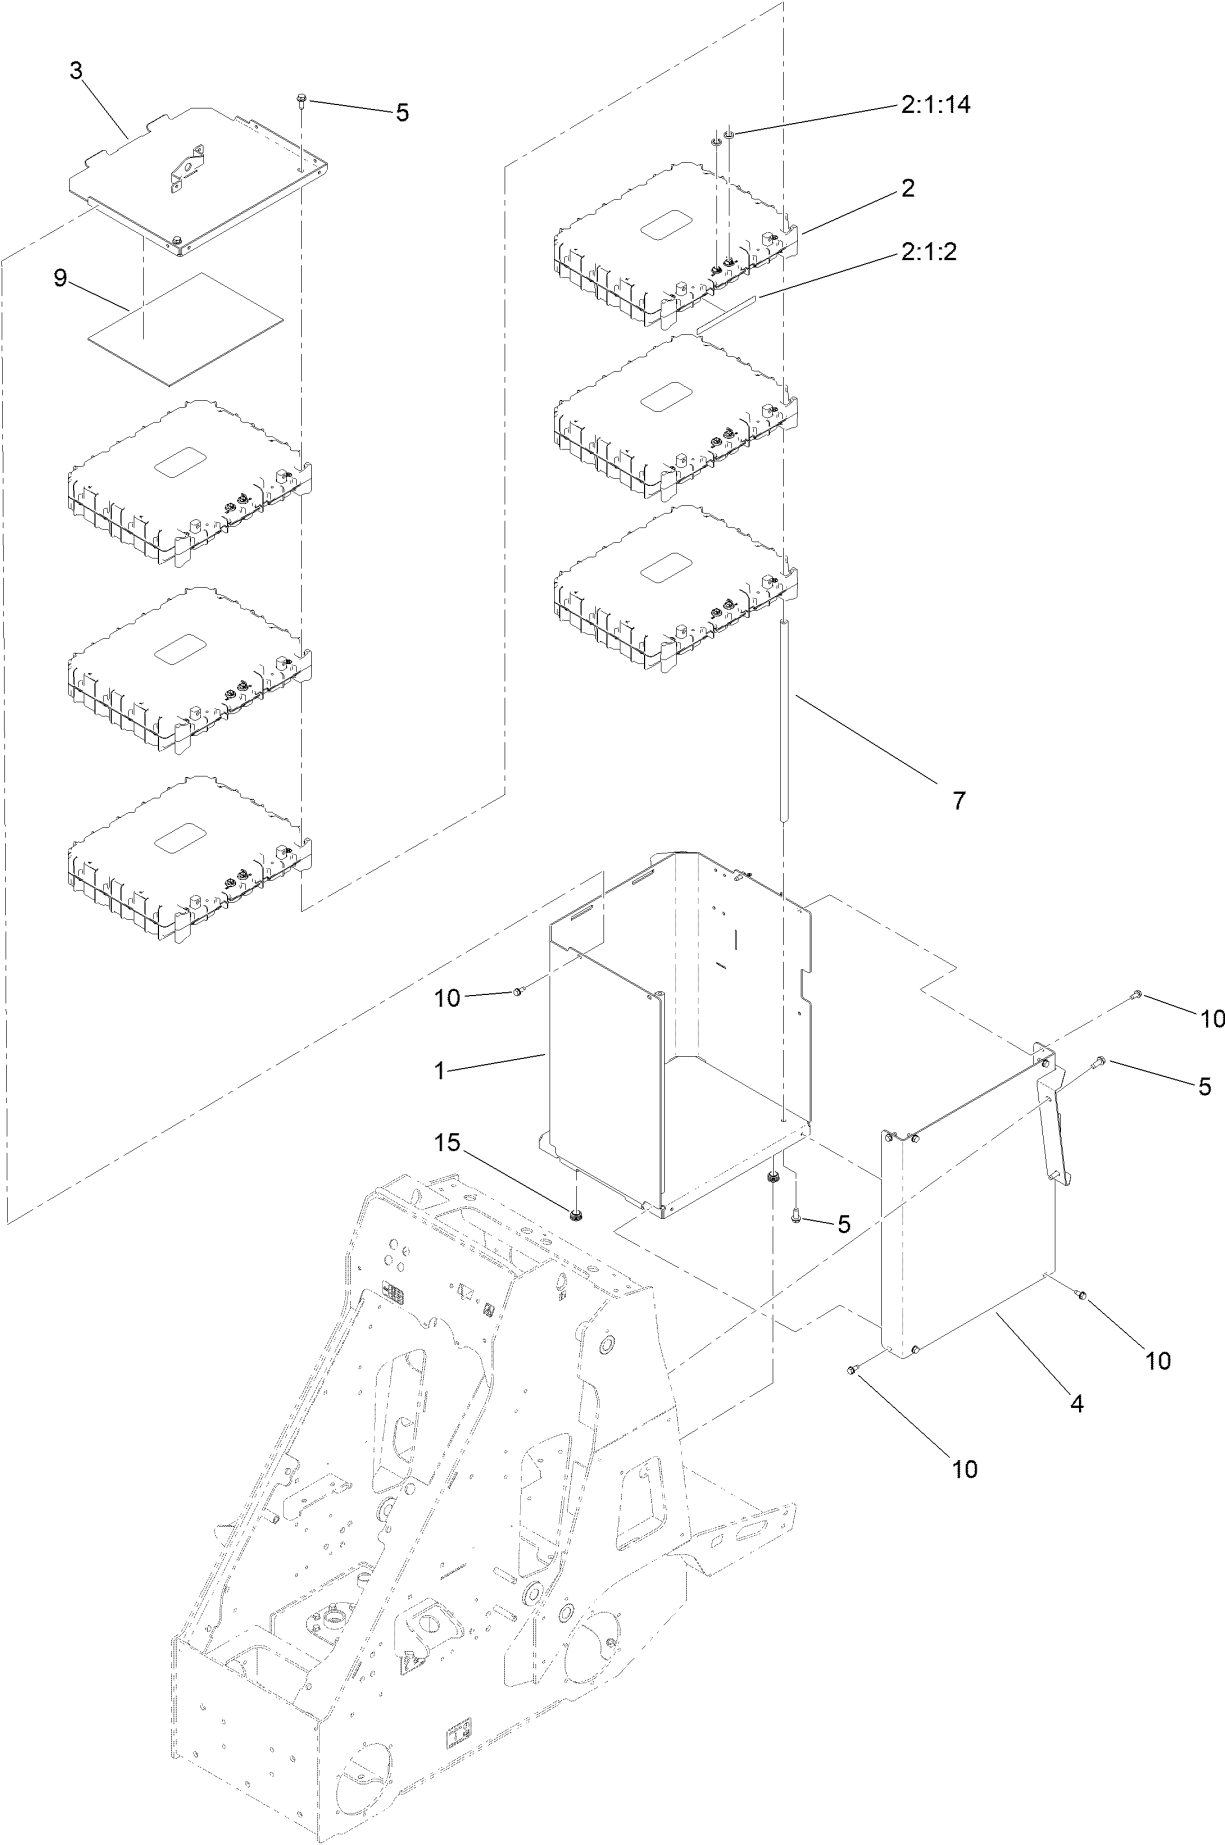

Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-4765-0P	1	Base-Battery, Box [primed]	4	145-4740-0P	1	Mount-Battery [primed]
2	145-5320	6	Battery ASM	5	139-2428	8	Screw-HWH
2:1:2	145-5338	1	Decal-Warning, Battery	7	140-7293	2	Lock-Battery
2:1:14	32180-466	2	Nut-Mounting, Jwpf Panel Lock	9	145-2366	1	Foam-Battery Box
3	145-4770-0P	1	Cover-Battery [primed]	10	32144-11	11	Screw-HWH
				15	145-2365	4	Glide-Battery Box


Onboard Charger Assembly

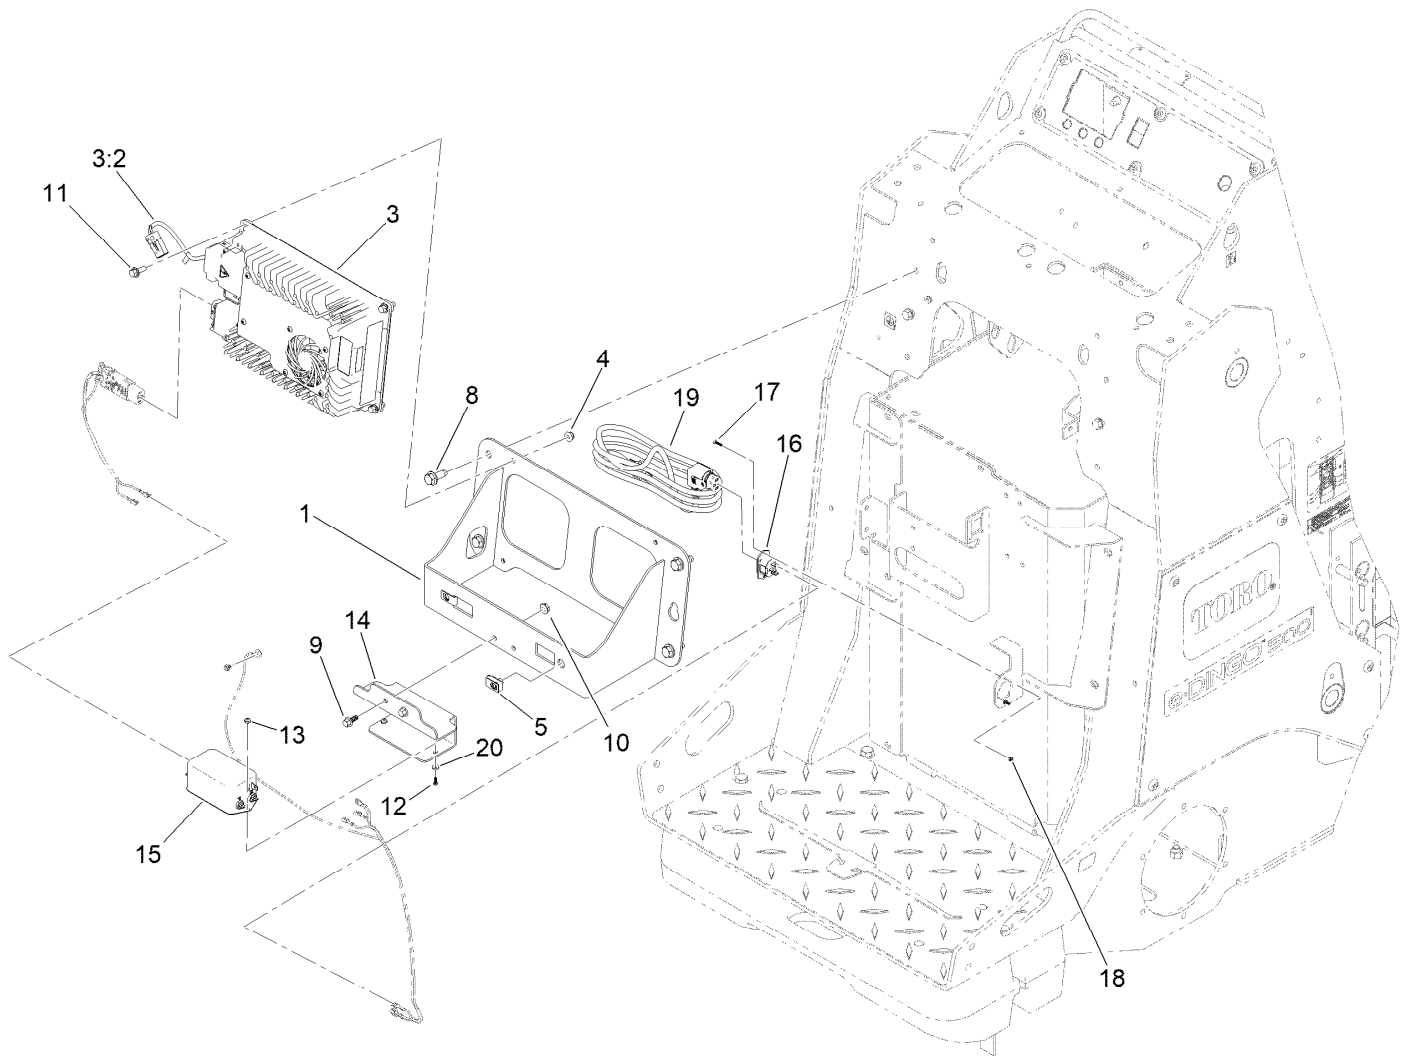

Onboard Charger Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2369-03	1	Mount-Charger [black]	12	363-6518	2	Scr,Mch,6-32X3/8,Phph,Sst,Rohs
3	145-1177	1	Charger-Onboard	13	120-9684	2	Nut-Lock
3:2	147-3234	1	Kit-Service, DC Harness	14	147-6007-0P	1	Bracket - Filter
4	104-7201	4	Nut-HF, NI	15	147-3225	1	Filter
5	115-7721	2	Nut-Clip, U	16	147-3230	1	Connector-lec
8	139-2428	4	Screw-HWH	17	510-0015	2	Ball, Governor
9	99-6810	2	Screw-HHF	18	3296-52	2	Nut-Lock, NI
10	32128-14	2	Nut-HF	19	137-7983	1	Cord-AC, 120V
11	120-9678	4	Screw-HHF	20	3256-12	2	Washer-Flat


Inverter Assembly

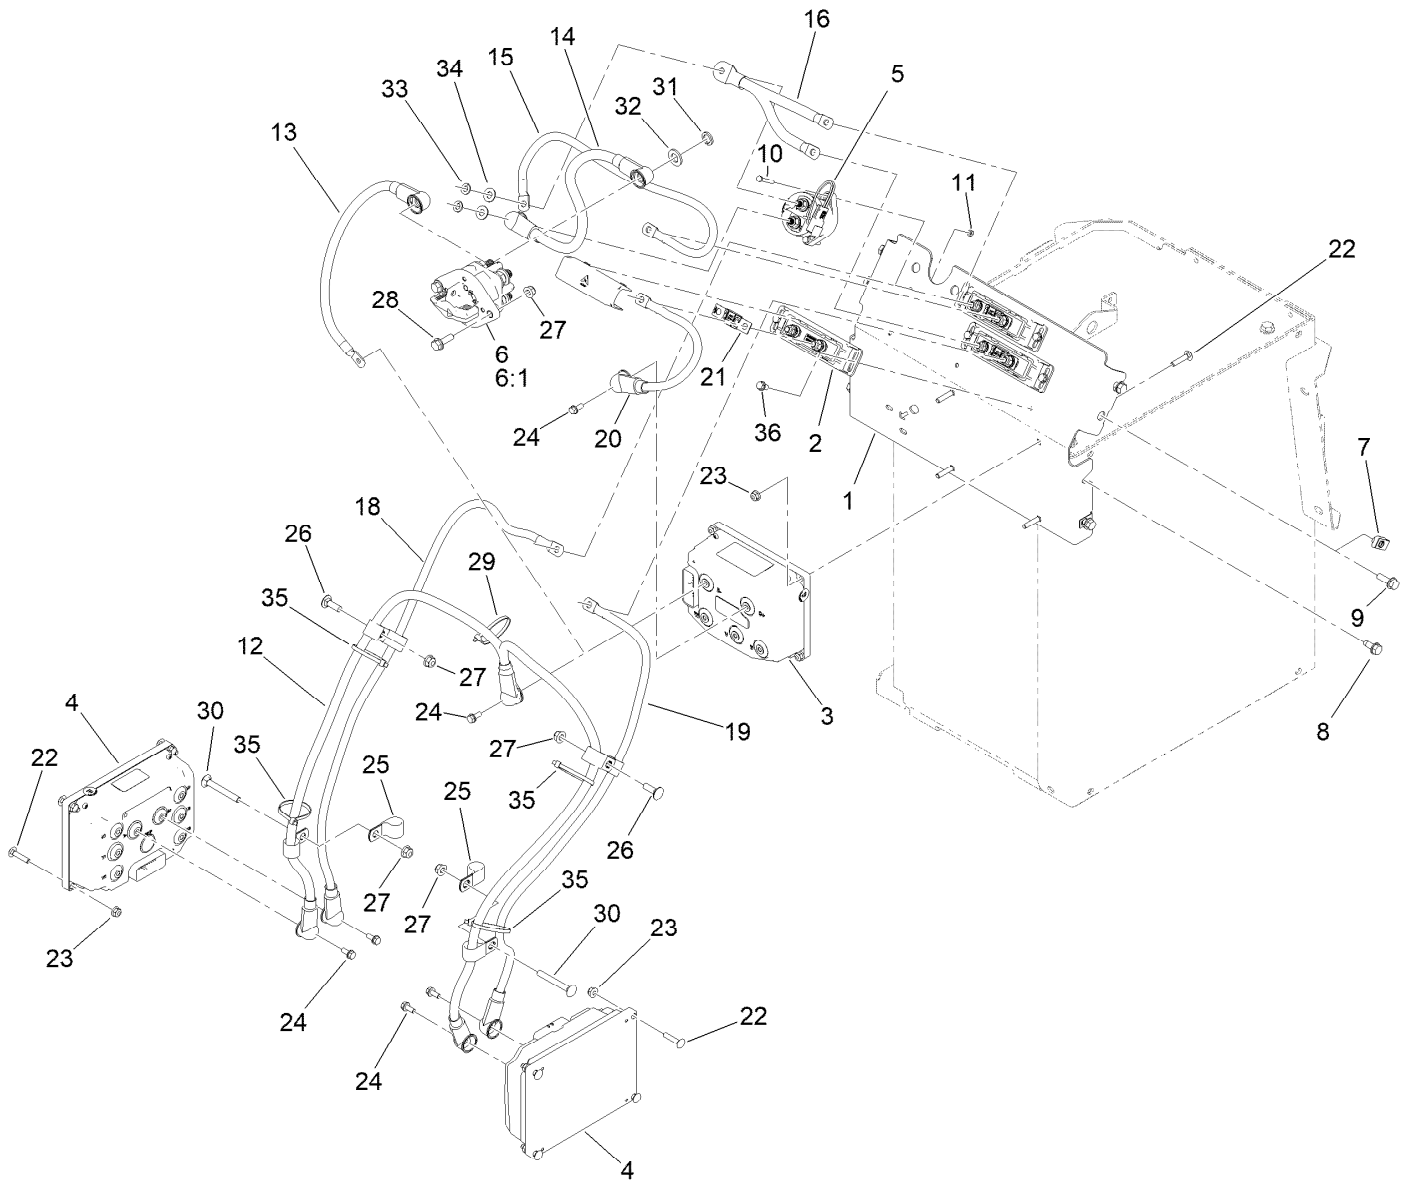

Inverter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2351-03	1	Bracket-Mount, Inverter	20	122-2653	1	Cable-Battery, Rd ASM
2	145-4958	3	Holder-Fuse	21	122-2561	3	Fuse-200A
3	145-5050	1	Inv/Ctrlr-48V, 185Arms	22	3229-3	12	Screw-CARR
4	138-8984	2	Inv/Ctrlr-48V, Dual 94Arms	23	119-4040	12	Nut-HF, NI
5	122-2594	1	Contactor-48V	24	145-5782	6	Screw-Sems
6	122-0603	1	Switch-Disconnect	25	2412-4	8	Clamp-R
6:1	33006-00	1	Nut-HF	26	3230-2	2	Bolt-CARR
7	94-2413	4	Nut-U	27	104-8300	6	Nut-HF, NI
8	32144-11	4	Screw-HWH	28	3234-17	2	Screw-HHF
9	115-5142	4	Screw-HHF	29	3290-378	1	Tie-Cable
10	87-5150	2	Screw-HH	30	3230-8	2	Screw-CARR
11	87-5140	2	Nut-Lock	31	HDW14457	4	Split Lock
12	122-2751	1	Cable-Battery, Bk ASM				Washer, 1/2, ST/ST, 18-8
13	122-2765	1	Cable-Battery, Bk ASM	32	147-3238	4	Washer-Flat
14	122-2646	1	Cable-Battery, Rd ASM	33	107-0280	2	Washer-Lock
15	122-2648	1	Cable-Battery, Rd ASM	34	107-0279	2	Washer
16	122-2753	1	Cable-Battery, Rd ASM	35	3290-379	4	Tie-Cable
18	122-2651	1	Cable-Battery, Rd ASM	36	32144-4	6	Screw-HWH
19	122-2652	1	Cable-Battery, Rd ASM				


Main Wire Harness Assembly

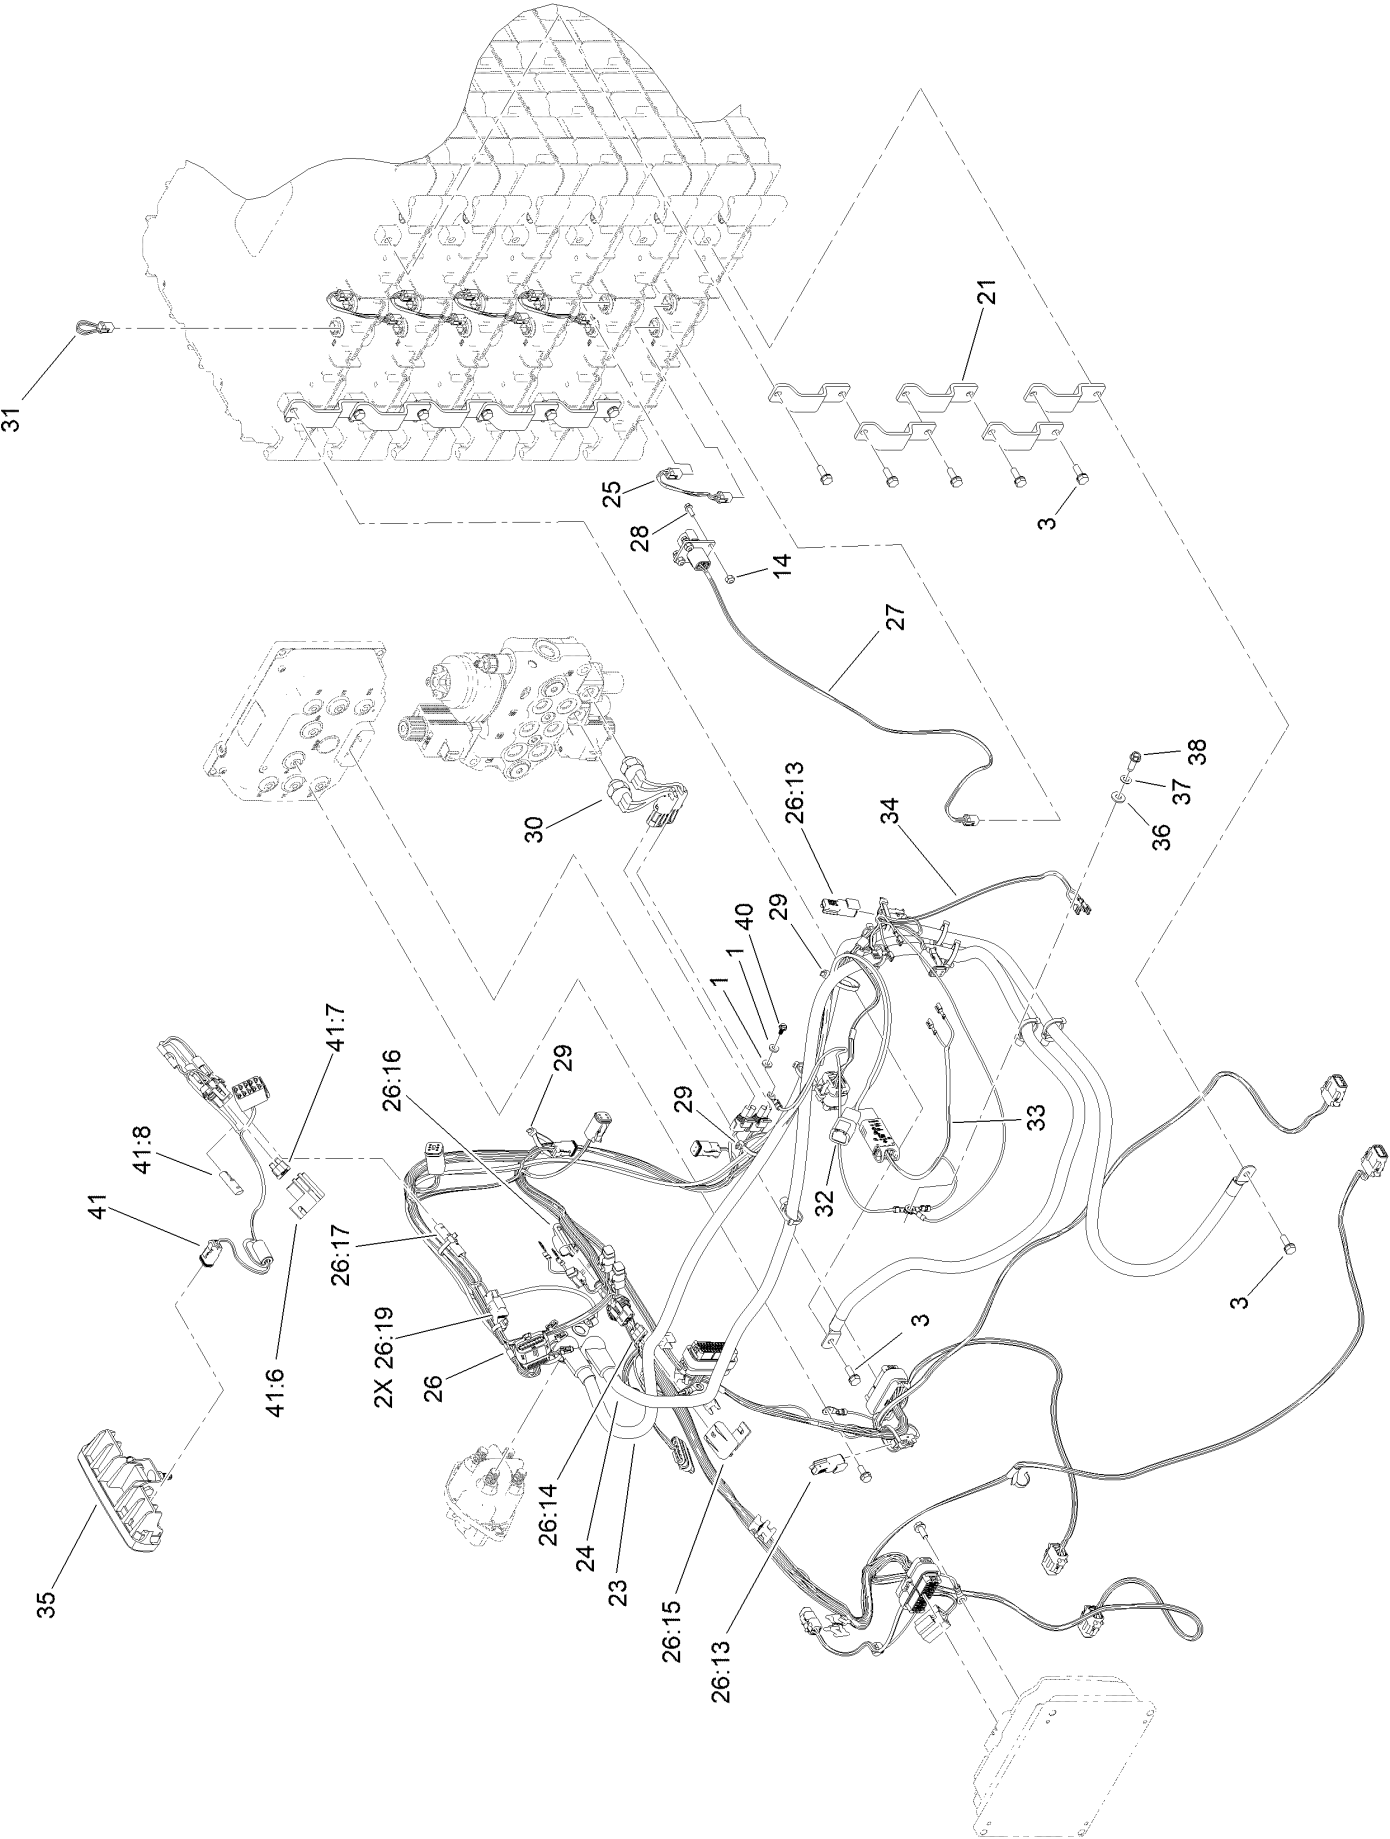

Main Wire Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3256-21	2	Washer-Flat	29	3290-378	3	Tie-Cable
3	145-5783	12	Screw-Sems	30	72-4320	2	Switch-Ball
14	3296-1	4	Nut-Lock	31	122-2323	1	Harness-Wire, Can Terminator
21	147-6031	10	Bar-Bus, 400A	32	122-2728	1	Harness-Wire, Jumper
23	122-2645	1	Cable-Battery, Rd ASM	33	122-2744	1	Harness-Wire, AC Charger
24	122-2752	1	Cable-Battery, Bk ASM	34	122-2824	1	Harness-Wire, AC Charger
25	140-9565	5	Harness-Wire, Data Interface	35	145-4774	1	Light-Work, LED Bar
26	122-2509	1	Harness-Wire, Main	36	120-9679	1	Washer-Flat
26:13	32180-282	2	Resistor-120 Ohm	37	1-303435	1	Washer-Spring
26:14	117-4724	1	Fuse-Blade, 10A	38	49-2040	1	Screw-HWHTF
26:15	32180-019	1	Cover-Fuse, Single	40	147-3228	1	Screw-Ground
26:16	32180-089	1	Cap-Plug, 3 Way	41	122-2367	1	Harness-Wire, Light Kit
26:17	116-0053	1	Cap-Plug	41:6	32180-019	1	Cover-Fuse, Single
26:19	32180-091	2	Cap-Dust, 2 Way	41:7	117-4720	1	Fuse-Blade, 3A
27	122-2402	1	Harness-Wire, Pack Comm	41:8	116-0053	1	Cap-Plug
28	112-3169	4	Screw-HHF, Serrated				


Drivetrain Electrical Connection Assembly

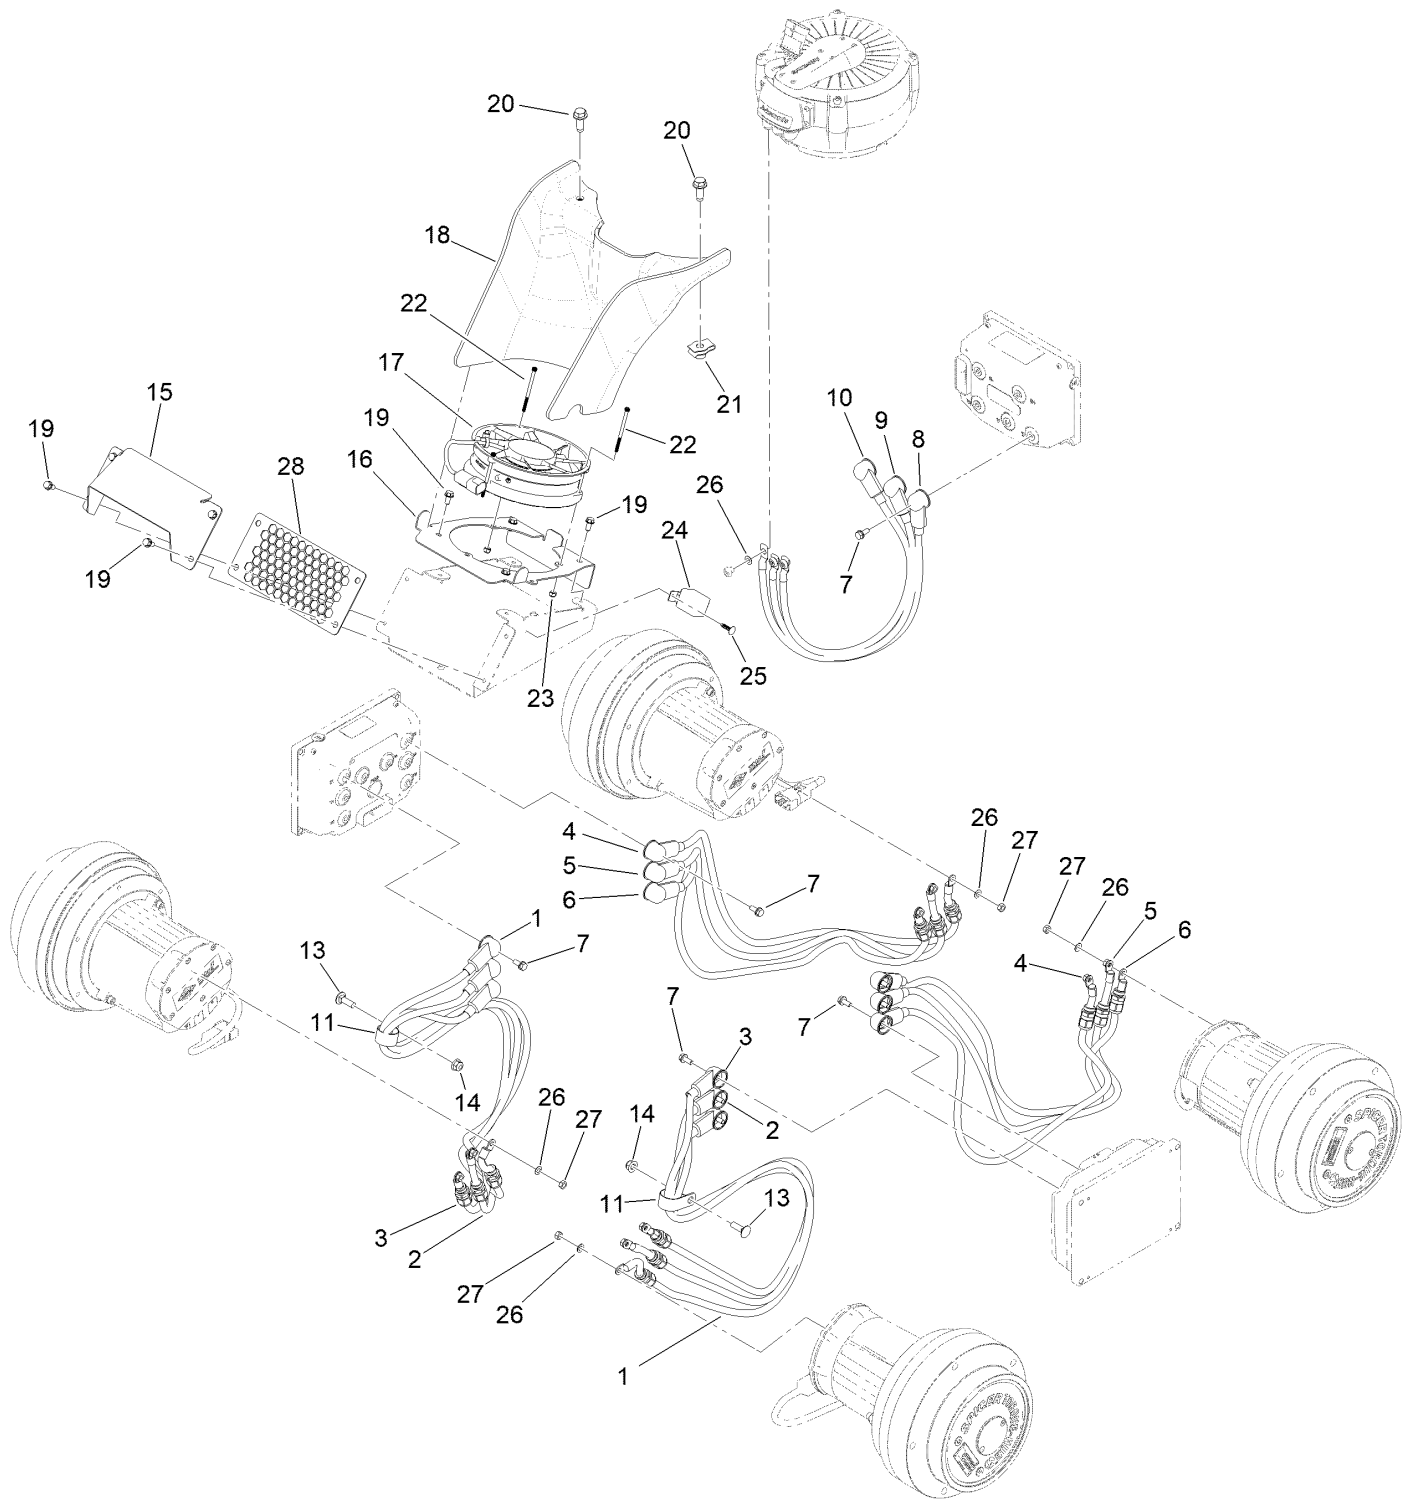

Drivetrain Electrical Connection Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-2345	2	Cable-Battery, Rd ASM	16	145-4753-03	1	Plate-Adapter,Fan
2	122-2346	2	Cable-Battery, Rd ASM	17	145-4747	1	Fan-48V, 6.8"
3	122-2347	2	Cable-Battery, Rd ASM	18	145-4754	1	Shroud-Fan
4	122-2390	2	Cable-Battery, Rd ASM	19	32144-4	8	Screw-HWH
5	122-2391	2	Cable-Battery, Rd ASM	20	139-2428	2	Screw-HWH
6	122-2392	2	Cable-Battery, Rd ASM	21	105-4886	2	Nut-Tinnerman
7	145-5782	15	Screw-Sems	22	145-4759	3	Screw-HSH
8	122-2343	1	Cable-Battery, Rd ASM	23	3296-1	3	Nut-Lock
9	122-2348	1	Cable-Battery, Rd ASM	24	122-2401	1	Relay, 48V Coil, 50A At 48V
10	122-2389	1	Cable-Battery, Rd ASM	25	125-8067	1	Plug-Plastic
11	2412-126	2	R-Clamp	26	1-303435	15	Washer-Spring
13	3230-2	2	Bolt-CARR	27	HDW21408	12	Nut-Hex
14	104-8300	2	Nut-HF, NI	28	145-4786-03	1	Screen - Fan Guard
15	145-4752-03	1	Deflector-Fan				

Control Panel Assembly

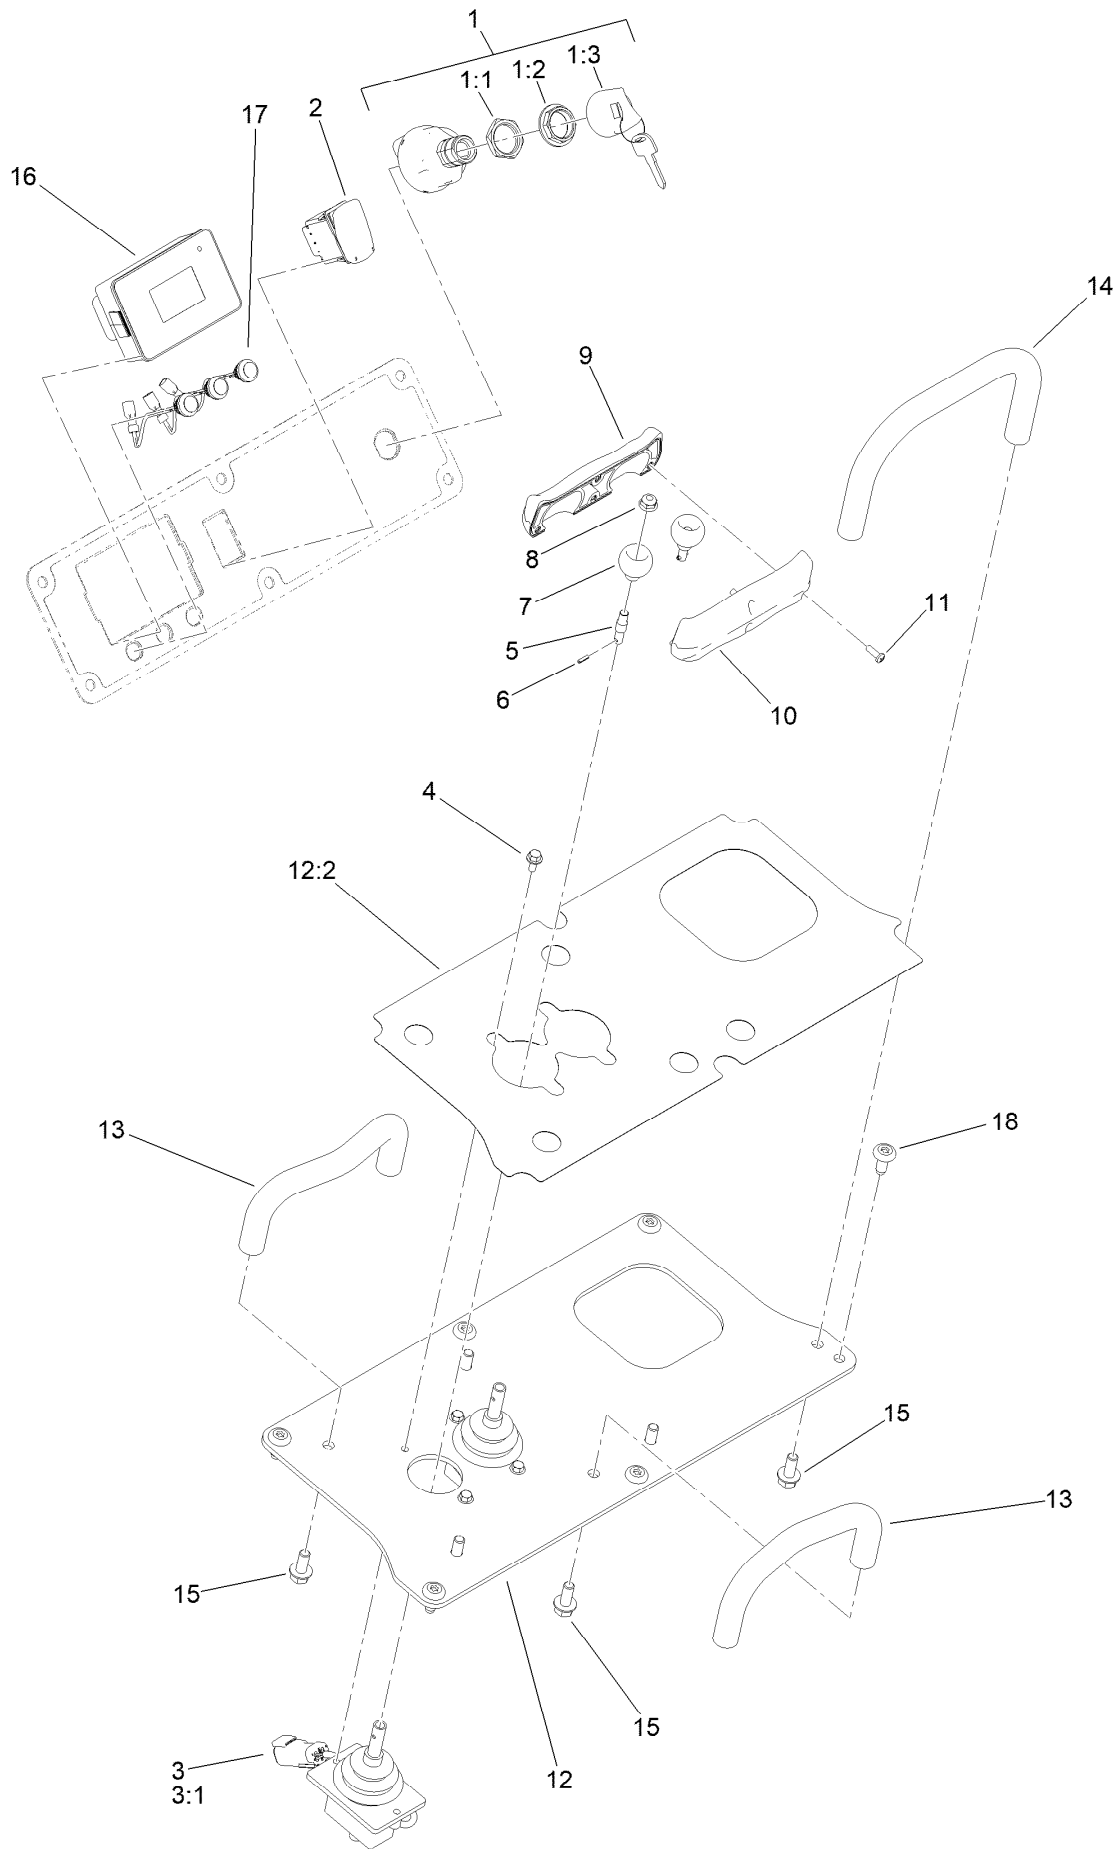

Control Panel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-2513	1	Switch-Ignition, Suns	9	139-1166	1	Handle-Front
1:1	121-5160	1	Nut-Hex ●	10	139-1167	1	Handle-Rear
1:2	122-2704	1	Nut-Face, M22 (Plastic)	11	94-6961	4	Screw
1:3	121-5162	1	Set-Key, Ignition	12	147-6014	1	Panel-Controls [sunbelt]
2	112-9421	1	Switch	12:2	145-2443	1	Decal - Control Panel
3	136-4784	2	Lever-Control	13	138-4693	2	Bar-Reference
3:1	133-0289	1	Lever-Control, Joystick	14	145-4760	1	Bar-Reference
4	120-4579	4	Screw-HHF	15	3234-5	6	Screw-HHF
5	137-0431	2	Shaft-Handle	16	122-2152	1	Controller, Tdm-1601
6	137-0432	2	Pin-Roll	17	136-9678	3	Switch-Pushbutton
7	130-7723	2	Ball-Traction	18	138-9753	6	Screw
8	104-7201	2	Nut-HF, NI				

● Not illustrated

Attachments and Accessories

For 22219G e-Dingo 500 Compact Tool Carrier

Product Name	Model/Part
Oil-Gear, Synthetic, Quart.....	144-6880
4 Cubic Foot Standard Bucket	22409
Loose Materials Bucket	22410
48in Hydraulic Blade.....	22414
Tree Forks	22438
Cement Bowl	22442
4-in-1 Bucket	22478
Narrow Bucket	22520
Grapple Rake	22577
Adjustable Forks	22586
Grapple Bucket.....	22590
Floor Scraper	22670
Universal Swivel Auger Head	22806
6in Full-Flight Auger Bit	22820
9in Full-Flight Auger Bit	22821
12in Full-Flight Auger Bit.....	22822
Hydraulic Breaker	23136
Leveler.....	23165

Notes:



Count on it.