



Form No. 3467-781 Rev A

Count on it.

Parts Catalog

Stand-On E-Spreader/Sprayer

Model No. 34230—Serial No. 412800000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly..... 4

Knee Pad Assembly..... 6

Steering Assembly..... 8

Steering Linkage Assembly No. 126-7185..... 10

Ground Drive Assembly..... 12

Transaxle Cover Assembly No. 126-1462..... 14

Engine Assembly..... 16

Electrical Assembly..... 18

Spray System Assembly..... 20

Sprayer Tank Assembly No. 126-0286..... 22

Strainer Assembly No. 126-4358..... 24

Control Valve Manifold and Hose Assembly..... 26

Control Valve Manifold Assembly No. 142-7292..... 28

Left Nozzle Assembly No. 126-3667..... 30

Right Nozzle Assembly No. 126-3669..... 32


Center Nozzle Assembly No. 126-3668..... 34

Spreader Assembly..... 36

Spreader Hopper Assembly..... 38

Side Deflector Assembly..... 40

Frame Assembly

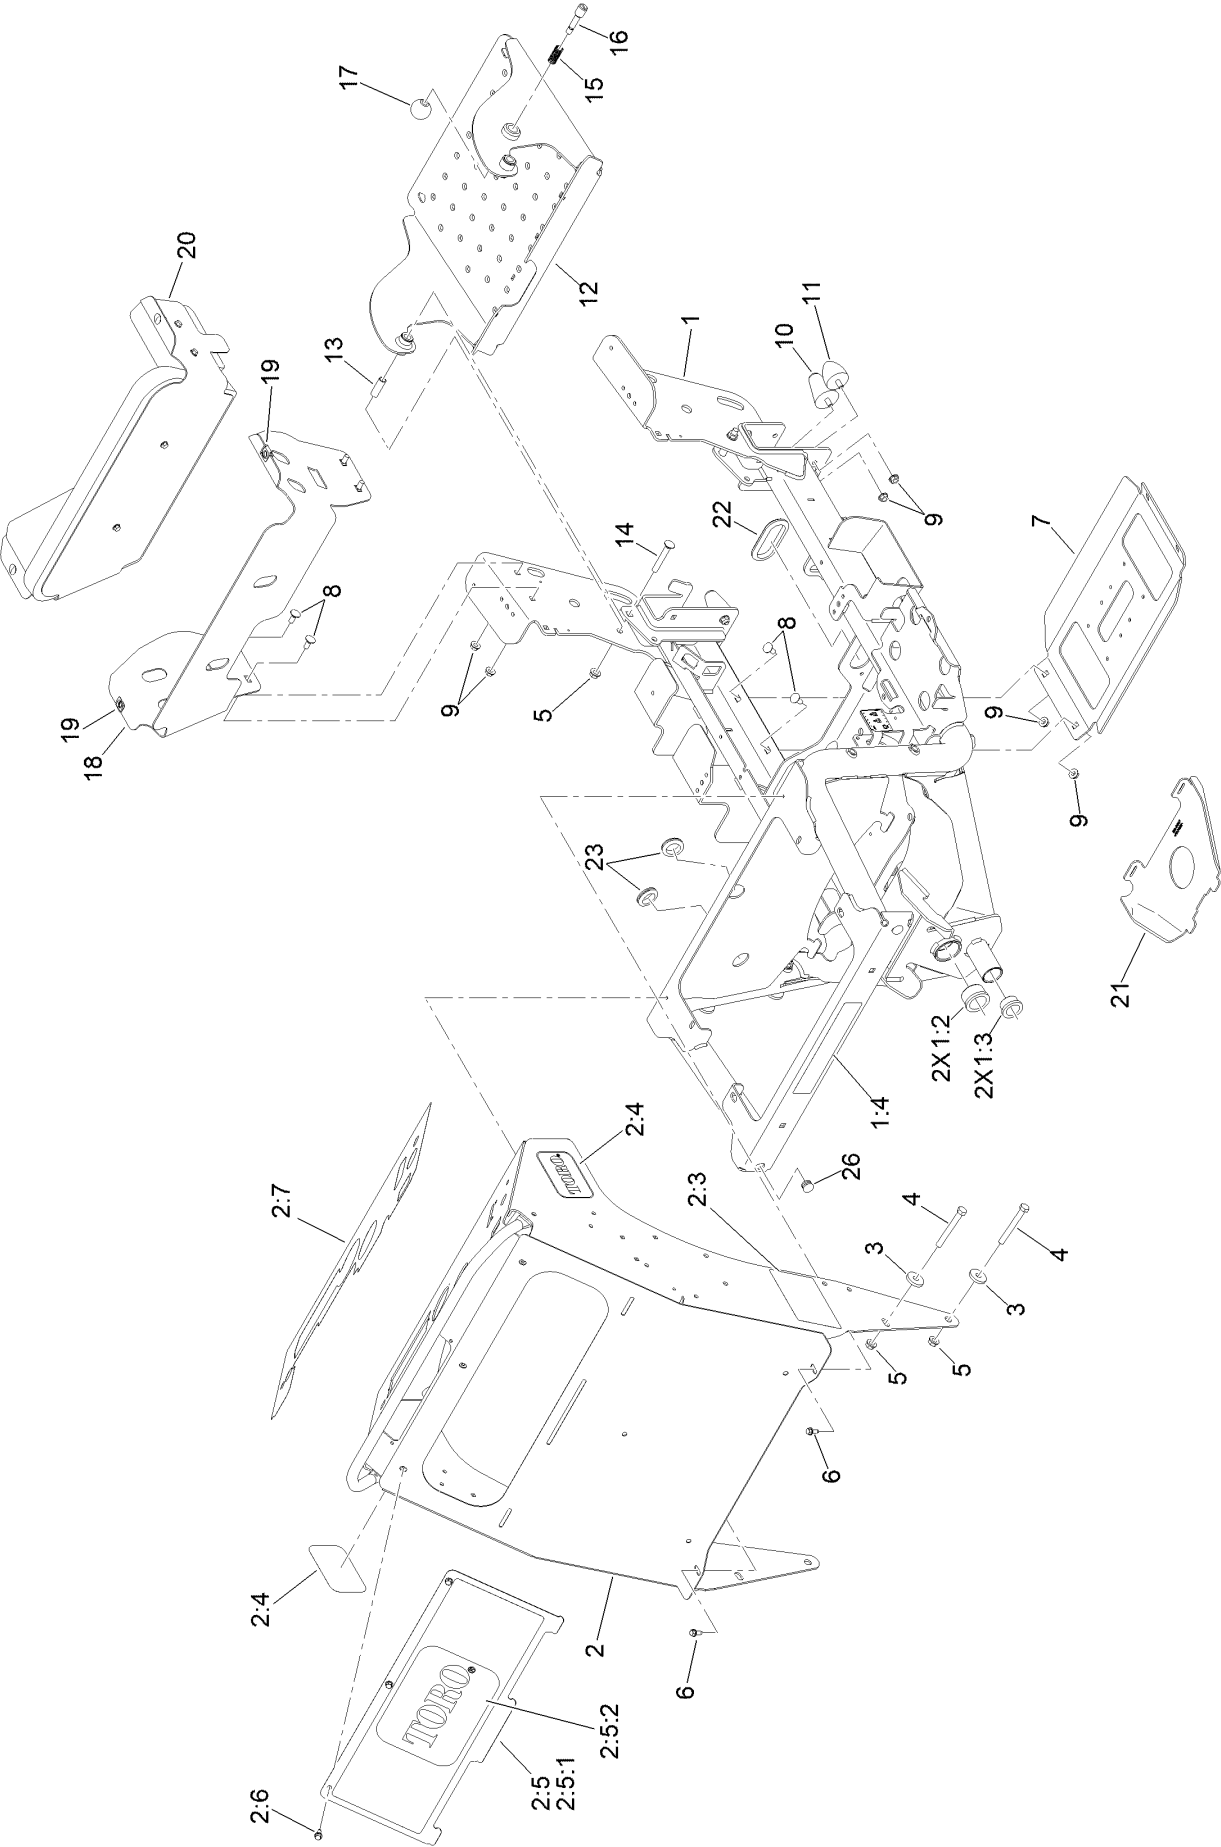


Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2788	1	Frame ASM	8	126-0695	8	Screw-CARR
1:2	126-3008	2	Bearing-Flanged	9	135-2881	12	Nut-HF
1:3	126-3002	2	Bearing-Flanged	10	114-1925	2	Bumper-Rubber
1:4	126-4994	1	Decal-Down, Tie	11	114-1926	2	Bumper-Rubber
2	142-7689	1	Control Tower ASM	12	126-0435	1	Operator Platform ASM
2:3	126-5186	1	Decal-Service Aid	13	126-0434	2	Bushing-Pivot, Platform
2:4	126-5060	2	Decal-Logo, Toro	14	126-0702	2	Screw-CARR
2:5	126-7216	1	Access Panel W/ Decal	15	114-5348	1	Spring
2:5:1	126-6402-01	1	Panel-Access	16	119-8650	1	Pin-Latch
2:5:2	126-7225	1	Decal-Toro	17	1-603175	1	Knob-Ball
2:6	32144-10	3	Screw-HWH	18	126-1234-03	1	Mount-Pad, Knee
2:7	146-0563	1	Decal-Control	19	119-1730	2	Receptacle-Clip, Mini
3	126-3875	4	Washer	20		1	Knee Pad ASM ●
4	126-2661	4	Screw-HH	21	126-2567	1	Shield-Dust
5	135-2882	6	Nut-HF	22	237-164	2	Grommet
6	32144-10	2	Screw-HWH	23	240-5	2	Grommet
7	126-1415	1	Guard-Lower	26	126-5147	2	Plug-Tube

● Not serviced separately

Knee Pad Assembly

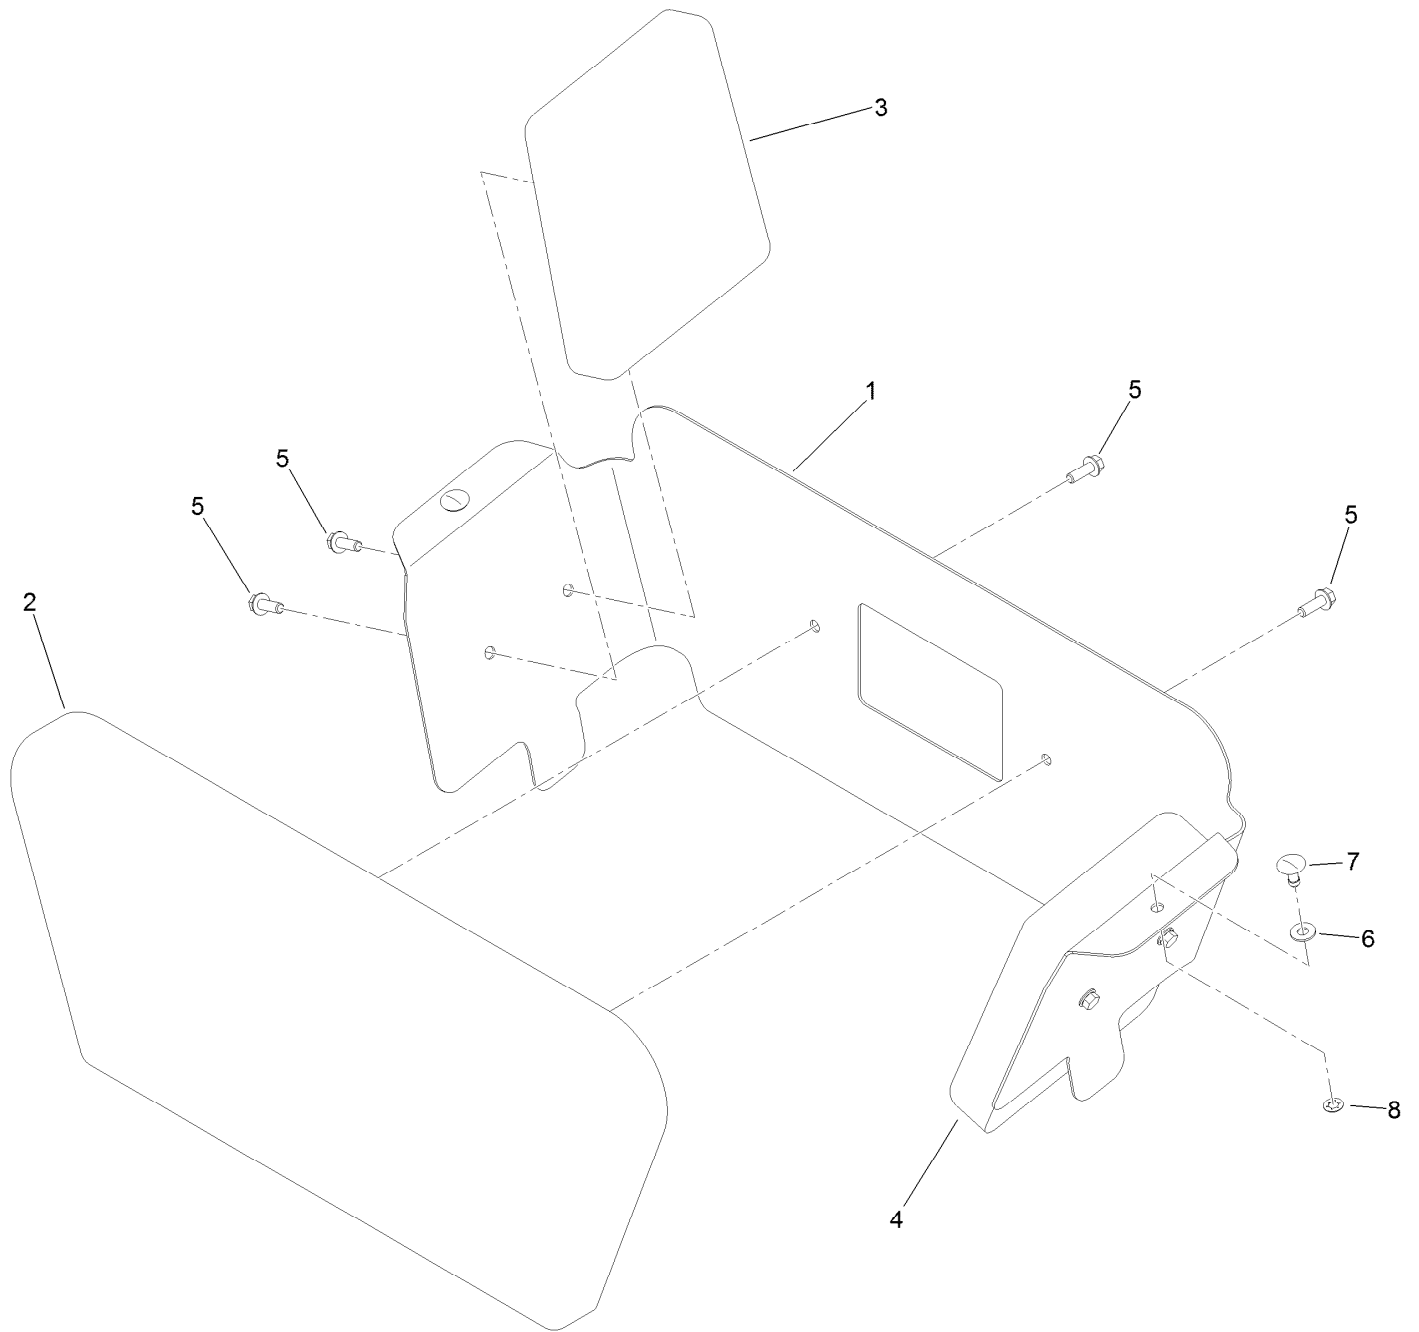

Knee Pad Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1244-03	1	Bracket-Pad, Knee	5	117-8304	6	Screw-HHF
2	142-2754	1	Pad-Knee, Center	6	360-0140	2	Washer-Flat
3	126-2780	1	Pad-Knee, Side (LH)	7	119-1728	2	Stud-1/4 Turn
4	126-2781	1	Pad-Knee, Side (RH)	8	119-1729	2	Retainer-Stud

This exploded perspective view shows the assembly of a mechanical component, likely a pump or actuator. The main body (1) is shown with various ports and mounting points. A long, curved tube (29) is connected to the main body via a fitting (31). A flexible hose (28) is connected to the tube (29) via a fitting (25). A long, thin rod (20) is connected to the main body via a fitting (21). A handle (19) is attached to the main body via a fitting (27). A long, thin rod (24) is connected to the main body via a fitting (22). A long, thin rod (23) is connected to the main body via a fitting (30). A long, thin rod (26) is connected to the main body via a fitting (25). A long, thin rod (32) is connected to the main body via a fitting (31). A long, thin rod (33) is connected to the main body via a fitting (32). A long, thin rod (13) is connected to the main body via a fitting (13:1). A long, thin rod (13:2) is connected to the main body via a fitting (13:1:1). A long, thin rod (13:3) is connected to the main body via a fitting (13:1:2). A long, thin rod (13:4) is connected to the main body via a fitting (13:1:1). A long, thin rod (8) is connected to the main body via a fitting (11). A long, thin rod (16) is connected to the main body via a fitting (1:3). A long, thin rod (5) is connected to the main body via a fitting (1:2). A long, thin rod (6) is connected to the main body via a fitting (5). A long, thin rod (1) is connected to the main body via a fitting (16).

Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7045	1	Front Axle ASM	15	126-0980	2	Screw-CARR
1:2	126-7048	4	Bearing-Sleeve	16	135-2882	6	Nut-HF
1:3	126-1375	3	Zerk-Grease	17	3257-7	1	Key-Woodruff
2	126-0656	1	Washer-Flat	18	135-3155	1	Motion Handle ASM
3	126-3841	1	Nut-Hex, NI	18:2	135-2844	1	Decal-Warning
4	135-3156	1	Steering Shaft ASM	19	126-1598	1	Motion Handle ASM
4:2	126-1375	1	Zerk-Grease	19:2	103-9928	2	Bearing
5	126-7044	4	Washer-Thrust	20	126-0496	1	Shaft-Pivot, Speed Control
6	126-6733	2	Front Axle ASM	21	116-4198	1	Spacer-Shaft, Drive Lever
7	126-7069	2	Arm-Steering	22	117-8304	2	Screw-HHF
8	126-3875	4	Washer	23	126-1604-03	1	Panel-Rear, Steering
10	126-7185	2	Steering Linkage ASM	24	32144-10	4	Screw-HWH
11	135-1711	4	Screw-HH	25	2411-41	2	Rod End-Ball Joint
12	98-5975	2	Washer-Belleville	26	126-0498	2	Screw-HH
13	126-7221	2	Wheel And Tire ASM	27	135-2880	2	Nut-HF
13:1	126-7261	1	Wheel ASM	28	126-2169	1	Cable-Motion
13:1:1	116-0720	2	Bearing-Ball	29	3290-378	2	Tie-Cable
13:1:2	126-7260	1	Spacer	30	104-1412	2	Bumper-Rubber
13:2	126-1509	1	Tire	31	3210-9	2	Screw-HH
13:3	232-27	1	Stem-Valve	32	32152-5	2	Nut-Hex
13:4	302-62	1	Fitting-Grease	33	126-7050	2	Spacer-Relief
14	116-9789	1	Bumper-Front				

Steering Linkage Assembly No. 126-7185

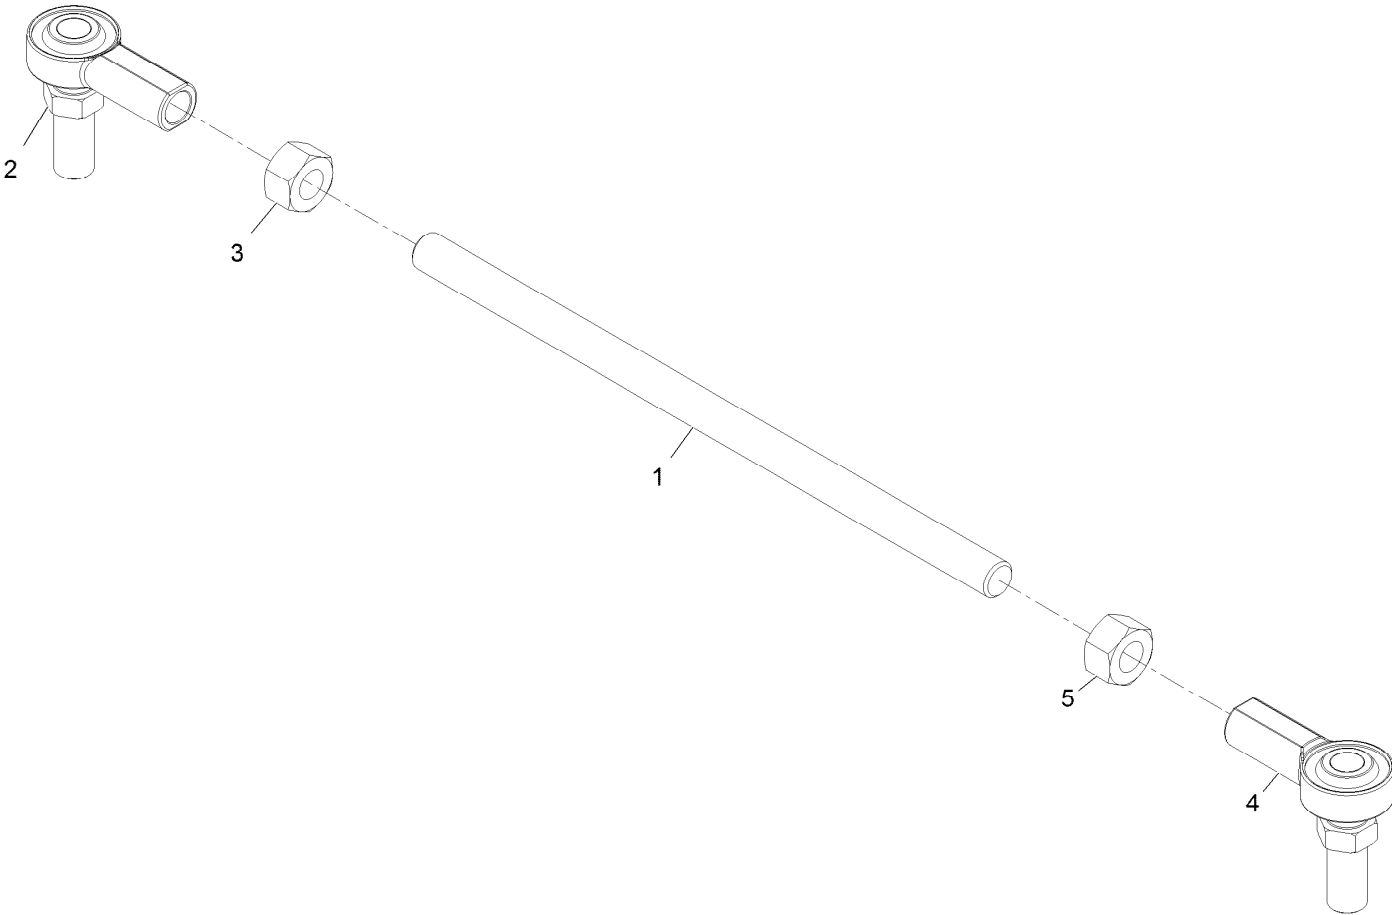


Steering Linkage Assembly No. 126-7185 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7183	1	Rod-Linkage, Steering
2	126-7181	1	Rod-End, RH
3	126-0687	1	Nut-Hex

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-7182	1	Rod-End, LH
5	126-0688	1	Nut-Hex, LH

Ground Drive Assembly

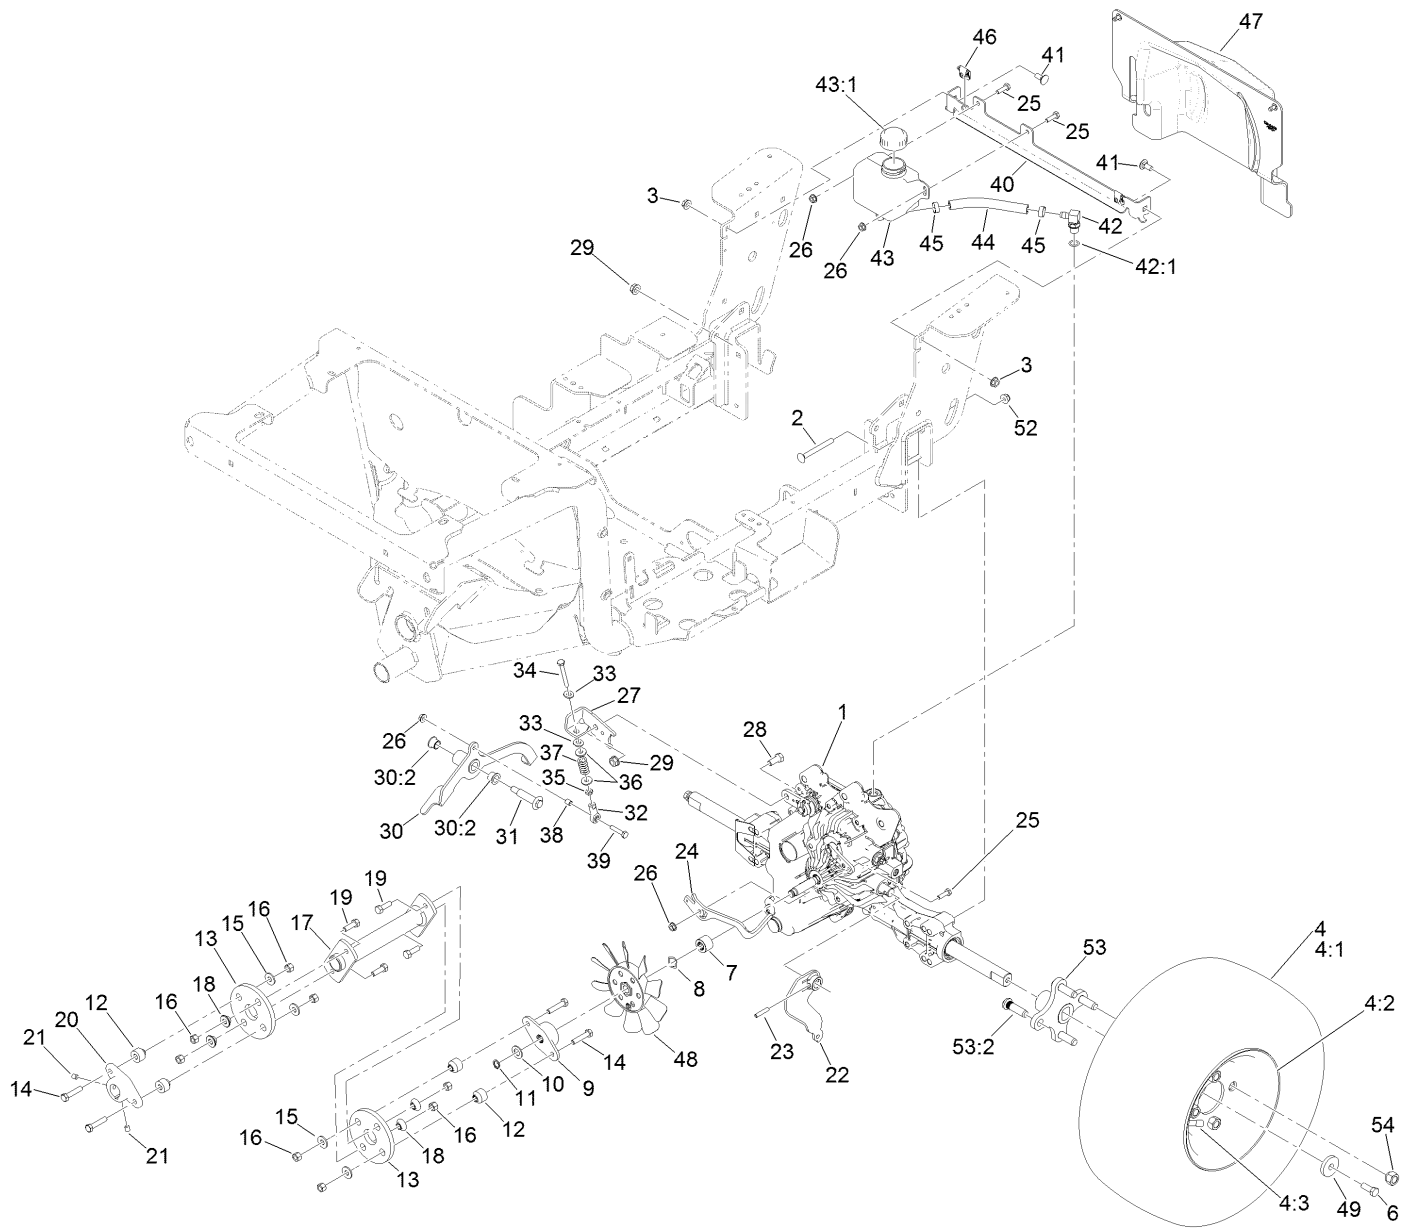


Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2814	1	Transaxle	26	135-2880	4	Nut-HF
1:99	126-9688	1	Kit-Seal ●	27	126-3937-03	1	Arm-Brake
1:99	135-3175	1	Kit-Transmission Seal ●	28	126-0520	1	Screw-HH
1:99	142-4793	1	Plug-Bore 20 ●	29	135-2882	2	Nut-HF
2	3230-26	4	Screw-CARR	30	126-0433	1	Brake Lever ASM
3	135-2881	2	Nut-HF	30:2	116-4279	2	Bearing-Flange
4	135-1898	2	Wheel And Tire ASM (Grey)	31	92-1057	1	Bolt-Shoulder
4:1	119-8907	1	Tire-4 Ply	32	2411-41	1	Rod End-Ball Joint
4:2	135-1899	1	Wheel (Grey)	33	1-303334	2	Washer-Spring
4:3	232-27	1	Stem-Valve	34	126-4009	1	Screw-HH
4:99	107-2491	1	Tube-Tire ●	35	3220-1	1	Nut-Jam
6	135-1711	2	Screw-HH	36	3256-78	2	Washer-Flat
7	126-2983	1	Spacer-Shaft, Input	37	1-323245	1	Spring-Compression
8	3290-317	1	Washer-Spring	38	612503	1	Spacer
9	116-9787	1	Hub-Shaft, Transaxle	39	321-8	1	Screw-HH
10	605256	1	Spacer	40	126-4423-03	1	Bracket-Mount, Tank
11	32151-61	1	Ring-Retaining	41	126-0695	2	Screw-CARR
12	27-6590	4	Spacer-Coupling, Rubber	42	126-2927	1	Fitting-90 DEG
13	115-4523	2	Coupling-Rubber	42:1	237-42	1	O-Ring
14	3210-8	4	Screw-HH	43	126-2578	1	Tank ASM
15	3256-3	4	Washer-Flat	43:1	126-2579	1	Cap-Tank
16	32152-5	8	Nut-Hex	44	126-2842	1	Hose-Expansion
17	135-5223-03	1	Shaft-Drive	45	126-3749	2	Clamp
18	125-9249	4	Spacer-Coupler, Rubber	46	119-1730	2	Receptacle-Clip, Mini
19	3210-5	4	Screw-HH	47	126-1462	1	Transaxle Cover ASM
20	116-9788	1	Hub-Shaft, Engine	48	126-2980	1	Fan-7 Inch
21	3246-18	2	Setscrew	49	1-543610	2	Washer-Clutch
22	126-6243-03	1	Arm-Motion	52	104-8300	4	Nut-HF, NI
23	126-4295	1	Pin-Spiral	53	126-9884	2	Wheel Hub ASM
24	126-2811-03	1	Arm-Release	53:2	10-6830	4	Stud-Type, Drive
25	126-0498	3	Screw-HH	54	242-50	4	Nut-Lug

● Not illustrated

Transaxle Cover Assembly No. 126-1462

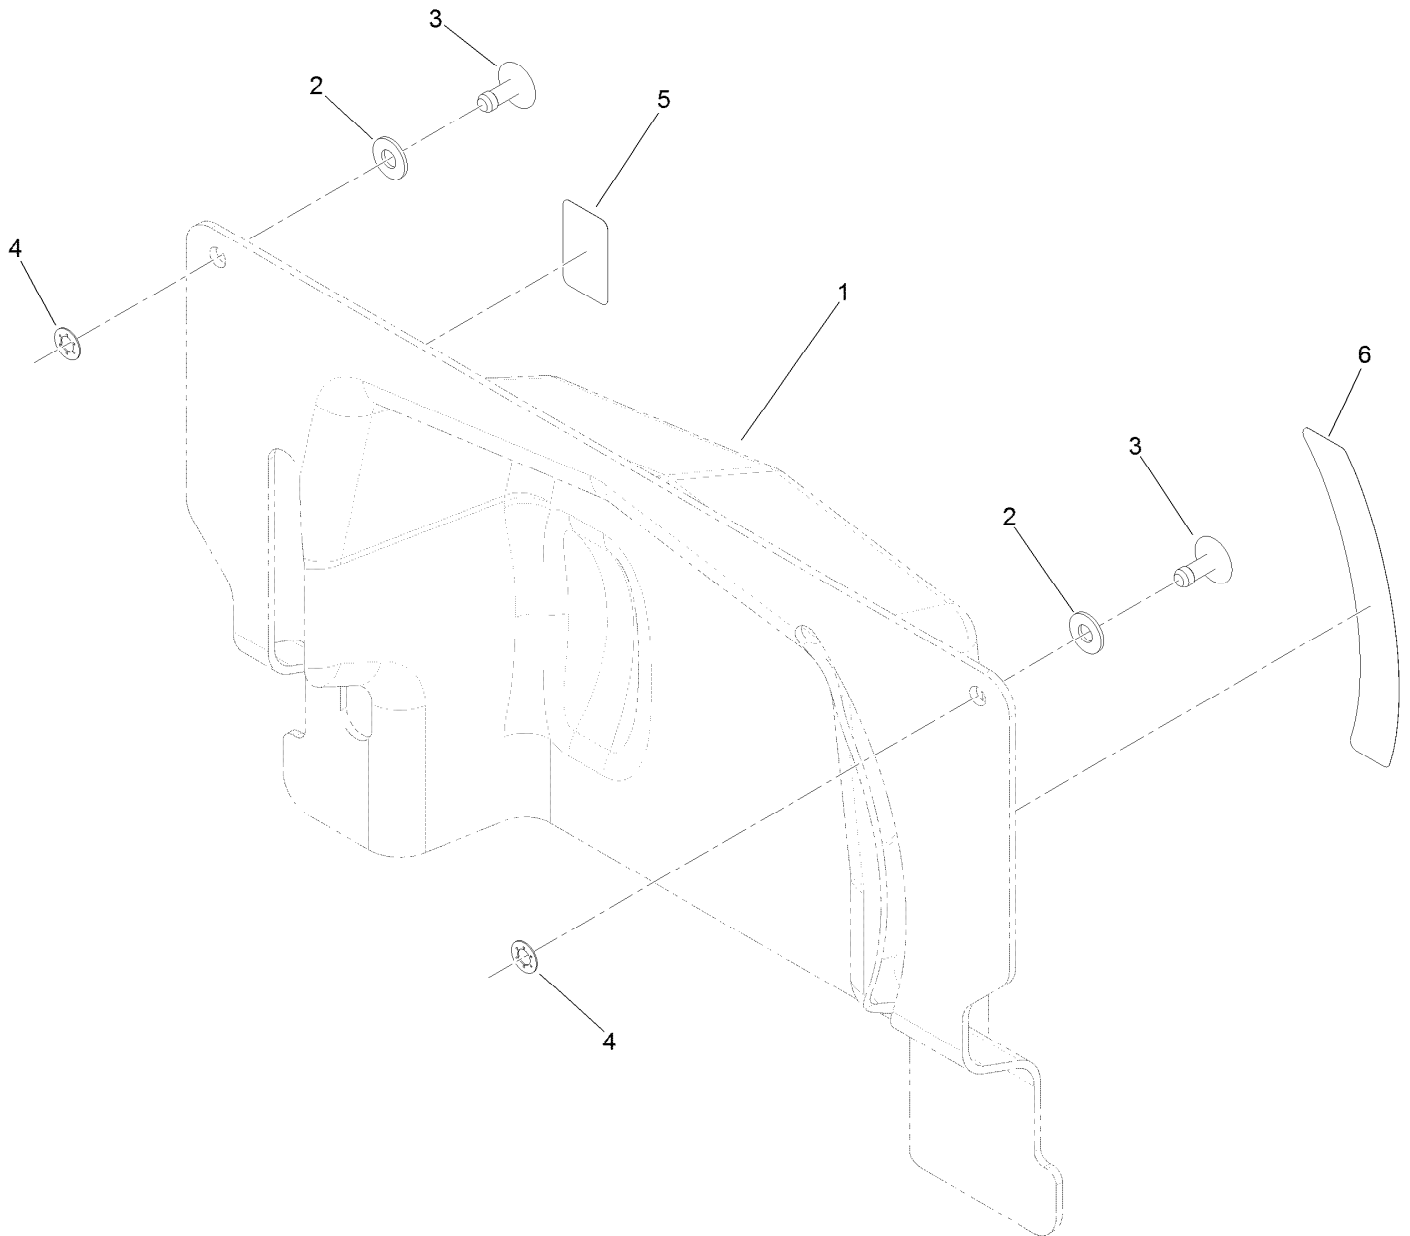


Transaxle Cover Assembly No. 126-1462 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Cover-Transaxle ●
2	360-0140	2	Washer-Flat
3	119-1728	2	Stud-1/4 Turn

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	119-1729	2	Retainer-Stud
5	126-2620	1	Decal-Brake, Park
6	126-2621	1	Decal-Release, Drive

● Not serviced separately


Engine Assembly

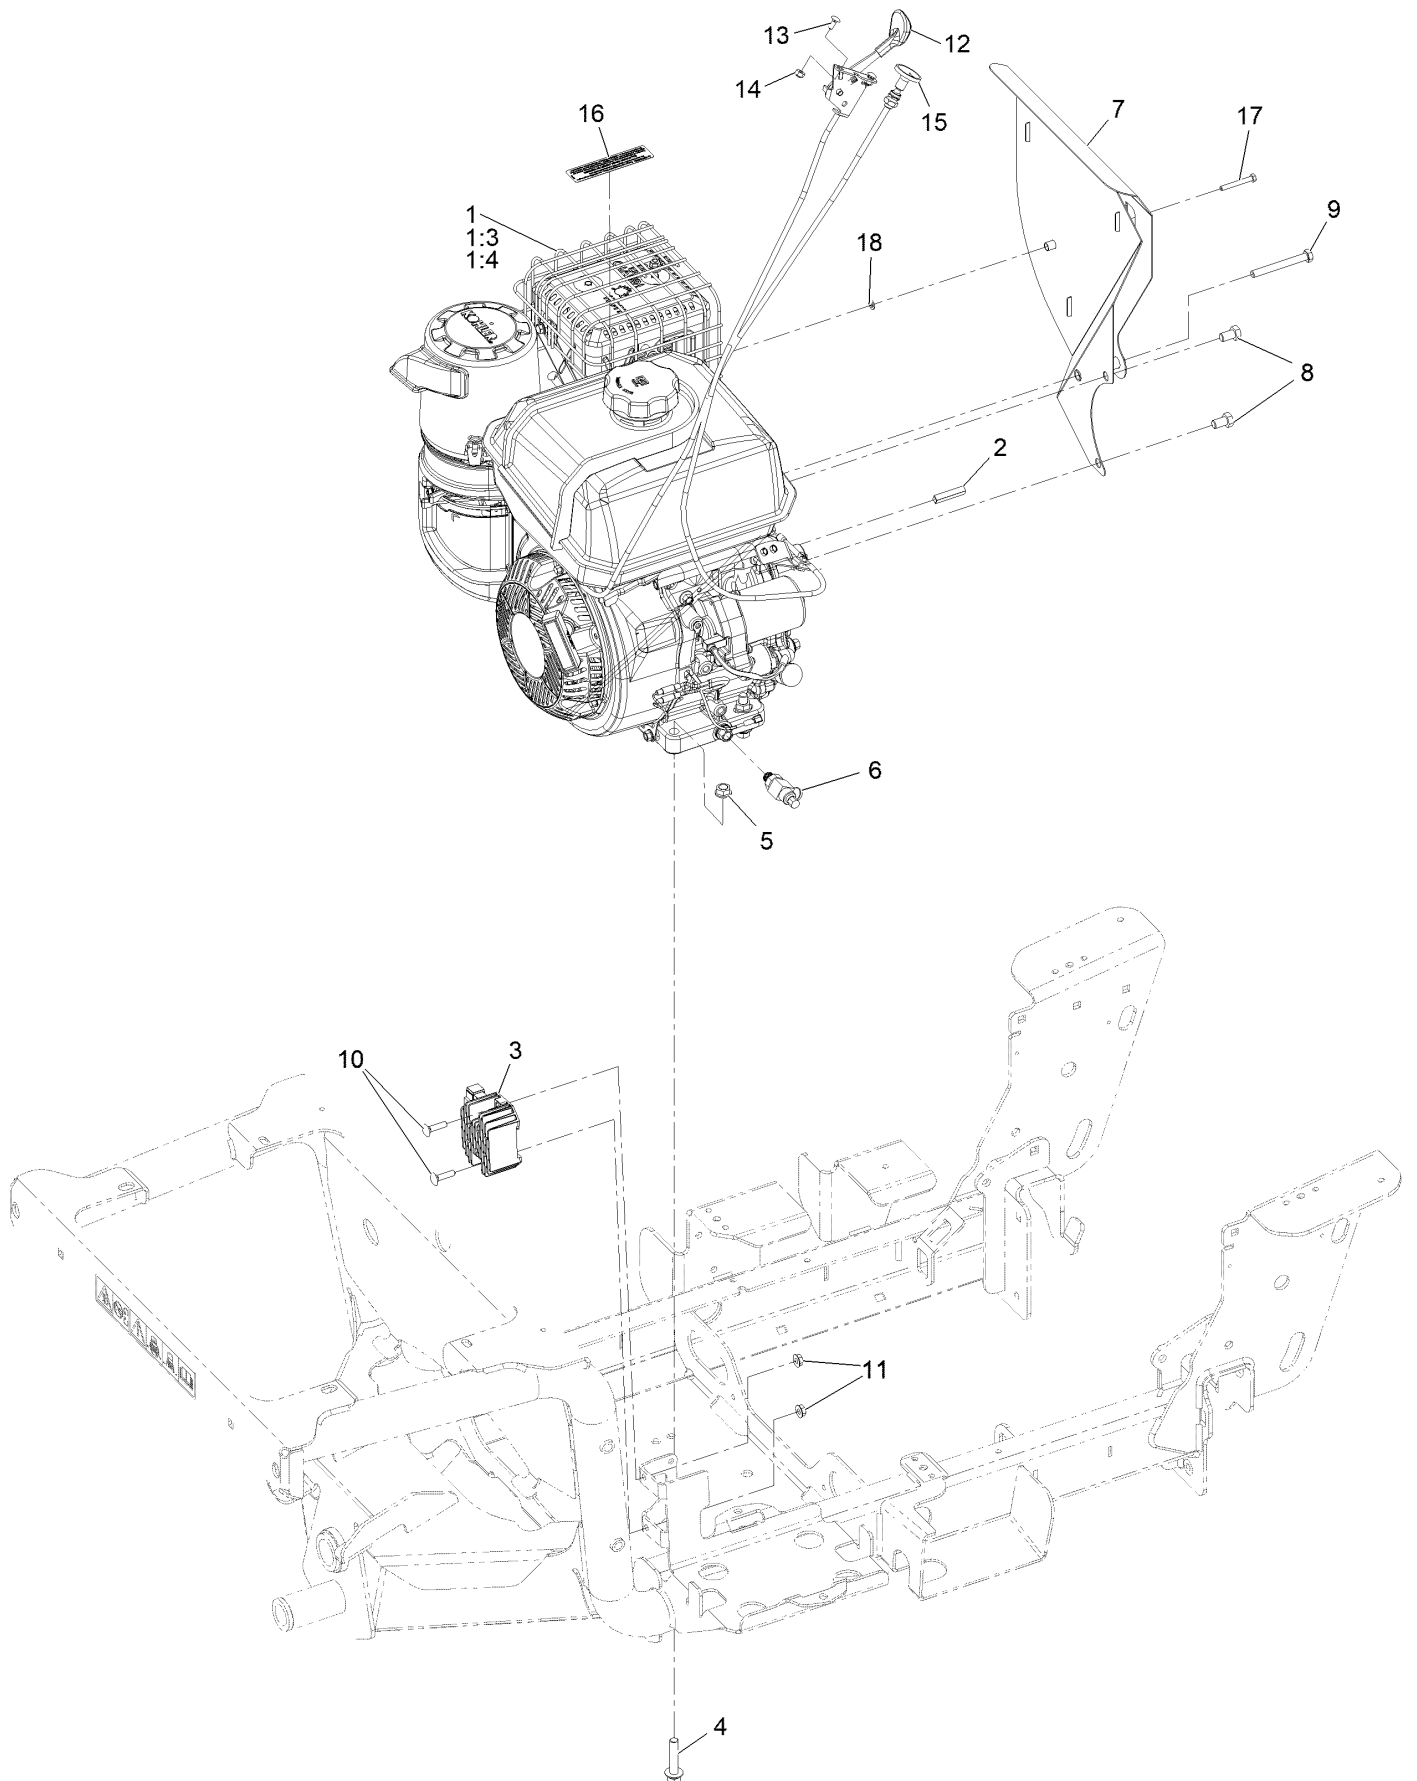

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1359	1	Engine-Kohler, Ch395	9	120-1177	1	Screw-HH 5/16-24 X 2 3/4
1:3	142-9962	1	Cage-Ch395 17_314_197 Bird	10	126-1455	2	Screw-Carriage 1/4-20 X 1 SS
1:4	138-3103	1	Deflector-Exhaust, Kohler	11	135-2880	2	Nut-Hex Flange 1/4-20 SS
2	135-3980	1	Key-Square, 7MM	12	135-3149	1	Control-Throttle
3	135-7026	1	Regulator-Trombetta, 18A	13	1-807513	2	Bolt-Carriage #10-24 X 1/2
4	126-2710	4	Screw-HHF 3/8-16 X 1 3/4 Serrated SS	14	3296-2	2	Nut-Nyloc #10-24
5	135-2882	4	Nut-Hex Flg 3/8-16 SS W/Patch	15	135-3150	1	Cable-Choke, Push/Pull
6	126-9978	1	Valve-Drain, Oil	16	133-8062	1	Decal-Spark Arrestor
7	126-2225	1	Heat Shield ASM	17	135-4328	1	Bolt-M5X0.8Mm X 40 MM Long
8	115-8486	2	Screw-HH 3/8-16 X 5/8 W/Patch	18	126-0759	1	Washer-Flat

Electrical Assembly

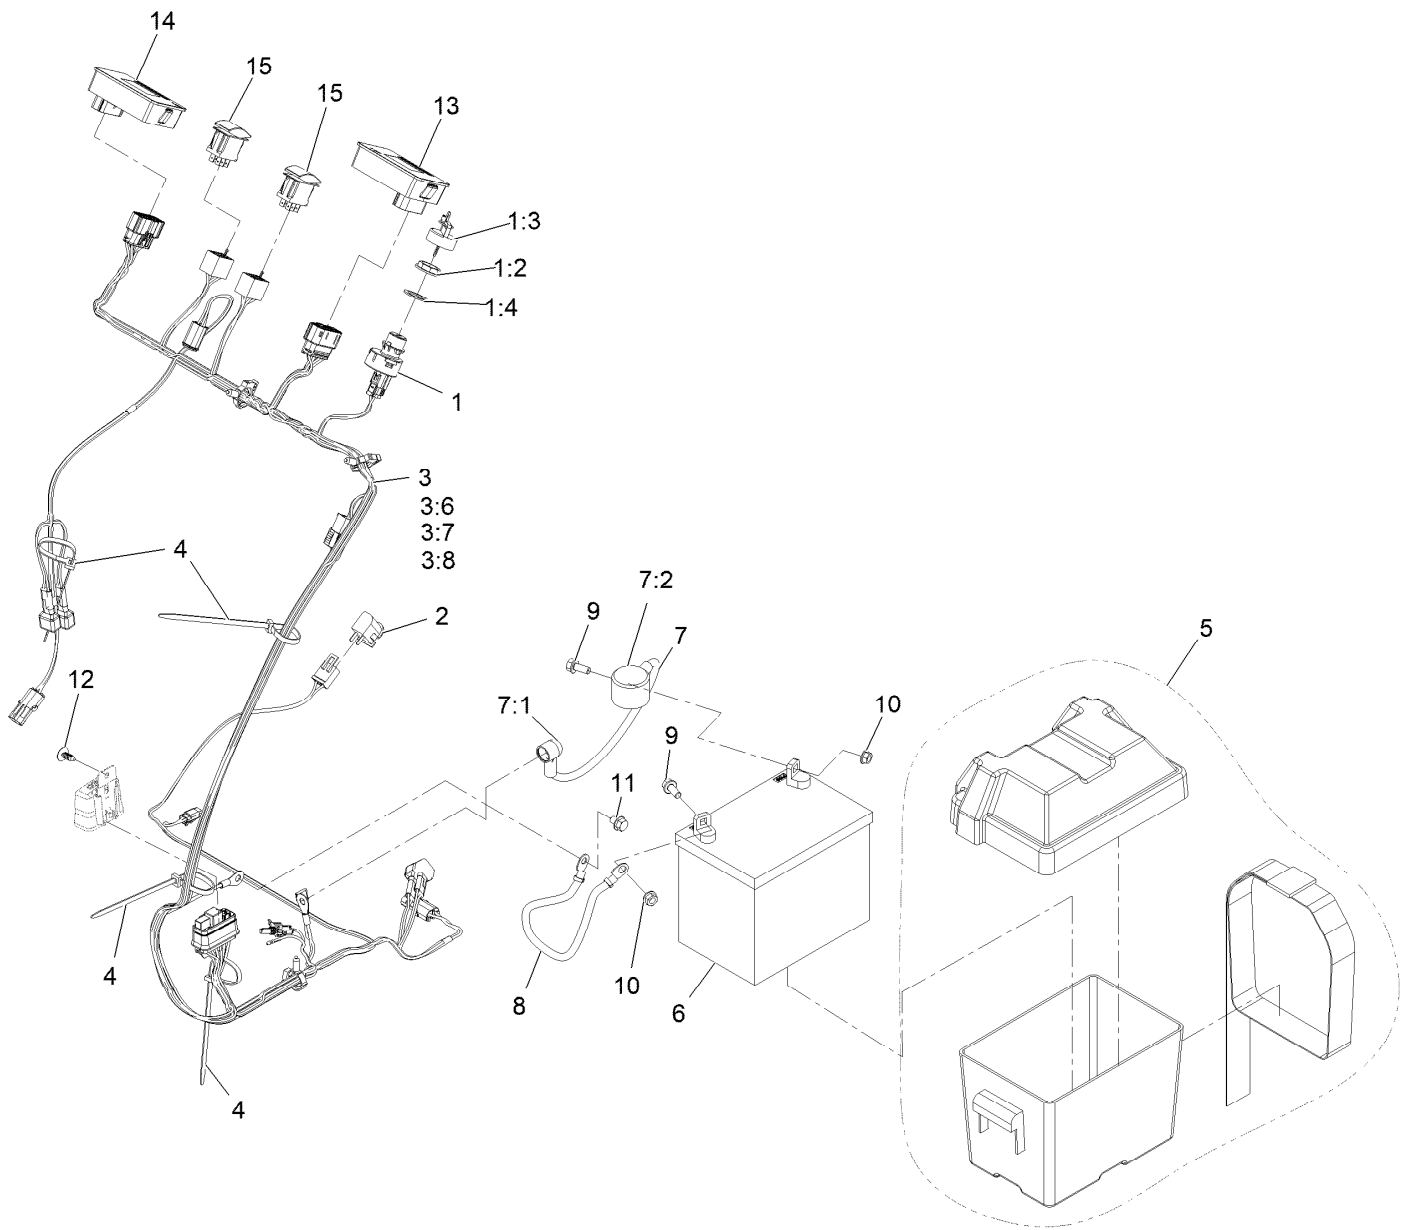


Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6285	1	Ignition Switch ASM	7	135-4669	1	Positive Battery Cable ASM
1:2	108-8660	1	Nut-Mounting	7:1	1-543393	1	Insulator-Solenoid
1:3	106-5270	1	Ignition Key Set	7:2	109-2407	1	Insulator-Battery
1:4	108-8659	1	Washer-Backup	8	114-9715	1	Cable-Battery, Negative
2	82-2190	1	Switch	9	126-2712	2	Screw-HHF 5/16-18 X 3/4 Serrated SS
3	135-6127	1	Harness-Wire	10	135-2881	2	Nut-HF
3:6	121-8868	2	Fuse-Mini Blade, 20 Amp	11	68-9410	1	Screw-HH M8-1.25 X 12Mm
3:7	126-3991	1	Relay-Micro	12	117-2382	1	Plug-Plastic
3:8	135-5221	1	Relay-Coil, NC, Mp280	13	135-6674	1	Hour Meter ASM
4	3290-378	4	Tie-Cable	14	135-6675	1	Hour Meter ASM
5	126-1424	1	Battery Box	15	100-1535	2	Switch-Rocker, (On)-Off-(On)
6		1	Battery- Wet, 12V, 300 CCA ●				

● Not serviced separately

Spray System Assembly

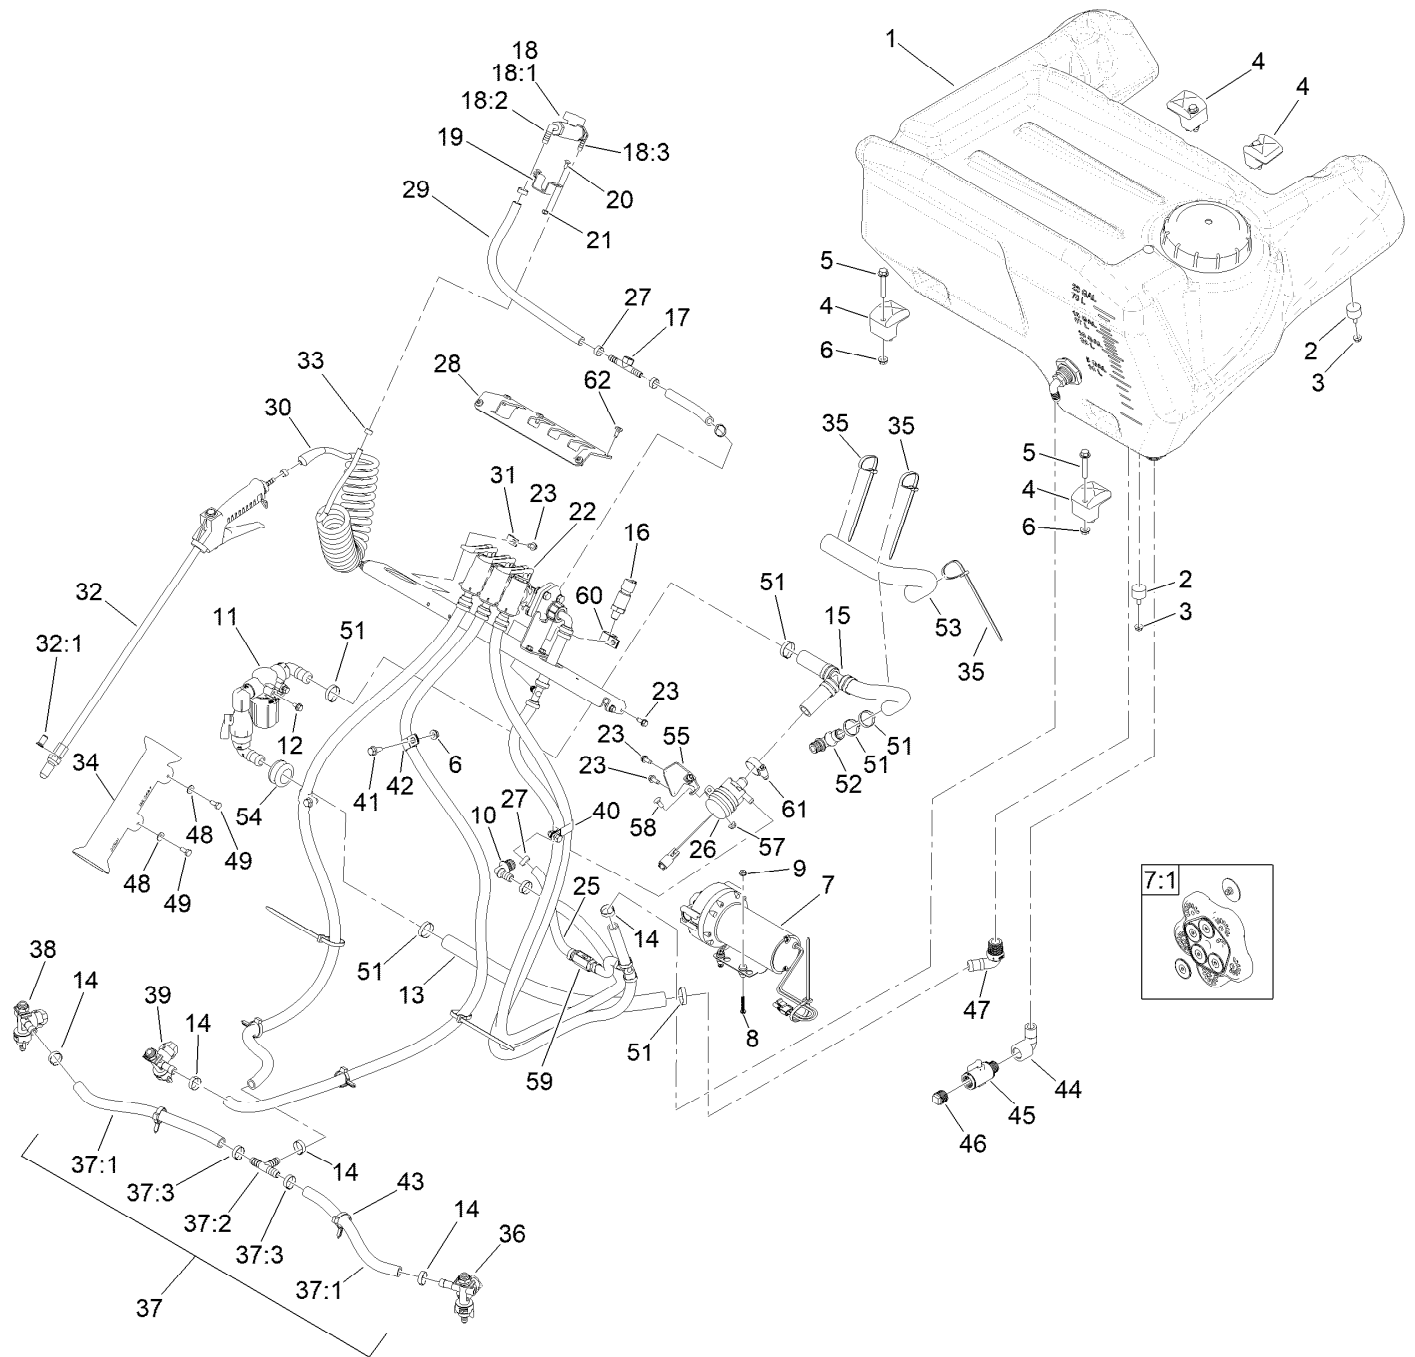


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0286	1	Tank-Sprayer	31	2412-89	1	Clamp-R
2	1-523420	4	Bumper	32	126-8000	1	Spray Wand ASM
3	135-2880	4	Nut-HF	32:1	126-3943	1	Strainer-Nozzle, 50M 5PSI
4	107-4543	4	Clamp				Check
5	126-2711	4	Screw-HHF	33	126-2707	2	Clamp
6	135-2881	7	Nut-HF	34	126-3987	1	Holder-Wand
7	142-2301	1	Pump-Diaphragm, 3.8 GPM	35	3290-378	5	Tie-Cable
7:1	135-2477	1	Kit-Diaphragm Pump	36	126-3667	1	Left Nozzle Sub ASM
8	692501	4	Screw-SHWH	37	126-2252	1	Hose ASM
9	126-2645	4	Nut-HF	37:1	126-2264	2	Hose-Water
10	126-0961	1	Fitting-Elbow, Barbed	37:2	126-0968	1	Fitting-Tee
11	126-4358	1	Strainer ASM	37:3	142-3662	2	Clamp Oetiker 0.716"
12	126-2713	2	Screw-HHF				Closed 0.826" Open
13	126-4422	1	Hose-Water	38	126-3669	1	Right Nozzle Sub ASM
14	142-3662	8	Clamp Oetiker 0.716"	39	126-3668	1	Center Nozzle Sub ASM
			Closed 0.826" Open	40	120-1959	1	Clamp
15	142-2192	1	ASM-, 3/4 Pvc Reinforced	41	126-2712	3	Screw-HHF
			Water Hose	42	1-633396	2	Clip-Loom
16	142-4495	1	Transducer-Pressure	43	105-1853	4	Clamp-Hose
17	126-2348	1	Fitting-Tee	44	108-3573	1	Elbow-90 DEG
18		1	Wand Control ASM ●	45	126-1494	1	Microvalve
18:1	126-0242	1	Valve-Ball	46	363-3125	1	Plug-Hdpe Black
18:2	126-4992	1	Fitting-Elbow-90	47	119-0490	1	Elbow-Hosebarb
18:3	126-4993	1	Fitting-Elbow-90	48	360-0140	2	Washer-Flat
19	126-0239-03	1	Bracket-Valve	49	126-1290	2	Screw-HH
20	1-807513	2	Bolt-CARR	51	126-4779	6	Clamp
21	3296-2	2	Nut-Lock, NI	52	126-4420	1	Fitting-Elbow
22		1	Manifold-Valve, Control	53	126-5065	1	Sleeve-Corrugated, Split
			ASM ●	54	126-7410	1	Grommet
23	32144-10	7	Screw-HWH	55	135-7913-03	1	Brkt-Recir Pump
25	142-2213	1	Hose-Water	57	104-7201	2	Nut-HF, NI
26	135-7843	1	Pump-Centrifugal	58	3229-11	2	Screw-CARR
27	126-3749	5	Clamp	59	142-2180	1	Valve-3/8 Check
28	142-7735	1	Cover-Controls	60	132-7590	1	R-Clamp
29	126-5847	1	Hose-Water, 3/8 Pvc Red	61	2412-129	1	Clamp-Hose
30	126-1493	1	Hose-Coiled	62	120-7950	5	Screw-Torx

● Not serviced separately

Sprayer Tank Assembly No. 126-0286

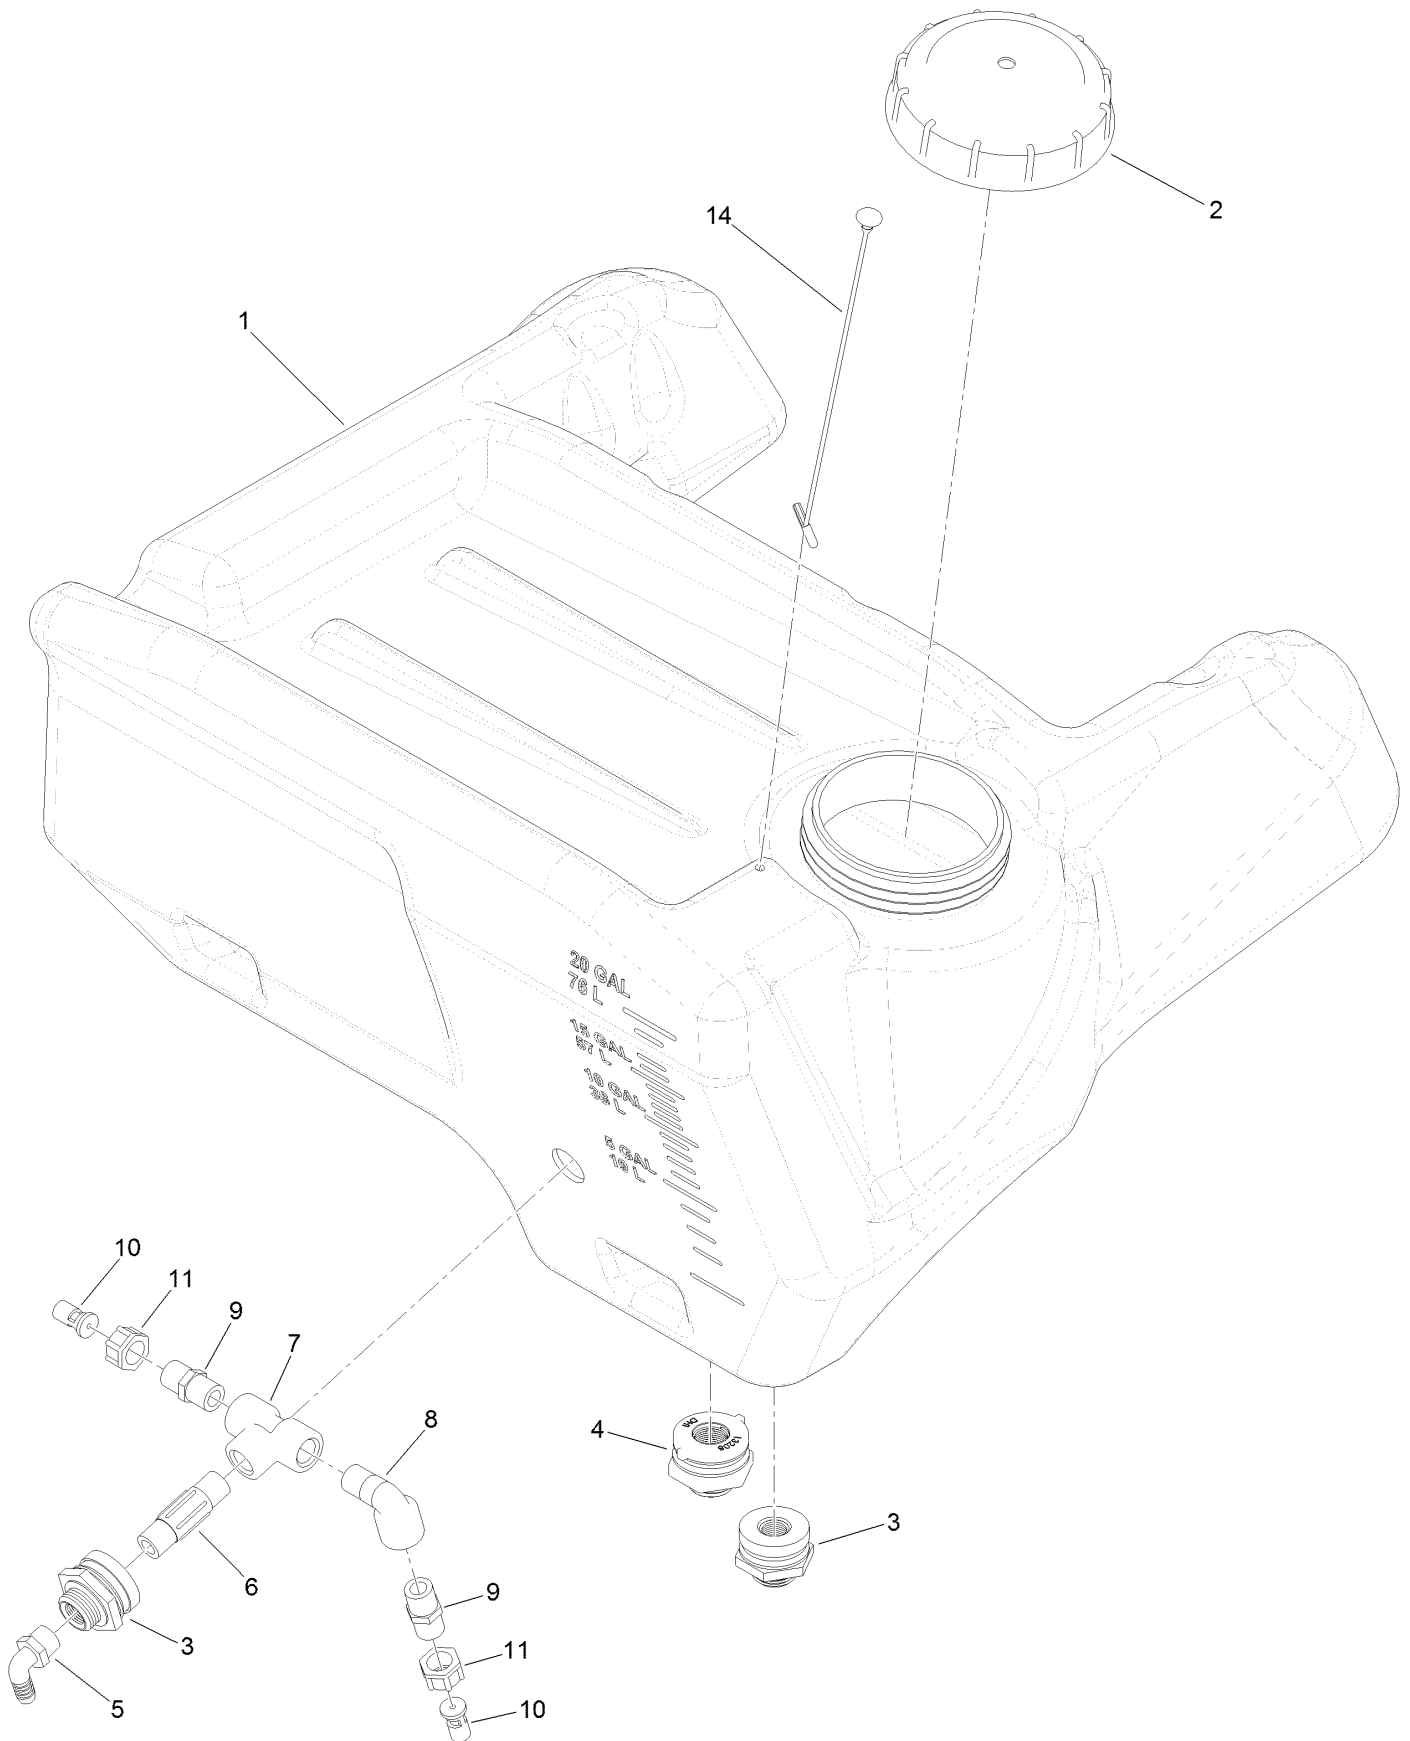


Sprayer Tank Assembly No. 126-0286 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Tank-Sprayer ●	8	108-3573	1	Elbow-90 DEG
2	126-0285	1	Cap-Water, 5 Inch Vent	9	108-3574	2	Nipple-Short
3	126-0400	2	Fitting-Bulkhead	10	100-6705	2	Nozzle-Agitation
4	126-4393	1	Fitting-Bulkhead	11	99-0766	2	Nut
5	42046	1	Elbow-90 DEG	14	126-3381	1	Lanyard-Cap, Self Anchoring (12 Inch)
6	94-7103	1	Nipple				
7	94-7100	1	Tee				

● Not serviced separately

Strainer Assembly No. 126-4358

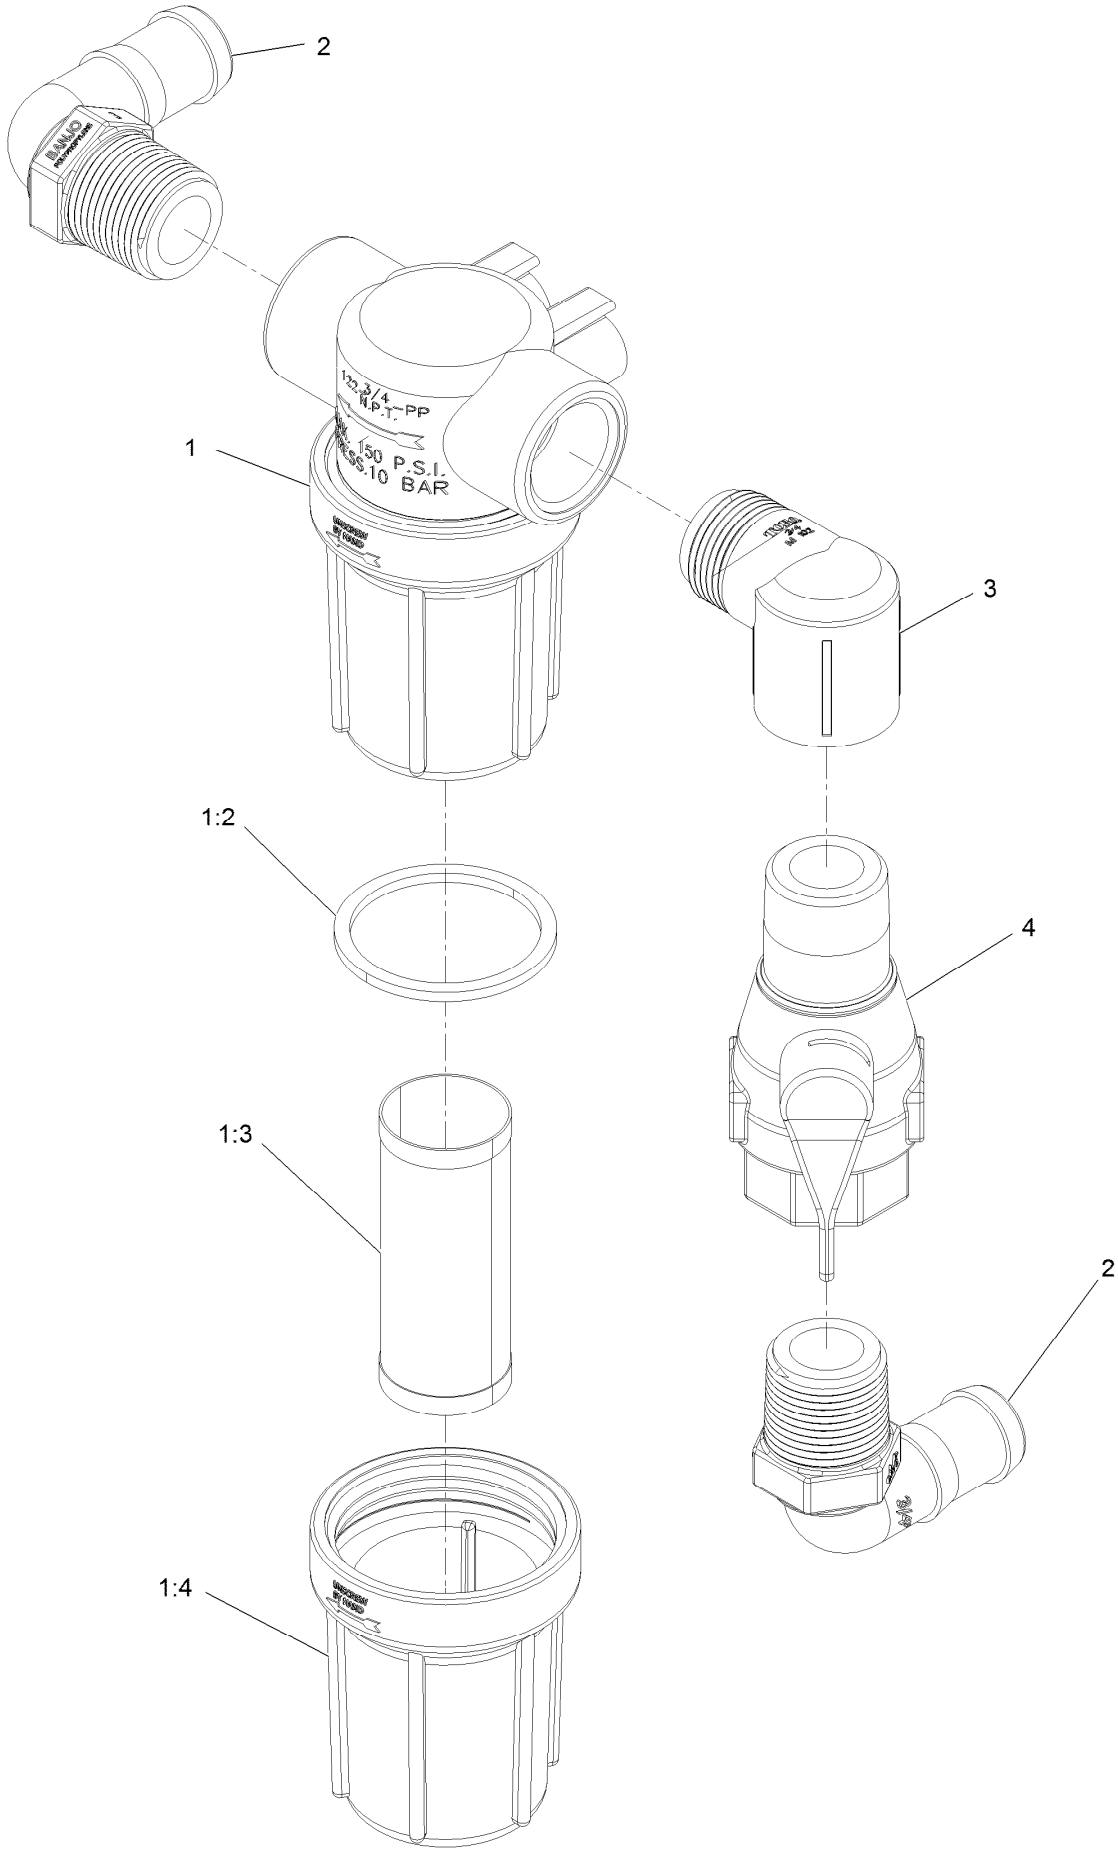


Strainer Assembly No. 126-4358 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4374	1	Strainer-Line
1:2	126-2272	1	Gasket-Head, Line Strainer
1:3	126-2273	1	Screen-Strainer, 30 Mesh SS

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:4	126-7195	1	Bowl-Strainer
2	119-0490	2	Elbow-Hosebarb
3	102-4272	1	Elbow
4	126-4451	1	Valve-Ball

Control Valve Manifold and Hose Assembly

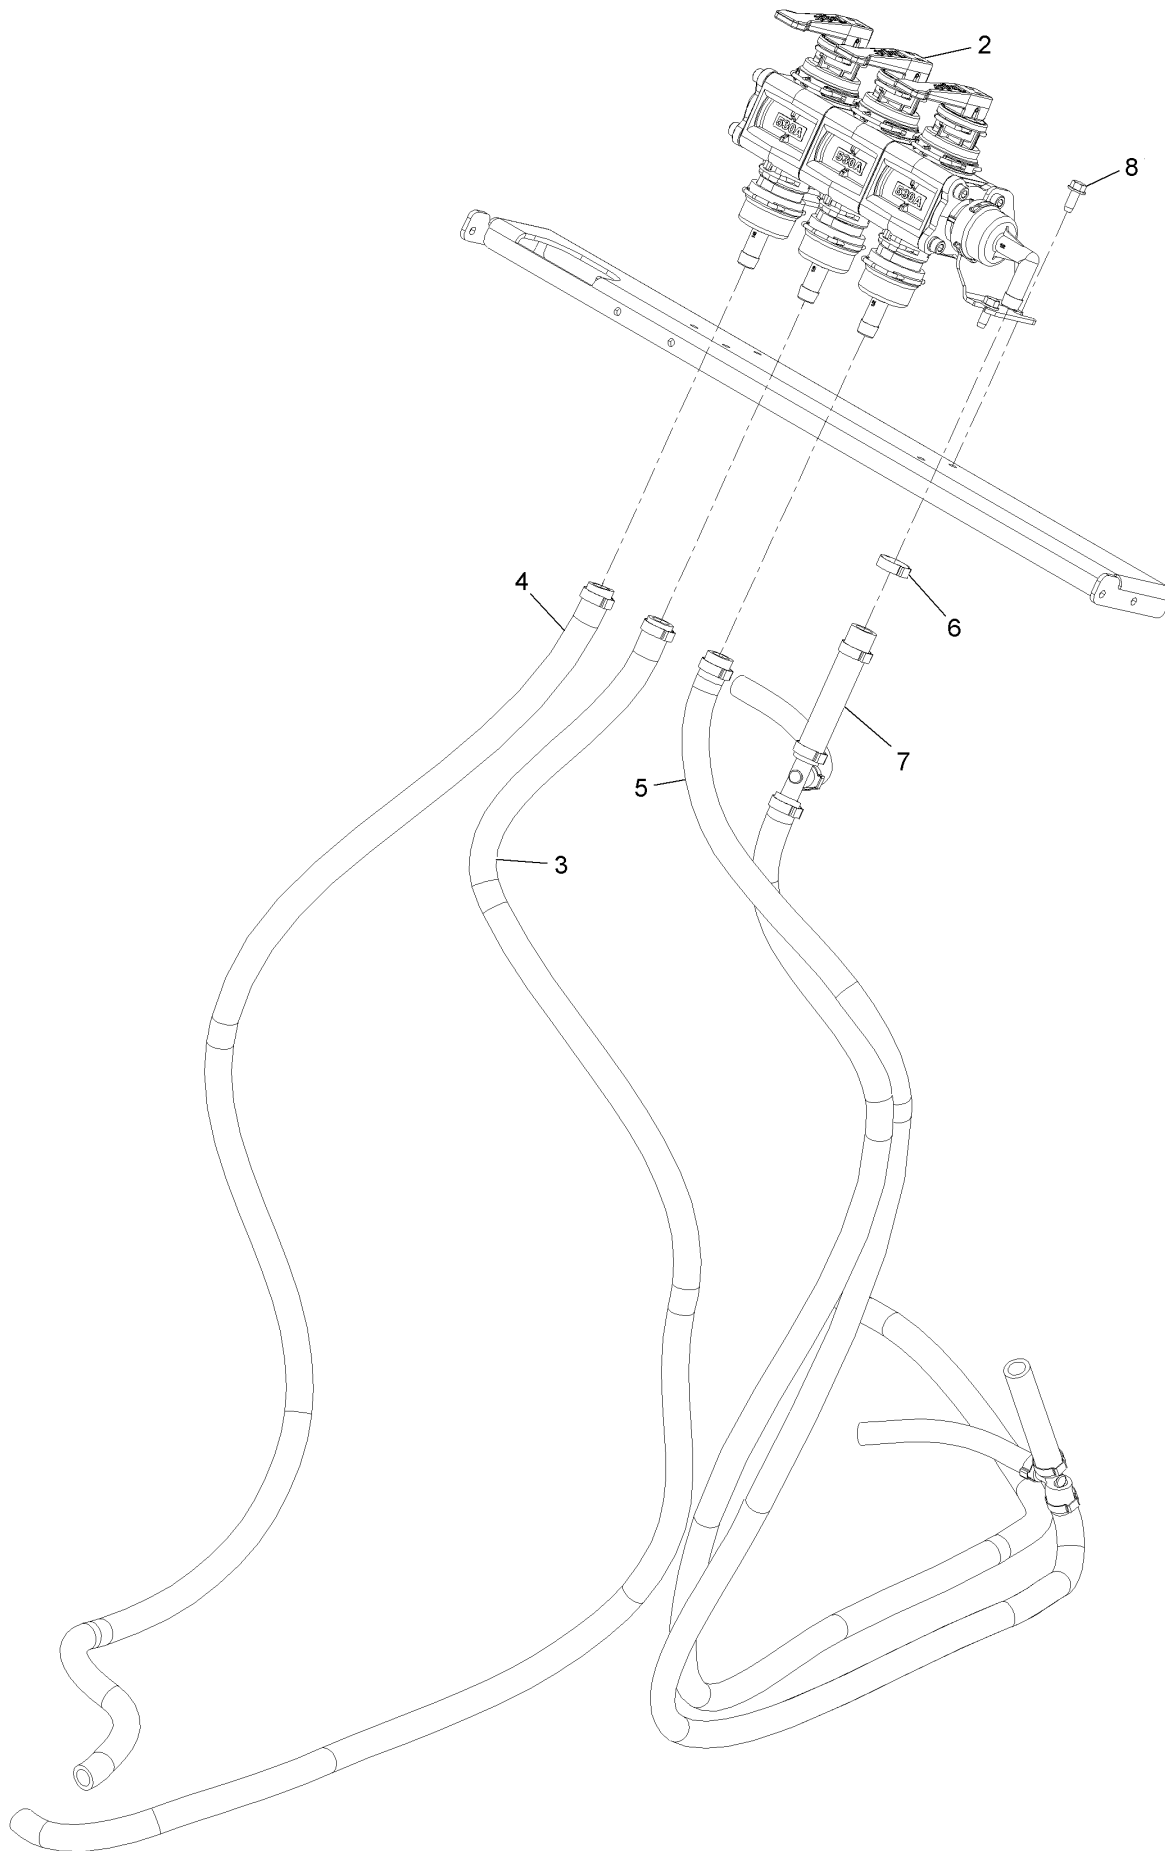


Control Valve Manifold and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	142-7292	1	Manifold-Valve, Control
3	126-2261	1	Hose-Water
4	126-2263	1	Hose-Water
5	142-3560	1	Hose ASM

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	142-3662	5	Clamp Oetiker 0.716" Closed 0.826" Open
7	142-7995	1	Hose ASM
8	32144-10	4	Screw-HWH 1/4-20 X .62


Control Valve Manifold Assembly No. 142-7292

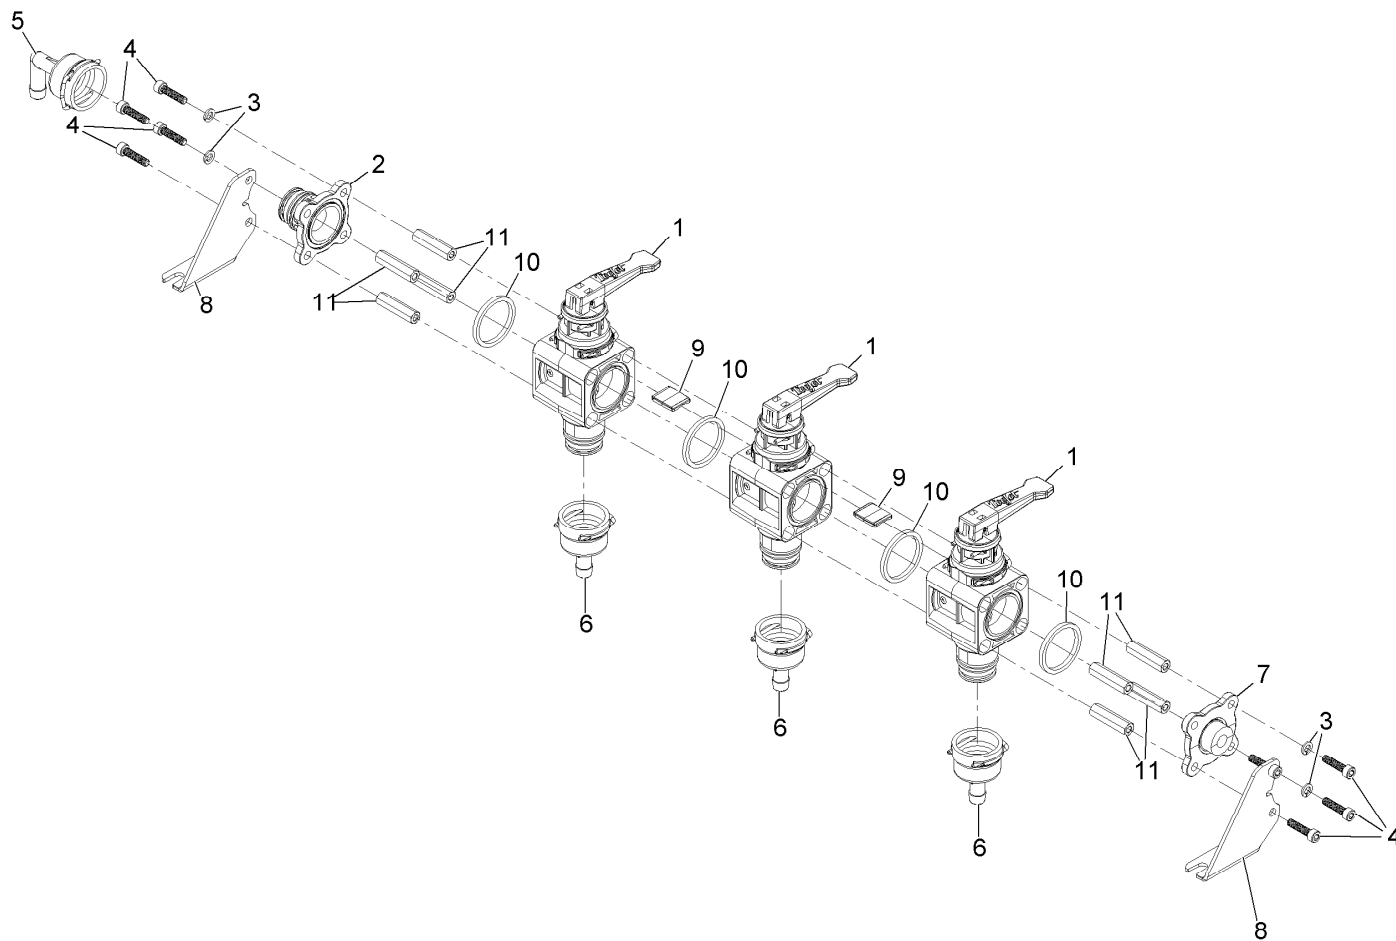

Control Valve Manifold Assembly No. 142-7292 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-7042	3	ASM-Valve Section, Grey	6	142-6187	3	Kit-1/2 Hb, STR, Qc
2	142-6347	1	Adaptor-Male Qc Bolted Flanged	7	142-7993	1	Cap
3	142-4415	4	Washer	8	142-7624	2	Brkt-Sprayer Manifold
4	142-6348	8	Screw-Hscs 6 MM X 25.0 MM SS	9	142-7496	2	Alignment Piece
5	142-7967	1	Kit-Hose Barb, 1/2 90, Qc	10	142-7497	4	Gasket
				11	142-7498	8	M6X1 Metric Hex Stand-Off

Left Nozzle Assembly No. 126-3667

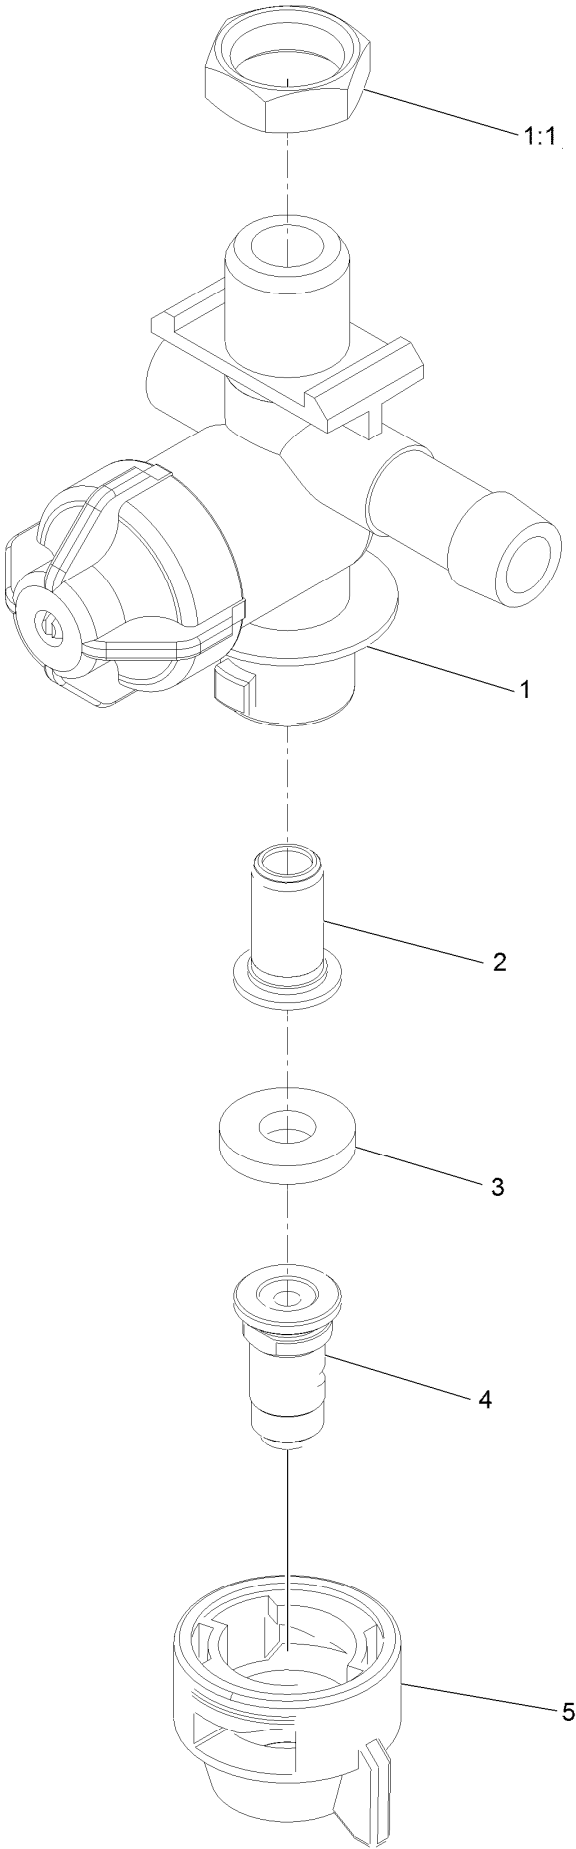


Left Nozzle Assembly No. 126-3667 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9790	1	LH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7172	1	Nozzle-Spray, Blue ●■
2	126-1212	1	Strainer-Tip	99	126-7171	1	Nozzle-Spray, Brown ●■
3	116-9797	1	Gasket-Seal	99	126-7170	1	Nozzle-Spray, Gray ●■
4	116-9798	1	Nozzle-Spray, White	99	126-2566	1	Nozzle-Spray, Red ●■

● Not illustrated

■ Sold separately

Right Nozzle Assembly No. 126-3669

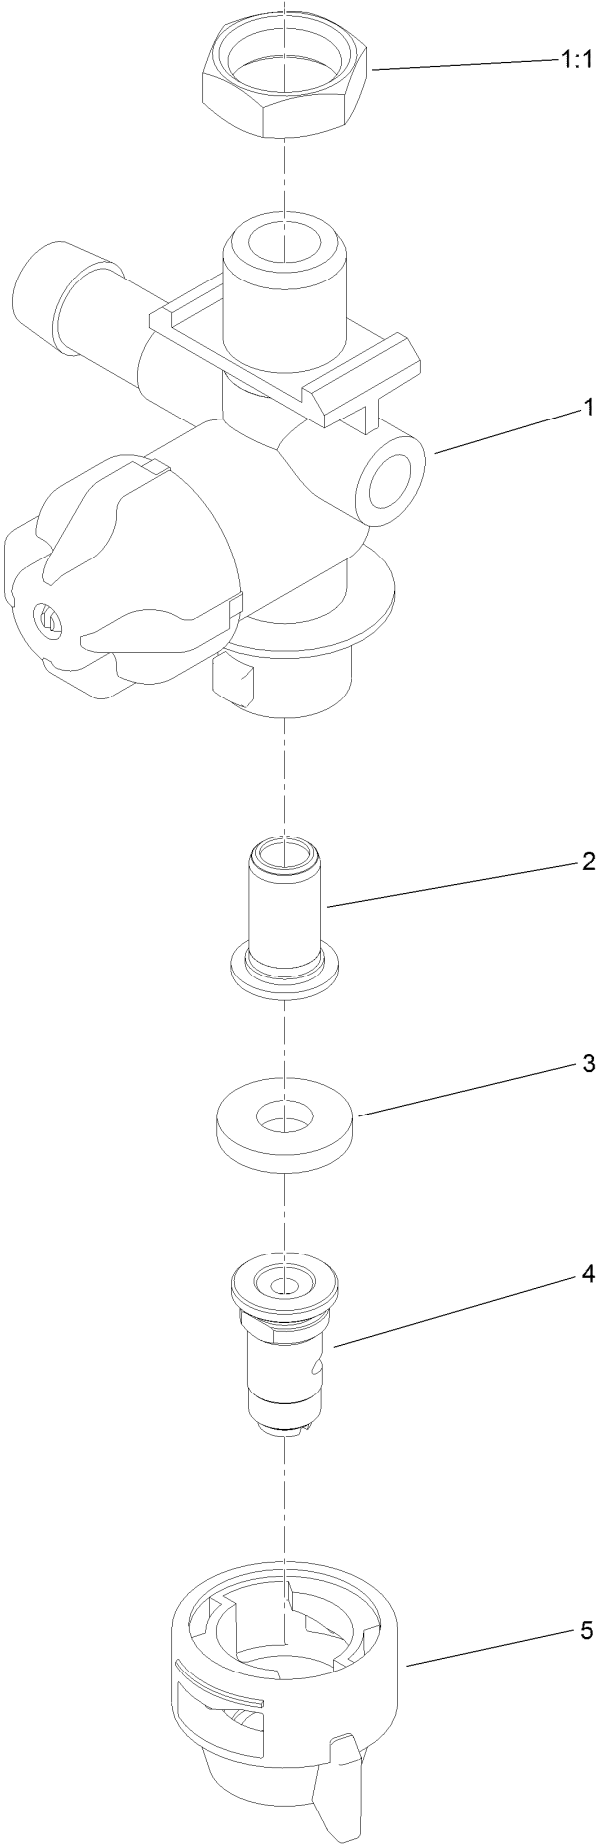


Right Nozzle Assembly No. 126-3669 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	116-9798	1	Nozzle-Spray, White

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7172	1	Nozzle-Spray, Blue ●
99	126-7171	1	Nozzle-Spray, Brown ●
99	126-7170	1	Nozzle-Spray, Gray ●
99	126-2566	1	Nozzle-Spray, Red ●

● Not illustrated

Center Nozzle Assembly No. 126-3668

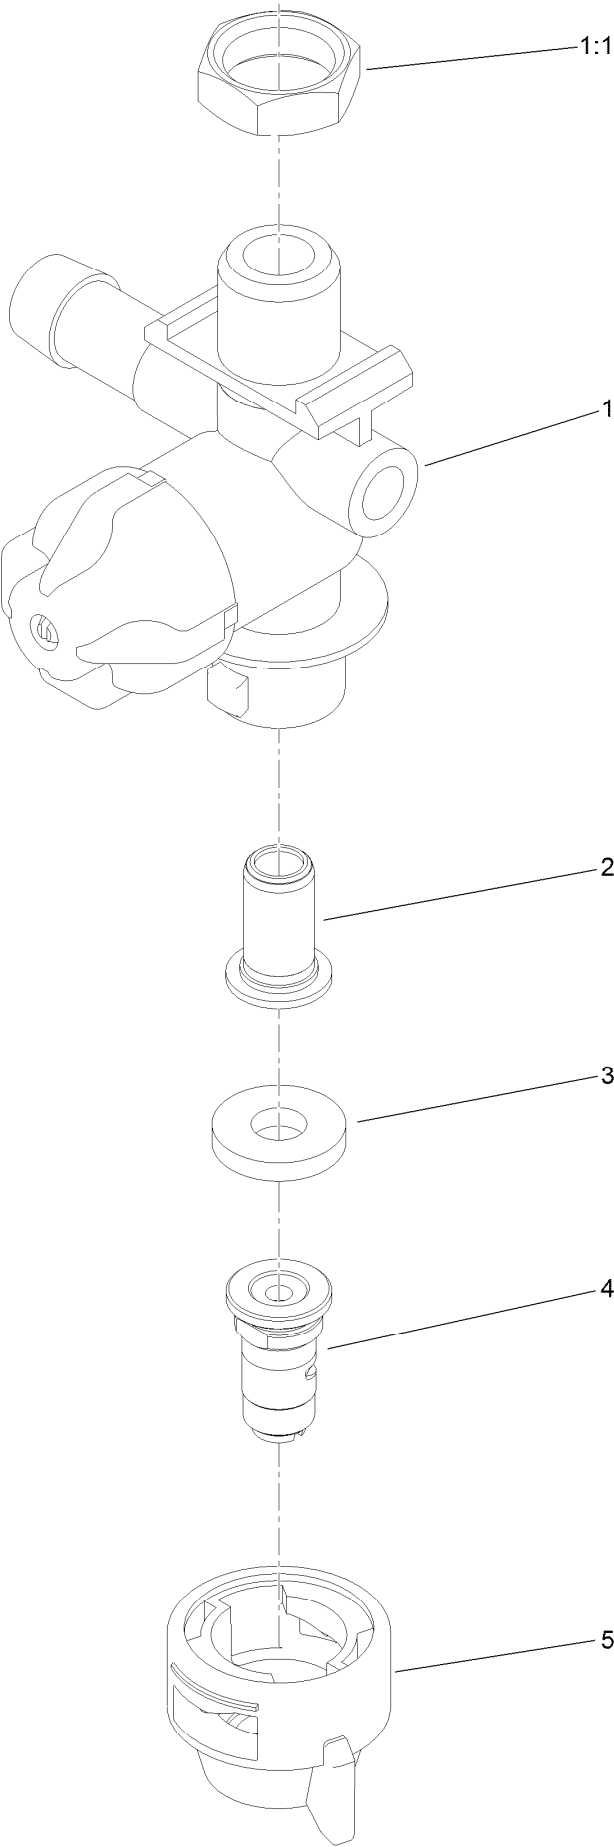

Center Nozzle Assembly No. 126-3668 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	126-2566	1	Nozzle-Spray, Red

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7170	1	Nozzle-Spray, Gray ●■
99	116-9798	1	Nozzle-Spray, White ●■
99	126-7171	1	Nozzle-Spray, Brown ●■
99	126-7172	1	Nozzle-Spray, Blue ●■

● Not illustrated

■ Sold separately

Spreader Assembly

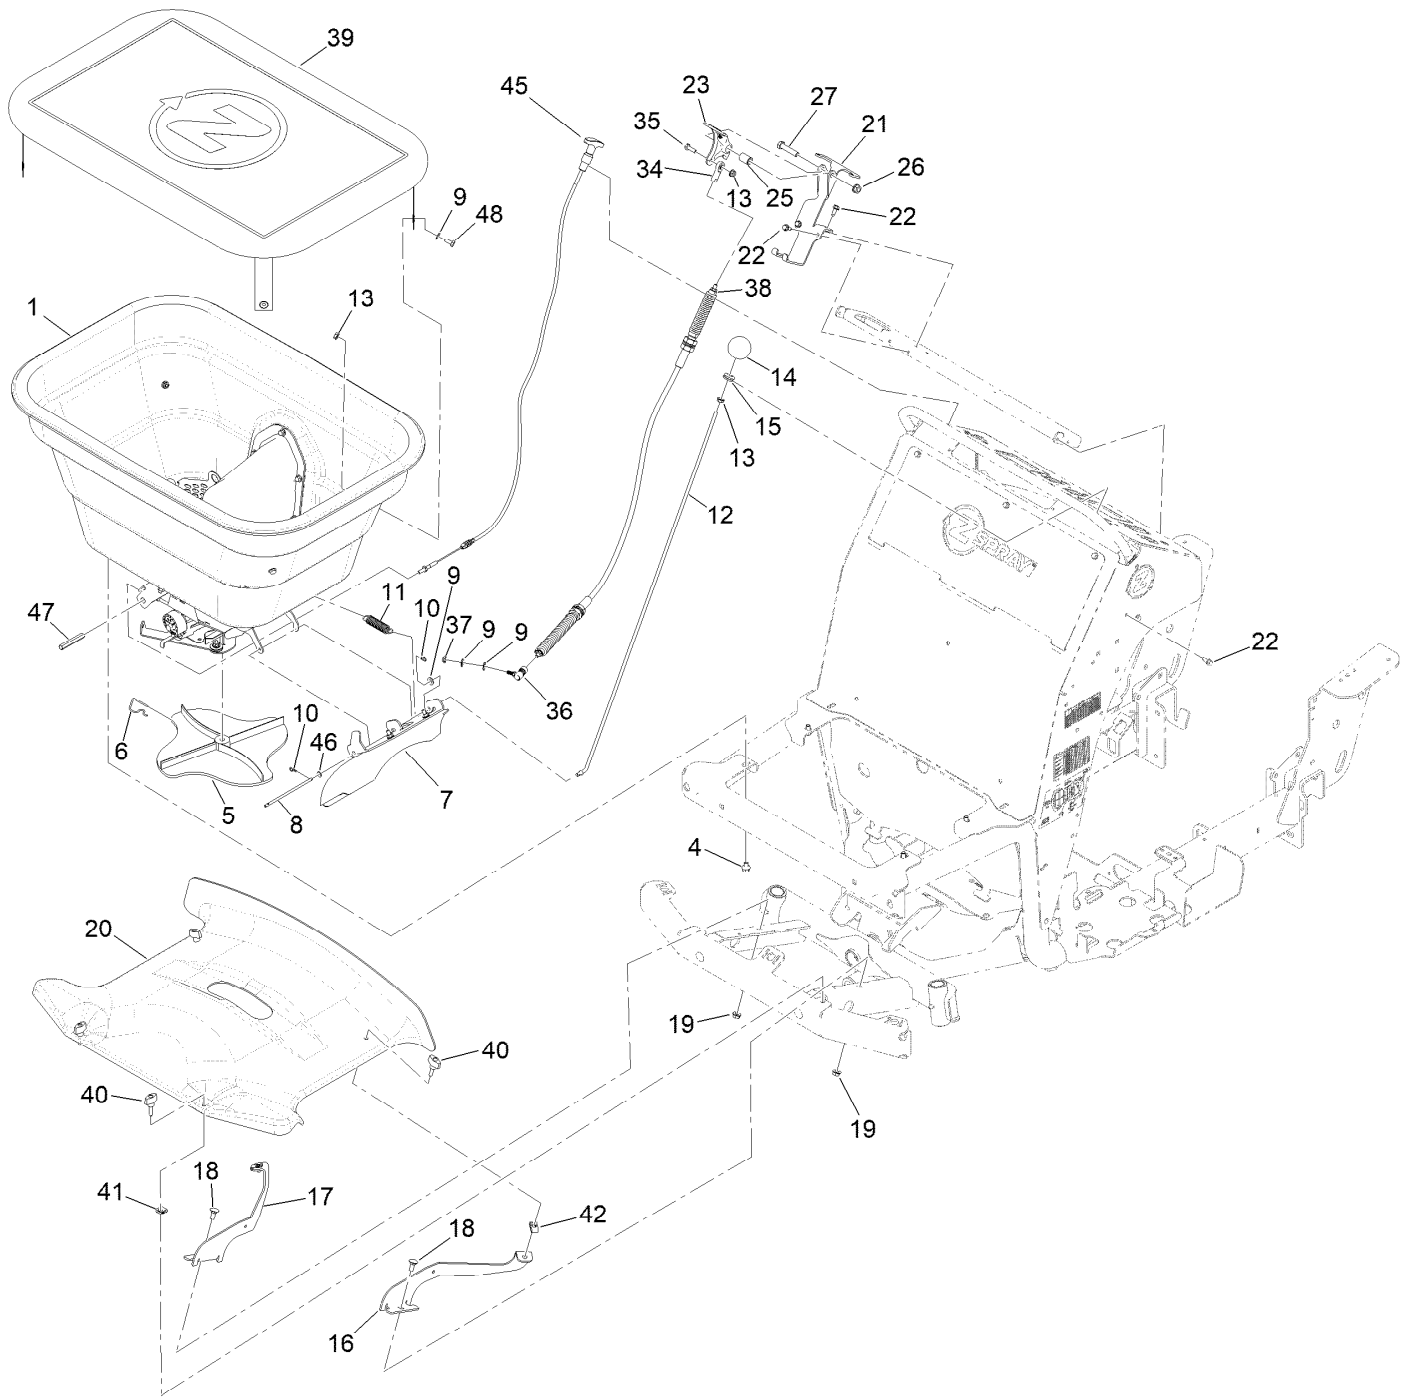


Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Spreader Hopper ASM ●	21	142-7702	1	Mount-Handle, Fert Gate
4	142-4255	4	Screw-HHF	22	32144-10	3	Screw-HWH
5	142-3506	1	Spinner-Spreader	23	146-0418	1	Lever-Spread, Wide
6	142-3541	1	Clip-Spinner	25	142-7728	1	Spacer
7		1	Side Deflector ASM ●	26	135-2882	1	Nut-HF
8	135-2558	1	Pin-Deflector	27	323-9	1	Screw-HH
9	360-0140	9	Washer-Flat	34	2411-41	1	Rod End-Ball Joint
10	126-1631	2	Pin-Cotter, Hair	35	126-0498	1	Screw-HH
11	126-2127	1	Spring-Extension	36	126-2005	1	Ball-Joint
12	126-2190	1	Rod-Control, Deflector	37	126-2725	1	Nut-Hex, NI
13	135-2880	6	Nut-HF	38	126-1783	1	Cable
14	121-1877	1	Knob-Rate, Flow	39	126-2815	1	Cover-Hopper
15	1-633630	1	Grommet	40	126-5846	4	Knob-T
16	126-2145	1	Bracket-Cover, Front (LH)	41	126-3740	2	Nut-Retainer, U Style
17	126-2146	1	Bracket-Cover, Front (RH)	42	126-3739	2	Nut-Retainer
18	126-0695	2	Screw-CARR	45	126-4150	1	Cable-Control, Turn Lock
19	135-2881	2	Nut-HF	46	126-0759	1	Washer-Flat
20	126-2063	1	Cover-Front, Spreader/Sprayer	47	126-4655	1	Post-Hex, Diffuser Guide
				48	126-1290	4	Screw-HH

● Not serviced separately

Spreader Hopper Assembly

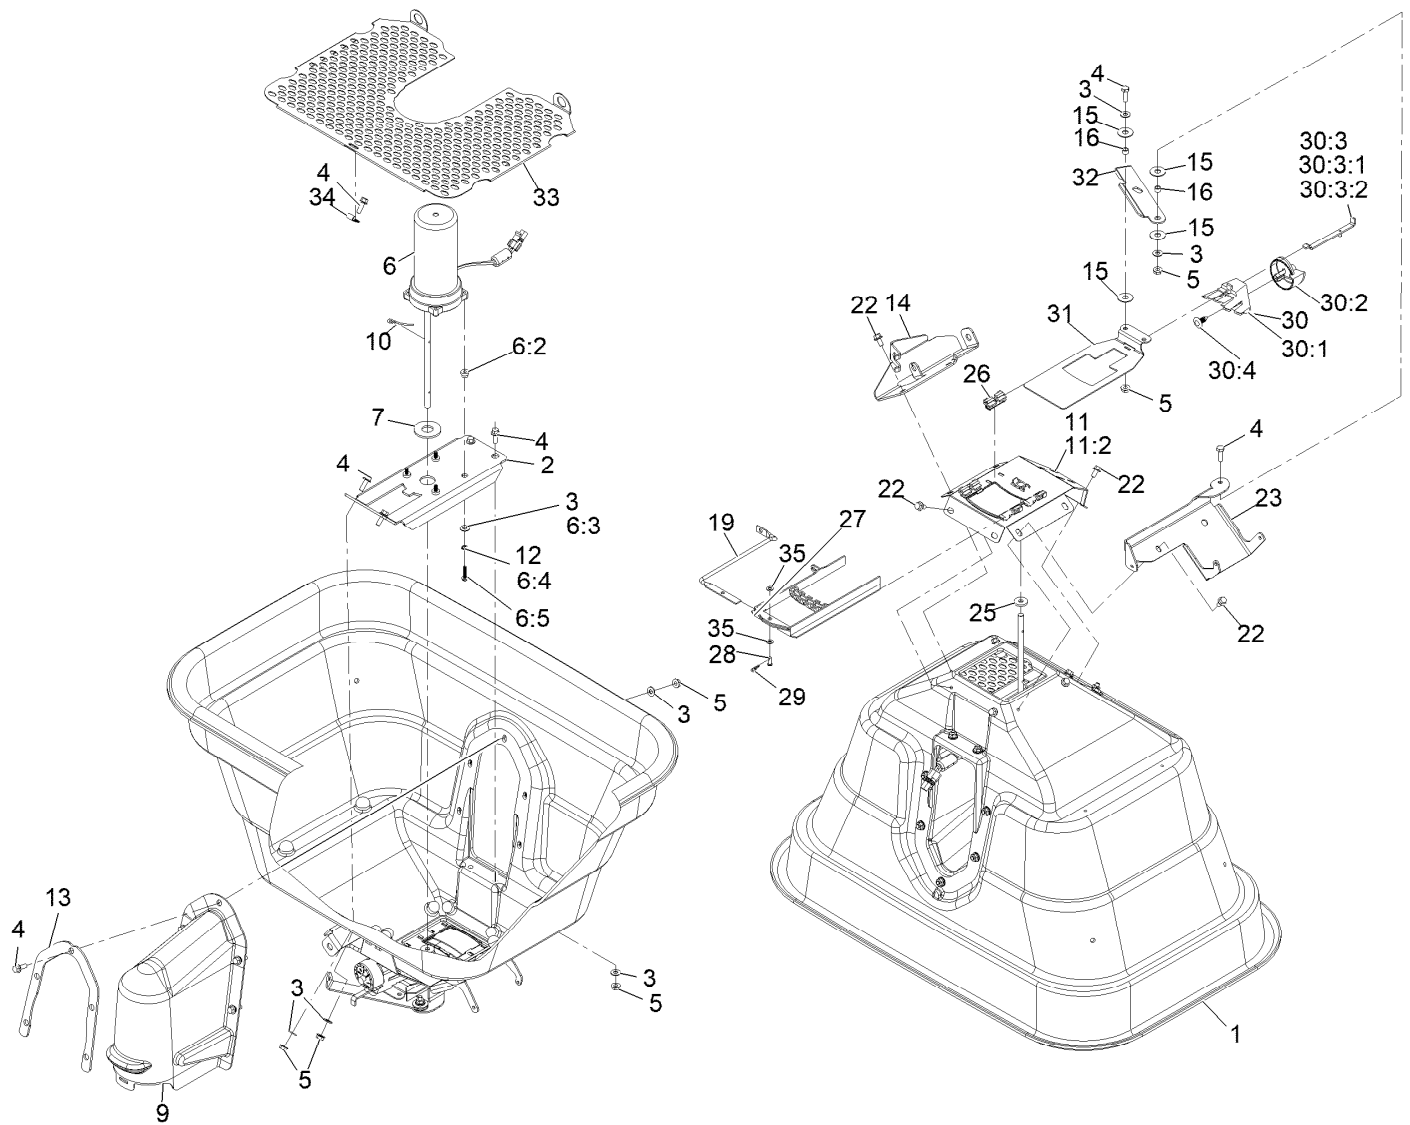


Spreader Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2734	1	Hopper-Spreader, 175 Lb	22	135-6280	8	Screw-HHF 1/4-20 X 1/2
2	126-4245	1	Bracket-Mount, Motor				Serrated SS
3	360-0140	16	Washer-Flat	23	142-3602	1	Bracket-Lever, Hopper Gate
4	126-0498	2	Screw-HH 1/4-20 X 7/8 SS	25	142-3665	1	Washer-Felt
5	135-2880	12	Nut-HF	26	142-3316	4	Guide-Rate, Gate
6	126-6231	1	Spreader Motor ASM	27	142-3406	1	Diffuser
6:2	135-3989	4	Spacer-Flanged	28	126-3729	1	Pin-Clevis
6:3	360-0140	4	Washer-Flat	29	126-1631	1	Pin-Cotter, Hair
6:4	363-8641	4	Washer-Lock, Int	30	142-3821	1	Rate Dial ASM
6:5	739001	4	Screw-SHWH 10-32 X 7/8	30:1	142-3319	1	Mount-Dial
7	83-2400	1	Spacer	30:2	142-3359	1	Dial
9	126-1348	1	Cover-Motor	30:3		1	Rate Gate Link ASM ●
10	142-3666	1	Wire-Agitator	30:3:1	126-0987	1	Link-Gate, Rate
11	142-4040	1	Hopper Plate W/ Bearing ASM	30:3:2	126-4196	1	Screw-Shoulder, Slotted
11:2	142-4042	1	Hopper Bottom Bearing	30:4	88-1080	1	Footpad Fastener
12	363-8641	4	Washer-Lock, Int	31	142-4342	1	Rate Gate
13	126-6334	1	Flange-Cover, Motor	32	126-4112	1	Lever-Gate
14	126-4650	1	Bracket-Hopper, Gate Controls	33	126-3143	1	Screen-Hopper, Large Hole
15	93-1633	4	Washer	33	126-3240	1	Screen-Hopper, Medium Hole
16	126-3684	2	Spacer			1	Screen-Hopper, Small Hole
19	126-1646	1	Rod-Control, Diffuser	33	126-3242	1	Screen-Hopper, Small Hole
				34	126-1624	1	Clamp-Loop
				35	126-0759	2	Washer-Flat

● Not serviced separately

Side Deflector Assembly

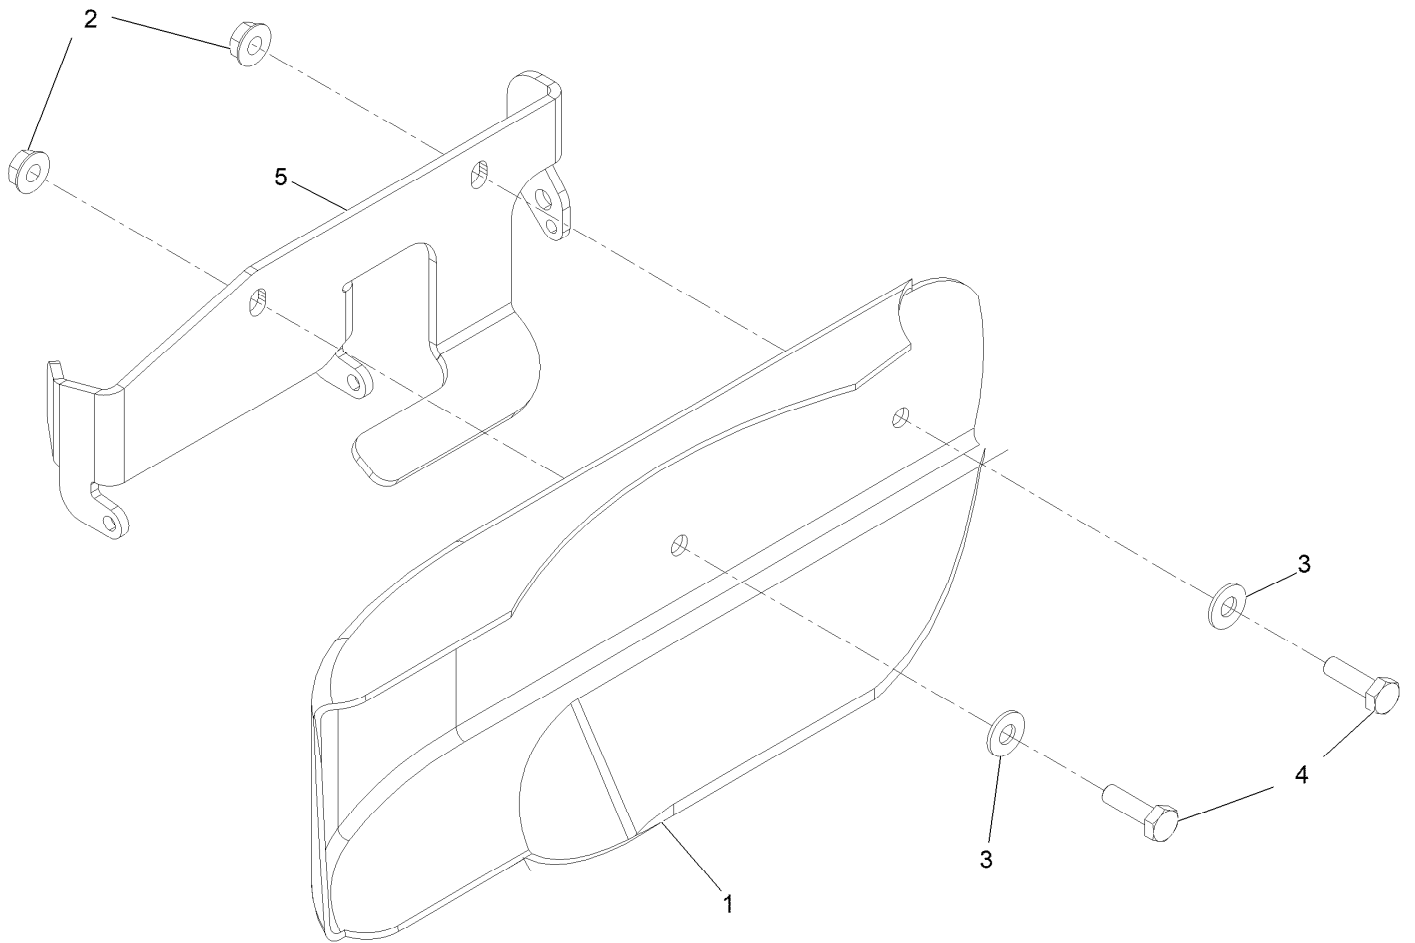

Side Deflector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-3619	1	Deflector-Side	4	126-0498	2	Screw-HH 1/4-20 X 7/8 SS
2	135-2501	1	Bracket-Deflector, Side	5	135-2880	2	Nut-HF
3	360-0140	2	Washer-Flat				

Notes:

Notes:



Count on it.