



62in Triple Soft Bagger

Z 200 Z Master[®]

Model No. 78456—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Impeller Assembly	3	Bagger Hood Assembly	6
Blower and Idler Pulley Assembly	4	Bag and Frame Assembly	7
Bagger Mounting Frame Assembly	5	Counterbalance Weights Assembly	8

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

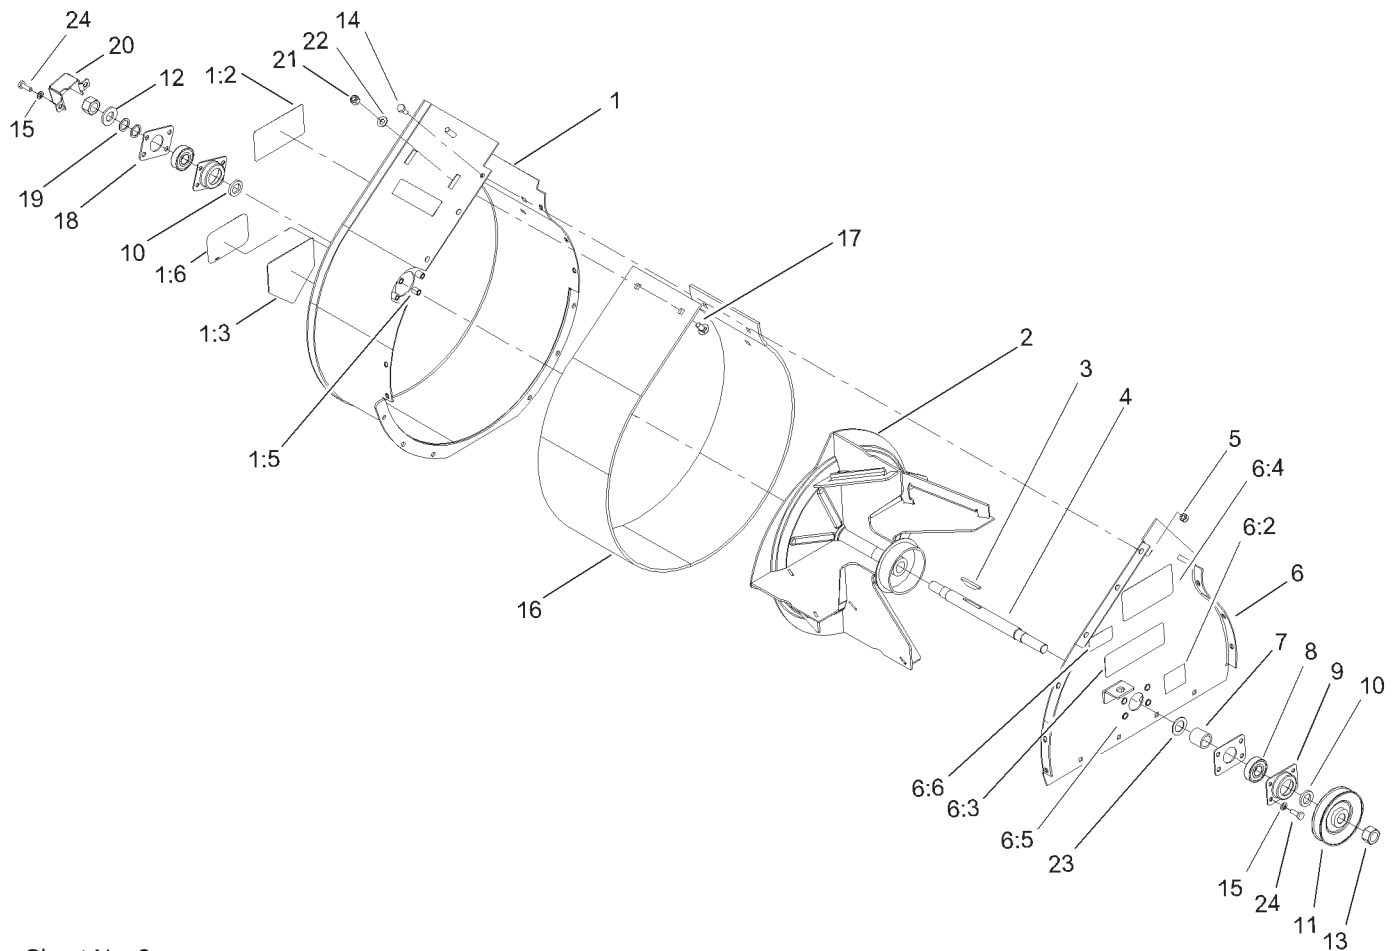

Sheet No.:2

Impeller Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-3385	1	Blower Housing W/ Decals	17	3230-1	5	Bolt-CARR
1:2	79-0360	1	Decal-Danger	18	63-9700-03	2	Plate-Cover
1:3	93-1122	1	Decal-Danger	19	9202154	2	Washer
1:5	32148-6	4	Insert-Nut	20	106-3076-03	1	Cover-Shaft
1:6	99-2385	1	Decal	21	3296-29	5	Nut-Lock, NI
2	106-3115-03	1	Impeller ASM	22	3256-23	5	Washer-Flat
3	3257-40	1	Key-Hi Pro	23	1535	1	Washer-Thrust
4	106-3009	1	Shaft-Blower	24	321-4	8	Screw-HH
5	3296-42	9	Nut-Lock, NI				
6	106-8019	1	Cover Plate ASM				
6:2	88-8950	1	Decal-Warning				
6:3	79-0350	1	Decal-Danger				
6:4	79-0360	1	Decal-Danger				
6:5	32148-6	4	Insert-Nut				
6:6	98-4387	1	Decal-Protection, Ear				
7	106-2097	1	Spacer				
8	38-7820	2	Bearing-Ball				
9	37-6730	2	Cup-Bearing				
10	63-9710	2	Spacer-Bearing				
11	105-5992	1	Pulley ASM				
12	9202604	1	Washer				
13	3217-11	2	Nut-Hex				
14	321-3	9	Screw-HH				
15	3253-3	8	Washer-Lock				
16	106-3012	1	Strip-Wear				

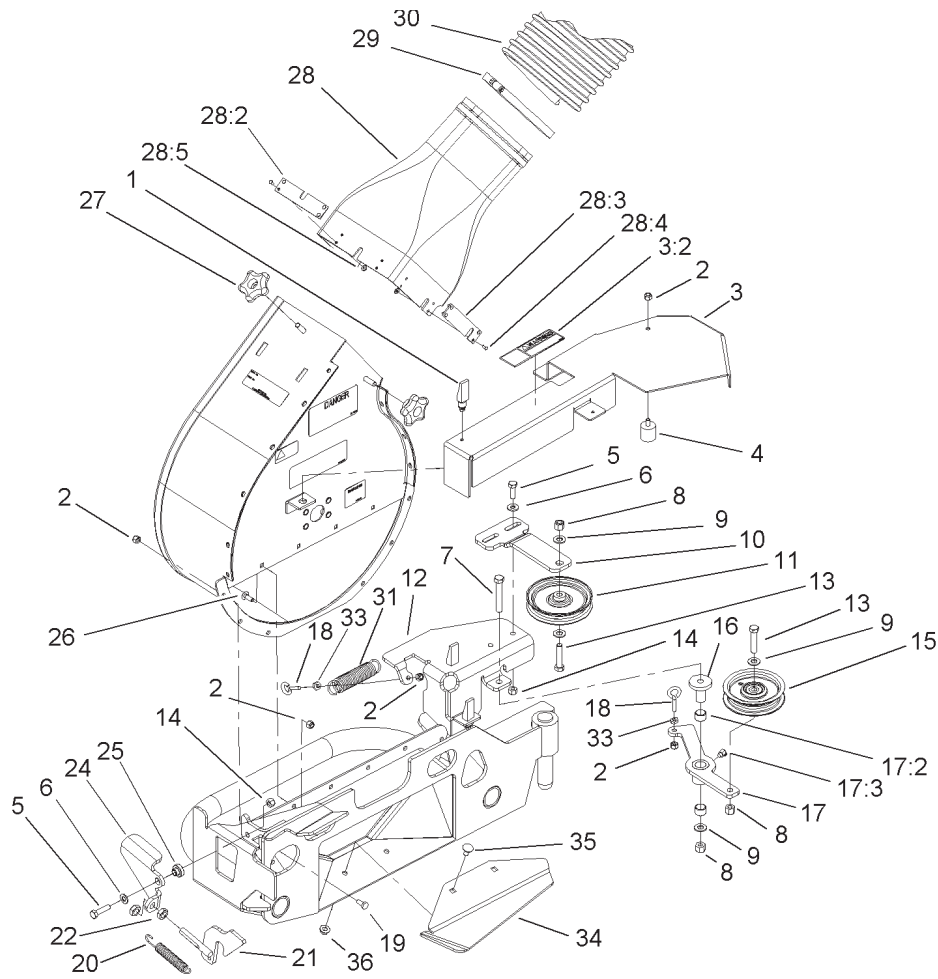


Sheet No.:3

Blower and Idler Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	74-5950	3	Latch-Swell
2	3296-42	13	Nut-Lock, NI
3	105-5990	1	Belt Cover ASM
3:2	80-8040	1	Decal-Warning
4	106-5891	1	Bumper
5	322-6	3	Screw-HH
6	3256-23	3	Washer-Flat
7	323-12	1	Screw-HH
8	3296-39	3	Nut-Lock, NI
9	3256-24	4	Washer-Flat
10	105-5986-03	1	Bracket-Idler
11	92-7099	1	Pulley-Idler
12	106-3390-03	1	Transition ASM
13	323-9	2	Screw-HH
14	3296-29	3	Nut-Lock, NI
15	92-7084	1	Pulley-Idler, Flat
16	106-2057	1	Spacer
17	106-2056	1	Idler Arm ASM
17:2	1-653600	2	Bearing
17:3	302-11	1	Fitting-Lube, 45°
18	71-2870	2	Bolt-Eye
19	321-3	6	Screw-HH
20	37-8880	1	Spring-Traction
21	106-3400	1	Latch ASM
22	3218-4	2	Nut-Jam
24	106-3414-01	1	Pedal-Latch

Ref. No.	Part No.	Qty.	Description
25	105-5996	1	Spacer
26	3229-1	4	Screw-CARR
27	106-4161	2	Knob-Handle
28	106-8021	1	Blower Outlet Adapter ASM
28:2	105-9102	1	Plate-Adapter, Top
28:3	105-9103	1	Plate-Adapter, Side
28:4	106-8000	8	Rivet
28:5	3256-53	8	Washer-Flat
29	102528	1	Clamp
30	106-9748	1	Hose-Flexible
31	707451	1	Spring-Extension
33	3218-1	2	Nut-Jam
34	106-3420-03	1	Shelf-Blower
35	3230-18	2	Screw-CARR
36	32128-25	2	Nut-Flange

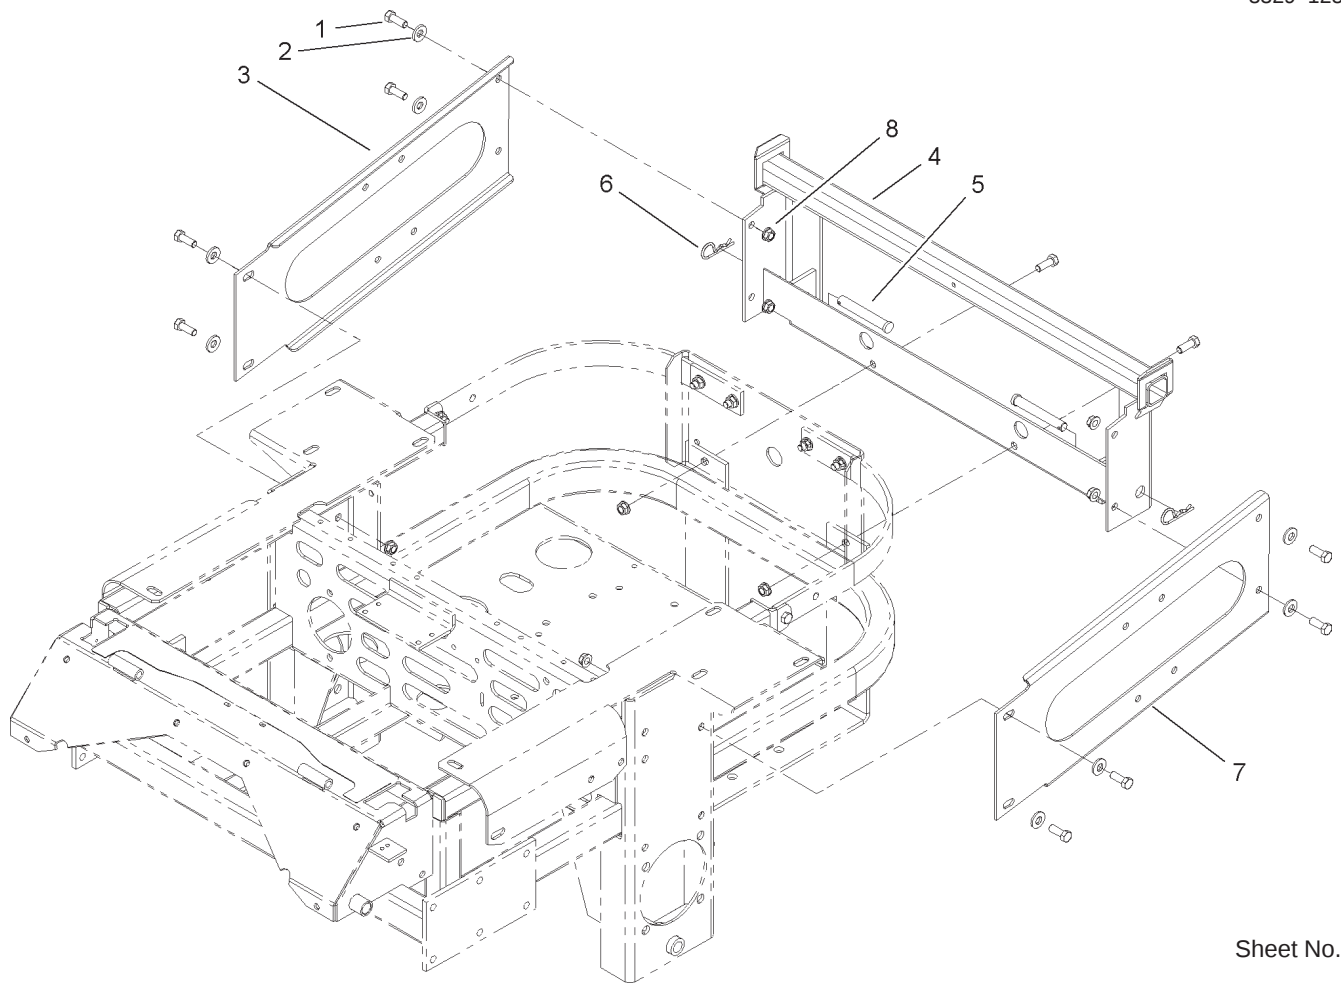


Sheet No.:4

Bagger Mounting Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	323-6	8	Screw-HH
2	98-5975	8	Washer-Belleville
3	103-0399-03	1	Bracket-Frame, RH
4	103-0429-03	1	Mount-Bagger
5	283-69	2	Pin-Clevis
6	1-806005	2	Pin-Hair
7	103-2972-03	1	Bracket-Frame, LH
8	3290-357	8	Nut-HHF

Ref. No.	Part No.	Qty.	Description

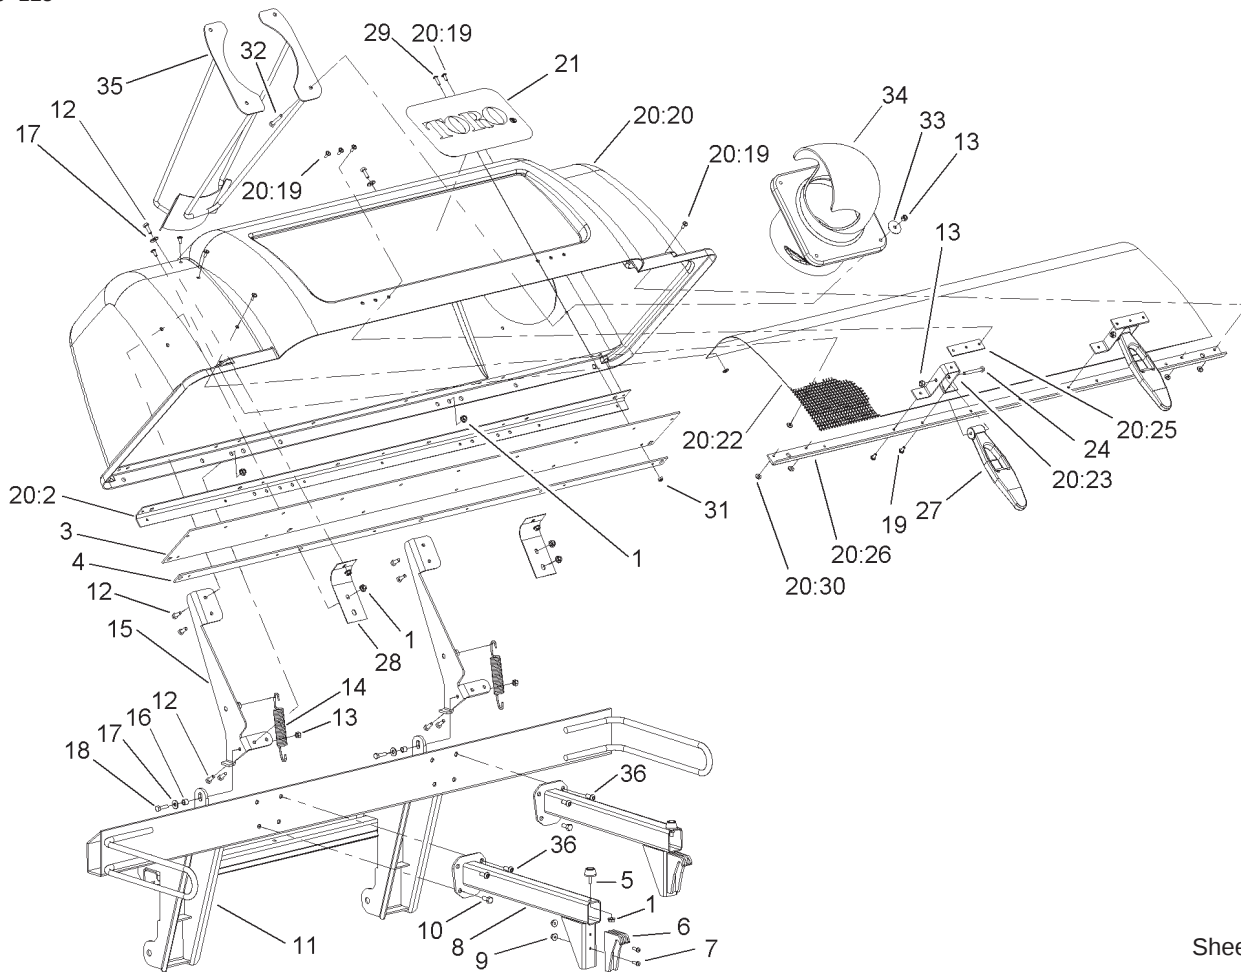


Sheet No.:5

Bagger Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	32128-33	12	Nut-HF
3	103-0451	1	Seal-Hinge
4	103-0452-03	1	Plate-Backing
5	1-523420	2	Bumper
6	1-653404	2	Catch
7	3290-500	4	Screw-PPH
8	1-652414-03	2	Bag Support ASM
9	3290-148	4	Nut
10	322-3	4	Screw-HH
11	103-0428-03	1	Bagger-Upright
12	321-4	10	Screw-HH
13	3296-42	8	Nut-Lock, NI
14	1-653544	2	Spring-Extension
15	103-0430-03	2	Hinge
16	1-633545	2	Spacer-Grommet
17	3256-2	4	Washer-Flat
18	321-6	2	Screw-HH
19	114439	10	Rivet-Pop
20	106-9742	1	Hood Assembly
20:2	103-0382-03	1	Stiffener-Bagger, Top
20:19	114439	36	Rivet-Pop
20:20	106-8024	1	Hood-Bagger, Triple
20:21	67-7310	1	Decal
20:22	103-0440	1	Screen-Bagger
20:23	103-0379	2	Bracket-Mount

Ref. No.	Part No.	Qty.	Description
20:25	103-0376	2	Plate-Latch, Reinforcement
20:26	103-0380-03	1	Support-Screen
20:30	3256-14	15	Washer-Flat
24	321-11	2	Screw-HH
27	1-653403	2	Latch
28	103-0391	2	Reinforcement-Hood, Bagger
29	1-803075	5	Screw-Truss Head
31	3296-2	5	Nut-Lock
32	321-9	4	Screw-HH
33	3256-58	4	Washer-Flat
34	105-5873	1	Tube-Bagger, Upper
35	106-0793-03	1	Flex Hose Support ASM
36	3274-55	4	Screw-HSBH

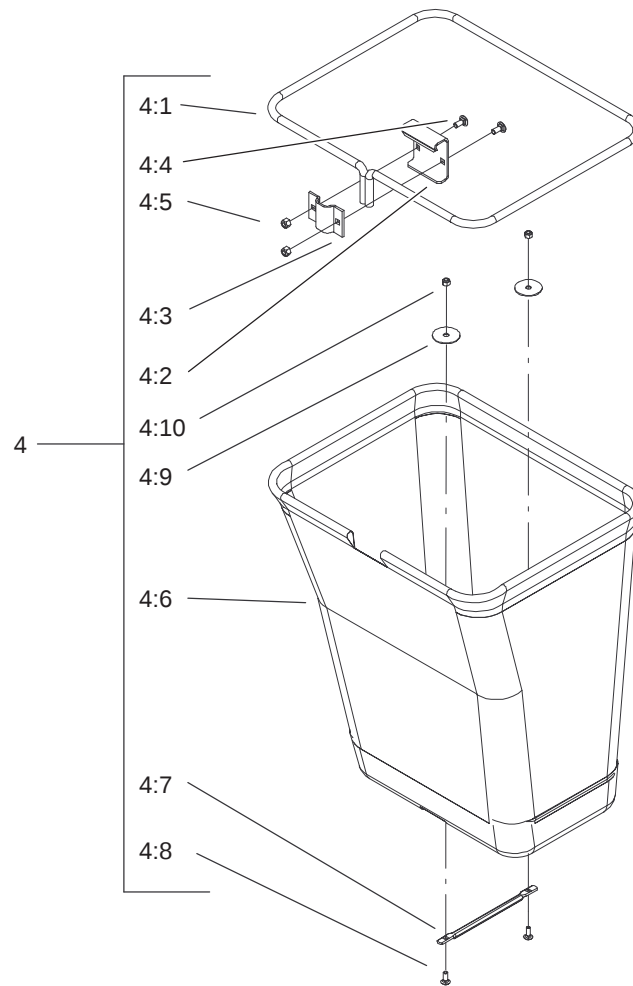


Sheet No.:6

Bag and Frame Assembly

Ref. No.	Part No.	Qty.	Description
4	103-0435	3	Bag And Frame ASM
4:1	1-653529-03	1	Frame-Bag
4:2	114973-03	1	Hanger-Bag
4:3	114974-03	1	Clamp
4:4	3230-1	2	Bolt-CARR
4:5	3296-29	2	Nut-Lock, NI
4:6	103-0431	1	Bag ASM
4:7	1-653566	1	Bag-Handle
4:8	3229-1	2	Screw-CARR
4:9	1-653036	2	Washer
4:10	3296-42	2	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description

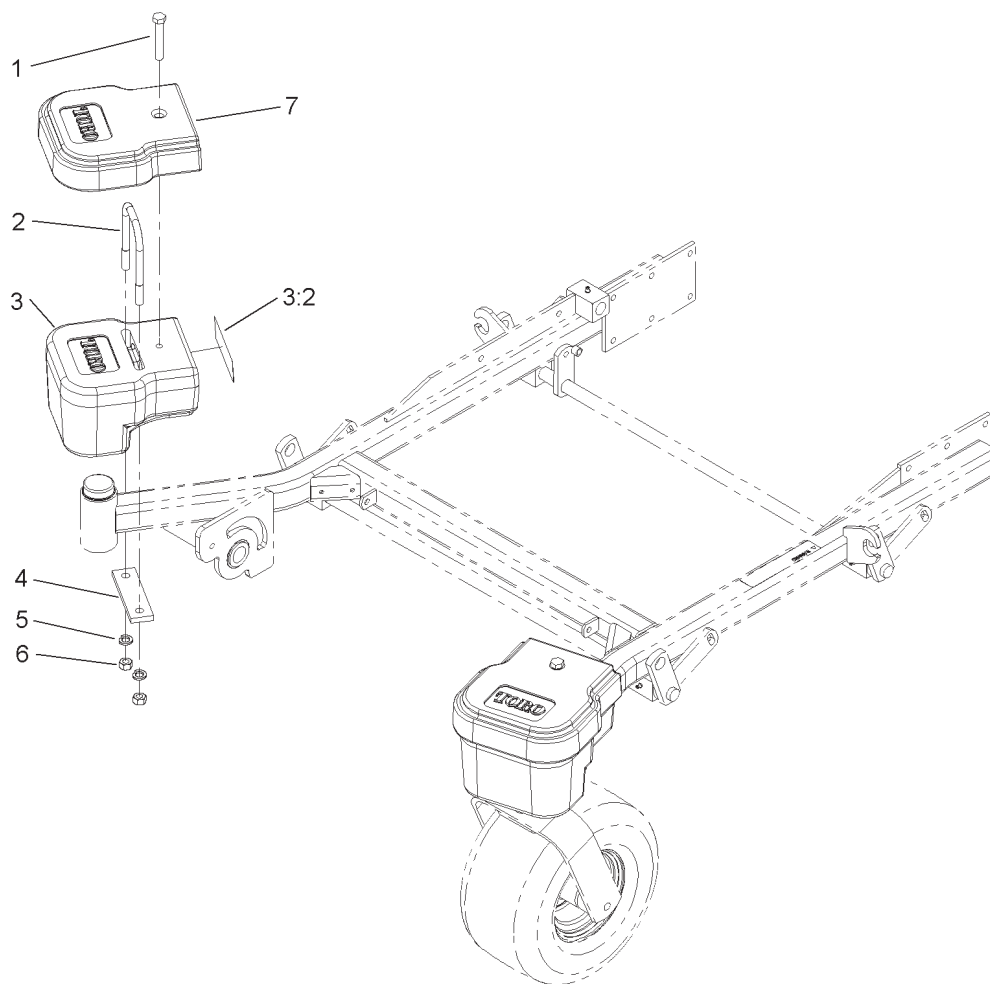

Sheet No.:7

Counterbalance Weights Assembly

Ref. No.	Part No.	Qty.	Description
1	325-12	2	Screw-HH
2	106-0874	2	U-Bolt
3	106-0872	2	Weight ASM
3:2	106-0871	1	Decal-Warning, Counterweight
4	105-9672-01	2	Plate
5	3253-27	4	Washer-Lock/Sp
6	3217-9	4	Nut-Hex
7	106-0870	2	Weight-33 Lbs

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

