



92cm Side Discharge Mower

Model No. 30138—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Deck and Pulleys Assembly	3	Frame Belt and Wheel Assembly	6
Spindle Housing Assembly No. 27–0870	4	Decal Assembly	7
Spindle Housing Assembly No. 54–7781	5		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Bagging Kit	Model 30125		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

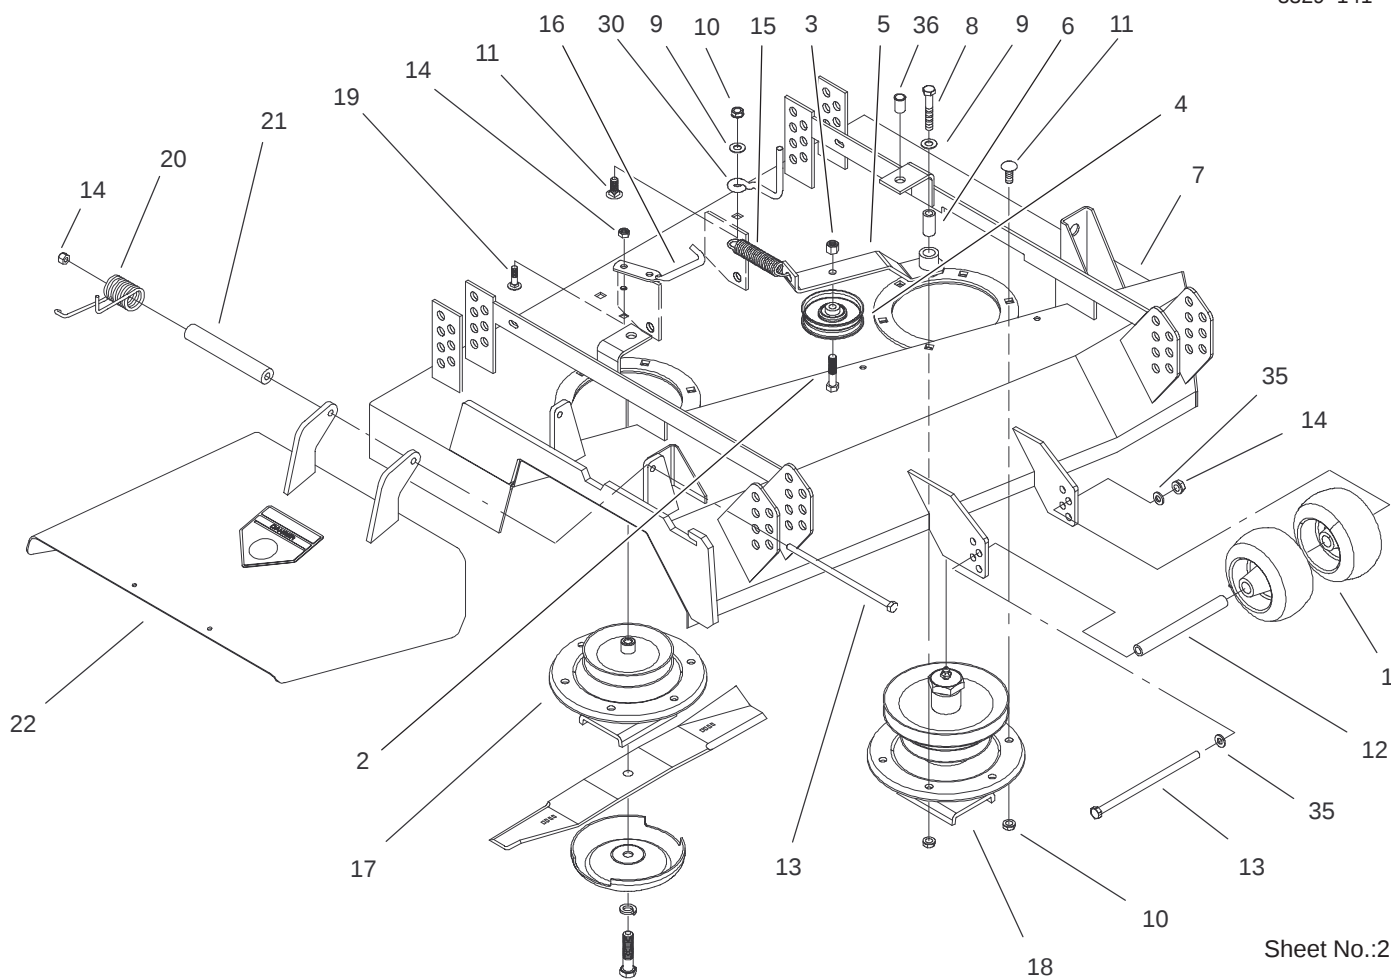


Sheet No.:2

Deck and Pulleys Assembly

Ref. No.	Part No.	Qty.	Description
1	68-2730	2	Wheel-Gage
2	3211-5	1	Screw-HH
3	3296-5	1	Nut-Lock, NI
4	51-3660	1	Pulley-Idler
5	56-4341-03	1	Idler Arm ASM
6	51-3641	1	Sleeve-Pivot, Idler
7	106-0742-01	1	Deck ASM
8	323-12	1	Screw-HH
9	3256-24	2	Washer-Flat
10	32128-21	14	Nut-HF
11	3231-22	13	Screw-CARR
12	98-5967	1	Spacer
13	322-50	2	Screw-HH
14	3296-29	4	Nut-Lock, NI
15	51-3650	1	Spring-Extension
16	56-4360	1	Rod-Spring
17	27-0870	1	Spindle ASM
18	54-7781	1	Spindle ASM
19	3230-22	2	Screw-CARR
20	104-8554	1	Spring-Torsion
21	105-4622	1	Spacer
22	104-1188-01	1	Deflector ASM
30	52-4780	2	Rod-Belt
35	3256-23	2	Washer-Flat
36	32148-10	2	Insert-Threaded

Ref. No.	Part No.	Qty.	Description

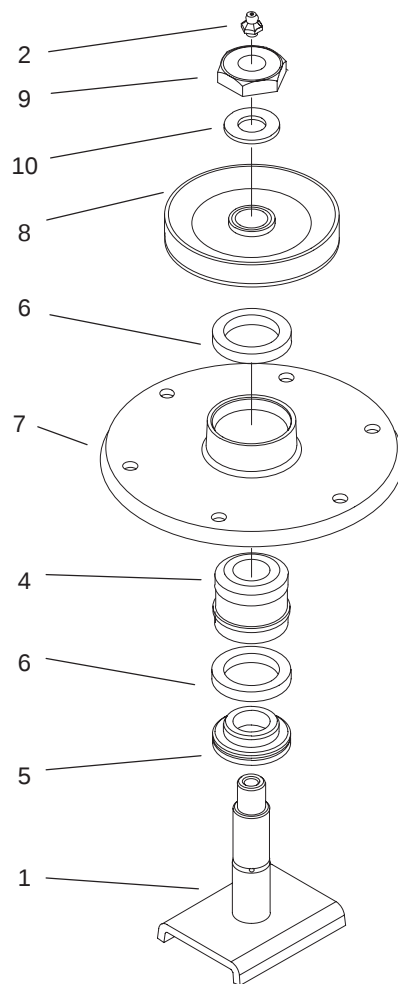


T-3920
Sheet No.:A1

Spindle Housing Assembly No. 27-0870

Ref. No.	Part No.	Qty.	Description
1	106-0806	1	Shaft ASM
2	302-2	1	Fitting-Grease
4	46-8530	1	Bearing ASM
5	27-0950	1	Spacer
6	253-139	2	Seal-Oil
7	61-4160	1	Housing
8	27-0970	1	Pulley And Hub ASM
9	32146-20	1	Nut-Jam
10	106-0776	1	Washer-Pinion

Ref. No.	Part No.	Qty.	Description

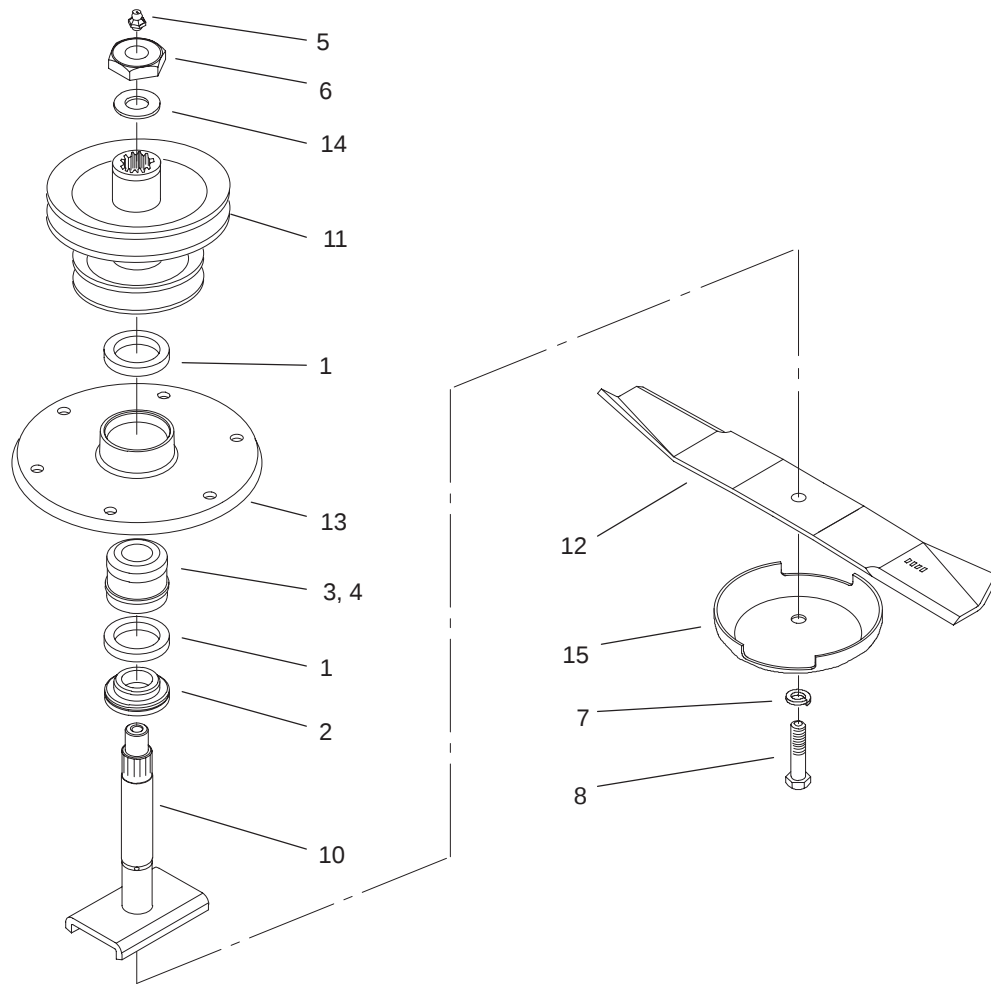


T-3919
Sheet No.:A2

Spindle Housing Assembly No. 54-7781

Ref. No.	Part No.	Qty.	Description
1	253-139	2	Seal-Oil
2	27-0950	1	Spacer
3	27-0960	1	Bearing ASM
4	27-5970	1	Spacer-Set, Matched
5	302-2	1	Fitting-Grease
6	32146-20	1	Nut-Jam
7	3253-7	1	Washer-Lock
8	44-2200	1	Screw-Blade
10	106-0800	1	Spindle ASM
11	55-7610	1	Pulley And Hub ASM
12	56-2390-03	1	Blade
13	61-4160	1	Housing
14	106-0776	1	Washer-Pinion
15	72-9361	1	Cup-Scalpi, Anti

Ref. No.	Part No.	Qty.	Description

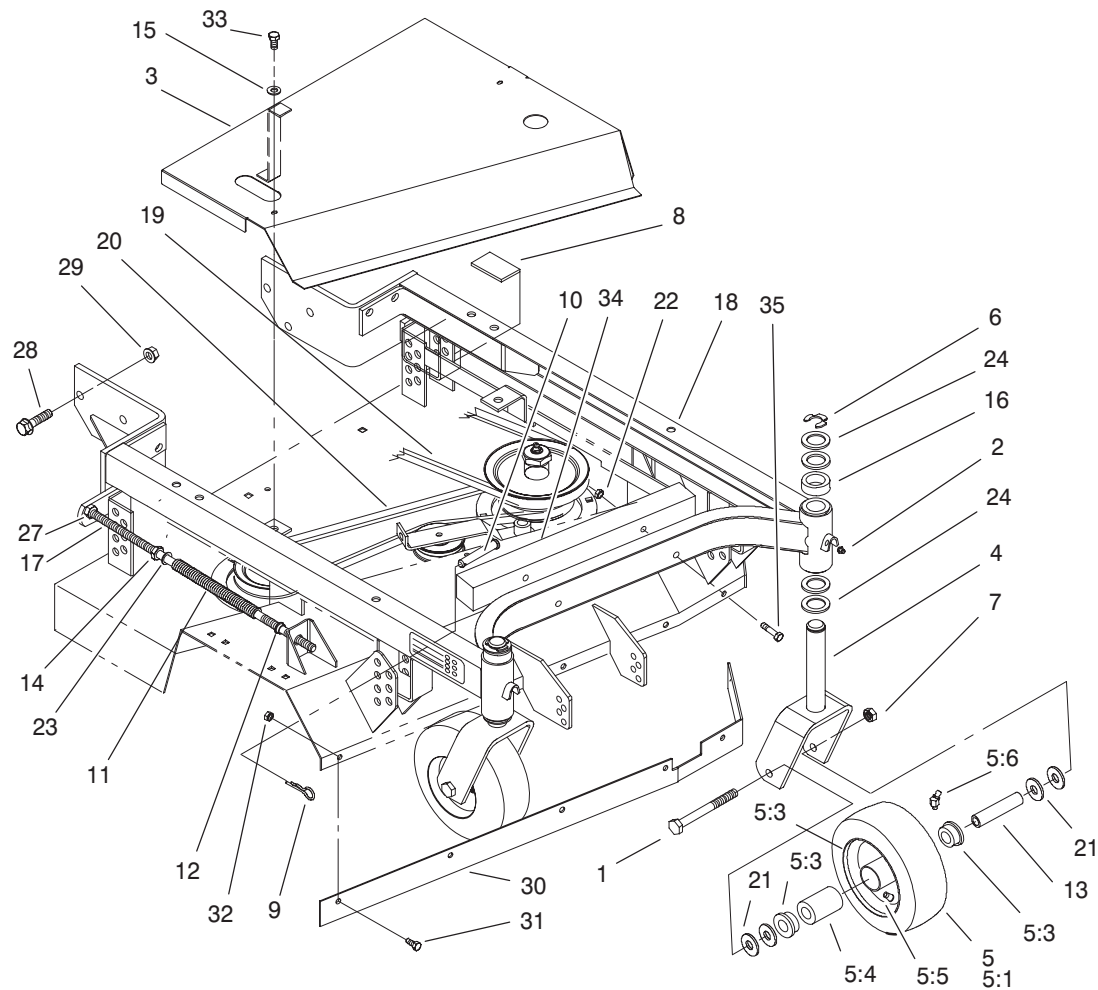

Sheet No.:3

Frame Belt and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	325-19	2	Screw-HH
2	302-5	2	Fitting-Grease
3	82-5460-01	1	Cover
4	98-2857-01	2	Fork-Caster
5	98-2859	2	Castor Wheel ASM
5:1	98-2877	1	Tire-Tubeless
5:2	100-2348	1	Rim ASM
5:3	62-5580	2	Bearing-Outside
5:4	62-5570	1	Bearing-Roller
5:5	232-27	1	Stem-Valve
5:6	302-11	1	Fitting-Lube, 45°
6	32151-91	2	Ring-Retaining
7	32153-5	2	Nut-Lock
8	74-0350	4	Cushion-Rubber
9	3290-355	4	Pin-Hair
10	283-55	4	Pin-Clevis
11	74-0290	2	Spring
12	256-156	2	Bushing-Flange
13	68-8980	2	Spanner-Tire
14	3218-5	4	Nut-Jam
15	3256-24	2	Washer-Flat
16	93-1167	2	Spacer-Caster
17	74-0310	2	Shaft-Adjusting
18	95-2821	1	Frame-Carrier
19	55-7660	1	V-Belt
20	51-3530	1	V-Belt-Drive, Deck

Ref. No.	Part No.	Qty.	Description
21	3256-6	8	Washer-Flat
22	3296-29	2	Nut-Lock, NI
23	41-8440	2	Washer
24	3-6781	8	Washer-Thrust
27	3296-45	2	Nut-Lock, NI
28	3234-6	6	Screw-HHF
29	32128-23	6	Nut-HF
30	93-9479-01	1	Baffle-Front
31	322-3	6	Screw-HH
32	3296-47	6	Nut-Lock, NI
33	323-4	2	Screw-HH
34	80-3340-01	1	Weight-Front
35	322-12	2	Screw-HH

