

LAWN-BOY®

Silver Series®

Walk Behind Lawnmower

Model No. 10356-230000001 and Up

Model No. 10358-230000001 and Up

Model No. 10359C-230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page
Housing, Handle Bracket and Wheel Assembly . .	3
Gear Case Assembly No. 104-7671	5
Gear Case and Wheel Assembly	6
Engine Assembly	7
Handle Assembly	8
Rear Grass Bag Assembly	9
Engine Assembly Tecumseh Model No. LEV120-362005A	10
Engine Assembly Tecumseh Model No. LEV120-362005A	11


Description	Page
Engine Assembly (continued) Tecumseh Model No. LEV120-362005A	12
Recoil Starter Assembly No. 590702(Optional) Tecumseh Model No. LEV120-362005A	13
Recoil Starter Assembly No. 590739 Tecumseh Model No. LEV120-362005A	14
Carburetor Assembly No. 640303 Tecumseh Model No. LEV120-362005A	15

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming


Abbreviation	Meaning
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

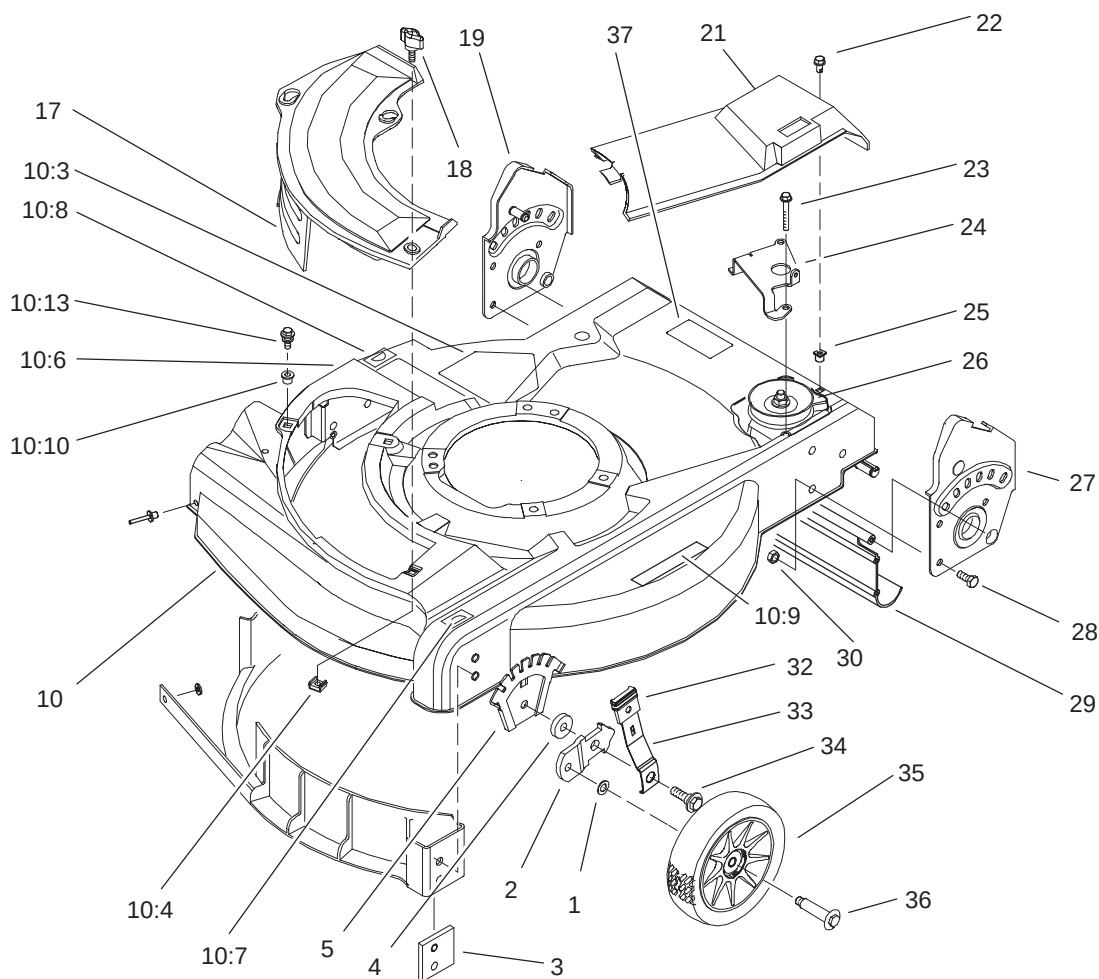

Sheet No.:2

Housing, Handle Bracket and Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	40-1940	2	Washer	10:8	104-7617	1	Decal-HOC,RH (only on: 10359c)
2	95-7403-03	2	Bracket-Height Adjustment, Wheel	10:9	104-7627	1	Decal-Warning (only on: 10359c)
3	92-7731	2	Plate-Baffle	10:9	93-7250	1	Decal-Warning (only on: 10356, 10358)
4	92-4890	2	Washer-Wheel	10:10	94-1610	2	Grommet-Plastic
5	92-4881-03	2	Plate-Height, Adjustment	10:13	614677	2	Screw-Sems
10	98-4477	1	Deck ASM (only on: 10356, 10358)	17	92-8630	1	Plate-Mulch
10	105-1258	1	Housing (only on: 10359c)	18	98-8332	1	Knob
10:3	43-8480	1	Decal-Danger (only on: 10356, 10358)	19	105-8602	1	RH Bracket ASM
10:3	56-6270	1	Decal-Danger (only on: 10359c)	21	95-7068	1	Cover-Drive
10:4	613765	1	Nut-Cage	22	92-9665	1	Screw
10:6	104-7629	1	Decal-Warning (only on: 10359c)	23	65-5221	2	Screw-HWHTF
10:6	99-6018	1	Decal-Warning (only on: 10356, 10358)	24	92-7728-03	1	Guide-Transmission
10:7	92-2914	1	Decal-HOC, LH (only on: 10356, 10358)	25	605120	1	Grommet
10:7	104-7616	1	Decal-HOC,LH (only on: 10359c)	26	104-7671	1	Gear Case ASM
10:8	92-2915	1	Decal-HOC, RH (only on: 10356, 10358)	27	105-8604	1	LH Bracket ASM
				28	322-3	6	Screw-HH
				29	92-8647	1	Shield-Trailing
				30	3296-29	6	Nut-Lock, NI
				32	92-1008	2	Knob-Lever, Height Adjustment
				33	614687	2	Arm-Front Spring
				34	614672	2	Bolt-Shoulder
				35	92-1099	2	Bolt-Shoulder

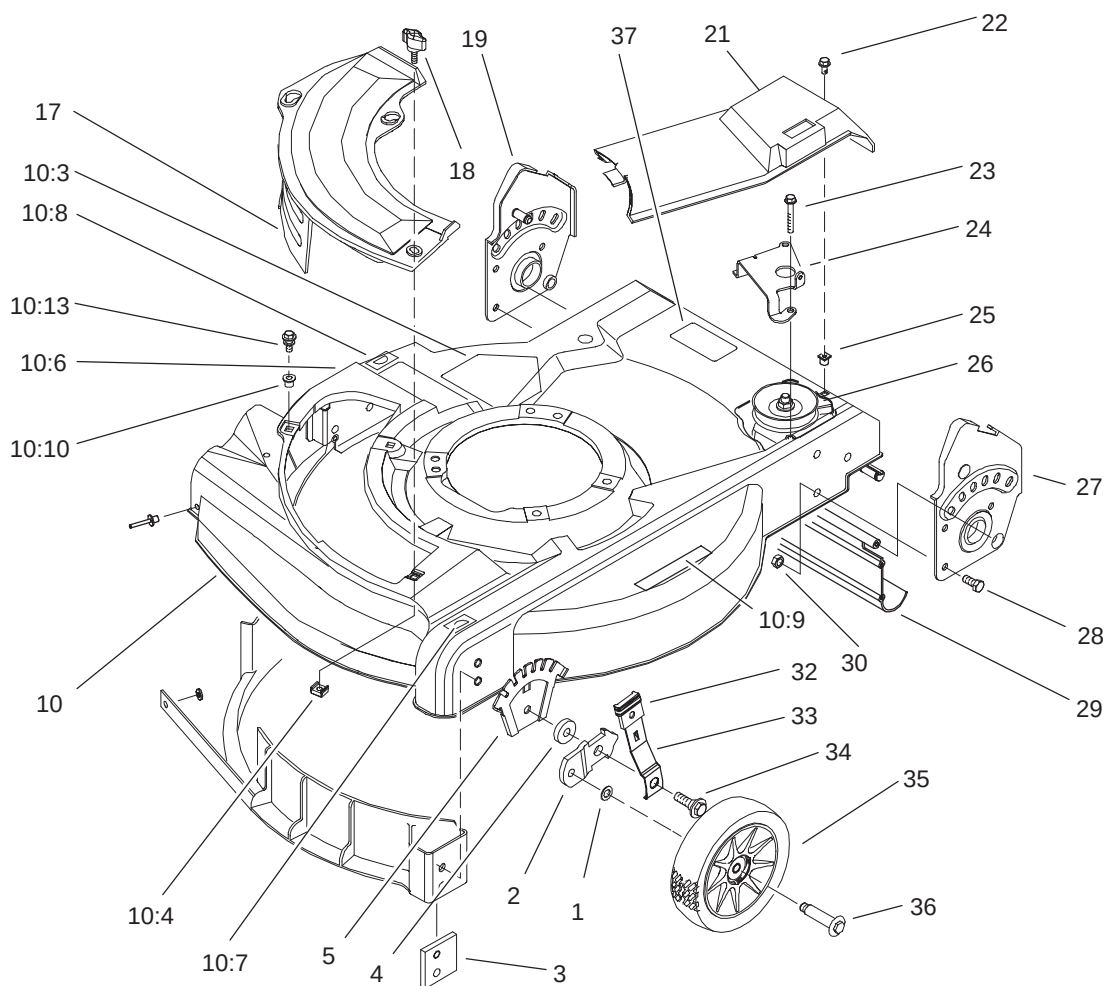


Sheet No.:2

Housing, Handle Bracket and Wheel Assembly (continued)

Ref. No.	Part No.	Qty.	Description
36	684776	2	Wheel & Tire ASM
37	104-7634	1	Decal-Manual,Lb (only on: 10359c)
*	95-7052	1	Plate-Opening, Chute

Ref. No.	Part No.	Qty.	Description


* Not illustrated

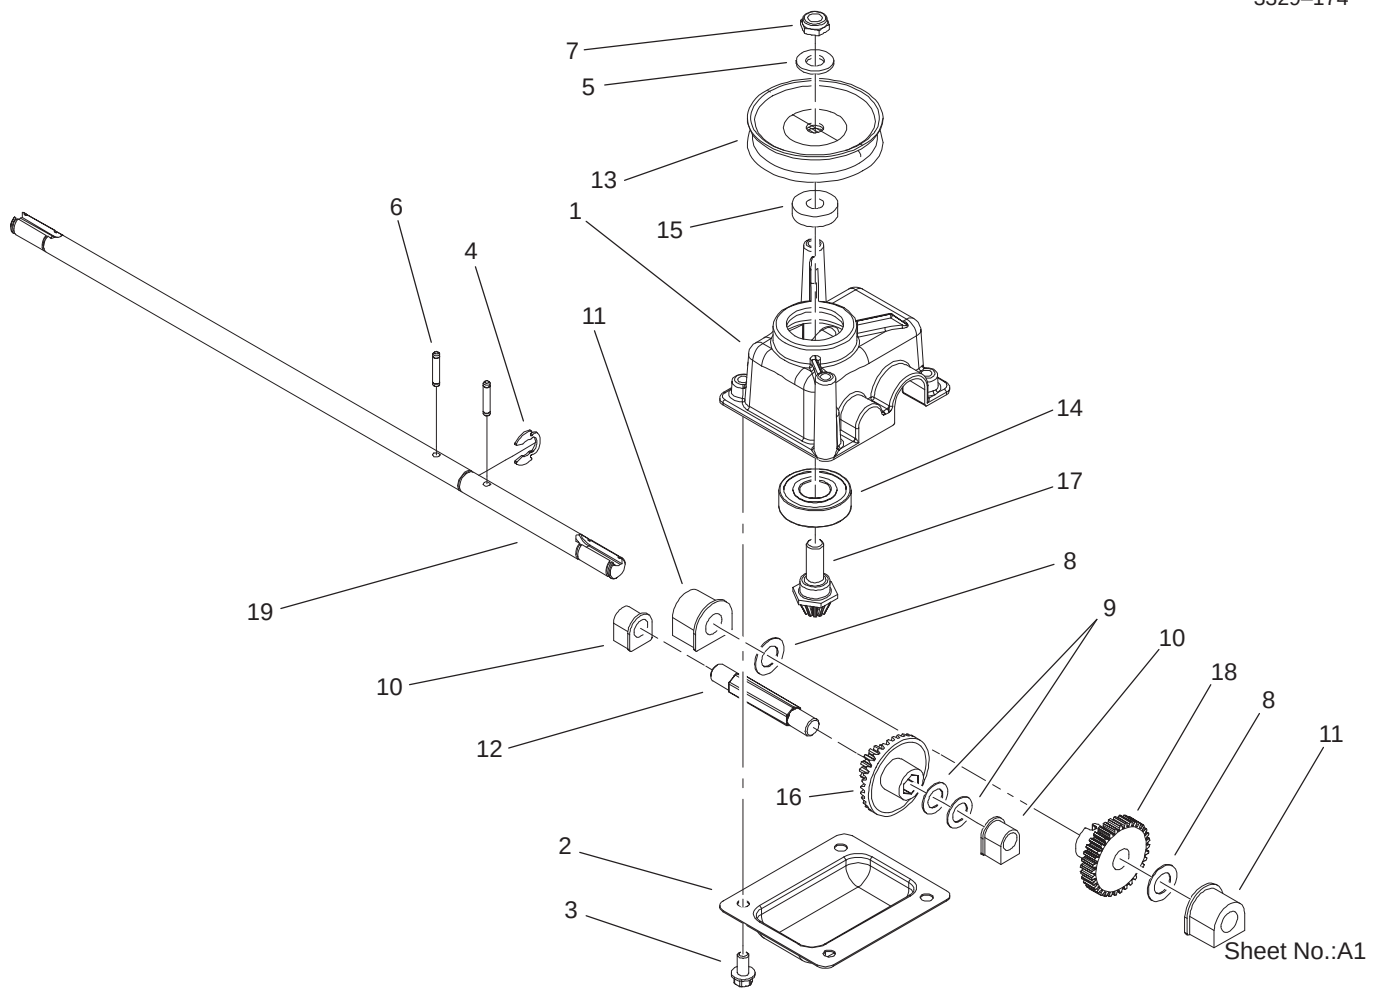

Gear Case Assembly No. 104-7671

Ref. No.	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock, NI
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing
12	614696	1	Shaft-Intermediate
13	614669	2	Half-Pulley
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-7668	1	Gear-15t Spur, 37t Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	614596	1	Gear
19	104-7670	1	Shaft-Output

Ref. No.	Part No.	Qty.	Description

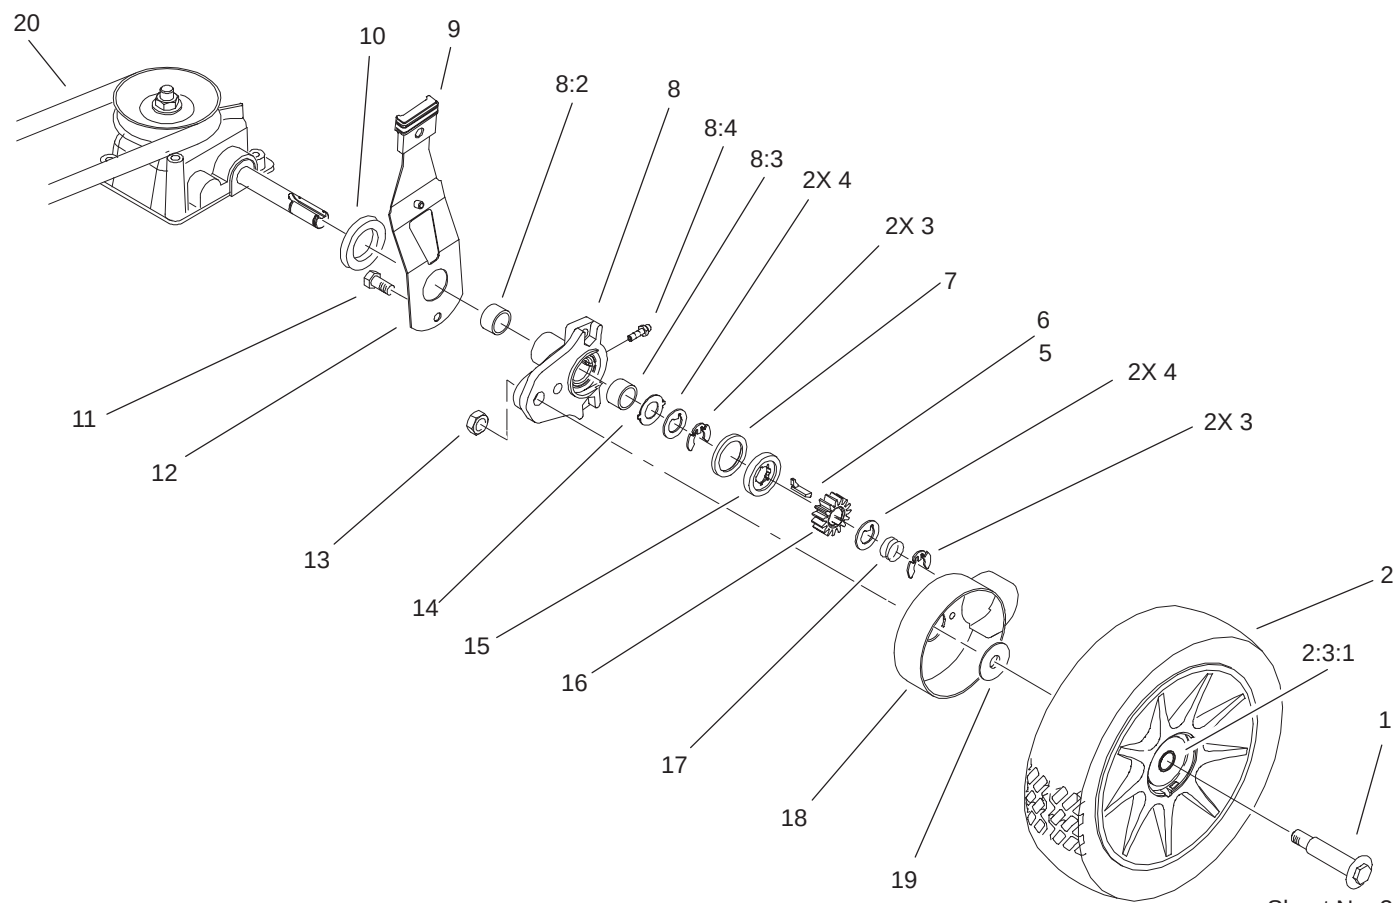


Gear Case and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel & Tire ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
*6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Rear Height Adjustment Arm ASM
8:2	70-9760	1	Bushing
8:3	47-2900	1	Bushing
8:4	302-56	1	Fitting-Grease
9	92-1008	2	Knob-Lever, Height Adjustment
10	614447	2	Spacer-Axle Shaft
11	32144-85	2	Screw-HWH
12	92-1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel

Ref. No.	Part No.	Qty.	Description
19	614426	2	Washer-Stepped
20	93-7381	1	V-Belt

* Not illustrated

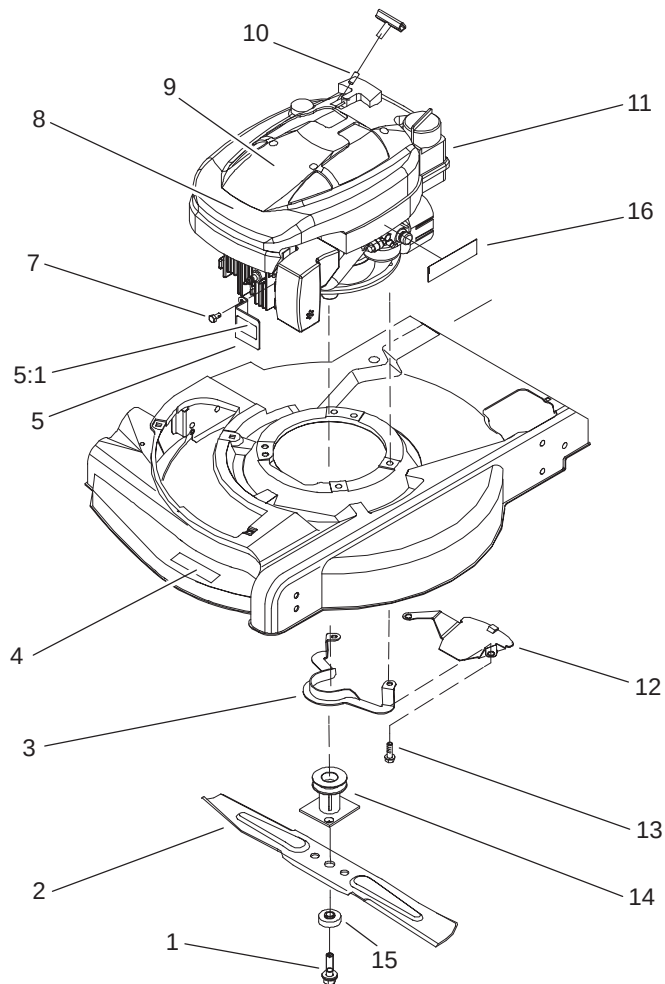


Sheet No.:5

Engine Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	105-8579	1	Bolt-Blade,Sems	15	106-6826	1	Spacer
2	612543-03	1	Blade	16	105-6832	1	Decal-Primer (only on: 10359c)
3	92-1024-03	1	Guide-Belt				
4	104-7955	1	Decal-Deck				
5	95-5569	1	Muffler Guard ASM (only on: 10356, 10358)				
5	105-1278	1	Muffler Guard ASM (only on: 10359c)				
5:1	104-8065	1	Decal-Surface Hot, International (only on: 10359c)				
5:1	65-2690	1	Decal-Surface, Hot (only on: 10356, 10358)				
7	32144-85	1	Screw-HWH				
8	98-1593	1	Applique				
9	106-8303	1	Decal-Recoil, Lb				
10	92-1701	1	Stop-Rope				
☆11		1	Engine-Tecumseh Model No. Lev120-362005a				
12	93-4196-03	1	Shield-Grass				
13	95-1726	3	Screw-Taptite W/Patch				
14	106-3950	1	Driver-Blade, ASM				

☆ Not serviced separately

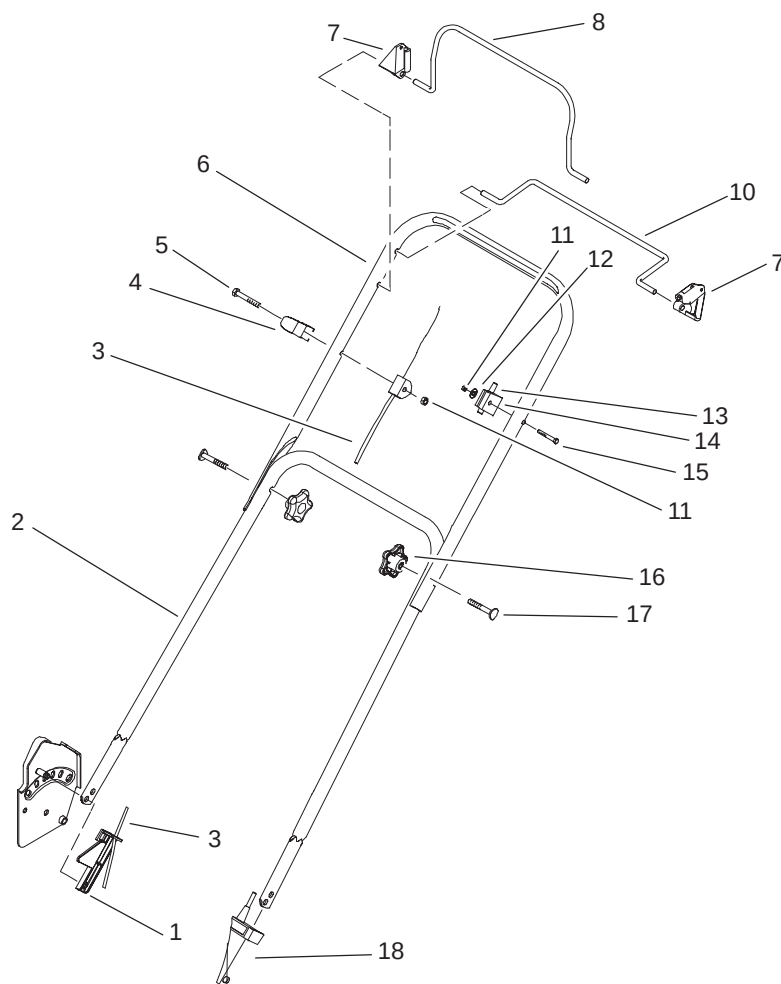


Sheet No.:6

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1013	1	Guard-Cable
2	614643-05	1	Handle-Lower
3	100-5989	1	Brake Cable ASM
4	93-7383	1	Guide-Rope
5	321-50	1	Screw-HH
6	100-2888-05	1	Handle-Upper
7	92-5412	2	Stop-Pivot
8	93-4184-03	1	Bail-Brake
10	92-1001-03	1	Bail-Control
11	3296-73	2	Nut-Lock, NI
12	3256-1	1	Washer-Flat
13	100-5982	1	Cable-Ground Speed
14	92-7729	1	Anchor-Upper, Cable
15	92-2266	1	Screw-Handle
16	106-4161	2	Knob-Handle
17	614697	2	Screw
18	93-7380	1	Anchor-Cable

Ref. No.	Part No.	Qty.	Description

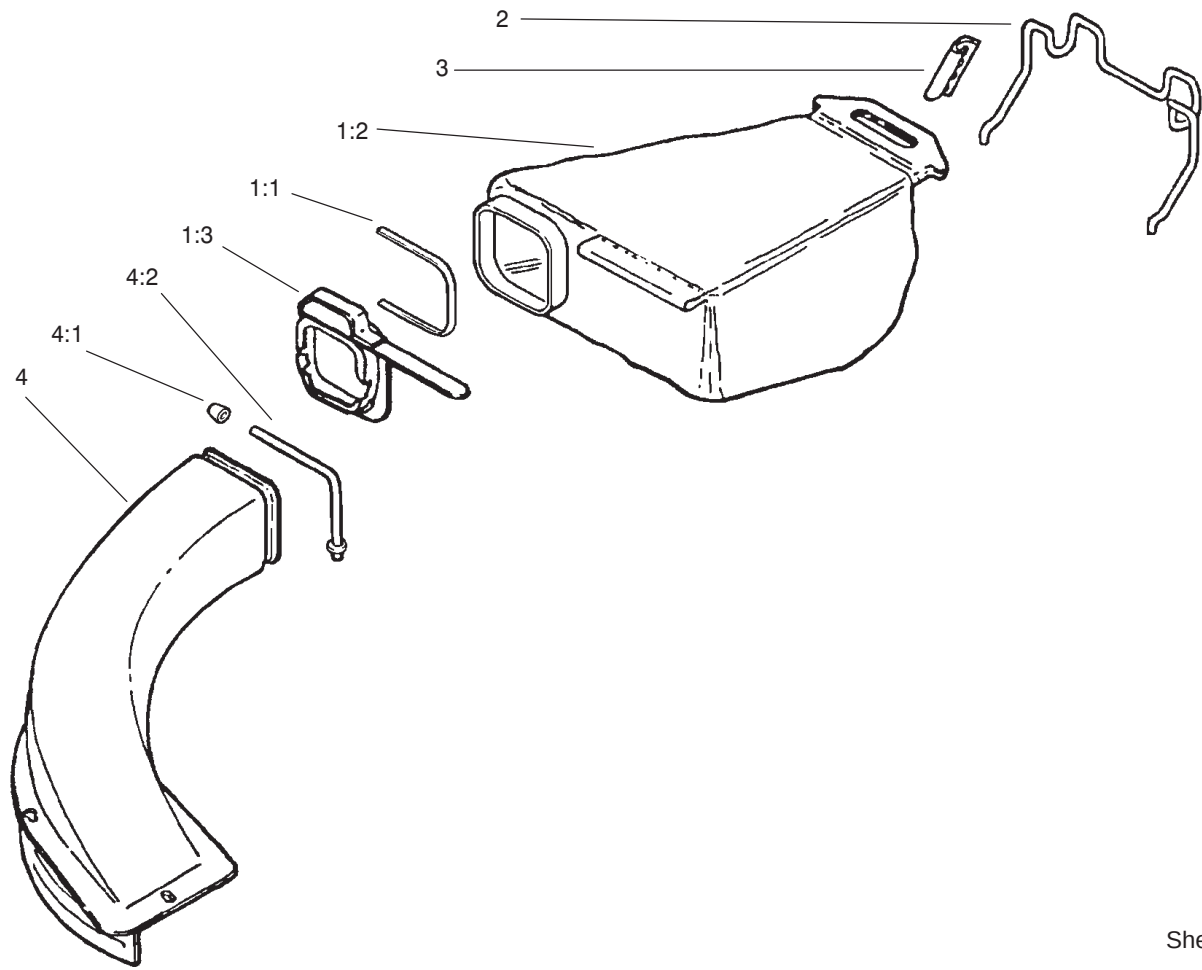

Sheet No.:8

Rear Grass Bag Assembly


Ref. No.	Part No.	Qty.	Description
*1	100-6361	1	Bag & Adapter ASM.
1:1	614700	1	Strap-Tie
1:2	100-6362	1	Replacement Bag ASM.
1:3	684727-03	1	Adapter
2	613455	1	Hanger-Wire
3	613462-03	2	Clamp-Hanger
4	684729	1	Chute & Support ASM
4:1	614589	1	Nut-Cap
4:2	614591	1	Support-Chute

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Engine Assembly

Tecumseh Model No. LEV120-362005A

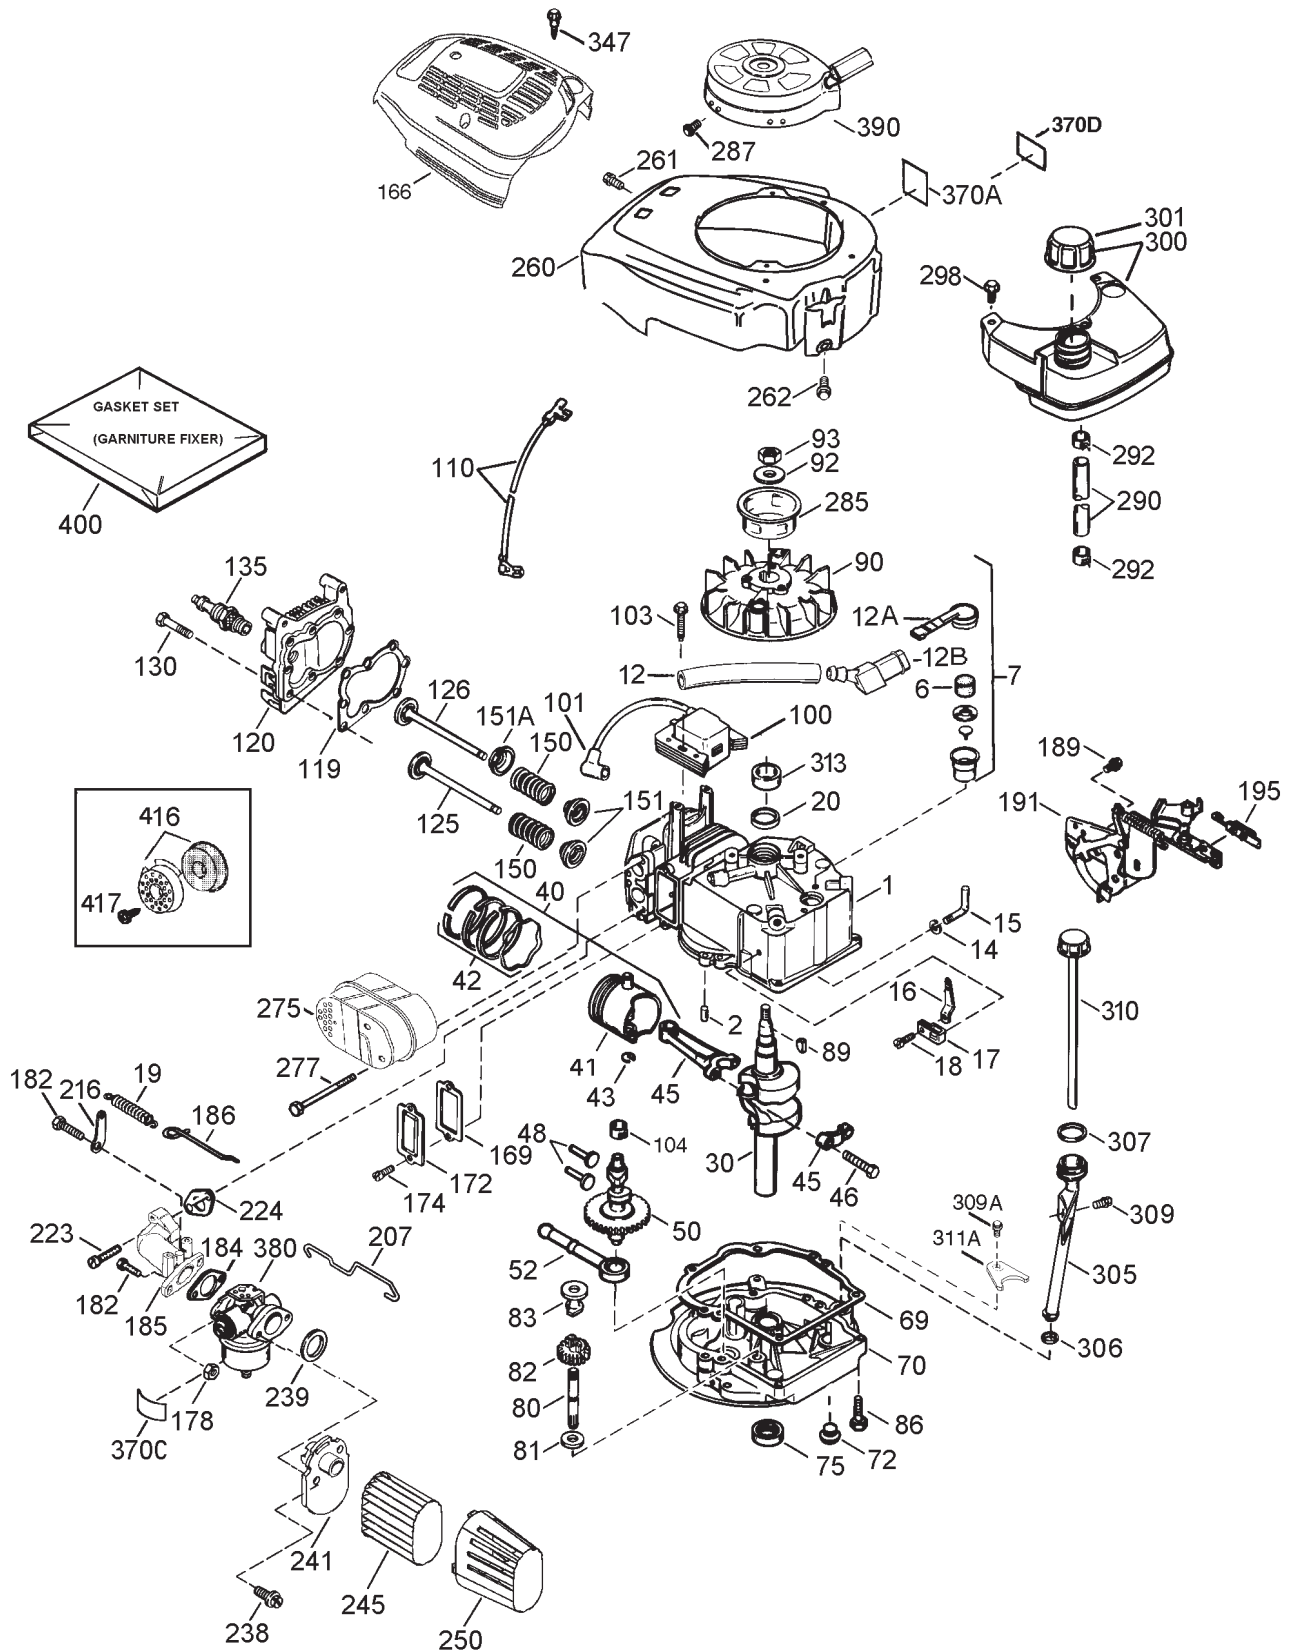

Engine Assembly


Tecumseh Model No. LEV120-362005A

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	37465	1	Cylinder (Incl. 2, 20 & 150)	120	37714	1	Cylinder Head
2	26727	2	Dowel Pin	125	36780	1	Exhaust Valve (1/32" OS) (Incl. 151)
6	33734	1	Breather Element	125	37288	1	Exhaust Valve (Std.) (Incl. 151)
7	36557	1	Breather Ass'y. (Incl. 6 & 12A)	126	37289	1	Intake Valve (Std.) (Incl. 151 & 151A)
12	36775	1	Breather Tube	130	6021A	8	Screw, 5/16-18 x 1-7/16"
12A	36558	1	Breather Cover & Tube (Incl. 12B)	135	35395	1	Resistor Spark Plug (RJ19LM)
12B	36694	1	Breather Tube Elbow	150	31672	2	Valve Spring
14	28277	1	Washer	151	31673	2	Valve Spring Cap
15	30589	1	Governor Rod (Incl. 14)	151A	40017	1	Intake Valve Seal
16	34839A	1	Governor Lever	166	37813	1	Engine Shroud (Green)
17	31335	1	Governor Lever Clamp	*169	36783	1	Valve Cover Gasket
18	651018	1	Screw, T-15, 8-32 x 19/64"	172	36784	1	Valve Cover
19	36281	1	Extension Spring	174	30200	2	Screw, 10-24 x 9/16"
20	32600	1	Oil Seal	178	29752	2	Nut & Lock Washer, 1/4-28
30	37692	1	Crankshaft	182	6201	2	Screw, 1/4-28 x 7/8"
40	40027	1	Piston, Pin & Ring Set (Std.)	*184	26756	1	Carburetor To Intake Pipe Gasket
41	40042	1	Piston & Pin Ass'y. (Std.) (Incl. 43)	185	37466	1	Intake Pipe
42	40006	1	Ring Set (Std.)	186	32653	1	Governor Link
43	20381	2	Piston Pin Retaining Ring	189	650839	2	Screw, 1/4-20 x 3/8"
45	36777	1	Connecting Rod Ass'y. (Incl. 46)	191	36559A	1	S.E. Brake Bracket (Incl. 195)
46	32610A	2	Connecting Rod Bolt	195	610973	1	Terminal
48	27241	2	Valve Lifter	207	34336A	1	Throttle Link
50	37460	1	Camshaft (Exhaust MCR) (Inc. 104)	216	33086	1	R.P.M. Adjusting Lever
52	29914	1	Oil Pump Ass'y	223	650451	2	Screw, 1/4-20 x 1"
*69	37609	1	Mounting Flange Gasket	*224	36786	1	Intake Pipe Gasket
70	37608	1	Mounting Flange (Incl. 72-83, 306, 309A & 311A)	238	650932	2	Screw, 10-32 x 49/64"
72	37614	1	Oil Drain Plug	*239	34338	1	Air Cleaner Gasket
75	27897	1	Oil Seal	241	36919	1	Air Cleaner Collar
80	30574A	1	Governor Shaft	245	36905	1	Air Cleaner Filter
81	30590A	1	Washer	250	37122	1	Air Cleaner Cover
82	30591	1	Governor Gear Ass'y. (Incl. 81)	260	37696A	1	Blower Housing
83	30588A	1	Governor Spool	261	30200	2	Screw, 10-24 x 9/16"
86	650488	6	Screw, 1/4-20 x 1-1/4"	262	650831	2	Screw, 1/4-20 x 1/2"
89	611004	1	Flywheel Key	275	37498	1	Muffler
90	611112	1	Flywheel	277	650988	2	Screw, 1/4-20 x 2-9/32"
92	650815	1	Belleville Washer	285	35000A	1	Starter Cup
93	650816	1	Flywheel Nut	287	650926	2	Screw, 8-32 x 21/64"
100	34443C	1	Solid State Ignition	290	29774	1	Fuel Line
101	610118	1	Spark Plug Cover	292	26460	2	Fuel Line Clamp
103	651007	2	Screw, T-15, 10-24 x 15/16"	298	28763	2	Screw, 10x32 x 35/64"
104	37480	1	Cam Bushing	300	35586A	1	Fuel Tank (Incl. 292 & 301)
110	37047	1	Ground Wire	301	36246	1	Fuel Cap Ass'y
*119	36787	1	Cylinder Head Gasket	305	35647	1	Oil Fill Tube
				*306	37610	1	"O"-Ring
				307	35499	1	"O"-Ring
				309	650562	1	Screw, 10-32 x 1/2"
				309A	650783	1	Screw, 10-24 x 3/4"

Obtain Parts from Local Tecumseh Dealer. * Included in Repair Kit No. 632809

Ref. No.	Part No.	Qty.	Description

12

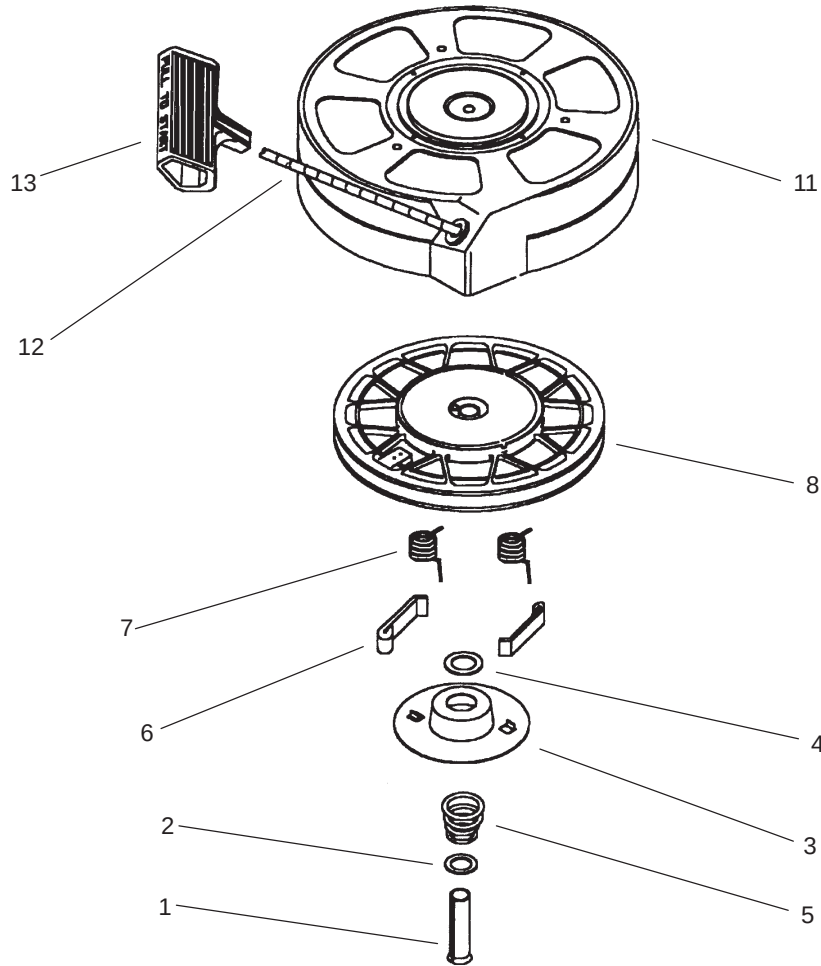


Sheet No.:
T-xxxx

Recoil Starter Assembly No. 590702 (Optional)
Tecumseh Model No. LEV120-362005A

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	590702	0	Recoil Starter				
1	590599A	1	Spring Pin (Incl. 4)				
2	590600	1	Washer				
3	590696	1	Retainer				
4	590601	1	Washer				
5	590697	1	Brake Spring				
6	590698	2	Starter Dog				
7	590699	2	Dog Spring				
8	590700	1	Pulley & Rewind Spring Ass'y.				
11	590703A	1	Starter Housing Ass'y. (40 degree grommet)				
12	590535	1	Starter Rope (98" X 9/64" dia.)				
13	590701	1	Starter Handle				

Obtain Parts from Local Tecumseh Dealer

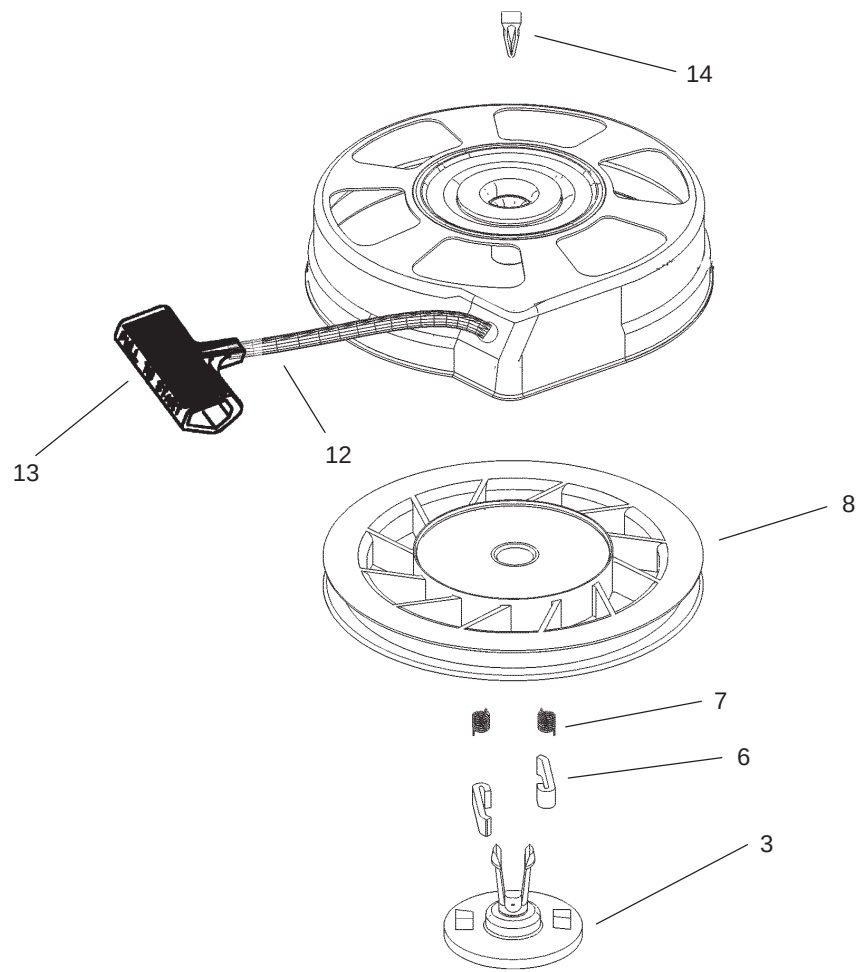

Sheet No.:


T-XXXX

Recoil Starter Assembly No. 590739
Tecumseh Model No. LEV120-362005A

Ref. No.	Part No.	Qty.	Description
0	590739	1	Rewind Starter
3	590740	1	Retainer
6	590616	2	Starter Dog
7	590617	2	Dog Spring
8	590618A	1	Pulley & Rewind Spring Ass'y
11	590638A	1	Starter Housing Ass'y (40 degree grommet)
12	590535	1	Starter Rope (Length 98" x 9/64" dia.)
13	590701	1	Starter Handle
14	590760	1	Spring Clip

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Local Tecumseh Dealer

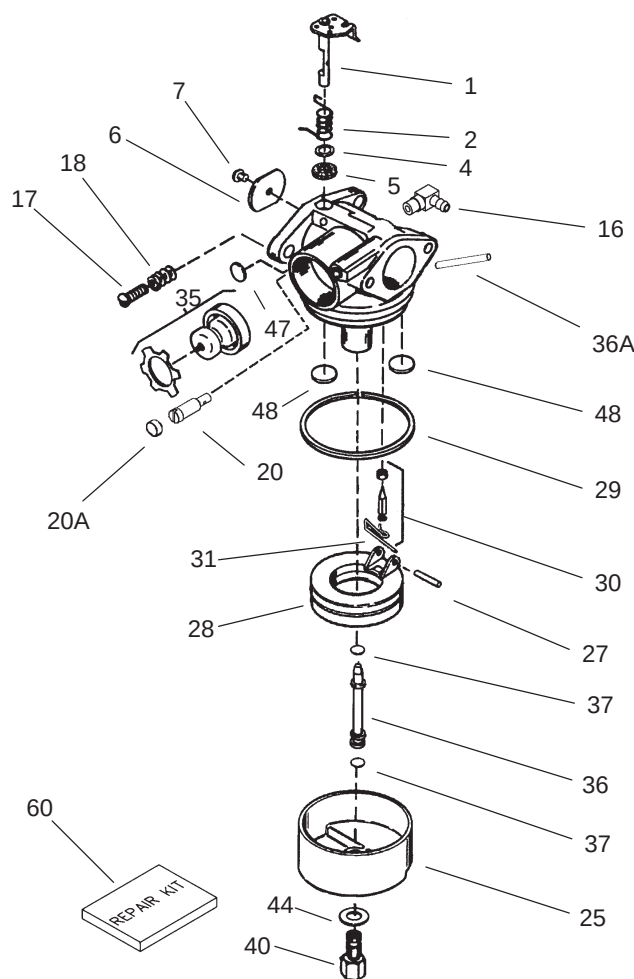

Sheet No.:

T-xxxx

Carburetor Assembly No. 640303 Tecumseh Model No. LEV120-362005A

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	640303	1	Carburetor (Incl. 184 of Engine Parts List)	*31	631022	1	Spring Clip
1	631615	1	Throttle Shaft & Lever Assembly	35	640259	1	PrimerBulb (Red)/Retainer Ring
2	631767	1	Throttle Return Spring	36	640019	1	Main Nozzle Tube
*4	631184	1	Dust Seal Washer	36A	632766	1	Bowl Vent Tube Extension
*5	631183	1	Dust Seal	*37	632547	2	O-Ring, Main Nozzle Tube
6	640070	1	Throttle Shutter	40	640087	1	High Speed Bowl Nut
*7	650506	1	Shutter Screw	*44	27110A	1	Bowl Nut Washer
16	631807	1	Fuel Fitting	*47	630748	1	Welch Plug, Idle Mixture Well
17	651025	1	Throttle Crack Screw/Idle SpeedScrew	*48	631027	2	Welch Plug, Atmospheric Vent
18	630766	1	Tension Spring	60	632809	1	Repair kit (Incl. Items Marked * in Notes)
20	640018	1	Idle Restrictor Screw				
* 20A	640200	1	Idle Restrictor Screw Cap				
25	631867	1	Float Bowl				
*27	631024	1	Float Shaft				
28	632802	1	Float (Plastic)				
*29	631028	1	Float Bowl O-Ring				
*30	632807	1	Inlet Needle, Seat, & Clip (Incl. 31)				

Obtain Parts from Local Tecumseh Dealer. * Included in Repair Kit No. 632809

LAWN-BOY®