


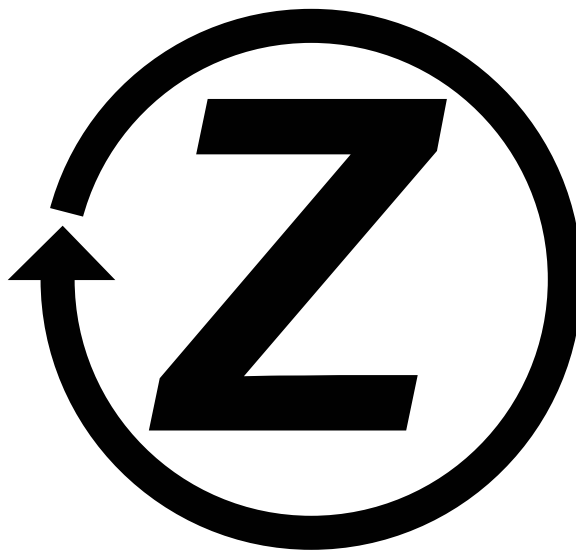

Z-SPRAY

Model No. ZS3624—Serial No. 404314159 and Up

Picture below may not reflect actual product.



Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

- Main Frame Assembly 4
- Motion Control Assembly 6
- Park Brake Assembly 8
- Wheel Assembly 10
- Spray System Assembly 12
- Left Tank Assembly 14
- Right Tank Assembly 16
- Manifold Assembly 18
- Liquid Valve Assembly 20
- Boom Assembly 22
- Spreader Assembly 24
- Fuel Tank Assembly 26
- Engine Assembly 28
- Hydraulic Assembly 30
- Electrical Assembly 32


Main Frame Assembly

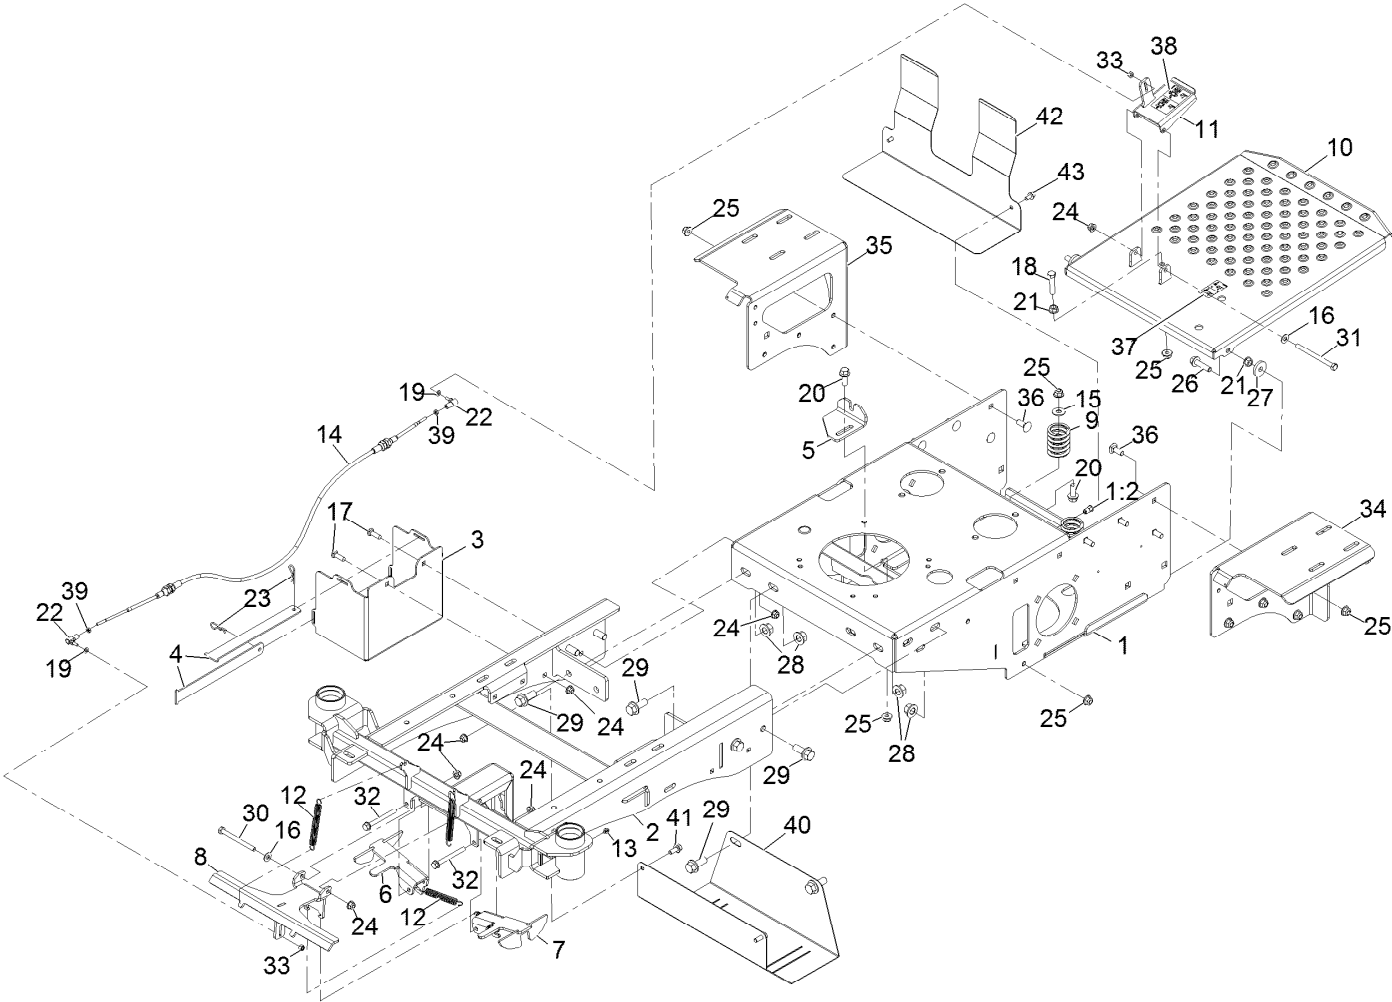

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-7823	1	Frame-Rear	25	135-6110	15	Nut-Hex Flange
1:2	138-2758	2	Nut-Clinch,Hex	26	135-6278	2	Screw-HHF
2	142-0778	1	Wld, Front Frame, Jr36 24 Gallon Unit	27	126-3875	2	Washer
3	142-0781	1	Tray, Jr36 Battery	28	135-6111	8	Nut-Hex Flange
4	135-5493	2	Strap-Battery	29	135-6207	8	Screw-HHF
5	135-5494	1	Bracket-Cable, Lower	30	135-6217	1	Screw-HH
6	135-5195	1	Wing-Capture, Rt	31	135-6218	1	Screw-HH
7	135-5194	1	Wing-Capture, Lt	32	135-6222	2	Screw-HHF
8	142-0806	1	Wld, Capture, T-Bar, Jr36	33	HDW05856	2	Nut-NYL Lock,#10-32,ST/ST 18-8
9	135-5654	3	Spring-Compression	34	142-0775	1	Wld, Mount, Fert Box, L, Jr36
10	135-7508	1	Wld, Foot Plate, Jr36	35	142-0777	1	Wld, Mount, Fert Box, R, Jr36,
11	142-1923	1	Wld, Foot Pedal, Lcs	36	126-0980	8	Screw-Carriage 3/8-16 X 1 SS
12	135-5652	4	Spring-Extension	37	135-6728	1	Decal-Button, Foot (Spray)
13	302-63	2	Zerk	38	135-6430	1	Decal-Lock, Caster
14	135-5644	1	Cable-Caster, Locking	39	520-0019	2	Nut-Hex, Jam
15	1126	3	Washer-Flat	40	142-0744	1	Guard, Muffler, Jr36
16	107-0279	2	Washer	41	126-2712	2	Screw-HHF 5/16-18 X 3/4 SS
17	HDW17294	2	Bolt,Carriage,5/16-18X1,ST/ST 18-8	42	135-8653	1	Shield, Heat, Hydraulic Pump, Jr36
18	126-0710	1	Screw-HH	43	135-6280	2	Screw-HHF, 1/4-20 X 1/2, Ser Flg, SS
19	126-0759	2	Washer-Flat				
20	135-6208	4	Screw-HHF				
21	135-6806	3	Nut-Hex Flange				
22	135-5682	2	Ball Joint-SS				
23	135-6284	2	Pin-Hair				
24	135-6109	8	Nut-Hex Flange				


Motion Control Assembly

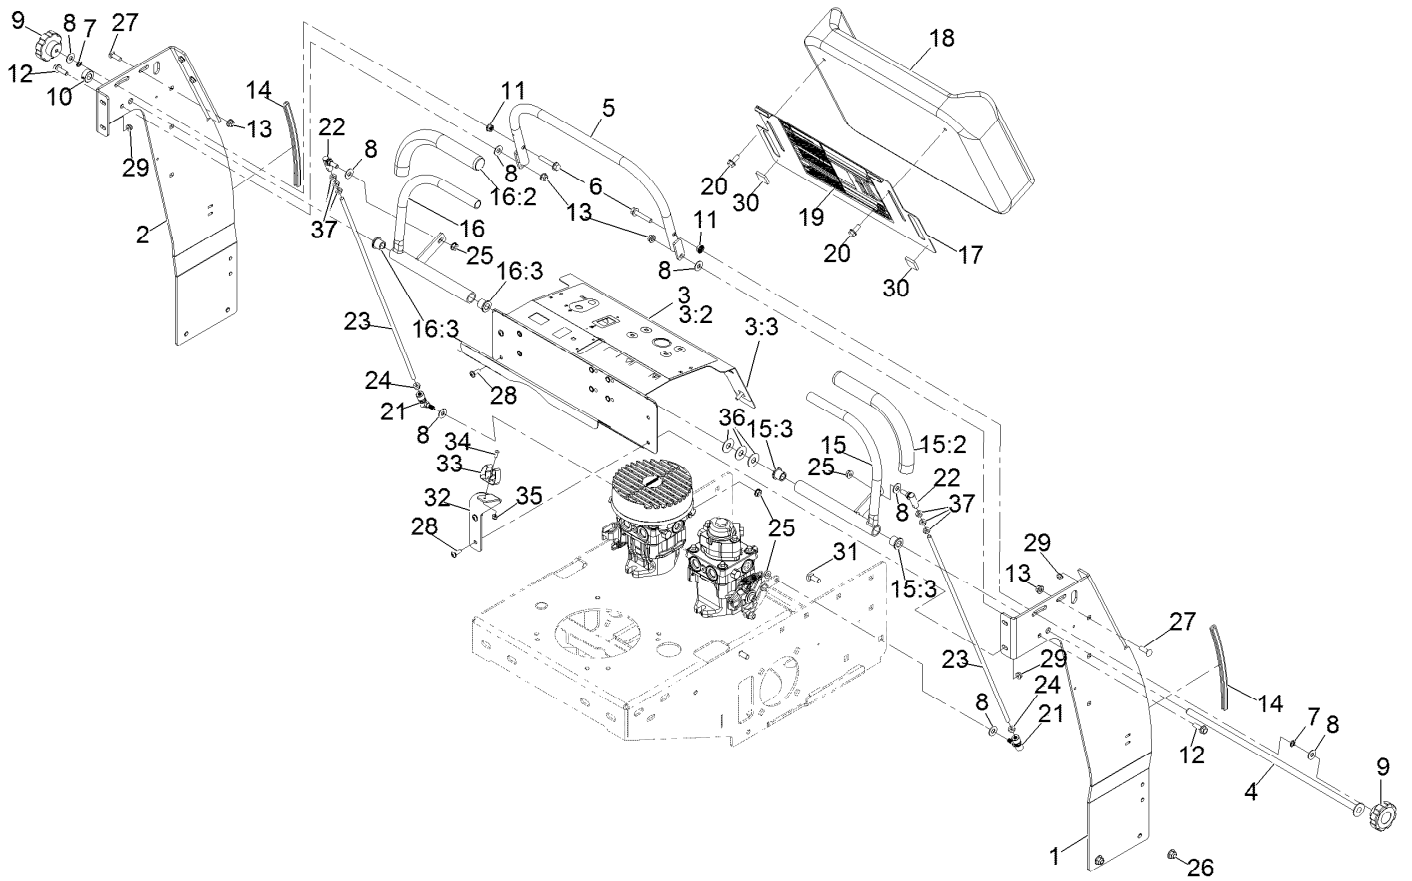

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0688	1	Upright-LH, Jr36	18	135-5334	1	Pad-Knee
2	142-0689	1	Upright-RH, Jr36	19	135-6281	1	Decal-Chart, Spray
3	135-7703	1	Panel-Control	20	126-2712	2	Screw-HHF 5/16-18 X 3/4 SS
3:2	135-7811	1	Decal-Control	21	135-5718	2	Ball Joint-Quick Disconnect, SS
3:3	138-2760	6	Nut-Clinch, Hex	22	135-5257	2	Balljoint-SS
4	135-5430	1	Rod-Pivot, Joy Stick	23	135-7481	2	Linkage-Control, SS
5	135-5427	1	Bar-Speed	24	107-0282	2	Nut-Hex
6	135-5779	2	Screw-HHF	25	107-0380	4	Nut-HF
7	135-6286	2	Washer-Lock	26	135-6110	4	Nut-Hex Flange
8	HDW14535	8	Flat Washer, 5/16 Nom,ST/ST,18-8	27	HDW17294	2	Bolt,Carriage,5/16-18X1,ST/ST 18-8
9	135-5689	2	Knob-Fluted	28	135-7080	8	Screw-HSBH Flg
10	135-6192	1	Collar	29	135-6108	8	Nut-Hex Flange
11	118-1722	2	Nut-Hex Flange	30	93-9155	2	Velcro
12	135-6272	2	Screw-HHF	31	126-0980	4	Screw-Carriage 3/8-16 X 1 SS
13	135-6109	4	Nut-Hex Flange	32	142-0745	1	Mount, Gun, Jr36
14	135-7000	2	Strip-Trim, 9.0"	33	135-5661	1	Holder-Tool, Clip
15	135-7002	1	Stick-Joy, Lt	34	135-6374	1	Screw-HSBH
15:2	1-633257	1	Grip-Control, Motion	35	135-6342	1	Nut-Hex Flange
15:3	135-5694	2	Bushing-Flange	36	135-5586	3	Washer
16	135-7003	1	Stick-Joy, Rt	37	135-6512	6	Nut-Hex
16:2	1-633257	1	Grip-Control, Motion				
16:3	135-5694	2	Bushing-Flange				
17	142-0727	1	Plate, Knee Pad, Jr36				


Park Brake Assembly

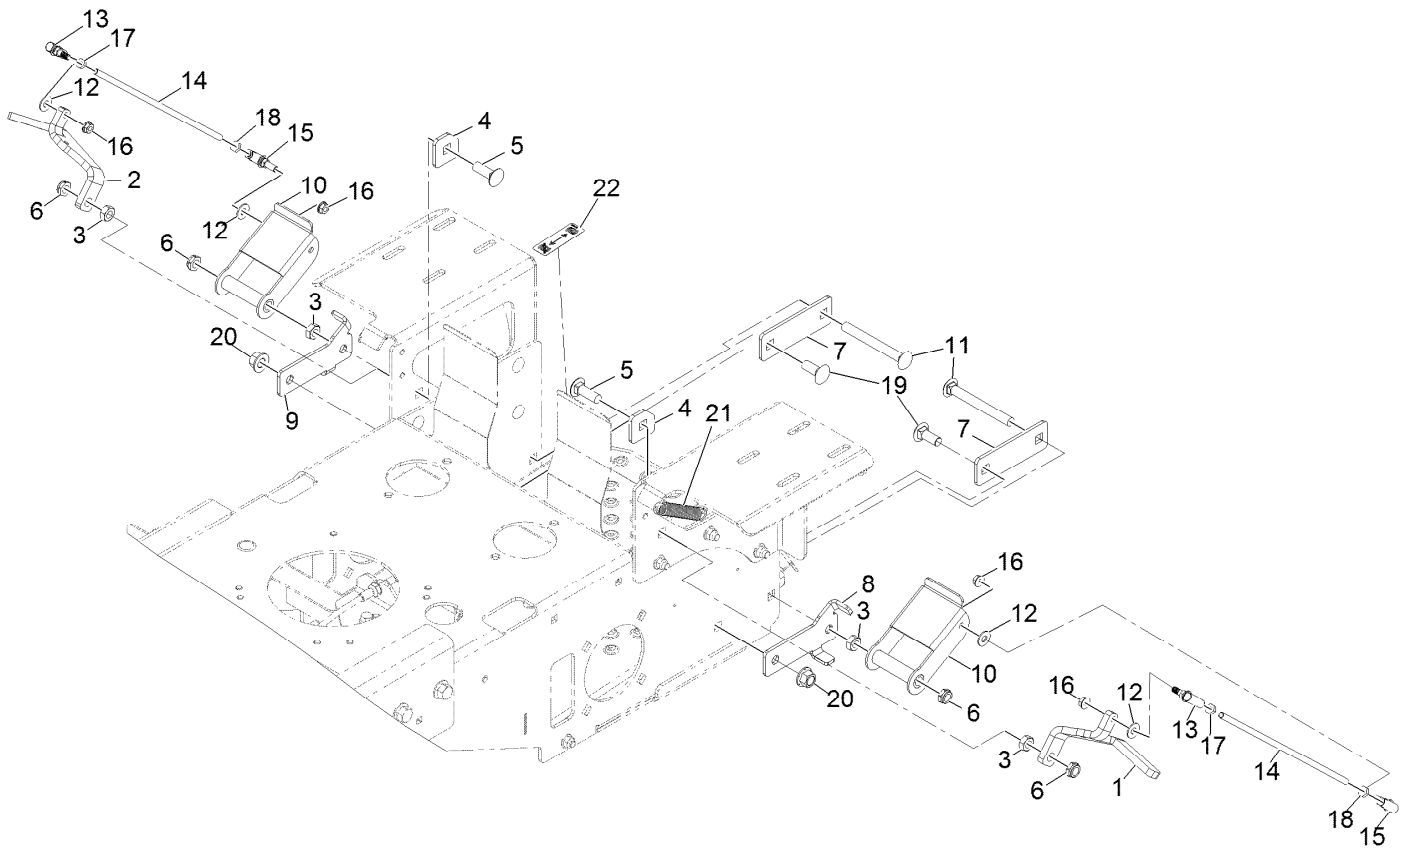

Park Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0703-03	1	Chock, L, Brake, Jr36	11	3233-7	2	Screw-CARR
2	142-0704-03	1	Chock, L, Brake, Jr36, Ms, 0.375	12	HDW14535	4	Flat Washer, 5/16 Nom,ST/ST,18-8
3	3218-5	4	Nut-Jam 1/2-13	13	135-9812	2	Balljoint-SS
4	142-0732	2	Backplate, Brake Mount, Jr36	14	135-8635	2	Brake Linkage Rod
5	3233-2	2	Screw-CARR	15	135-5257	2	Balljoint-SS
6	3296-45	4	Nut-Nyloc 1/2-13 Thin	16	107-0380	4	Nut-HF
7	142-0733	2	Backplate, Brake Pedal, Jr36	17	107-0282	2	Nut-Hex
8	142-0730	1	Stop, Foot Pedal, Brake, Jr36	18	135-6512	2	Nut-Hex
9	142-0731	1	Stop, Jr36 Foot Pedal Brake	19	3233-1	2	Screw-CARR
10	142-0794	2	Wld, Foot Pedal, Brake, Jr36	20	135-6111	2	Nut-Hex Flange
				21	126-2127	2	Spring-Extension
				22	115-9625	2	Decal-Brake, Parking


Wheel Assembly

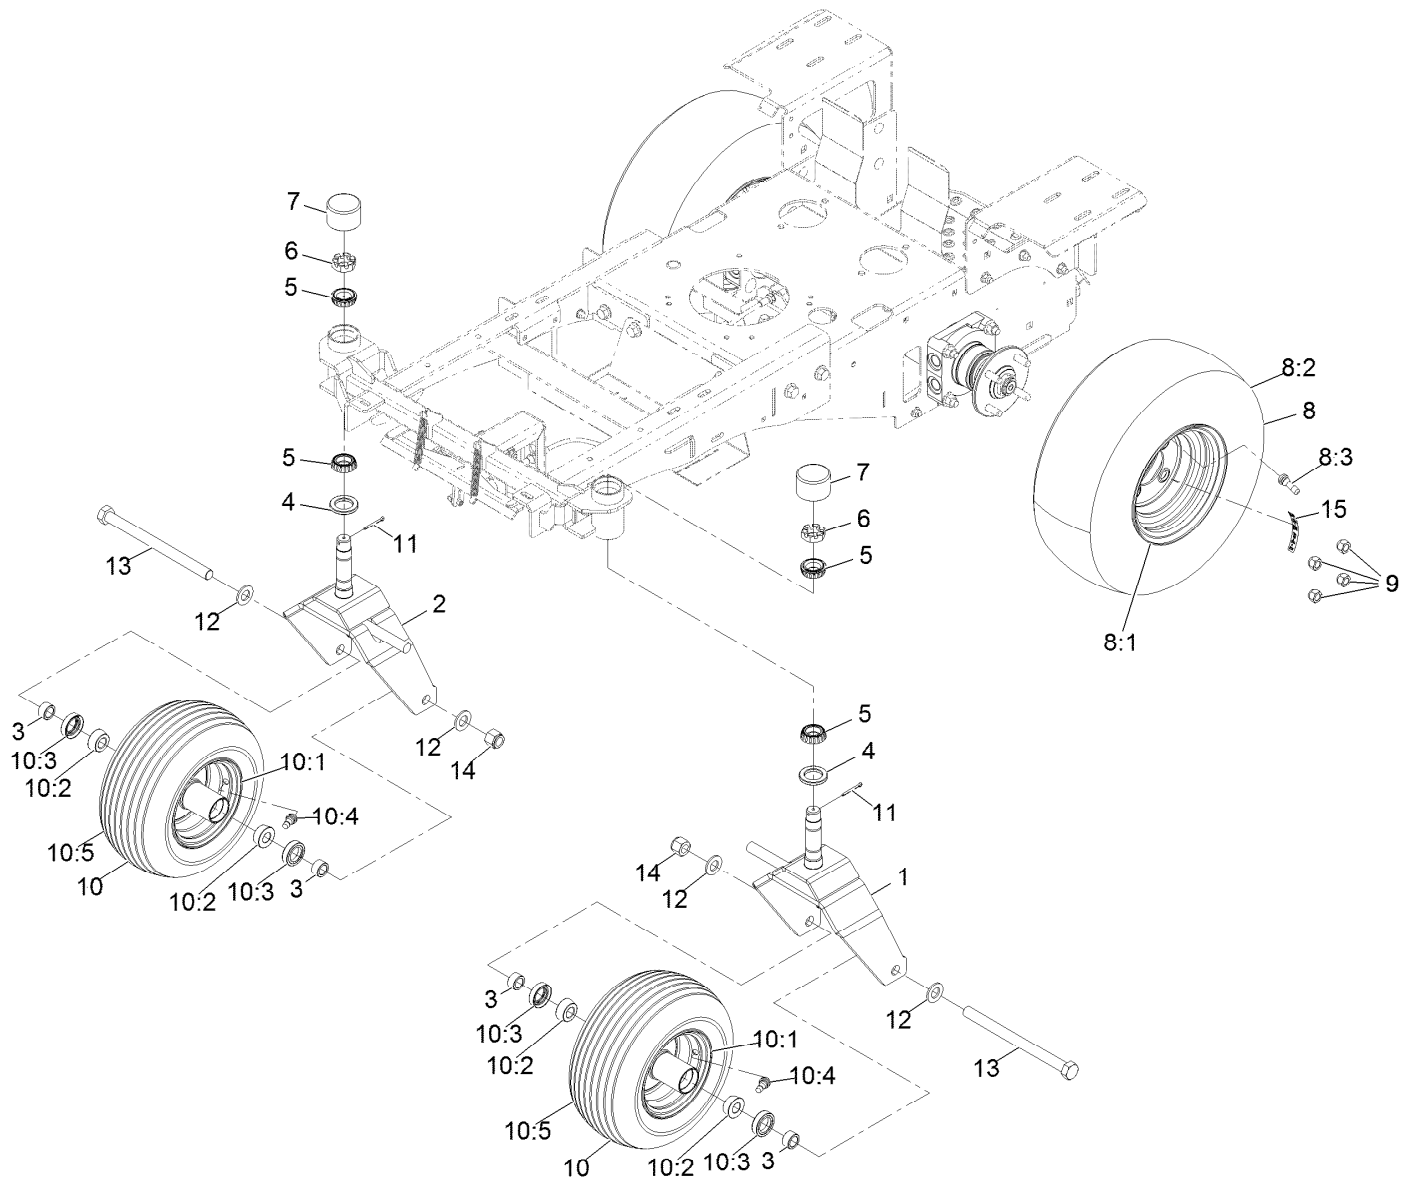

Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0918-03	1	Wld, Caster, L, Jr36, 36R	10:1	135-6680	1	Rim-6 X 4.5
2	142-0919-03	1	Wld, Caster, R, Jr36, 36R	10:2	1-633585	2	Bearing-Cone Tapered Roller
3	135-5683	4	Spacer-Axle	10:3	103-0063	2	Seal-Double Lip
4	1-543511	2	Seal-Grease	10:4	5108	1	Valve
5	254-92	4	Cone-Bearing, Outer	10:5	135-6681	1	Tire-Rib
6	1-809082	2	Nut-SHH	11	135-6292	2	Pin-Cotter
7	135-5756	2	Cap-Dust, Rubber	12	3256-28	4	Washer-3/4 SAE
8	135-8621	2	Tire/Rim ASM, K500-4H-Blk	13	135-6300	2	Screw-HH
8:1	135-6679	1	Rim-8X5.375, Centered	14	3296-51	2	Nut-Nyloc 3/4-10
8:2	126-1618	1	Tire	15	126-2055	2	Decal-Torque, Wheel Hub
8:3	232-27	1	Stem-Valve				Lug
9	242-50	8	Nut-Lug 1/2-20				
10	135-8615	2	Wheel And Tire				

Spray System Assembly

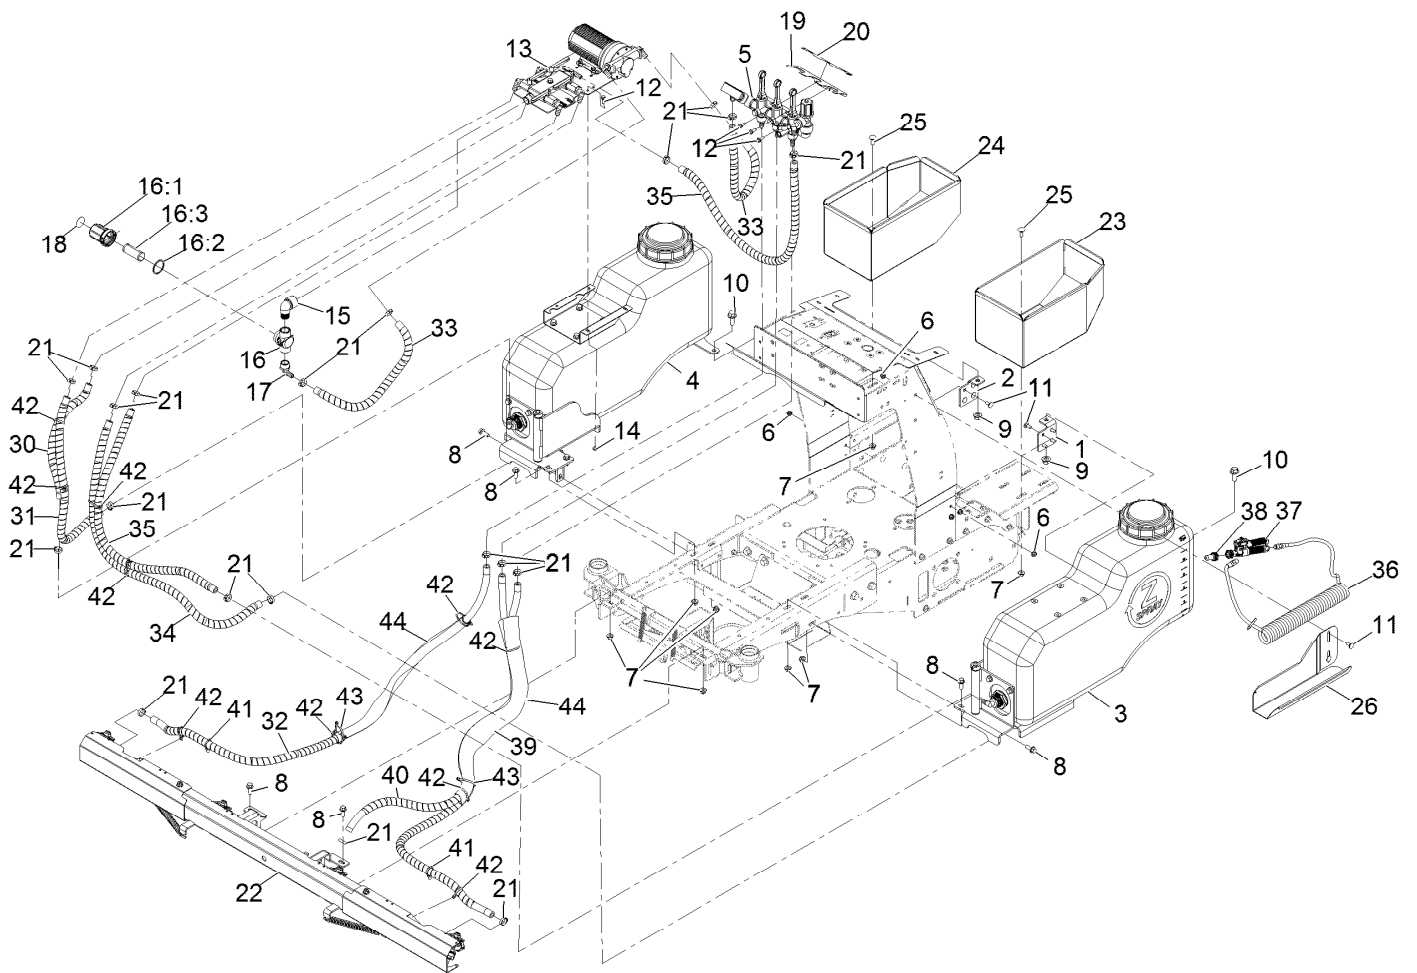


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0722	1	Pin, Support, Jr36	20	135-6285	1	Decal-Valve, Boom
2	142-0723	1	Pin, Support, Jr36, SS, 0.188	21	135-5692	20	Clamp
3	135-6683	1	ASM-Tank, Lt	22		1	ASM-Boom ●
4	135-6684	1	ASM-Tank, Rt	23	135-5470	1	Box-Fert, Lt
5		1	ASM-Manifold ●	24	135-5473	1	Box-Fert, Rt
6	135-6109	10	Nut-Hex Flange	25	126-0980	8	Screw-Carriage 3/8-16 X 1 SS
7	135-6110	16	Nut-Hex Flange	26	142-0749	1	Tray, Gun, Jr36
8	135-6208	8	Screw-HHF	30	142-0042	1	Hose-Spray, Wrapped
9	135-6111	2	Nut-Hex Flange	31	142-0039	1	Hose-Spray, Wrapped
10	135-6207	2	Screw-HHF	32	142-0014	1	Hose-Spray, Wrapped
11	126-0695	10	Screw-CARR	33	142-0041	2	Hose-Spray, Wrapped
12	135-6221	7	Screw-HHF	34	142-0036	1	Hose-Spray, Wrapped
13		1	ASM, Liquid Valve ●	35	142-0037	2	Hose-Spray, Wrapped
14	135-6108	2	Nut-Hex Flange	36	135-6612	1	Hose-Coiled, 15 Ft
15	132-7706	1	Elbow-90 DEG ■	37	135-5773	1	Gun-Spray, Spot
16	135-5765	1	Strainer-Inline	38	135-5778	1	Tip-Spray, No.12 Spot
16:1	126-7195	1	Bowl-Strainer	39	142-0013	1	Hose-Spray, Wrapped
16:2	126-2272	1	Gasket-Head, Line Strainer	40	135-5294	1	Hose-Spray, Wrapped
16:3	135-5766	1	Screen-Strainer, 50 Mesh	41	32180-030	2	Clip-Tie
17	135-5744	1	Fitting-Elbow, 90 ■	42	3290-378	11	Tie-Cable
18	135-6424	1	Decal-Cap, Strainer	43	3290-379	2	Tie-Cable
19	135-5570	1	Bracket-Manifold	44	135-6484	2	Guard-Mesh

● Not serviced separately

■ Apply pipe sealant to all pipe threads.

Left Tank Assembly

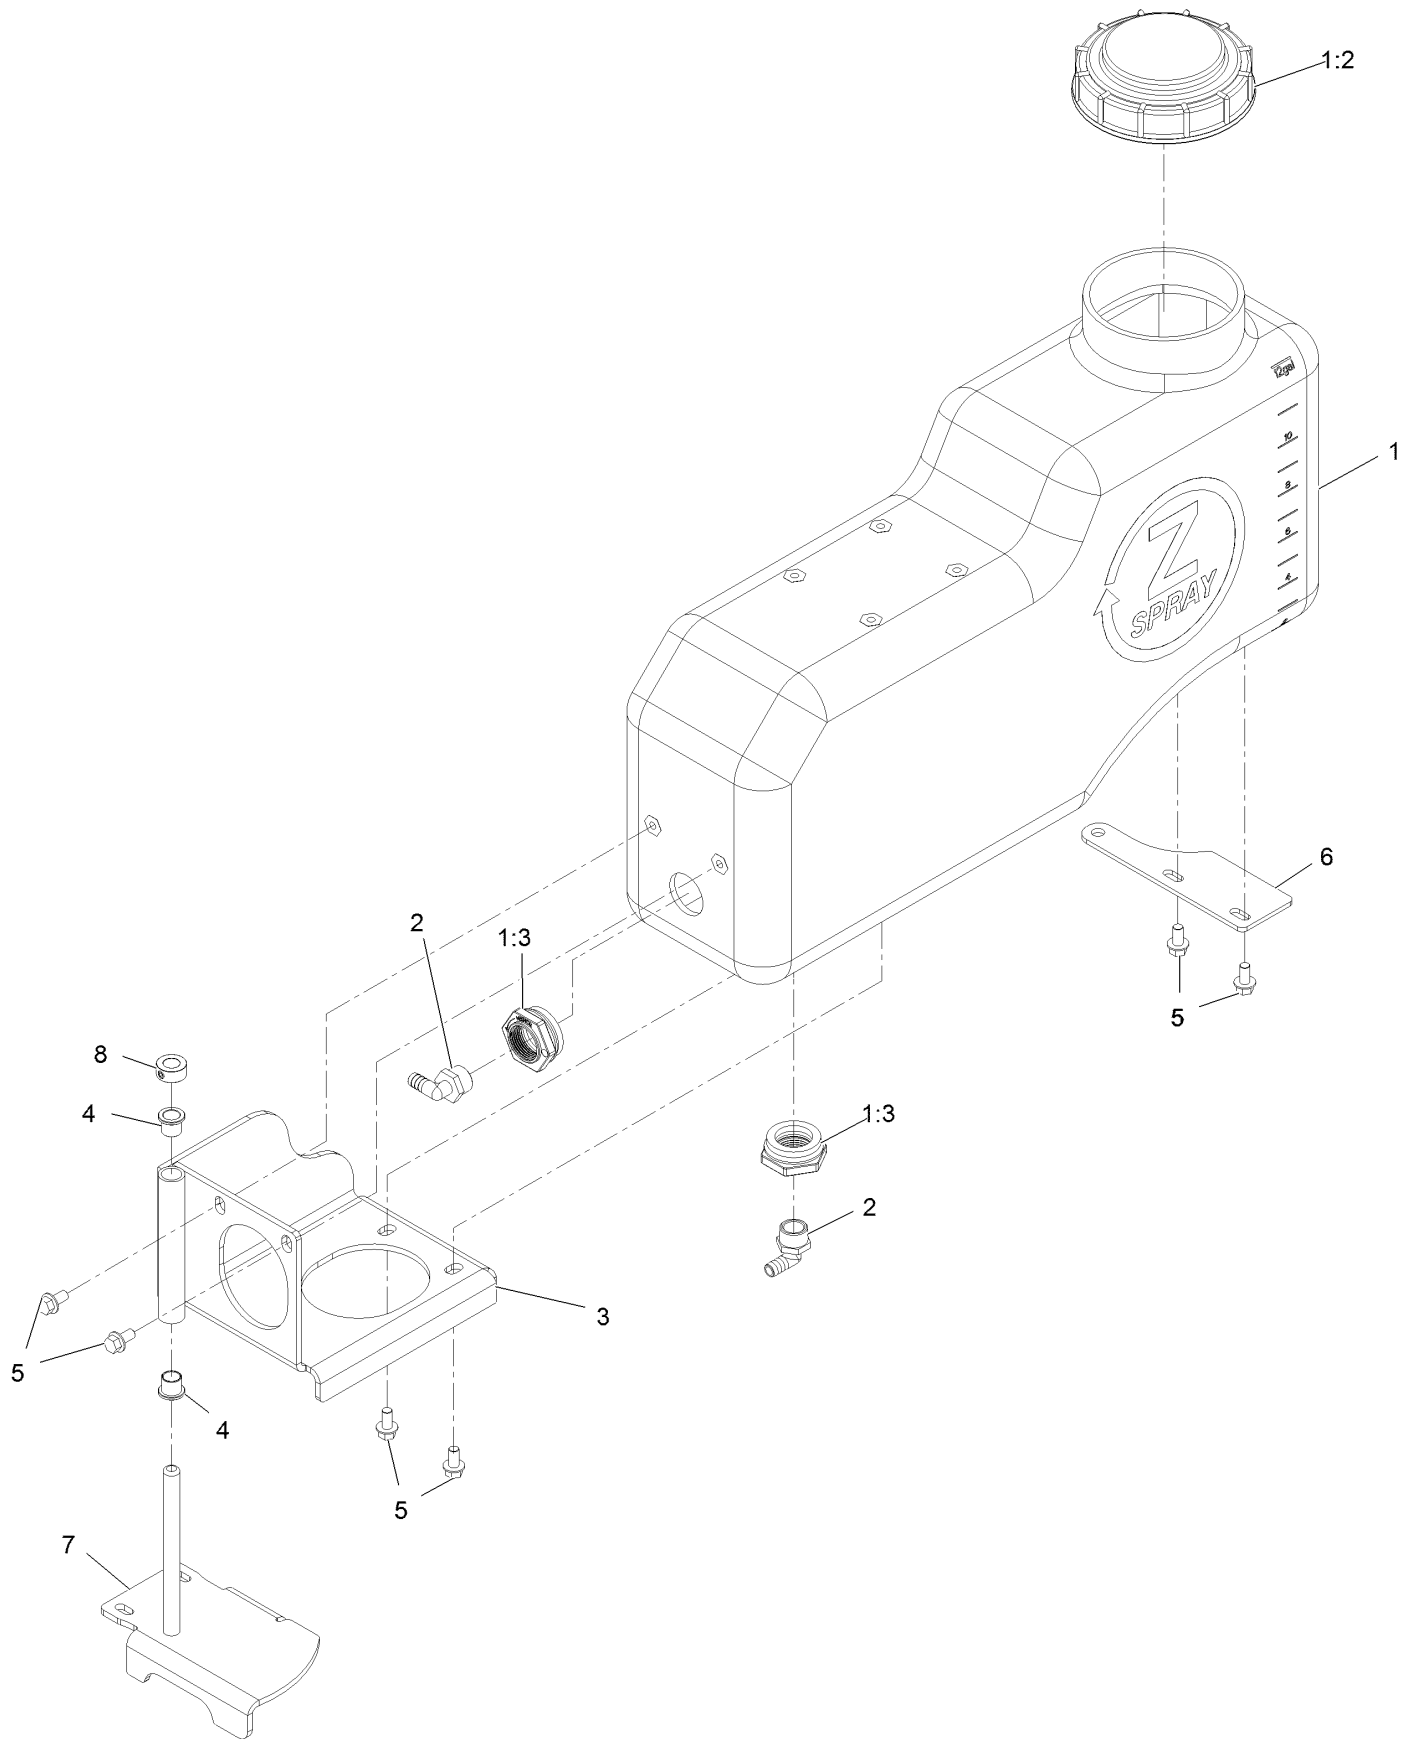


Left Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-8451	1	Tank, L, 12 Gal, J36	4	135-9063	2	Bushing-Flange
1:2	135-5916	1	Cap-Tank, Spray	5	135-6274	6	Screw-HHF
1:3	126-4393	2	Fitting-Bulkhead	6	142-0724	1	Plate, Pivot Lock, Tank, Jr36
2	135-5744	2	Fitting-Elbow, 90 ●	7	142-0791	1	Wld, Wing, Tank, Bottom, L, Jr36
3	142-0789	1	Wld, Wing, Tank, Bottom, L, Jr36	8	142-1443	1	Collar-Shaft

● Apply pipe sealant to all pipe threads.

Right Tank Assembly

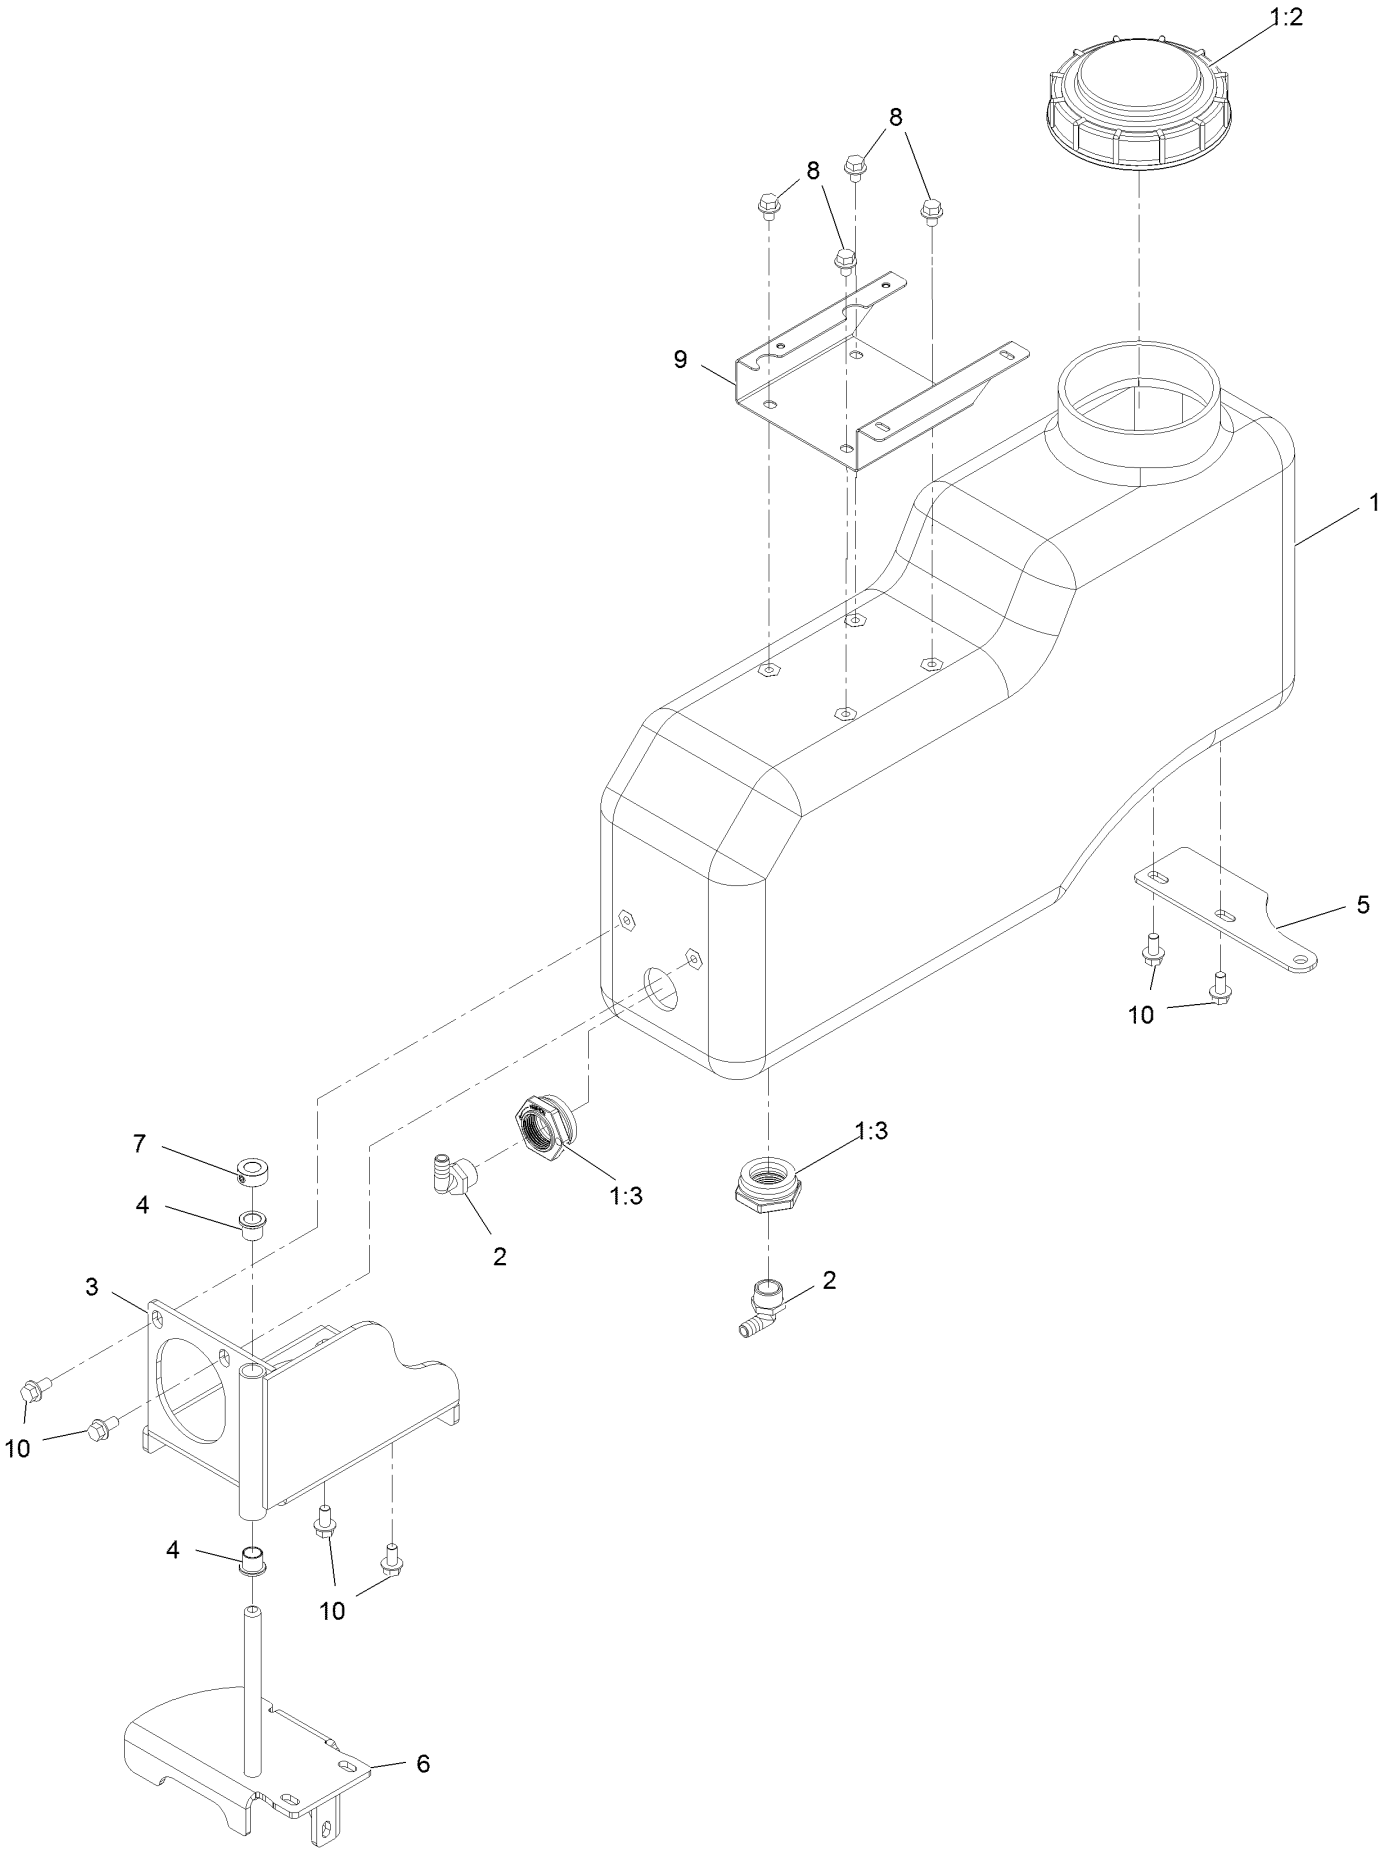


Right Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-8452	1	Tank, R, 12 Gal, J36	5	142-0724	1	Plate, Pivot Lock, Tank, Jr36
1:2	135-5916	1	Cap-Tank, Spray	6	142-0792	1	Wld, Wing, Tank, Bottom, R, Jr36
1:3	126-4393	2	Fitting-Bulkhead	7	142-1443	1	Collar-Shaft
2	135-5744	2	Fitting-Elbow, 90 ●	8	135-7096	4	Screw-HHF
3	142-0790	1	Wld, Wing, Tank, Bottom, R, Jr36	9	135-6904	1	Platform-Valve, Liquid
4	135-9063	2	Bushing-Flange	10	135-6274	6	Screw-HHF

● Apply pipe sealant to all pipe threads.

Manifold Assembly

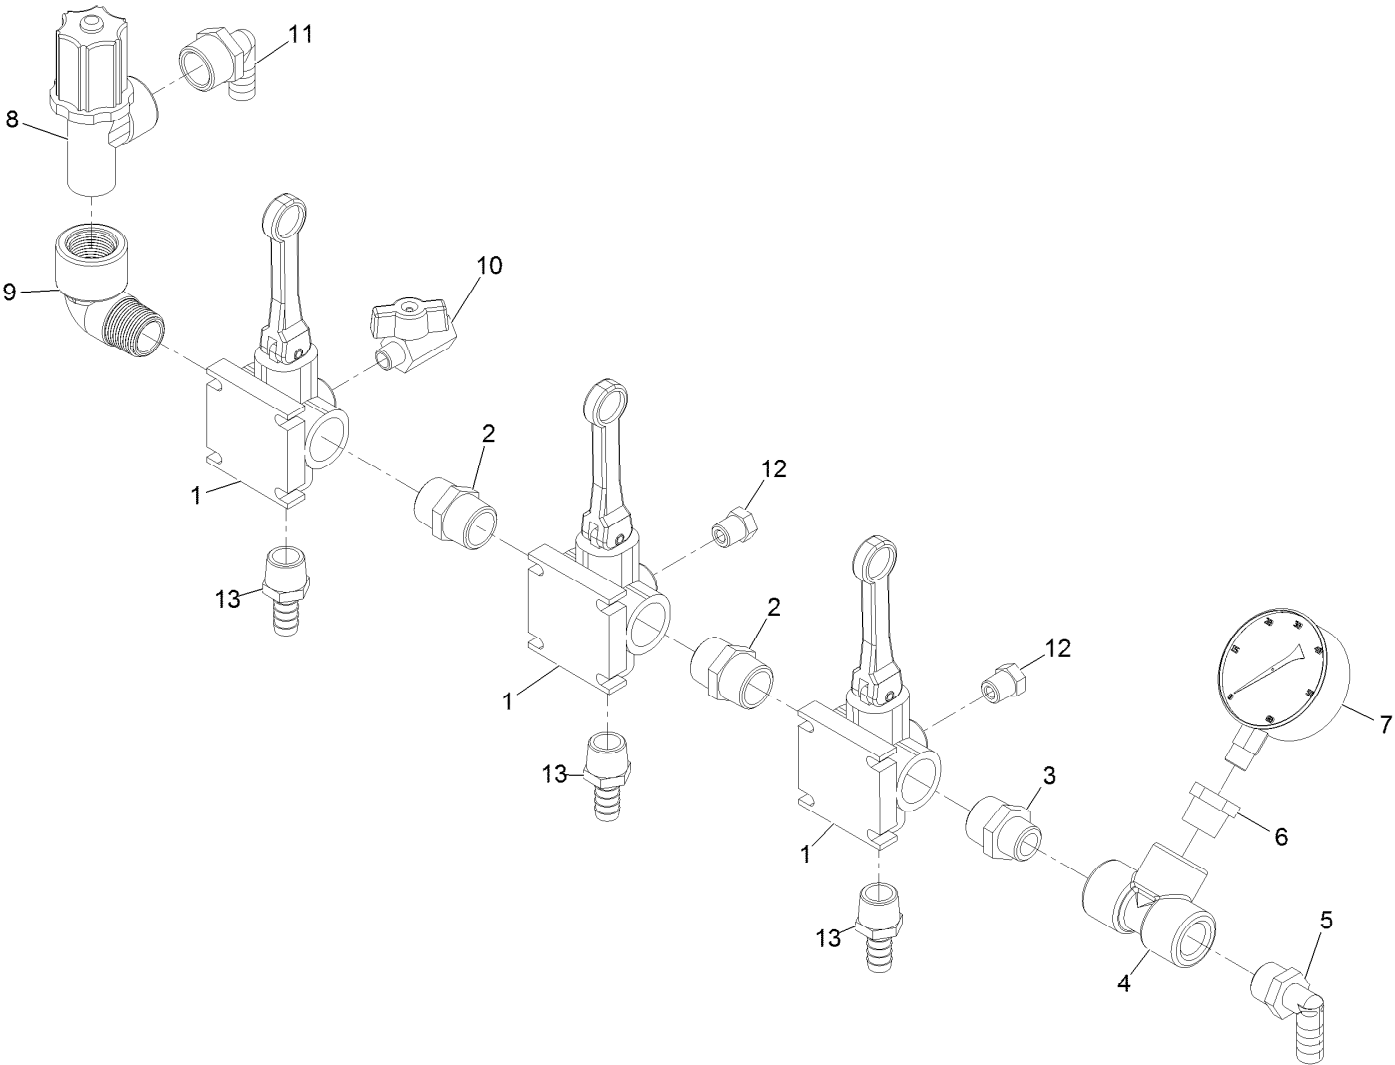


Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5721	3	Valve-Directo	8	135-5736	1	Valve-Throttle ●
2	135-5741	2	Fitting-Nipple ●	9	132-7706	1	Elbow-90 DEG ●
3	135-5742	1	Fitting-Nipple ●	10	135-5737	1	Valve-Chrome, 1/4 ●
4	94-7100	1	Tee	11	135-5744	1	Fitting-Elbow, 90 ●
5	120-8673	1	Fitting-Elbow 90 ●	12	135-5735	2	Plug-Valve ●
6	135-5743	1	Fitting-Reducer ●	13	120-8671	3	Fitting-Hosebarb ●
7	135-5740	1	Gauge ●				

● Apply pipe sealant to all pipe threads.

Liquid Valve Assembly

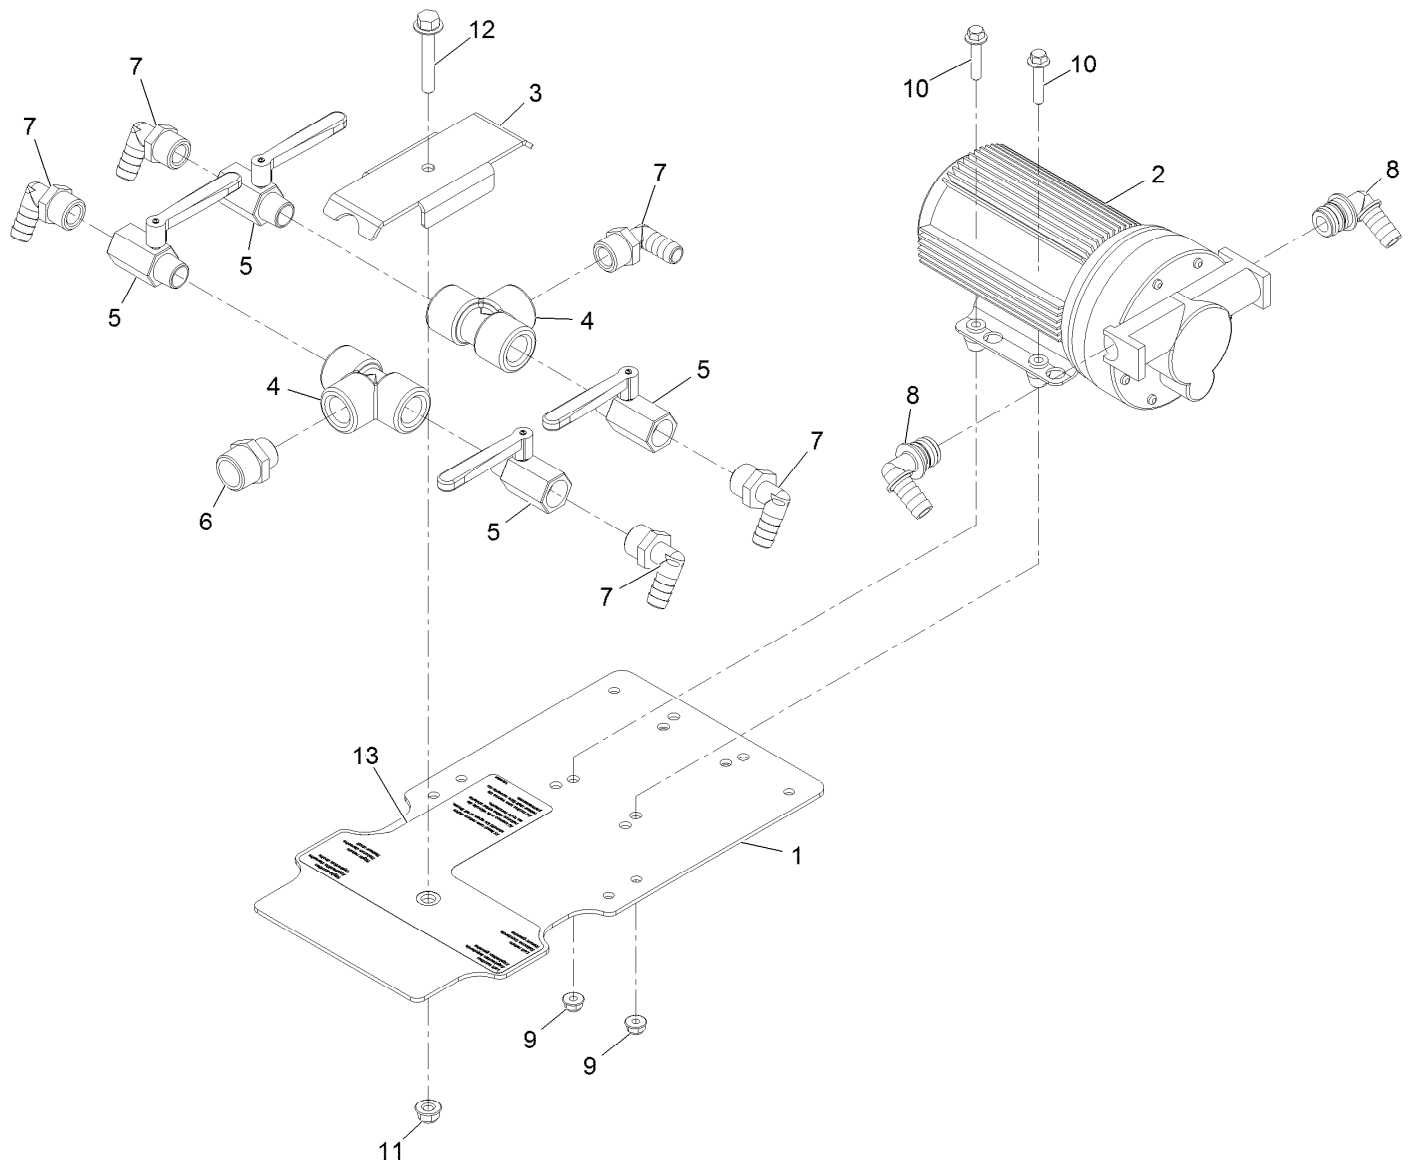


Liquid Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5491	1	Mount-Plate, Liquid Valve	7	120-8673	5	Fitting-Elbow 90 ●
2	135-5759	1	Pump-5.0 GPM	8	126-0961	2	Fitting-Elbow, Barbed
3	135-5504	1	Plate-Clamp, Liquid Valve Fittings	9	135-6108	4	Nut-Hex Flange
4	94-7100	2	Tee	10	135-6312	4	Screw-HHF
5	135-5760	4	Valve-Chrome, 1/2 ●	11	135-6109	1	Nut-Hex Flange
6	135-5742	1	Fitting-Nipple ●	12	126-2711	1	Screw-HHF
				13	135-6420	1	Decal-Valve, Tank

● Apply pipe sealant to all pipe threads.


Boom Assembly

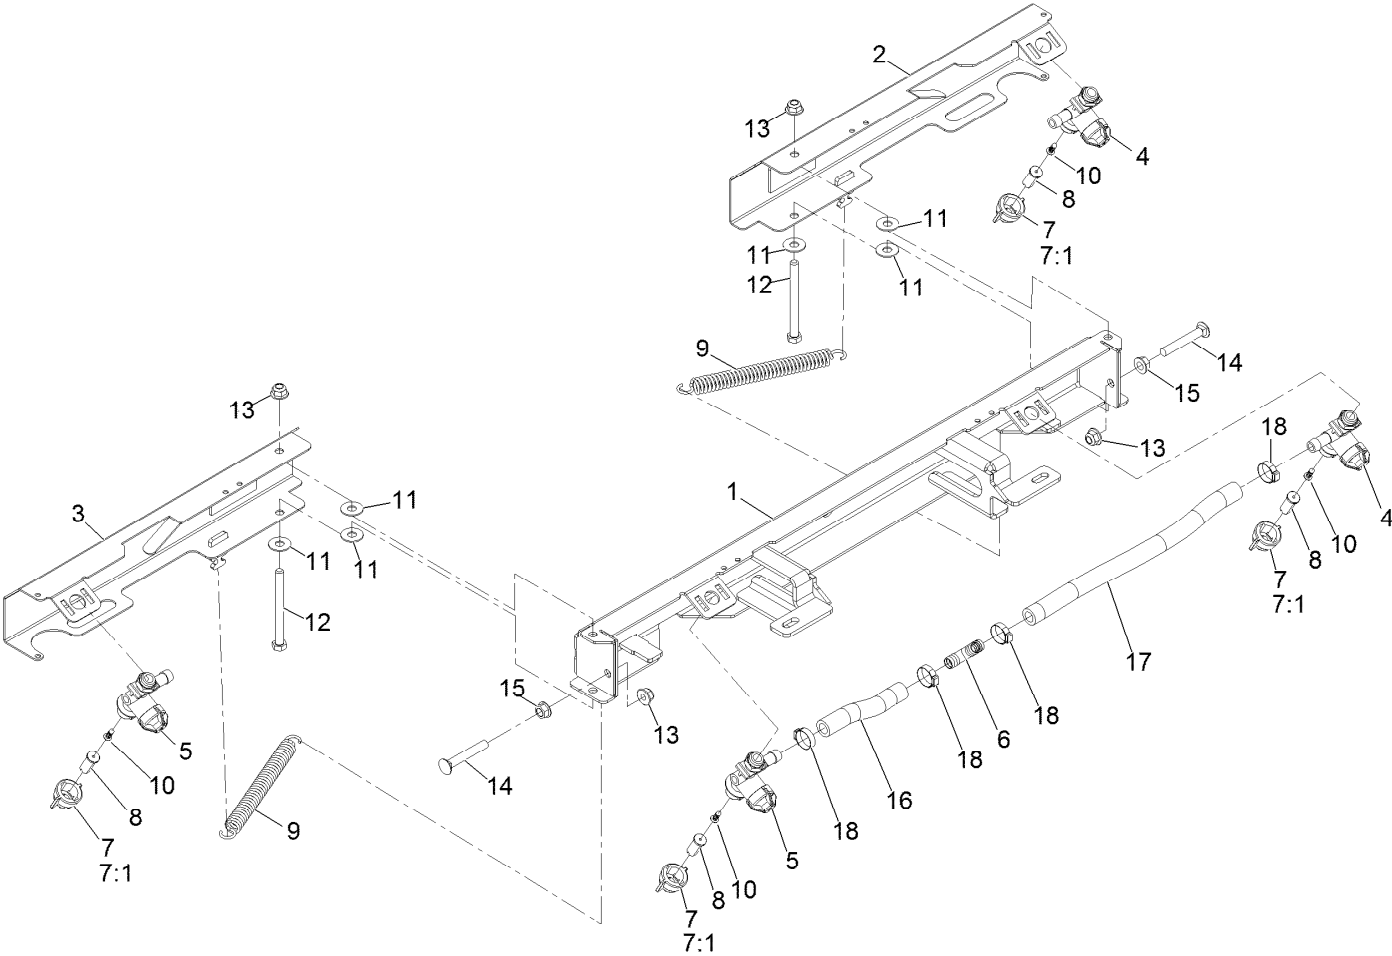

Boom Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-6798	1	Boom-Center	10	126-3943	4	Strainer-Nozzle, 50M 5PSI
2	135-6800	1	Boom-Wing, Rt				Check
3	135-6799	1	Boom-Wing, Lt	11	1126	6	Washer-Flat
4	135-5790	2	Body-Nozzle, Right	12	135-6310	2	Screw-HH
5	135-5788	2	Body-Nozzle, Left	13	135-6110	4	Nut-Hex Flange
6	138-2751	1	Fitting-Tee, Barb	14	126-0702	2	Screw-CARR
7	135-5781	4	Cap-Nozzle	15	135-6806	2	Nut-Hex Flange
7:1	40998	1	Seat-Gasket	16	135-6298	1	Hose-Spray
8	135-5791	4	Avi-110025 1/3 Spray Tip	17	135-7129	1	Hose-Spray
9	135-5780	2	Spring-Extension	18	135-5692	4	Clamp


Spreader Assembly

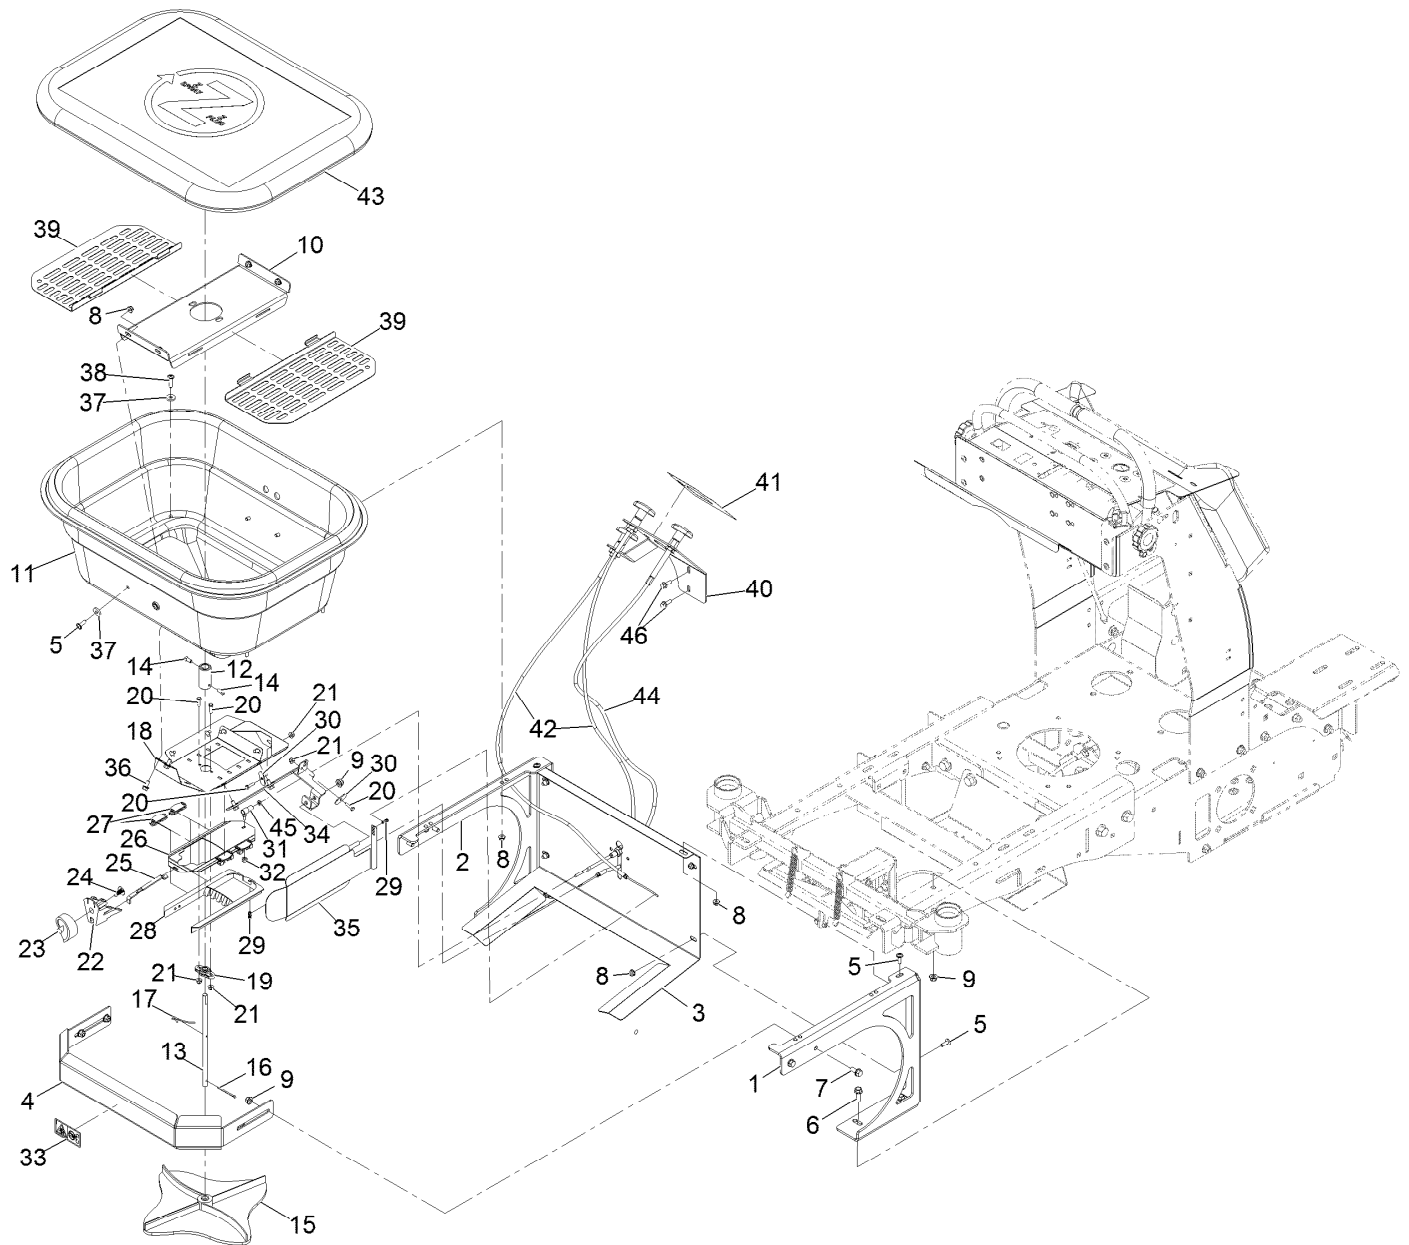

Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0784	1	Wld, Frame, Hopper, L, 120	25	135-5965	1	Linkage-Gate, Rate
2	142-0785	1	Wld, Frame, Hopper, R, 120	26	135-5573	1	Slide-Door, Hopper
3	142-0708	1	Backshield, Hopper, Jr36	27	126-0990	4	Guide-Rate, Gate
4	142-0698	1	Bumper, Front, Hopper, 120	28	126-0991	1	Diffuser
5	135-7080	10	Screw-HSBH Flg	29	135-5961	2	Retainer-Cable, Wire
6	135-6272	4	Screw-HHF	30	135-5569	2	Retainer, Cable
7	126-2712	4	Screw-HHF 5/16-18 X 3/4 SS	31	135-5682	1	Ball Joint-SS
8	135-6108	14	Nut-Hex Flange	32	HDW05856	1	Nut-NYL Lock,#10-32,ST/ST 18-8
9	135-6109	9	Nut-Hex Flange	33	135-6725	1	Decal-Dismemberment Hazard
10	142-1987	1	Pan-Hopper, 120	34	135-5388	1	Mount-Deflector, Side
11	135-8519	1	Hopper-120Lb	35	135-5589	1	Deflector-Side, Spreader
12	135-5937	1	Coupler-SS	36	135-6280	8	Screw-HHF, 1/4-20 X 1/2, Ser Flg, SS
13	135-8504	1	Shaft-Hopper, 120	37	135-6341	8	Washer
14	3241-7	2	Screw-SQH	38	135-7081	4	Screw-HSBH Flg
15	135-5954	1	Spinner-Spreader	39	142-1995	2	Screen-Hopper, 120
16	135-6340	1	Pin-Cotter	40	135-5505	1	Mount-Speedometer
17	135-5957	1	Wire-Agitator	41	135-6279	1	Decal-Hopper Control
18	142-1990	1	Base-Hopper, 120	42	135-5931	2	Cable-Push/Pull
19	135-5943	1	Bearing-Flange	43	135-8483	1	Small Hopper Cover 120
20	135-6356	4	Screw-HH	44	135-8492	1	120Lb Hopper Cable
21	135-6342	4	Nut-Hex Flange	45	520-0019	1	Nut-Hex, Jam
22	126-0985	1	Mount-Dial	46	135-6221	2	Screw-HHF
23	126-0988	1	Dial				
24	126-0986	1	Clip				


Fuel Tank Assembly

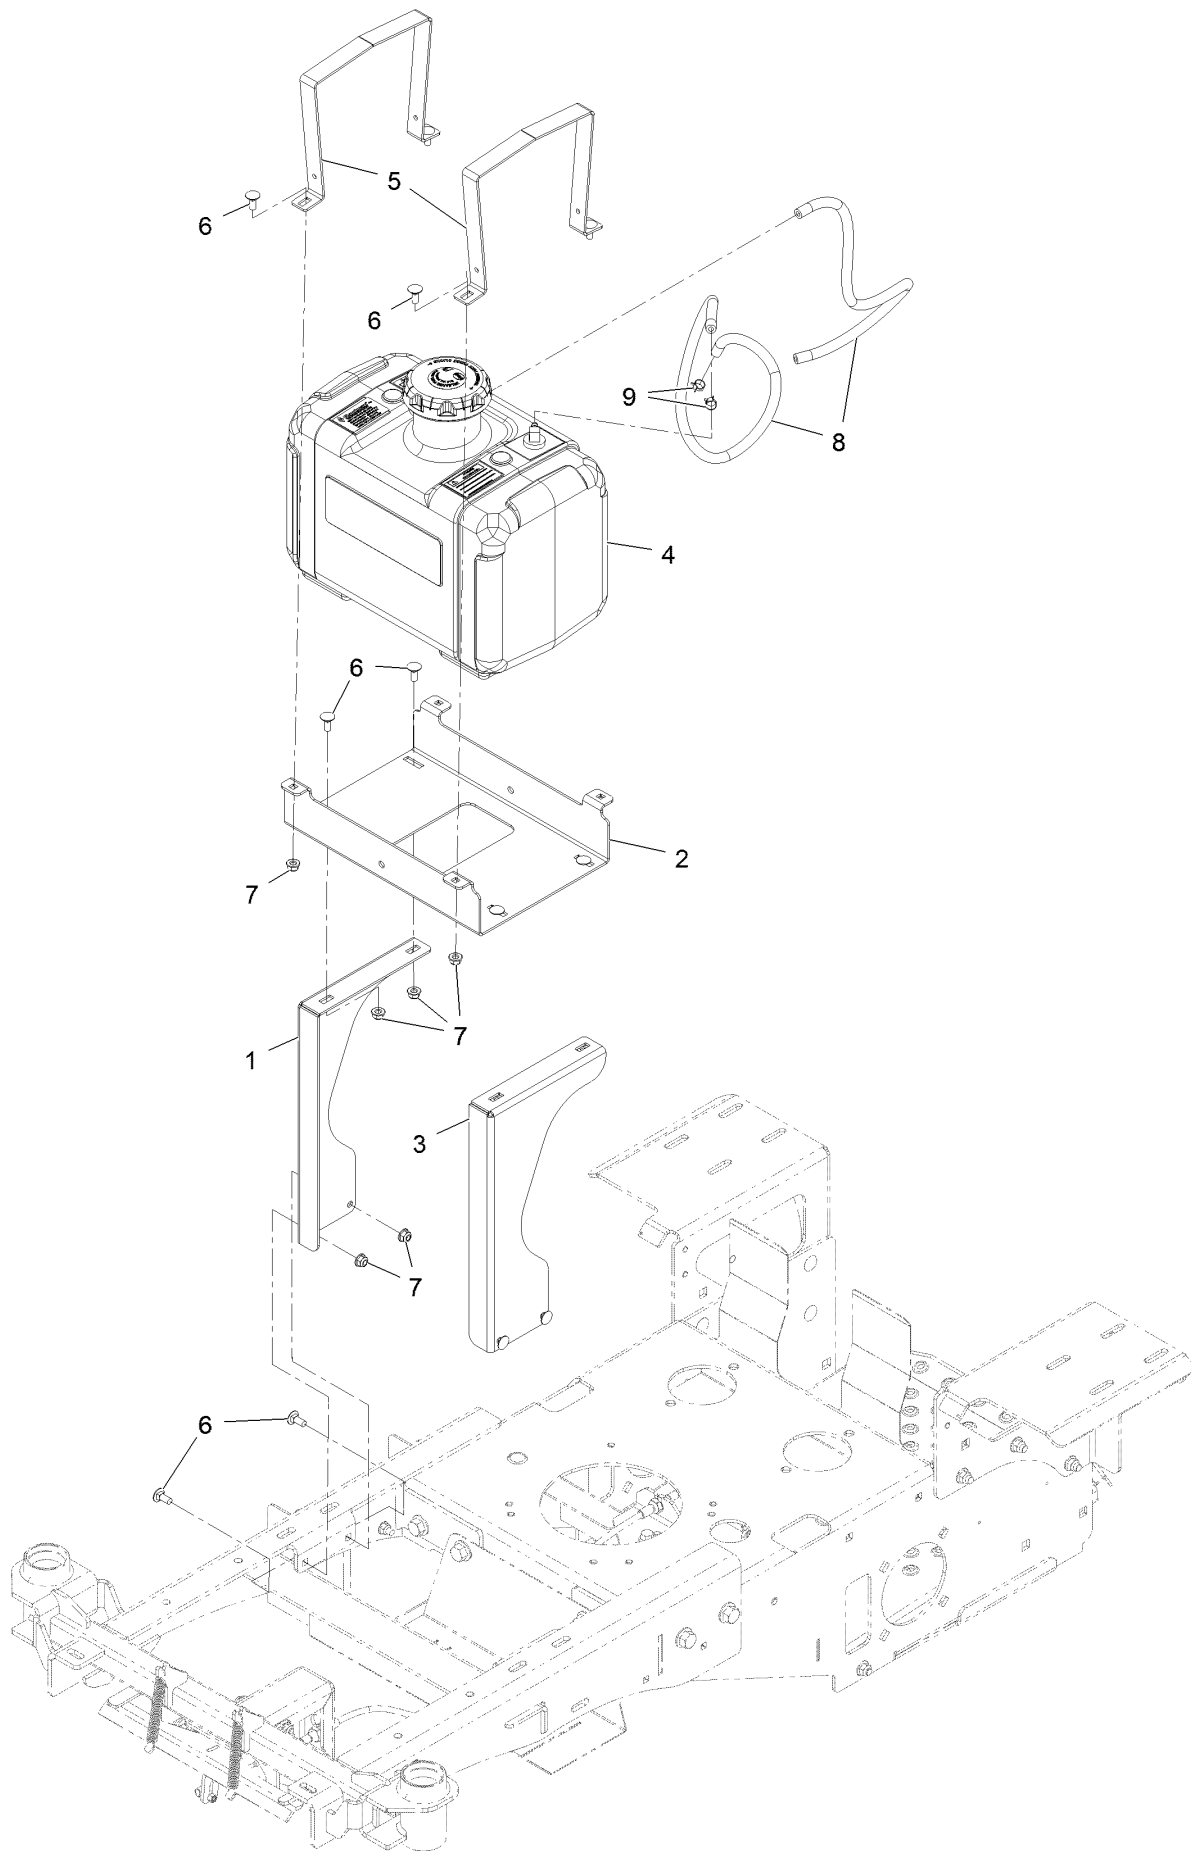

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-0756	1	Panel, Platform, Fuel Tank, Jr36	5	135-7211	2	Strap-Tank, Gas
2	135-7243	1	Mount-Tank, Fuel	6	126-0695	12	Screw-CARR
3	142-0755	1	Panel, Platform, Fuel Tank, Jr36, SS,.12	7	135-6109	12	Nut-Hex Flange
4	135-7172	1	Fuel Tank ASM	8	109-1395	2	Hose-Fuel Line 27"
				9	2412-98	2	Clamp-Hose


Engine Assembly

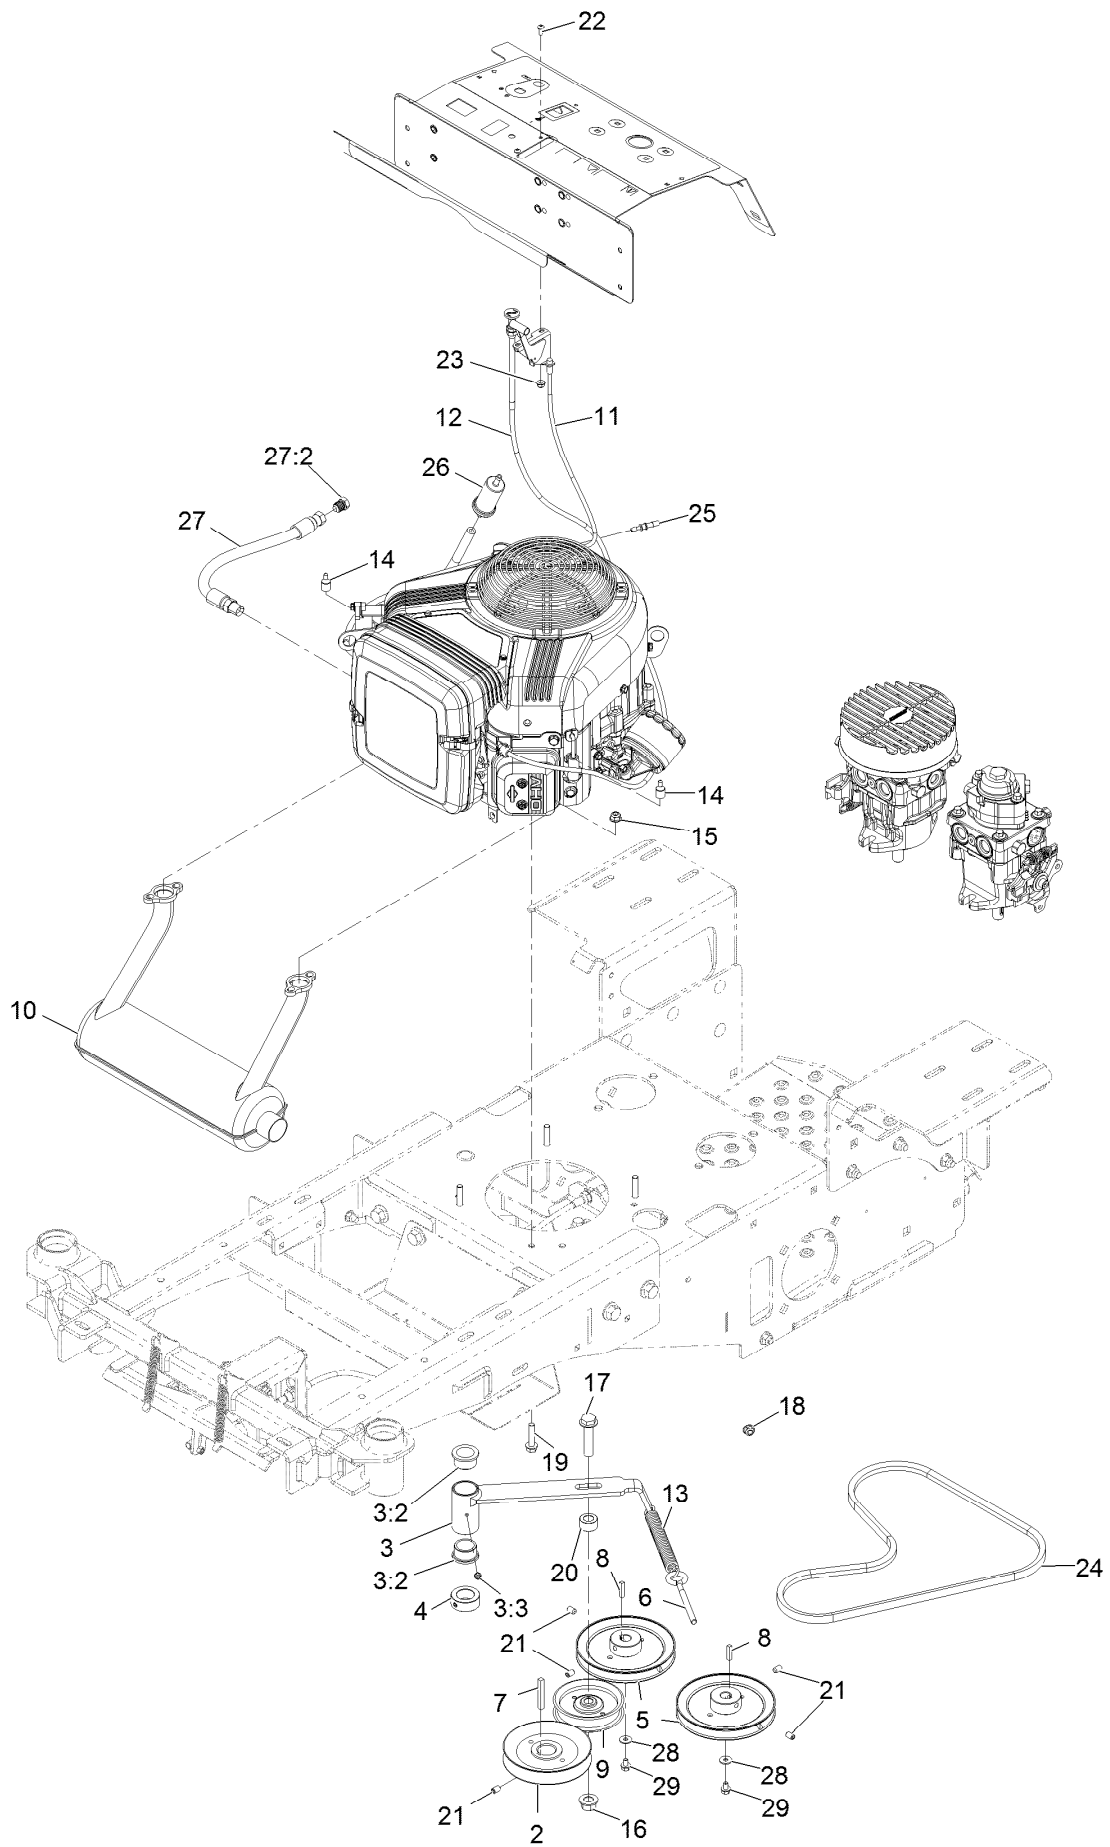

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	135-5657	1	Pulley-Drive	16	99-5107	1	Nut-Lock 1/2-13
3	135-6833	1	ASM, Arm-Tension	17	3234-46	1	Screw-HHF
3:2	256-132	2	Bushing-Flange	18	104-8300	1	Nut-Nyloc 5/16-18 Flg
3:3	302-63	1	Zerk	19	142-0559	4	Screw-HHF
4	135-5382	1	Collar	20	116-2959	1	Spacer
5	135-9068	2	Pulley ASM	21	3246-17	5	Setscrew-HSH
6	142-0418	1	Bolt, Eye - 5/8 X 5/16-18 X 5	22	135-6374	2	Screw-HSBH
7	103-4177	1	Key	23	135-6342	2	Nut-Hex Flange
8	1-807272	2	Key-5Mm X 5Mm X 25Mm	24	135-9078	1	Belt-V, A48
9	135-5662	1	Pulley-Idler, Flat	25	135-5678	1	Barb-Fuel
10	135-9245	1	Briggs 16/18 HP Muffler	26	135-6687	1	Filter-Fuel
11	135-5260	1	Cable-Throttle	27	135-5365	1	Oil Drain Hose ASM
12	135-5707	1	Cable-Choke				(W/Plug)
13	135-5780	1	Spring-Extension	27:2	AU218-774	1	Plug
14	135-5677	2	Tube-Shrink, Heat	28	135-6273	2	Washer
15	135-6109	4	Nut-Hex Flange	29	81-1280	2	Screw-HHF

Hydraulic Assembly

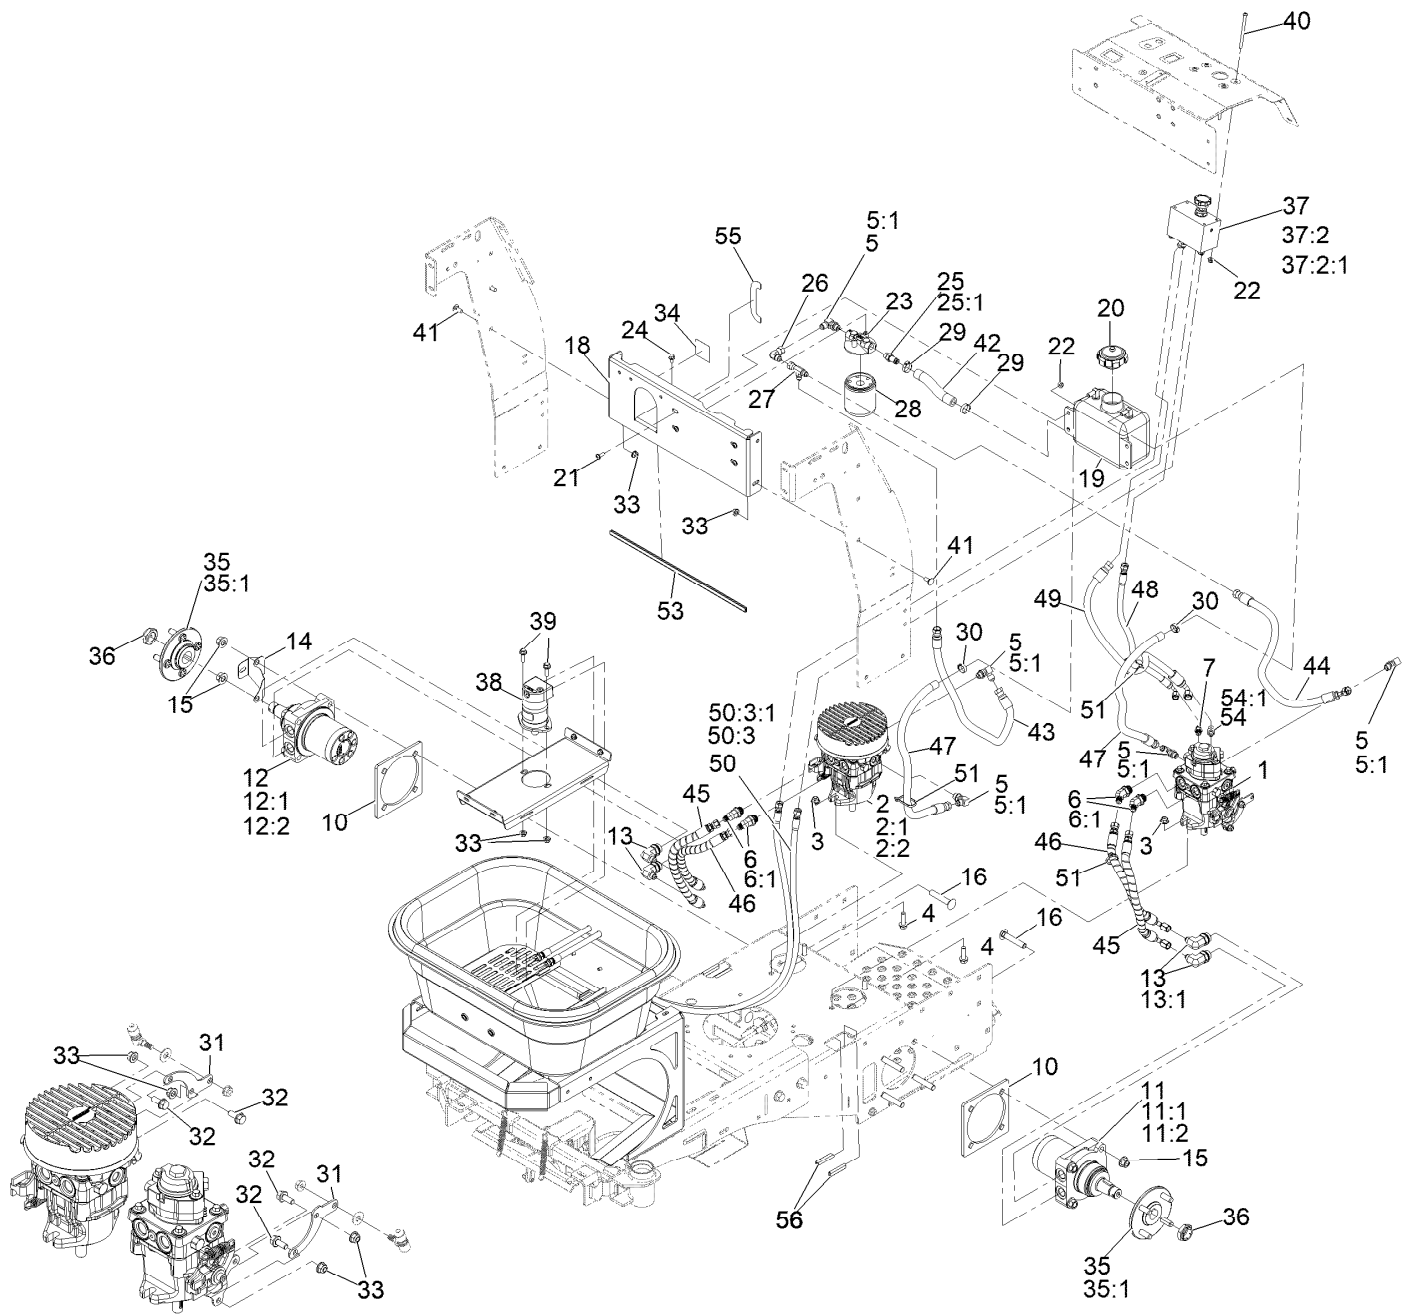


Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5250	1	Pump-Hydro, Pg With Aux	29	135-5692	2	Clamp
2	135-5251	1	Pump-Hydro, Pg	30	135-5757	2	Clamp-Oetiker, 167
2:1	135-9175	1	Hydro Pump Fan	31	135-8846	2	Extension, Hydro-Pump, Jr36
2:2	103-7489	1	Guard, Pw Pump Fan	32	126-2712	4	Screw-HHF 5/16-18 X 3/4 SS
3	135-6110	4	Nut-Hex Flange	33	135-6109	9	Nut-Hex Flange
4	135-6211	4	Screw-HHF	34	135-6398	1	Decal-Oil
5	103-1802	5	Fitting-Elbow, 90 DEG	35	135-7525	2	Hub-Wheel
5:1	237-42	1	O-Ring	35:1	135-7526	4	Stud-Wheel
6	131-1308	4	Fitting	36	116-1399	2	Locknut
6:1	237-79	1	O-Ring	37	135-5256	1	Manifold-Hopper, W/Out Relief
7	353-545	1	Fitting-Straight	37:2	353-212	1	Fitting-Elbow, 45 DEG
10	142-0709	2	Backplate, Wheel, Jr36	37:2:1	237-42	1	O-Ring
11	135-6689	1	Motor-Wheel,Lt	38	135-5243	1	Motor-Hydraulic, Spreader
11:1	3257-42	1	Key-Woodruff 5/16 X 1	39	135-6272	2	Screw-HHF
11:2	135-7497	1	Kit-Seal, Tj Motor	40	135-6385	4	Screw-HSBH
12	135-6688	1	Motor-Wheel,Rt	41	126-0695	3	Screw-CARR
12:1	3257-42	1	Key-Woodruff 5/16 X 1	42	109-5577	1	Hose-Hydraulic
12:2	135-7497	1	Kit-Seal, Tj Motor	43	135-9977	1	Hose ASM, HYD LP
13	AU218-5281	4	Fitting-Elbow, 90 DEG	44	135-7822	1	Hose ASM, HYD LP
13:1	237-80	1	O-Ring	45	135-9993	2	Hose ASM, HYD HP
14	135-5574	1	Bracket-Hopper, Speedometer Sensor	46	135-9994	2	Hose ASM, HYD HP
15	99-5107	8	Nut-Lock 1/2-13	47	135-9978	2	Hose ASM, HYD LP
16	126-0095	8	Bolt-Carriage 1/2-13 X 2 3/4	48	135-7820	1	Hose ASM, HYD HP
18	135-9773	1	Mount, Hydraulic Filter, Jr36	49	135-7821	1	Hose ASM, HYD LP
19	135-9056	1	2 Qt Flambeau Hydro Tank	50	135-5356	2	Hose ASM, HYD HP
20	135-5713	1	Cap-Vented	50:3		1	Fitting-Straight, Rigid ●
21	135-7080	4	Screw-HSBH Flg	50:3:1	237-42	1	O-Ring
22	135-6108	8	Nut-Hex Flange	51	3290-378	3	Tie-Cable
23	104-7836	1	Filter-Head	53	135-7494	1	Strip-Trim, 17.88"
24	135-6280	2	Screw-HHF, 1/4-20 X 1/2, Ser Flg, SS	54	AU218-5352	1	Adapter-Straight
25	109-3278	1	Adapter-Straight	54:1	237-78	1	O-Ring
25:1	237-42	1	O-Ring	55	135-7911	1	Decal-Hydro Level
26	AU218-980	1	Fitting-Swivel, 90 DEG	56	135-7948	4	Strip-Trim, 2.0"
27	353-877	1	Fitting-HYD, Tee				
28	135-5695	1	Filter-Hydraulic				

● Not serviced separately

Electrical Assembly

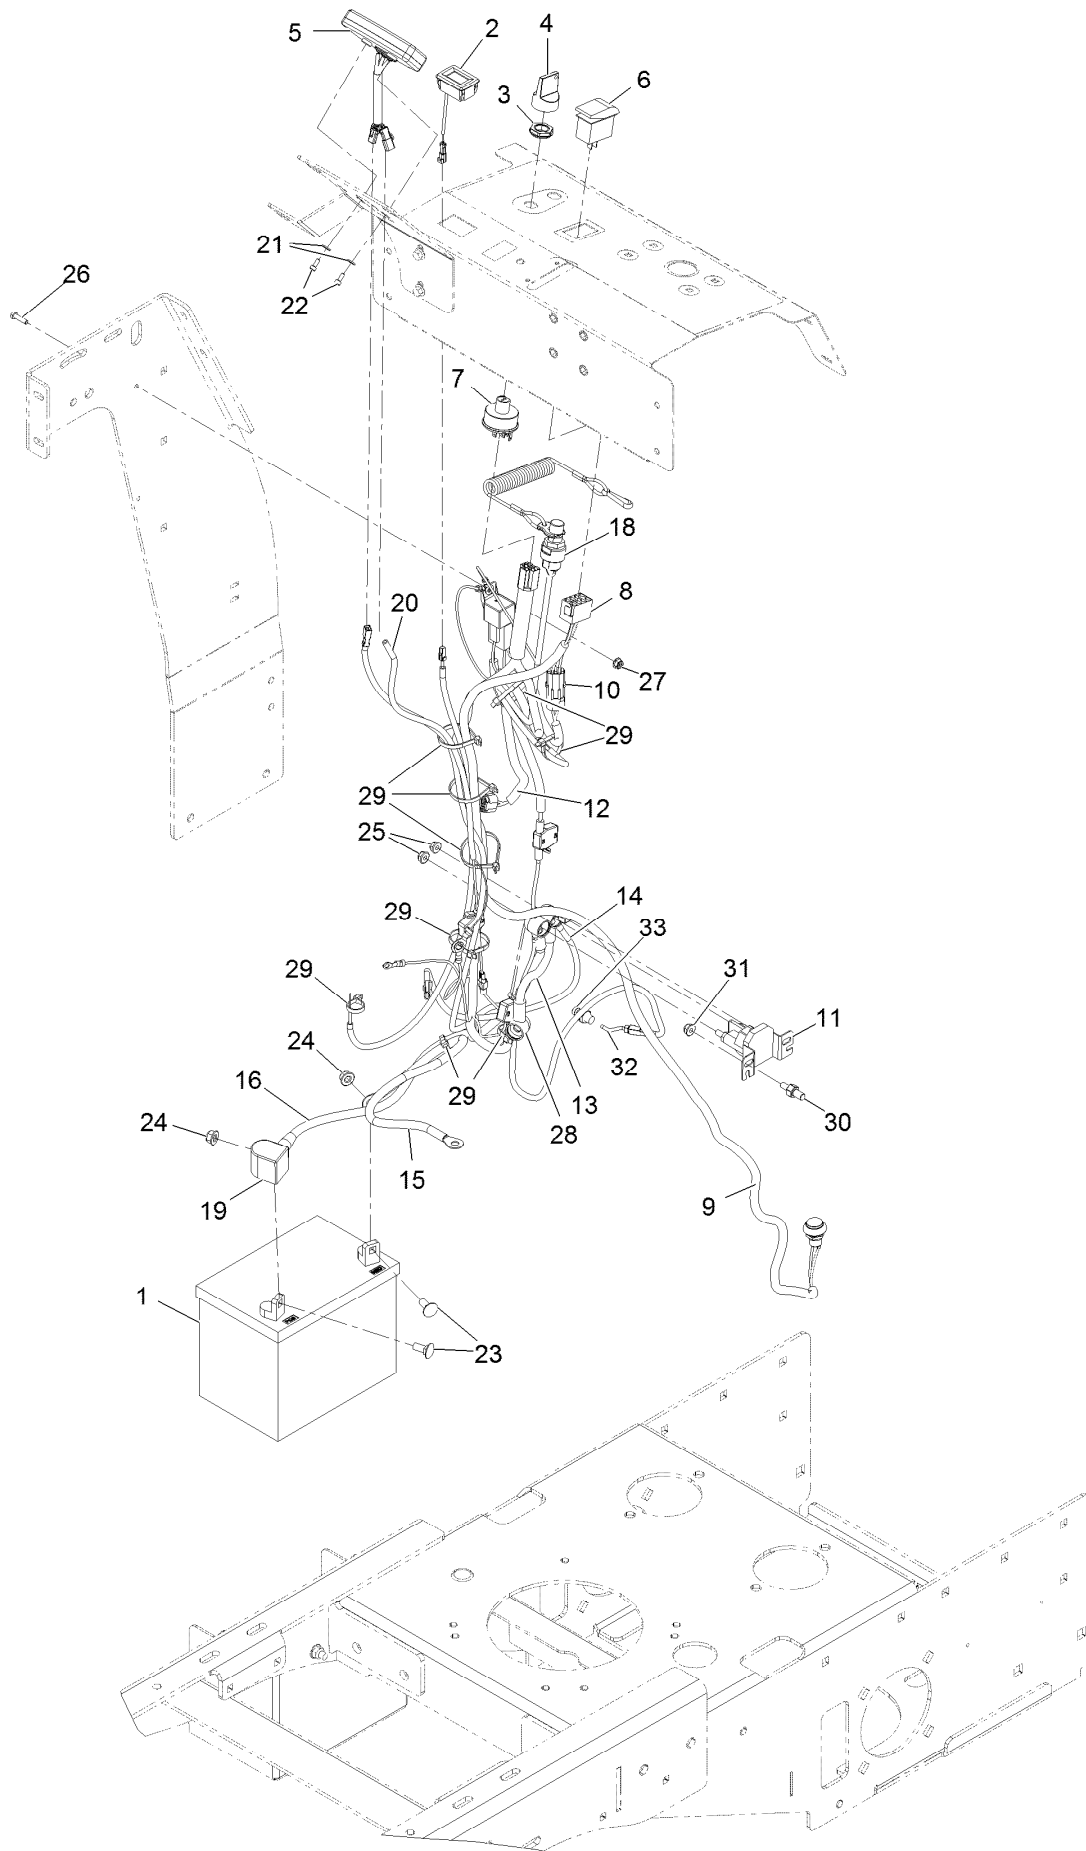

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-4657	1	Battery - Wet, 12V, 350 CCA	18	135-6121	1	Switch-Op
2	135-5259	1	Meter-Tach/Hour	19	135-2304	1	Insulator-Battery
3	135-5715	1	Nut-Switch, Key	20	135-6443	1	Harness-Striker
4	1-603511	1	Key-Ignition	21	126-0759	2	Washer-Flat
4	135-5708	1	Key-Umbrella	22	135-6357	2	Screw-HSH
5	135-8900	1	Striker-Head Only	23	126-0695	2	Screw-CARR
6	100-8469	1	Switch-Rocker	24	135-6109	2	Nut-Hex Flange
7	135-6052	1	Switch-Ignition	25	104-7201	2	Nut-Nyloc 1/4-20 Flg
8	32160-008	1	Connector-Carling, 8F	26	135-6356	1	Screw-HH
9	135-6054	1	Switch-Push Button	27	135-6342	1	Nut-Hex Flange
10	32160-072	1	Connector-Wp,2M	28	1-543393	3	Insulator-Solenoid
11	135-6189	1	Solenoid-Starter	29	3290-378	9	Tie-Cable
12	135-6113	1	Harness-Main	30	135-7273	1	Stud-Engine
13	138-3132	1	Cable-Battery, Positive	31	135-6108	1	Nut-Hex Flange
14	135-6115	1	Wire-Solenoid	32	135-8898	1	Cable-Sensor, Trail Tech
15	135-6116	1	Cable-Ground	33	135-8903	1	Magnet-Speedometer
16	135-6117	1	Cable-Positive				

Notes:

Notes:

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____



Z Turf Equipment is part of the Exmark® family of products.
©2024 Exmark Mfg. Co., Inc. All Rights Reserved. Printed in the USA.
415 Industrial Row • Beatrice, NE 68310 • (402) 223-6375

www.zturfequipment.com

