



**Count on it.**

**Parts Catalog**

**GrandStand® Revolution® Mower  
with 122cm TURBO FORCE® Rear Discharge  
Cutting Unit**

Model No. 18840TE—Serial No. 40000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

48 Inch Deck Assembly .....	4
48 Inch Deck Assembly No. 145-3431 .....	6
Ground Drive Assembly .....	8
Motion Control Assembly .....	10
LH Control Handle Assembly No. 144-1421 .....	12
RH Control Handle Assembly No. 144-1422 .....	14
Cover Assembly .....	16
Deck Lift Assembly .....	18
LH HOC Pivot Assembly .....	20
RH HOC Pivot Assembly .....	22
HOC Level Assembly No. 130-1755 .....	24
HOC Link Assembly No. 130-6615 .....	26
Frame Assembly .....	28
Platform Assembly .....	30
Front Caster Assembly .....	32
Wheel and Bearing Assembly .....	34
Battery Assembly .....	36
Electrical Assembly .....	38
Battery Cable Assembly .....	40
Control Panel and Harness Assembly .....	42
Attachments and Accessories .....	44


# 48 Inch Deck Assembly

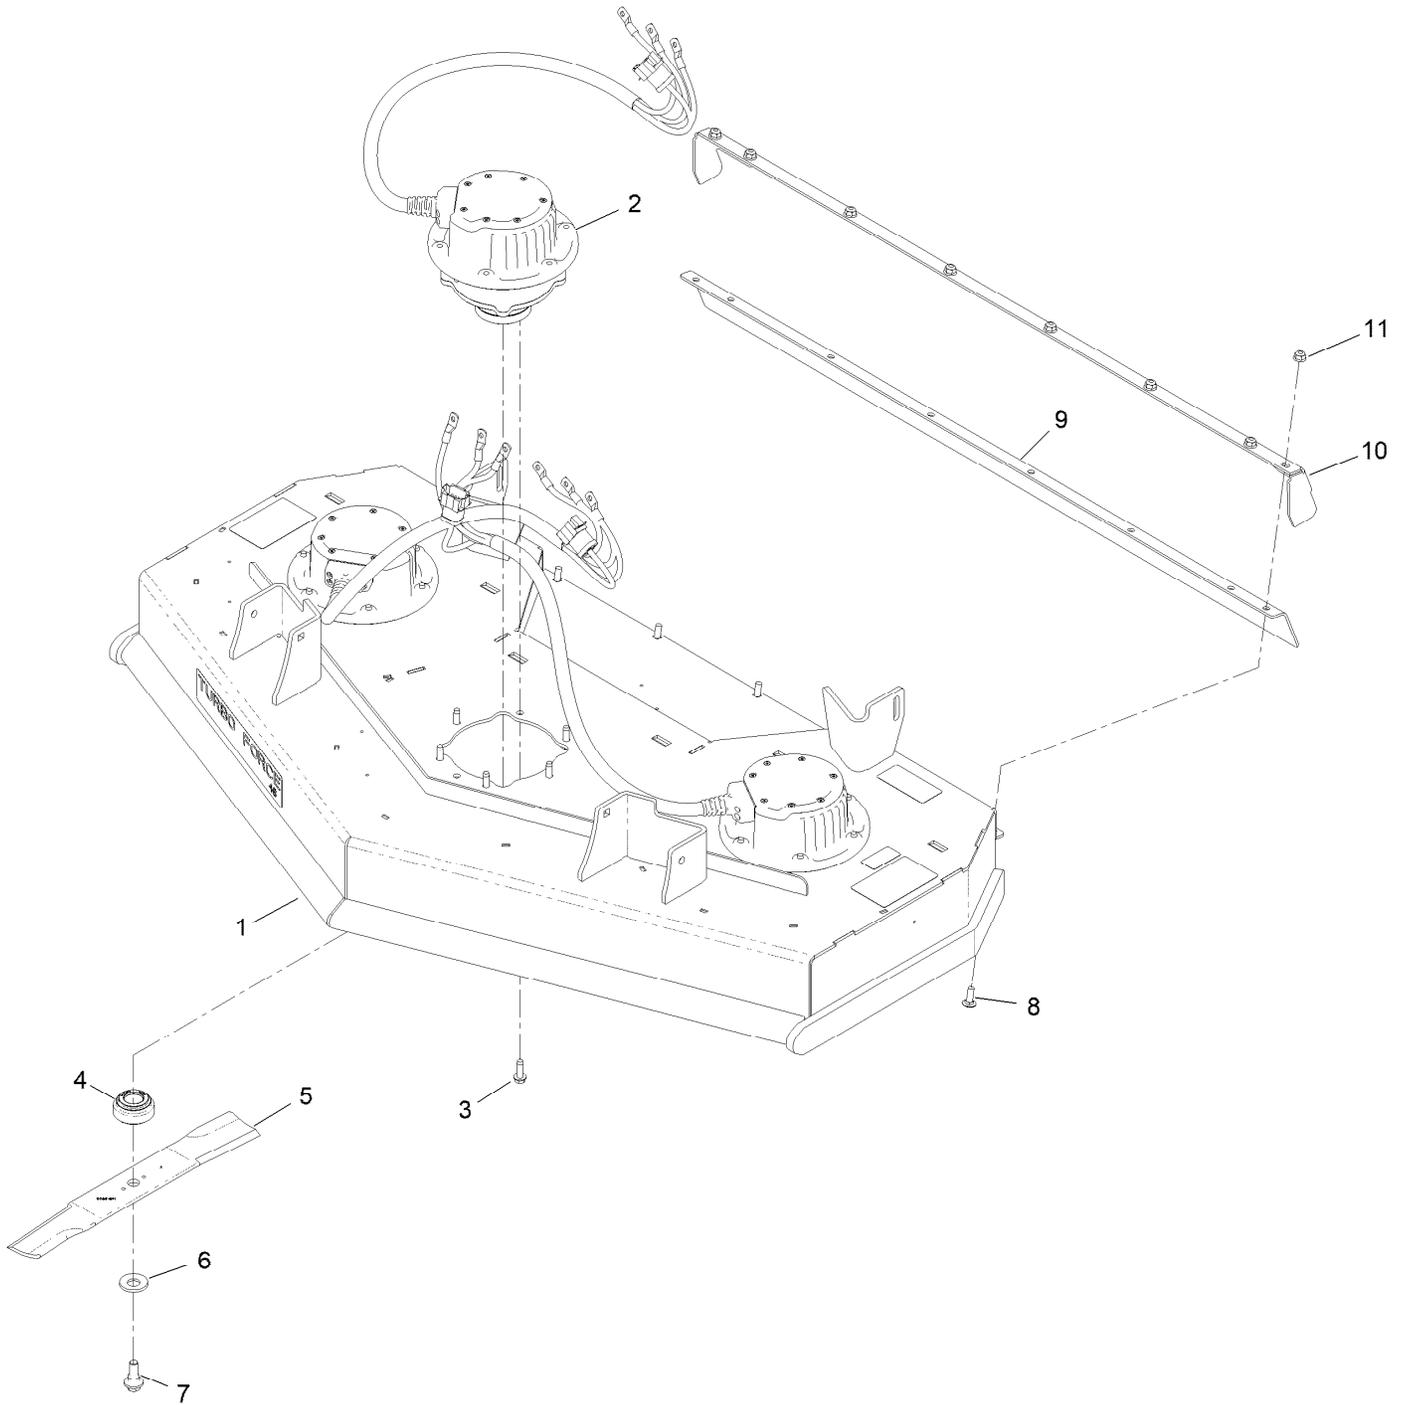

## 48 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3431	1	Deck ASM, 48Rd	7	145-3499	3	Screw-Shoulder, HWH
2	147-1689	1	Motor/Gen	8	3230-10	8	Bolt-CARR
3	701243	18	Screw-Thd Roll, HWH	9	161-3558	1	Guard-Rubber
4	145-3439	3	Retainer-Blade	10	134-3728-01	1	Bracket-Deflector
5	145-3503-03	3	Blade-16.5In, Med Sail	11	104-8300	8	Nut-HF, NI
6	125-1736	3	Washer-Belleville				


# 48 Inch Deck Assembly No. 145-3431

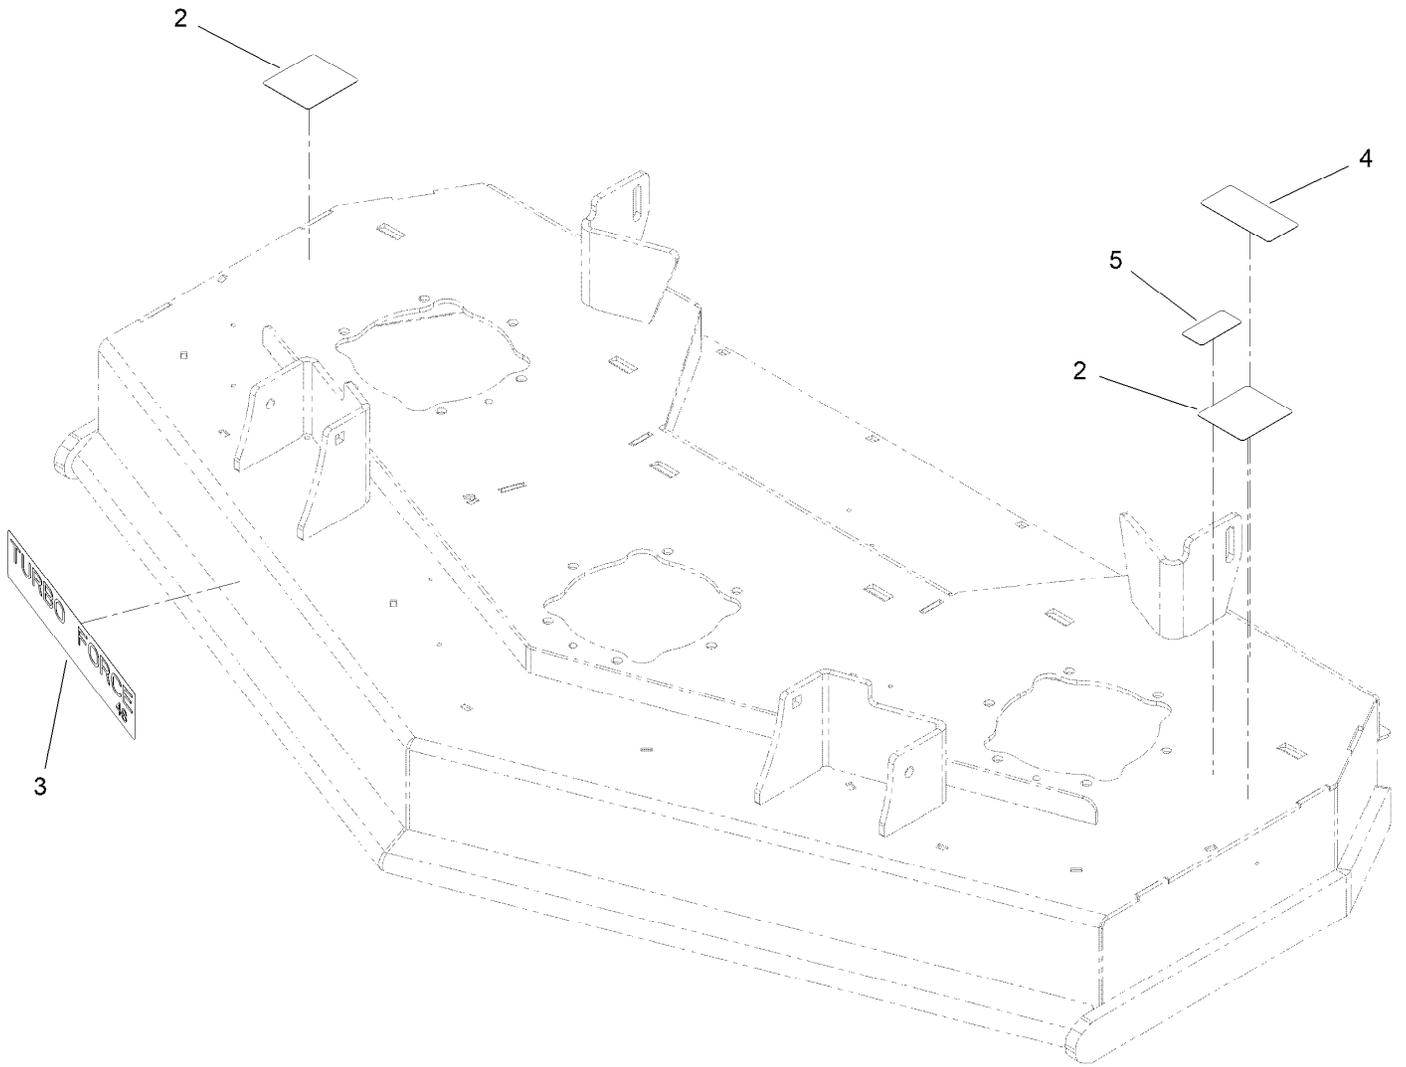

## 48 Inch Deck Assembly No. 145-3431 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	147-7787	2	Decal-Danger, CE	4	147-0288	1	Decal-Danger
3	107-1690	1	Decal	5	137-8127	1	Decal-No Spray


# Ground Drive Assembly

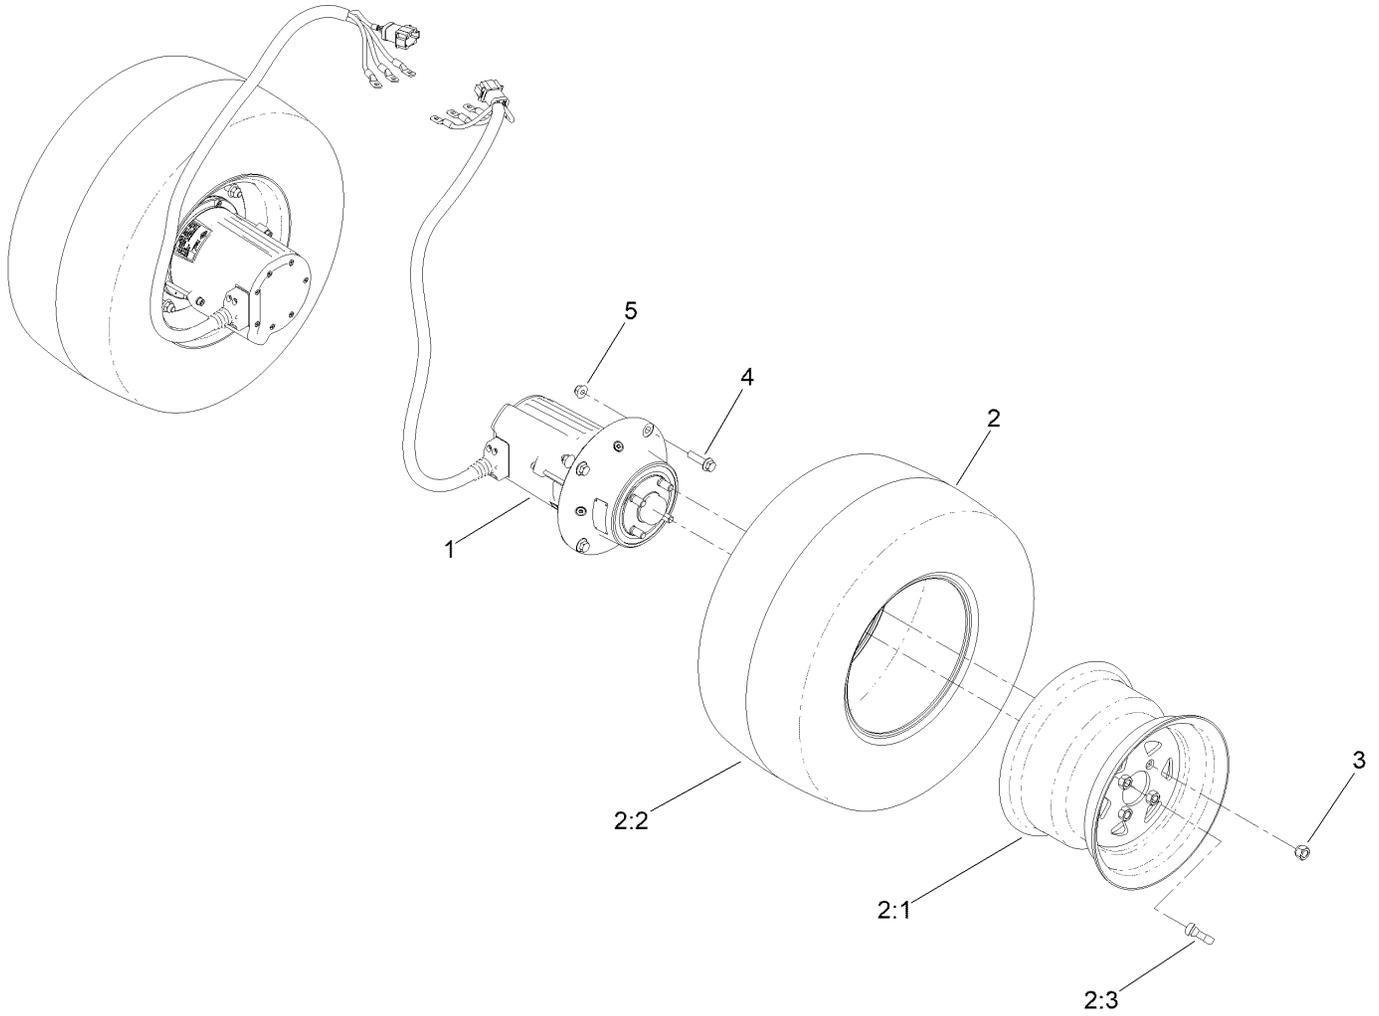

## Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-1688	1	Motor/Gearbox ASM-48V,	2:3	232-27	1	Stem-Valve
2	144-3846	2	Wheel And Tire ASM	3	242-35	8	Nut-Wheel
2:1	144-3847	1	Rim-10 In	4	114-4681	8	Screw-HHF
2:2	144-1519	1	Tire	5	104-8301	8	Nut-HF, NI


# Motion Control Assembly

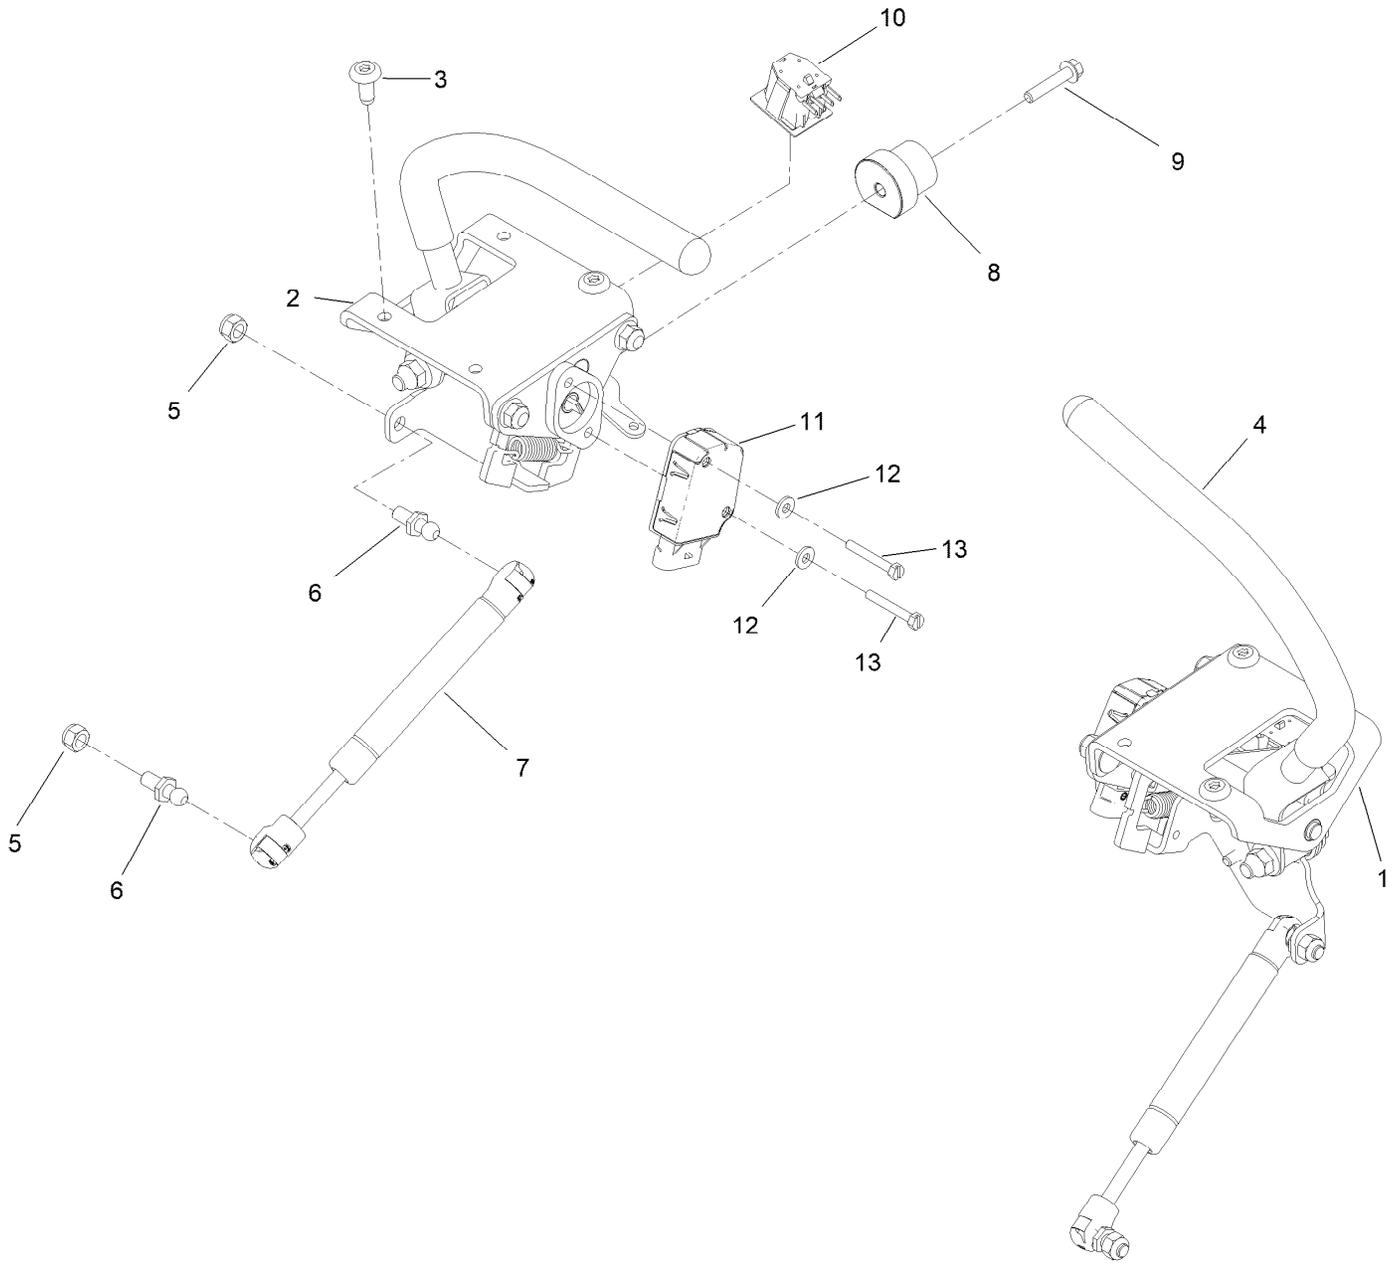

## Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-1421	1	Control Handle ASM, LH	8	126-1499	2	Cam
2	144-1422	1	Control Handle ASM, RH	9	32144-110	2	Screw-HWH
3	138-9753	4	Screw	10	145-3520	2	Switch-Plunger, On-(On)
4	119-0222	2	Grip	11	122-0917	2	Sensor-Position
5	138-8401	4	Nut-HF	12	3256-14	4	Washer-Flat
6	103-5752	4	Stud-Ball	13	32105-1	4	Screw-SHH
7	139-1523	2	Damper				


# LH Control Handle Assembly No. 144-1421

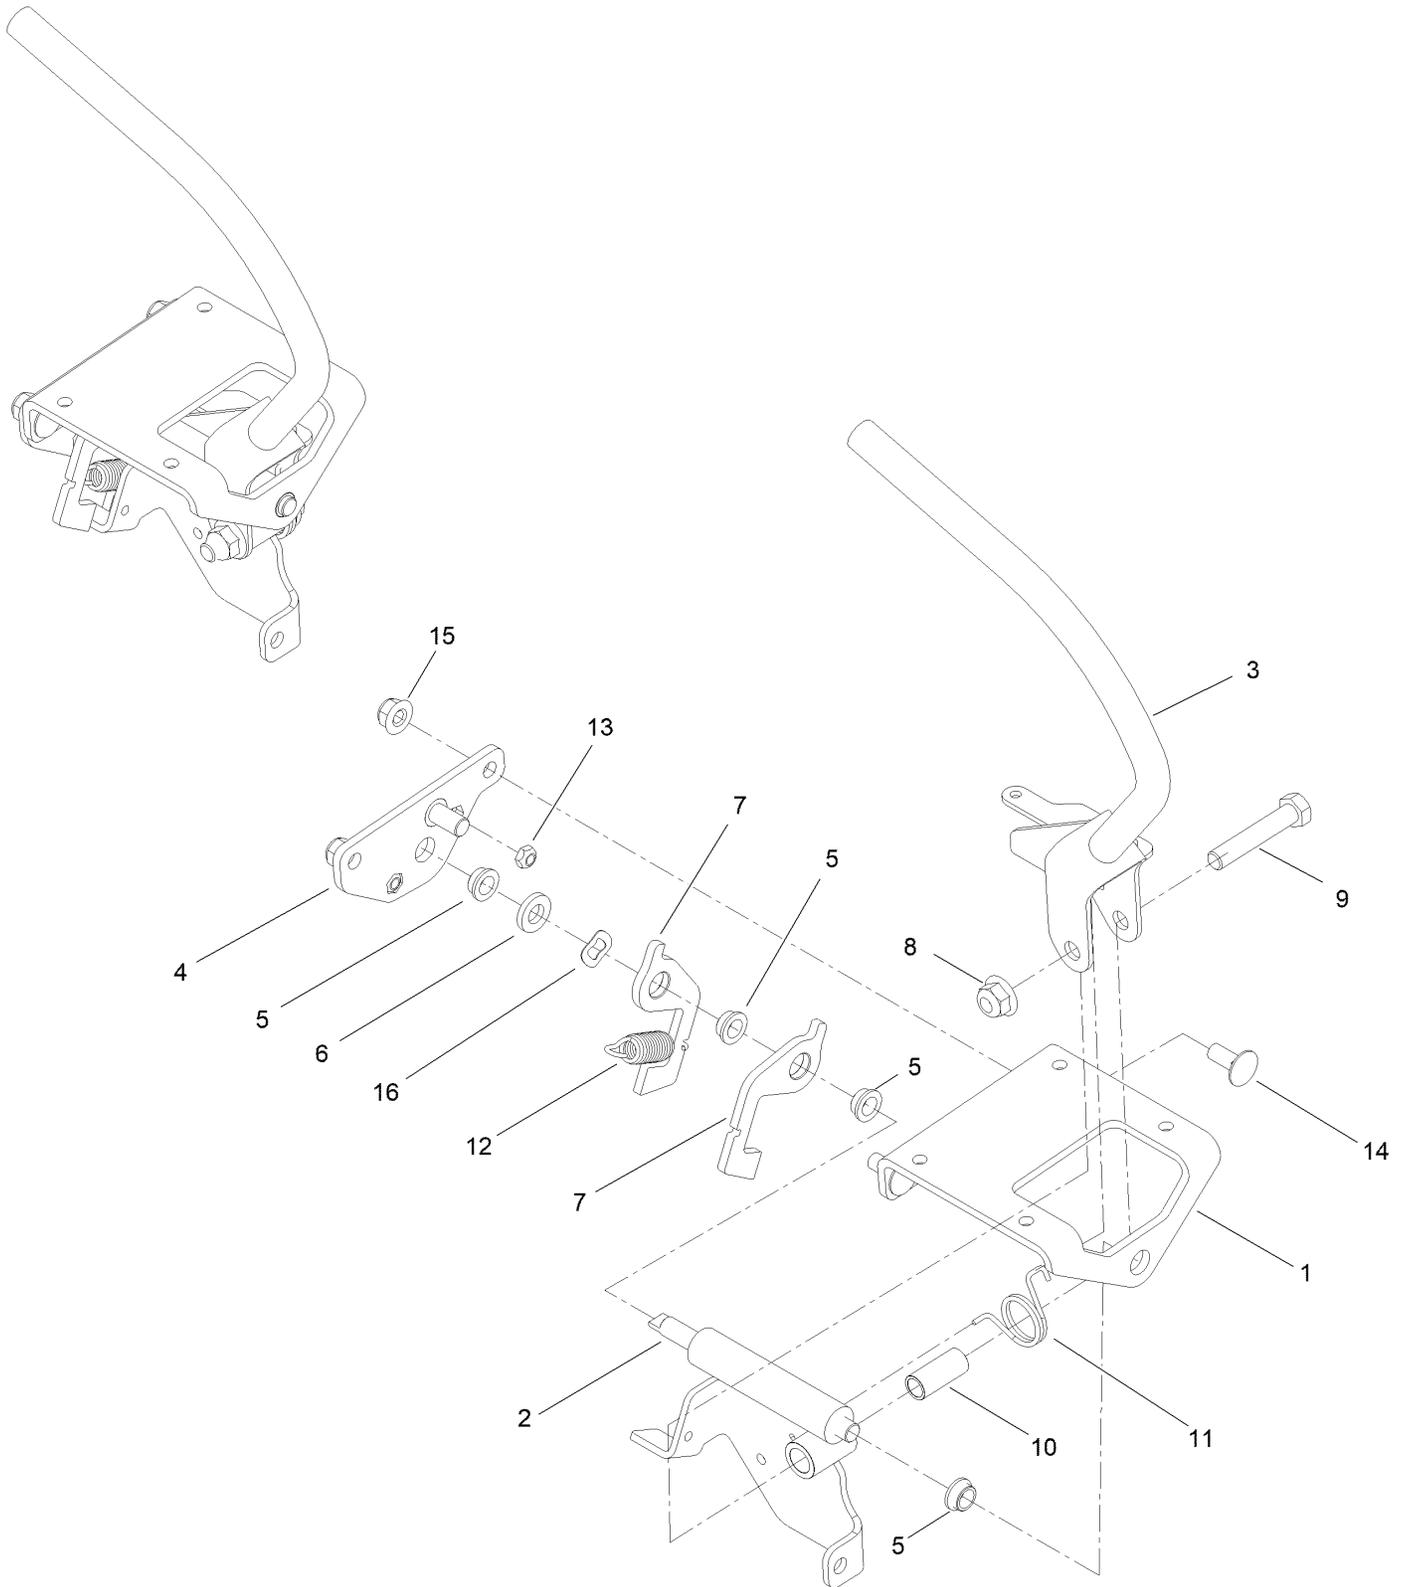

# LH Control Handle Assembly No. 144-1421 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-1427	1	Bracket-Control Mount	9	323-10	1	Screw-HH
2	145-3585	1	Motion Control ASM LH	10	131-3562	1	Bearing-Sleeve
3	145-3579	1	LH Lever ASM	11	139-1508	1	Spring-Torsion
4	144-1491	1	Plate ASM-Sensor LH	12	139-2859	1	Spring-Extension
5	139-1525	4	Bushing-Flanged Nylon	13	3296-12	2	Nut-Lock, NI
6	139-6293	1	Washer	14	3230-23	2	Bolt-CARR
7	139-1513	2	Plate-Spring	15	104-8300	2	Nut-HF, NI
8	104-8301	1	Nut-HF, NI	16	108472	1	Washer-Wave


# RH Control Handle Assembly No. 144-1422

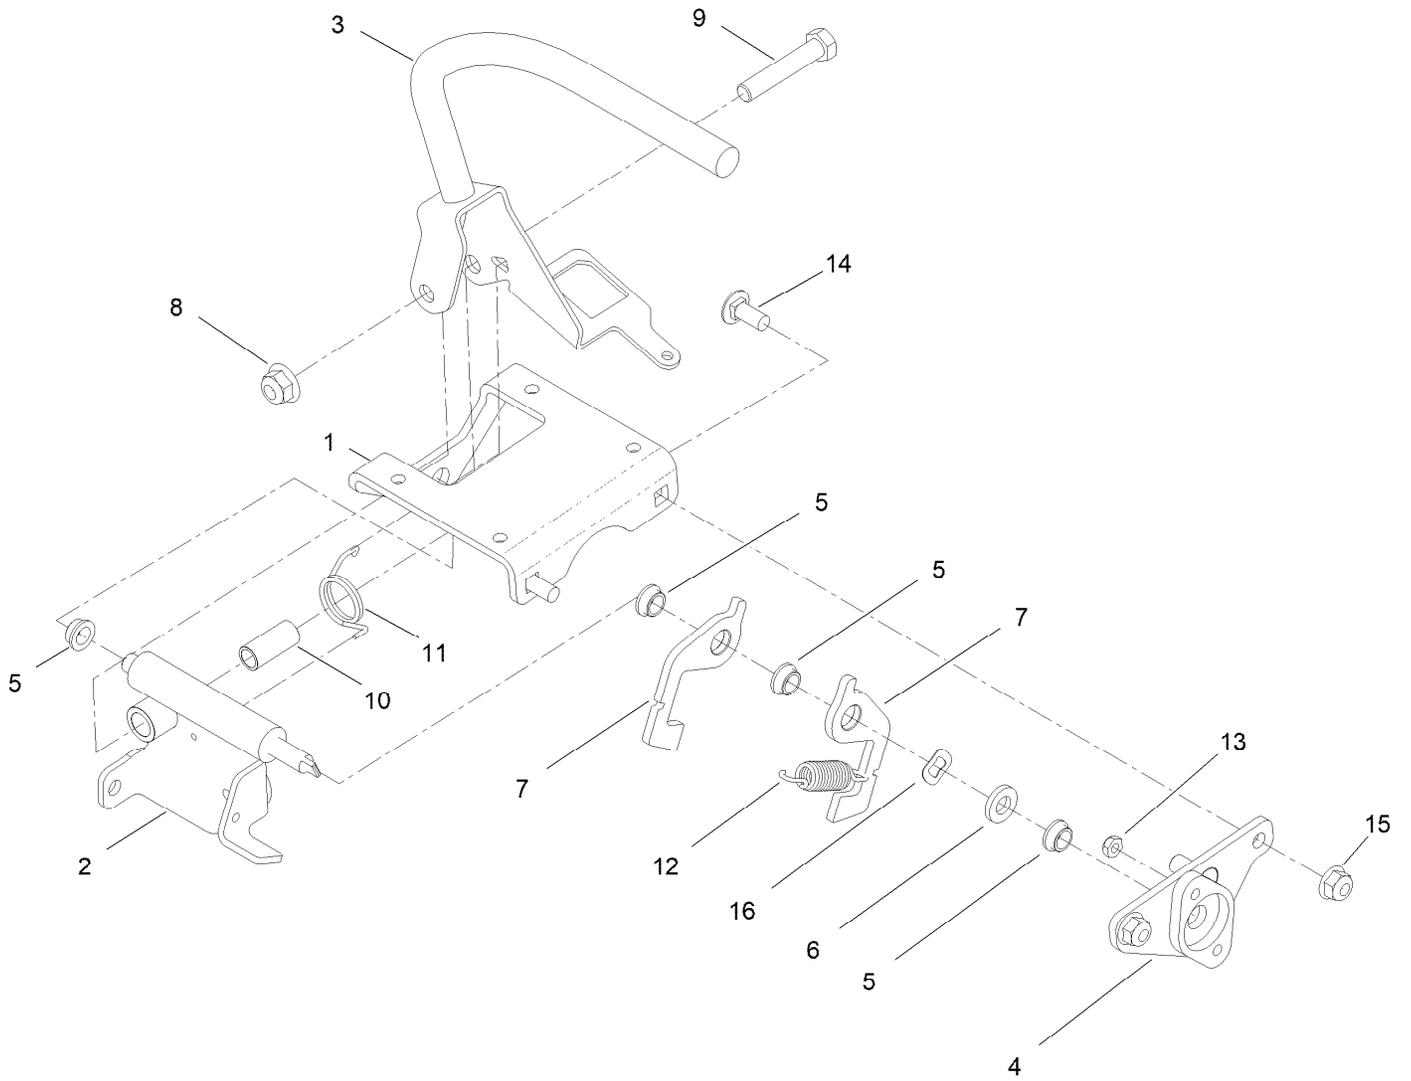

## RH Control Handle Assembly No. 144-1422 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-1427	1	Bracket-Control Mount	9	323-10	1	Screw-HH
2	145-3586	1	Motion Control ASM RH	10	131-3562	1	Bearing-Sleeve
3	145-3580	1	RH Lever ASM	11	139-1538	1	Spring-Torsion
4	144-1510	1	Plate ASM-Sensor RH	12	139-2859	1	Spring-Extension
5	139-1525	4	Bushing-Flanged Nylon	13	3296-12	2	Nut-Lock, NI
6	139-6293	1	Washer	14	3230-23	2	Bolt-CARR
7	139-1513	2	Plate-Spring	15	104-8300	2	Nut-HF, NI
8	104-8301	1	Nut-HF, NI	16	108472	1	Washer-Wave


# Cover Assembly

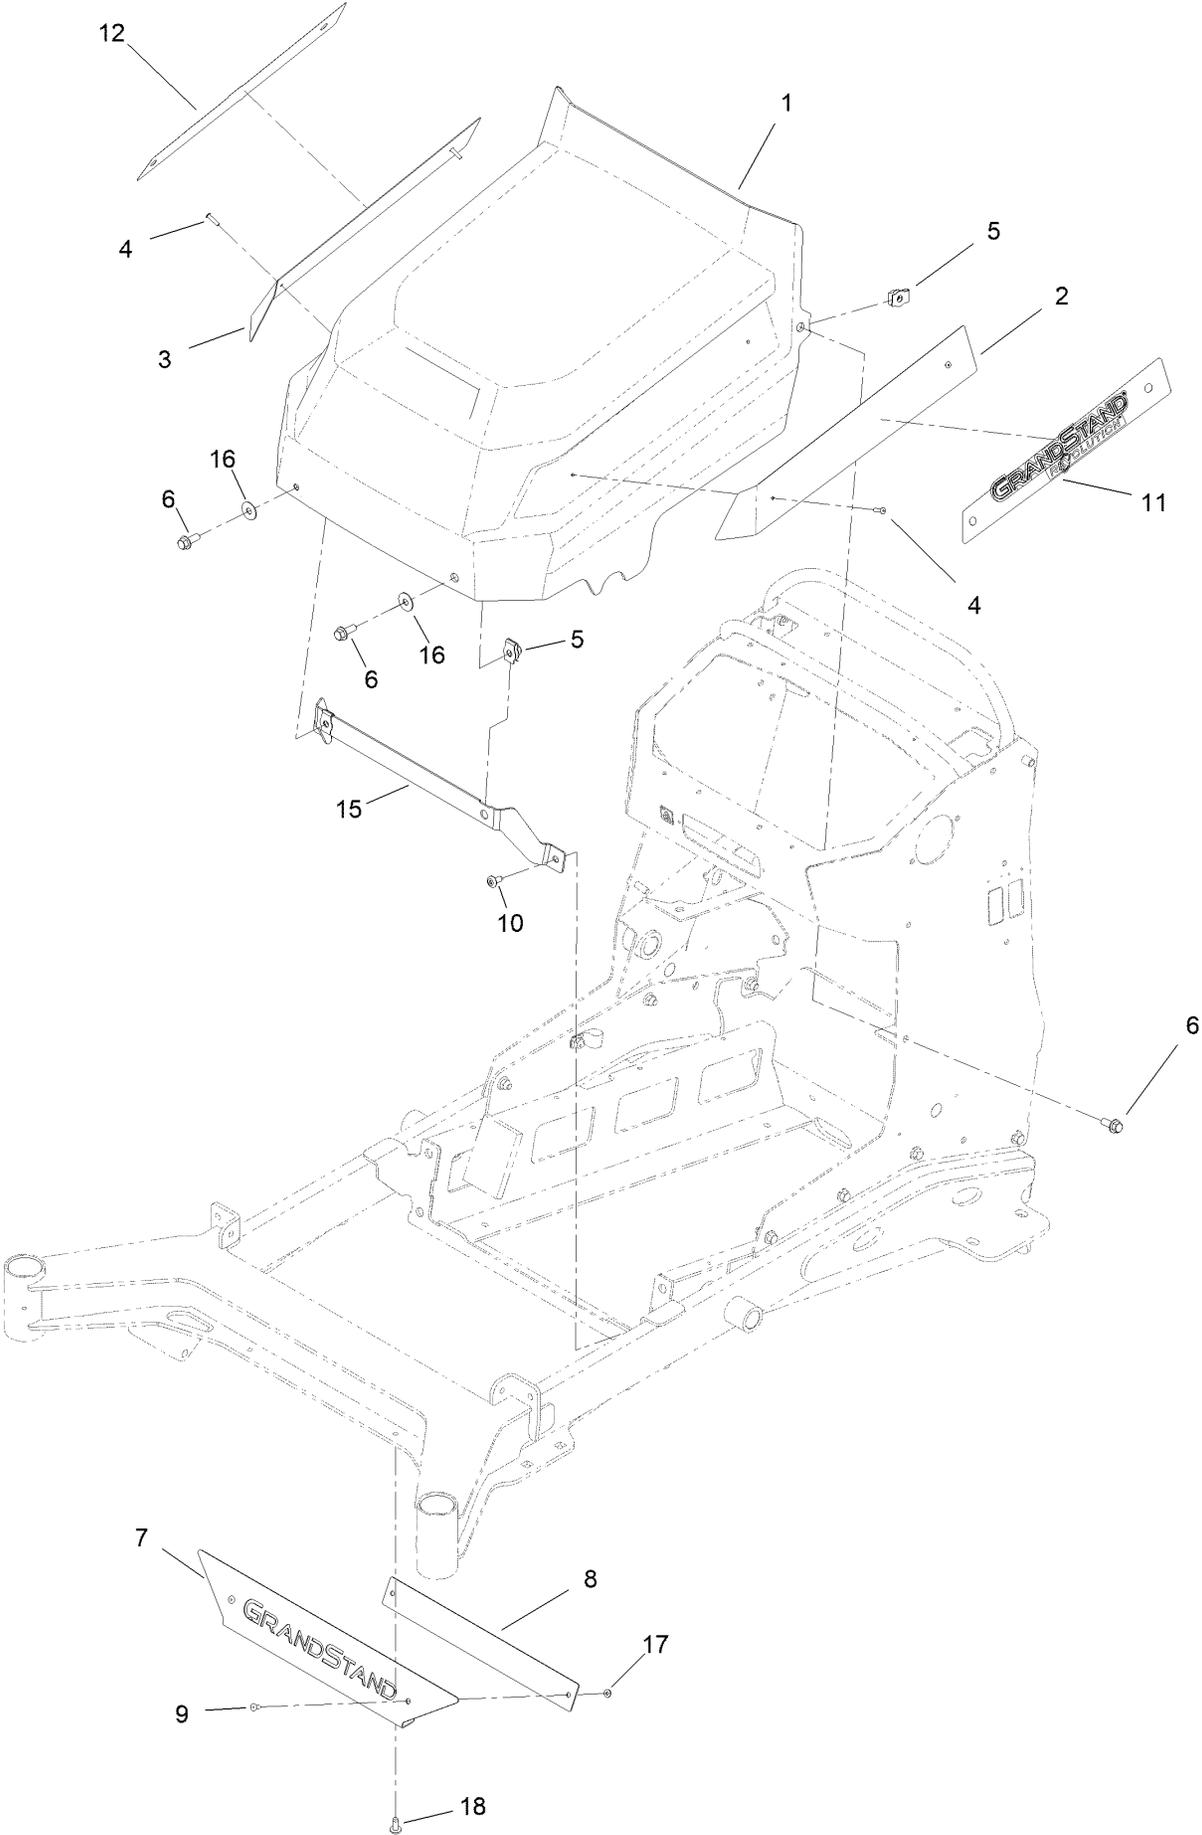

## Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-6896	1	Cover-Battery	9	114439	2	Rivet-Blind
2	144-6899	1	Plate-Insert, Cover	10	138-9753	2	Screw
3	144-6901	1	Plate-Insert, Cover	11	144-7007	1	Decal-Lithium Left
4	130-8451	4	Rivet-Trifold	12	144-7014	1	Decal-Lithium Right
5	105-4886	4	Nut-Tinnerman	15	144-6894-03	1	Bracket-Mount, Cover
6	3234-42	4	Screw-HHF	16	52-2860	2	Washer
7	144-7024-03	1	Plate-Front, Egrandstand	17	3269-26	2	Washer-Plain
8	144-7028	1	Plate-Cover	18	92-1624	2	Screw-HWH Thd Form

# Deck Lift Assembly

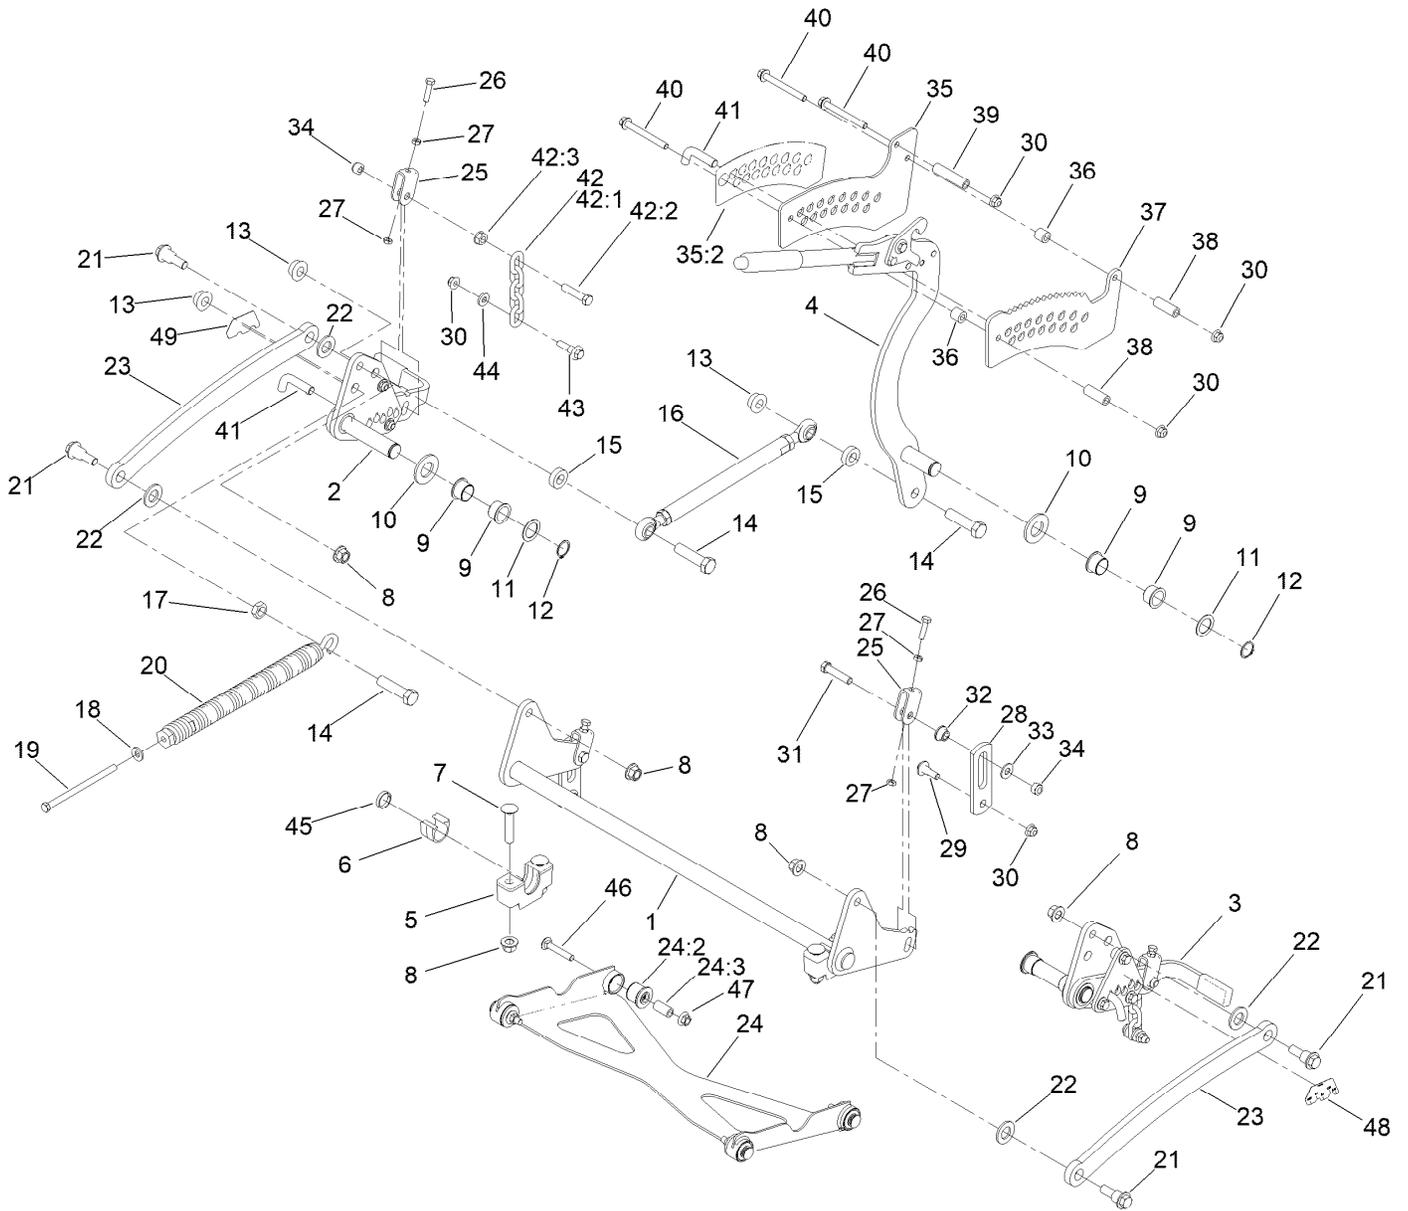


## Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8405-01	1	Shaft-Cross, Front	26	322-47	4	Screw-HH
2		1	Pivot ASM LH, HOC ●	27	3218-2	8	Nut-Hex Jam
3		1	Pivot ASM RH, HOC ●	28	130-6589	2	Link-Lift
4	130-1755	1	HOC Lever ASM	29	109-9840	2	Screw-Shoulder, HHF
5	109-9409	2	Support-Bearing, Cross Shaft (Front)	30	104-8301	7	Nut-HF, NI
6	109-9410	2	Bearing-Cross Shaft, Front	31	109-9065	2	Screw-HH
7	116-1700	4	Bolt-CARR	32	116-2428	2	Bushing-Flanged
8	99-5107	8	Nut-Lock	33	3256-4	4	Washer-Flat
9	127-0369	6	Bushing	34	3296-48	4	Nut-Hex
10	3256-62	3	Washer-Flat	35	147-1676	1	HOC Plate And Decal ASM
11	10-8110	3	Washer-Thrust	35:2	140-5405	1	Decal-HOC
12	32151-29	3	Ring-Retaining	36	121-1760	2	Spacer
13	138-4932	3	Nut-Hex Flg	37	138-4887	1	Plate-HOC, Inner
14	138-4931	3	Screw-Lock	38	95-6448	2	Spacer
15	119-6223	2	Washer	39	138-1111	1	Spacer
16	130-6615	1	HOC Link ASM	40	116-4701	3	Screw-HHF
17	3218-6	1	Nut-Jam	41	138-7203	3	Pin-HOC
18	98-5975	1	Washer-Belleville	42	116-0756	2	Deck Lift Chain ASM
19	323-58	1	Bolt-TAP, HH	42:1	1-633447	1	Chain-Lift, Deck
20	116-0886	1	Spring-Extension	42:2	109-9065	1	Screw-HH
21	116-0780	4	Screw-Shoulder, HHF	42:3	32128-37	1	Nut-HF
22	3256-28	4	Washer-Flat	43	130-0742	2	Bolt-Shoulder
23	127-1948-03	2	Link-Lift	44	43-0940	2	Spacer
24	137-4129	1	Deck Strut ASM	45	133-1431	1	Spacer-Split
24:2	137-4108	4	Bushing-Rubber	46	3231-7	4	Screw-CARR
24:3	108-6544	4	Spacer	47	32128-19	4	Nut-HF Lock, Large Flg
25	109-9066	4	Yoke-Adjust, Deck	48	144-7013	1	Decal-Deck Rake, LH
				49	144-7012	1	Decal-Deck Rake, RH

● Not serviced separately


# LH HOC Pivot Assembly

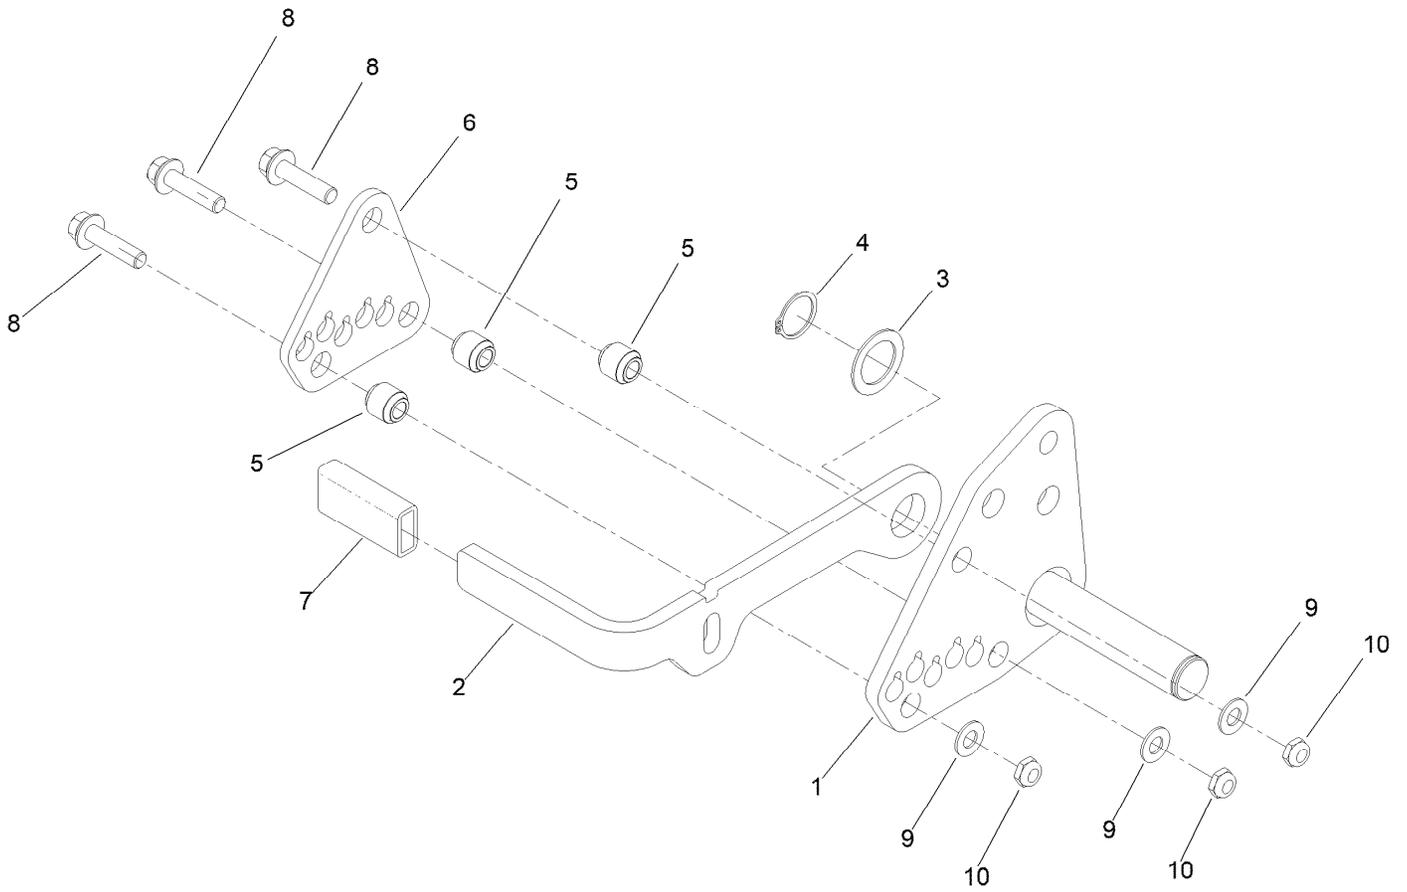

## LH HOC Pivot Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-1556-01	1	Pivot ASM-LH HOC [red]	6	144-1553-01	1	Plate-Rake Adj, Outer
2	144-1558-01	1	Lever-Rake, Deck [red]	7	116-4312	1	Grip-Flat
3	10-8110	1	Washer-Thrust	8	114-4681	3	Screw-HHF
4	32151-29	1	Ring-Retaining	9	48-9220	3	Washer-Flat
5	138-7201	3	Spacer-Double Step	10	3296-59	3	Nut-Lock, NI


# RH HOC Pivot Assembly

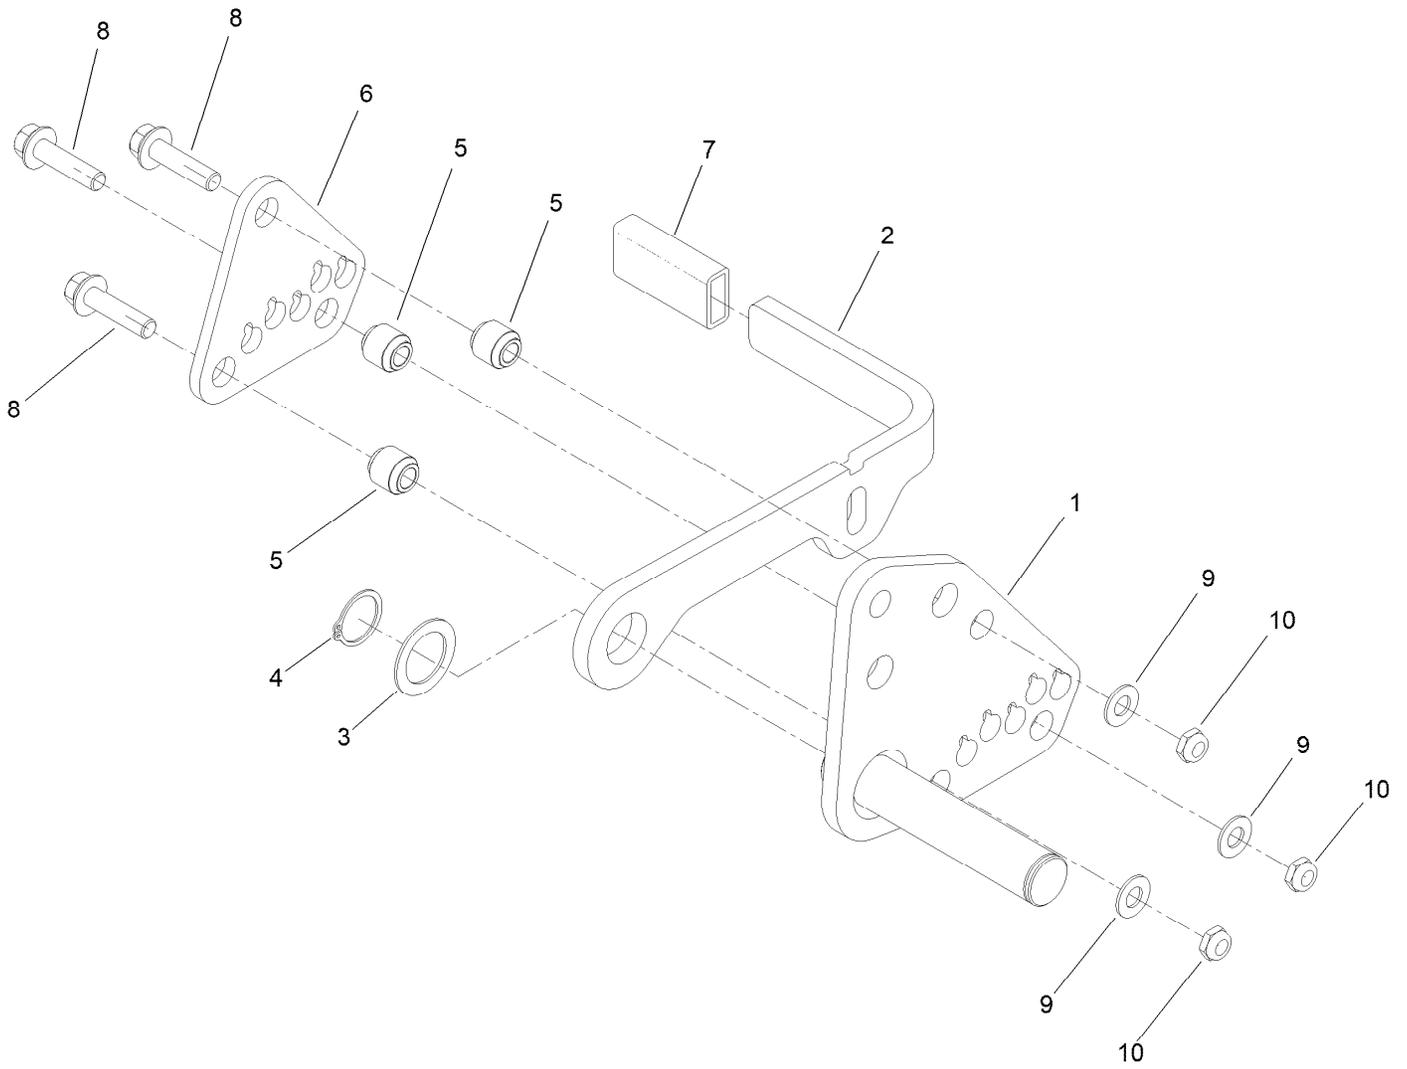

## RH HOC Pivot Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-1550-01	1	Pivot ASM-RH HOC [red]	6	144-1553-01	1	Plate-Rake Adj, Outer
2	144-1547-01	1	Lever-Rake, Deck [red]	7	116-4312	1	Grip-Flat
3	10-8110	1	Washer-Thrust	8	114-4681	3	Screw-HHF
4	32151-29	1	Ring-Retaining	9	48-9220	3	Washer-Flat
5	138-7201	3	Spacer-Double Step	10	3296-59	3	Nut-Lock, NI


# HOC Level Assembly No. 130-1755

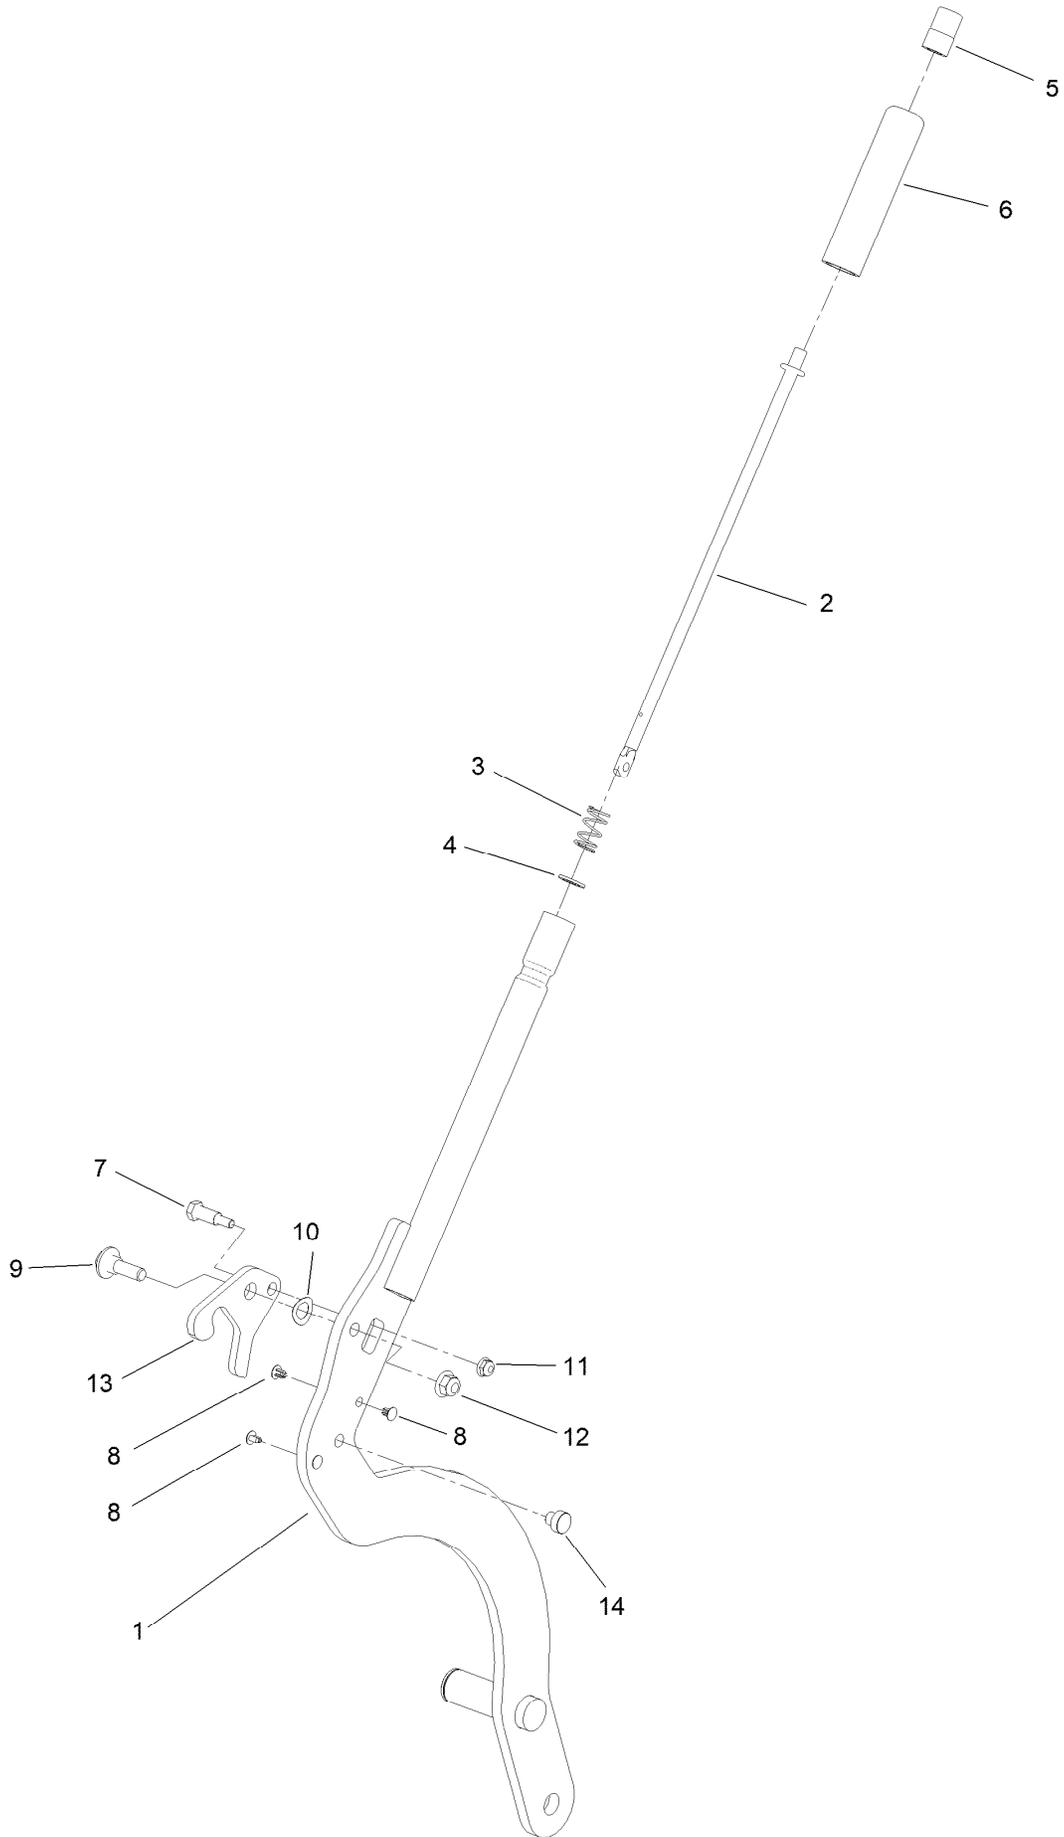

## HOC Level Assembly No. 130-1755 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-1775-01	1	Lever-Lift	8	103-1363	4	Rivet
2	136-0530	1	Rod-Latch, Release	9	614672	1	Screw-Shoulder, HWH
3	114-8187	1	Spring-Compression	10	110-8982	1	Washer-Spring
4	114-1207	1	Washer-Special	11	104-7201	1	Nut-HF, NI
5	115-2750	1	Knob	12	104-8301	1	Nut-HF, NI
6	115-3592	1	Grip	13	138-4888	1	Latch-HOC
7	119-2309	1	Bolt-Shoulder	14	138-4863	1	Plug-Wear

# HOC Link Assembly No. 130-6615

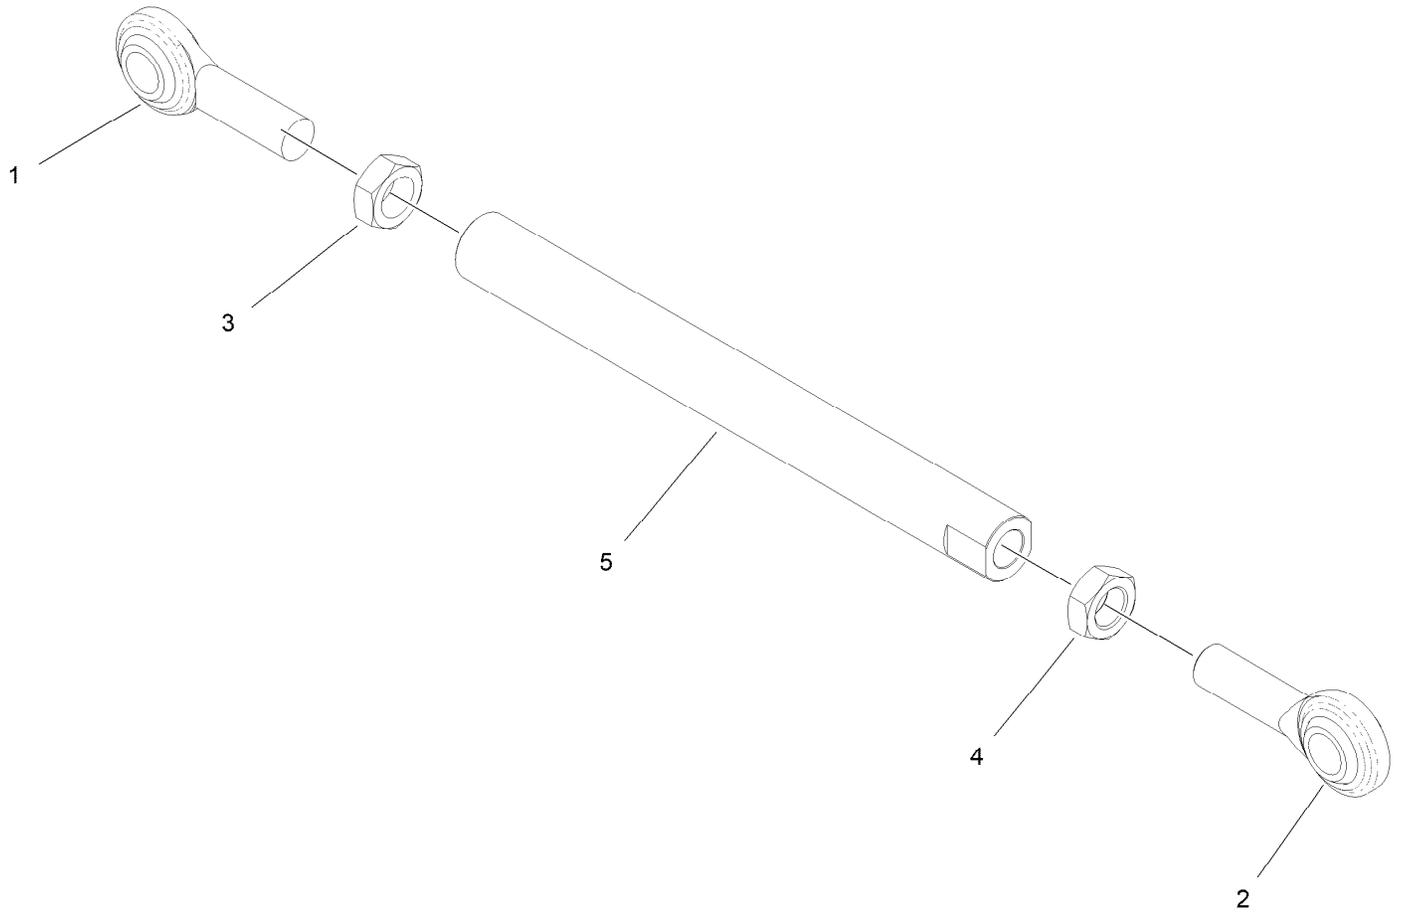


# HOC Link Assembly No. 130-6615 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-633029	1	Balljoint-Spherical
2	117-5291	1	Balljoint-Spherical
3	3220-6	1	Nut-Jam

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	117-5293	1	Nut-Jam
5	130-6614	1	Link-Height Of Cut


# Frame Assembly

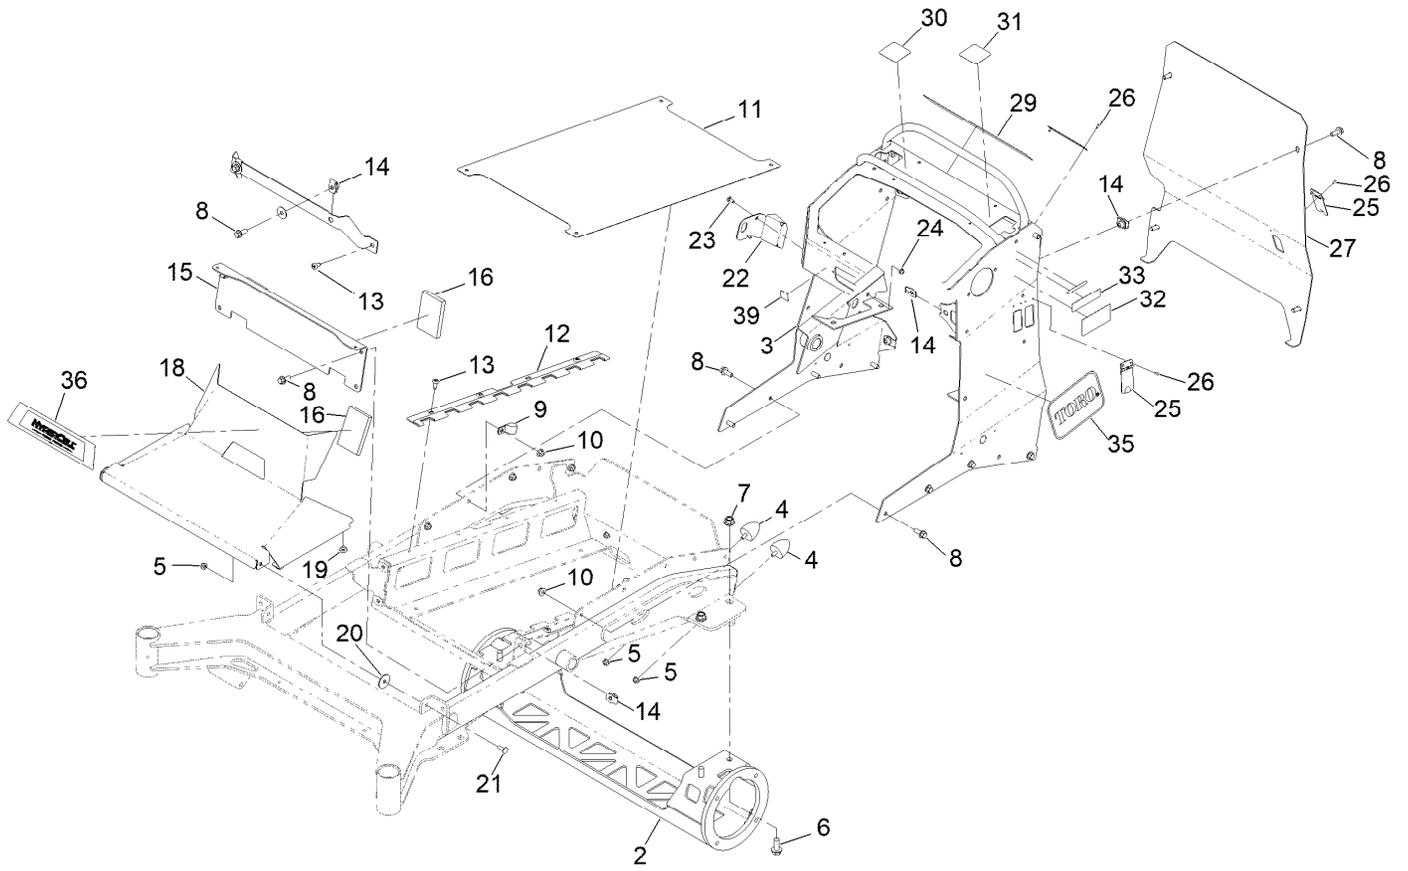

## Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	144-3840-01	1	Frame-Axle ASM [red]	20	107-3002	2	Washer-Nylon
3	144-1580	1	Tower ASM	21	3230-10	2	Bolt-CARR
4	114-1926	4	Bumper-Rubber	22	144-6862	1	Plate-Latch
5	104-8300	6	Nut-HF, NI	23	3229-11	1	Screw-CARR
6	3234-38	4	Screw-HHF	24	104-7201	1	Nut-HF, NI
7	99-5107	4	Nut-Lock	25	144-6628	2	Plate-Cover, Spring
8	3234-42	14	Screw-HHF	26	3290-271	6	Rivet-Pop
9	2412-4	2	Clamp-R	27	144-3876-03	1	Plate-Cover, Plate
10	104-8301	8	Nut-HF, NI	29	144-7002	1	Decal-Warning
11	145-3403-03	1	Plate-Skid	30	144-7004	1	Decal-OPC Control, Right
12	144-3874-03	2	Bracket-Retention, Battery	31	144-7003	1	Decal-OPC Control, Left
13	138-9753	6	Screw	32	147-0289	1	Decal-Charging Port
14	105-4886	10	Nut-Tinnerman	33	144-7008	1	Decal-Service, Shut-Off
15	144-6957-03	1	Plate-Battery Mnt	35	145-3437	2	Decal-Toro Logo
16	100-2196	3	Pad-Foam	36	144-7015	1	Decal-Hypercell 1900
18	144-7023-03	1	Cover-Motor Controller	39	147-0290	1	Decal-Light, Warning
19	1-513658	4	Bumper				


# Platform Assembly

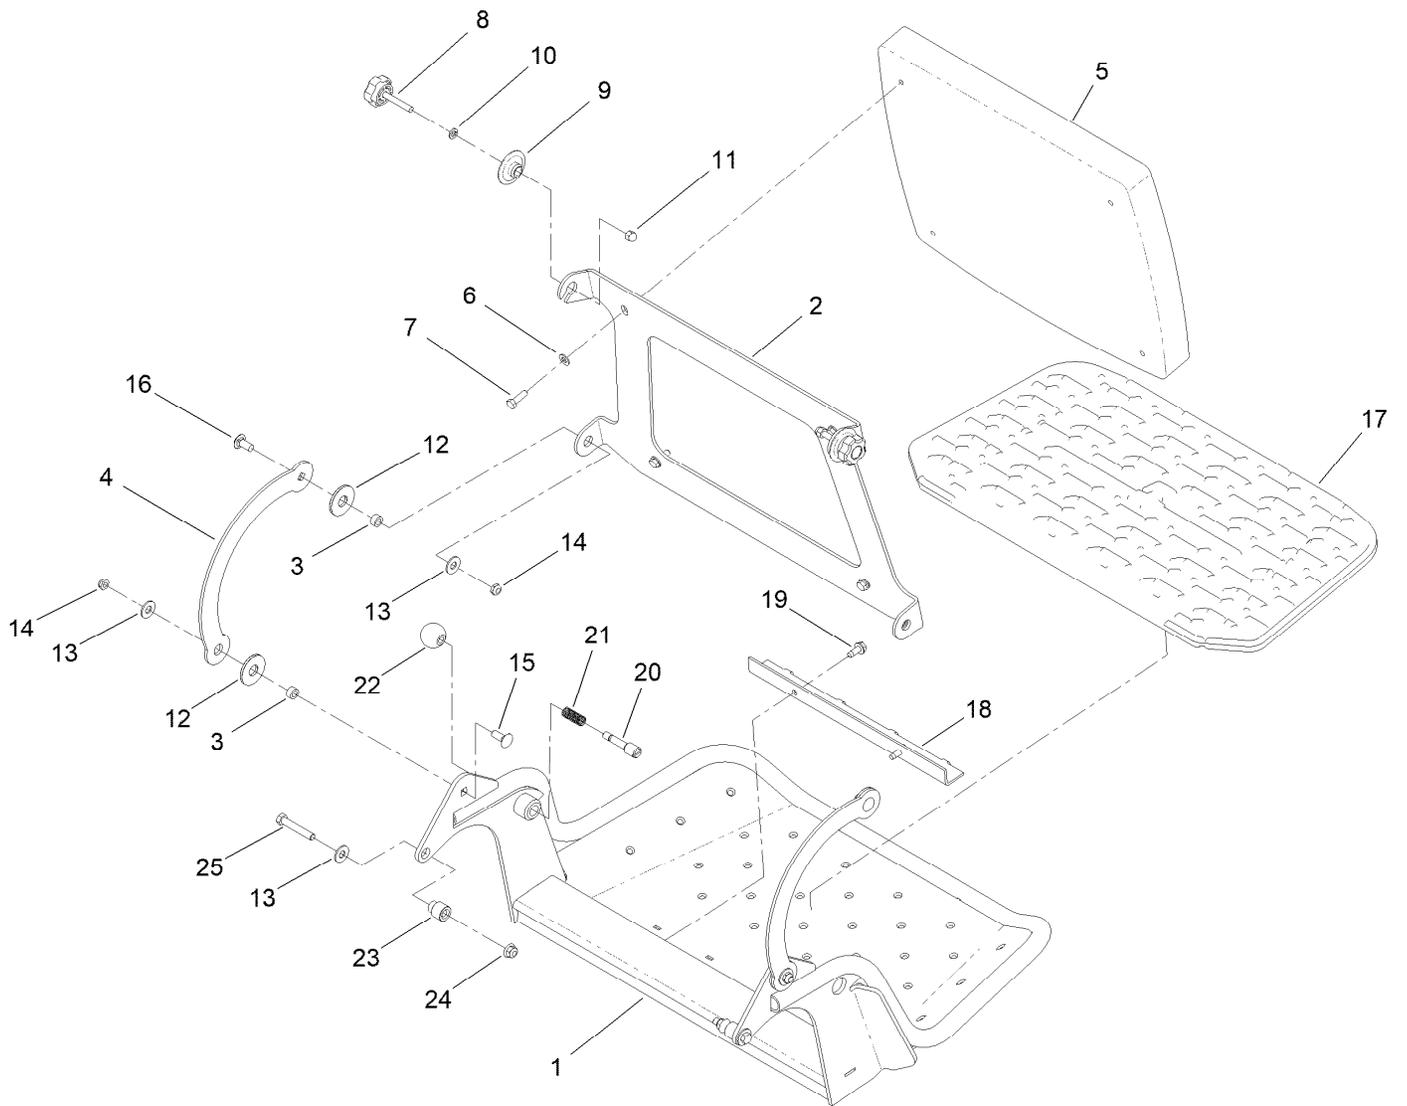

## Platform Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8475-01	1	Platform	14	3296-59	4	Nut-Lock, NI
2	120-8499-03	1	Hinge-Pad	15	3231-2	2	Bolt-CARR
3	111044	4	Spacer	16	3231-27	2	Screw-CARR
4	114-1915-01	2	Link-Pad	17	144-6958	1	Mat, Platform
5	145-3535	1	Cushion Pad ASM	18	114-1920-03	1	Clamp-Shield
6	3256-23	4	Washer-Plain	19	32144-70	2	Screw-HWHTF
7	121-7999	4	Screw-HH	20	119-8650	1	Pin-Latch
8	133-1426	2	Knob	21	114-5348	1	Spring
9	116-2886	2	Slide-Bushing	22	1-603175	1	Knob-Ball
10	3253-4	2	Washer-Lock	23	132-7583	2	Bushing-Flanged
11	131-4535	2	Nut-Acorn	24	104-8301	2	Nut-HF, NI
12	114-0463	4	Washer-Friction, Composite	25	323-45	2	Screw-HH
13	3256-4	6	Washer-Flat				


# Front Caster Assembly

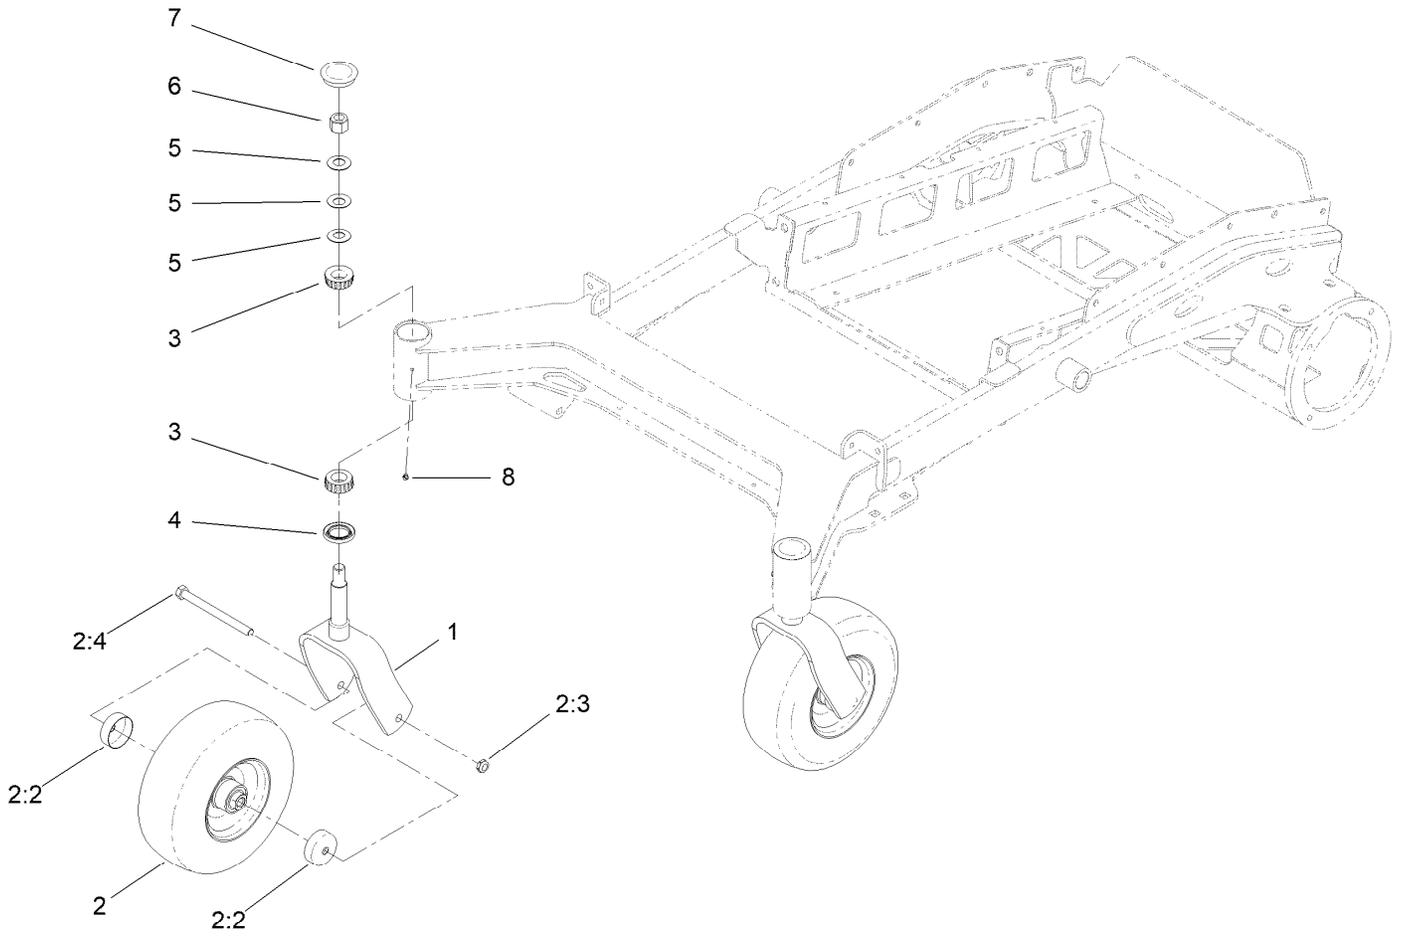

## Front Caster Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-7988-01	2	Fork-Caster	4	116-5647	2	Seal-Grease
2	140-5485	2	Mf Wheel Tire Bearing ASM	5	1-633508	6	Washer-Bellville
2:2	103-2768	2	Guard-Seal	6	3296-51	2	Nut-Lock, NI
2:3	3296-45	1	Nut-Hex	7	145-3415	2	Cap, Grease
2:4	325-20	1	Screw-HH	8	1-811010	2	Plug
3	1-543509	4	Bearing-Roller, Tapered				


# Wheel and Bearing Assembly

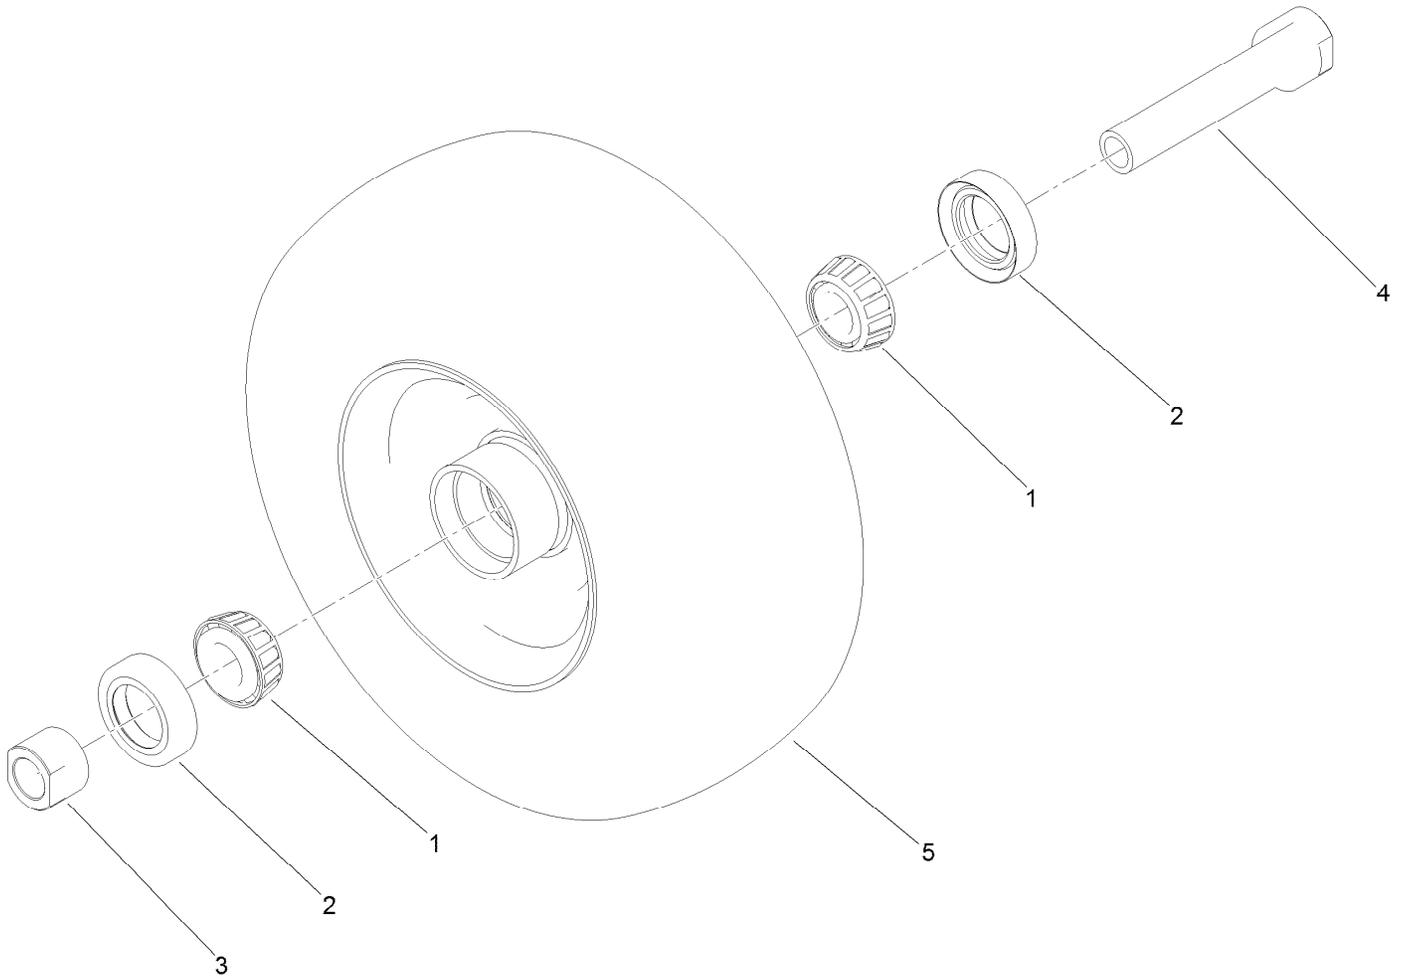

## Wheel and Bearing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-633585	2	Bearing-Cone, Taper	4	126-5359	1	Caster Axle ASM
2	103-0063	2	Seal-Caster	5	140-5483	1	Mf Wheel And Tire ASM
3	103-3051	1	Spacer-Nut				

# Battery Assembly

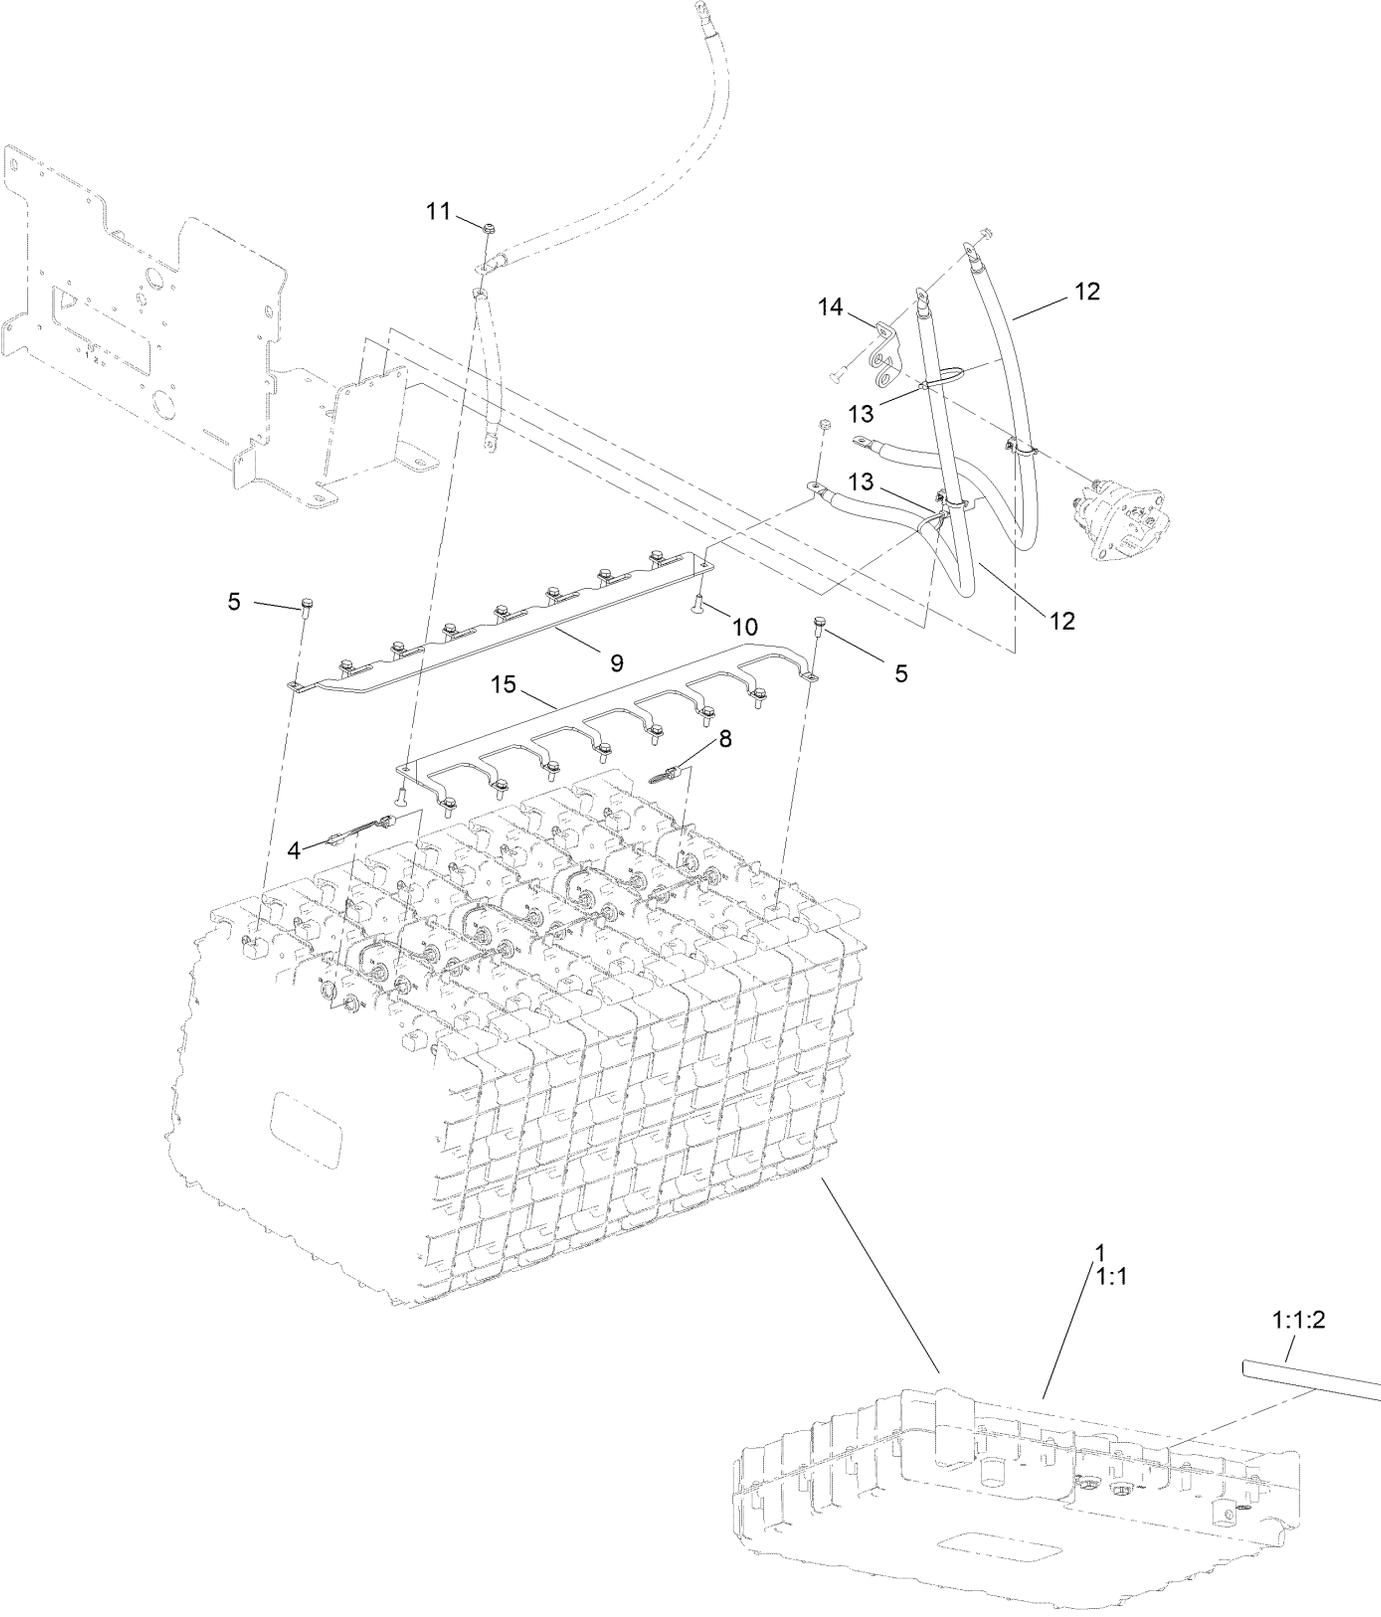


## Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-5320	8	Battery ASM	11	104-7201	3	Nut-HF, NI
1:1		1	Battery ASM ■	12	147-0273	2	Cable-Battery,Rd ASM
1:1:2	145-5338	1	Decal-Warning, Battery	13	3290-378	2	Tie-Cable
1:1:14	32180-466	2	Nut-Mounting, Jwpf Panel Lock ●	14	147-0370	1	Busbar-2, Switch
4	140-9565	7	Harness-Wire, Data Interface	15	147-0341	1	Busbar-8, Bk
5	145-5783	16	Screw-Sems	99	147-7790	1	Charger-Rc1200, 1200W ●
8	122-2323	1	Harness-Wire, Can Terminator	99:1	147-6297	1	Cord-AC, 120V ●
9	147-0234	1	Busbar-8, Rd	99:2	147-0227	1	Cable, DC-Hypercell ●
10	1-807512	3	Bolt-CARR	99	147-7791	1	Adapter, AC, 250V/10A, EU To Uk ●
				99	147-7792	1	Adapter, AC, 250V/10A, EU To Australia ●

● Not illustrated

■ Not serviced separately


# Electrical Assembly

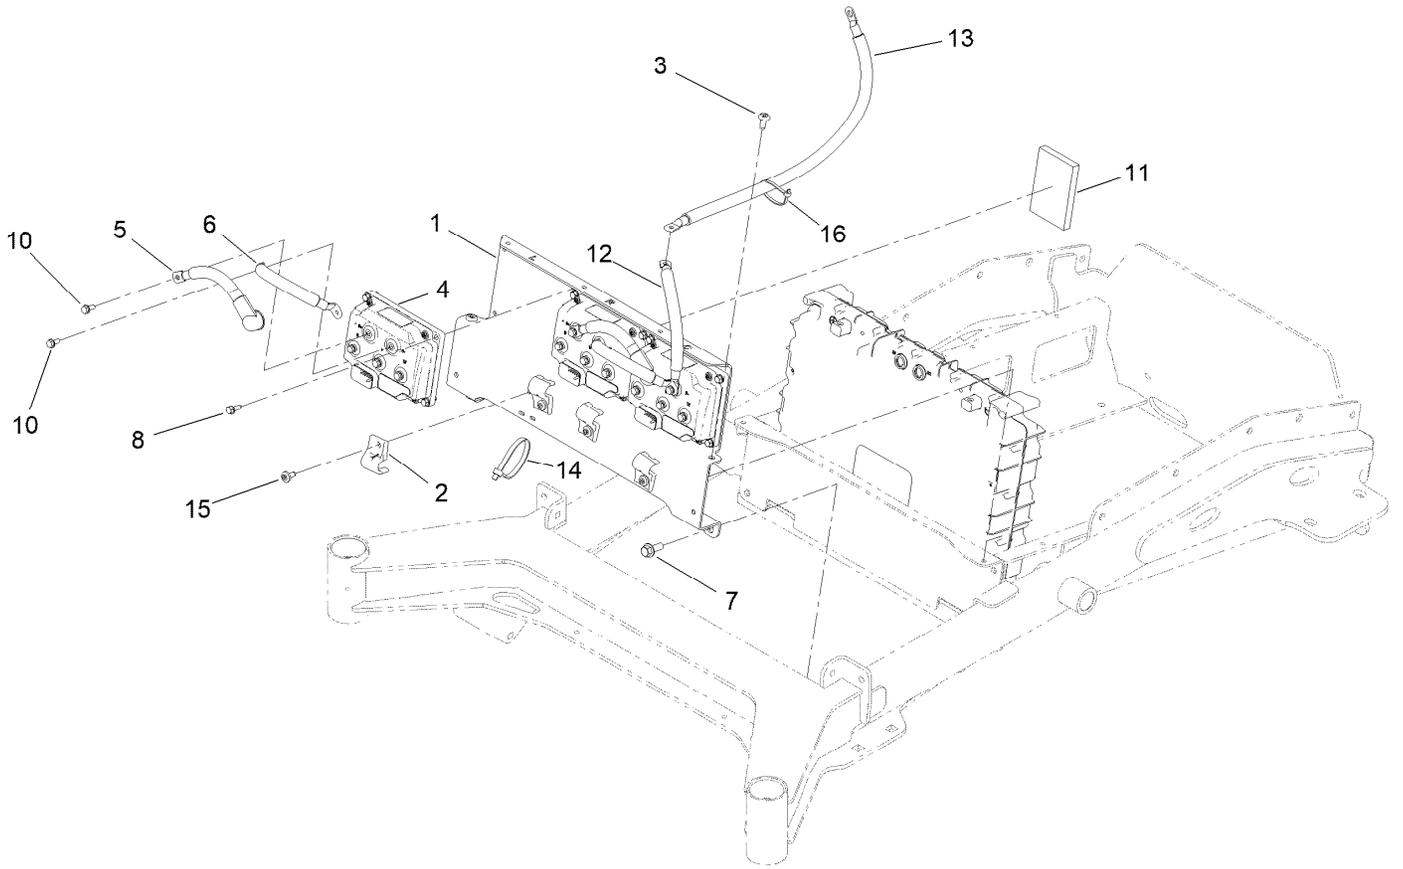

## Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-6956-03	1	Plate-Motor Controller Mnt	10	145-5782	15	Screw-Sems
2	145-6985	4	Mount-Cable	11	100-2196	1	Pad-Foam
3	138-9753	2	Screw	12	147-0241	1	Cable-Battery, Bk ASM
4	145-7270	3	Inv/Ctrlr-48V	13	147-0242	1	Cable-Battery, Bk ASM
5	147-0238	2	Cable-Battery, Rd ASM	14	3334-945	1	Tie-Cable
6	147-0239	2	Cable-Battery, Bk ASM	15	120-7950	4	Screw-Torx
7	3234-42	2	Screw-HHF	16	3290-379	1	Tie-Cable
8	32144-44	12	Screw-HWH, Thread Roll				


# Battery Cable Assembly

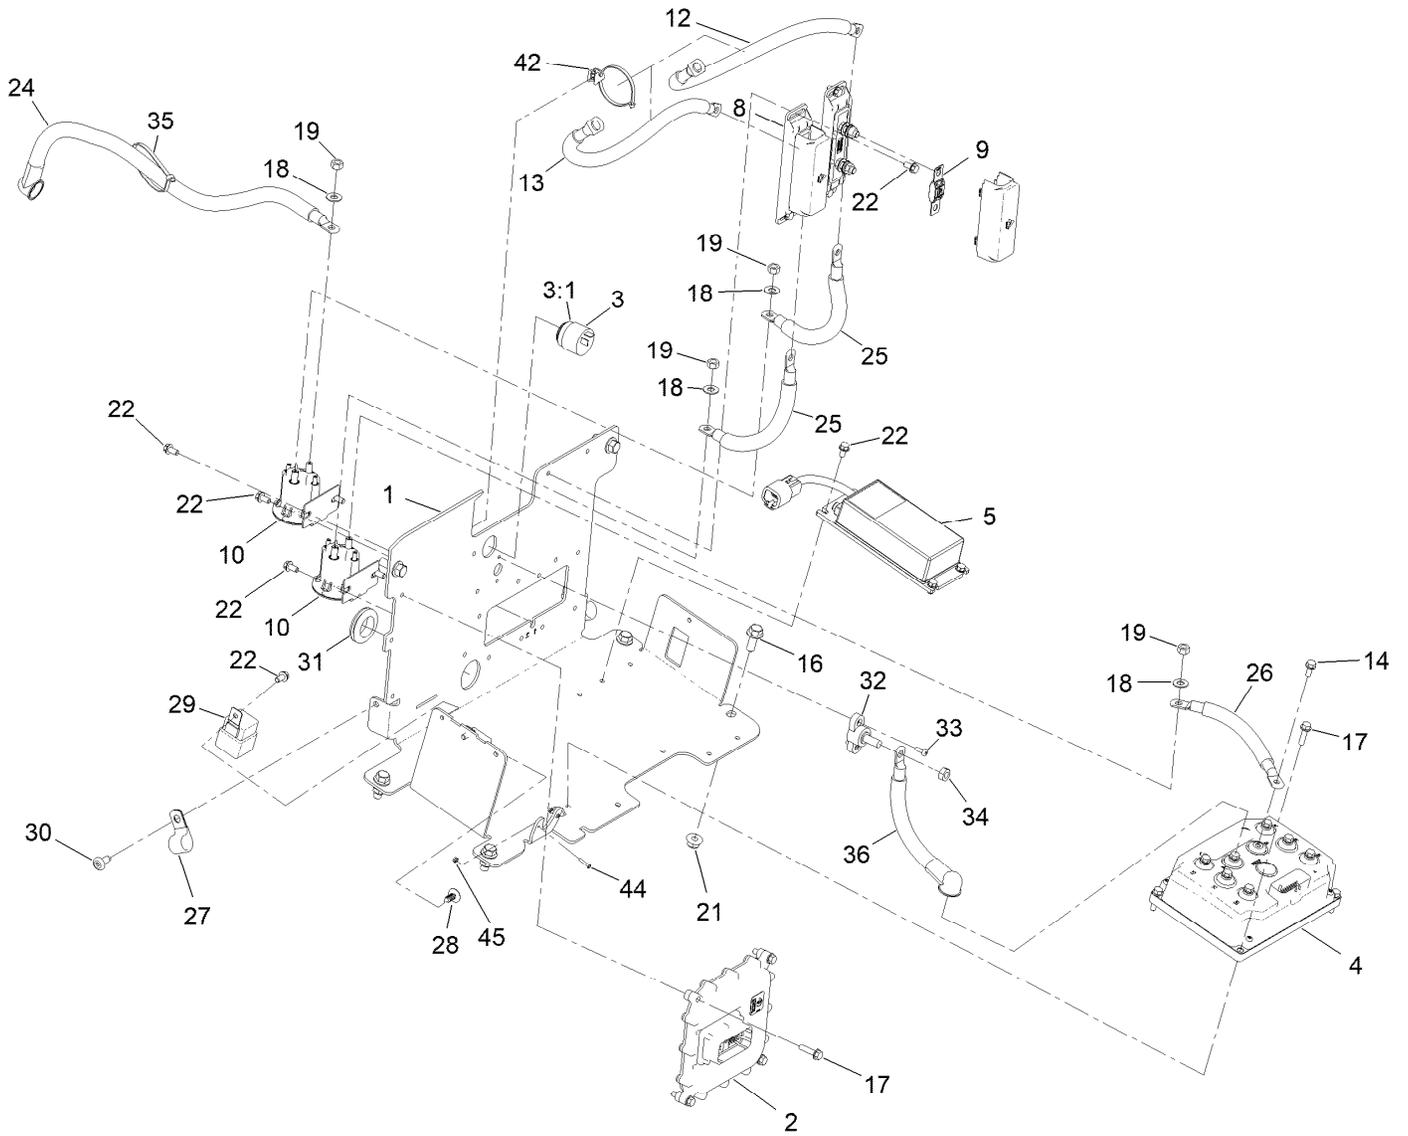

## Battery Cable Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3563-03	1	Plate-Mnt, Electrical	24	147-0228	1	Cable-Battery, Rd ASM
2	127-2770	1	Controller	25	147-0225	2	Cable-Battery, Rd ASM
3	80-9330	1	Audio Alarm ASM	26	147-0237	1	Cable-Battery, Rd ASM
3:1	104-5107	1	Nut-Plastic, Knurled	27	2412-4	2	Clamp-R
4	138-8984	1	Inv/Ctrlr-48V,Dual 94Arms	28	117-2382	1	Plug-Plastic
5	144-6975	1	Converter DC-DC	29	70-1480	2	Relay
8	145-4958	2	Holder-Fuse	30	138-9753	2	Screw
9	122-2561	2	Fuse-200A	31	120-3265	1	Grommet
10	145-3542	2	Contacto-DC, 12V	32	110-8823	1	Block-Junction
12	147-0332	1	Cable-Battery, Rd ASM	33	105-6849	2	Screw-Forming, Thread
13	147-0331	1	Cable-Battery, Rd ASM	34	3217-7	1	Nut-Hex
14	145-5782	8	Screw-Sems	35	3290-379	1	Tie-Cable
16	3234-42	6	Screw-HHF	36	147-0240	1	Cable-Battery, Bk ASM
17	32144-86	8	Screw-HWHTF	42	32180-150	1	Clip-Harness. Edge, W/Tie-Wrap
18	107-0279	4	Washer	44	1-3084	2	Screw-PPH
19	3219-2	4	Nut-Hex	45	9157324	2	Nut-Hex, NYL INS
21	104-8301	4	Nut-HF, NI				
22	32144-4	14	Screw-HWH				

# Control Panel and Harness Assembly

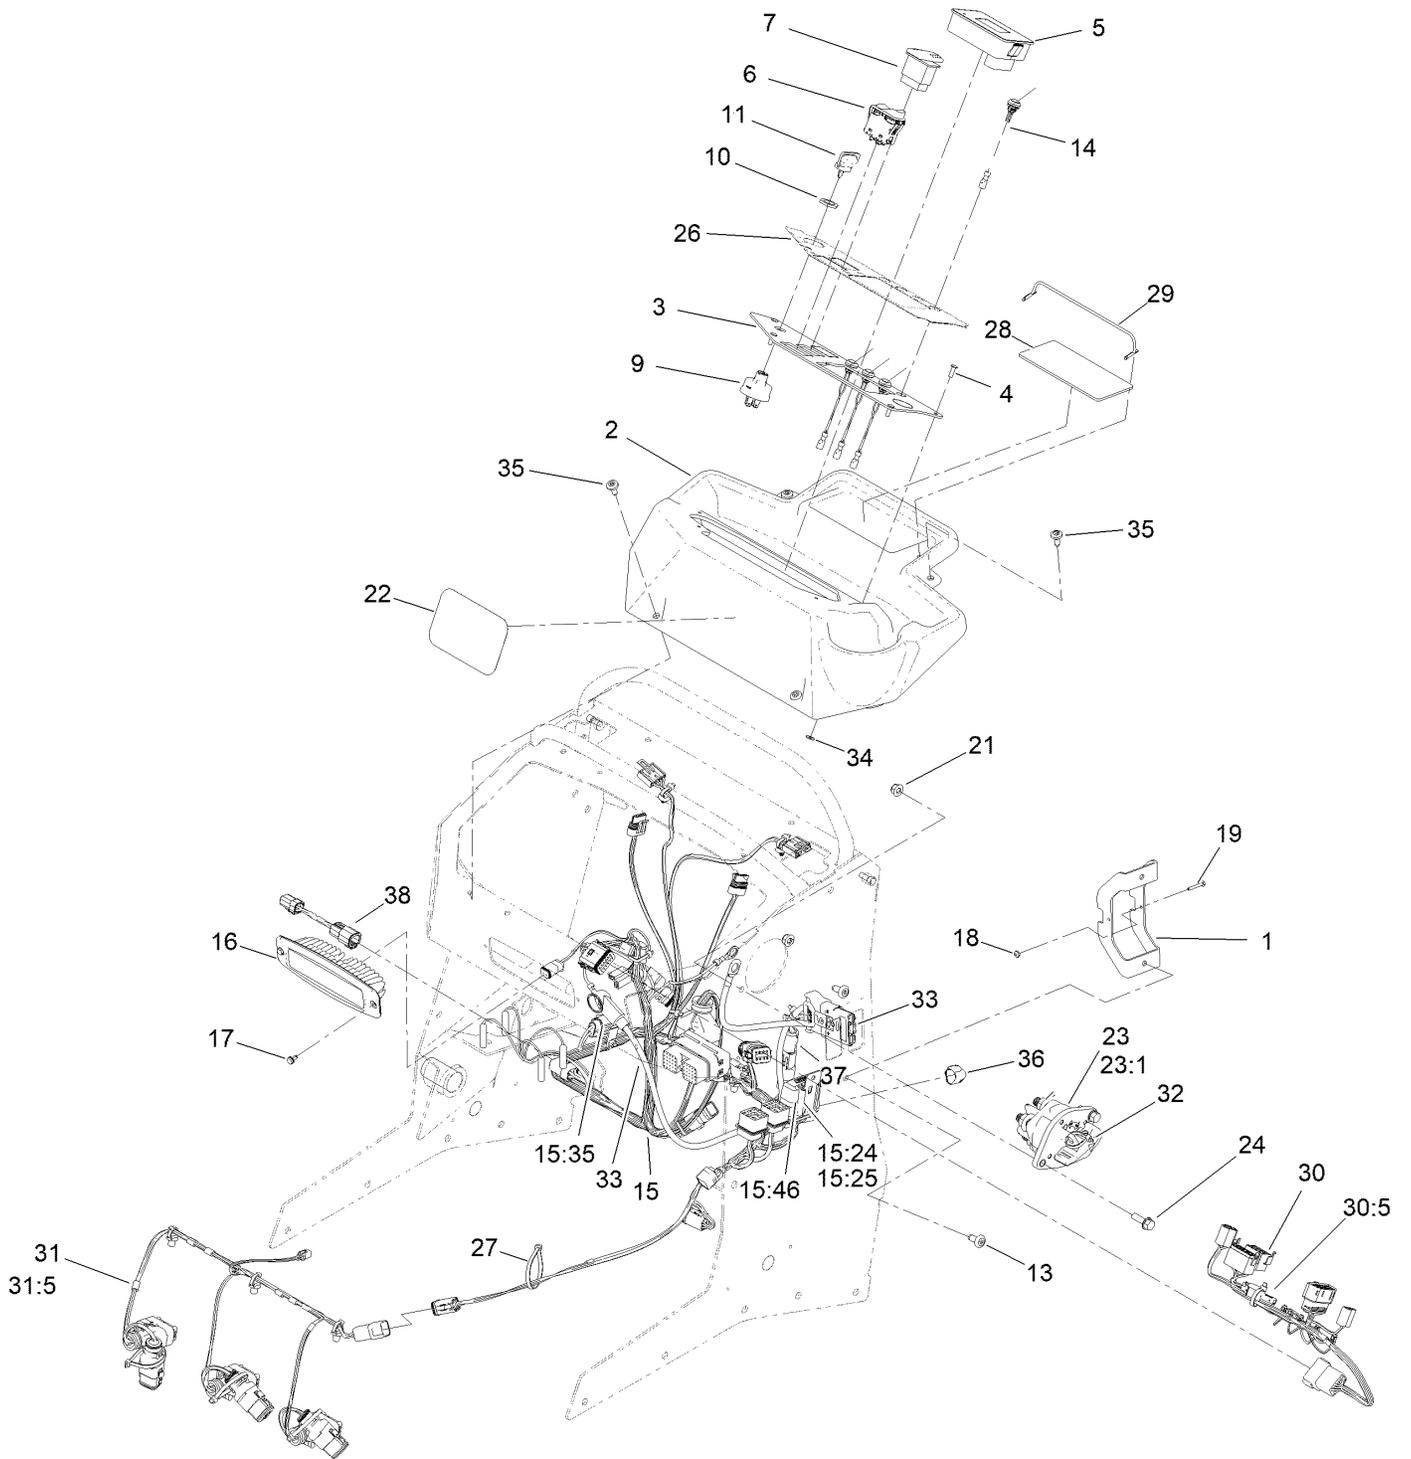

## Control Panel and Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3597-03	1	Bracket-Charger, Dual	21	104-8300	2	Nut-HF, NI
2	144-1576	1	Dash-Control Panel	22	94-2579	1	Decal
3	147-1685-03	1	Plate-Control Panel	23	122-0603	1	Switch-Disconnect
4	3269-4	4	Rivet-Pop	23:1	33006-00	1	Nut-HF
5	122-1201	1	Module-Display	24	3234-29	2	Screw-HHF
6	139-6367	1	Switch-Rocker, (On)-On-Off	26	147-1686	1	Decal-Panel, Control
7	95-8999	1	Switch-Rocker, On-None-On	27	3290-379	1	Tie-Cable
9	139-7716	1	Switch-Key, Spst	28	145-3410	1	Pad-Rubber, W/Adhesive
10	101884	1	Nut	29	144-6973	1	Strap-Elastic
11	63-8360	1	Key-Ignition	30	145-3411	1	Harness-Wire, Control Panel
13	138-9753	2	Screw	30:5	32180-282	1	Resistor-120 Ohm
14	136-9678	4	Switch-Pushbutton	31	145-3412	1	Harness-Wire, Deck
15	140-9567	1	Harness-Wire, Main	31:5	32180-282	1	Resistor-120 Ohm
15:24	121-8861	2	Fuse-Mini Blade, 2 Amp	32	3290-378	5	Tie-Cable
15:25	121-8864	3	Fuse-Mini Blade, 5 Amp ●	33	140-9596	1	Harness-Wire, Charger Port
15:35	117-4724	1	Fuse-Blade, 10A	34	3269-26	4	Washer-Plain
15:46	121-8865	1	Fuse-Mini Blade, 7.5 Amp	35	120-7950	4	Screw-Torx
16	139-8089	1	Mount-Flush, Light	36	32180-089	1	Cap-Plug, 3 Way
17	104-2065	2	Screw-HWH	37	112-1540	1	Ferrite-Snap On
18	3296-9	1	Nut-Hex	38	161-3544	1	Harness-Wire, Jumper
19	32105-9	1	Screw-HH				

● Not illustrated

# Attachments and Accessories

## For 18840TE GrandStand Revolution Mower with 122cm TURBO FORCE Rear Discharge Cutting Unit

<b>Product Name</b>	<b>Model/Part</b>
Turbo Baffle Kit .....	107-1634
HOC Set Blocks.....	133-1439
Kit, Stand-On Weight.....	147-0200
Wiring Harness Adapter Kit.....	147-1612
Soft Bag (3 Bushel).....	30104

**Notes:**

**Notes:**

**Notes:**



**Count on it.**