 




MODEL NO. 57300-2000001 & UP
MODEL NO. 57360-2000001 & UP

PARTS CATALOG

8 AND 11 H.P. LAWN TRACTOR ELECTRIC START

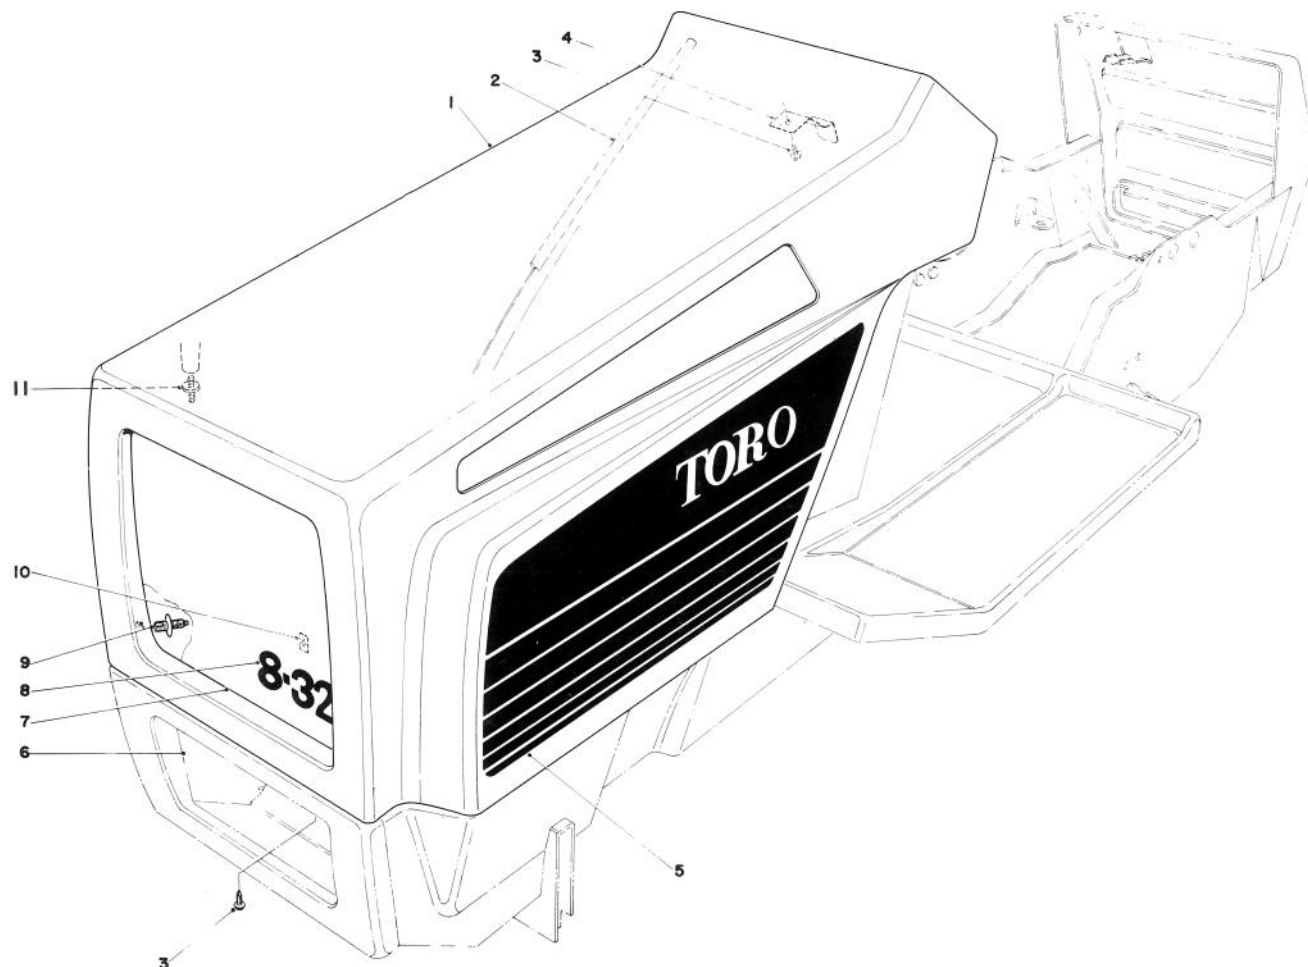


HOOD ASSEMBLY MODEL 57300

Ref. No.	Part No.	Description	No. Used
1	8-6679	Hood (Incl. Ref. #9 & 11)	1
2	28-3810	Rubber Extension — Seal	2
3	32104-76	Screw — Self Tapping	9
4	27-9130	Spring — Latch	1
5	28-4230	Decal — Hood L.H.	1
*	28-4240	Decal — Hood R.H.	1

Ref. No.	Part No.	Description	No. Used
6	28-0010	Lower Grille	1
7	36-2110	Grille — Hood	1
8	28-2660	Name Plate — Grille	1
9	27-9120	Stud — Hinge Bracket	4
10	3290-299	Tinnerman Nut	2
11	39-6800	Stud — Hood Duct	4

 *Not Illustrated

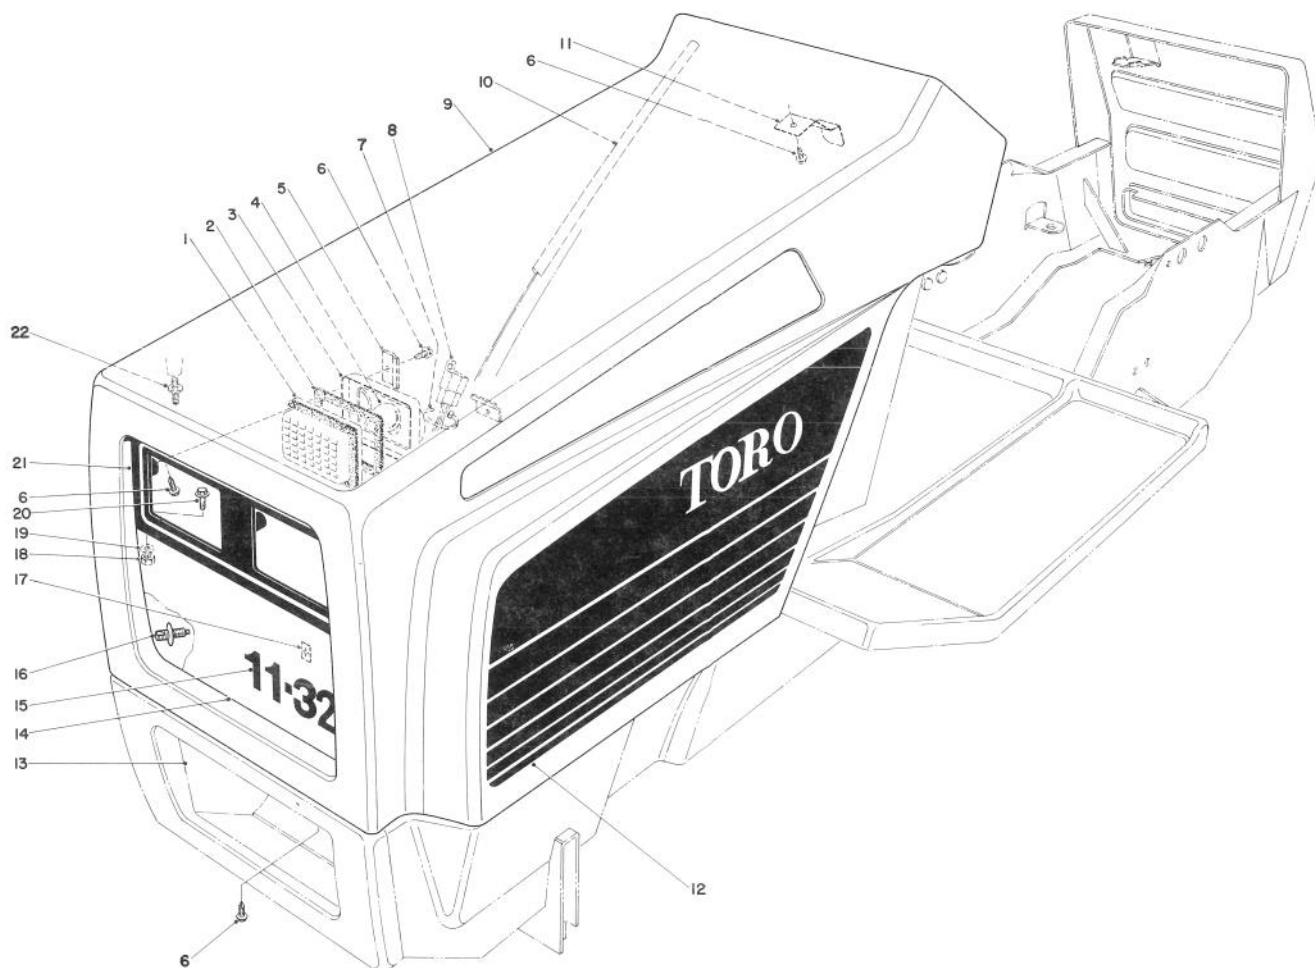


HOOD ASSEMBLY MODEL 57360

Ref. No.	Part No.	Description	No. Used
1	219-14	Lens	2
2	219-13	Lens Gasket	4
3	38-2580	Reflector	2
4		Bulb GE #1156	2
5	28-0050	Clamp — Headlight	3
6	32104-76	Self Tapping Screw	12
7	3290-378	Cable Tie	1
8	218-493	Connector Body	1
9	8-6679	Hood (Incl. Ref. #16 & 22)	1
10	28-3810	Rubber Extrusion — Seal	2
11	27-9130	Spring — Latch	1
12	28-4230	Decal — Hood L.H.	1

Ref. No.	Part No.	Description	No. Used
*	28-4240	Decal — Hood R.H.	1
13	28-0010	Grille — Lower	1
14	36-2090	Grille — Head Light	1
15	36-2510	Name Plate — Grille	1
16	27-9120	Stud — Hinge Bracket	4
17	3290-299	Tinnerman Nut	2
18	32153-1	Locknut	2
19	3256-21	Washer	2
20	3290-144	Hex Hd. Machine Screw	2
21	28-0040	Panel Headlight	1
22	39-6800	Stud — Hood Duct	4
*	8-3579	Headlight Assy. (Incl. Ref. #1-4)	2

 *Not Illustrated

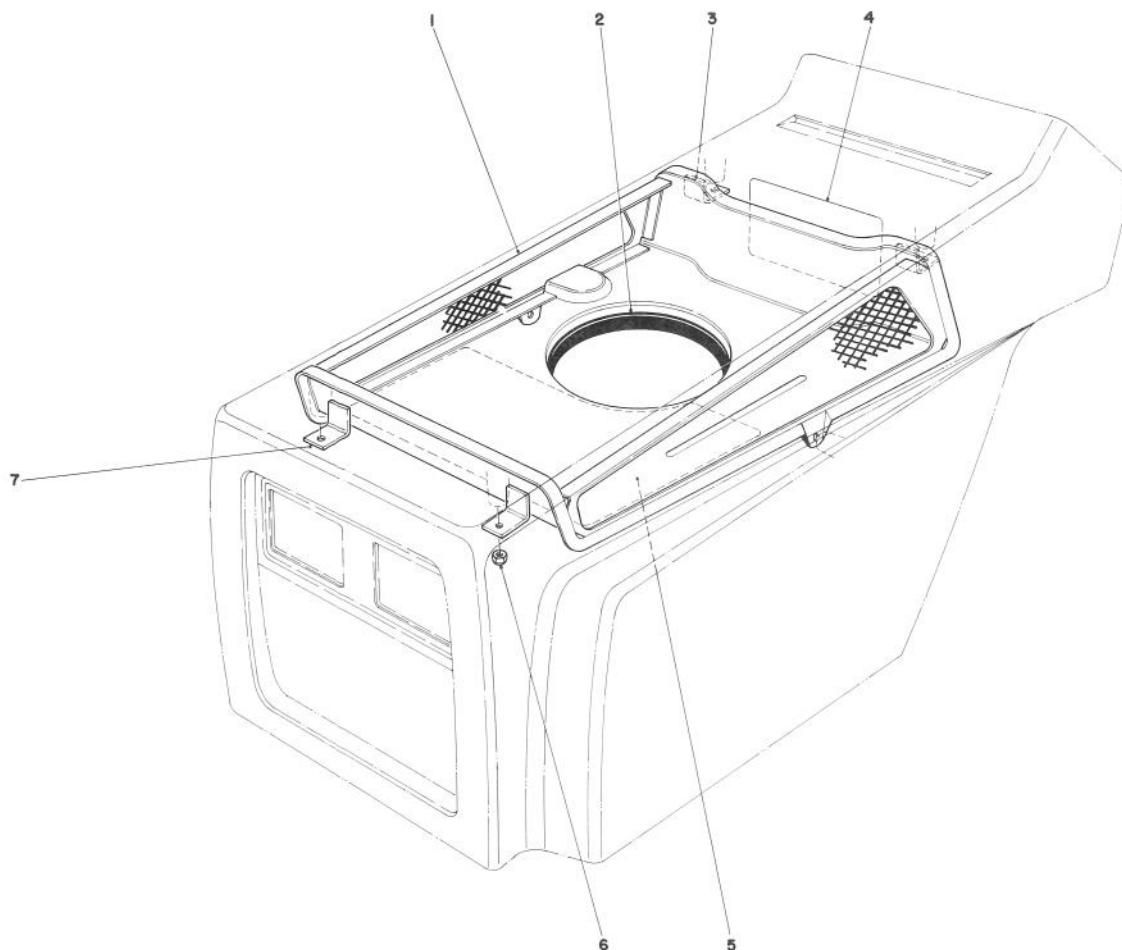


HOOD DUCT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	39-5090	Hood Duct (Model 57360)	1
*	39-5140	Hood Duct (Model 57300)	1
2	36-8160	Seal — Engine	1
3	39-8880	Bracket Rear Duct Support	2

Ref. No.	Part No.	Description	No. Used
4	44-5860	Decal — Belt Change	1
5	36-5190	Decal — Service	1
6	32152-4	Locknut	4
7	39-5340	Bracket Duct Support	2

 *Not Illustrated

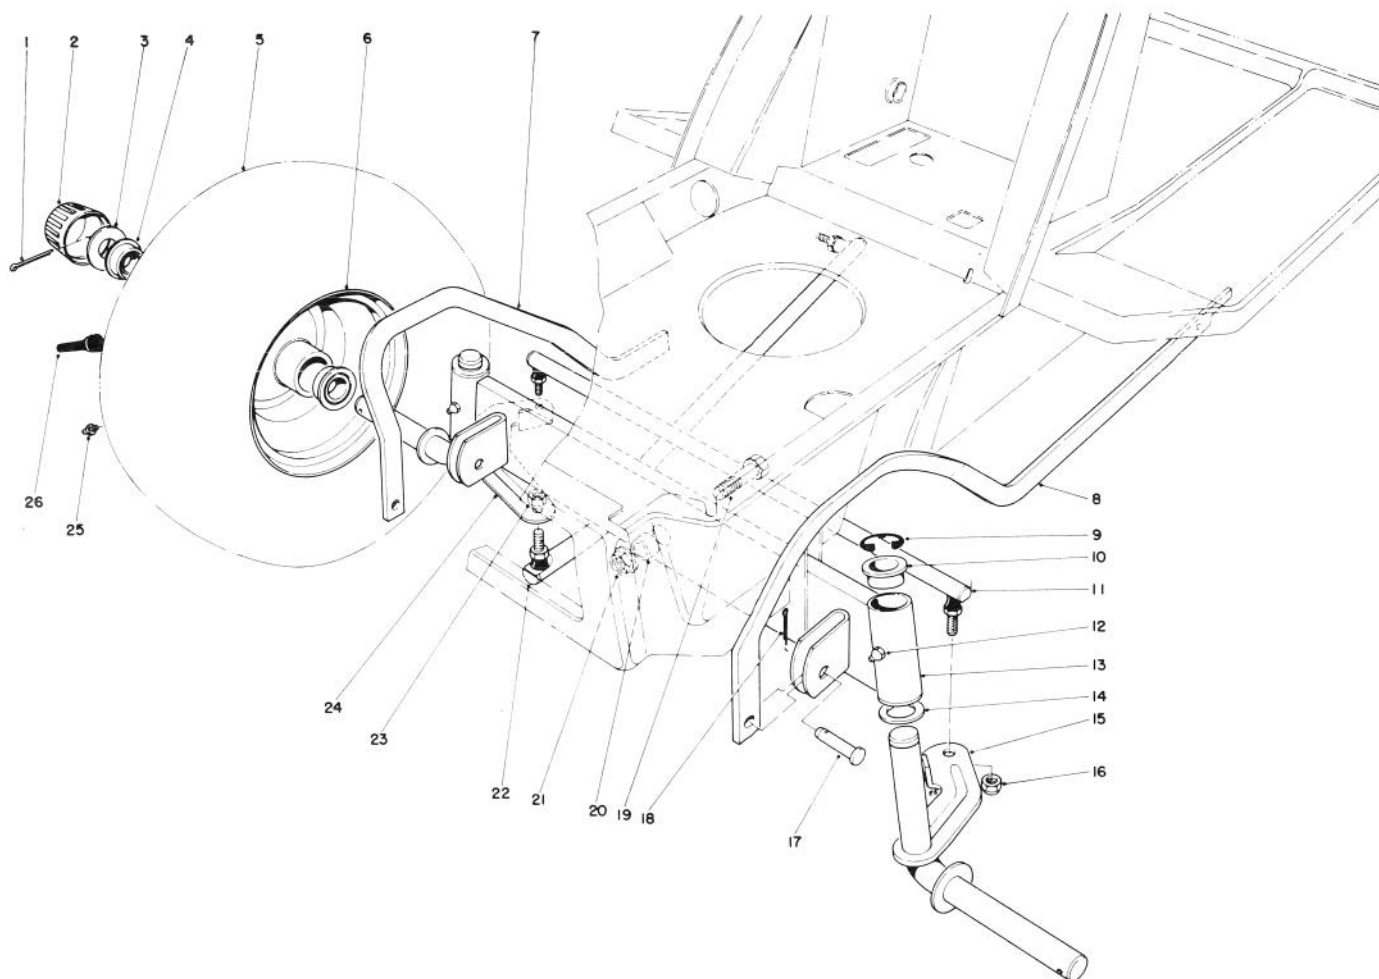


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-12	Cotter Pin	2
2	28-0060	Hub Cap	2
3	28-2480	Washer	2
4	251-210	Ball Bearing	4
5	231-94	Tire	2
6	242-60	Rim	2
7	28-0200	Parallel Link R.H.	1
8	28-0210	Parallel Link L.H.	1
9	32151-48	E. Ring	2
10	27-9080	Flange Bearing	4
11	28-0070	Tie Rod Steering	1
12	302-49	Grease Fitting	2
13	36-1500	Front Axle (Incl. Ref. #10)	1
14	3-6498	Thrust Washer	2

Ref. No.	Part No.	Description	No. Used
15	36-1560	Spindle L.H.	1
16	3296-20	Locknut	2
17	283-2	Clevis Pin	2
18	3272-6	Cotter Pin	2
19	325-6	Capscrew	1
20	28-0380	Spacer Front Axle	1
21	32128-23	Flange Nut	1
22	39-1910	Steering Arm	1
23	3296-5	Locknut	1
24	36-1550	Spindle R.H.	1
25	302-5	Grease Fitting	2
26	232-27	Valve Stem w/Cap	2
*	232-38	Inner Tube (Optional)	2

 *Not Illustrated

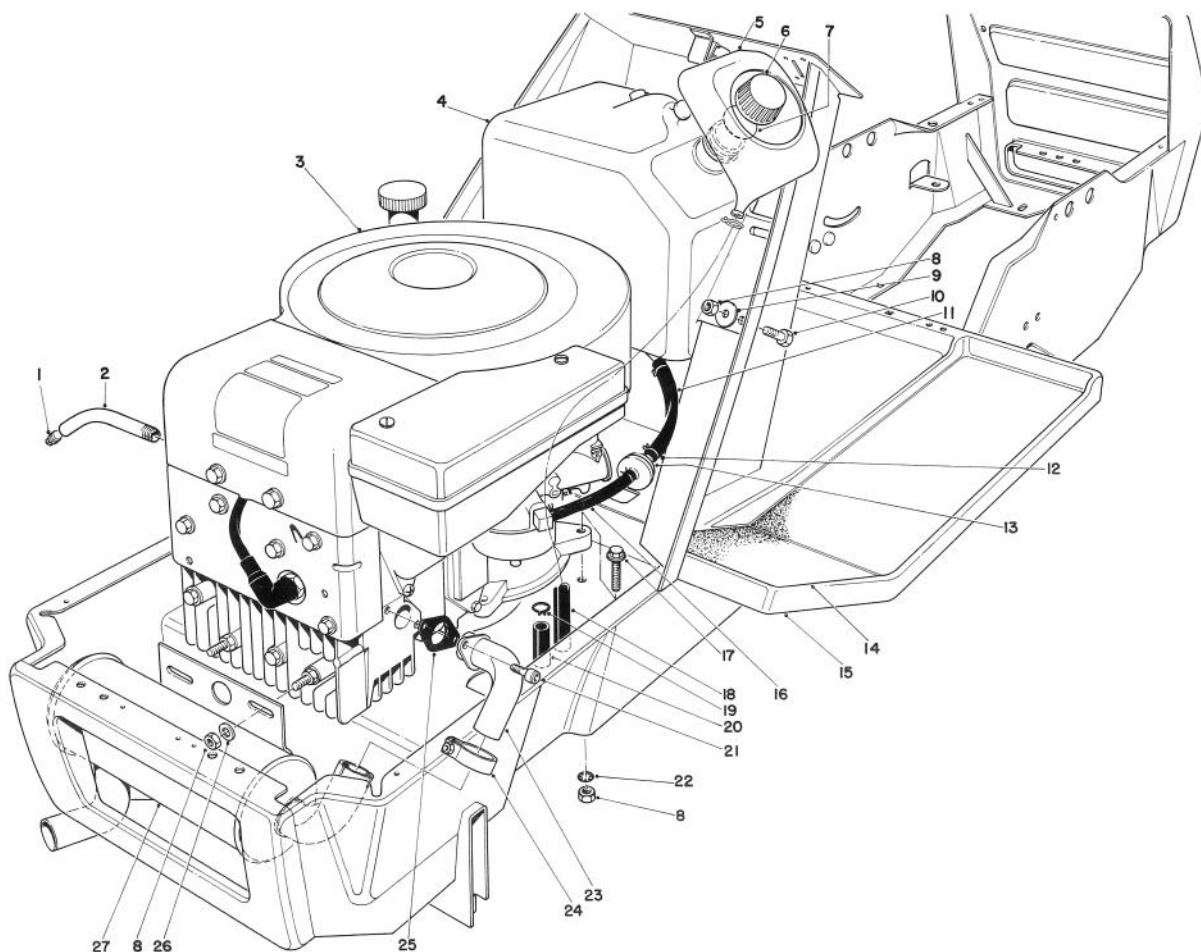


ENGINE ASSEMBLY MODEL 57300

Ref. No.	Part No.	Description	No. Used
1	281-1	Pipe Plug	1
2	28-8650	Drain Tube - Oil	1
3	221-714	Engine	1
4	44-8230	Gas Tank (Incl. Ref. #5)	1
5		Funnel - Overflow	1
6	28-9680	Gas Cap (Incl. Ref. #7)	1
7	28-9670	Gasket - Gas Cap	1
8	32152-1	Locknut	10
9	5-1350	Washer	4
10	322-3	Cap Screw	4
11	44-8190	Gas Hose	1
12	2412-33	Hose Clamp	4
13	42-5240	Fuel Filter	1
14	27-9050	Foot Tread - L.H.	1
*	27-9040	Foot Tread - R.H.	1
15	44-8130	Frame	1

Ref. No.	Part No.	Description	No. Used
16	42-5220	Gas Hose	1
17	322-7	Capscrew	4
18	39-4030	Hose - Funnel	1
19	2412-62	Hose Clamp	2
20	39-4040	Hose - Carburetor Drain	1
21	3274-52	Hex Socket Capscrew	2
22	3254-2	Lockwasher	4
23	28-0170	Exhaust Pipe	1
24	28-4200	Clamp - Exhaust Pipe	1
25†		Exhaust Gasket	1
26	3256-23	Washer	2
27	27-9070	Muffler	1
*	3290-378	Cable Tie	2
*	36-7880	Muffler - Spark Arrestor (Optional)	1
*	8-7189	Loose Parts	1

*Not Illustrated

 †Obtain from local Briggs & Stratton dealer.

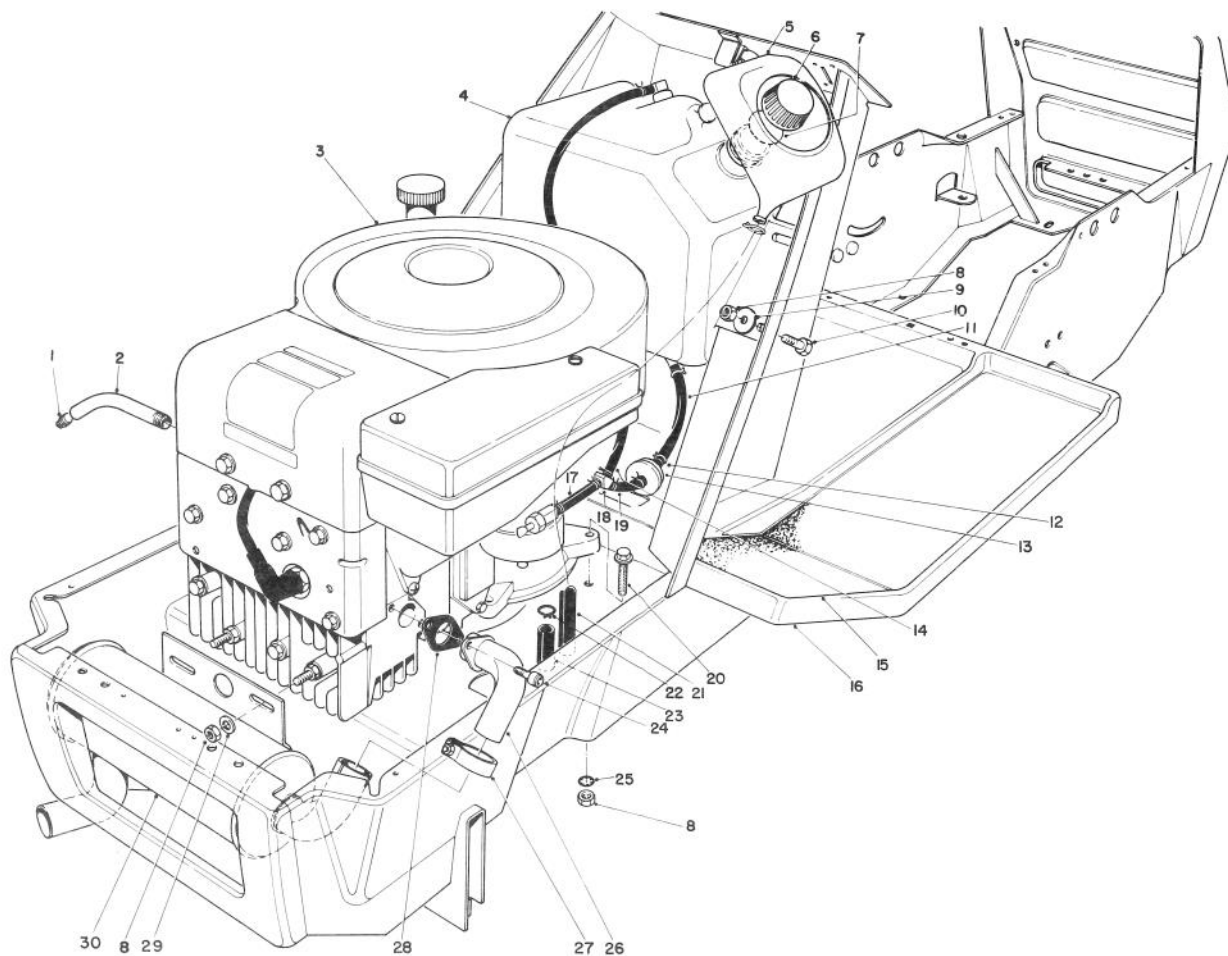


ENGINE ASSEMBLY MODEL 57360

Ref. No.	Part No.	Description	No. Used
1	281-1	Pipe Plug	1
2	28-8650	Drain Tube Oil	1
3	221-715	Engine	1
4	44-8240	Gas Tank Assy. (Incl. Ref. #5)	1
5		Funnel - Overflow	1
6	28-9680	Gas Cap Assy. (Incl. Ref. #7)	1
7	28-9670	Gasket - Gas Cap	1
8	32152-1	Locknut	10
9	5-1350	Washer	4
10	322-3	Capscrew	4
11	44-8190	Hose - Gas	1
12	2412-33	Clamp - Hose	8
13	42-5240	Fuel Filter	1
14	42-5200	Hose - Gas Return	1
15	27-9050	Foot Tread L.H.	1
*	27-9040	Foot Tread R.H.	1
16	44-8130	Frame	1
17	42-5230	Hose - Gas	1

Ref. No.	Part No.	Description	No. Used
18	353-778	Fitting - Barbed Y	1
19	42-5210	Hose - Gas	1
20	322-7	Capscrew	4
21	39-4030	Hose - Funnel	1
22	2412-62	Clamp Hose	2
23	39-4040	Hose - Carburetor Drain	1
24	3274-53	Hex Socket Capscrew	2
25	3254-2	Lockwasher	4
26	28-0290	Exhaust Pipe	1
27	23-7760	Clamp - Exhaust Pipe	1
28†		Exhaust Gasket	1
29	3256-23	Washer	2
30	28-0300	Muffler	1
*	3290-378	Cable Tie	2
*	36-7890	Muffler - Spark Arrester (Optional)	1
*	8-7219	Loose Parts	1

*Not Illustrated

 †Obtain from local Briggs & Stratton dealer.

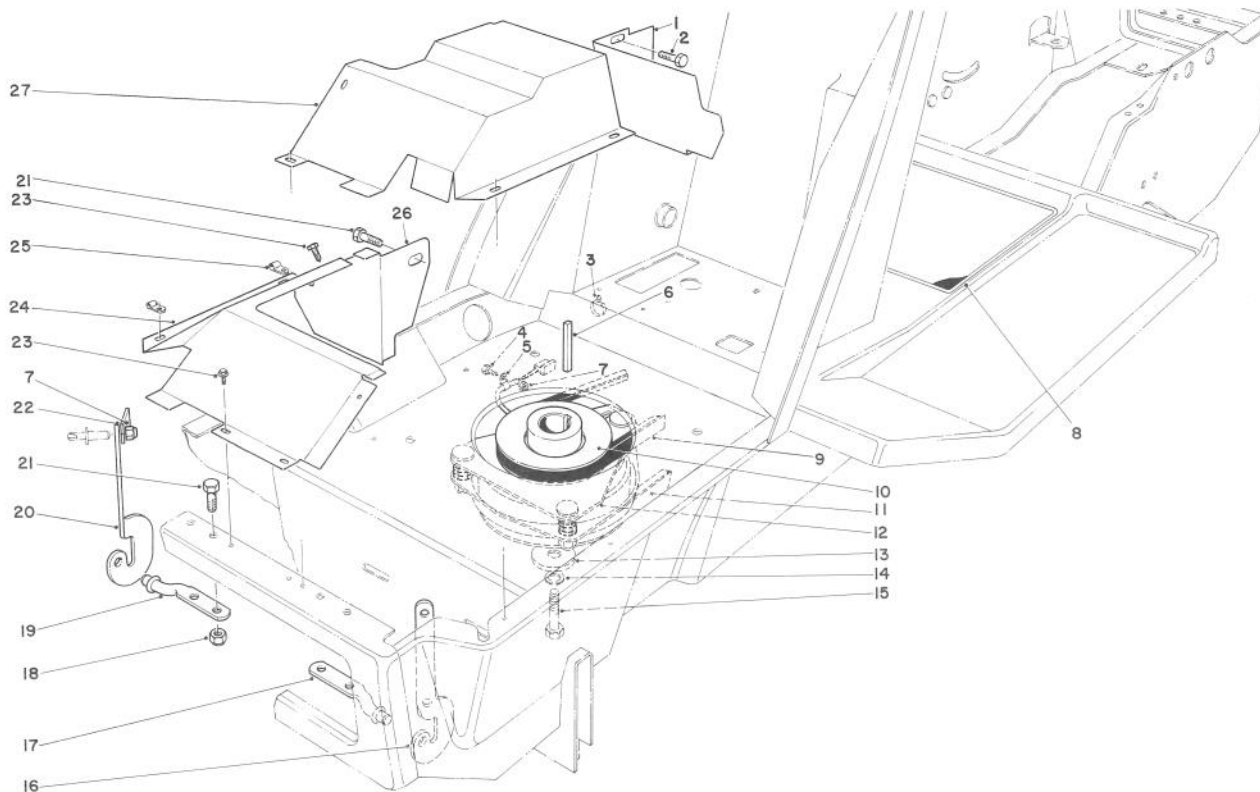


CLUTCH & PULLEY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-3990	Support — Exhaust Shield (Model #57360)	1
*	28-3870	Support — Exhaust Shield (Model #57300)	1
2	321-3	Capscrew	1
3	3290-410	Push Mount Tie	1
4	321-4	Capscrew	1
5	2412-66	Clamp	1
6	5-1336	Square Key	1
7	32152-4	Locknut	5
8	44-5850	Decal — Operation	1
9	28-2650	V-Belt — Traction	1
10	44-5940	Pulley — Ground Drive	1
11	28-5250	V-Belt — Deck	1
12	44-0770	Clutch Assembly — Deck	1
13	44-8160	Washer	1
14	3253-22	Lockwasher	1
15	3212-24	Capscrew	1

Ref. No.	Part No.	Description	No. Used
16	28-0120	Bracket — Hinge L.H.	1
17	28-0110	Hinge Pin — Hood L.H.	1
18	32152-1	Locknut	4
19	28-0100	Hinge Pin — Hood R.H.	1
20	28-0130	Bracket — Hinge R.H.	1
21	322-2	Capscrew	5
22	37-0170	Bracket — Screen Support	2
23	32104-76	Screw — Self Tapping	12
24	33-0840	Heat Shield (Model #57360)	1
*	33-0950	Heat Shield (Model #57300)	1
25	2412-51	Clamp (Model #57360)	2
26	28-3980	Support — Heat Shield (Model #57360)	1
*	28-3900	Support — Heat Shield (Model #57300)	1
27	33-0820	Heat Shield (Model #57360)	1
*	33-0940	Heat Shield (Model #57300)	1

 
*Not Illustrated

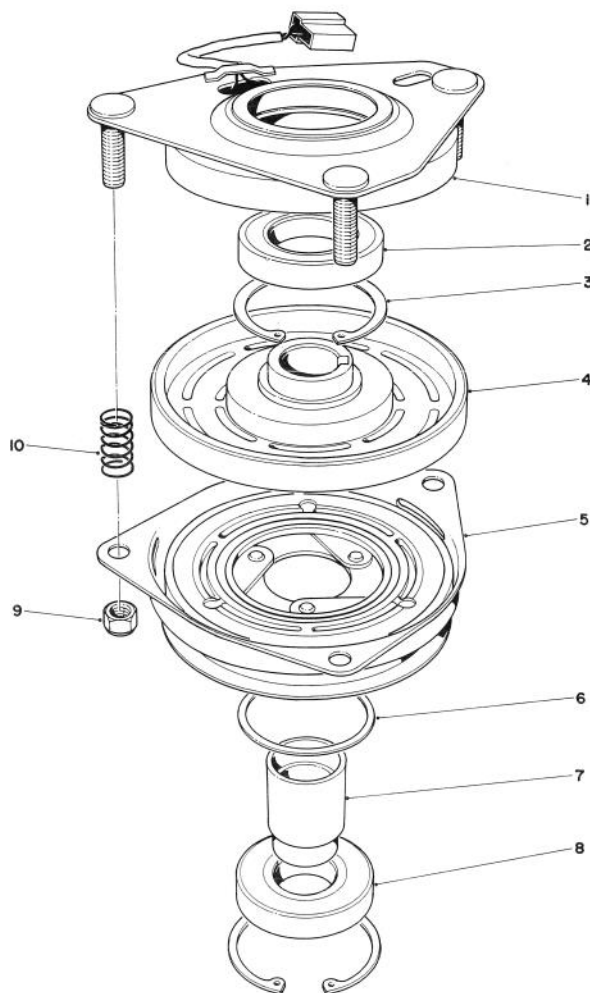

CLUTCH ASSEMBLY NO. 44-0770

Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Assembly (Incl. Ref. #2 & 3)	1
2	251-292	Bearing — Field	1
3	44-8310	Retaining Ring	2
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1


Ref. No.	Part No.	Description	No. Used
5	44-8370	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)	1
6	44-8330	Spacer — Pulley Bearing	1
7	44-8340	Bearing Collar	1
8	251-291	Bearing — Pulley	1
9	3296-6	Locknut	3
10	44-8320	Spring	3

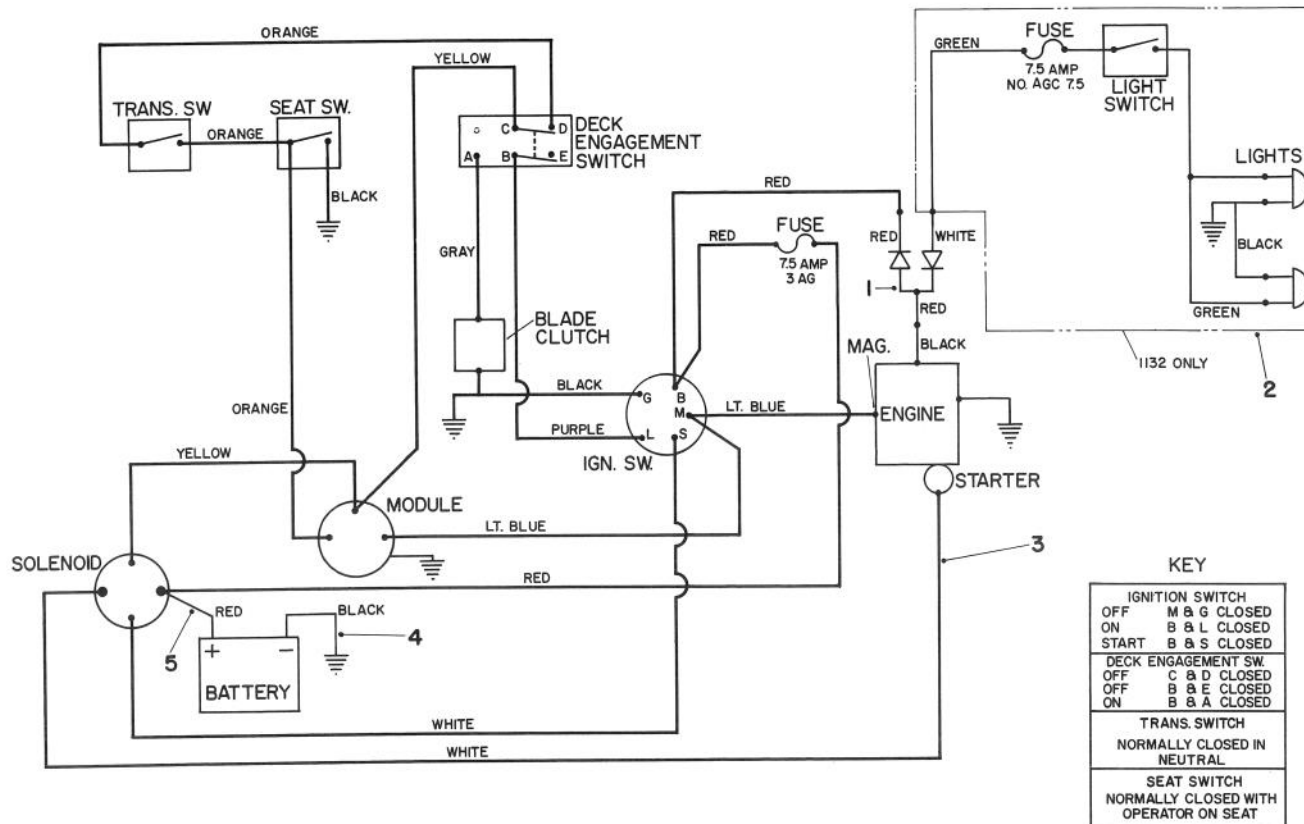 

ELECTRICAL DIAGRAM

Ref. No.	Part No.	Description	No. Used
1	44-0750	Wire Harness — Diode	1
2	38-1030	Wire Harness — Lights (Model #57360)	1
3	44-0740	Wire Harness	1


Ref. No.	Part No.	Description	No. Used
4	44-8110	Wire Assembly (Battery to Ground)	1
5	28-3890	Wire Assembly (Battery to Solenoid)	1

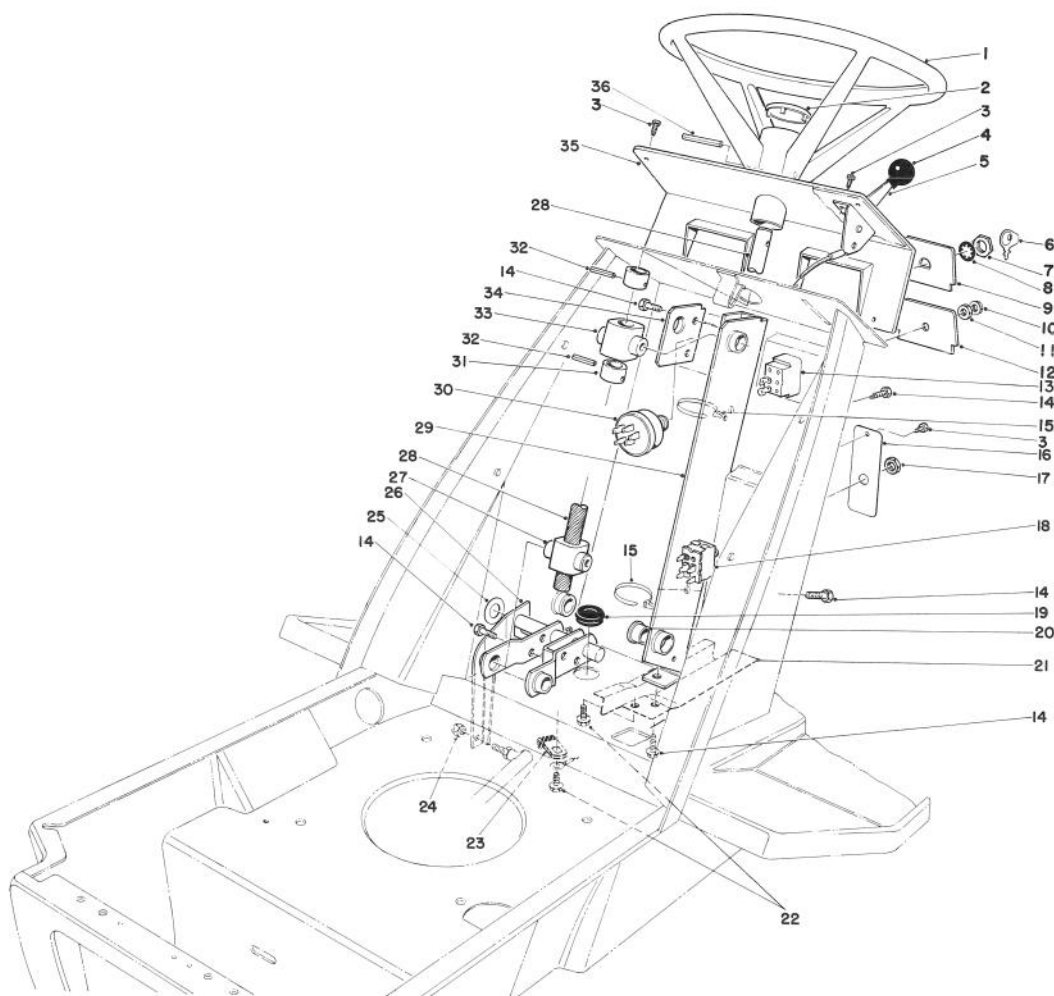 

STEERING WHEEL & DASH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	38-0830	Steering Wheel	1
2	38-1010	Insert — Steering Wheel (Model #57360)	1
*	38-1000	Insert — Steering Wheel (Model #57300)	1
3	32104-76	Screw — Self Tapping	8
4	233-25	Knob	1
5	38-0990	Throttle Control (Incl. Ref. #4)	1
6	218-412	Key	2
7	218-461	Nut	1
8	3254-5	Lockwasher	1
9	28-2690	Insert — Dash Panel (Ignition)	1
10	218-497	Beveled Facenut	1
11	218-498	Locknut	1
12	28-2510	Insert — Dash Panel (lights) (Model #57360)	1
*	28-2500	Insert — Dash Panel (Model #57300)	1
13	28-4110	Light Switch (Model #57360) (Incl. Ref. #10 & 11)	1
14	32144-11	Self Tapping Screw	7
15	3290-410	Push Mount Tie (Incl. w/Wire Harness)	3


Ref. No.	Part No.	Description	No. Used
16	44-5710	Plate — Clutch Switch	1
17	218-500	Nut	1
18	37-2610	Switch — Clutch (Incl. Ref. #17)	1
19	237-100	Grommet (Incl. w/Wire Harness)	1
20	27-9080	Flange Bearing	2
21	36-1570	Shield Wire Harness	1
22	32144-10	Screw — Thread Forming	2
23	18-2970	Clamp	1
24	3296-5	Locknut	1
25	11-6240	Washer	1
26	36-3470	Steering Link	1
27	37-0140	Follower — Steering Shaft	1
28	38-5310	Shaft — Steering	1
29	36-2040	Bracket Steering	1
30	23-0660	Ignition Switch (Incl. Ref. #6-8)	1
31	28-3940	Collar — Steering Shaft	2
32	32121-31	Roll Pin	2
33	37-0150	Bearing — Steering Shaft	1
34	28-0390	Bearing Support — Steering	1
35	28-2460	Panel — Dash	1
36	32121-78	Roll Pin	1

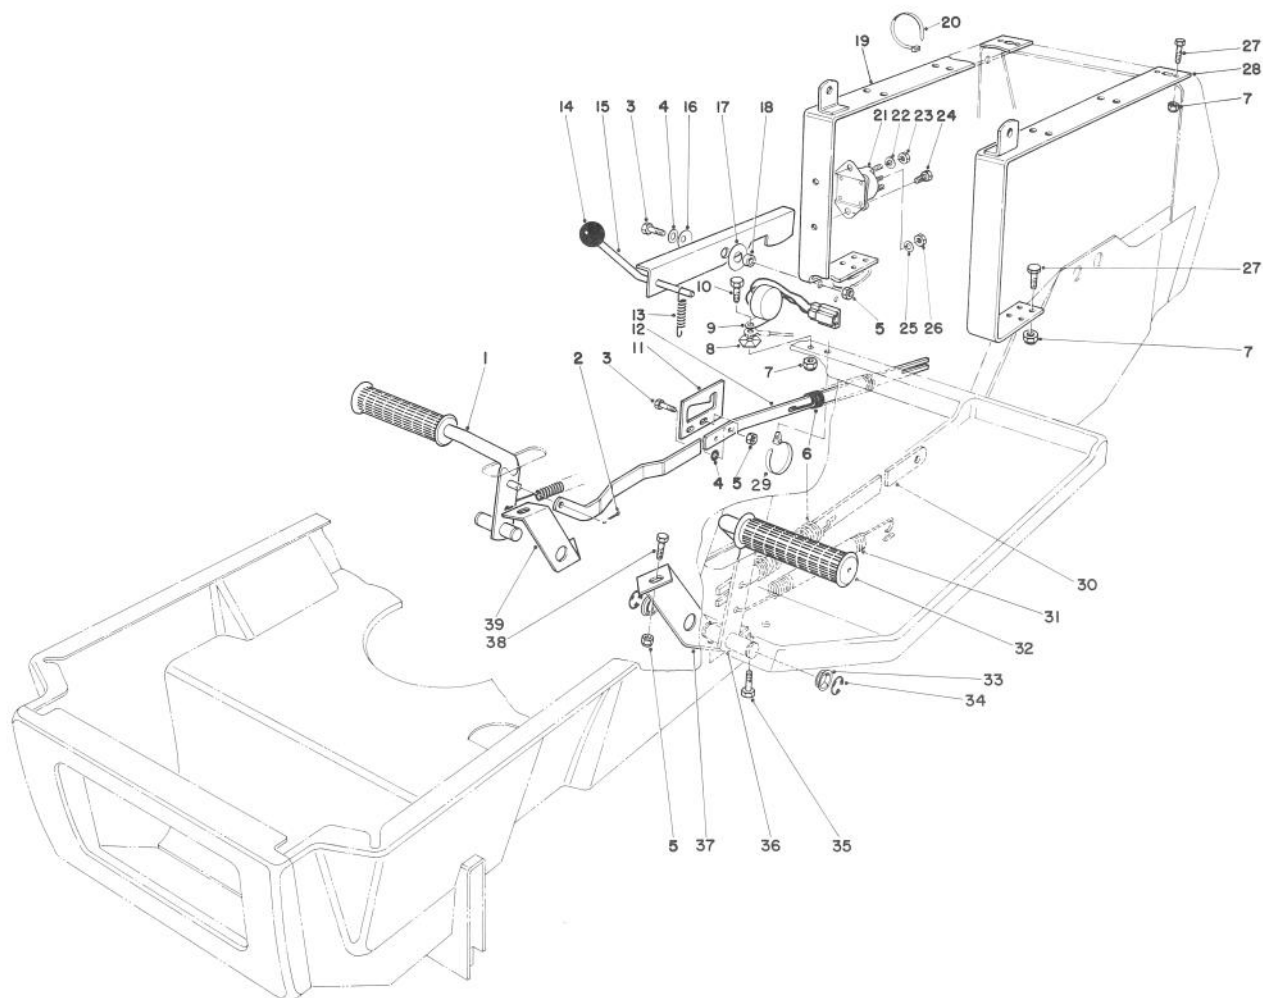 

BRAKE & CLUTCH PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-2530	Brake Pedal	1
2	3272-10	Cotter Pin	1
3	322-3	Capscrew	3
4	3256-23	Washer	3
5	32152-1	Locknut	5
6	27-8950	Spring — Extension	2
7	32152-4	Locknut	9
8	3290-257	Pyramidal Washer	1
9	28-7890	Module — Interlock	1
10	321-4	Capscrew	1
11	28-9370	Latch Plate — Brake Rod	1
12	28-9350	Link — Brake Rod	1
13	8-9900	Spring — Control Rod	1
14	233-42	Knob	1
15	28-2570	Parking Brake Lever	1
16	3290-413	Belleville Washer	1
17	28-2450	Washer	1
18	28-2440	Spacer	1
19	38-0940	Strap — Rear Body R.H.	1
20	3290-378	Cable Tie	1


Ref. No.	Part No.	Description	No. Used
21	28-4210	Solenoid	1
22	3253-4	Lockwasher	2
23	3218-13	Nut	2
24	32144-10	Screw Thread Forming	2
25	3219-14	Nut	2
26	3253-17	Lockwasher	2
27	321-3	Capscrew	8
28	38-0950	Strap — Rear Body L.H.	1
29	3290-410	Pushmount Tie	1
30	28-0430	Link Clutch Rod	1
31	27-8890	Spring — Return	2
32	28-2470	Pad — Foot	2
33	256-258	Nyliner	4
34	32120-19	E-Ring	4
35	32144-11	Self Tapping Screw	4
36	28-2520	Clutch Pedal	1
37	28-0420	Support Pedal	1
38	322-2	Capscrew	2
39	28-0410	Support Pedal R.H.	1

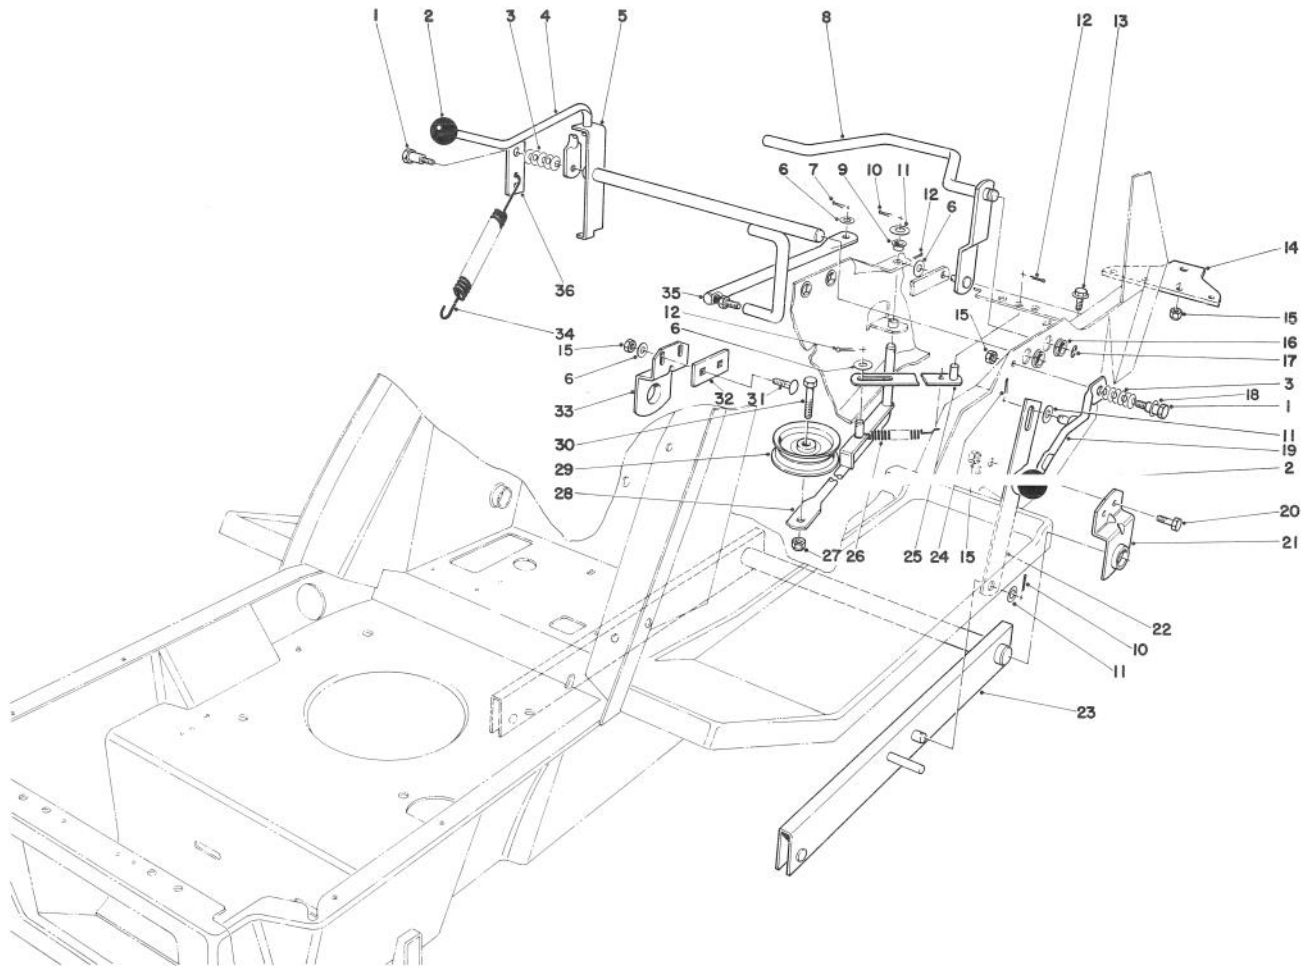 

SHIFT & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0540	Shoulder Bolt	2
2	233-48	Knob	2
3	3290-413	Belleville Washer	11
4	28-2190	Shift Lever	1
5	28-2590	Shift Lever	1
6	3256-23	Washer	5
7	3272-6	Cotter Pin	1
8	27-9090	Clutch Actuator	1
9	256-257	Flanged Nyliner	2
10	3272-11	Cotter Pin	2
11	3256-26	Washer	3
12	3272-10	Cotter Pin	3
13	3234-5	Hex Flange Capscrew	4
14	28-2250	Plate — Hitch	1
15	32152-1	Locknut	9
16	256-258	Nyliner	4
17	32120-19	E-Ring	2
18	3256-4	Washer	1
19	28-2180	Height-of-Cut Handle	1

Ref. No.	Part No.	Description	No. Used
20	322-2	Capscrew	2
21	28-4050	Retainer — Pivot Bar L.H.	1
22	28-0400	Strap Height-of-Cut	1
23	27-9180	Pivot Bar	1
24	3272-7	Cotter Pin	1
25	28-2270	Spring Retainer	1
26	28-2340	Spring — Deck Tension	1
27	32152-2	Locknut	1
28	28-0500	Idler Arm	1
29	36-1020	Idler Pulley	1
30	323-10	Capscrew	1
31	3230-2	Carriage Bolt	2
32	38-6610	Spacer	1
33	28-4060	Retainer — Pivot Bar R.H.	1
34	27-8960	Spring — Deck Engagement	1
35	28-2210	Shift Arm	1
36	28-9400	Bracket — Counter Balance Spring	1

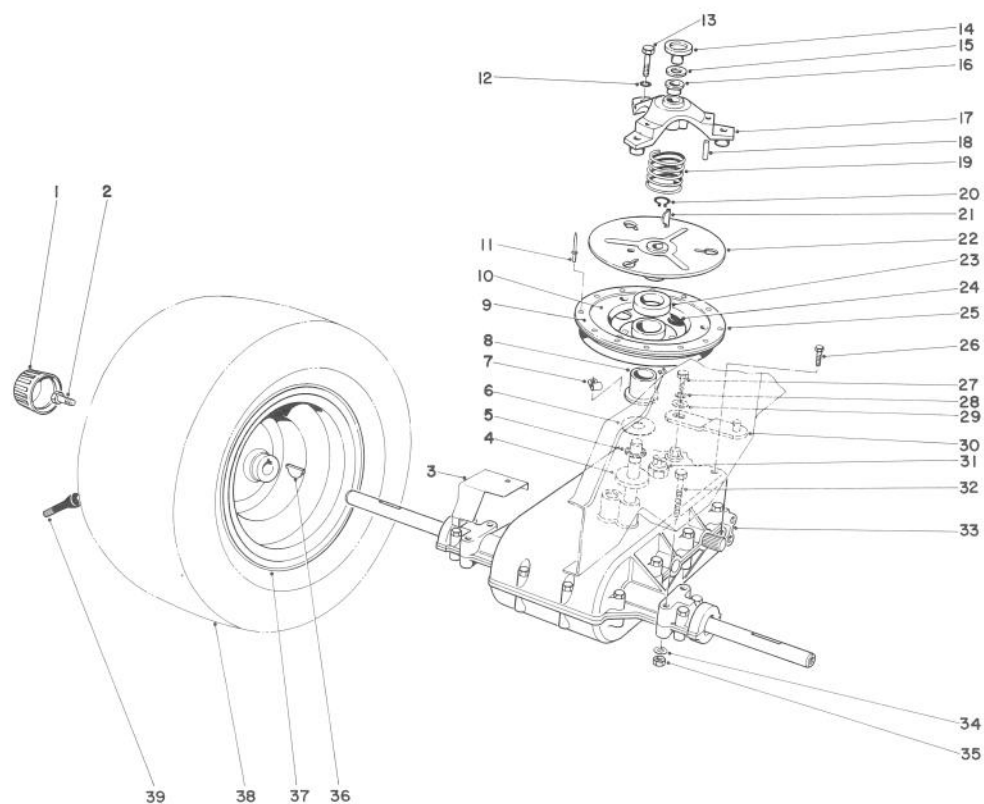 


TRANSAXLE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0060	Hub Cap	2
2	36-4030	Capscrew	2
3	29-6940	Shield — Grass	1
4	39-4770	Spacer	1
5	252-58	Thrust Bearing	1
6	27-8820	Thrust Washer	1
7	18-2970	Clamp	1
8		Bushing	1
9	27-8800	Clutch Pad	1
10	40-4630	Retainer Ring	1
11	3269-3	Rivet	12
12	3254-8	Lockwasher	3
13	321-5	Capscrew	3
14	36-2130	Cap Clutch	1
15	252-94	Thrust Race	1
16	256-259	Bushing	1
17	28-2560	Clutch Cover (Incl. Ref. #16 & 18)	1
18	252-92	Needle — Roller	3
19	36-2220	Spring Compression	1
20	32120-64	Retaining Ring	1

Ref. No.	Part No.	Description	No. Used
21	3257-30	Key	1
22	27-9030	Clutch Plate	1
23	28-4220	Felt Washer	1
24	2410-40	Plug	3
25	11-0119	Sheave Assembly (Incl. Ref. #8-11)	1
26	32144-11	Self Tapping Screw	2
27	329-2	Capscrew	1
28	3253-3	Lockwasher	1
29	3256-22	Washer	1
30	28-2380	Shift Bracket	1
31	28-4250	Switch — Neutral	1
32	322-11	Capscrew	4
33	42-5160	Transaxle	1
34	3256-23	Washer	4
35	32152-1	Locknut	4
36	3257-40	Hi Pro Key	2
37	242-61	Rim	2
38	231-93	Tire	2
39	232-27	Valve Stem & Cap	2
*	231-91	Tube (Optional)	2

*Not Illustrated

 
PEERLESS TRANSAXLE MODEL 801C

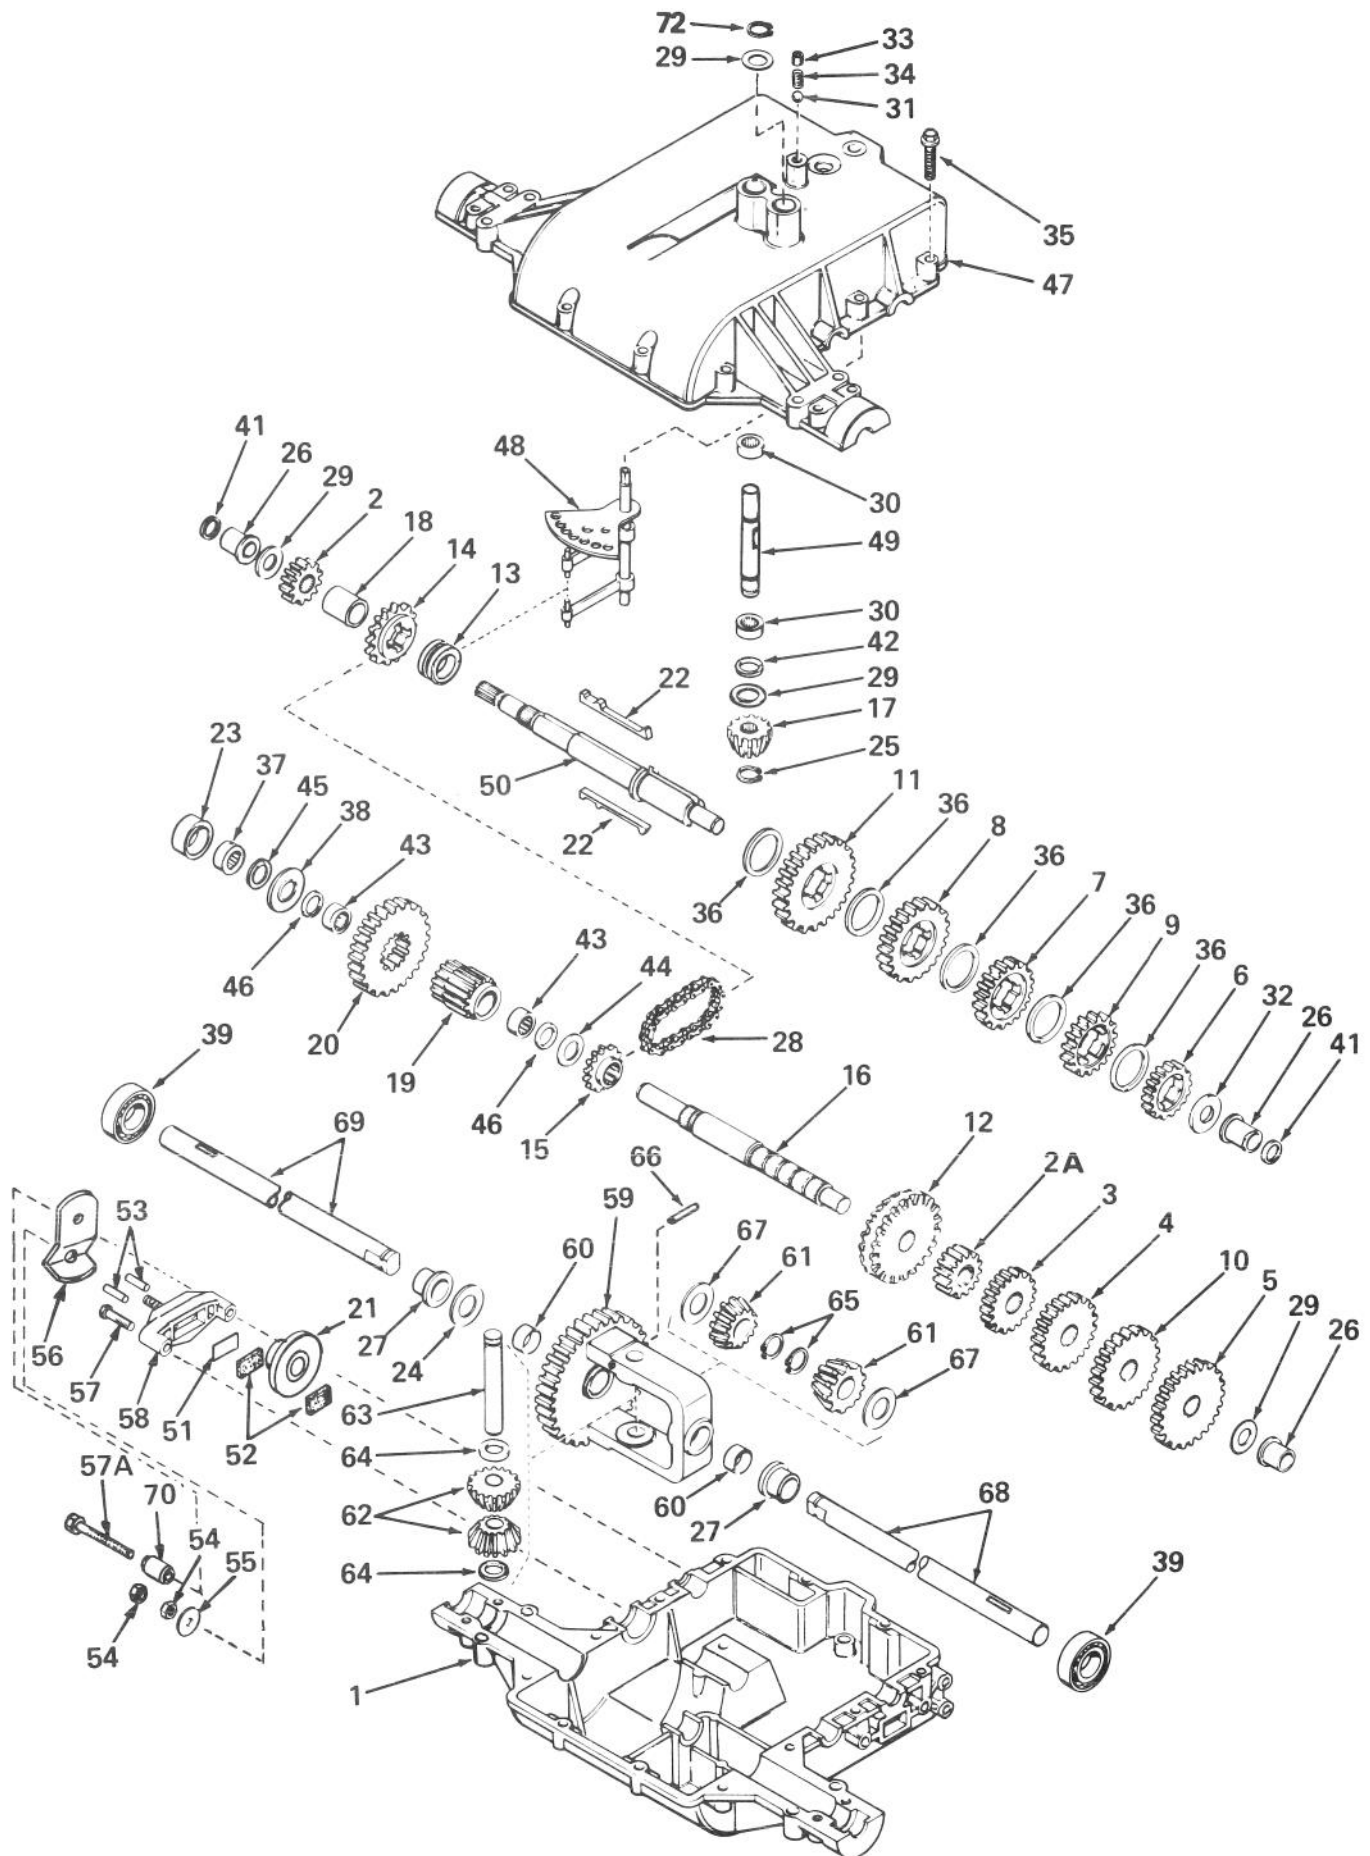

PEERLESS TRANSAXLE MODEL 801C

Ref. No.	Part No.	Description	No. Used
1	770071	Case, Transaxle	1
2	778136	Gear, Spur (15 teeth)	1
2A	778145	Gear, Spur (12 teeth)	1
3	778126A	Gear, Spur (20 teeth)	1
4	778127A	Gear, Spur (25 teeth)	1
5	778129A	Gear, Spur (30 teeth)	1
6	778121A	Gear, Spur (20 teeth)	1
7	778123A	Gear, Spur (25 teeth)	1
8	778124A	Gear, Spur (30 teeth)	1
9	778122A	Gear, Spur (22 teeth)	1
10	778128A	Gear, Spur (28 teeth)	1
11	778146	Gear, Spur (37 teeth)	1
12	778137	Gear, Bevel (42 teeth)	1
13	784266	Collar, Shift	1
14	786083	Sprocket (18 teeth)	1
15	786082	Sprocket (9 teeth)	1
16	776181	Shaft, Counter	1
17	778113A	Bevel Pinion, Input	1
18	786074	Spacer	1
19	778138	Pinion, Output	1
20	778139	Gear, Output	1
21	790003	Disk, Brake	1
22	792089A	Key	1
23	786075	Spacer	1
24	780001	Washer	1
25	788040	Ring, Retaining	1
26	780105	Bushing, Flanged	1
27	780118	Bushing, Flanged	1
28	786081	Chain, Roller (No. 41 chain, 24 links)	1
29	780072	Washer, Thrust	1
30	780086	Bearing, Needle	1
31	792077	Ball, Steel	1
32	780109	Washer, Thrust	1
33	792078	Screw, Set	1
34	792079	Spring	1
35	792073	Screw, Hex Hd. Thread Forming	1
36	780108	Washer, Thrust	1

Ref. No.	Part No.	Description	No. Used
37	780111	Bearing, Needle	1
38	780113	Washer, Flat	1
39	780119	Bearing, Ball	1
41	788051	Ring, Square Cut	1
42	792001	Ring, Square Cut	1
43	780112	Bearing, Needle	1
44	780114	Washer, Flat	1
45	788052	Ring, Square Cut	1
46	788053	Ring, Square Cut	1
47	772078A	Cover, Transaxle	1
48	784290	Rod & Fork Assy., Shift	1
49	776182A	Shaft, Input	1
50	776183	Shaft, Brake	1
51	790007	Plate, Brake Pad	1
52	790006	Pad, Brake	1
53	786026	Pin, Dowel	1
54	792075	Locknut	1
55	792076	Washer, Flat	1
56	790022	Lever, Brake	1
57	792073	Screw, Hex Hd. Thread Forming	1
57A	792085	Screw, Hex Hd. Thread Forming	1
58	790020	Holder, Brake Pad	1
59	778053A	Gear Assy., Differential (Incl. 2 of No. 60)	1
60	780064	Bushing	1
61	778067	Gear, Bevel	1
62	778068	Pinion, Bevel	1
63	786034	Pin, Drive	1
64	780065	Washer, Thrust	1
65	792018	Ring, Retaining	1
66	792040	Pin, Roll	1
67	780001	Washer, Thrust	1
68	774364A	Axle (14-7/8" long)	1
69	774363A	Axle (13" long)	1
70	786067	Spacer	1
72	792035	Ring, Retaining	1

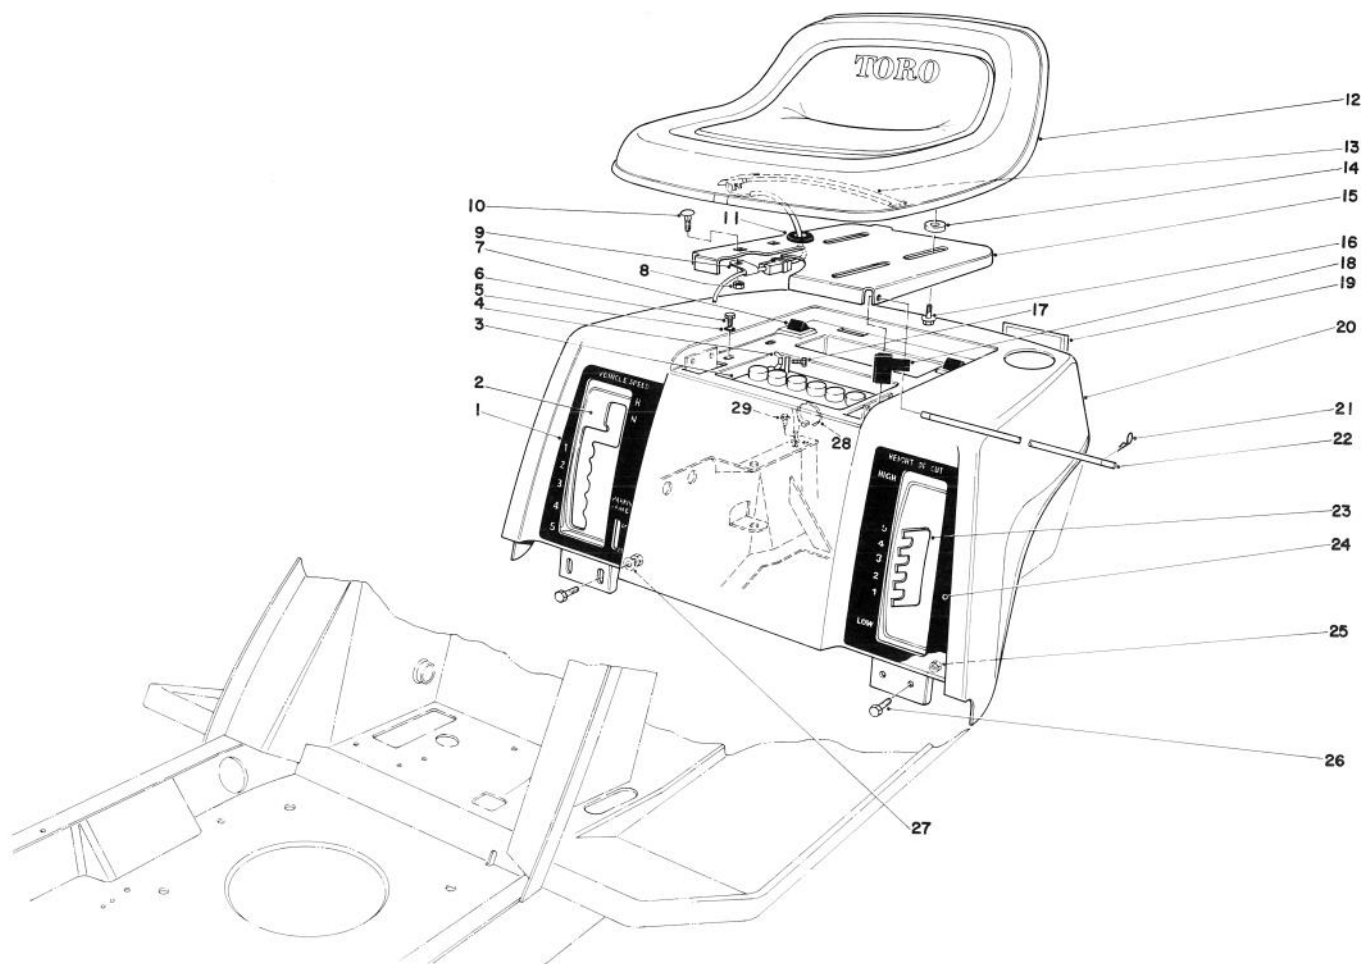 


REAR BODY & SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	36-1530	Decal – Transmission	1
2	28-0370	Plate – Detent	1
3	29-9870	Battery (Model #57360)	1
*	28-1400	Battery (Model #57300)	1
*	239-21	Battery Vent Tube	1
4	32103-22	Wing Nut	2
5	5-1350	Washer	4
6	32144-11	Hex Hd. Self Tapping Screw	4
7	28-9440	Seat Bumper	2
8	32149-2	Locknut	2
9	2412-66	Clamp	2
10	3229-11	Carriage Bolt	2
11	237-100	Grommet	1
12	38-0840	Seat (Model #57360)	1
*	38-0850	Seat (Model #57300)	1
13	38-1420	Seat Switch	1

Ref. No.	Part No.	Description	No. Used
14	26-4840	Spacer	4
15	36-1490	Seat Support	1
16	3234-5	Hex Flange Capscrew	4
17	321-3	Capscrew	2
18	28-8080	Boot Terminal	1
19	218-491	Reflector	2
20	8-3219	Rear Body (Incl. Ref.#1 & 24)	1
21	3290-307	Hair Pin Cotter	2
22	28-2400	Pivot Rod – Seat	1
23	44-5730	Quadrant Height-of-Cut	1
24	44-5840	Decal – Height-of-Cut	1
25	32152-1	Locknut	4
26	322-2	Capscrew	4
27	3256-23	Washer	2
28	3290-378	Cable Tie	1
29	32104-76	Self Tapping Screw	1

 
*Not Illustrated

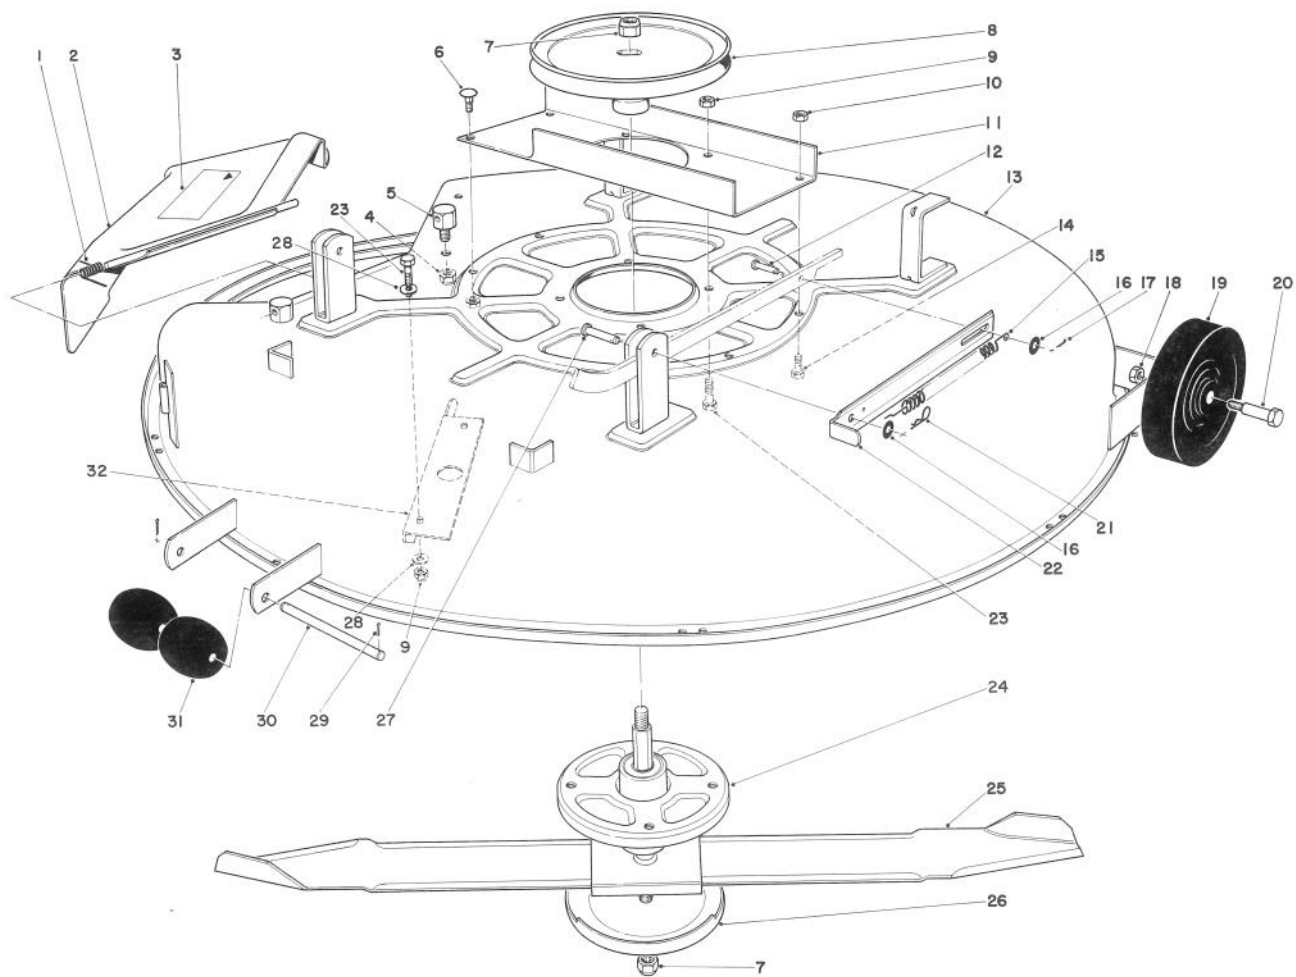

CUTTING DECK MODEL 59130

Ref. No.	Part No.	Description	No. Used
1	28-8010	Spring	1
2	44-5930	Deflector Assembly (Incl. Ref. #3)	1
3	12-2890	Decal — Deflector Caution	1
4	32153-2	Locknut	1
5	28-7350	Pivot Post — Deflector	1
6	3229-22	Carriage Bolt	1
7	17-0980	Special Nut	2
8	28-8000	Pulley — Blade Drive	1
9	3296-29	Locknut	6
10	32153-4	Locknut	4
11	36-1290	Channel Reinforcement	1
12	283-2	Clevis Pin	2
13	44-8280	Cutter Deck (Incl. Ref. #9, 23, 28 & 32)	1
14	321-3	Capscrew	3
15	28-2340	Spring Deck Tension	2


Ref. No.	Part No.	Description	No. Used
16	3256-24	Washer	4
17	3272-6	Cotter Pin	2
18	32146-6	Stop Nut	2
19	29-6010	Wheel	2
20	3-2652	Shoulder Bolt	2
21	3290-250	Hair Pin Cotter	2
22	39-5370	Strap — Deck Spring	2
23	322-5	Capscrew	6
24	28-4280	Spindle Assembly	1
25	33-4750	Blade	1
26	7-3522	Anti Scalp Cup	1
27	283-15	Clevis Pin	2
28	3256-23	Flatwasher	4
29	3272-11	Cotter Pin	2
30	7-0277	Shaft Roller	1
31	29-4820	Roller	2
32	44-5720	Baffle — Deck	1

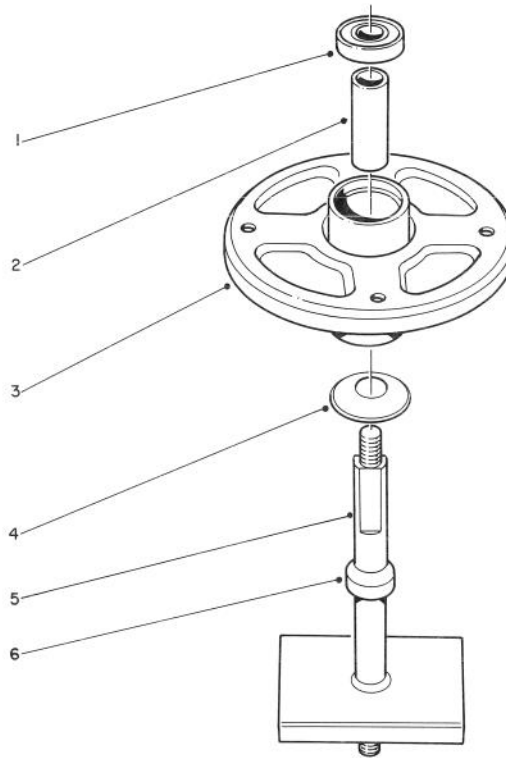 

SPINDLE ASSEMBLY NO. 28-4280

Ref. No.	Part No.	Description	No. Used
1	37-0200	Upper Bearing	1
2	46-6790	Spacer — Bearing	1
3	46-6660	Spindle Housing & Lower Bearing Assembly	1


Ref. No.	Part No.	Description	No. Used
4	38-0470	Dust Cover	1
5	46-6650	Shaft — Spindle	1
6	38-3180	Spacer	1

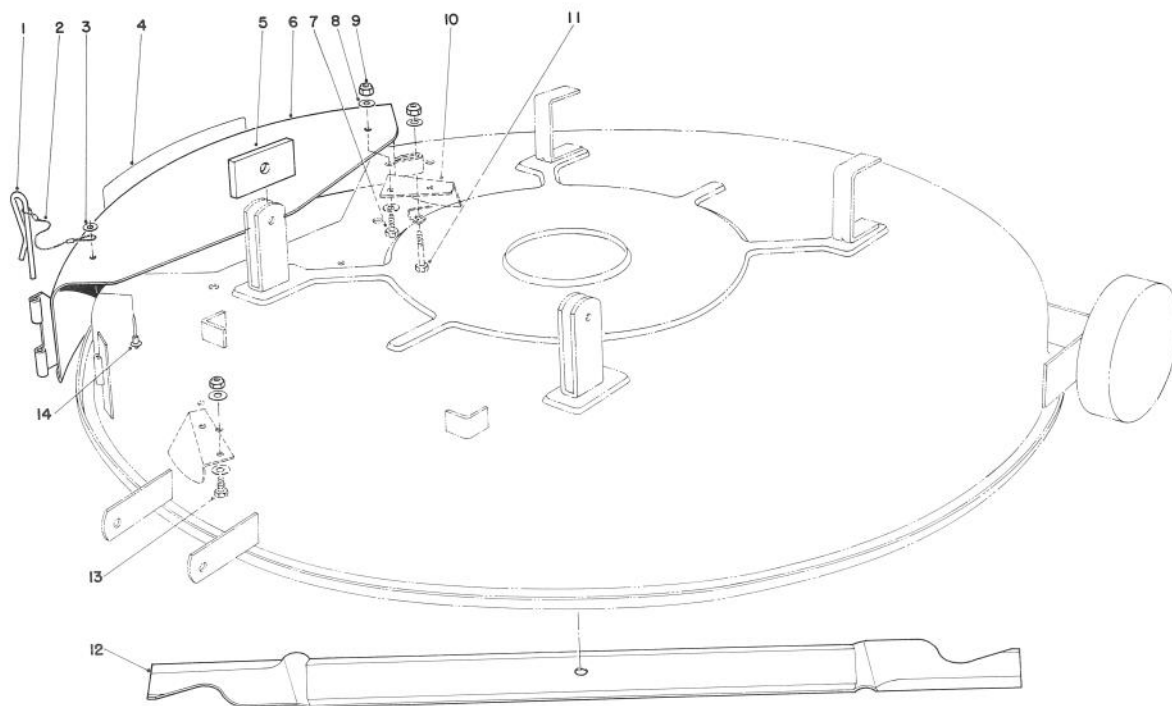 

MULCHER KIT MODEL 59155

Ref. No.	Part No.	Description	No. Used
1	28-8130	Pin — Chute Locking	1
2	28-8070	Lanyard	1
3	3256-49	Washer	1
4	44-5910	Decal — Mulcher Cover	1
5	44-5820	Spacer — Deck Angle	2
6	44-5700	Cover — Mulcher Assembly (Incl. Ref. #1-4 & 14)	1
7	322-5	Capscrew — Hex Head	1


Ref. No.	Part No.	Description	No. Used
8	3256-23	Washer	9
9	3296-29	Locknut	5
10	44-5810	Kicker	2
11	322-10	Capscrew — Hex Head	1
12	39-3480	Blade — Mulcher	1
13	322-3	Capscrew — Hex Head	3
14	3290-282	Rivet — Pop	1

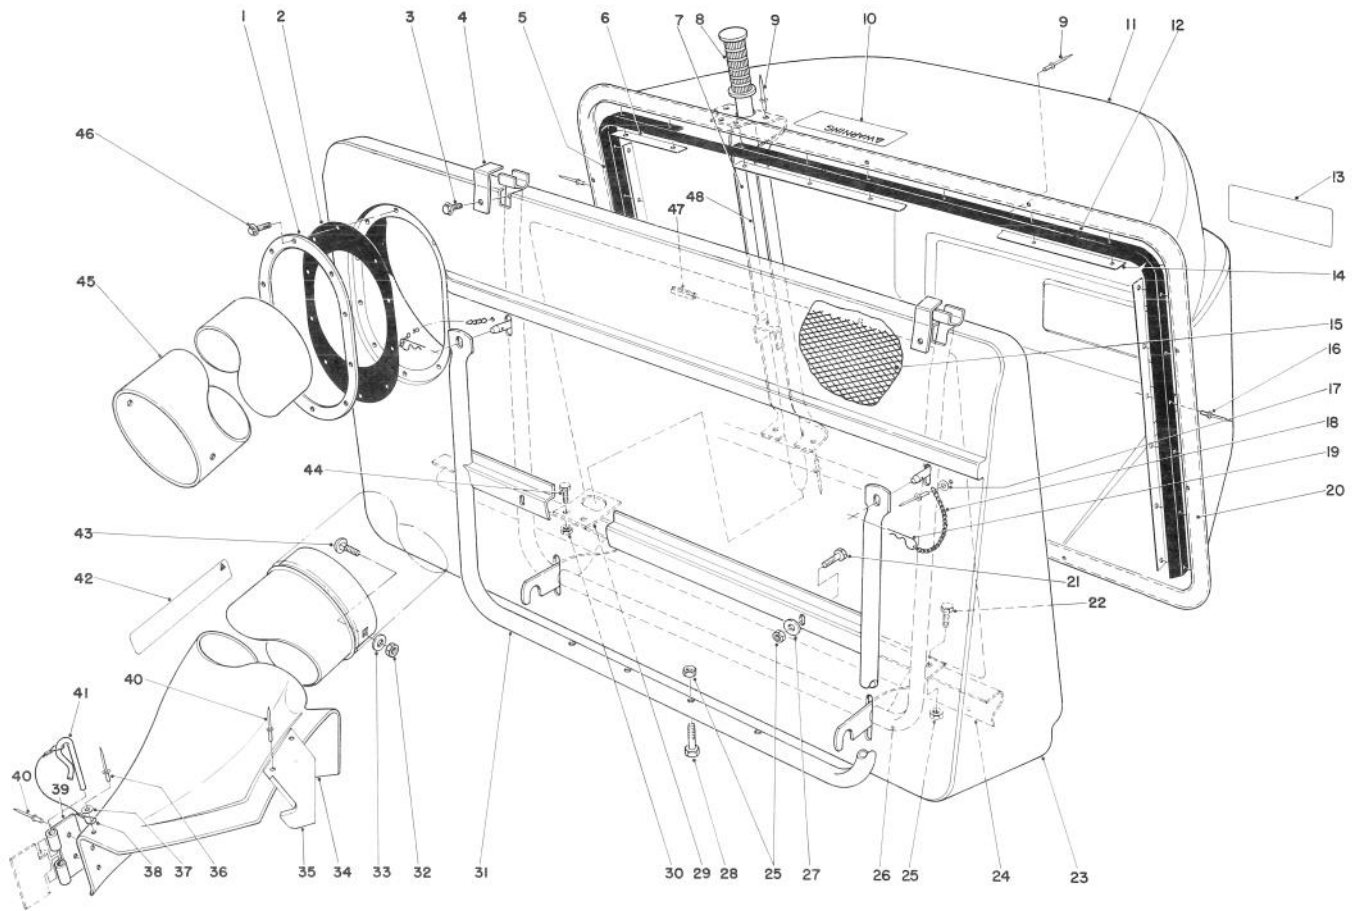 

EASY-EMPTY GRASS CATCHER MODEL 59111

Ref. No.	Part No.	Description	No. Used
1	28-7760	Ring — Retainer	1
2	28-7770	Ring — Retainer Rubber	1
3	32104-60	Screw — Hex Head Self Tapping	2
4	28-7700	Retainer Pivot Bracket	2
5	36-2520	Seal — Bag R.H.	1
6	29-5540	Retainer — Ext. Top	1
7	38-2920	Channel — Dump Handle	1
8	233-40	Grip Handle	1
9	3290-409	Domed Head Rivet	21
10	46-2850	Decal — Warning	1
11	36-2120	Grass Basket — Rear	1
12	36-2530	Seal — Bag L.H.	1
13	25-2200	Decal	1
14	29-5550	Retainer — Ext. Bag	3
15	28-7840	Screen — Bag	1
16	3290-415	Domed Head Rivet	22
17	5-1254	Washer	2
18	2830-10	Chain	2
19	3290-355	Hair Pin Cotter	2
20	28-7670	Frame — Bag Support	1
21	322-5	Capscrew — Hex Head	2
22	322-2	Capscrew — Hex Head	2
23	28-7810	Bag Front	1
24	28-7830	Frame Support Bracket	1


Ref. No.	Part No.	Description	No. Used
25	32152-1	Locknut	6
26	28-7710	Bag Frame	1
27	3256-23	Flat Washer	2
28	322-7	Capscrew Hex Head	2
29	28-7820	Hanger — Frame Lower	1
30	32152-4	Locknut	2
31	28-7780	Bag Support	1
32	32149-2	Locknut	2
33	3256-22	Washer	2
34	28-8060	Chute Assembly (Incl. Ref. #36-43)	1
35	33-2090	Bracket — Chute Support	1
36	3290-282	Rivet	1
37	3256-49	Washer	1
38	28-8070	Lanyard	1
39	28-8050	Bracket — Chute Mounting	1
40	3290-412	Rivet	4
41	28-8130	Pin — Chute Locking	1
42	26-7030	Decal — Instruction Chute	1
43	3229-24	Carriage Bolt	2
44	321-3	Capscrew — Hex Head	2
45	36-7900	Duct	1
46	32104-76	Screw — Self Tapping	18
47	32121-79	Roll Pin	1
48	29-5470	Dump Handle	1

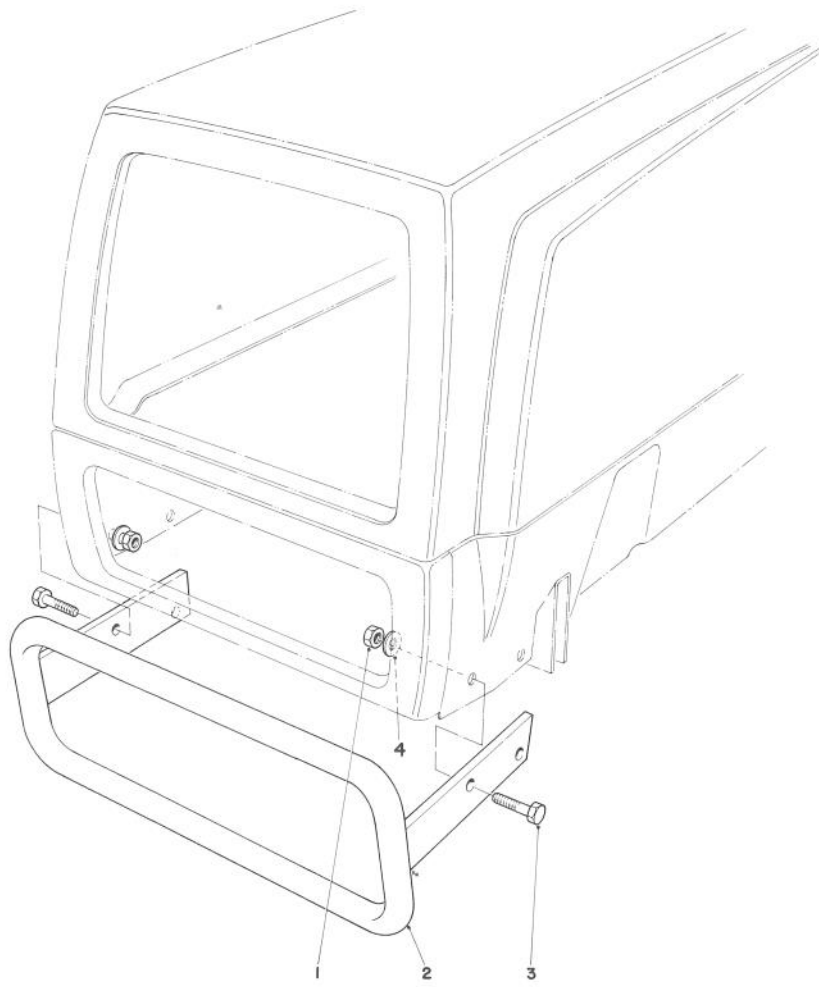 

EASY-EMPTY GRASS CATCHER MODEL 59111

Ref. No.	Part No.	Description	No. Used
1	32152-1	Locknut	4
2	29-4390	Bumper	1

Ref. No.	Part No.	Description	No. Used
3	322-5	Hex Hd. Capscrew	4
4	3256-23	Washer	4

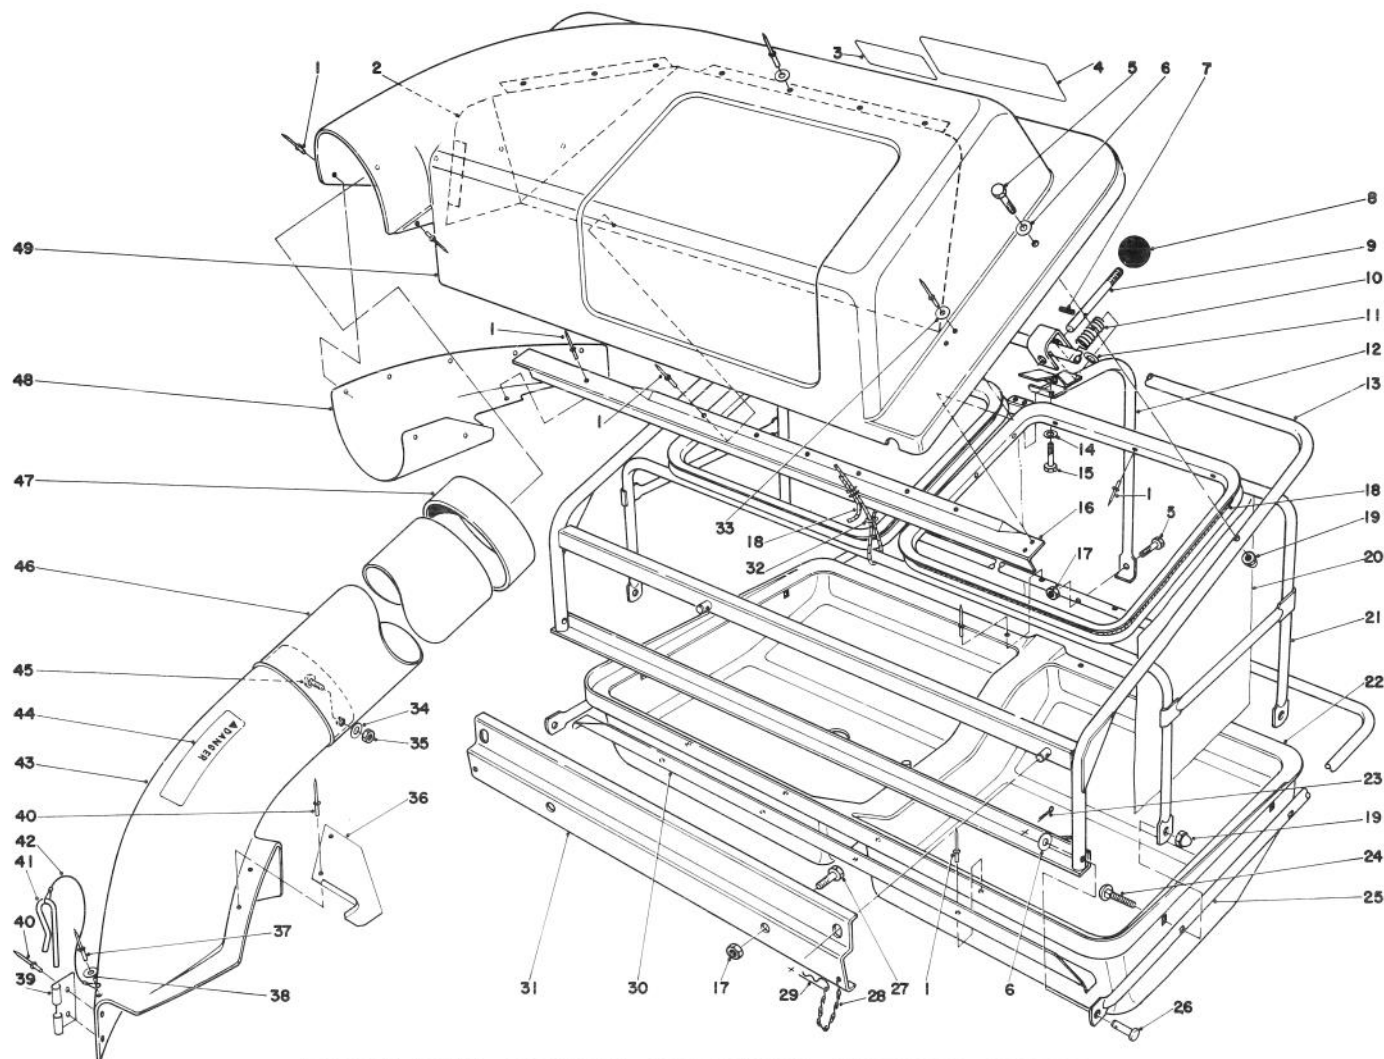 


EASY FILL GRASS CATCHER MODEL 59120

Ref. No.	Part No.	Description	No. Used
1	3290-409	Pop Rivet	49
2	36-4230	Screen Cover	1
3	36-7860	Decal — Latch Operation	1
4	36-4570	Decal — "Easy Fill"	1
5	322-17	Capscrew	5
6	3256-23	Washer	6
7	32121-18	Roll Pin	1
8	233-48	Knob	1
9	36-4490	Lever — Latch	1
10	36-8410	Compression Spring	1
11	3256-26	Washer	1
12	36-4500	Handle Assembly	1
13	36-4600	Frame Assembly	1
14	3253-3	Lockwasher	2
15	321-7	Capscrew	2
16	36-4840	Bracket Screen Support	1
17	32152-1	Locknut	3
18	36-7770	Retainer Cord	2
19	32111-8	Acorn Nut	8
20	36-7870	Curtain	2
21	36-4580	Bag Support Assembly	1
22	36-3370	Hopper	1
23	3272-10	Cotter Pin	2
24	3230-3	Carriage Bolt	4
25	36-4440	Hopper Support Tube	1
26	283-18	Clevis Pin	2

Ref. No.	Part No.	Description	No. Used
27	322-5	Capscrew	2
28	2830-9	Chain	2
29	3290-355	Hair Pin Cotter	2
30	36-8270	Hopper Support Strap	1
31	36-4550	Bracket Frame Support	1
32	249-27	Coupler	2
33	3256-14	Washer	18
34	3256-22	Flatwasher	2
35	32149-2	Locknut	2
36	33-2090	Chute Support Bracket	1
37	3290-282	Pop Rivet	1
38	3256-49	Plain Washer	1
39	28-8050	Chute Mounting Bracket	1
40	3290-412	Pop Rivet	4
41	28-8130	Chute Locking Pin	1
42	28-8070	Lanyard	1
43	28-8060	Chute Assembly (Incl. Ref. #36-44)	1
44	26-7030	Decal — Instruction Chute	1
45	3229-1	Carriage Bolt	2
46	36-7900	Duct	1
47	36-7760	Seal Duct	1
48	33-0870	Deflector	1
49	36-3570	Cover	1
*	33-1060	Cloth Bag (optional)	2
*	8-1789	Loose Parts Bag	1

 
*Not Illustrated

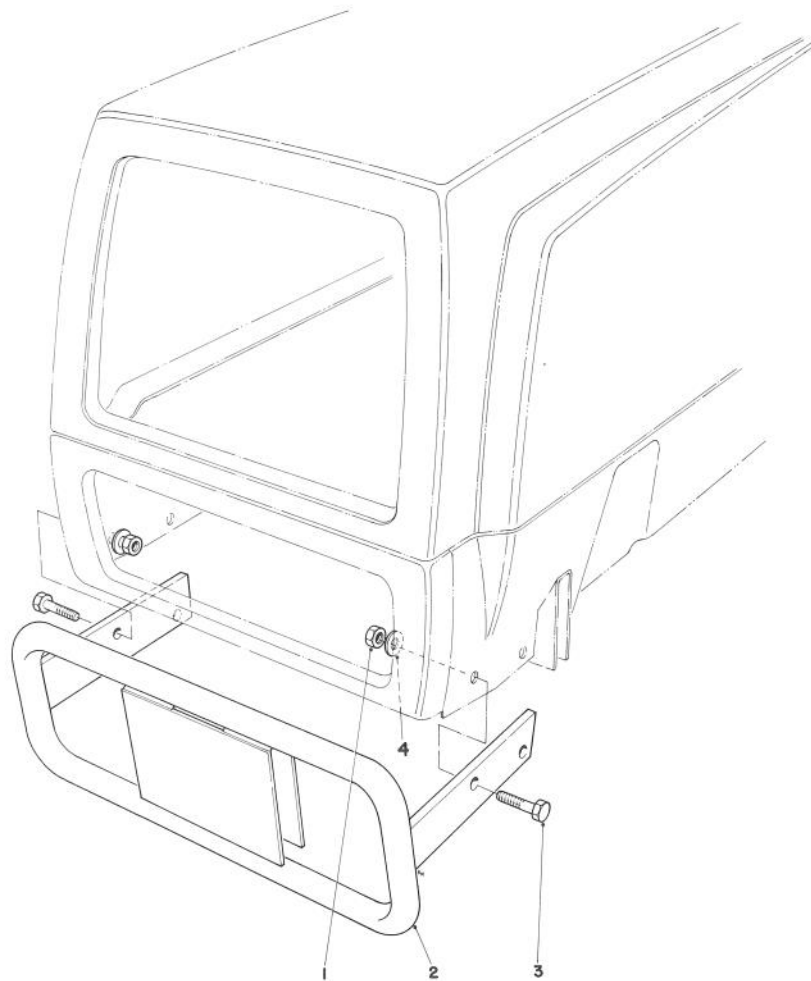

EASY FILL GRASS CATCHER MODEL 59120

Ref. No.	Part No.	Description	No. Used
1	32152-1	Locknut	4
2	36-7850	Bumper W.A.	1


Ref. No.	Part No.	Description	No. Used
3	322-5	Hex. Hd. Capscrew	4
4	3256-23	Washer	4

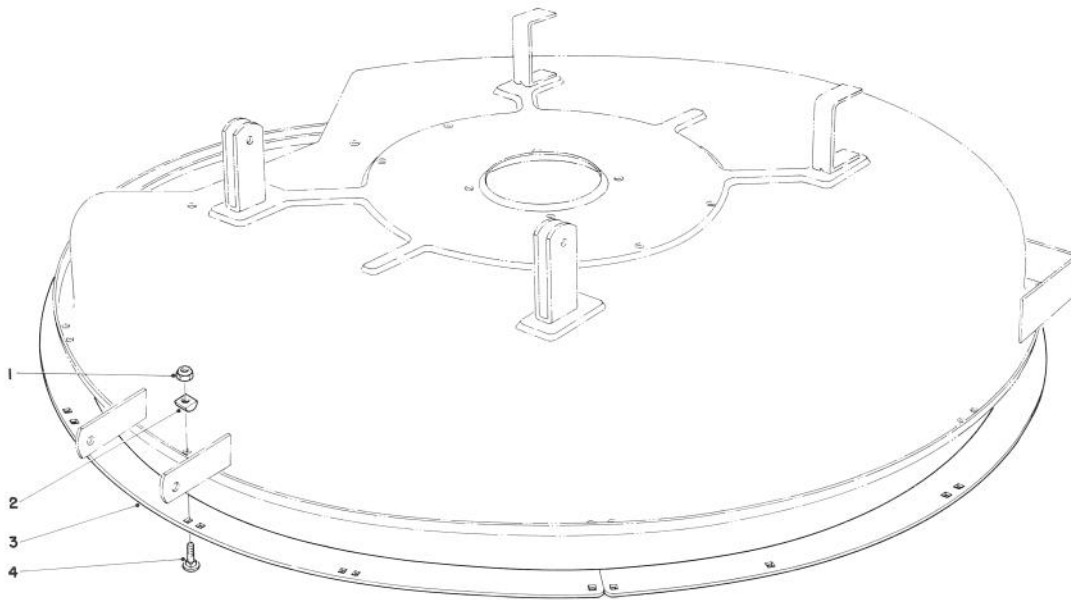 

WET GRASS BAGGING KIT NO. 38-5730

Ref. No.	Part No.	Description	No. Used
1	3296-29	Locknut	12
2	38-5690	Spacer – Deck Ring	12

Ref. No.	Part No.	Description	No. Used
3	38-6030	Ring – Deck	4
4	3230-2	Carriage Bolt	12

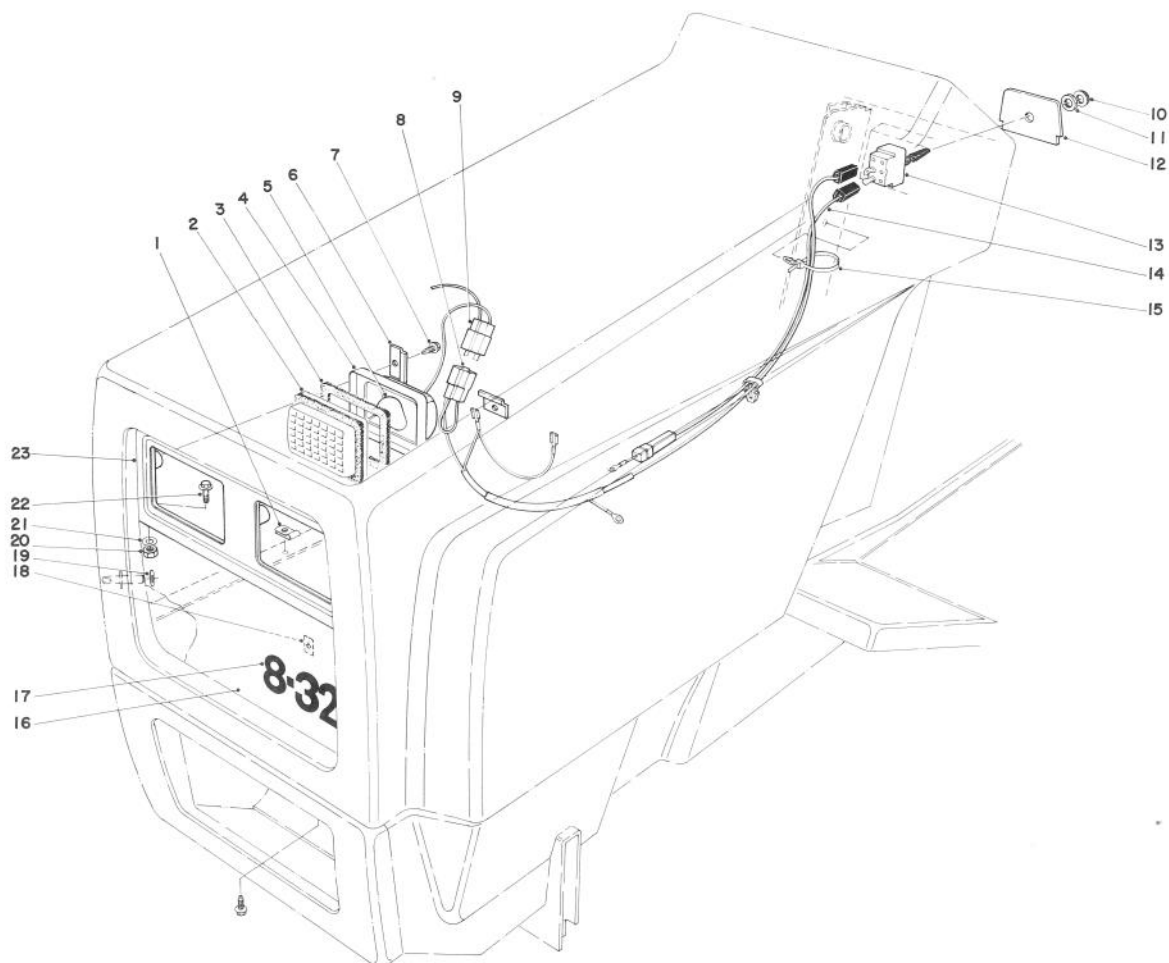 


HEADLIGHT KIT NO. 38-5760

Ref. No.	Part No.	Description	No. Used
1	2412-51	Clamp	1
2	219-14	Lens	2
3	219-13	Gasket Lens	4
4	38-2580	Reflector Assembly	2
5		Bulb GE #1156	2
6	28-0050	Clamp Headlight	3
7	32104-76	Self Tapping Screw	3
8	218-493	Connector	1
9	218-508	Socket	1
10	218-497	Beveled Facenut	1
11	218-498	Locknut	1
12	28-2510	Insert — Dash Panel	1

Ref. No.	Part No.	Description	No. Used
13	28-4110	Light Switch	1
14	38-1030	Wire Harness	1
15	3290-378	Cable Tie	5
16	28-0020	Grille Headlight	1
17	28-2660	Nameplate Grille	1
18	3290-299	Tinnerman Nut	2
19	5-1350	Washer	2
20	32153-1	Locknut	2
21	3256-21	Washer	2
22	3290-144	Hex Hd. Machine Screw	2
23	28-0040	Panel Headlight	1
*	8-3579	Headlight Assembly (Incl. Ref. #2-5)	2

 
*Not Illustrated

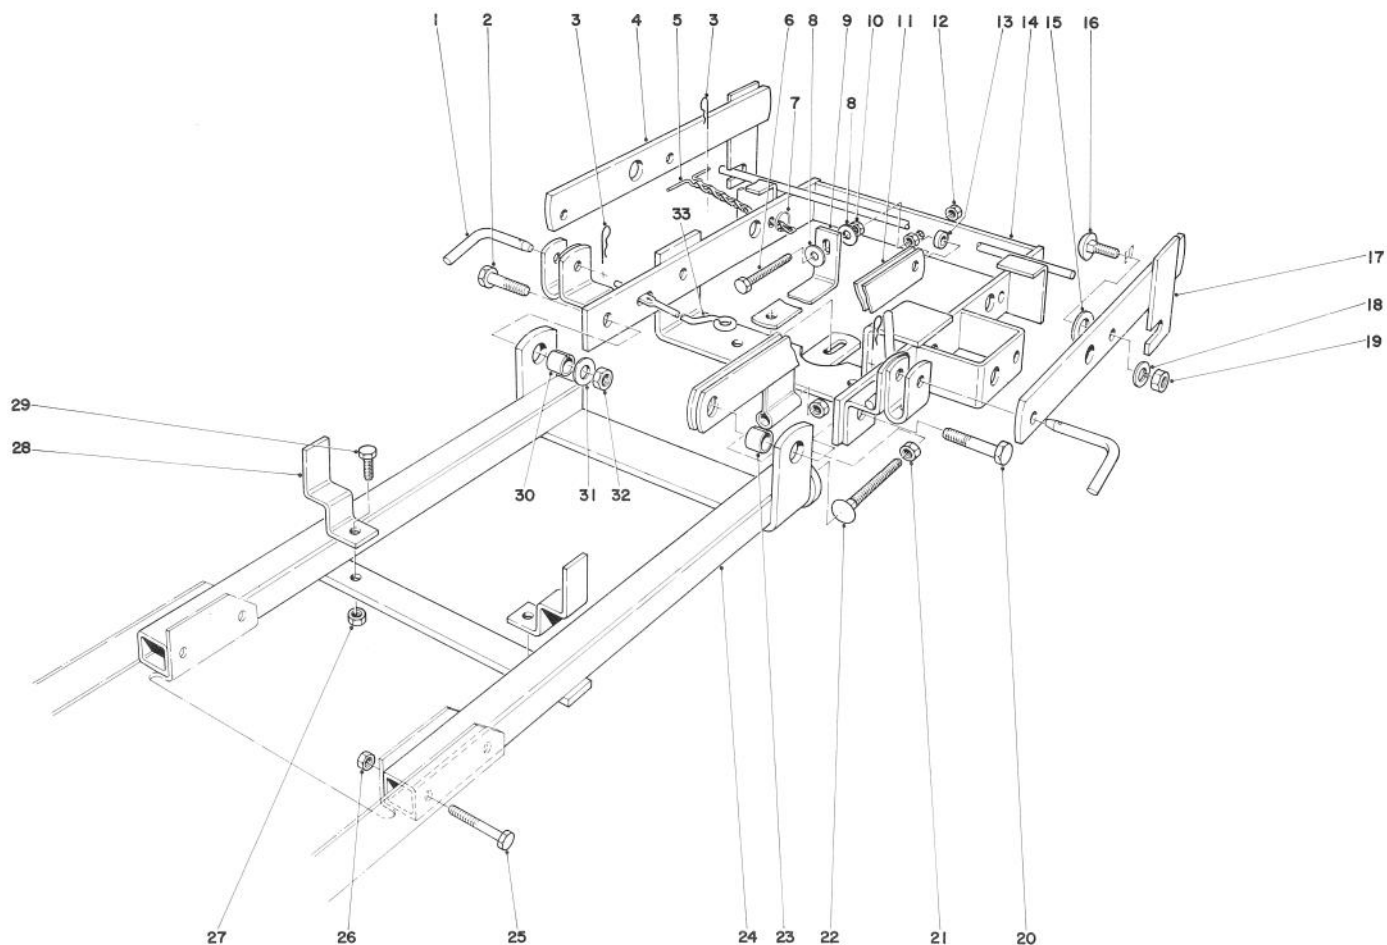

36" SNOWTHROWER ATTACHMENT MODEL NO. 59136

Ref. No.	Part No.	Description	No. Used
1	40-1330	Pin-Roller, Locating	2
2	325-7	Hex Head Capscrew	1
3	3290-225	Hair Pin Cotter	3
4	40-1340	Mounting Bracket — R.H.	1
5	40-1300	Chain & Toggle	1
6	323-15	Hex Head Capscrew	1
7	40-1310	Spring Clip	1
8	3256-4	Washer	2
9	40-1220	Bracket — Belt Adjust	1
10	3218-3	Jam Nut	2
11	40-0940	Lift Extension	1
12	3217-7	Nut	1
13	40-0980	Spacer	1
14	40-1200	Mounting Frame — Upper	1
15	40-1320	Washer — Flat	2
16	3233-23	Carriage Bolt	2
17	40-1350	Mounting Bracket — L.H.	1


Ref. No.	Part No.	Description	No. Used
18	3253-8	Lockwasher	2
19	3217-11	Nut	2
20	325-9	Hex Head Capscrew	1
21	3218-5	Jamnut	2
22	40-1590	Carriage Bolt	1
23	40-1360	Spacer — Bearing	1
24	40-0930	Mounting Frame	1
25	322-9	Hex Head Capscrew	4
26	32152-1	Locknut	4
27	32152-2	Locknut	2
28	40-0990	Stop — Position	2
29	323-6	Hex Head Capscrew	2
30	40-1370	Spacer — Idler Pulley	1
31	3256-26	Washer	2
32	32152-3	Locknut	2
33	40-1290	Wire — Belt Guide	1

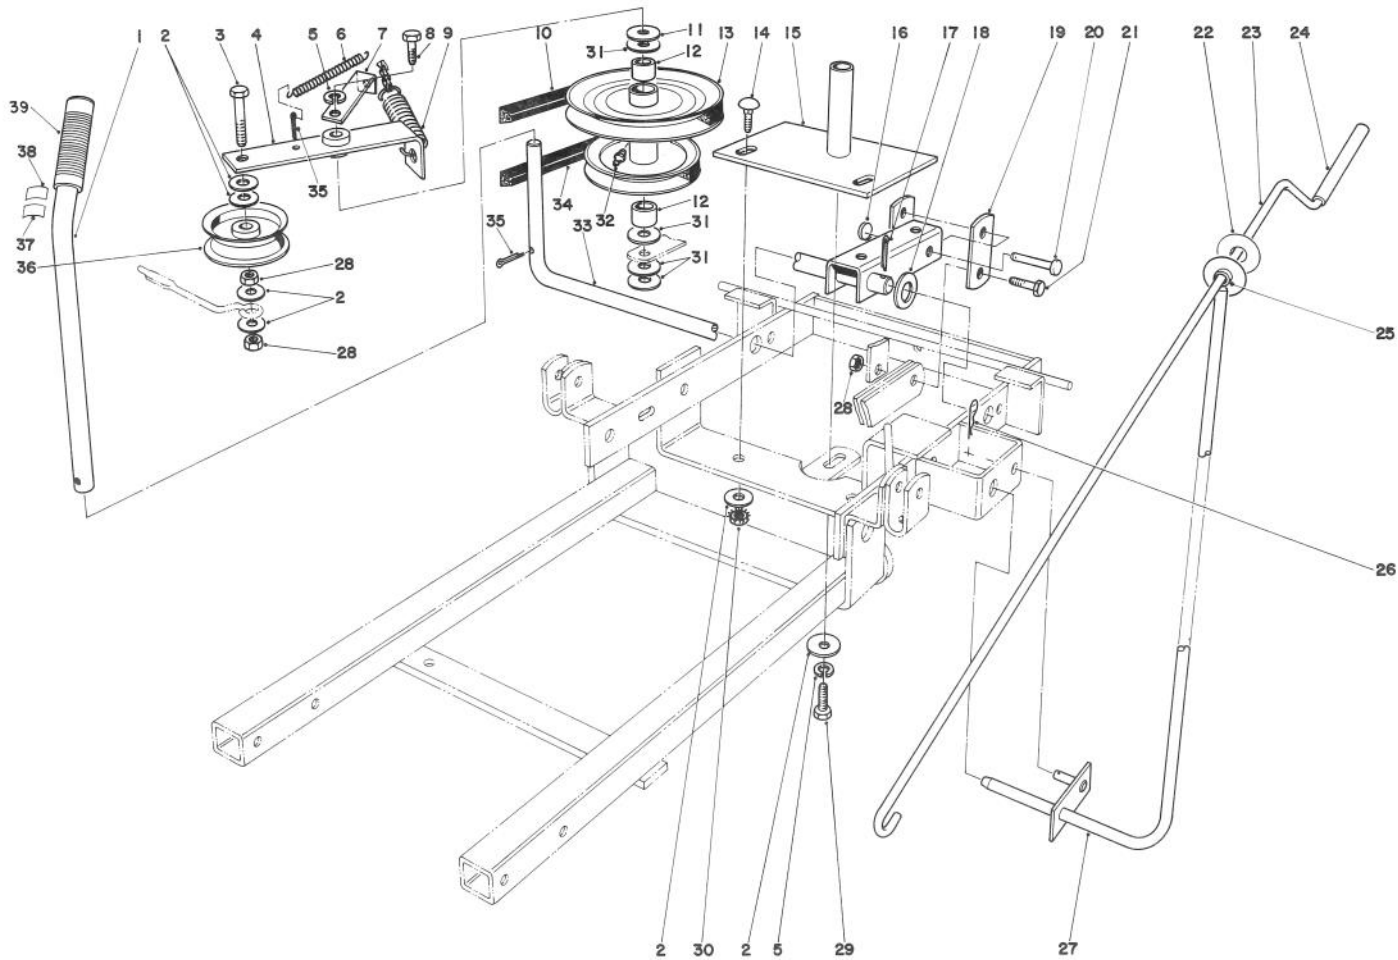 

36" SNOWTHROWER ATTACHMENT MODEL 59136

Ref. No.	Part No.	Description	No. Used
1	40-1010	Lift Handle	1
2	3256-4	Washer	7
3	323-12	Hex Head Capscrew	1
4	40-1250	Idler Arm	1
5	3253-21	Lockwasher	2
6	40-1280	Spring — Detent	1
7	40-1270	Bracket — Spring Anchor	1
8	323-4	Hex Head Capscrew	1
9	40-0730	Spring	1
10	40-1380	V-Belt	1
11	40-0740	Washer	1
12	40-1230	Roller Bearings	2
13	40-1240	Pulley Housing	1
14	3231-2	Carriage Bolt	2
15	40-1210	Mounting Bracket — Pulley	1
16	40-1310	Spring Clip	1
17	3272-12	Cotter Pin	1
18	40-0970	Spacer	1
19	40-0960	Strap — Lift Link	2

Ref. No.	Part No.	Description	No. Used
20	40-0950	Pin — Clevis, Handle	1
21	323-7	Hex Head Capscrew	1
22	40-1410	Decal — Spout Rotation	1
23	40-1110	Rod — Deflector Control	1
24	40-1100	Grip — Handle	1
25	40-1080	Nylon Bushing	1
26	3290-343	Hair Pin Cotter	1
27	40-1090	Crank Rod Support (Incl. Ref. #22 & 25)	1
28	32152-2	Locknut	3
29	323-6	Hex Head Capscrew	1
30	32149-10	Locknut	2
31	3-1000	Washer	4
32	302-5	Grease Fitting	1
33	40-1000	Lift Bar	1
34	40-1390	V-Belt	1
35	3272-21	Cotter Pin	2
36	40-1260	Idler Pulley	1
37	40-1020	Decal — Lift Control	1
38	40-1030	Decal — Raise & Lower	1
39	235-21	Grip Handle	1

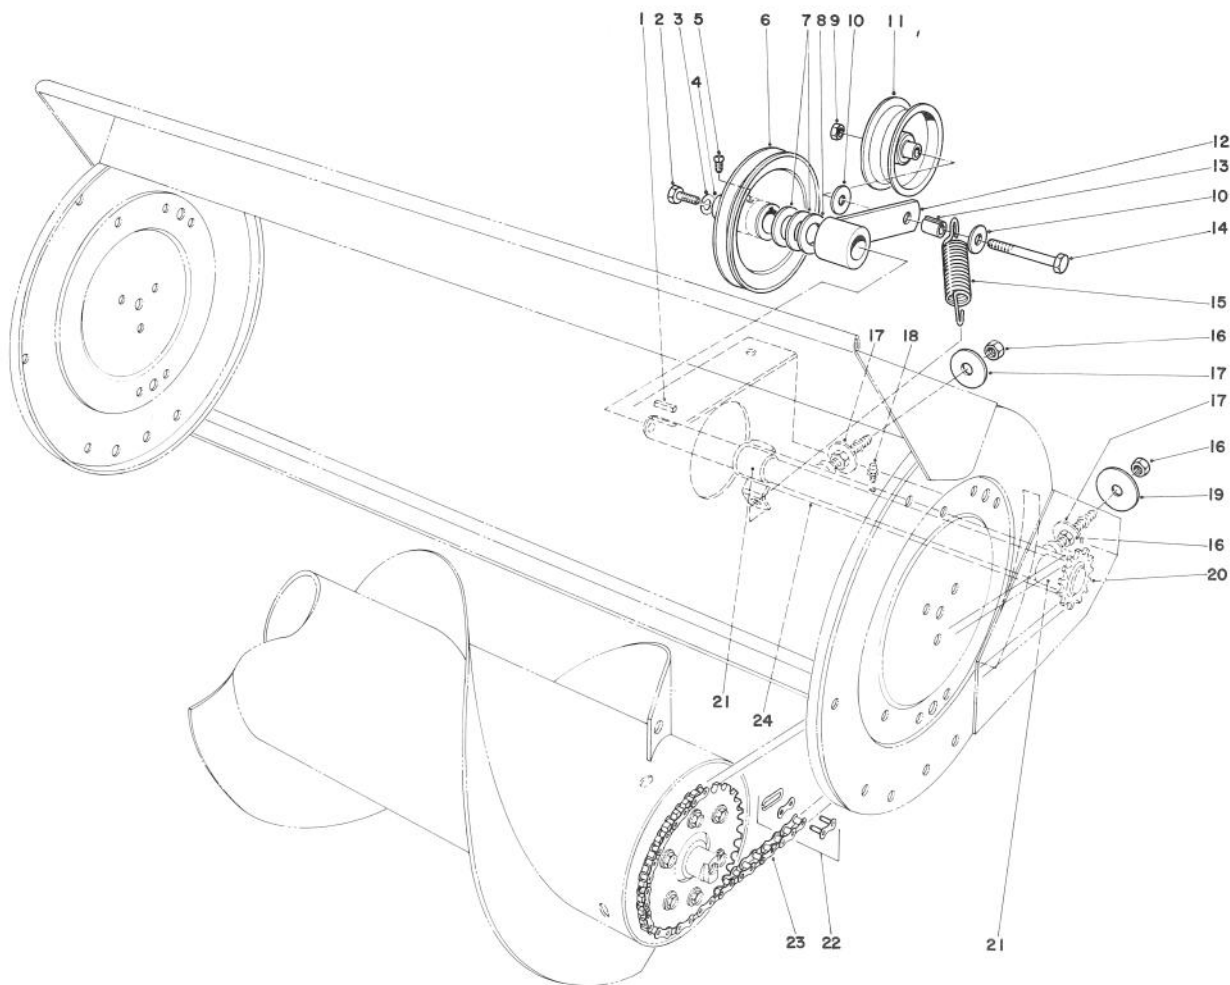 


36" SNOWTHROWER ATTACHMENT MODEL NO. 59136 (Continued)

Ref. No.	Part No.	Description	No. Used
1	21-5070	Key	1
2	323-4	Hex Head Capscrew	1
3	3253-21	Lockwasher	1
4	3256-3	Washer	1
5	3242-2	Set Screw	2
6	40-0860	Pulley	1
7	3-1000	Washer	2
8	40-0740	Washer	1
9	32152-2	Locknut	1
10	3256-4	Washer	2
11	40-1260	Idler Pulley	1
12	40-0710	Idler Arm	1
13	40-0980	Spacer	1

Ref. No.	Part No.	Description	No. Used
14	323-12	Hex Head Capscrew	1
15	40-0730	Spring	1
16	3217-9	Nut	4
17	3256-5	Washer	3
18	302-5	Grease Fitting	1
19	40-0720	Flat Washer	1
20	40-0770	Shaft & Sprocket	1
21	40-0750	Bushing — Jackshaft	2
22*	2710-6	Repair Kit — Roller Chain	1
23	40-0700	Roller Chain — Endless	1
24	40-0760	Jackshaft Housing (Incl. Ref. #18)	1

 
*Repair only

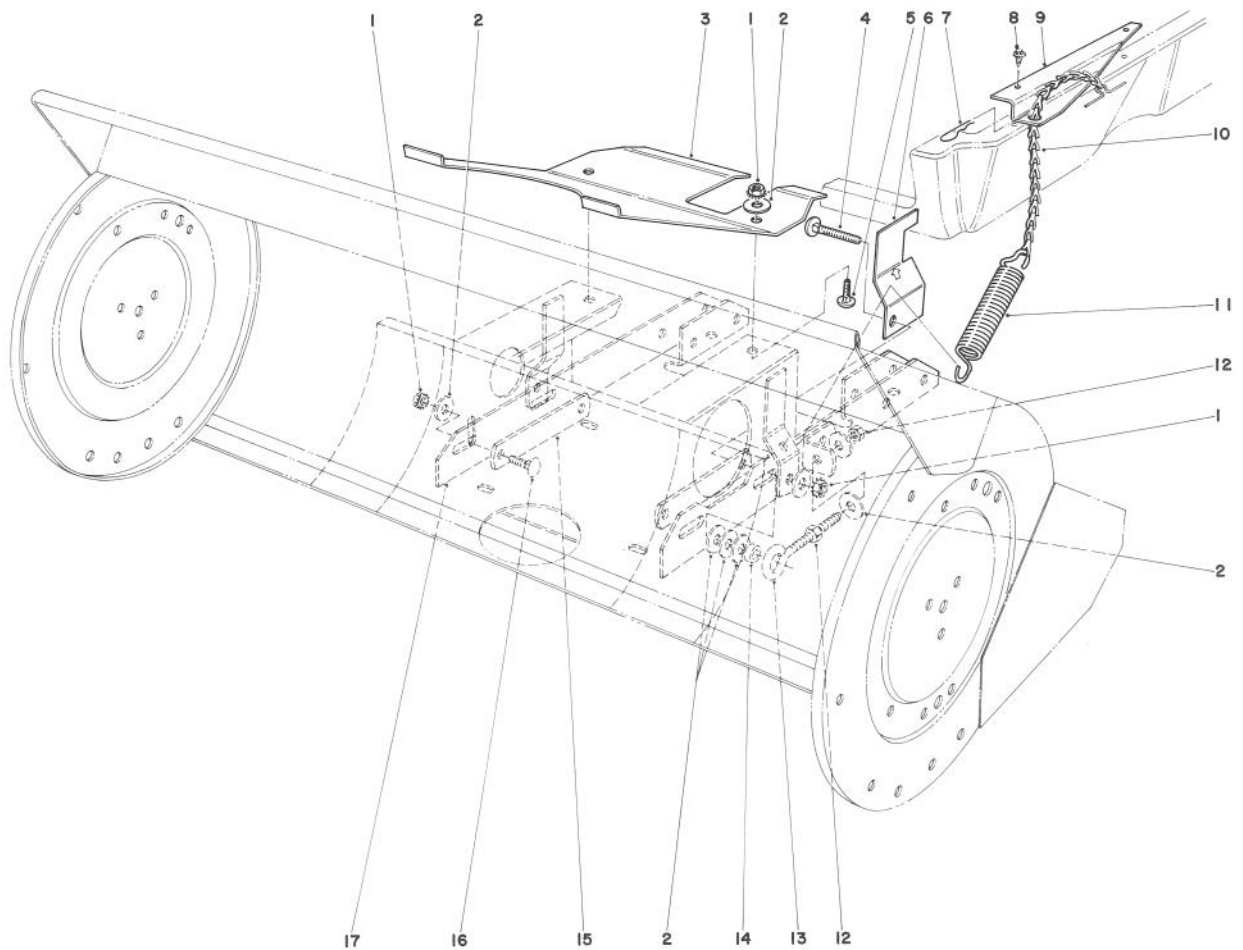

36" SNOWTHROWER ATTACHMENT MODEL NO. 59136 (Continued)

Ref. No.	Part No.	Description	No. Used
1	32149-10	Locknut	6
2	3256-4	Washer	16
3	40-0920	Guard — Drive Pulley	1
4	3231-7	Carriage Bolt	2
5	3231-21	Carriage Bolt	2
6	40-0900	Bracket — Belt Adjust Guide	1
7	3290-343	Hair Pin Cotter	1
8	32104-76	Screw — Self Tapping	2
9	40-0680	Plate — Lift Spring Anchor	1

Ref. No.	Part No.	Description	No. Used
10	40-0660	Chain & Toggle	1
11	40-0670	Spring — Idler Arm	1
12	3217-7	Nut	4
13	40-0880	Eye Bolt	2
14	40-0980	Spacer	2
15	40-0890	Strap — Header Channel	2
16	3231-2	Carriage Bolt	2
17	40-0910	Pivot Bracket	1

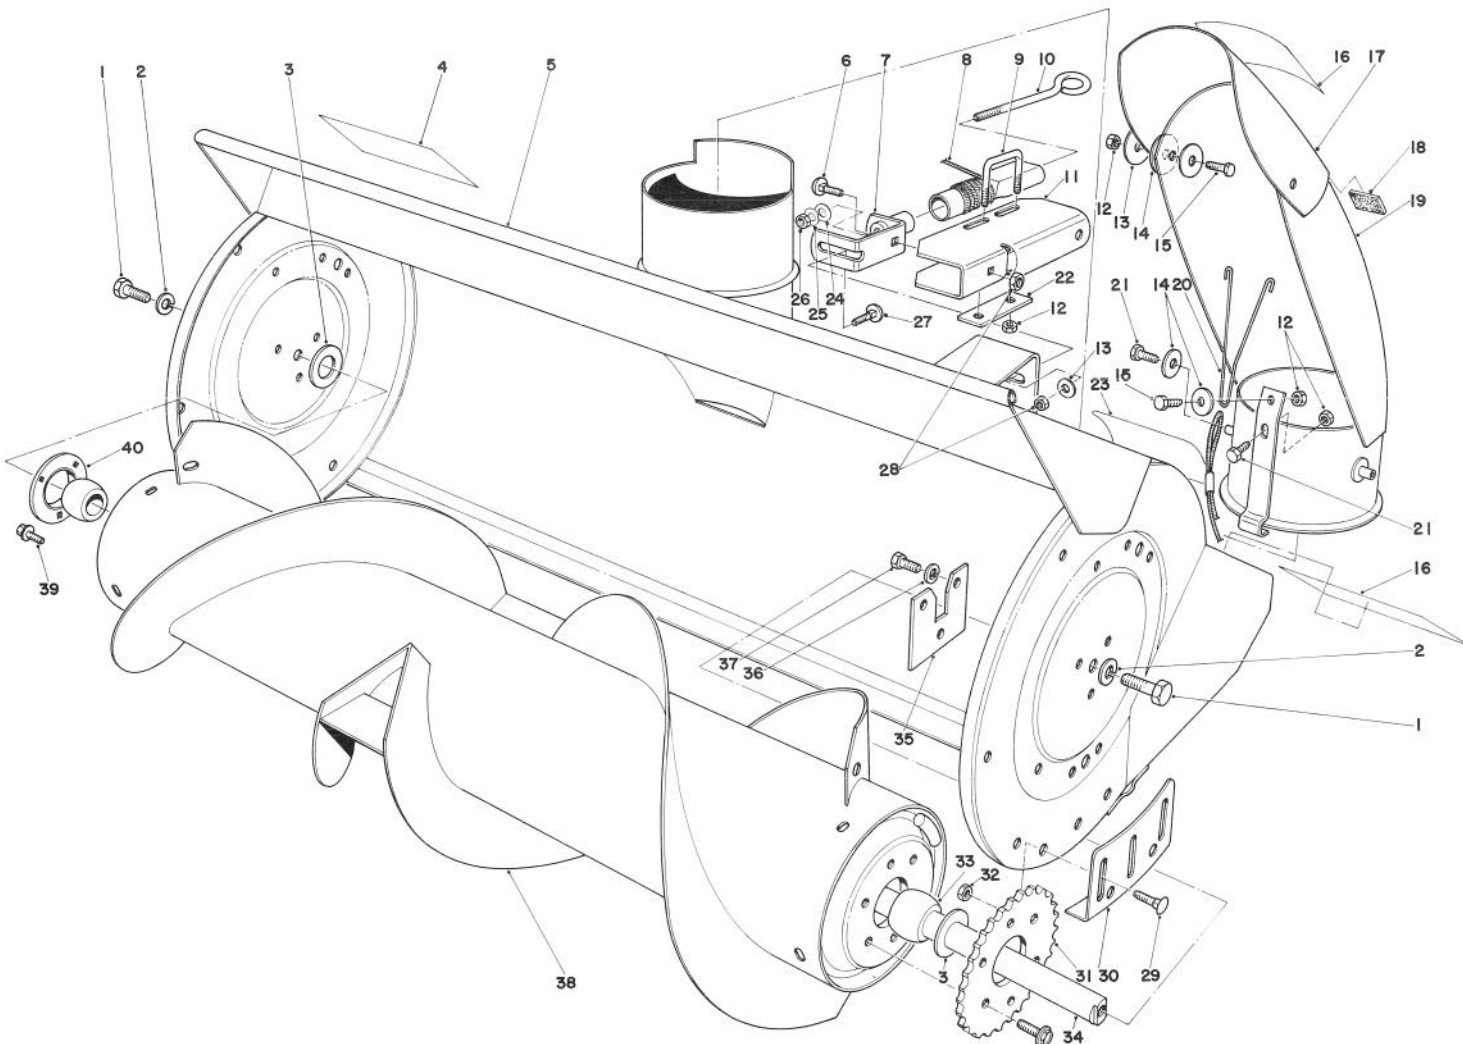 


36" SNOWTHROWER ATTACHMENT MODEL NO. 59136 (Continued)

Ref. No.	Part No.	Description	No. Used
1	325-5	Hex Head Capscrew	2
2	3253-7	Lockwasher	2
3	40-0780	Washer — Auger Shaft	2
4	27-4600	Decal	1
5	40-1400	Header (Incl. Ref. #16 & 23)	1
6	3231-21	Carriage Bolt	1
7	40-1170	Bracket & Tube	1
8	40-1180	Cable & Tube	1
9	40-1160	U-Bolt	1
10	40-1150	Eye Bolt	1
11	40-1190	Shroud — Stack Drive	1
12	32153-4	Locknut	6
13	3-6916	Washer	6
14	40-1130	Washer	3
15	321-3	Hex Head Capscrew	3
16	29-6350	Decal — Auger Warning	2
17	40-1060	Deflector (Incl. Ref. #16)	1
18	40-1050	Molding — Deflector	1
19	40-1070	Deflector Elbow	1
20	40-1040	Hook — Lift Spring	1
21	321-2	Hex Head Capscrew	2
22	40-1140	Strap — Friction	1
23	29-6380	Decal — Hazards Caution	1
24	3256-4	Washer	1

Ref. No.	Part No.	Description	No. Used
25	40-1120	Spring Washer	1
26	32152-2	Locknut	1
27	3231-2	Carriage Bolt	1
28	32149-10	Locknut	2
29	3-5861	Carriage Bolt	6
30	40-0870	Skidshoe	2
31	40-0840	Sprocket — Auger Drive	1
32	32149-1	Locknut	6
33	40-0790	Bearing — Auger Shaft	2
34	40-0810	Shaft — Auger	1
35	40-0820	Plate — Auger Mounting	1
36	3253-4	Lockwasher	3
37	322-2	Hex Head Capscrew	3
38	40-0850	Auger Assembly	1
39	32104-58	Screw — Self Tapping	9
40	40-0800	Flangette	1
*	40-0690	Exhaust Pipe Extension	1
*	32140-42	Screw — Self Tapping (For use with exhaust pipe extension)	1
†	40-0830	Scraper Blade	1
†	3229-22	Carriage Bolt (For use with scraper blade)	7
†	32149-2	Locknut (For use with scraper blade)	7

*Not Illustrated

 †Optional Equipment

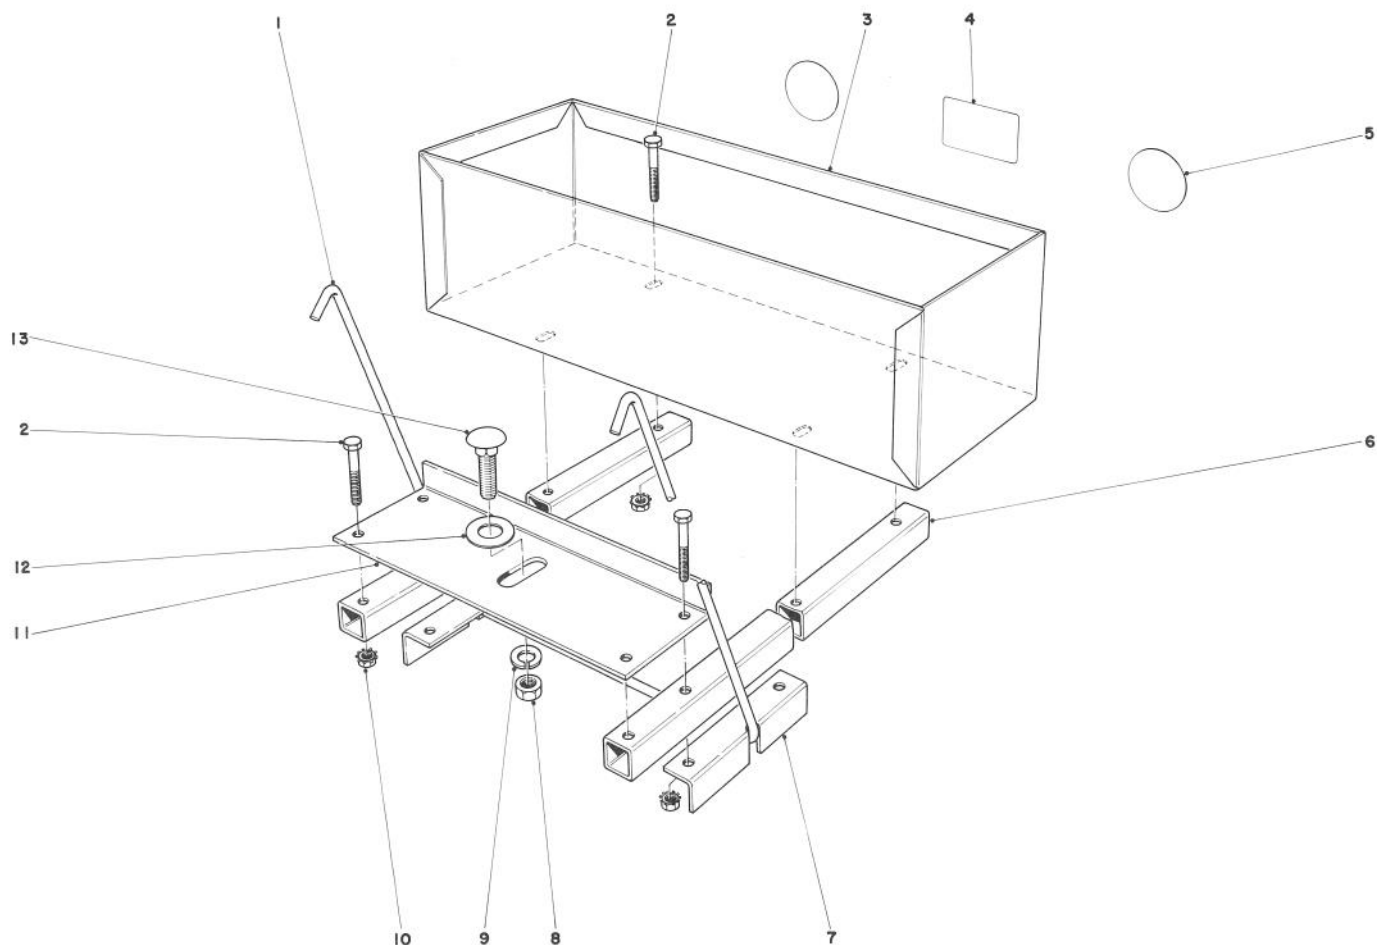


36" SNOWTHROWER WEIGHT BOX ASSEMBLY MODEL NO. 59138

Ref. No.	Part No.	Description	No. Used
1	40-0640	Bracket — Support	1
2	322-9	Hex Head Capscrew	8
3	40-0600	Weight Box	1
4	40-0650	Decal — Weight Box	1
5	40-0590	Reflector	2
6	40-0620	Tube — Mounting	2
7	40-0630	Bracket — Mounting	2

Ref. No.	Part No.	Description	No. Used
8	3217-23	Nut	1
9	3253-7	Lockwasher	1
10	32149-1	Locknut	8
11	40-0610	Bracket — Mounting	1
12	3-1000	Washer	1
13	3233-2	Carriage Bolt	1

 
ENGINE BRIGGS & STRATTON MODEL 191707-5676-01 (MODEL 57300)

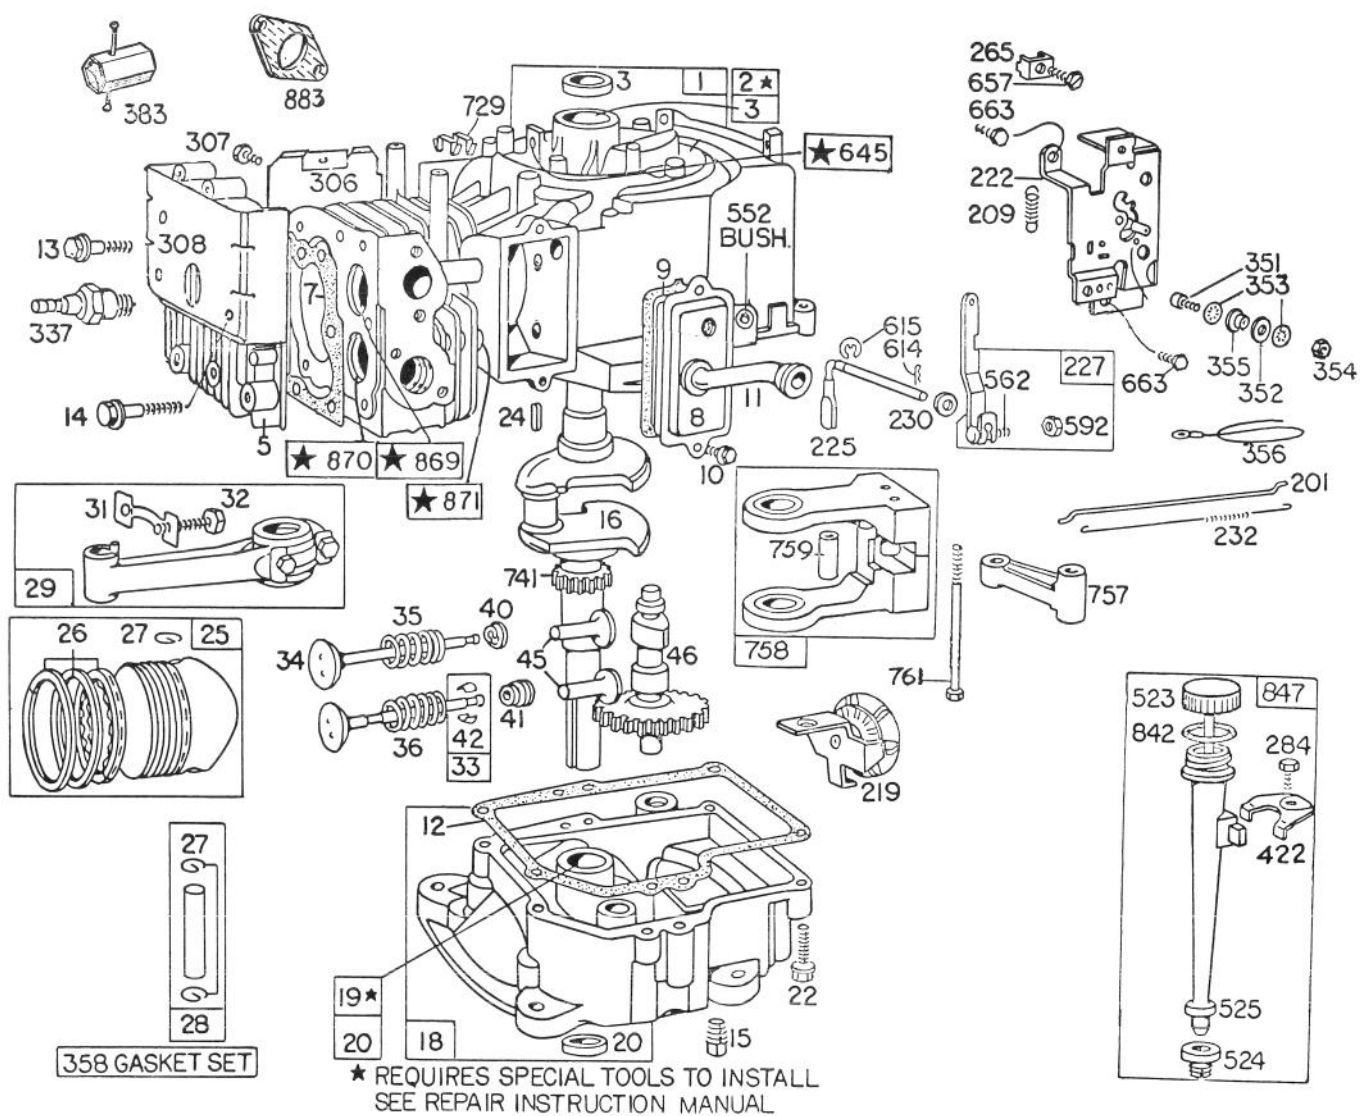

ENGINE BRIGGS & STRATTON MODEL 191707-5676-01 (MODEL 57300)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	393675	Cylinder Assembly	1	40	221596	Retainer — Intake Valve	1
2	391726	Bushing — Cylinder	1	41	292260	Rotocoil — Exhaust Valve	1
		Note: Requires special tools for installation.		42	93630	Retainer — Exhaust Valve	
3	294606	Seal — Oil	1			Rotocoil	2
5	212286	Head — Cylinder	1	45	260933	Tappet — Valve	1
7	*270430	Gasket — Cylinder Head	1	46	211689	Gear — Cam	1
8	391406	Breather Assembly	1	201	260971	Link — Governor	1
9	*27803	Gasket — Valve Cover	1	209	261306	Spring — Governor	1
10	93394	Screw	1	219	392718	Oil Slinger, Gov. Gear and	
11	280005	Tube — Breather	1			Bracket Assembly	1
12	*27750	Gasket — Crankcase Cover		222	390662	Plate — Gov. Control	1
		— 1/64" thick	1	225	231058	Crank — Governor (1/4" Dia.)	1
	*27876	Gasket — Crankcase Cover		227	391733	Lever Assy. — Governor For	
		— .005" thick	1			1/4" Dia. Crank	1
	*27877	Gasket — Crankcase Cover		230	222450	Washer — Gov. Lever	
		— .009" thick	1			(1/4" I.D.)	1
13	93211	Screw — Cylinder Head	1	232	260584	Spring — Governor Link	1
		(2-21/32" long)		265	221535	Clamp — Casing	1
	93776	Note: Stud — Cylinder Head		284	93804	Screw — Clamp Mtg.	1
	22963	Washer	1	306	222830	Shield — Cylinder	1
14	93723	Screw — Cylinder Head		307	93163	Screw — Cyl. Shield Mtg.	1
		(3" long) 1 Req'd.	1	308	222636	Cover — Cylinder Head	1
15	91084	Plug — Oil Drain	1	337	293918	Plug — Spark (1-1/2" high — 37	
16	390370	Crankshaft	1			M.M.)(Resistor Type)	1
18	392548	Sump — Oil	1	351	91920	Screw — Terminal (Fillister Hd.)	1
19	295963	Bushing — Oil Sump	1	352	66068	Washer — Insulating	1
		Note: Requires special tools for installation.		353	92791	Washer — Lock	3
				354	90576	Nut — Hex.	2
20	391086	Seal — Oil	1	355	66554	Collar — Insulating	1
22	93585	Screw — Sump Mounting	1	356	299500	Wire — Ground	1
24	61760	Key — Flywheel	1	358	299577	Gasket Set	1
25	391673	Piston Assy. — Std.	1	383	89838	Wrench — Spark Plug	1
	391674	Piston Assy. — .010" O.S.	1	422	222502	Clamp — Oil Filler Tube	1
	391675	Piston Assy. — .020" O.S.	1	523	391840	Cap & Dipstick — Oil Filler	1
	391676	Piston Assy. — .030" O.S.	1	524	68838	Seal — Filler Tube	1
		PISTON RING SETS:		525	280133	Tube — Oil Filler	1
		Note: For Chrome Piston Ring		552	231055	Bushing — Gov. Crank (1/4" I.D.)	1
		Set — Std. Size — Order		562	92613	Bolt — Governor Lever	1
		No. 299743.		592	231082	Nut — Hex.	1
26	391669	Ring Set — Piston — Std.	1	614	93306	Cotter — Hair Pin	1
	391670	Ring Set — Piston — .010" O.S.	1	615	93307	Retainer — E-Ring	1
	391671	Ring Set — Piston — .020" O.S.	1	645	23513	Bushing — Plunger	1
	391672	Ring Set — Piston — .030" O.S.	1	657	93496	Screw	1
27	68546	Lock — Piston Pin	1	663	93572	Screw	1
28	295840	Pin Assy. — Piston — Std.	1	729	221907	Clip — Wire	1
	295841	Pin Assy. — Piston — .005" O.S.	1	741	261195	Gear — Timing	1
29	390402	Rod Assy. — Connecting	1	757	212359	Link — Counterweight	1
		Note: For Connecting Rod		758	390172	Counterweight Assy.	1
		with .020" Undersize		759	298909	Pin — Counterweight	1
		Crankpin Bore — Order		761	93874	Screw — Counterweight	1
		No. 390773.		842	270920	Seal — Filler Cap	1
31	222114	Lock — Conn. Rod Screw	1	847	392066	Filler Group — Oil	1
32	92659	Screw — Conn. Rod	1	869	211661	Seat — Intake Valve (Std.)	1
33	390419	Valve — Exhaust	1	870	211661	Seat — Exhaust Valve (Std.)	1
34	261055	Valve — Intake	1	871	231218 or	Guide — Exhaust Valve	
35	65906	Spring — Intake Valve	1		230655	(See Repair Manual)	1
36	26828	Spring — Exhaust Valve	1	883	270918	Gasket — Exhaust Pipe	1

 
*Included in Gasket Set — Part No. 299577.

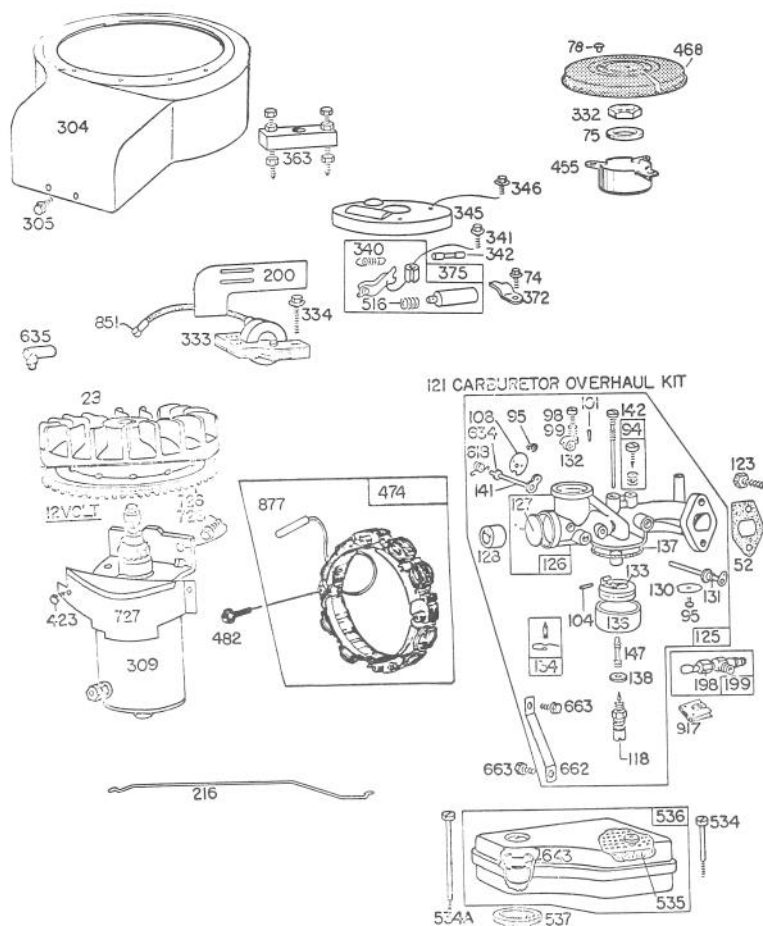

BRIGGS & STRATTON MODEL 191707-5676-01 (MODEL 57300) (Continued)

Ref. No.	Part No.	Description	No. Used
332	92284	Nut — Flywheel	1
333	298968	Armature Assembly	1
334	93381	Screw — Armature Mounting	1
340	26018	Spring — Breaker Arm	1
341	93381	Screw — Breaker Arm Mtg.	1
342	65704	Plunger — Breaker Point	1
345	222117	Cover — Breaker Point	1
346	93705	Screw	1
363	19165	Puller — Flywheel	1
372	220477	Clamp — Condenser	1
375	294628	Breaker Points and Condenser Sets	1
	299061	Note: Ignition Kit Includes:	
	294628	Point Set	1
	65704	Plunger	1
	61760	Key — Flywheel	1
423	93410	Screw	1
455	222561	Cup — Screen Mounting	1
468	222562	Screen — Flush Rotating	1
474	392595	Stator — Alternator (Tri-Circuit)	1
482	93621	Screw	1
516	260374	Spring — Connector	1
534	93622	Screw — Air Cleaner	1



Ref. No.	Part No.	Description	No. Used
534A	93323	Screw — Air Cleaner	1
535	270528	Element — Air Cleaner	1
536	391399	Cleaner Assembly — Air	1
		Uses:	
	280111	Support — Air Cleaner Element (Plastic)	1
537	270539	Gasket — Air Cleaner	1
618	261116	Spring — Choke Return	1
634	270382	Washer — Choke Shaft	1
635	66538	Elbow — Spark Plug	1
643	222149	Cup — Air Cleaner	1
662	222027	Bracket — Carburetor	1
663	93572	Screw	1
726	392134	Gear — Ring (Aluminum) (Includes Mtg. Parts For use only with Starter Motors with Plastic Drive Gear)	1
727	390233	Cover and Shield — Starter	1
728	93523	Screw	1
851	221798	Terminal — Ignition Cable	1
877	393537	Connector Assembly (Tri-Circuit)	1
917	223271	Valve Handle — Fuel Shut-Off	1

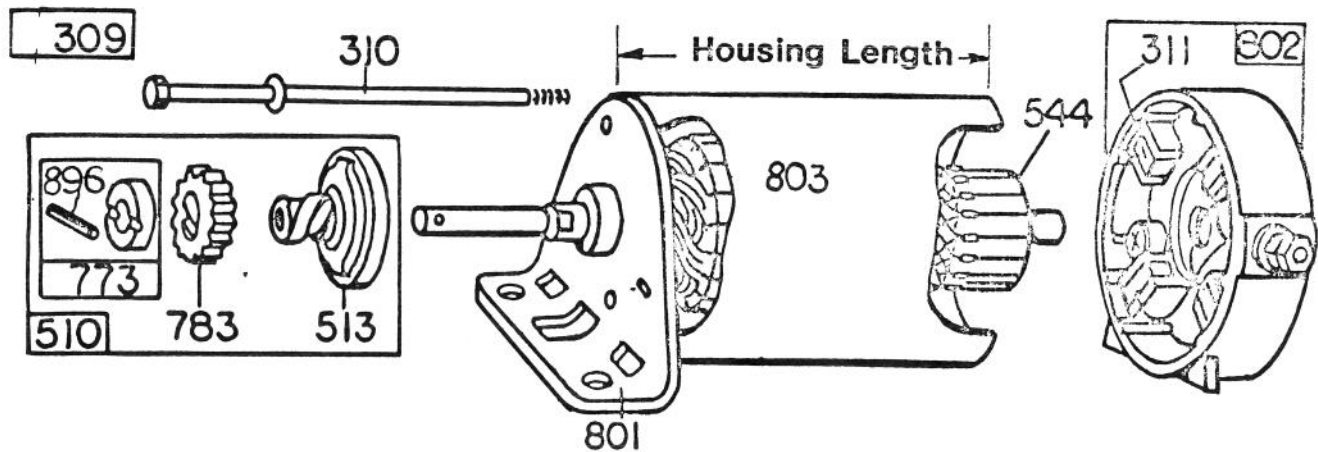 


BRIGGS & STRATTON MODEL 191707-5676-01 (MODEL 57300)

Ref. No.	Part No.	Description	No. Used
309	392749	Motor & Drive Assembly	1
310	391706	Thru Bolt Assembly	1
311	391705	Brush Assembly	1
510	391461	Drive Assembly (Incl. Ref. #513, 773, 783, 896)	1
513	391135	Clutch Assembly	1
544	392747	Armature Assembly	1
773	391462	Retainer & Pin	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	392061	End Cap Assy. — Drive	1
802	390846	End Cap Assy. — Commutator (Incl. Ref. #311)	1
803	392744	Housing Assembly (3-1/16" Lg.)	1
896	93754	Roll Pin	1

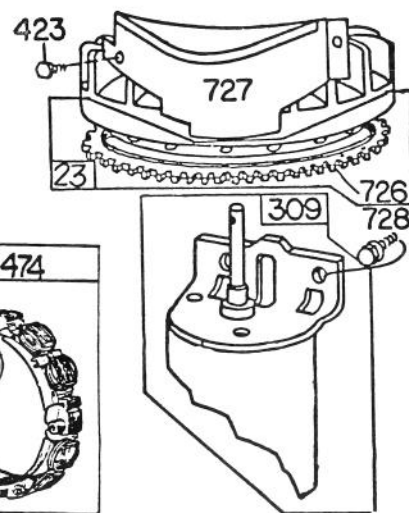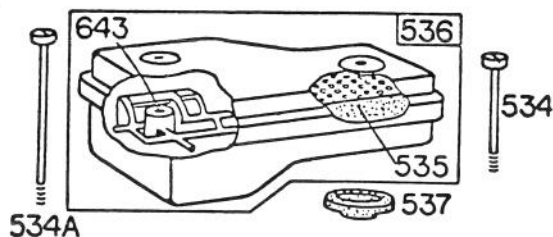  

121 CARBURETOR OVERHAUL KIT

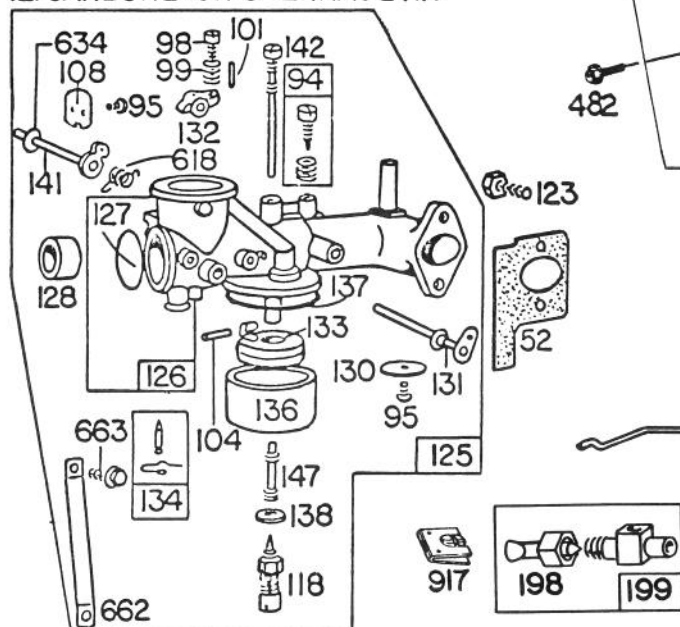 


ENGINE BRIGGS & STRATTON MODEL 252707-0230-01 (MODEL 57360)

Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel and Ring Gear Assy. — Magneto	1
52	*270872	Gasket — Carburetor Mounting	1
94	†292681	Valve Assembly — Carburetor Idle	1
95	93499	Screw — Throttle and Choke Valve Mtg.	1
98	91920	Screw — Machine, Fill. Hd.	1
99	26157	Spring — Throttle Adjustment	1
101	93043	Pin — Throttle Stop	1
104	†230896	Pin — Float Hinge	1
108	222010	Valve Choke	1
118	†391233	Valve — Needle	1
121	299852	Carburetor Overhaul Kit	1
123	93357	Screw — Carburetor Mtg.	1
125	393410	Carburetor Assembly (Choke-A-Matic)	1
126	391787	Body Assembly Carburetor	1
127	†221997	Plug — Welch	1
128	211960	Venturi — Carburetor	1
130	222858	Valve — Throttle	1
131	391512	Shaft and Lever — Throttle	1
132	211712	Stop — Throttle	1
133	299707	Float — Carburetor	1
134	†299096	Valve — Fuel Inlet	1
136	221995	Bowl — Float	1
137	†270511	Gasket — Float Bowl	1
138	†222014	Washer — Float Bowl	1
141	390684	Shaft and Lever — Choke	1

Ref. No.	Part No.	Description	No. Used
142	†299740	Nozzle — Carburetor	1
147	†230932	Screw — Nozzle	1
198	293934	Valve — Fuel Shut-Off	1
199	390303	Connector — Fuel Pipe	1
216	261274	Link — Choke	1
309		Motor — Starting (see page 40 for parts breakdown)	1
423	93410	Screw	1
474	392595	Stator — Alternator (Tri-Circuit)	1
482	93621	Screw	1
534	93622	Screw — Air Cleaner	1
534A	93323	Screw — Air Cleaner	1
535	270843	Element — Air Cleaner	1
536	391786	Cleaner Assembly — Air	1
537	270853	Gasket — Air Cleaner	1
618	261116	Spring — Choke Return	1
634	270382	Washer — Choke Shaft	1
643	280118	Support — Air Cleaner Element	1
662	222311	Bracket — Carburetor	1
663	93572	Screw	1
726	392134	Gear — Ring (Includes mounting parts)	1
727	390233	Cover and Shield — Starter	1
728	93523	Screw	1
877	393537	Connector Assy. (Tri-Circuit)	1
917	223271	Valve Handle — Fuel Shut-Off	1

†Included in Carburetor Overhaul Kit — Part No. 299852.

 ENGINE BRIGGS & STRATTON MODEL 252707-0230-01 (MODEL 57360)

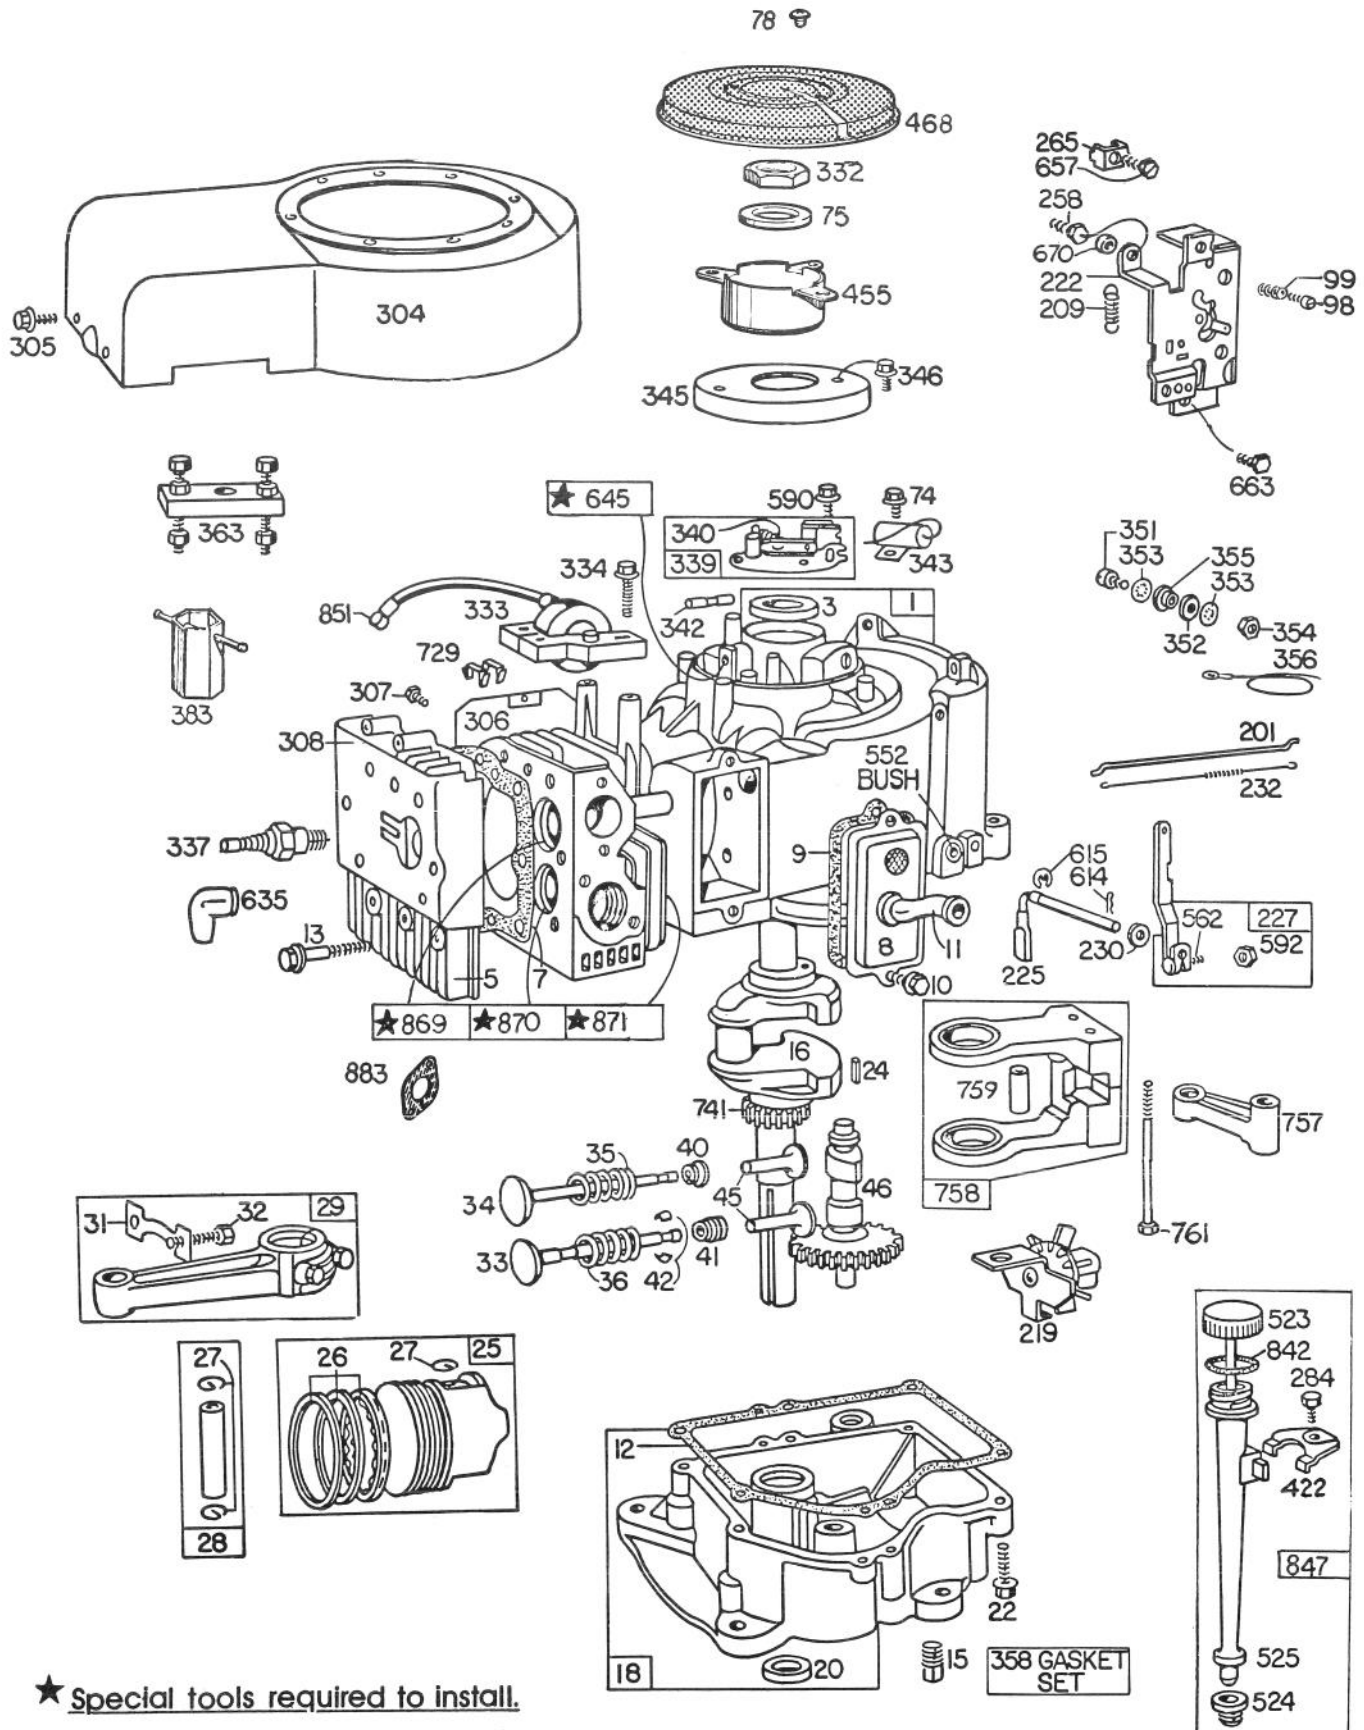


★ Special tools required to install.
See repair instruction manual

ENGINE BRIGGS & STRATTON MODEL 252707-0230-01 (MODEL 57360)

Ref. No.	Part No.	Description	No. Used
1	393676	Cylinder Assembly	1
3	391086	Seal — Oil	1
5	212300	Head — Cylinder	1
7	*271075	Gasket — Cylinder Head	1
8	391406	Breather Assembly	1
9	*27803	Gasket — Valve Cover	1
10	93394	Screw	1
11	280100	Tube — Breather	1
12	*270808	Gasket — Crankcase Cover — 1/64" thick	1
	*270915	Gasket — Crankcase Cover — .005" thick	1
	*270916	Gasket — Crankcase Cover — .009" thick	1
13	93723	Screw — Cylinder Head (3" long) Note: 93781 Stud — Cylinder Head	1
	22963	Washer	1
15	91084	Plug — Oil Drain	1
16	392299	Crankshaft	1
18	391784	Sump — Oil	1
20	291675	Seal — Oil	1
22	93585	Screw — Sump Mounting	1
24	61760	Key — Flywheel	1
25	391285	Piston Assy. — Standard	1
	391287	Piston Assy. — .010" O.S.	1
	391288	Piston Assy. — .020" O.S.	1
	391289	Piston Assy. — .030" O.S.	1
		PISTON RING SETS: Note: For Chrome Ring Set — Standard Size — order No. 392331.	
26	391780	Ring Set — Piston — Std.	1
	391781	Ring Set — Piston — .010" O.S.	1
	391782	Ring Set — Piston — .020" O.S.	1
	391783	Ring Set — Piston — .030" O.S.	1
27	260924	Lock — Piston Pin	1
28	299691	Pin Assy. — Piston — Std.	1
	391286	Pin Assy. — Piston — .005" O.S.	1
29	391775	Rod Assy. — Connecting	1
31	222290	Lock — Conn. Rod Screw	1
32	92900	Screw — Conn. Rod	1
33	261185	Valve — Exhaust	1
34	261462	Valve — Intake	1
35	65906	Spring — Intake Valve	1
36	26828	Spring — Exhaust Valve	1
40	221596	Retainer — Intake Valve	1
41	292260	Rotocoil — Exhaust Valve	1
42	93630	Retainer — Exhaust Valve Rotocoil	2
45	261183	Tappet — Valve	1
46	212296	Gear — Cam	1
74	93042	Screw	1
75	220865	Washer — Spring	1
78	93808	Screw	1
98	91920	Screw — Machine, Fill. Hd.	1
99	26157	Spring — Throttle Adjustment	1
201	261198	Link — Governor	1
209	261306	Spring — Gov.	1
219	391764	Oil Slinger, Gov. Gear and Bracket Assembly	1
222	390662	Plate — Gov. Control	1
225	231058	Crank — Governor (1/4" dia.)	1
227	391733	Lever Assy. — Governor (For 1/4" dia. Crank)	1

Ref. No.	Part No.	Description	No. Used
230	222450	Washer — Gov. Crank (1/4" I.D.)	1
232	261197	Spring — Governor Link	1
258	93686	Screw — Control Bracket Mtg.	1
265	22372	Clamp — Casing	1
284	93804	Screw — Clamp Mtg.	1
304	391556	Housing — Blower	1
305	93158	Screw — Blower Housing Mtg.	1
306	222744	Shield — Cylinder	1
307	93163	Screw — Cylinder Shield Mtg.	1
308	222725	Cover — Cylinder Head	1
332	92284	Nut — Hex.	1
333	298968	Armature Assembly	1
334	93381	Screw — Armature Mtg.	1
337	293918	Plug — Spark (1-1/2" high — 37-42 M.M.) Note: Spark Plugs use Ignition Cable Terminal No. 221798.	1
339	391284	Breaker Assy. — Ignition	1
340	26018	Spring — Breaker Arm	1
342	65704	Plunger — Breaker Point	1
343	29861	Condenser	1
345	222309	Cover — Breaker Point	1
346	93705	Screw	1
351	93735	Screw — Terminal (Truss Hd.)	1
352	66068	Washer — Insulating	1
353	92791	Washer — Lock	1
354	90576	Nut — Hex.	2
355	66554	Collar — Insulating	1
356	391602	Wire — Ground	1
358	393411	Gasket Set	1
363	19203	Puller — Flywheel	1
383	89838	Wrench — Spark Plug	1
422	222502	Clamp — Oil Filler Tube	1
455	222561	Cup — Screen Mounting	1
468	222562	Screen — Flush Rotating	1
523	391841	Cap & Dipstick — Oil Filler	1
524	68838	Seal — Filler Tube	1
525	280134	Tube — Oil Filler	1
552	231055	Bushing — Gov. Crank (1/4" I.D.)	1
562	92613	Bolt — Governor Lever	1
590	93226	Screw — Breaker Adjusting	1
592	231082	Nut — Hex	1
614	93306	Cotter — Hair Pin	1
615	93307	Retainer — E-Ring	1
635	66538	Elbow — Spark Plug	1
645	23513	Bushing — Plunger	1
657	93496	Screw	1
663	93572	Screw	1
670	231039	Spacer — Control Bracket Mounting	1
729	221907	Clip — Wire	1
741	261196	Gear — Timing	1
757	212359	Link — Counterweight	1
758	391373	Counterweight Assy.	1
759	298909	Pin — Counterweight	1
761	93875	Screw — Counterweight	1
842	270920	Seal — Oil Filler Cap	1
847	392067	Fill Group — Oil	1
851	221798	Terminal — Ignition Cable	1
869	261463	Seat — Intake Valve (Std.)	1
870	210940	Seat — Exhaust Valve (Std.)	1
871	230655	Guide — Exhaust Valve	1
883	270917	Gasket — Exhaust Pipe	1

 * Included in Gasket Set — Part No. 393411.

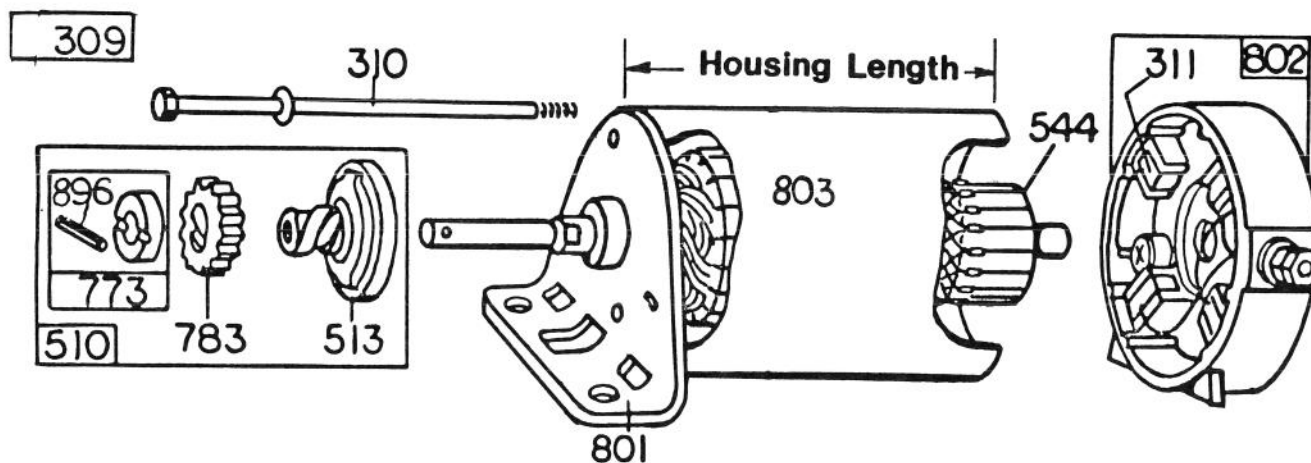

BRIGGS & STRATTON MODEL 252707-0230-01 (MODEL 57360)

Ref. No.	Part No.	Description	No. Used
309	392749	Motor & Drive Assembly	1
310	391706	Thru Bolt Assembly	1
311	391705	Brush Assembly	1
510	391461	Drive Assy. (Incl. Ref. #513, 773, 783, & 896)	1
513	391135	Clutch Assembly	1
544	392747	Armature Assembly	1
773	391462	Retainer & Pin	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	392061	End Cap Assy. — Drive	1
802	390846	End Cap Assy. — Commutator (Incl. Ref. #311)	1
803	392744	Housing Assembly (3-1/16" Lg.)	1
896	93754	Roll Pin	1