



38in Twin Bagger

Timecutter[®] Z Attachment

Model No. 79215-230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Bag to Mower Assembly	3		
Chute Assembly	4		
Bagger Chute Assembly Part No. 94–6036	5		
Bag Assembly	6		
Bagger Top Assembly	7		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

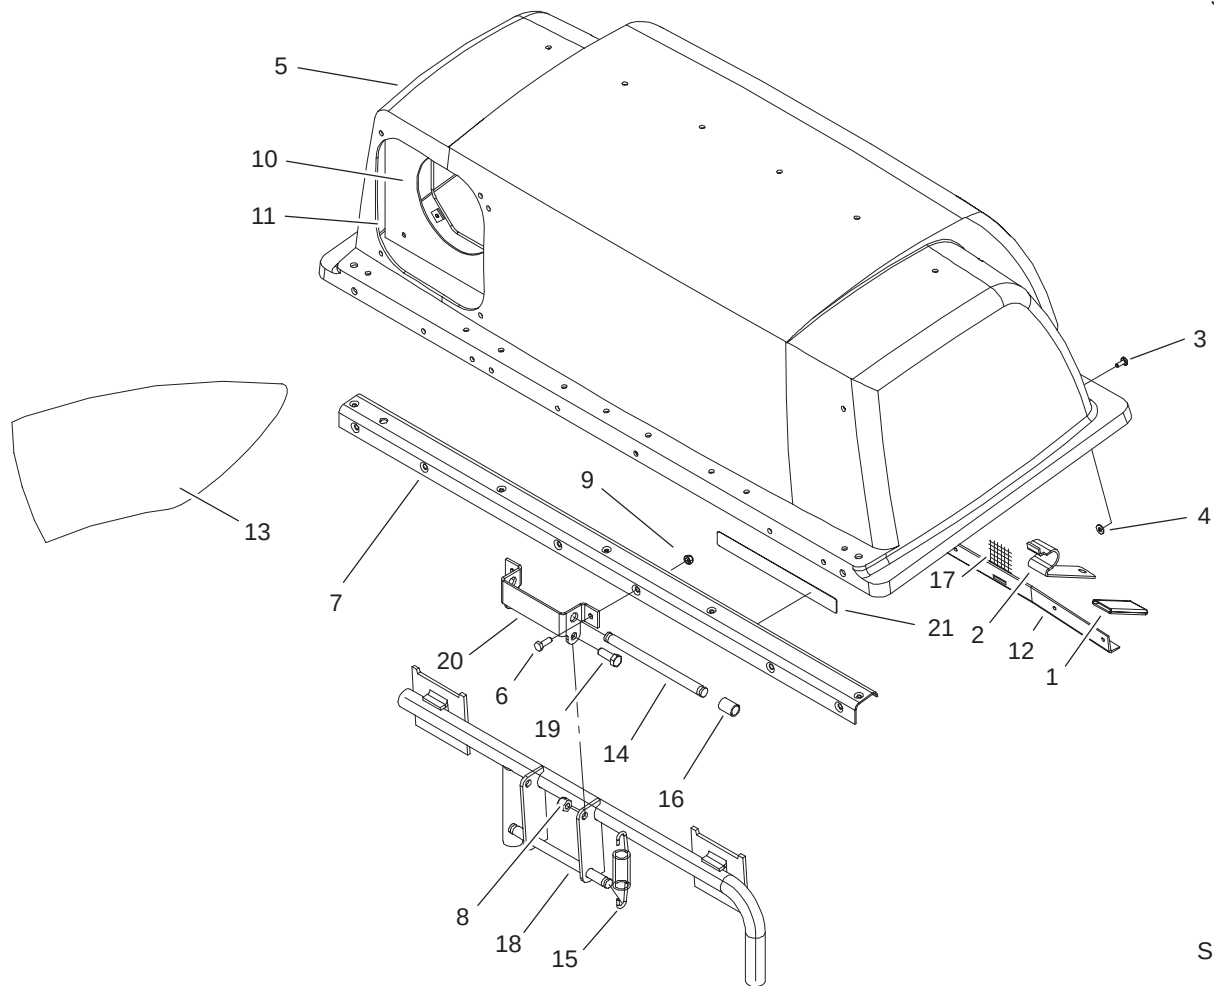

Sheet No.:2

Bag to Mower Assembly

Ref. No.	Part No.	Qty.	Description
1	115880	2	Grip
2	115481-03	2	Latch-Bagger, Top
3	114439	30	Rivet-Pop
4	9202704	10	Washer
5	105-9100	1	Top-Bagger
6	321-4	2	Screw-HH
7	88-9570	1	Stiffener ASM
8	3296-39	2	Nut-Lock, NI
9	3296-42	2	Nut-Lock, NI
10	114966	1	Clamp-Seal
11	117239	1	Seal-Chute
12	92-1736-03	1	Support-Screen
13	106-7029	1	Chute - Bagger
14	114960	1	Pin-Spring
15	114962	2	Spring-Extension
16	9790944	2	Spacer
17	114967	1	Screen-Bagger
18	114955-03	1	Frame ASM
19	323-6	2	Screw-HH
20	114961-03	1	Hinge-Bag, Top
21	93-7320	1	Decal-Caution

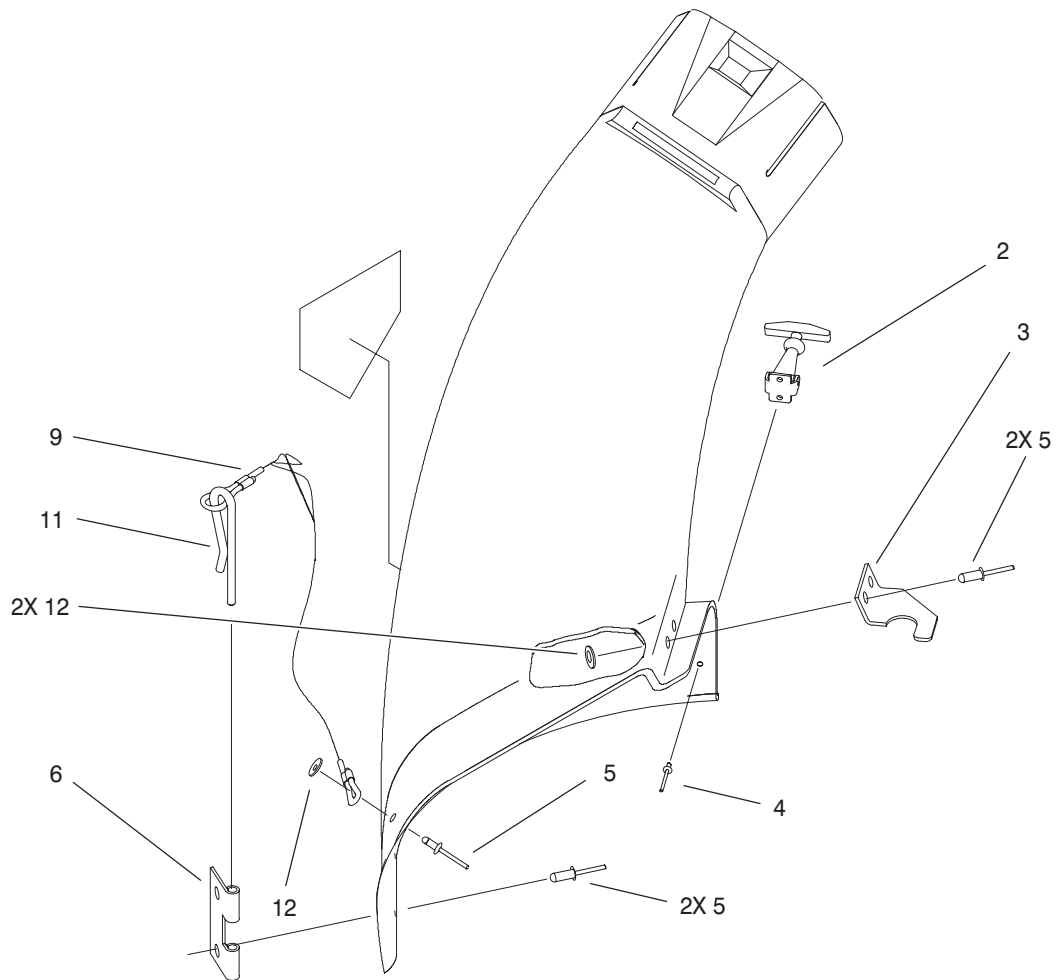


Sheet No.:A1

Bagger Chute Assembly Part No. 94-6036

Ref. No.	Part No.	Qty.	Description
2	117344	1	Handle ASM
3	94-6033	1	Latch – Bagger Elbow
4	3269-13	2	Rivet-Pop
5	3290-412	5	Rivet
6	28-8050	1	Brkt Chute Mtg
9	28-8070	1	Lanyard
11	28-8130	1	Pin-Locking, Chute
12	3256-22	3	Washer-Flat

Ref. No.	Part No.	Qty.	Description

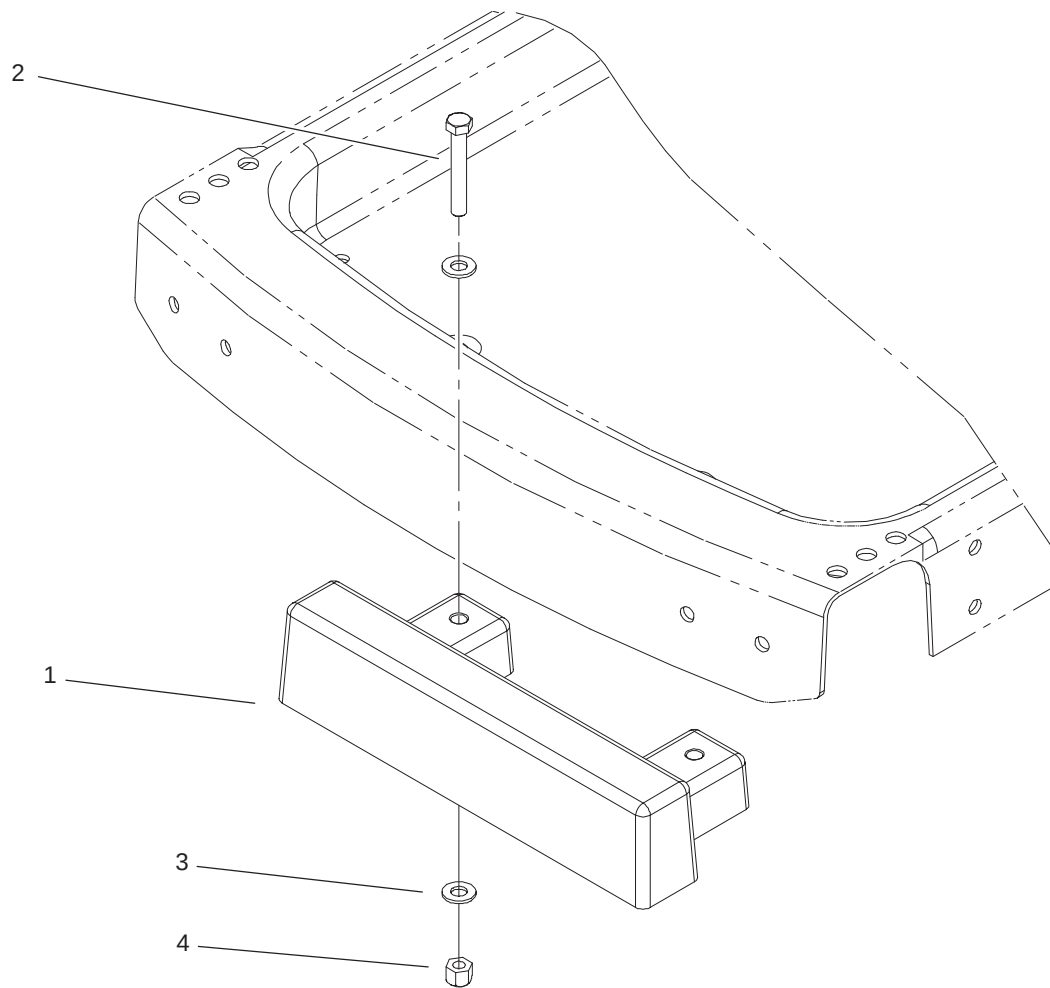

Sheet No.:6

Bagger Top Assembly

Ref. No.	Part No.	Qty.	Description
1	105-6972-03	1	Weight - Bagger
2	323-11	2	Screw-HH
3	3256-24	4	Washer-Flat
4	3296-39	2	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description

