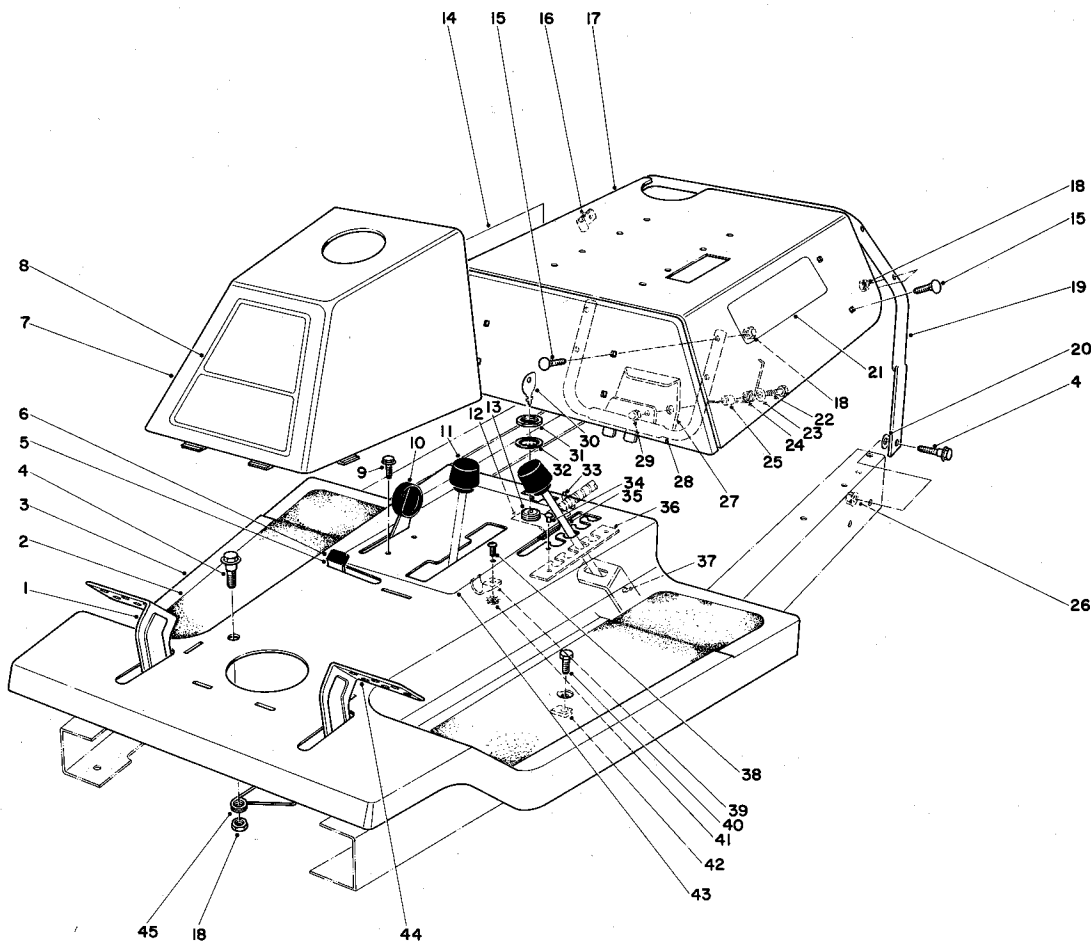


TORO®


MODEL NO. 56125 — 2000001 & UP

FORM NO. 3311-947

**PARTS
CATALOG****7HP REAR ENGINE RIDER****BODY ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	26-5310	Brake Pedal	1
2	44-7030	Foot Tread	2
3	44-7340	Front Body Assembly (Incl. Ref. #34, 36 & 43)	1
4	19-1470	Screw — Shoulder	3
5	19-1610	Parking Brake	1
6	19-2200	Tip Parking Brake	1
7	28-3690	Tower	1
8	44-7060	Decal — 725	1
9	32104-94	Screw Self Tapping	2
10	21-4560	Throttle Control	1
11	233-37	Knob	2
12	39-6580	Clip	1
13	12-2820	Switch Starter (Incl. Ref. #30-32)	1


Ref. No.	Part No.	Description	No. Used
14	44-7260	Decal Shift Pattern	1
15	3230-4	Bolt — Carriage	8
16	18-2970	Clamp	1
17	44-7240	Rear Body	1
18	32152-1	Nut — Lock	9
19	44-7270	Support — Rear Body	1
20	3256-23	Washer	2
21	43-5110	Decal — Toro	2
22	321-6	Capscrew	1
23	3256-22	Washer	1
24	44-9790	Spring — Latch	1
25	44-9820	Spacer Latch	1
26	32128-13	Flange Nut	2
27	44-9810	Latch	1
28	44-9800	Front Support	1

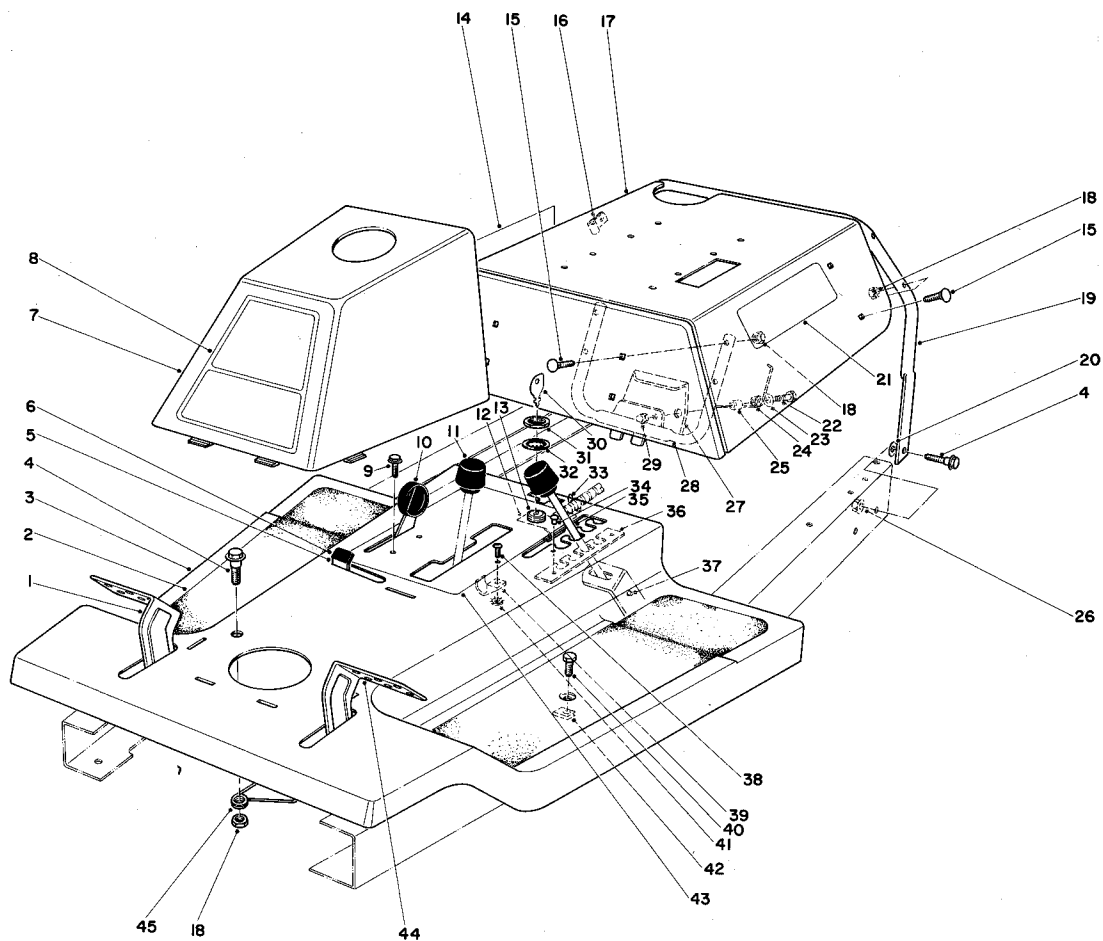

BODY ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	32111-7	Nut — Locking, Acorn Head	1
30	218-412	Key (Set of 2)	1
31	218-461	Nut	1
32	3254-5	Lockwasher	1
33	3290-378	Tie — Cable	1
34	3269-3	Rivet Pop	1
35	17-9630	Lever Height of Cut	1
36	17-9610	Plate — Height Adjustment	1
37	32121-51	Pin Spiral	1


Ref. No.	Part No.	Description	No. Used
38	3290-134	Screw — Machine Hex Head	1
39	43-7450	Clamp — Wire	1
40	32104-110	Screw — Self Tapping Hex Hd.	4
41	32149-7	Nut — Lock	1
42	3290-347	Nut — Clip On	4
43	44-7040	Decal — Front Body	1
44	19-1860	Clutch Pedal	1
45	19-1970	Parking Brake — Spring	1

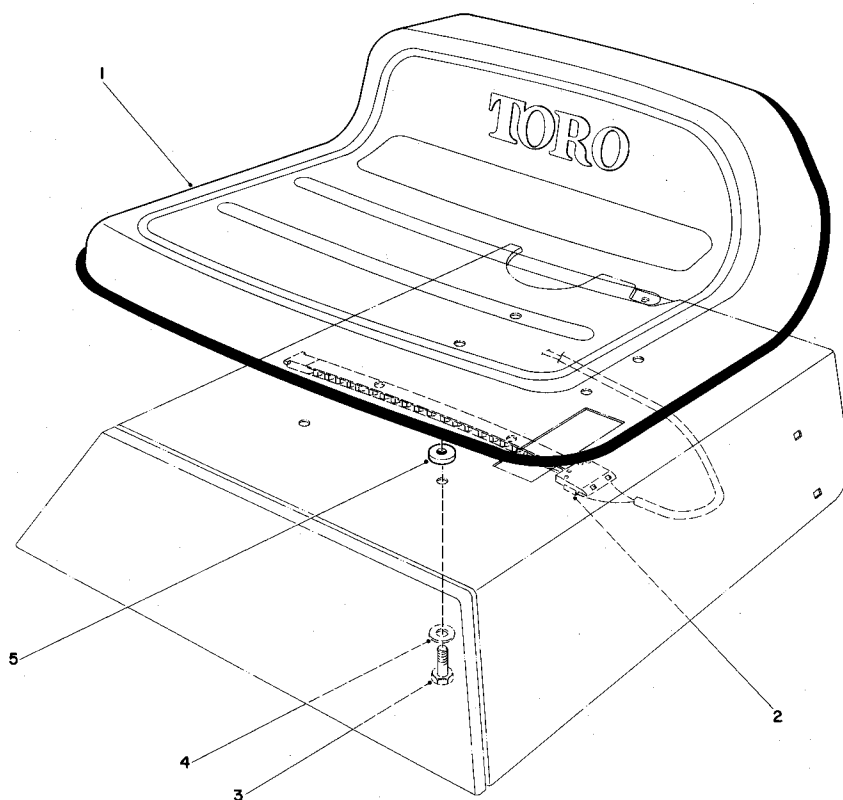

SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	38-0850	Seat	1
2	38-1420	Switch Seat	1
3	322-3	Capscrew	4


Ref. No.	Part No.	Description	No. Used
4	3256-2	Washer	4
5	26-4840	Spacer – Seat	4

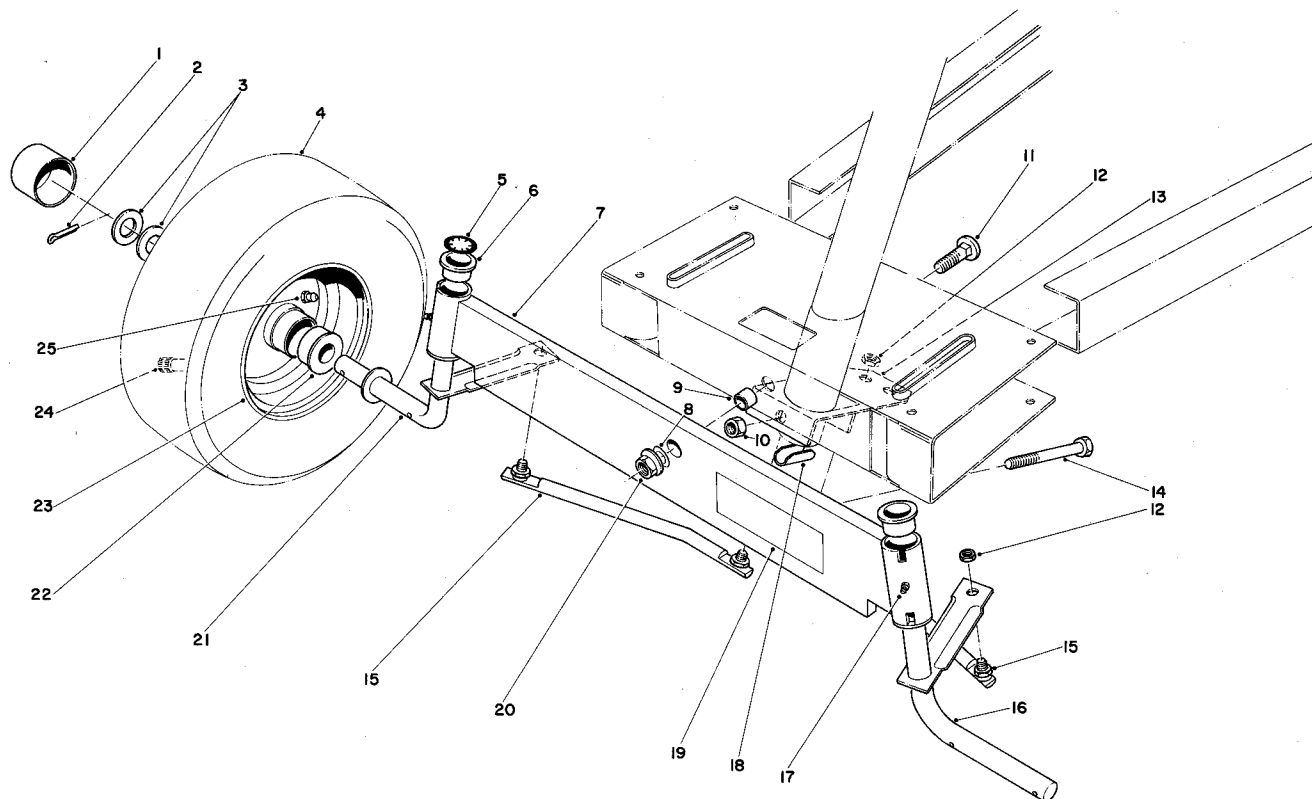

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	285-18	Hub Cap	2
2	3272-12	Cotter Pin	4
3	3256-27	Washer	6
4	231-108	Tire	2
5	32151-40	Retaining Ring	2
6	19-1890	Bushing	4
7	25-2330	Front Axle	1
8	18-9810	Washer – Thrust	1
9	19-1520	Spacer – Front Axle	1
10	32152-1	Nut – Lock	1
11	3233-2	Carriage Bolt	1
12	3296-20	Locknut	4
13	21-9840	Lever Steering	1


Ref. No.	Part No.	Description	No. Used
14	322-11	Capscrew	1
15	21-9860	Tie Rod Assembly	2
16	21-9820	Spindle L.H.	1
17	302-49	Grease Fitting	2
18	19-1510	Spacer – Steering Tube	1
19	26-4830	Decal – Instructions	1
20	32128-23	Nut – Flange	1
21	21-9830	Spindle R.H.	1
22	256-170	Bushing	4
23	217-80	Rim	2
24	232-27	Valve Stem w/Cap	2
25	302-5	Grease Fitting	2

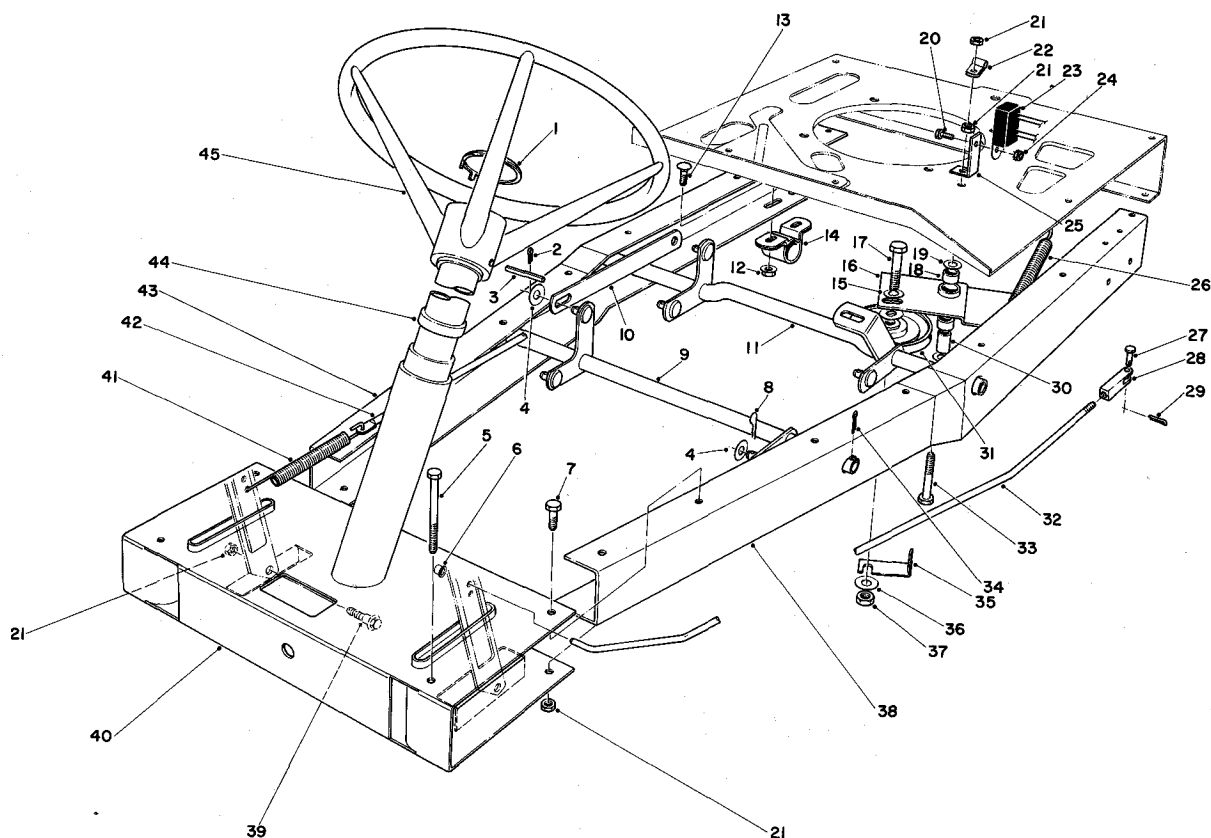

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	44-7070	Insert — Steering Wheel	1
2	3272-6	Cotter Pin	2
3	32121-78	Pin — Roll Slotted	1
4	3256-26	Washer	5
5	322-14	Capscrew Hex Hd.	2
6	3290-363	Nut — Push On	1
7	322-2	Capscrew Hex Hd.	4
8	3290-250	Pin Cotter	4
9	17-9890	Height Adjustment — Front	1
10	17-9530	Linkage — Height Adjustment	1
11	28-5690	Height Adjustment — Rear	1
12	3290-357	Nut — Lock Flange	4
13	3231-30	Bolt — Carriage	4
14	12-3340	Bearing — Pillow Block	2
15	3256-46	Washer	1
16	26-2830	Traction Idler Assembly (Incl. Ref. #18)	1
17	323-8	Capscrew Hex. Hd.	1
18	256-110	Bushing	2
19	3256-23	Washer	2
20	321-2	Capscrew	1
21	32152-1	Nut — Lock	10
22	18-2970	Clamp	1


Ref. No.	Part No.	Description	No. Used
23	39-6530	Module — Interlock	1
24	32149-2	Nut — Lock	1
25	44-7360	Mount — Module	1
26	19-5340	Spring Tension Clutch	1
27	283-3	Pin Clevis	1
28	282-17	Yoke — Adjustable	1
29	3272-4	Pin Cotter	1
30	26-2610	Spacer	1
31	12-5820	Idler Pulley	1
32	28-4550	Rod — Clutch	1
33	322-10	Capscrew	1
34	3272-23	Cotter Pin	4
35	12-9020	Retainer — Belt	1
36	3256-24	Washer	2
37	32153-2	Nut — Lock	1
38	26-2640	Frame Channel L.H.	1
39	19-1470	Screw Shoulder	2
40	24-7420	Front Frame	1
41	26-2740	Spring — Brake	1
42	26-5290	Rod — Brake	1
43	44-7120	Frame — Channel R.H.	1
44	44-7100	Steering Tube	1
45	38-0830	Steering Wheel	1

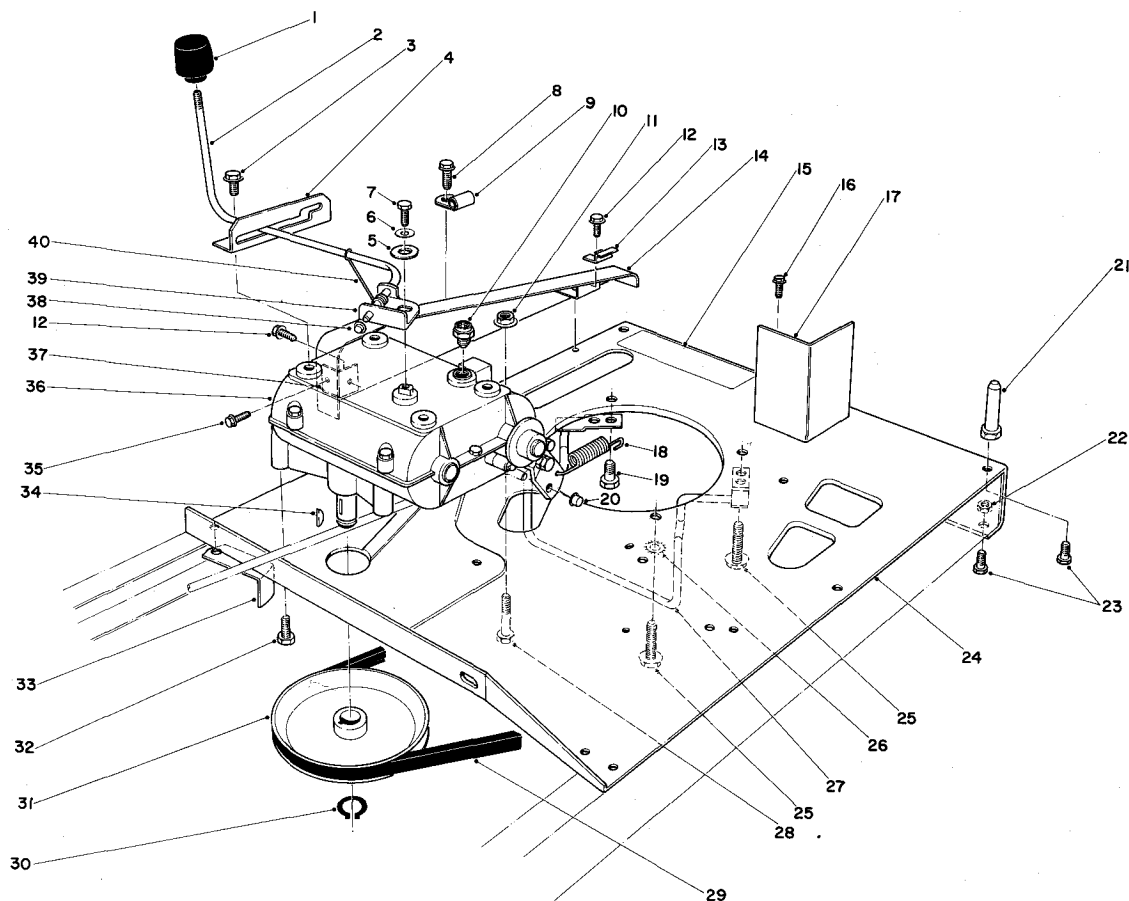

ENGINE PLATE AND SHIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	44-7180	Lever — Shift	1
3	32104-82	Screw — Self Tapping	3
4	44-7190	Gate — Shift Lever	1
5	3256-26	Washer	1
6	3290-436	Washer — Belleville	1
7	329-3	Screw — Cap Hex Head	1
8	32144-15	Screw — Self Tapping	1
9	18-2970	Clamp	1
10	28-4250	Switch — Neutral	1
11	32128-25	Nut — Locking Flange	1
12	12-3270	Screw — Self Tapping	2
13	44-7350	Clamp — Cable	1
14	44-7230	Chain — Guard	1
15	19-5850	Decal — Neutral Caution	1
16	32104-110	Screw — Self Tapping	2
17	19-9880	Baffle — Carb	1
18	26-6700	Brake Return Spring	1
19	32140-45	Screw — Hex Hd.	1
20	3290-363	Nut - Push On	1
21	25-1530	Mounting Pin Lower	2


Ref. No.	Part No.	Description	No. Used
22	32152-1	Nut — Lock	5
23	322-2	Capscrew	7
24	39-6750	Plate — Engine	1
25	11-0590	Capscrew Hex Hd. Thread Forming	2
26	3255-9	Lockwasher — External Tooth	1
27	26-5740	Belt Guide Engine	1
28	322-17	Screw — Cap Hex Head	1
29	19-2650	V-Belt	1
30	32120-64	Ring — Retaining External	1
31	7-4085	Pulley	1
32	32140-61	Screw Hex Hd.	4
33	17-2230	Retainer — Belt, Transmission	1
34	3257-5	Key — Hi Pro	1
35	32144-11	Screw — Self Tapping Hex. Hd.	1
36	44-7200	Transmission 5 Speed	1
37	44-7210	Bracket — Chain Guard Mounting	1
38	3290-320	Nut — Push Cap	1
39	44-7170	Clamp — Shift Lever	1
40	44-7160	Spring — Shift Rod	1

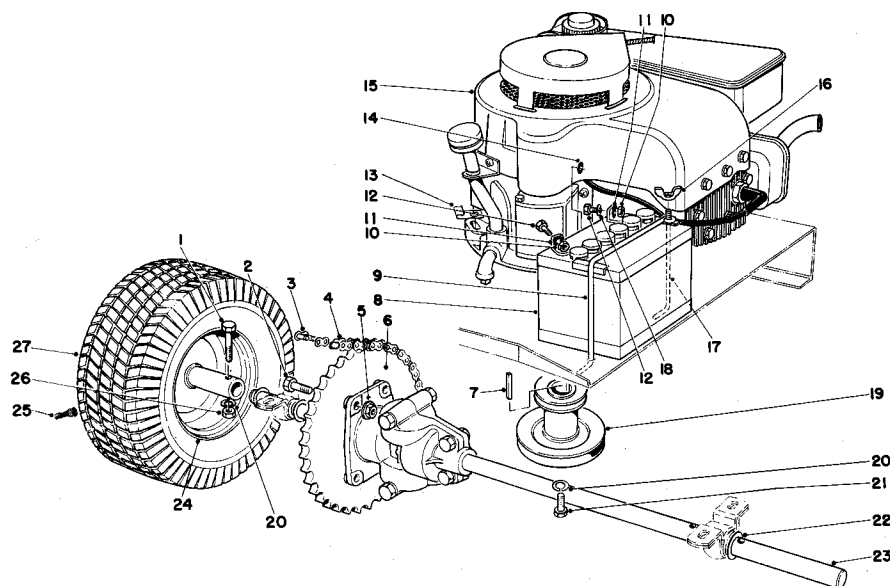

ENGINE AND AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-11	Screw — Cap Hex Hd.	2
2	322-5	Screw — Cap Hex Hd.	4
3	2710-6	Three Piece Connecting Link	1
4	44-7150	Chain — Roller	1
5	32152-1	Nut Lock	4
6	11-2390	Sprocket	1
7	3-0971	Square Key	1
8	26-7290	Battery	1
9	12-5700	Battery Clamp	1
10	3217-5	Nut	2
11	3253-3	Washer — Lock	2
12	321-4	Capscrew	2
13	7-0077	Clip — Cable	1
14	3255-7	Washer — Lock External Tooth	1

Ref. No.	Part No.	Description	No. Used
15	221-645	Engine	1
16	32103-14	Nut — Wing	1
17	12-5950	Support Rod — Battery	1
18	3256-22	Washer	1
19	26-6850	Sheave — Engine	1
20	3253-21	Washer — Lock	3
21	3211-36	Screw — Cap Hex Hd.	1
22	11-4930	Washer	3
23	39-6770	Differential	1
24	241-110	Rim	2
25	232-27	Valve w/Cap	2
26	32152-2	Nut — Lock	2
27	231-96	Tire	2

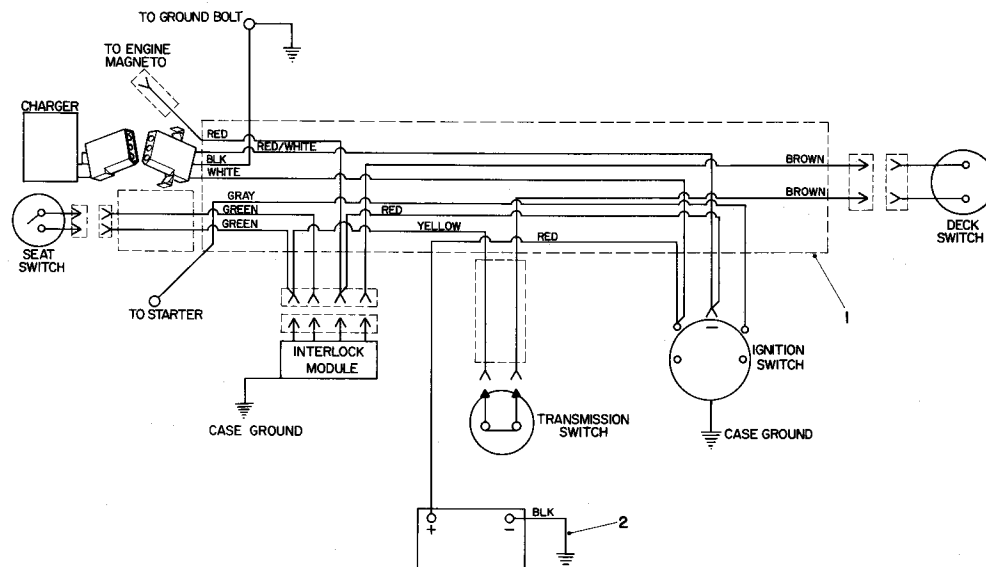


ELECTRICAL SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	44-7280	Wire Harness	1
2	7-7630	Wire Assembly (Battery to Ground)	1

Ref. No.	Part No.	Description	No. Used
*	44-7250	Charger – Battery	1


*Not Illustrated

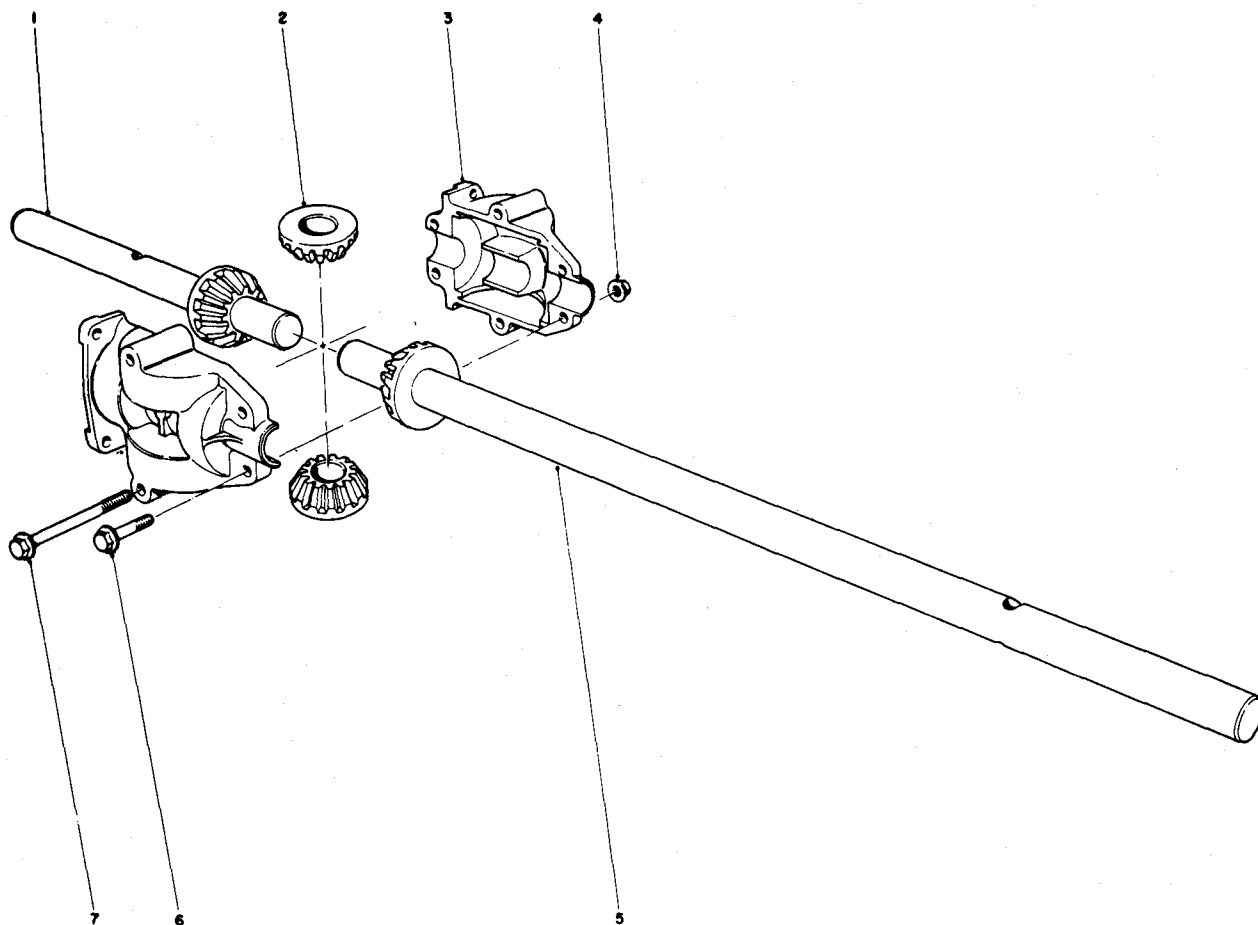

DIFFERENTIAL ASSEMBLY NO. 39-6770

Ref. No.	Part No.	Description	No. Used
1	2119-631	Axle Short Shaft	1
2	2119-632	Miter Gear	2
3	2119-629	Housing Half	2
4	32128-16	Locknut	6


Ref. No.	Part No.	Description	No. Used
5	2119-630	Axle Long Shaft	1
6	2119-531	Bolt, Short	4
7	2119-533	Bolt, Long	2

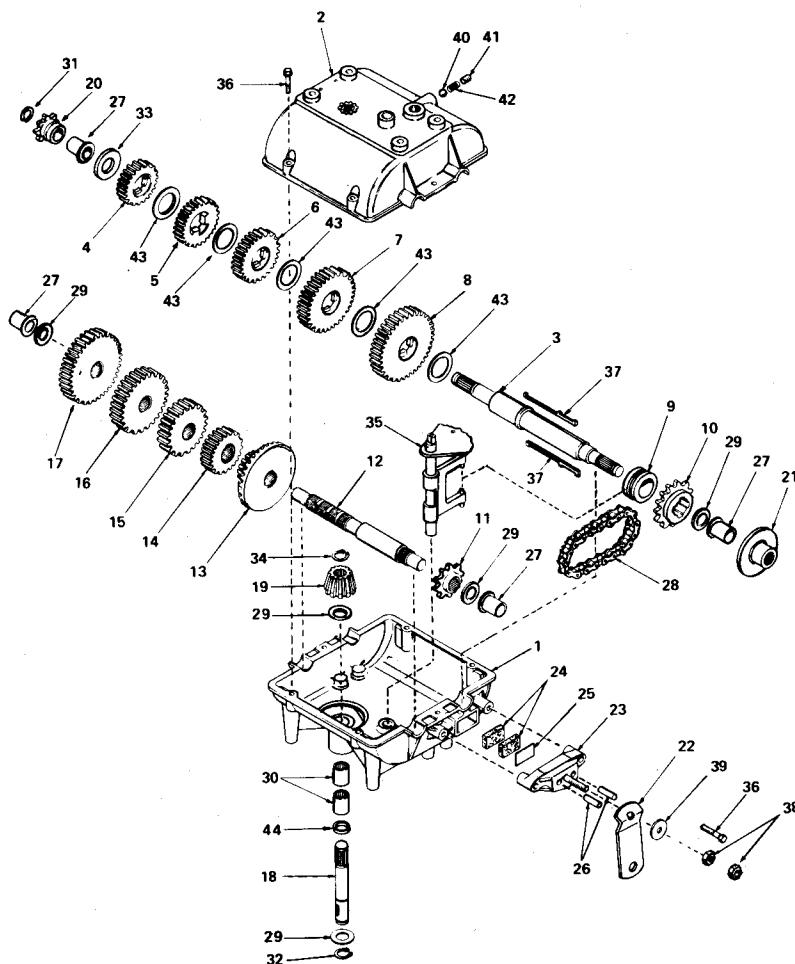

TRANSMISSION ASSEMBLY NO. 44-7200

Ref. No.	Part No.	Description	No. Used
1	770061	Case, Transmission	1
2	772083	Cover, Transmission	1
3	776161	Shaft, Output & Brake	1
4	778121A	Gear, Spur (20 teeth)	1
5	778122A	Gear, Spur (22 teeth)	1
6	778123A	Gear, Spur (25 teeth)	1
7	778124A	Gear, Spur (30 teeth)	1
8	778125	Gear, Spur (35 teeth)	1
9	784266	Collar, Shift	1
10	786083	Sprocket (18 teeth)	1
11	786082	Sprocket (9 teeth)	1
12	776134	Shaft, Counter	1
13	778109	Gear, Bevel (42 tooth & 15 tooth spur gear)	1
14	778126A	Gear, Spur (20 teeth)	1
15	778127A	Gear, Spur (25 teeth)	1
16	778128A	Gear, Spur (28 teeth)	1
17	778129A	Gear, Spur (30 teeth)	1
18	776135	Shaft, Input	1
19	778113A	Bevel Pinion, Input	1
20	786047	Sprocket (8 teeth)	1
21	790003	Disk, Brake	1
22	790029	Lever, Brake	1


Ref. No.	Part No.	Description	No. Used
23	790005	Holder, Brake Pad	1
24	790006	Pad, Brake	1
25	790007	Plate, Brake Pad	1
26	786026	Pin, Dowel	1
27	780105	Bushing, Flanged	1
28	786081	Chain, Roller (No. 41 chain, 24 links)	1
29	780072	Race, Thrust	1
30	780086	Bearing, Needle	1
31	792072	Ring, Retaining	1
32	792035	Ring, Retaining	1
33	780109	Washer	1
34	788040	Ring, Retaining	1
35	784267	Rod & Fork Assy., Shift	1
36	792073	Screw, Hex Hd.	1
37	792089A	Key	1
38	792075	Nut, Lock	1
39	792076	Washer, Flat	1
40	792077	Ball, Steel	1
41	792078	Screw, Set	1
42	792079	Spring	1
43	780108	Washer, Thrust	1
44	792001	Ring, Square Cut	1

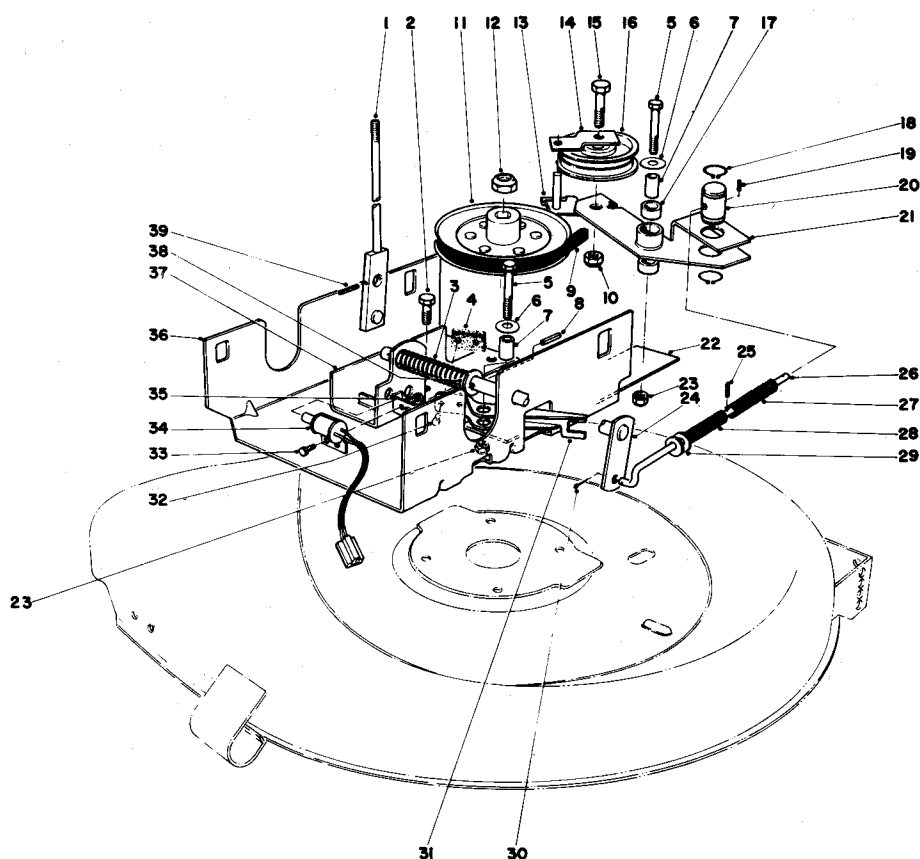

BLADE DRIVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	42-5320	Lever – Deck Engagement	1
2	322-4	Capscrew	3
3	19-1930	Spring	1
4	7-0643	Brake Lining – Blade	1
5	322-7	Capscrew	2
6	3256-23	Washer	2
7	26-2610	Spacer – Pivot	2
8	32121-45	Roll Pin	1
9	26-2770	V-Belt	1
10	32153-2	Locknut	1
11	26-4020	Pulley – Deck	1
12	17-0980	Nut – Special	1
13	28-4460	Retainer – Belt	1
14	28-4480	Belt Retainer – Upper	1
15	323-9	Capscrew	1
16	7-4660	Flat Idler	1
17	256-110	Bushing	2
18	32120-93	Snap Ring	2
19	32121-73	Roll Pin	1
20	26-2580	Pivot Pin	1


Ref. No.	Part No.	Description	No. Used
21	28-6450	Idler Arm (Incl. Ref. #17)	1
22	17-9540	Bracket – Idler Mounting	1
23	32152-1	Locknut	2
24	17-9960	Linkage – Blade Engagement	1
25	32121-50	Roll Pin	1
26	26-5500	Rod Blade Engagement	1
27	26-4800	Spring – Deck Idler	1
28	26-4810	Spring – Deck Brake	1
29	5-1350	Washer	2
30	3272-6	Cotter Pin	1
31	19-5980	Blade Brake (Incl. Ref. #4 & 32)	1
32	3295-25	Rivet	2
33	3290-134	Screw	2
34	28-4450	Switch – Interlock	1
35	32149-7	Nut – Keps	2
36	18-8210	Channel – Height Adjust.	1
37	42-5270	Mounting Bracket Blade	1
38	3256-26	Washer	1
39	32121-93	Spiral Pin	1

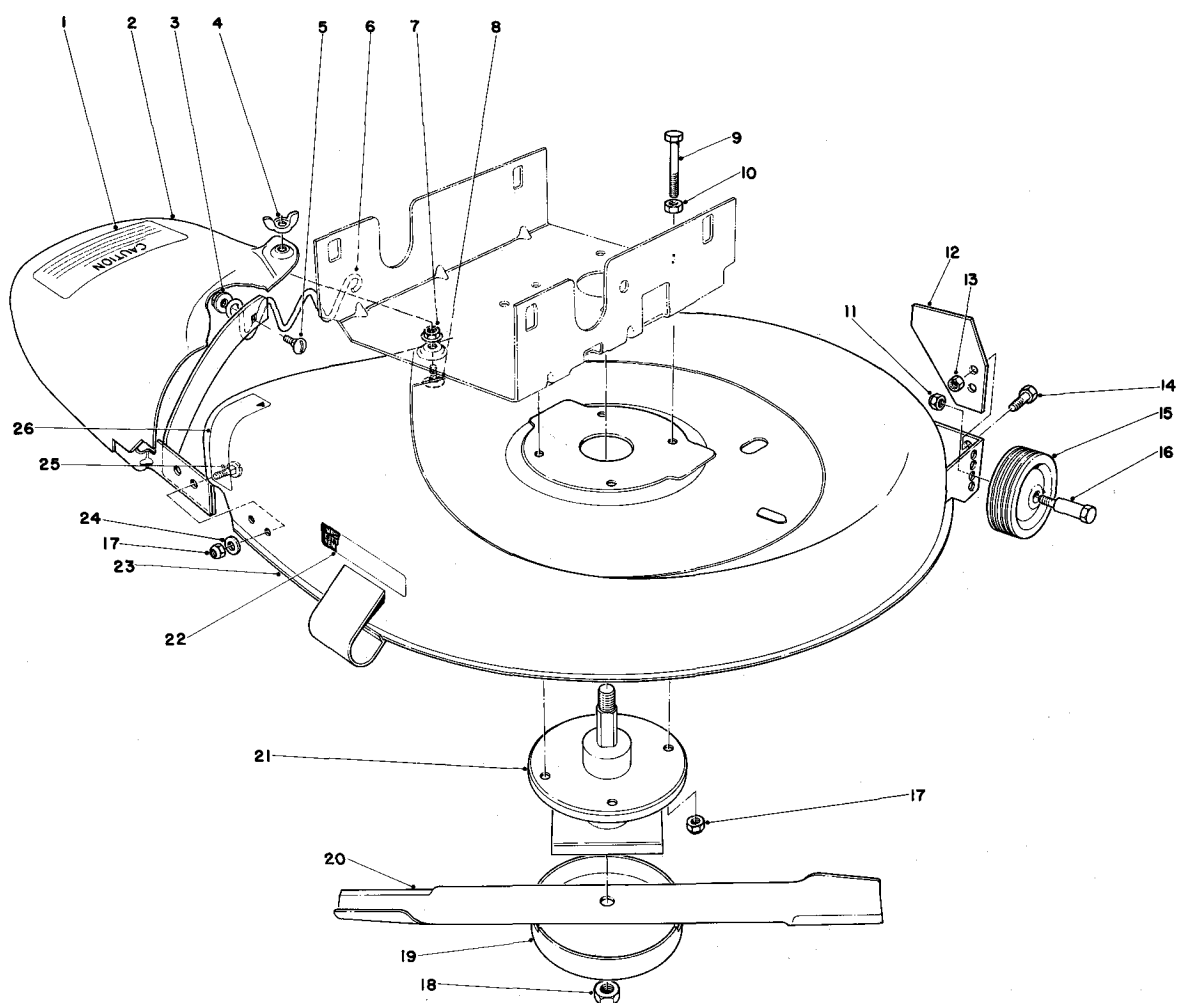

MOWER HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	12-2890	Decal — Deflector Caution	1
2	24-6730	Deflector	1
3	32128-10	Flange Nut	2
4	3-2625	Wing Nut	1
5	3229-22	Carriage Bolt	2
6	44-7370	Bracket — Foot Guard	1
7	3290-147	Palnut — Washer	1
8	26-0430	Elevator Bolt	1
9	322-12	Capscrew	1
10	3218-2	Jam Nut	1
11	32146-6	Locknut	2
12	39-6500	Deck Stop	2
13	32152-2	Nut — Lock	2

Ref. No.	Part No.	Description	No. Used
14	323-4	Capscrew Hex Hd.	2
15	11-1580	Wheel	2
16	3-2652	Shoulder Bolt	2
17	32152-1	Locknut	6
18	17-0980	Nut — Special	1
19	7-3522	Anti-Scalp Cup	1
20	26-8060	Blade	1
21	19-2140	Mower Spindle	1
22	26-4820	Decal — Deck Instructions	1
23	24-6700	Housing	1
24	3256-3	Washer	2
25	3230-2	Carriage Bolt	2
26	25-5810	Decal — Housing	1

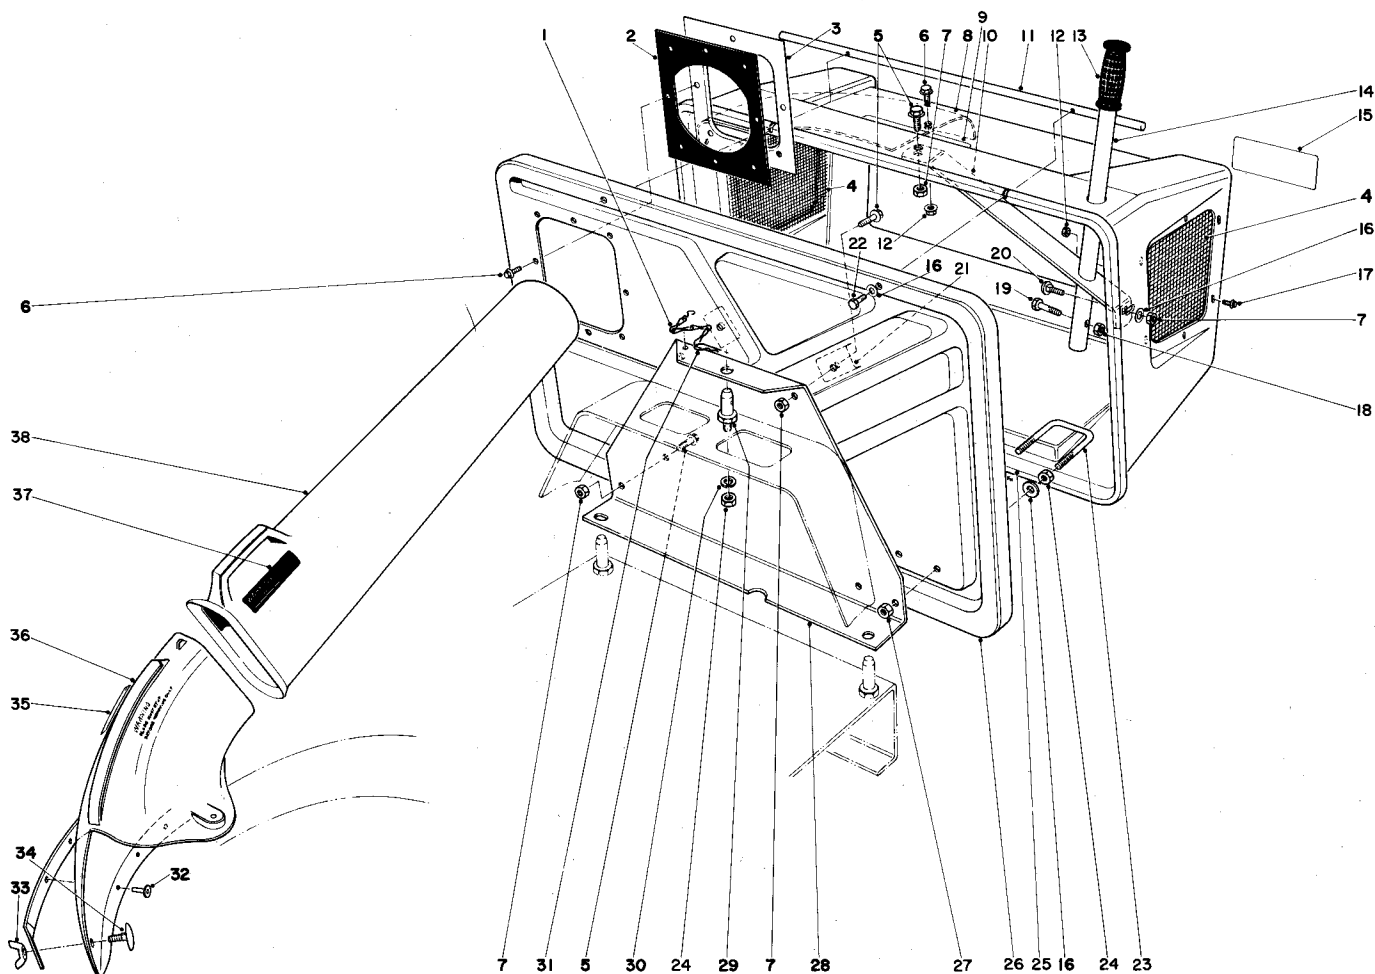


EASY-EMPTY GRASS CATCHER MODEL NO. 59046 (Optional)

Ref. No.	Part No.	Description	No. Used
1	2830-9	Chain	1
2	25-1410	Seal — Inlet	1
3	25-1420	Frame Seal	1
4	26-0010	Screen	2
5	3234-5	Hex Head Flange Capscrew	4
6	12-5450	Screw Thread Forming	10
7	32153-3	Locknut	5
8	25-1470	Deflector	1
9	46-2850	Decal Warning	1
10	25-1390	Guide — Handle	1
11	25-1360	Rod Pivot	1
12	32128-17	Locknut	14
13	233-40	Handle Grip	1
14	25-1380	Handle Tube	1
15	25-2200	Decal — Easy Empty Bagger	1
16	3256-2	Plain Washer	5
17	3290-126	Incl. Hex Washer Head Machine Screw	12
18	32153-4	Locknut	1
19	321-8	Capscrew	1
20	3230-15	Carriage Bolt	1

Ref. No.	Part No.	Description	No. Used
21	25-3980	Retainer	2
22	321-30	Hex Head Capscrew	2
23	25-1370	Latch	1
24	3217-6	Hex Nut	3
25	25-1290	Hopper	1
26	25-1330	Cap	1
27	3296-29	Locknut	2
28	25-1430	Plate — Mounting	1
29	25-1510	Mounting Pin Upper	1
30	3253-4	Lockwasher	1
31	3290-290	Hair Pin Cotter	1
32	3295-26	Pop Rivet	3
33	32103-2	Wing Nut	1
34	3290-391	Step Bolt	1
35	26-7030	Decal — Chute	1
36	26-7160	Chute Assembly (Incl. Ref. #32 & 35)	1
37	25-3600	Decal — Duct	1
38	25-3610	Duct Assembly (Incl. Ref. #37)	1
*	26-9010	Loose Parts	1


*Not Illustrated

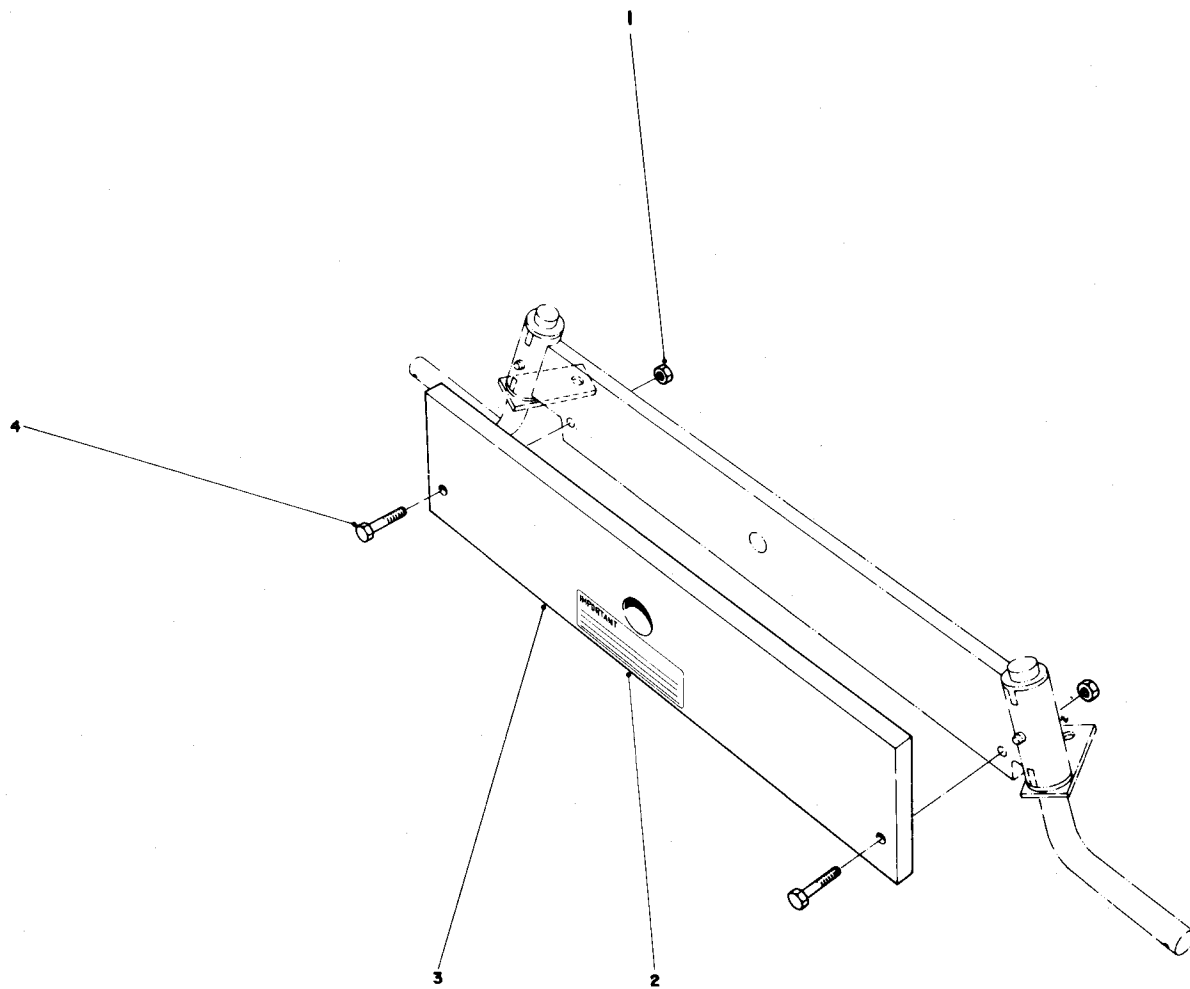

EASY-EMPTY GRASS CATCHER MODEL 59046 (OPTIONAL) (Continued)

Ref. No.	Part No.	Description	No. Used
1	32152-4	Locknut	2
2	26-4830	Decal Instructions	1

Ref. No.	Part No.	Description	No. Used
3	25-3030	Counterweight	1
4	321-9	Capscrew	2

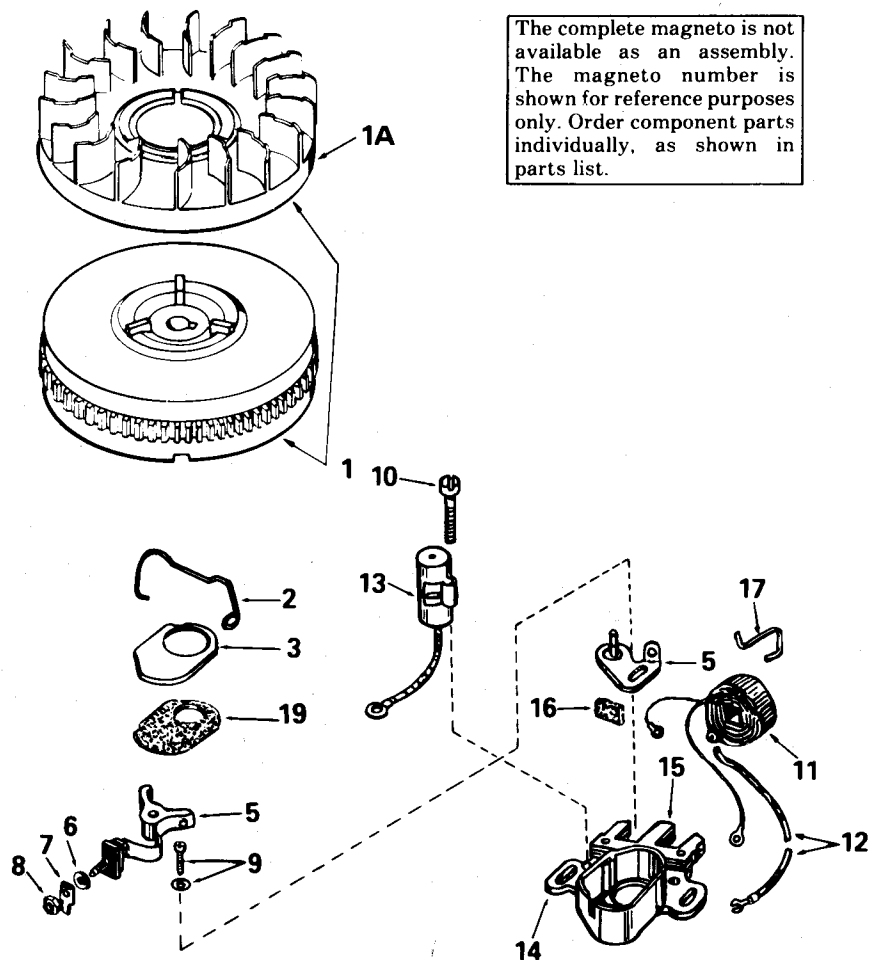

The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.


MAGNETO NO. 611043

Ref. No.	Part No.	Description	No. Used
1	611042	Flywheel (Incl. Ref. #1A)	1
1A	610933	Fan, Blower	1
2	30551	Spring, Breaker Box Dust Cover	1
3	610947	Cover, Dust	1
5	30547A	Contact Assy., Breaker	1
6	610385	Washer, Terminal	1
7	33356	Tab, Ground Terminal	1
8	610408	Nut, Terminal	1
9	29181	Screw & Washer, Breaker	1
10	610593	Screw, Condenser	1

Ref. No.	Part No.	Description	No. Used
11	30560A	Coil Assy. (Incl. Ref. #12)	1
12	30554	Wire, Lead	1
13	30548B	Condenser	1
14	30545	Core & Plate	1
15	30561B	Stator Assy. (Incl. Ref. #2 thru 11, 13, 14, 16, 17 & 19)	1
16	30549	Felt, Cam Wiper	1
17	31311	Clip, Coil Locking	1
19	610957	Gasket, Dust Cover	1

*The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.


TECUMSEH ENGINE MODEL NO. V70-125183D

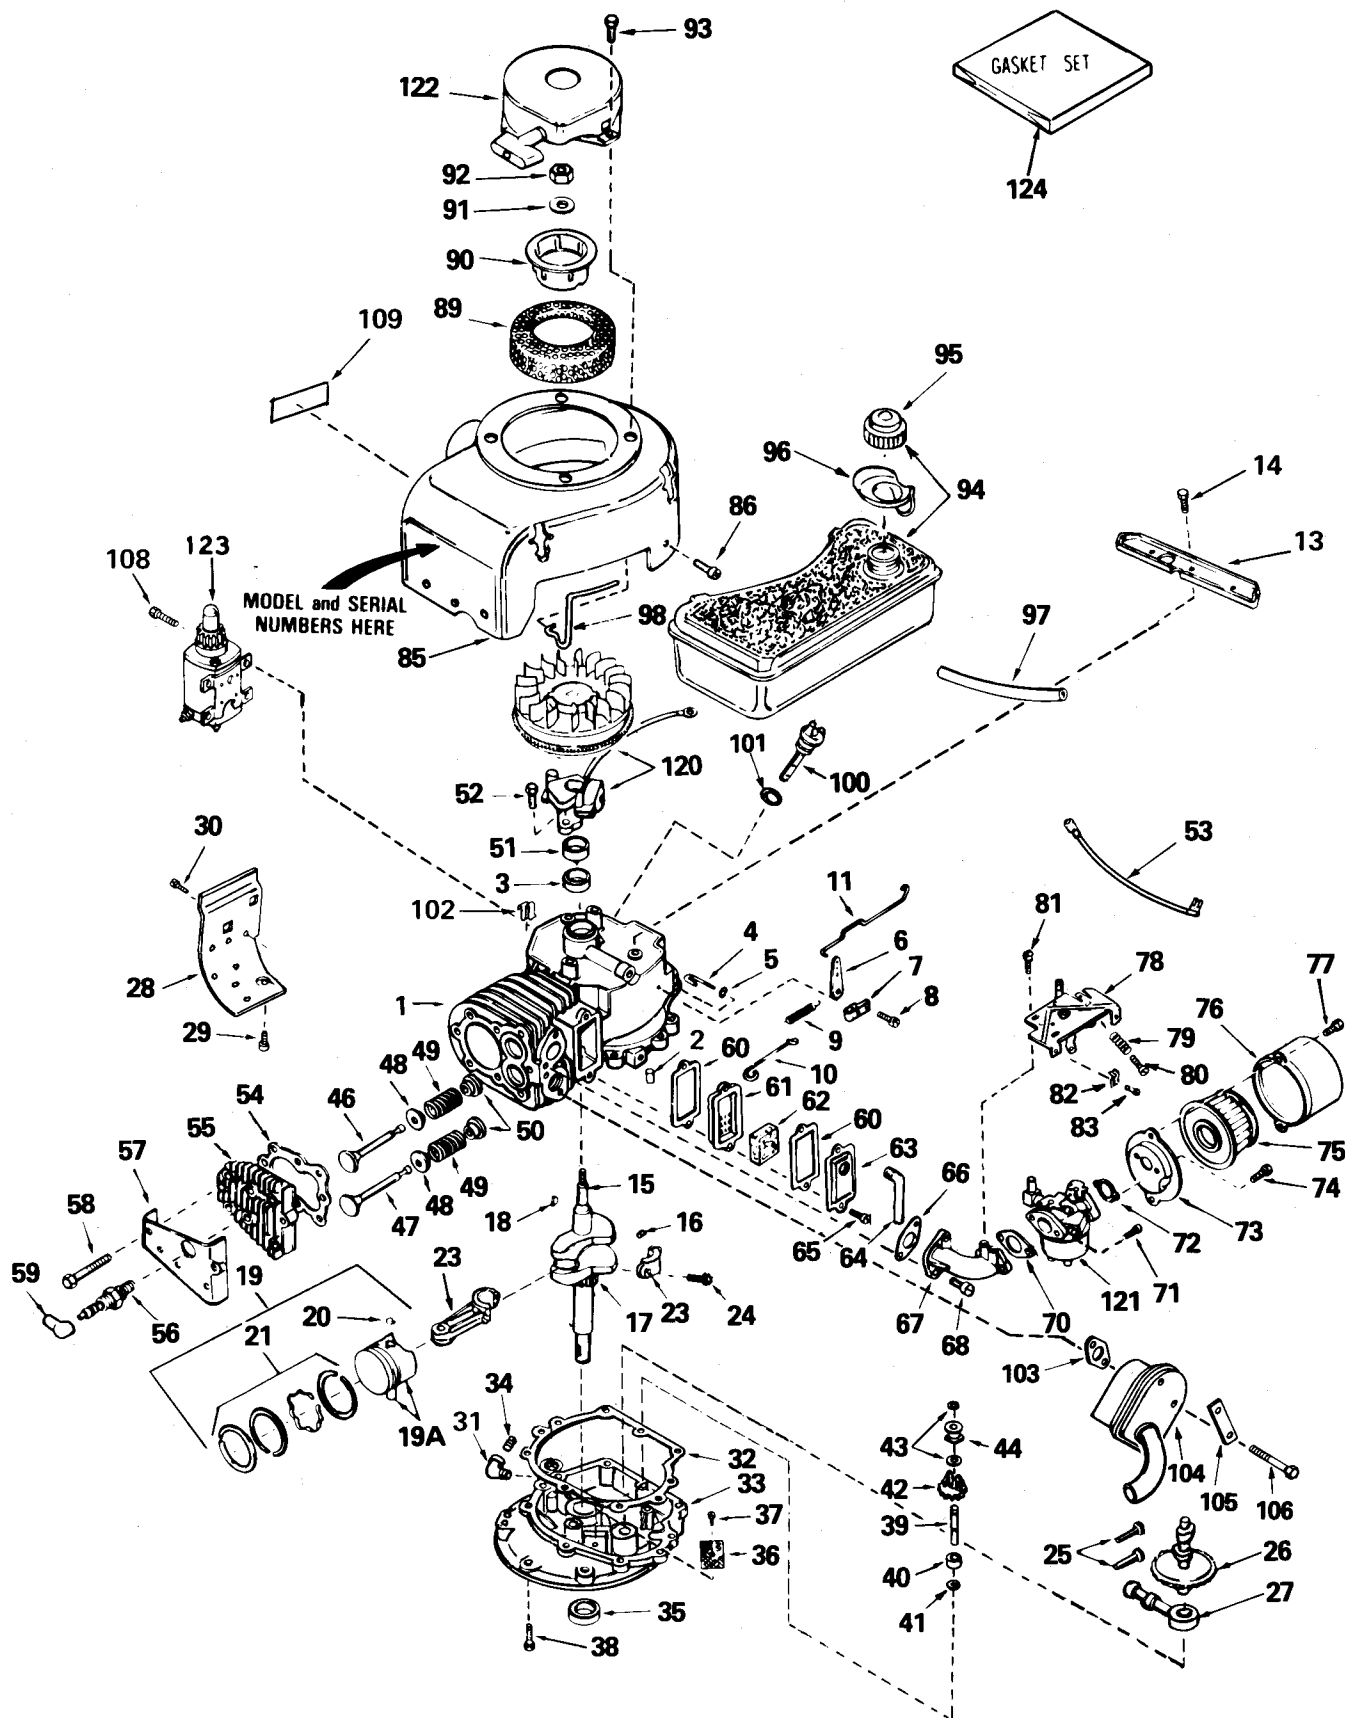

TECUMSEH ENGINE MODEL NO. V70-125183D

Ref. No.	Part No.	Description	No. Used
1	34172	Cylinder Assy. (Incl. Ref. #2, 3, 100 & 101)	1
2	27652	Pin, Dowel	2
3	32630	Seal, Oil	1
4	30669	Rod, Governor (Incl. Ref. #5)	1
5	28277	Washer, Flat	1
6	31357	Lever, Governor	1
7	31335	Clamp, Governor Lever	1
8	650548	Screw, Hex Washer Hd.	1
9	31361	Spring, Governor	1
10	32582	Link, Governor Spring	1
11	31823	Link, Governor lever-to-throttle	1
13	34105	Bracket, Blower Housing	1
14	650561	Screw, Hex Washer Hd.	2
15	34890	Crankshaft Assembly (Incl. Ref. #16 & 17)	1
16	29783	Pin, Crankshaft Gear	1
17	27884	Gear, Crankshaft	1
18	32589	Key, Flywheel	1
19	34517	Piston, Pin & Ring Assy. (Std.) (Incl. Ref. #19A, 20 & 21)	1
19	34518	Piston, Pin & Ring Assy. (.010 over-size) (Incl. Ref. #19A, 20 & 21)	1
19	34519	Piston, Pin & Ring Assy. (.020 over-size) (Incl. Ref. #19A, 20 & 21)	1
19A	32592B	Piston & Pin Assy. (Std.) (Incl. Ref. #20)	1
19A	32593B	Piston & Pin Assy. (.010 over-size) (Incl. Ref. #20)	1
19A	32594B	Piston & Pin Assy. (.020 over-size) (Incl. Ref. #20)	1
20	27888	Ring, Piston Pin Retaining	2
21	32595	Ring Set, Piston (Std.)	1
21	32596	Ring Set, Piston (.010 over-size)	1
21	32597	Ring Set, Piston (.020 over-size)	1
23	32591C	Rod Assy., Connecting (Incl. Ref. #24)	1
24	650662B	Bolt, Connecting Rod	2
25	34034	Lifter, Valve	2
26	32114	Camshaft (Mechanical Compression Release)	1
27	31356	Pump Assy., Oil	1
28	30622	Extension, Blower Housing	1
29	650128	Screw, Fil. Hd.	1
30	30688	Screw, Hex Hd.	1
31	29573	Elbow, 90° Street	1
32	*30684	Gasket, Mounting Flange	1
33	31471C	Flange Assy., Mounting (Incl. Ref. #34 thru 37 & 39)	1
34	27642	Plug, Pipe (Sq. Hd.)	1
35	27897	Seal, Oil	1
36	31355	Screen, Oil Filter	1
37	29117	Screw, Hex Hd. Thread Cutting	1
38	650488	Screw, Hex Hd.	7
39	30668	Shaft, Mechanical Governor	1
40	31707A	Spacer Assy. Governor (Incl. Ref. #41)	1
41	30590A	Washer, Flat	1
42	30591	Gear Assy., Governor (Incl. Ref. #41)	1
43	29193	Ring, Retaining	2
44	30588A	Spool, Governor	1
46	32783	Valve, Intake (Std.) (Incl. Ref. #50)	1
46	32784	Valve, Intake (1/32" over-size) (Incl. Ref. #50)	1
47	27878A	Valve, Exhaust (Std.) (Incl. Ref. #50)	1
47	27880A	Valve, Exhaust (1/32" over-size) (Incl. Ref. #50)	1
48	27882	Cap, Upper Valve Spring	2


Ref. No.	Part No.	Description	No. Used
49	27881	Spring, Valve	2
50	32581	Cap, Lower Valve Spring	2
51	33876	Gasket, Stator	1
52	650489	Screw, Hex Hd.	2
53	610683	Wire, Ground	1
54	*32631	Gasket, Cylinder Head	1
55	30938A	Head, Cylinder (Incl. 3 of Ref. #58)	1
56	33636	Plug, Spark (Champion J-8 or equivalent) Except for Canada	1
56	34251	Resistor Spark Plug (Canadian Regulations require RJ-17LM Resistor Spark Plug)	1
57	30939A	Cover, Cylinder Head	1
58	650697A	Screw, Hex Flange Head	8
59	610118	Cover, Spark Plug	1
60	*27896	Gasket, Breather	2
61	28423	Body, Breather	1
62	28424	Element, Breather	1
63	28425	Cover, Breather	1
64	27627	Tube, Breather	1
65	650128	Screw, Fil. Hd.	2
66	*27915	Gasket, Intake Pipe	1
67	32632	Pipe, Intake	1
68	650378	Screw, Fil. Hd.	2
70	*26756	Gasket, Carburetor	1
71	650372	Screw, Hex Hd.	2
72	*27272	Gasket, Air Cleaner	1
73	31691	Bracket, Air Cleaner	1
74	28820	Screw, Fil. Hd.	2
75	30727	Element, Air Cleaner	1
76	31715	Body, Air Cleaner	1
77	650152	Screw, Fil. Hd.	2
78	32181A	Control Assy., Speed (Incl. Ref. #79 & 80)	1
79	31342	Spring, Compression	1
80	650549	Screw, Fil. Hd.	1
81	30200	Screw, Hex Washer Hd. Self-tap	2
82	27793	Clip, Conduit	1
83	28942	Screw, Hex Washer Hd.	1
85	32629A	Housing, Blower	1
86	29747A	Screw, Hex Hd.	2
89	590417	Screen, Starter Cup	1
90	32125	Cup, Starter	1
91	650815	Washer, Belleville	1
92	8116	Nut, Flywheel	1
93	29716	Screw, Pan Hd.	4
94	32926	Tank Assy. Fuel (Incl. Ref. #95)	1
95	33032	Cap, Fuel Tank	1
96	33548	Deflector, Fuel	1
97	29774	Line, Fuel	1
98	33549	Clamp, Tank Hold-down	1
100	34165	Dipstick, Oil (Incl. Ref. #101)	1
101	*29673	Gasket, Dipstick	1
102	27275	Clip, Hi-tension Wire	1
103	*27930	Gasket, Muffler	1
104	391023	Muffler	1
105	31588	Plate, Muffler Locking	1
106	650696	Screw, Hex Hd.	2
108	30688	Screw, Hex Hd.	4
109	34374	Decal, Instruction	1
120	611043	Magneto (The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.)	
121	631449	Carburetor (Incl. Ref. #70)	1
122	590420	Starter, Rewind	1
123	33806	Motor, Starter (12 Volt)	1
124	33239	Gasket Set (Incl. Items Marked *)	1

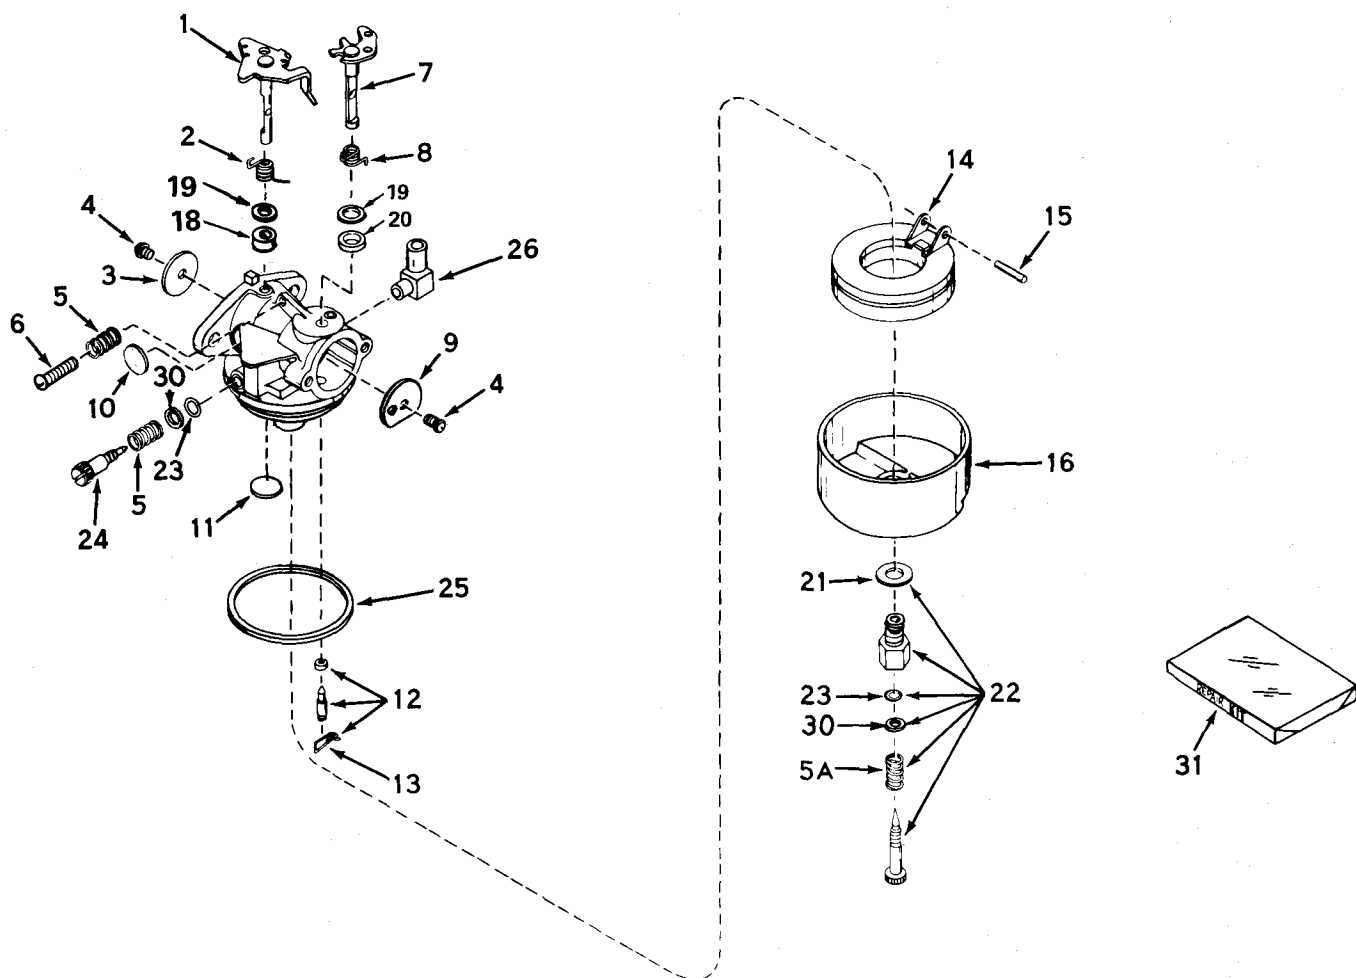

CARBURETOR NO. 631449


Ref. No.	Part No.	Description	No. Used
1	31834	Shaft & Lever Assy., Throttle	1
2	631767	Spring, Throttle Return	1
3	631036	Shutter, Throttle	1
4	650506	Screw, Rd. Hd.	2
5	630766	Spring, Idle Regulating Screw	2
5A	630738	Spring, Main Adjustment Screw	1
6	650417	Screw, Idle Regulating	1
7	630973	Shaft & Lever Assy., Choke	1
8	632045	Spring, Choke	1
9	631037	Shutter, Choke	1
10	*630748	Plug, Welch	1
11	*631027	Plug, Welch	1
12	*631021	Inlet Needle, Seat & Clip Assy. (Incl. Ref. #13)	1
13	631022	Clip, Inlet Needle	1
14	632019	Float, Carburetor	1

Ref. No.	Part No.	Description	No. Used
15	*631024	Shaft, Float	1
16	631867	Bowl, Float	1
18	631971	Seal, Dust	1
19	631184	Washer, Flat	2
20	631183	Washer, Felt	1
21	27110	Gasket, Bowl-to-body	1
22	*631026	Adjustment Screw Assy., Main (Incl. Ref. #5A, 21, 23 & 30)	1
23	*630740	"O" Ring, Adjustment Screw	2
24	*631078	Screw, Idle Adjustment	1
25	*631028	Gasket, Bowl-to-body	1
26	631806	Fitting, Fuel Inlet	1
30	630739	Washer, Flat	2
31	631029	Repair Kit (Incl. Items Marked *)	1

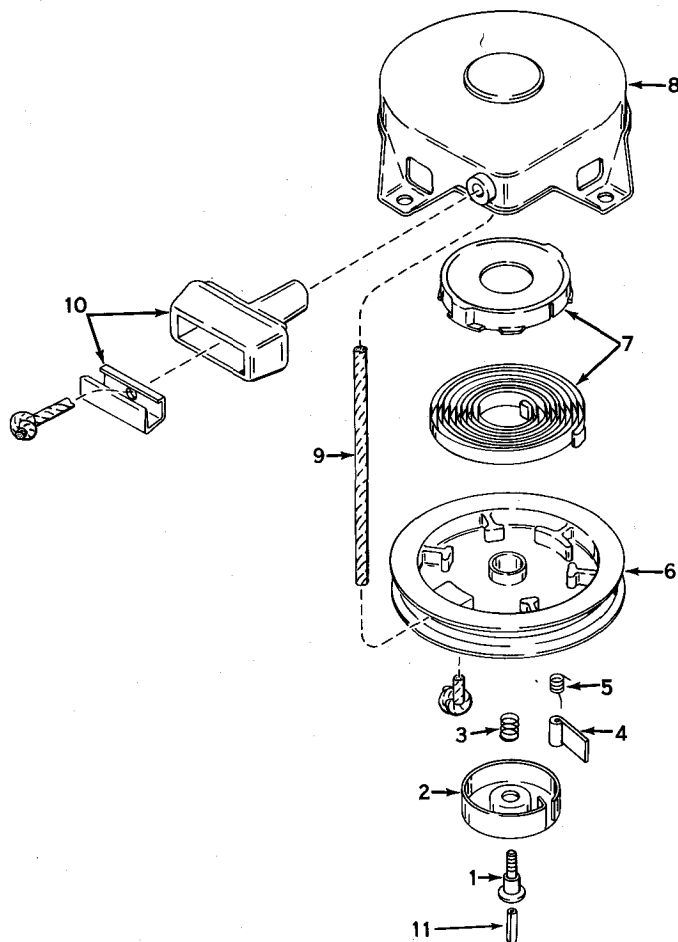

REWIND STARTER NO. 590420

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	590409A	Screw, Retainer	1	7	590414	Spring & Keeper Assy.	1
2	590410	Retainer, R. H.	1	8	590536	Housing Assy., Starter (Incl. Ref. #1)	1
3	590411	Spring, Brake	1	9	590451A	Rope, Starter	1
4	590148	Dog, Starter	1	10	590387	Handle Assy., Starter	1
5	590412	Spring, R. H. Dog	1	11	590459	Pin, Centering	1
6	590413A	Pulley	1				

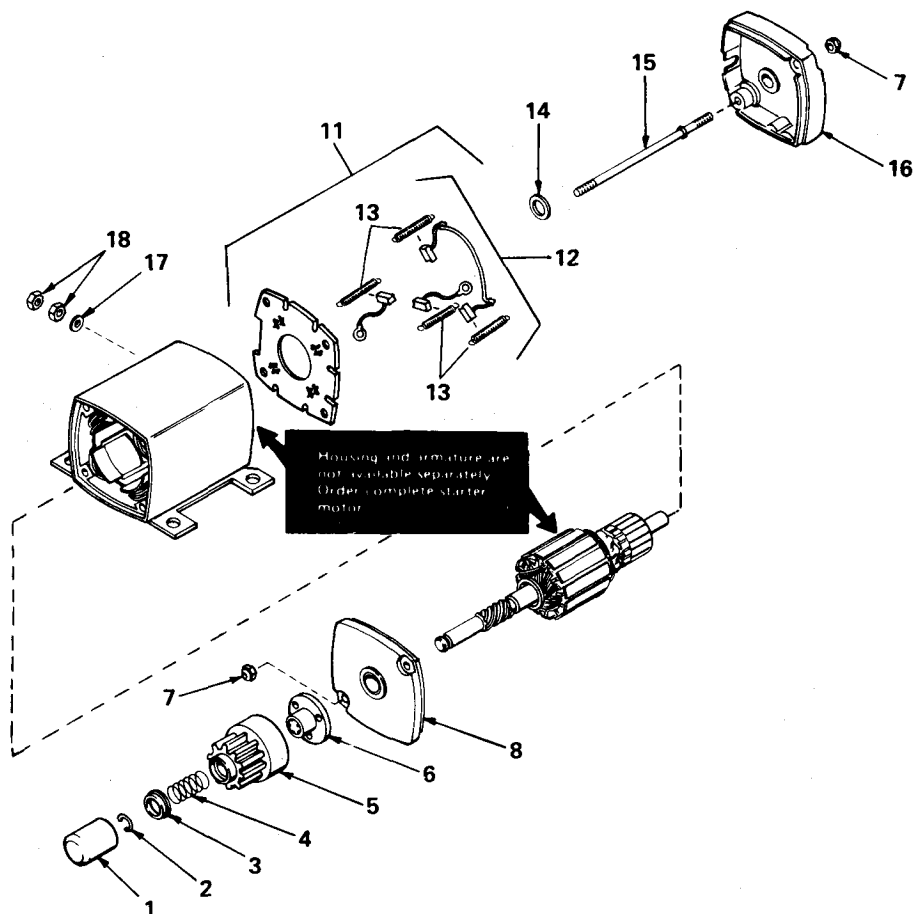

12 VOLT ELECTRIC STARTER NO. 33606

Ref. No.	Part No.	Description	No. Used
1	33451	Cover, Dust	1
2	33842	Ring, Retainer	1
3	33430	Retainer, Spring	1
4	33431	Spring, Anti-Drift	1
5	33432	Gear	1
6	33433	Nut, Engaging	1
7	33450	Nut, Lock	4
8	33434	Cap Assy., Drive End	1
11	33712	Card Assy., Brush (Incl. No. 12)	1

Ref. No.	Part No.	Description	No. Used
12	33705	Brush & Spring Kit (Incl. 4 pcs. of No. 13)	1
13	33440	Spring, Brush	4
14	590500	Washer, Thrust	1
15	33449	Bolt	2
16	33706	Cap Assy., Commutator End	1
17	650168	Washer, Flat	1
18	650723	Nut, Hex	2

The Toro Promise

A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 1 Year
Residential Products Used Commercially . . . 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Rider has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on top left hand side of engine mounting plate adjacent to left rear wheel. In any correspondence concerning the Rider, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Rider.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

MAINTENANCE RECORD

Date	Hours Used	Oil Change	Air Cleaner Service	Lubrication	Sharpen Blade	Winter Storage	Spring Service	Spark Plug

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]