



Form No. 3329-322


# Energize To Run (ETR) Solenoid Timer Kit

Reelmaster® 4000 Series

Part No. 106-9200

## Installation Instructions


1. Stop engine, set parking brake and remove key from ignition switch.
2. Disconnect negative (-) battery cable from battery.
3. Unplug wire connector from run relay as shown in figure 1.

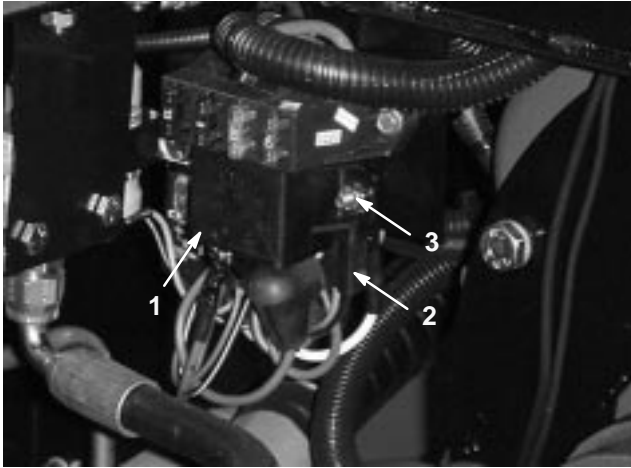

**Figure 1**

- |              |                           |
|--------------|---------------------------|
| 1. Run relay | 3. Run relay mounting nut |
| 2. Connector |                           |

4. Plug timer kit wire harness connectors into connector from main harness and onto run relay (Fig. 2).

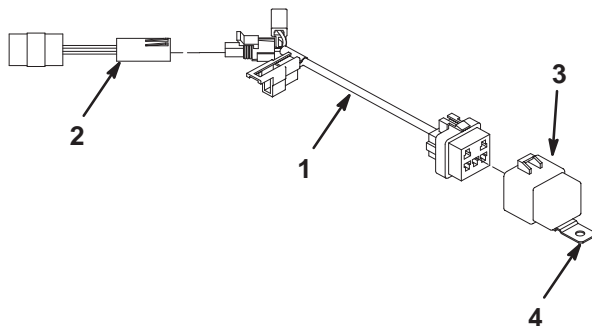

**Figure 2**

- |                           |                       |
|---------------------------|-----------------------|
| 1. Timer kit wire harness | 3. Relay              |
| 2. Delay timer            | 4. Relay mounting tab |

5. Plug delay timer connector into timer wire harness connector (Fig. 2).
6. Plug other harness connector onto relay (Fig. 2).
7. Remove nut from screw securing run relay to traction unit frame (Fig. 2).
8. Insert relay mounting tab (Fig. 2) onto mounting screw and secure with nut.
9. Secure any loose wire with a cable tie.
10. Connect negative (-) battery cable to battery.