Form No. 3329-325

# **TORO**<sub>®</sub>

## Front Axle Shaft Replacement Kit for Reelmaster<sup>®</sup> 5000 Series Traction Units Part No. 106–7099

### Parts Catalog

#### **Ordering Replacement Parts**

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

#### **Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

#### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002 All Rights Reserved



Sheet No.:0

## Front Axle Replacement Kit Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12	100-3840 100-3841 100-3847 100-3842 21-8180 100-3845 100-3848 100-3849 100-3850 106-9205 106-9209-03 242-50 106-9206	1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Bearing ASM Seal–Grease O–Ring Cap–Bearing Zerk–Special Stud–Wheel Drum–Brake				