



22in Recycler[®] Lawnmower

Model No. 20009–220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Deck, Side Chute, and Rear Door Assembly . .	3	Engine Assembly	
Rear Axle and Wheel Assembly	4	Tecumseh–LEV120–361541B	10
Front Axle and Wheel Assembly	5	Engine Assembly	
Engine and Blade Assembly	6	Tecumseh–LEV120–361541B (Continued) . .	11
Handle and Control Assembly	7	Recoil Starter No. 590739	
Carburetor No. 640303		Tecumseh–LEV120–361541B	12
Tecumseh–LEV120–361541B	8	Recoil Starter No. 590702 (Optional)	
Engine Assembly		Tecumseh–LEV120–361541B	13
Tecumseh–LEV120–361541B	9		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

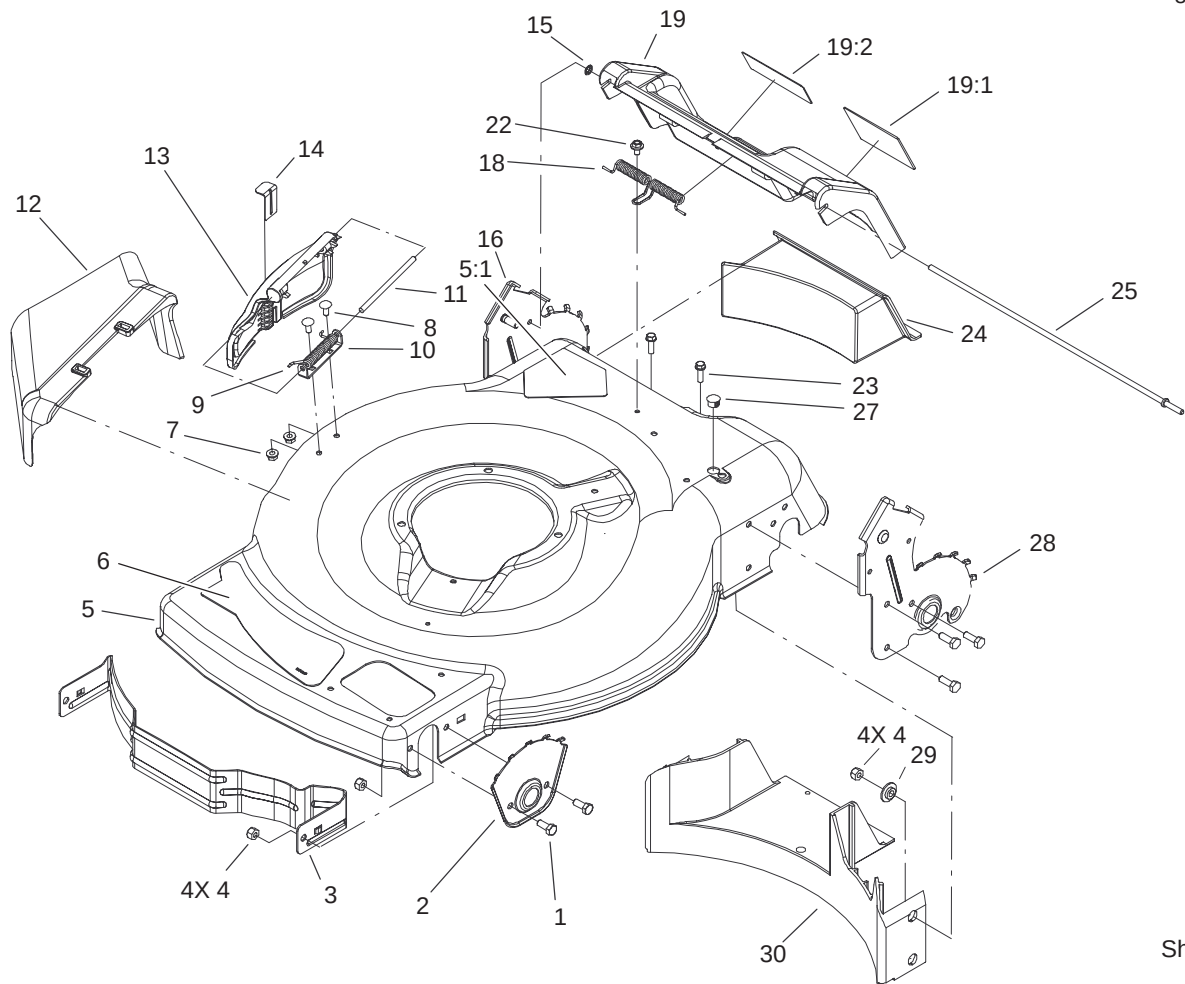

Sheet No.:2

Deck, Side Chute, and Rear Door Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	322-3	4	Screw-HH	24	105-1842	1	Plug-Discharge, Rear
2	105-1808-03	2	Plate-HOC, Front	25	105-1827	1	Rod-Pivot, Rear Door
3	104-8694-03	1	Baffle-Front	27	104-9369	1	Plug-Dome
4	3296-29	8	Nut-Lock, NI	28	105-3044	1	LH Rear HOC Plate ASM
5	104-7916	1	Housing	29	105-3006	4	Washer-Stepped
5:1	94-8072	1	Decal-Danger, Cut Finger	30	105-3047	1	Baffle-Rear
6	105-1297	1	Decal-Deck				
7	32128-32	2	Nut-HHF				
8	3229-11	2	Screw-CARR				
9	99-5293	1	Spring-Torsion				
10	99-5292	1	Bracket-Cover				
11	99-5291	1	Rod-Cover				
12	105-3028	1	Chute-Side Discharge				
13	105-3027	1	Door-Side Discharge				
14	105-3038	1	Lever-Latch				
15	32112-6	1	Pushnut				
16	105-3045	1	RH Rear HOC Plate ASM				
18	105-3032	1	Spring-Door, Rear				
19	105-1324	1	Door				
19:1	104-7909	1	Decal-Warning				
19:2	104-7908	1	Decal Warning				
22	46-6810	1	Screw And Washer ASM				
23	46-8091	2	Screw-HWH				

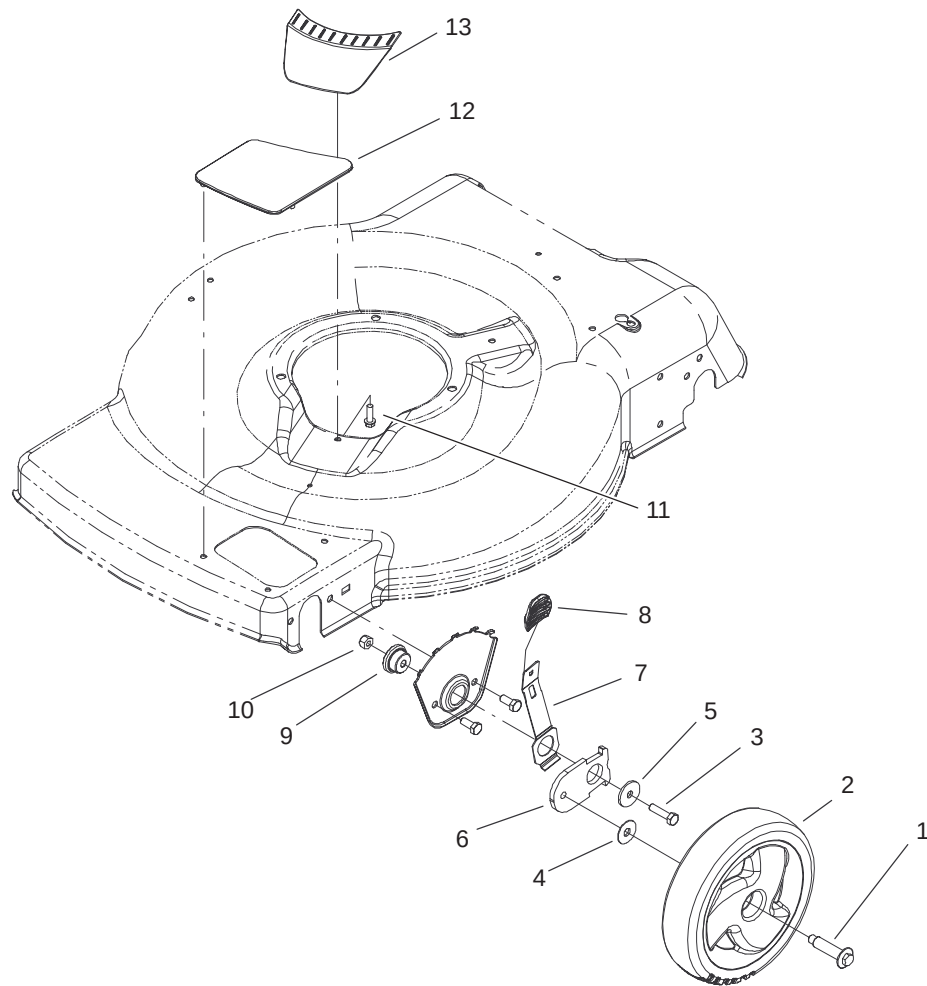

Sheet No.:6

Front Axle and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	105-1814	2	Wheel ASM
3	322-6	2	Screw-HH
4	40-1940	2	Washer
5	105-3048	2	Washer-Flat
6	105-1807	2	Arm-Pivot,Front
7	105-1809	2	Arm-Spring
8	105-3042	2	Knob-Lever, HOC
9	105-1818	2	Bushing-Mount, HOC
10	3296-29	2	Nut-Lock, NI
11	46-8091	1	Screw-HWH
12	104-9398	1	Cover-Cutout,HP
13	105-3005	1	Cover-Belt Opening

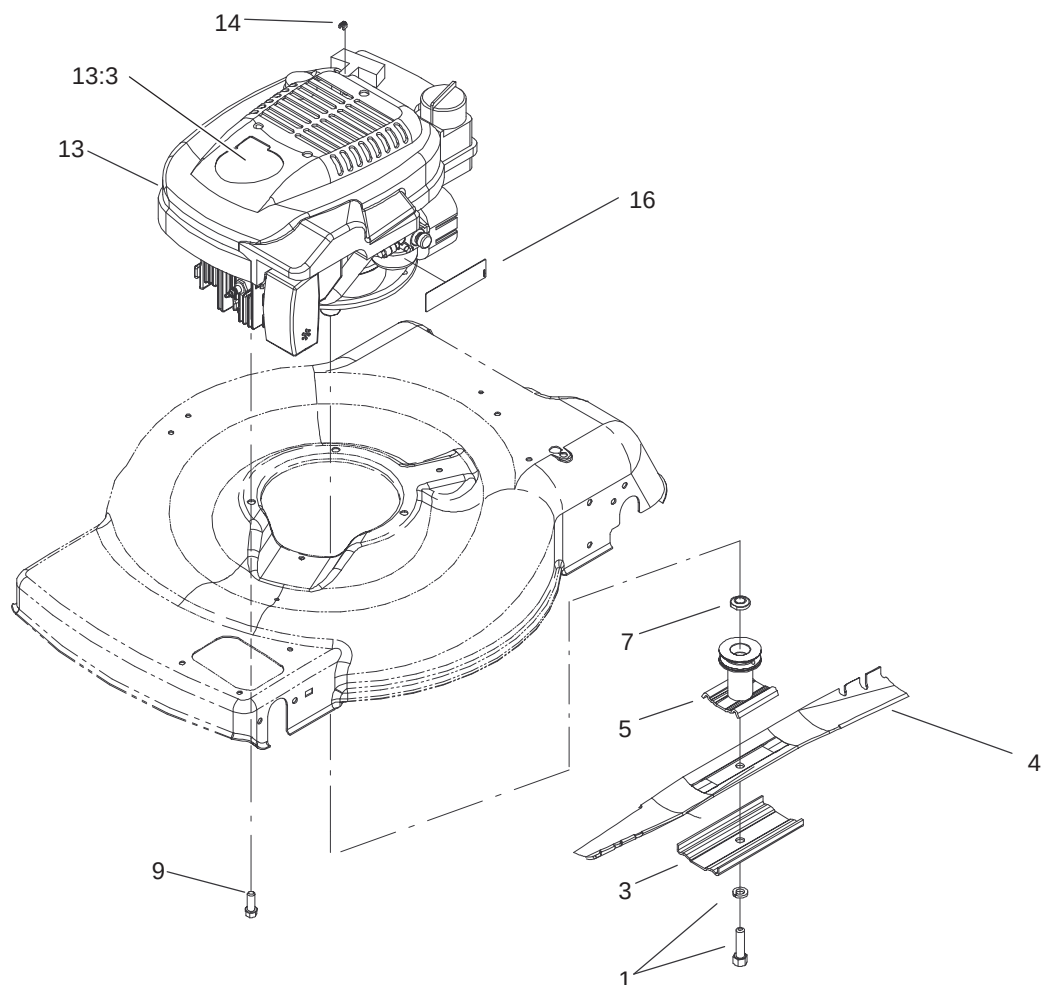


Sheet No.:8

Engine and Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	105-8629	1	Kit-Bolt, Blade
3	105-3029-03	1	Support-Blade
4	104-8697-03	1	Blade-22 Inch
5	106-3987	1	Driver-Blade, ASM
7	105-8619	1	Kit-Spacer, Retainer
9	95-1726	3	Screw-Taptite W/Patch
☆13		1	Engine-Tecumseh Lev120-361541b
13:3	105-6815	1	Decal-Recoil
14	92-1701	1	Stop-Rope
16	105-6832	1	Decal-Primer

Ref. No.	Part No.	Qty.	Description


☆ Not serviced separately

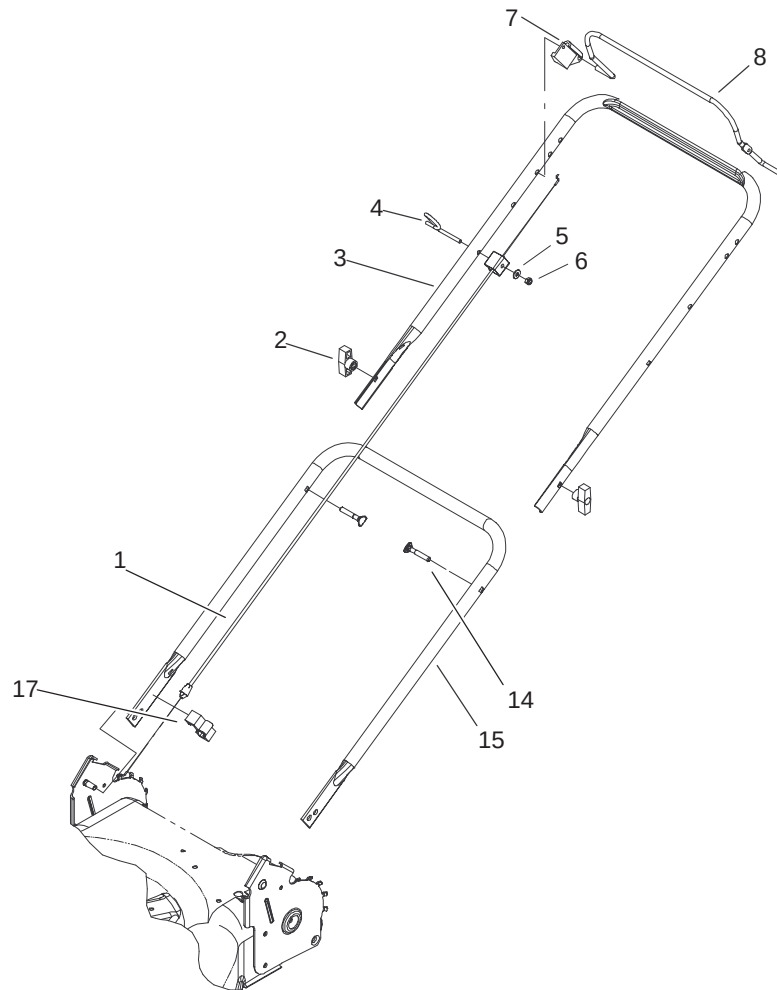

Sheet No.:9

Handle and Control Assembly

Ref. No.	Part No.	Qty.	Description
1	104-8677	1	Cable-Brake
2	106-4161	2	Knob-Handle
3	104-8680-05	1	Handle-Upper
4	105-3049	1	Guide-Rope
5	3256-1	1	Washer-Flat
6	3296-73	1	Nut-Lock, NI
7	92-5412	1	Stop-Pivot
8	105-6800-03	1	Bail-Brake
14	92-2260	2	Screw-Handle
15	105-1831-05	1	Handle-Lower
17	105-6830	1	Guide-Cable

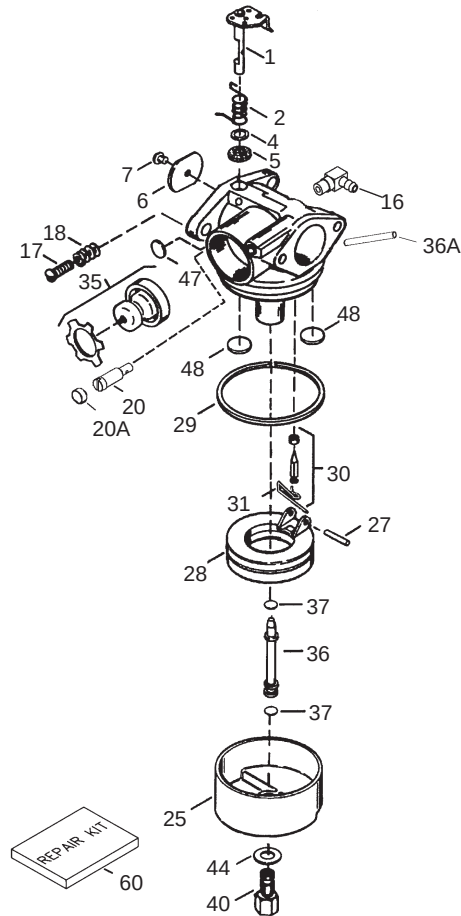

Carburetor No. 640303 Tecumseh-LEV120-361541B


Ref. No.	Part No.	Qty.	Description
1	631615	1	Throttle Shaft & Lever Assembly
2	631767	1	Throttle Return Spring
4	631184	1	Dust Seal Washer
5	631183	1	Dust Seal (Throttle)
6	640070	1	Throttle Shutter
7	650506	1	Shutter Screw
16	631807	1	Fuel Fitting
17	651025	1	Throttle Crack Screw/Idle Speed Screw
18	630766	1	Tension Spring
20	640018	1	Idle Restrictor Screw
20A	640200	1	Idle Restrictor Screw Cap
25	631867	1	Float Bowl
27	631024	1	Float Shaft
28	632765	1	Float (Plastic)
29	631028	1	Float Bowl "O" Ring
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)
31	631022	1	Spring Clip
35	640259	1	Primer Bulb/Retainer Ring

Ref. No.	Part No.	Qty.	Description
36	640019	1	Main Nozzle Tube
36A	632766	1	Carburetor Tube
37	632547	2	O-Ring, Main Nozzle Tube
40	640030	1	High Speed Bowl Nut
44	27110A	1	Bowl Nut Washer
47	630748	1	Welch Plug, Idle Mixture Well
48	631027	1	Welch Plug, Atmospheric Vent
60	632760B	1	Repair Kit

Obtain parts from local Tecumseh dealer

Engine Assembly

Tecumseh-LEV120-361541B

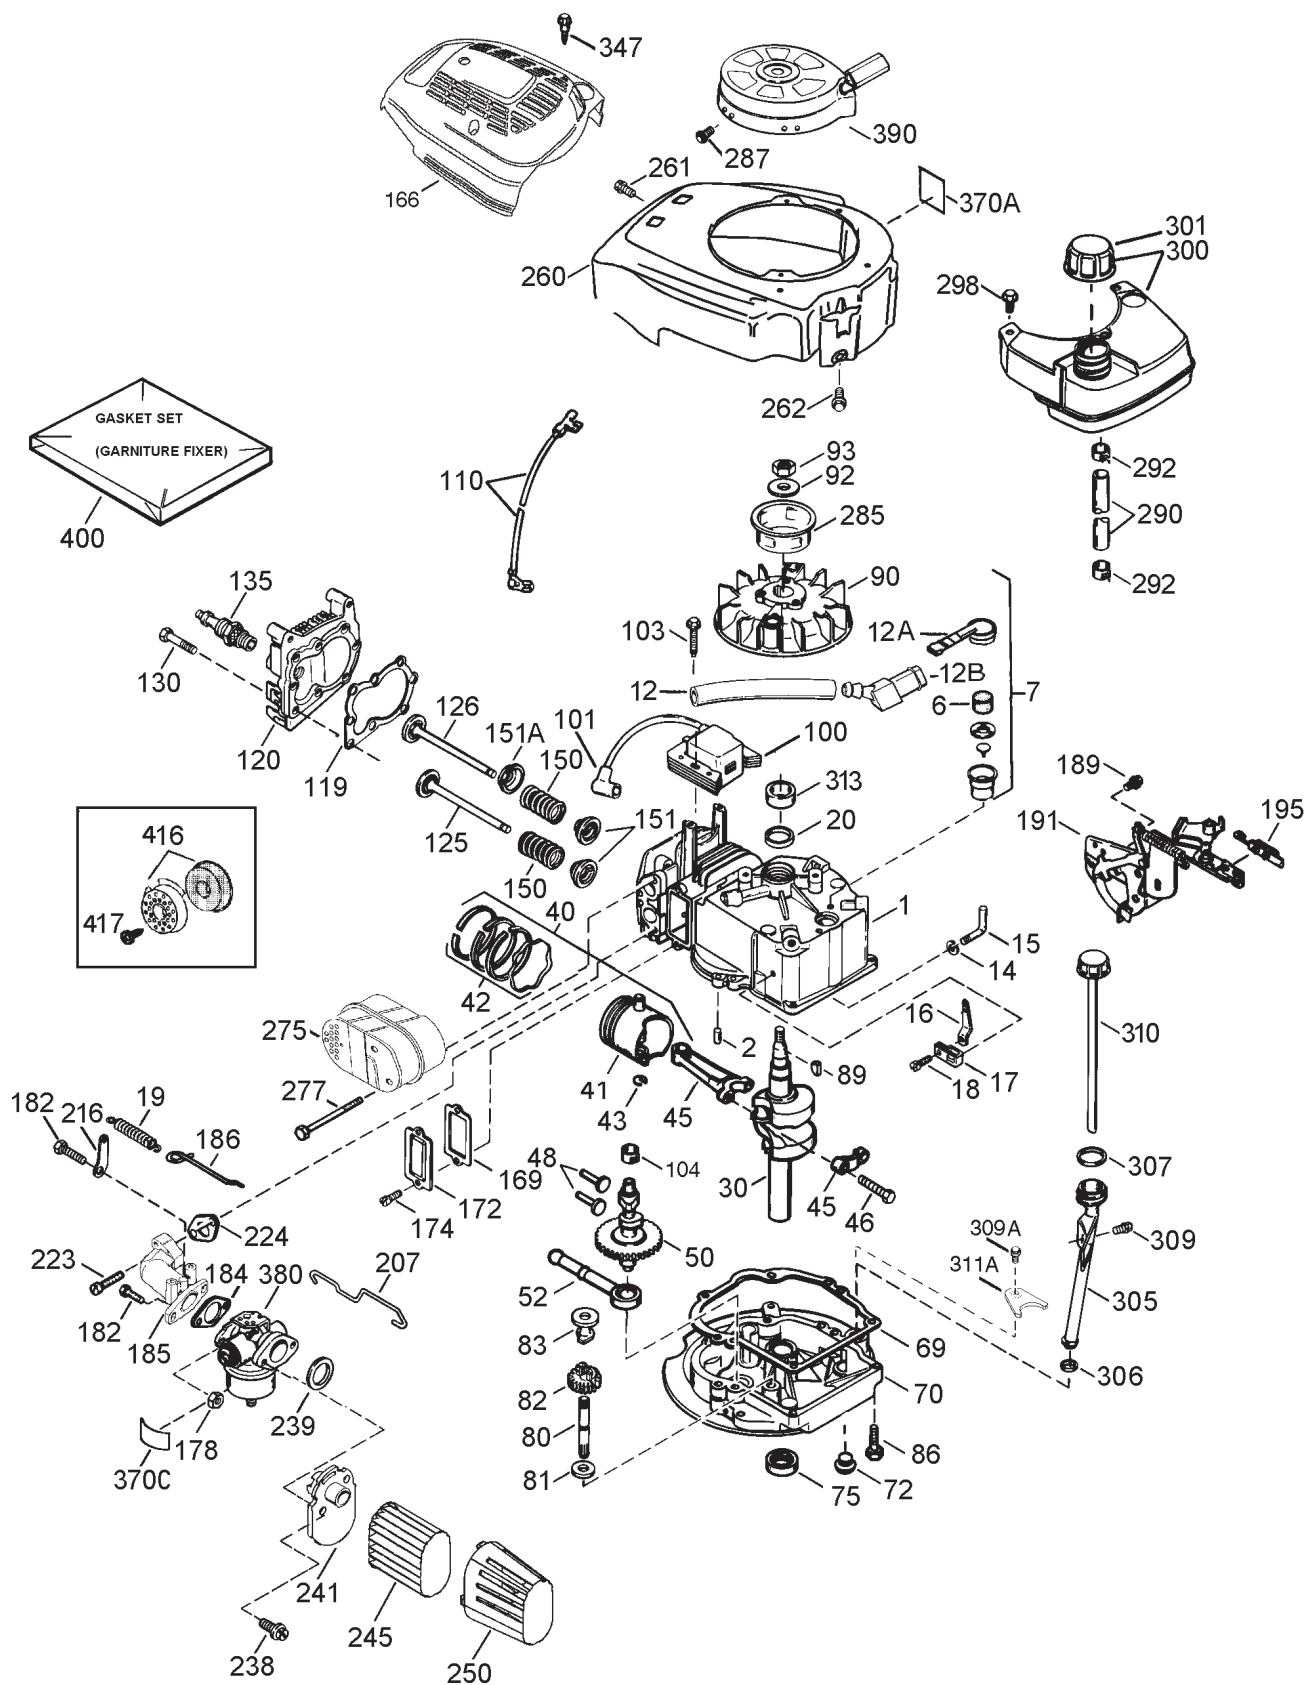

Engine Assembly

Tecumseh–LEV120–361541B


Ref. No.	Part No.	Qty.	Description
1	37265	1	Cylinder (Incl. 2,20 & 150)
2	26727	2	Dowel Pin
6	33734	1	Breather Element
7	36557	1	Breather Body ASM (Incl. 6 & 12A)
12	36775	1	Breather Tube
12A	36558	1	Breather Cover & Tube
12B	36694	1	Breather Tube Elbow
14	28277	1	Washer
15	30589	1	Governor Rod (Incl. 14)
16	34839A	1	Governor Lever
17	31335	1	Governor Lever Clamp
18	651018	1	Screw, Torx T–15
19	36281	1	Extension Spring
20	32600	1	Oil Seal
30	37692	1	Crankshaft
40	40027	1	Piston, Pin & Ring Set (Std.)
41	40042	1	Piston & Pin ASM (Std.) (Incl. 43)
42	40006	1	Ring Set (Std.)
42	40007	1	Ring Set (.010" OS)
43	20381	2	Piston Pin Retaining Ring
45	36777	1	Connecting Rod ASM (Incl. 46)
46	32610A	2	Connecting Rod Bolt
48	27241	2	Valve Lifter
50	37460	1	Camshaft Exhaust(MCR)
52	29914	1	Oil Pump ASM
69	37609	1	Mounting Flange Gasket
70	37608	1	Mounting Flange (Incl. 72 thru 83)
72	37614	1	Oil Drain Plug
75	27897	1	Oil Seal
80	30574A	1	Governor Shaft
81	30590A	1	Washer
82	30591	1	Governor Gear ASM (Incl. 81)
83	30588A	1	Governor Spool
86	650488	6	Screw
89	611004	1	Flywheel Key
90	611112	1	Flywheel
92	650815	1	Belleville Washer
93	650816	1	Flywheel Nut
100	34443C	1	Solid State Ignition
101	610118	1	Spark Plug Cover
103	651007	2	Screw, Torx T–15
104	37480	1	Cam Bearing Bushing
110	37047	1	Ground Wire
119	36787	1	Cylinder Head Gasket
120	36825	1	Cylinder Head
125	36780	1	Exhaust Valve (1/32" OS) (Incl. 151)

Ref. No.	Part No.	Qty.	Description
126	37289	1	Intake Valve (Std.) (Incl. 151)
130	6021A	6	Screw
135	35395	1	Resistor Spark Plug (RJ19LM)
150	31672	2	Valve Spring
151	31673	2	Valve Spring Cap
151A	40017	1	Intake Valve Seal
166	37694	1	Engine Shroud
169	36783	1	Valve Cover Gasket
172	36784	1	Valve Cover
174	30200	2	Screw
178	29752	2	Nut & Lock Washer
182	6201	2	Screw
184	26756	1	Carburetor To Intake Pipe Gasket
185	37466	1	Intake Pipe
186	32653	1	Governor Link
189	650839	2	Screw
191	36559A	1	S.E. Brake Bracket (Incl. 195)
195	610973	1	Terminal
207	34336	1	Throttle Link
216	33086	1	R.P.M. Adjusting Lever
223	650451	2	Screw
224	36786	1	Intake Pipe Gasket
238	650932	2	Screw
239	34338	1	Air Cleaner Gasket
241	36919	1	Air Cleaner Vollar
245	36905	1	Air Cleaner Filter
250	37122	1	Air Cleaner Cover
260	37696	1	Blower Housing
261	30200	2	Screw
262	650831	2	Screw
263A	36758	1	Starter Grill
275	37498	1	Muffler
277	650988	2	Screw
285	35000A	1	Starter Cup
287	650926	2	Screw
290	29774	1	Fuel Line
292	26460	2	Fuel Line Clamp
298	28763	3	Screw
300	35586	1	Fuel Tank (Incl. 292 & 301)
301	36246	1	Fuel Cap
305	35647	1	Oil Fill Tube
306	37610	1	"O"–Ring
307	35499	1	"O"–Ring
309	650562	1	Screw
309A	650783	1	Screw
310	36801	1	Dipstick
311A	37611	1	Hold Down Bracket
313	34080	1	Spacer
347	650898A	1	Screw
370A	36261	1	Lubrication Decal
370C	37695	1	Primer Decal (3X)

Obtain parts from local Tecumseh dealer

Ref. No.	Part No.	Qty.	Description

11

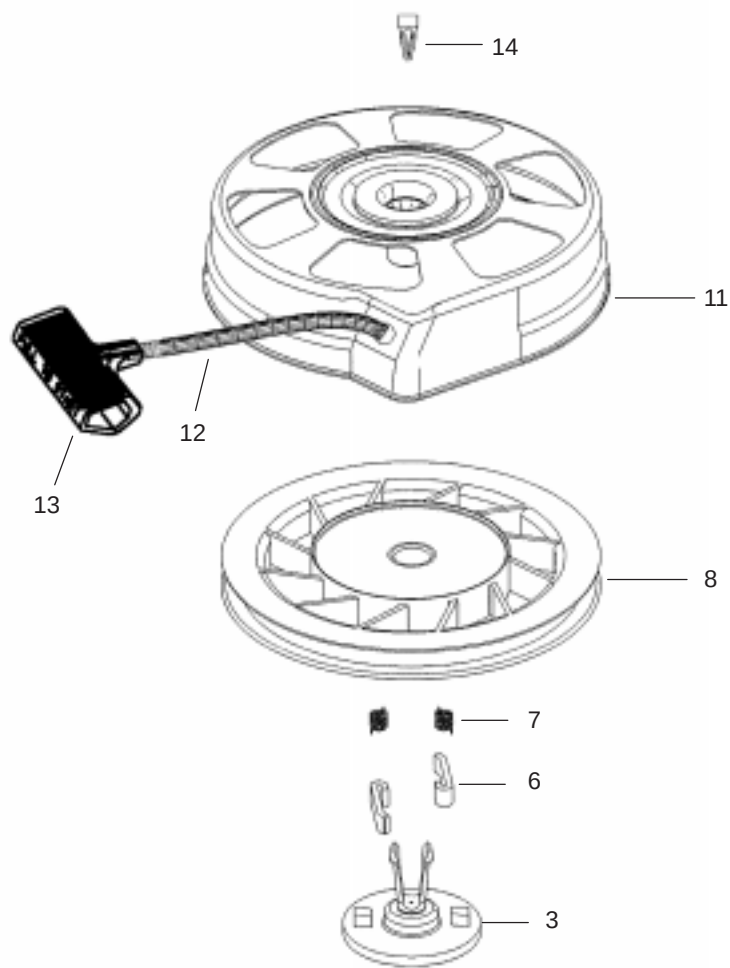

Recoil Starter No. 590739
Tecumseh-LEV120-361541B

Ref. No.	Part No.	Qty.	Description
3	590740	1	Retainer
6	590616	2	Starter Dog
7	590617	2	Dog Spring
8	590618A		Pulley & Rewind
		1	Spring ASM
11	590638A		Starter Housing ASM
		1	(40 degree grommet)
12	590535		Starter Rope
		1	(Length 98" x 9/64"
			dia.)
13	590701	1	Starter Handle
14	590760	1	Spring Clip

Ref. No.	Part No.	Qty.	Description

Obtain parts from local Tecumseh dealer

Maintenance Record

[illegible]

Maintenance Record

[illegible]

