



Count on it.

Form No. 3314-383 Rev B

Parts Catalog

CCR™ 1000 Snowthrower

Model No. 38195—Serial No. 1000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Upper Shroud Assembly 4

Rotor Housing Assembly..... 5

Rotor Assembly 6

Engine Assembly 7


Starter Motor Assembly..... 8

Handle Assembly 9

Carburetor No. 632552 10


Recoil Starter No. 590537 11

Engine Tecumseh Model No. Hsk600 Type 1660-N..... 12

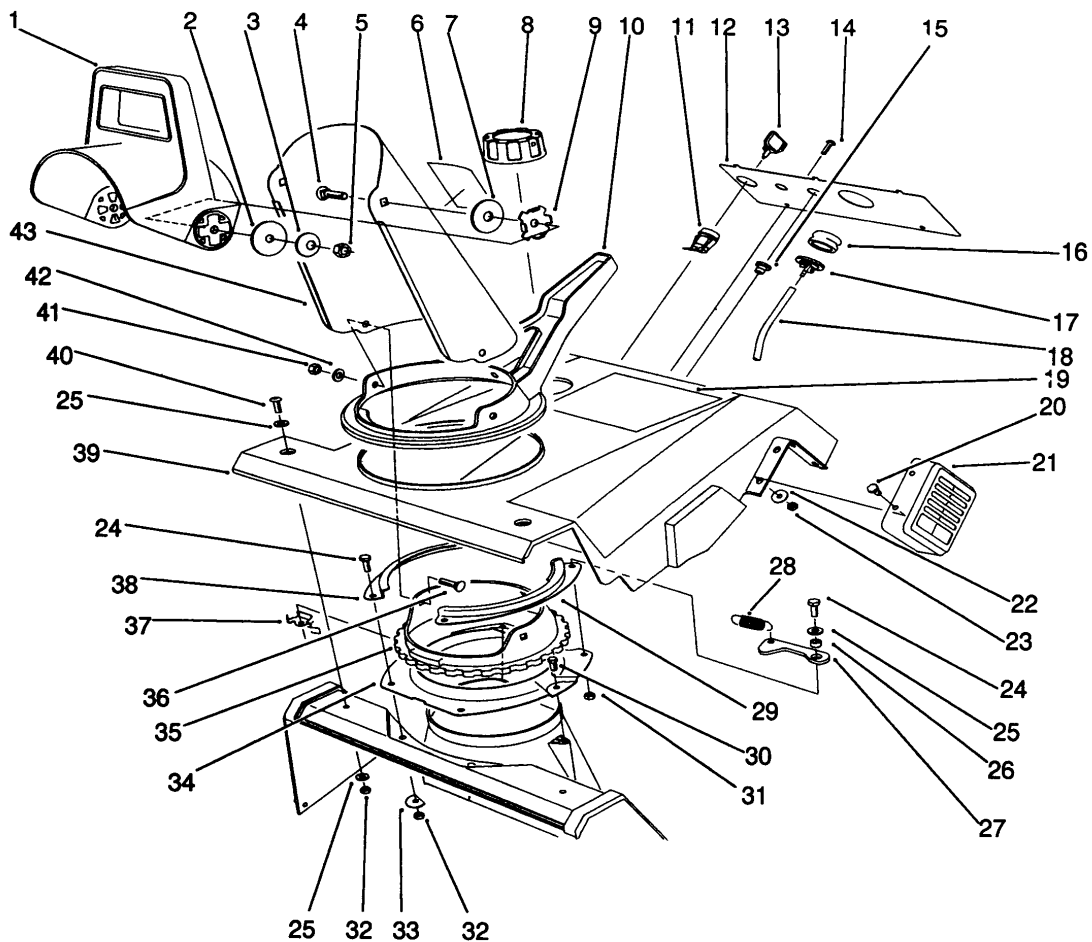

Upper Shroud Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	56-2680	1	Chute-Deflector	23	3296-2	4	Nut-Lock, NI
2	3256-68	2	Washer-Flat	24	321-4	4	Screw-HH
3	3290-340	2	Washer-Belleville	25	3256-22	5	Washer-Flat
4	3230-22	2	Screw-CARR	26	55-9370	1	Spacer-Blade, Rotor
5	3296-29	2	Nut-Lock, NI	27	80-4610	1	Detent
6	63-3760	1	Decal-Danger Disch.	28	80-4600	1	Spring-Extension
7	20-4320	2	Washer-Rubber	29	71-4980	1	Retainer-Chute Ring
8	55-3578	1	Gas Cap Assembly	30	46-8092	2	Screw-Plastite
9	55-8950	2	Plate-Friction	31	3296-56	1	Nut-Lock, NI
10	71-4940	1	Chute - Handle	32	3296-42	5	Nut-Lock, NI
11	40-5940	1	Switch	33	55-9680	2	Washer
12	71-5140	1	Cntrl Panel/Silk Screen *	34	55-8921	1	Ring-Chute Support
13	63-8360	1	Key-Ignition	35	71-4950	1	Gear Ring, Chute
14	32144-53	2	Screw-SHWH, Thread Forming	36	3230-16	3	Screw-CARR
15	23-7470	1	Guide-Rope, Starter	37	80-4600	1	Spring-Extension
16	66-7460	1	Bulb-Primer	38	71-4990	1	Retainer-Chute Ring
17	44-2750	1	Body-Primer	39	80-4810	1	Upper Shroud
18	44-3173	1	Hose-Primer	40	3250-32	2	Screw-PPH
19	77-5210	1	Decal - Ccr 1000E	41	32149-1	3	Nut-Keps
20	3290-359	4	Screw-HWH	42	3256-70	3	Washer-Flat
21	71-5340	1	Guard-Muffler	43	13-7979	1	Discharge Chute Assembly (Incl. Ref. #6)
22	3256-61	4	Washer-Flat				

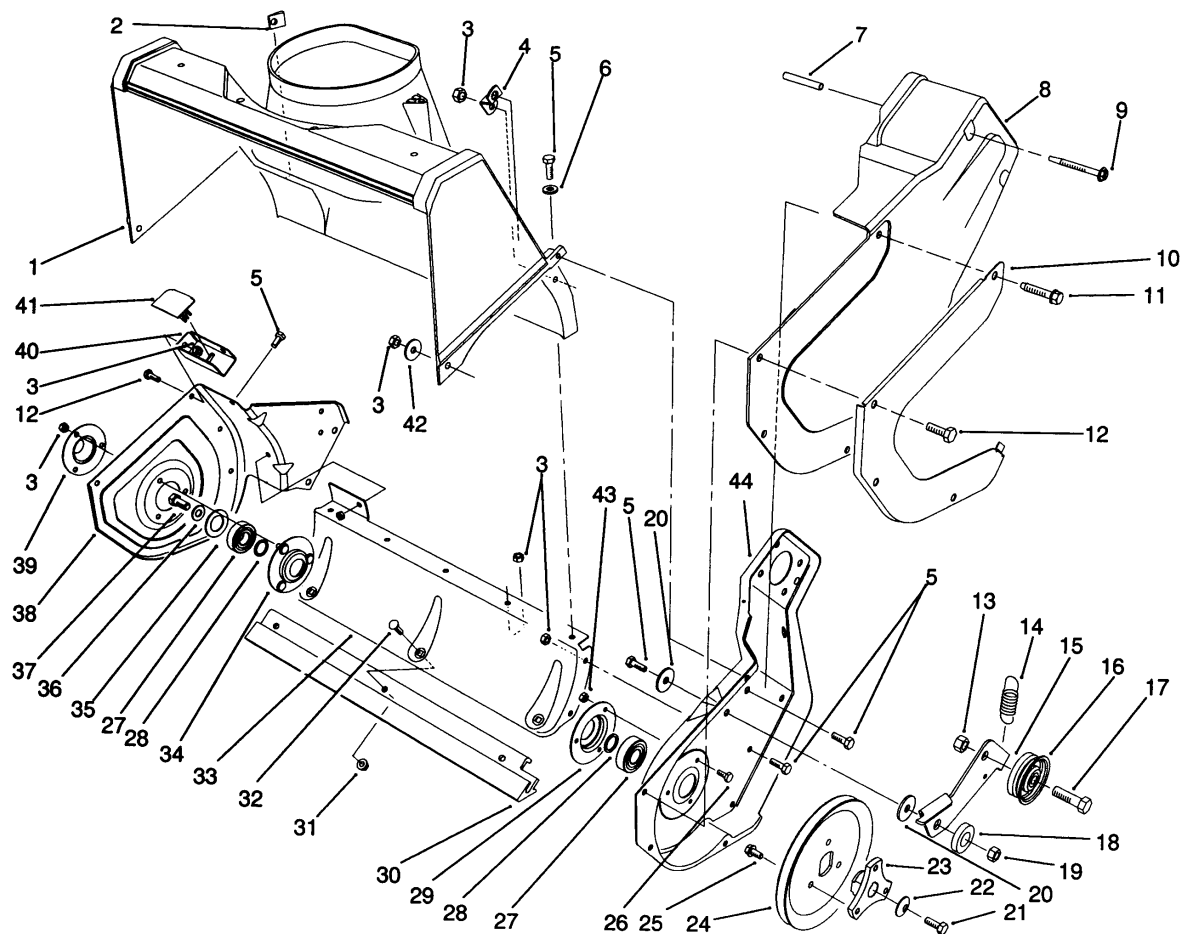

Rotor Housing Assembly


Ref.	Part Number	Qty.	Description
1	55-8700	1	Housing
2	32115-14	1	Speed Nut
3	3296-42	20	Nut-Lock, NI
4	55-9430	1	Bracket-Housing
5	321-4	10	Screw-HH
6	3256-22	5	Washer-Flat
7	57-3830	2	Tubular Spacer
8	71-5030	1	Drive Cover
9	71-5350	2	Screw-HWHTF
10	71-5150	1	Guard-Drive Cover
11	36-3860	1	Screw-HWH, TAP
12	32105-15	8	Screw-HWH
13	3296-39	1	Nut-Lock, NI
14	71-5470	1	Spring-Brake
15	71-5160	1	Brake Arm Idler
16	71-5260	1	Pulley-Idler
17	323-44	1	Screw-HH
18	80-4620	1	Spacer
19	3296-56	1	Nut-Lock, NI
20	3256-55	2	Washer-Flat
21	321-30	1	Screw-HH
22	3290-456	1	Washer-Belleville

Ref.	Part Number	Qty.	Description
23	71-5070	1	Hub-Mounting, Pulley
24	71-5410	1	Rotor Pulley
25	12-3270	3	Screw
26	32105-8	3	Screw-SHH
27	38-7820	2	Bearing-Ball
28	52-7280	2	Washer-Thrust
29	38-8620	1	Flange-Bearing
30	71-5390	1	Scraper
31	32128-10	3	Nut-Lock, HHF
32	3229-11	3	Screw-CARR
33	71-4930	1	Housing-Lower
34	52-9110	1	Flange-Bearing
35	52-7270	1	Washer-Rubber
36	3256-24	1	Washer-Plain
37	3234-25	1	Screw-HHF
38	71-4920	1	Sideplate-R.H.
39	52-7290	1	Trough
40	71-5310	1	Sideplate Brkt Supt *
41	71-5270	1	Bracket Cover
42	3256-67	2	Washer
43	3296-2	3	Nut-Lock, NI
44	71-1911	1	Sideplate-L.H.

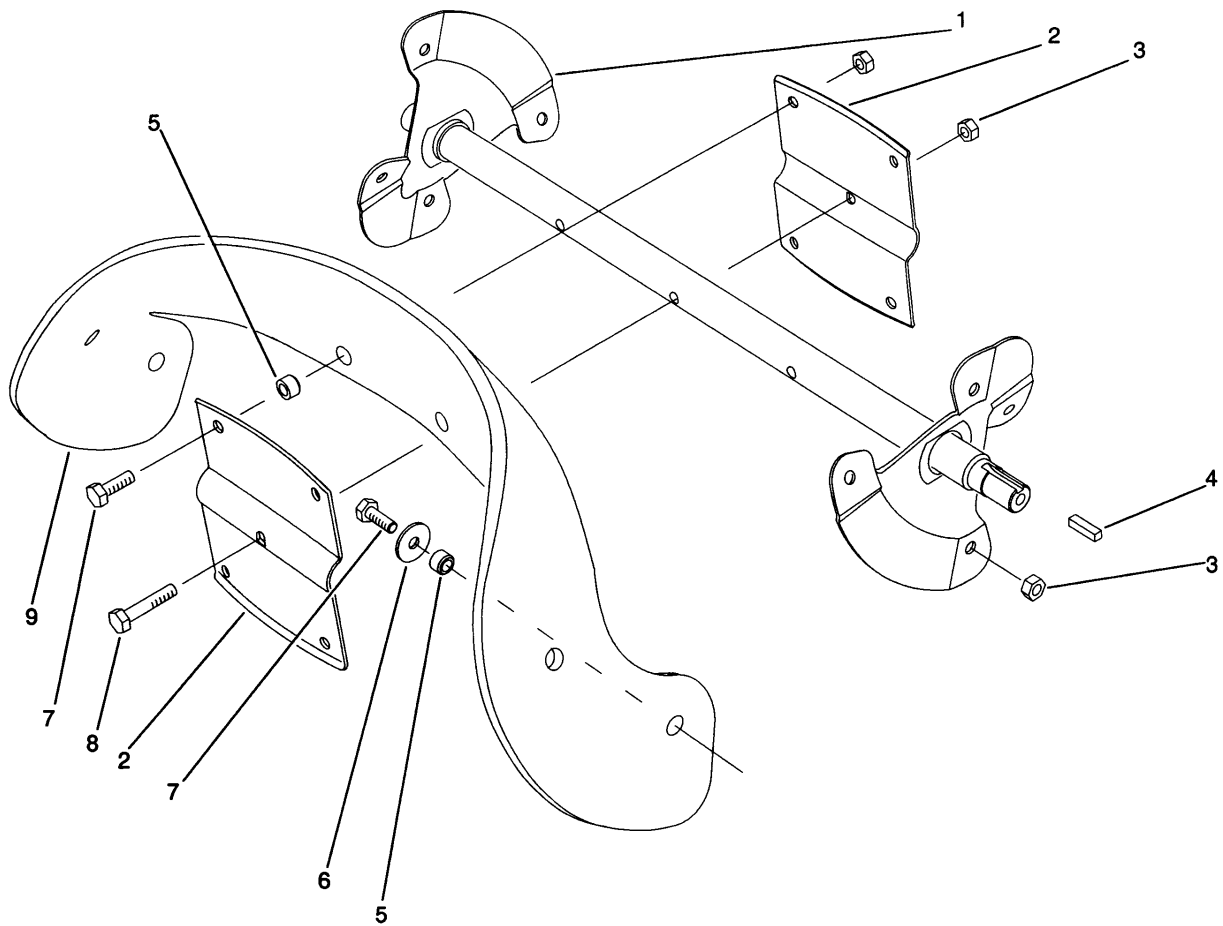

Rotor Assembly


Ref.	Part Number	Qty.	Description
1	55-9201	1	Rotor Shaft Assembly
2	66-6600	2	Rotor
3	3296-56	13	Nut-Lock, NI
4	10-8040	1	Key-Square
5	55-9370	12	Spacer-Blade, Rotor
6	3256-67	8	Washer
7	321-4	12	Screw-HH
8	321-8	1	Screw-HH
9	54-9921	2	Blade-Rotor

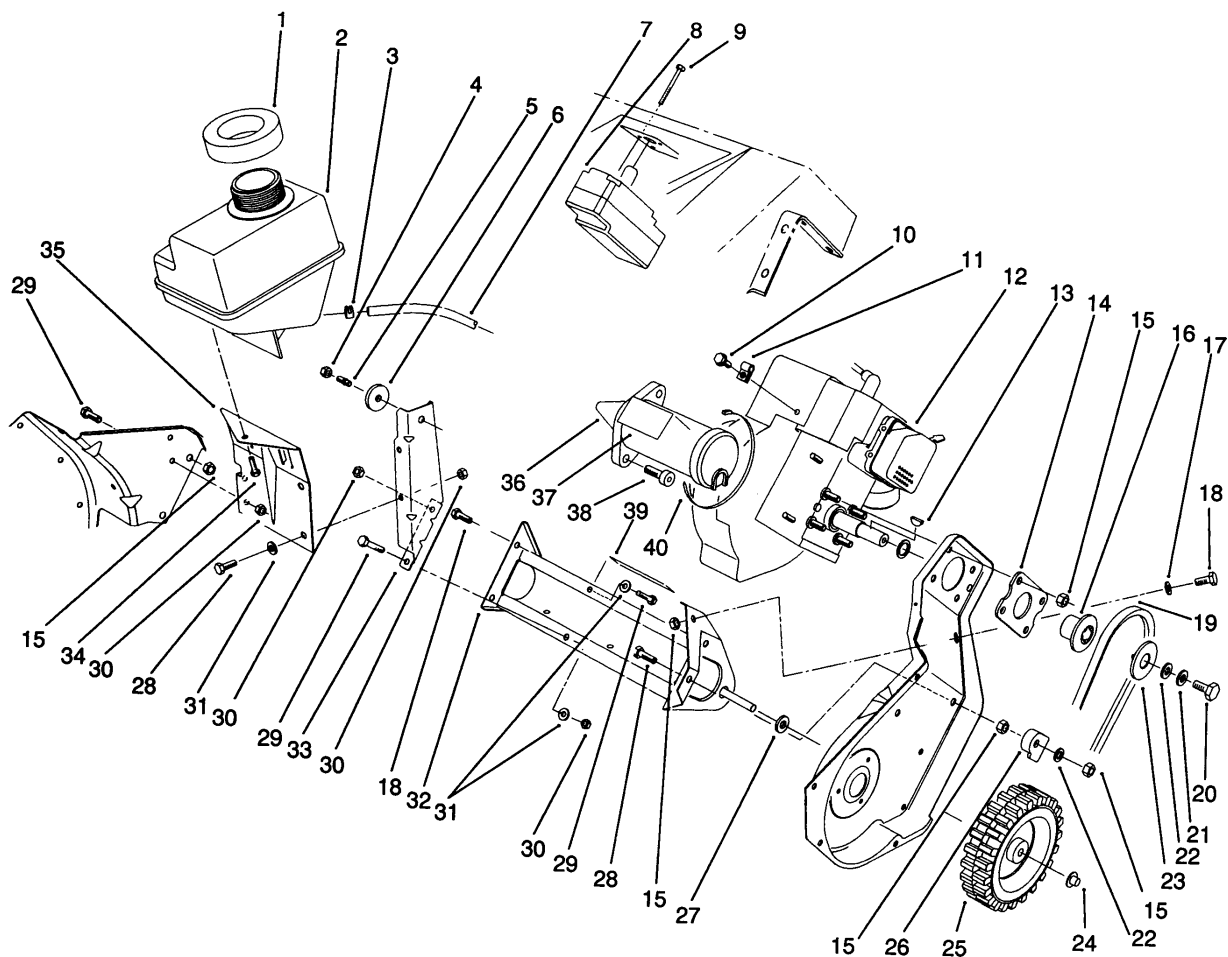

Engine Assembly


Ref.	Part Number	Qty.	Description
1	55-9310	1	Seal-Foam
2	71-5020	1	Tank-Gas
3	2412-86	2	Clamp
4	3296-16	1	Nut-Lock, NI
5	38-8710	1	Stud
6	71-5320	1	Washer-Support, Engine
7	49-2482	1	Line-Fuel
8	77-0401	1	Starter Switch Assembly
9	32144-27	3	Screw-Plastite
10	32144-10	1	Screw-HWH
11	2412-65	1	Cable Clamp
12		1	Engine-Tecumseh Model Hsk600-1660-N
13	3257-3	1	Key-Woodruff
14	71-5290	1	Plate Engine
15	3296-29	9	Nut-Lock, NI
16	71-5050	1	Hub-Half Sheave
17	3256-23	1	Washer-Plain
18	322-3	3	Screw-HH
19	71-5380	1	Belt-Drive
20	3235-6	1	Screw-HH

Ref.	Part Number	Qty.	Description
21	3290-456	0	Washer-Belleville
22	3256-71	2	Washer-Flat
23	71-5060	1	Cap-Half Sheave
24	3290-320	2	Nut-Push
25	23-3250	2	Wheel
26	71-5280	1	Guide-Cable
27	71-5440	2	Spacer-Plastic
28	322-5	1	Screw-HH
29	321-4	6	Screw-HH
30	3296-42	9	Nut-Lock, NI
31	3256-22	4	Washer-Flat
32	71-5200	1	Frame Assembly
33	71-5210	1	Support-Engine
34	32144-53	1	Screw-SHWH, Thread Forming
35	71-5220	1	Bracket-Fuel Tank
36		0	Starter Motor Assembly
37		1	Decal
38	3274-88	2	Screw-Thread Forming
39		1	Decal
40	3290-379	1	Tie-Cable

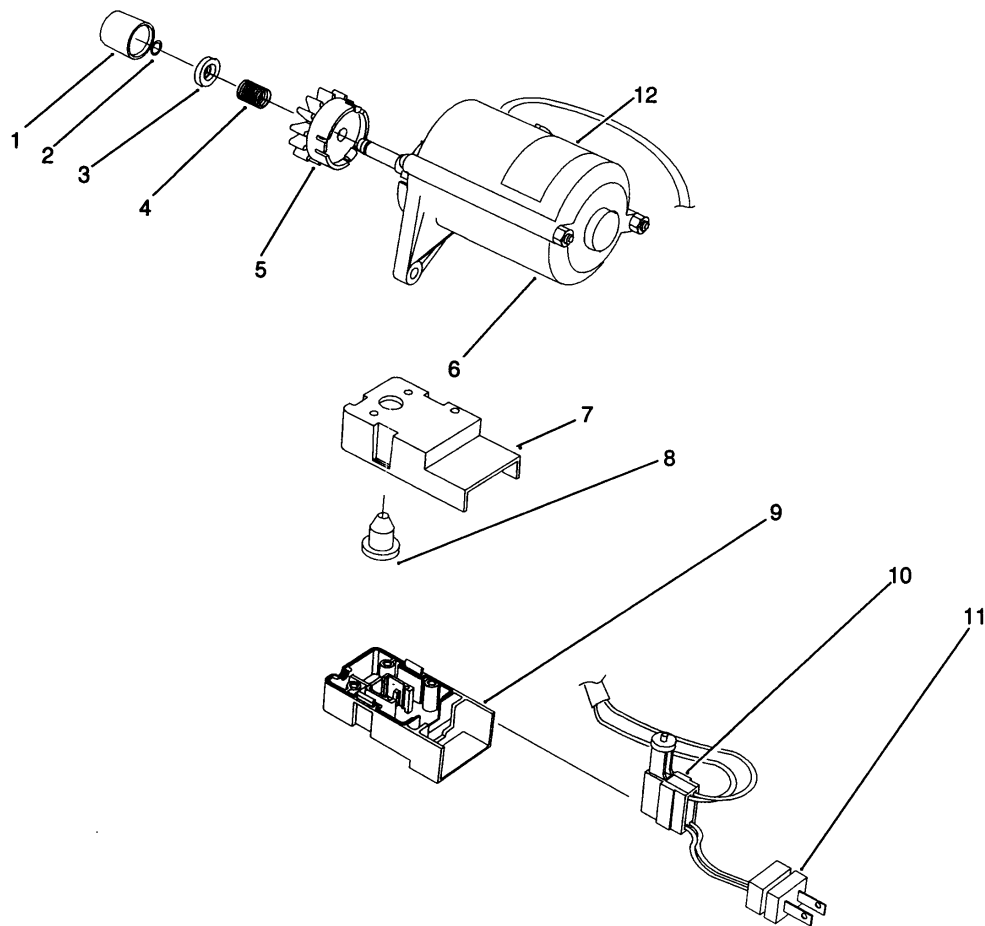


Starter Motor Assembly

Ref.	Part Number	Qty.	Description
1	70-7890	1	Cap-Pinion
2	61-4680	1	Ring-Lock
3	61-4670	1	Pinion Stop
4	61-4690	1	Spring
5	80-4710	1	Pinion Assembly
6	70-7800	1	Starter Motor Assembly
7	80-3740	1	Cap-Switch Housing
8	36-8350	1	Boot-Switch
9	80-3730	1	*obs* Base X
10	36-8340	1	Switch-Starter
11	36-8370	1	Plug
12	77-0410	1	Decal-UI
	77-0401	1	Starter Motor & Housing Assembly (Incl.Ref. #1-12)

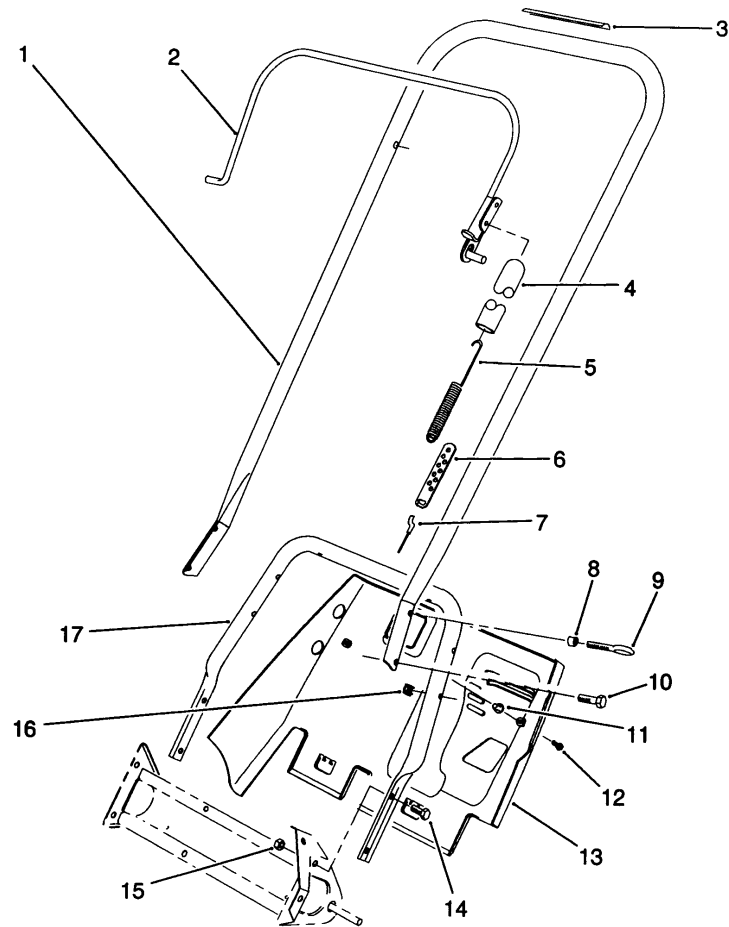


Handle Assembly

Ref.	Part Number	Qty.	Description
1	71-5090	1	Handle-Upper
2	71-5120	1	Bail
3	66-6870	1	Decal - Rotor Drive
4	71-5530	1	Cover-Spring
5	71-5480	1	Spring-Clutch
6	71-5330	1	Adjuster-Cable, Clutch
7	71-5400	1	Cable-Clutch
8	55-9370	1	Spacer-Blade, Rotor
9	3299-1	1	Eyebolt
10	32105-11	3	Screw-Hex HD Slot
11	3290-486	5	Expansion Type Fastener
12	32144-53	3	Screw-SHWH, Thread Forming
13	71-5040	1	Lower Shroud
14	322-3	2	Screw-HH
15	3296-29	2	Nut-Lock, NI
16	3290-225	4	Tinnerman Nut
17	71-5370	1	Handle-Lower

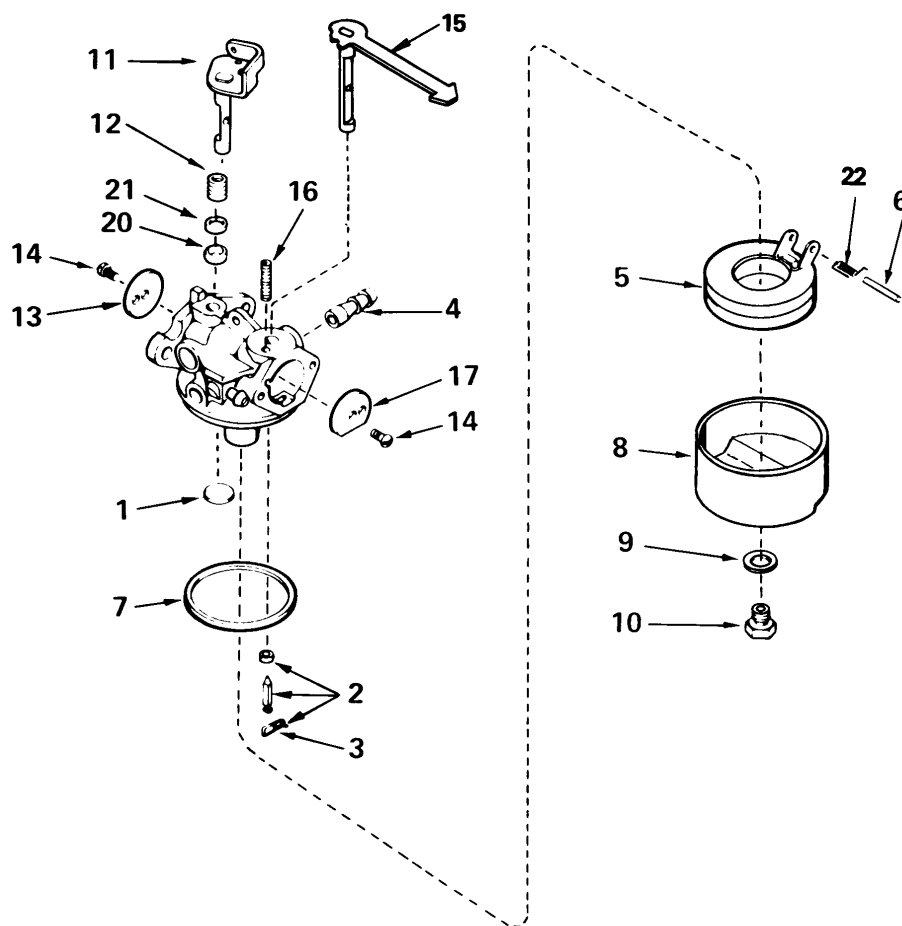


Carburetor No. 632552

Ref.	Part Number	Qty.	Description
1	631027	1	Plug-Welch, Atmospheric Vent
2	631021	1	Inlet Needle, Seat & Clip (Incl. Ref. #3)
3	631022	1	Clip-Spring
4	632164	1	Fitting-Fuel
5	632019	1	Float
6	631024	1	Shaft-Float
7	631028	1	O Ring-Bowl, Float
8	631700	1	Bowl Float
9	631334	1	Gasket-Bowl
10	632385	1	Nut-Float Bowl
11	632130	1	Shaft/Lever-Throttle
12	632169	1	Spring-Trottle, Return
13	631621	1	Shutter-Throttle
14	650506	2	Screw-Shutter
15	632553	1	Choke Shaft And Lever ASM
16	630735	1	Spring-Positioning, Choke
17	631815	1	Shutter-Choke
20	631183	1	Seal-Dust
21	631184	1	Washer-Seal, Dust
22	632386	1	Spring-Float, Dampening

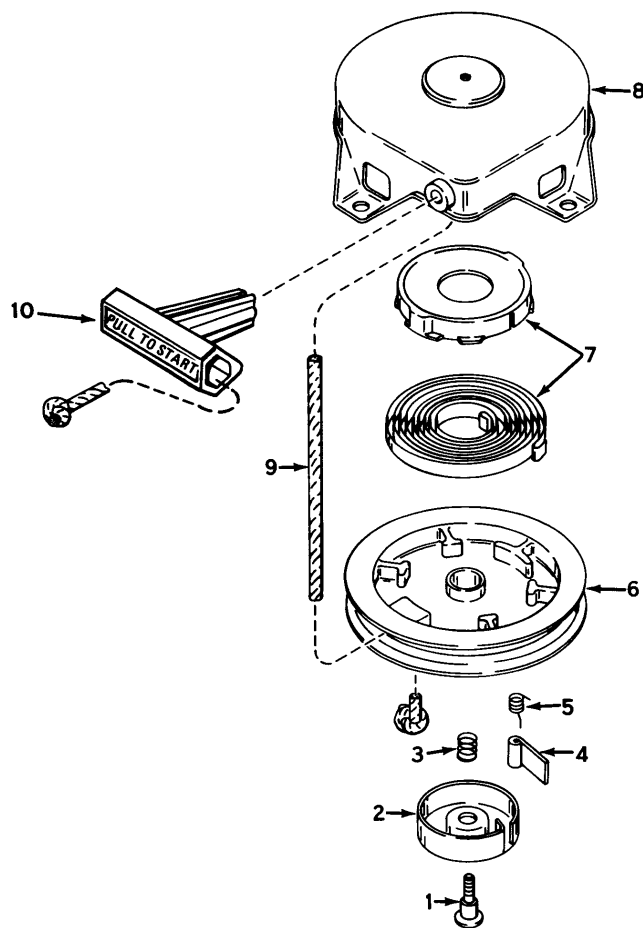


Recoil Starter No. 590537

Ref.	Part Number	Qty.	Description
1	590409A	1	Screw
2	590410	1	Retainer
3	590411	1	Spring-Brake
4	590148	1	Dog-Starter
5	590412	1	Spring-Dog
6	590413A	1	Pulley
7	590414	1	Spring & Keeper Assy
8	590536	1	Housing-Starter
9	590535	1	Rope-Starter (98 Cut To Length)
10	590452	1	Handle-Starter

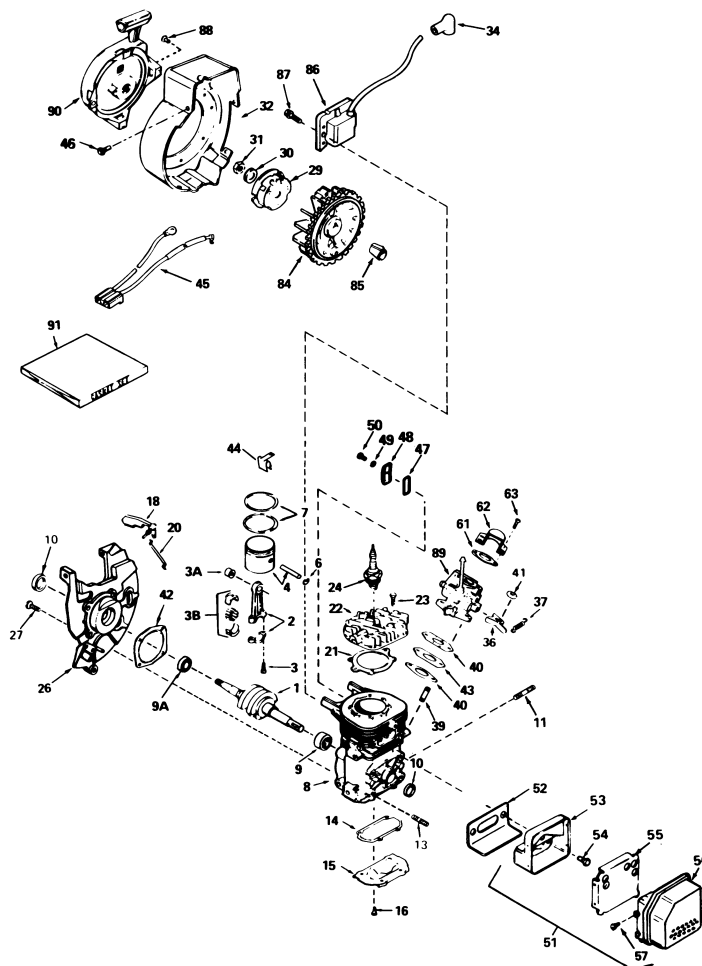

Engine Tecumseh Model No. Hsk600 Type 1660-N

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	290602	1	Crankshaft	26	350410	1	Blower Housing Base Assy. (Incl. Ref. #10)
2	310235B	1	Connecting Rod Assembly (Incl. Ref. #3, 3A & 3B)	27	650911	4	Screw (T-30, 1/4-20 X 5/8)
3	650633	2	Bolt-Rod, Connecting	29	590551	1	Cup-Starter
3A	530104A	1	Bearing-Cartridge	30	650815	1	Washer-Belleville
3B	530150	1	Needle Bearing And Liner Set (37 Needles)	31	650390	1	Nut-Flywheel
4	310283A	1	Piston & Pin Assembly (Incl. Ref. #6)	32	350399	1	Housing-Blower
6	310167	2	Ring-Retaning	34	610118	1	Cover-Spark Plug
7	310190	1	Ring Set	36	570645	1	Lever-Adjusting, Rpm
8		1	Cylinder Block Assembly	37	570646	1	Spring-Governor
9	530105	1	Bearing-Cartridge	39	650527	2	Stud
9A	530110	1	Bearing-Ball	40	510326A	2	Gasket-Carburetor
10	510319	2	Seal-Oil	41	650457	2	Locknut
11	650883	3	Stud	42	510292A	1	Gasket-Cover, Cylinder
13	650796	4	Stud	43	570438A	1	Spacer
14	510323	1	Cover	44	29443	1	Clip-Wire
15	570644	1	Plate-Cover	45	611153	1	Harness-Wire
16	650579	4	Screw (T-25, 10-24 X 1/2)	46	650356	4	Screw-Hex, Hd.
18	490291A	1	Vane-Air	47	510325A	1	Cover-Compression, Release
20	490294	1	Link-Governor	48	570647	1	Comp. Release Cover
21	510274A	1	Gasket-Head, Cylinder	49	650838	1	Washer
22	250240A	1	Head-Cylinder	50	650579	1	Screw (T-25, 10-24 X 1/2)
23	650477	5	Screw (T-30, 1/4-20 X 3/4)	51	390263B	1	Muffler Assembly (Incl. Ref. #53-57)
24	611049	1	Spark Plug-Resistor (R C J 8Y)	52	510346	1	Gasket-Exhaust
				53	390292	1	Base-Muffler
				54	650911	3	Screw (T-30, 1/4-20 X 5/8)

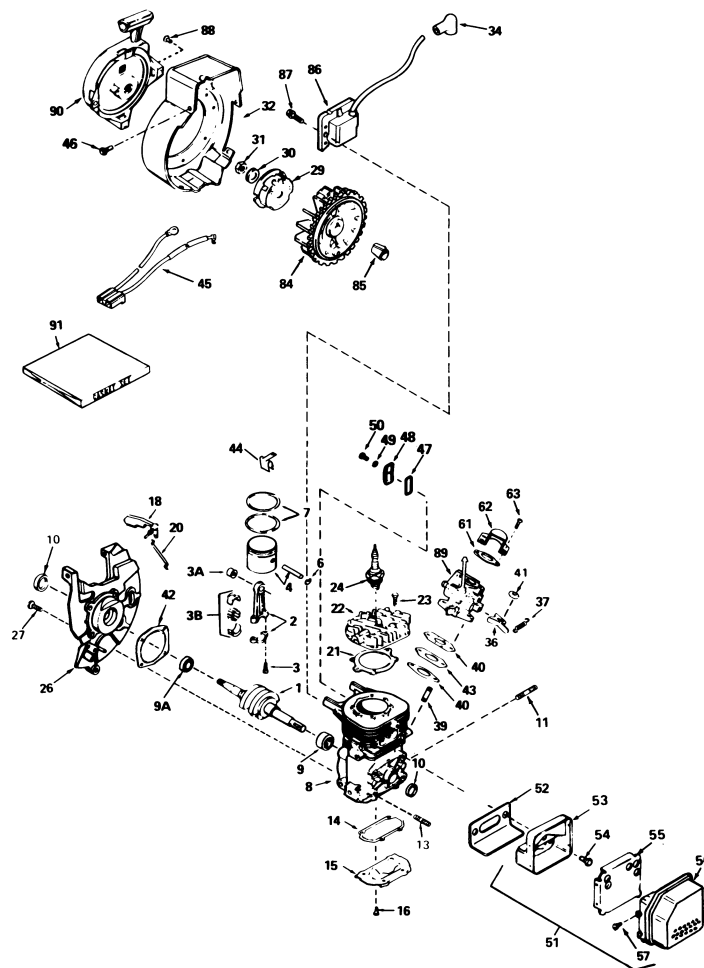

Engine Tecumseh Model No. Hsk600 Type 1660-N (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
55	390272	1	Baffle-Muffler	86	34443A	1	Solid State
56	390267	1	Cover Muffler	87	650814	2	Screw
57	650578	4	Screw	88		4	Rivet-Pop
61	510206A	1	Gasket	89	632552	1	Carburetor Assembly (Incl. Ref. #40)
62	570434	1	Baffle-Carburetor	90	590537	1	Starter-Rewind
63	650229	2	Screw	91	51034B	1	Gasket Set
84	611050	1	Flywheel				
85	611032	1	Blade (20 Inch)				

Notes:

Notes:



Count on it.