



Form No. 3393-630 Rev B

Count on it.

Parts Catalog

Dingo® 220 Compact Utility Loader

Model No. 22317—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly 4

Canister Bracket and Thigh Support Assembly 6

Rear Wheel Assembly 8

Hydraulic Motor Assembly No. 99-3052 10

Front Axle Assembly 12

Engine, Fuel Tank and Hydraulic Pump Assembly 14

Tandem Hydraulic Pump Assembly No. 108-4710 16

Carbon Canister and Fuel Line Assembly 18

Loader and Quick Attach Assembly 20

Battery Installation, Electrical Harness and Key Switch Assembly 22

Hydraulic Assembly 24

Auxiliary Valve Assembly 26

Auxiliary Hydraulic Valve Assembly No. 99-3077 28

Selector Valve Assembly 30

Hydraulic Selector Valve Assembly No. 99-3072 32

Hydraulic Traction Assembly 34


Hydraulic Valve Assembly No. 105-6246 36

Hydraulic Cylinder Assembly 38

Hydraulic Cylinder Assembly No. 117-1834 40

Attachments and Accessories 41


Frame Assembly

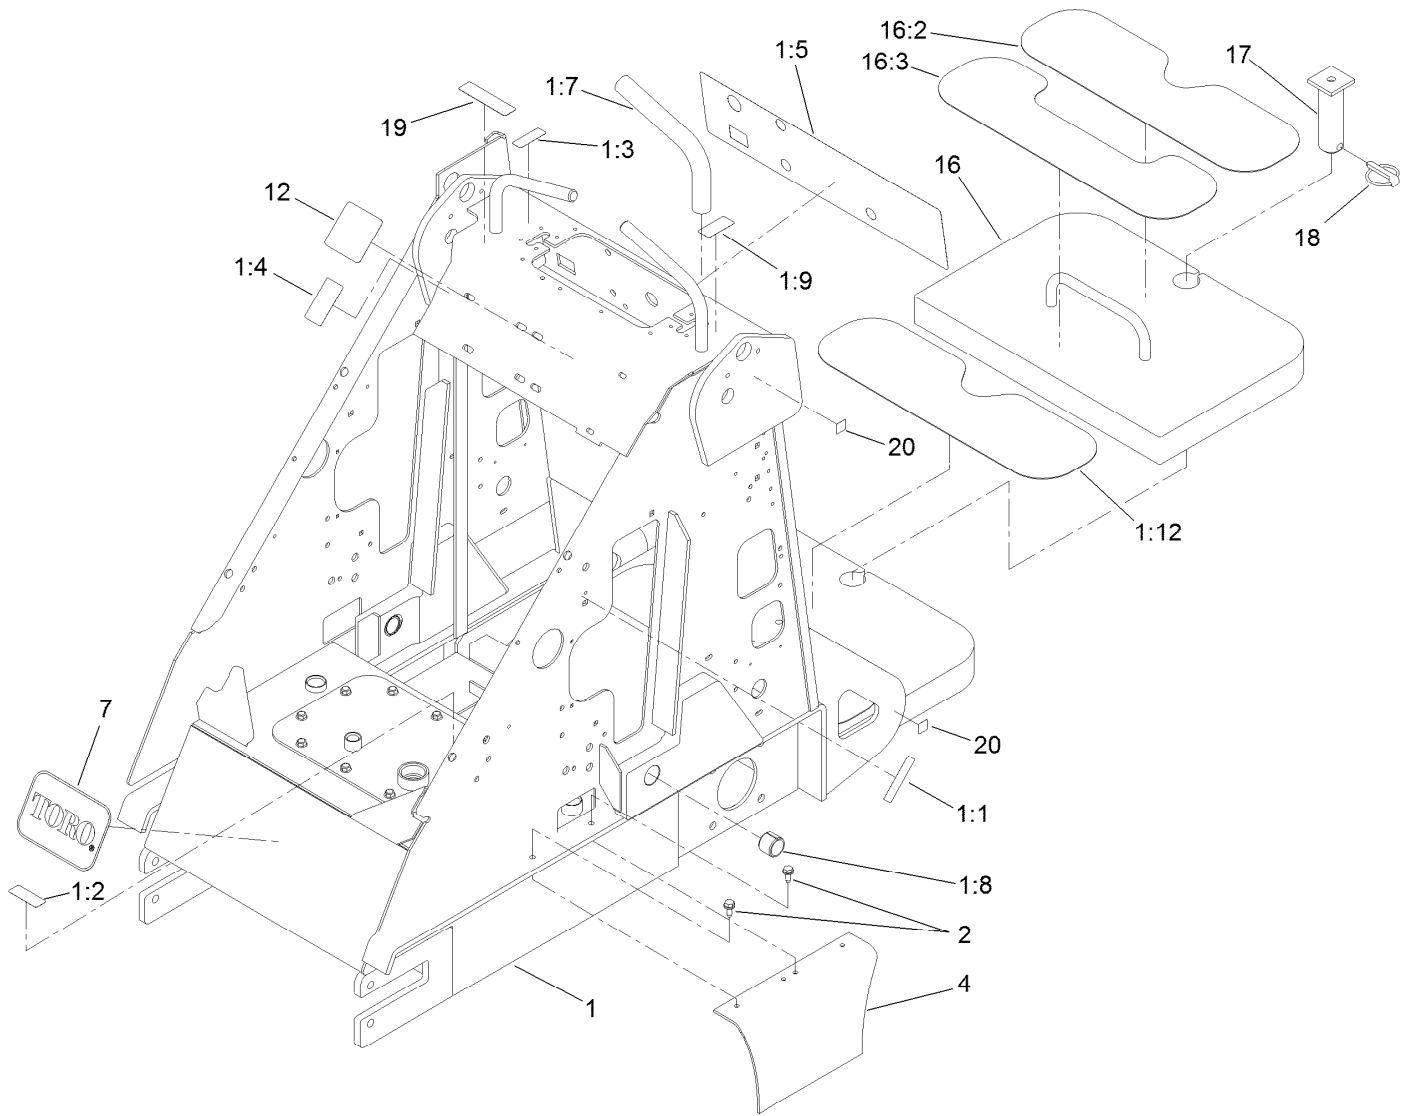

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-9700	1	Frame ASM	4	98-4669-01	2	Cover-Chain
1:1	100-6141	2	Decal-Pinch	7	62-5550	1	Decal
1:2	93-6686	1	Decal-Oil, HYD	12	108-9716	1	Decal-Selector, Speed
1:3	94-2551	1	Decal-Choke	16	112-4947	1	Counterweight ASM
1:4	98-4677	1	Decal-Power, Auxiliary	16:2	98-9947	1	Tread-Foot
1:5	108-9732	1	Decal-Panel, Control	16:3	112-4948	1	Tread
1:7	98-4845	2	Grip-Cushion	17	99-8638	1	Pin
1:8	98-4871	2	Bushing-Tension	18	99-9978	1	Pin-Lynch
1:9	98-8219	1	Decal-Throttle	19	117-2718	1	Decal-Arrester, Spark
1:12	98-9947	2	Tread-Foot	20	93-9084	4	Decal-Point, Lift
2	32144-70	4	Screw-HWHTF				

Canister Bracket and Thigh Support Assembly

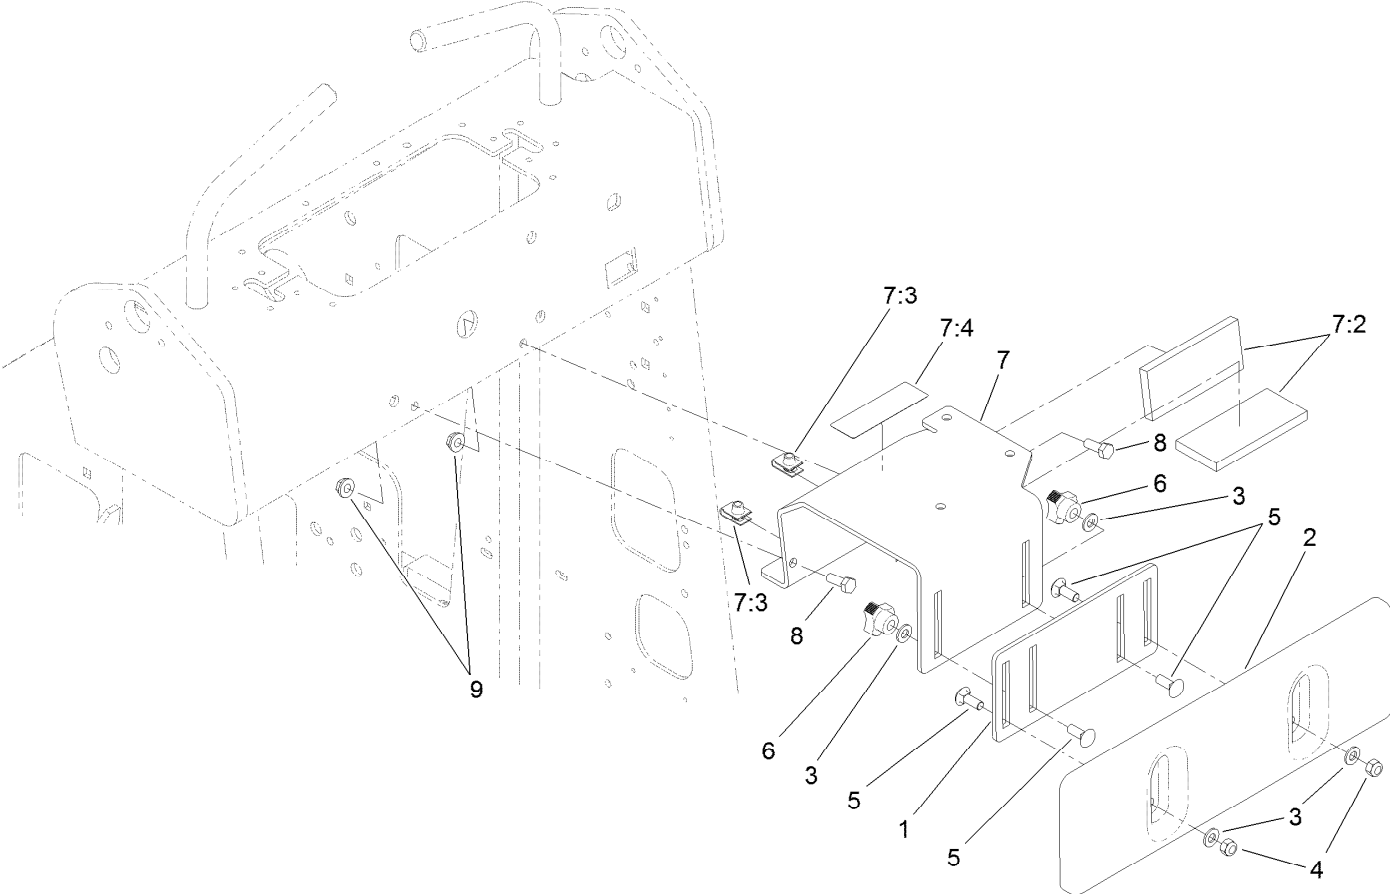


Canister Bracket and Thigh Support Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	105-0337-03	1	Plate-Adjusting
2	105-0333	1	Support-Thigh
3	3256-70	4	Washer-Flat
4	3296-72	2	Nut-Lock, NI
5	3230-16	4	Screw-CARR
6	104-6156	2	Knob-Adjustment

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	117-1820	1	Canister Bracket ASM
7:2	117-1798	2	Pad-Foam
7:3	115-7721	2	Nut-Clip, U
7:4	104-6108	1	Decal-Manual
8	322-4	2	Screw-HH
9	32128-20	2	Nut-HF


Rear Wheel Assembly

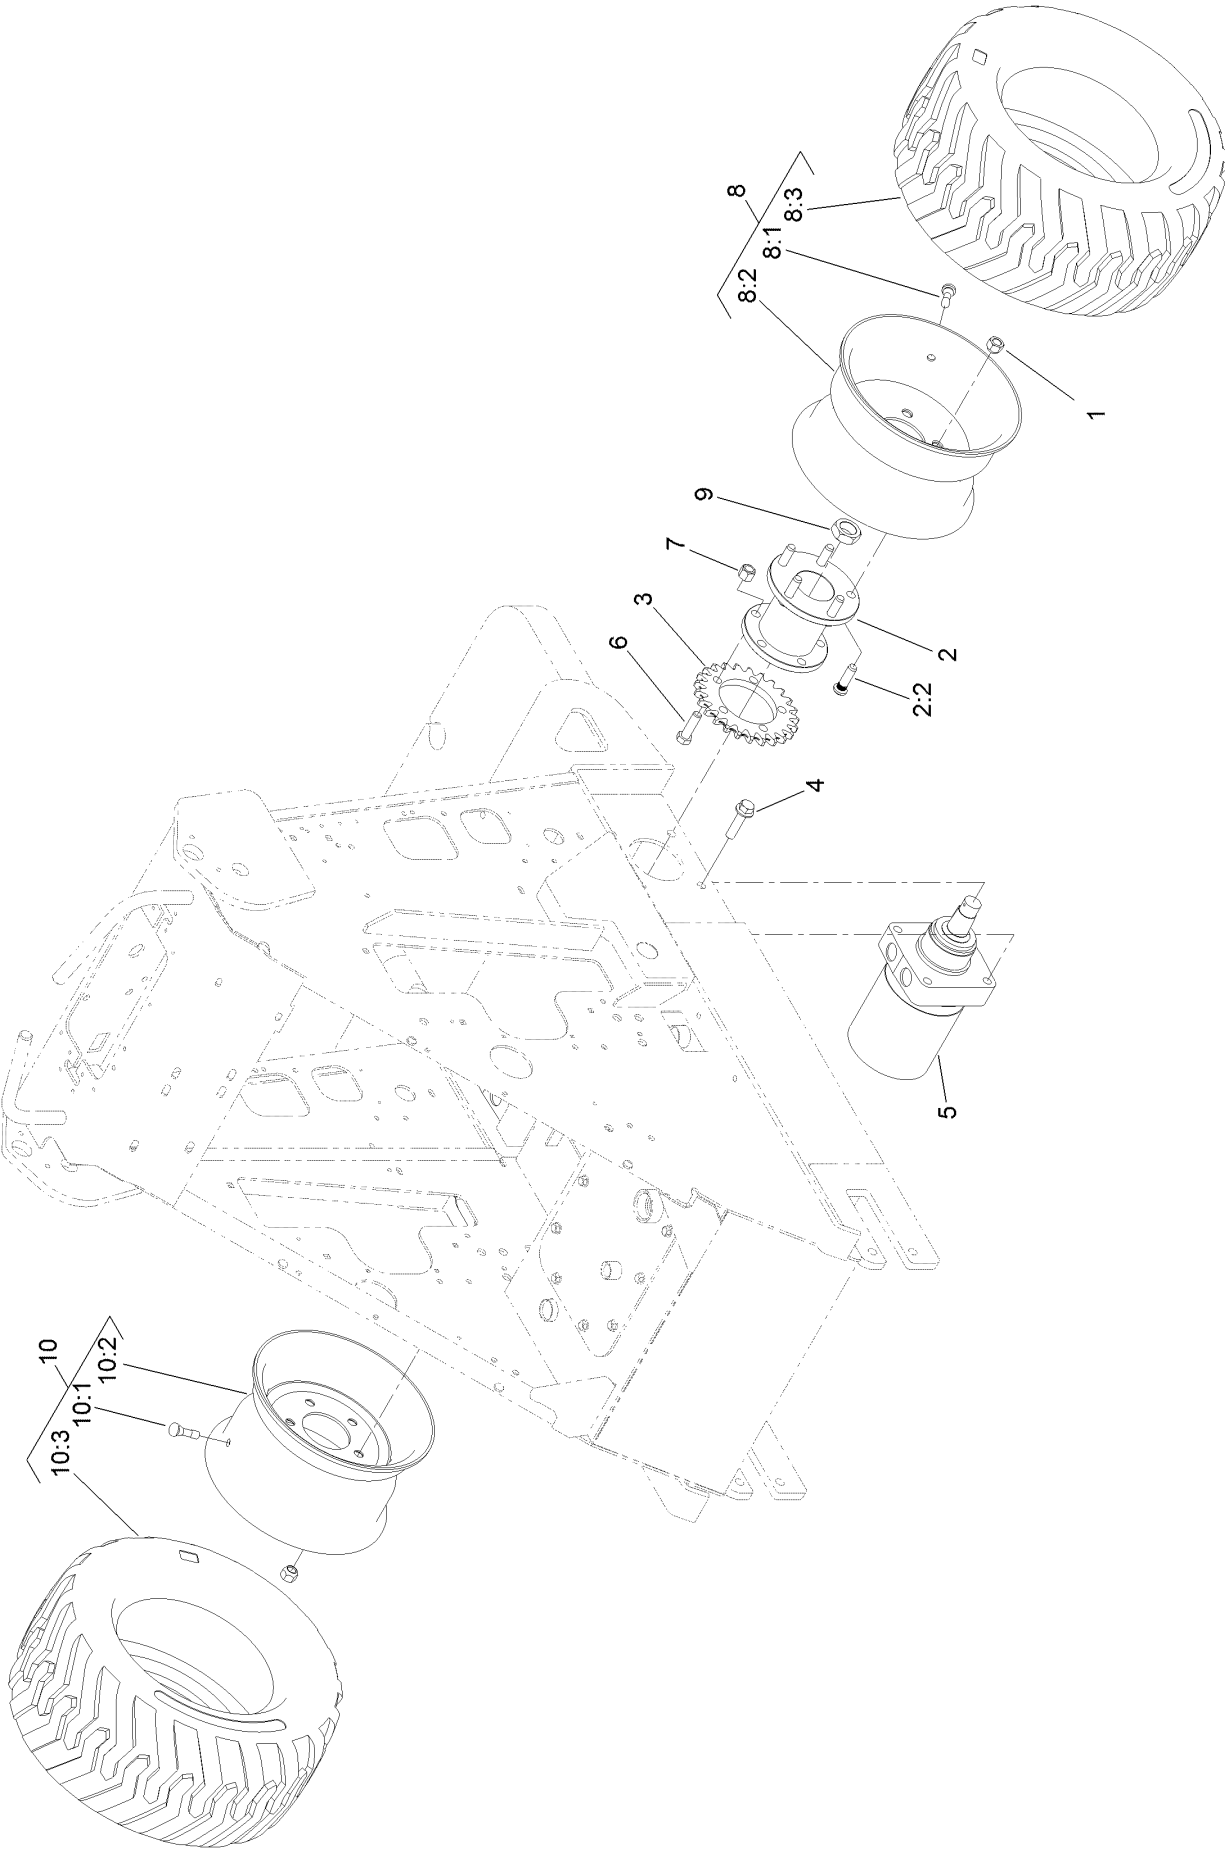

Rear Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	242-50	10	Nut-Lug	8:1	232-27	1	Stem-Valve
2	100-9990	2	Rear Hub ASM	8:2	98-2748	1	Wheel
2:2	10-6830	5	Stud-Type, Drive	8:3	98-2749	1	Tire
3	98-9937	2	Sprocket-25T	9	106-8159	2	Nut-Hex Jam Lck
4	3234-27	8	Screw-HHF	10	99-1447	1	RH Wheel And Tire ASM
5	99-3052	2	HYD Motor ASM	10:1	232-27	1	Stem-Valve
6	325-7	10	Screw-HH	10:2	98-2748	1	Wheel
7	3296-23	10	Nut-Lock, NI	10:3	98-2749	1	Tire
8	98-2747	1	LH Wheel And Tire ASM				

Hydraulic Motor Assembly No. 99-3052

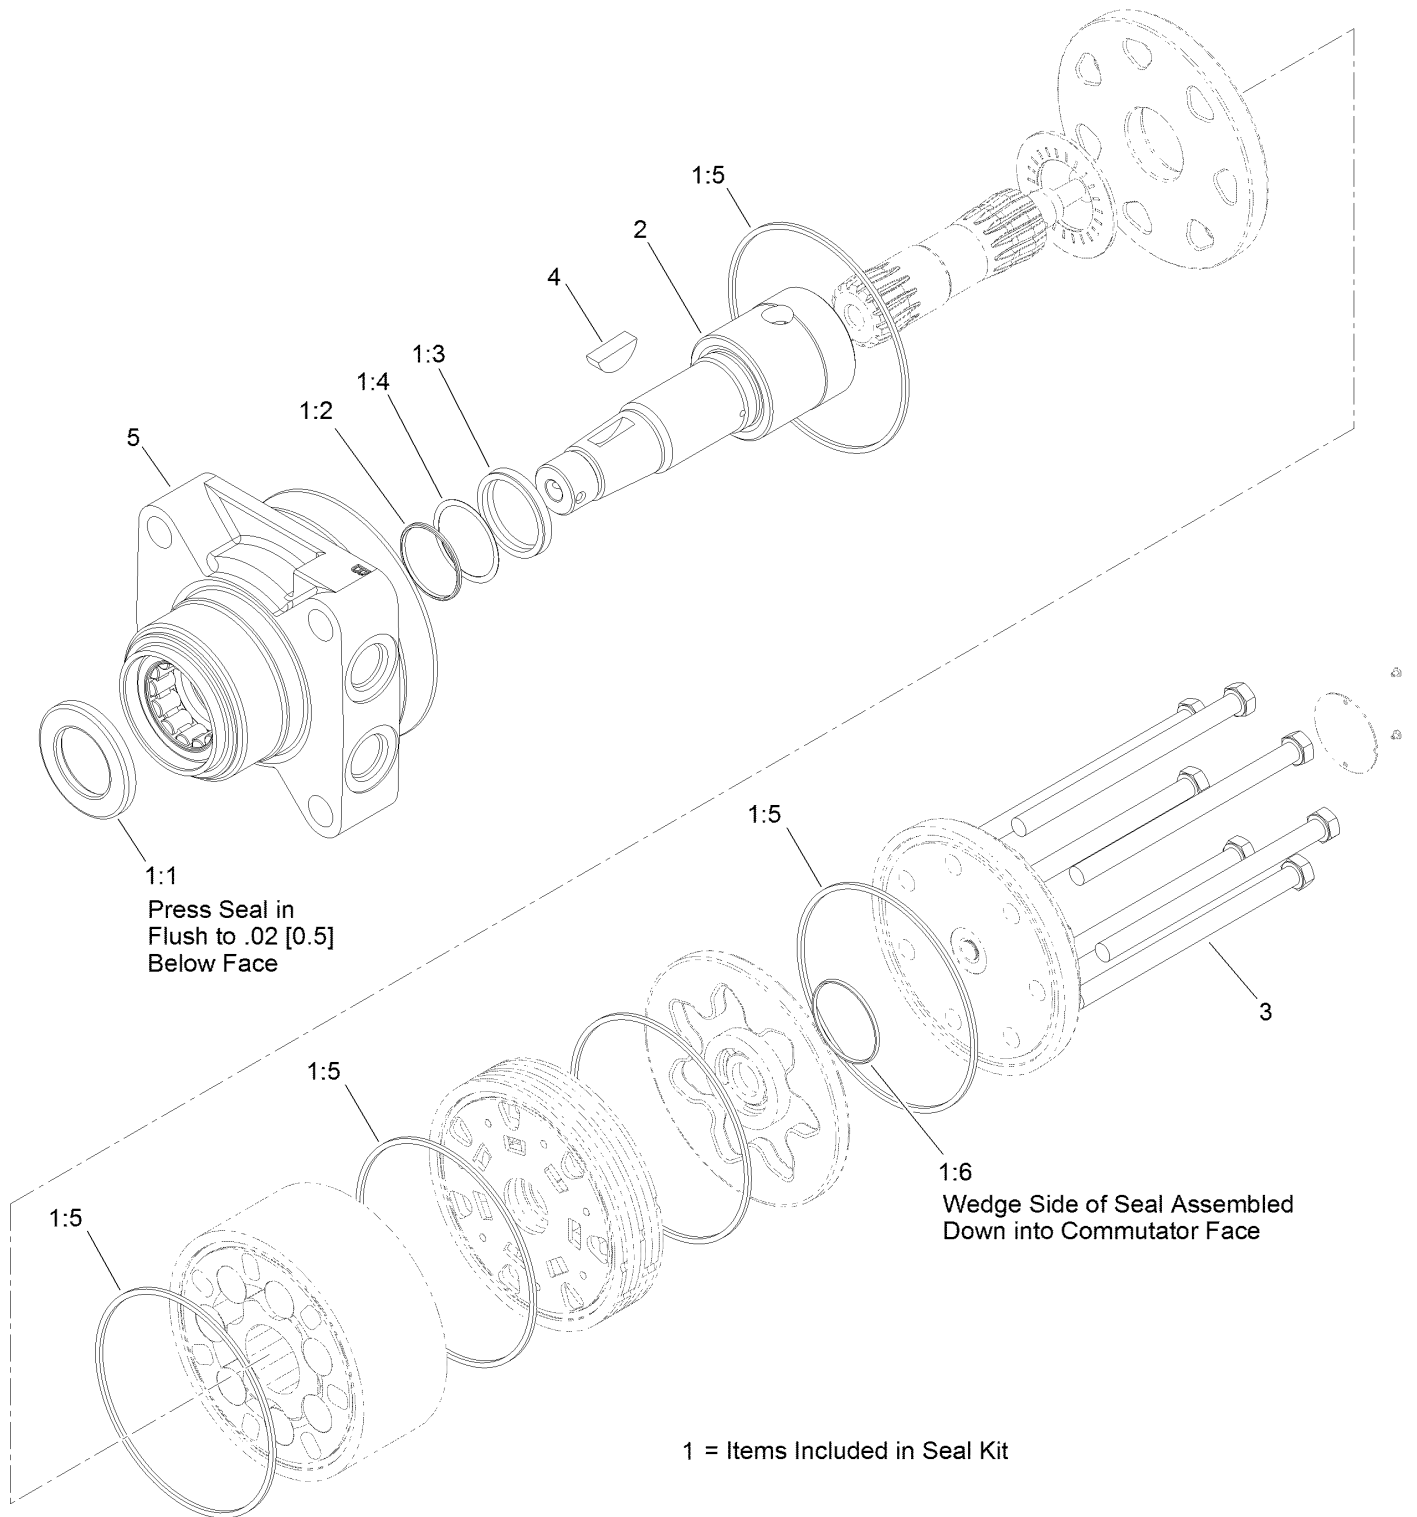


Hydraulic Motor Assembly No. 99-3052 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	94-8178	1	Seal Kit	1:6		1	Seal-Commutator ●
1:1		1	Seal-Dirt And Water ●	2	99-3090	1	Shaft-Coupling
1:2		1	Backup-Ring ●	3	99-3091	7	Screw-Cap, HH
1:3		1	Seal-Shaft ●	4	3257-42	1	Key-Woodruff
1:4		1	Washer-Backup ●	5	120-5392	1	Motor Housing ASM
1:5		5	Seal-Square, Ring (Inner) ●				

● Not serviced separately


Front Axle Assembly

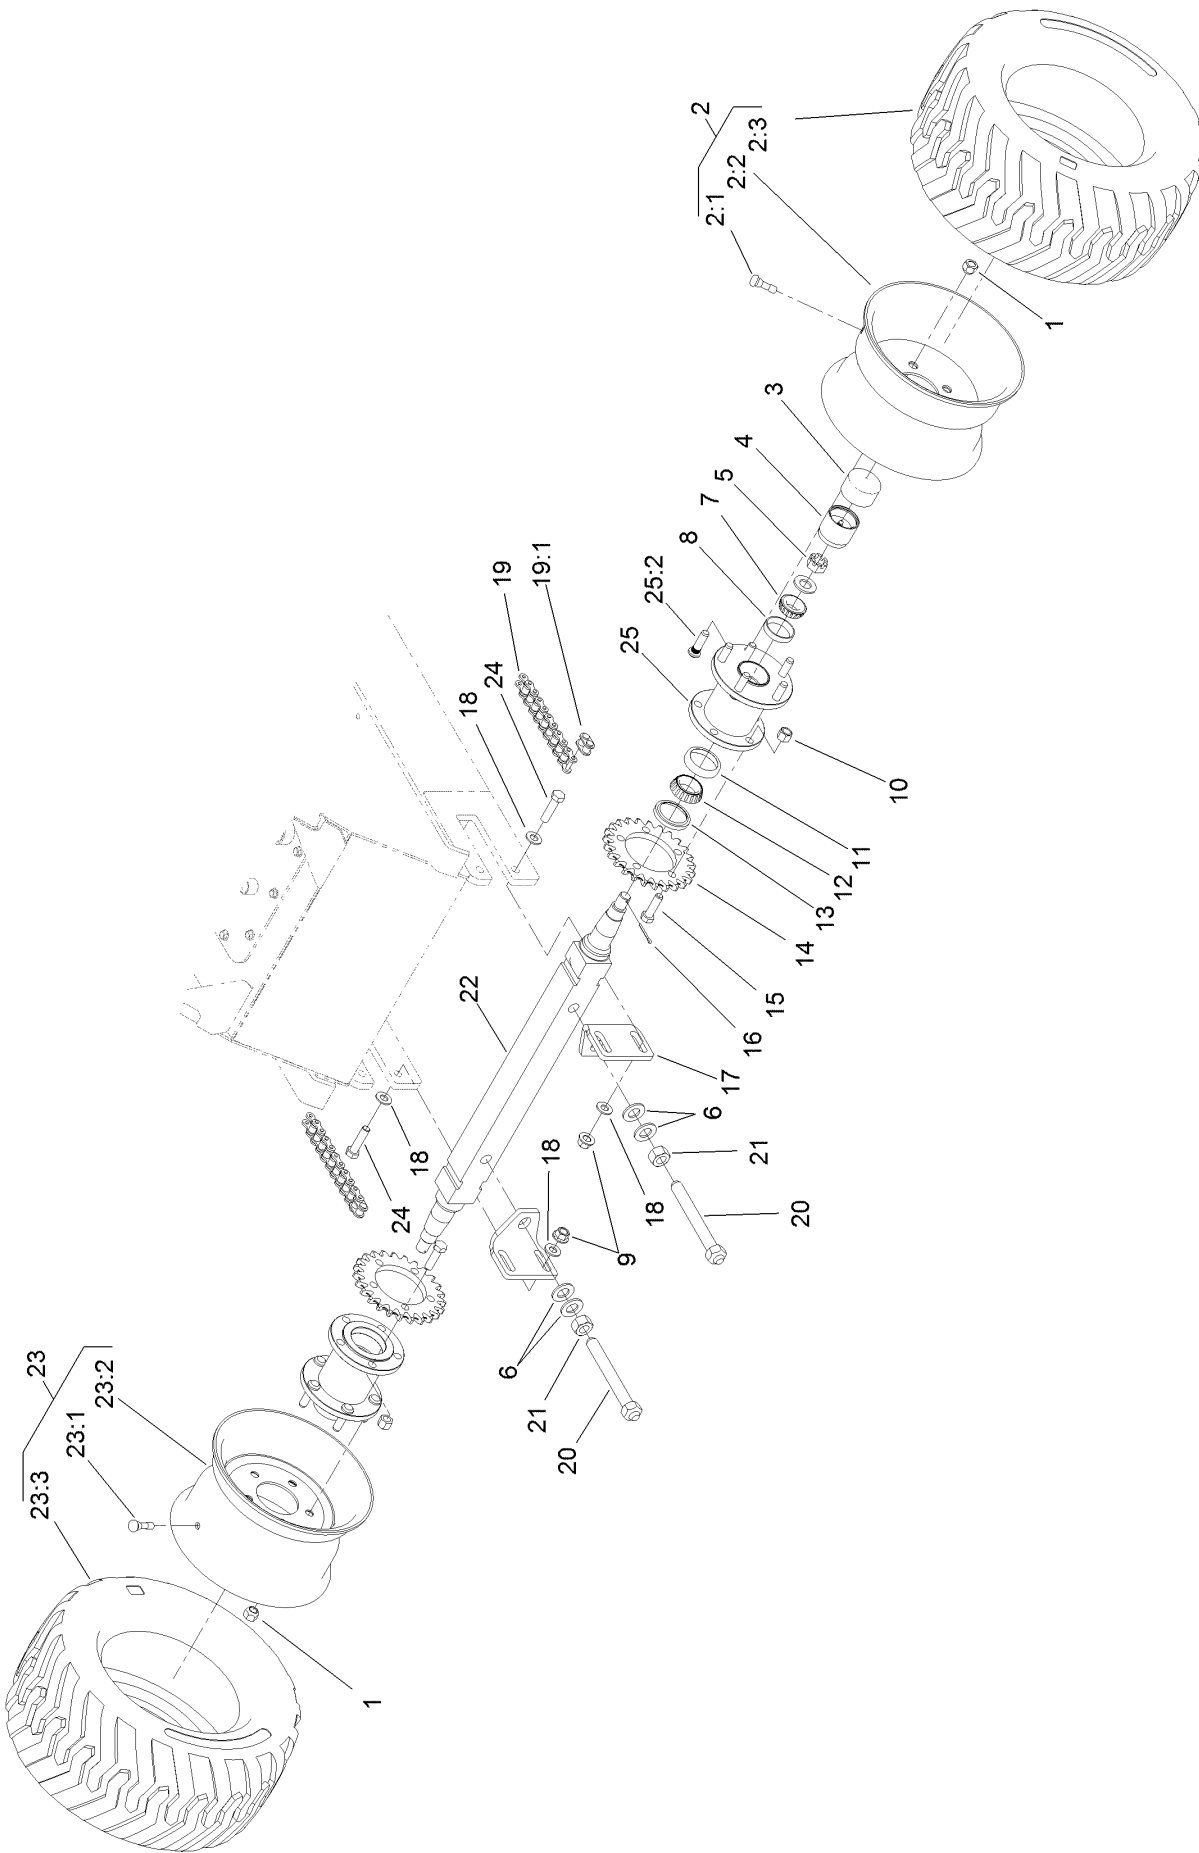

Front Axle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	242-50	10	Nut-Lug	15	325-7	10	Screw-HH
2	98-2747	1	LH Wheel And Tire ASM	16	3272-12	2	Pin-Cotter
2:1	232-27	1	Stem-Valve	17	99-5106-03	2	Bracket-Axle
2:2	98-2748	1	Wheel	18	3256-26	8	Washer-Flat
2:3	98-2749	1	Tire	19	98-4906	2	Chain-Roller
3	100-3809	2	Cap-Protector, Bearing	19:1	98-9089	1	Link-Connecting
4	100-3769	2	Protector-Bearing	20	98-4706	2	Bolt-Tension
5	32136-5	2	Nut-Hex, Slotted	21	3217-12	2	Nut-Hex
6	3256-28	6	Washer-Flat	22	98-4825	1	Axle
7	254-94	2	Bearing-Cone, Tapered	23	99-1447	1	RH Wheel And Tire ASM
8	254-72	2	Bearing-Cup, Tapered	23:1	232-27	1	Stem-Valve
9	99-5107	4	Nut-Lock	23:2	98-2748	1	Wheel
10	3296-23	10	Nut-Lock, NI	23:3	98-2749	1	Tire
11	254-107	2	Cup-Bearing, Tapered	24	325-8	4	Screw-HH
12	254-106	2	Cone-Bearing, Tapered	25	100-9989	2	Front Hub ASM
13	98-4705	2	Seal-Bearing, Wheel	25:2	10-6830	5	Stud-Type, Drive
14	98-9937	2	Sprocket-25T				

Engine, Fuel Tank and Hydraulic Pump Assembly

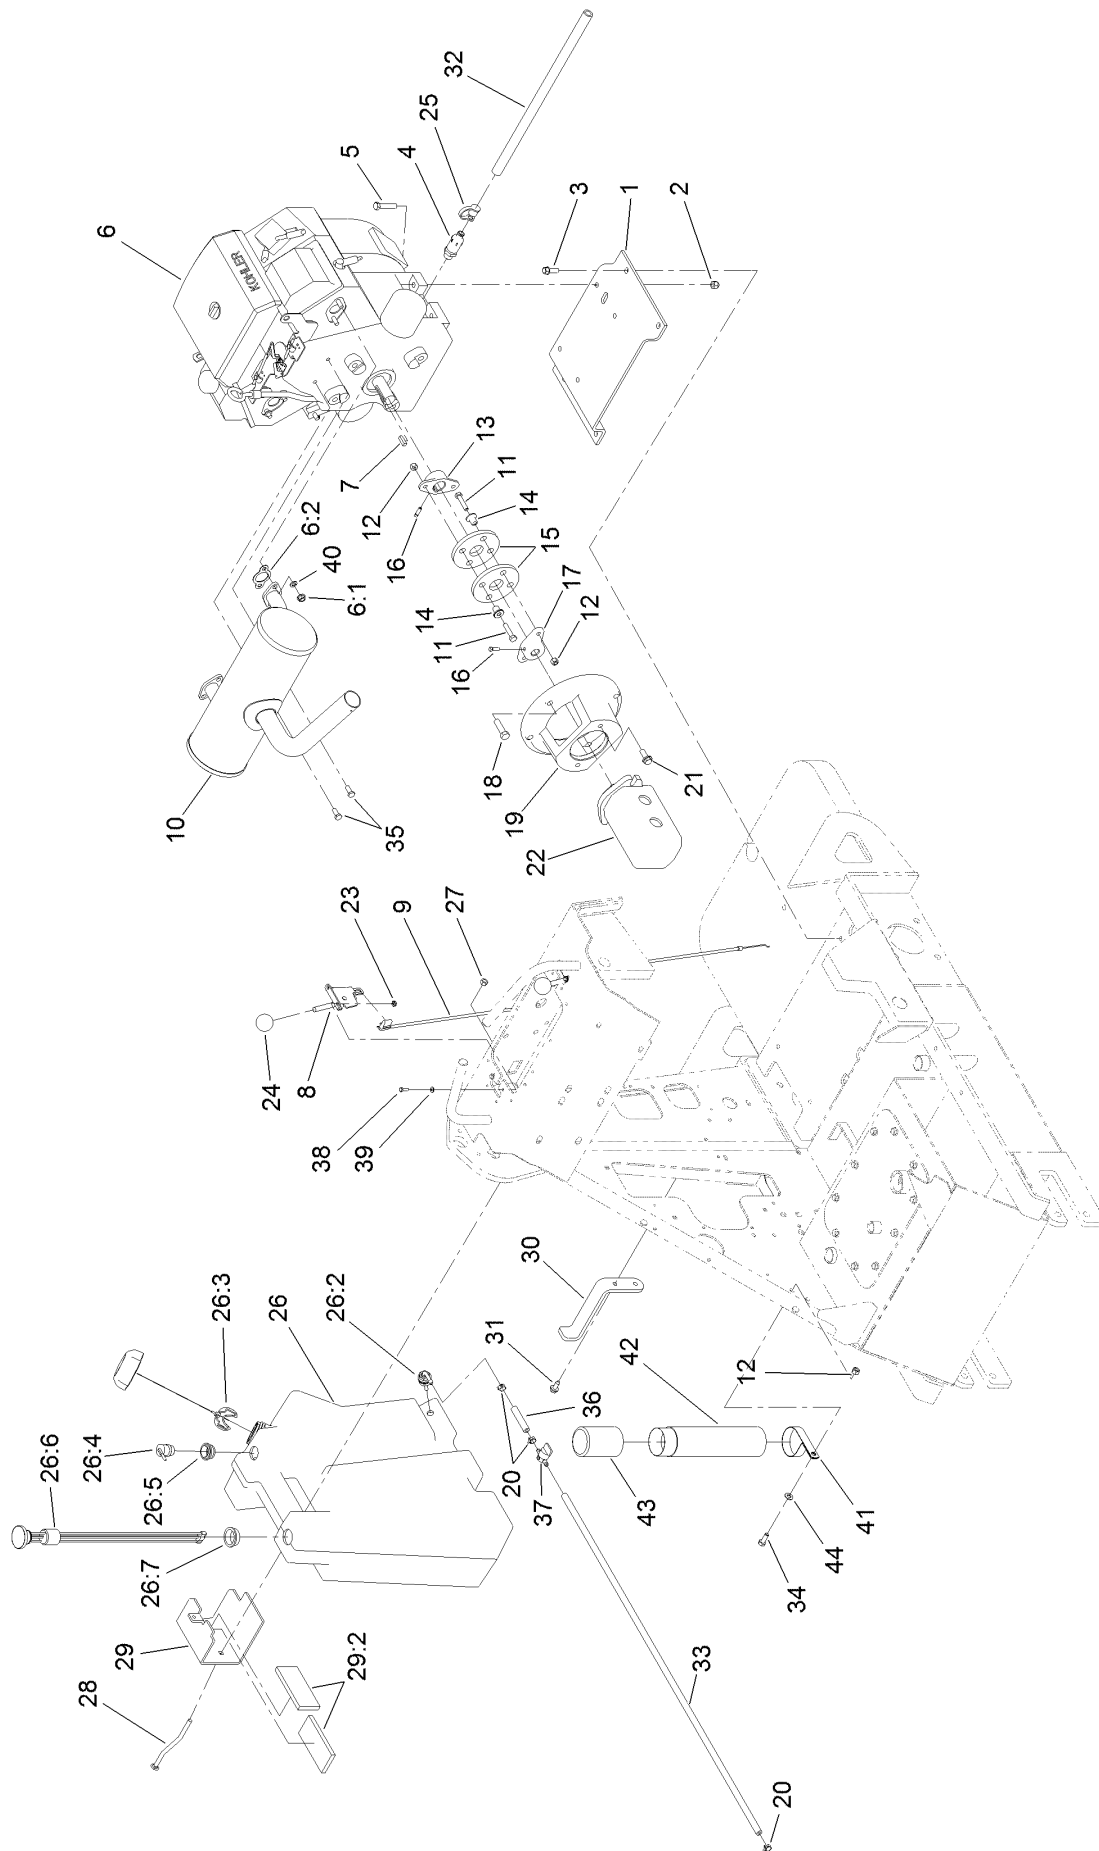


Engine, Fuel Tank and Hydraulic Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	98-4666-03	1	Mount-Engine	26	119-5241	1	RH Fuel Tank ASM
2	3296-39	4	Nut-Lock, NI	26:2	103-2605	1	Fitting-Fuel, Bulkhead
3	95-1726	4	Screw-Taptite	26:3	115-7788	1	Cap-Fuel
4	92-6877	1	Valve-Drain, Oil	26:4	114-0285	1	Valve-Rollover
5	323-9	4	Screw-HH	26:5	114-0284	1	Grommet
6	117-1745	1	Engine-Kohler, Ch20S ●	26:6	104-5603	1	Gauge-Level, Fuel
6:1	92-6780	4	Nut-HF	26:7	95-8972	1	Grommet
6:2	110-6697	2	Gasket-Exhaust	27	32153-3	1	Nut-Hex, Side Deform
7	10-7070	1	Key-Square	28	98-4657	1	Bolt-Mount
8	108-9730	2	Lever-Control	29	117-1802	1	RH Tank Mount ASM
9	108-4718	2	Cable-Control	29:2	117-1798	2	Pad-Foam
10	105-8381	1	Muffler	30	117-1777-03	1	Mount-Tank, Bottom
11	322-7	4	Screw-HH	31	32144-70	2	Screw-HWHTF
12	3296-29	5	Nut-Lock, NI	32	98-4667	1	Hose
13	110-5236	1	Hub-Engine	33	109-0273	1	Hose-Fuel
14	71-4411	4	Spacer	34	322-4	1	Screw-HH
15	115-4523	2	Coupling-Rubber	35	33114-020	2	Screw-HH
16	3241-6	4	Screw-SQH	36	109-0304	1	Hose-Fuel
17	98-4701	1	Hub-Pump	37	1-603770	1	Valve-Fuel
18	324-6	4	Screw-HH	38	3290-134	4	Screw
19	98-2751-03	1	Mount-Pump	39	3256-51	4	Washer-Flat
20	2412-98	4	Clamp-Hose	40	3253-4	4	Washer-Lock
21	66-9300	2	Screw-HHF	41	2412-133	1	Clamp-R
22	108-4710	1	HYD Pump ASM	42	104-7050	1	Tube-Manual
23	32149-7	4	Nut-Keps	43	104-7048	1	Cap-Housing
24	233-42	2	Knob	44	3256-23	1	Washer-Plain
25	354-79	1	Cap-Dust				

● Obtain Parts From Kohler


Tandem Hydraulic Pump Assembly No. 108-4710

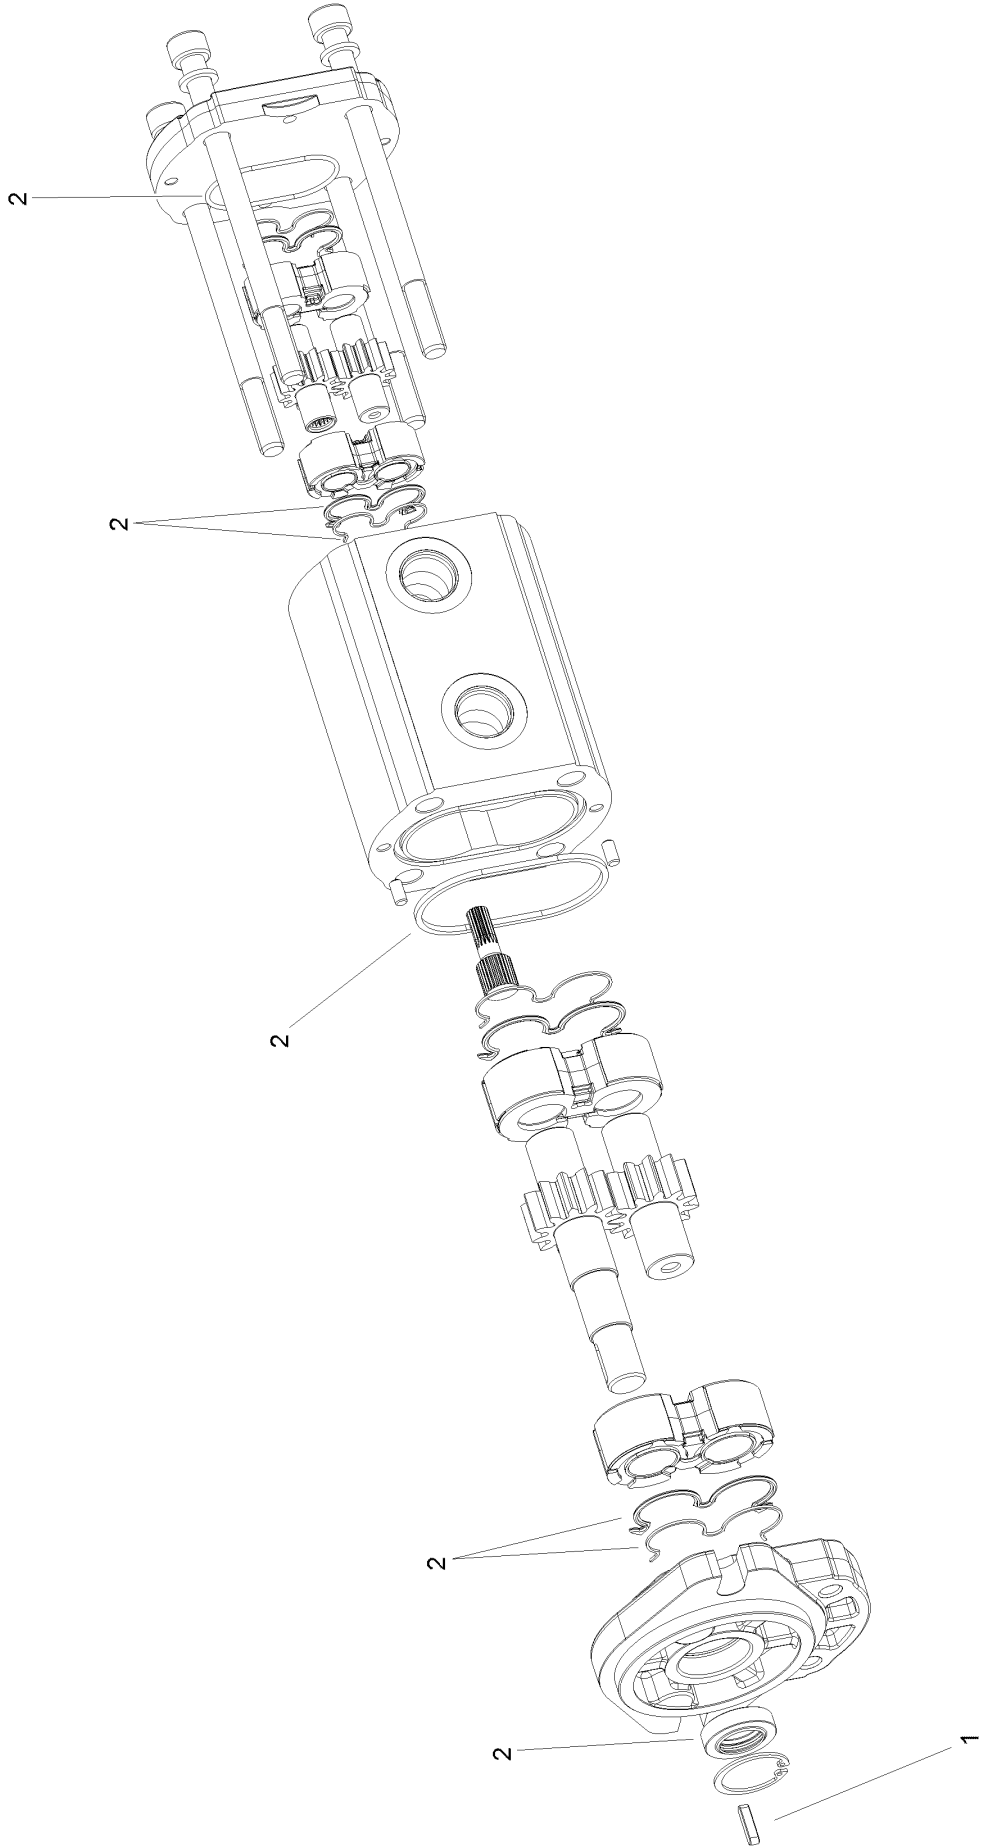

Tandem Hydraulic Pump Assembly No. 108-4710 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	98-4700	1	Key-Square
2	99-1353	1	Seal Kit

Carbon Canister and Fuel Line Assembly

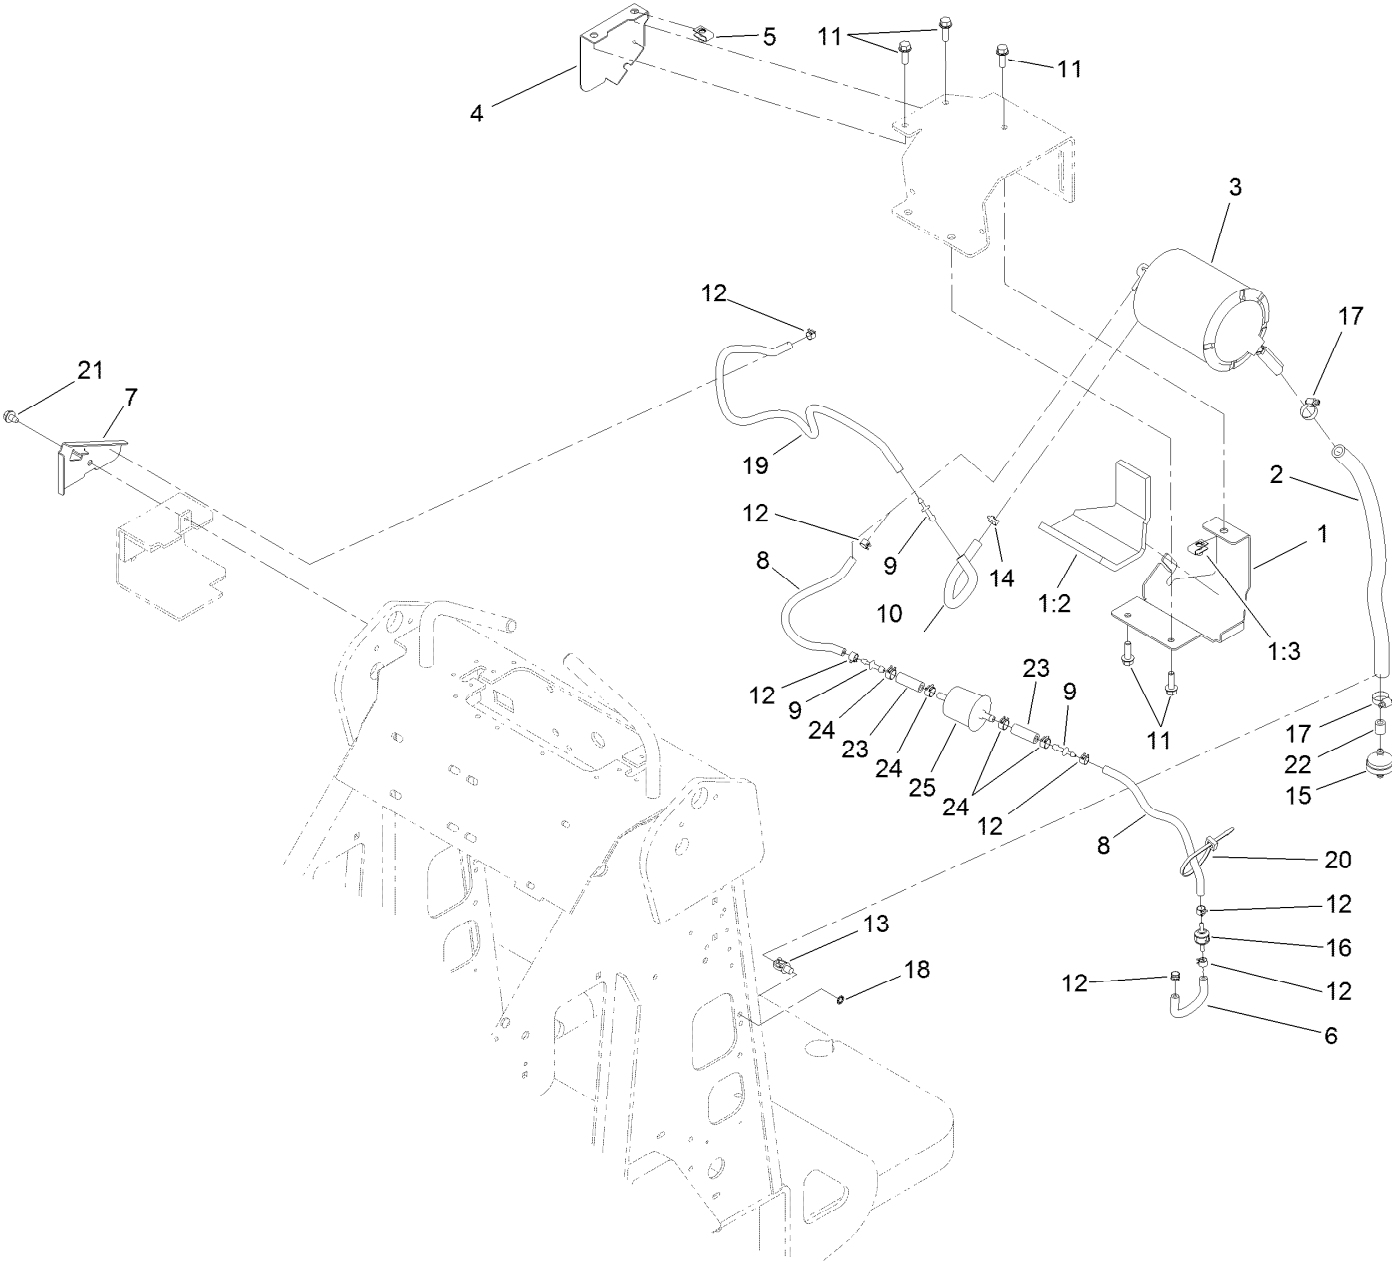


Carbon Canister and Fuel Line Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-1821	1	Canister Mount ASM
1:2	117-1799	1	Pad-Foam
1:3	115-7721	1	Nut-Clip, U
2	106-5709	1	Hose-Vent
3	116-1442	1	Canister-Carbon, 1200Cc
4	117-1785-03	1	Cover-Canister
5	115-7721	2	Nut-Clip, U
6	115-4736	1	Hose-Fuel
7	117-1792-03	1	Plate-Hose Retainer, RH
8	51-3217	2	Hose-Fuel
9	106-8150	3	Fitting-Straight
10	109-0294	1	Hose-Fuel
11	3234-29	5	Screw-HHF
12	2412-146	7	Clamp-Hose

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13	32180-030	1	Clip-Tie
14	2412-98	1	Clamp-Hose
15	115-7854	1	Filter-Fuel, Inline
16	115-7868	1	Valve-Check, Vacuum
17	2412-36	2	Clamp-Hose
18	3254-8	1	Washer-Lock
19	119-6074	1	Hose-Fuel
20	3290-378	1	Tie-Cable
21	9266934	1	Screw
22	117-1789	1	Hose-Fuel
23	106-5317	2	Hose-Fuel
24	92-2379	4	Clamp-Hose
25	120-2235	1	Filter-Fuel


Loader and Quick Attach Assembly

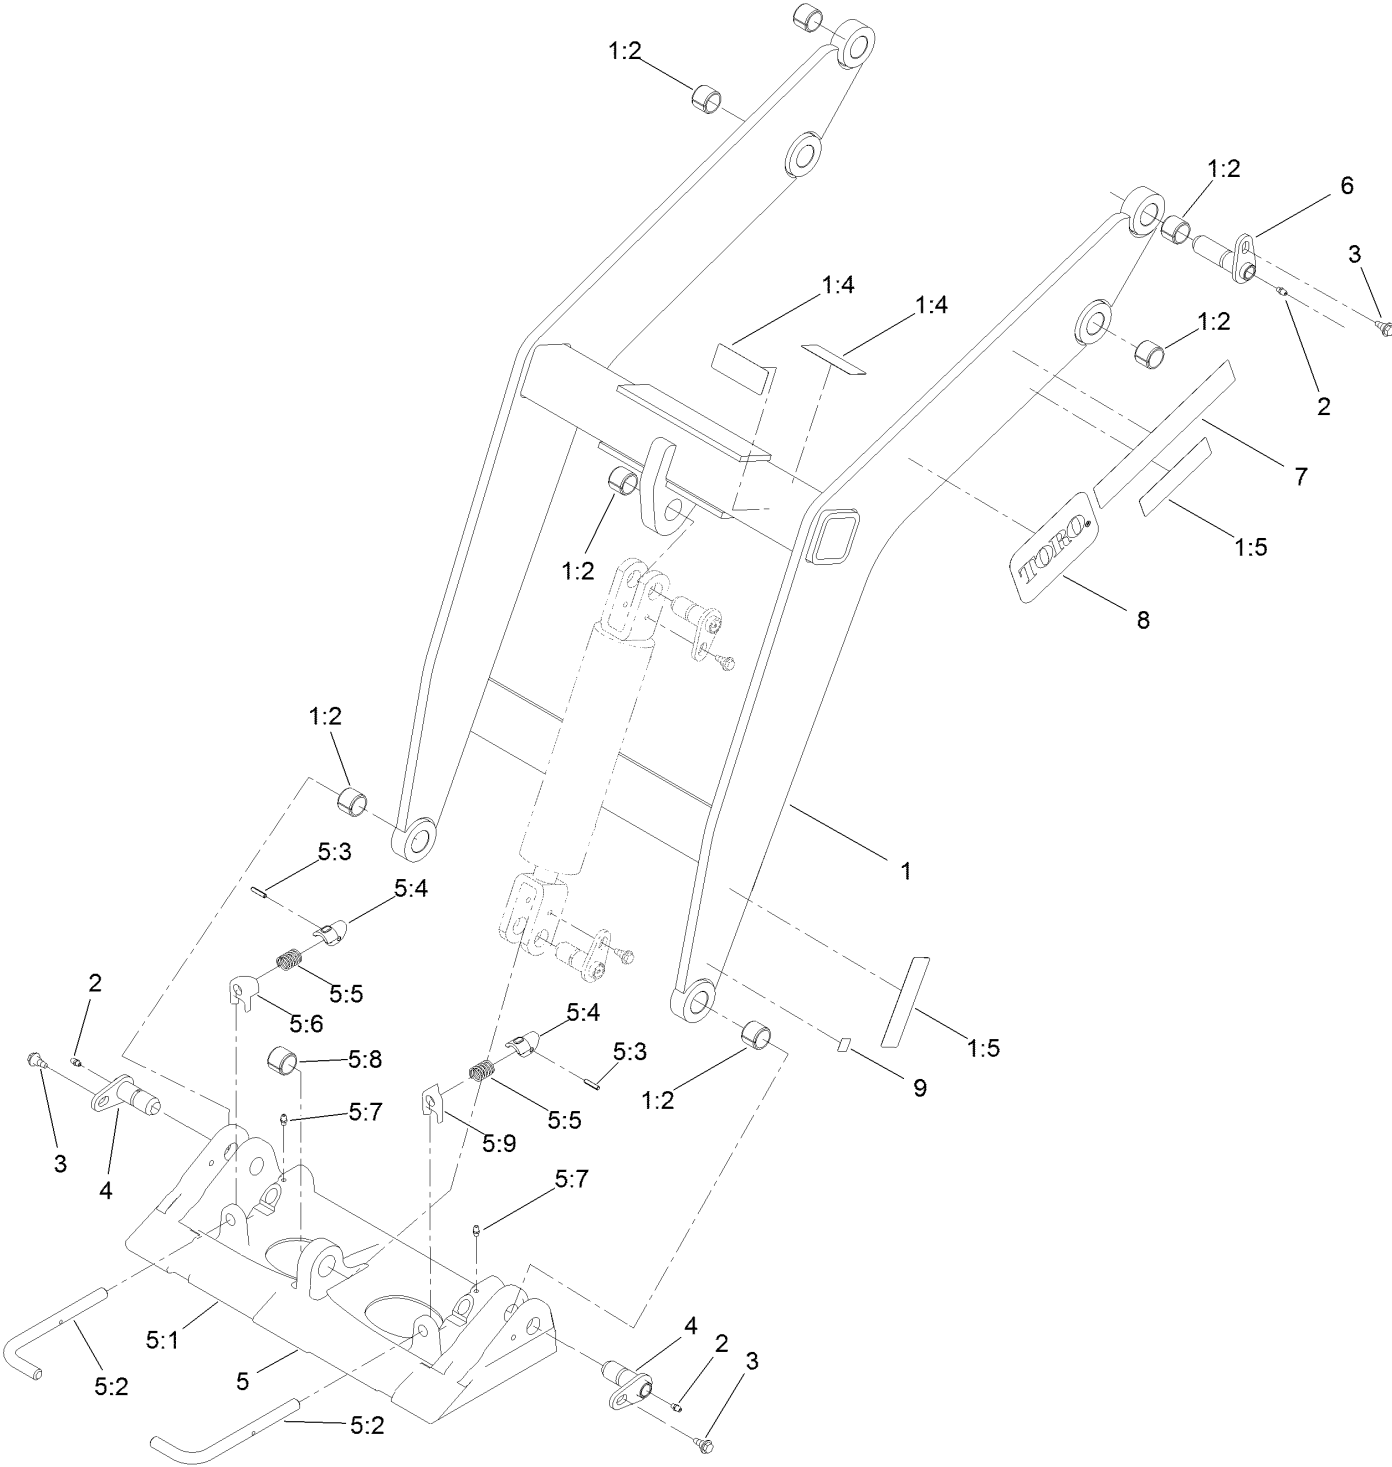

Loader and Quick Attach Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-8155	1	Loader ASM	5:4	105-0246	2	Cam
1:2	98-4871	7	Bushing-Tension	5:5	98-4694	2	Spring-Compression
1:4	130-2837	2	Decal-Warning, No Rider	5:6	104-5909	1	Stop-RH
1:5	130-2836	4	Decal-Warning, Crushing	5:7	302-5	2	Fitting-Grease
2	302-5	4	Fitting-Grease	5:8	98-4871	1	Bushing-Tension
3	99-5105	4	Screw-Shoulder	5:9	104-5903	1	Stop-LH
4	112-2609	2	Pin-Pivot	6	120-5363	2	Pin-Pivot
5	115-0788	1	Quick Attach ASM	7	105-8426	2	Decal
5:1	115-0774-03	1	Mount-Qtach	8	93-7340	2	Decal
5:2	105-8367	2	Pin-Locking	9	93-9084	2	Decal-Point, Lift
5:3	3285-1	2	Pin-Grooved				

Battery Installation, Electrical Harness and Key Switch Assembly

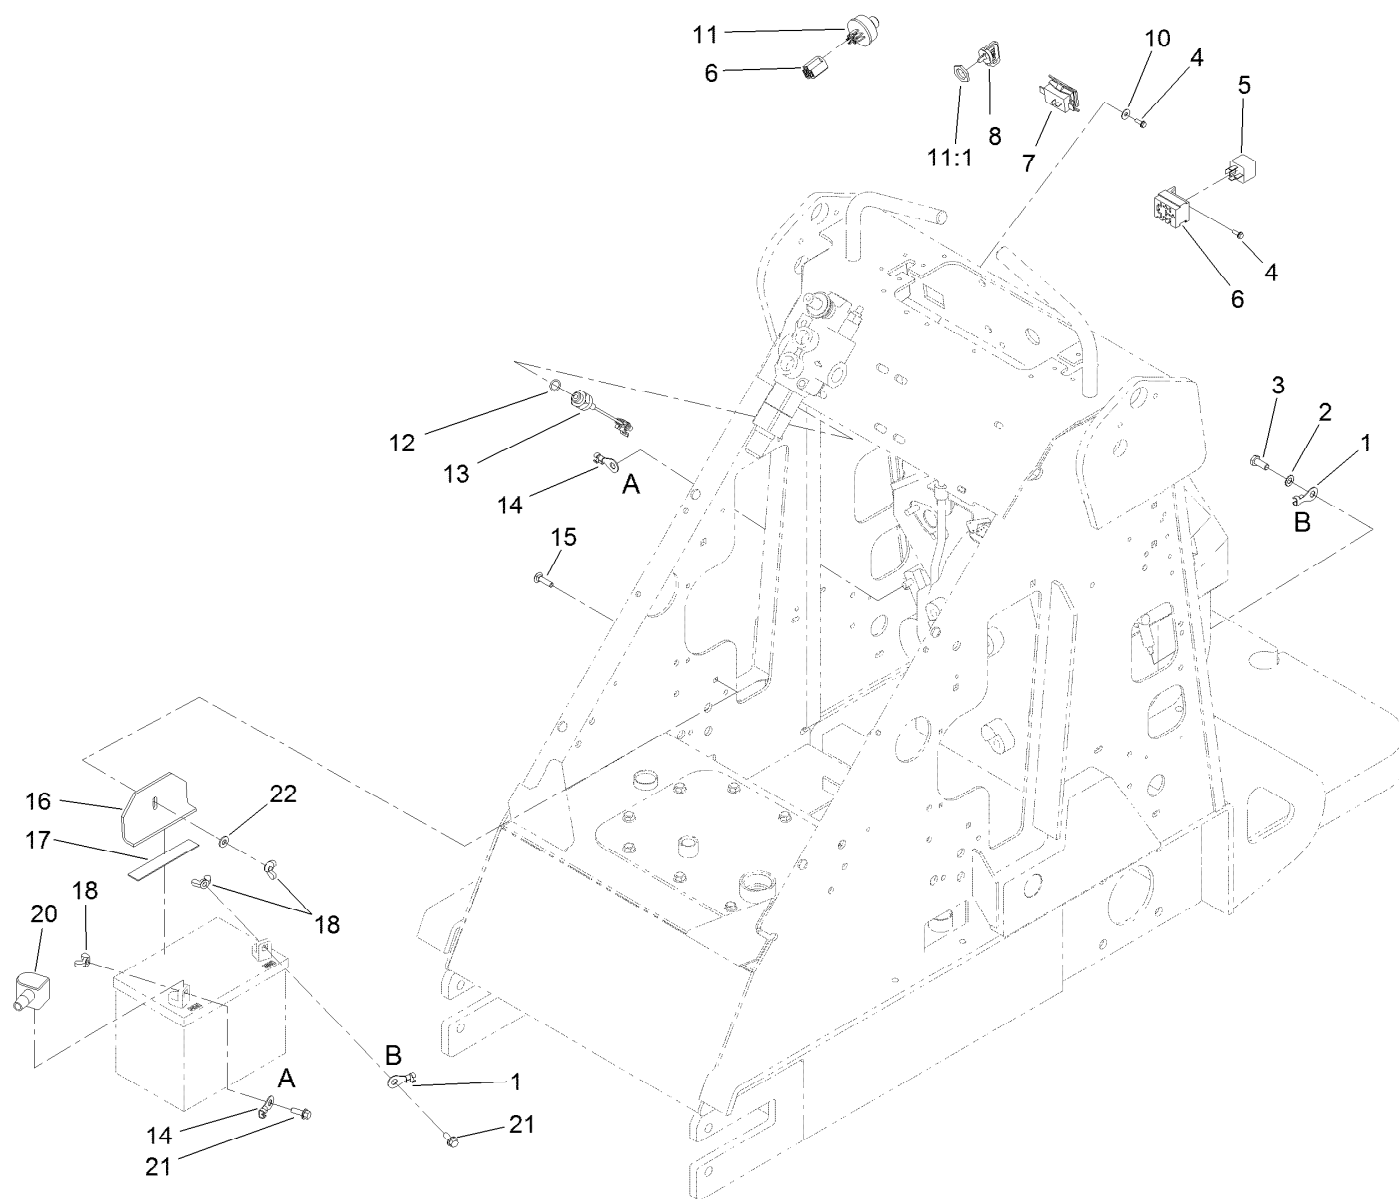


Battery Installation, Electrical Harness and Key Switch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111074	1	Cable-Black	11:2	9201604	1	Washer-Lock ● ■
2	3255-8	1	Washer-Lock	12	237-42	1	O-Ring
3	33114-020	1	Screw-HH	13	72-4310	1	Switch-Ball
4	32144-87	2	Screw-HWHTF	14	92-6989	1	Wire-21 Inch
5	98-7249	1	Relay	15	3229-2	1	Screw-CARR
6	131-0580	1	Harness-Wire	16	105-8401-03	1	Clamp-Battery
7	106-8175	1	Meter-Hour	17	94-9566	1	Pad-Footrest
8	63-8360	2	Key-Ignition	18	32103-22	3	Nut-Wing
10	3256-49	1	Washer-Plain	20	77-0981	1	Boot-Terminal, Red
11	116338	1	Key Switch ASM	21	3234-4	2	Screw-HHF
11:1	101884	1	Nut	22	3256-22	1	Washer-Flat

● Not illustrated

■ Not used for this configuration

Hydraulic Assembly

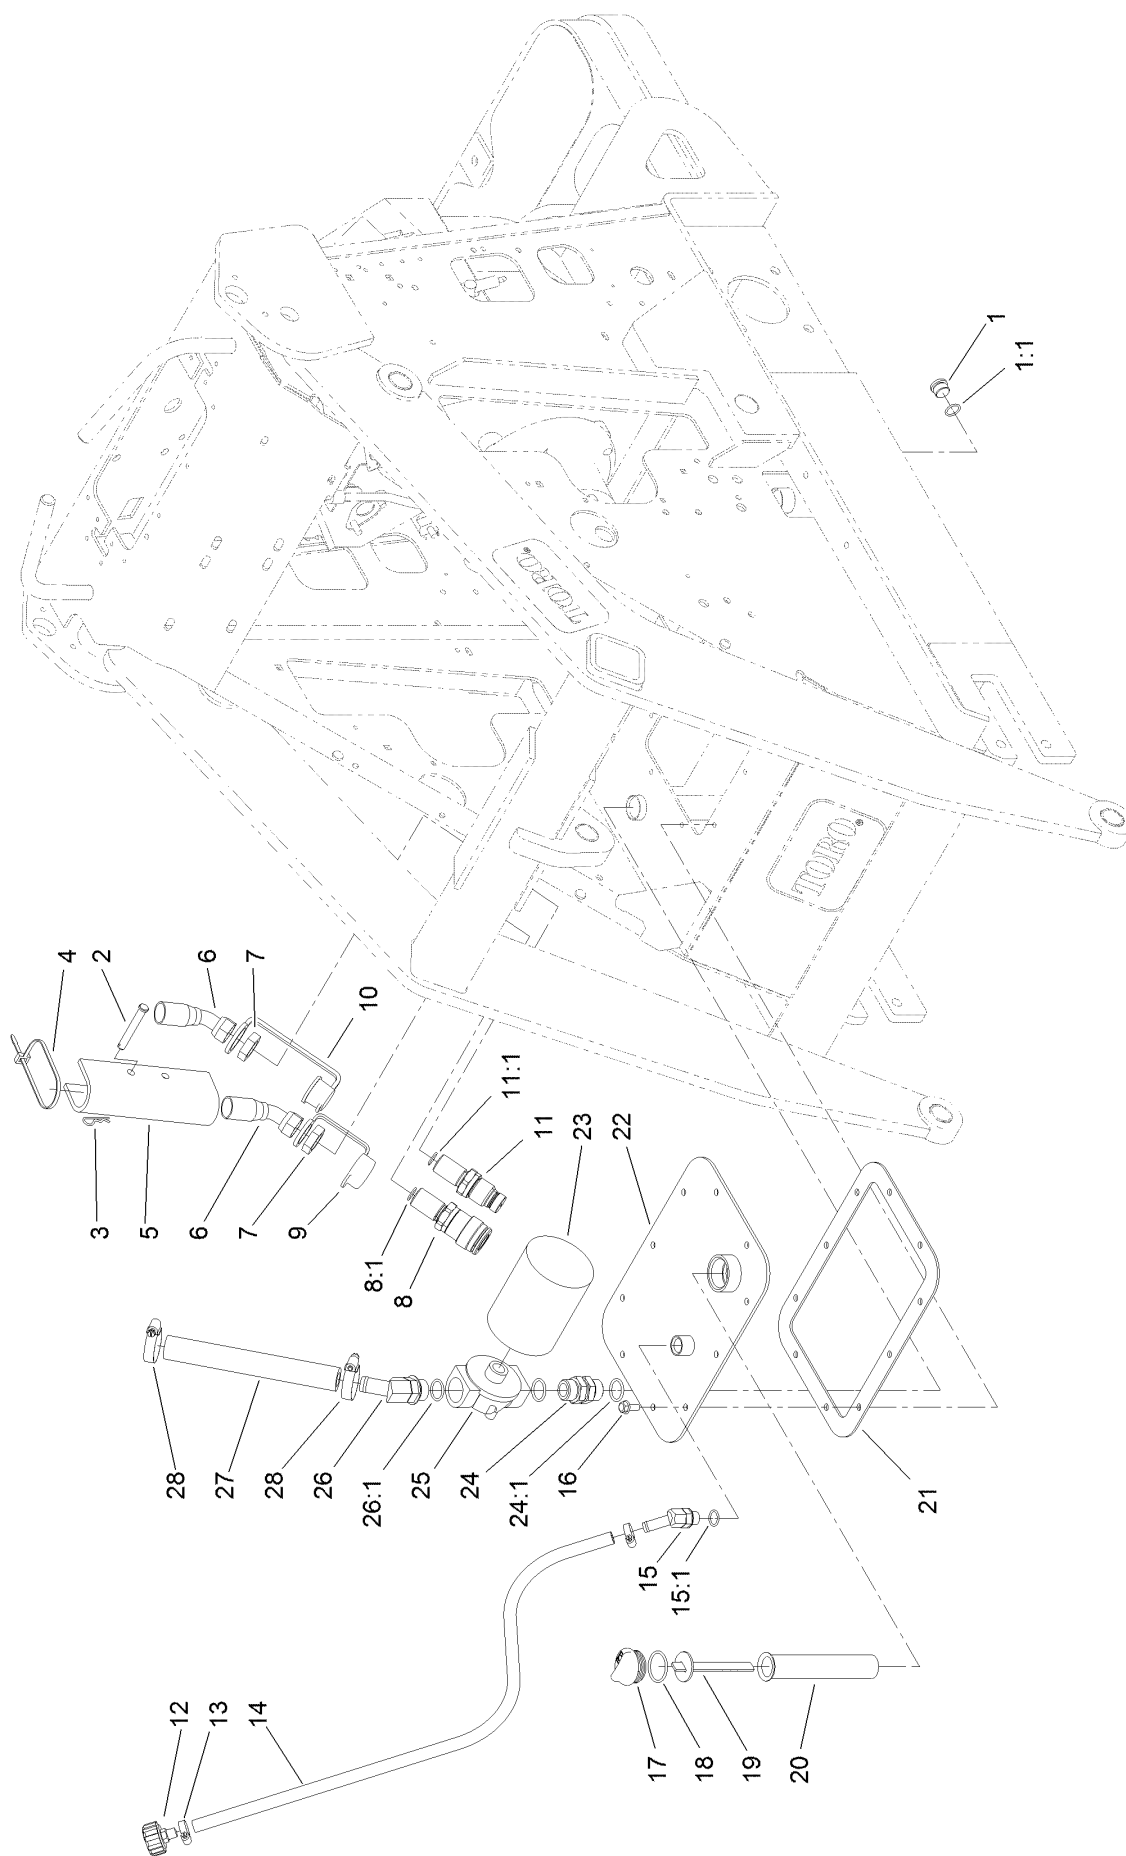


Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	353-988	1	Plug-Hex	15	354-126	1	Fitting-Elbow, 45
1:1	237-79	1	O-Ring	15:1	237-79	1	O-Ring
2	283-52	2	Pin-Clevis	16	98-9940	10	Screw-HHF
3	3290-467	2	Pin-Hair	17	93-7498	1	Plug-Plastic
4	3290-379	9	Tie-Cable	18	237-123	1	O-Ring
5	98-4675-01	2	Lock-Cylinder	19	100-2097	1	Dipstick-Oil
6	100-8817	2	Hose-HYD	20	61-2790	1	Filter-Screen
7	340-74	2	Nut-Lock, Bulkhead	21	98-9927	1	Gasket-Cover
8	105-8394	1	Bulkhead Coupler ASM	22	98-2709	1	Cover
8:1	237-65	1	O-Ring	23	54-0110	1	Filter-Oil, Transmission
9	100-8816	1	Cap-Dust, Coupler	24	98-9906	1	Fitting-Thread, Straight
10	100-8815	1	Cap-Dust, Nipple	24:1	237-81	2	O-Ring
11	105-8395	1	Bulkhead Nipple ASM	25	92-5821	1	Head-Filter
11:1	237-65	1	O-Ring	26	354-127	1	Fitting-Elbow45
11:2	100-6120	1	Seal Kit ●	26:1	237-81	1	O-Ring
12	68-6150	1	Breather	27	98-2713	1	Hose-Suction, HYD
13	2412-36	2	Clamp-Hose	28	2412-129	2	Clamp-Hose
14	98-2708	1	Hose-Vent				

● Not illustrated


Auxiliary Valve Assembly

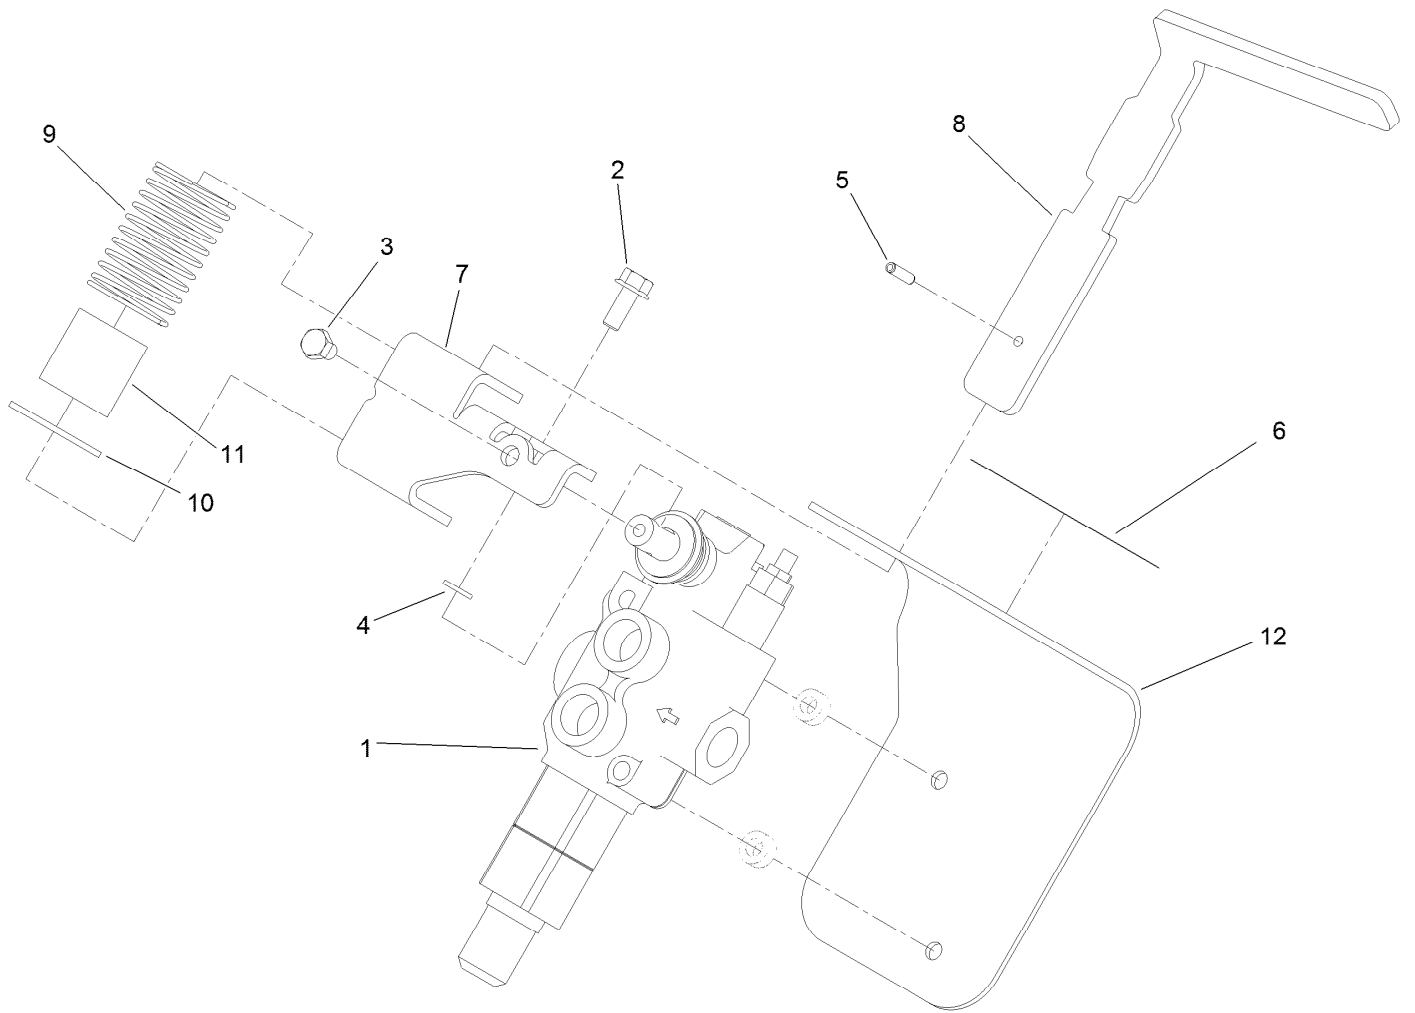

Auxiliary Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	99-3077	1	Valve-HYD, Auxiliary	7	114-1263-03	1	Mount-Lever, Auxiliary
2	33104-020	1	Screw-HHF	8	110-0123	1	Handle-Lever, Auxiliary
3	33114-010	1	Screw-HH	9	110-0124	1	Spring
4	3253-4	1	Washer-Lock	10	110-0125	1	Retainer-Spring, Auxiliary
5	32121-3	1	Pin-Spring	11	110-0160	1	Tube-Spring
6	108-4723	1	Decal-Auxiliary, CE	12	110-0121-03	1	Bracket-Auxiliary


Auxiliary Hydraulic Valve Assembly No. 99-3077

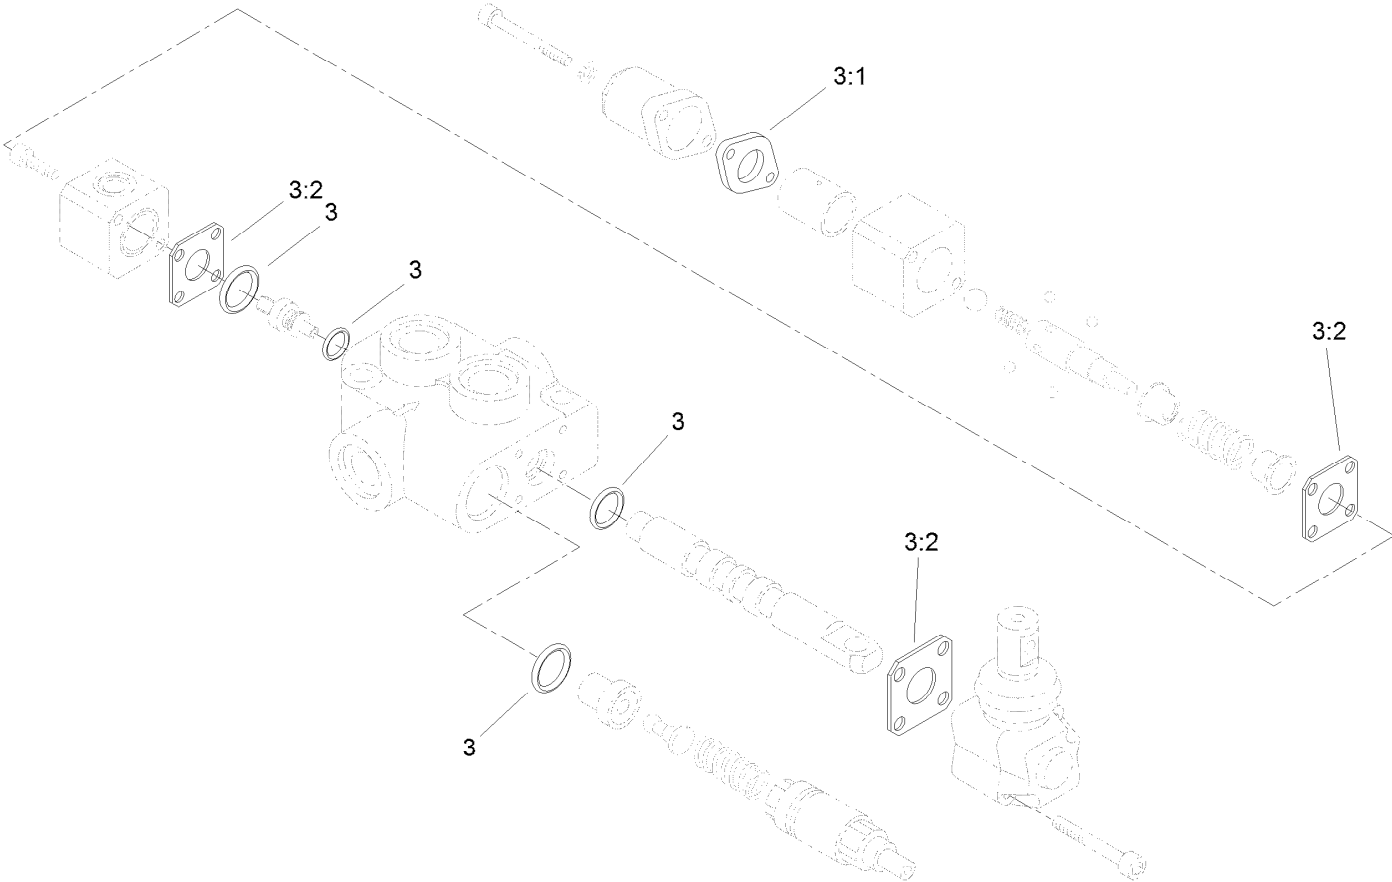

Auxiliary Hydraulic Valve Assembly No. 99-3077 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	99-4390	1	Seal Kit
3:1	99-3074	4	Gasket
3:2	99-3075	8	Gasket


Selector Valve Assembly

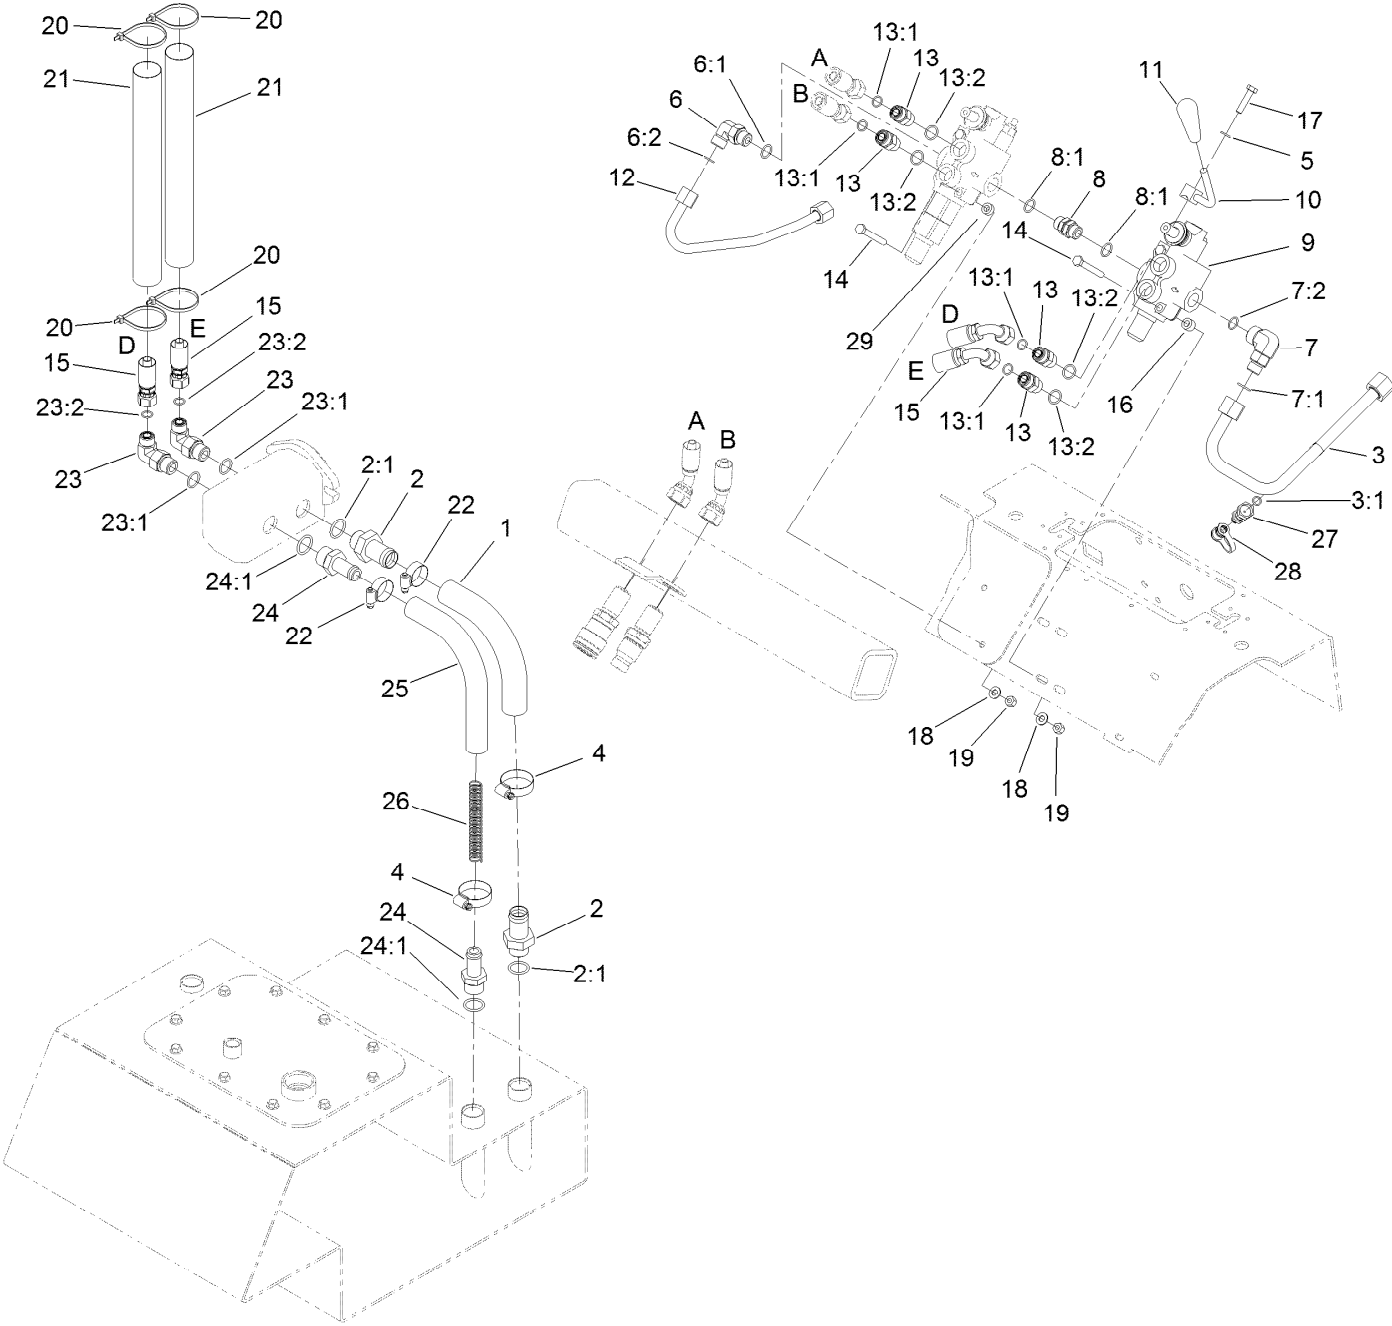

Selector Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	99-3046	1	Hose-Suction, Formed	13:2	237-79	1	O-Ring
2	99-3017	2	Fitting	14	322-12	4	Screw-HH
2:1	237-81	1	O-Ring	15	98-4747	2	Hose-HYD
3	108-4716	1	HYD Tube ASM	16	98-4695	2	Spacer
3:1	237-22	1	O-Ring	17	33114-035	1	Screw-HH
4	2412-111	2	Clamp-Hose, W/Liner	18	3256-23	4	Washer-Plain
5	3253-4	1	Washer-Lock	19	3296-29	4	Nut-Lock, NI
6	340-98	1	Fitting-Elbow, 90 DEG	20	3290-379	4	Tie-Cable
6:1	237-79	1	O-Ring	21	108-9715	2	Sleeve-Thermal
6:2	237-30	1	O-Ring	22	2412-129	2	Clamp-Hose
7	340-153	1	Fitting-Elbow, 90 DEG	23	340-105	2	Fitting-Elbow, 90 DEG
7:1	237-79	1	O-Ring	23:1	237-80	1	O-Ring
7:2	237-151	1	O-Ring	23:2	237-30	1	O-Ring
8	95-3209	1	Fitting-Thread, Straight	24	354-73	2	Fitting
8:1	237-79	2	O-Ring	24:1	237-81	1	O-Ring
9	99-3072	1	Valve-Selector, HYD	25	98-2713	1	Hose-Suction, HYD
10	108-9709-03	1	Lever-Control	26	99-5349	1	Spring-Compression
11	98-0152	1	Knob-Tapered	27	86-5480	1	Nipple-Test
12	105-7879	1	Tube-HYD	28	354-79	1	Cap-Dust
13	340-4	4	Fitting-Straight	29	100-2085	2	Spacer
13:1	237-30	1	O-Ring				


Hydraulic Selector Valve Assembly No. 99-3072

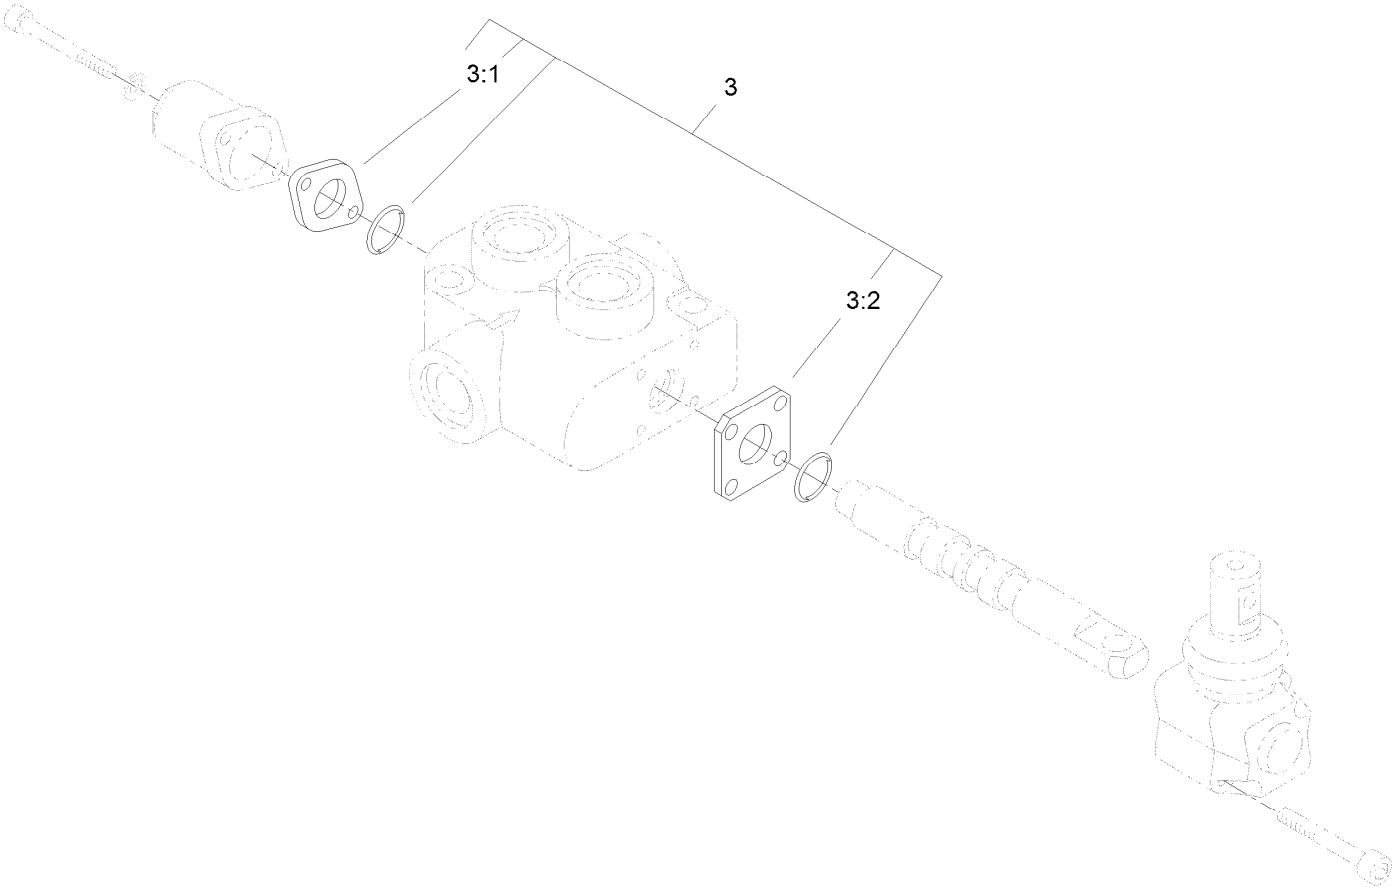

Hydraulic Selector Valve Assembly No. 99-3072 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	99-4390	1	Seal Kit
3:1	99-3074	4	Gasket
3:2	99-3075	8	Gasket

Hydraulic Traction Assembly

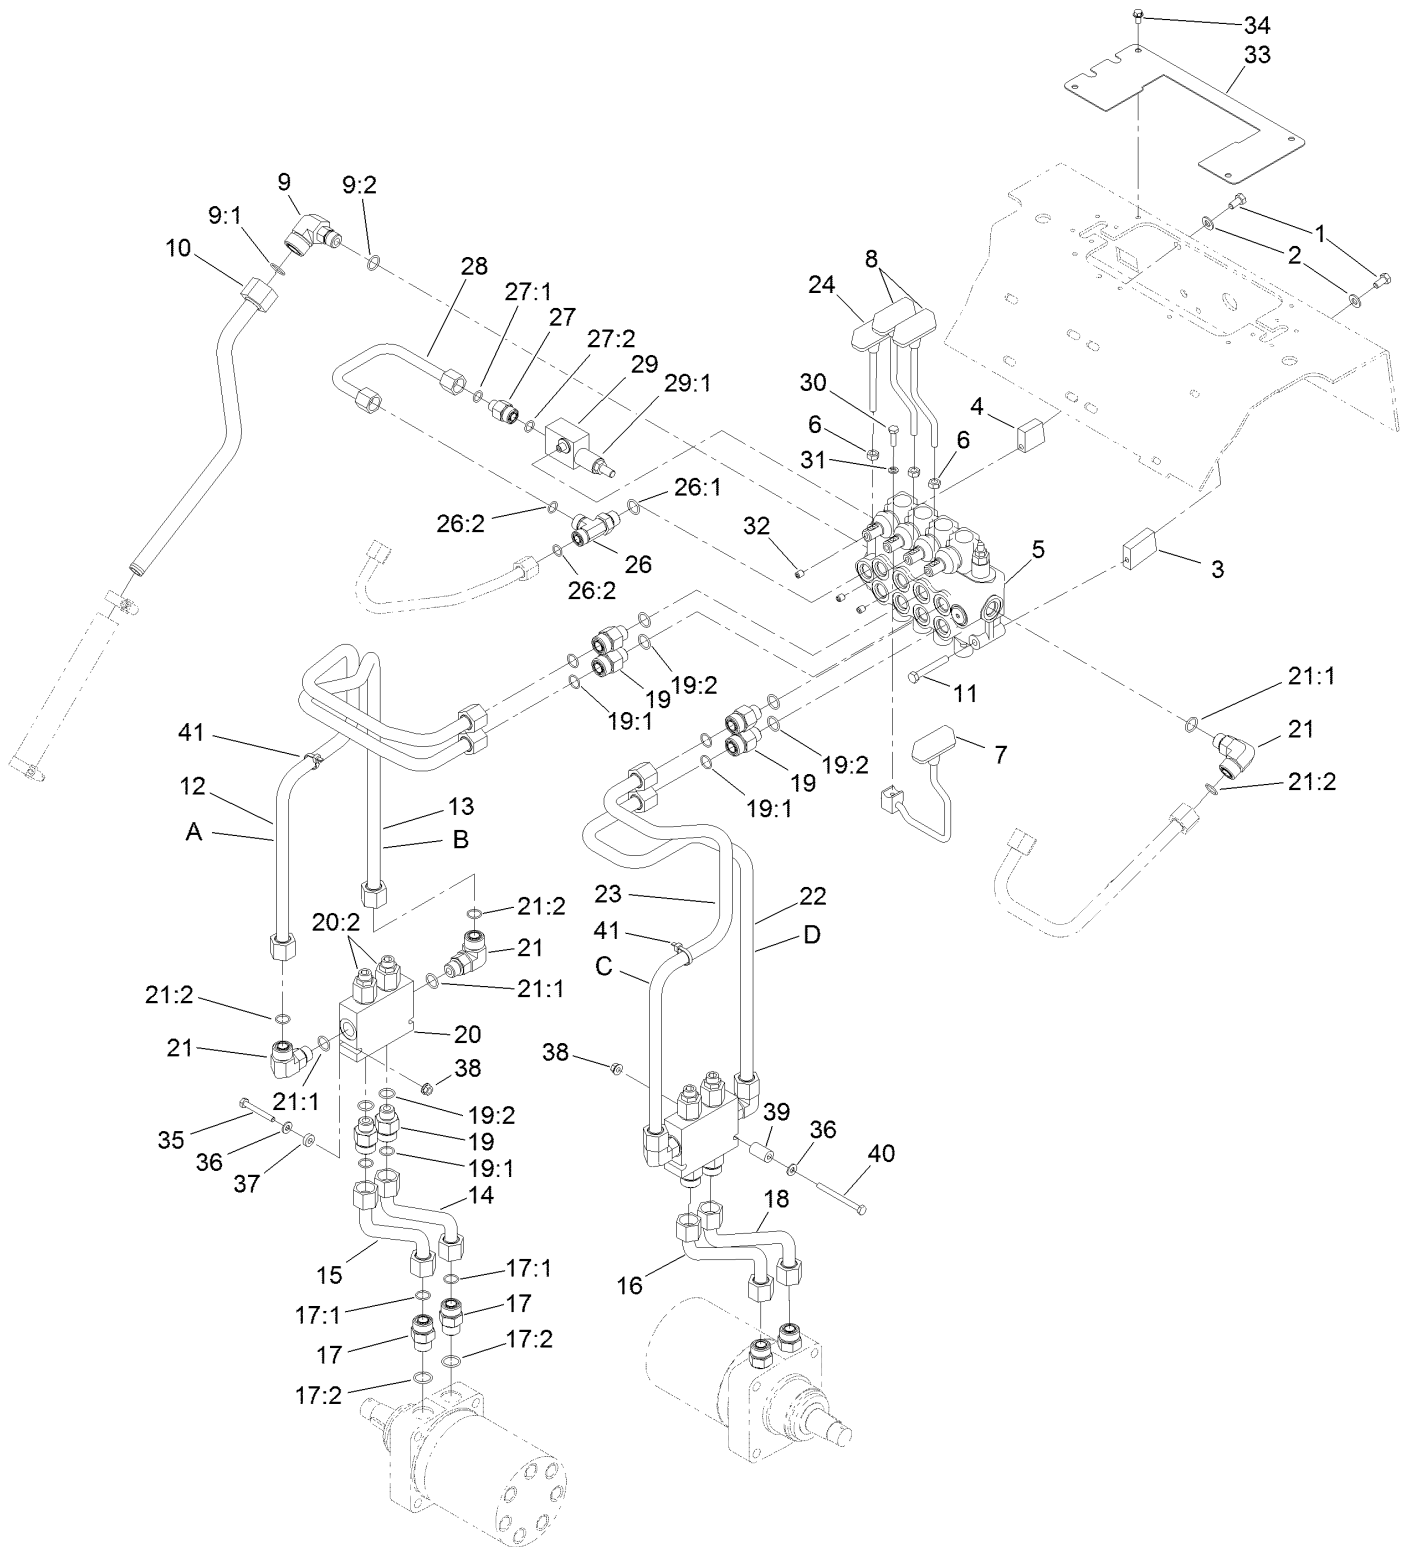


Hydraulic Traction Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	322-2	3	Screw-HH	21	340-153	5	Fitting-Elbow, 90 DEG
2	33094-00	3	Washer-Plain	21:1	237-79	1	O-Ring
3	108-4728	2	Spacer V	21:2	237-151	1	O-Ring
4	105-7870	1	Spacer-Upper V	22	105-7875	1	Tube-HYD (Left A)
5	105-6246	1	Valve-Four Spool (W/ Relief Port)	23	105-7874	1	Tube-HYD (Left B)
6	33014-00	3	Nut-Hex	24	105-7881	1	Lever-Cylinder
7	106-8165	1	Lever-Control	26	340-109	1	Fitting-Tee
8	104-5733	2	Lever-Drive	26:1	237-79	1	O-Ring
9	92-5696	1	Fitting-Elbow, 90 DEG	26:2	237-30	2	O-Ring
9:1	237-58	1	O-Ring	27	340-5	1	Fitting-Straight
9:2	237-79	1	O-Ring	27:1	237-42	1	O-Ring
10	106-8177	1	Tube-Tank, HYD	27:2	237-30	1	O-Ring
11	322-11	3	Screw-HH	28	108-4717	1	Tube-HYD
12	105-7877	1	Tube-HYD (Right B)	29	105-7882	1	Relief Valve ASM
13	105-7876	1	Tube-HYD (Right A)	29:1	105-8358	1	Cartridge-Valve, Relief
14	98-4740	1	Tube-HYD	29:2	105-8357	1	Seal Kit ●
15	98-4741	1	Tube-HYD	30	321-5	1	Screw-HH
16	98-4743	1	Tube-HYD	31	3253-3	1	Washer-Lock
17	340-7	4	Fitting-Straight	32	105-4068	3	Screw-Set,Cphs
17:1	237-65	1	O-Ring	33	108-9731-03	1	Plate-Cover
17:2	237-80	1	O-Ring	34	32144-4	4	Screw-HWH
18	98-4742	1	Tube-HYD	35	321-11	1	Screw-HH
19	340-155	8	Fitting-Straight	36	3256-22	2	Washer-Flat
19:1	237-79	1	O-Ring	37	106-8189	1	Spacer
19:2	237-151	1	O-Ring	38	32128-32	2	Nut-HHF
20	98-9050	2	Valve-Counterbalance	39	106-8188	1	Spacer
20:1	105-4099	1	Seal Kit ●	40	321-23	1	Screw-HH
20:2	99-3271	2	Valve-Cartridge	41	3290-379	2	Tie-Cable

● Not illustrated

Hydraulic Valve Assembly No. 105-6246

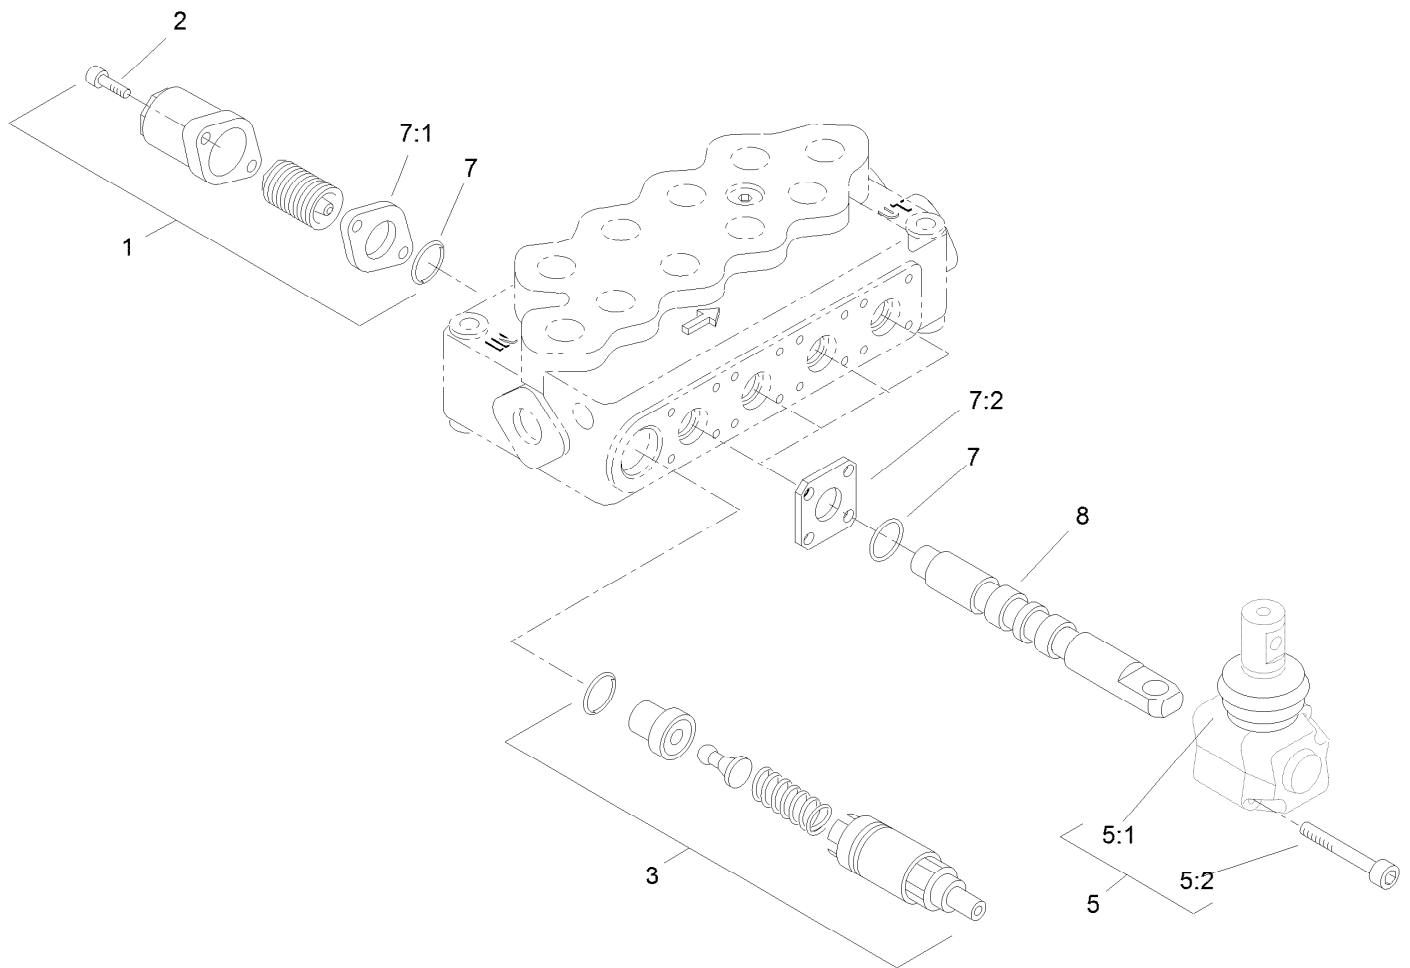


Hydraulic Valve Assembly No. 105-6246 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-8801	4	High Force Spring Kit
1	100-8800	4	Standard Spring Kit
2	100-8802	8	Screw-Cap, End
3	100-8805	1	Valve-Relief
5	100-8807	4	Operator ASM
5:1	100-8829	1	Boot


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5:2	100-8806	2	Screw
7	99-4390	1	Seal Kit
7:1	99-3074	4	Gasket
7:2	99-3075	8	Gasket
8	105-8441	4	Spool-Valve

Hydraulic Cylinder Assembly

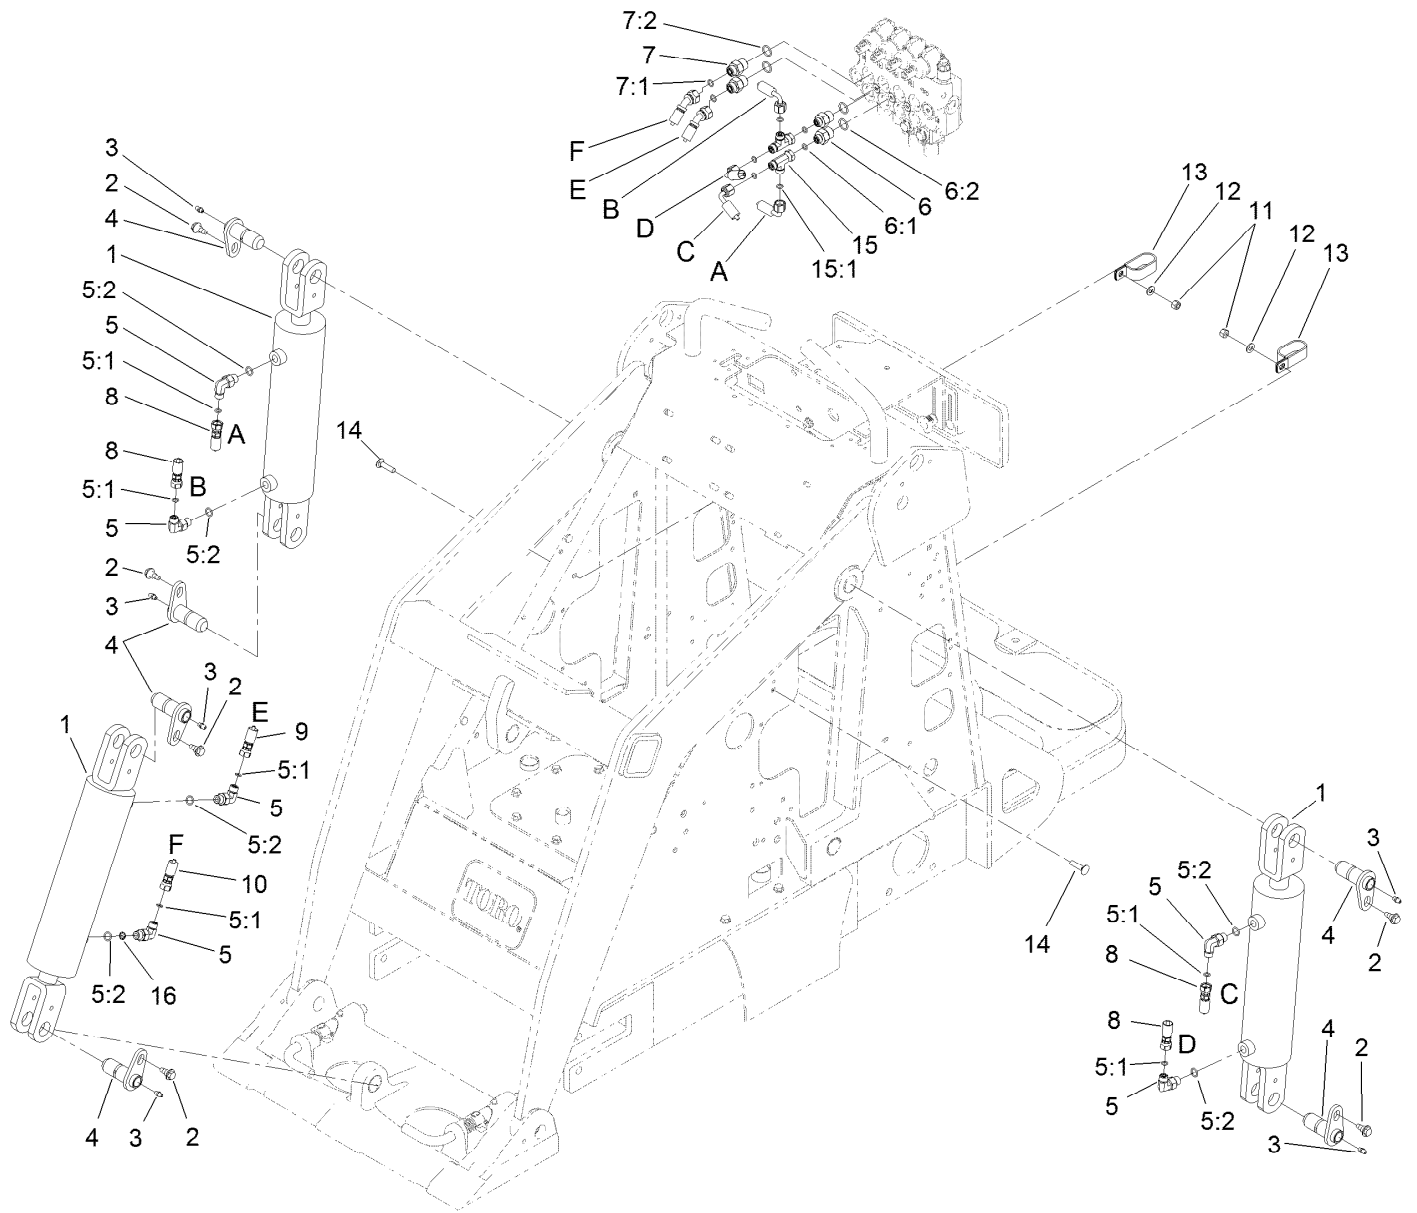

Hydraulic Cylinder Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-1834	3	Cylinder-HYD	7:2	237-79	1	O-Ring
2	99-5105	6	Screw-Shoulder	8	98-4725	4	Hose-HYD
3	302-5	6	Fitting-Grease	9	98-4727	1	Hose-HYD
4	112-2609	6	Pin-Pivot	10	98-4726	1	Hose-HYD
5	340-82	6	Fitting-Elbow, 90 DEG	11	3296-29	2	Nut-Lock, NI
5:1	237-42	1	O-Ring	12	3256-23	2	Washer-Plain
5:2	237-21	1	O-Ring	13	2412-137	2	Clamp-R, Double
6	340-133	2	Fitting-STR	14	3230-3	2	Screw-CARR
6:1	237-79	1	O-Ring	15	340-151	2	Fitting-Tee
6:2	237-21	1	O-Ring	15:1	237-75	2	O-Ring
7	340-3	2	Fitting-Straight	16	108-4714	1	Orifice-Port Insert, One Way
7:1	237-22	1	O-Ring				

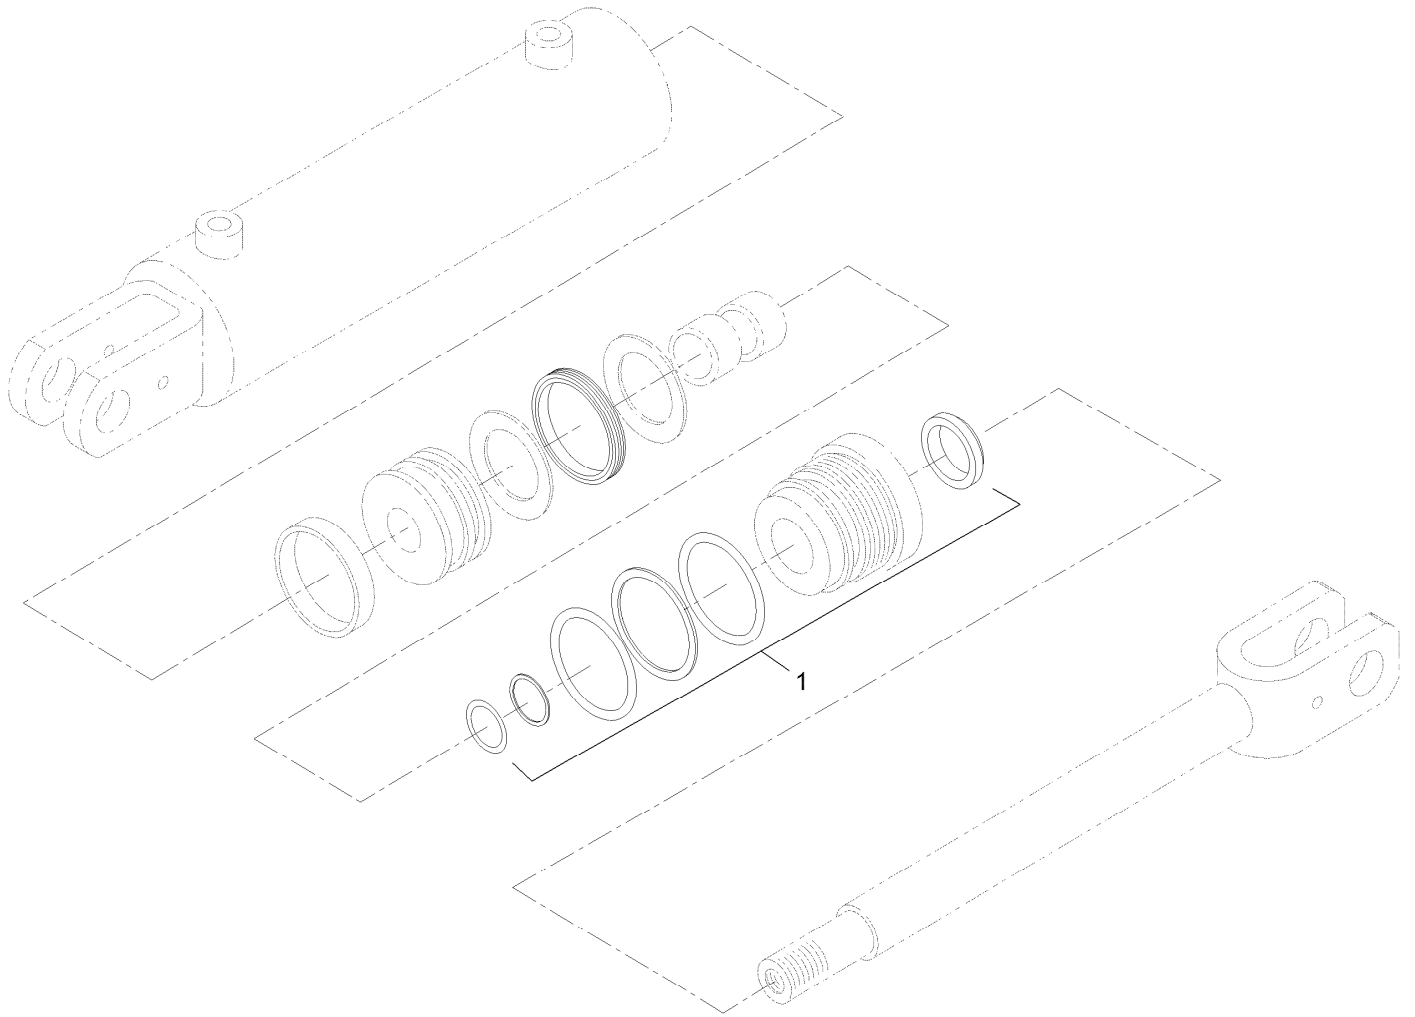

Hydraulic Cylinder Assembly No. 117-1834

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-1837	1	Kit-Seal

Attachments and Accessories

For 22317 Dingo 220 Compact Utility Loader

Product Name	Model/Part
Tire Chain Kit	100-4140
Helmet-Face Shield	100-4143
Light Kit.....	100-8940
Narrow Tire ASM	104-0572
Remote Air Cleaner Kit	104-4635
Thigh Support Kit	105-0330
Tube-Tire (18 x 8.50-10)	105-4070
Rubber Foot Mat.....	105-5805
Tube-Tire (18 X 8.50-8).....	106396
4 Cubic Foot Standard Bucket	22409
Loose Materials Bucket	22410
48in Hydraulic Blade.....	22414
Counterweight	22417
Bore Drive Head	22420
Rod and Reamer	22421
Multi-Purpose Tool	22423
Direct Drive Power Box Rake	22426
Stump Grinder	22429
Tree Forks	22438
Cement Bowl	22442
40in Tiller	22445
Snowthrower.....	22456
High-Torque Trencher Head	22473
High-Speed Trencher Head	22474
Narrow Bucket	22520
Auger Head	22805
Universal Swivel Auger Head	22806
Vibratory Plow	22911
Concrete Breaker	23135
Backhoe.....	23163
Adjustable Forks.....	23164
Leveler.....	23165
Wheel and Tire ASM.....	98-4709
Spark Arrestor	98-9099
RH Wheel And Tire ASM	99-1447
RH Wheel And Tire ASM (Powerlug)	99-3140
LH Wheel And Tire ASM (Powerlug).....	99-3141
Hydraulic Relief Valve Kit.....	99-4360

Notes:

Notes:



Count on it.