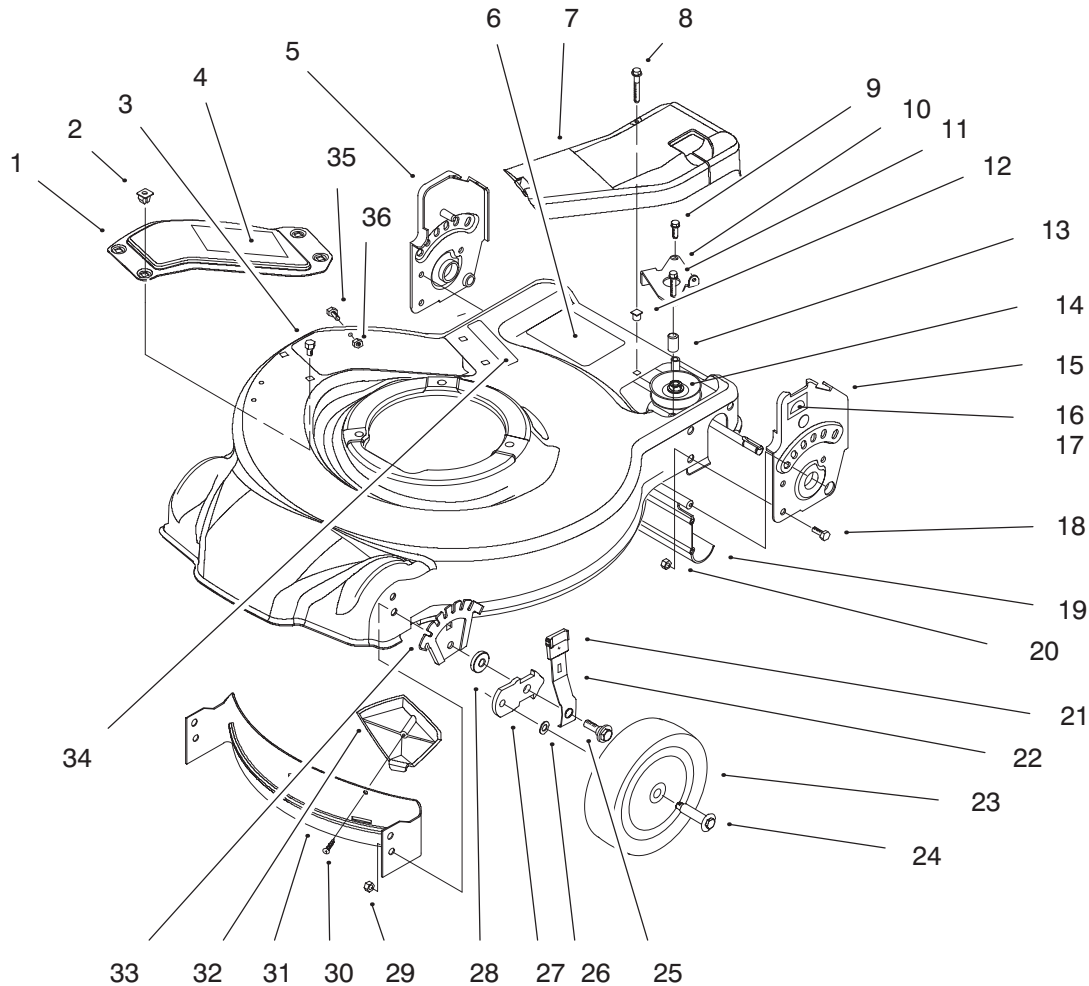



MODEL NO. 20442-5900001 & UP
MODEL NO. 20444-5900001 & UP
**Parts
Catalog**
21" Recycler[®]
Mower


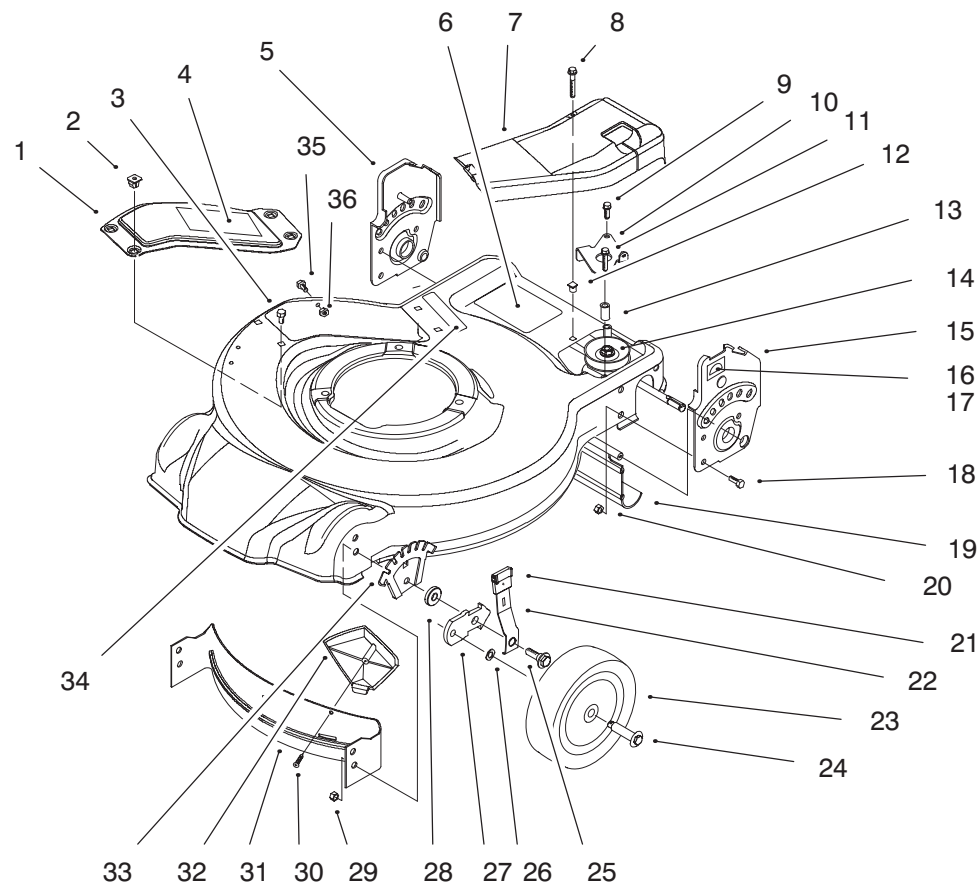
C-2245A

Housing Assembly

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	16-9269	Cover-Recycling (Incl. Ref. #4)	1	16	92-2915	Decal-HOC L.H.	1
2	93-0242	Grommet	4	17	92-2914	Decal-HOC R.H.	1
3	32144-4	Screw-Tap.	3	18	322-3	Screw-Hex Hd. Cap	6
4	85-7060	Decal-Danger	1	19	92-8647	Shield-Trailing	1
5	93-0234	Bracket-Handle RH	1	20	3296-29	Nut-Lock	6
6	93-0248	Decal-Warning	1	21	92-1008	Knob-Height Adjust	4
7	93-0209	Cover-Belt	1	22	614687	Spring Arm-Front	2
8	32144-119	Screw-Thread Form	1	23	92-9591	Wheel Assembly	2
9	49-2040	Screw-Hex Hd.	1	24	614650	Bolt-Shoulder	2
10	93-0228	Brkt.-Belt Guide	1	25	614672	Bolt-Shoulder	2
11	92-1616	Screw	1	26	40-1940	Washer	2
12	605120	Grommet	1	27	614637	Bracket-Wheel Height Adj.	2
13	614673	Spacer	1	28	92-4890	Washer	2
14	93-0240	Transmission Assembly	1	29	3296-39	Nut-Lock	2
15	93-0233	Bracket-Handle LH	1	30	93-0231	Screw-Plastite	1
				31	93-0222	Baffle-Front	1

© The TORO Company -1994 REV, 2003

All Rights Reserved




C-2245A

Housing Assembly (Continued)

Ref. No.	Part No.	Description	No. Used
32	93-0216	Kicker-Front	1
33	92-4881	Plate-Height Adjust	2
34	93-0262	Decal-Warning	1


Ref. No.	Part No.	Description	No. Used
35	32105-27	Screw-Hex Washer Hd.	1
36	3296-2	Nut-Lock	1

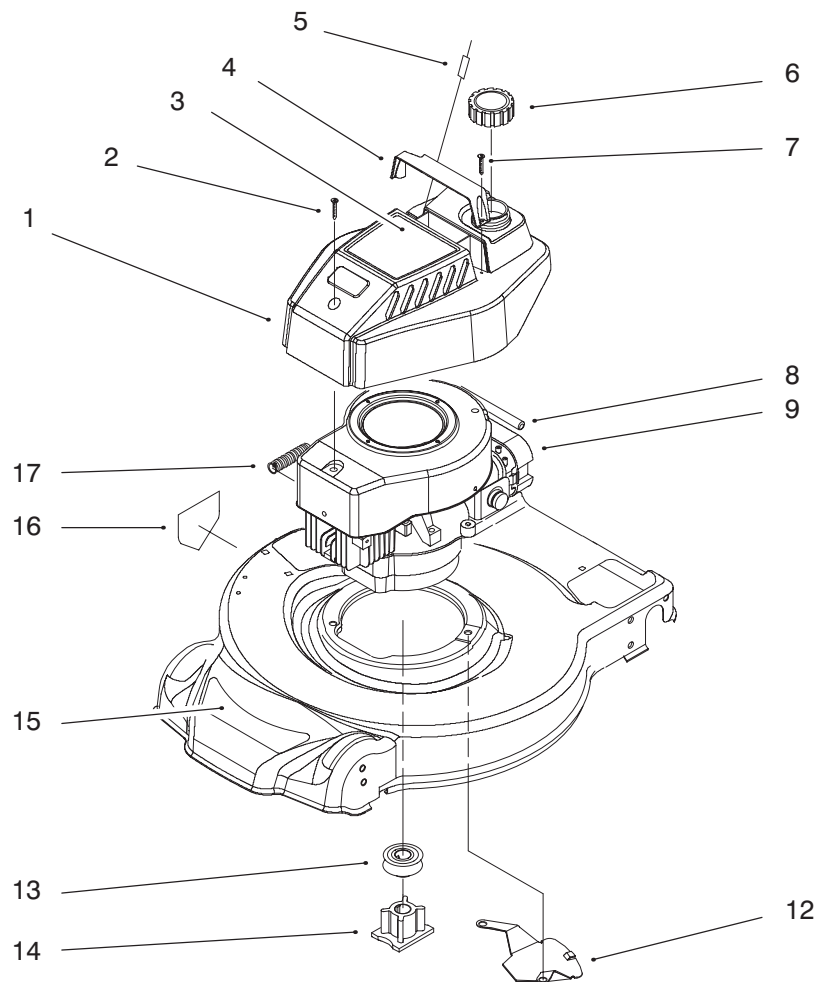

C-2246

Engine Assembly #1

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6396	Shroud-Engine (Model No. 20442 Only)	1	8	68-3632	Line-Fuel (Model No. 20442 Only)	1
2	93-4302	Screw-Sems (Model No. 20442 Only)	3	9		Engine Assembly (Model No. 20442 Only)	1
3	93-0246	Decal-Engine (Model No. 20442 Only)	1	12	93-4196	Shield-Grass	1
4	93-1200	Cover-Strap (Model No. 20442 Only)	1	13	93-0278	Pulley-Driver (Model No. 20442 Only)	1
5	92-1701	Rope-Stop (Model No. 20442 Only)	1	14	52-7320	Retainer-Blade (Model No. 20442 Only)	1
6	55-3578	Gas Cap Assembly (Model No. 20442 Only)	1	15	93-0245	Decal-Deck	1
7	32104-118	Screw-PH (Model No. 20442 Only)	2	16	39-5770	Decal-Danger	1
				17	66-5370	Spring-Compression (Model No. 20442)	1

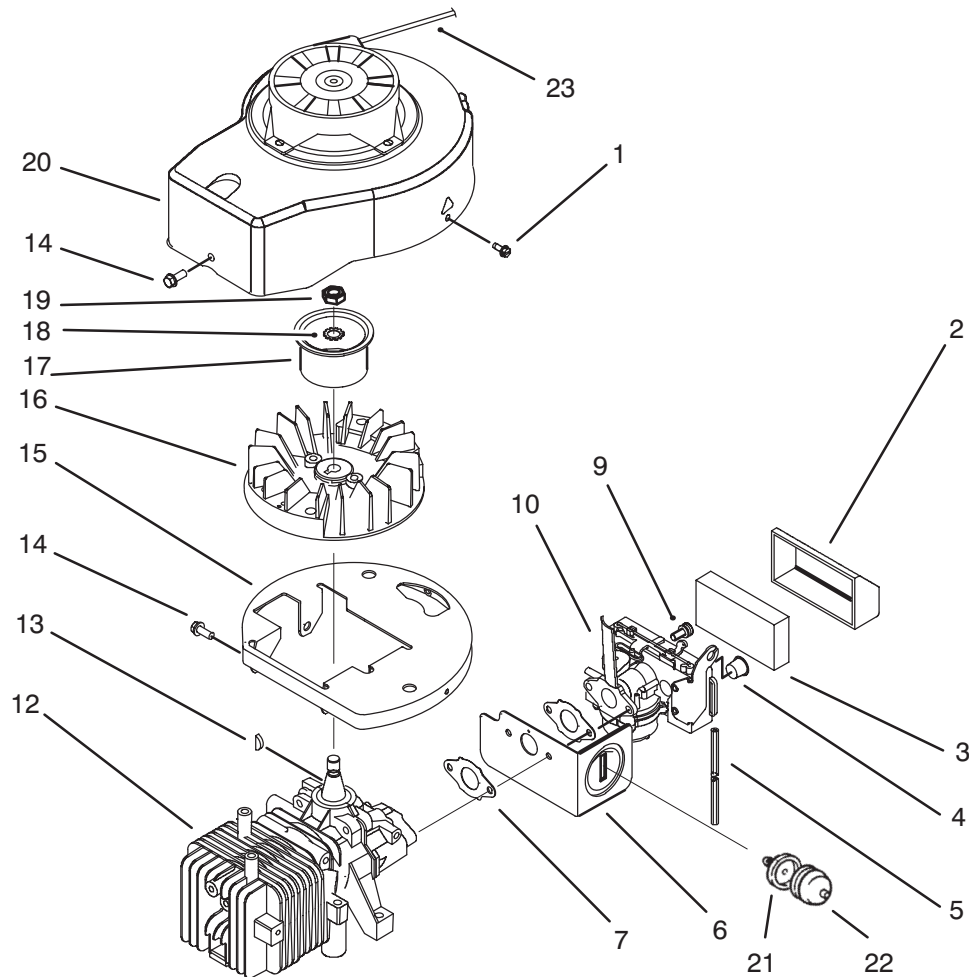


C-2244

Shroud and Block Assembly (Model No. 20442 Only)

Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3
2	93-1231	Cover—Air Filter	1
3	609493	Element—Air Filter	1
4	93-4320	Plug	1
5	44-3175	Hose—Primer	1
6	93-1227	Shield—Carburetor	1
7	92-4948	Gasket—Carburetor	2
9	609482	Screw	2
10	92-9695	Carburetor Assembly	1
12	92-9693	Short Block Assembly	1
13	607199	Key	1


Ref. No.	Part No.	Description	No. Used
14	614702	Screw	4
15	93-1216	Base—Shroud	1
16	684743	Flywheel Assembly	1
17	614640	Hub—Starter	1
18	316959	Washer—Lock	1
19	130743	Nut	1
20	93-1248	Shroud	1
21	44-2750	Body—Primer	1
22	66-7460	Bulb—Primer	1
23	93-4304	Rope	1

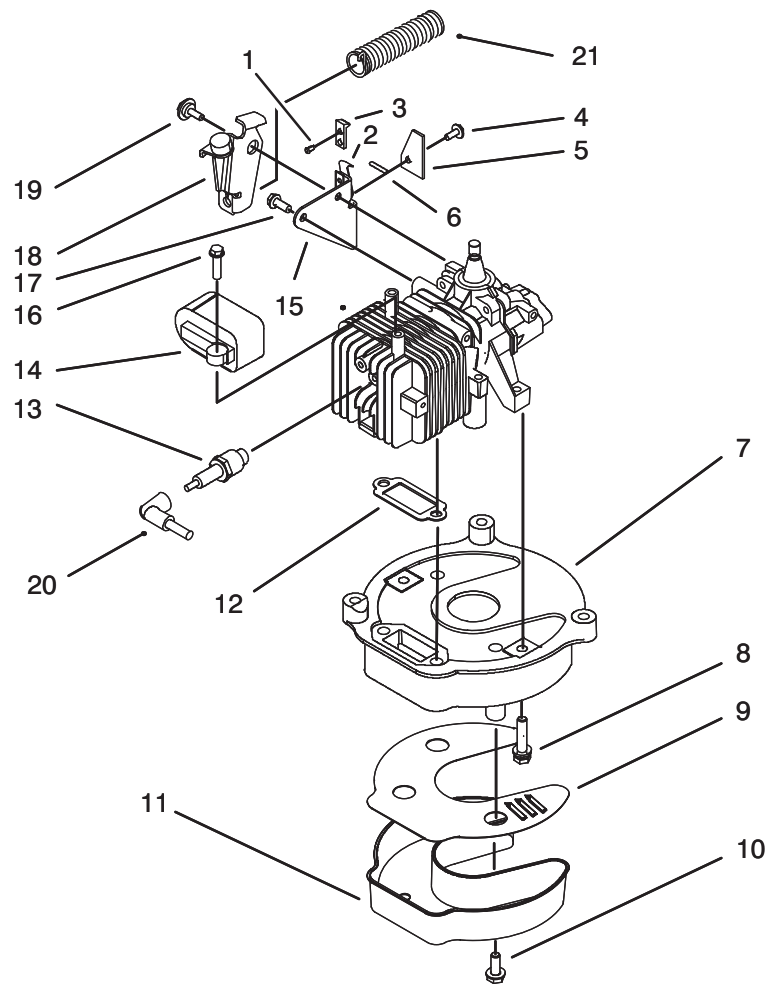

C-1899

Brake and Muffler Assembly (Model No. 20442 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3290-459	Rivet	2	12	93-1233	Gasket-Exhaust	1
2	60-9010	Strap-Ground	1	13	614009	Plug-Spark	1
3	92-2925	Strap-Insulation	1	14	684049	Ignition Assembly (Incl. Ref. #20)	1
4	12-5450	Screw-Thread Forming	1	15	84-7820	Plate-Brake Mount	1
5	53-4690	Stop-Ground Strap	1	16	613208	Screw-Hex Washer Hd.	2
6	92-1156	Wire-Brake Switch Lead	1	17	614702	Screw	1
7	614654	Plate-Muffler	1	18	66-5380	Plate-Brake Assembly	1
8	607601	Screw	4	19	92-9698	Screw-Shoulder	1
9	93-1217	Baffle	1	20	681678	Lead & Cover Assembly	1
10	609471	Screw	3	21	66-5370	Spring-Compression	1
11	93-1108	Cover-Muffler	1				

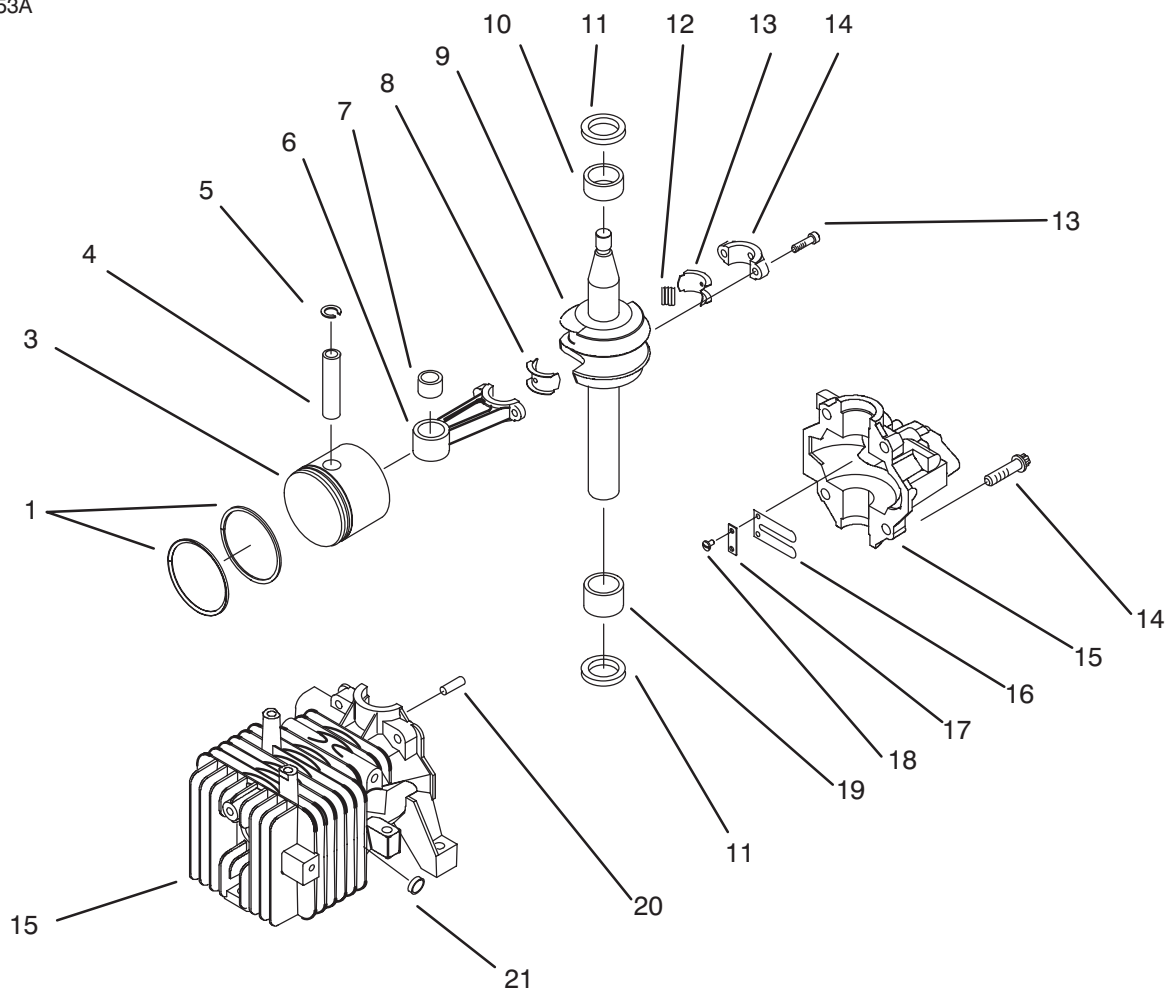


C-1295A

Block Assembly (Model No. 20442 Only)

Ref. No.	Part No.	Description	No. Used
1	681737	Set—Rings, Piston	1
3	92-4923	Piston & Ring Set	1
*	92-4925	Piston & Connecting Rod (Incl. Ref. #1, 3-7 & 13)	1
4	606608	Pin—Wrist	1
5	303712	Ring—Retaining	2
6	92-4921	Connecting Rod Assembly (Incl. Ref. #8, 12 & 13)	1
7	92-4927	Bearing	1
8	677982	Liner—Split (Set of 2)	1
9	92-6379	Crankshaft	1
10	681830	Bearing—Upper Main	1
11	611396	Seal—Oil	2

Ref. No.	Part No.	Description	No. Used
12	683911	Bearing—Needle	1
13	611393	Screw—Hex. Hd.	2
14	614636	Screw—Hex. Washer Hd.	3
15	93-4311	Cylinder & Crankcase Cover (Incl. Ref. #14, 16, 17, 18, 20, & 21)	1
16	602588	Reed —Carburetor	1
17	602587	Reed—Backup Plate	1
18	612872	Screw	2
19	681831	Bearing—Needle	1
20	609629	Dowel	1
21	609123	Plug—Core	4

*Not Illustrated

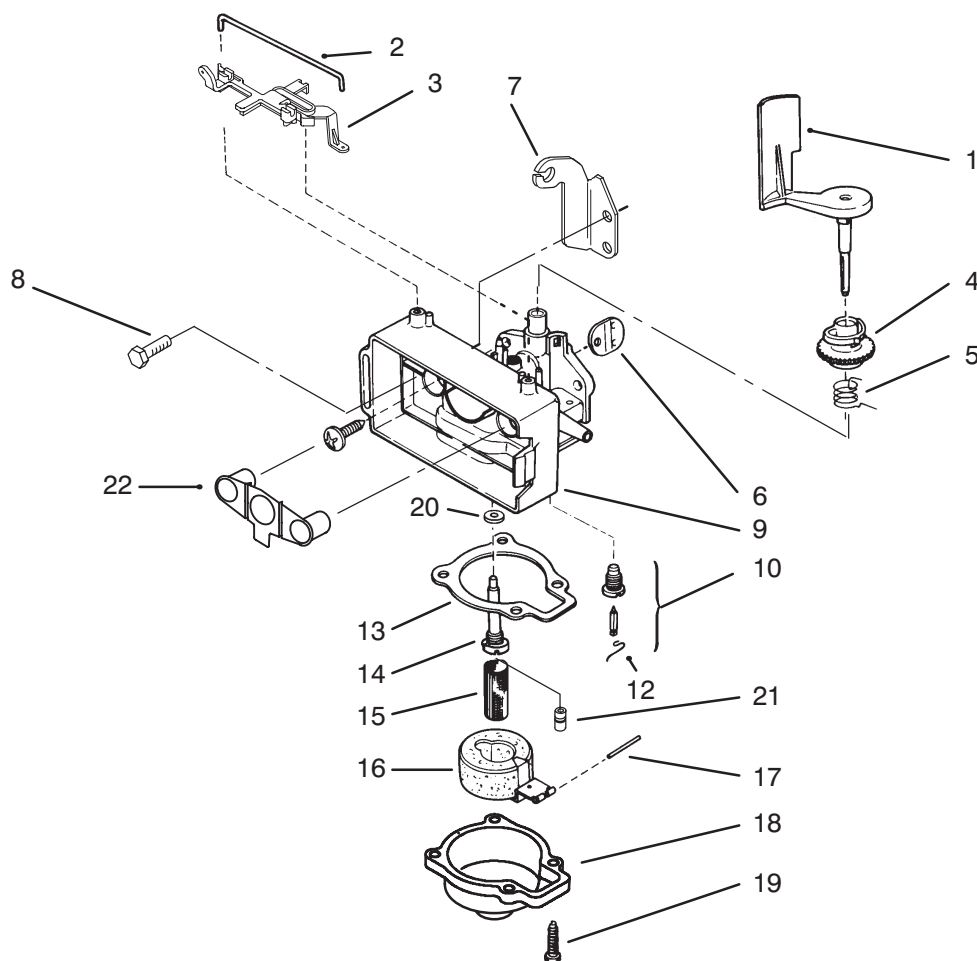


C-2130B

Carburetor Assembly (Model No. 20442 Only)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6376	Air Vane & Shaft	1	13	602850	Gasket	1
2	610165	Retainer—Speed Control	1	14	92-6371	Nozzle	1
3	93-1225	Lever—Speed Adjust	1	15	611071	Filter—Fuel	1
4	610834	Collar—Air Vane	1	16	678113	Float & Arm Assembly	1
5	92-4944	Spring—Governor	1	17	92-6389	Pin	1
6	92-6373	Disc—Throttle	1	18	92-9691	Float Chamber	1
7	92-4949	Bracket—Throttle Control	1	19	608850	Screw	4
8	613269	Screw	2	20	612383	Washer	1
9	92-6377	Carburetor Body	1	21	92-6370	Main Jet	1
10	92-9697	Kit—Float Valve, Body & Seat (Incl. Ref. #12)	1	22	93-4320	Shield—Fuel	1
12	603145	Spring	1	*	92-6385	Jet—High Altitude	1
				*	92-9695	Carburetor Assembly	1


*Not Illustrated

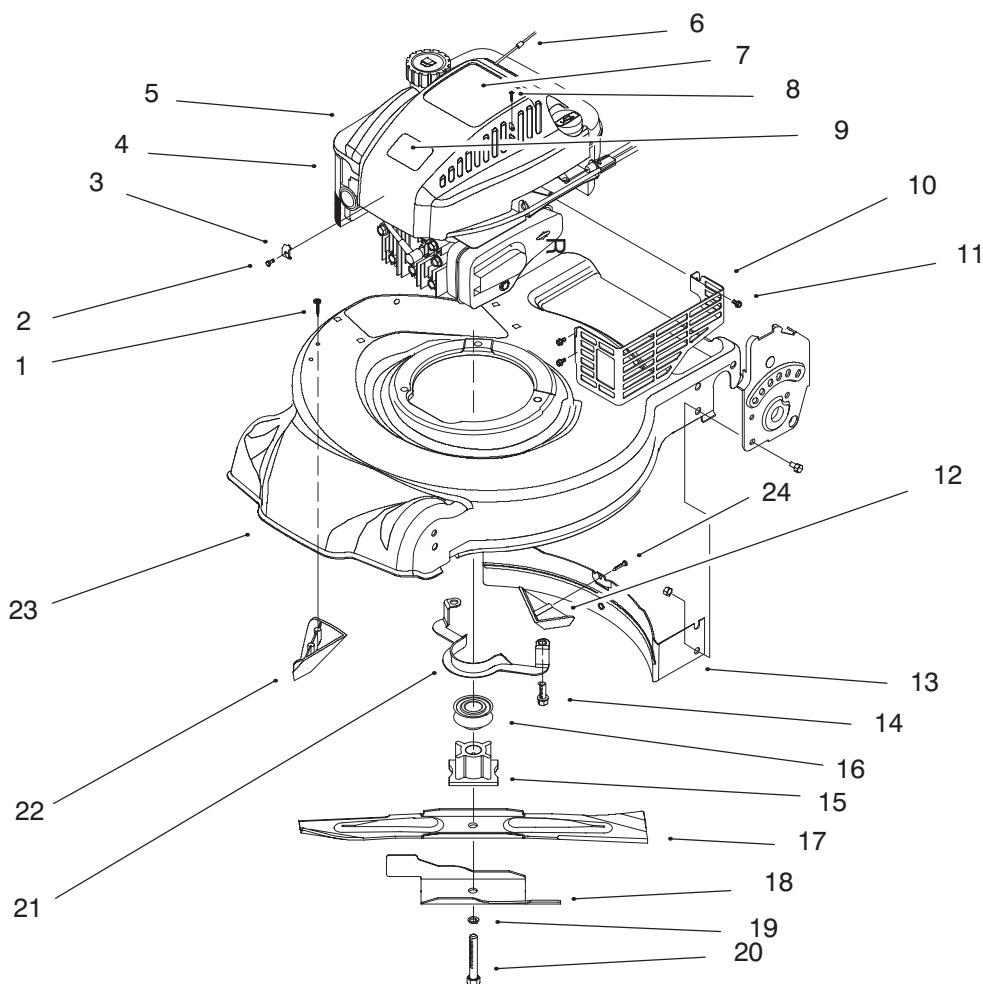

C-2247

Engine Assembly #2


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw-PPH	2	12	93-0217	Kicker-Rear	1
2	93-8470	Screw-Clamp (F/W Eng.)	1	13	93-0223	Baffle-Rear	1
3	2210-249	Clamp-Casing (F/W Eng.) (Model No. 20444 Only)	1	14	92-1624	Screw-Engine	3
4		Engine-Quantum 4 HP (Model No. 20444 Only)	1	15	62-7540	Retainer-Blade (Model No. 20444 Only)	1
5	93-0243	Shroud-Qt Wedge (Model No. 20444 Only)	1	16	62-7550	Pulley-Driver (Model No. 20444 Only)	1
6	2210-316	Rope-Stop (P/W Eng.) (Model No. 20444 Only)	1	17	93-0241	Blade-Steel Deck	1
7	93-0247	Decal-Engine (Model No. 20444 Only)	1	18	93-0219	Accelerator	1
8	32144-121	Screw (Model No. 20444 Only)	2	19	3253-22	Washer-Lock	1
9	92-2289	Plate-Logo	1	20	26-0670	Bolt-Blade	1
10	82-8550	Shield-Muffler (Model No. 20444 Only)	1	21	93-0208	Guide-Belt (Model No. 20444 Only)	1
11	32144-73	Screw-Hex Washer Hd. Thread Forming (Model No. 20444 Only)	3	22	93-0218	Kicker-Side	1
				23	16-9279	Deck-21" Steel SP (Incl. Ref. #6 pg.1, Ref. #34 pg. 2, & Ref. #16pg. 3)	1
				24	93-0231	Screw	1

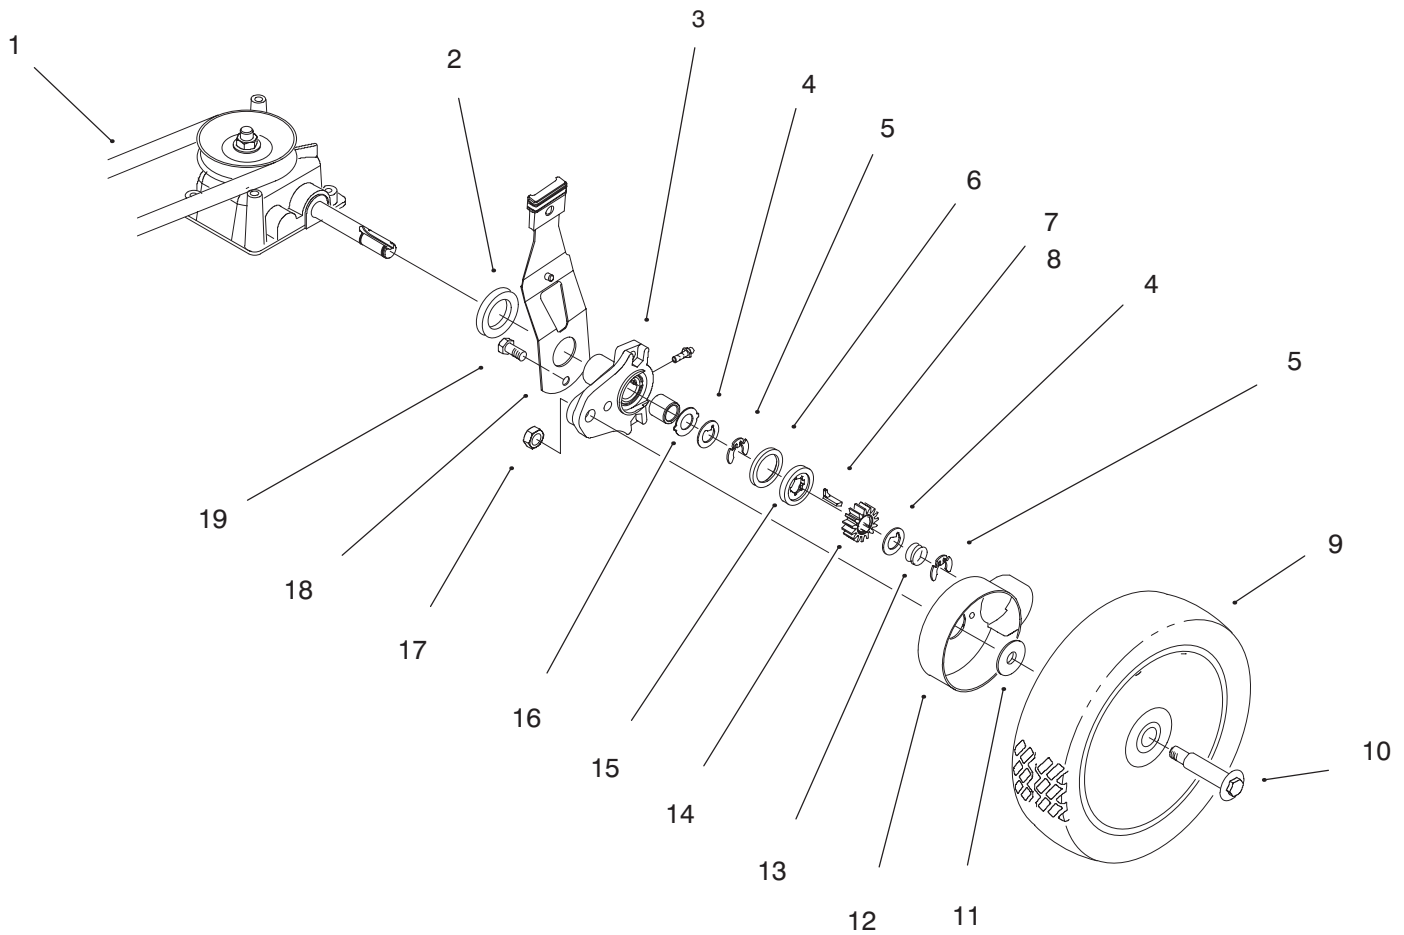

C-2248

Rear Axle Assembly

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	93-0232	V-Belt	1	11	614426	Washer-Stepped	2
2	614447	Spacer-Axle Shaft	2	12	614427	Cover-Wheel	2
3	92-7746	Height Adj. Arm Assembly	2	13	65-4720	Spring-Compression	2
4	65-4740	Washer-Thrust	4	14	65-4750	Gear-Pinion	2
5	65-2720	Ring-Retaining	4	15	65-4760	Washer	2
6	65-4710	Ring-Friction	2	16	65-4730	Washer-Thrust	2
7	66-6040	Key-Rocking R.H.	1	17	610358	Nut-Lock	2
8	66-6050	Key-Rocking L.H.	1	18	92-1004	Spring Arm Assembly	2
9	92-9590	Wheel Assembly	2	19	32144-85	Screw-Hex Hd.	2
10	92-1057	Bolt-Shoulder	2				

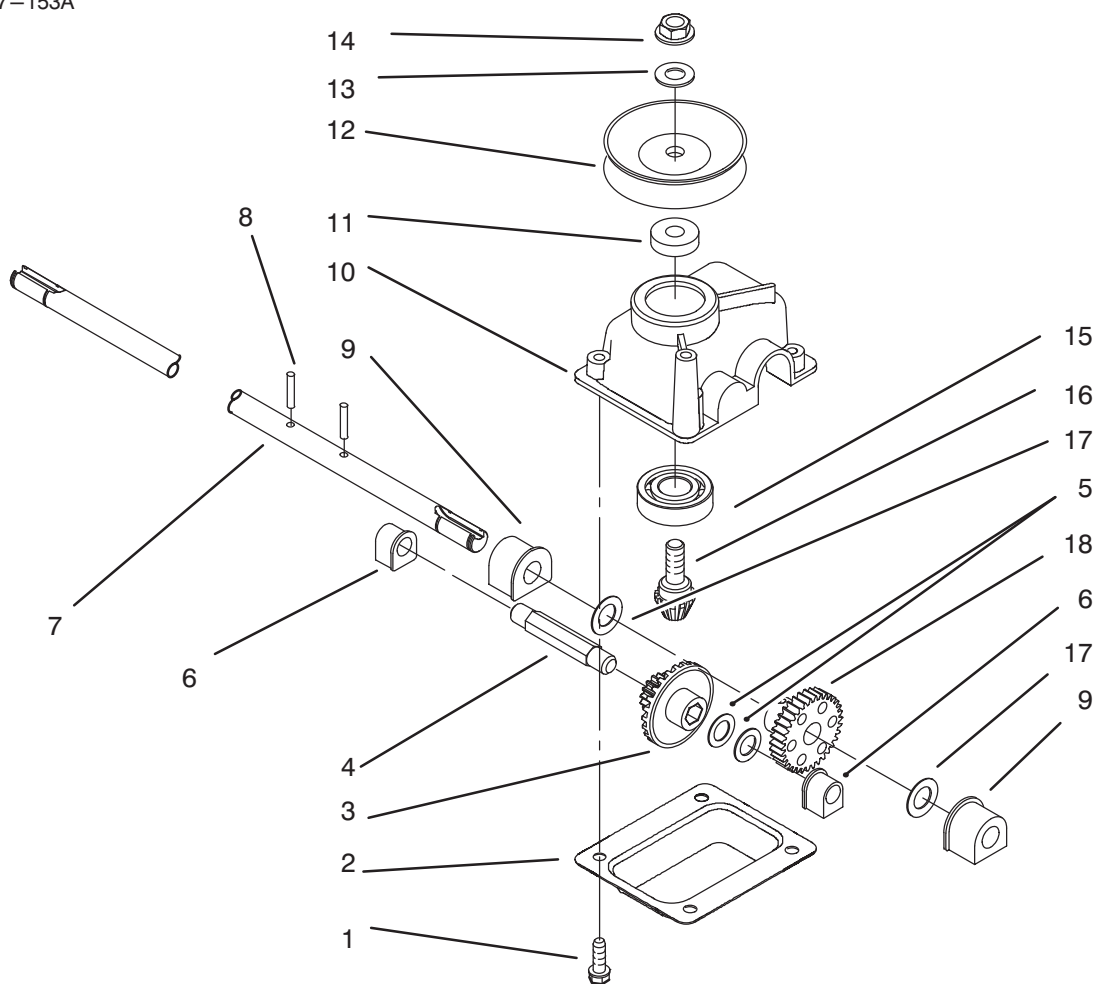


C-1292

Gear Case Assembly

Ref. No.	Part No.	Description	No. Used
1	49-2040	Screw-Taptite	4
2	614668	Cover-Gear Case	1
3	55-3760	Pinion-15 Tooth	1
4	614696	Shaft-Intermediate	1
5	36-4791	Washer	2
6	60-8750	Bushing	2
7	93-0239	Shaft-Output	1
8	3285-19	Pin-Groove	2
9	60-8850	Bushing-Output	2
10	92-7727	Gearcase	1

Ref. No.	Part No.	Description	No. Used
11	62-6660	Spacer	1
12	60-8840	Pulley-Half	2
13	3256-24	Washer	1
14	3296-5	Nut	1
15	38-7820	Bearing -Ball	1
16	60-8890	Gear-Bevel Pinion	1
17	36-4780	Washer-Thrust	2
18	614596	Gear 34 Tooth	1
*	93-0240	Gearcase ASM (Complete)	1


*Not Illustrated

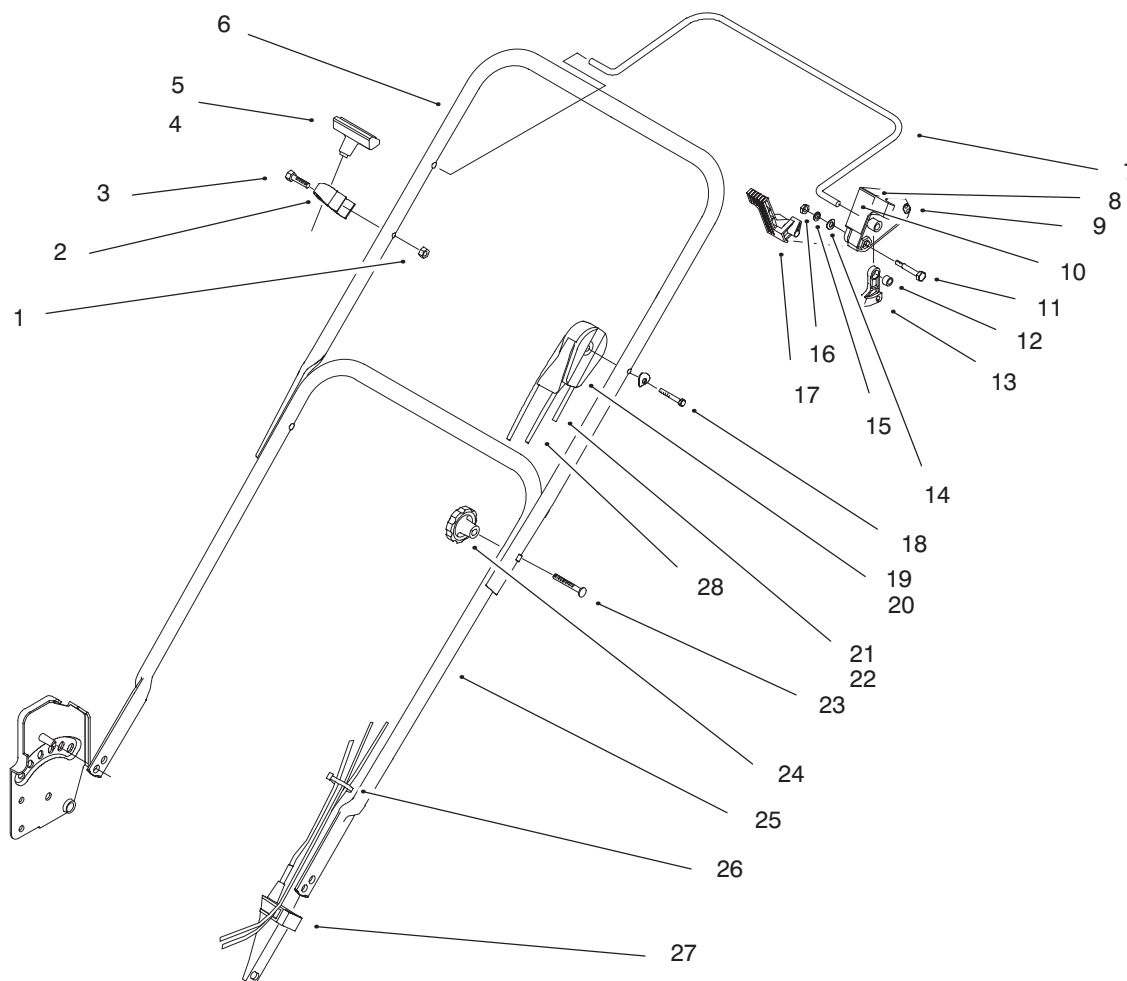

C-2249

Handle Assembly

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-73	Nut-Lock	1	18	93-0261	Curved Washer	1
2	93-7388	Guide-Rope	1	19	93-0258	Cable-Throttle/Traction (Model No. 20444 Only)	1
3	321-51	Bolt-Hex	2	20	93-0260	Cable-Throttle/Traction (Model No. 20442 Only)	1
4	612825	Handle-Starter (Model No. 20442 Only)	1	21	93-0251	Cable-Brake (Model No. 20444 Only)	1
5	612824	Clip-Rope Insert (Model No. 20442 Only)	1	22	93-0255	Cable-Brake (Model No. 20442 Only)	1
6	93-0237	Handle-Upper	1	23	92-2260	Screw-Handle	2
7	92-3135	Bar-Control	1	24	19-4050	Knob	2
8	92-2292	Decal-Instruction	1	25	93-0238	Handle-Lower	1
9	93-0340	Stop-Pivot	1	26	3290-378	Tie-Cable (Model No. 20444 Only)	1
10	92-2280	Decal-Instruction	1	26	3290-378	Tie-Cable (Model No. 20442 Only)	2
11	92-3132	Bolt-Shoulder	1	27	93-7380	Anchor-Cable	1
12	92-3133	Spacer-Lever	1	28	93-0259	Cable-Traction	1
13	46-5520	Lever-Traction	1				
14	92-2298	Washer-Spring	1				
15	3256-49	Washer-Flat	1				
16	3296-2	Nut-Lock	2				
17	92-2299	Lever-Shift	1				

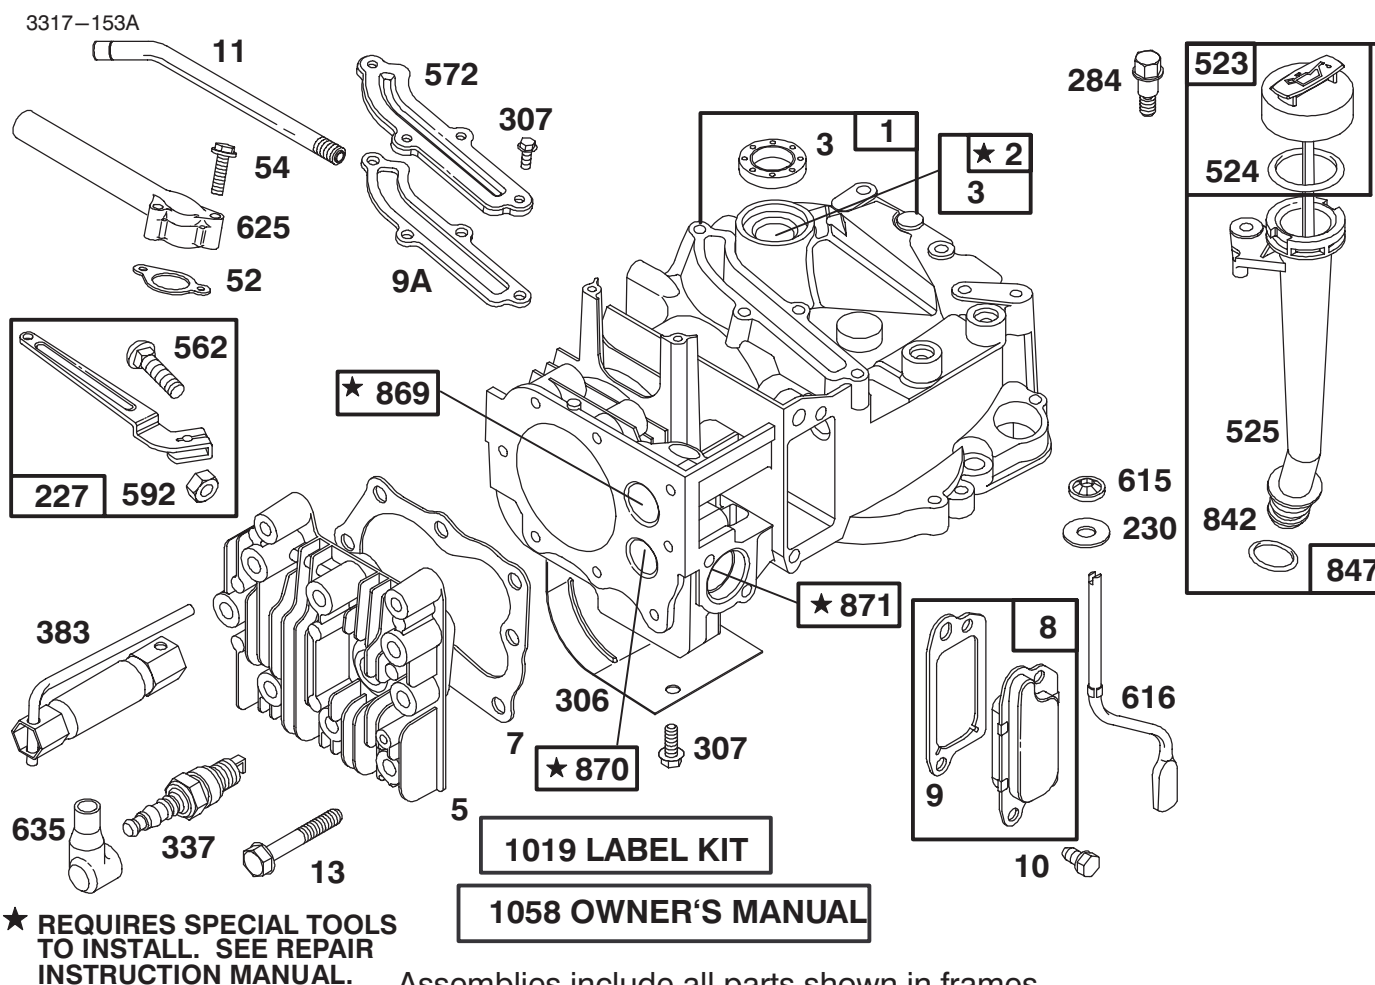


Cylinder Assembly Briggs and Stratton 127802-0640-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing — Cylinder	1
★3	299819	Seal — Oil	1
5	214349	Head — Cylinder	1
★7	272916	Gasket — Cylinder Head	1
8	495786	Breather — Valve Chamber	1
★9	272481	Gasket — Valve Cover	1
★9A	272238	Gasket — Baffle Plate	1
10	94650	Screw — Breather Mtg.	1
11	231933	Tube — Breather	1
13	94547	Screw — Cylinder Head	1
★52	272199	Gasket — Intake Elbow	1
54	94526	Screw — Intake Elbow Mounting	1
227	492349	Lever Assembly — Gov.	1
230	67072	Washer — Gov. Crank	1
284	94511	Screw — Hex. Head	1
306	224324	Shield — Cylinder	1
307	94515	Screw — Hex. Head	1
337	802592	Plug — Spark	1
383	89838	Wrench — Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495264	Cap With Dipstick — Oil Filler	1
★524	280393	Seal — Filler Tube	1
525	495265	Tube — Oil Filler	1
562	92613	Bolt — Governor Lever	1
572	224328	Baffle — Cylinder	1
592	231082	Nut — Hex.	1
615	94474	Fastener	1
616	262578	Crank — Governor	1
625	281085	Tube — Fuel Intake	1
635	66538	Elbow — Spark Plug	1
★842	280966	Seal — O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat — Intake Valve	1
870	213513	Seat — Exhaust Valve	1
871	262001	Guide — Exhaust Valve	1
		Note: 63709 Guide — Intake Valve	1
1019	494256	Label Kit	1
1058	272262	Owner's Manual	1

★ Included in Gasket Set—Part No. 496117.

Obtain Parts from your Local Briggs and Stratton Dealer

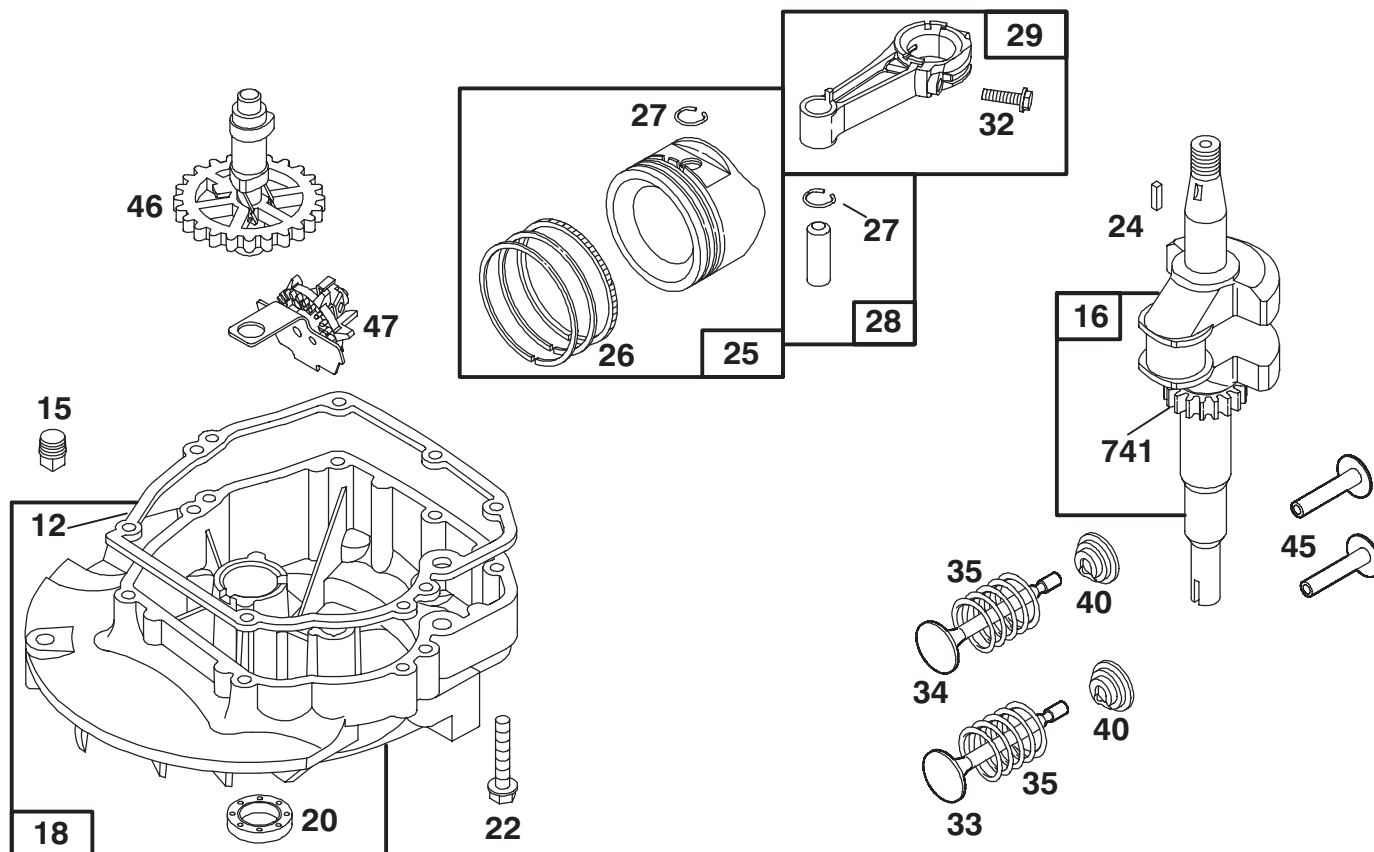


Assemblies include all parts shown in frames.

Crankshaft Assembly Briggs and Stratton 127802-0640-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1	27	26026	Lock – Piston Pin	1
15	94720	Plug – Oil Drain	1	28	298909	Pin – Piston (Standard)	1
16	494546	Crankshaft	1		298908	Pin – Piston (.005" O.S.)	1
		Note: Order 94388 For Timing Gear Key.	1	29	490566	Rod Assembly – Conn.	1
18	493279	Sump – Engine	1			Note: For Conn. Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	
★20	399781	Seal – Oil	1	32	94699	Screw – Conn. Rod	1
22	94220	Screw – Hex. Head	1	33	262651	Valve – Exhaust	1
		Note: 94612 Screw – Hex. Head	1	34	262652	Valve – Intake	1
		(One (1) Used in Hole Nearest Breather.)	1	35	262224	Spring – Valve	1
24	222698	Key – Flywheel	1	40	93312	Retainer – Valve Spring	1
25	493262	Piston Assy. (Standard)	1	45	262204	Tappet – Valve	1
	493385	Piston Assy. (.010" O.S.)	1	46	492828	Gear – Cam	1
	493386	Piston Assy. (.020" O.S.)	1	47	493737	Slinger – Oil	1
	493387	Piston Assy. (.030" O.S.)	1	741	262598	Gear – Timing	1
26	493261	Ring Set (Standard)	1				
	493388	Ring Set (.010" O.S.)	1				
	493389	Ring Set (.020" O.S.)	1				
	493390	Ring Set (.030" O.S.)	1				

★ Included in Gasket Set—Part No. 496117.

Obtain Parts from your Local Briggs and Stratton Dealer

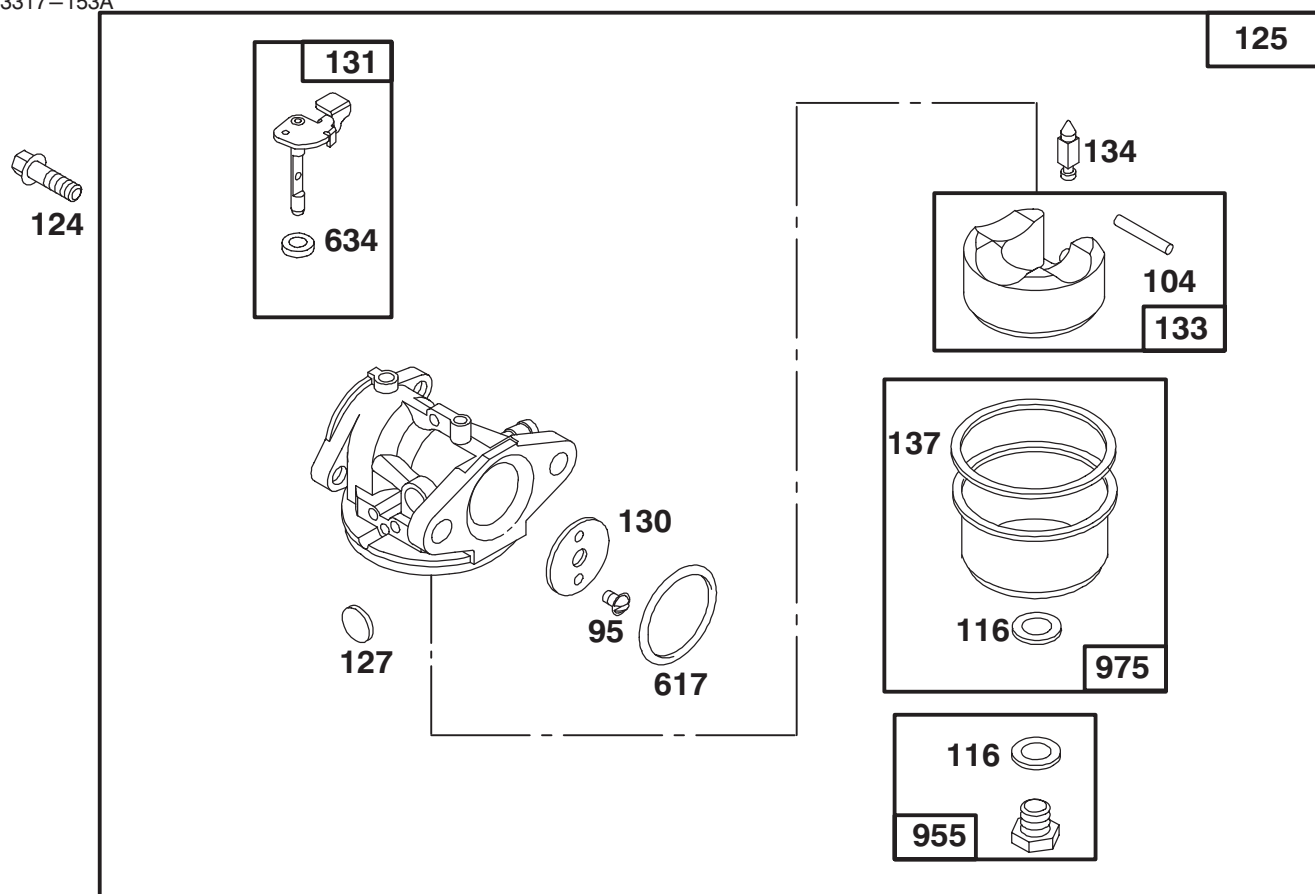

Assemblies include all parts shown in frames.


Carburetor Assembly Briggs and Stratton 127802-0640-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mounting	1	●134	398188	Valve – Inlet (Includes Seat)	1
●104	231371	Pin – Float Hinge	1	●◆137		Gasket – Bowl (Sold in Kit Only).	1
●◆116		Gasket–Sealing (Sold in Kit Only).	1	●◆617	270344	Seal – Fuel Intake Tube	1
124	94525	Screw – Carburetor Mtg.	1	●◆634		Washer–Shaft (Sold in Kit Only).	1
125	497314	Carburetor	1	955	497315	Screw – Bowl Mtg. (Std.)	1
●127		Plug – Welch (Sold in Kit Only).	1			Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
130	224908	Valve – Throttle	1	975	493640	Bowl Assy. – Carburetor	1
131	493267	Shaft – Throttle	1				
133	398187	Float Assy. – Carburetor	1				

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

Obtain Parts from your Local Briggs and Stratton Dealer

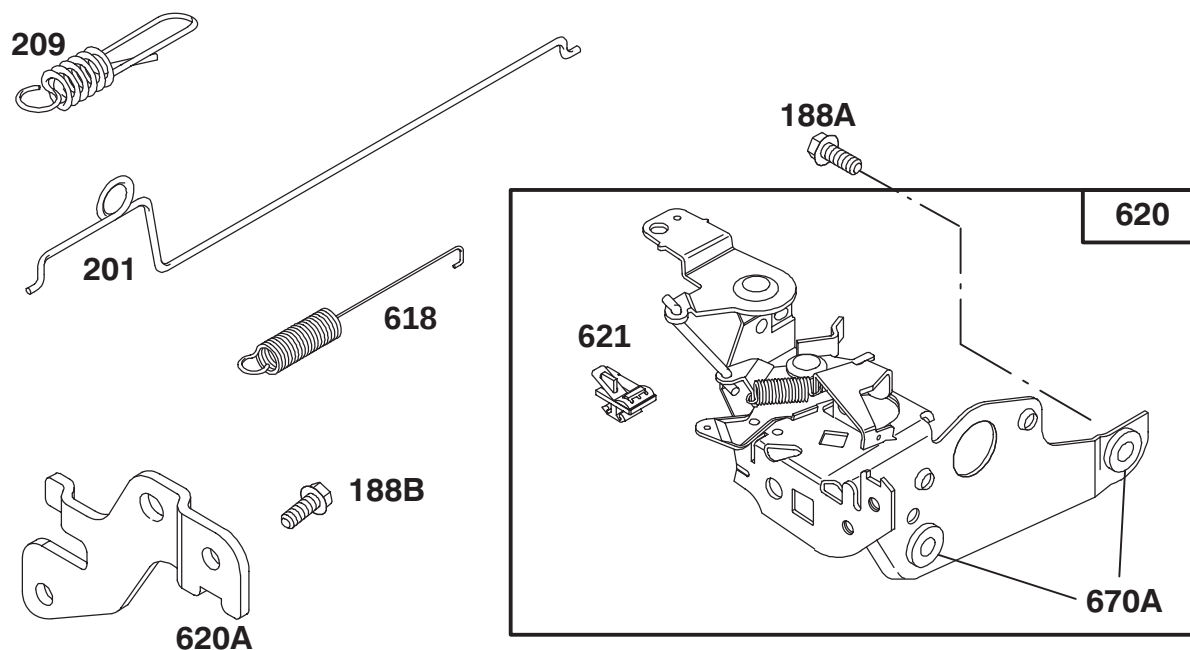

Assemblies include all parts shown in frames.


Carburetor Link Assembly

Briggs and Stratton 127802-0640-01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw – Hex. Head	1
188B	94602	Screw – Hex. Head	1
201	262579	Link – Governor	1
209	262661	Spring – Governor	1
618	262749	Spring – Return	1

Ref. No.	Part No.	Description	No. Used
620	497203	Bracket – Carburetor	1
620A	225152	Bracket – Control	1
621	396847	Switch – Stop	1
670A	493823	Spacer – Bracket	1

Obtain Parts from your Local Briggs and Stratton Dealer

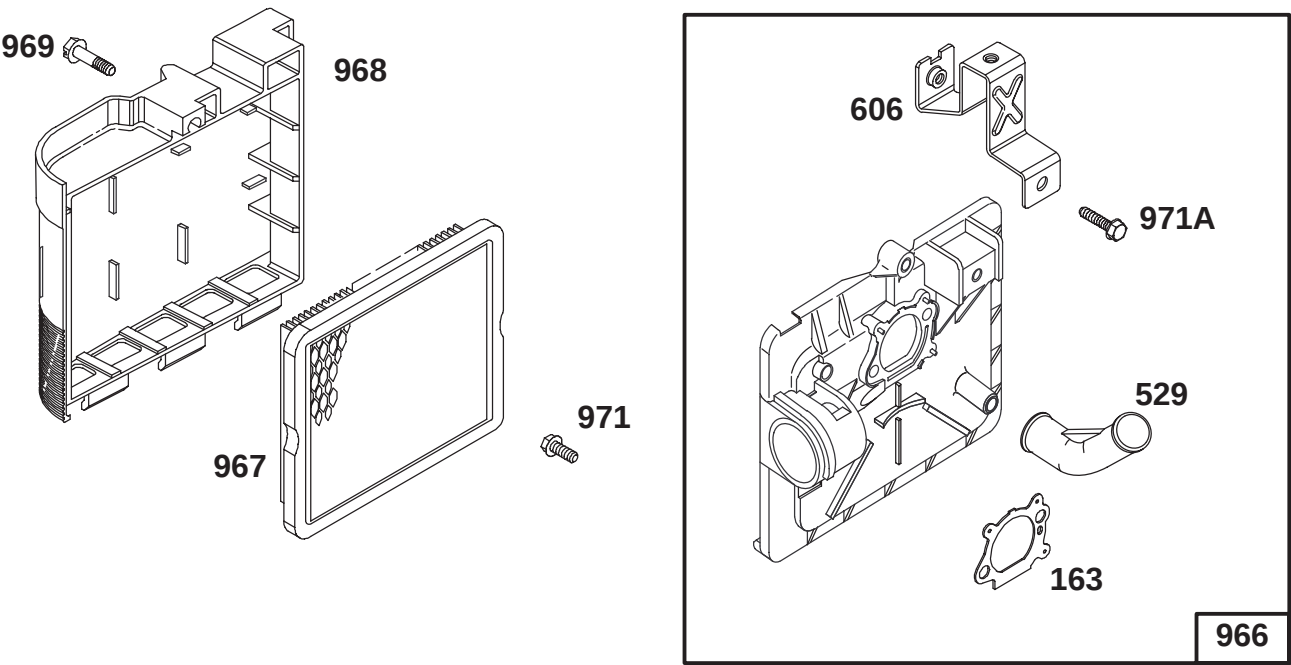


Assemblies include all parts shown in frames.

**Air Cleaner Assembly
Briggs and Stratton 127802-0640–01**

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket – Air Cleaner	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
966	496116	Base – Air Cleaner	1
967	491588	Filter – Air	1

Ref. No.	Part No.	Description	No. Used
968	281340	Cover – Air Cleaner	1
969	94120	Screw – Cover Mtg.	1
971	94121	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1

★ Included in Gasket Set—Part No. 496117.
Obtain Parts from your Local Briggs and Stratton Dealer

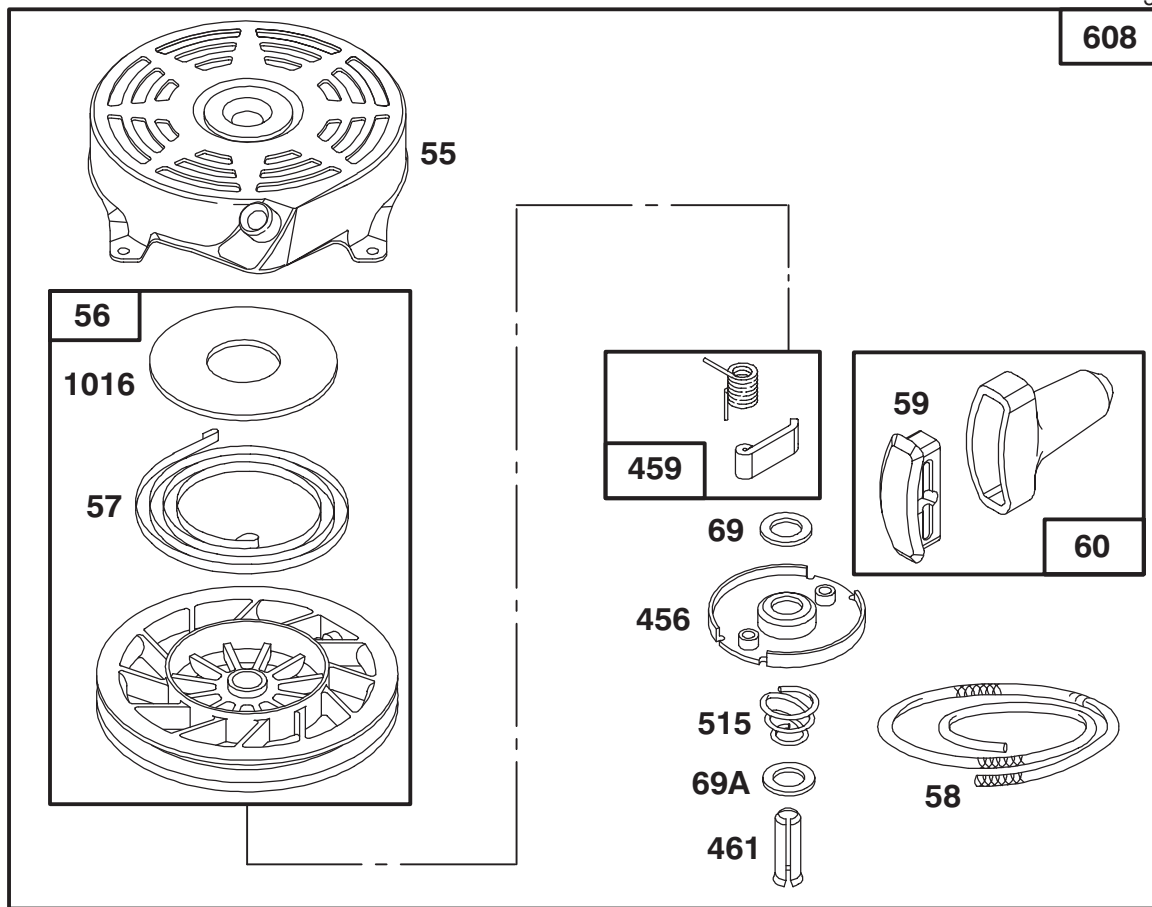


Assemblies include all parts shown in frames.

Starter Assembly Briggs and Stratton 127802-0640-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1	459	492833	Pawl – Starter	1
56	493824	Pulley – Rewind Starter	1	461	262626	Pin – Starter	1
57	262594	Spring – Rewind Starter	1	515	262625	Spring – Torsion	1
58	280399	Rope – Rewind Starter	1	608	493295	Starter Assy. – Rewind	1
59	396892	Insert – Handle	1			Includes:	
60	393152	Handle – Rewind Starter	1			94128 Screw – Hex. Hd.	1
69	280973	Washer – Rewind Starter	1			92987 Nut – Hex.	1
69A	224322	Washer – Rewind Starter	1	1016	224278	Cover – Rewind Starter	1
456	224321	Retainer – Rewind Starter	1				

Obtain Parts from your Local Briggs and Stratton Dealer

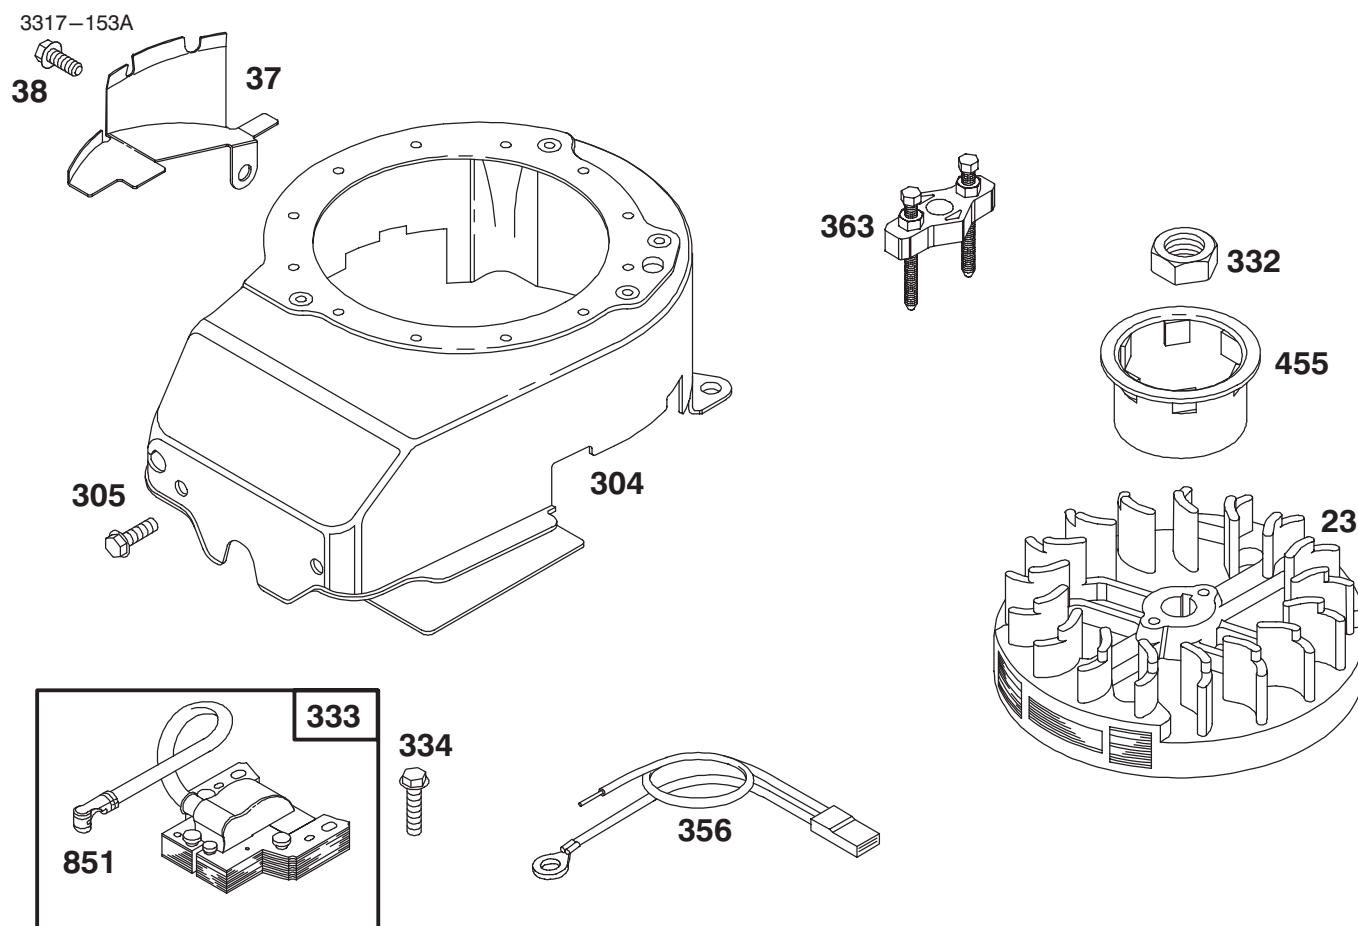


Assemblies include all parts shown in frames.

Flywheel Assembly Briggs and Stratton 127802-0640-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1	333	802574	Armature – Magneto	1
37	224511	Guard – Flywheel	1	334	94731	Screw – Sem	1
38	94786	Screw – Hex. Head	1	356	398808	Wire – Ground	1
304	493294	Housing – Blower	1	363	19069	Puller – Flywheel	1
305	94786	Screw – Sem	1	455	224250	Cup – Starter	1
332	92284	Nut – Flywheel	1	851	493880	Terminal – Ignition Cable	1

Obtain Parts from your Local Briggs and Stratton Dealer



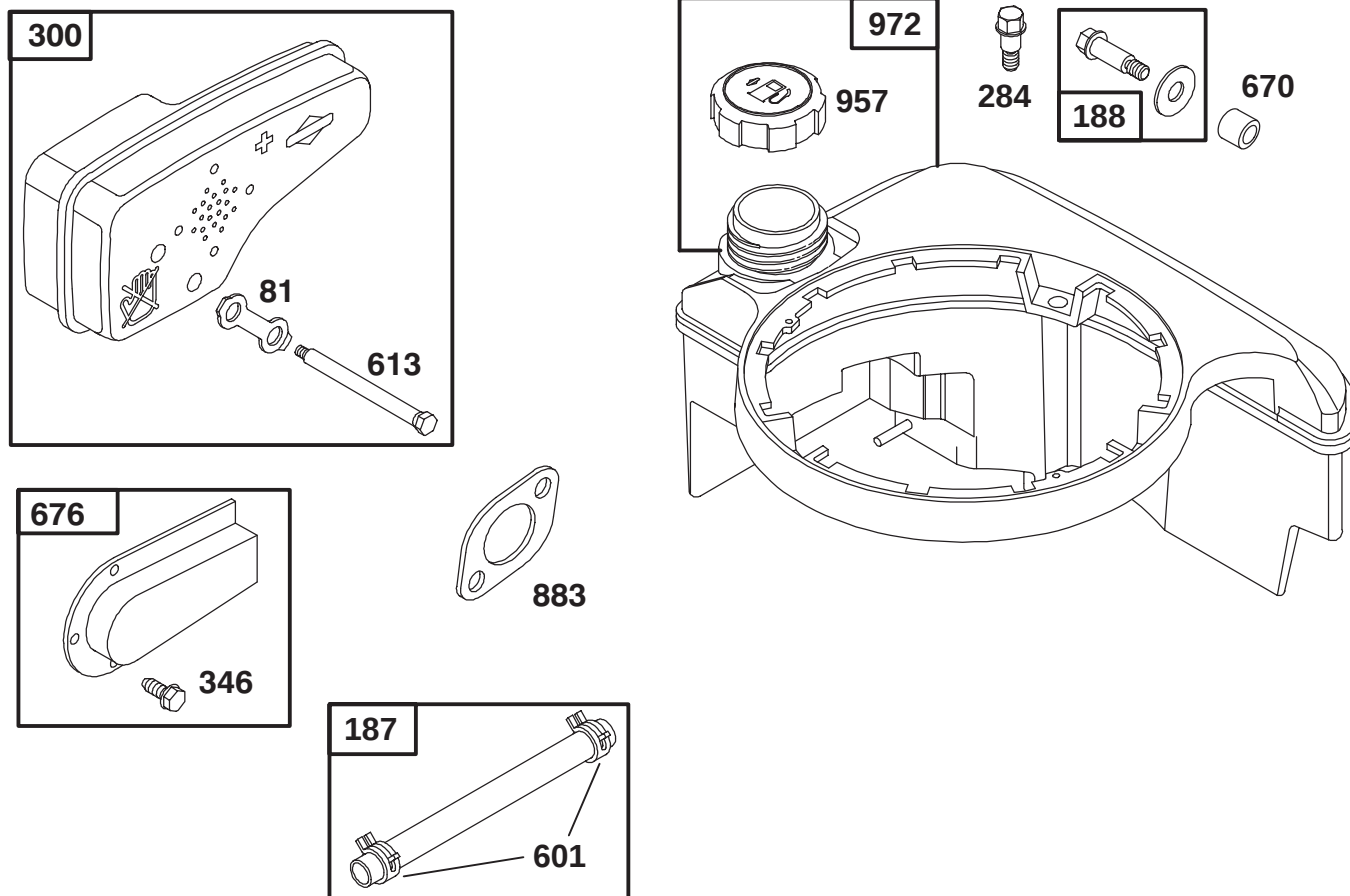


Assemblies include all parts shown in frames.

Muffler and Fuel Tank Assembly Briggs and Stratton 127802-0640-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1	613	94231	Screw – Muffler Mtg.	1
187	492790	Hose – Fuel	1	670	280512	Spacer – Fuel Tank	1
188	398540	Screw – Tank Mounting	1	676	493871	Deflector – Muffler	1
284	94511	Screw – Hex. Head	1	★883	272253	Gasket – Exhaust	1
300	490547	Muffler – Exhaust	1	957	397974	Cap Assy. – Fuel	1
346	93705	Screw – Hex. Head	1	972	495224	Tank Assembly – Fuel	1
601	93807	Clamp – Hose	1				

Obtain Parts from your Local Briggs and Stratton Dealer

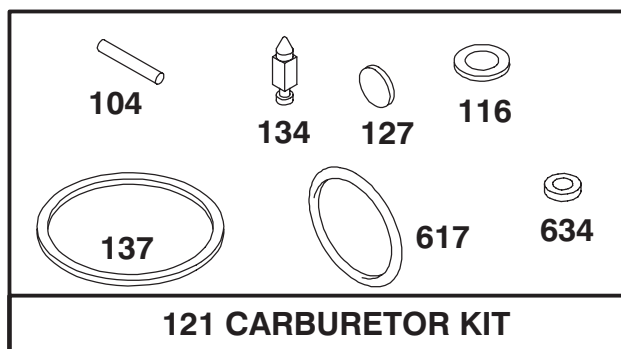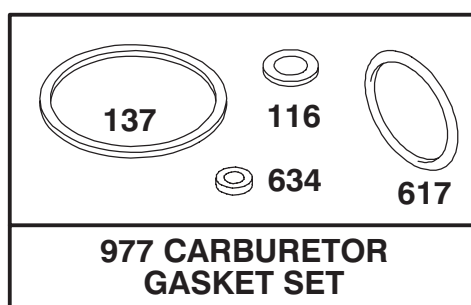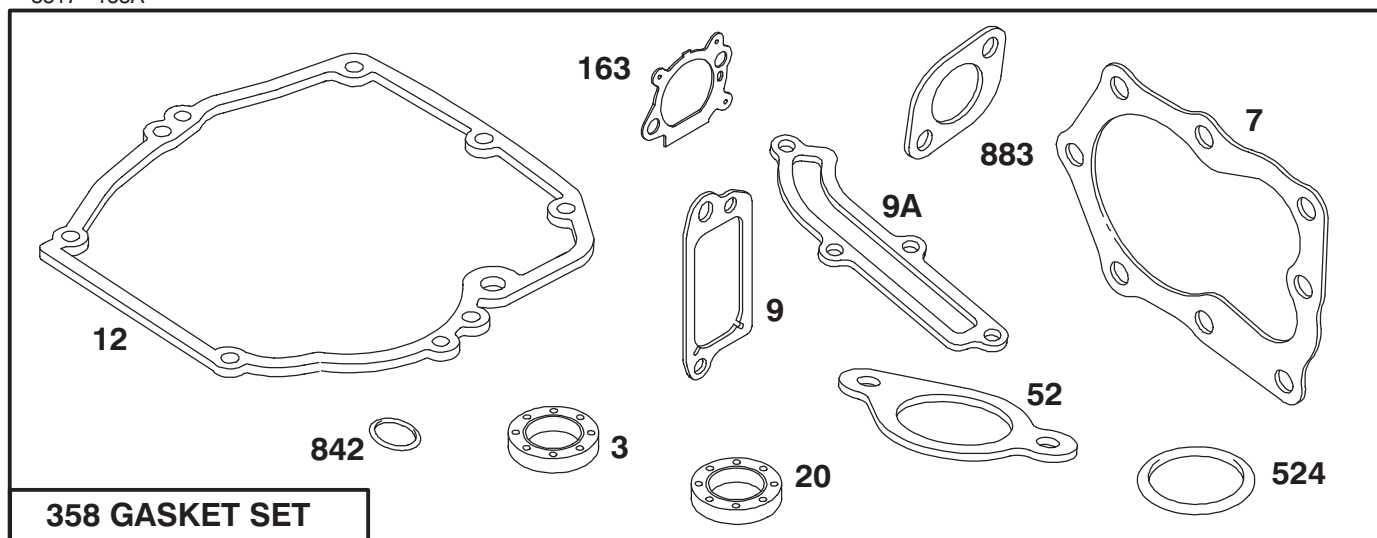

Assemblies include all parts shown in frames.

Gasket Assembly Briggs and Stratton 127802-0640-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Valve Cover	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only).	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only).	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only).	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only).	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

Obtain Parts from your Local Briggs and Stratton Dealer

★ Included in Gasket Set—Part No. 496117.

TORO PART NUMBER INDEX

3317–153A

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
	Engine	3 9 1	36–4791	Washer	10 5 2
	Engine – Quantum 4 HP	8 4 1	38–7820	Bearing – Ball	10 15 1
130743	Nut	4 19 1	39–5770	Decal – Danger	3 16 1
303712	Ring – Retaining	6 5 2	40–1940	Washer	1 26 2
316959	Washer – Lock	4 18 1	44–2750	Body – Primer	4 21 1
602587	Reed – Backup Plate	6 17 1	44–3175	Hose – Primer	4 5 1
602588	Reed – Carburetor	6 16 1	46–5520	Lever – Traction	11 13 1
602850	Gasket	7 13 1	49–2040	Screw – Hex Hd.	1 9 1
603145	Spring	7 12 1	49–2040	Screw – Taptite	10 1 4
605120	Grommet	1 12 1	52–7320	Retainer – Blade	3 14 1
606608	Pin – Wrist	6 4 1	53–4690	Stop – Ground Strap	5 5 1
607199	Key	4 13 1	55–3578	Gas Cap Assembly	3 6 1
607601	Screw	5 8 4	55–3760	Pinion – 15 Tooth	10 3 1
608850	Screw	7 19 4	60–8750	Bushing	10 6 2
609123	Plug – Core	6 21 4	60–8840	Pulley – Half	10 12 2
609471	Screw	5 10 3	60–8850	Bushing – Output	10 9 2
609482	Screw	4 9 2	60–8890	Gear – Bevel Pinion	10 16 1
609493	Element – Air Filter	4 3 1	60–9010	Strap – Ground	5 2 1
609629	Dowel	6 20 1	62–6660	Spacer	10 11 1
610165	Retainer – Speed Control	7 2 1	62–7540	Retainer – Blade	8 15 1
610358	Nut – Lock	9 17 2	62–7550	Pulley – Driver	8 16 1
610834	Collar – Air Vane	7 4 1	65–2720	Ring – Retaining	9 5 4
611071	Filter – Fuel	7 15 1	65–4710	Ring – Friction	9 6 2
611393	Screw – Hex. Hd.	6 13 2	65–4720	Spring – Compression	9 13 2
611396	Seal – Oil	6 11 2	65–4730	Washer – Thrust	9 16 2
612383	Washer	7 20 1	65–4740	Washer – Thrust	9 4 4
612824	Clip – Rope Insert	11 5 1	65–4750	Gear – Pinion	9 14 2
612825	Handle – Starter	11 4 1	65–4760	Washer	9 15 2
612872	Screw	6 18 2	66–5370	Spring – Compression	3 17 1
613208	Screw – Hex Washer Hd.	5 16 2	66–5370	Spring – Compression	5 21 1
613269	Screw	7 8 2	66–5380	Plate – Brake Assembly	5 18 1
614009	Plug – Spark	5 13 1	66–6040	Key – Rocking R.H.	9 7 1
614426	Washer – Stepped	9 11 2	66–6050	Key – Rocking L.H.	9 8 1
614427	Cover – Wheel	9 12 2	66–7460	Bulb – Primer	4 22 1
614447	Spacer – Axle Shaft	9 2 2	68–3632	Line – Fuel	3 8 1
614596	Gear 34 Tooth	10 18 1	82–8550	Shield – Muffler	8 10 1
614636	Screw – Hex. Washer Hd.	6 14 3	84–7820	Plate – Brake Mount	5 15 1
614637	Bracket – Wheel Height Adj.	1 27 2	85–7060	Decal – Danger	1 4 1
614640	Hub – Starter	4 17 1	92–1004	Spring Arm Assembly	9 18 2
614650	Bolt – Shoulder	1 24 2	92–1008	Knob – Height Adjust	1 21 4
614654	Plate – Muffler	5 7 1	92–1057	Bolt – Shoulder	9 10 2
614668	Cover – Gear Case	10 2 1	92–1156	Wire – Brake Switch Lead	5 6 1
614672	Bolt – Shoulder	1 25 2	92–1616	Screw	1 11 1
614673	Spacer	1 13 1	92–1624	Screw – Engine	8 14 3
614687	Spring Arm – Front	1 22 2	92–1701	Rope – Stop	3 5 1
614696	Shaft – Intermediate	10 4 1	92–2260	Screw – Handle	11 23 2
614699	Screw	4 1 3	92–2280	Decal – Instruction	11 10 1
614702	Screw	4 14 4	92–2289	Plate – Logo	8 9 1
614702	Screw	5 17 1	92–2292	Decal – Instruction	11 8 1
677982	Liner – Split (Set of 2)	6 8 1	92–2298	Washer – Spring	11 14 1
678113	Float & Arm Assembly	7 16 1	92–2299	Lever – Shift	11 17 1
681678	Lead & Cover Assembly	5 20 1	92–2914	Decal – HOC R.H.	1 17 1
681737	Set – Rings, Piston	6 1 1	92–2915	Decal – HOC L.H.	1 16 1
681830	Bearing – Upper Main	6 10 1	92–2925	Strap – Insulation	5 3 1
681831	Bearing – Needle	6 19 1	92–3132	Bolt – Shoulder	11 11 1
683911	Bearing – Needle	6 12 1	92–3133	Spacer – Lever	11 12 1
684049	Ignition Assembly	5 14 1	92–3135	Bar – Control	11 7 1
684743	Flywheel Assembly	4 16 1	92–4881	Plate – Height Adjust	2 33 2
12–5450	Screw – Thread Forming	5 4 1	92–4890	Washer	1 28 2
16–9269	Cover – Recycling	1 1 1	92–4921	Connecting Rod Assembly	6 6 1
16–9279	Deck – 21 Steel SP	8 23 1	92–4923	Piston & Ring Set	6 3 1
19–4050	Knob	11 24 2	92–4925	Piston & Connecting Rod	6 * 1
26–0670	Bolt – Blade	8 20 1	92–4927	Bearing	6 7 1
36–4780	Washer – Thrust	10 17 2	92–4944	Spring – Governor	7 5 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
92-4948	Gasket - Carburetor	4 7 2	93-0261	Curved Washer	11 18 1
92-4949	Bracket - Throttle Control	7 7 1	93-0262	Decal - Warning	2 34 1
92-6370	Main Jet	7 21 1	93-0278	Pulley - Driver	3 13 1
92-6371	Nozzle	7 14 1	93-0340	Stop - Pivot	11 9 1
92-6373	Disc - Throttle	7 6 1	93-1108	Cover - Muffler	5 11 1
92-6376	Air Vane & Shaft	7 1 1	93-1200	Cover - Strap	3 4 1
92-6377	Carburetor Body	7 9 1	93-1216	Base - Shroud	4 15 1
92-6379	Crankshaft	6 9 1	93-1217	Baffle	5 9 1
92-6385	Jet - High Altitude	7 * 1	93-1225	Lever - Speed Adjust	7 3 1
92-6389	Pin	7 17 1	93-1227	Shield - Carburetor	4 6 1
92-6396	Shroud - Engine	3 1 1	93-1231	Cover - Air Filter	4 2 1
92-7727	Gearcase	10 10 1	93-1233	Gasket - Exhaust	5 12 1
92-7746	Height Adj. Arm Assembly	9 3 2	93-1248	Shroud	4 20 1
92-8647	Shield - Trailing	1 19 1	93-4196	Shield - Grass	3 12 1
92-9590	Wheel Assembly	9 9 2	93-4302	Screw - Sems	3 2 3
92-9591	Wheel Assembly	1 23 2	93-4304	Rope	4 23 1
92-9691	Float Chamber	7 18 1	93-4311	Cylinder & Crankcase Cover	6 15 1
92-9693	Short Block Assembly	4 12 1	93-4320	Plug	4 4 1
92-9695	Carburetor Assembly	7 * 1	93-4320	Shield - Fuel	7 22 1
92-9695	Carburetor Assembly	4 10 1	93-7380	Anchor - Cable	11 27 1
92-9697	Kit - Float Valve, Body	7 10 1	93-7388	Guide - Rope	11 2 1
92-9698	Screw - Shoulder	5 19 1	93-8470	Screw - Clamp (P/W Eng.)	8 2 1
93-0208	Guide - Belt	8 21 1	2210-249	Clamp - Casing (P/W Eng.)	8 3 1
93-0209	Cover - Belt	1 7 1	2210-316	Rope - Stop (P/W Eng.)	8 6 1
93-0216	Kicker - Front	2 32 1	321-51	Bolt - Hex	11 3 2
93-0217	Kicker - Rear	8 12 1	322-3	Screw - Hex Hd. Cap	1 18 6
93-0218	Kicker - Side	8 22 1	3253-22	Washer - Lock	8 19 1
93-0219	Accelerator	8 18 1	3256-24	Washer	10 13 1
93-0222	Baffle - Front	1 31 1	3256-49	Washer - Flat	11 15 1
93-0223	Baffle - Rear	8 13 1	3285-19	Pin - Groove	10 8 2
93-0228	Brkt. - Belt Guide	1 10 1	3290-378	Tie - Cable	11 26 1
93-0231	Screw	8 24 1	3290-378	Tie - Cable	11 26 2
93-0231	Screw - Plastite	1 30 1	3290-459	Rivet	5 1 2
93-0232	V-Belt	9 1 1	3296-2	Nut - Lock	11 16 2
93-0233	Bracket - Handle LH	1 15 1	3296-2	Nut - Lock	2 36 1
93-0234	Bracket - Handle RH	1 5 1	3296-5	Nut	10 14 1
93-0237	Handle - Upper	11 6 1	3296-29	Nut - Lock	1 20 6
93-0238	Handle - Lower	11 25 1	3296-39	Nut - Lock	1 29 2
93-0239	Shaft - Output	10 7 1	3296-73	Nut - Lock	11 1 1
93-0240	Gearcase Ass'y Complete	10 * 1	32104-118	Screw - PH	3 7 2
93-0240	Transmission Assembly	1 14 1	32105-27	Screw - Hex Washer Hd.	2 35 1
93-0241	Blade - Steel Deck	8 17 1	32144-4	Screw - Tap.	1 3 3
93-0242	Grommet	1 2 4	32144-73	Screw - Hex Washer Hd.	8 11 3
93-0243	Shroud - Qt Wedge	8 5 1	32144-85	Screw - Hex Hd.	9 19 2
93-0245	Decal - Deck	3 15 1	32144-111	Screw - PPH	8 1 2
93-0246	Decal - Engine	3 3 1	32144-119	Screw - Thread Form	1 8 1
93-0247	Decal - Engine	8 7 1	32144-121	Screw	8 8 2
93-0248	Decal - Warning	1 6 1			
93-0251	Cable - Brake	11 21 1			
93-0255	Cable - Brake	11 22 1			
93-0258	Cable - Throttle/Traction	11 19 1			
93-0259	Cable - Traction	11 28 1			
93-0260	Cable - Throttle/Traction	11 20 1			

OPTIONAL EQUIPMENT

Recycler Side Discharge Kit Model No. 59291

Recycler Bagging Kit Model No. 59290

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]