



Greensmaster[®] 3150

Traction Unit

Model No. 04357—230000601 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Brake Pedal Assembly	4	Wire Harness Routing Assembly	41
Traction Pedal Assembly	5	Hydraulic Schematic	42
Front Wheel and Brake Assembly	6	Electrical Schematic	43
Brake Assembly No. 104–7705	7	Cylinder Assembly	
Hydraulic Wheel Motor Assembly No. 92–9199	8	Briggs and Stratton Model 350447–1331–E1	44
Steering Arm Assembly	9	Crankshaft Assembly	
Steering Control Valve Assembly No. 105–0424	10	Briggs and Stratton Model 350447–1331–E1	45
Right Hand Pull Frame Assembly	11	Cylinder Head Assembly	
Hydraulic Cylinder Assembly No. 105–3822 ...	13	Briggs and Stratton Model 350447–1331–E1	46
Left Hand Pull Frame Assembly	14	Cylinder Head Assembly	
Center Pull Frame Assembly	16	Briggs and Stratton Model 350447–1331–E1	47
Hydraulic Cylinder Assembly No. 105–3823 ...	18	Intake Manifold and Rocker Cover Assembly	
Seat Assembly	19	Briggs and Stratton Model 350447–1331–E1	48
Neutral System Assembly	20	Carburetor Assembly	
Engine Installation Assembly	21	Briggs and Stratton Model 350447–1331–E1	49
Hydrostat and Gear Pump Drive Assembly ...	22	Governor Assembly	
Hydrostat Assembly No. 105–0494	23	Briggs and Stratton Model 350447–1331–E1	50
Gear Pump Assembly No. 104–7737	24	Alternator Assembly	
Frame and Battery Assembly	25	Briggs and Stratton Model 350447–1331–E1	51
Rear Wheel Assembly	26	Fuel Pump, Oil Pump and Dipstick Assembly	
Steering Cylinder Assembly No. 105–0411	27	Briggs and Stratton Model 350447–1331–E1	52
Control Panel Assembly	28	Air Cleaner Assembly	
Hydraulic Reservoir and Leak Detector		Briggs and Stratton Model 350447–1331–E1	53
Assembly	29	Blower Housing Assembly	
Fuel Tank Assembly	30	Briggs and Stratton Model 350447–1331–E1	54
Speed Selector Lever Assembly	31	Flywheel Assembly	
Joystick and Console Assembly	32	Briggs and Stratton Model 350447–1331–E1	55
Joystick Bracket Assembly	33	Starter Assembly	
Hydraulic Manifold Assembly	34	Briggs and Stratton Model 350447–1331–E1	56
Basic Mow/Lift Manifold Assembly No. 93–2240	35	Starter Assembly	
Hydraulic Traction Assembly	36	Briggs and Stratton Model 350447–1331–E1	57
Hydraulic Reel Drive Assembly	37	Gasket Assembly	
Reel Motor Assembly No. 100–6426	38	Briggs and Stratton Model 350447–1331–E1	58
Hydraulic Lift Assembly	39	Carburetor Overhaul Kit Assembly	
Hydraulic Steering Assembly	40	Briggs and Stratton Model 350447–1331–E1	59

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

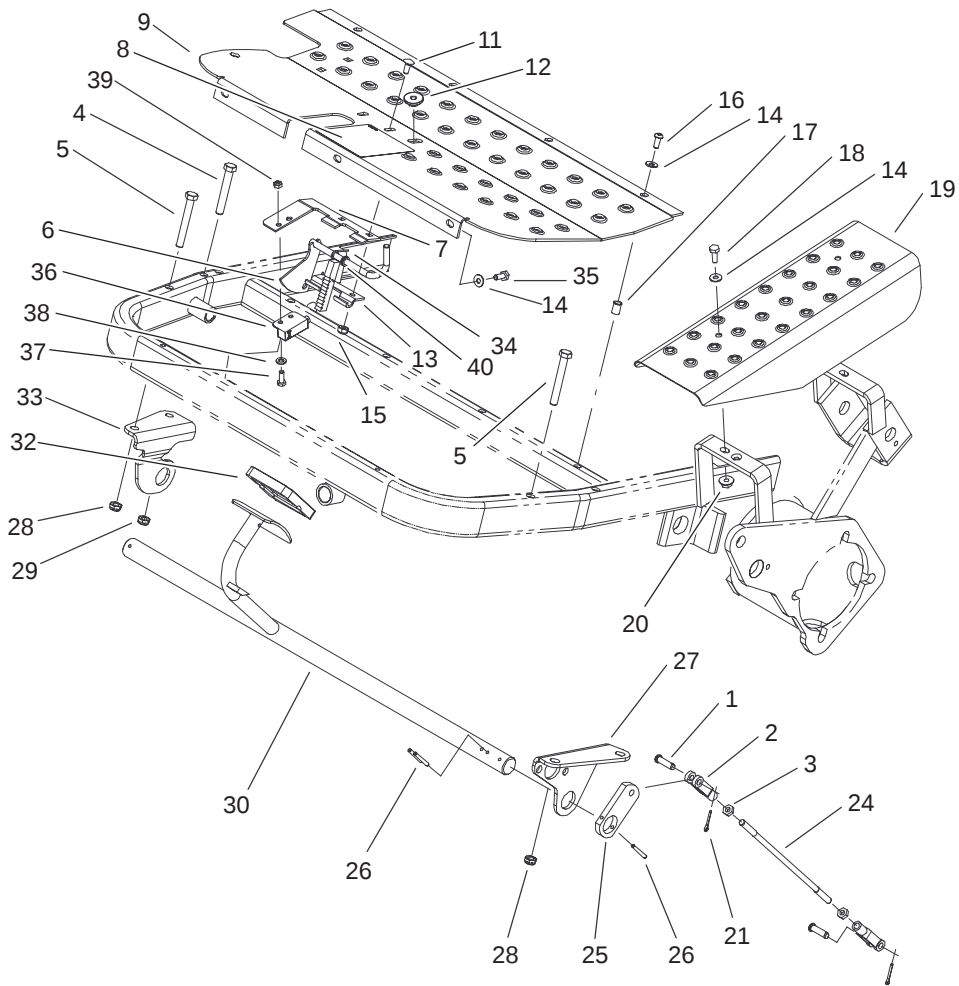


Sheet No.: 2

Brake Pedal Assembly

Ref. No.	Part No.	Qty.	Description
1	283-61	4	Pin-Yoke
2	282-2	4	Yoke
3	3220-2	4	Nut
4	323-12	1	Screw-HH
5	323-13	3	Screw-HH
6	100-9819	1	Latch ASM
7	100-9821	1	Plate-Switch, Reed
8	93-8062	1	Decal-Brake, Parking
9	105-0463-01	1	Plate-Footrest
11	3229-11	2	Screw-CARR
12	32141-111	1	Nut-Adjusting
13	95-1629	1	Hinge-Lower
14	3256-1	9	Washer-Flat
15	3296-16	2	Nut-Lock, NI
16	3274-31	4	Screw-HSBH
17	32148-6	7	Insert-Nut
18	321-4	2	Screw-HH
19	83-0200-01	1	Plate-Cover, LH
20	32128-33	2	Nut-HF
21	3272-6	4	Pin-Cotter
24	27-2270	2	Rod-Adjustment, Brake
25	10-8100-01	2	Strap-Shaft, Brake
26	32121-35	4	Pin-Roll
27	88-9640-01	1	Bracket-Lift Pivot, LH
28	104-8301	3	Nut-Flange, NI


Ref. No.	Part No.	Qty.	Description
29	3296-59	1	Nut-Lock, NI
30	83-0160	1	Shaft-Brake
32	93-7629	1	Pad-Foot, Brake
33	105-0440-01	1	Bracket-Brake, RH
34	10-8140	1	Spring-Latch, Brake
35	321-3	3	Screw-HH
36	104-2057	1	Sensor
37	48-7620	2	Screw-HH
38	33093-00	2	Washer-Flat
39	49-7810	2	Nut-Lock
40	75-5470	2	Spacer-Bearing

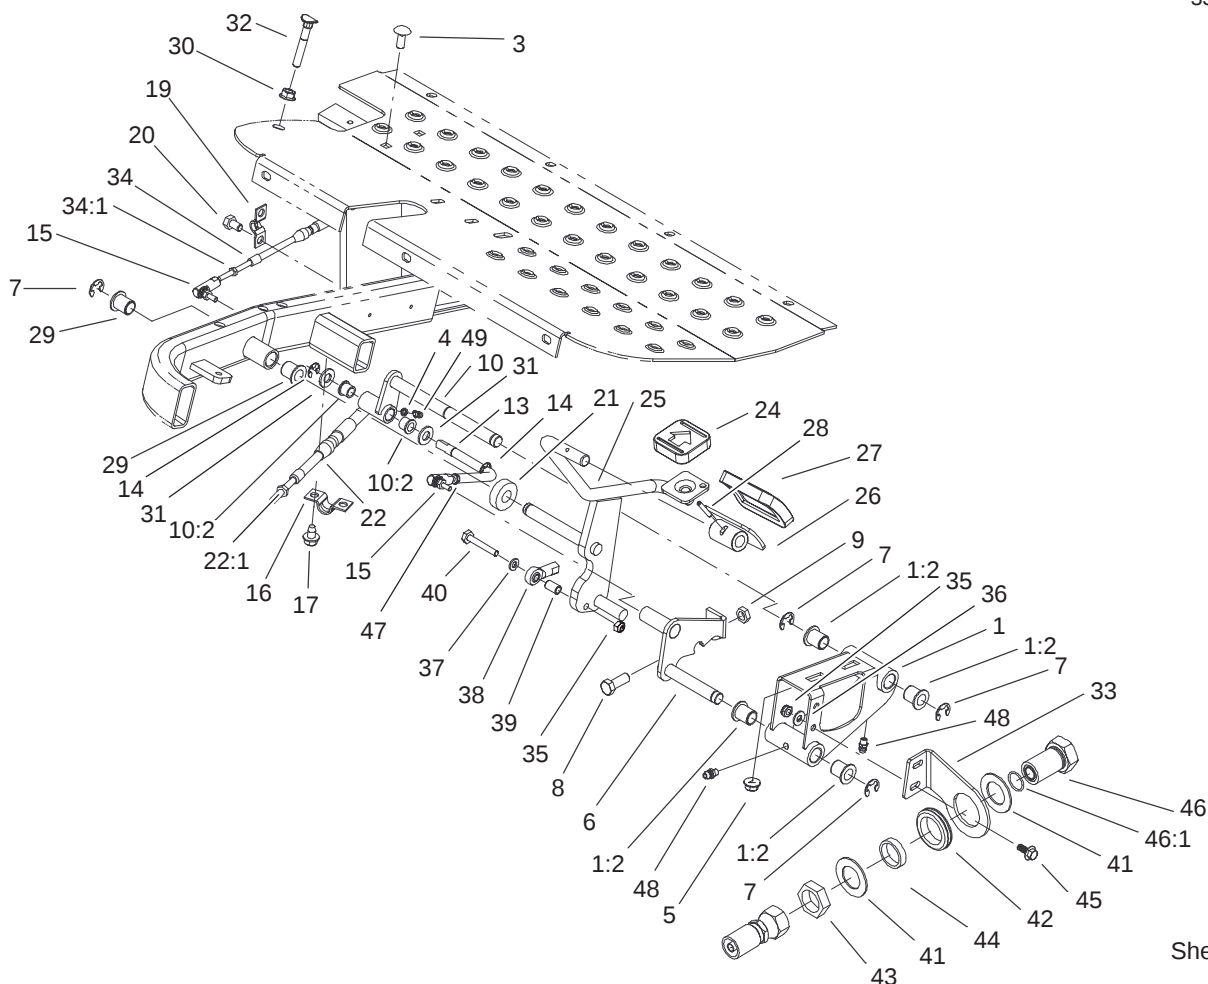

Sheet No.: 3

Traction Pedal Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-4620	1	Pivot Mount ASM	27	74-9100	1	Pad-Pedal, Forward
1:2	256-155	4	Bushing-Flange	28	32121-45	1	Pin-Spring
3	3230-1	2	Bolt-CARR	29	256-155	2	Bushing-Flange
4	3254-8	1	Washer-Lock	30	32128-20	1	Nut-HF
5	104-8300	2	Nut-Flange, NI	31	3256-24	2	Washer-Flat
6	105-5425	1	Lock-ASM	32	17-9426	1	Screw-Handle
7	32120-47	4	Ring-Retaining, External	33	105-8290-01	1	Bracket-Bulkhead, Front
8	323-6	1	Screw-HH	34	105-5444	1	Cable-Lock, Neutral
9	3217-7	1	Nut-Hex	34:1	3219-14	2	Nut-Hex
10	106-4621	1	Support ASM	35	3296-56	3	Nut-Lock, NI
10:2	256-116	2	Bushing-Flange	36	3256-22	2	Washer-Flat
13	105-5430	1	Rod-Connecting	37	105-8318	1	Washer-Flat
14	32120-18	2	E-Ring	38	2411-41	1	Joint-Ball
15	2411-38	2	Joint-Ball	39	80-0650	1	Spacer-Tubular
16	93-2092	1	Clamp-Cable	40	321-10	1	Screw-HH
17	9266934	2	Screw	41	69-9010	2	Washer
19	93-2279	1	Clamp-Cable	42	240-3	1	Grommet-Rubber
20	322-1	2	Screw-HH	43	340-74	1	Locknut-Bulkhead
21	105-5429	1	Spacer-Pedal, Traction	44	69-9000	1	Spacer
22	105-5445	1	Cable-Traction	45	99-6810	2	Screw-HH
22:1	3220-1	2	Nut-Jam	46	105-5491	1	Tube-HYD
24	74-9110	1	Pad-Pedal, Reverse	46:1	237-58	1	O-Ring
25	105-5421-01	1	Traction Pedal ASM	47	3219-14	1	Nut-Hex
26	49-6440-03	1	Pedal-Forward	48	302-5	2	Fitting-Grease
				49	302-60	1	Fitting-Grease

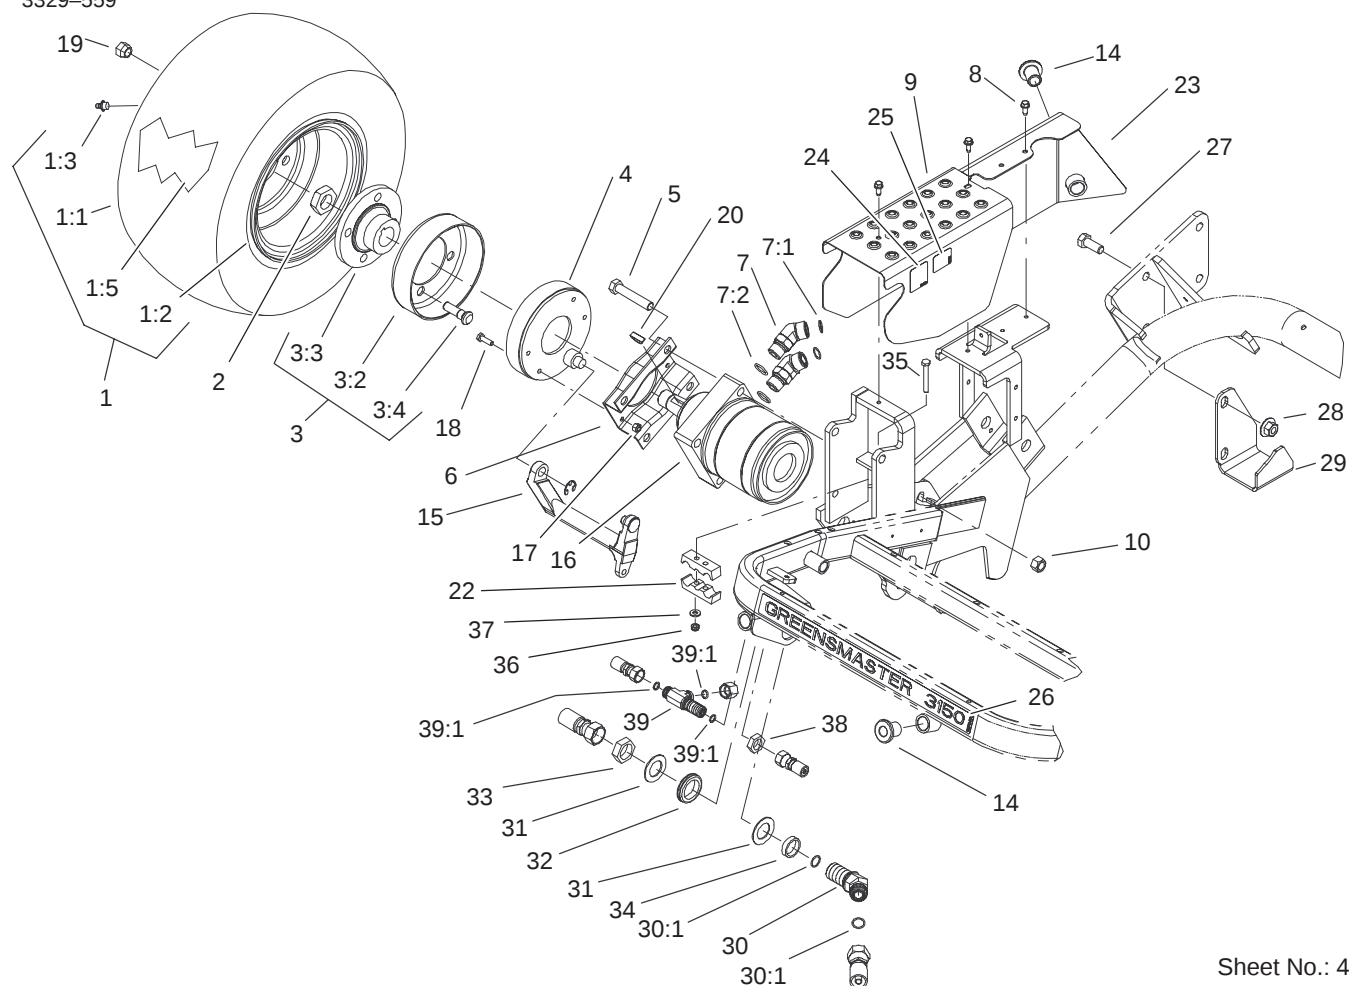

Sheet No.: 4


Front Wheel and Brake Assembly

Ref. No.	Part No.	Qty.	Description
☆1		2	Wheel And Tire ASM
1:1	28-3680	1	Tire
1:2	217-60	1	Rim
1:3	232-27	1	Stem-Valve
1:5	232-37	1	Tube
2	26-3790	2	Nut-Lock
3	10-6821	2	Brake Drum ASM
3:2	10-6850	1	Drum-Brake
3:3	10-6870-03	1	Hub-Wheel
3:4	85-6540	4	Stud-Drive
4	104-7705	2	Brake ASM
5	325-11	8	Screw-HH
6	84-2000-03	2	Bracket-Brake
7	340-14	4	Fitting-HYD, 45°
7:1	237-65	1	O-Ring
7:2	237-80	1	O-Ring
8	32144-10	4	Screw-HWH
9	105-0433-01	1	Channel-Step, RH
10	3296-23	8	Nut-Lock, NI
14	83-1700	3	Bushing-Flange
15	93-2096	2	Lever-Brake
16	92-9199	2	Motor-Wheel, HYD
17	3296-42	8	Nut-Lock, NI
18	321-5	8	Screw-HH
19	242-50	8	Nut-Lug
20	3257-42	2	Key-Woodruff

Ref. No.	Part No.	Qty.	Description
*21	3290-378	3	Tie-Cable
22	93-2509	2	Clamp-Tube
23	105-8282-01	1	Side Shield ASM
24	105-4674	1	Decal-Noise, Ce
25	93-7252	1	Decal-Mark, Ce
26	105-5470	1	Decal
27	325-5	2	Screw-HH
28	32128-52	2	Locknut-Flange
29	105-8263-01	1	Bracket-Rops
30	340-73	1	Fitting-45, Bulkhead Union
30:1	237-65	2	O-Ring
31	69-9010	2	Washer
32	240-3	1	Grommet-Rubber
33	340-74	1	Locknut-Bulkhead
34	69-9000	1	Spacer
35	321-11	2	Screw-HH
36	3296-56	2	Nut-Lock, NI
37	3256-22	2	Washer-Flat
38	340-70	1	Nut-Lock
39	340-68	1	Fitting-Tee, Bulkhead
39:1	237-22	3	O-Ring

☆ Not serviced separately

* Not illustrated

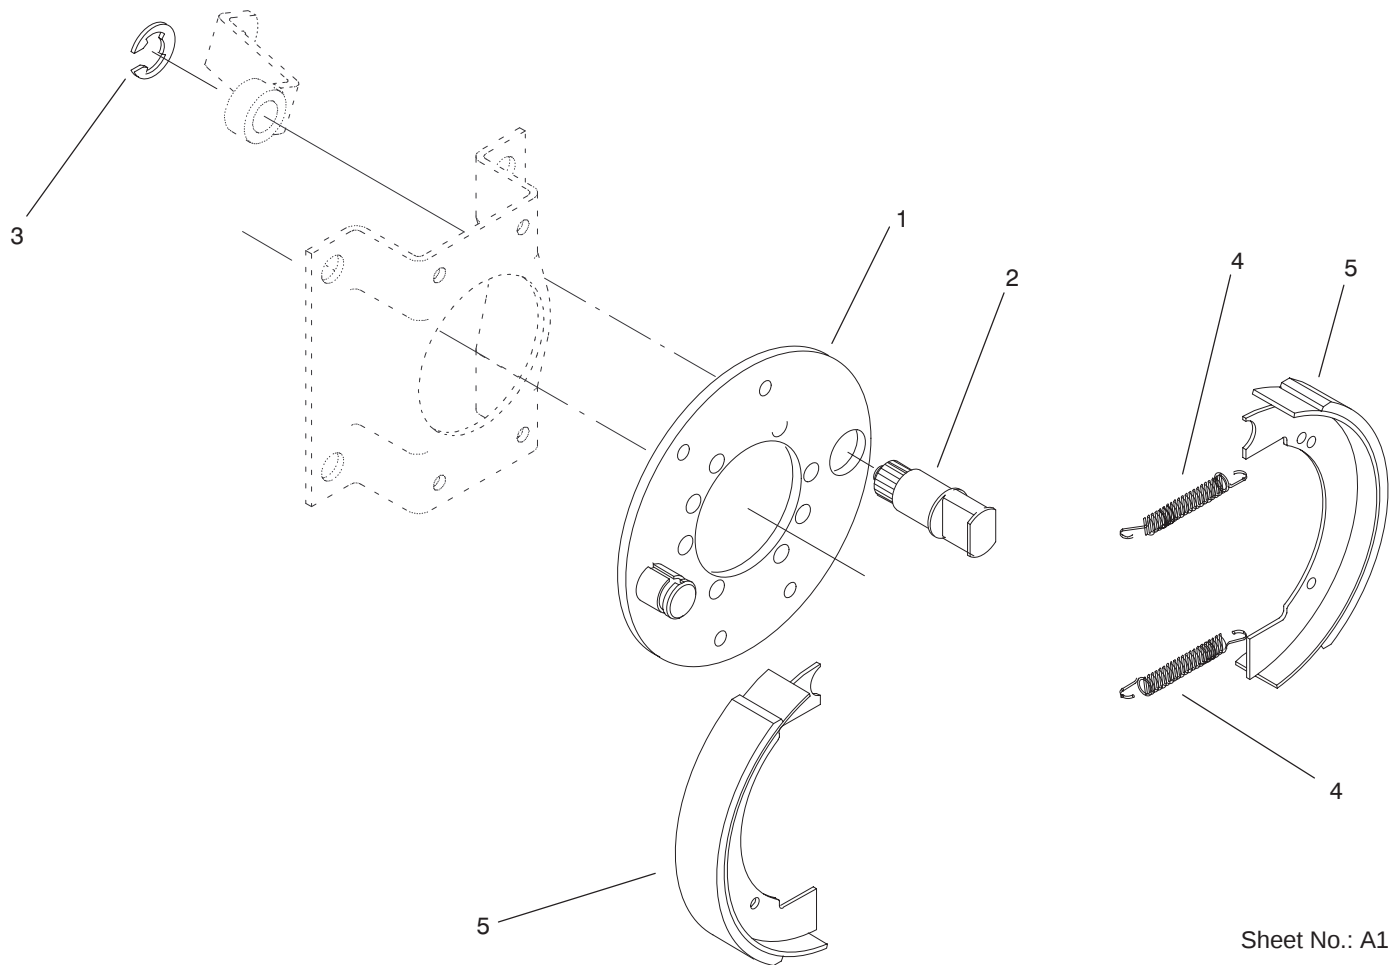


Sheet No.: A1

Brake Assembly No. 104-7705

Ref. No.	Part No.	Qty.	Description
1	70-9870	1	Plate-Backing
2	104-7707	1	Shaft-Cam, Brake
3	104-7706	1	E-Ring-Bowed
4	70-9880	2	Spring-Return
5	70-9840	2	Shoe-Brake

Ref. No.	Part No.	Qty.	Description

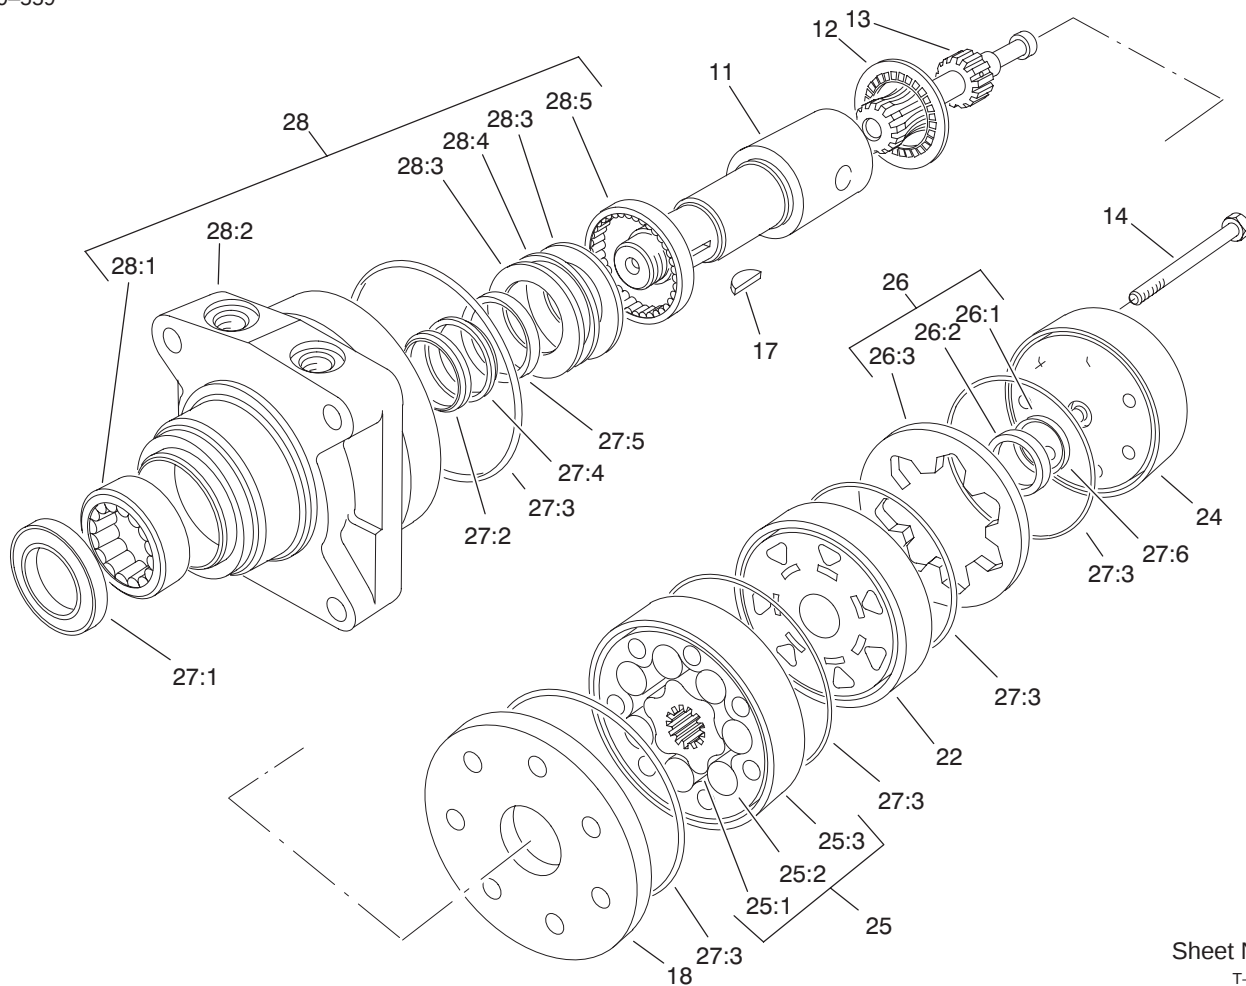

Sheet No.: A2


T-3356

Hydraulic Wheel Motor Assembly No. 92-9199

Ref. No.	Part No.	Qty.	Description
11	76-0860	1	Shaft-Coupling
12	76-0850	1	Bearing-Thrust
13	92-9761	1	Link-Drive
14	92-9762	7	Screw-HH
17	3257-42	1	Key-Woodruff
18	76-0870	1	Plate-Wear
22	76-0840	1	Manifold
24	76-0940	1	End Cover ASM
25	92-9763	1	Rotor Set
☆25:1		1	Rotor
☆25:2		1	Vane
☆25:3		1	Stator
26	76-0880	1	Commutator ASM
☆26:1		1	Seal-Commutator
☆26:2		1	Commutator
☆26:3		1	Ring-Commutator
27	94-8178	1	Seal Kit
☆27:1		1	Seal-Dirt And Water
☆27:2		1	Washer-Backup
☆27:3		5	Seal-Ring
☆27:4		1	Washer-Backup
☆27:5		1	Seal-Inner
☆27:6		1	Seal-Commutator
28	76-0810	1	Housing ASM
☆28:1		1	Bearing
☆28:2		1	Housing

Ref. No.	Part No.	Qty.	Description
☆28:3		2	Washer-Thrust
☆28:4		1	Bearing-Thrust
☆28:5		1	Bearing


☆ Not serviced separately

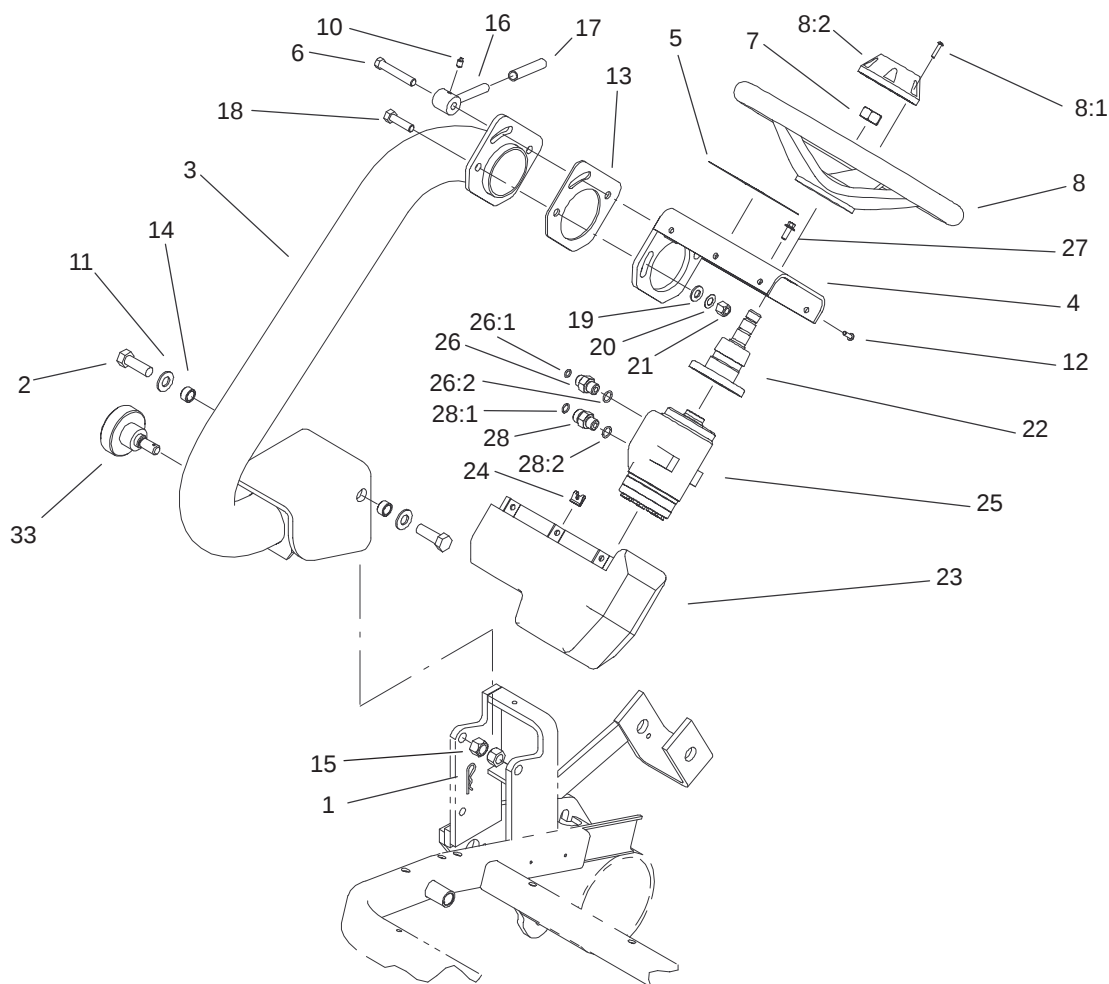

Sheet No.: 5

Steering Arm Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3290-467	1	Pin-Hair	25	105-0424	1	Valve-Control, Steering
2	325-6	2	Screw-HH	26	340-1	3	Adapter
3	105-0418-01	1	Steering Arm ASM	26:1	237-35	1	O-Ring
4	105-4316-03	1	Steering Mount ASM	26:2	237-42	1	O-Ring
5	93-8063	1	Decal-Caution, Ce	27	33103-016	4	Screw-HHF
5	104-2053	1	Decal-Warning	28	340-2	2	Fitting-HYD, Straight
6	105-4326	1	Screw-HH, LH	28:1	237-22	1	O-Ring
7	94-9952	1	Nut-Hex	28:2	237-42	1	O-Ring
8	75-0560	1	Wheel-Steering	33	105-0484	1	Knob-Steering
8:1	32144-21	1	Screw				
8:2	68-5140	1	Cap-Wheel, Steering				
10	3241-1	1	Screw-Set, SQH				
11	3256-26	2	Washer-Flat				
12	3274-39	6	Screw-HSBH				
13	105-0457	1	Plate-Friction				
14	47-2890	2	Bushing				
15	3296-23	2	Nut-Lock, NI				
16	105-4313	1	Lever ASM				
17	92-6798	1	Cap-Rod, Tilt				
18	323-29	2	Screw-HH				
19	3256-24	2	Washer-Flat				
20	3290-477	2	Washer-Curved				
21	3296-39	2	Nut-Lock, NI				
22	105-0425	1	Steering Column ASM				
23	83-0810	1	Cover-Steering				
24	3290-277	6	Nut-Speed				

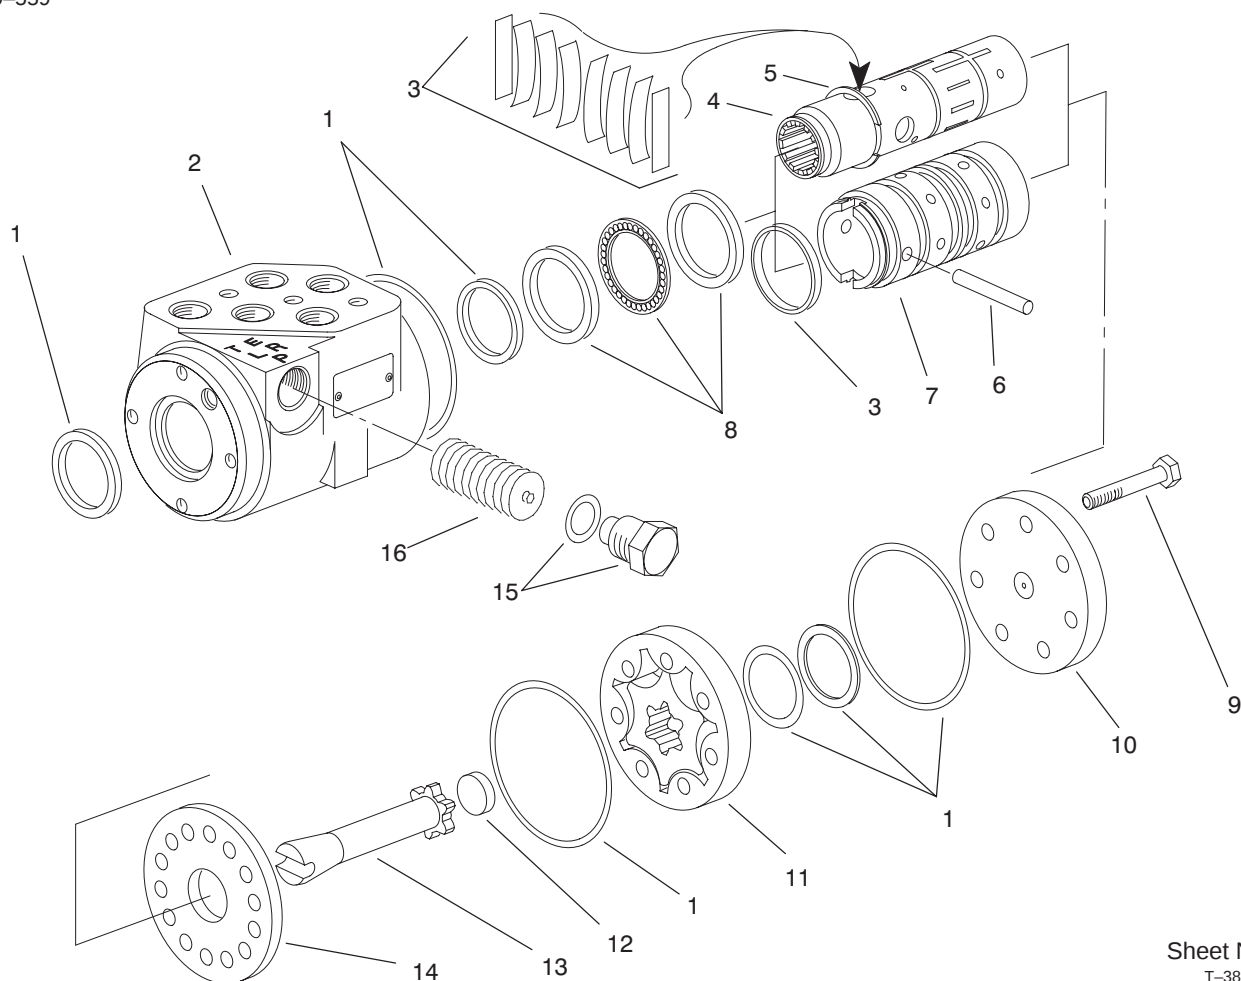


Sheet No.: A3
T-3891

Steering Control Valve Assembly No. 105-0424

Ref. No.	Part No.	Qty.	Description
1	94-4099	1	Seal Kit
☆2		1	Housing
3	94-4095	1	Centering Spring Kit
☆4		1	Spool
5	94-4098	1	Ring-Retaining
6	94-4094	1	Pin
☆7		1	Sleeve
8	92-3839	1	Bearing Kit
9	105-2938	7	Screw-Cap
10	94-4089	1	Cap-End
11	105-2939	1	Gerotor ASM
12	105-2940	1	Spacer
13	94-4093	1	Drive
14	94-4092	1	Plate-Wear
15	99-5511	1	Plug ASM
16	99-5500	1	Valve-Relief

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

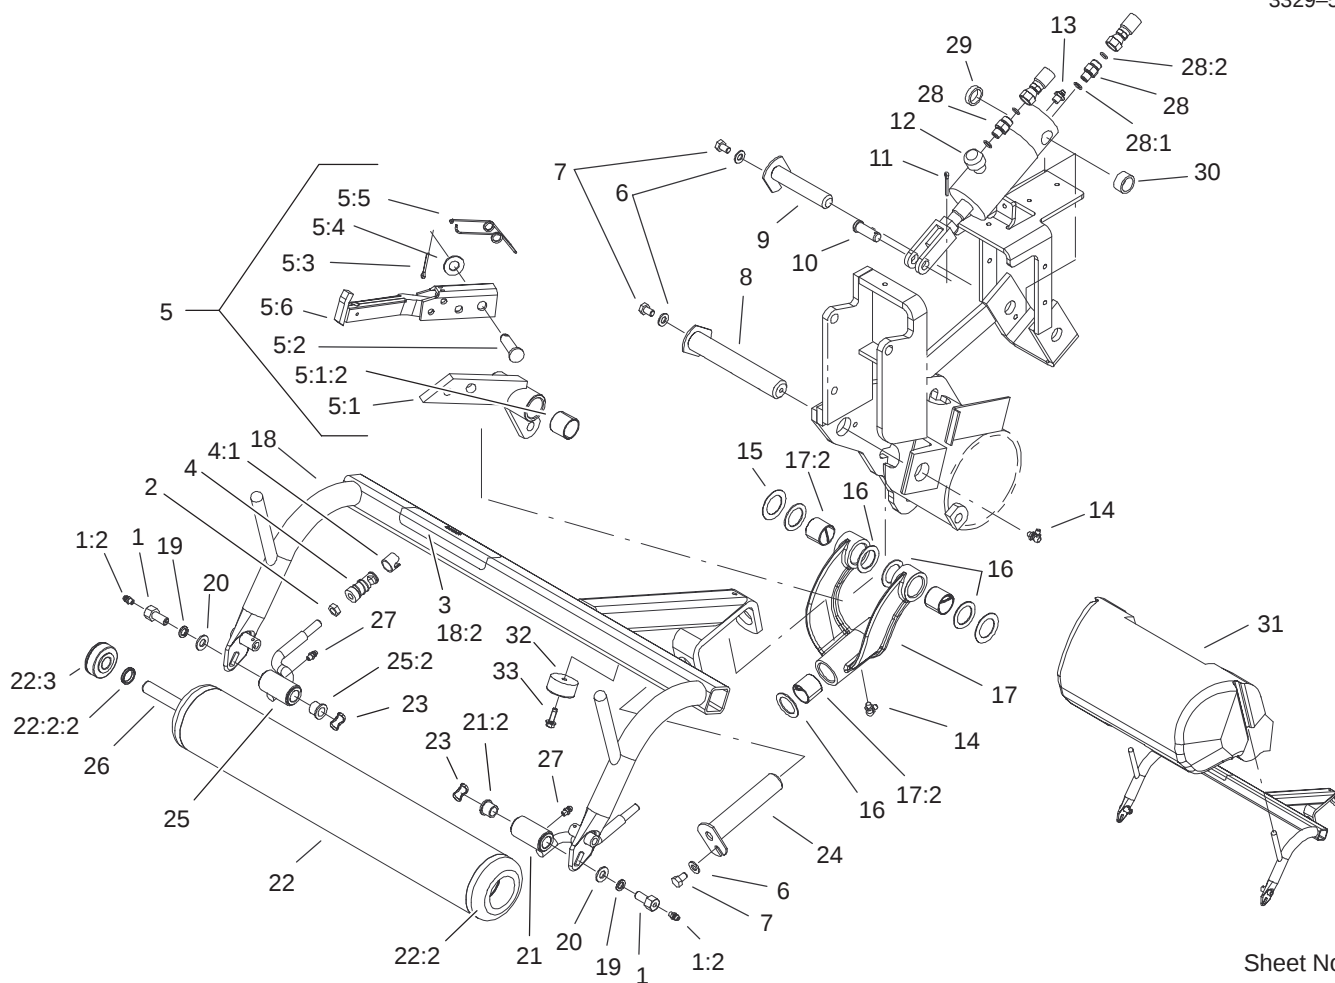


Sheet No.: 6

Right Hand Pull Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	11-0160	2	Roller Shaft Screw ASM	16	10-8110	6	Washer-Thrust
1:2	302-5	1	Fitting-Grease	17	10-7820	1	Pivot Hinge ASM
2	3220-3	2	Nut-Jam	17:2	3-0348	4	Bushing
3	93-8064	1	Decal-Danger, Ce	18	104-2055	1	Right Pull Frame ASM
4	99-1460	2	Ball Joint Receiver ASM	18:2	62-5070	1	Decal-Warning
4:1	99-1461	1	Sleeve-Joint, Ball	19	3253-21	2	Washer-Lock
☆5		1	RH Lift Arm ASM	20	3256-24	2	Washer-Flat
5:1	62-2440	1	Lift Arm ASM	21	92-0586	1	Pull Arm ASM
5:1:2	3-0348	2	Bushing	21:2	3-1506	2	Bushing
5:2	63-8750	1	Pin-Pivot	22	99-4277	1	Roller ASM
5:3	3272-11	1	Pin-Cotter	☆22:2		2	Hub Yoke ASM
5:4	3256-26	1	Washer-Flat	22:2:2	253-83	1	Seal-Oil
5:5	57-7650	1	Spring-Torsion	22:3	251-141	2	Bearing-Ball
5:6	94-5588-01	1	Bar-Lift	23	3290-317	2	Washer-Spring
6	3256-23	3	Washer-Flat	24	10-6090	1	Pin-Pivot
7	322-1	3	Screw-HH	25	92-0585	1	Pull Arm ASM
8	10-6110	1	Pin-Hinge	25:2	3-1506	2	Bushing
9	10-6060	1	Pin-Pivot, Ram	26	21-8470	1	Shaft-Roller
10	283-8	1	Pin-Clevis	27	302-5	2	Fitting-Grease
11	3272-11	1	Pin-Cotter	28	340-92	2	Fitting-HYD, Straight
12	105-3822	1	HYD Cylinder ASM	28:1	237-78	1	O-Ring
13	302-2	1	Fitting-Grease	28:2	237-21	1	O-Ring
14	302-60	2	Fitting-Grease	29	105-3828	1	Spacer
15	5-1226	4	Washer	30	74-3730	1	Spacer-Spindle, Rear
				31	37-8130	3	Basket-Grass
				32	94-4548	2	Bumper-Recessed

☆ Not serviced separately

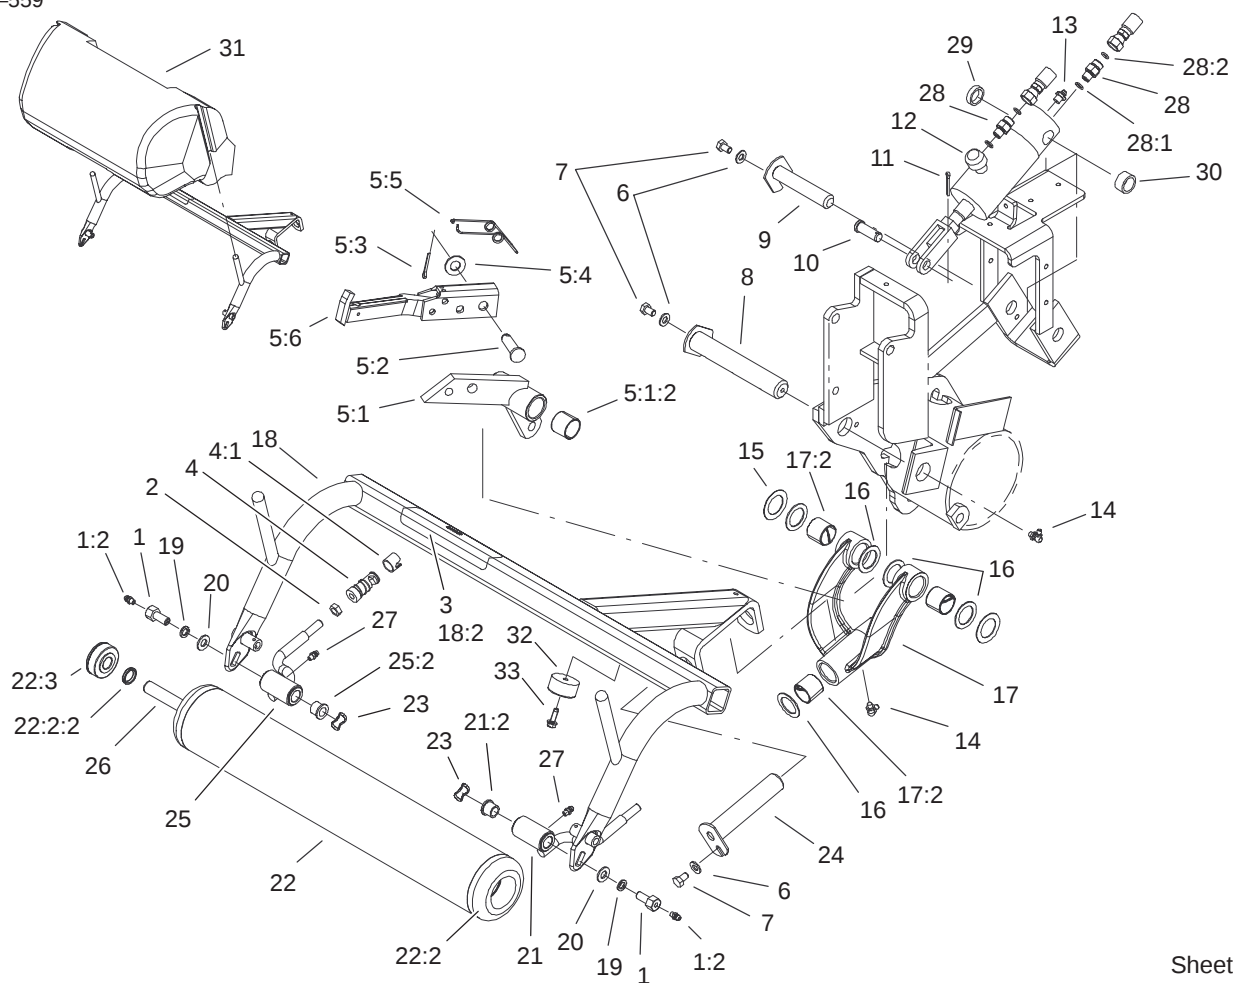


Sheet No.: 6

Right Hand Pull Frame Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
33	32144-44	2	Screw-HWH

Ref. No.	Part No.	Qty.	Description

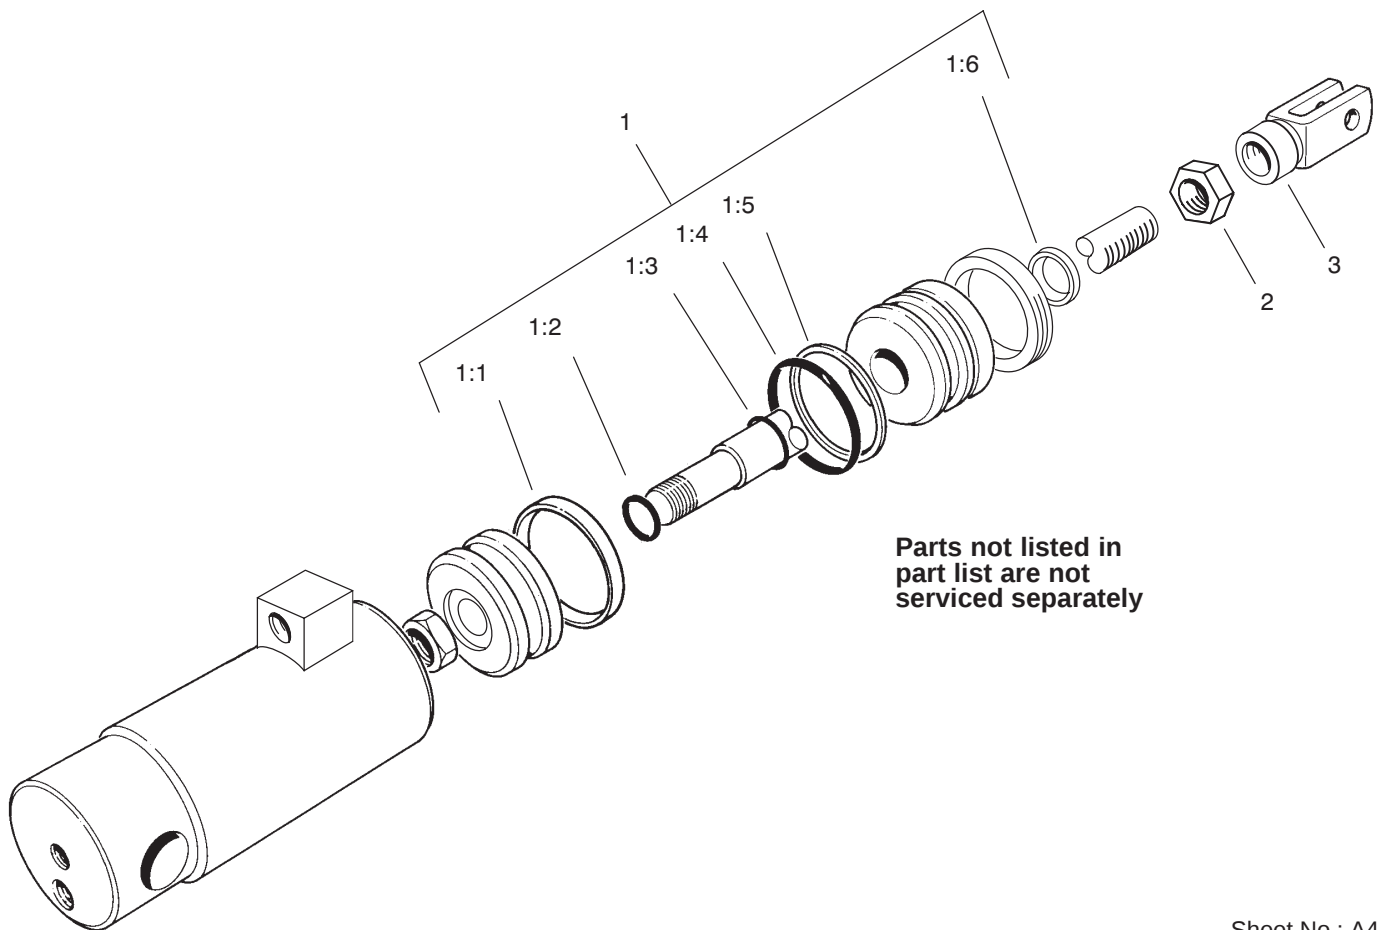


**Parts not listed in
part list are not
serviced separately**

Sheet No.: A4
T-3847

Hydraulic Cylinder Assembly No. 105-3822

Ref. No.	Part No.	Qty.	Description
1	105-3836	1	Seal Kit
☆1:1		1	T-Seal
☆1:2		1	O-Ring
☆1:3		1	Seal-Rod
☆1:4		1	O-Ring
☆1:5		1	Backup
☆1:6		1	Seal-Dust
2	3220-6	1	Nut-Jam
3	76-1850	1	Clevis

☆ Not serviced separately

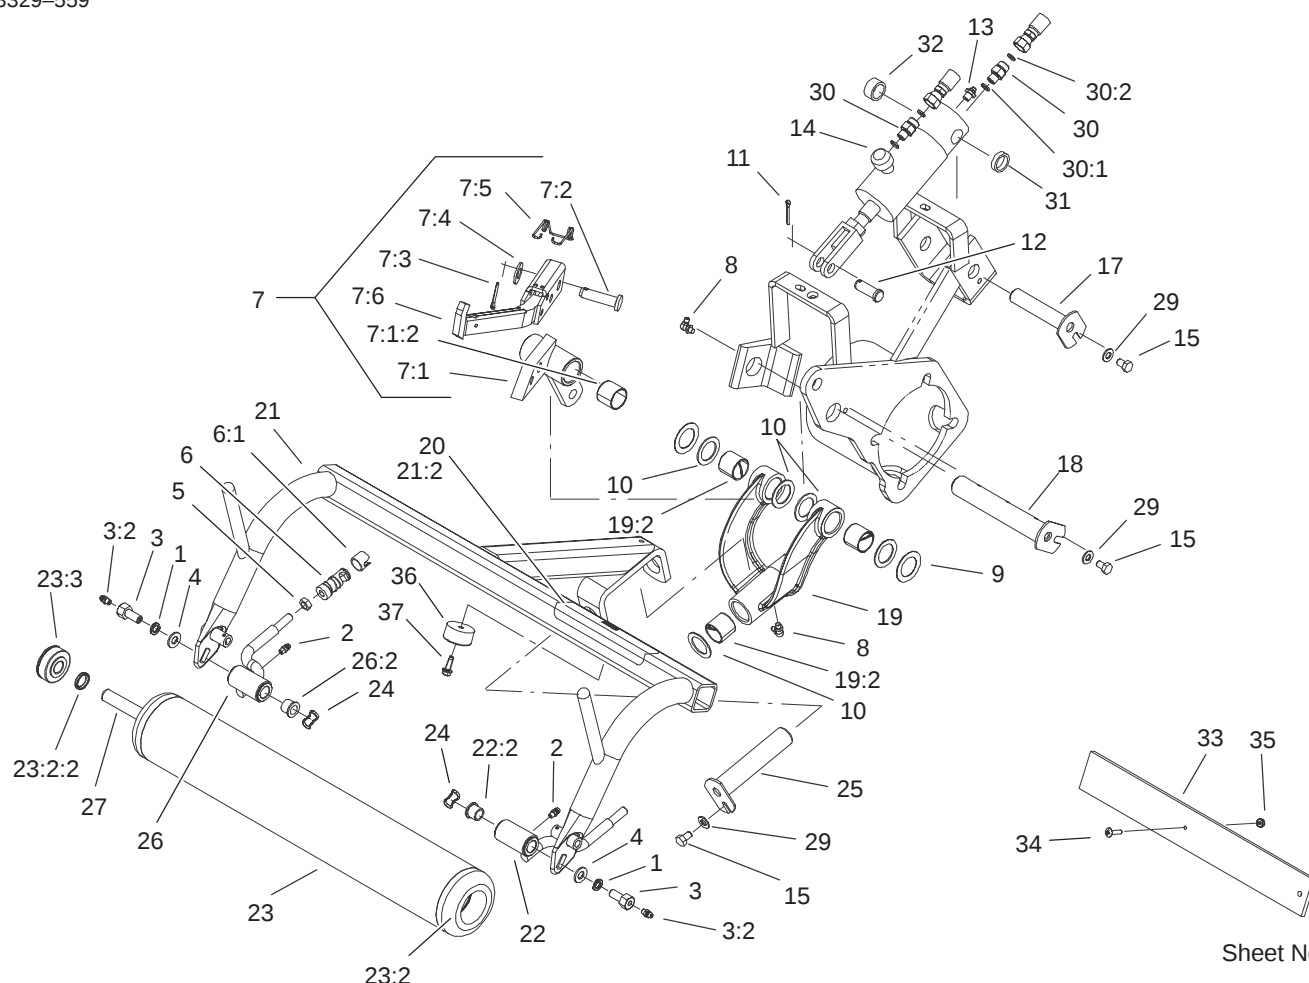


Left Hand Pull Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3253-21	2	Washer-Lock
2	302-5	2	Fitting-Grease
3	11-0160	2	Roller Shaft Screw
3:2	302-5	1	Fitting-Grease
4	3256-24	2	Washer-Flat
5	3220-3	2	Nut-Jam
6	99-1460	2	Ball Joint Receiver
6:1	99-1461	1	Sleeve-Joint, Ball
☆7		1	LH Lift Arm ASM
7:1	62-2460	1	Lift Arm ASM
7:1:2	3-0348	2	Bushing
7:2	63-8750	1	Pin-Pivot
7:3	3272-11	1	Pin-Cotter
7:4	3256-26	1	Washer-Flat
7:5	57-7650	1	Spring-Torsion
7:6	94-5586-01	1	Bar-Lift
8	302-60	2	Fitting-Grease
9	5-1226	4	Washer
10	10-8110	6	Washer-Thrust
11	3272-11	1	Pin-Cotter
12	283-8	1	Pin-Clevis
13	302-2	1	Fitting-Grease
14	105-3822	1	HYD Cylinder ASM
15	322-1	3	Screw-HH

Ref. No.	Part No.	Qty.	Description
17	10-6060	1	Pin-Pivot, Ram
18	10-6110	1	Pin-Hinge
19	10-7820	1	Pivot Hinge ASM
19:2	3-0348	4	Bushing
20	93-8064	1	Decal-Danger, Ce
21	104-2054	1	Left Pull Frame ASM
21:2	62-5070	1	Decal-Warning
22	92-0586	1	Pull Arm ASM
22:2	3-1506	2	Bushing
23	99-4277	1	Roller ASM
☆23:2		2	Hub Yoke ASM
23:2:2	253-83	1	Seal-Oil
23:3	251-141	2	Bearing-Ball
24	3290-317	2	Washer-Spring
25	10-6090	1	Pin-Pivot
26	92-0585	1	Pull Arm ASM
26:2	3-1506	2	Bushing
27	21-8470	1	Shaft-Roller
29	3256-23	3	Washer-Flat
30	340-92	2	Fitting-HYD, Straight
30:1	237-78	1	O-Ring
30:2	237-21	1	O-Ring
31	105-3828	1	Spacer
32	74-3730	1	Spacer-Spindle, Rear
33	65-8320	1	Bar-Gauge
34	32122-22	1	Screw-HH


☆ Not serviced separately

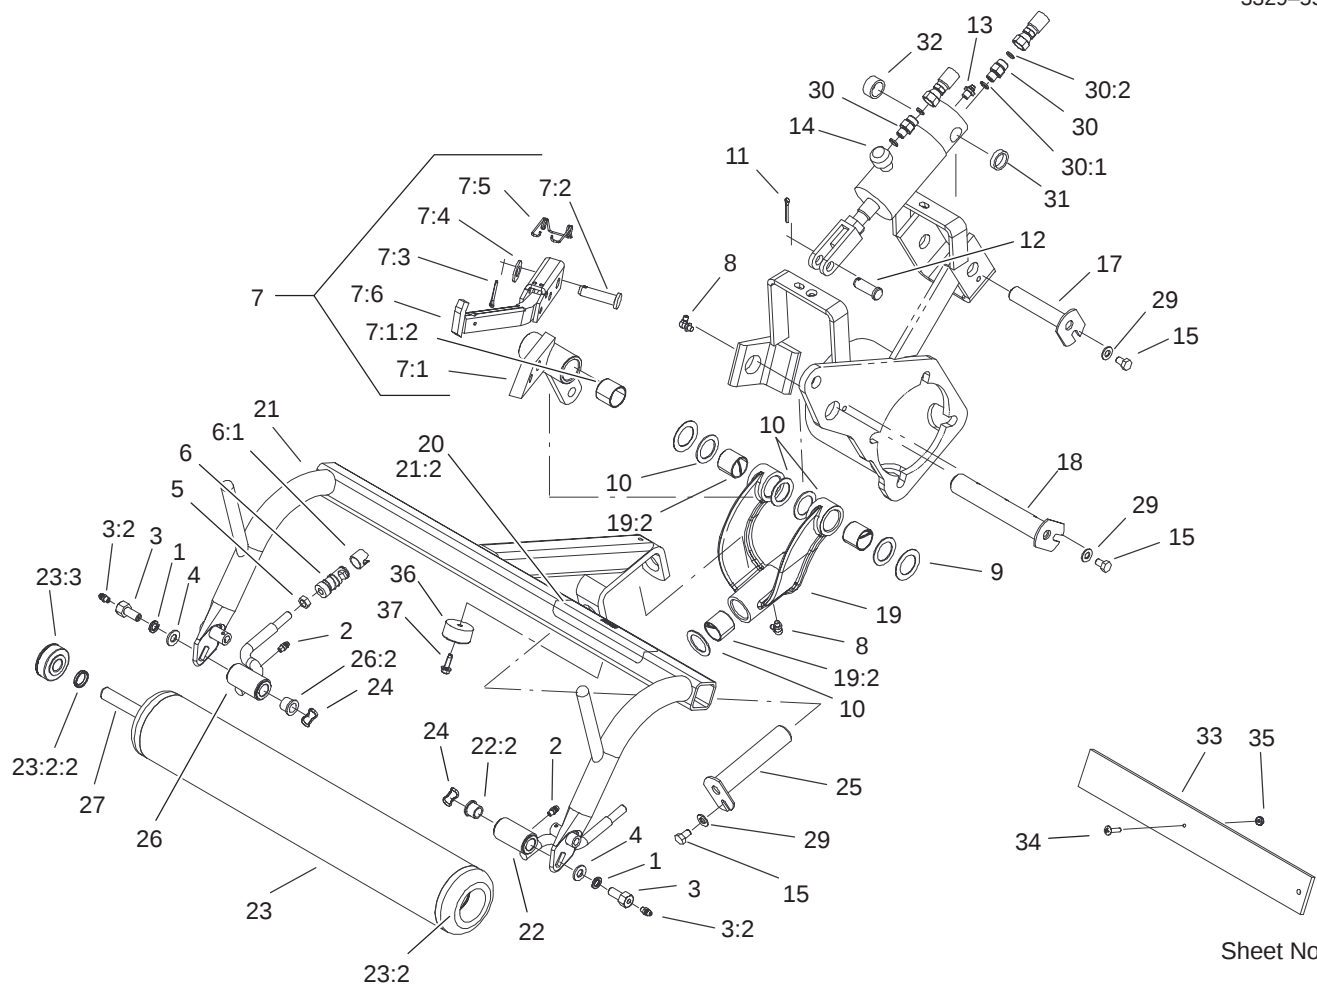

Left Hand Pull Frame Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
35	3219-14	1	Nut-Hex
36	94-4548	2	Bumper-Recessed
37	32144-44	2	Screw-HWH

Ref. No.	Part No.	Qty.	Description

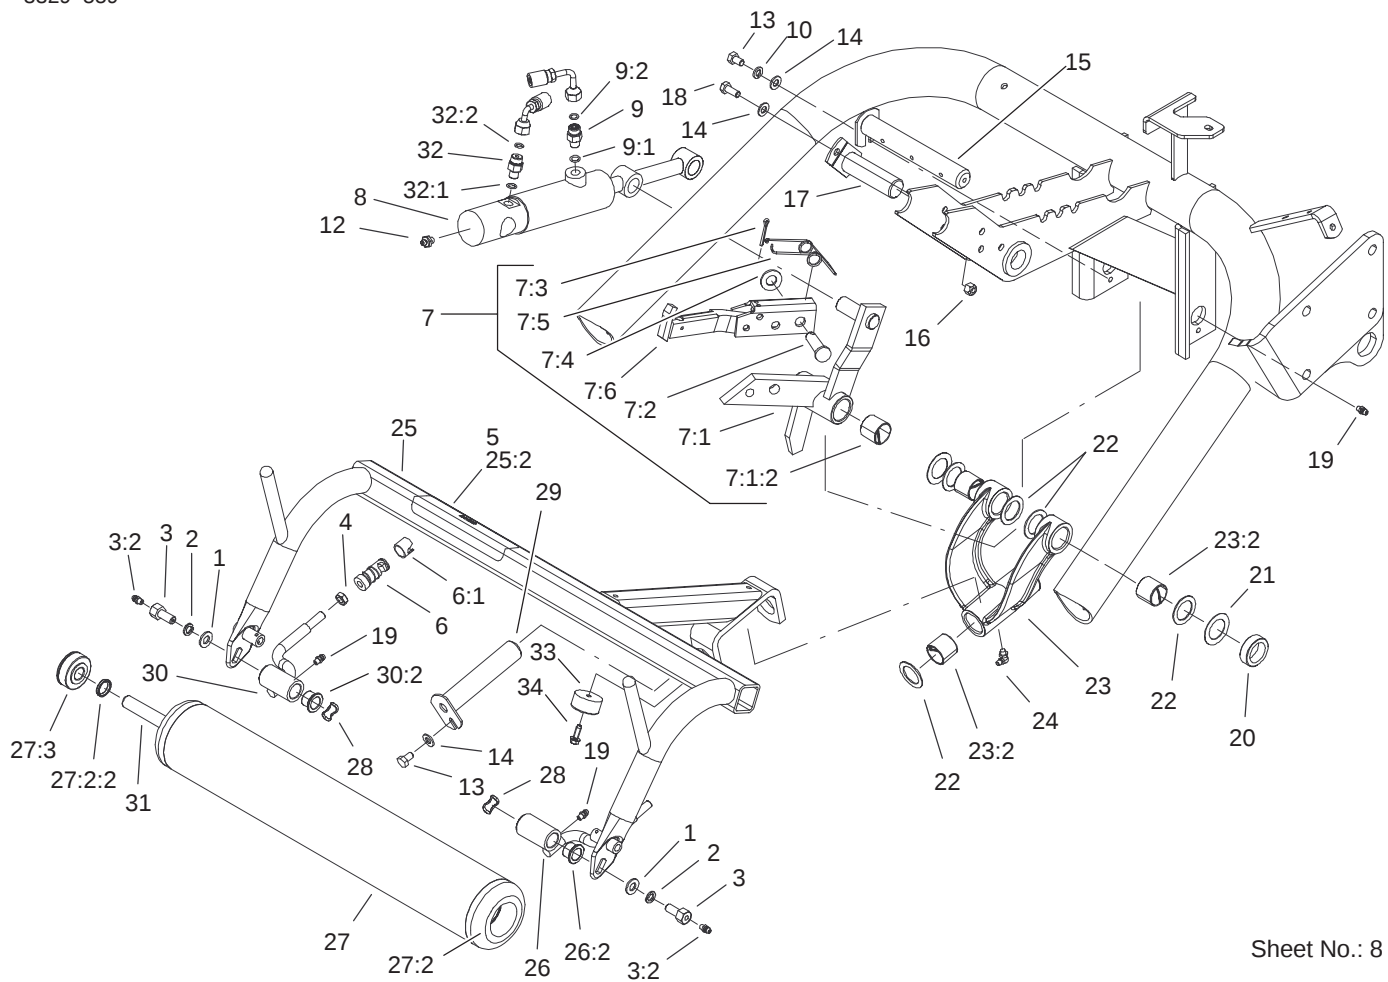


Sheet No.: 8

Center Pull Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	3256-24	2	Washer-Flat
2	3253-21	2	Washer-Lock
3	11-0160	2	Roller Shaft Screw
3:2	302-5	1	Fitting-Grease
4	3220-3	2	Nut-Jam
5	93-8064	1	Decal-Danger, Ce
6	99-1460	2	Ball Joint Receiver
6:1	99-1461	1	Sleeve-Joint, Ball
☆7		1	Center Lift Arm ASM
7:1	68-5380	1	Center Lift Arm ASM
7:1:2	3-0348	2	Bushing
7:2	63-8750	1	Pin-Pivot
7:3	3272-11	1	Pin-Cotter
7:4	3256-26	1	Washer-Flat
7:5	57-7650	1	Spring-Torsion
7:6	62-2420-01	1	Bar-Lift
8	105-3823	1	Hydraulic Cylinder
			ASM
9	340-92	1	Fitting-HYD, Straight
9:1	237-78	1	O-Ring
9:2	237-21	1	O-Ring
10	3253-4	1	Washer-Lock
12	302-2	1	Fitting-Grease
13	322-1	2	Screw-HH

Ref. No.	Part No.	Qty.	Description
14	3256-23	3	Washer-Flat
15	27-2550	1	Pin-Hinge
16	3296-29	1	Nut-Lock, NI
17	68-5560	1	Pin-Cylinder, Pivot
18	322-3	1	Screw-HH
19	302-5	3	Fitting-Grease
20	93-2384	1	Spacer-Carrier
21	5-1226	4	Washer
22	10-8110	6	Washer-Thrust
23	105-0452	1	Pivot Hinge ASM
23:2	3-0348	4	Bushing
24	302-60	1	Fitting-Grease
25	105-0451	1	Rear Pull Frame ASM
25:2	62-5070	1	Decal-Warning
26	92-0586	1	Pull Arm ASM
26:2	3-1506	2	Bushing
27	99-4277	1	Roller ASM
☆27:2		2	Hub Yoke ASM
27:2:2	253-83	1	Seal-Oil
27:3	251-141	2	Bearing-Ball
28	3290-317	2	Washer-Spring
29	10-6090	1	Pin-Pivot
30	92-0585	1	Pull Arm ASM
30:2	3-1506	2	Bushing
31	21-8470	1	Shaft-Roller
32	95-1639	1	Fitting-HYD

☆ Not serviced separately

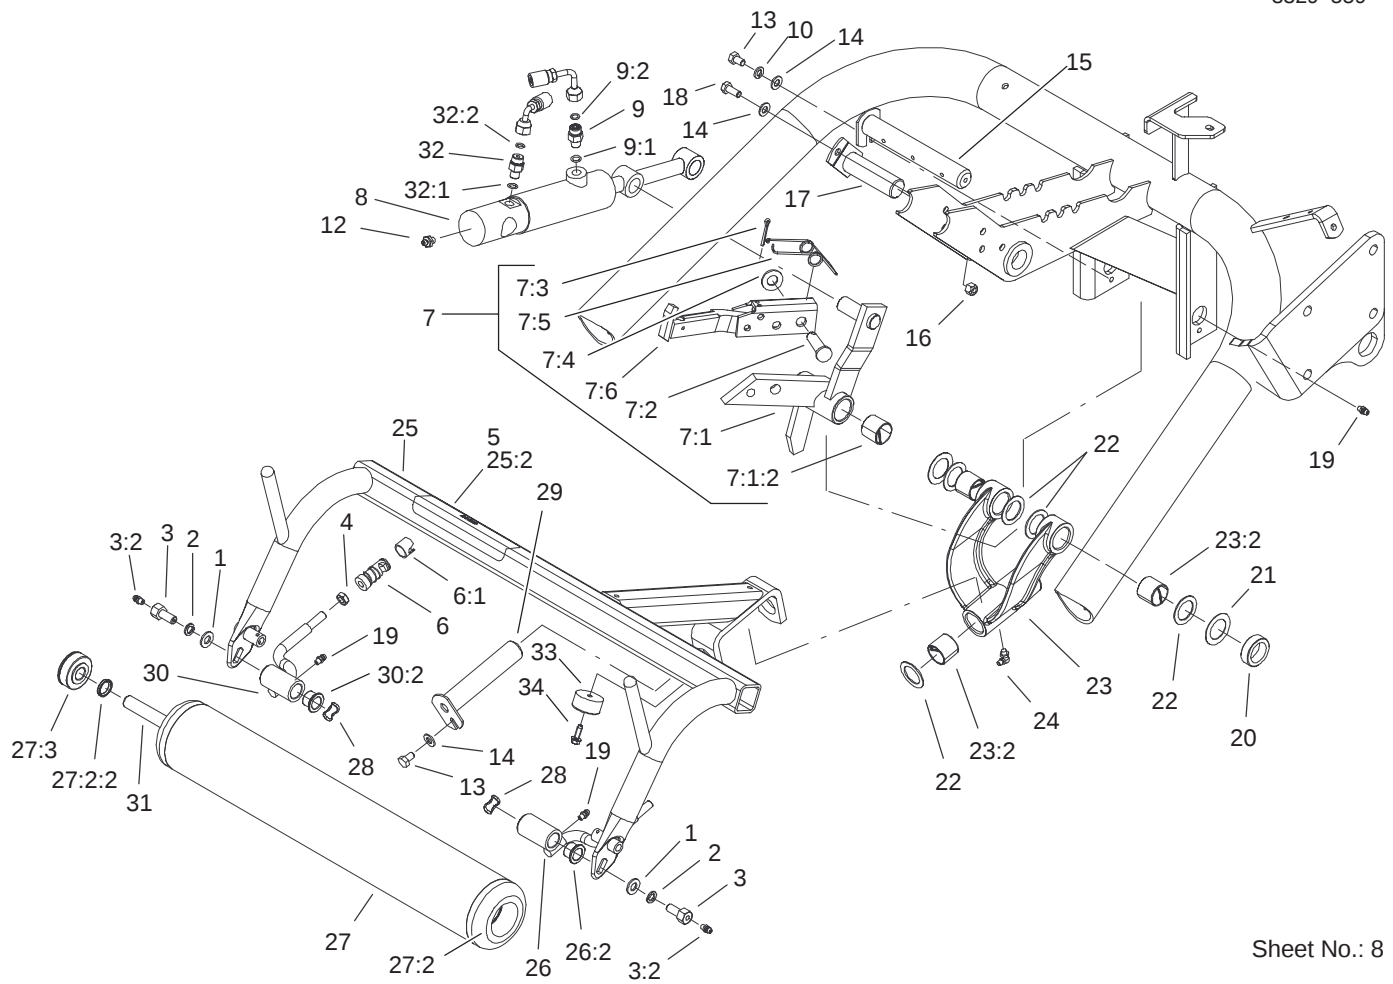


Sheet No.: 8

Center Pull Frame Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
32:1	237-78	1	O-Ring
32:2	237-21	1	O-Ring
33	94-4548	2	Bumper-Recessed
34	32144-44	2	Screw-HWH

Ref. No.	Part No.	Qty.	Description

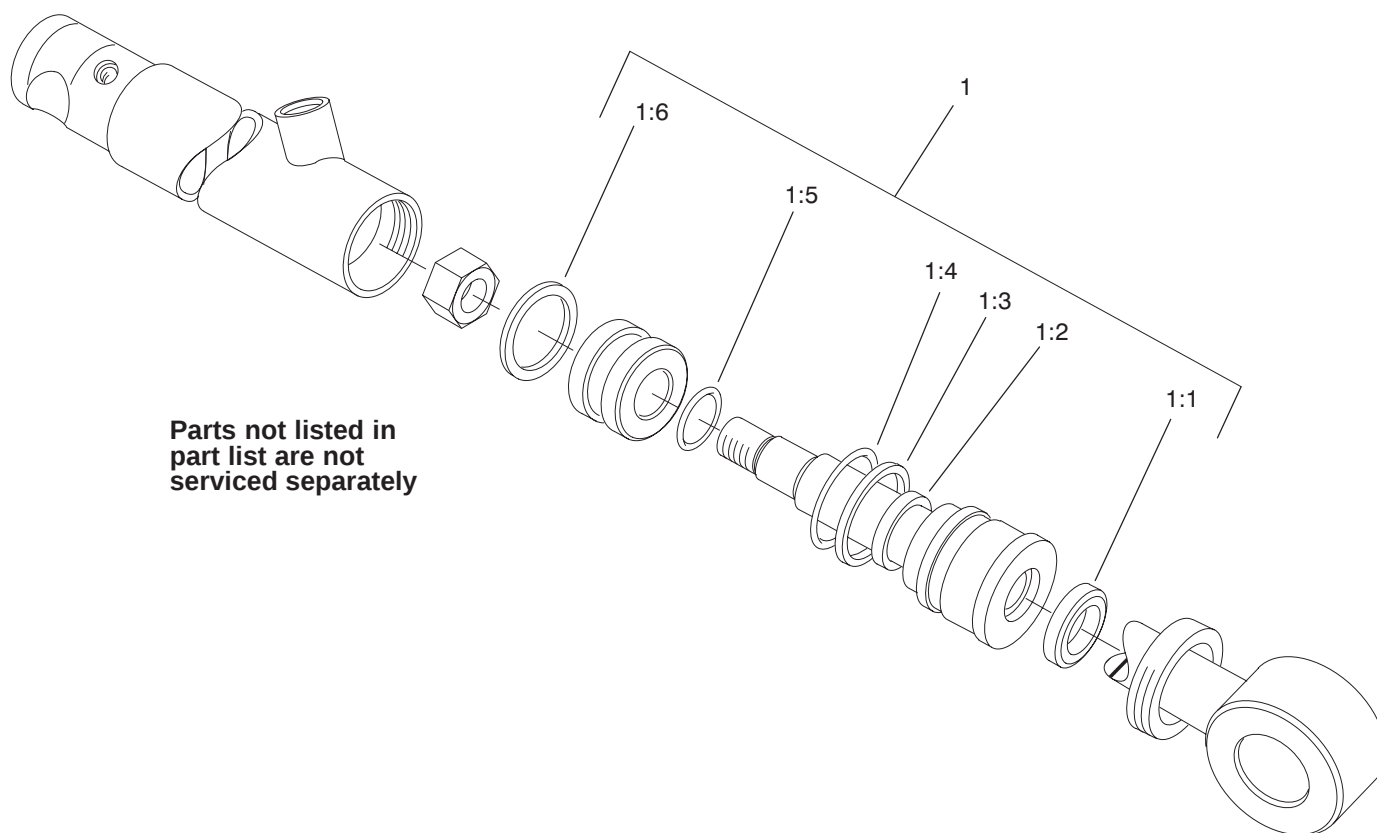

**Parts not listed in
part list are not
serviced separately**

Sheet No.: A5


T-3876

Hydraulic Cylinder Assembly No. 105-3823

Ref. No.	Part No.	Qty.	Description
1	105-3835	1	Seal Kit
☆1:1		1	Seal-Dust
☆1:2		1	Seal-Rod
☆1:3		1	Backup
☆1:4		1	O-Ring
☆1:5		1	O-Ring
☆1:6		1	T-Seal

Ref. No.	Part No.	Qty.	Description


☆ Not serviced separately

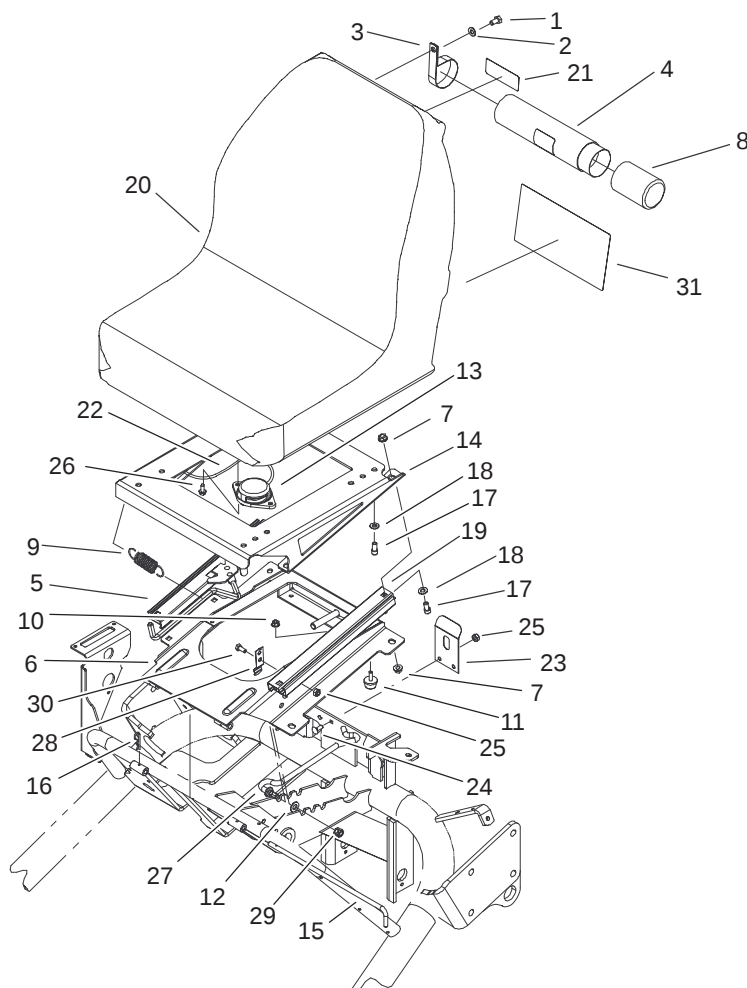

Sheet No.: 9

Seat Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	322-2	2	Screw-HH	27	106-4643	1	Rod-Prop, Seat
2	3256-23	2	Washer-Flat	28	68-5310	1	Clip-Rod, Prop
3	2412-133	2	R-Clamp	29	3296-39	1	Nut-Lock, NI
4	104-7050	1	Housing-Manual	30	321-3	2	Screw-HH
5	105-8265	1	Adjuster-Seat	31	105-8293	1	Decal-French
6	105-0464-03	1	Seat Plate ASM	31	105-8292	1	Decal-Spanish
7	32128-25	8	Nut-Flange	31	105-8291	1	Decal-Service
8	104-7048	1	Cap-Housing	31	105-8294	1	Decal-German
9	88-6330	1	Spring-Extension	31	105-8295	1	Decal-Swedish
10	32128-33	2	Nut-HF	31	105-8296	1	Decal-Italian
11	1-523420	2	Bumper	31	105-8300	1	Decal-Danish
12	3256-24	1	Washer-Flat	31	105-8299	1	Decal-Finnish
13	92-6282	1	Switch-Seat	31	105-8298	1	Decal-Norwegian
14	105-0466-03	1	Plate-Seat, Upper	31	105-8297	1	Decal-Portuguese
15	105-0483	1	Rod-Pivot, Seat	31	105-8302	1	Decal-Japan
16	3290-467	1	Pin-Hair	31	105-8301	1	Decal-Dutch
17	3274-12	8	Screw-HSH				
18	3256-23	8	Washer-Flat				
19	51-0780	1	Slider-Seat				
20	100-3187	1	Seat ASM				
21	93-6686	1	Decal-Oil, HYD				
22	105-4319	1	Harness-Wire, Seat				
23	66-2630	1	Latch-Seat				
24	3229-1	2	Screw-CARR				
25	3296-16	4	Nut-Lock, NI				
26	32144-10	2	Screw-HWH				

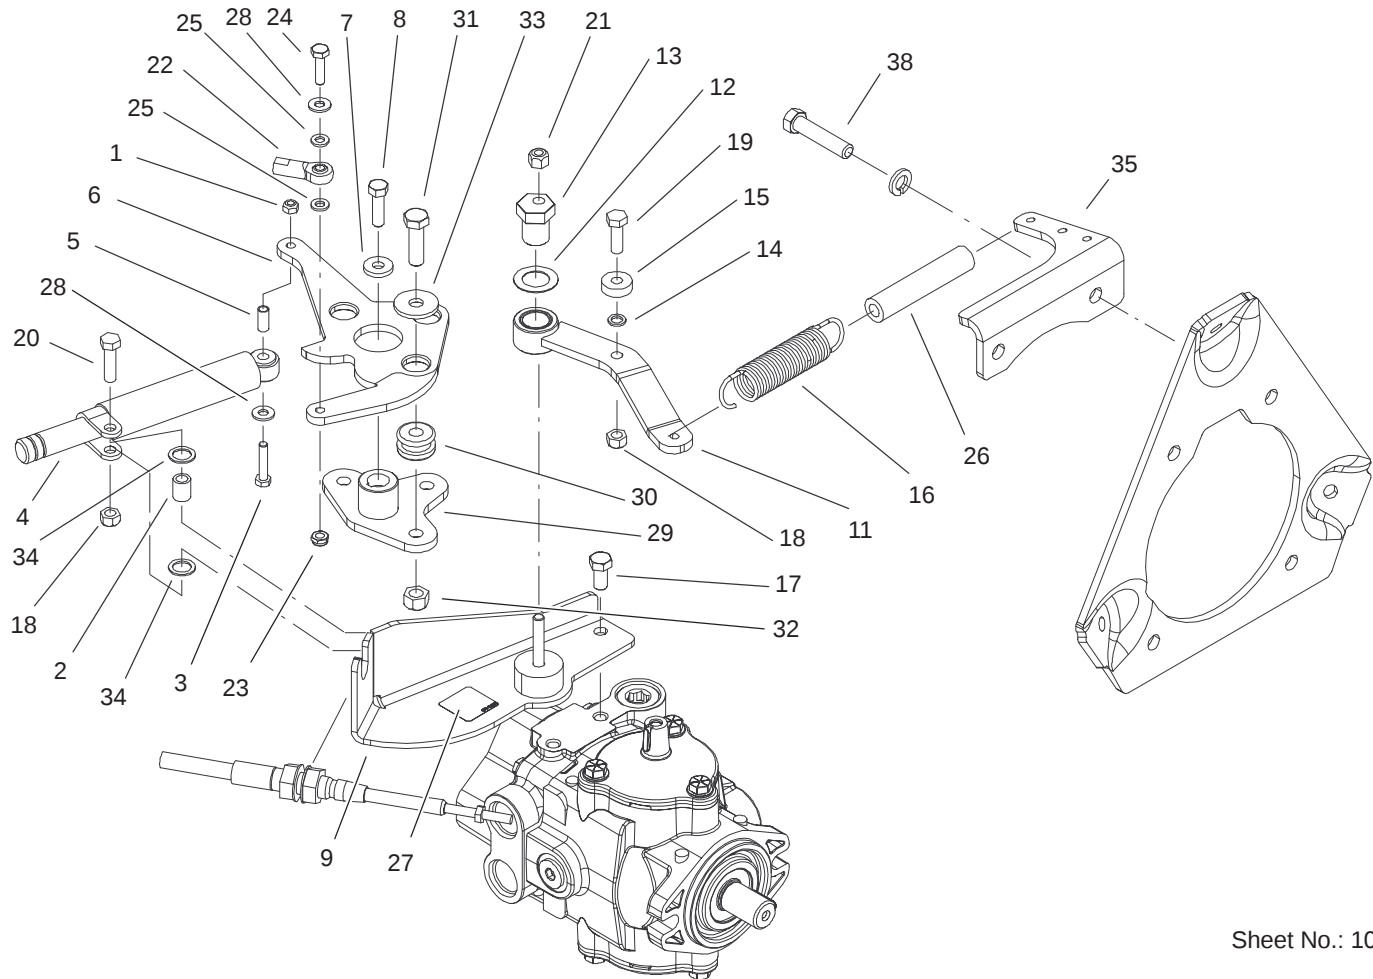


Sheet No.: 10

Neutral System Assembly

Ref. No.	Part No.	Qty.	Description
1	33023-00	1	Nut-Lock
2	94-8197	1	Tube-Pivot
3	33113-035	1	Screw-HH
4	76-8870	1	Lever Damper ASM
5	94-1312	1	Spacer-Pivot
6	105-5477-03	1	Lever-Pump
7	88-7200	1	Washer-Flat
8	3210-6	1	Screw-HH
9	105-5475	1	Cable Support ASM
11	105-4302	1	Neutral Arm ASM
12	3-6498	1	Washer-Thrust
13	93-2111	1	Stud-Traction
14	75-5470	1	Spacer-Bearing
15	251-259	1	Bearing-Ball
16	94-1369	1	Spring-Extension
17	323-4	2	Screw-HH
18	33024-00	2	Nut-Lock
19	33114-025	1	Screw-HH
20	33114-030	1	Screw-HH
21	3296-29	1	Nut-Lock, NI
22	2411-41	1	Joint-Ball
23	3296-56	1	Nut-Lock, NI
24	321-7	1	Screw-HH
25	33093-00	2	Washer-Flat
26	99-4251	1	Hose-Dampener
27	93-9051	1	Decal-Bolt, Eccentric

Ref. No.	Part No.	Qty.	Description
28	3256-22	2	Washer-Flat
29	94-3486	1	Plate
30	63-9750	3	Mount
31	33115-035	3	Screw-HH
32	33025-00	3	Nut-Lock
33	2844	3	Washer
34	94-8196	2	Washer-Nylon
35	105-4307-03	1	Bracket-Spring
38	324-8	2	Screw-HH

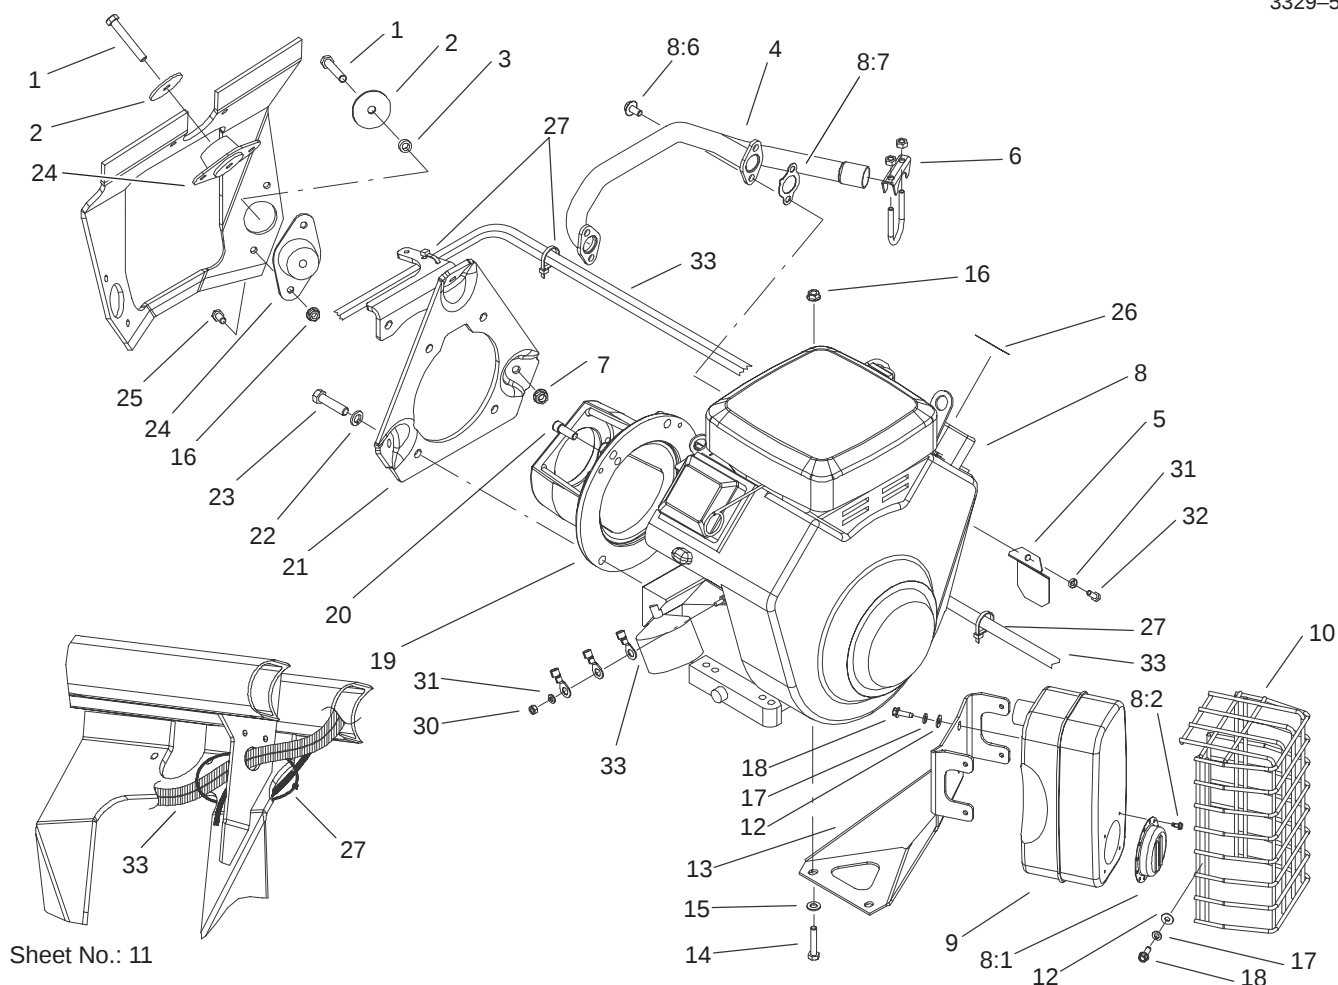


Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	323-12	3	Screw-HH
2	83-1040	3	Washer-Flat
3	83-1050	2	Spacer
4	83-1080	1	Exhaust Manifold ASM
5	83-2310	1	Shield-Regulator
6	2112-11	1	Clamp-Muffler
7	3290-357	3	Nut-HHF
8	106-4618	1	Engine-18hp, Vanguard
☆8:1		1	Deflector-Exhaust
☆8:2		4	Screw-HH
☆8:6		4	Screw-HHF
☆8:7		2	Gasket-Manifold, Exhaust
9	98-0616	1	Muffler ASM
10	83-1400-03	1	Shield-Muffler
12	3256-1	8	Washer-Flat
13	83-1630-03	1	Bracket-Support, Muffler
14	322-8	2	Screw-HH
15	3256-23	2	Washer-Flat
16	32128-20	8	Nut-HF
17	3253-3	8	Washer-Lock
18	49-2040	8	Screw-Tapping
19	83-1060-03	1	Adapter-Pump
20	3274-7	2	Screw-HSH

Ref. No.	Part No.	Qty.	Description
21	85-8120-03	1	Plate-Mount, Engine
22	3253-6	4	Washer-Lock
23	324-7	2	Screw-HH
24	83-1030	3	Mount-Engine
25	322-3	6	Screw-HH
26	93-8069	1	Decal-Surface, Hot
27	3290-379	4	Tie-Cable
30	43-2830	1	Nut-Hex
31	43-5930	2	Washer-Spring
32	33113-016	1	Screw-HH
33	105-8276	1	Harness-Wire, Engine
*33:1	106-4642	1	Harness-Wire, Fusible Link

☆ Not serviced separately

* Not illustrated

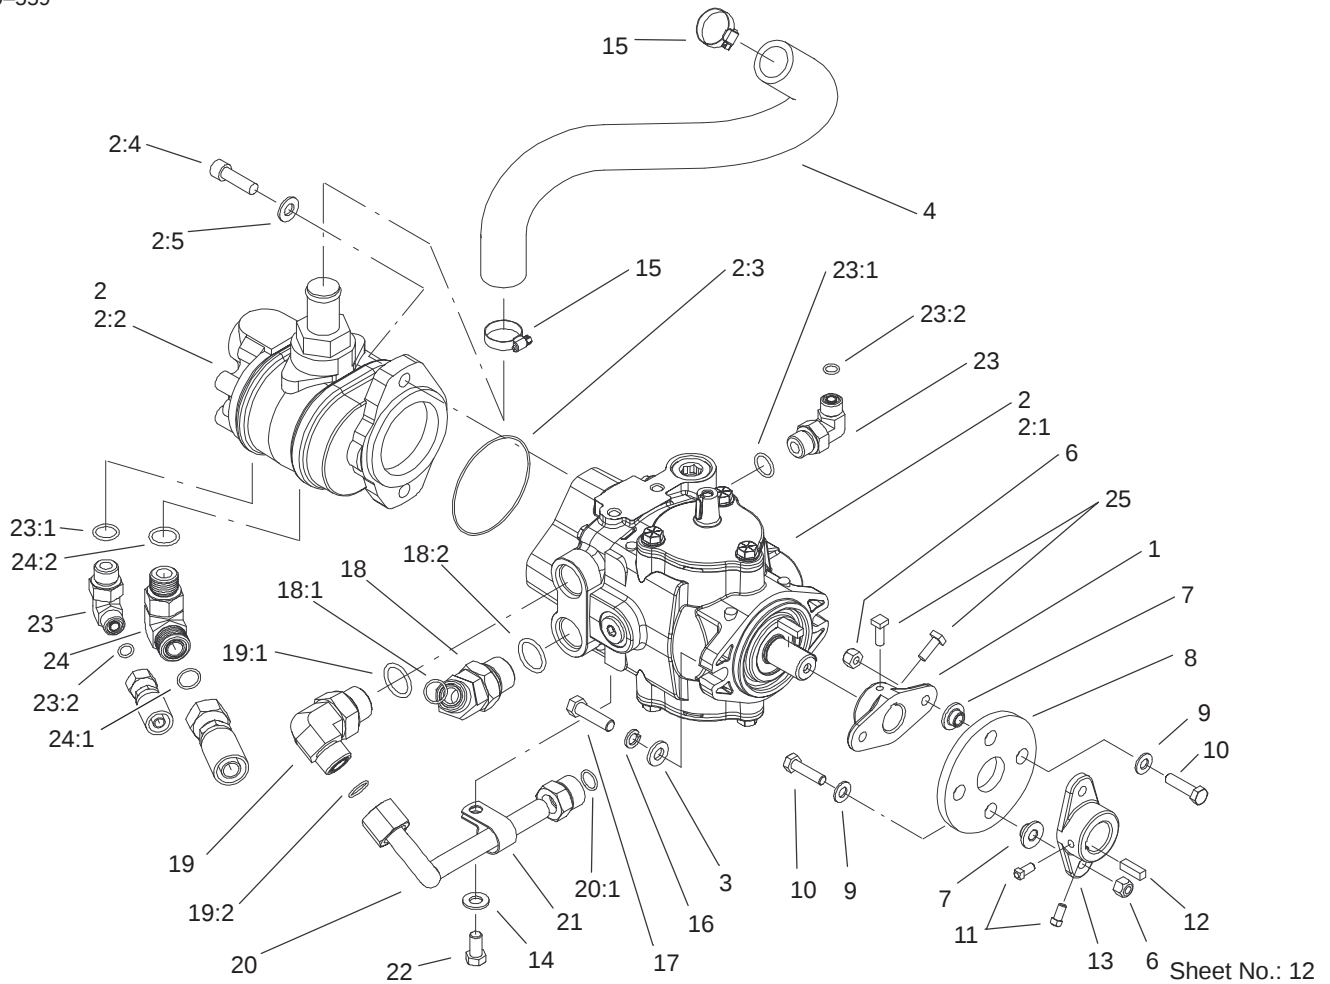


Sheet No.: 12

Hydrostat and Gear Pump Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	93-2589	1	Hub-Pump
2	105-0453	1	Hydrostat/Gear Pump ASM
2:1	105-0494	1	Hydrostat ASM
2:2	104-7737	1	Gear Pump ASM
2:3	60-3520	1	O-Ring
2:4	3274-1	2	Screw-HSH
2:5	3256-24	2	Washer-Flat
3	100-4852	2	Washer-Hardened
4	105-8285	1	Hose-Inlet, Pump
6	3296-29	4	Nut-Lock, NI
7	27-6600	4	Spacer-Coupling
8	44-2230	1	Coupling-Rubber
9	3256-3	4	Washer-Flat
10	322-6	4	Screw-HH
11	3241-2	2	Screw-SQH
12	10-7070	1	Key-Square
13	27-1960	1	Hub-Engine
14	3256-24	1	Washer-Flat
15	2412-34	2	Clamp-Hose
16	3253-21	2	Washer-Lock
17	323-29	2	Screw-HH
18	340-156	1	Fitting-HYD
18:1	237-65	1	O-Ring
18:2	237-81	1	O-Ring
19	340-139	1	Fitting-HYD, 90°

Ref. No.	Part No.	Qty.	Description
19:1	237-81	1	O-Ring
19:2	237-65	1	O-Ring
20	105-8307	1	Tube-HYD, Traction
20:1	237-65	1	O-Ring
21	2412-41	1	Clamp
22	323-4	1	Screw-HH
23	340-18	2	Fitting-HYD, 90°
23:1	237-79	1	O-Ring
23:2	237-22	1	O-Ring
24	340-17	1	Fitting-HYD, 90°
24:1	237-65	1	O-Ring
24:2	237-80	1	O-Ring
25	3241-6	2	Screw-SQH

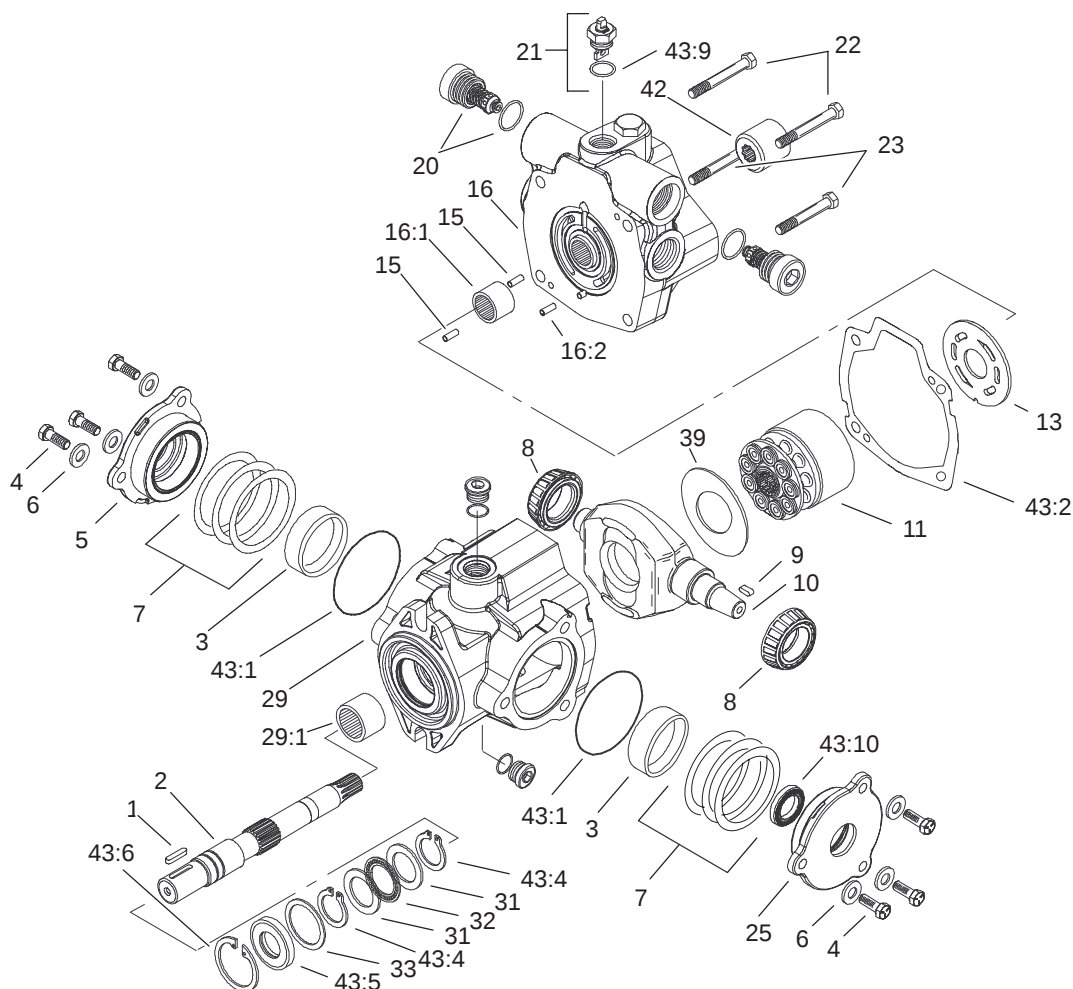


Sheet No.: A6

T-2357

Hydrostat Assembly No. 105-0494

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-3645	1	Key	39	98-4635	1	Insert-Plate, Cam
2	94-6359	1	Shaft-Drive	42	74-9040	1	Coupler
3	104-4046	2	Bearing-Cup	43	105-3844	1	Seal Repair Kit
4	98-4640	6	Screw-Cap	43:1	100-3179	2	O-Ring
5	98-4644	1	Plate-Cover	43:2	33-4930	1	Gasket-Housing
6	105-9762	6	Washer	43:4	32151-29	2	Ring-Retaining
7	100-3182	2	Shim Kit	43:5	104-4861	1	Seal-Shaft
8	98-4639	2	Bearing-Cone	43:6	32151-13	1	Ring-Retaining
9	94-3646	1	Key	☆43:9		1	O-Ring
10	100-3175	1	Camplate	☆43:10		1	Seal-Shaft
11	76-6070	1	Rotating Kit				
13	100-3180	1	Valve-Plate				
15	76-6150	2	Pin-Dowel				
16	105-3813	1	Endcover Sub ASM				
16:1	94-6368	1	Bearing				
☆16:2		1	Pin-Roll				
20	105-3812	2	Valve-Check				
21	105-3811	1	Valve-Bypass				
22	76-6170	2	Capscrew				
23	76-6160	2	Capscrew				
25	98-4645	1	Plate-Cover				
29	100-3176	1	Housing ASM				
29:1	94-6363	1	Bearing				
31	252-71	2	Washer-Thrust				
32	252-66	1	Bearing-Thrust				
33	33-3720	1	Washer				

☆ Not serviced separately

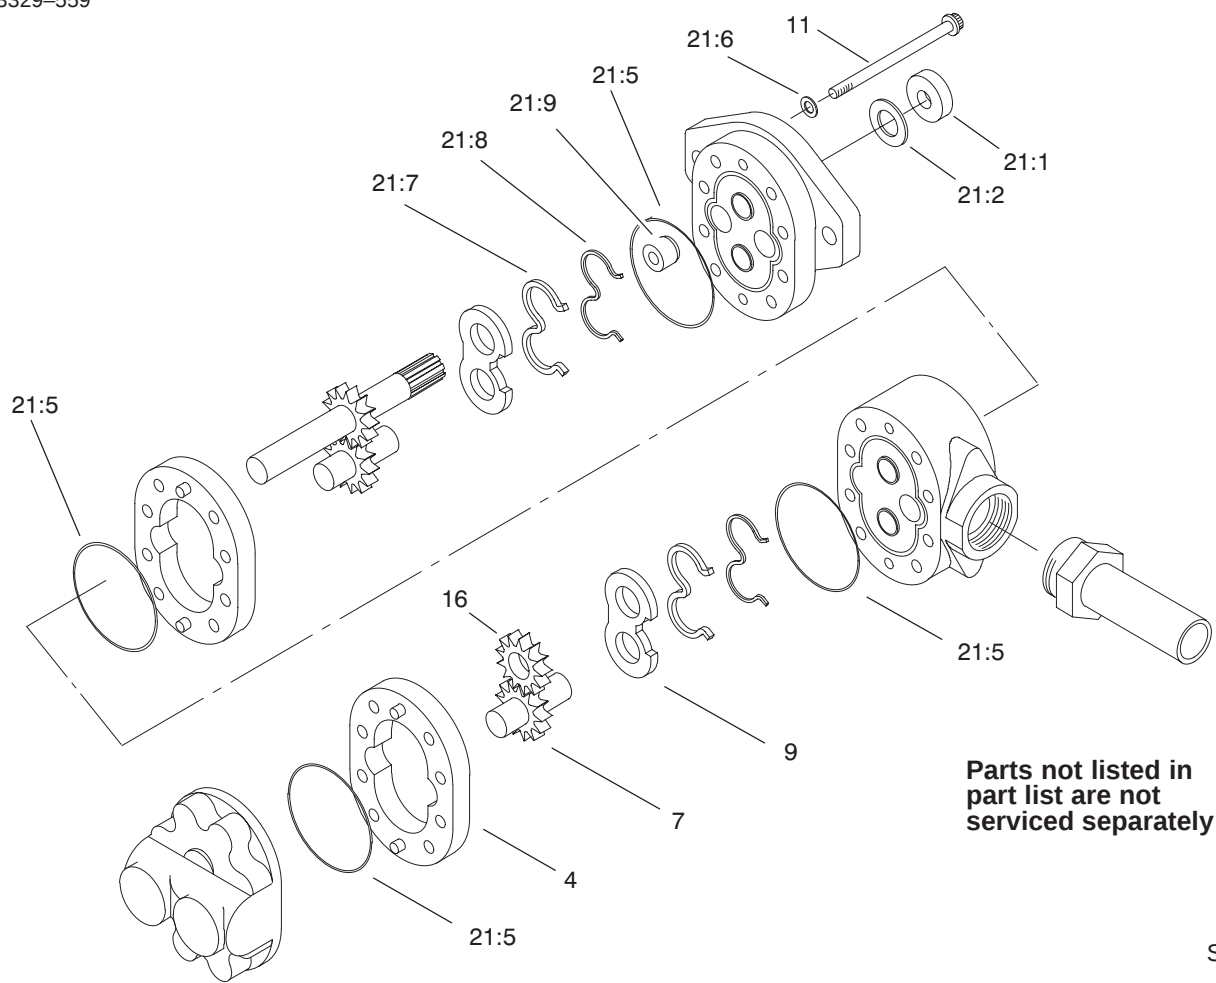

Sheet No.: A7


T-3483

Gear Pump Assembly No. 104-7737

Ref. No.	Part No.	Qty.	Description
4	95-4364	1	Body
7	95-4366	1	Gear-Idler
9	95-4368	2	Plate-Wear
11	94-8158	8	Screw-Cap
16	95-4373	1	Gear-Fit, Slip
21	94-8161	1	Seal Repair Kit
21:1	49-2640	1	Seal-Shaft
21:2	60-5890	1	Washer
☆21:5		4	O-Ring
21:6	94-8160	4	Washer
21:7	95-4369	2	Seal
21:8	95-4367	2	Gasket
21:9	94-3011	1	Plug

Ref. No.	Part No.	Qty.	Description


☆ Not serviced separately

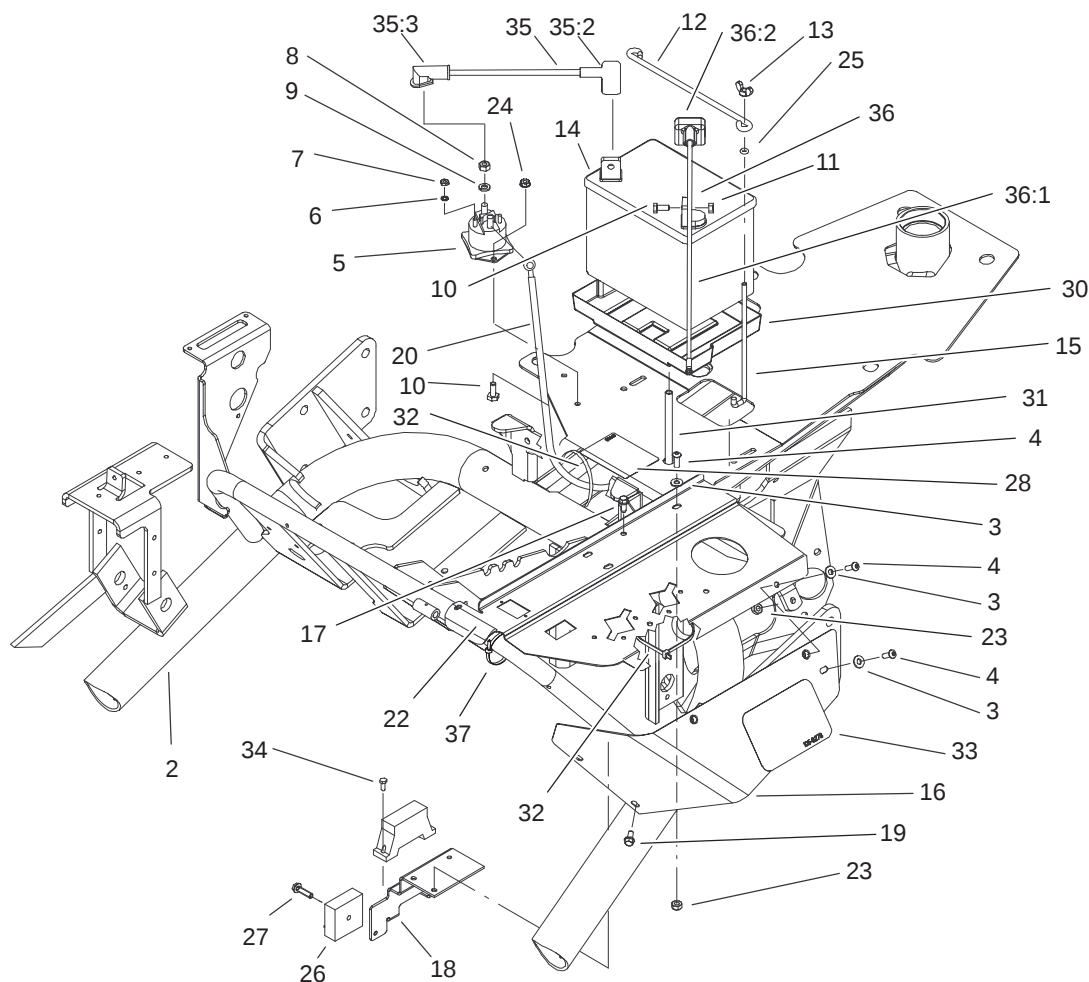

Sheet No.: 13

Frame and Battery Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	105-0401-01	1	Frame ASM	26	92-2538	1	Timer-Plug, Glow
3	3256-22	4	Washer-Flat	27	32144-86	1	Screw-HH
4	3274-69	4	Screw-HSBH	28	93-7276	1	Decal-Danger
5	28-4210	1	Solenoid	30	106948	1	Tray-Battery
6	3254-1	2	Washer-Lock, Int	31	104-2061	1	Tube-Drain, Battery
7	3219-14	2	Nut-Hex	32	3290-379	2	Tie-Cable
8	3218-13	2	Nut-Jam	33	105-8278	1	Decal
9	3253-4	2	Washer-Lock	34	32144-1	2	Screw-Taptite
10	321-3	4	Screw-HH	35	83-2420	1	Positive Cable ASM
11	3217-5	2	Nut-Hex	35:2	28-8080	1	Boot-Terminal
12	100-6434	1	Rod-Battery, Hold Down	35:3	83-2430	1	Boot-Terminal
13	32103-22	2	Nut-Wing	36	98-2165	1	Negative Cable ASM
14	104-8162	1	Battery	36:1	83-1150	1	Engine Ground Wire ASM
15	100-6435	2	Post-Battery	36:2	98-0603	1	Boot-Terminal
16	105-5411	1	Valve Cover Shield ASM	37	3290-378	1	Tie-Cable
17	32144-10	1	Screw-HWH				
18	105-4310-01	1	Bracket-Fuse				
19	32104-116	2	Screw				
20	98-2161	1	Cable-Battery, Positive				
22	105-0499-03	1	Panel-Control				
23	3296-16	2	Nut-Lock, NI				
24	32149-2	2	Nut				
25	237-143	2	O-Ring				

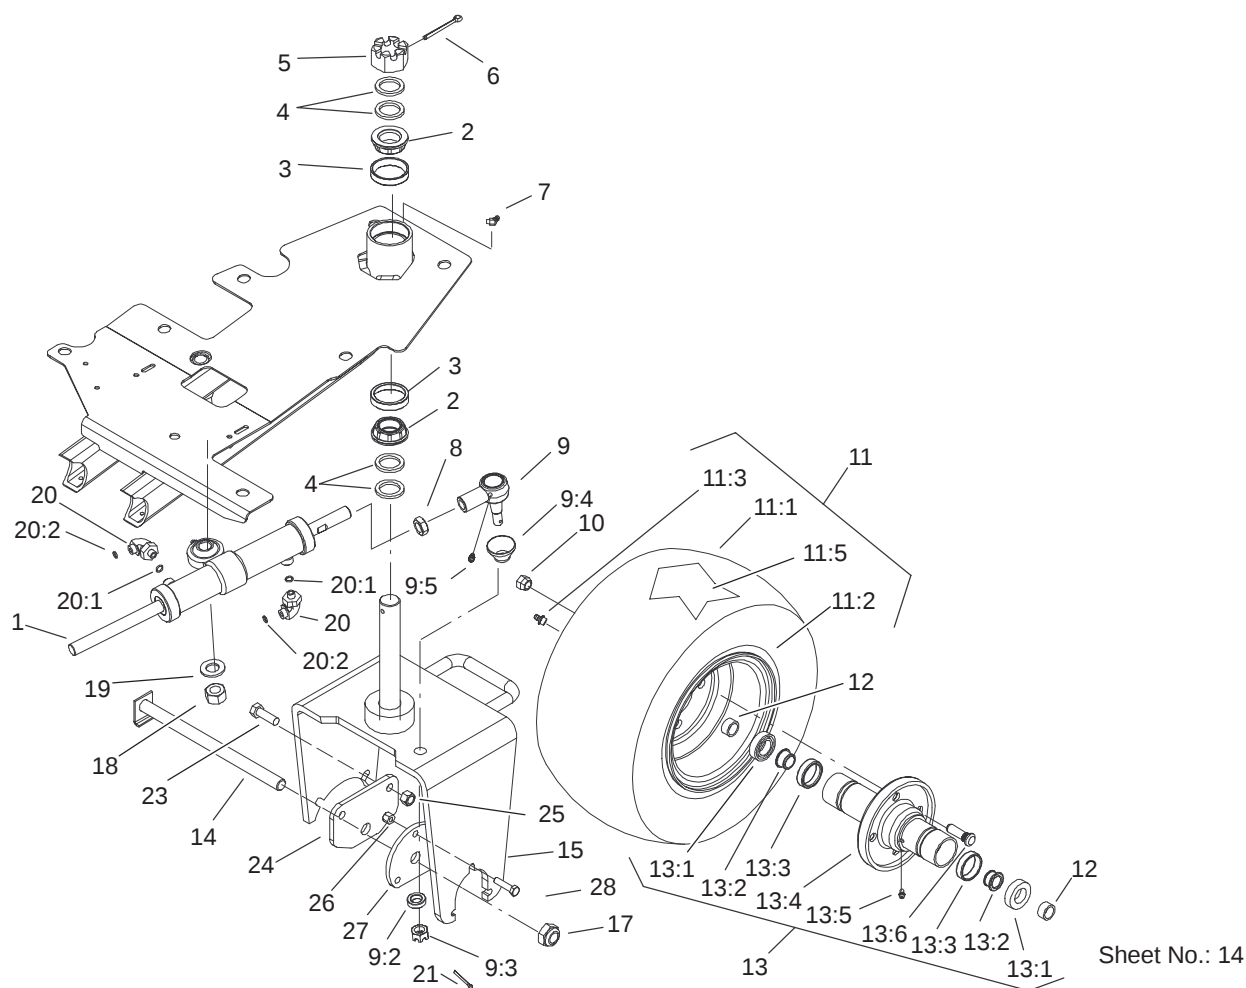


Sheet No.: 14

Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	105-0411	1	Cylinder-Steering
2	254-70	2	Bearing-Cone
3	254-61	2	Bearing-Cup
4	18-6320	4	Washer-Steering
5	32136-9	1	Nut-SHH
6	3272-37	1	Pin-Cotter
7	302-11	1	Fitting-Lube, 45°
8	84-5300	1	Nut-Jam
9	105-7841	1	Rod End ASM
9:2	105-7942	1	Spacer
9:3	32136-2	1	Nut-SHH
9:4	105-7835	1	Seal
9:5	302-5	1	Fitting-Grease
10	242-50	4	Nut-Lug
☆11		1	Wheel And Tire ASM
11:1	28-3680	1	Tire
11:2	217-60	1	Rim
11:3	232-27	1	Stem-Valve
11:5	232-37	1	Tube
12	74-3730	2	Spacer-Spindle, Rear
13	72-9710	1	Hub-Tire, Sulky
13:1	253-111	2	Seal-Oil
13:2	254-78	2	Bearing-Cone
13:3	254-79	2	Bearing-Roller, Cup
13:4	75-9440	1	Hub ASM
13:5	302-55	1	Zerk

Ref. No.	Part No.	Qty.	Description
13:6	10-6830	4	Stud-Type, Drive
14	5-3934	1	Bolt-Caster
15	93-2529-01	1	Fork-Caster
17	3296-67	1	Nut-Lock NI
18	3217-12	1	Nut-Hex
19	3256-28	1	Washer-Flat
20	340-132	2	Fitting-HYD, 90°
20:1	237-78	1	O-Ring
20:2	237-21	1	O-Ring
21	3272-12	1	Pin-Cotter
23	325-6	2	Screw-HH
24	99-1485-01	1	Plate-Adapter, Motor
25	3296-23	2	Nut-Lock, NI
26	3296-39	3	Nut-Lock, NI
27	99-1486-01	1	Plate-Adapter
28	323-8	3	Screw-HH

☆ Not serviced separately

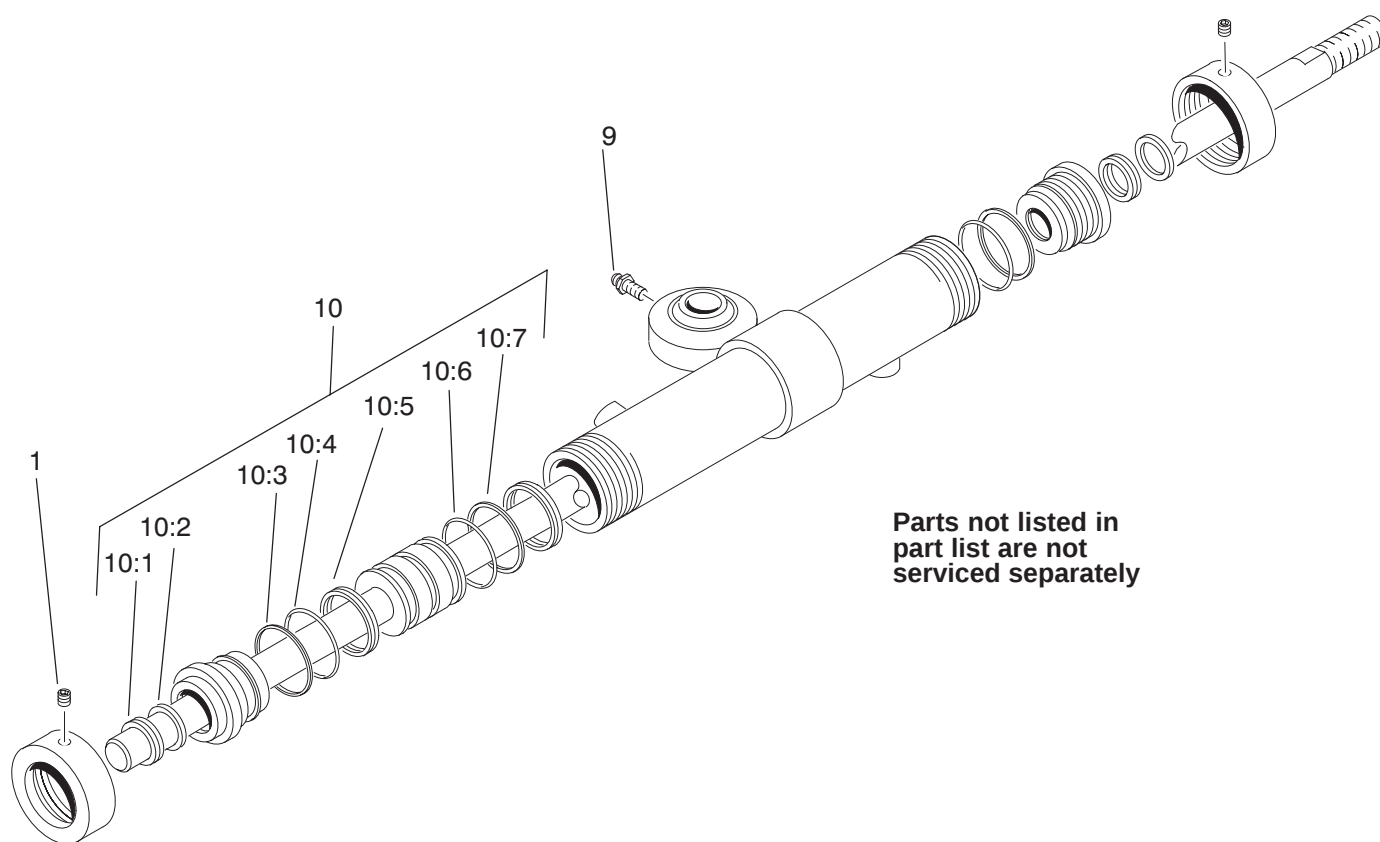

**Parts not listed in
part list are not
serviced separately**

Sheet No.: A8


T-3892

Steering Cylinder Assembly No. 105-0411

Ref. No.	Part No.	Qty.	Description
1	3245-1	2	Screw-Set, HSH
9	302-5	1	Fitting-Grease
10	83-2380	1	Seal Repair Kit
☆10:1		2	Wiper-Rod
☆10:2		2	U-Cup-Double Lip
☆10:3		2	Ring-Back-Up
☆10:4		2	O-Ring
☆10:5		2	Ring-Wear
☆10:6		1	O-Ring
☆10:7		1	O-Ring

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

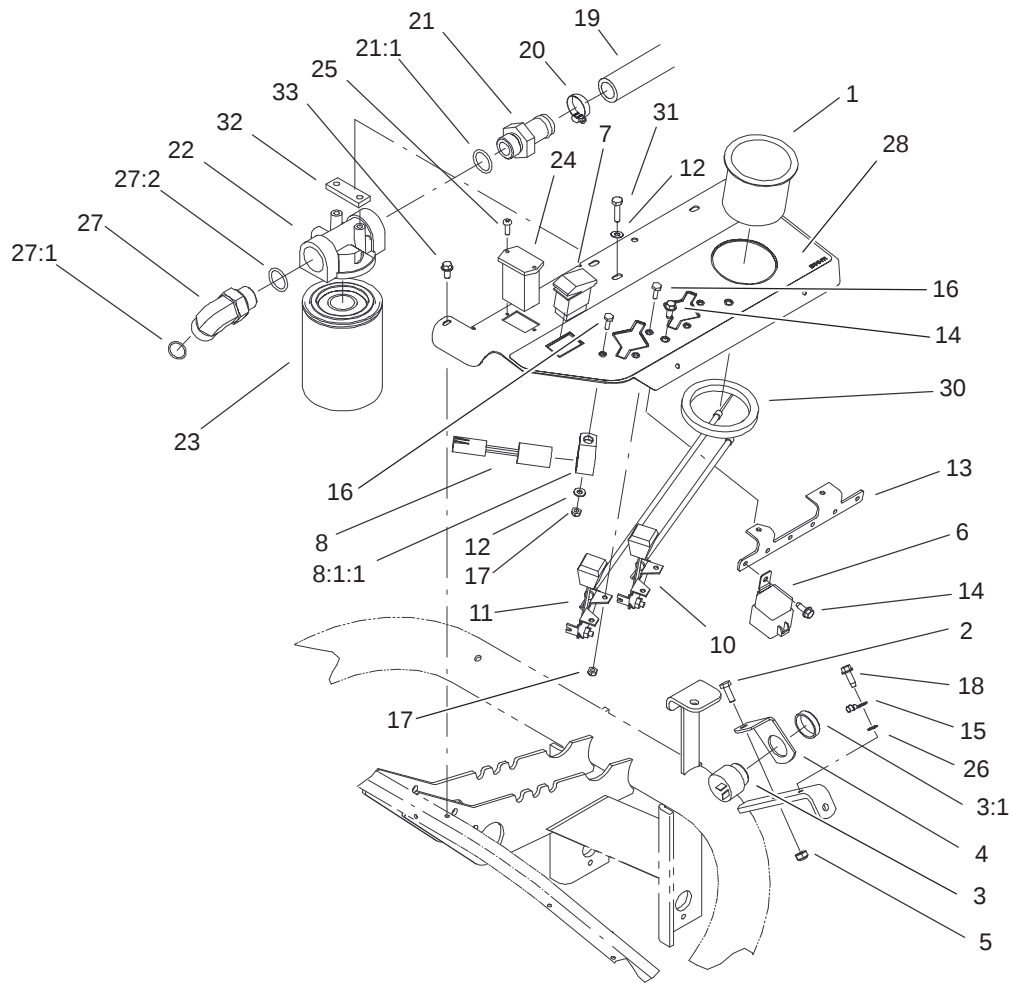


Sheet No.: 15

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	94-1410	1	Holder-Can, Beverage
2	321-4	1	Screw-HH
3	80-9330	1	Alarm-Audio
3:1	104-5107	1	Nut-Plastic, Knurled
4	83-1530	1	Bracket-Support, Buzzer
5	3296-16	1	Nut-Lock, NI
6	99-7430	6	Relay
7	105-4320	1	Switch
8	83-2280	1	Timer-Delay
8:1:1	98-4604	1	R-Clamp
10	83-0040	1	Control-Choke
11	83-0030	1	Control-Throttle
12	3256-22	3	Washer-Flat
13	105-4306-03	1	Bracket-Relay
14	32144-10	8	Screw-HWH
15	83-1150	1	Engine Ground Wire ASM
16	3290-134	5	Screw
17	3296-12	5	Nut-Lock
18	32104-95	1	Screw-HWH
19	105-5410	1	Hose ASM
20	2412-34	1	Clamp-Hose
21	99-3017	1	Fitting
21:1	237-81	1	O-Ring
22	92-5821	1	Filter Head ASM

Ref. No.	Part No.	Qty.	Description
23	105-0438	1	Element-Filter
24	75-6820	1	Hourmeter
25	32144-18	2	Screw-HH
26	3255-7	1	Washer-Lock/Ext
27	340-142	1	Fitting-HYD, 90°
27:1	237-58	1	O-Ring
27:2	237-81	1	O-Ring
28	105-5471	1	Decal-Panel, Left Control
30	104-1476	1	Ring-Rubber
31	321-6	2	Screw-HH
32	105-4309	1	Plate-Filter
33	32104-116	1	Screw

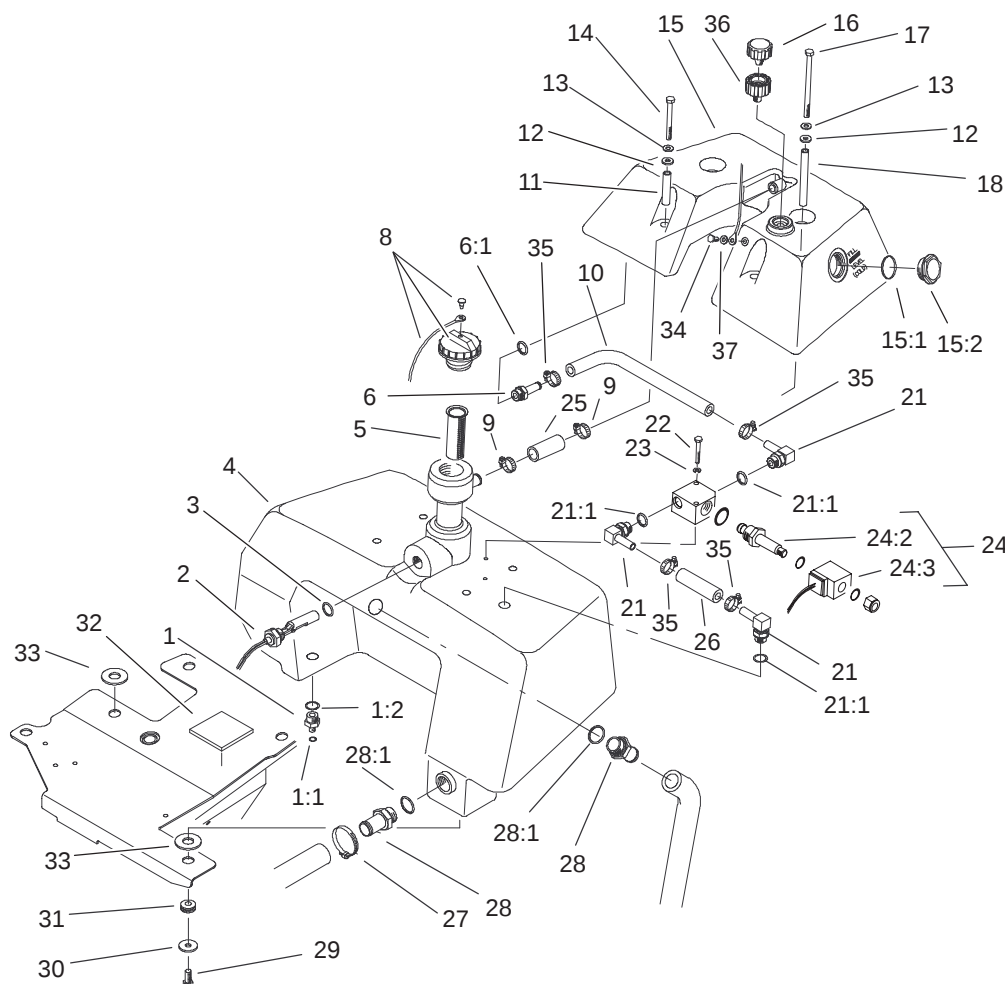


Sheet No.: 16

Hydraulic Reservoir and Leak Detector Assembly

Ref. No.	Part No.	Qty.	Description
1	340-3	1	Adapter
1:1	237-22	1	O-Ring
1:2	237-79	1	O-Ring
2	83-1450	1	Sensor-Level, Oil
3	237-80	1	O-Ring
4	105-9783	1	Tank-Hydraulic
5	83-1520	1	Screen-Filler
6	354-121	1	Fitting-HYD, Straight
6:1	237-79	1	O-Ring
8	93-7160	1	Cap-Oil, HYD
9	2412-141	2	Clamp-Drive, Worm
10	83-2070	1	Hose-Valve
11	83-1550	2	Spacer-Tube, Short
12	83-1470	4	Washer-Neoprene
13	3256-71	4	Washer-Flat
14	322-14	2	Screw-HH
15	83-2100	1	Tank-Auxiliary, HYD
15:1	94-8166	1	O-Ring
15:2	83-2250	1	Gauge-Sight
16	68-6150	1	Breather
17	322-29	2	Screw-HH
18	83-1560	2	Spacer-Tube, Long
21	354-120	3	Fitting-HYD, 90°
21:1	237-79	1	O-Ring
22	321-11	2	Screw-HH
23	3253-3	2	Washer-Lock

Ref. No.	Part No.	Qty.	Description
24	83-1460	1	Solenoid Valve ASM
24:2	83-2000	1	Spool-Valve
24:3	83-2010	1	Coil-Valve
25	83-2090	1	Hose-Overflow
26	83-2080	1	Hose-Valve, Tank
27	2412-34	1	Clamp-Hose
28	83-0870	2	Fitting-Hose, Barbed
28:1	237-177	1	O-Ring
29	323-6	3	Screw-HH
30	63-8410	3	Washer
31	240-11	3	Grommet-Mount, Tank
32	83-2390	1	Pad-Tank
33	83-2400	2	Spacer
34	321-2	1	Screw-HH
35	2412-36	4	Clamp-Hose
36	92-8020	1	Adapter-Breather
37	3256-22	1	Washer-Flat

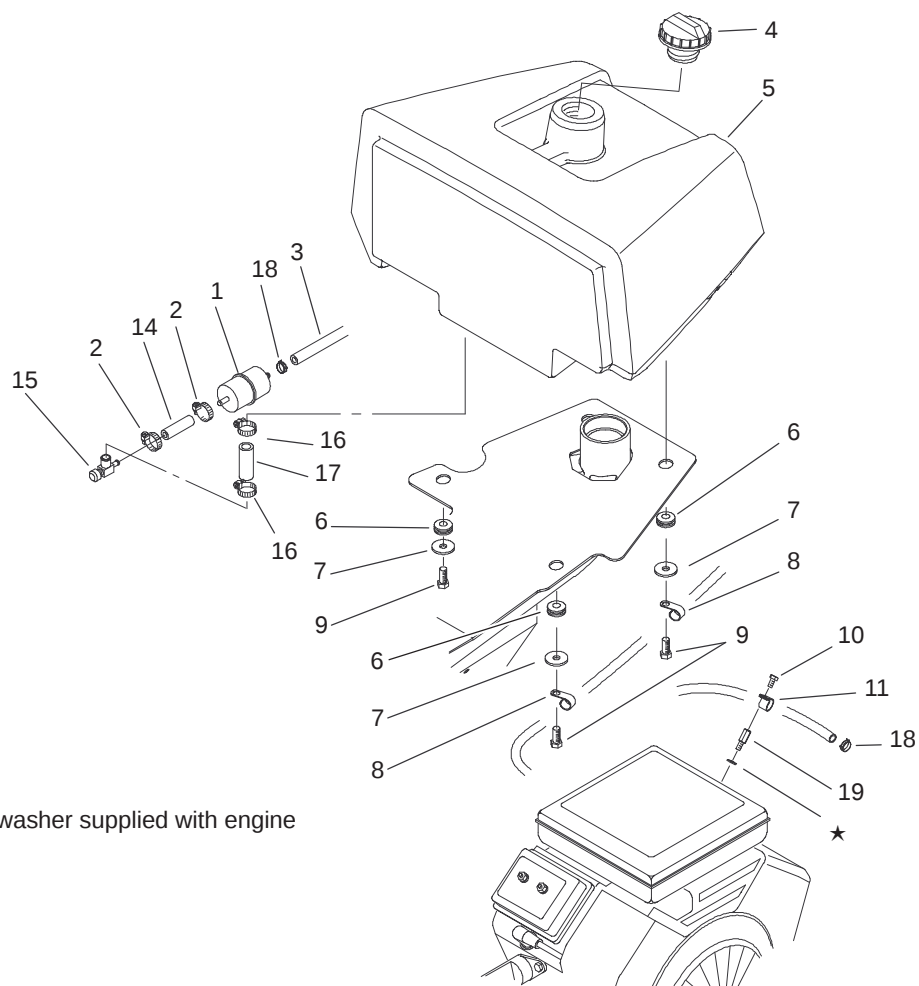


Sheet No.: 17

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	94-2690	1	Filter-Fuel
2	2412-108	2	Clamp-Worm
3	83-2041	1	Hose-Fuel
4	93-7170	1	Cap-Fuel
5	105-8266	1	Tank-Fuel
6	240-11	4	Grommet-Mount, Tank
7	63-8410	4	Washer
8	2412-41	3	Clamp
9	323-6	4	Screw-HH
10	33113-012	1	Screw-HH
11	2412-94	1	Clamp
14	105-8342	1	Hose-Line, Fuel
15	83-1390	1	Fitting-Shut-Off, Fuel
16	2412-36	2	Clamp-Hose
17	56-2230	1	Hose-Fuel
18	2412-98	2	Clamp
19	106-4616	1	Screw-Spacer

Ref. No.	Part No.	Qty.	Description

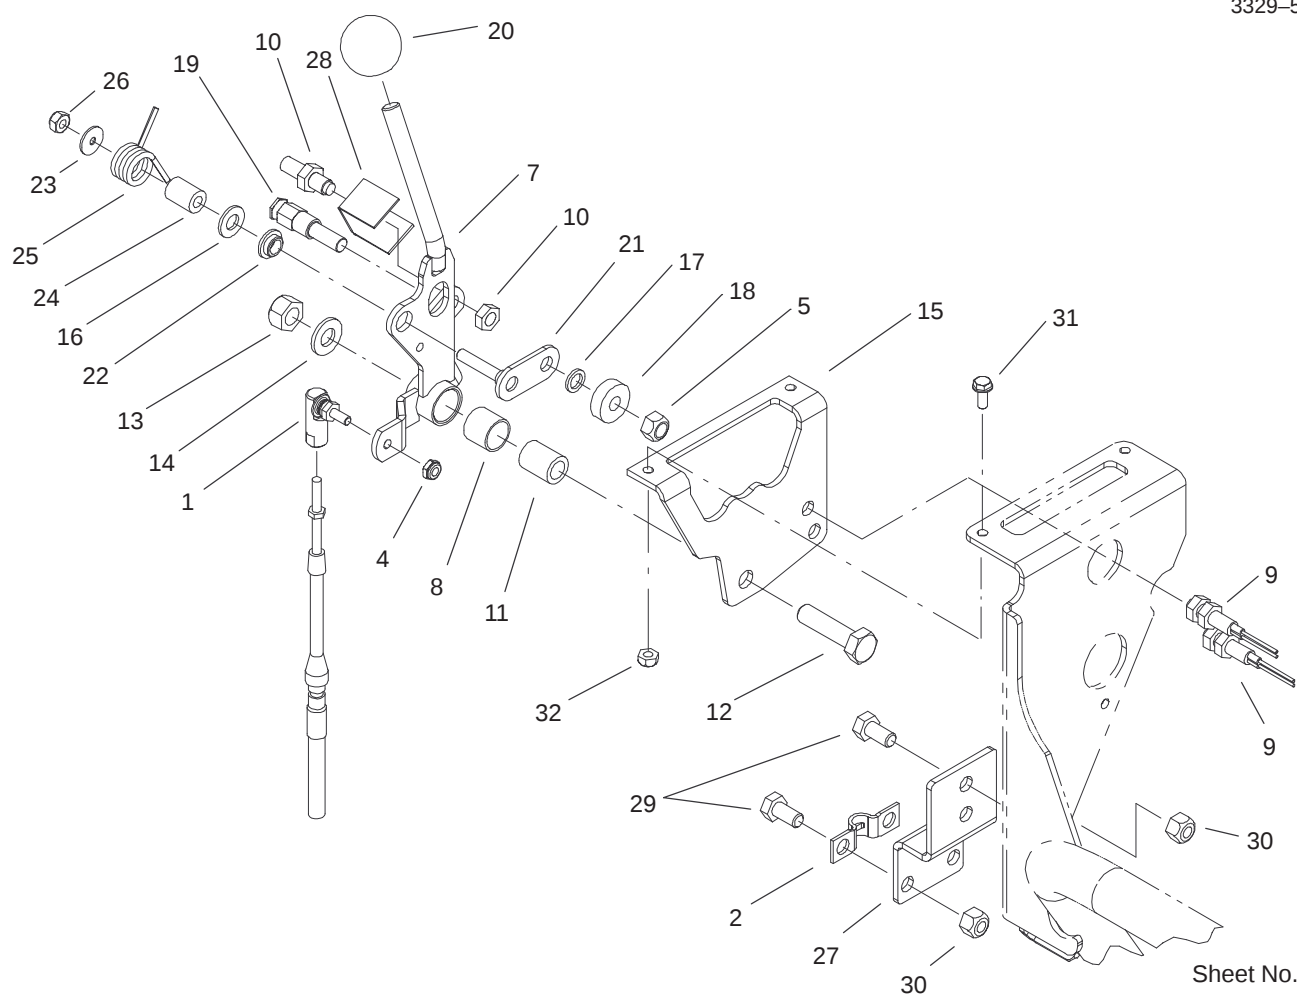


Sheet No.: 18

Speed Selector Lever Assembly

Ref. No.	Part No.	Qty.	Description
1	2411-38	1	Joint-Ball
2	93-2279	1	Clamp-Cable
4	3296-27	1	Nut-Lock NI
5	33024-00	1	Nut-Lock
7	94-9611	1	Handle
8	256-311	1	Bushing-Split
9	93-2055	2	Sensor-Switch, Reed
10	93-2056	1	Actuator-Switch, Reed
11	94-1378	1	Tube-Pivot, Handle
12	33115-040	1	Screw-HH
13	33025-00	1	Nut-Lock
14	3256-24	1	Washer-Flat
15	94-6398	1	Bracket-Traction
16	3256-23	1	Washer-Flat
17	75-5470	1	Spacer-Bearing
18	251-259	1	Bearing-Ball
19	94-9617	1	Pin-Spring
20	233-42	1	Knob
21	94-9614	1	Pivot-Roller
22	94-9619	1	Bushing
23	3256-67	1	Washer-Flat
24	94-9618	1	Spacer-Spring
25	94-9620	1	Spring-Torsion
26	33023-00	1	Nut-Lock
27	105-5417-03	1	Bracket-Cable, Shifter
28	106-6356	1	Shield-Switch

Ref. No.	Part No.	Qty.	Description
29	322-2	4	Screw-HH
30	3296-29	4	Nut-Lock, NI
31	3290-321	2	Screw-HWH
32	3296-12	2	Nut-Lock

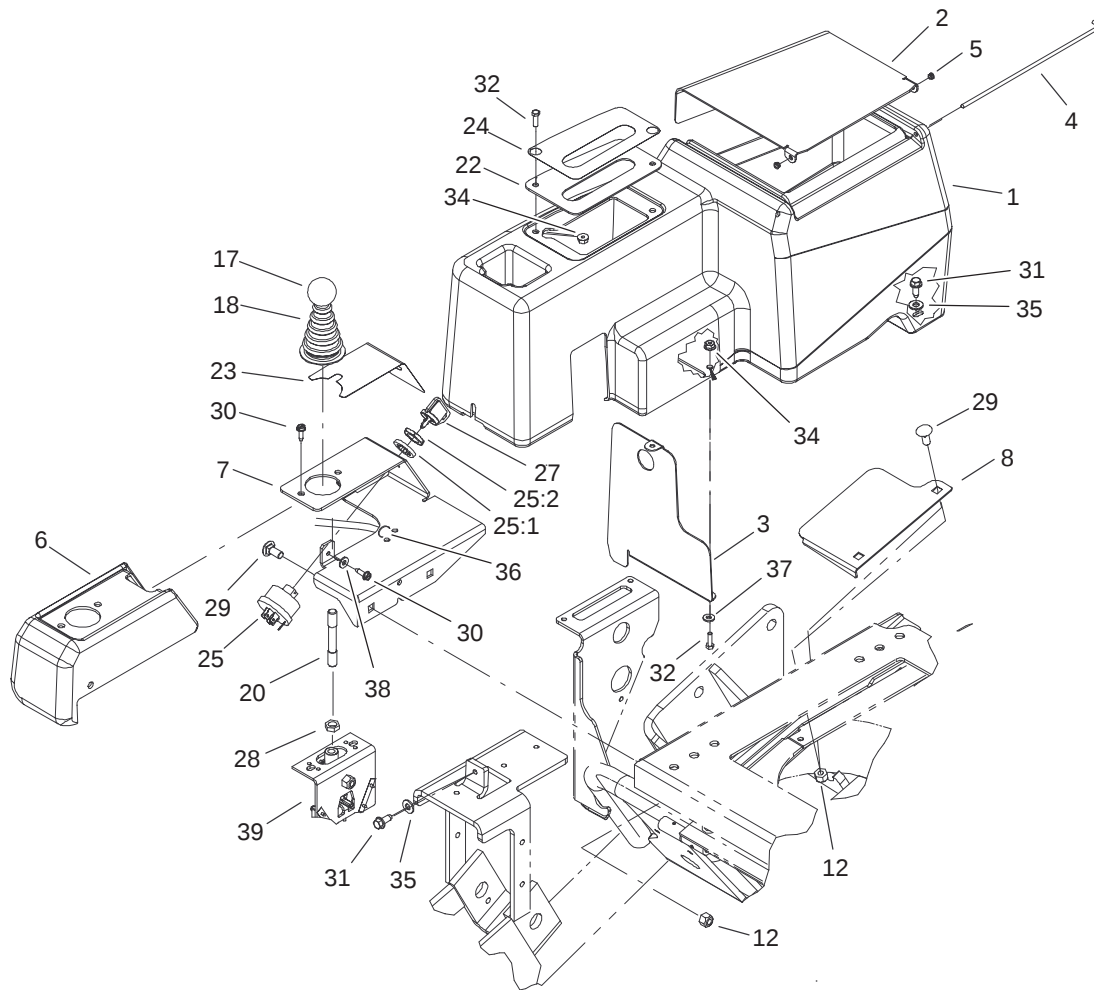


Sheet No.: 19

Joystick and Console Assembly

Ref. No.	Part No.	Qty.	Description
1	105-8250	1	Console
2	105-8254-03	1	Lid-Console
3	105-8255-03	1	Baffle-Console
4	105-8256	1	Rod-Hinge
5	105-8283	2	Bushing
6	105-8251	1	Pod
7	105-8252-03	1	Bracket-Pod
8	105-8284-03	1	Shield-Valve
12	3296-29	4	Nut-Lock, NI
17	233-42	1	Knob
18	93-5961	1	Boot-Lever
20	105-8288	1	Rod-Joystick
22	105-8280-03	1	Plate-Console
23	105-8305	1	Decal-Panel, Control
24	105-8306	1	Decal-Selector, Speed
25	88-9830	1	Key Switch ASM
25:1	3254-5	1	Washer-Tooth
25:2	218-461	1	Nut-HH
27	63-8360	2	Key-Ignition
28	3218-3	1	Nut-Jam
29	3230-1	4	Bolt-CARR
30	32144-19	4	Screw-Forming, Thread
31	32144-10	3	Screw-HWH
32	3290-134	4	Screw
34	3290-148	4	Nut-HF

Ref. No.	Part No.	Qty.	Description
35	3256-22	3	Washer-Flat
36	3290-378	1	Tie-Cable
37	3256-77	2	Washer-Flat
38	3256-14	2	Washer-Flat
★39		1	Joystick Bracket ASM


★ Not serviced separately

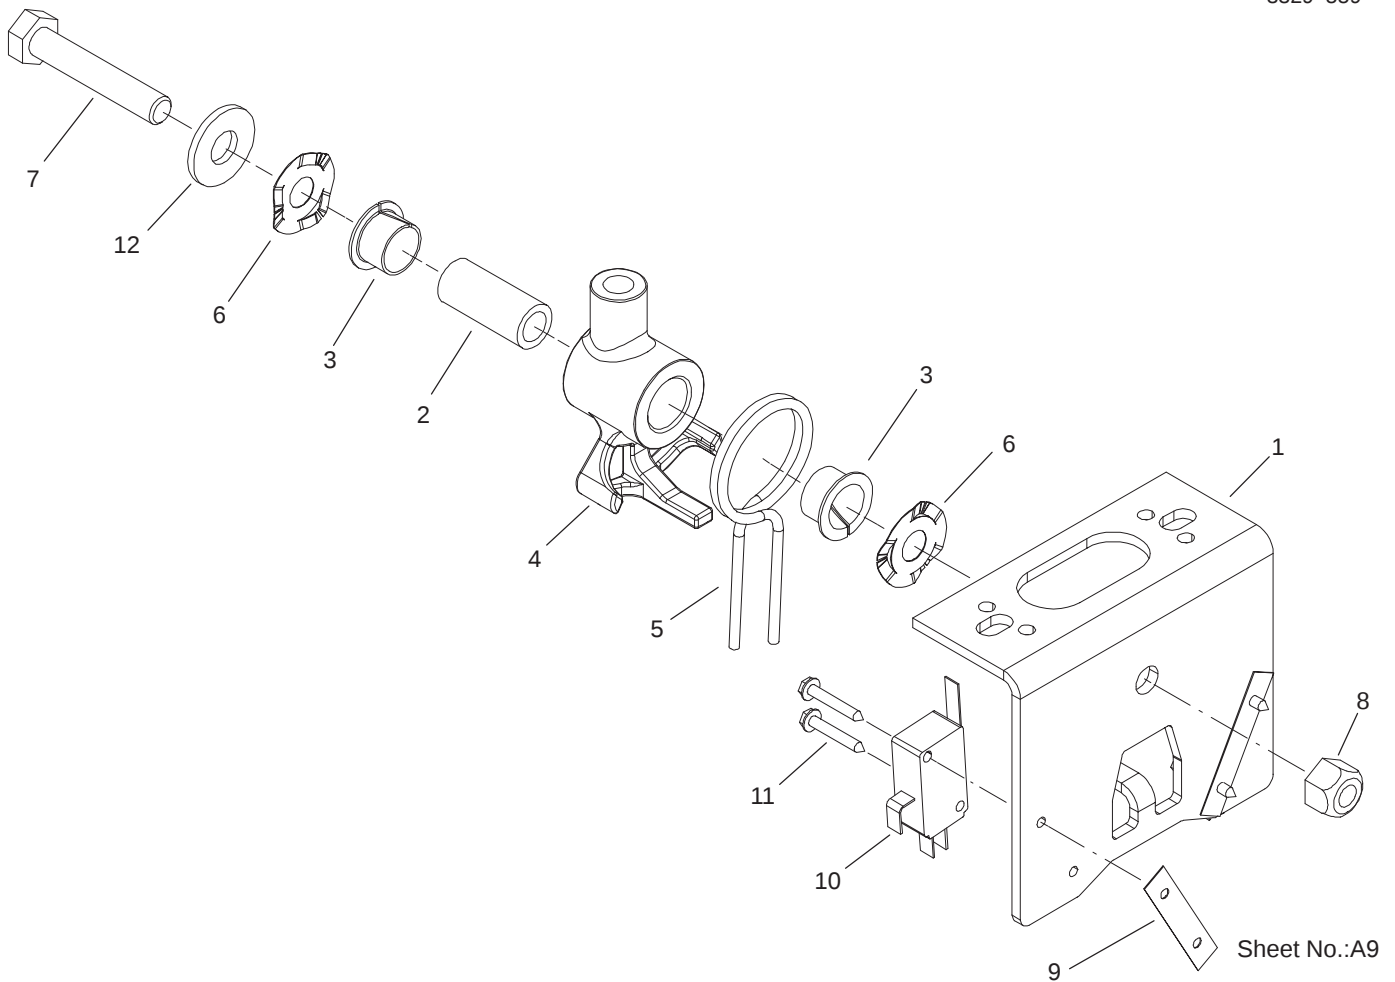

Joystick Bracket Assembly

Ref. No.	Part No.	Qty.	Description
1	106-4168-03	1	Bracket-Joystick
2	106-4192	1	Spacer
3	93-5547	2	Bushing-Nylon
4	105-7507	1	Hub-Pivot, Joystick
5	105-8289	1	Spring-Torsion
6	106-4193	2	Washer-Finger, Spring
7	322-9	1	Screw-HH
8	3296-29	1	Nut-Lock, NI
9	3290-354	2	Nut-Speed
10	111332	2	Switch
11	147665	4	Screw-HH
12	3256-3	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description

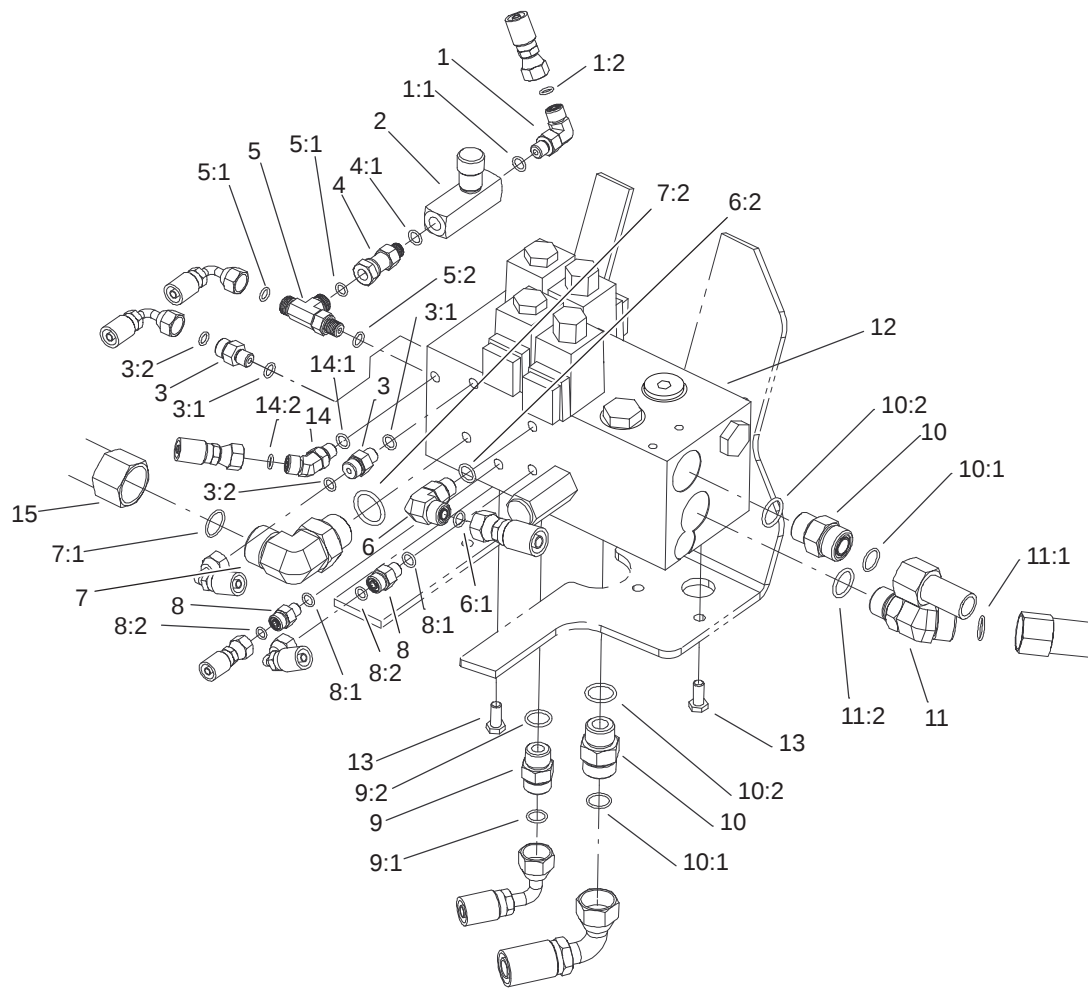


Sheet No.: 24

Hydraulic Manifold Assembly

Ref. No.	Part No.	Qty.	Description
1	340-132	1	Fitting-HYD, 90°
1:1	237-78	1	O-Ring
1:2	237-21	1	O-Ring
2	93-7489	1	Orifice Valve ASM
3	95-1639	2	Fitting-HYD
3:1	237-78	1	O-Ring
3:2	237-21	1	O-Ring
4	104-3777	1	Connector-Swivel, Straight
4:1	237-78	1	O-Ring
5	340-140	1	Adapter-Tee
5:1	237-21	2	O-Ring
5:2	237-78	1	O-Ring
6	340-77	1	Fitting-HYD, 90°
6:1	237-22	1	O-Ring
6:2	237-42	1	O-Ring
7	340-142	1	Fitting-HYD, 90°
7:1	237-58	1	O-Ring
7:2	237-81	1	O-Ring
8	340-92	2	Fitting-HYD, Straight
8:1	237-78	1	O-Ring
8:2	237-21	1	O-Ring
9	340-4	1	Adapter
9:1	237-30	1	O-Ring
9:2	237-79	1	O-Ring
10	340-7	2	Adapter

Ref. No.	Part No.	Qty.	Description
10:1	237-65	1	O-Ring
10:2	237-80	1	O-Ring
11	340-14	1	Fitting-HYD, 45°
11:1	237-65	1	O-Ring
11:2	237-80	1	O-Ring
12	93-2240	1	Manifold-Mow/Lift, Basic
13	33114-016	2	Screw-HH
14	340-103	1	Fitting-HYD, 45°
14:1	237-78	1	O-Ring
14:2	237-21	1	O-Ring
15	105-5460	1	Tube-HYD, Manifold/Filter

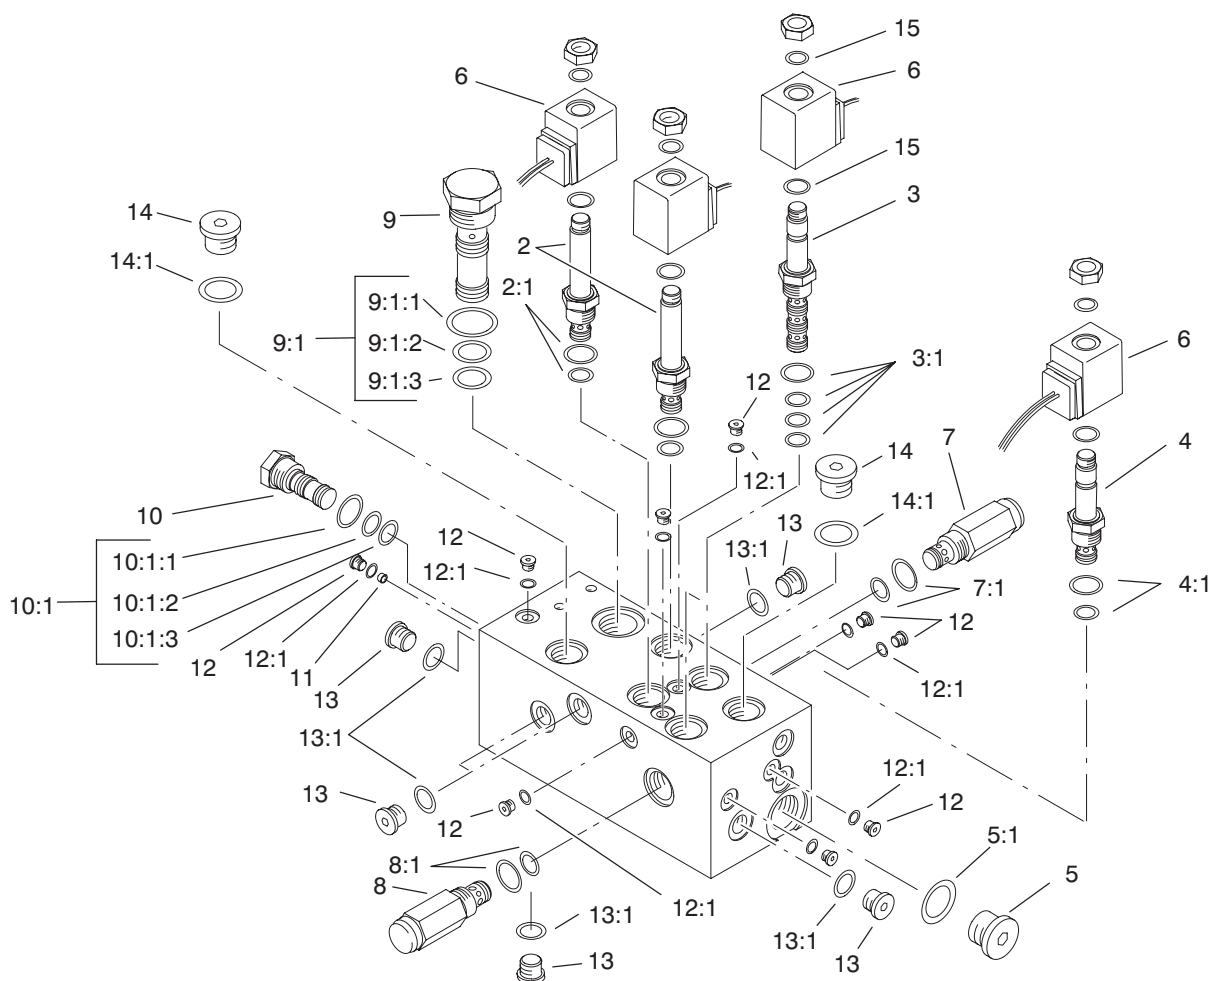


Sheet No.:B1
T-2251

Basic Mow/Lift Manifold Assembly No. 93-2240

Ref. No.	Part No.	Qty.	Description
2	93-7494	2	Cartridge
2:1	75-2080	1	Seal Kit
3	94-2627	1	Cartridge
3:1	95-5642	1	Seal Kit
4	92-6315	1	Cartridge-N.c., Poppet
4:1	104-0004	1	Cartridge Seal Kit
5	353-988	1	Plug-Hex, Hollow
5:1	237-79	1	O-Ring
6	88-9190	4	Solenoid Coil Kit
7	95-1601	1	Cartridge-Relief
7:1	95-5645	1	Seal Kit
8	94-6351	1	Cartridge-Relief
8:1	95-5645	1	Seal Kit
9	94-6352	1	Plug-Cavity
9:1	104-7730	1	Seal Kit
10	94-6353	1	Plug-Cavity
10:1	69-4240	1	Seal Kit
11	95-5999	1	Plug-Orifice
12	353-991	9	Plug-Hex, Hollow
12:1	237-156	1	O-Ring
13	353-989	6	Plug-Hex, Hollow
13:1	237-42	1	O-Ring
14	354-70	2	Plug-Hex, Hollow
14:1	237-80	1	O-Ring
15	94-5438	8	Seal-Solenoid

Ref. No.	Part No.	Qty.	Description

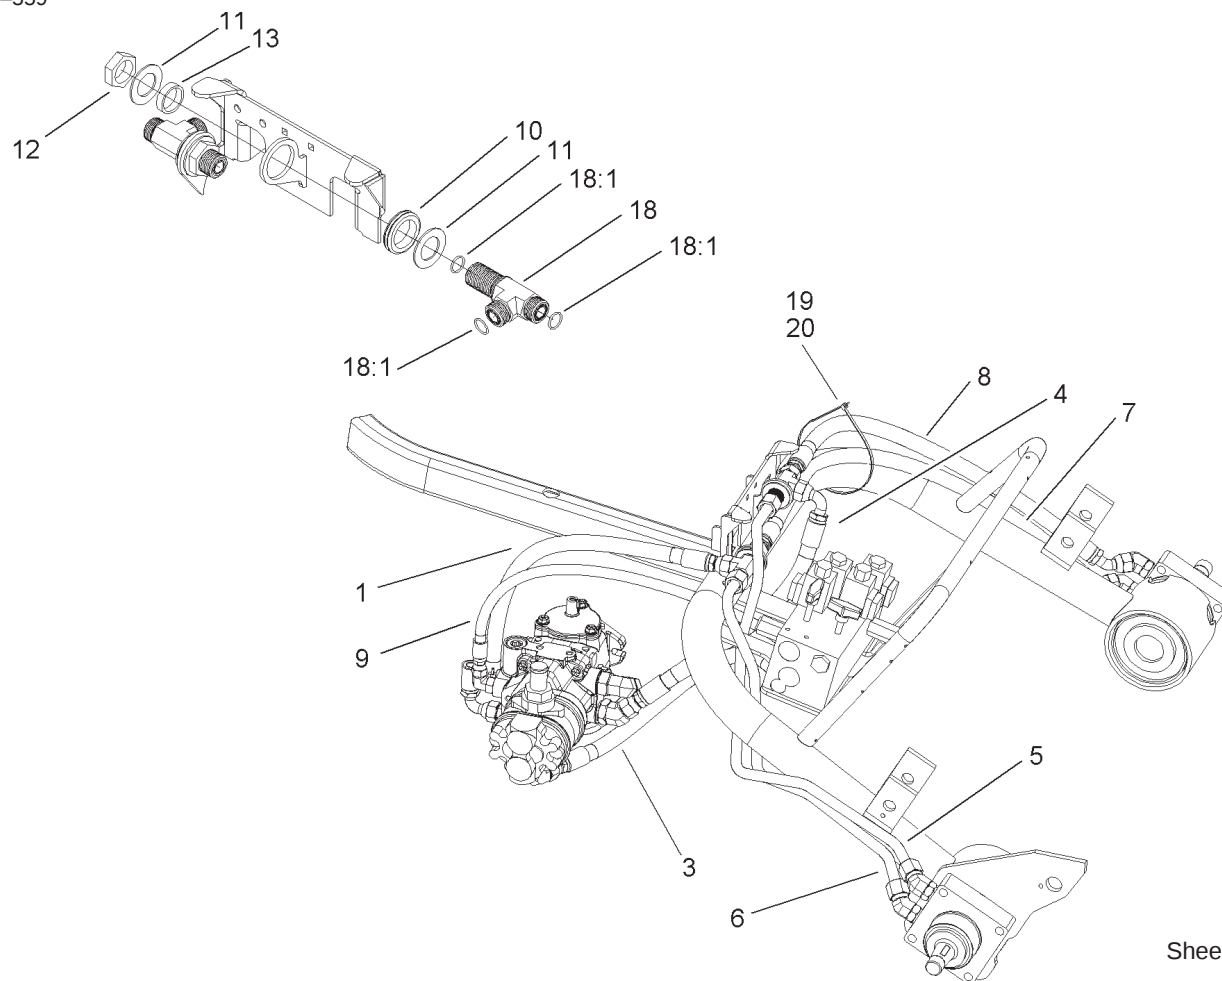


Sheet No.: 25

Hydraulic Traction Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6193	1	Hose ASM
3	105-4342	1	Hose ASM
4	105-4332	1	Hose ASM
5	105-5490	1	Tube-HYD
6	105-5489	1	Tube-HYD
7	105-4333	1	Hose ASM
8	105-4336	1	Hose ASM
9	105-4343	1	Hose ASM
10	240-3	2	Grommet-Rubber
11	69-9010	4	Washer
12	340-74	2	Locknut-Bulkhead
13	69-9000	2	Spacer
18	94-5350	2	Tee-Bulkhead
18:1	237-65	3	O-Ring
19	3290-378	1	Tie-Cable
20	3290-379	1	Tie-Cable


Ref. No.	Part No.	Qty.	Description

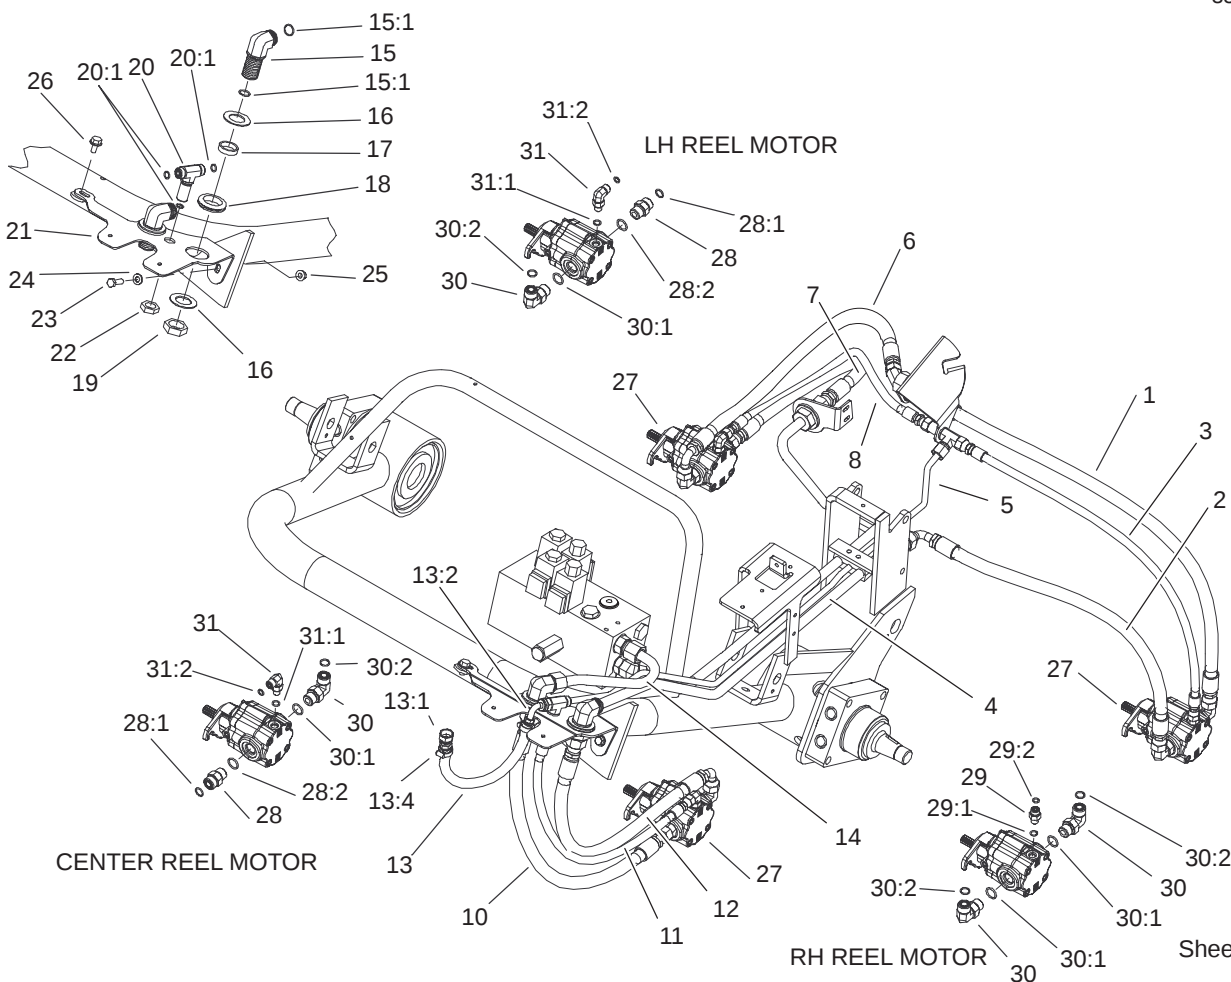

Hydraulic Reel Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	95-2908	1	Hose ASM
2	105-5404	1	Hose ASM
3	105-5405	1	Hose ASM
4	105-5493	1	Tube-HYD
5	105-4327	1	Tube-HYD, Casedrain
6	95-2909	1	Hose ASM
7	105-5407	1	Hose ASM
8	105-5408	1	Hose ASM
10	105-5400	1	Hose ASM
11	105-5402	1	Hose ASM
12	105-5401	1	Hose ASM
13	105-5409	1	Hose ASM
13:1	105-8311	1	Fitting-HYD
13:2	105-8312	1	Fitting-HYD, 90°
13:4	2412-141	2	Clamp-Drive, Worm
14	105-5482	1	Tube-HYD, Manifold/Center Reel
15	340-72	2	Fitting-HYD, Bulkhead, 90°
15:1	237-65	2	O-Ring
16	69-9010	4	Washer
17	69-9000	2	Spacer
18	240-3	2	Grommet-Rubber
19	340-74	2	Locknut-Bulkhead
20	105-8281	1	Tee-Bulkhead
20:1	237-22	3	O-Ring

Ref. No.	Part No.	Qty.	Description
21	105-8253-01	1	Bracket-Bulkhead
22	340-70	1	Nut-Lock
23	322-5	1	Screw-HH
24	3256-23	1	Washer-Flat
25	32128-20	1	Nut-HF
26	32144-14	1	Screw-HWH
27	100-6426	3	HYD Motor ASM
28	340-4	2	Adapter
28:1	237-30	1	O-Ring
28:2	237-79	1	O-Ring
29	340-92	1	Fitting-HYD, Straight
29:1	237-78	1	O-Ring
29:2	237-21	1	O-Ring
30	340-98	4	Fitting-HYD, 90°
30:1	237-79	1	O-Ring
30:2	237-30	1	O-Ring
31	340-132	2	Fitting-HYD, 90°
31:1	237-78	1	O-Ring
31:2	237-21	1	O-Ring

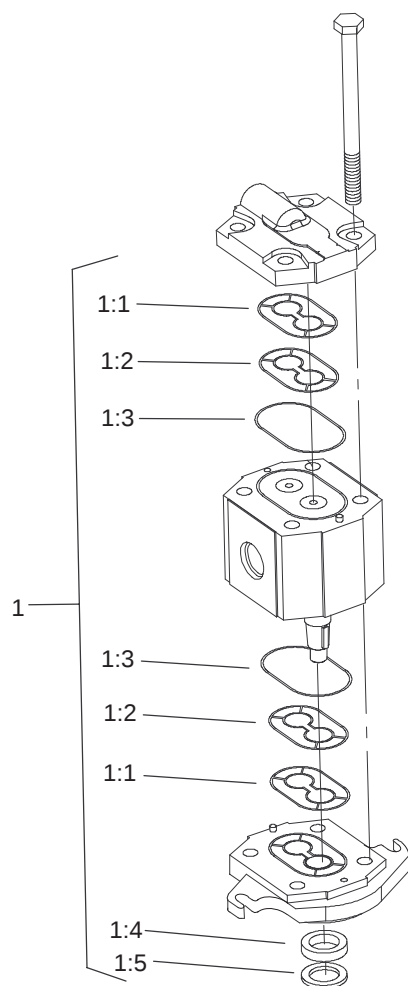

**Parts not listed in
part list are not
serviced separately**


Sheet No.: B2

Reel Motor Assembly No. 100-6426

Ref. No.	Part No.	Qty.	Description
1	105-9758	1	Seal Kit
☆1:1		2	Seal-Extrusion, Anti
☆1:2		2	Seal-Pressure
☆1:3		2	O-Ring
☆1:4		1	Seal-Shaft
☆1:5		1	Washer-Backup

Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

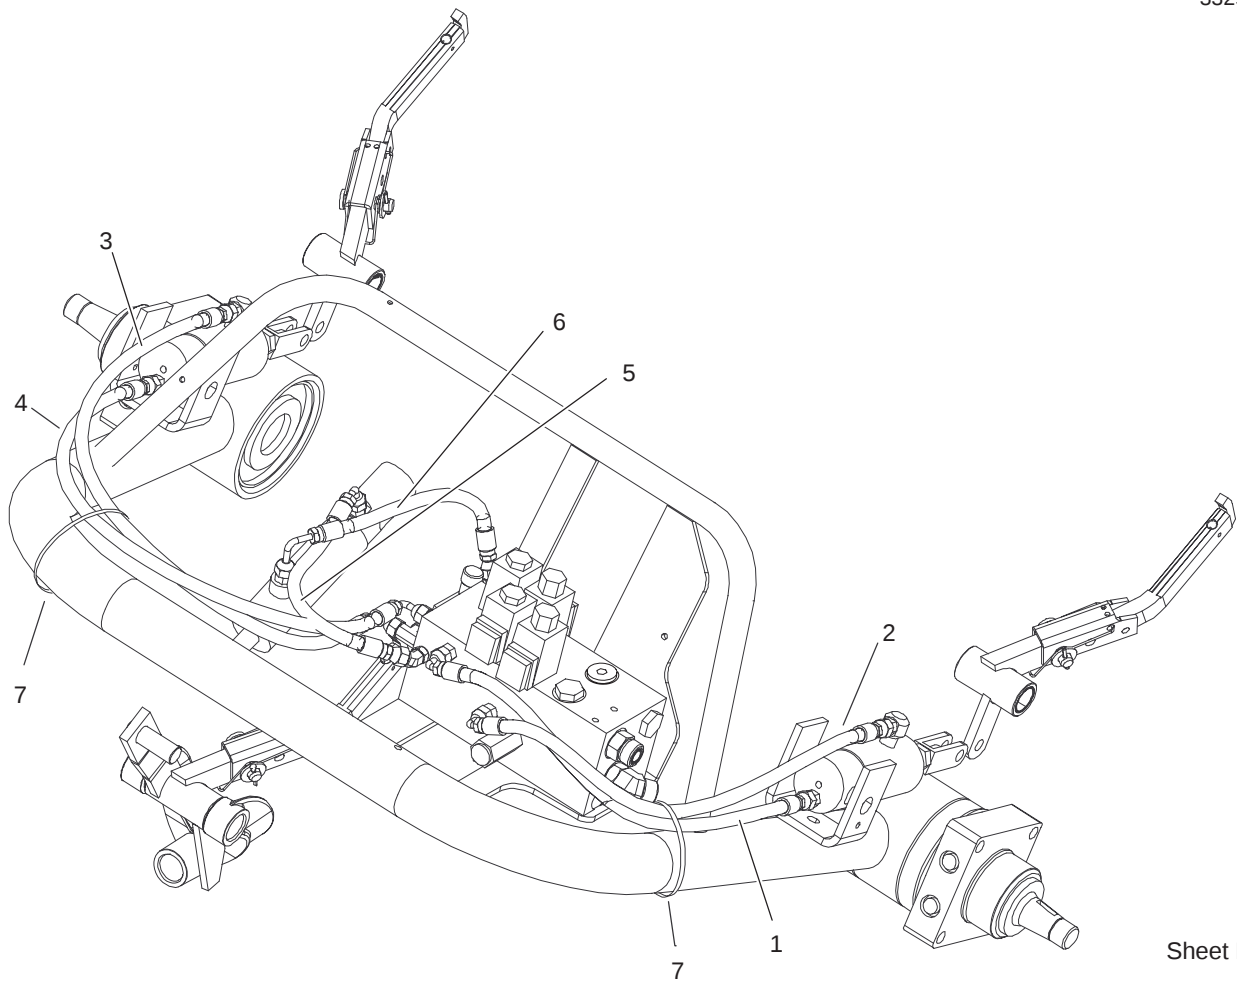


Sheet No.: 27

Hydraulic Lift Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4346	1	Hose ASM
2	105-4347	1	Hose ASM
3	100-3833	1	Hose ASM
4	95-8837	1	Hose ASM
5	105-4344	1	Hose ASM
6	105-4345	1	Hose ASM
7	3290-379	2	Tie-Cable

Ref. No.	Part No.	Qty.	Description

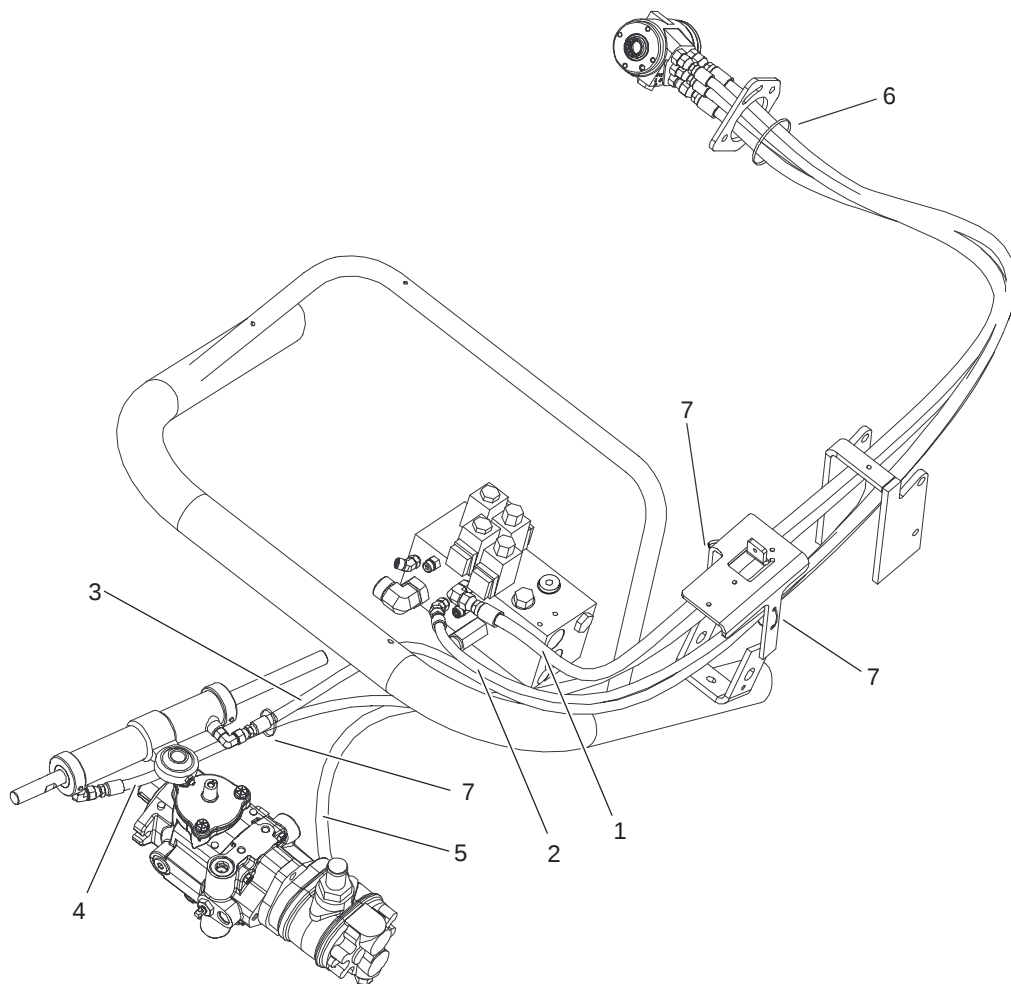


Sheet No.: 28

Hydraulic Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4339	1	Hose ASM
2	105-4338	1	Hose ASM
3	105-4337	1	Hose ASM
4	100-4892	1	Hose ASM
5	105-4340	1	Hose ASM
6	3334-945	1	Tie-Cable
7	3290-378	3	Tie-Cable

Ref. No.	Part No.	Qty.	Description

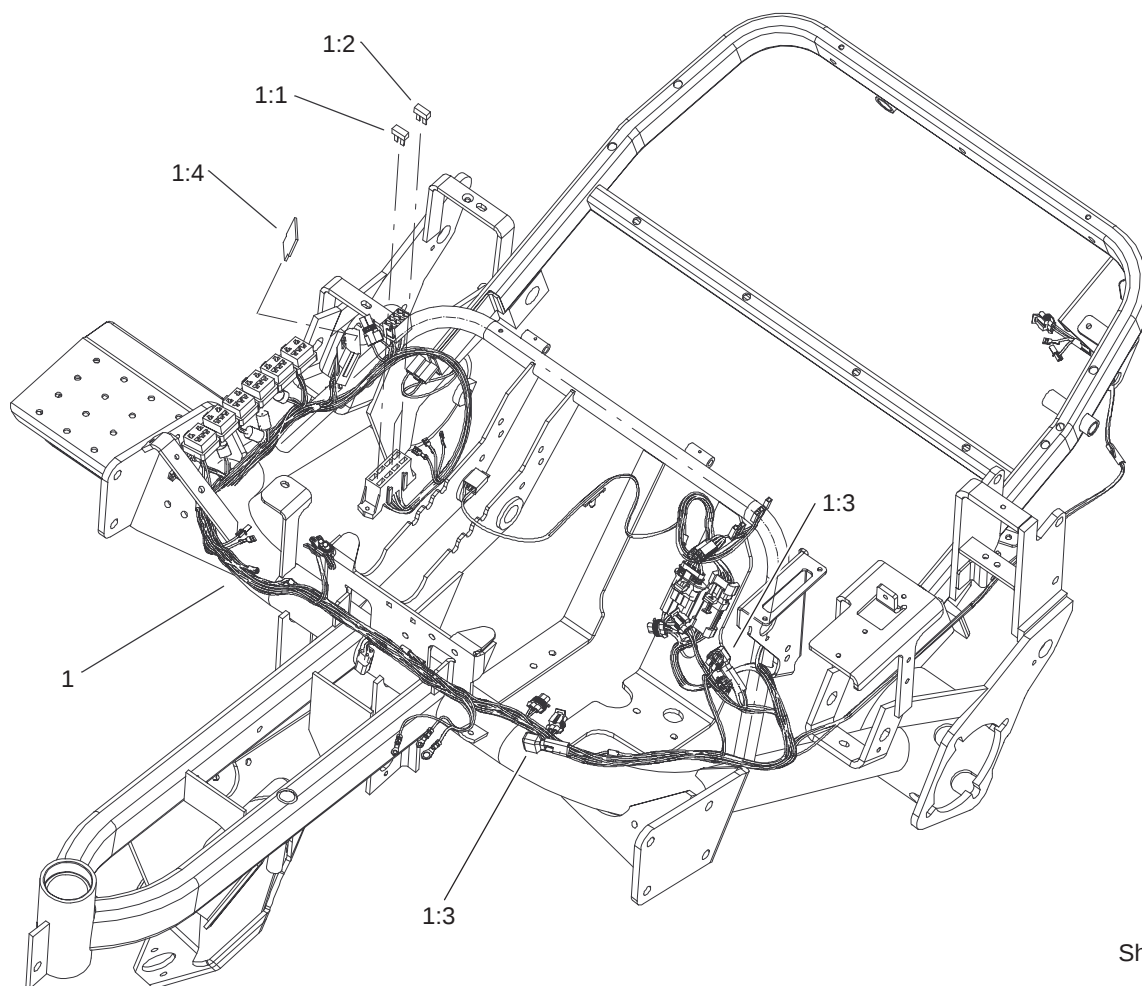

Sheet No.: 30


Wire Harness Routing Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4318	1	Harness-Wire, Gr3150 Main
1:1	218-578	2	Fuse-10 Amp
1:2	109101	1	Fuse-20 Amp
1:3	100-4918	2	Diode
1:4	92-3188	1	Diode-Board, Circuit
*1:5	106-4641	1	Harness-Wire, Fusible Link

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Hydraulic Schematic

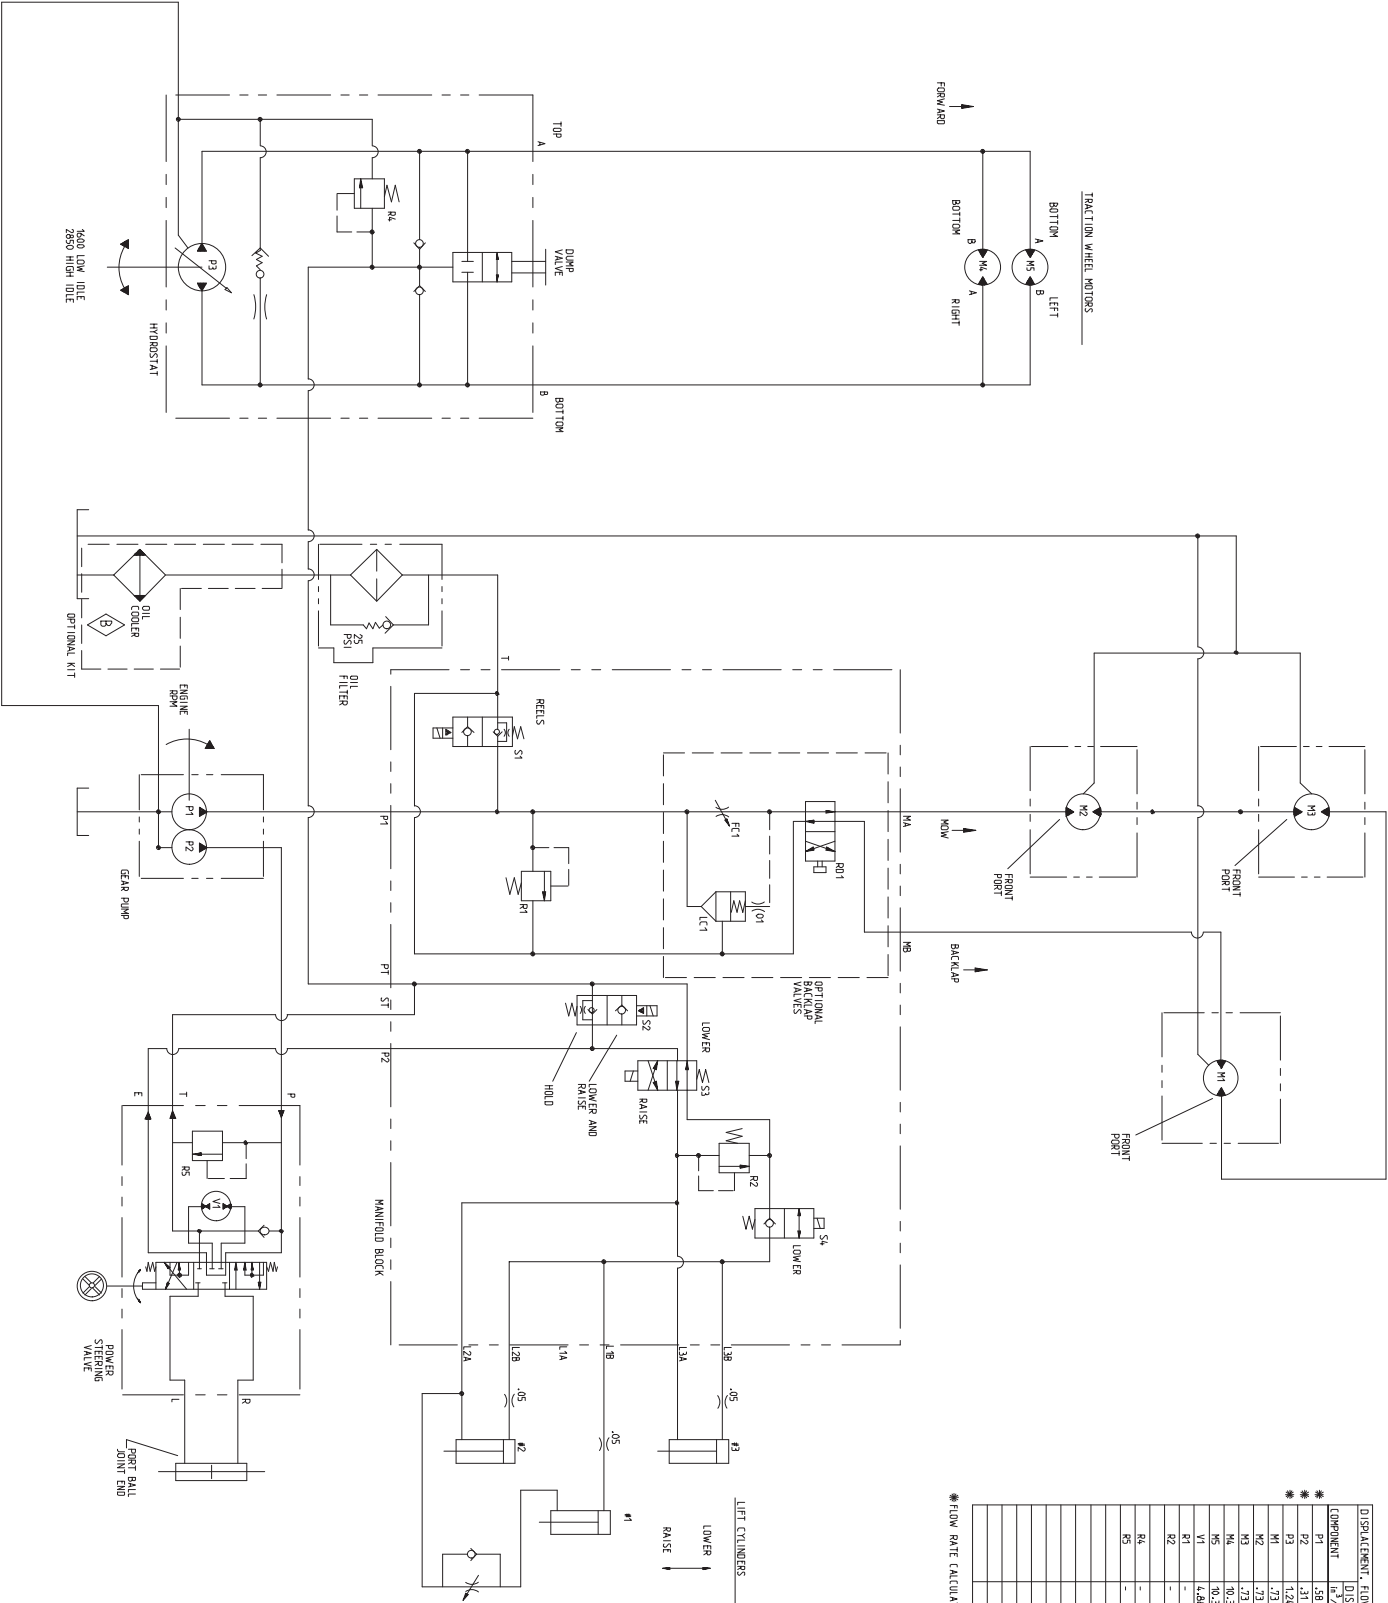


DISPLACEMENT, FLOW RATE, AND PRESSURE CHART

COMPONENT	DISPLACEMENT in ³ /rev	PRESSURE lb/in ²	FLOW RATE GPM
P1	5.9	31.2	6.9
P2	1.1	31.2	13.9
P3	1.1	31.2	13.9
M1	1.1	31.2	13.9
M2	1.1	31.2	13.9
M3	1.1	31.2	13.9
M4	1.1	31.2	13.9
M5	1.1	31.2	13.9
M6	1.1	31.2	13.9
M7	1.1	31.2	13.9
M8	1.1	31.2	13.9
M9	1.1	31.2	13.9
M10	1.1	31.2	13.9
M11	1.1	31.2	13.9
M12	1.1	31.2	13.9
M13	1.1	31.2	13.9
M14	1.1	31.2	13.9
M15	1.1	31.2	13.9
M16	1.1	31.2	13.9
M17	1.1	31.2	13.9
M18	1.1	31.2	13.9
M19	1.1	31.2	13.9
M20	1.1	31.2	13.9
M21	1.1	31.2	13.9
M22	1.1	31.2	13.9
M23	1.1	31.2	13.9
M24	1.1	31.2	13.9
M25	1.1	31.2	13.9
M26	1.1	31.2	13.9
M27	1.1	31.2	13.9
M28	1.1	31.2	13.9
M29	1.1	31.2	13.9
M30	1.1	31.2	13.9
M31	1.1	31.2	13.9
M32	1.1	31.2	13.9
M33	1.1	31.2	13.9
M34	1.1	31.2	13.9
M35	1.1	31.2	13.9
M36	1.1	31.2	13.9
M37	1.1	31.2	13.9
M38	1.1	31.2	13.9
M39	1.1	31.2	13.9
M40	1.1	31.2	13.9
M41	1.1	31.2	13.9
M42	1.1	31.2	13.9
M43	1.1	31.2	13.9
M44	1.1	31.2	13.9
M45	1.1	31.2	13.9
M46	1.1	31.2	13.9
M47	1.1	31.2	13.9
M48	1.1	31.2	13.9
M49	1.1	31.2	13.9
M50	1.1	31.2	13.9
M51	1.1	31.2	13.9
M52	1.1	31.2	13.9
M53	1.1	31.2	13.9
M54	1.1	31.2	13.9
M55	1.1	31.2	13.9
M56	1.1	31.2	13.9
M57	1.1	31.2	13.9
M58	1.1	31.2	13.9
M59	1.1	31.2	13.9
M60	1.1	31.2	13.9
M61	1.1	31.2	13.9
M62	1.1	31.2	13.9
M63	1.1	31.2	13.9
M64	1.1	31.2	13.9
M65	1.1	31.2	13.9
M66	1.1	31.2	13.9
M67	1.1	31.2	13.9
M68	1.1	31.2	13.9
M69	1.1	31.2	13.9
M70	1.1	31.2	13.9
M71	1.1	31.2	13.9
M72	1.1	31.2	13.9
M73	1.1	31.2	13.9
M74	1.1	31.2	13.9
M75	1.1	31.2	13.9
M76	1.1	31.2	13.9
M77	1.1	31.2	13.9
M78	1.1	31.2	13.9
M79	1.1	31.2	13.9
M80	1.1	31.2	13.9
M81	1.1	31.2	13.9
M82	1.1	31.2	13.9
M83	1.1	31.2	13.9
M84	1.1	31.2	13.9
M85	1.1	31.2	13.9
M86	1.1	31.2	13.9
M87	1.1	31.2	13.9
M88	1.1	31.2	13.9
M89	1.1	31.2	13.9
M90	1.1	31.2	13.9
M91	1.1	31.2	13.9
M92	1.1	31.2	13.9
M93	1.1	31.2	13.9
M94	1.1	31.2	13.9
M95	1.1	31.2	13.9
M96	1.1	31.2	13.9
M97	1.1	31.2	13.9
M98	1.1	31.2	13.9
M99	1.1	31.2	13.9
M100	1.1	31.2	13.9

* FLOW RATE CALCULATED AT 2000 RPM AND 90% EFFICIENCY

Electrical Schematic






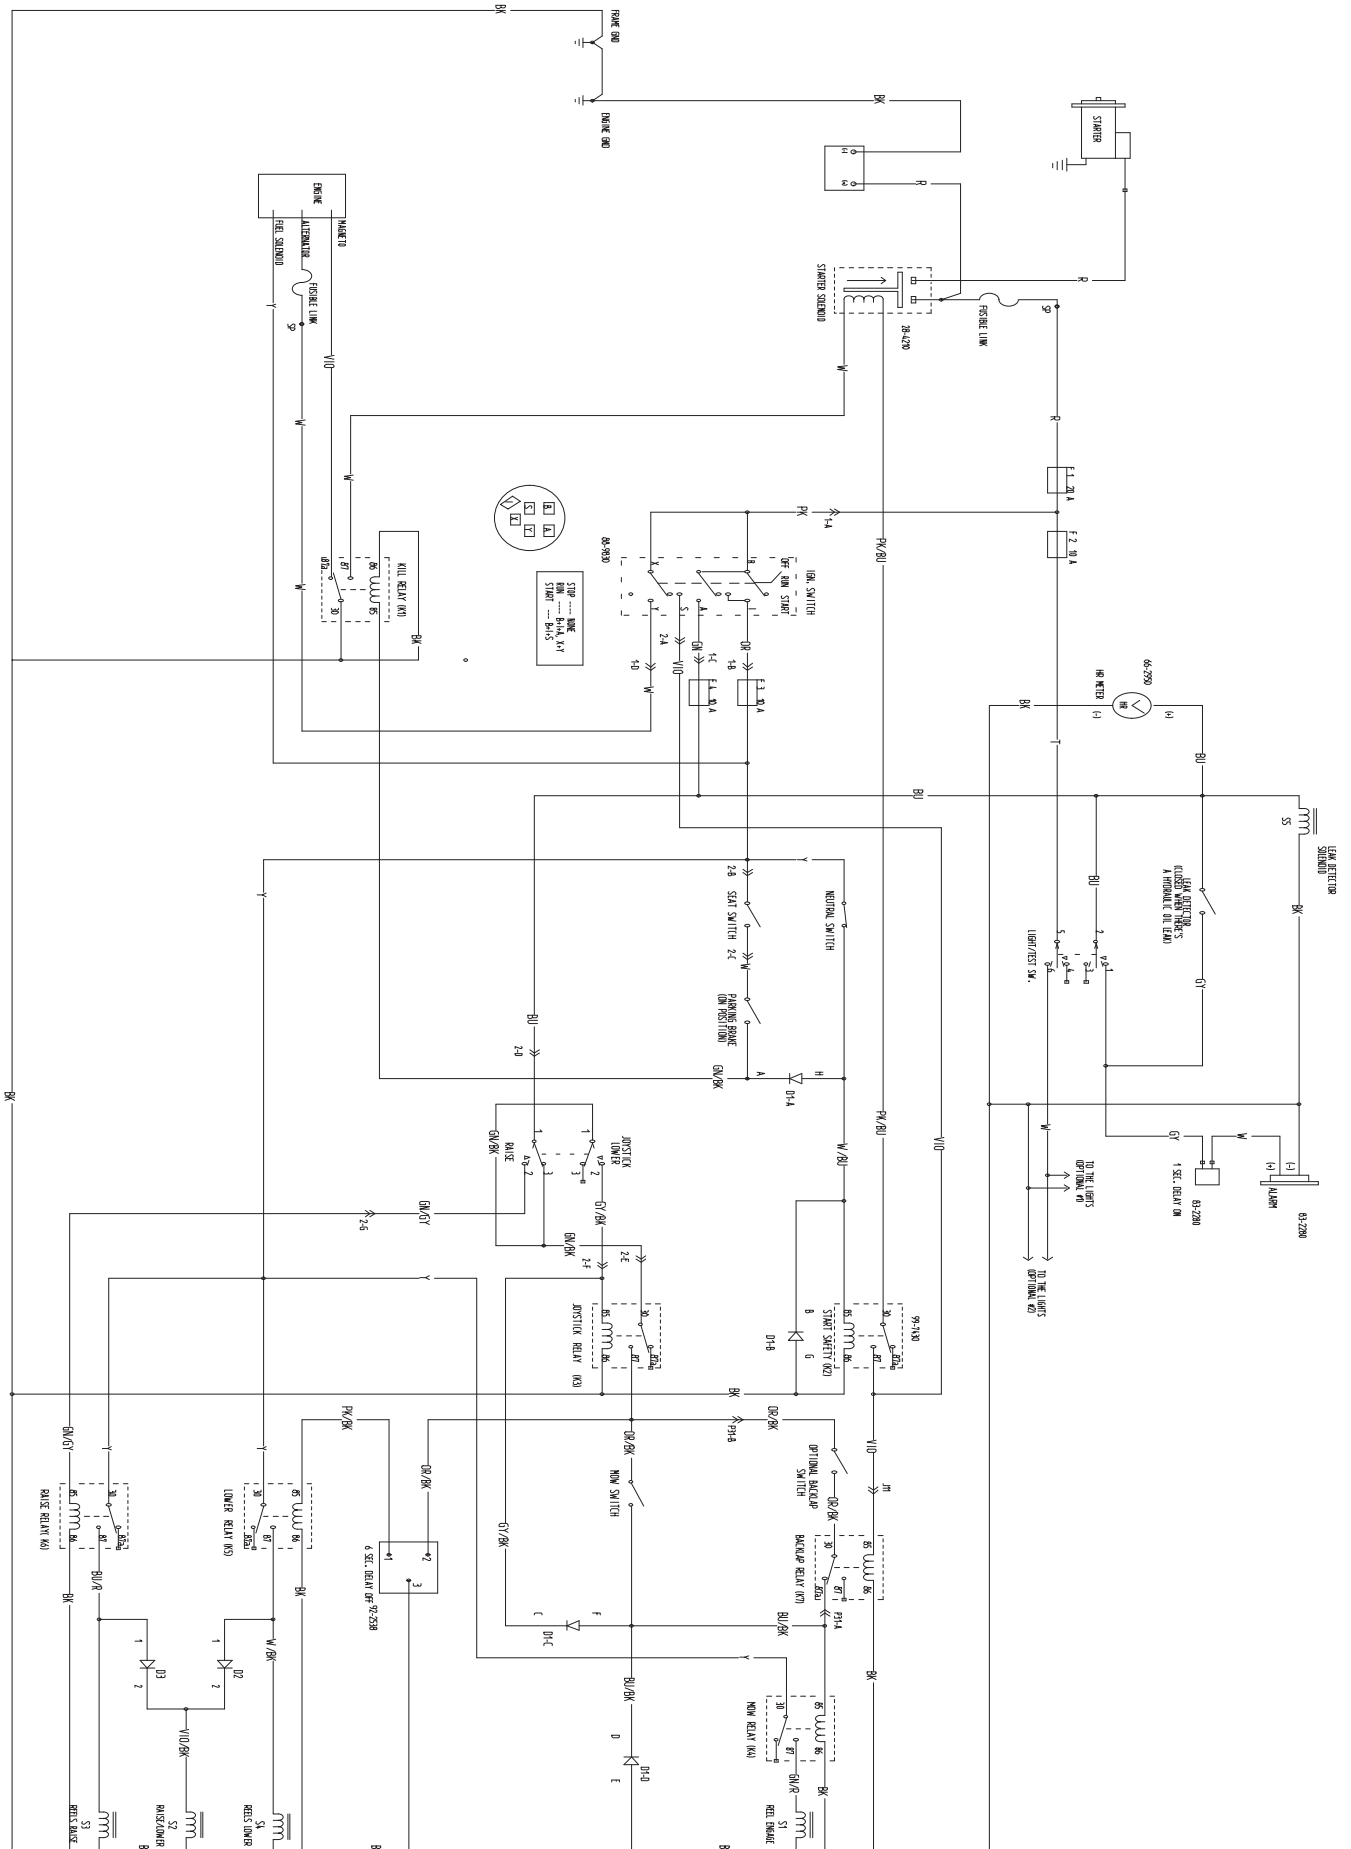




Ref. No.	Part No.	Qty.	Description
1	692544	1	Cylinder Assembly
2	808534	1	Bearing/Seal Kit
★3	805101	1	Oil Seal
8	808984	1	Breather Assembly
Δ★9	809094	1	Valve Cover Gasket
10	690751	1	Screw (Breather Assembly)
11	806083	1	Breather Tube
★12	691684	1	Crankcase Gasket
15	690946	1	Oil Drain Plug
18	808847	1	Crankcase Cover
★20	805049	1	Oil Seal
22	692540	1	Screw (Crankcase Gasket)
276	690704	1	Sealing Washer
★439	692154	1	O Ring Seal (Crankcase Cover)
552	806686	1	Governor Crank Bushing
572	690686	1	Breather Baffle
616	806685	1	Governor Crank
718	806469	1	Locating Pin
1019	808036	1	Label Kit

Ref. No.	Part No.	Qty.	Description

★ Included in Engine Gasket Set—Ref. 358.

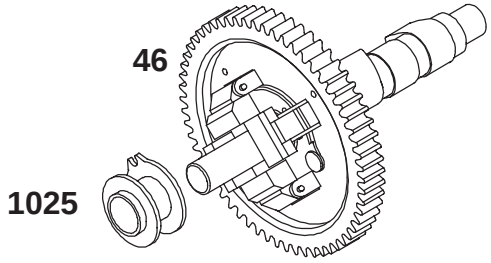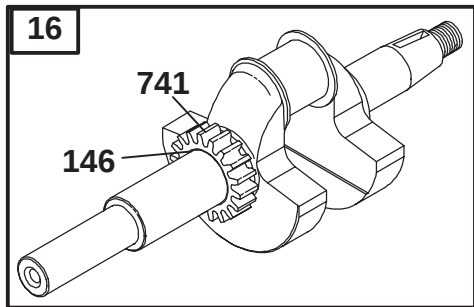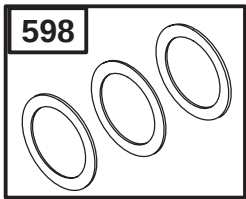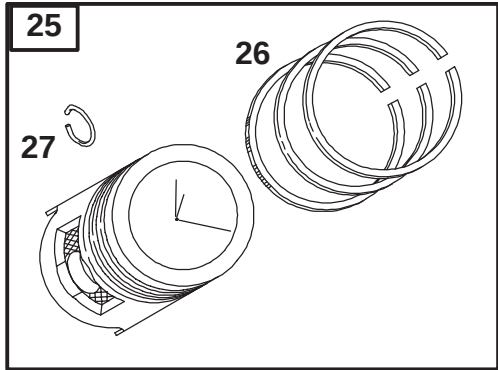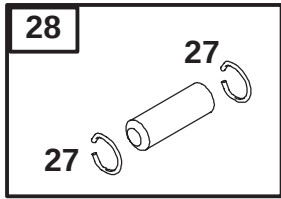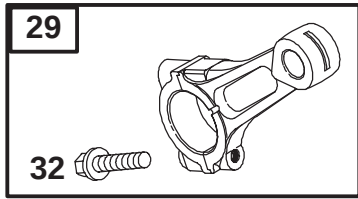


Assemblies include all parts shown in frames.

Crankshaft Assembly Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
16	692171	1	Crankshaft
17	690752	1	Ball Bearing
25	808326	1	Piston Assembly (Standard)
	808336	1	Piston Assembly (.010 O.S.)
	808337	1	Piston Assembly (.020 O.S.)
	808338	1	Piston Assembly (.030 O.S.)
26	807889	1	Ring Set (Standard)
	807994	1	Ring Set (.010 O.S.)
	807995	1	Ring Set (.020 O.S.)
	807996	1	Ring Set (.030 O.S.)
27	690683	1	Piston Pin Lock
28	807886	1	Piston Pin (Standard)
29	807900	1	Connecting Rod (Standard)
	807803	1	Connecting Rod (.020 Undersize)
32	690698	1	Screw (Connecting Rod 1 7/8")
46	691557	1	Camshaft

Ref. No.	Part No.	Qty.	Description
146	691639	1	Timing Key
377	808095	1	Woodruff Key
598	807625	1	End Play Shim
741	691530	1	Timing Gear
1025	690689	1	Governor Spool

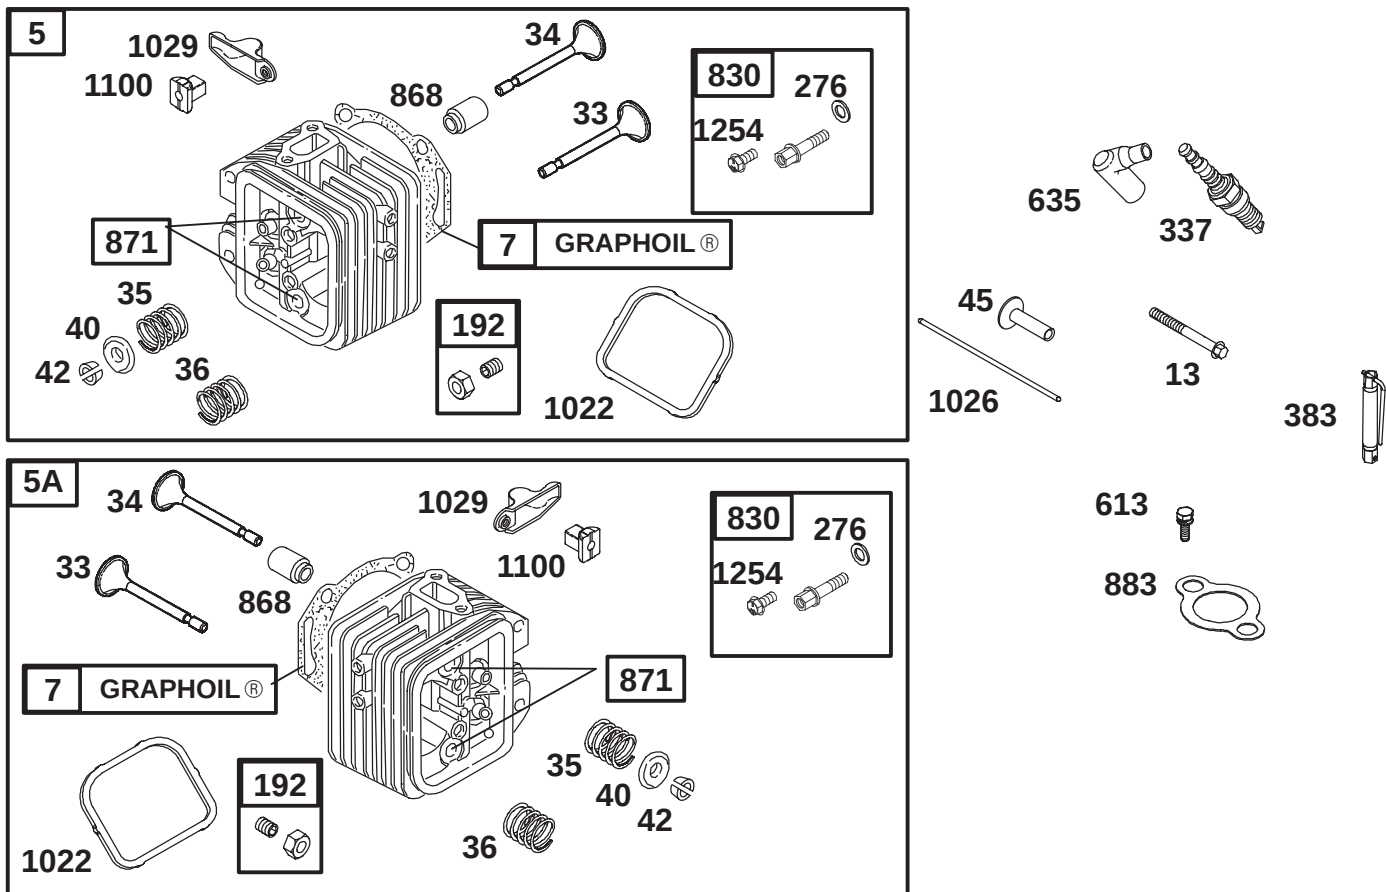

Assemblies include all parts shown in frames.



Cylinder Head Assembly Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
5	809185	1	Cylinder Head (No. 1) (Used After Date Code 01120200)
5A	809186	1	Cylinder Head (No. 2) (Used After Date Code 01120200)
Δ★7	690888	1	Cylinder Head Gasket
13	692059	1	Screw (Cylinder Head)
33	807681	1	Exhaust Valve
34	807680	1	Intake Valve
35	692084	1	Valve Spring (Intake)
36	692084	1	Valve Spring (Exhaust)
40	692058	1	Valve Retainer
42	807683	1	Valve Retainer
45	690977	1	Valve Tappet
192	807623	1	Rocker Arm Adjuster
276A	807085	1	Sealing Washer
337	496018	1	Sparkplug
383	19374	1	Sparkplug Wrench

Ref. No.	Part No.	Qty.	Description
613	691902	1	Screw (Exhaust Manifold)
635	692076	1	Sparkplug Boot
830	809157	1	Stud (Rocker Arm)
868	691963	1	Valve Seal
871	692057	1	Bushing Guide
883	691613	1	Exhaust Gasket
Δ★1022	806039	1	Rocker Cover Gasket
1026	691836	1	Push Rod (Steel-Intake)
	691758	1	Push Rod (Aluminum-Exhaust)
1029	691543	1	Rocker Arm
1100	690973	1	Rocker Arm Pivot
1254	807084	1	Screw (Rocker Arm Stud)

Δ Included in Valve Overhaul Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

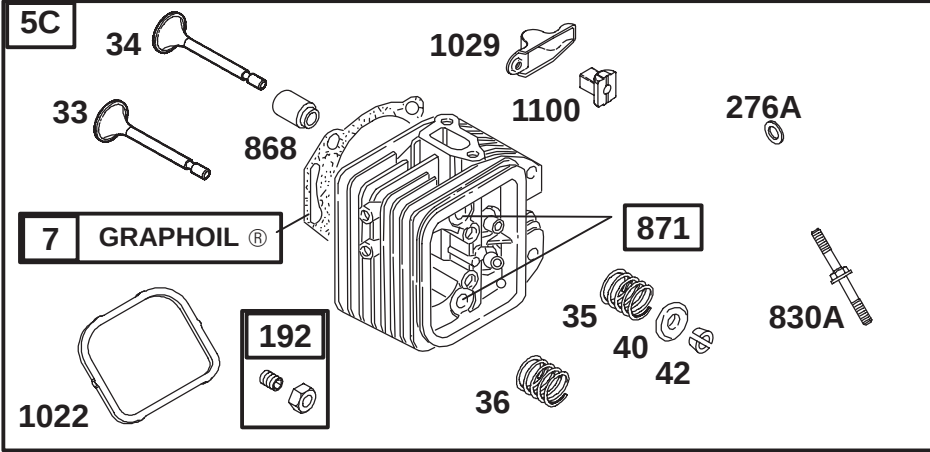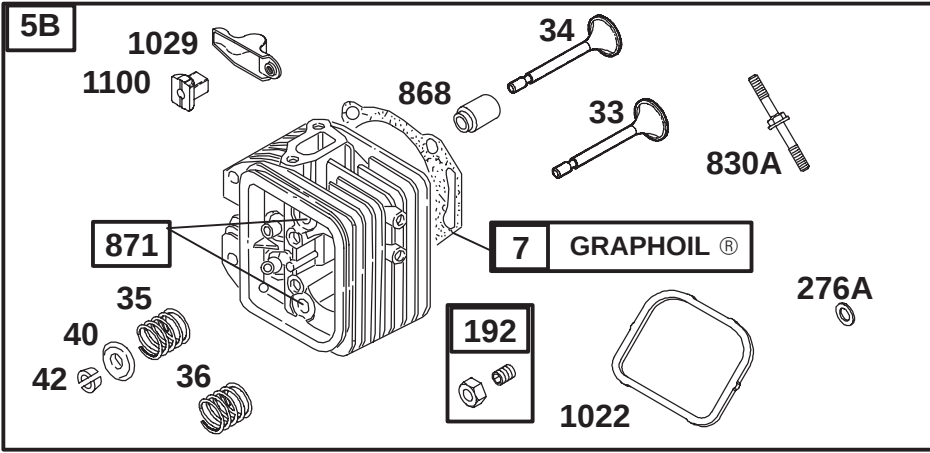

Assemblies include all parts shown in frames.


Cylinder Head Assembly **Briggs and Stratton Model 350447-1331-E1**

Ref. No.	Part No.	Qty.	Description
5B	808383	1	Cylinder Head (No. 1) (Used Before Date Code 01120300)
5C	808384	1	Cylinder Head (No. 2) (Used Before Date Code 01120300)
Δ★7	690888	1	Cylinder Head Gasket
13	692059	1	Screw (Cylinder Head)
33	807681	1	Exhaust Valve
34	807680	1	Intake Valve
35	692084	1	Valve Spring (Intake)
36	692084	1	Valve Spring (Exhaust)
40	692058	1	Valve Retainer
42	807683	1	Valve Retainer
45	690977	1	Valve Tappet
192	807623	1	Rocker Arm Adjuster
276A	691766	1	Sealing Washer (Used Before Date Code 01120300)

Ref. No.	Part No.	Qty.	Description
830A	691544	1	Stud (Rocker Arm) (Used Before Date Code 01120300)
868	691963	1	Valve Seal
871	692057	1	Bushing Guide
Δ★1022	806039	1	Rocker Cover Gasket
1026	691836	1	Push Rod (Steel-Intake)
	691758	1	Push Rod (Aluminum-Exhaust)
1029	691543	1	Rocker Arm
1100	690973	1	Rocker Arm Pivot

Δ Included in Valve Overhaul Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

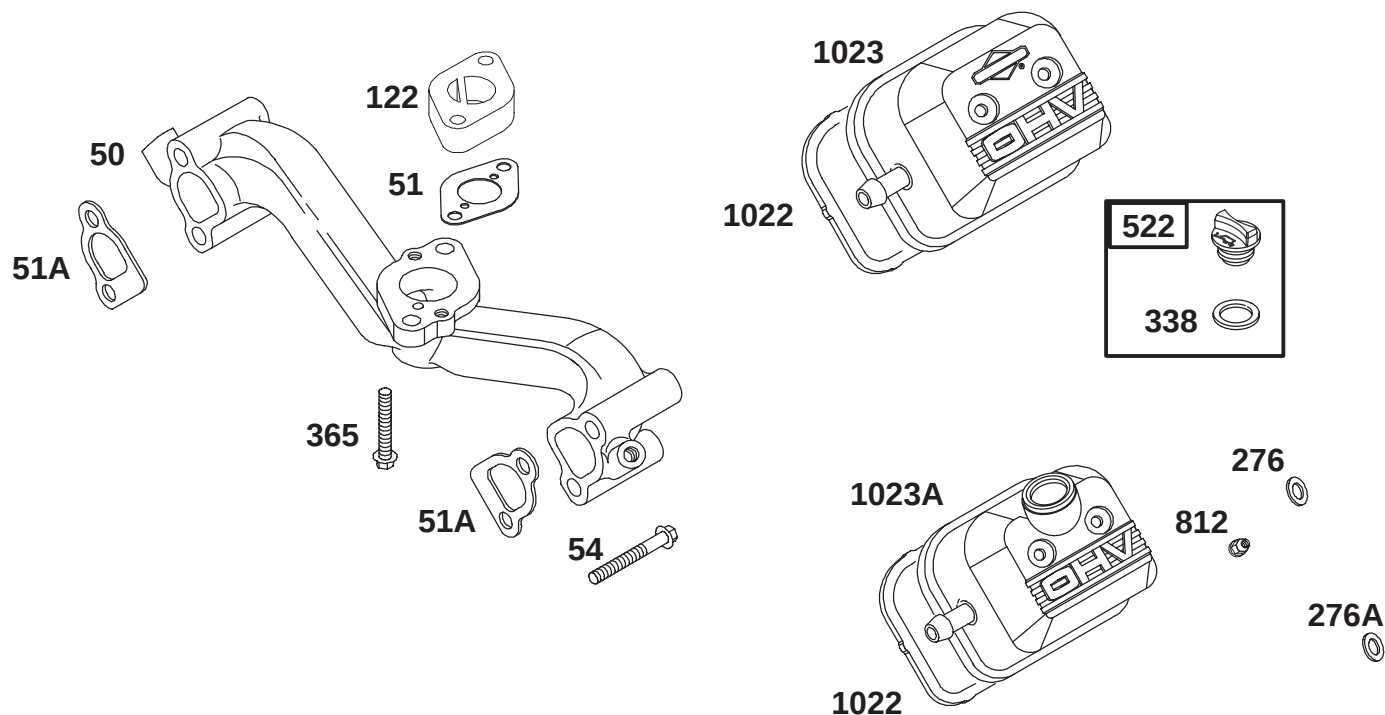

Assemblies include all parts shown in frames.


Intake Manifold and Rocker Cover Assembly Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
50	690754	1	Intake Manifold
★51	691694	1	Intake Gasket
Δ★51A	692035	1	Intake Gasket
54	690676	1	Screw (Intake Manifold)
122	690691	1	Carburetor Spacer
276	807085	1	Sealing Washer (Used After Date Code 01120200)
276A	691766	1	Sealing Washer (Used Before Code Date 01120300)
338	691312	1	Dipstick Gasket
365	690711	1	Screw (Carburetor)
522	491832	1	Dipstick/Fill Plug
812	692055	1	Nut (Rocker Arm Cover) (Used Before Code Date 01120300)
Δ★1022	806039	1	Rocker Cover Gasket
1023	691494	1	Rocker Cover
1023A	690910	1	Rocker Cover

Ref. No.	Part No.	Qty.	Description

Δ Included in Valve Overhaul Gasket Set—Ref. 1095.

★ Included in Engine Gasket Set—Ref. 358.

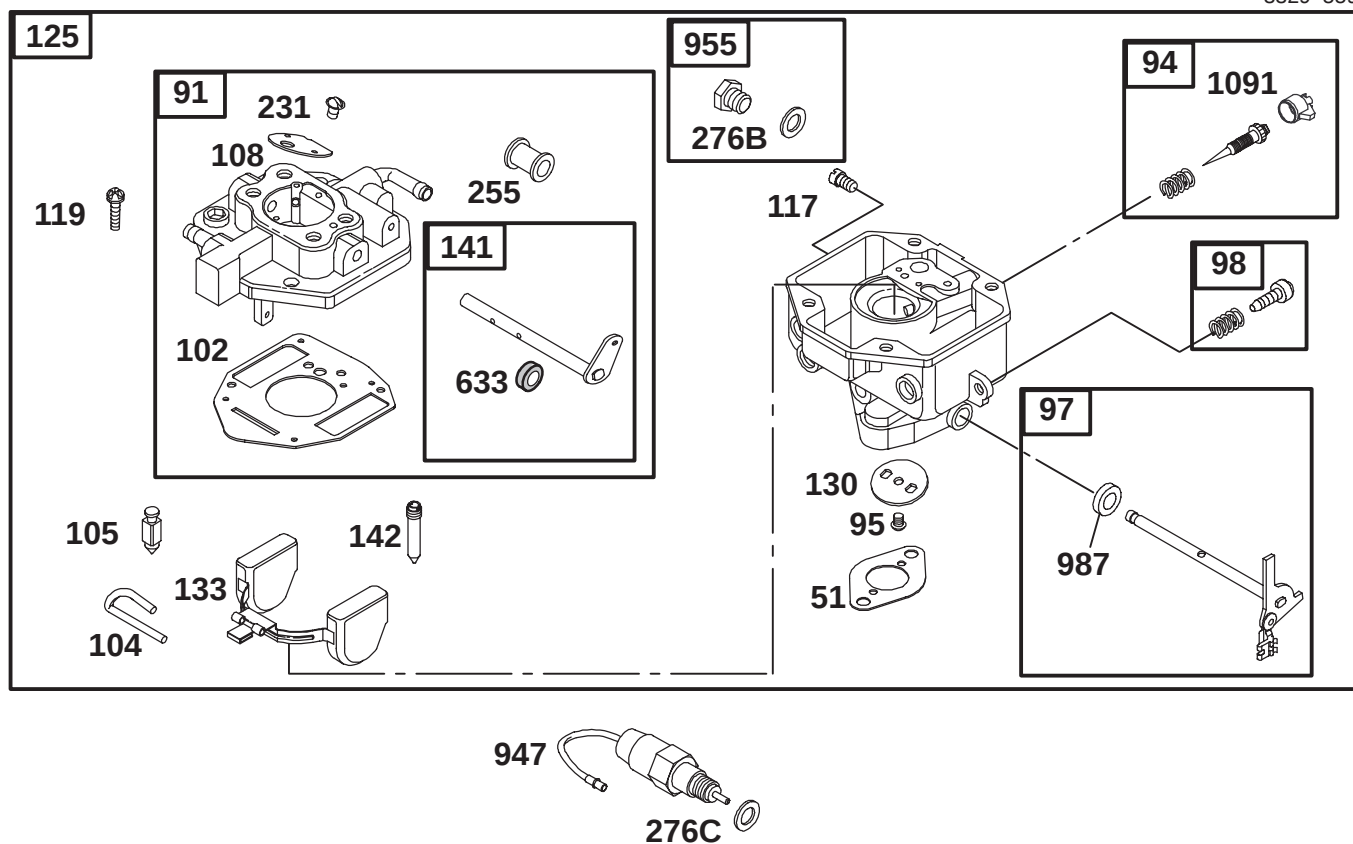

Assemblies include all parts shown in frames.

Carburetor Assembly


Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
★51	691694	1	Intake Gasket
91	809208	1	Upper Carburetor Body
●94	808257	1	Idle Mixture Kit
●95	690718	1	Screw (Throttle Valve)
97	808973	1	Throttle Shaft Kit
98	808981	1	Idle Speed Kit
●102	692077	1	Carburetor Body Gasket
●104	690723	1	Float Hinge Pin
●105	692078	1	Float Needle Valve
108	690719	1	Choke Valve
109	809096	1	Choke Shaft
●117	808406	1	Main Jet (Standard)
119	690720	1	Screw (Upper to Lower Carburetor Body)
125	809209	1	Carburetor
130	690726	1	Throttle Valve
133	806961	1	Carburetor Float
●142	690725	1	Carburetor Nozzle
●231	690718	1	Screw (Choke Valve)
●255	690721	1	Choke Shaft Bushing
●276B	690724	1	Sealing Washer
276C	806137	1	Sealing Washer
●633	690722	1	Choke/Throttle Shaft

Ref. No.	Part No.	Qty.	Description
947	692094	1	Seal
955	807723	1	Carburetor Plug
●987	806131	1	Throttle Shaft Seal
●1091	691516	1	Limiter Cap

● Included in Carburetor Overhaul Kit—Ref. 121.

★ Included in Engine Gasket Set—Ref. 358.

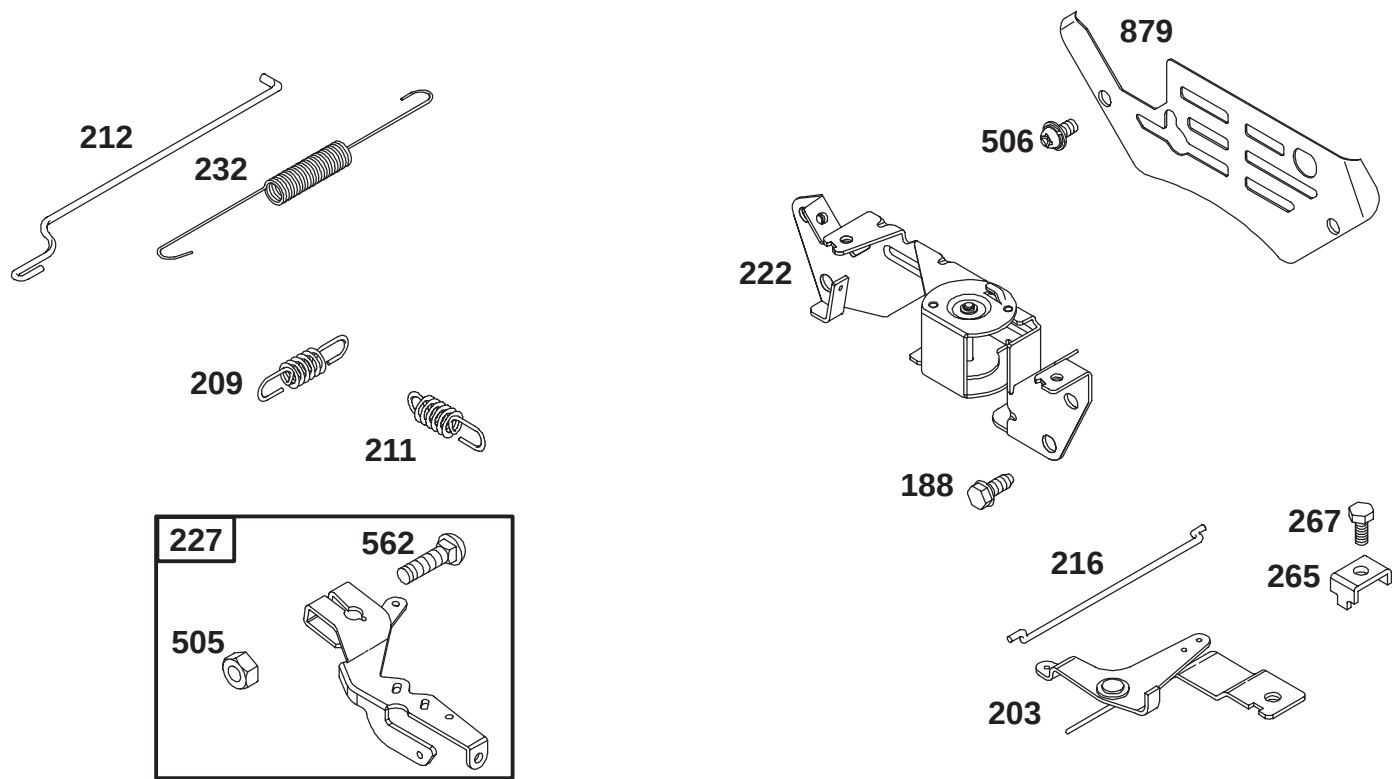






Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
188	692056	1	Screw (Control Bracket)
203	690923	1	Bell Crank
209	806872	1	Governor Spring
211	806868	1	Governed Idle Spring
	692068	1	Governed Idle Spring (Secondary)
212	690712	1	Throttle Link
216	690705	1	Choke Link
222	808454	1	Control Bracket
227	690236	1	Governor Control Lever
232	692073	1	Governor Link Spring
265	691024	1	Casing Clamp
267	692083	1	Screw (Casing Clamp)
505	690238	1	Nut (Governor Control (Lever)
506	690677	1	Screw (Carburetor Cover)
562	690239	1	Bolt (Governor Control Lever)
879	690757	1	Carburetor Cover

Ref. No.	Part No.	Qty.	Description

★ Included in Engine Gasket Set-Ref. 358.

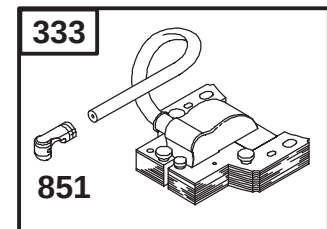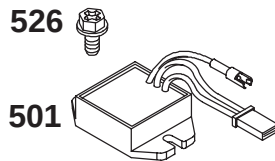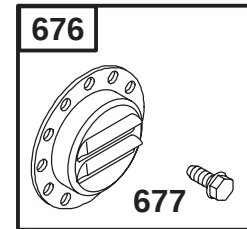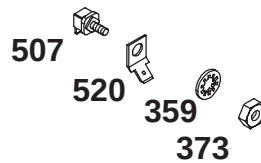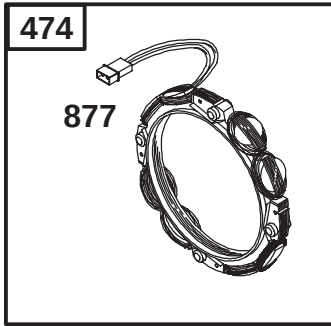


Assemblies include all parts shown in frames.

Alternator Assembly

Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
333	492341	1	Magneto Armature
334	692066	1	Screw (Magneto Armature)
359	691077	1	Washer (Ground Terminal)
373	691612	1	Nut (Ground Terminal)
474	696458	1	Alternator
501	691185	1	Regulator
507	691972	1	Insulator
520	691084	1	Ground Terminal
526	692067	1	Screw (Regulator)
529	690744	1	Grommet
578	692319	1	Wire Assembly
676	397630	1	Muffler Deflector
677	690661	1	Screw (Muffler Deflector)
729	690586	1	Wire Clip
851	493880	1	Sparkplug Terminal
877	399916	1	Alternator Harness
1054	280275	1	Cable Tie
1119	691552	1	Screw (Alternator)

Ref. No.	Part No.	Qty.	Description

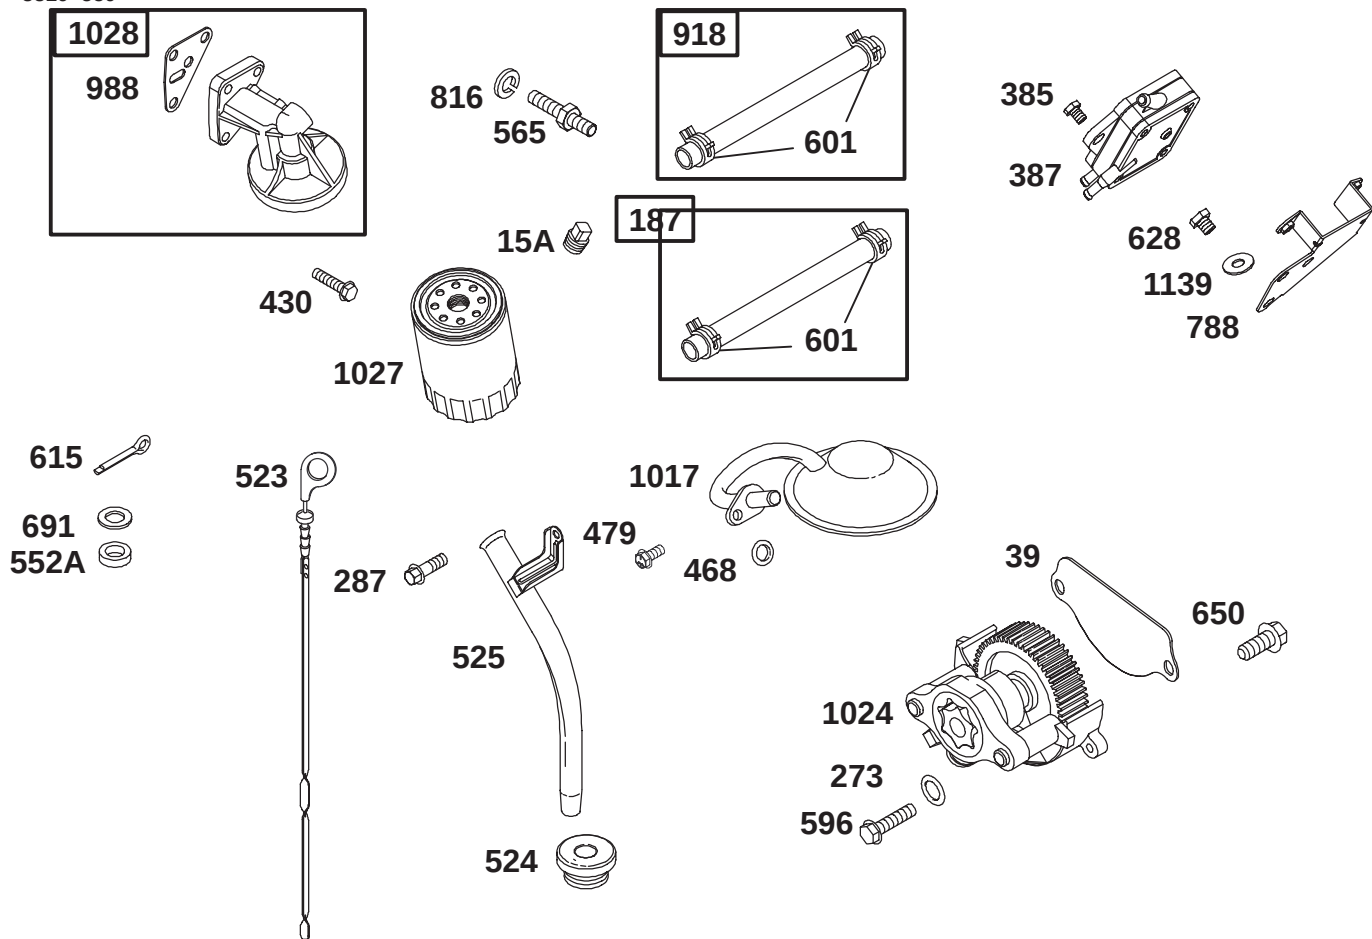


Assemblies include all parts shown in frames.

Fuel Pump, Oil Pump and Dipstick Assembly Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
15A	690283	1	Oil Drain Plug
39	690745	1	Oil Deflector
187	691050	1	Fuel Line (Cut to Required Length)
★273	690681	1	O-Ring Seal (Oil Pump)
287	692062	1	Screw (Dipstick Tube)
385	693169	1	Screw (Fuel Pump)
387	808969	1	Fuel Pump
430	690679	1	Bolt (Oil Pump)
★468	690690	1	O-Ring Seal (Oil Pump Screen)
479	807084	1	Screw (Oil Pump Screen)
523	693175	1	Dipstick
524	693172	1	Dipstick Tube Seal
525	693174	1	Dipstick Tube
552A	690701	1	Governor Crank Bushing
565	690682	1	Stud (Oil Filter)
596	691492	1	Screw (Oil Pump)
601	691038	1	Hose Clamp
615	691550	1	Governor Shaft

Ref. No.	Part No.	Qty.	Description
628	692062	1	Retainer
650	692539	1	Screw (Pump Bracket)
691	690680	1	Screw (Oil Deflector)
788	691559	1	Governor Shaft Seal
816	690706	1	Pump Bracket
918	393815	1	Washer (Oil Filter)
★988	692063	1	Vacuum Hose
1017	690900	1	Oil Adapter Gasket
1024	693185	1	Oil Pump Screen
1027	492932	1	Oil Pump
1028	808235	1	Oil Filter
1139	806497	1	Oil Filter Adapter
		1	Washer (Fuel Pump Bracket)

★ Included in Engine Gasket Set-Ref. 358.

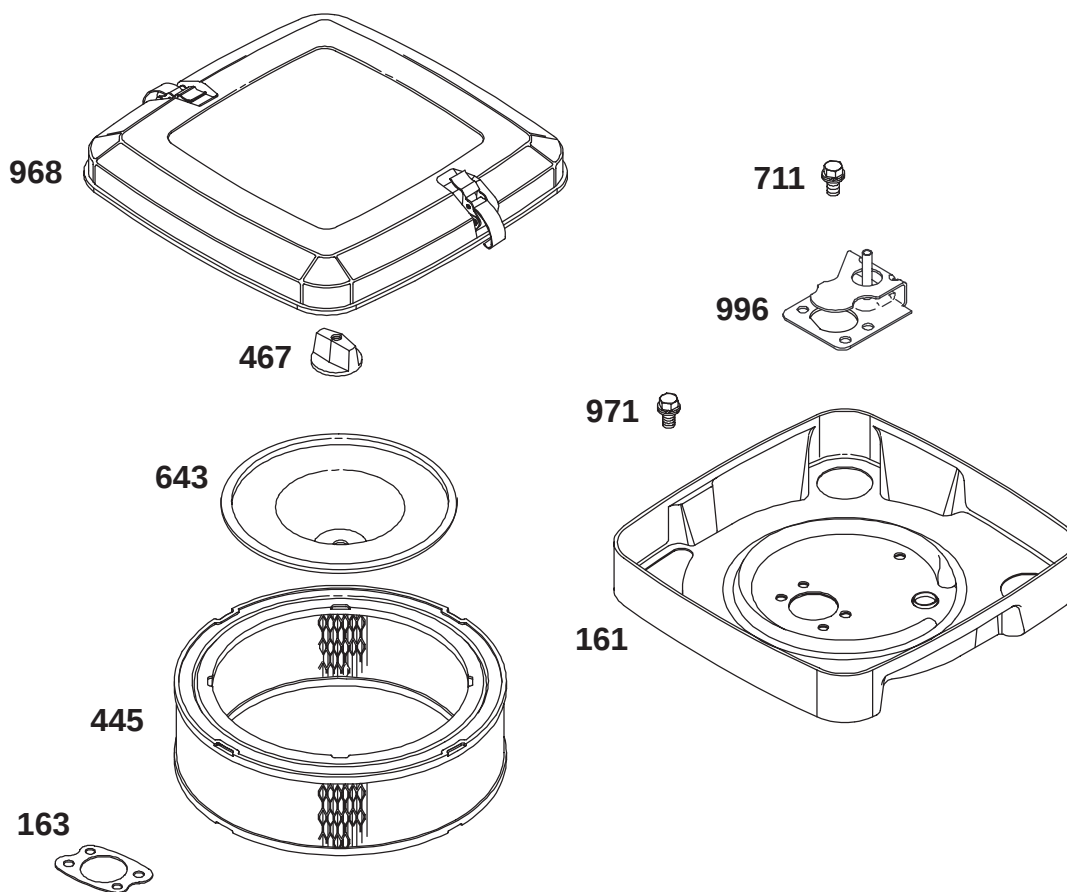


Assemblies include all parts shown in frames.

Air Cleaner Assembly

Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
161	691561	1	Air Cleaner Base
163	692081	1	Air Cleaner Gasket
445	394018	1	Air Cleaner Cartridge Filter
467	691985	1	Air Cleaner Knob
643	692079	1	Air Filter Retainer
711	692539	1	Screw (Carburetor Shield)
968	692097	1	Air Cleaner Cover
971	692537	1	Screw (Air Cleaner Base)
996	691577	1	Carburetor Shield

Ref. No.	Part No.	Qty.	Description

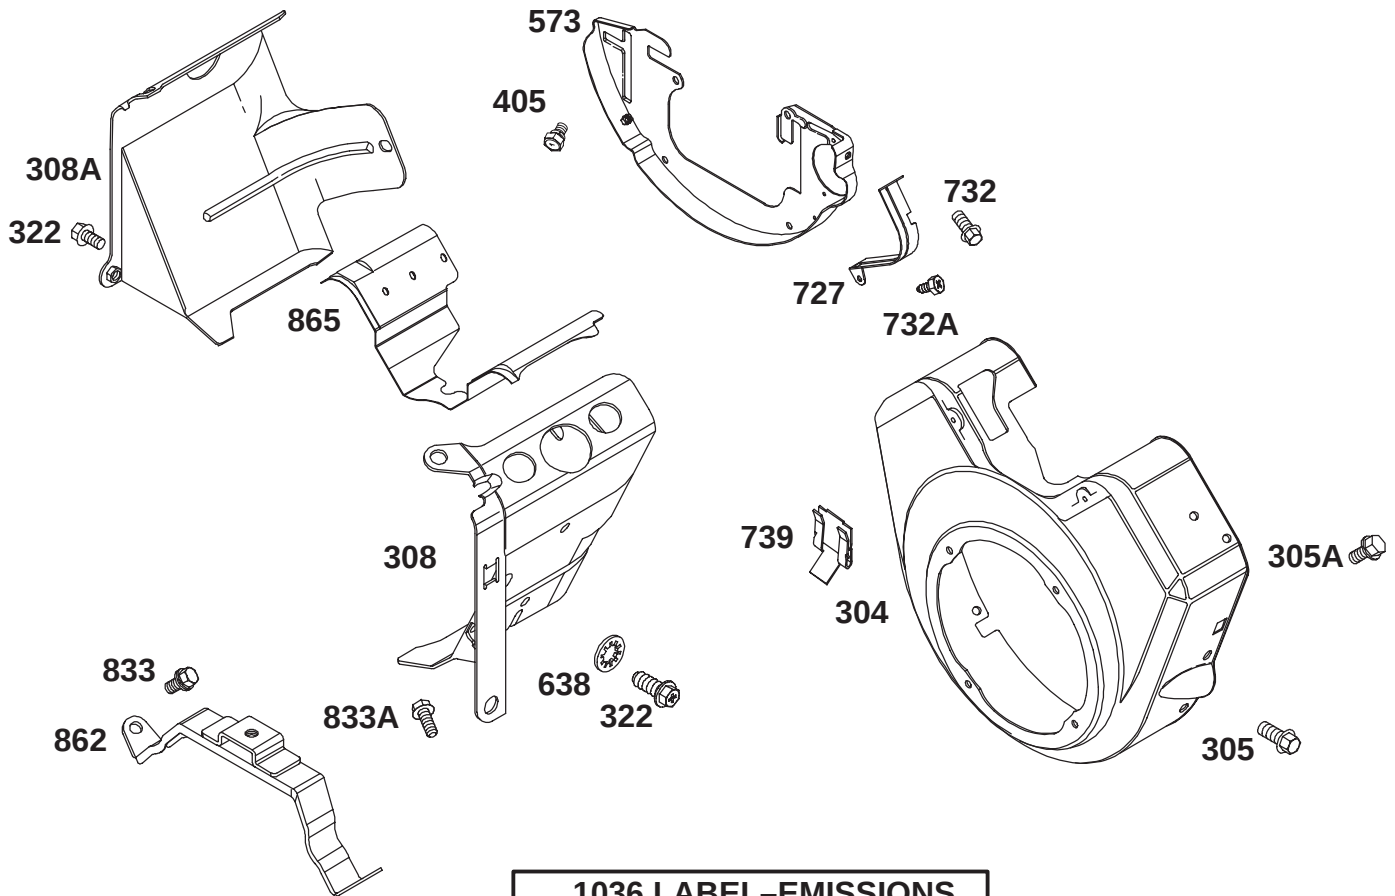





1036 LABEL-EMISSIONS

Assemblies include all parts shown in frames.

Blower Housing Assembly Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
304	690929	1	Blower Housing
305	692539	1	Screw (Blower Housing)
305A	692056	1	Screw (Blower Housing)
308	806547	1	Cylinder Head Cover (Cylinder #1)
308A	806546	1	Cylinder Head Cover (Cylinder #2)
322	692539	1	Screw (Cylinder Head Cover)
405	807163	1	Screw (Back Plate)
573	690902	1	Back Plate
638	691551	1	Washer (Cylinder Head Cover)
727	690714	1	Starter Drive Cover
732	692539	1	Screw (Starter Drive Cover)
732A	690688	1	Screw (Starter Drive Cover)
739	690451	1	Debris Clip
833	692539	1	Screw (Cleaner Mounting Strap)
833A	690872	1	Screw (Cleaner

Ref. No.	Part No.	Qty.	Description
862	692153	1	Mounting Strap)
			Cleaner Mounting Strap
865	690750	1	Air Guide Cover
1036	806885	1	Emissions Label

 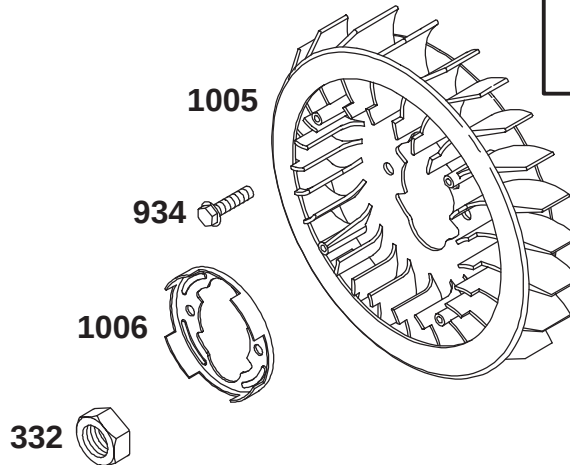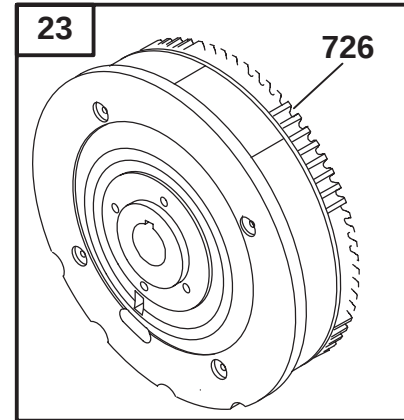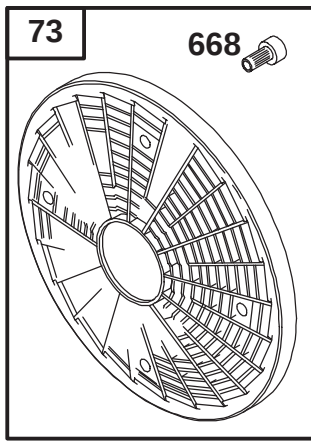


Assemblies include all parts shown in frames.

Flywheel Assembly

Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
23	808768	1	Flywheel
73	494439	1	Rotating Screen
74	691647	1	Screw (Rotating Screen)
332	690887	1	Nut (Flywheel)
363	19203	1	Flywheel Puller
668	691500	1	Spacer
726		1	Ring Gear (Sold in Flywheel Kit Only, See Ref. 23)
934	691058	1	Screw (Fan Retainer)
1005	690911	1	Flywheel Fan
1006	690452	1	Fan Retainer

Ref. No.	Part No.	Qty.	Description

 

Ref. No.	Part No.	Qty.	Description
309	691564		Starter Motor
310	496880	1	Screw (Starter Housing)
311	496887	1	Brush Set
510	496881	1	Starter Drive
544	690855	1	Starter Armature
697	692062	1	Screw (Drive Cap)
801	808778	1	Drive Cap
802	496813	1	End Cap
803	690854	1	Starter Housing
1051	691124	1	Ring—Retaining

56

Gasket Assembly


Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
★3	805101	1	Oil Seal
Δ★7	690888	1	Cylinder Head Gasket
★9	807688	1	Breather Gasket
★12	691684	1	Crankcase Gasket
★20	805049	1	Oil Seal
★51	691694	1	Intake Gasket
★51A	692035	1	Intake Gasket
★273	690681	1	O Ring Seal (Oil Pump)
Δ★276A	691766	1	Sealing Washer
358	808389	1	Engine Gasket Set
★439	692154	1	O-Ring Seal (Crankcase Cover)
★468	690960	1	O Ring Seal (Oil Pump Screen)
Δ★883	691613	1	Exhaust Gasket
★988	692063	1	Oil Adapter Gasket
Δ★1022	806039	1	Rocker Cover Gasket
1095	808391	1	Valve Gasket Set

Ref. No.	Part No.	Qty.	Description

★ Included in Engine Gasket Set—Ref. 358.

121 CARBURETOR OVERHAUL KIT

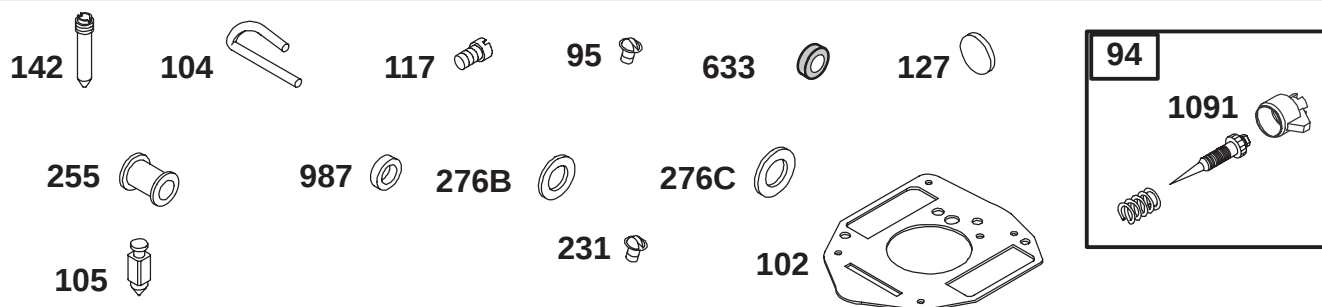

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly Briggs and Stratton Model 350447-1331-E1

Ref. No.	Part No.	Qty.	Description
●94	808257	1	Idle Mixture Kit
●95	690718	1	Screw (Throttle Valve)
●102	692077	1	Carburetor Body Gasket
●104	690723	1	Float Hinge Pin
●105	692078	1	Float Needle Valve
●117	806126	1	Main Jet
121	808395	1	Carburetor Overhaul Kit
●127	690727	1	Welch Plug
●142	806128	1	Carburetor Nozzle
●231	690718	1	Screw (Choke Valve)
●255	690721	1	Choke Shaft Bushing
●276B	690724	1	Sealing Washer
●276C	806137	1	Sealing Washer
●633	690722	1	Choke/Throttle Shaft Seal
●987	806131	1	Throttle Shaft Seal
●1091	691516	1	Limiter Cap

Ref. No.	Part No.	Qty.	Description

- Included in Carburetor Overhaul Kit—Ref. 121.

