



**Count on it.**

Form No. 3423-976 Rev E

# Parts Catalog

## TX 1000

### Compact Tool Carrier

Model No. 22327—Serial No. 402000000 and Up

Model No. 22327G—Serial No. 402800000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                  |    |
|--------------------------------------------------|----|
| Frame, Fuel Tank and Cover Assembly .....        | 6  |
| LH Fuel Tank Assembly No. 130-1026 .....         | 8  |
| RH Fuel Tank Assembly No. 130-1027 .....         | 10 |
| Hydraulic Tank and Track Shaft Assembly .....    | 12 |
| Track Assembly .....                             | 14 |
| LH Track Assembly No. 138-0794 .....             | 16 |
| Hydraulic Motor Assembly No. 138-0761 .....      | 18 |
| RH Track Assembly No. 138-0795 .....             | 20 |
| Hydraulic Motor Assembly No. 138-0778 .....      | 22 |
| Brake Assembly .....                             | 24 |
| Front Tower Assembly .....                       | 26 |
| Hydraulic Motor and Hose Assembly .....          | 28 |
| Radiator and Air Cleaner Assembly .....          | 30 |
| Radiator Support Kit Assembly No. 161-7280 ..... | 32 |
| Air Cleaner Assembly No. 93-2190 .....           | 34 |
| Engine Mount and Muffler Assembly .....          | 36 |
| Tandem Pump and Gear Pump Assembly .....         | 38 |
| Tandem Pump Assembly No. 138-0767 .....          | 40 |
| Gear Pump Assembly No. 130-7731 .....            | 42 |
| Control Valve and Reference Bar Assembly .....   | 44 |
| Control Valve Assembly No. 125-3704 .....        | 46 |
| 2-Spool Valve and Auxiliary Valve Assembly ..... | 48 |
| 2-Spool Valve Assembly No. 130-7710 .....        | 50 |
| Double Detent Valve Assembly No. 136-4538 .....  | 52 |
| Loader Arm Assembly .....                        | 54 |
| Hydraulic Cylinder Assembly No. 130-5175 .....   | 56 |
| Hydraulic Cylinder Assembly No. 130-5176 .....   | 58 |
| Hydraulic Cylinder Assembly No. 130-5195 .....   | 60 |
| Loader Hydraulic Assembly .....                  | 62 |
| Quick Attach Assembly .....                      | 64 |
| Front Cover and Side Panel Assembly .....        | 66 |
| Hood Assembly .....                              | 68 |
| Manual Tube Assembly .....                       | 70 |
| Platform and Cushion Assembly .....              | 72 |
| Electrical Assembly .....                        | 74 |
| Crankcase Assembly .....                         | 76 |
| Oil Pan Assembly .....                           | 77 |
| Cylinder Head Assembly .....                     | 78 |
| Gear Case Assembly .....                         | 79 |
| Cylinder Head Cover Assembly .....               | 80 |
| Dipstick and Guide Assembly .....                | 81 |
| Main Bearing Case Assembly .....                 | 82 |
| Camshaft and Idle Gear Shaft Assembly .....      | 83 |
| Piston and Crankshaft Assembly .....             | 84 |
| Flywheel Assembly .....                          | 85 |
| Fuel Camshaft and Governor Shaft Assembly .....  | 86 |
| Idle Apparatus Assembly .....                    | 87 |
| Stop Solenoid Assembly .....                     | 88 |
| Injection Pump Assembly .....                    | 89 |
| Governor Assembly .....                          | 90 |
| Speed Control Plate Assembly .....               | 91 |
| Nozzle Holder and Glow Plug Assembly .....       | 92 |
| Nozzle Holder Assembly .....                     | 93 |
| Alternator and Pulley Assembly .....             | 94 |

Contents (continued)

Alternator Components Assembly ..... 95

Starter Installation Assembly ..... 96

Starter Component Assembly ..... 97

Water Flange and Thermostat Assembly ..... 98

Water Pump Assembly ..... 99

Valve and Rocker Arm Assembly ..... 100

Inlet and Exhaust Manifold Assembly ..... 101

Accessories and Service Parts ..... 102

 
Upper Gasket Kit ..... 103

Lower Gasket Kit ..... 104

Attachments and Accessories ..... 105




# Frame, Fuel Tank and Cover Assembly

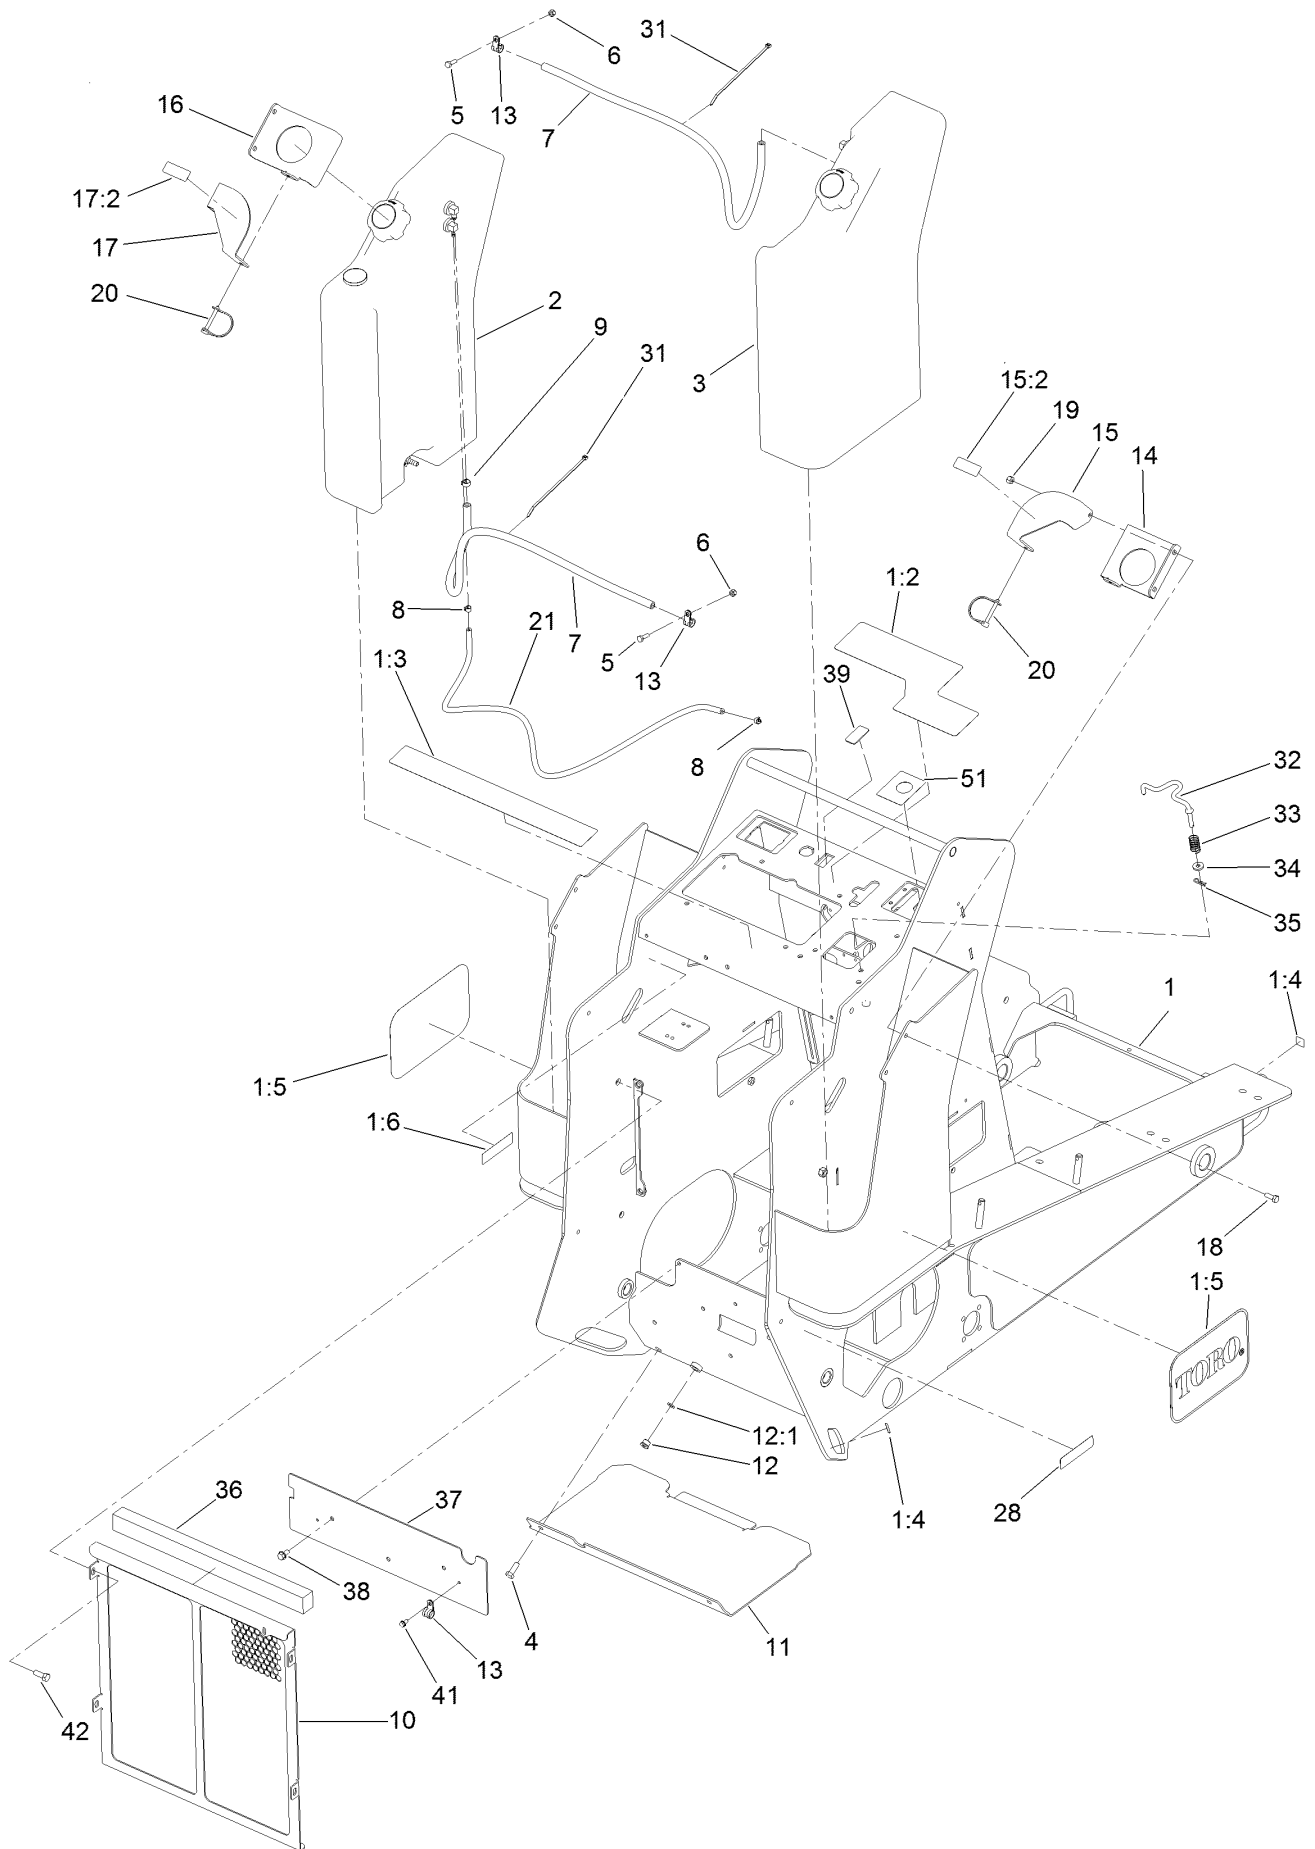

## Frame, Fuel Tank and Cover Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 130-5314           | 1           | Frame                    | 15:2        | 93-6680            | 1           | Decal-Diesel             |
| 1:2         | 136-5824           | 1           | Decal-Control Panel      | 16          | 130-1134-03        | 1           | Plate-Hold Down, LH      |
| 1:3         | 131-0710           | 1           | Decal-Safety             | 17          | 130-5316           | 1           | Plate-Lock, Fuel Cap, LH |
| 1:4         | 93-9084            | 4           | Decal-Point, Lift        | 17:2        | 93-6680            | 1           | Decal-Diesel             |
| 1:5         | 66-6140            | 2           | Decal                    | 18          | 322-4              | 4           | Screw-HH                 |
| 1:6         | 115-4865           | 1           | Decal-Fill, Radiator     | 19          | 3296-29            | 4           | Nut-Lock, NI             |
| 2           | 130-1026           | 1           | LH Fuel Tank ASM         | 20          | 100-1663           | 2           | Pin-Hitch                |
| 3           | 130-1027           | 1           | RH Fuel Tank ASM         | 21          | 130-7714           | 1           | Hose-Fuel                |
| 4           | 323-6              | 2           | Screw-HH                 | 28          | 133-8056           | 1           | Decal-Arrester, Spark    |
| 5           | 321-5              | 2           | Screw-HH                 | 31          | 3290-378           | 2           | Tie-Cable                |
| 6           | 32128-33           | 2           | Nut-HF                   | 32          | 131-0713           | 1           | Rod-Interlock            |
| 7           | 110-6186           | 2           | Hose-Fuel                | 33          | 85-6750            | 1           | Spring-Control           |
| 8           | 2412-80            | 2           | Clamp-Hose               | 34          | 88-7200            | 1           | Washer-Flat              |
| 9           | 92-2379            | 2           | Clamp-Hose               | 35          | 3290-307           | 1           | Pin-Cotter               |
| 10          | 130-0964-03        | 1           | Radiator Cover ASM       | 36          | 131-9175           | 1           | Seal-Foam                |
| 11          | 130-0995-01        | 1           | Cover-Bottom             | 37          | 133-1637-01        | 1           | Plate-Cover              |
| 12          | 353-989            | 1           | Plug-Hex, Hollow         | 38          | 32144-14           | 3           | Screw-HWHTF              |
| 12:1        | 237-42             | 1           | O-Ring                   | 39          | AU382892A1         | 1           | Blank-Switch, Rocker     |
| 13          | 2412-134           | 4           | Clamp-R                  | 41          | 32144-4            | 2           | Screw-HWH                |
| 14          | 130-1104-03        | 1           | Plate-Hold Down, RH      | 42          | 323-5              | 4           | Screw-HH                 |
| 15          | 130-5317           | 1           | Plate-Lock, Fuel Cap, RH | 51          | 137-9030           | 1           | Decal-Ignition Switch    |
 
# LH Fuel Tank Assembly No. 130-1026

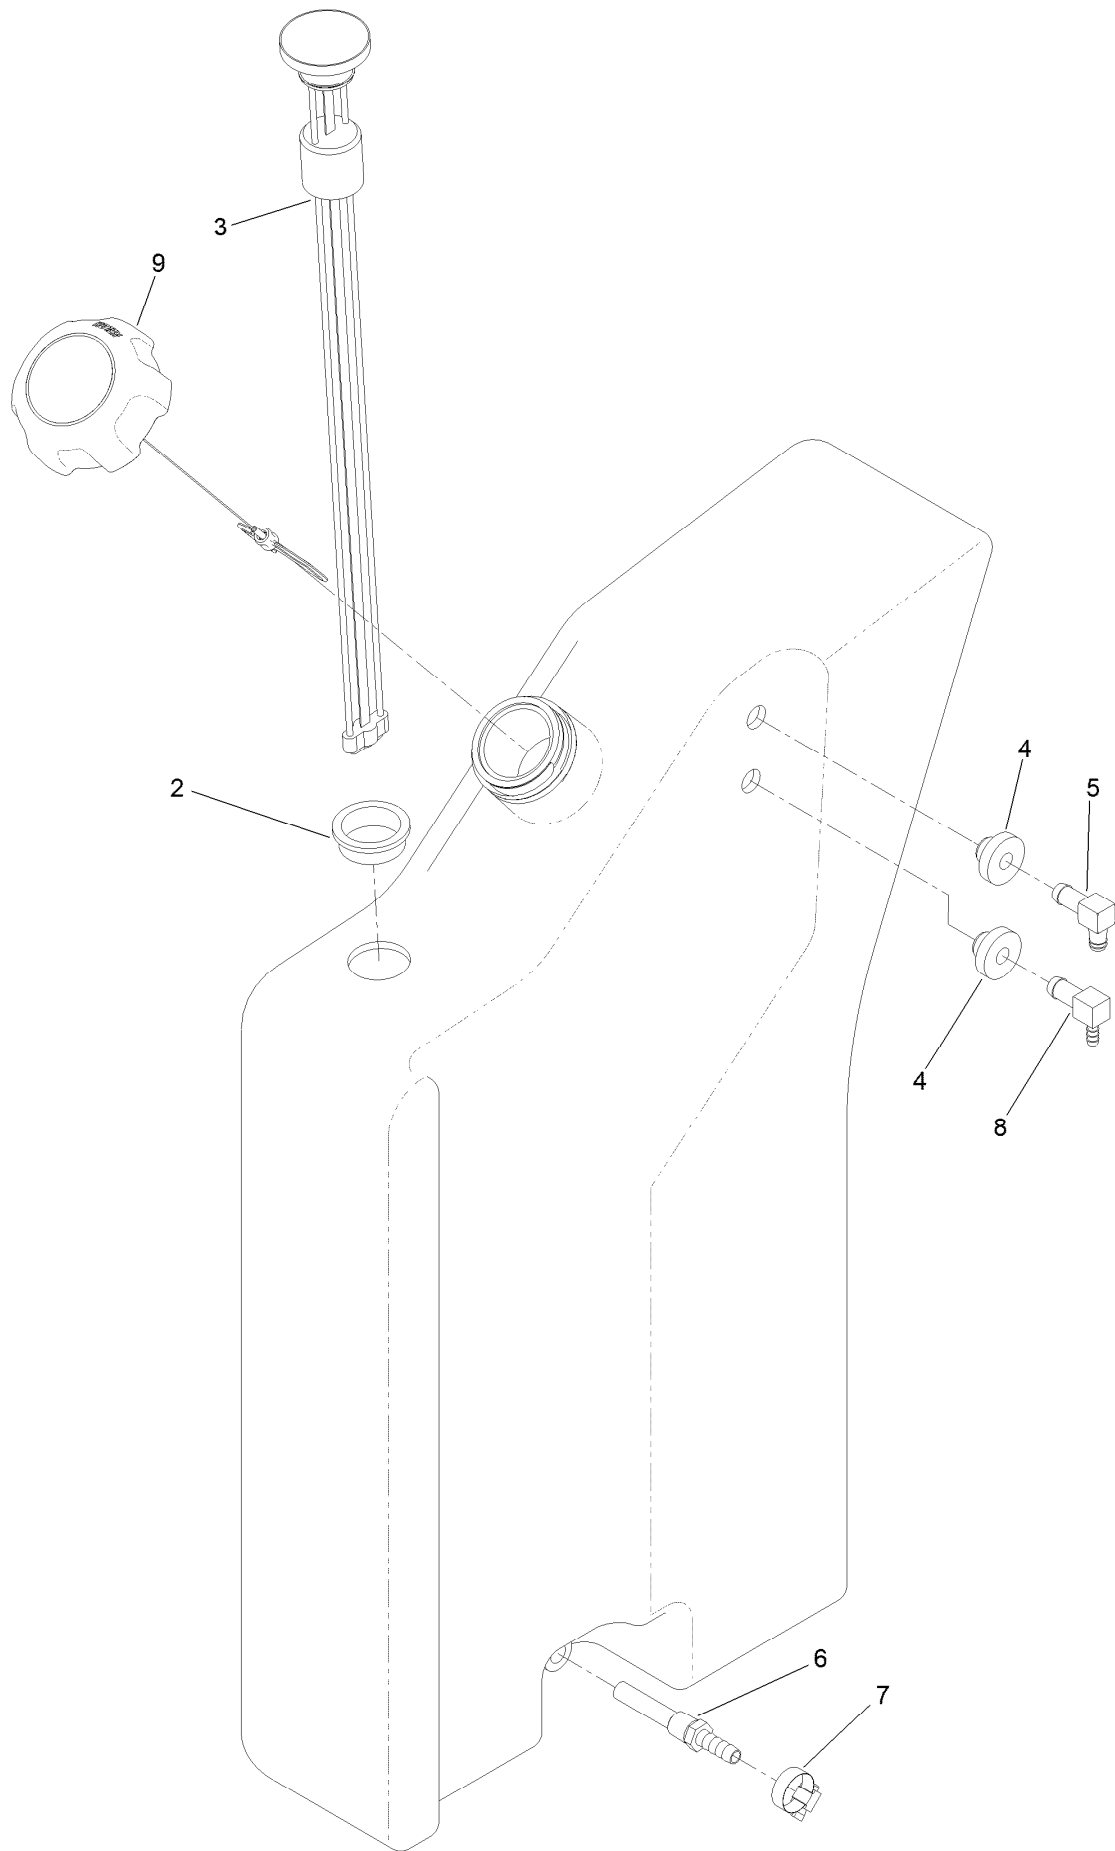


## LH Fuel Tank Assembly No. 130-1026 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 95-8972            | 1           | Grommet            |
| 3           | 104-5603           | 1           | Gauge-Level, Fuel  |
| 4           | 46-6560            | 2           | Bushing            |
| 5           | 1-643259           | 1           | Fitting-Elbow      |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 6           | 112-6374           | 1           | Fitting-Strainer      |
| 7           | 2412-36            | 1           | Clamp-Hose            |
| 8           | 104-5228           | 1           | Fitting-Elbow, 90 DEG |
| 9           | 130-7567           | 1           | Cap-Diesel,           |
 
# RH Fuel Tank Assembly No. 130-1027

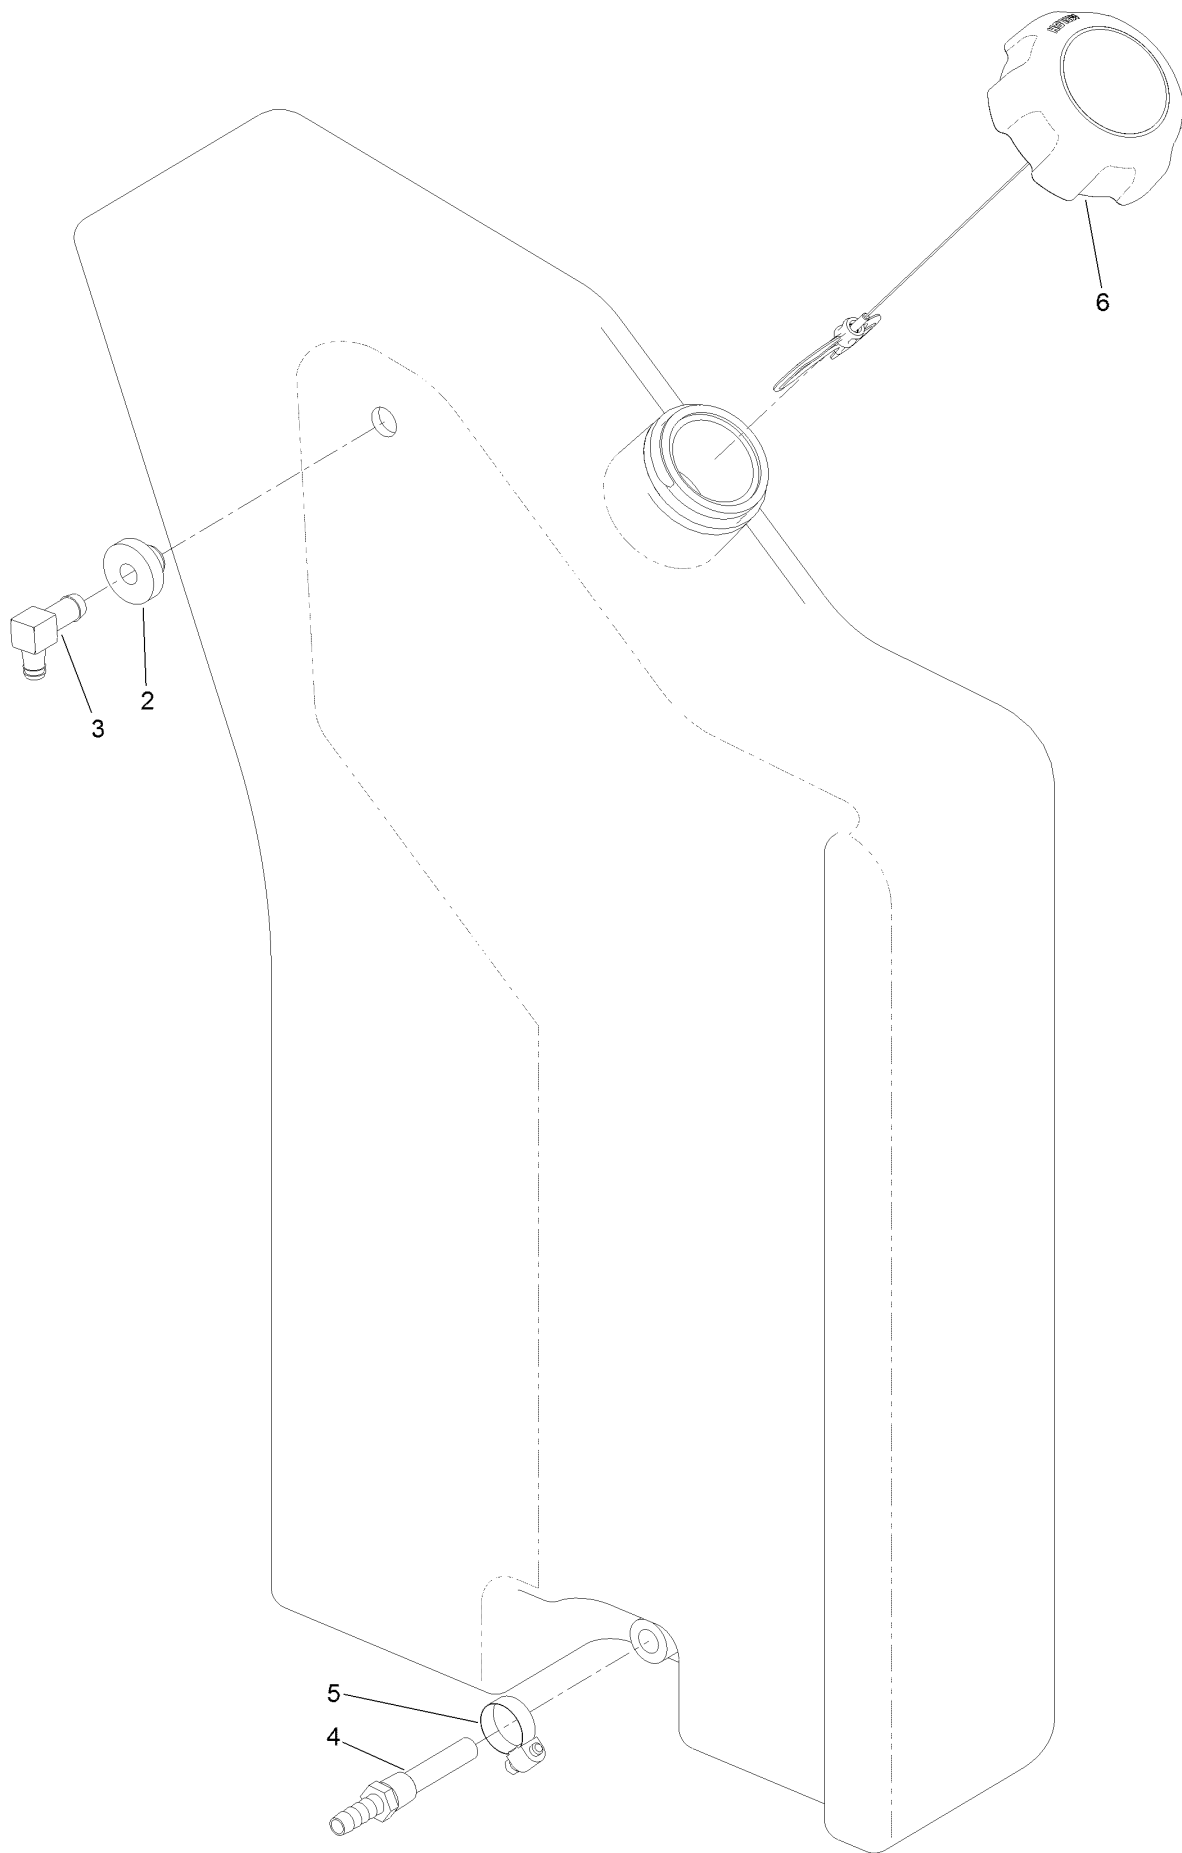


## RH Fuel Tank Assembly No. 130-1027 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 46-6560            | 1           | Bushing            |
| 3           | 1-643259           | 1           | Fitting-Elbow      |
| 4           | 112-6374           | 1           | Fitting-Strainer   |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 2412-36            | 1           | Clamp-Hose         |
| 6           | 130-7567           | 1           | Cap-Diesel,        |
 
# Hydraulic Tank and Track Shaft Assembly

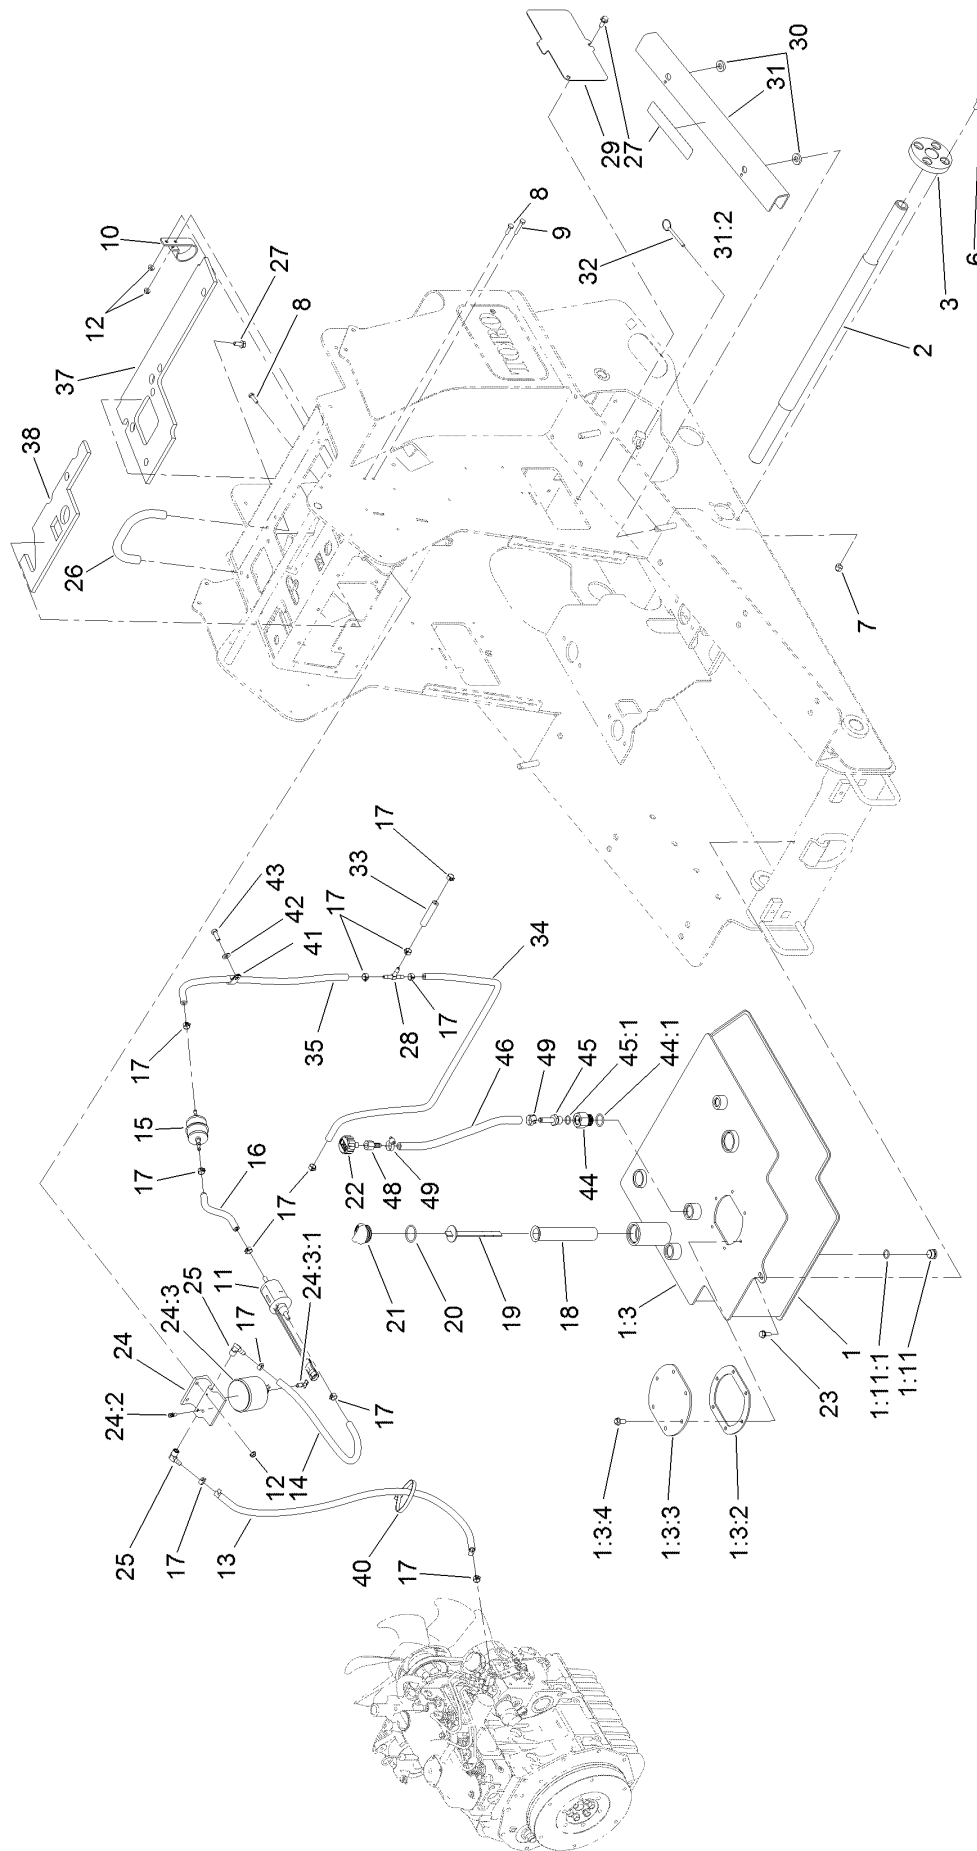


# Hydraulic Tank and Track Shaft Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 125-0404           | 1           | Tank-HYD             | 24:2        | 63-8290            | 1           | Vent-Air               |
| 1:3         |                    | 1           | Tank Top ASM●        | 24:3        | 63-8300            | 1           | Element-Spin On        |
| 1:3:2       | 107-3557           | 1           | Gasket-Cover, Access | 24:3:1      | 63-8310            | 1           | Valve-Drain            |
| 1:3:3       | 108-6297           | 1           | Cover-Tank           | 25          | 353-781            | 2           | Fitting-HYD, 90        |
| 1:3:4       | 98-9940            | 6           | Screw-HHF            | 26          | 112-2620           | 1           | Bar-Reference          |
| 1:11        | 353-988            | 1           | Plug-Hex             | 27          | 3234-5             | 4           | Screw-HHF              |
| 1:11:1      | 237-79             | 1           | O-Ring               | 28          | 99-5005            | 1           | Fitting-Tee, Barbed    |
| 2           | 125-0425           | 1           | Shaft-Track          | 29          | 130-1036-01        | 2           | Plate-Cover, Access    |
| 3           | 132-9074           | 2           | Hub-Shaft            | 30          | 83-1470            | 4           | Washer-Neoprene        |
| 6           | 323-6              | 8           | Screw-HH             | 31          | 130-5315           | 2           | Arm-Locking            |
| 7           | 3296-39            | 8           | Nut-Lock, NI         | 31:2        | 115-4858           | 1           | Decal-Danger           |
| 8           | 321-5              | 3           | Screw-HH             | 32          | 108-0094           | 4           | Pin-Cotterless         |
| 9           | 321-9              | 1           | Screw-HH             | 33          | 133-0223           | 1           | Hose-Fuel              |
| 10          | 110-8817           | 1           | Bracket-Pump, Fuel   | 34          | 133-8551           | 1           | Hose-Fuel              |
| 11          | 110-8806           | 1           | Pump-Fuel            | 35          | 133-1636           | 1           | Hose-Fuel              |
| 12          | 32128-33           | 4           | Nut-HF               | 37          | 132-8416           | 1           | Foam-Heat Shield       |
| 13          | 110-6186           | 1           | Hose-Fuel            | 38          | 132-8417           | 1           | Foam-Heat Shield       |
| 14          | 114-4028           | 1           | Hose-Fuel            | 40          | 3334-945           | 1           | Tie-Cable              |
| 15          | 112-7836           | 1           | Filter-Inline        | 41          | 92-6064            | 1           | Clamp-R                |
| 16          | 136-5837           | 1           | Hose-Fuel            | 42          | 3256-38            | 1           | Washer-Flat            |
| 17          | 92-2379            | 12          | Clamp-Hose           | 43          | 322-4              | 1           | Screw-HH               |
| 18          | 61-2790            | 1           | Filter-Screen        | 44          | 96-0864            | 1           | Fitting-Straight       |
| 19          | 130-7686           | 1           | Dipstick             | 44:1        | 237-81             | 1           | O-Ring                 |
| 20          | 237-123            | 1           | O-Ring               | 45          | 115-2231           | 1           | Fitting-STR            |
| 21          | 93-7498            | 1           | Plug-Plastic         | 45:1        | 237-79             | 1           | O-Ring                 |
| 22          | 68-6150            | 1           | Breather             | 46          | 94-5625            | 1           | Hose                   |
| 23          | 32144-11           | 1           | Screw-HWH            | 48          | 354-94             | 1           | Fitting-Female, Barbed |
| 24          | 109-2678           | 1           | Filter ASM           | 49          | 2412-36            | 2           | Clamp-Hose             |

● Not serviced separately

 
# Track Assembly

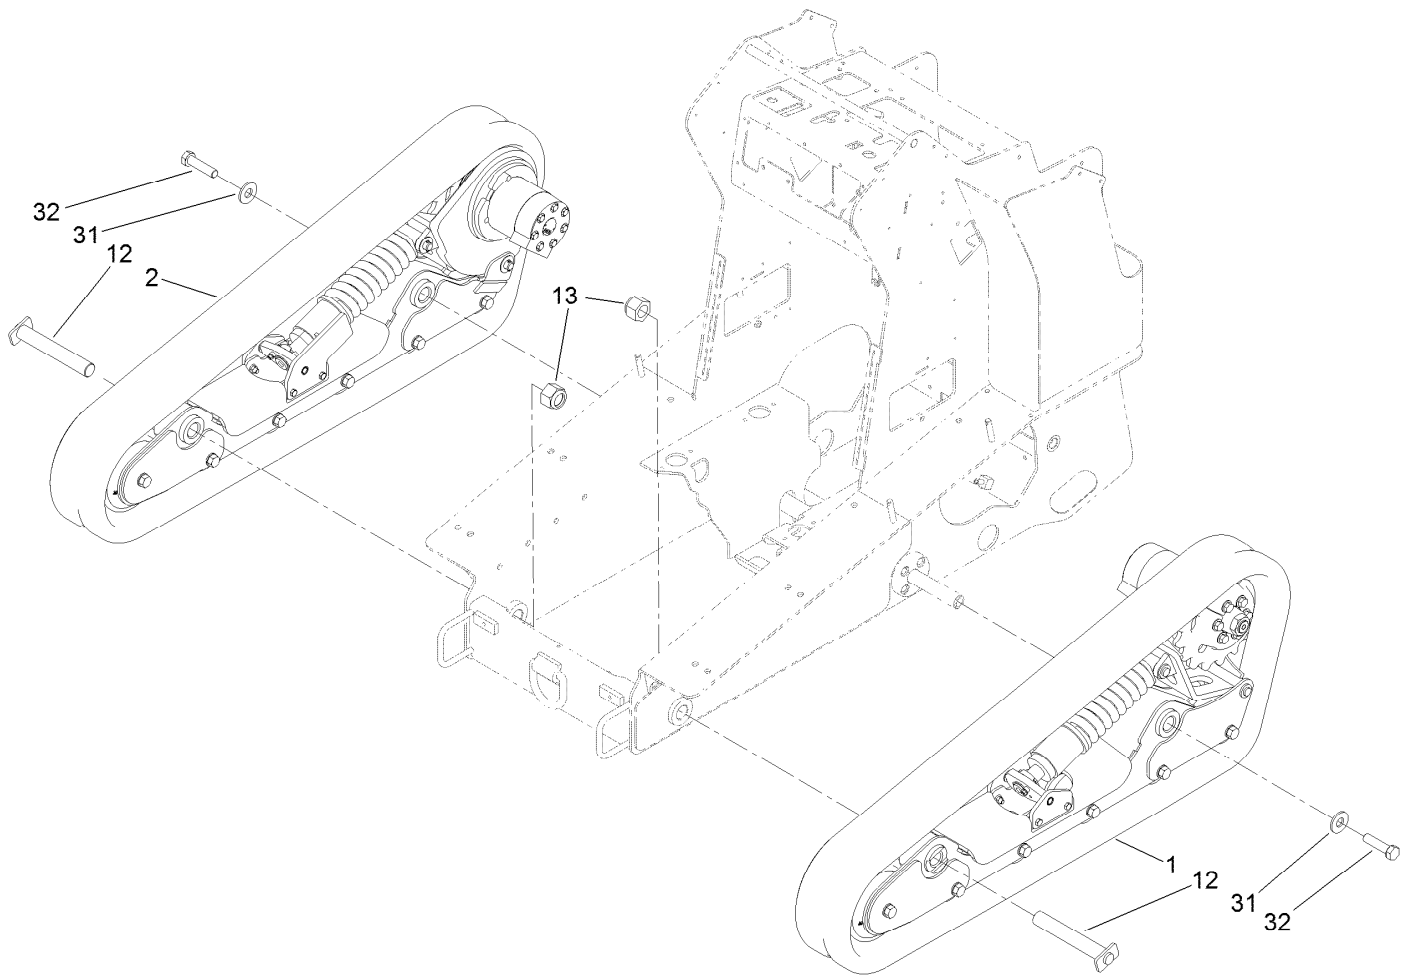

## Track Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 138-0794           | 1           | LH Track ASM       | 13          | 125-0399           | 2           | Nut-HH             |
| 2           | 138-0795           | 1           | RH Track ASM       | 31          | 99-2659            | 2           | Washer             |
| 12          | 130-0967           | 2           | Pin-Track          | 32          | 328-25             | 2           | Screw-HH           |

 
# LH Track Assembly No. 138-0794

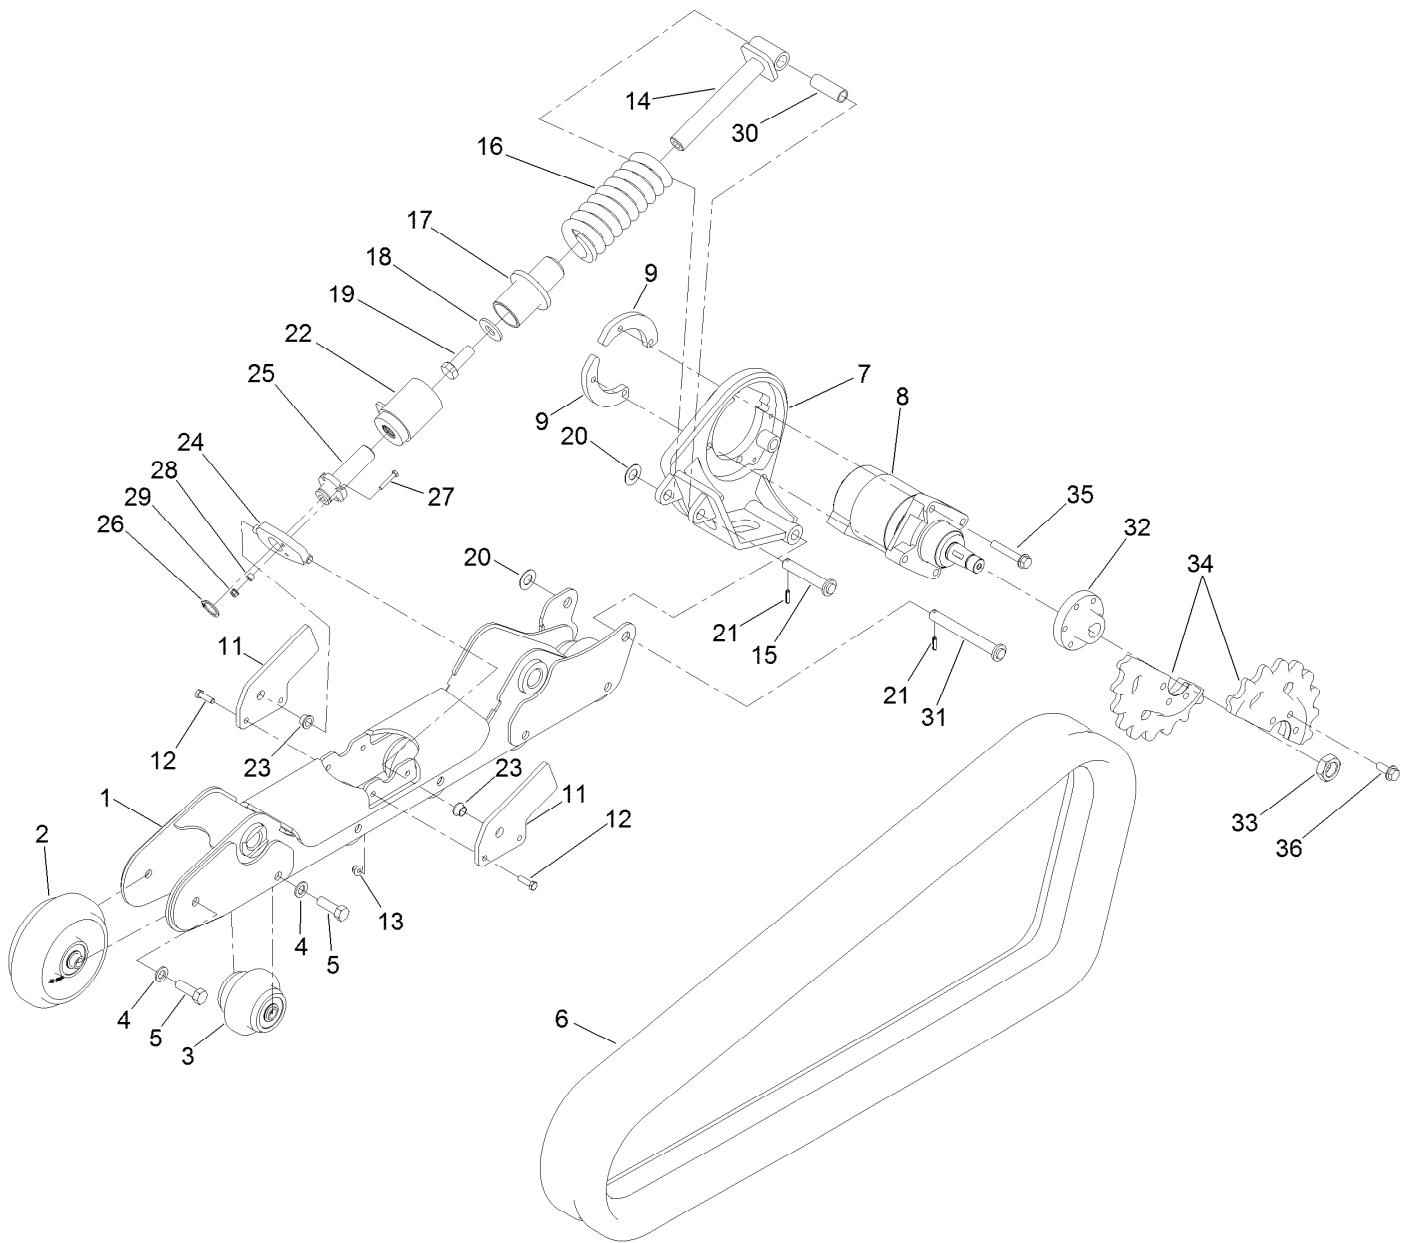

## LH Track Assembly No. 138-0794 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 138-4658           | 1           | Frame-Track, LH               | 19          | AU426-1232         | 1           | Bolt                     |
| 2           | 137-8807           | 1           | Tensioner Wheel ASM           | 20          | 3256-39            | 2           | Washer-Flat              |
| 3           | 137-8808           | 5           | Wheel ASM,                    | 21          | 32121-24           | 2           | Pin-Spring               |
| 4           | 33098-00           | 12          | Washer-Flat                   | 22          | 138-0242           | 1           | Housing-Tensioner        |
| 5           | 111-3484           | 12          | Screw-HH                      | 23          | 65-8770            | 2           | Bushing-Bellcrank        |
| 6           | 138-0186           | 1           | Track-Narrow                  | 24          | 138-4681           | 1           | Plate-Pivot              |
| 7           | 137-4618           | 1           | Mount-Motor, LH               | 25          | 138-0247           | 1           | Screw-Tensioner          |
| 8           | 138-0761           | 1           | Motor-HYD                     | 26          | 32151-77           | 1           | Ring-Retaining, External |
| 9           | 137-4614           | 2           | Plate-Mounting,<br>Wheelmotor | 27          | 321-9              | 1           | Screw-HH                 |
| 11          | 137-4632           | 2           | Plate-Ear, Inside             | 28          | 98-4799            | 1           | Spacer                   |
| 12          | 323-7              | 4           | Screw-HH                      | 29          | 32128-32           | 1           | Nut-HHF                  |
| 13          | 104-8301           | 4           | Nut-HF, NI                    | 30          | 127-9565           | 1           | Spacer-Pivot             |
| 14          | 138-0238           | 1           | Tensioner-Spring              | 31          | 137-4518           | 1           | Pin-Pivot                |
| 15          | 130-1057           | 1           | Pin-Tensioner                 | 32          | 137-4645           | 1           | Hub-Sprocket             |
| 16          | 138-0237           | 1           | Spring-Compression            | 33          | 107-9319           | 1           | Nut-Hex                  |
| 17          | 138-0248           | 1           | Guide-Tensioner               | 34          | 137-4643           | 2           | Sprocket-18 Tooth        |
| 18          | 99-2659            | 1           | Washer                        | 35          | 3234-40            | 4           | Screw-HF                 |
|             |                    |             |                               | 36          | 137-4653           | 6           | Screw-HHF                |

 
# Hydraulic Motor Assembly No. 138-0761

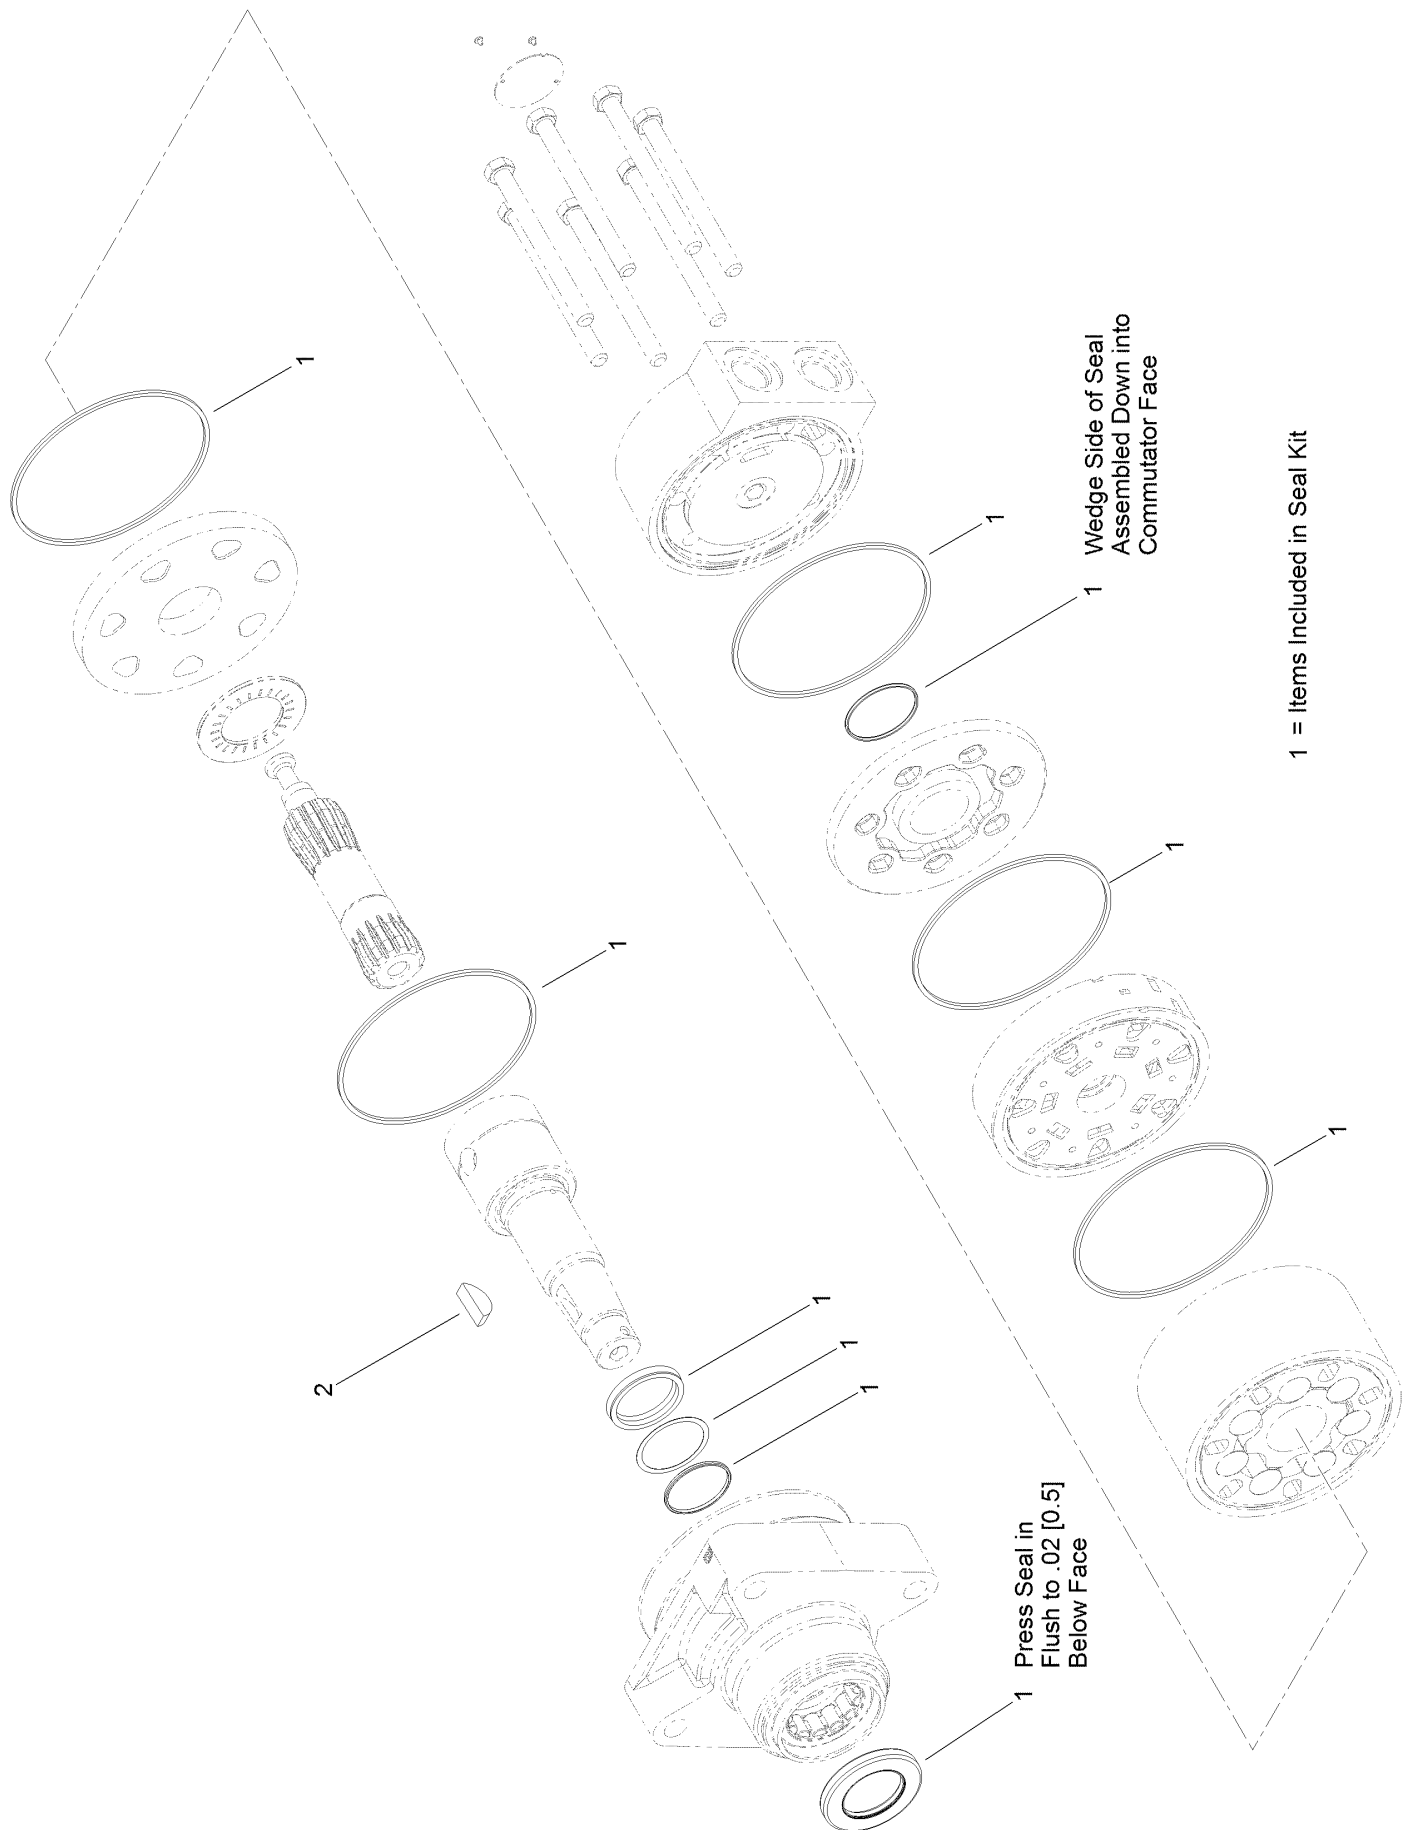

## Hydraulic Motor Assembly No. 138-0761 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 137-1824           | 1           | Seal Kit           |
| 2           | 3257-42            | 1           | Key-Woodruff       |

 
# RH Track Assembly No. 138-0795

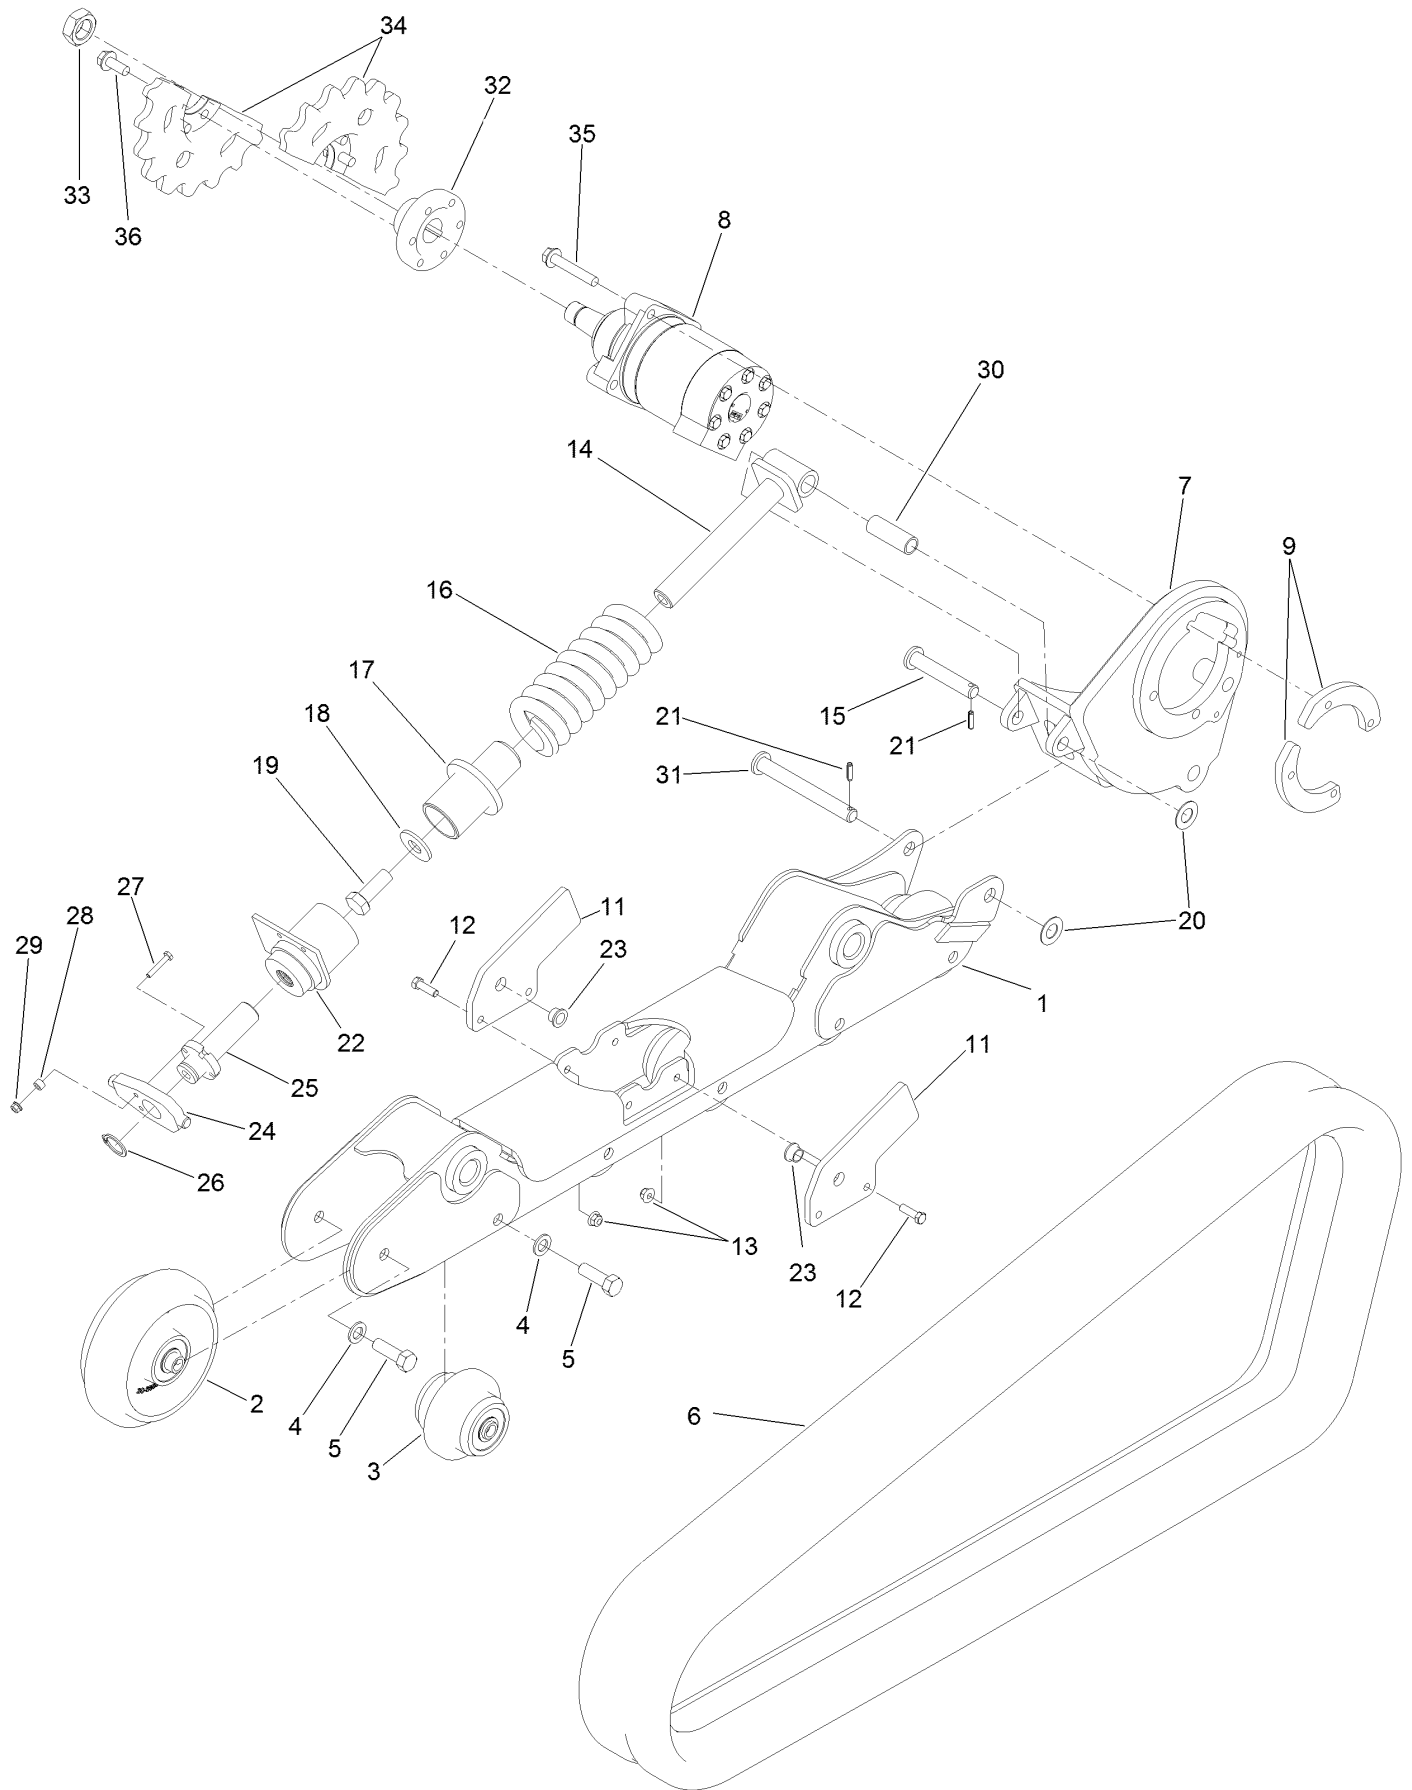

## RH Track Assembly No. 138-0795 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 138-4657           | 1           | Frame-Track, RH               | 19          | AU426-1232         | 1           | Bolt                     |
| 2           | 137-8807           | 1           | Tensioner Wheel ASM           | 20          | 3256-39            | 2           | Washer-Flat              |
| 3           | 137-8808           | 5           | Wheel ASM,                    | 21          | 32121-24           | 2           | Pin-Spring               |
| 4           | 33098-00           | 12          | Washer-Flat                   | 22          | 137-4650           | 1           | Housing-Tensioner, RH    |
| 5           | 111-3484           | 12          | Screw-HH                      | 23          | 65-8770            | 2           | Bushing-Bellcrank        |
| 6           | 138-0186           | 1           | Track-Narrow                  | 24          | 138-4681           | 1           | Plate-Pivot              |
| 7           | 137-4619           | 1           | Mount-Motor, RH               | 25          | 138-0247           | 1           | Screw-Tensioner          |
| 8           | 138-0778           | 1           | Motor-HYD                     | 26          | 32151-77           | 1           | Ring-Retaining, External |
| 9           | 137-4614           | 2           | Plate-Mounting,<br>Wheelmotor | 27          | 321-9              | 1           | Screw-HH                 |
| 11          | 137-4632           | 2           | Plate-Ear, Inside             | 28          | 98-4799            | 1           | Spacer                   |
| 12          | 323-7              | 4           | Screw-HH                      | 29          | 32128-32           | 1           | Nut-HHF                  |
| 13          | 104-8301           | 4           | Nut-HF, NI                    | 30          | 127-9565           | 1           | Spacer-Pivot             |
| 14          | 138-0238           | 1           | Tensioner-Spring              | 31          | 137-4518           | 1           | Pin-Pivot                |
| 15          | 130-1057           | 1           | Pin-Tensioner                 | 32          | 137-4645           | 1           | Hub-Sprocket             |
| 16          | 138-0237           | 1           | Spring-Compression            | 33          | 107-9319           | 1           | Nut-Hex                  |
| 17          | 138-0248           | 1           | Guide-Tensioner               | 34          | 137-4643           | 2           | Sprocket-18 Tooth        |
| 18          | 99-2659            | 1           | Washer                        | 35          | 3234-40            | 4           | Screw-HF                 |
|             |                    |             |                               | 36          | 137-4653           | 6           | Screw-HHF                |

 
# Hydraulic Motor Assembly No. 138-0778

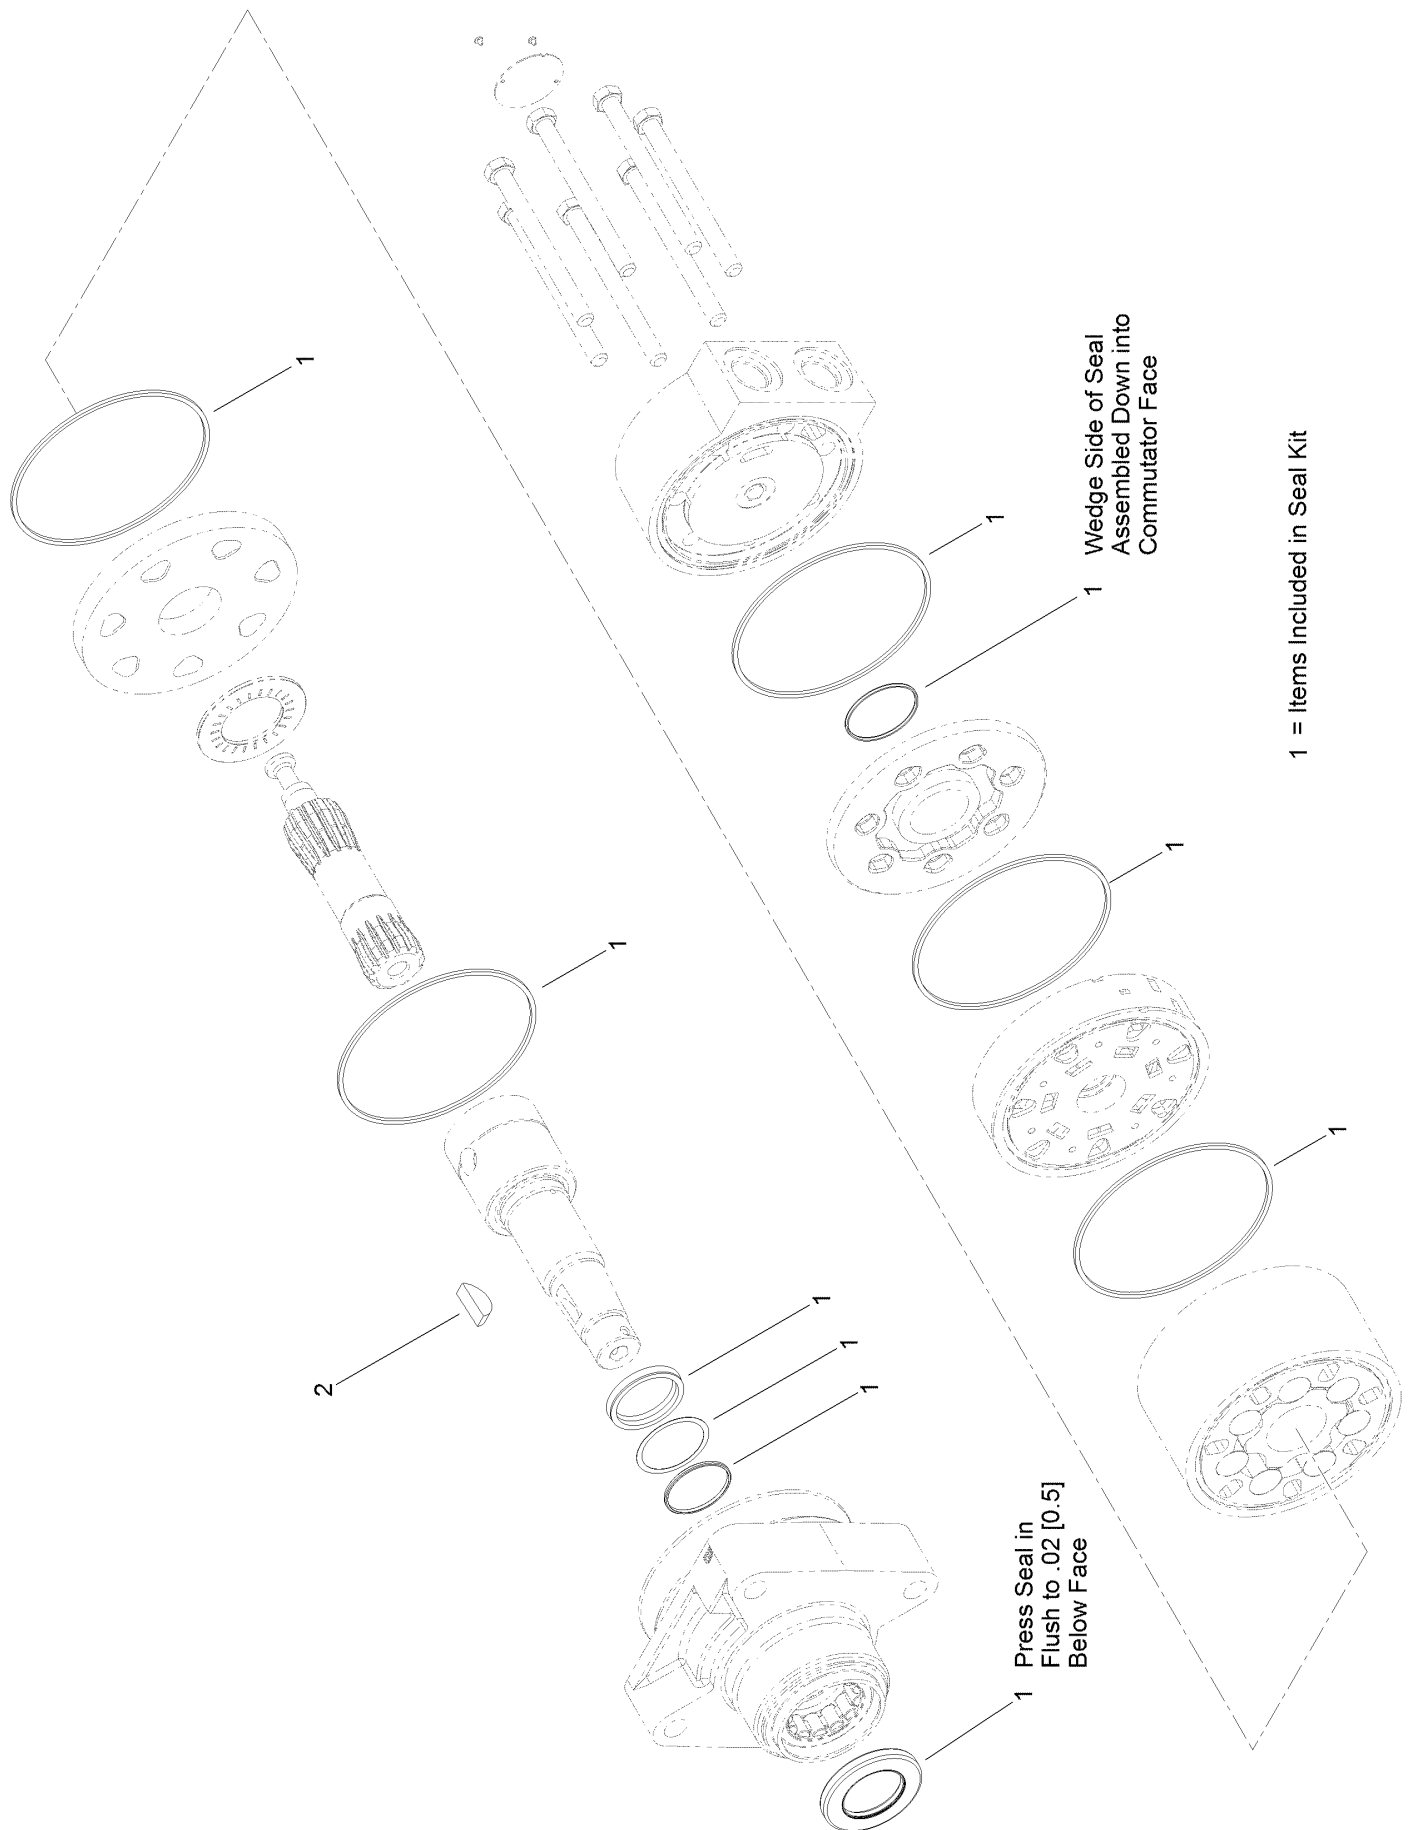

## Hydraulic Motor Assembly No. 138-0778 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 137-1824           | 1           | Seal Kit           |
| 2           | 3257-42            | 1           | Key-Woodruff       |

 
# Brake Assembly

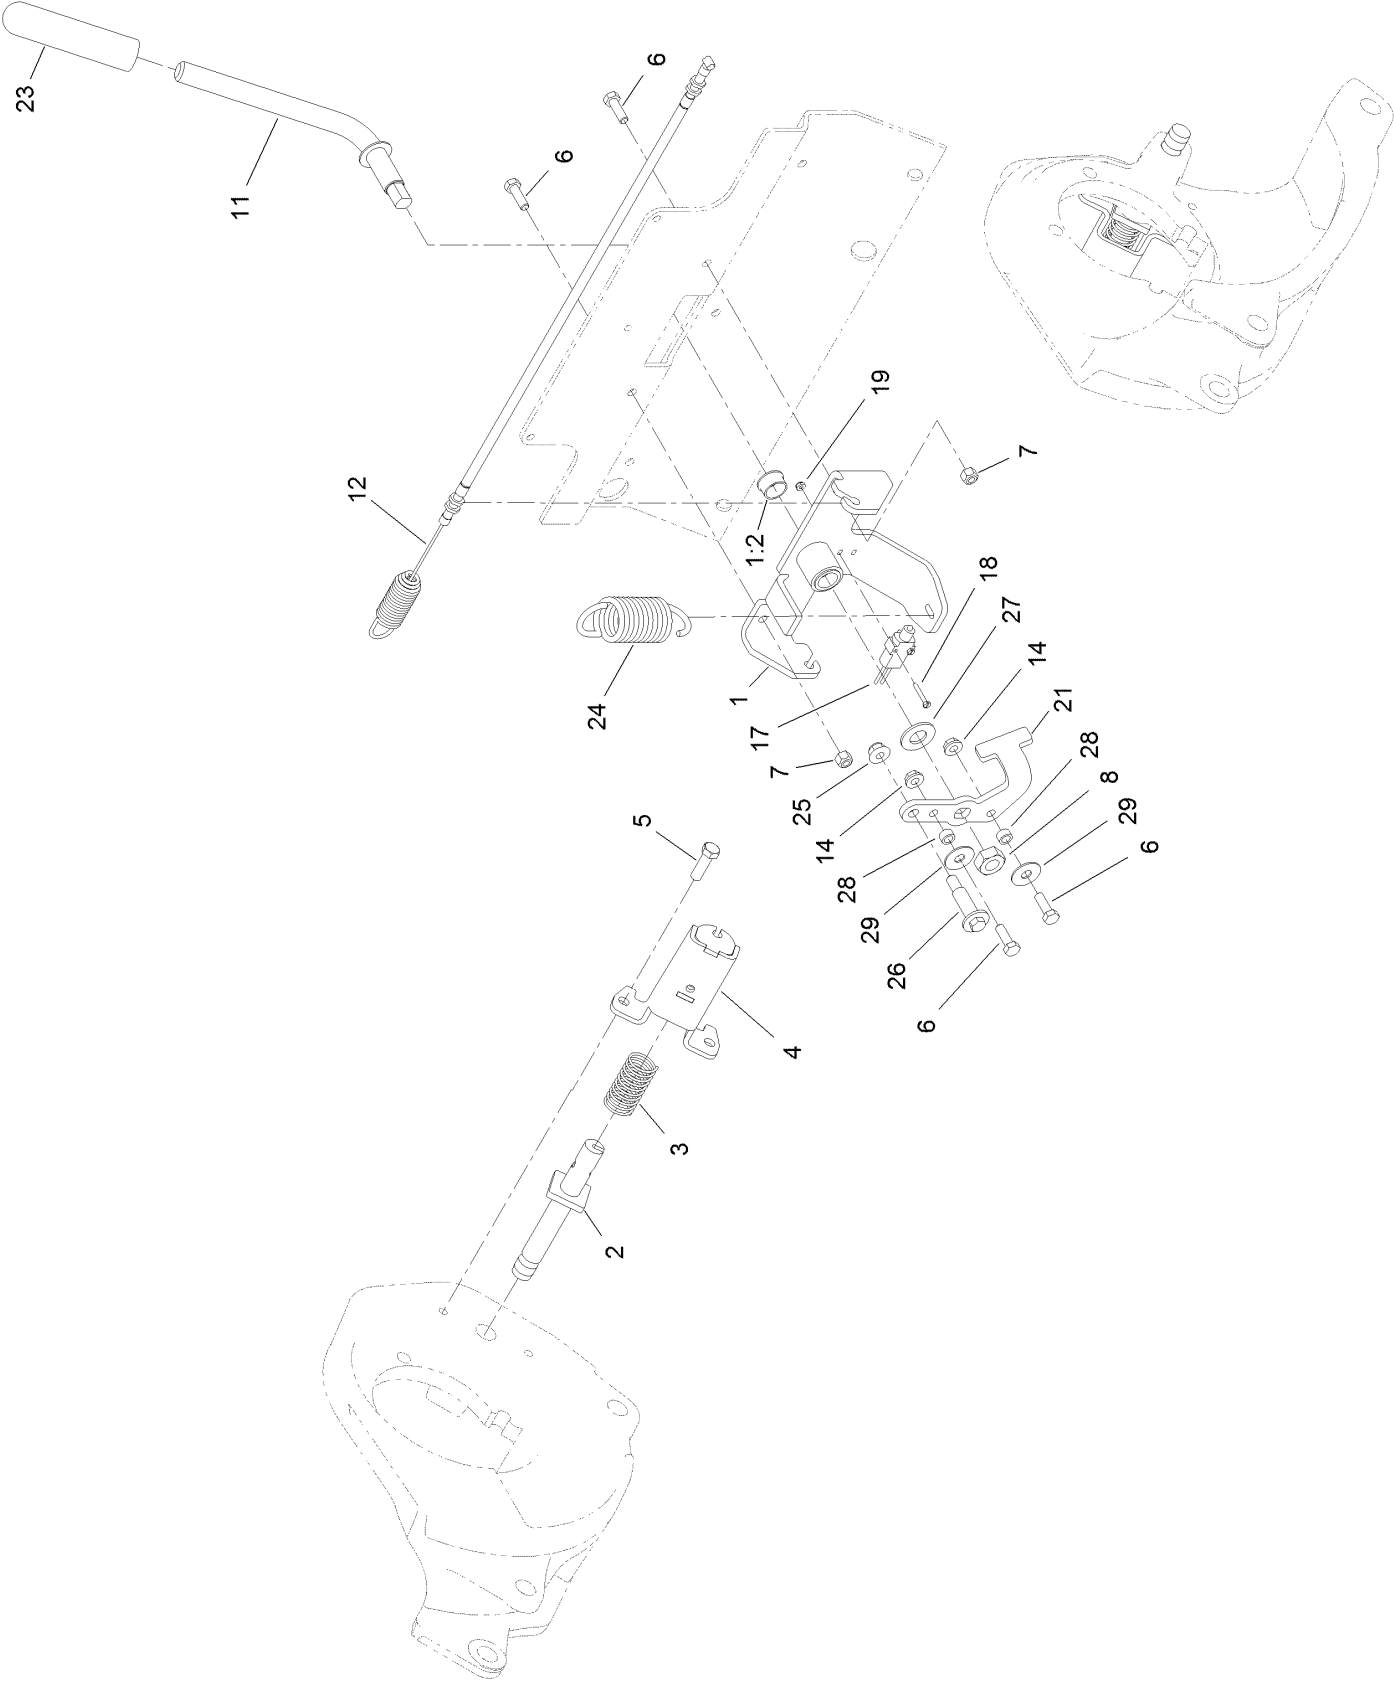

## Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|----------------------|
| 1           | 136-4798           | 1           | Bracket-Brake      | 17          | 95-8900            | 1           | Switch               |
| 1:2         | 256-252            | 2           | Bearing-Flange     | 18          | 32105-9            | 2           | Screw-HH             |
| 2           | 137-4617           | 2           | Rod-Brake          | 19          | 3296-9             | 2           | Nut-Hex              |
| 3           | 125-0344           | 2           | Spring-Compression | 21          | 138-0205-03        | 1           | Plate-Linkage, Brake |
| 4           | 137-4648-03        | 2           | Mount-Brake        | 23          | 110-1037           | 1           | Grip-Handle          |
| 5           | 323-7              | 4           | Screw-HH           | 24          | 136-4787           | 1           | Spring-EXT           |
| 6           | 322-5              | 4           | Screw-HH           | 25          | 104-8301           | 1           | Nut-HF, NI           |
| 7           | 3296-29            | 2           | Nut-Lock, NI       | 26          | 136-7198           | 1           | Bolt-Shoulder        |
| 8           | 3296-33            | 1           | Nut-Lock, NI       | 27          | 3256-27            | 1           | Washer-Flat          |
| 11          | 133-0232           | 1           | Lever-Brake        | 28          | 85-9120            | 2           | Spacer-Pivot, Tilt   |
| 12          | 136-4789           | 2           | Cable-Brake        | 29          | 52-2860            | 2           | Washer               |
| 14          | 32128-20           | 2           | Nut-HF             |             |                    |             |                      |

 
# Front Tower Assembly

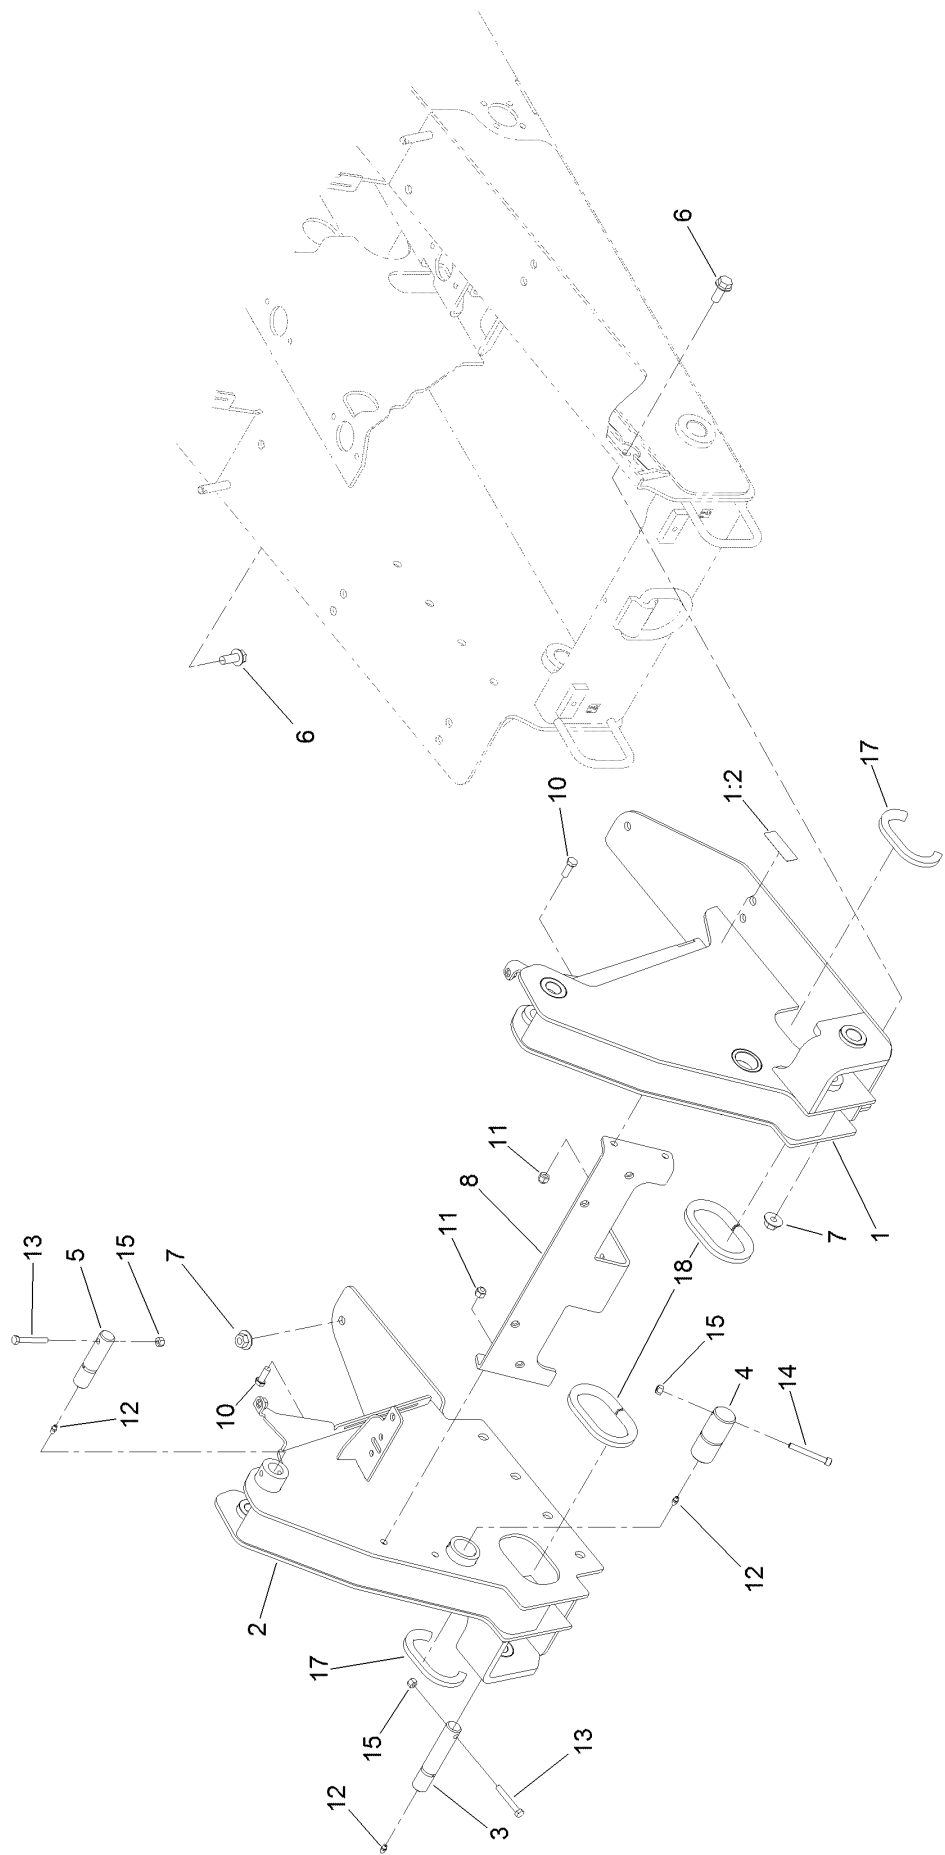

## Front Tower Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 130-5323           | 1           | Tower-Front, LH    | 10          | AU426-616          | 4           | Screw-HH           |
| 1:2         | 115-2047           | 1           | Decal-Surface, Hot | 11          | 3296-39            | 4           | Nut-Lock, NI       |
| 2           | 130-5177-01        | 1           | Tower, RH          | 12          | 302-5              | 6           | Fitting-Grease     |
| 3           | 131-9201           | 2           | Pin-HYD            | 13          | 322-11             | 4           | Screw-HH           |
| 4           | 125-3748           | 2           | Pin-Arm            | 14          | 3274-40            | 2           | Screw-HSH          |
| 5           | 125-3695           | 2           | Pin-Link           | 15          | 3296-29            | 6           | Nut-Lock, NI       |
| 6           | 3234-38            | 18          | Screw-HHF          | 17          | 133-8571           | 2           | Trim-Seal          |
| 7           | 32128-52           | 18          | Nut-Lock, Flange   | 18          | 133-8572           | 2           | Trim-Seal          |
| 8           | 125-3667-03        | 1           | Plate-Cross, Tower |             |                    |             |                    |

 
# Hydraulic Motor and Hose Assembly

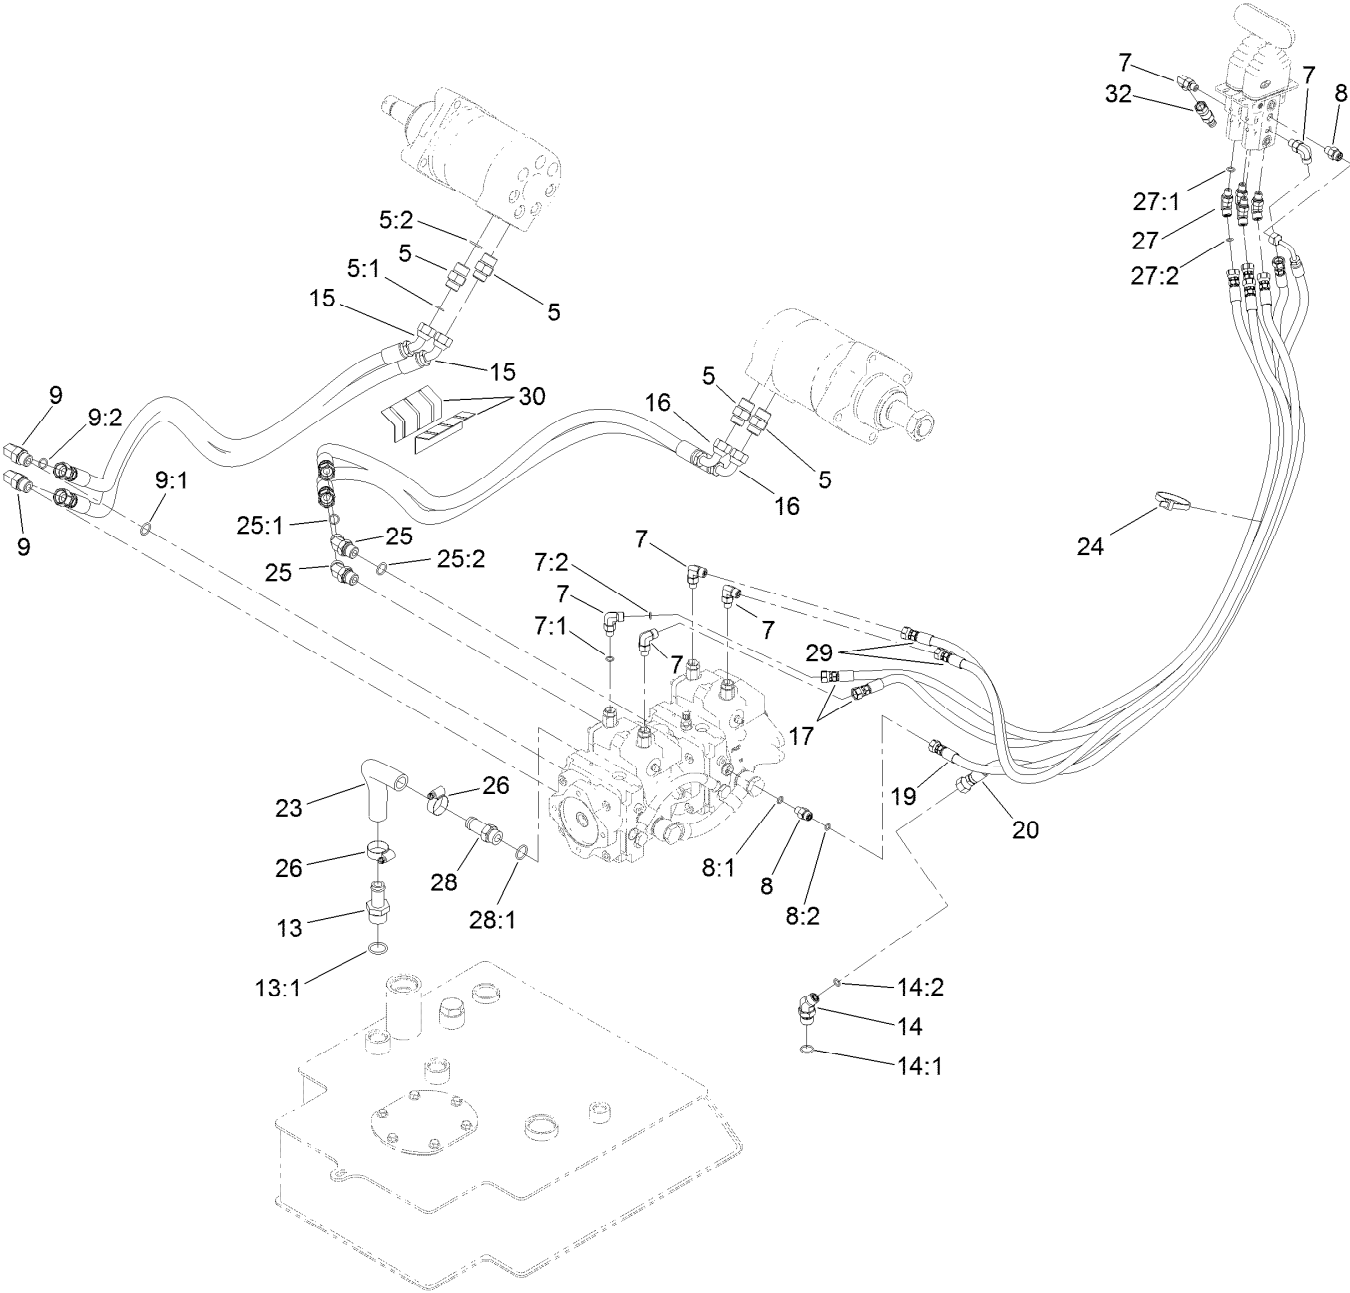

## Hydraulic Motor and Hose Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|---------------------|
| 5           | 340-6              | 4           | Fitting-Straight      | 16          | 130-7734           | 2           | Hose-HYD            |
| 5:1         | 237-30             | 1           | O-Ring                | 17          | 127-9622           | 2           | Hose-HYD            |
| 5:2         | 237-80             | 1           | O-Ring                | 19          | 127-9624           | 1           | Hose-HYD            |
| 7           | 340-132            | 6           | Fitting-Elbow, 90 DEG | 20          | 127-9625           | 1           | Hose-Return         |
| 7:1         | 237-78             | 1           | O-Ring                | 23          | 133-0231           | 1           | Hose-Return         |
| 7:2         | 237-21             | 1           | O-Ring                | 24          | 3334-945           | 1           | Tie-Cable           |
| 8           | 340-92             | 2           | Fitting-Straight      | 25          | 340-101            | 2           | Fitting-HYD, 45 DEG |
| 8:1         | 237-78             | 1           | O-Ring                | 25:1        | 237-30             | 1           | O-Ring              |
| 8:2         | 237-21             | 1           | O-Ring                | 25:2        | 237-79             | 1           | O-Ring              |
| 9           | 340-98             | 2           | Fitting-Elbow, 90 DEG | 26          | 2412-129           | 2           | Clamp-Hose          |
| 9:1         | 237-79             | 1           | O-Ring                | 27          | 340-103            | 4           | Fitting-HYD, 45 DEG |
| 9:2         | 237-30             | 1           | O-Ring                | 27:1        | 237-78             | 1           | O-Ring              |
| 13          | 354-73             | 1           | Fitting               | 27:2        | 237-21             | 1           | O-Ring              |
| 13:1        | 237-81             | 1           | O-Ring                | 28          | 354-136            | 1           | Fitting-STR         |
| 14          | 340-138            | 1           | Fitting-HYD, 45 DEG   | 28:1        | 237-80             | 1           | O-Ring              |
| 14:1        | 237-79             | 1           | O-Ring                | 29          | 127-9623           | 2           | Hose-HYD            |
| 14:2        | 237-22             | 1           | O-Ring                | 30          | AU112950           | 2           | Protector-Hose      |
| 15          | 133-0226           | 2           | Hose-HYD              | 32          | 115-8886           | 1           | Nipple-Test         |
 
# Radiator and Air Cleaner Assembly

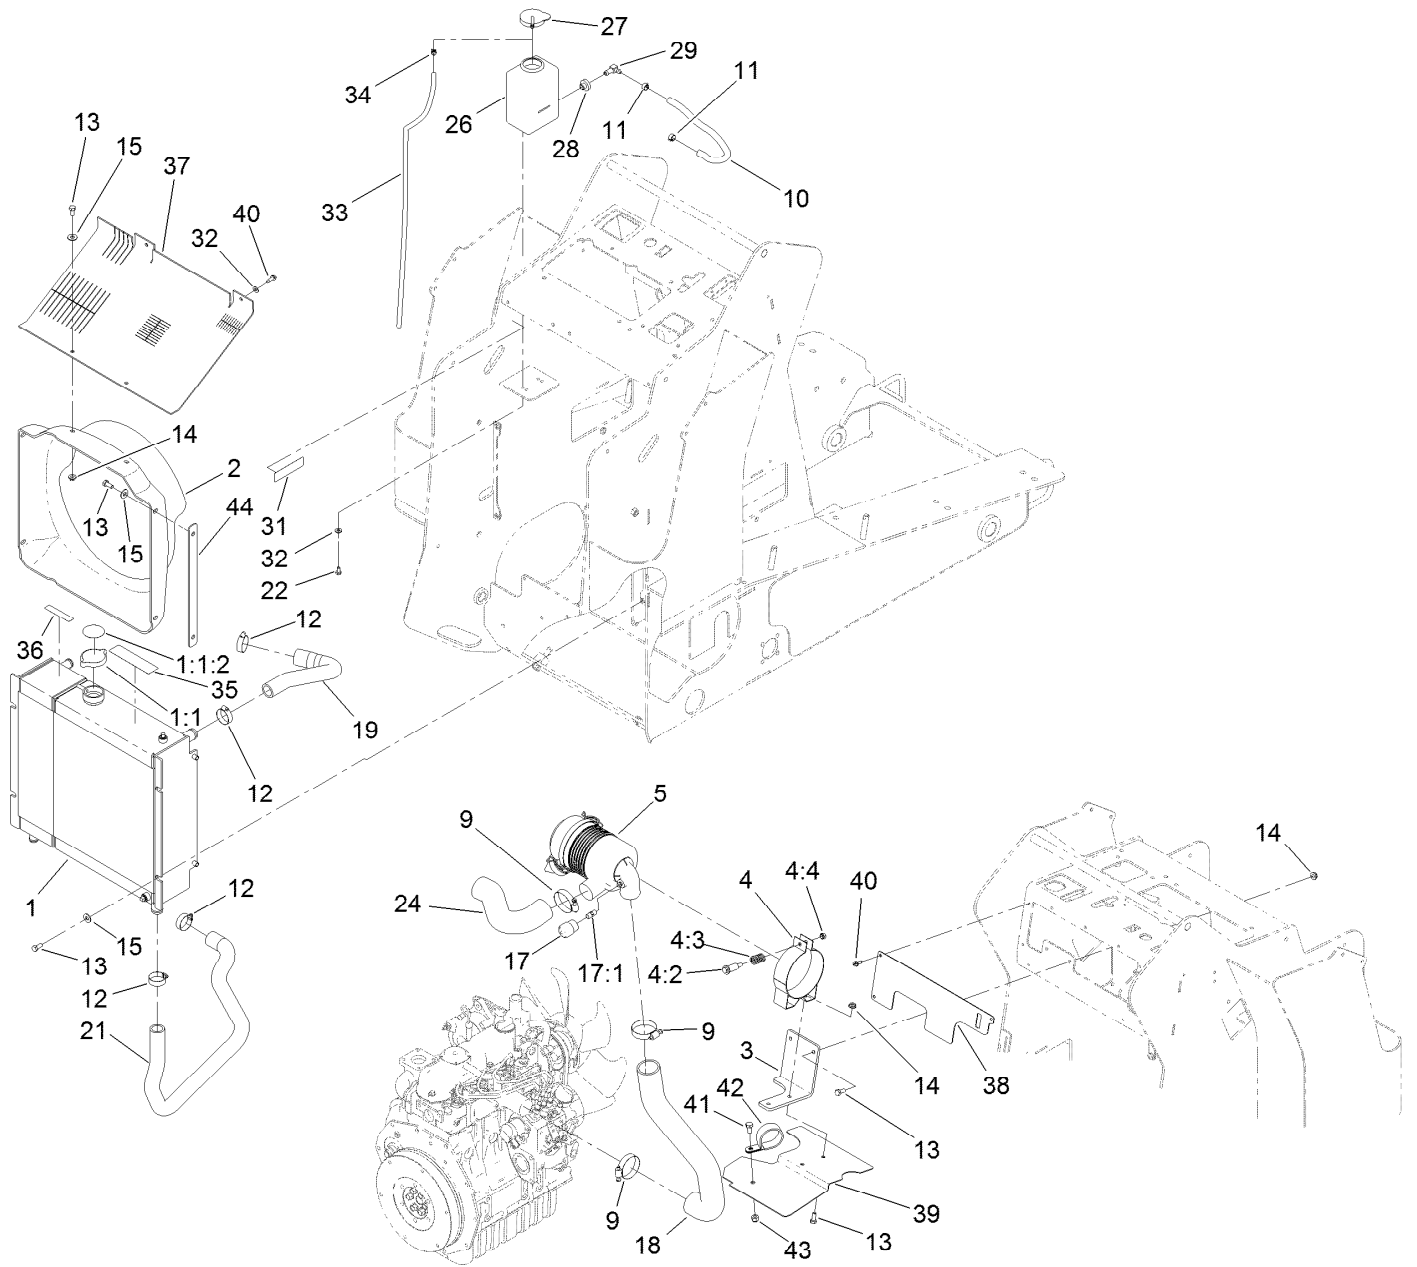


## Radiator and Air Cleaner Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 131-8001           | 1           | Cooling ASM                   | 19          | 136-4552           | 1           | Hose-Radiator          |
| 1:1         | 119-1430           | 1           | Radiator Cap ASM              | 21          | 131-9153           | 1           | Hose-Radiator, Lower   |
| 1:1:2       | 117-3276           | 1           | Decal-Danger                  | 22          | 321-2              | 2           | Screw-HH               |
| 1:2         | 161-7280           | 1           | Radiator Support Kit ●        | 24          | 130-0952           | 1           | Hose-Air, Inlet        |
| 2           | 131-9256           | 1           | Shroud-Fan                    | 26          | 1-643163           | 1           | Tank-Overflow          |
| 3           | 125-0377-03        | 1           | Bracket                       | 27          | 1-643164           | 1           | Cap-Tank, Overflow     |
| 4           | 93-2191            | 1           | Air Cleaner Mounting Band ASM | 28          | 46-6560            | 1           | Bushing                |
| 4:2         | 94-3653            | 1           | Bolt                          | 29          | 46-6550            | 1           | Fitting-Elbow, 90 DEG  |
| 4:3         | 94-3654            | 1           | Spring                        | 31          | 115-4865           | 1           | Decal-Fill, Radiator   |
| 4:4         | 48-9510            | 1           | *obs* Nut                     | 32          | 3256-22            | 5           | Washer-Flat            |
| 5           | 93-2190            | 1           | Air Cleaner ASM               | 33          | 108-6344           | 1           | Hose-Fuel              |
| 9           | 2412-92            | 3           | Clamp-Hose                    | 34          | 2412-80            | 1           | Clamp-Hose             |
| 10          | 112-2386           | 1           | Hose-Fuel                     | 35          | 93-7814            | 1           | Decal-Danger           |
| 11          | 92-2379            | 2           | Clamp-Hose                    | 36          | 93-6681            | 1           | Decal-Warning, Fan     |
| 12          | 2412-34            | 4           | Clamp-Hose                    | 37          | 131-9214           | 1           | Guard-Air              |
| 13          | 322-3              | 14          | Screw-HH                      | 38          | 131-9215           | 1           | Cover-Air              |
| 14          | 32128-20           | 6           | Nut-HF                        | 39          | 131-8013           | 1           | Baffle-Heat            |
| 15          | 3256-3             | 10          | Washer-Flat                   | 40          | 32144-44           | 6           | Screw-HWH, Thread Roll |
| 17          | 104-3563           | 1           | Indicator                     | 41          | 323-4              | 1           | Screw-HH               |
| 17:1        | 94-1416            | 1           | Adapter-Indicator             | 42          | 2412-107           | 1           | Clamp-R                |
| 18          | 131-9173           | 1           | Hose-Intake, Engine           | 43          | 3296-39            | 1           | Nut-Lock, NI           |
|             |                    |             |                               | 44          | 138-0751-03        | 2           | Plate-Shim             |

● Not illustrated
 
# Radiator Support Kit Assembly No. 161-7280

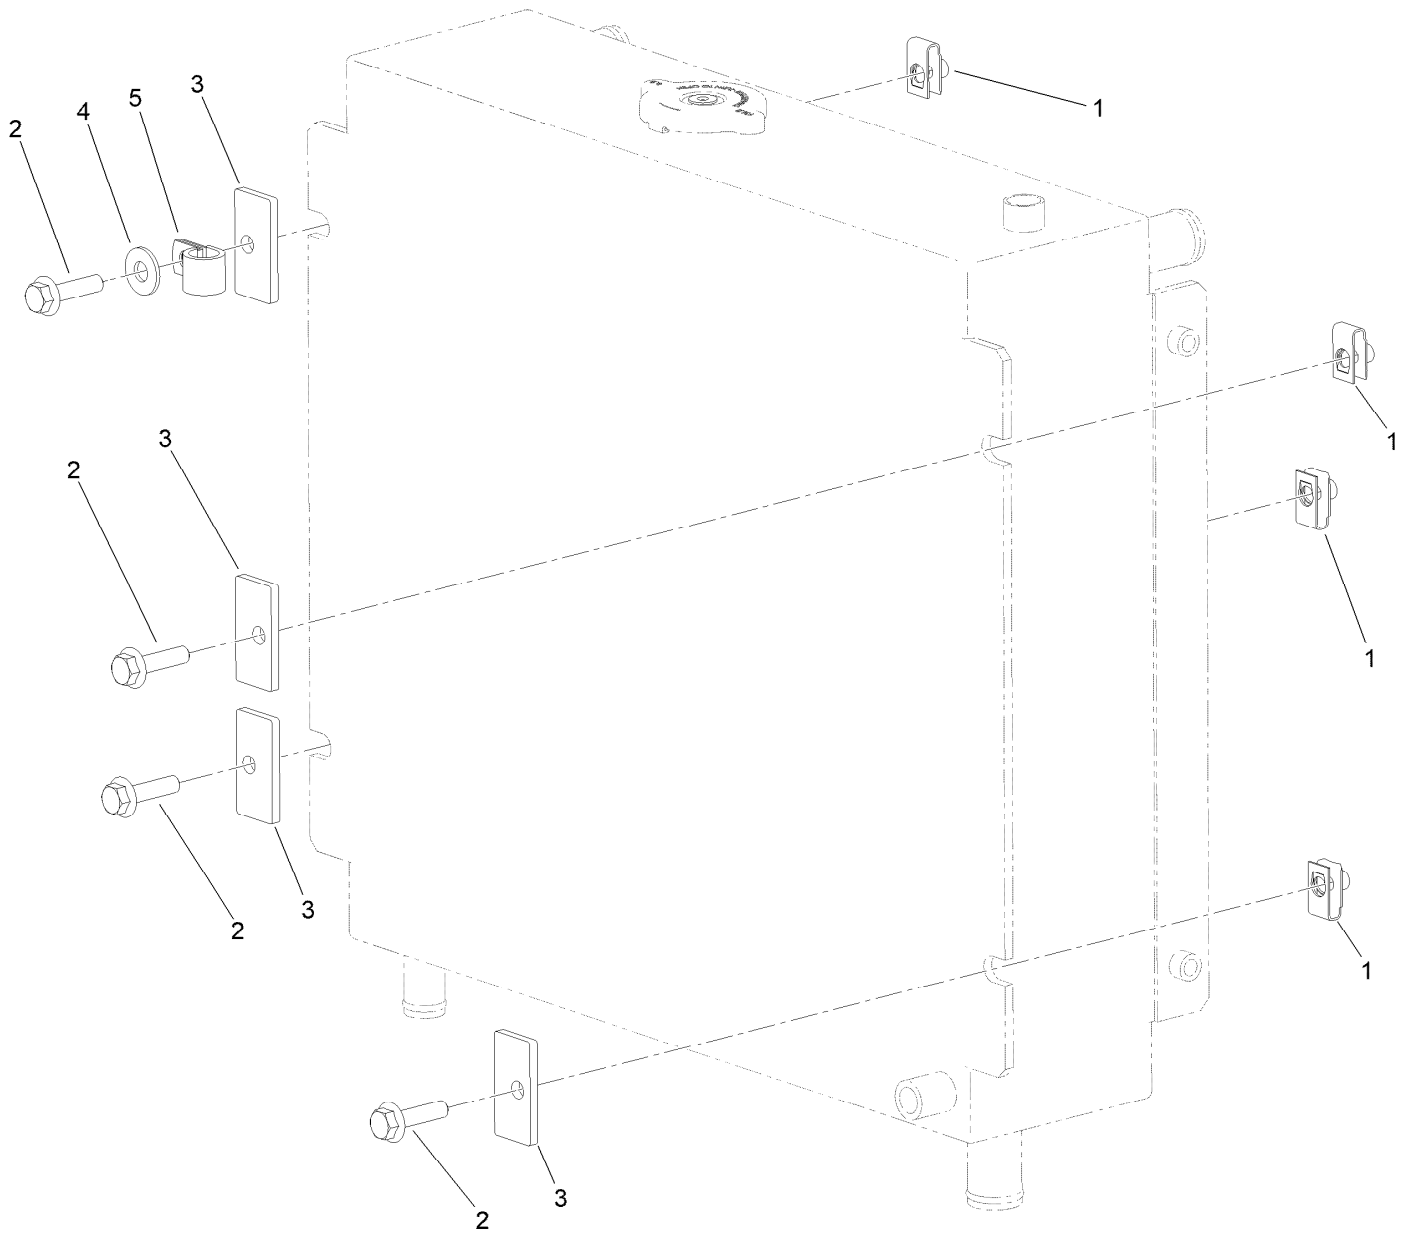


## Radiator Support Kit Assembly No. 161-7280 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 115-7721           | 4           | Nut-Clip, U        |
| 2           | 132-3837           | 4           | Screw-HHF          |
| 3           | 161-7293-03        | 4           | Washer-Square      |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 4           | 3256-3             | 1           | Washer-Flat        |
| 5           | 92-6064            | 1           | Clamp-R            |
 
# Air Cleaner Assembly No. 93-2190

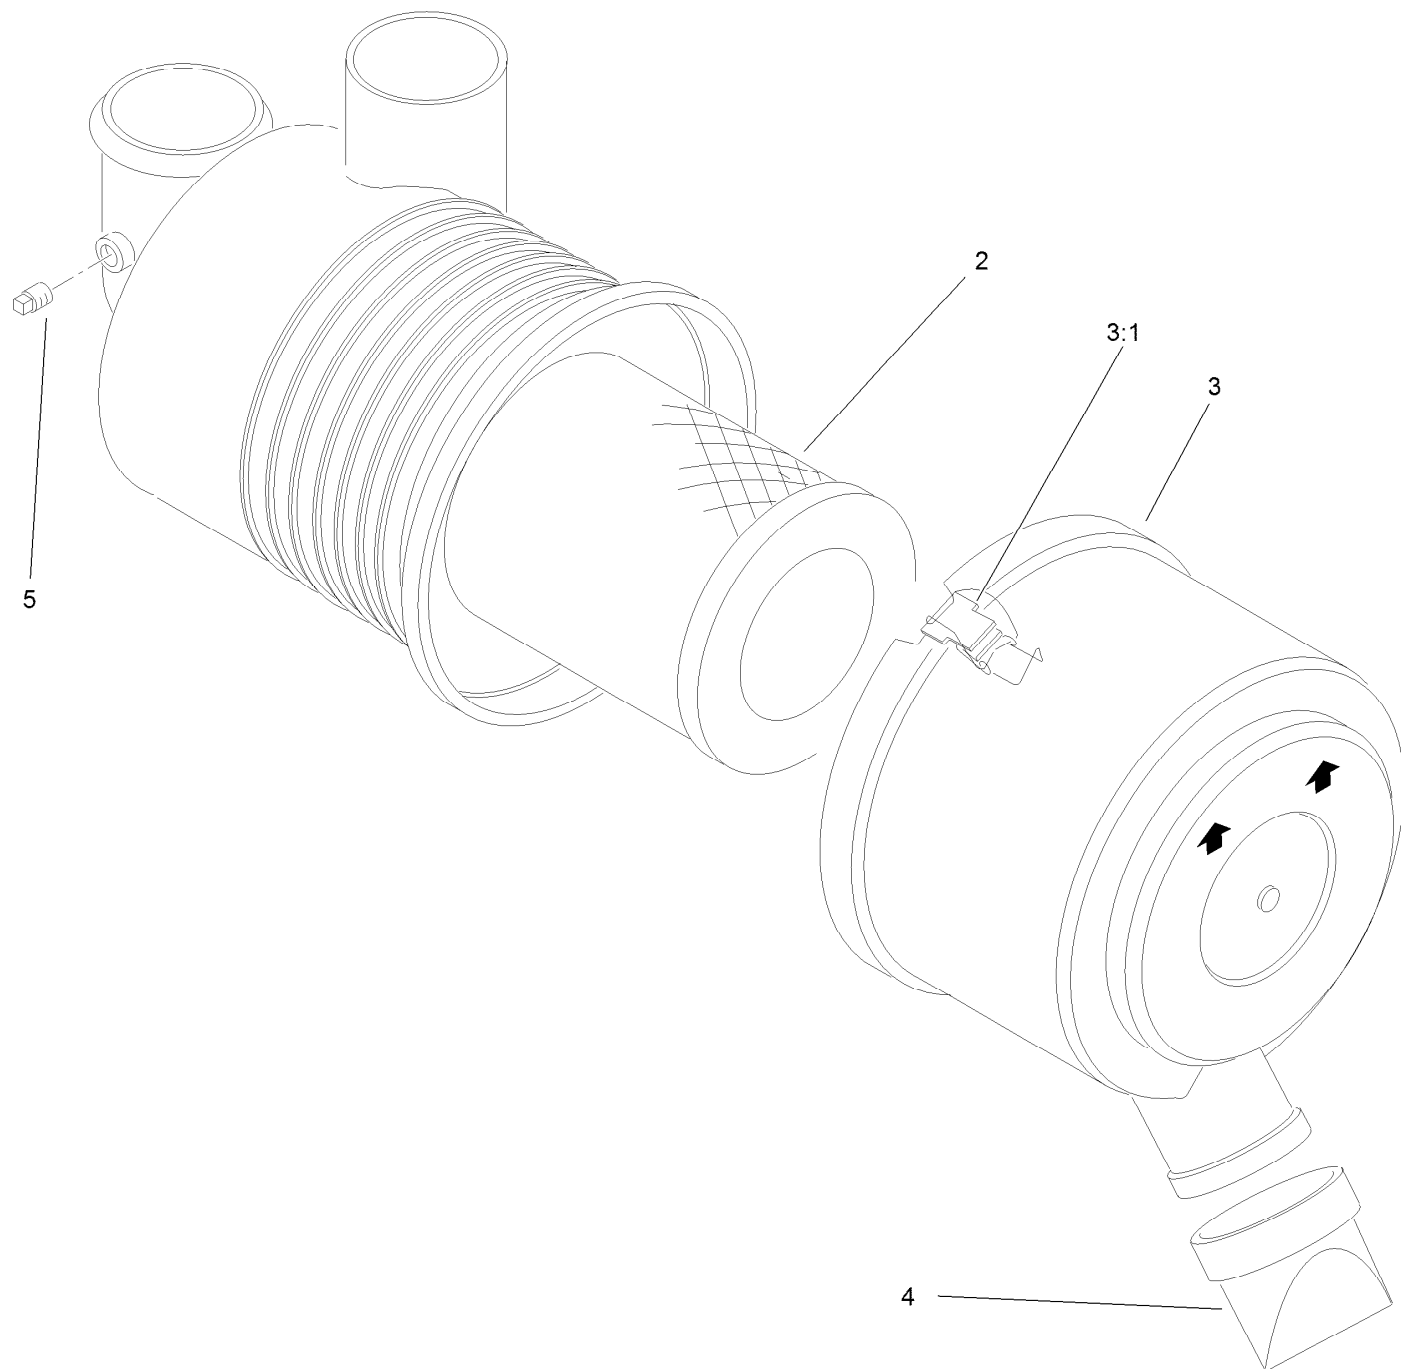


## Air Cleaner Assembly No. 93-2190 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 2           | 108-3811           | 1           | Filter-Air V-Twin HD |
| 3           | 94-3652            | 1           | Cover ASM            |
| 3:1         | 1-643283           | 2           | Latch-Cleaner, Air   |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 4           | 87-9400            | 1           | Valve-Vacuator     |
| 5           | 285-17             | 1           | Plug-Pipe          |

 
## Engine Mount and Muffler Assembly

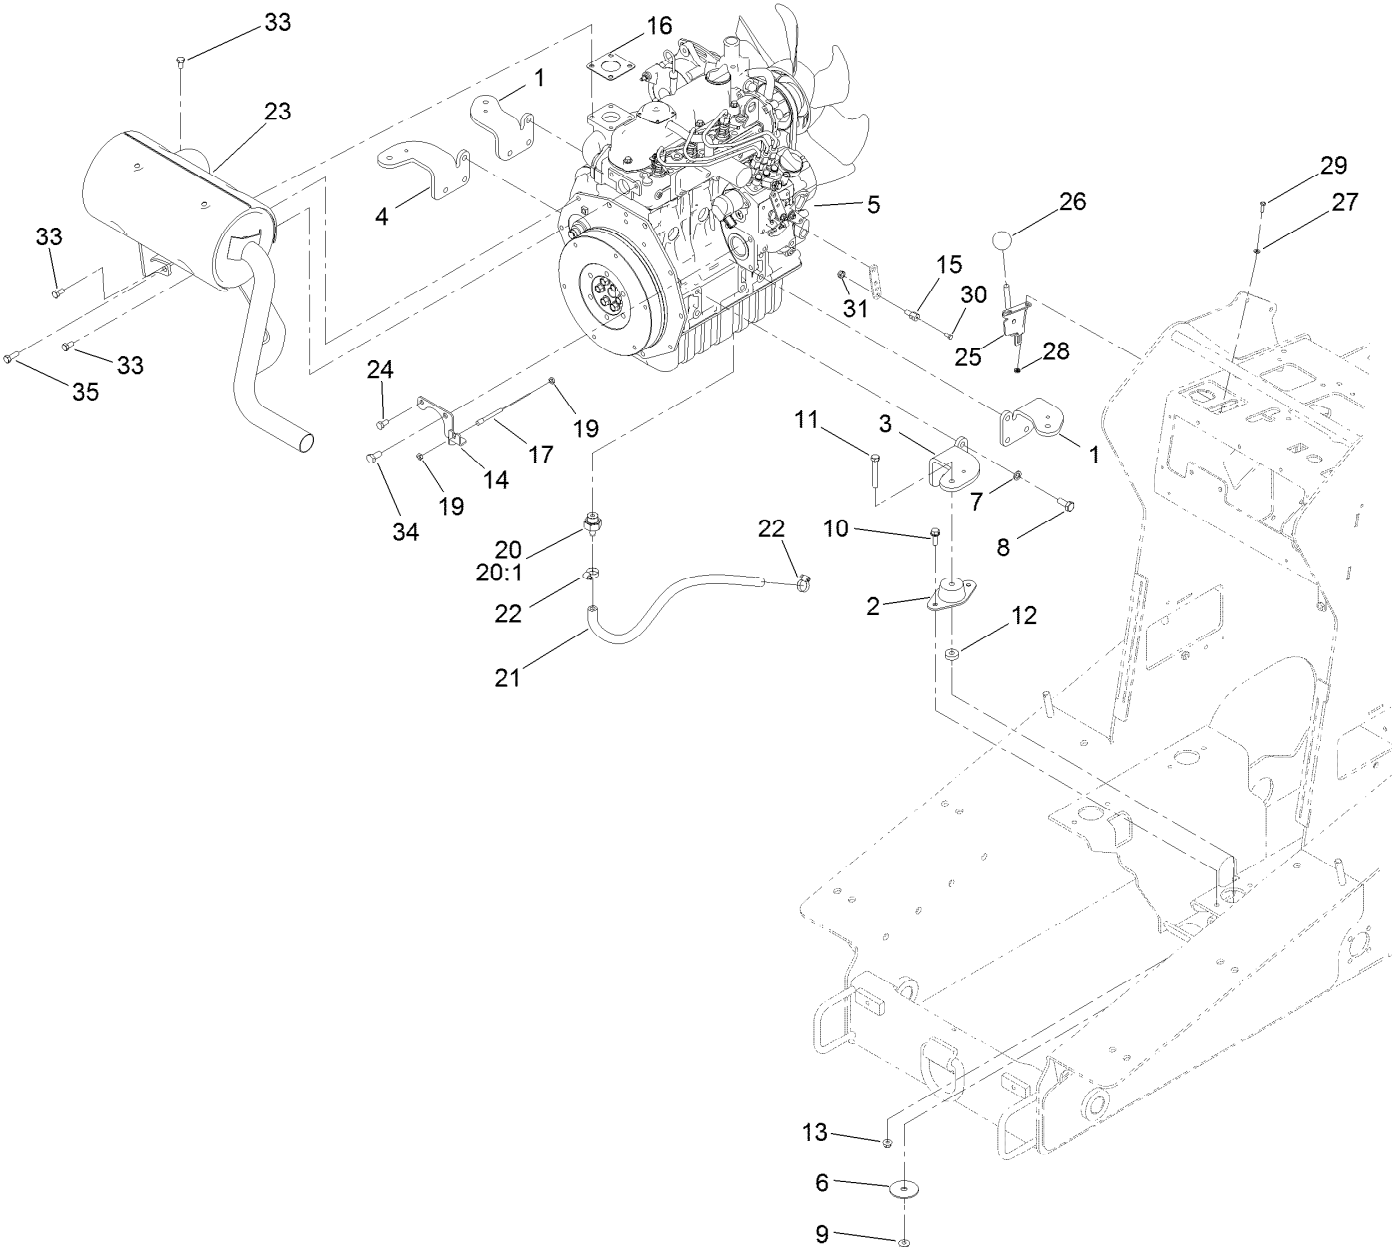

## Engine Mount and Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 115-8066-03        | 2           | Mount-Engine         | 19          | 3220-1             | 2           | Nut-Jam                 |
| 2           | 121-9076           | 4           | Mount-Engine         | 20          | 114-8587           | 1           | Fitting-Hose            |
| 3           | 115-8068-03        | 1           | Mount-Engine LH      | 20:1        | 98-9399            | 1           | Gasket                  |
| 4           | 115-8063-03        | 1           | Mount-Engine, RH     | 21          | 92-7424            | 1           | Hose-Overflow, Radiator |
| 5           | 138-6911           | 1           | Engine-Kubota, D1305 | 22          | 2412-36            | 2           | Clamp-Hose              |
| 6           | 87-5100            | 4           | Washer-Snubbing      | 23          | 130-7732           | 1           | Muffler-Diesel          |
| 7           | 48-9590            | 12          | Washer-Lock          | 24          | 33114-016          | 1           | Screw-HH                |
| 8           | 43-0090            | 12          | Screw-HH             | 25          | 108-9730           | 1           | Lever-Control           |
| 9           | 104-8301           | 4           | Nut-HF, NI           | 26          | 233-42             | 1           | Knob                    |
| 10          | 3234-29            | 8           | Screw-HHF            | 27          | 3256-51            | 2           | Washer-Flat             |
| 11          | 323-12             | 4           | Screw-HH             | 28          | 32149-7            | 2           | Nut-Keps                |
| 12          | 62-6660            | 4           | Spacer               | 29          | 3290-134           | 2           | Screw                   |
| 13          | 104-8300           | 8           | Nut-HF, NI           | 30          | 25-8640            | 1           | Screw-HH                |
| 14          | 130-1148-03        | 1           | Bracket-Throttle     | 31          | 3296-20            | 1           | Nut-Lock, NI            |
| 15          | 98-9311            | 1           | Swivel-Throttle      | 33          | 33104-020          | 6           | Screw-HHF               |
| 16          | 99-8343            | 1           | Gasket-Muffler       | 34          | 63-7790            | 1           | Screw-Cap               |
| 17          | 130-7743           | 1           | Cable-Throttle       | 35          | 99-5131            | 1           | Bolt                    |

 
# Tandem Pump and Gear Pump Assembly

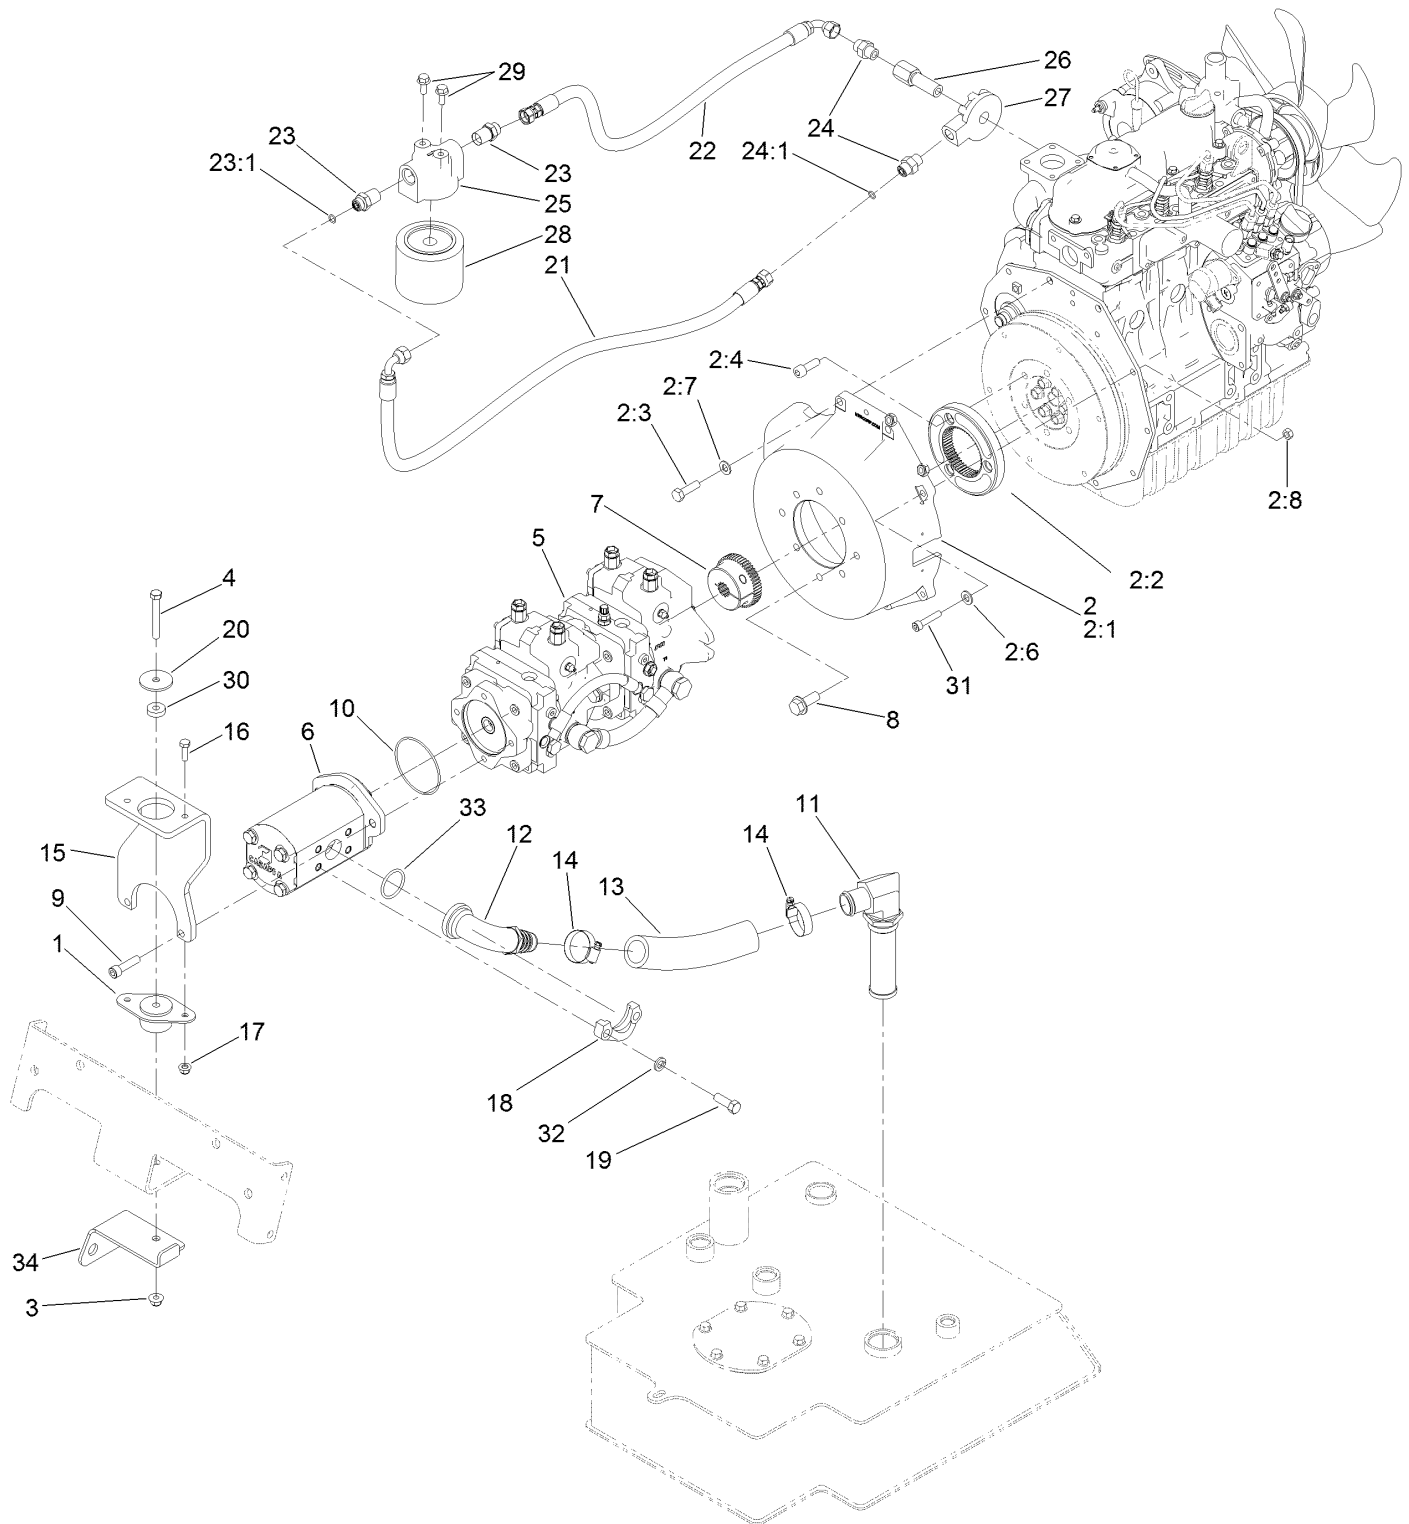

## Tandem Pump and Gear Pump Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-9076           | 1           | Mount-Engine          | 16          | 322-5              | 2           | Screw-HH           |
| 2           | 130-7728           | 1           | Mount-Pump            | 17          | 104-8300           | 2           | Nut-HF, NI         |
| 2:1         | 130-7724           | 1           | Housing-Pump Mount    | 18          | 136-5794           | 2           | Flange             |
| 2:2         | 125-1179           | 1           | Flange-Coupler        | 19          | 324-5              | 4           | Screw-HH           |
| 2:3         | 56-2140            | 2           | Screw-HH              | 20          | 63-7400            | 1           | Washer-Rebound     |
| 2:4         | 108-1420           | 3           | Screw-HSH             | 21          | 130-7717           | 1           | Hose-HYD           |
| 2:6         | 115-7370           | 4           | Washer-Plain          | 22          | 130-7719           | 1           | Hose-HYD           |
| 2:7         | 33095-00           | 2           | Washer-Flat           | 23          | 136-5838           | 2           | Fitting-HYD        |
| 2:8         | 33014-00           | 1           | Nut-Hex               | 23:1        | 237-22             | 1           | O-Ring             |
| 3           | 104-8301           | 1           | Nut-HF, NI            | 24          | 130-7716           | 2           | Fitting-HYD        |
| 4           | 323-13             | 1           | Screw-HH              | 24:1        | 237-22             | 1           | O-Ring             |
| 5           | 138-0767           | 1           | Pump-Tandem           | 25          | 130-7588           | 1           | Base-Filter        |
| 6           | 130-7731           | 1           | Pump-Gear             | 26          | 130-7587           | 1           | Pipe-Joint         |
| 7           | 130-7725           | 1           | Hub-Pump              | 27          | 130-7586           | 1           | Base-Filter        |
| 8           | 3234-38            | 2           | Screw-HHF             | 28          | 104-5169           | 1           | Filter-Oil         |
| 9           | 09718              | 2           | Screw-Sh              | 29          | 33104-020          | 2           | Screw-HHF          |
| 10          | 237-161            | 1           | O-Ring                | 30          | 62-6660            | 1           | Spacer             |
| 11          | 130-7582           | 1           | Strainer-Suction      | 31          | 131-0197           | 4           | Screw-HSH          |
| 12          | 112-7374           | 1           | Fitting               | 32          | 3253-6             | 4           | Washer-Lock        |
| 13          | 130-7561           | 1           | Hose-Suction          | 33          | 115-5420           | 1           | O-Ring             |
| 14          | 2412-111           | 2           | Clamp-Hose, W/Liner   | 34          | 138-0790-03        | 1           | Bracket-Bulkhead   |
| 15          | 138-0231-03        | 1           | Bracket-Support, Pump |             |                    |             |                    |
 
# Tandem Pump Assembly No. 138-0767

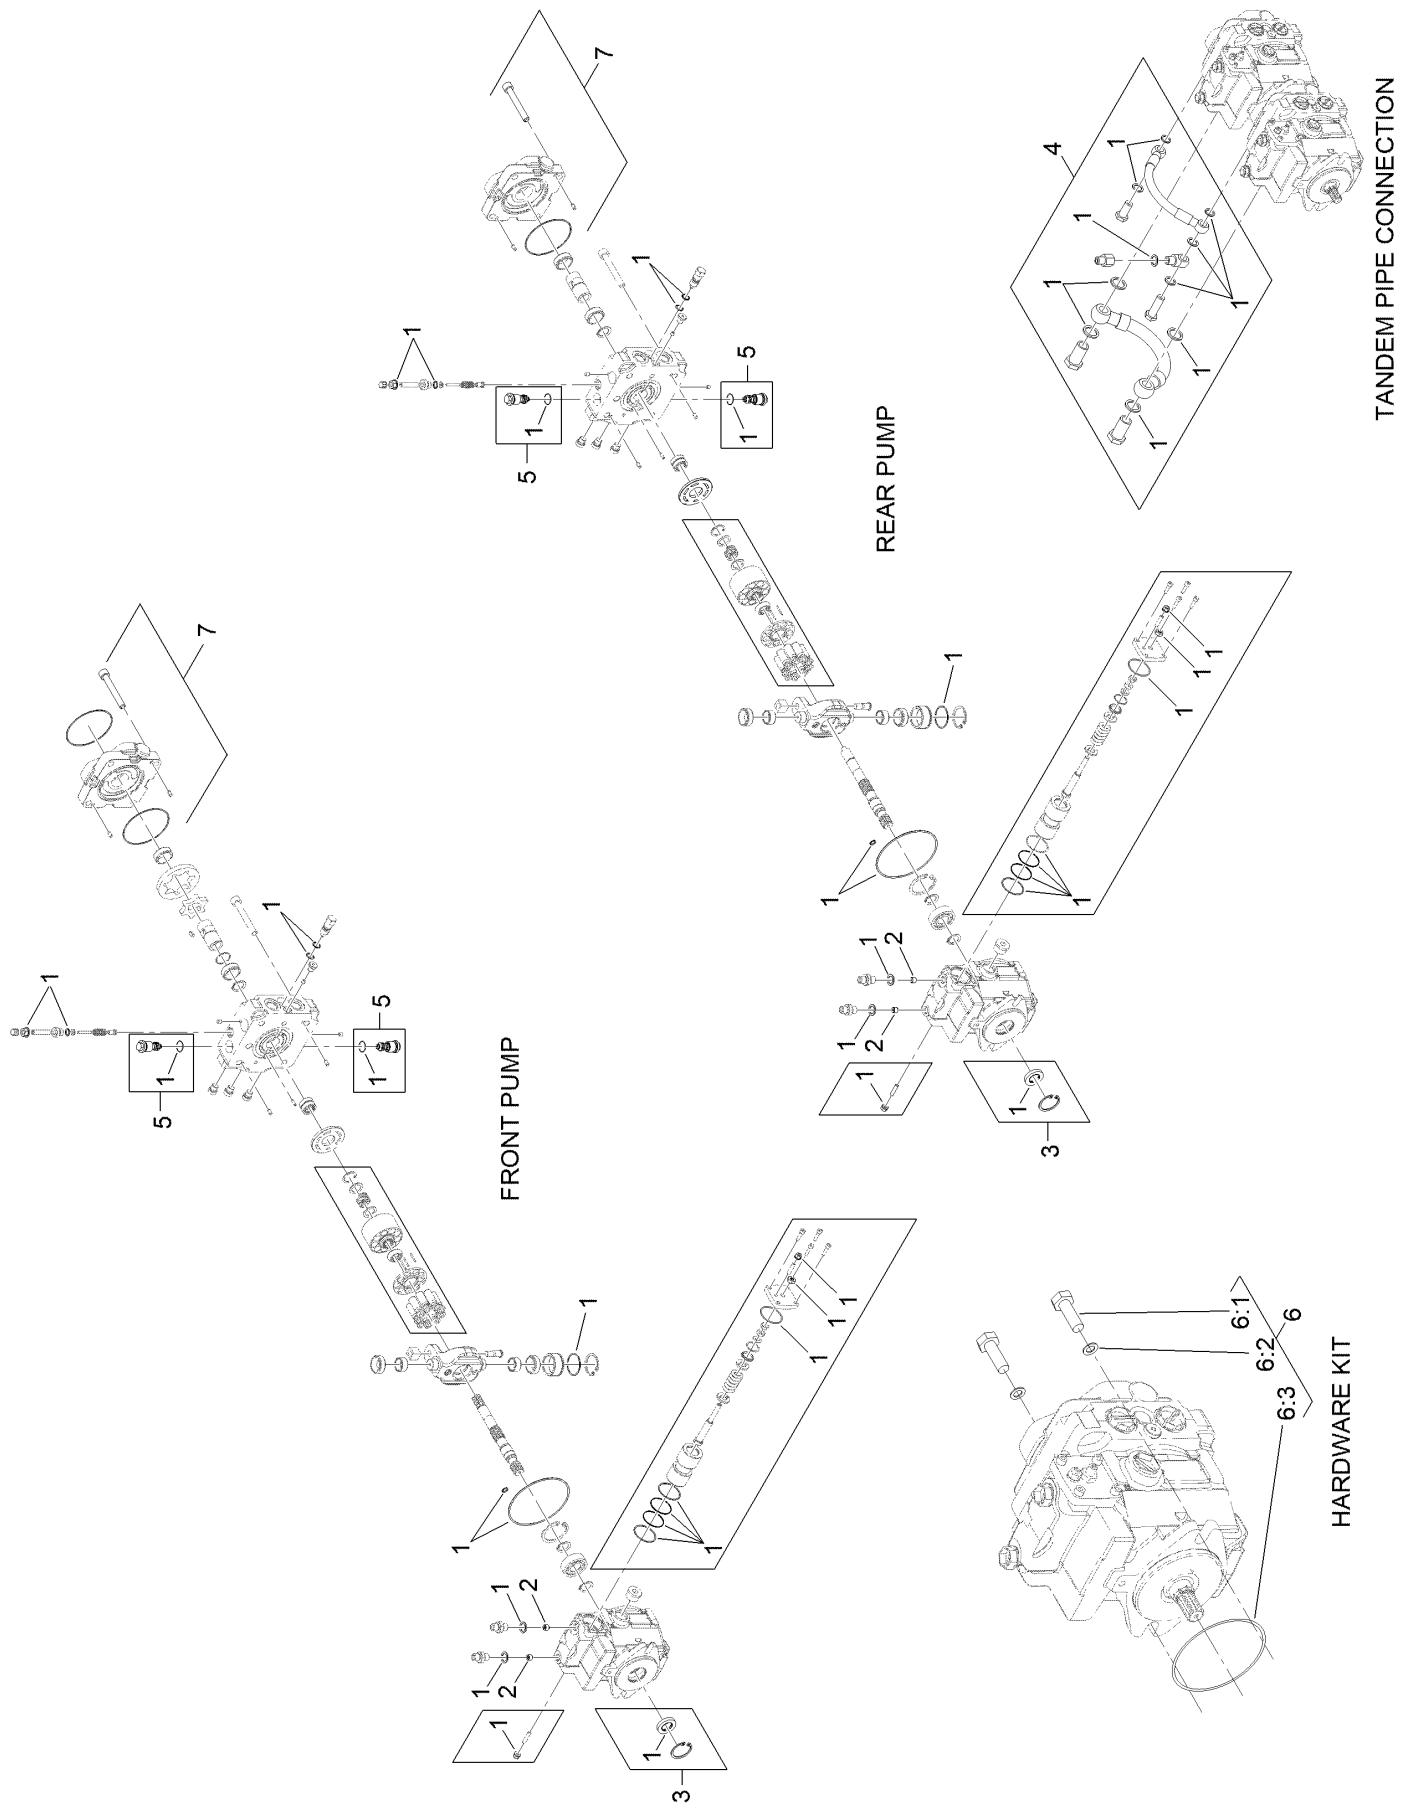


# Tandem Pump Assembly No. 138-0767 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|----------------------------|
| 1           | 132-6041           | 2           | Seal Kit                   |
| 2           | 132-6042           | 4           | Spacer-Jet                 |
| 3           | 132-6045           | 1           | Shaft Seal Kit             |
| 4           | 132-6047           | 1           | Tandem Connection Pipe Kit |
| 5           | 138-0781           | 4           | Valve-Relief               |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 140-5300           | 1           | Hardware Kit       |
| 6:1         |                    | 2           | Bolt-Hex ●         |
| 6:2         |                    | 2           | Washer ●           |
| 6:3         |                    | 1           | O-Ring ●           |
| 7           | 144-7363           | 1           | Bolt Kit           |

● Not serviced separately

 **Gear Pump Assembly No. 130-7731**

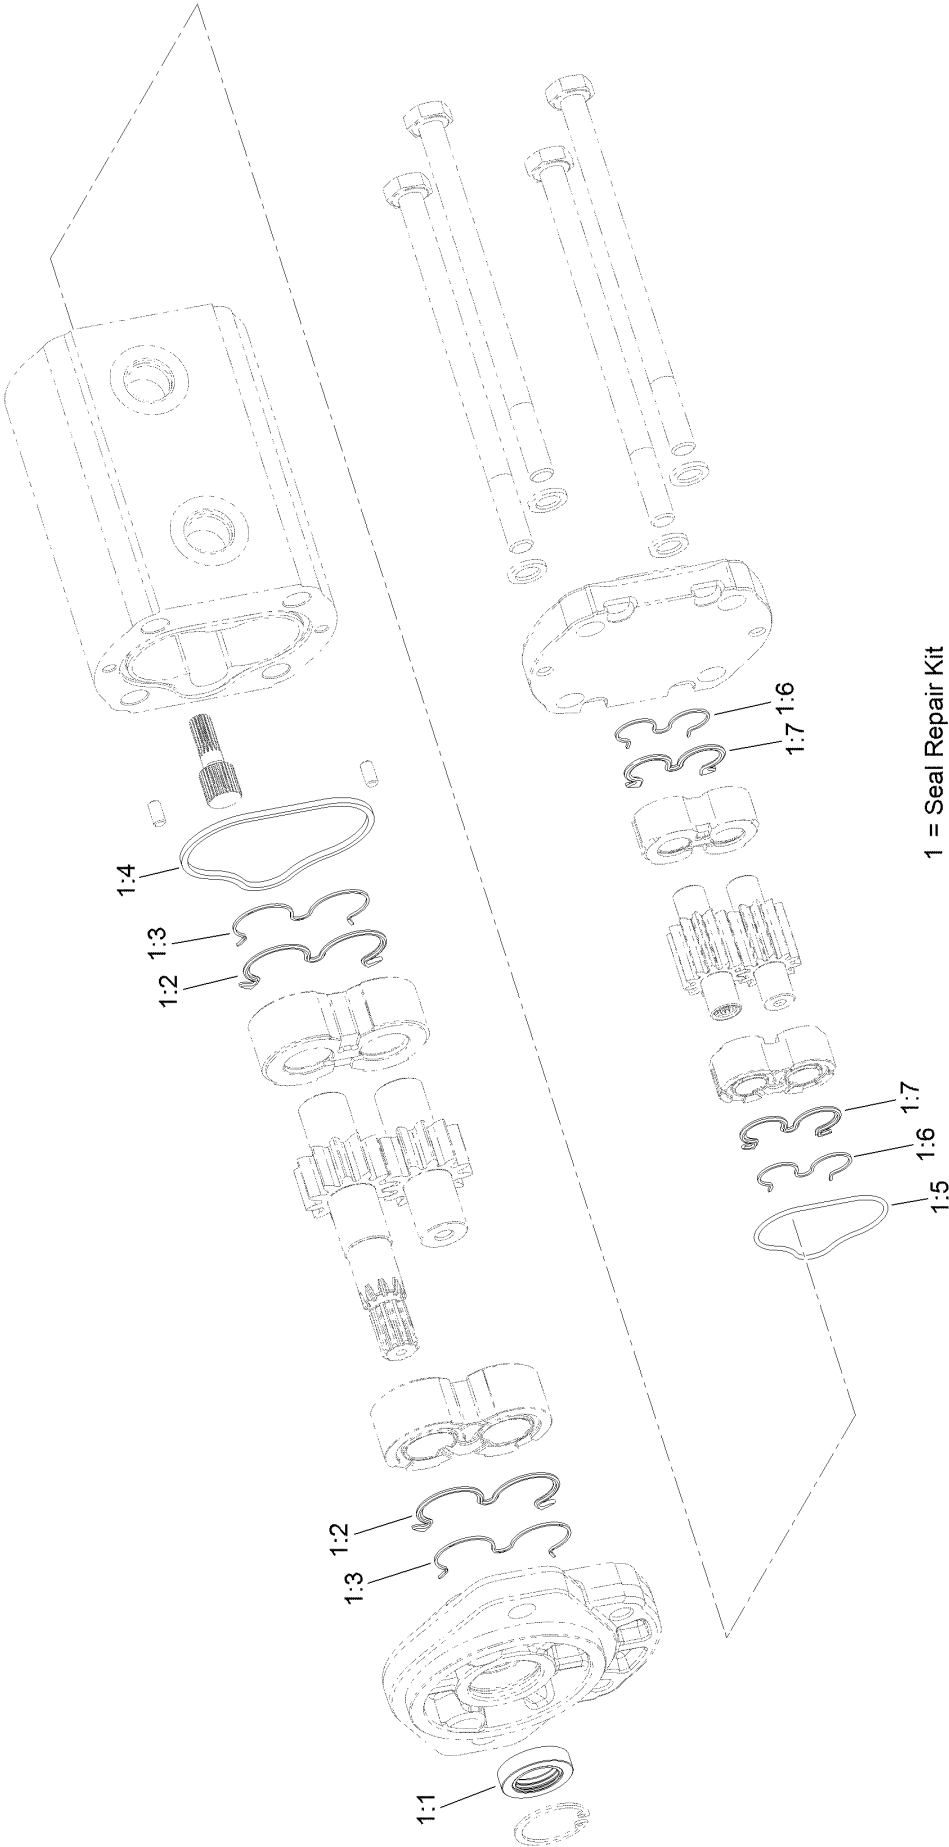

1 = Seal Repair Kit

## Gear Pump Assembly No. 130-7731 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-6028           | 1           | Seal Kit           |
| 1:1         |                    | 1           | Seal-Shaft ●       |
| 1:2         |                    | 2           | Seal-Gear ●        |
| 1:3         |                    | 2           | Ring-Backup ●      |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1:4         |                    | 1           | Seal-Square ●      |
| 1:5         |                    | 1           | O-Ring ●           |
| 1:6         |                    | 2           | Ring-Backup ●      |
| 1:7         |                    | 2           | Seal-Gear, Rear ●  |

● Not serviced separately

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The parts are numbered as follows:


- 1**: Main housing or base plate.
- 2**: Central component, possibly a pump or motor unit.
- 3**: Curved mounting bracket or handle.
- 4**: Small pin or screw.
- 5**: Small pin or screw (multiple locations).
- 6**: Small cylindrical component.
- 7**: Small cylindrical component.
- 8**: Small pin or screw.
- 10**: Small pin or screw.
- 11**: Small component, possibly a seal or gasket.
- 12**: Small pin or screw.
- 13**: Flat rectangular plate.
- 14**: Small bracket or support.
- 15**: Small pin or screw.
- 16**: Small component, possibly a seal or gasket.
- 17**: Small bracket or support.
- 18**: Small pin or screw.
- 19**: Curved mounting bracket or handle.

The diagram shows the relative positions and assembly sequence of these components, with dashed lines indicating the alignment and path of assembly.

## Control Valve and Reference Bar Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1           | 130-5321           | 1           | Plate-Control       | 10          | 94-6961            | 4           | Screw              |
| 1:2         | 131-0708           | 1           | Decal-Control Panel | 11          | 131-9162           | 1           | Handle-Traction    |
| 2           | 125-3704           | 1           | Valve-Control       | 13          | 132-8414           | 1           | Foam-Shield, Heat  |
| 3           | 112-2620           | 1           | Bar-Reference       | 14          | 132-8415           | 1           | Foam-Shield, Heat  |
| 4           | 321-5              | 6           | Screw-HH            | 15          | 75-5470            | 2           | Spacer-Bearing     |
| 5           | 3296-42            | 10          | Nut-Lock, NI        | 16          | 133-1642           | 1           | Cover-Rubber       |
| 6           | 130-7723           | 2           | Ball-Traction       | 17          | 133-1641           | 1           | Plate-Clamp        |
| 7           | 130-7692           | 1           | Handle-Control      | 18          | 321-6              | 2           | Screw-HH           |
| 8           | 3234-5             | 4           | Screw-HHF           | 19          | 138-0791           | 1           | Bar-Reference      |
 
# Control Valve Assembly No. 125-3704

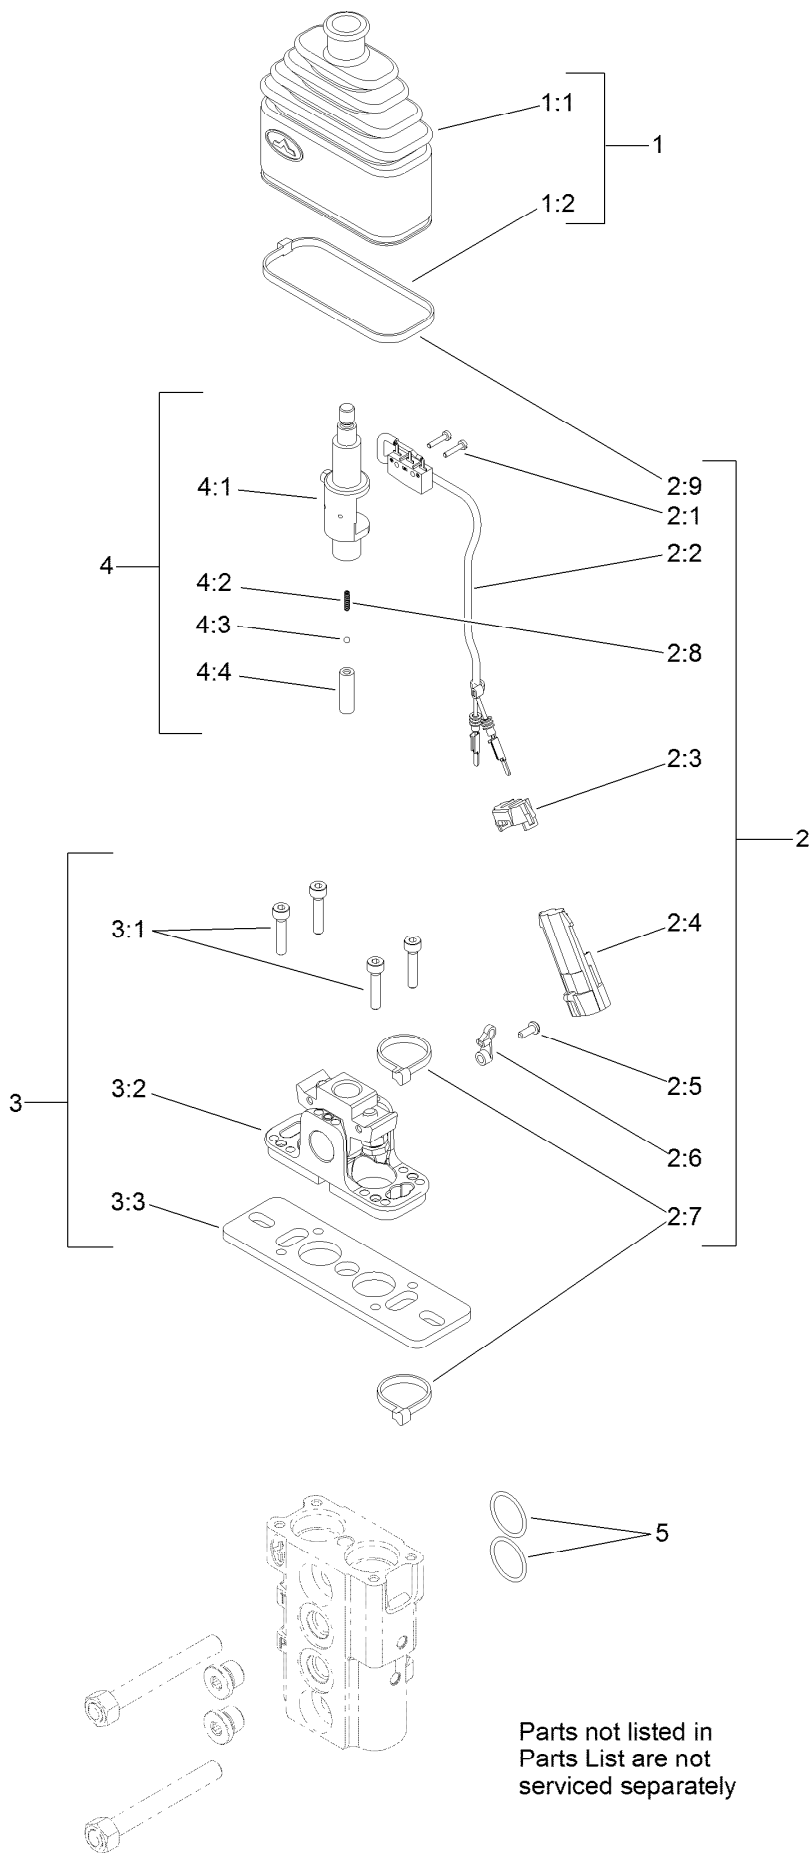

# Control Valve Assembly No. 125-3704 (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-6034           | 2           | Bellow Kit         |
| 1:1         |                    | 1           | Bellow-Rubber ■    |
| 1:2         |                    | 1           | Tie-Cable ■        |
| 2           | 132-6035           | 2           | Limit Switch Kit   |
| 2:1         |                    | 2           | Screw ■            |
| 2:2         |                    | 1           | Cable ■            |
| 2:3         |                    | 1           | Fairlead ■         |
| 2:4         |                    | 1           | Connector ■        |
| 2:5         |                    | 1           | Screw ■            |
| 2:6         |                    | 1           | Tie-Wire ■         |
| 2:7         |                    | 2           | Tie-Cable ■        |
| 2:8         |                    | 1           | Spring ■●          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 2:9         |                    | 1           | Tie-Cable ■             |
| 3           | 132-6036           | 2           | Fulcrum Kit             |
| 3:1         |                    | 4           | Screw ■                 |
| 3:2         |                    | 1           | Support Kit ■           |
| 3:3         |                    | 1           | Plate-Mounting ■        |
| 4           | 132-6037           | 2           | Switch Holder Lever Kit |
| 4:1         |                    | 1           | Lever-Holder, Switch ■  |
| 4:2         |                    | 1           | Spring-Return ■         |
| 4:3         |                    | 1           | Sphere ■                |
| 4:4         |                    | 1           | Holder-Spring ■         |
| 5           | 100-7246           | 2           | O-Ring                  |

● Not illustrated

■ Not serviced separately

# 2-Spool Valve and Auxiliary Valve Assembly

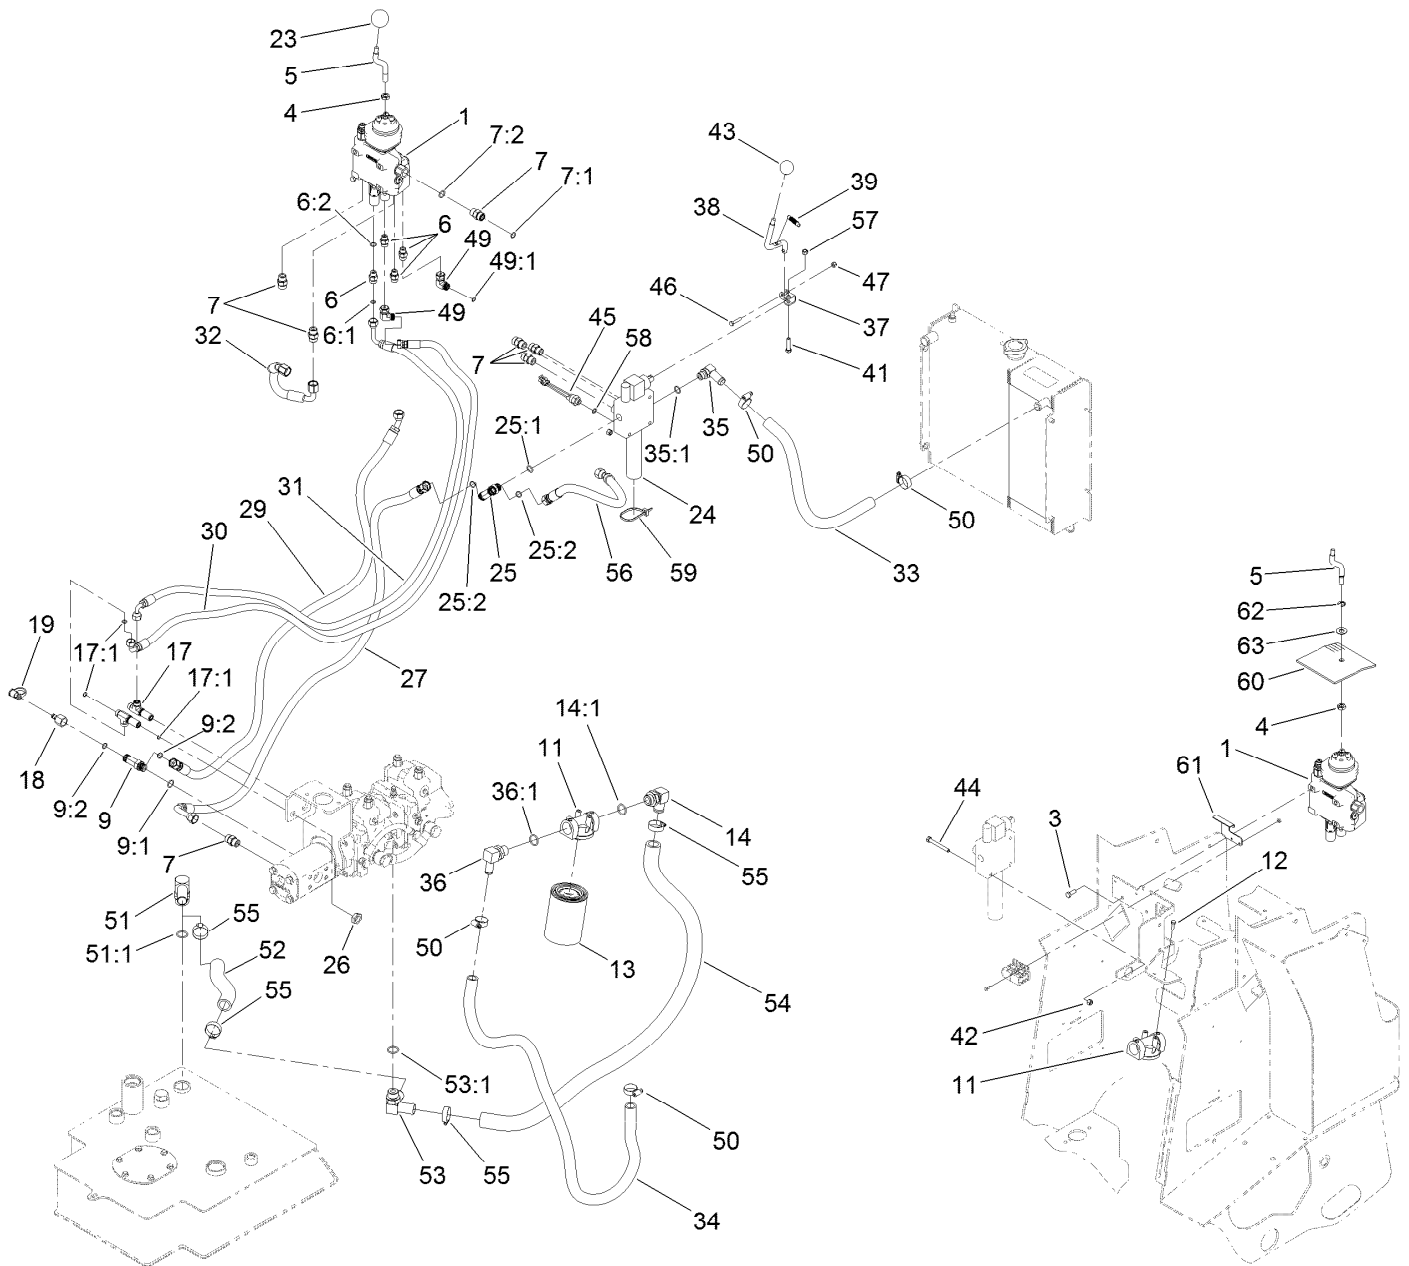

## 2-Spool Valve and Auxiliary Valve Assembly (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|---------------------|
| 1           | 130-7710           | 1           | 2 Spool Valve ASM       | 34          | 130-7566           | 1           | Hose-Return         |
| 3           | 322-4              | 3           | Screw-HH                | 35          | 353-954            | 1           | Fitting-Elbow, 90   |
| 4           | 51-2070            | 1           | Nut                     | 35:1        | 237-79             | 1           | O-Ring              |
| 5           | 131-8025           | 1           | Shaft-Handle, Lift/Tilt | 36          | 353-987            | 1           | Fitting-Elbow, 90   |
| 6           | 340-2              | 4           | Fitting-Straight        | 36:1        | 237-81             | 1           | O-Ring              |
| 6:1         | 237-22             | 1           | O-Ring                  | 37          | 133-0235           | 1           | Bracket-Auxiliary   |
| 6:2         | 237-42             | 1           | O-Ring                  | 38          | 131-9277           | 1           | Handle ASM          |
| 7           | 340-4              | 7           | Fitting-Straight        | 39          | 114-0249           | 1           | Spring-Extension    |
| 7:1         | 237-30             | 1           | O-Ring                  | 41          | 33114-035          | 1           | Screw-HH            |
| 7:2         | 237-79             | 1           | O-Ring                  | 42          | 3296-29            | 3           | Nut-Lock, NI        |
| 9           | 340-109            | 1           | Fitting-Tee             | 43          | 233-42             | 1           | Knob                |
| 9:1         | 237-79             | 1           | O-Ring                  | 44          | 322-13             | 3           | Screw-HH            |
| 9:2         | 237-30             | 2           | O-Ring                  | 45          | 72-4310            | 1           | Switch-Ball         |
| 11          | 92-5821            | 1           | Head-Filter             | 46          | 119-2309           | 1           | Bolt-Shldr,HH       |
| 12          | 321-4              | 2           | Screw-HH                | 47          | 3296-42            | 1           | Nut-Lock, NI        |
| 13          | 86-3010            | 2           | Filter-Oil              | 49          | 340-159            | 2           | Elbow-90            |
| 14          | 100-4202           | 1           | Fitting-90              | 49:1        | 237-22             | 2           | O-Ring              |
| 14:1        | 237-81             | 1           | O-Ring                  | 50          | 2412-129           | 4           | Clamp-Hose          |
| 17          | 340-68             | 2           | Fitting-Tee, Bulkhead   | 51          | 56-9530            | 1           | Fitting-HYD, 90 DEG |
| 17:1        | 237-22             | 3           | O-Ring                  | 51:1        | 237-117            | 1           | O-Ring              |
| 18          | 100-5616           | 1           | Fitting                 | 52          | 127-9627           | 1           | Hose-Suction        |
| 19          | 354-79             | 1           | Cap-Dust                | 53          | AU375462A1         | 1           | Connector           |
| 23          | 233-21             | 1           | Knob                    | 53:1        | 237-81             | 1           | O-Ring              |
| 24          | 136-4538           | 1           | Double Detent Valve ASM | 54          | 127-9626           | 1           | Hose-Return         |
| 25          | 340-157            | 1           | Fitting-HYD, Tee        | 55          | 2412-34            | 4           | Clamp-Hose          |
| 25:1        | 237-79             | 1           | O-Ring                  | 56          | 120-0880           | 1           | Hose-HYD            |
| 25:2        | 237-30             | 2           | O-Ring                  | 57          | 33024-00           | 1           | Nut-Lock, NI        |
| 26          | 340-70             | 4           | Nut-Lock                | 58          | 237-42             | 1           | O-Ring              |
| 27          | 127-9629           | 1           | Hose-HYD                | 59          | 3290-378           | 2           | Tie-Cable           |
| 29          | 127-9631           | 1           | Hose-HYD                | 60          | 131-8011           | 1           | Deflector-Air       |
| 30          | 127-9632           | 1           | Hose-HYD                | 61          | 131-8012           | 1           | Bracket-Deflector   |
| 31          | 130-7597           | 1           | Hose-HYD                | 62          | 32151-68           | 1           | Ring-Retaining      |
| 32          | 127-9634           | 1           | Hose-Return             | 63          | 110-6894           | 1           | Washer-Pivot        |
| 33          | 130-7565           | 1           | Hose-Return             |             |                    |             |                     |

K1A7

## 2-Spool Valve Assembly No. 130-7710 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|--------------------|
| 1           | 106-7724           | 1           | Joystick Kit        | 3           | 106-7738           | 2           | Seal-Valve, Spool  |
| 1:1         | 98-0668            | 3           | Nut                 | 4           | 106-7737           | 1           | Spool-Valve        |
| 1:2         | 106-7726           | 1           | Pivot-Joystick      | 5           | 106-7736           | 1           | Spool-Valve        |
| 1:3         | 106-7727           | 1           | Pin-Joystick        | 6           | 132-6031           | 1           | Valve-Relief, Main |
| 1:4         | 106-7728           | 1           | End-Rod             | 7           | 353-988            | 2           | Plug-Hex           |
| 1:5         | 42-9850            | 3           | Washer-Lock, Spring | 7:1         | 237-79             | 1           | O-Ring             |
| 1:6         | 98-5828            | 3           | Screw-HSH           | 8           | 106-7734           | 3           | Valve-Relief       |
| 1:7         | 106-7729           | 1           | Bellow-Rubber       | 9           | 106-7719           | 2           | Seal-Valve         |
| 1:8         | 3290-379           | 1           | Tie-Cable           | 10          | 106-7732           | 1           | Valve Spring Kit   |
| 1:9         | 106-7730           | 2           | Joint-Joystick      | 11          | 106-7733           | 1           | Detent Spring Kit  |
| 1:10        | 106-7731           | 1           | Holder-Articulated  | 12          | 132-6032           | 1           | Joint-SAE 8        |
| 2           | 106-7725           | 1           | Seal-Joystick       | 13          | 132-6033           | 1           | Plug               |

Double Detent Valve Assembly No. 136-4538

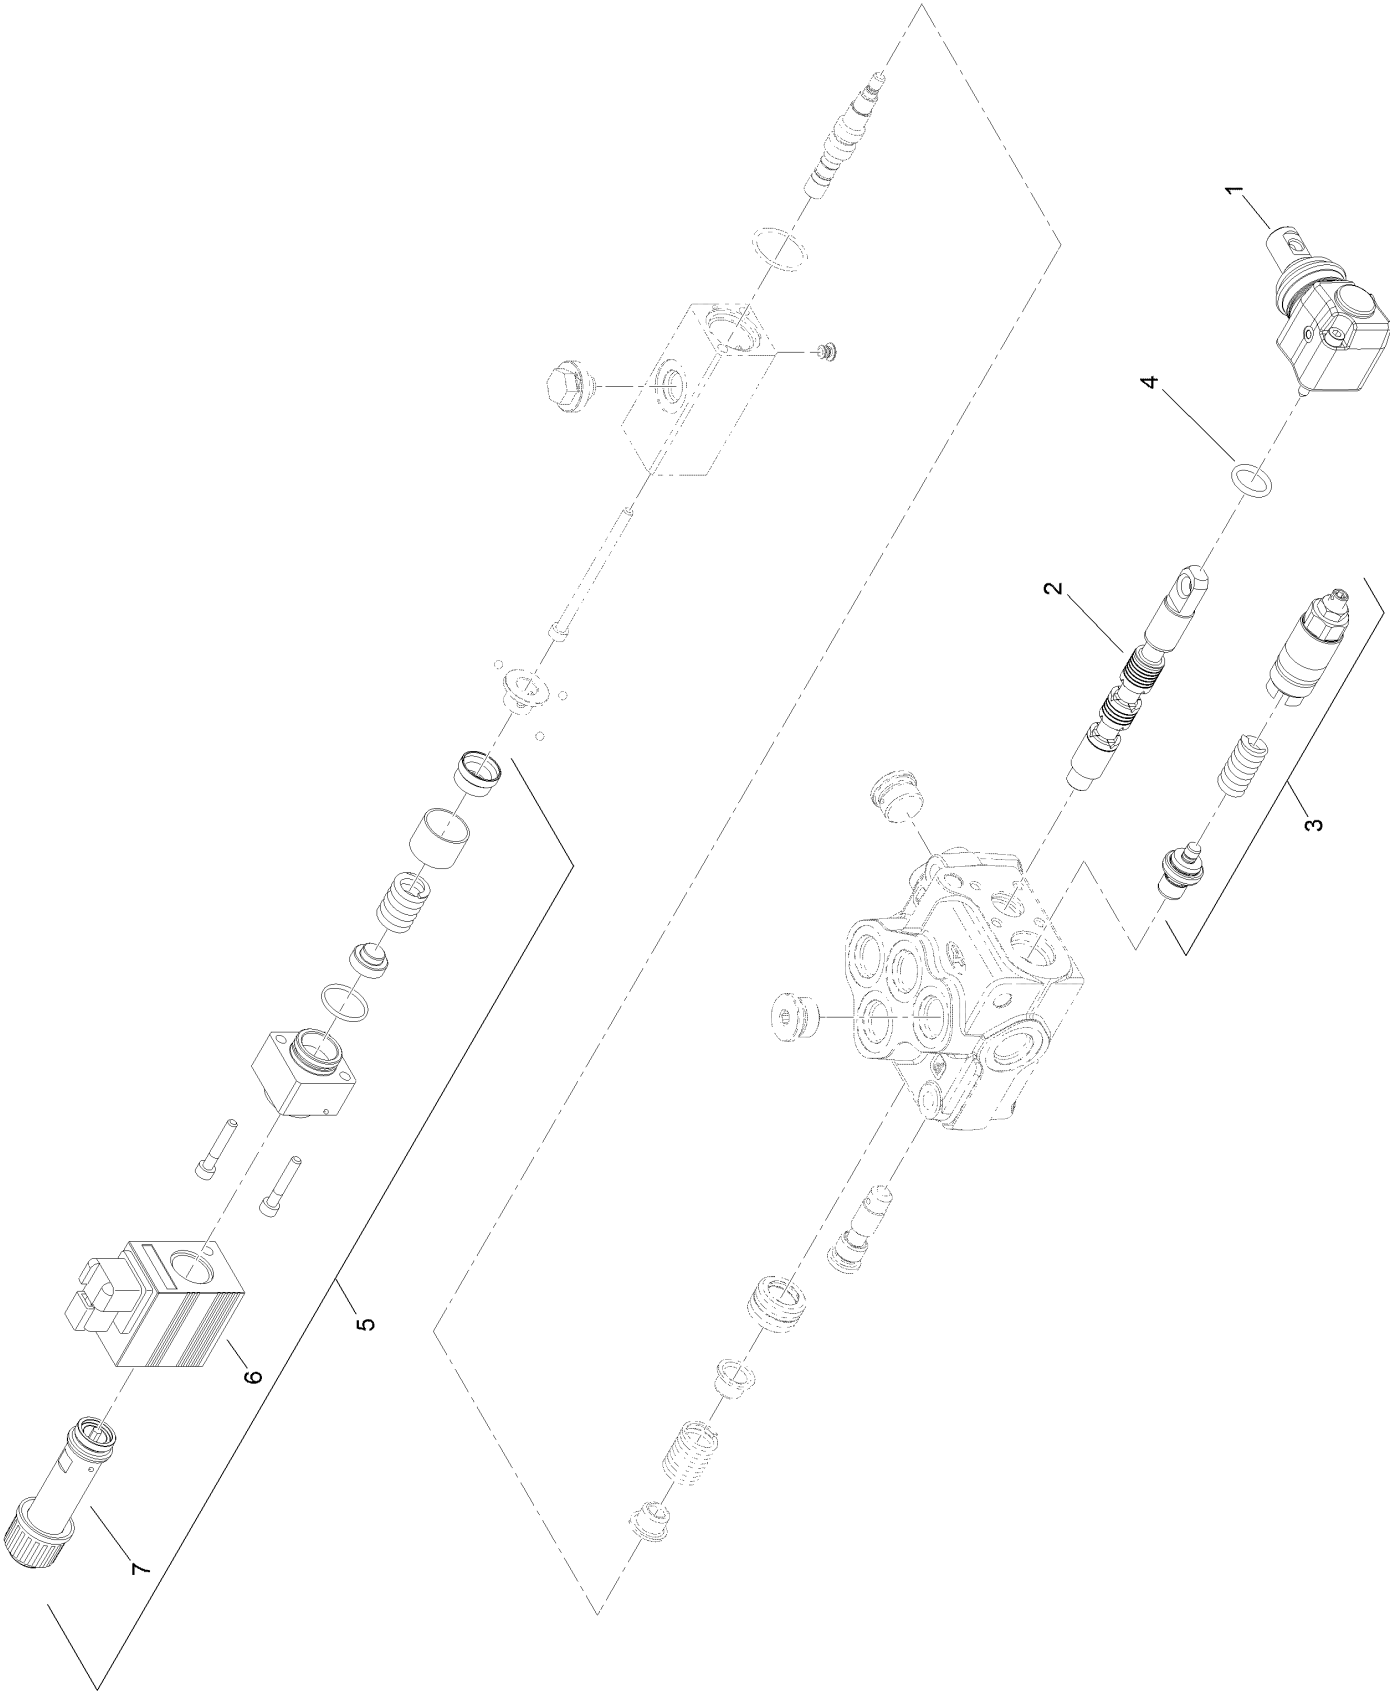


## Double Detent Valve Assembly No. 136-4538 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 1           | 132-6038           | 1           | Lever Kit (With Screws) |
| 2           | 114-8624           | 1           | Valve-Spool             |
| 3           | 132-6039           | 1           | Valve-Relief            |
| 4           | 106-7719           | 2           | Seal-Valve              |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 5           | 136-5810           | 1           | Spring/Coil Valve Kit |
| 6           | 136-5811           | 1           | Coil-Valve            |
| 7           | 136-5812           | 1           | Valve-Tube, Pull      |

 
# Loader Arm Assembly

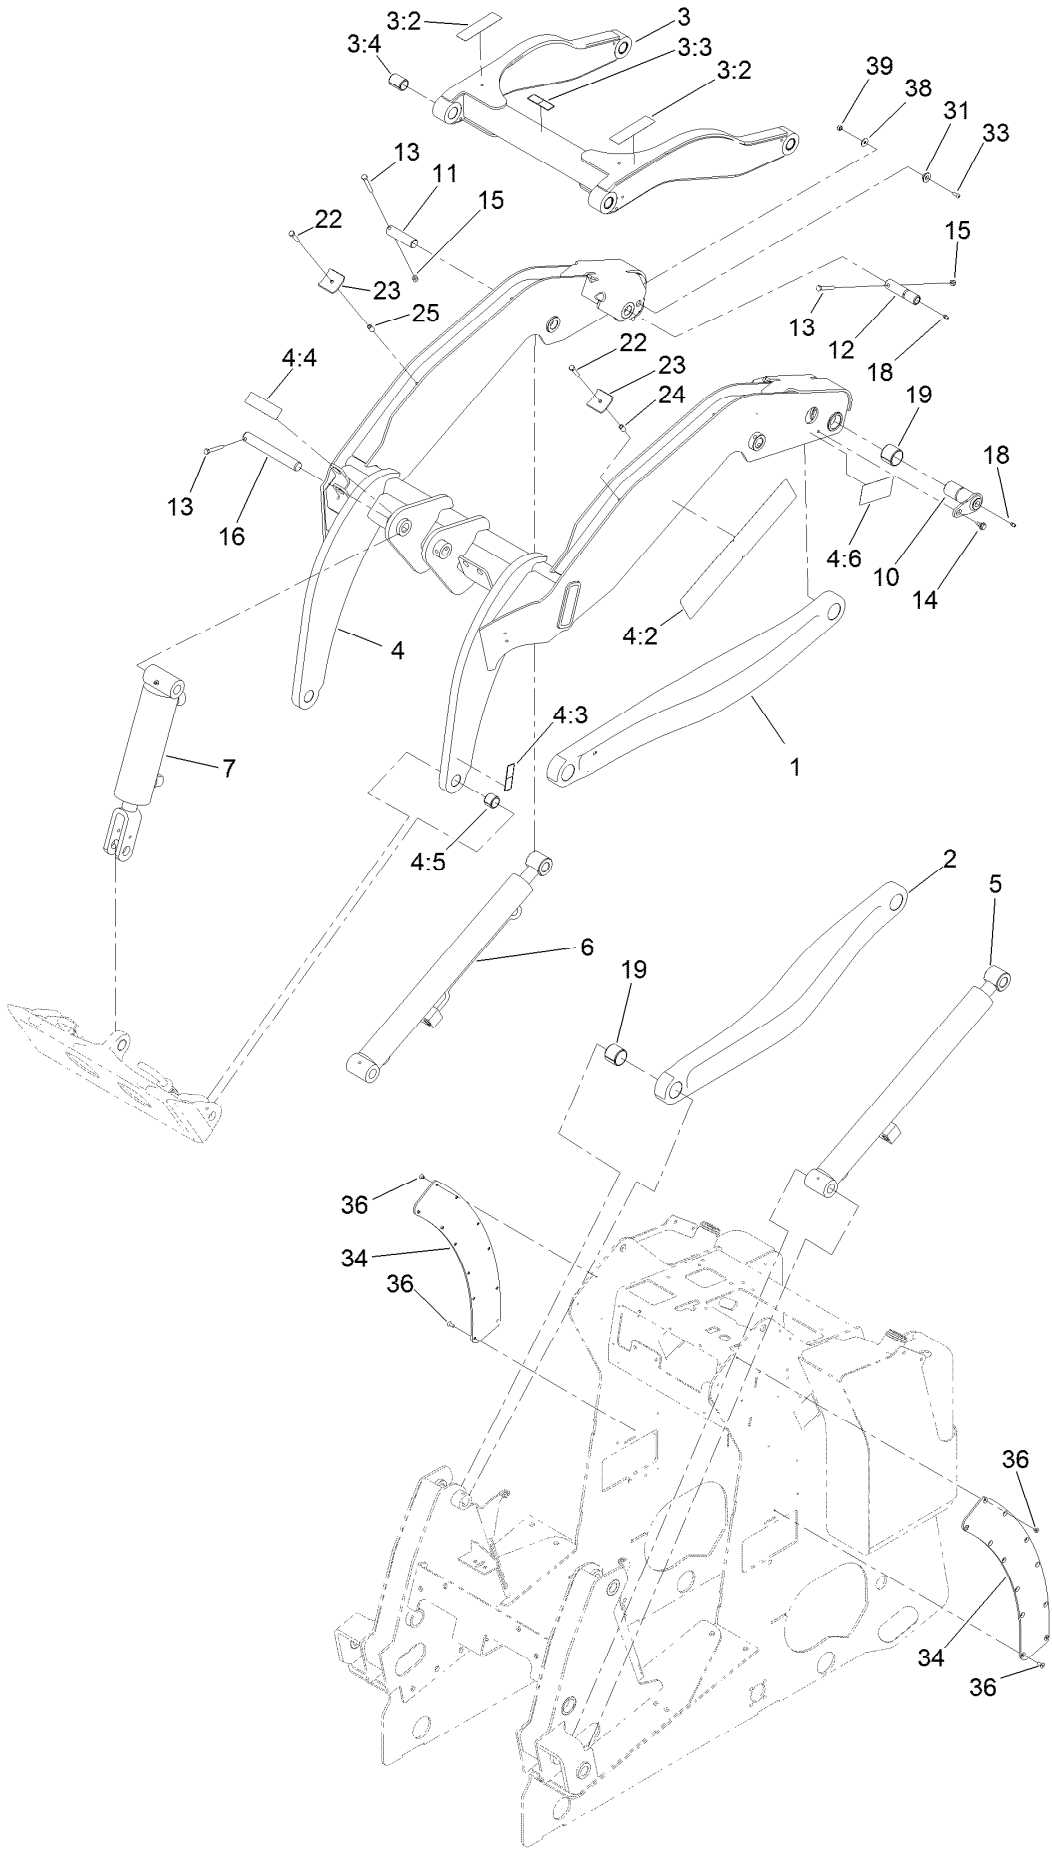

## Loader Arm Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 130-5151-03        | 1           | Link-Lower, LH          | 12          | 125-3695           | 2           | Pin-Link             |
| 2           | 130-5153-03        | 1           | Link-Lower, RH          | 13          | 3274-40            | 5           | Screw-HSH            |
| 3           | 130-5318           | 1           | Link-Upper              | 14          | 99-5105            | 2           | Screw-Shoulder       |
| 3:2         | 130-2836           | 2           | Decal-Warning, Crushing | 15          | 3296-29            | 4           | Nut-Lock, NI         |
| 3:3         | 120-0625           | 1           | Decal-Warning           | 16          | 130-5210           | 1           | Pin-Locking          |
| 3:4         | 130-5200           | 4           | Bushing-Spring          | 18          | 302-5              | 4           | Fitting-Grease       |
| 4           | 131-8024           | 1           | Arm-Loader              | 19          | 130-5199           | 4           | Bushing-Spring       |
| 4:2         | 133-0216           | 2           | Decal-Tx1000,           | 22          | 5-1470             | 4           | Screw-HH             |
| 4:3         | 120-0625           | 2           | Decal-Warning           | 23          | 130-5221           | 4           | Plate-Holddown, Hose |
| 4:4         | 115-4855           | 1           | Decal-Caution           | 24          | 131-9150           | 2           | Spacer-Hose          |
| 4:5         | 98-4871            | 2           | Bushing-Tension         | 25          | 131-9151           | 2           | Spacer-Hose          |
| 4:6         | 131-0711           | 2           | Decal-Warning           | 31          | 133-1666           | 2           | Guide                |
| 5           | 130-5176           | 1           | Cylinder-Lift, LH       | 33          | 3274-31            | 2           | Screw-HSBH           |
| 6           | 130-5175           | 1           | Cylinder-Lift, RH       | 34          | 131-0596           | 2           | Pad-Wear, Frame      |
| 7           | 130-5195           | 1           | Cylinder-HYD, Dump      | 36          | ST80422            | 16          | Screw                |
| 10          | 136-4708           | 2           | Pin-Pivot               | 38          | 87-6630            | 2           | Washer-Plain         |
| 11          | 130-5178           | 2           | Pin-Pivot               | 39          | 3296-42            | 2           | Nut-Lock, NI         |
 
# Hydraulic Cylinder Assembly No. 130-5175

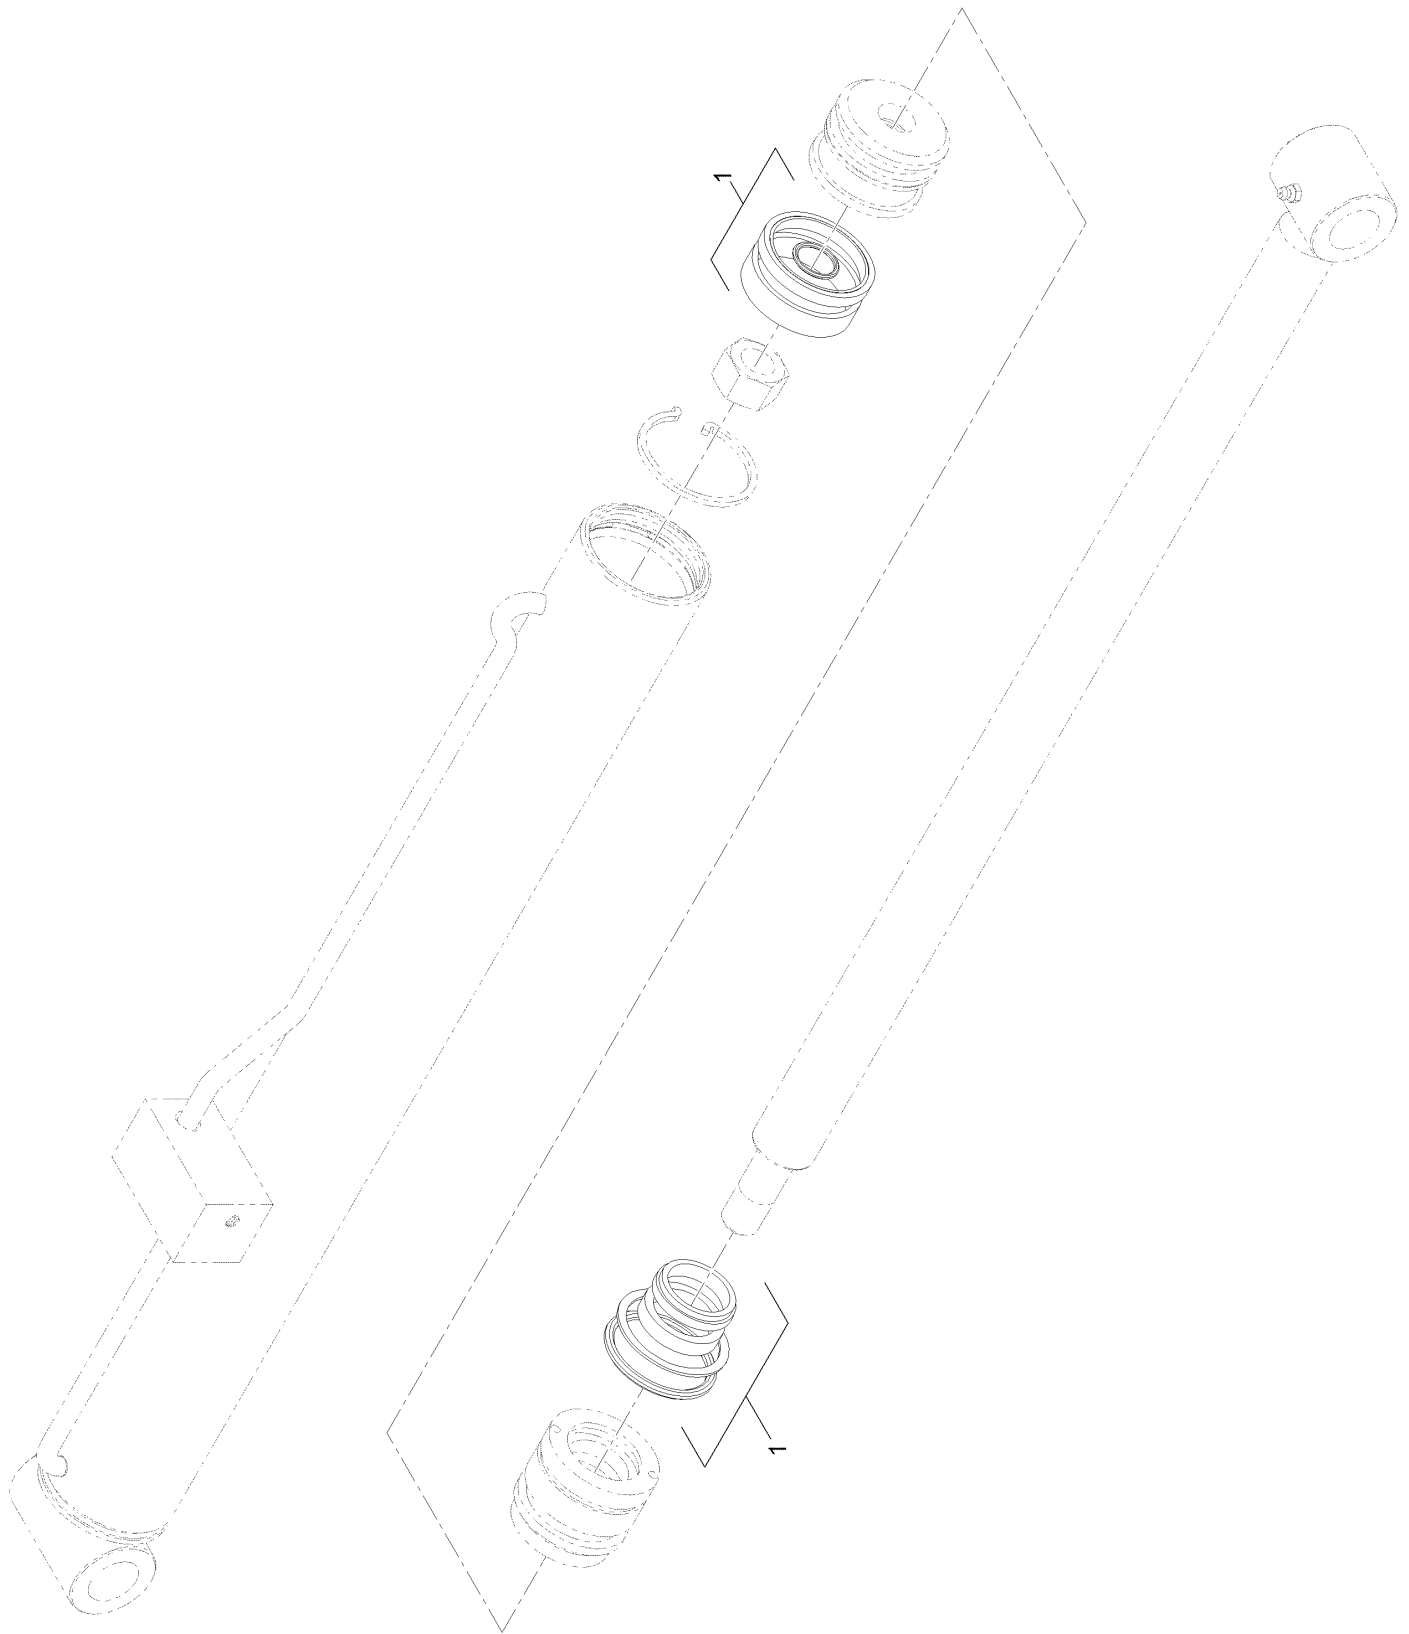

## Hydraulic Cylinder Assembly No. 130-5175 (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-6029           | 1           | Seal Kit           |

# Hydraulic Cylinder Assembly No. 130-5176

## Hydraulic Cylinder Assembly No. 130-5176 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-6029           | 1           | Seal Kit           |


# Hydraulic Cylinder Assembly No. 130-5195

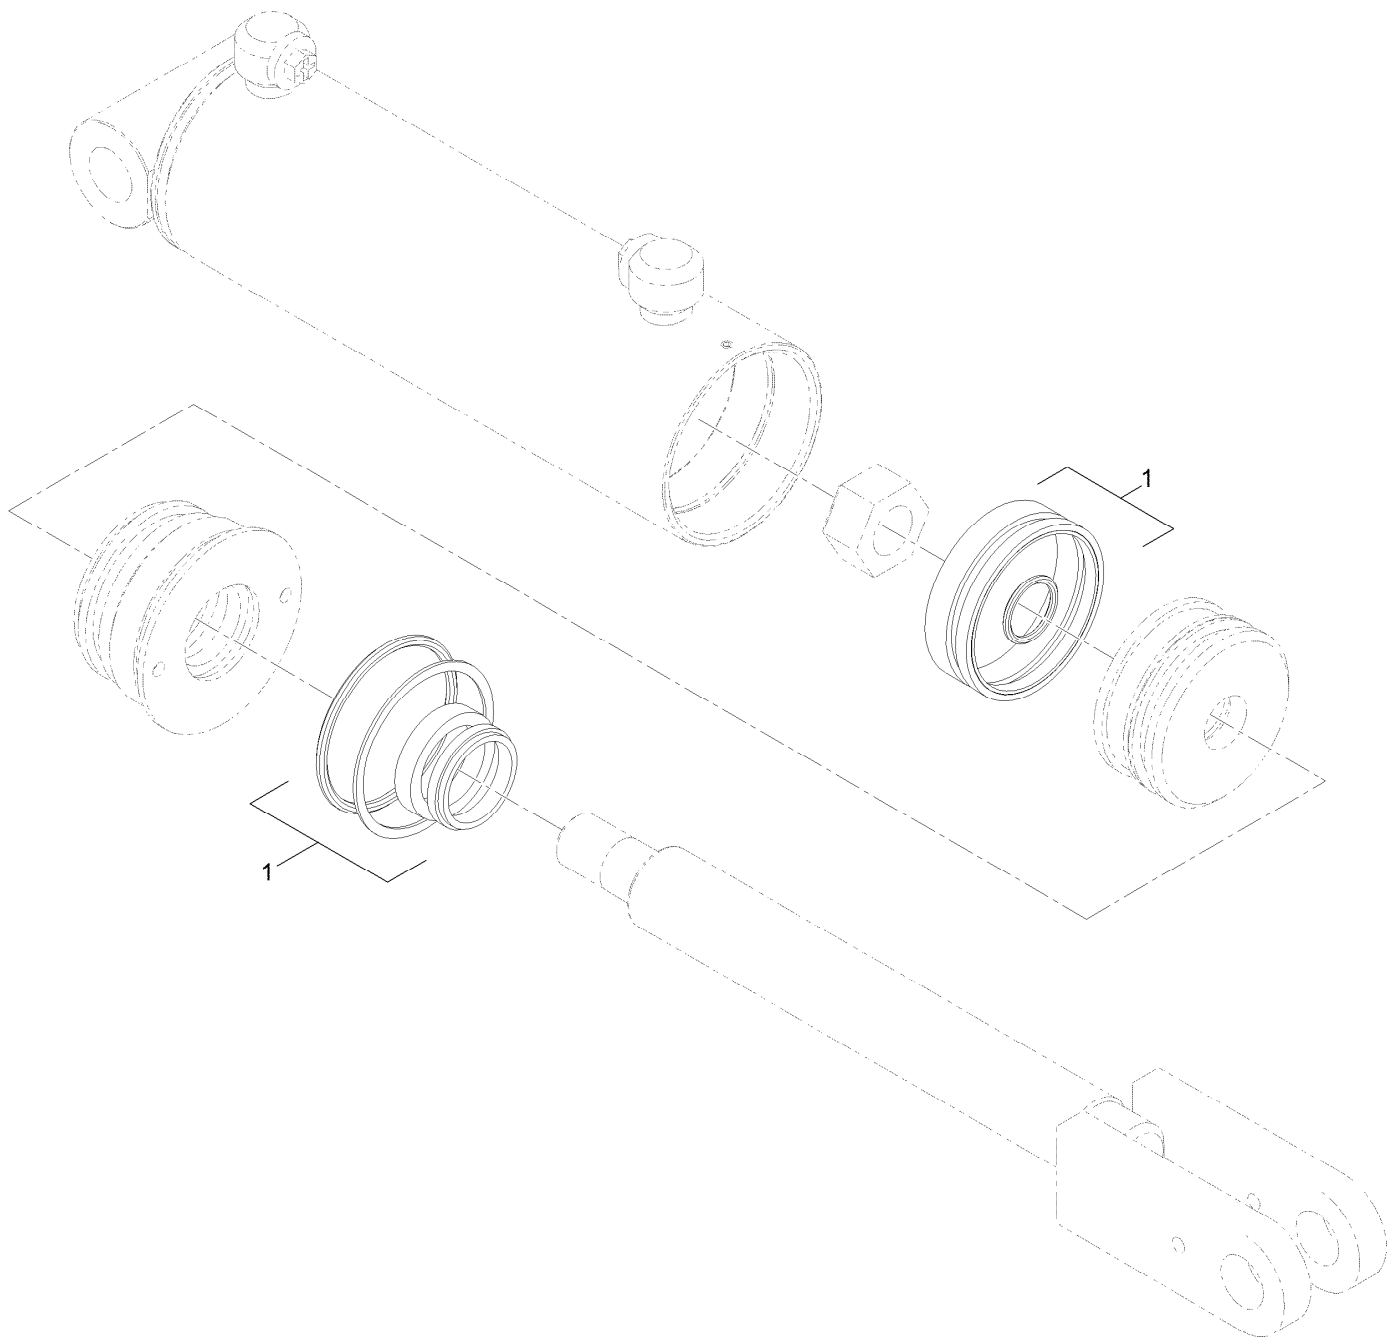

## Hydraulic Cylinder Assembly No. 130-5195 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-6030           | 1           | Seal Kit           |
 
# Loader Hydraulic Assembly

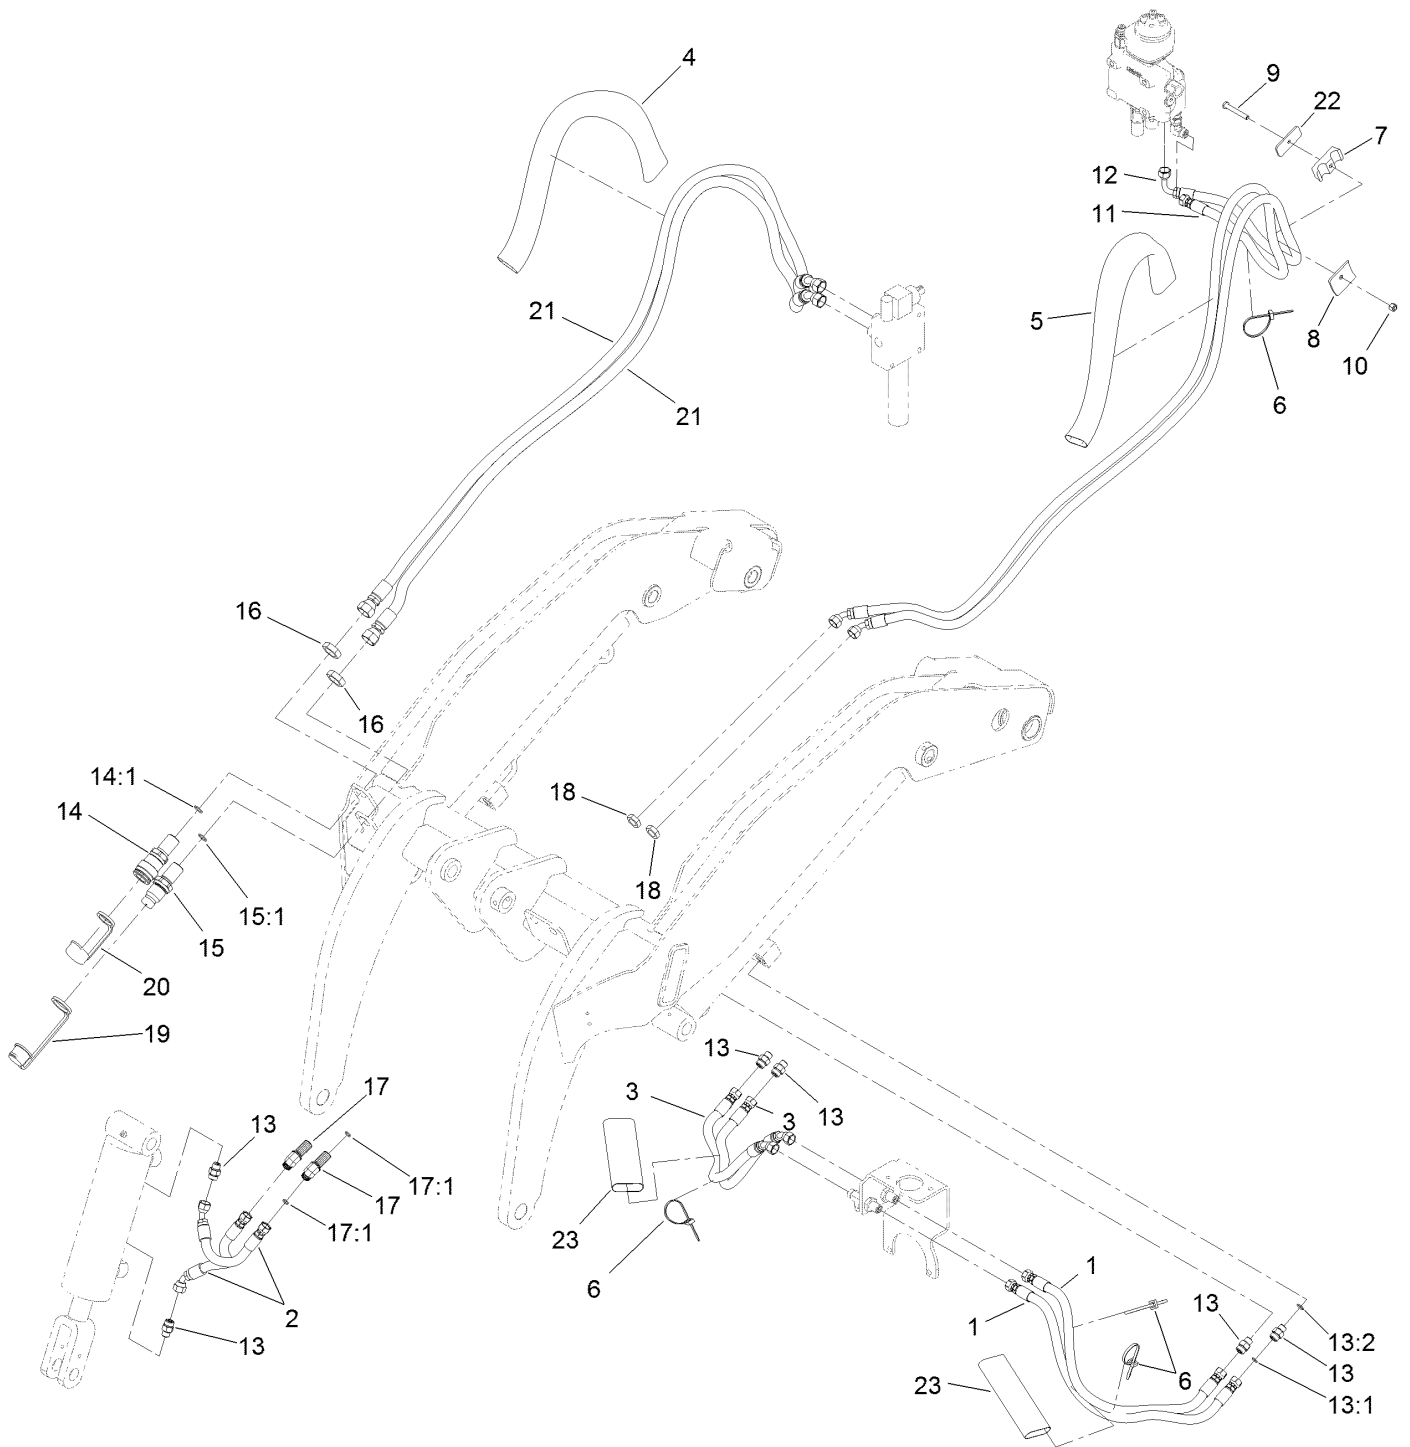


## Loader Hydraulic Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|------------------------|
| 1           | 133-8570           | 2           | HYD Hose ASM         | 14          | 105-8394           | 1           | Bulkhead Coupler ASM   |
| 2           | 127-9637           | 2           | Hose-HYD             | 14:1        | 237-65             | 1           | O-Ring                 |
| 3           | 133-8569           | 2           | HYD Hose ASM         | 15          | 105-8395           | 1           | Bulkhead Nipple ASM    |
| 4           | 130-7718           | 1           | Sleeve-Protective    | 15:1        | 237-65             | 1           | O-Ring                 |
| 5           | 100-6128           | 1           | Sleeve-Protective    | 15:2        | 100-6120           | 1           | Seal Kit ●             |
| 6           | 3290-378           | 4           | Tie-Cable            | 16          | 340-74             | 2           | Nut-Lock, Bulkhead     |
| 7           | 94-8105            | 2           | Clamp-Tube           | 17          | 340-69             | 2           | Elbow-Bulkhead, 45 DEG |
| 8           | 130-5221           | 2           | Plate-Holddown, Hose | 17:1        | 237-22             | 2           | O-Ring                 |
| 9           | 9114524            | 2           | Bolt-TAP, HH         | 18          | 340-70             | 2           | Nut-Lock               |
| 10          | 3296-29            | 2           | Nut-Lock, NI         | 19          | 100-8815           | 1           | Cap-Dust, Nipple       |
| 11          | 127-9633           | 1           | Hose-HYD             | 20          | 100-8816           | 1           | Cap-Dust, Coupler      |
| 12          | 130-7598           | 1           | Hose-HYD             | 21          | 127-9630           | 2           | Hose-HYD               |
| 13          | 340-2              | 6           | Fitting-Straight     | 22          | 131-9152           | 2           | Plate-Clamp, Hose      |
| 13:1        | 237-22             | 1           | O-Ring               | 23          | 133-8568           | 2           | Sleeve-Protective      |
| 13:2        | 237-42             | 1           | O-Ring               |             |                    |             |                        |

● Not illustrated
 
# Quick Attach Assembly

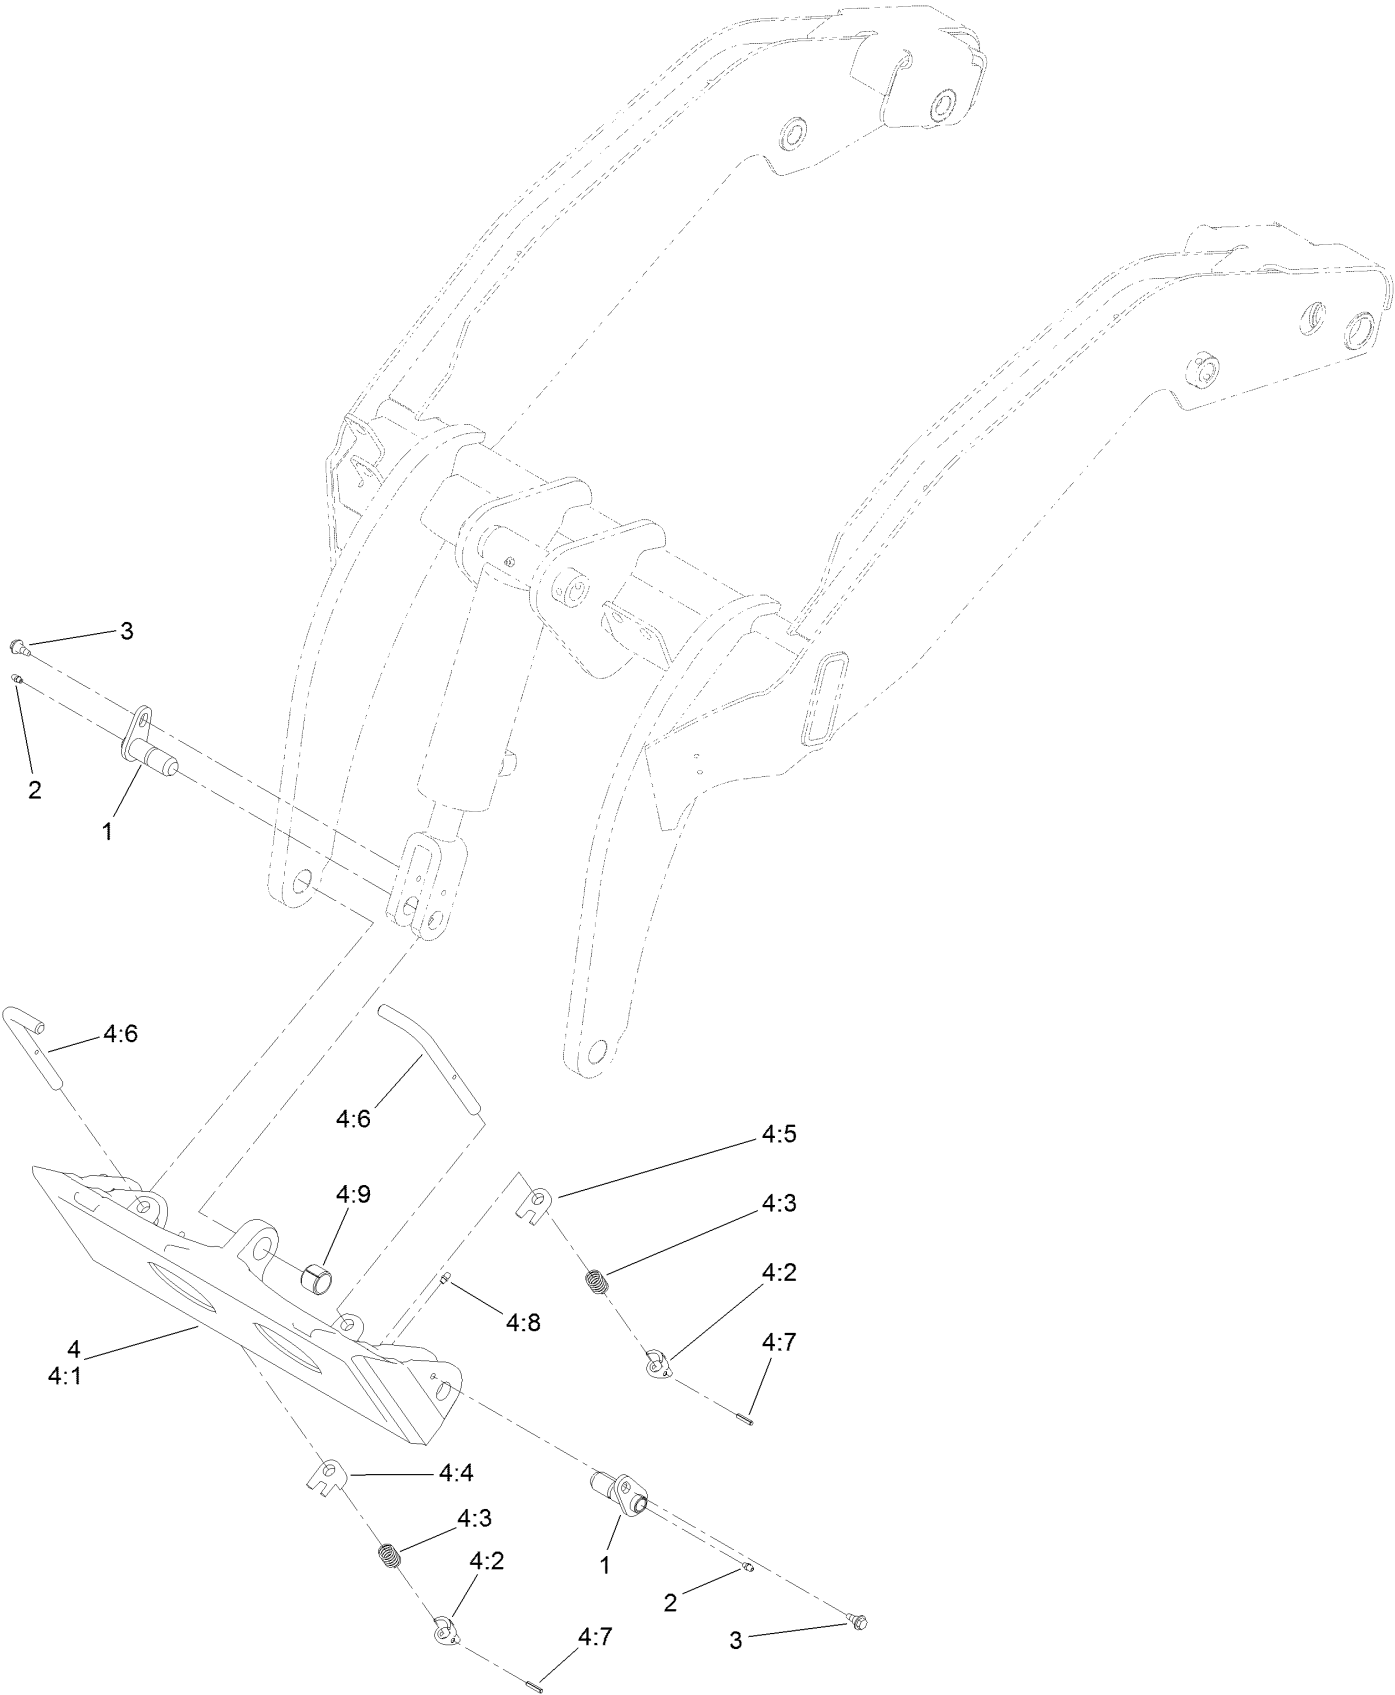


## Quick Attach Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 130-5222           | 3           | Pin-Pivot          |
| 2           | 302-5              | 3           | Fitting-Grease     |
| 3           | 99-5105            | 3           | Screw-Shoulder     |
| 4           | 132-8418           | 1           | Quick Attach ASM   |
| 4:1         | 130-7708-03        | 1           | Mount-Qtach        |
| 4:2         | 105-0246           | 2           | Cam                |
| 4:3         | 98-4694            | 2           | Spring-Compression |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 4:4         | 104-5909           | 1           | Stop-RH            |
| 4:5         | 104-5903           | 1           | Stop-LH            |
| 4:6         | 132-8419           | 2           | Pin-Locking        |
| 4:7         | 3285-1             | 2           | Pin-Grooved        |
| 4:8         | 302-5              | 2           | Fitting-Grease     |
| 4:9         | 98-4871            | 1           | Bushing-Tension    |

 
# Front Cover and Side Panel Assembly

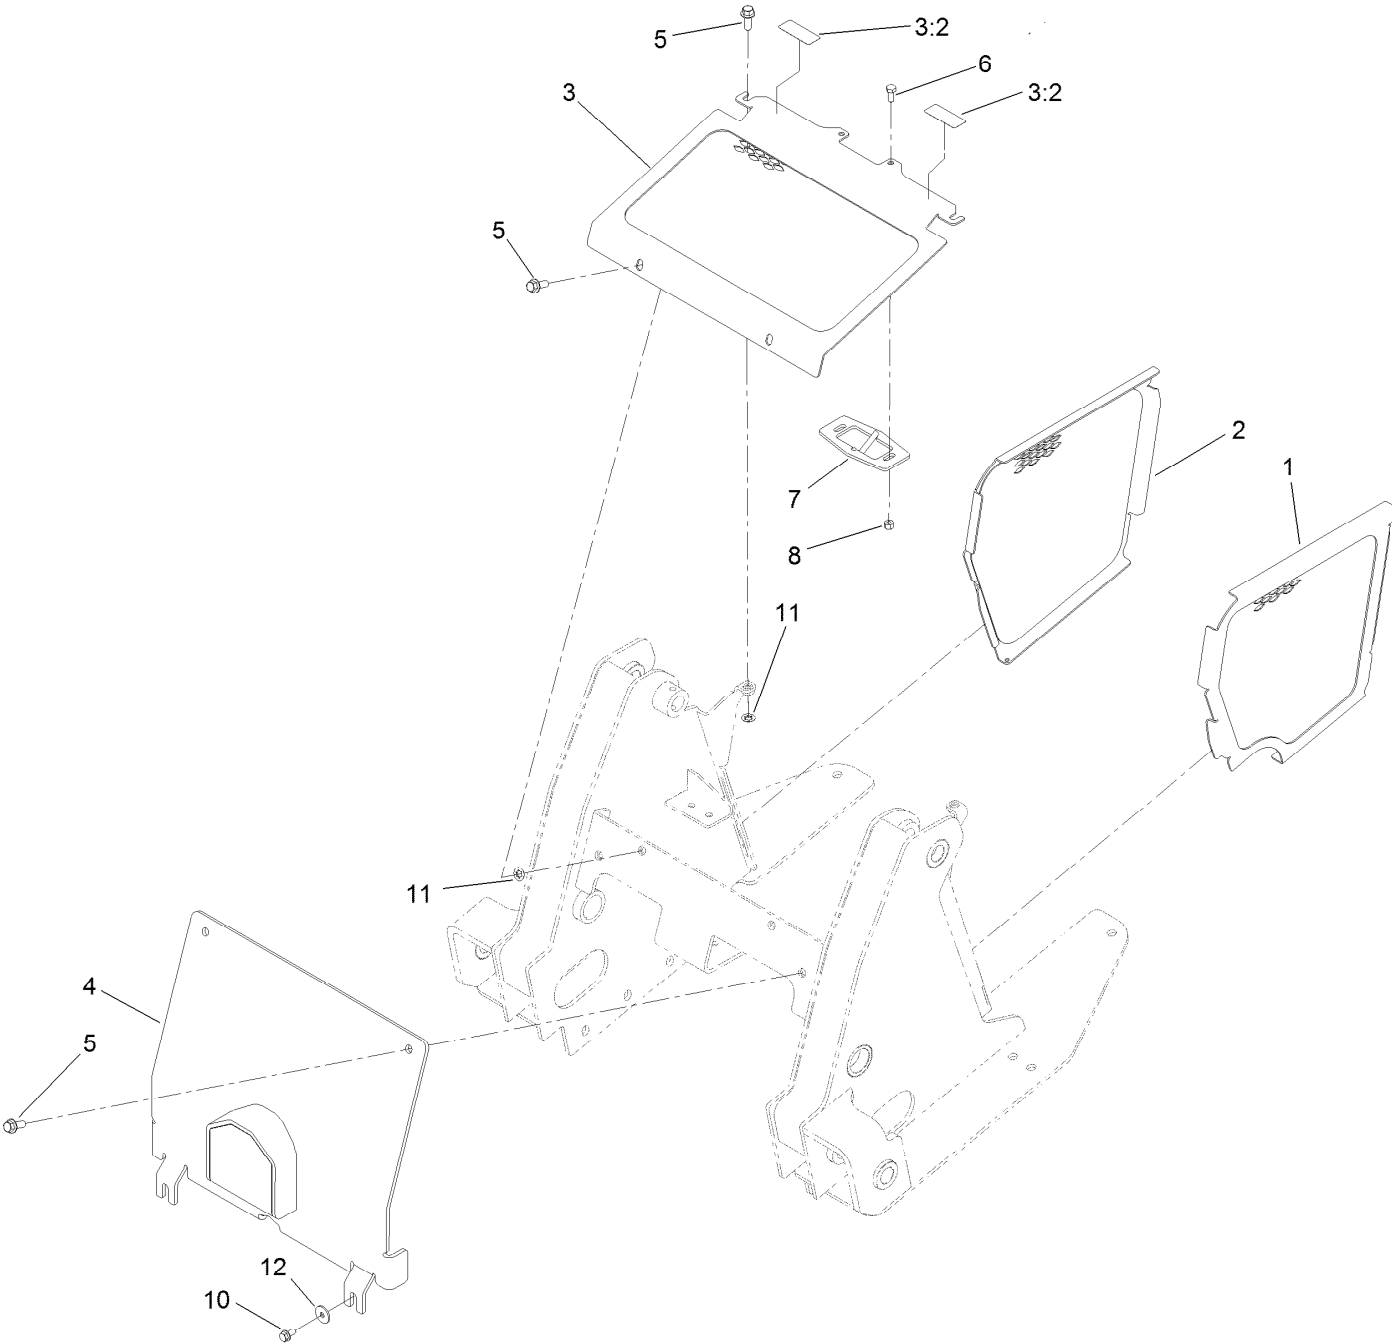

## Front Cover and Side Panel Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 132-1734-03        | 1           | Panel-Side, LH     | 6           | 322-3              | 2           | Screw-HH           |
| 2           | 132-1733-03        | 1           | Panel-Side, RH     | 7           | 130-5239-03        | 1           | Hood Latch/Rod ASM |
| 3           | 136-5752           | 1           | Front Cover ASM    | 8           | 3296-29            | 2           | Nut-Lock, NI       |
| 3:2         | 115-2047           | 2           | Decal-Surface, Hot | 10          | 3234-14            | 2           | Screw-HHF          |
| 4           | 133-0230-03        | 1           | Cover-Front        | 11          | 107-3154           | 4           | Nut-Push           |
| 5           | 3234-42            | 6           | Screw-HHF          | 12          | 115-7109           | 2           | Washer-Flat        |

 
# Hood Assembly

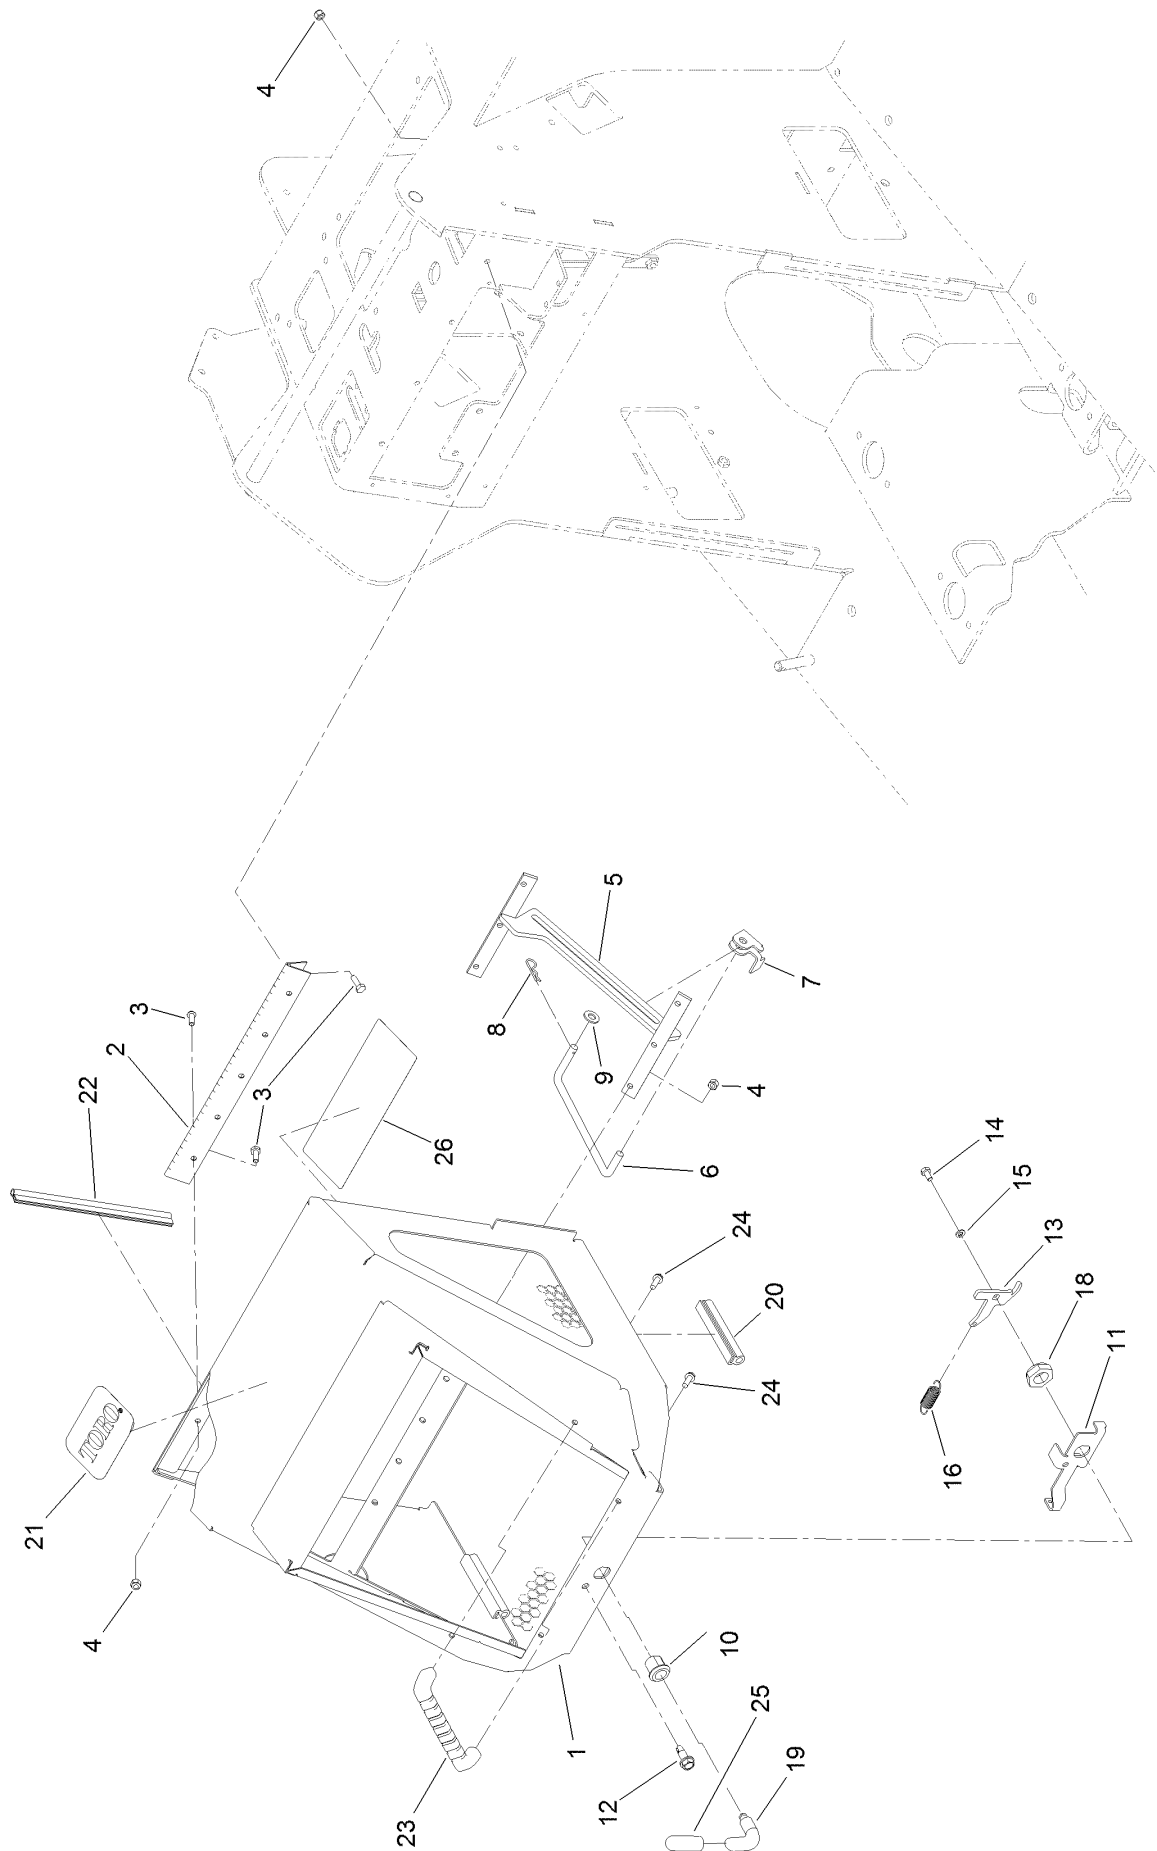

## Hood Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 130-5298-03        | 1           | Engine Hood ASM        | 19          | 108-5639           | 1           | Handle-Latch           |
| 2           | 100-1284           | 1           | Hinge-Hood             | 20          | 130-5248           | 2           | Pad-Hood               |
| 3           | 321-4              | 12          | Screw-HH               | 21          | 117-0871           | 1           | Decal                  |
| 4           | 3296-42            | 12          | Nut-Lock, NI           | 22          | 130-5345           | 1           | Trim-Seal, Bulb        |
| 5           | 130-5228-03        | 1           | Bracket-Prop, Hood     | 23          | 65-5100            | 2           | Handle-Door            |
| 6           | 108-6357           | 1           | Rod-Support, Hood      | 24          | 46-8091            | 4           | Screw-HWH              |
| 7           | 115-0714           | 1           | Bracket-Latch, Locking | 25          | 133-0206           | 1           | Grip-Lever, Hood       |
| 8           | 3290-250           | 1           | Pin-Cotter             | 26          | 131-0597           | 1           | Decal-Service          |
| 9           | 3256-24            | 1           | Washer-Plain           | 26          | 132-8636           | 1           | Decal-Service, French  |
| 10          | 106-9335           | 1           | Housing-Latch          | 26          | 132-8637           | 1           | Decal-Service, German  |
| 11          | 130-5232-03        | 1           | Bracket-Latch          | 26          | 132-8638           | 1           | Decal-Service, Spanish |
| 12          | 105-6245           | 1           | Screw-Tapping          | 26          | 132-8639           | 1           | Decal-Service, Italian |
| 13          | 130-5233           | 1           | Cam-Hooked             | 26          | 132-8640           | 1           | Decal-Service, Dutch   |
| 14          | 321-2              | 1           | Screw-HH               | 26          | 132-8641           | 1           | Decal-Service, Polish  |
| 15          | 3253-3             | 1           | Washer-Lock            | 26          | 132-8642           | 1           | Decal-Service, Russian |
| 16          | 104-0869           | 1           | Spring                 | 26          | 132-8643           | 1           | Decal-Service, Slovak  |
| 18          | 3296-60            | 1           | Nut-Lock, NI           |             |                    |             |                        |
 
# Manual Tube Assembly

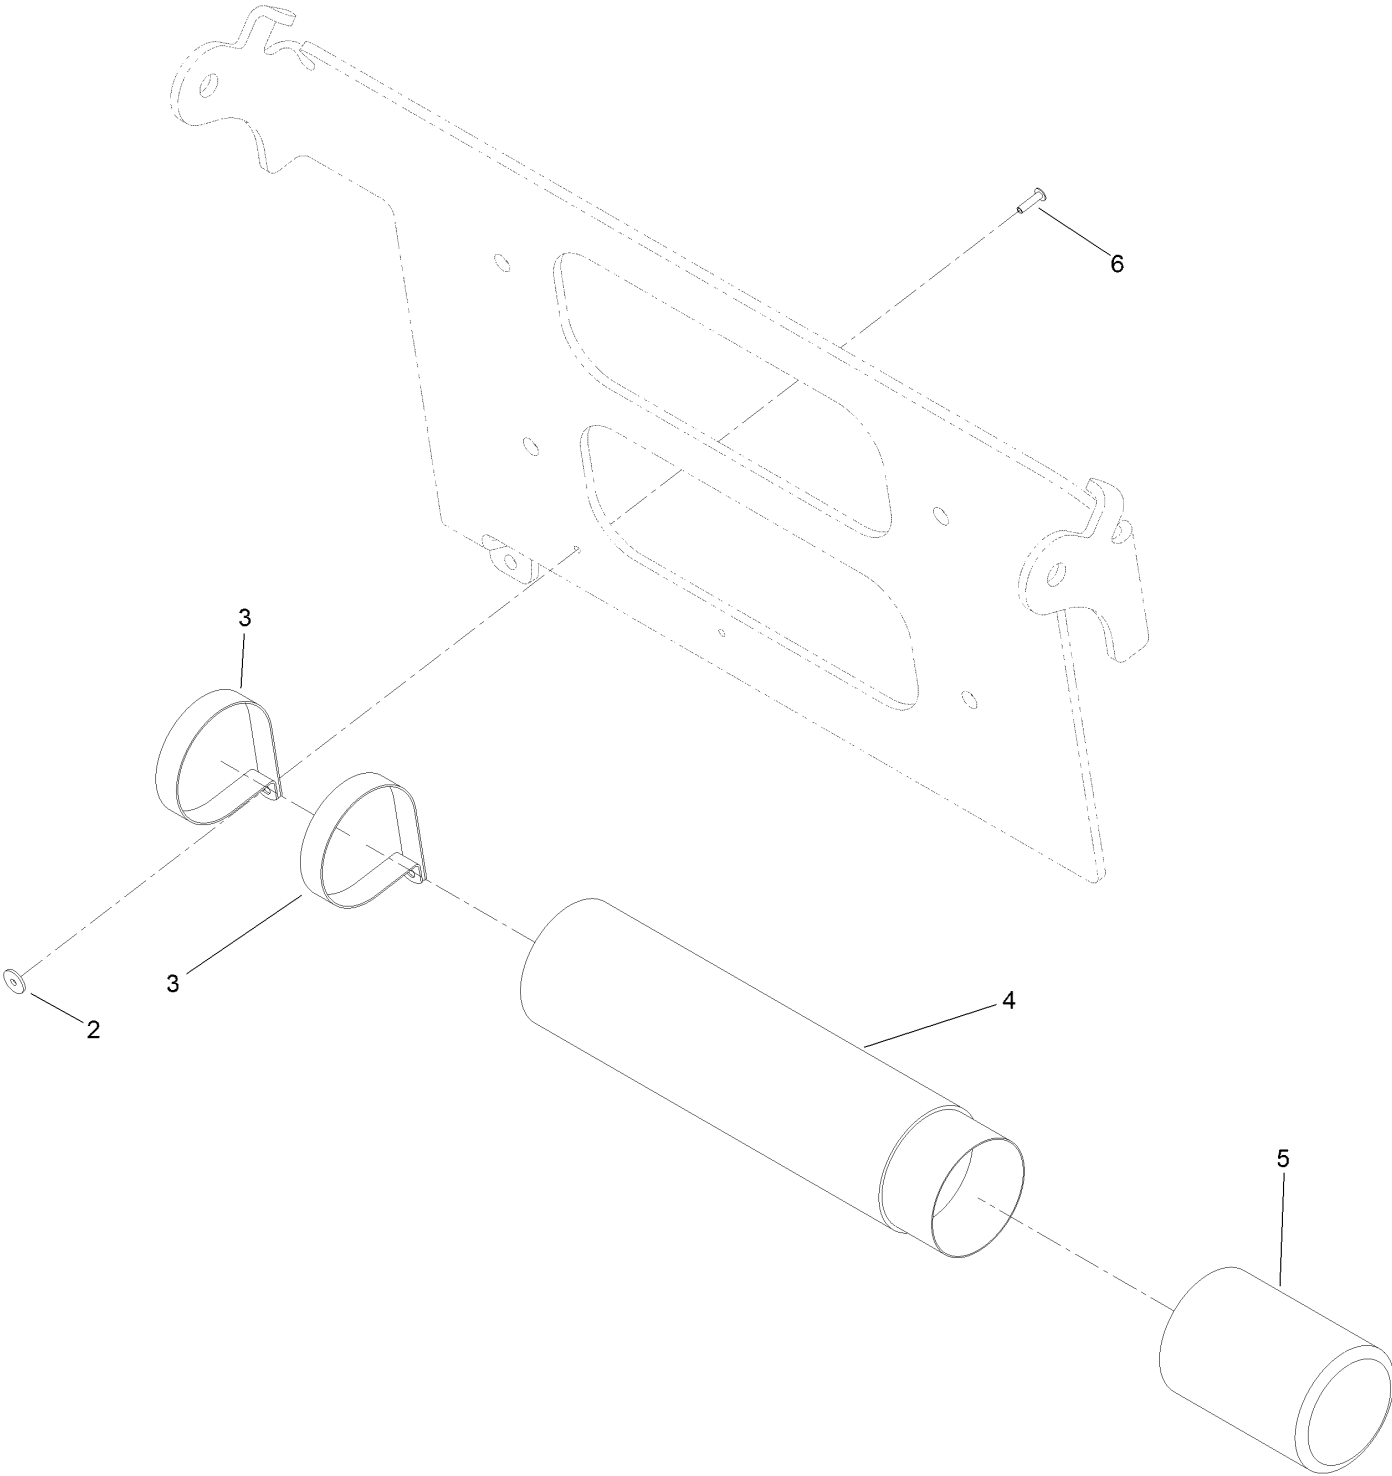


## Manual Tube Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 3269-10            | 2           | Washer-Back        |
| 3           | 2412-120           | 2           | Clamp-R            |
| 4           | 104-7050           | 1           | Tube-Manual        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 104-7048           | 1           | Cap-Housing        |
| 6           | 3269-17            | 2           | Rivet-Pop          |
 
# Platform and Cushion Assembly

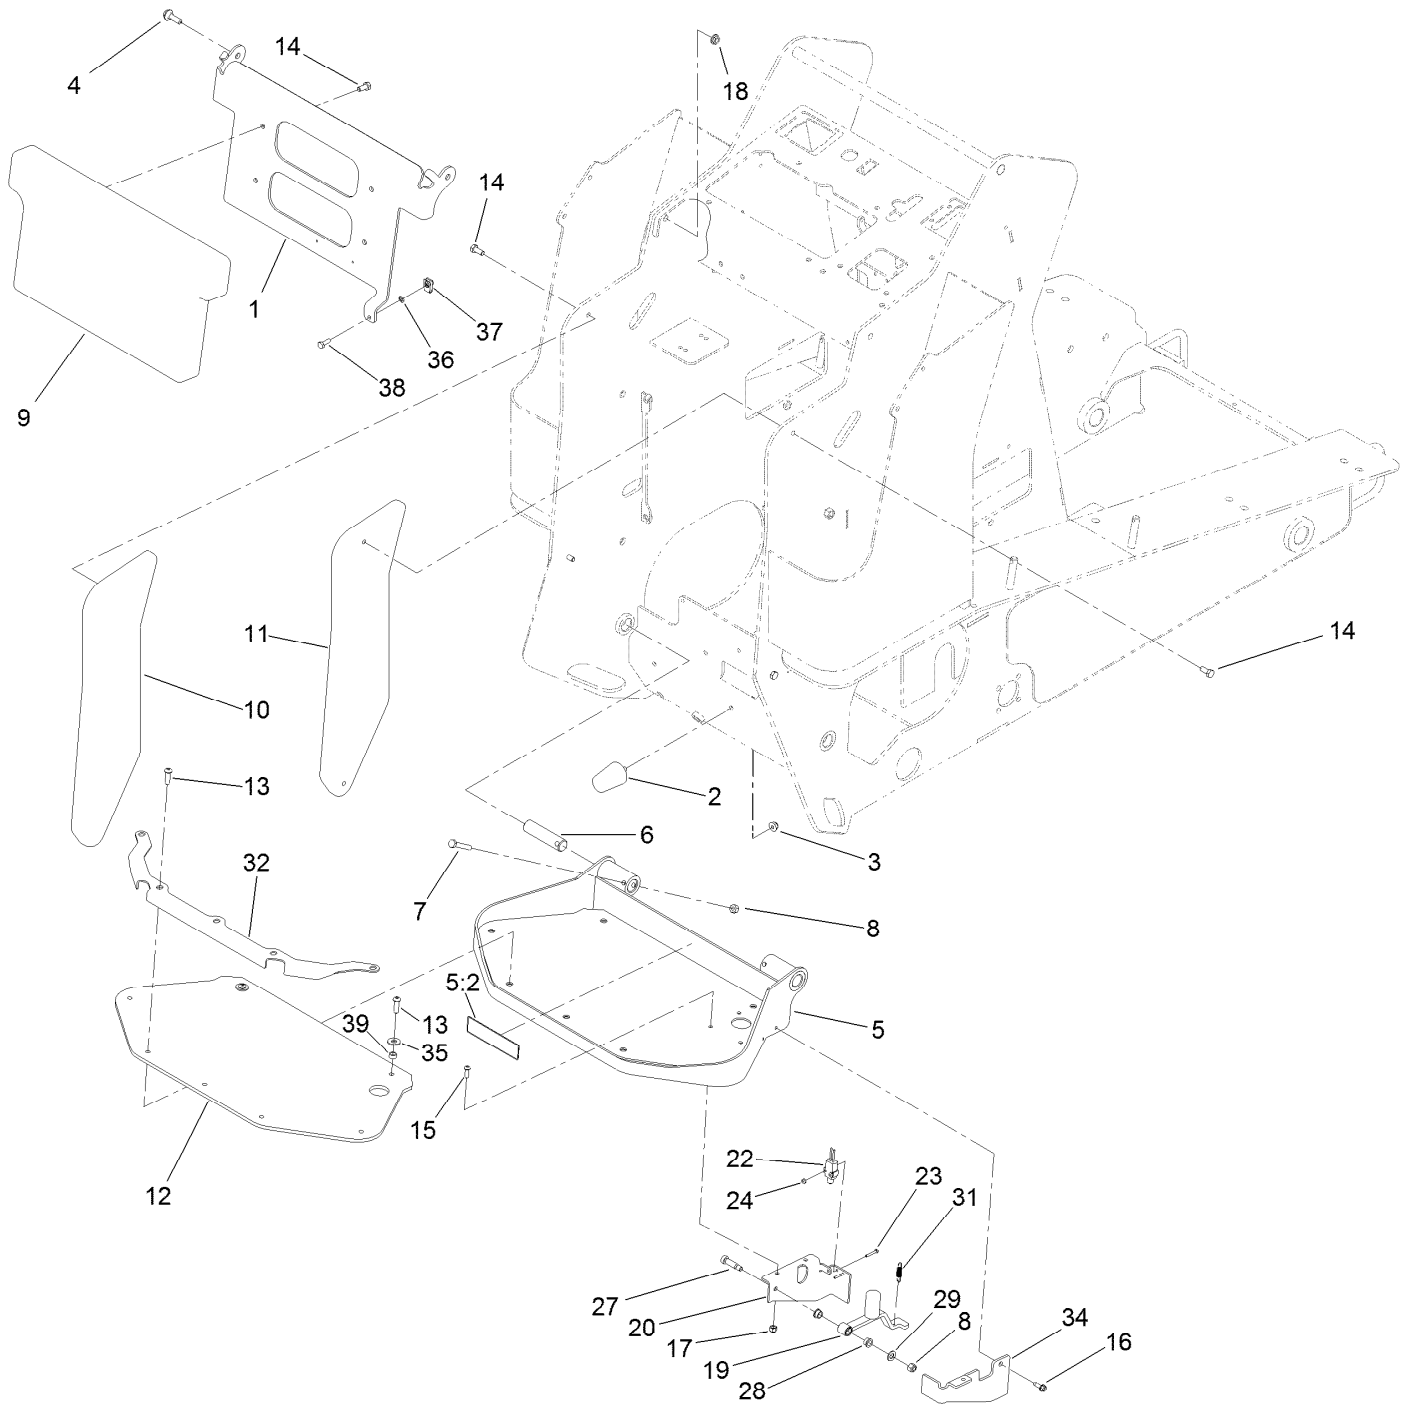


## Platform and Cushion Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 132-6026-03        | 1           | Hinge-Pad          |
| 2           | 110-5070           | 3           | Bumper             |
| 3           | 104-8300           | 3           | Nut-HF, NI         |
| 4           | 108-3744           | 2           | Screw-Shoulder     |
| 5           | 131-9301           | 1           | Platform           |
| 6           | 125-3749           | 2           | Pin-Cylinder       |
| 7           | 322-10             | 2           | Screw-HH           |
| 8           | 3296-29            | 10          | Nut-Lock, NI       |
| 9           | 130-1042           | 1           | Cushion-Pad        |
| 10          | 130-1043           | 1           | Cushion-Pad        |
| 11          | 130-1044           | 1           | Cushion-Pad        |
| 12          | 130-1054           | 1           | Pad-Foot           |
| 13          | 109-4872           | 7           | Screw-HSH          |
| 14          | 322-3              | 8           | Screw-HH           |
| 15          | 3274-69            | 3           | Screw-HSBH         |
| 16          | 32104-95           | 1           | Screw-HWH          |
| 17          | 3296-42            | 3           | Nut-Lock, NI       |


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-------------------------|
| 18          | 32128-20           | 2           | Nut-HF                  |
| 19          | 130-5293           | 1           | Lever-Switch, Auxiliary |
| 20          | 130-5310-03        | 1           | Bracket-Switch, LH      |
| 22          | 95-8900            | 1           | Switch                  |
| 23          | 32105-9            | 2           | Screw-HH                |
| 24          | 3296-9             | 2           | Nut-Hex                 |
| 27          | 114-8629           | 1           | Bolt-Shldr              |
| 28          | 1-603735           | 2           | Bushing-Flanged         |
| 29          | 3256-45            | 1           | Washer-Flat             |
| 31          | 59-3660            | 1           | Spring                  |
| 32          | 130-5313-03        | 1           | Plate-Clamp             |
| 34          | 130-5311-03        | 1           | Bracket-Switch, RH      |
| 35          | 3256-3             | 2           | Washer-Flat             |
| 36          | 1-803037           | 1           | Nut-Retaining           |
| 37          | 107069             | 1           | Clip                    |
| 38          | 321-5              | 1           | Screw-HH                |
| 39          | 85-9120            | 2           | Spacer-Pivot, Tilt      |
 
# Electrical Assembly

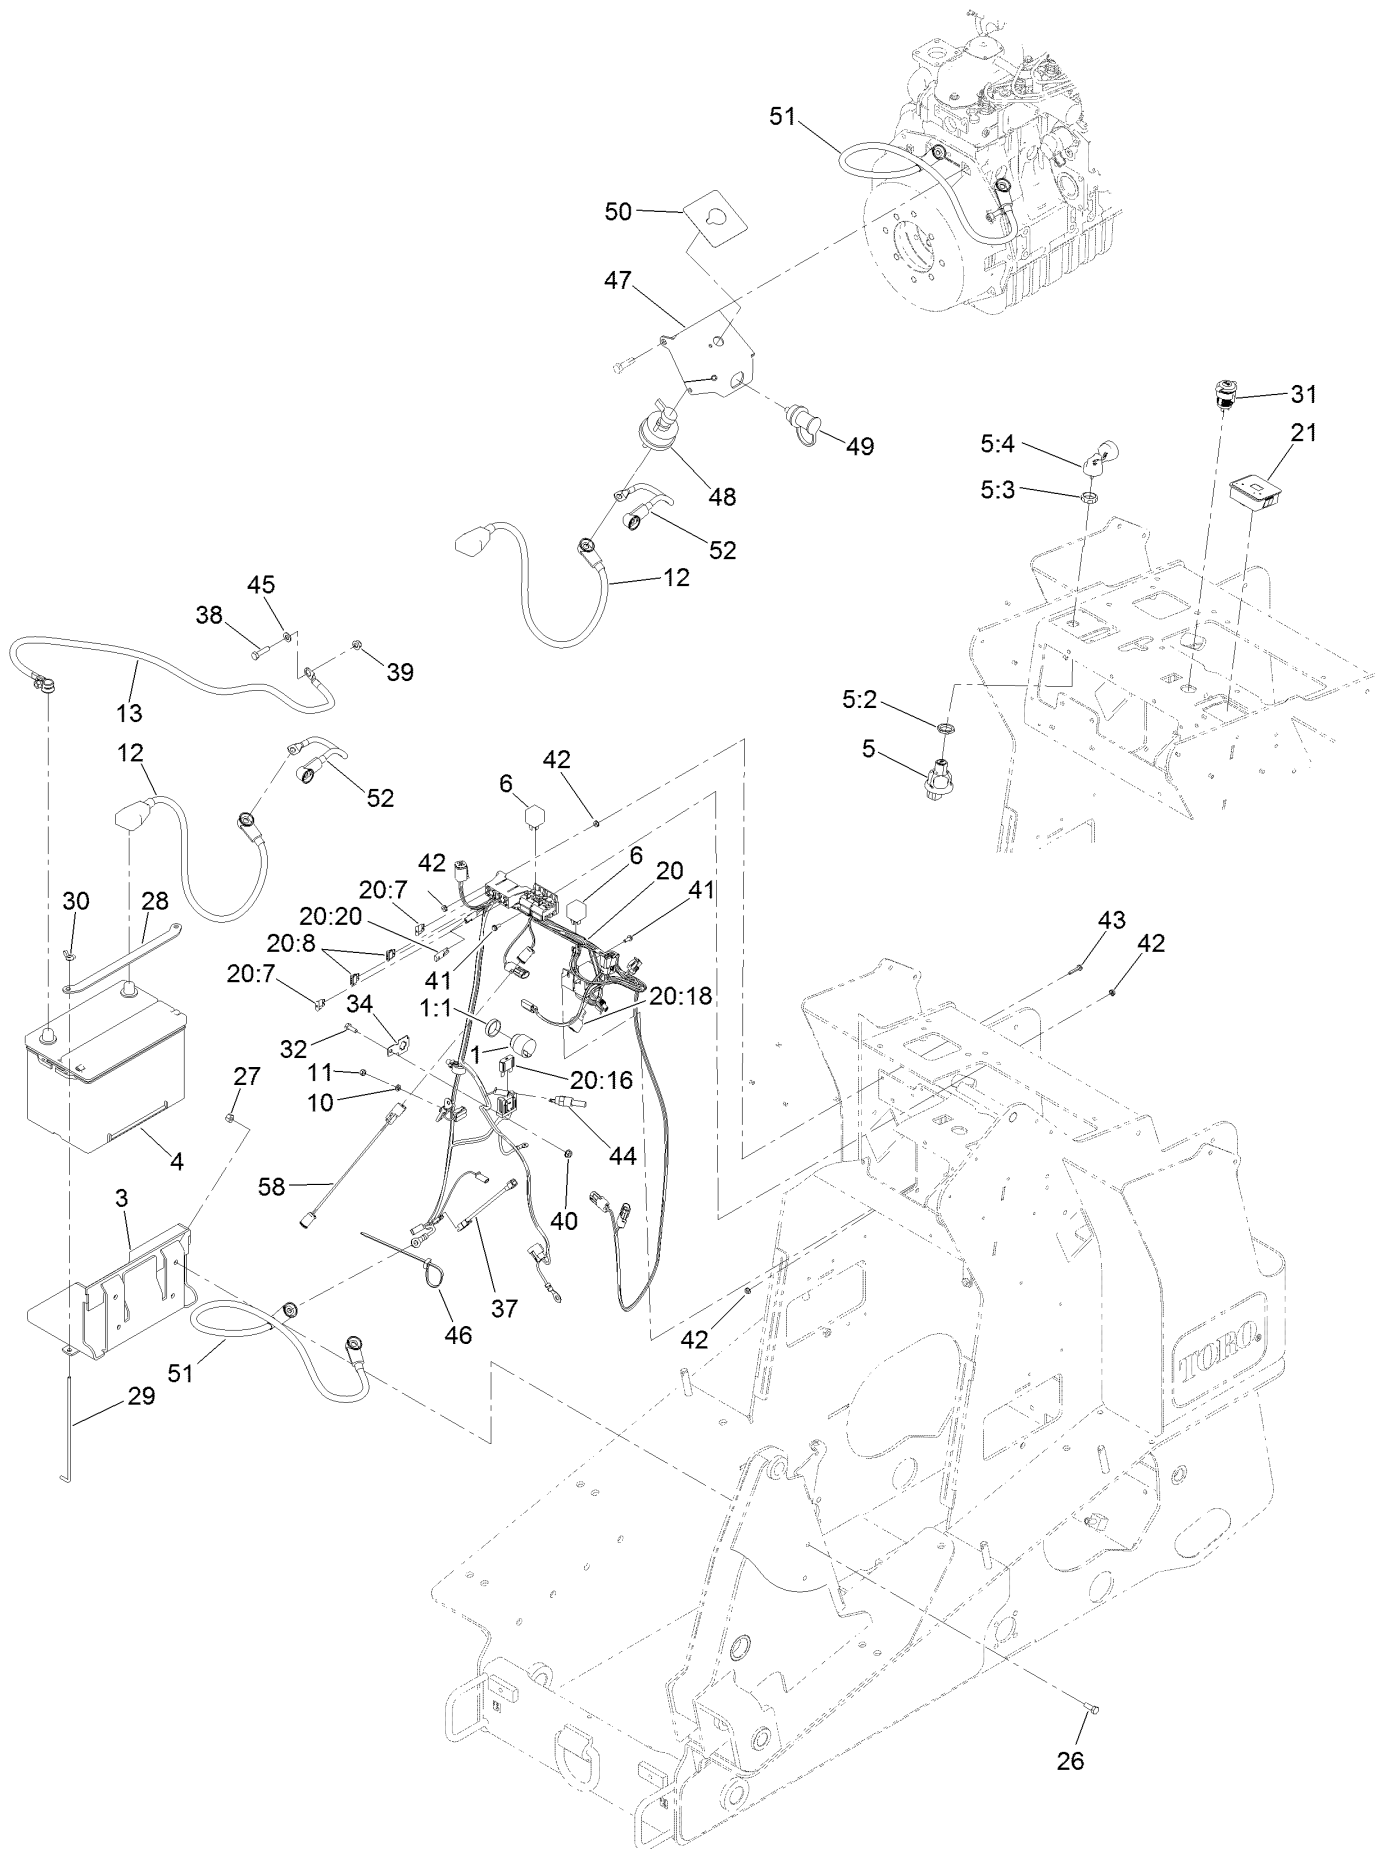


## Electrical Assembly (continued)
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|----------------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 80-9330            | 1           | Audio Alarm ASM                  | 28          | 136-5755-03        | 1           | Strap-Hold Down, Battery  |
| 1:1         | 104-5107           | 1           | Nut-Plastic, Knurled             | 29          | 136-5756           | 2           | Rod-Hold Down, Battery    |
| 3           | 130-5236-03        | 1           | Tray-Battery                     | 30          | 1-803038           | 2           | Wingnut                   |
| 4           | 106-5190           | 1           | Battery, 660 CCA W/O Electrolyte | 31          | 109-9376           | 1           | Receptacle-12V            |
| 5           | 121-5159           | 1           | Switch-Ignition                  | 32          | 321-4              | 1           | Screw-HH                  |
| 5:2         | 121-5160           | 1           | Nut-Hex                          | 34          | 114-5502           | 1           | Clip-Fuse                 |
| 5:3         | 121-5161           | 1           | Nut-Face                         | 37          | 112-2463           | 1           | Harness-Link, Fusible     |
| 5:4         | 121-5162           | 1           | Set-Key, Ignition                | 38          | 322-6              | 1           | Screw-HH                  |
| 6           | 1-643275           | 4           | Relay                            | 39          | 104-8300           | 1           | Nut-HF, NI                |
| 10          | 43-5930            | 1           | Washer-Lock, Spring              | 40          | 32128-33           | 1           | Nut-HF                    |
| 11          | 43-2830            | 1           | Nut-Hex                          | 41          | 32105-13           | 4           | Screw-HWH                 |
| 12          | 131-8031           | 1           | Cable-Battery, Positive          | 42          | 32149-7            | 8           | Nut-Keps                  |
| 13          | 131-8033           | 1           | Cable-Battery, Negative          | 43          | 117-1701           | 2           | Screw-HWHTF               |
| 20          | 132-8645           | 1           | Harness-Wire                     | 44          | 98-3825            | 1           | Switch-Temp               |
| 20:7        | 218-578            | 2           | Fuse-Blade, 10 Amp               | 45          | 3256-23            | 1           | Washer-Plain              |
| 20:8        | 109355             | 2           | Fuse-Blade, 15 Amp               | 46          | 3290-378           | 1           | Tie-Cable                 |
| 20:16       | 94-8002            | 1           | Fuse-Blade, 50 Amp               | 47          | 131-8009-03        | 1           | Mount-Remote Terminal     |
| 20:18       | 103-3895           | 1           | Diode                            | 48          | AUR52278           | 1           | Switch-Disconnect, Master |
| 20:20       | 116-0053           | 1           | Cap-Plug                         | 49          | 132-1364           | 1           | Stud-Jumper, Positive     |
| 21          | 130-7635           | 1           | Module-Hour Meter                | 50          | 131-8026           | 1           | Decal-Battery Disconnect  |
| 26          | 322-4              | 4           | Screw-HH                         | 51          | 131-8032           | 1           | Cable-Battery, Positive   |
| 27          | 3296-29            | 4           | Nut-Lock, NI                     | 52          | 122-0103           | 1           | Cable-Battery, Positive   |
|             |                    |             |                                  | 58          | 136-5813           | 1           | Harness-Wire              |

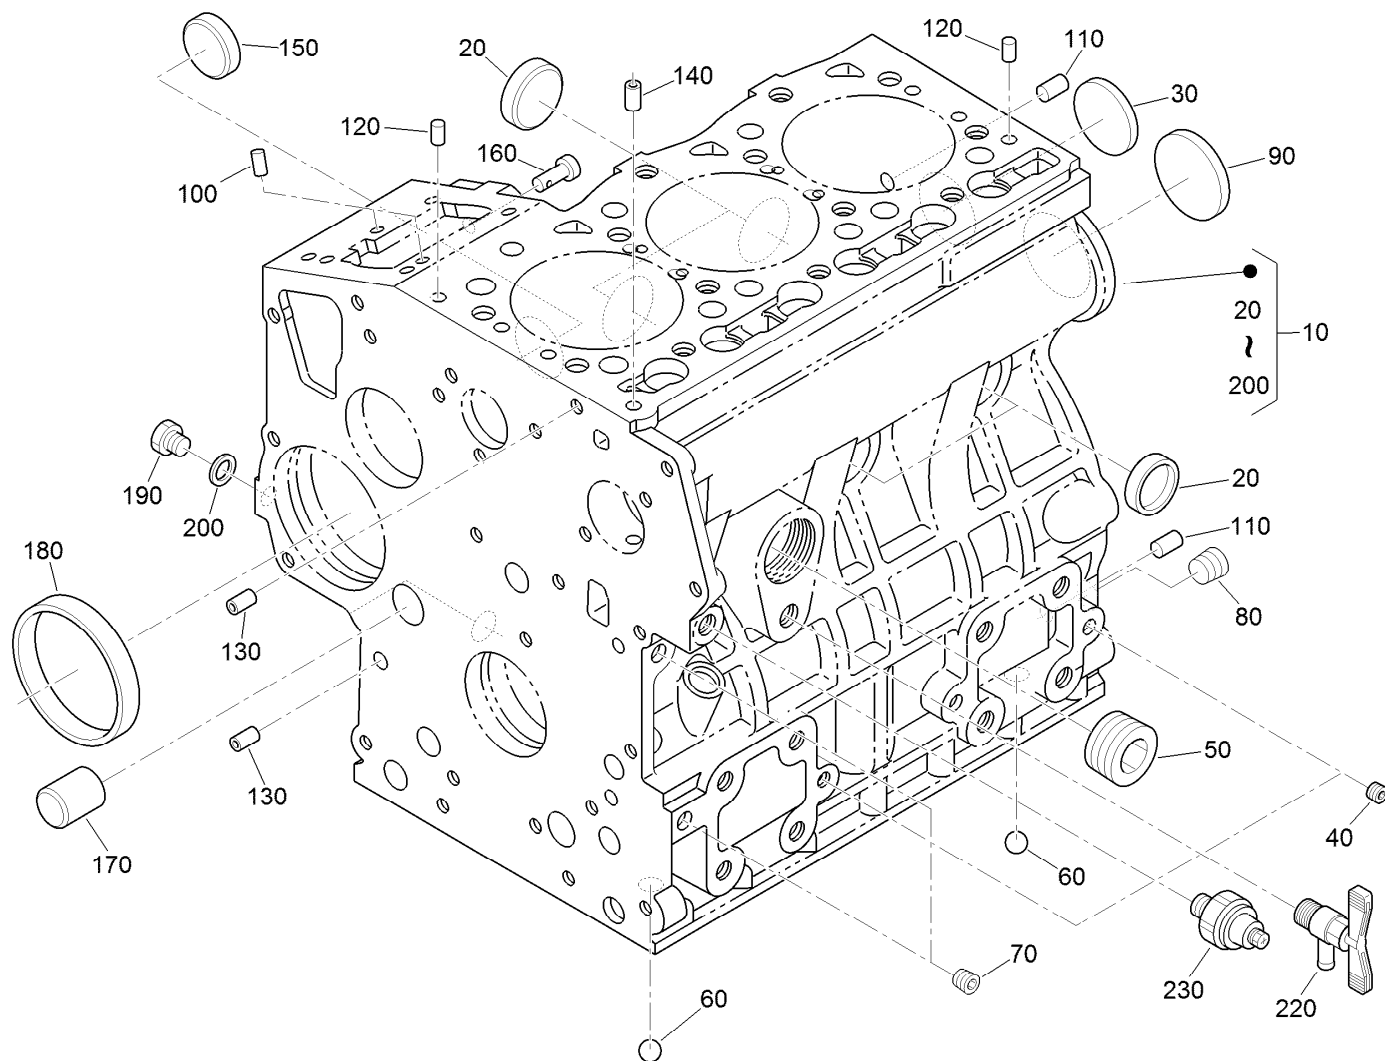


## Crankcase Assembly
 
| Ref. | Part Number | Qty. | Description    | Ref. | Part Number | Qty. | Description            |
|------|-------------|------|----------------|------|-------------|------|------------------------|
| 10   | 117-8800    | 1    | Crankcase ASM  | 120  | 98-9376     | 2    | Pin-Straight           |
| 20   | 98-9398     | 4    | Cap-Sealing    | 130  | 98-9387     | 2    | Pin-Pipe               |
| 30   | 98-7539     | 1    | Cap-Sealing    | 140  | 98-9539     | 1    | Pin-Pipe               |
| 40   | 98-9687     | 6    | Plug           | 150  | 98-9599     | 1    | Plug                   |
| 50   | 105-3779    | 1    | Plug           | 160  | 98-9630     | 1    | Pin-Spring, Start      |
| 60   | 98-9380     | 2    | Ball           | 170  | 98-9675     | 1    | Plug                   |
| 70   | 98-7487     | 2    | Plug           | 180  | 98-9656     | 1    | Bushing-Governor, Gear |
| 80   | 98-7488     | 1    | Plug           | 190  | 120-2559    | 1    | Plug                   |
| 90   | 98-9668     | 1    | Plug-Expansion | 200  | 98-7428     | 1    | Gasket                 |
| 100  | 98-9375     | 2    | Pin-Straight   | 220  | 120-3121    | 1    | Draincock ASM          |
| 110  | 98-9377     | 2    | Pin-Straight   | 230  | 98-9416     | 1    | Switch-Oil             |

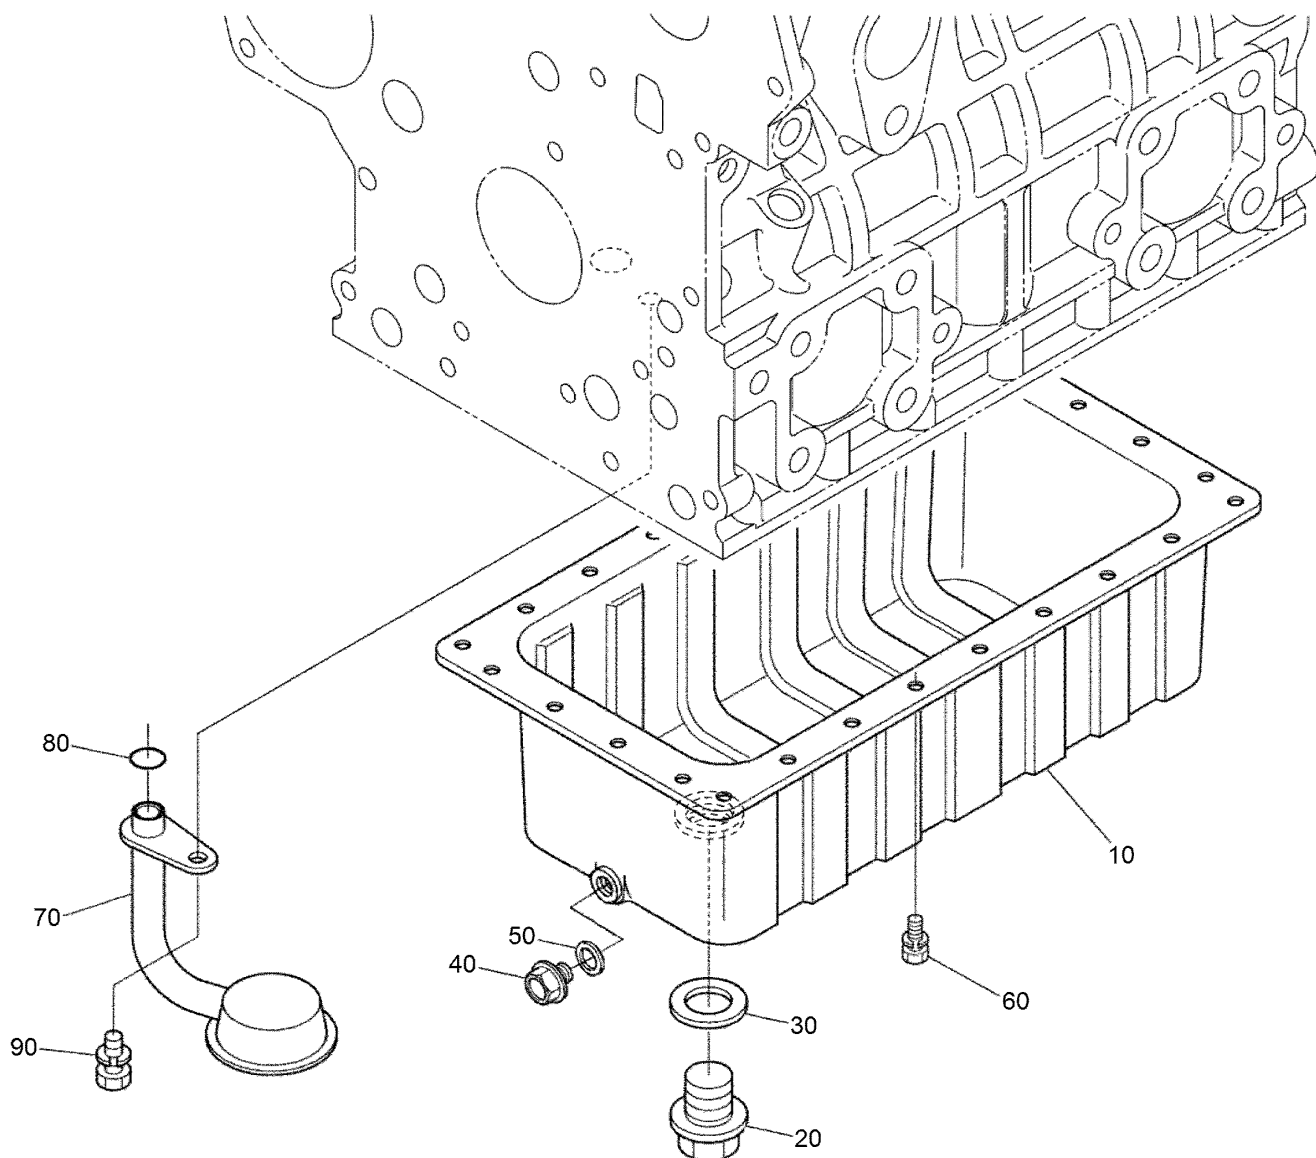


## Oil Pan Assembly
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 132-4940    | 1    | Oil Pan ASM        |
| 20   | 98-9686     | 1    | Plug-Drain         |
| 30   | 110-9715    | 1    | Gasket-Pan, Oil    |
| 40   | 114-8151    | 1    | Plug-Drain         |
| 50   | 98-7524     | 1    | Gasket             |
| 60   | 98-9351     | 26   | Bolt               |
| 70   | 132-4939    | 1    | Screen-Filter, Oil |
| 80   | 105-3776    | 1    | O-Ring             |
| 90   | 98-7526     | 1    | Bolt               |

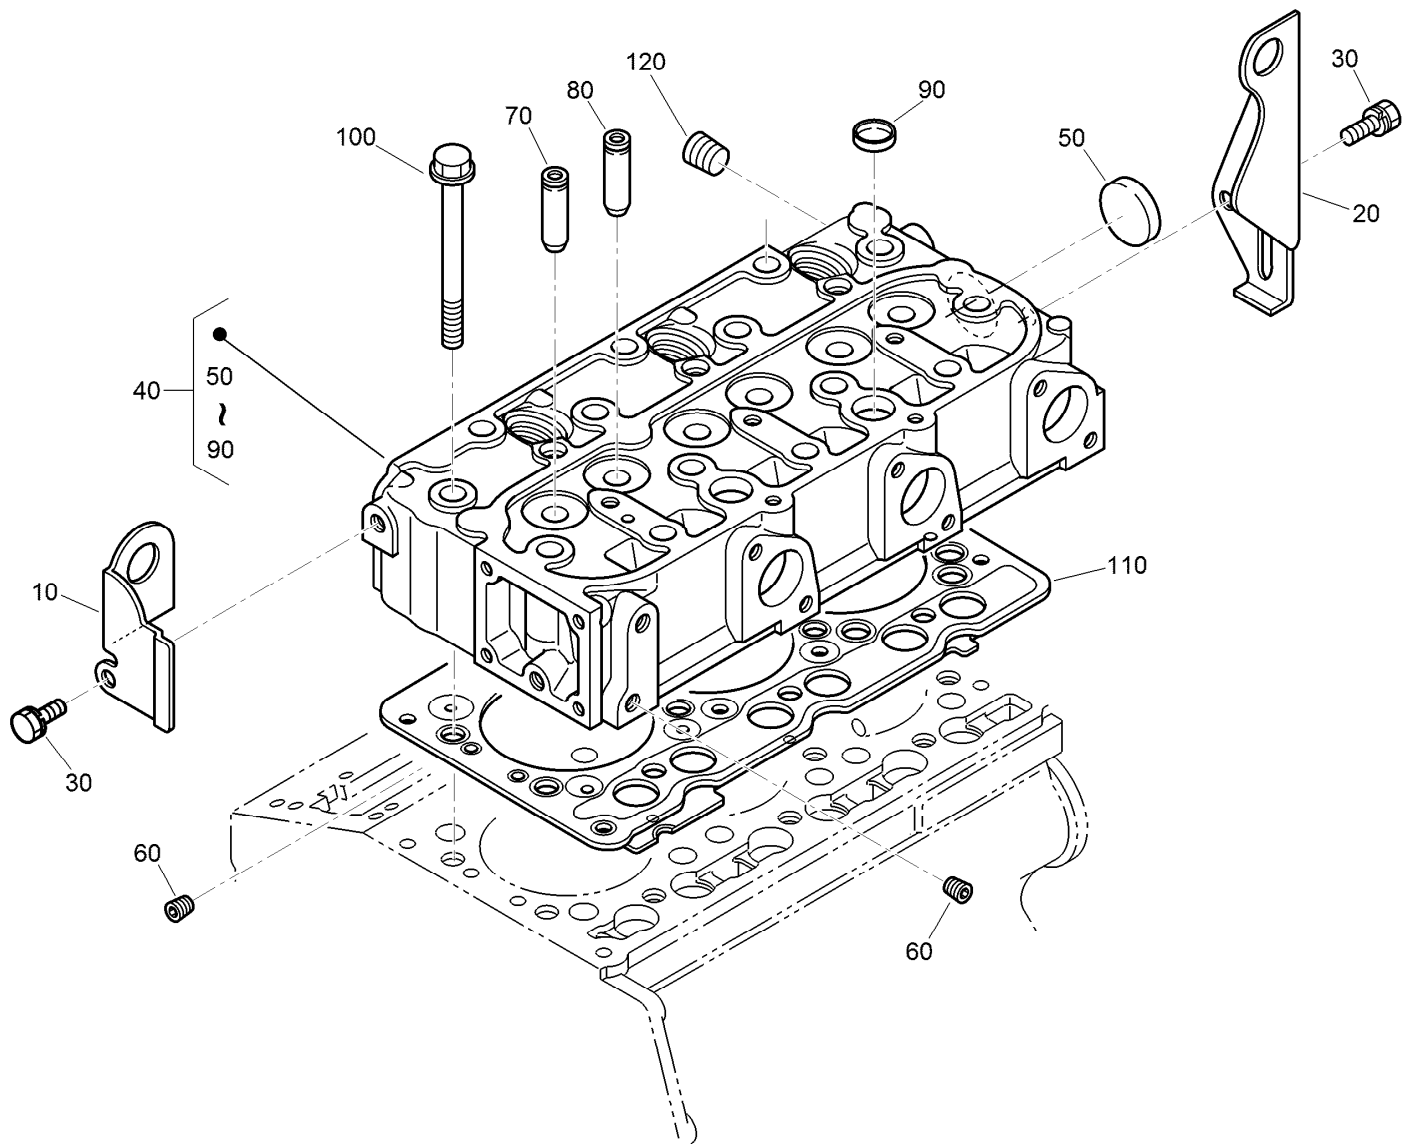

## Cylinder Head Assembly

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 10   | 130-1231    | 1    | Hook-Engine           |
| 20   | 98-9478     | 1    | Hook-Engine           |
| 30   | AU126123A1  | 2    | Bolt                  |
| 40   | 117-8802    | 1    | Cylinder Head ASM     |
| 50   | 105-3705    | 1    | Cap-Sealing           |
| 60   | 98-9687     | 2    | Plug                  |
| 70   | 107-9066    | 3    | Guide-Valve, Inlet    |
| 80   | 107-9067    | 3    | Guide-Valve, Exhaust  |
| 90   | 98-9389     | 2    | Cap-Sealing           |
| 100  | 98-9479     | 14   | Bolt-Head, Cylinder   |
| 110  | 108-6573    | 1    | Gasket-Head, Cylinder |
| 120  | 98-9444     | 1    | Plug                  |

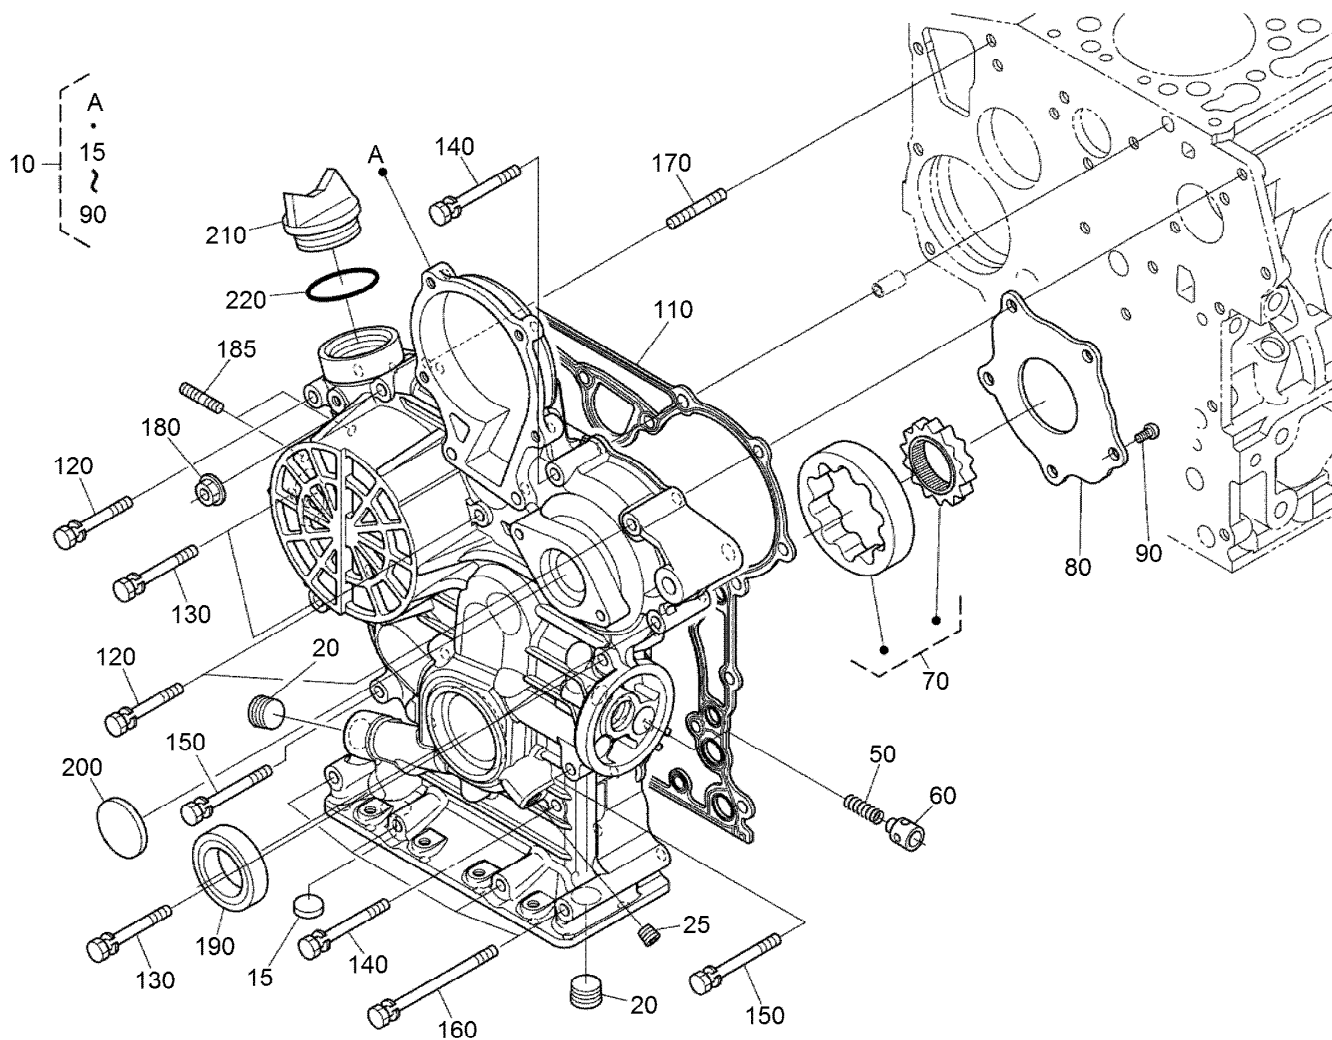

## Gear Case Assembly


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 10   | 117-8803    | 1    | Gear Case ASM     |
| 15   | 117-8804    | 1    | Cap-Sealing       |
| 20   | 127-0425    | 2    | Plug              |
| 25   | 98-7487     | 1    | Plug              |
| 50   | 130-1511    | 1    | Spring            |
| 60   | 130-1510    | 1    | Valve-Relief      |
| 70   | 130-1508    | 1    | Rotor ASM         |
| 80   | 130-1509    | 1    | Cover-Pump, Oil   |
| 90   | 130-1164    | 5    | Screw-Binding     |
| 110  | 117-8835    | 1    | Gasket-Case, Gear |
| 120  | 100-1765    | 3    | Bolt              |
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 130  | 125-9063    | 4    | Bolt-Sems        |
| 140  | 98-9356     | 2    | Bolt             |
| 150  | 100-1766    | 2    | Bolt             |
| 160  | 107-9090    | 4    | Bolt             |
| 170  | 105-3709    | 1    | Stud             |
| 180  | 100-2203    | 1    | Nut-Flange       |
| 185  | 105-3710    | 2    | Stud             |
| 190  | 119-8038    | 1    | Seal-Oil         |
| 200  | 99-3515     | 1    | Plug-Gearcase    |
| 210  | 107-9075    | 1    | Plug-Filler, Oil |
| 220  | 99-3446     | 1    | O-Ring           |

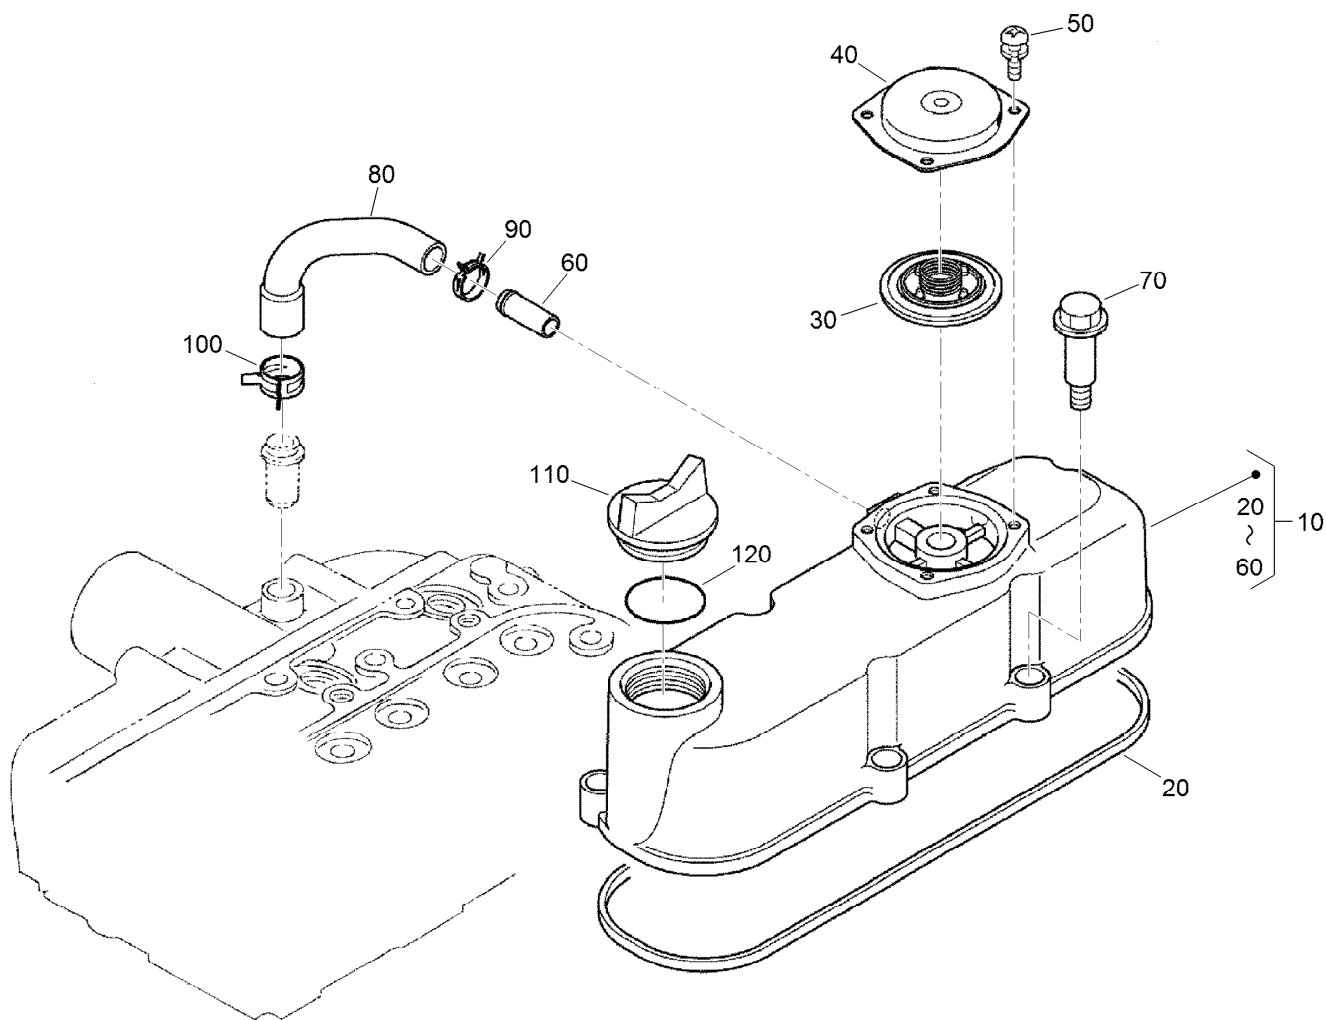


## Cylinder Head Cover Assembly
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 10   | 117-8805    | 1    | Cylinder Head Cover ASM |
| 20   | 117-8806    | 1    | Gasket-Cover, Head      |
| 30   | 110-3715    | 1    | Valve-Breather          |
| 40   | 110-3714    | 1    | Cover-Breather          |
| 50   | 98-9364     | 4    | Screw (With Washer)     |
| 60   | 98-7766     | 1    | Pipe-Return, Water      |
| 70   | 108-7063    | 5    | Bolt                    |
| 80   | 108-2858    | 1    | Tube-Breather           |
| 90   | 108-2859    | 1    | Clamp-Hose              |
| 100  | 108-2860    | 1    | Clamp-Hose              |
| 110  | 107-9075    | 1    | Plug-Filler, Oil        |
| 120  | 99-3446     | 1    | O-Ring                  |

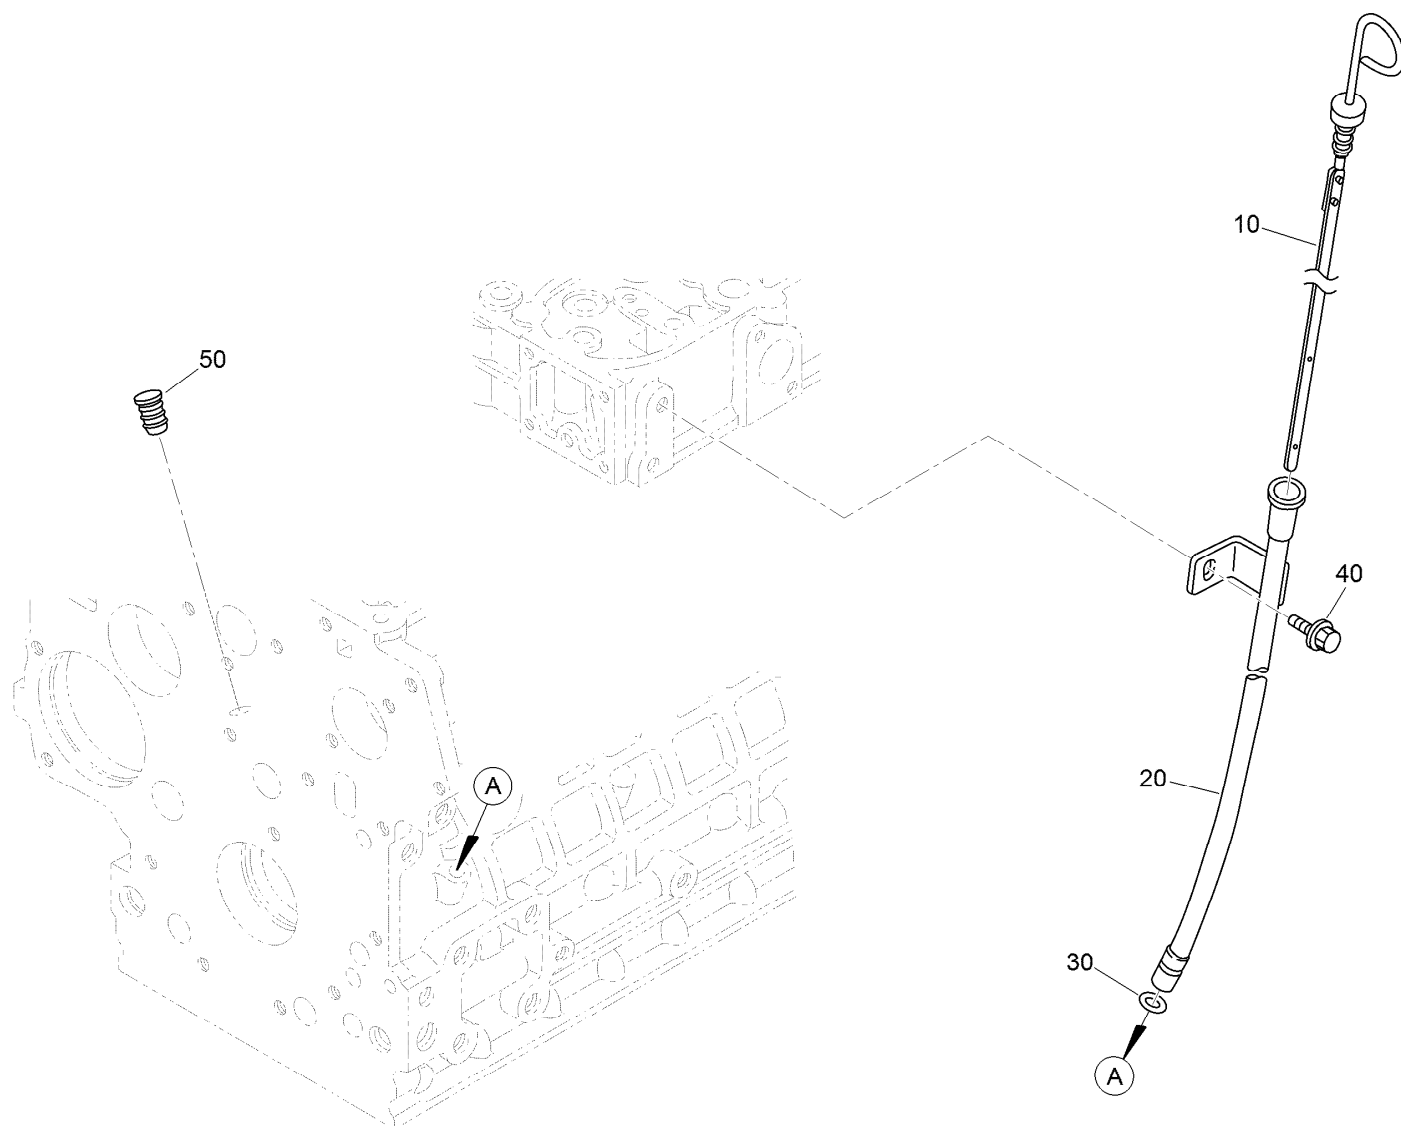

## Dipstick and Guide Assembly

 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 10   | 132-4941    | 1    | Gauge-Oil        |
| 20   | 132-4942    | 1    | Guide-Gauge, Oil |
| 30   | 98-9722     | 1    | O-Ring           |
| 40   | AU126123A1  | 1    | Bolt             |
| 50   | 110-3720    | 1    | Plug-Gauge, Oil  |

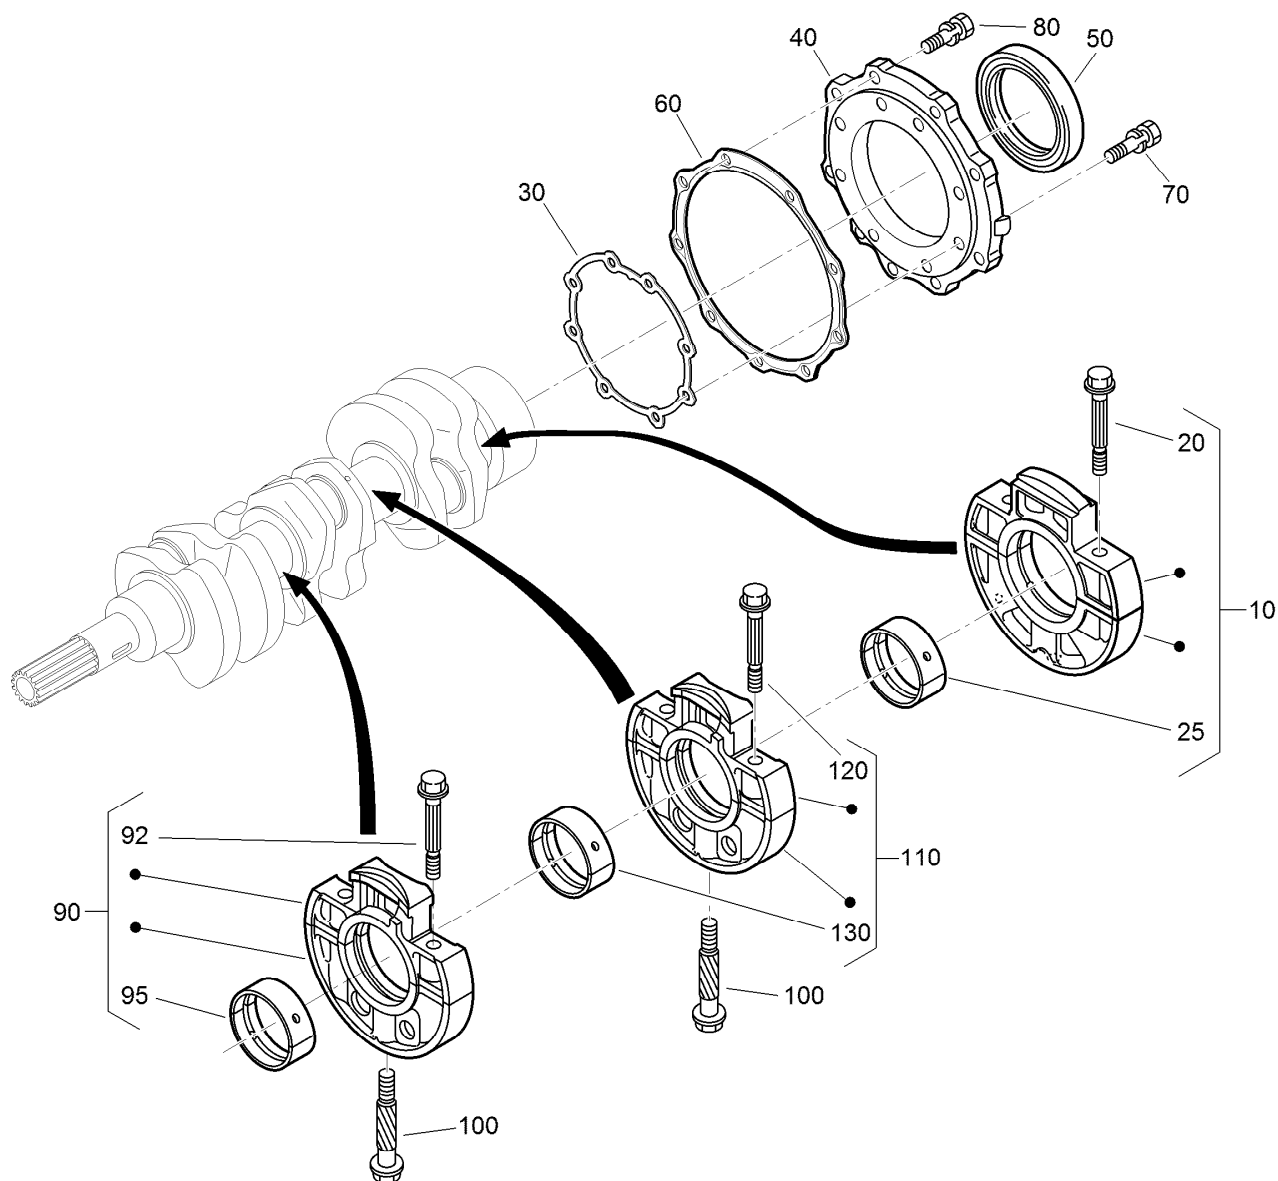

## Main Bearing Case Assembly


| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 10   | 112-7026    | 1    | Wheel Bearing Case ASM    |
| 20   | 98-9484     | 2    | Bolt-Case, Bearing        |
| 25   | 115-4121    | 1    | Metal-Crankshaft (STD)    |
| 25   | 112-7039    | 1    | Metal-Crankshaft (0.2Mm)  |
| 25   | 112-7040    | 1    | Metal-Crankshaft (-0.4Mm) |
| 30   | 131-6554    | 1    | Gasket-Case, Bearing      |
| 40   | 112-7046    | 1    | Cover-Case, Bearing       |
| 50   | 112-0180    | 1    | Seal-Oil                  |
| 60   | 112-7037    | 1    | Gasket-Cover, Case        |
| 70   | 127-0441    | 8    | Bolt                      |
| 80   | 127-0442    | 9    | Bolt                      |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 90   | 117-8809    | 1    | Main Bearing Case ASM |
| 92   | 98-9484     | 2    | Bolt-Case, Bearing    |
| 95   | 117-8810    | 1    | Metal-Crankshaft      |
| 95   | 117-8811    | 1    | Metal-Crankshaft      |
| 95   | 117-8812    | 1    | Metal-Crankshaft      |
| 100  | 98-9485     | 2    | Bolt-Case, Bearing    |
| 110  | 117-8813    | 1    | Main Bearing Case ASM |
| 120  | 98-9484     | 2    | Bolt-Case, Bearing    |
| 130  | 117-8810    | 1    | Metal-Crankshaft      |
| 130  | 117-8811    | 1    | Metal-Crankshaft      |
| 130  | 117-8812    | 1    | Metal-Crankshaft      |

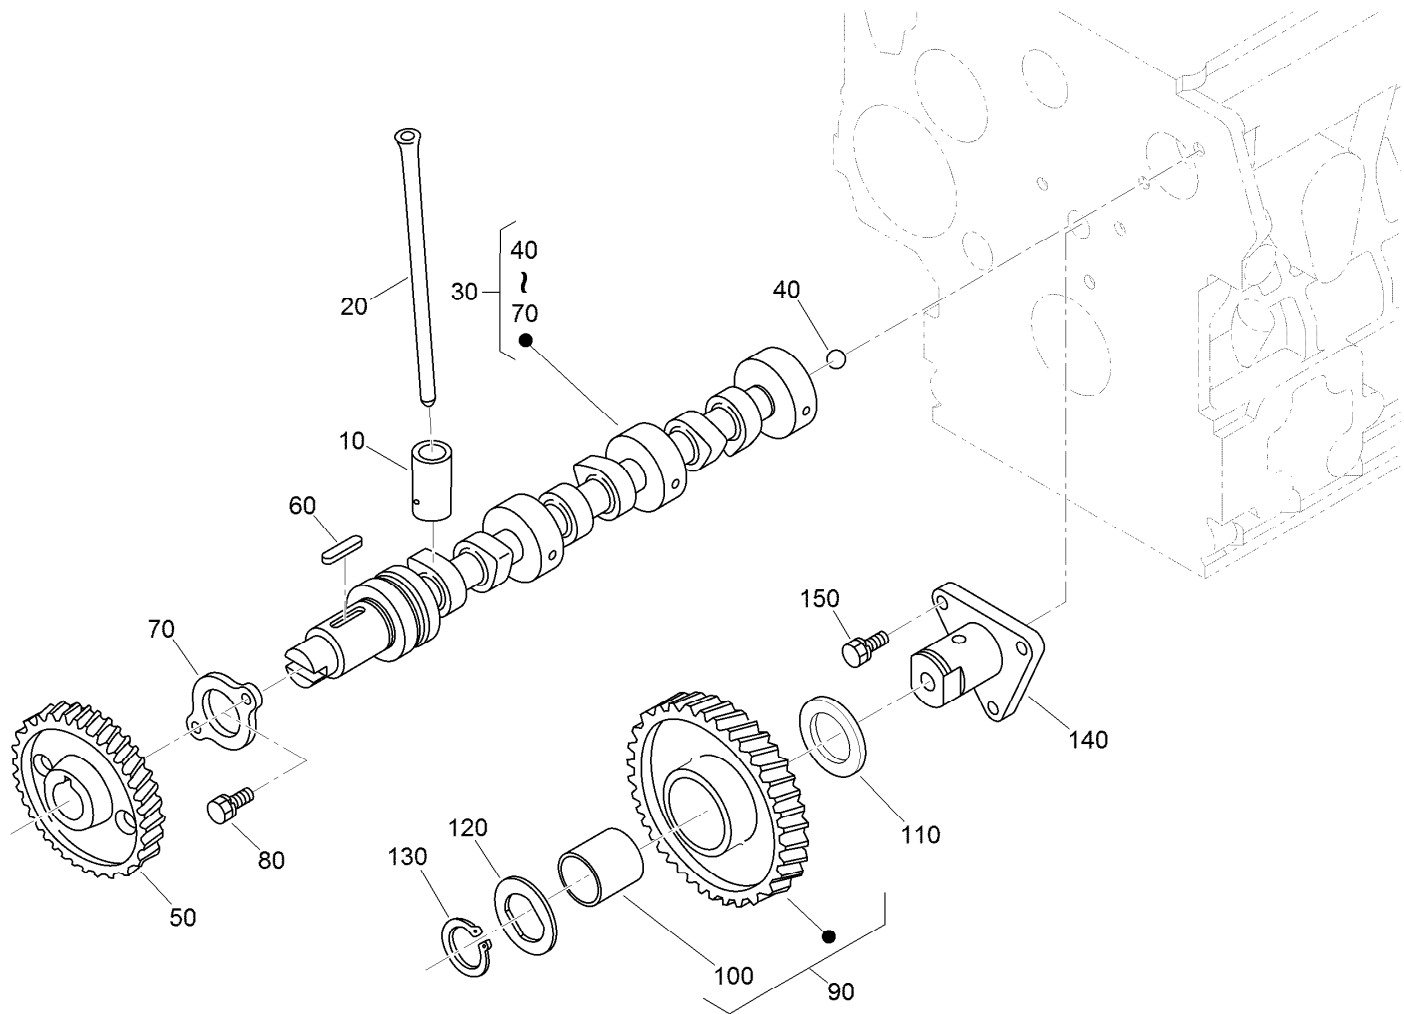

## Camshaft and Idle Gear Shaft Assembly

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 112-0185    | 6    | Tappet             |
| 20   | 117-8814    | 6    | Rod-Push           |
| 30   | 130-1545    | 1    | Camshaft ASM       |
| 40   | 110-3729    | 1    | Ball               |
| 50   | 98-9512     | 1    | Gear-Cam           |
| 60   | 98-9378     | 1    | Key-Feather        |
| 70   | 131-6555    | 1    | Stopper (Camshaft) |
| 80   | 98-7692     | 2    | Bolt               |
| 90   | 117-7584    | 1    | Idler Gear ASM     |
| 100  | 117-7585    | 1    | Bushing-Gear, Idle |
| 110  | 98-9535     | 1    | Collar-Gear, Idle  |
| 120  | 98-9536     | 1    | Collar-Gear, Idle  |
| 130  | 98-9534     | 1    | Circlip-Gear, Idle |
| 140  | 98-9533     | 1    | Shaft-Gear, Idle   |
| 150  | 98-7692     | 3    | Bolt               |

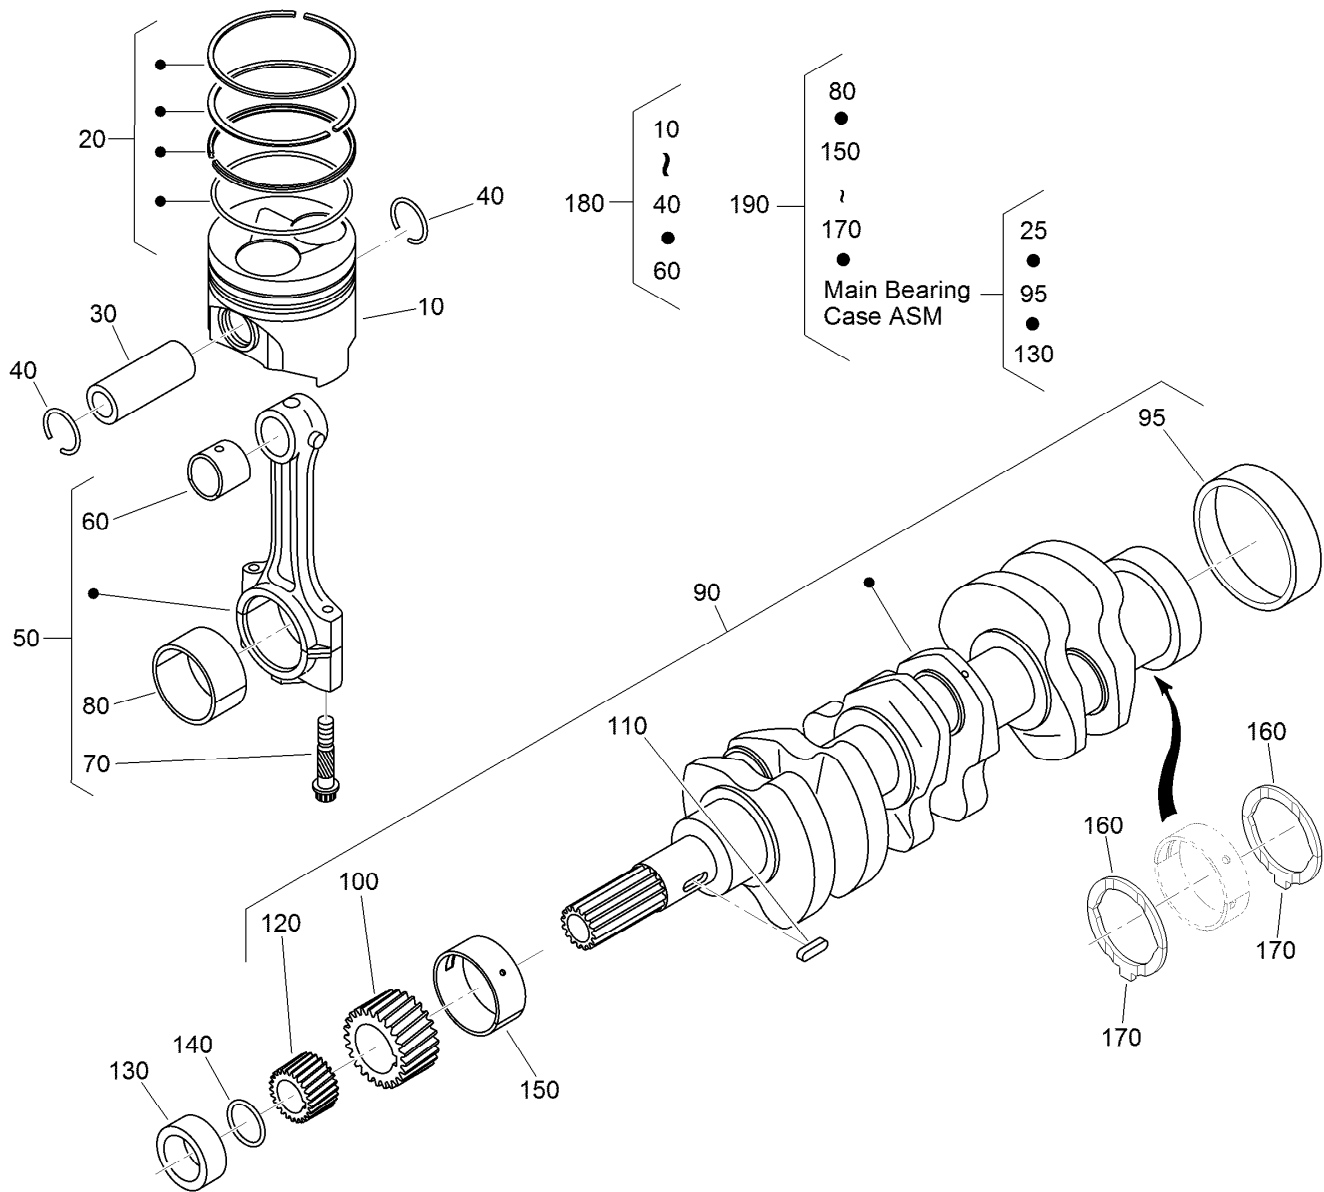

## Piston and Crankshaft Assembly


| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 10   | 130-1546    | 3    | Piston (STD)              |
| 10   | 130-1549    | 3    | Piston (+0.50MM)          |
| 20   | 130-1506    | 3    | Piston Ring ASM (STD)     |
| 20   | 130-1507    | 3    | Piston Ring ASM (+0.50MM) |
| 30   | 98-9513     | 3    | Pin-Piston                |
| 40   | 98-9514     | 6    | Circlip-Pin, Piston       |
| 50   | 117-7586    | 3    | Connecting Rod ASM        |
| 60   | 115-3014    | 3    | Bushing-Pin, Piston       |
| 70   | 98-9517     | 6    | Bolt-Rod, Connecting      |
| 80   | 98-9553     | 3    | Bearing-Rod (STD)         |
| 80   | 98-9519     | 3    | Bearing-Rod (-0.2MM)      |
| 80   | 117-7588    | 3    | Metal-Crankpin (-0.4MM)   |
| 90   | 132-4944    | 1    | Crankshaft ASM            |
| 95   | 98-9522     | 1    | Sleeve-Crankshaft         |
| 100  | 117-7561    | 1    | Gear-Crankshaft           |
| 110  | 98-9666     | 1    | Key                       |
| 120  | 127-0445    | 1    | Gear-Drive, Oil Pump      |
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 130  | 127-0444    | 1    | Collar-Crankshaft    |
| 140  | 105-3783    | 1    | O-Ring               |
| 150  | 117-8818    | 1    | Metal-Crankshaft     |
| 150  | 117-8819    | 1    | Metal-Crankshaft     |
| 150  | 117-8820    | 1    | Metal-Crankshaft     |
| 160  | 98-9413     | 2    | Bearing-Thrust (STD) |
| 160  | 127-0416    | 2    | Metal-Side (+0.2Mm)  |
| 160  | 127-0417    | 2    | Metal-Side (+0.40Mm) |
| 170  | 98-9688     | 2    | Bearing-Thrust (STD) |
| 170  | 127-0437    | 2    | Metal-Side (+0.2MM)  |
| 170  | 127-0438    | 2    | Metal-Side (+0.40MM) |
| 180  | 130-1547    | 3    | Piston Kit           |
| 180  | 130-1548    | 3    | Piston Kit           |
| 190  | 117-8823    | 1    | Engine Metal Kit     |
| 190  | 117-8824    | 1    | Engine Metal Kit     |
| 190  | 117-8825    | 1    | Engine Metal Kit     |

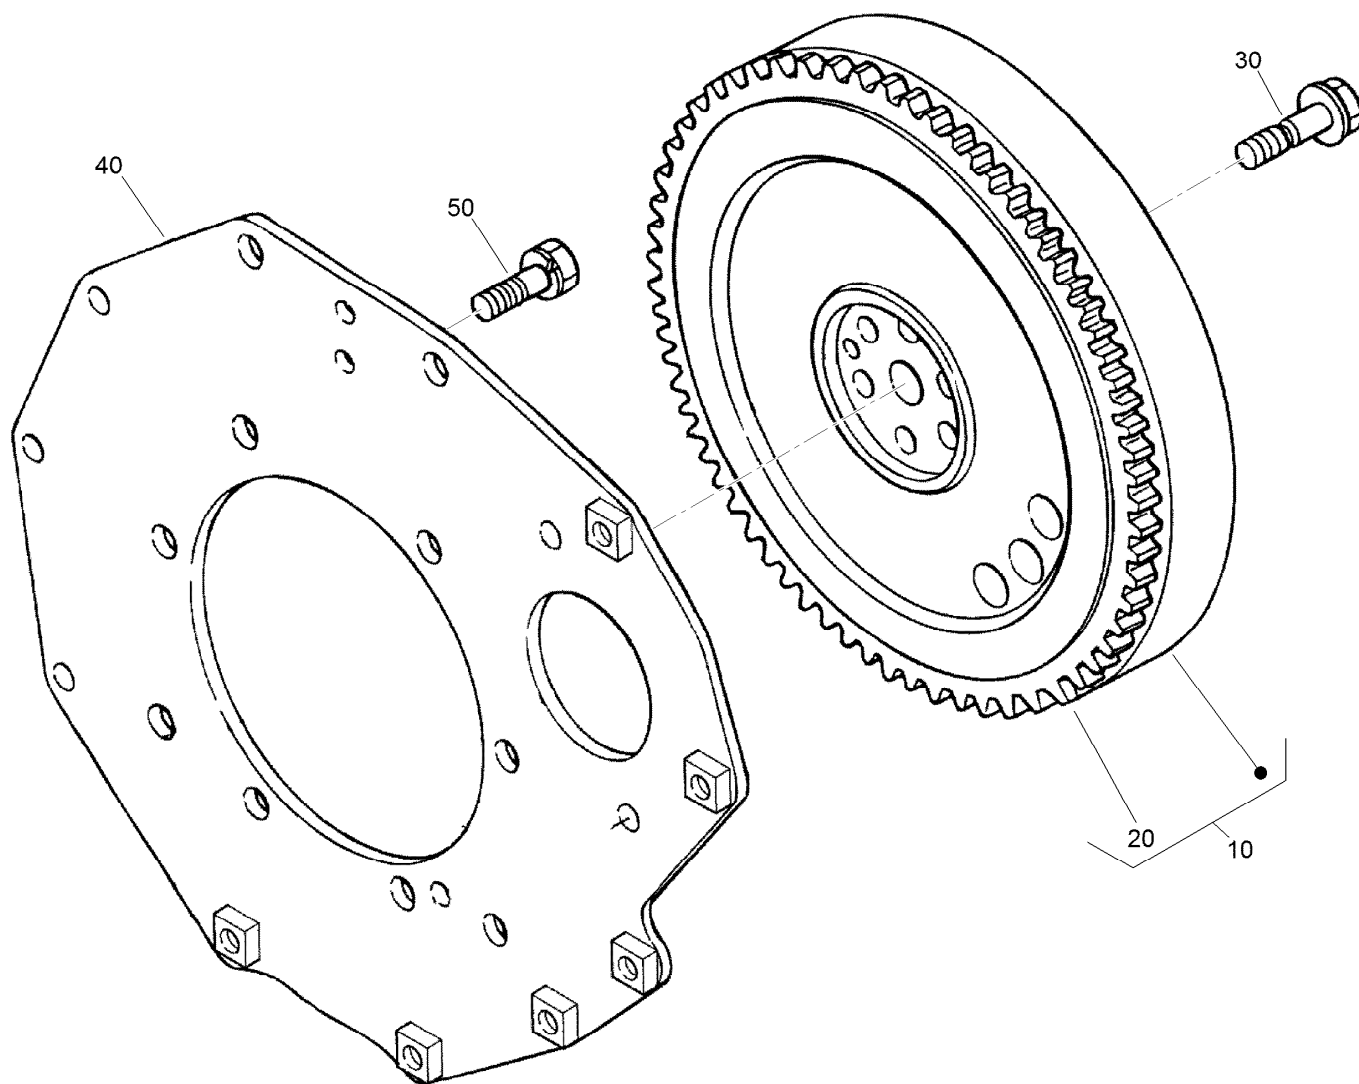

## Flywheel Assembly

 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 10   | 117-8826    | 1    | Flywheel ASM    |
| 20   | 105-3722    | 1    | Gear-Ring       |
| 30   | 98-9537     | 6    | Bolt-Flywheel   |
| 40   | 98-9486     | 1    | Plate-End, Rear |
| 50   | 98-9392     | 8    | Bolt            |

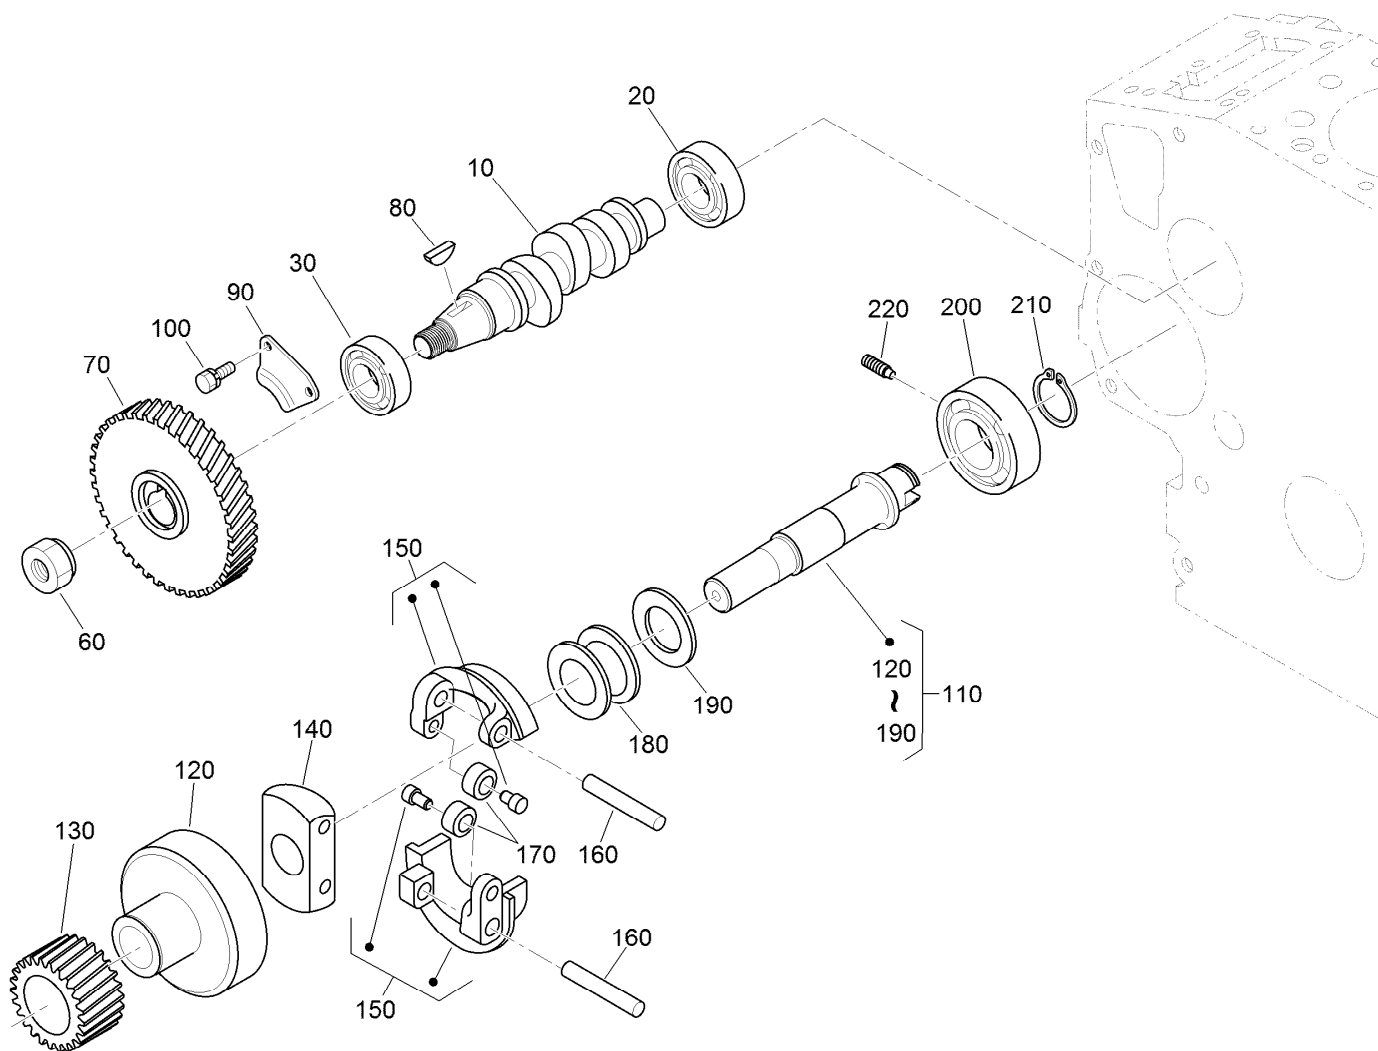

## Fuel Camshaft and Governor Shaft Assembly


| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 10   | 98-9459     | 1    | Camshaft-Fuel          |
| 20   | 107-9077    | 1    | Bearing-Ball           |
| 30   | 107-9078    | 1    | Bearing-Ball           |
| 60   | 130-1512    | 1    | Nut                    |
| 70   | 130-1378    | 1    | Gear-Injection Pump    |
| 80   | 98-9595     | 1    | Key-Woodruff           |
| 90   | 98-9511     | 1    | Stopper-Fuel, Camshaft |
| 100  | 98-7692     | 2    | Bolt                   |
| 110  | 98-9644     | 1    | Governor Shaft ASM     |
| 120  | 98-9562     | 1    | Holder-Gear, Governor  |
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 130  | 98-9673     | 1    | Gear-Governor           |
| 140  | 98-9561     | 1    | Holder-Weight, Governor |
| 150  | 130-1240    | 2    | Governor Weight ASM     |
| 160  | 98-9560     | 2    | Shaft-Weight, Governor  |
| 170  | 98-9692     | 2    | Roller                  |
| 180  | 98-9563     | 1    | Sleeve-Governor         |
| 190  | 98-9564     | 1    | Washer-Thrust           |
| 200  | 107-9079    | 1    | Bearing-Ball            |
| 210  | 98-9657     | 1    | Circlip-Shaft, Governor |
| 220  | 98-9565     | 1    | Screw-Set               |

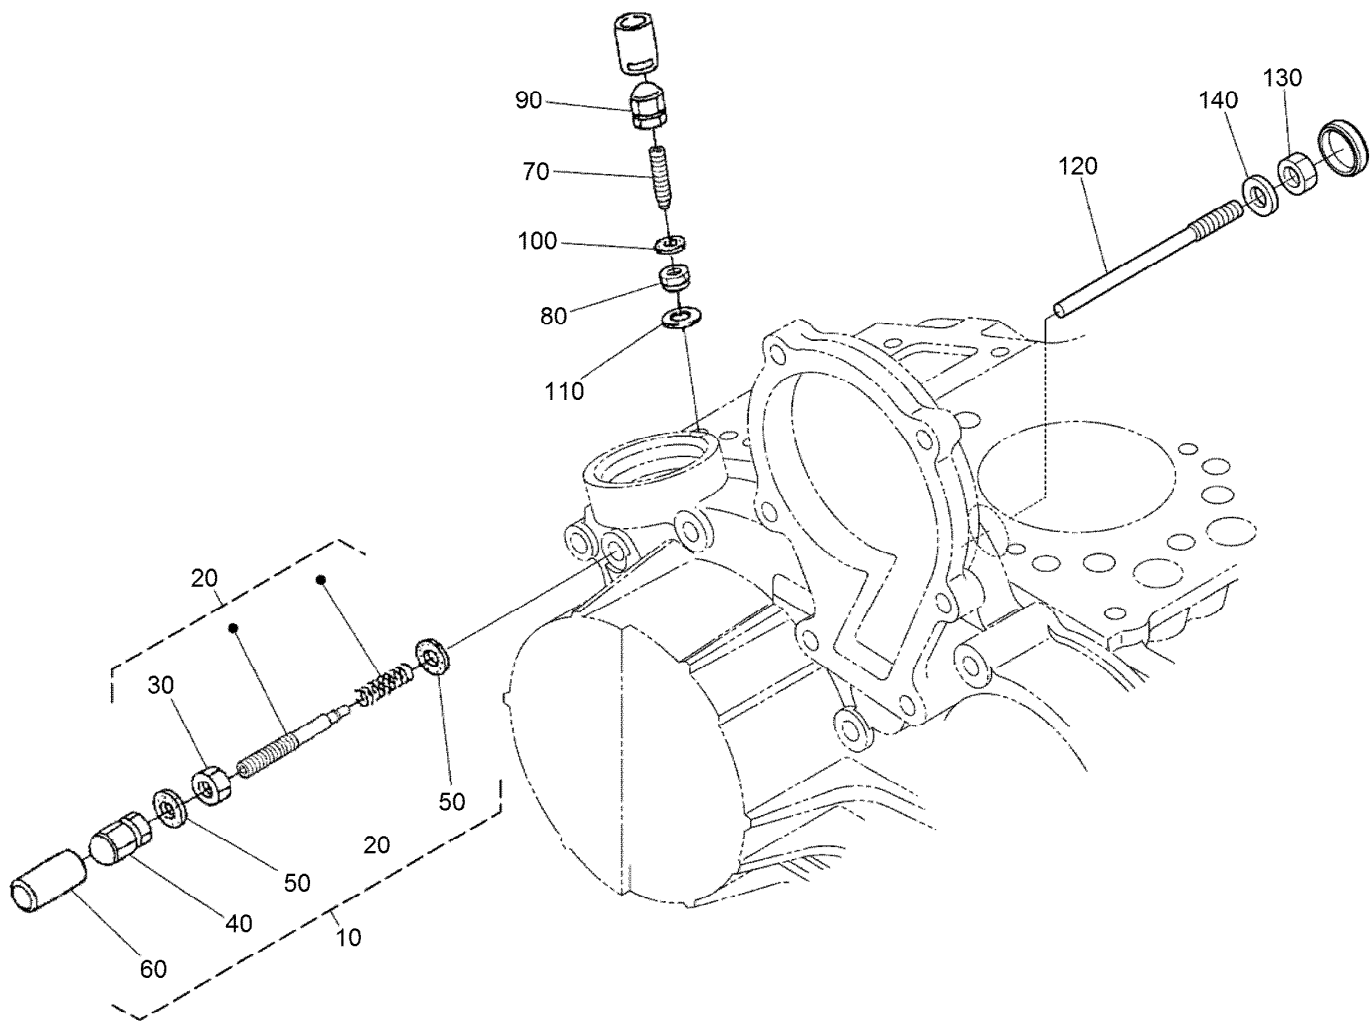


## Idle Apparatus Assembly
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 132-4937    | 1    | Apparatus-Idling    |
| 20   | 132-4938    | 1    | Adjustment Bolt ASM |
| 30   | 98-9439     | 1    | Nut                 |
| 40   | 112-0181    | 1    | Nut                 |
| 50   | 98-7654     | 2    | Gasket              |
| 60   | 98-7656     | 1    | Cap                 |
| 70   | 112-7015    | 1    | Bolt-Adjusting      |
| 80   | 100-2175    | 1    | Nut-Lock            |
| 90   | 112-0181    | 1    | Nut                 |
| 100  | 98-7654     | 2    | Gasket              |
| 110  | 107-9081    | 1    | Gasket              |
| 120  | 131-6556    | 1    | Bolt                |
| 130  | 98-7572     | 1    | Nut                 |
| 140  | 98-7654     | 1    | Gasket              |

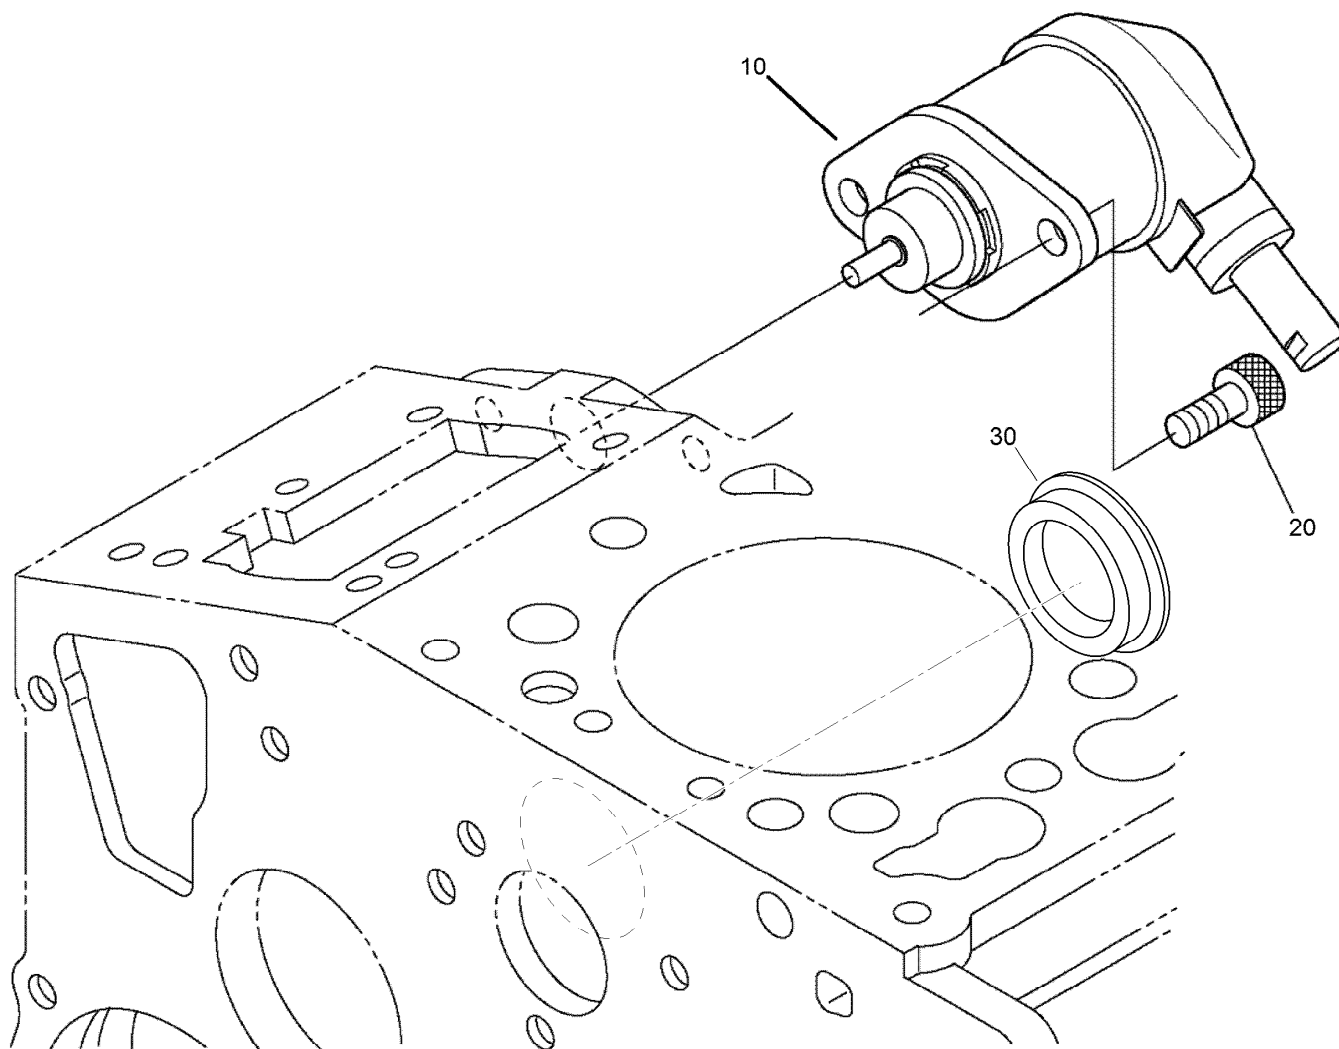

## Stop Solenoid Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 104-5155           | 1           | Solenoid-Stop      |
| 20          | 130-1155           | 2           | Screw-HSH          |
| 30          | 112-7016           | 1           | Cover-Pump         |

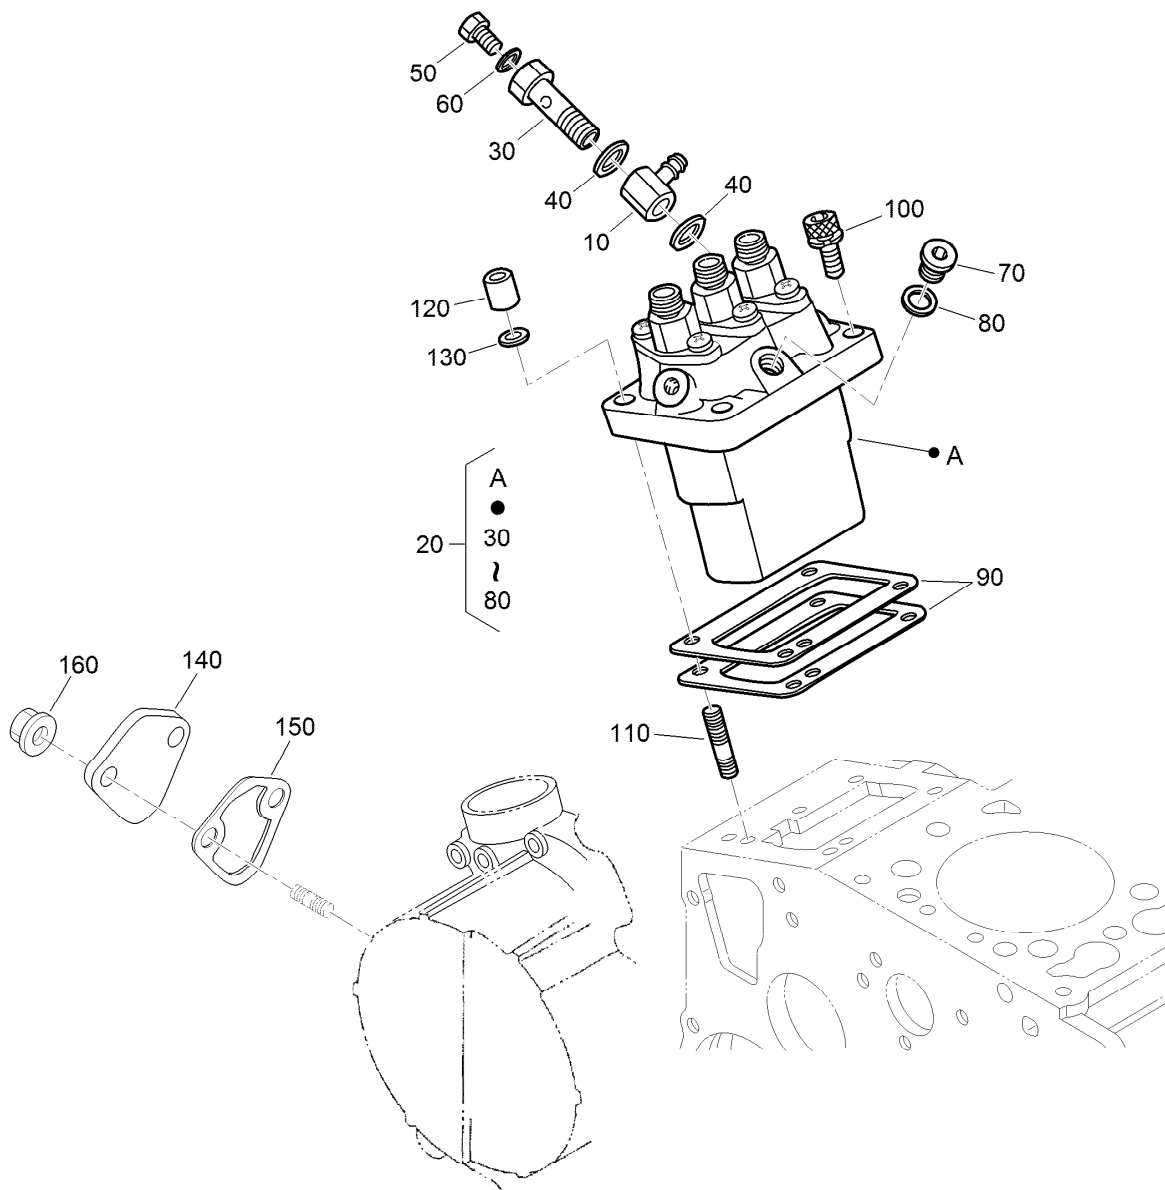


## Injection Pump Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 10   | 98-9596     | 1    | Joint-Eye               |
| 20   | 98-9643     | 1    | Injection Pump ASM      |
| 30   | 98-9464     | 1    | Bolt-Joint              |
| 40   | 98-9445     | 2    | Gasket                  |
| 50   | 98-9430     | 1    | Screw                   |
| 60   | 98-9446     | 1    | Gasket                  |
| 70   | 98-9466     | 1    | Plug                    |
| 80   | 98-9451     | 1    | Gasket                  |
| 90   | 98-9456     | 1    | Shim-Injection (0.20MM) |
| 90   | 98-9457     | 1    | Shim-Injection (0.25MM) |
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 90   | 98-9458     | 1    | Shim-Injection (0.30MM)  |
| 90   | 115-3046    | 1    | Shim-Injection (0.35MM)  |
| 90   | 115-3045    | 1    | Shim-Injection (0.175MM) |
| 100  | 117-7564    | 2    | Bolt-Hex Soc HD          |
| 110  | 98-9438     | 2    | Stud                     |
| 120  | 98-9440     | 2    | Nut-Cap                  |
| 130  | 98-7699     | 2    | Washer-Spring            |
| 140  | 99-3514     | 1    | Cover                    |
| 150  | 117-7562    | 1    | Gasket-Pump, Fuel        |
| 160  | 100-2203    | 2    | Nut-Flange               |




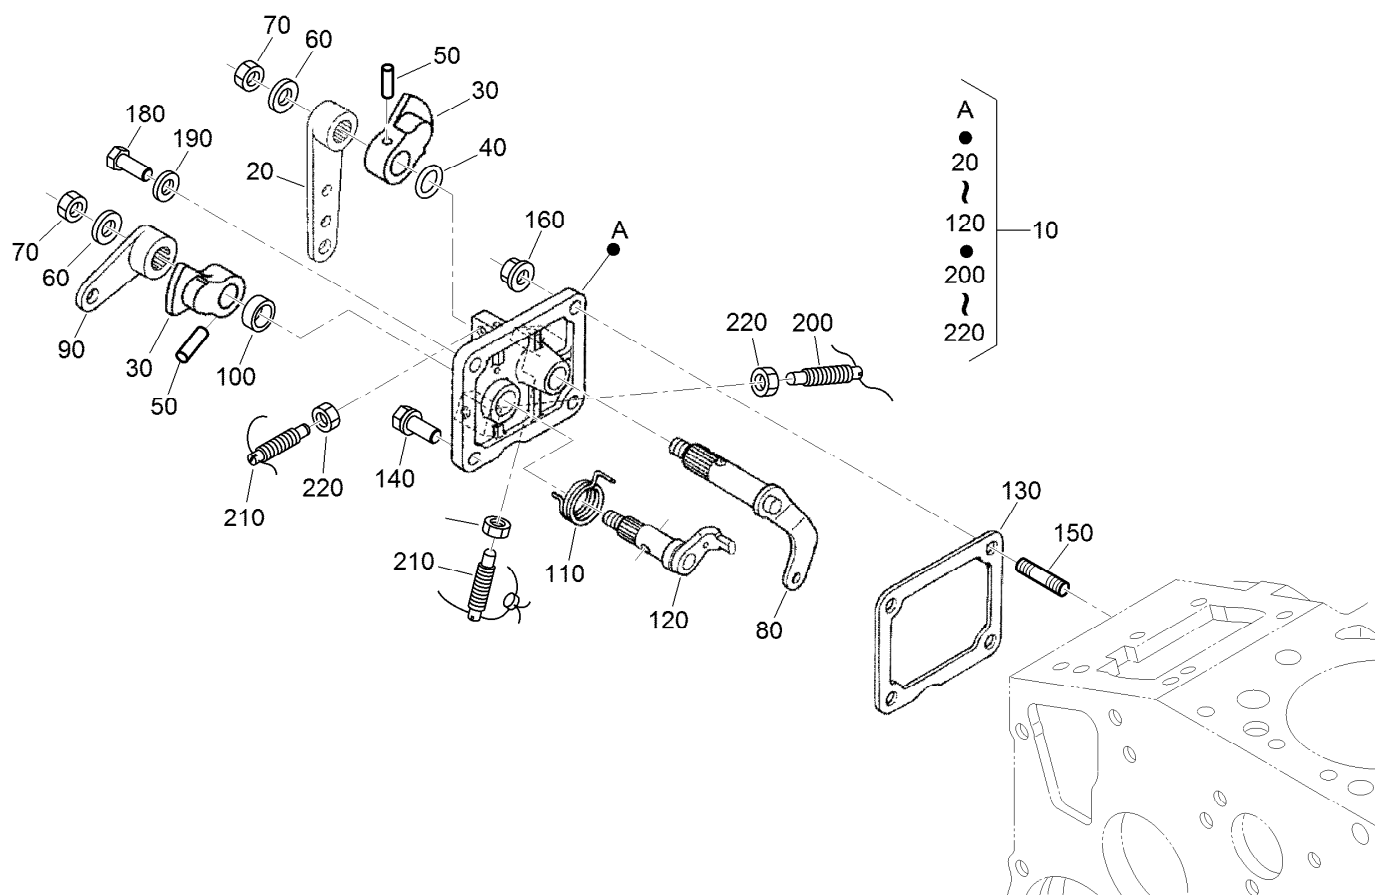

## Speed Control Plate Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 98-9661     | 1    | Control Plate ASM    |
| 20   | 98-9662     | 1    | Lever-Control, Speed |
| 30   | 98-9572     | 2    | Lever-Control, Speed |
| 40   | 105-3788    | 1    | O-Ring               |
| 50   | 98-7602     | 2    | Pin-Spring           |
| 60   | 98-9594     | 2    | Washer-Plain         |
| 70   | 98-9589     | 2    | Nut                  |
| 80   | 98-9658     | 1    | Governor Lever ASM   |
| 90   | 98-9663     | 1    | Lever-Stop, Engine   |
| 100  | 98-7601     | 1    | Seal-Oil             |
| 110  | 98-9472     | 1    | Spring-Return        |

 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 120  | 98-9664     | 1    | Shaft-Lever, Stop |
| 130  | 98-9637     | 1    | Gasket            |
| 140  | 98-7692     | 1    | Bolt              |
| 150  | 105-3710    | 2    | Stud              |
| 160  | 100-2203    | 2    | Nut-Flange        |
| 180  | 127-0401    | 1    | Bolt-Hex          |
| 190  | 98-7654     | 1    | Gasket            |
| 200  | 117-7566    | 1    | Bolt-Adjusting    |
| 210  | 117-7565    | 2    | Bolt-Adjusting    |
| 220  | 98-7572     | 3    | Nut               |

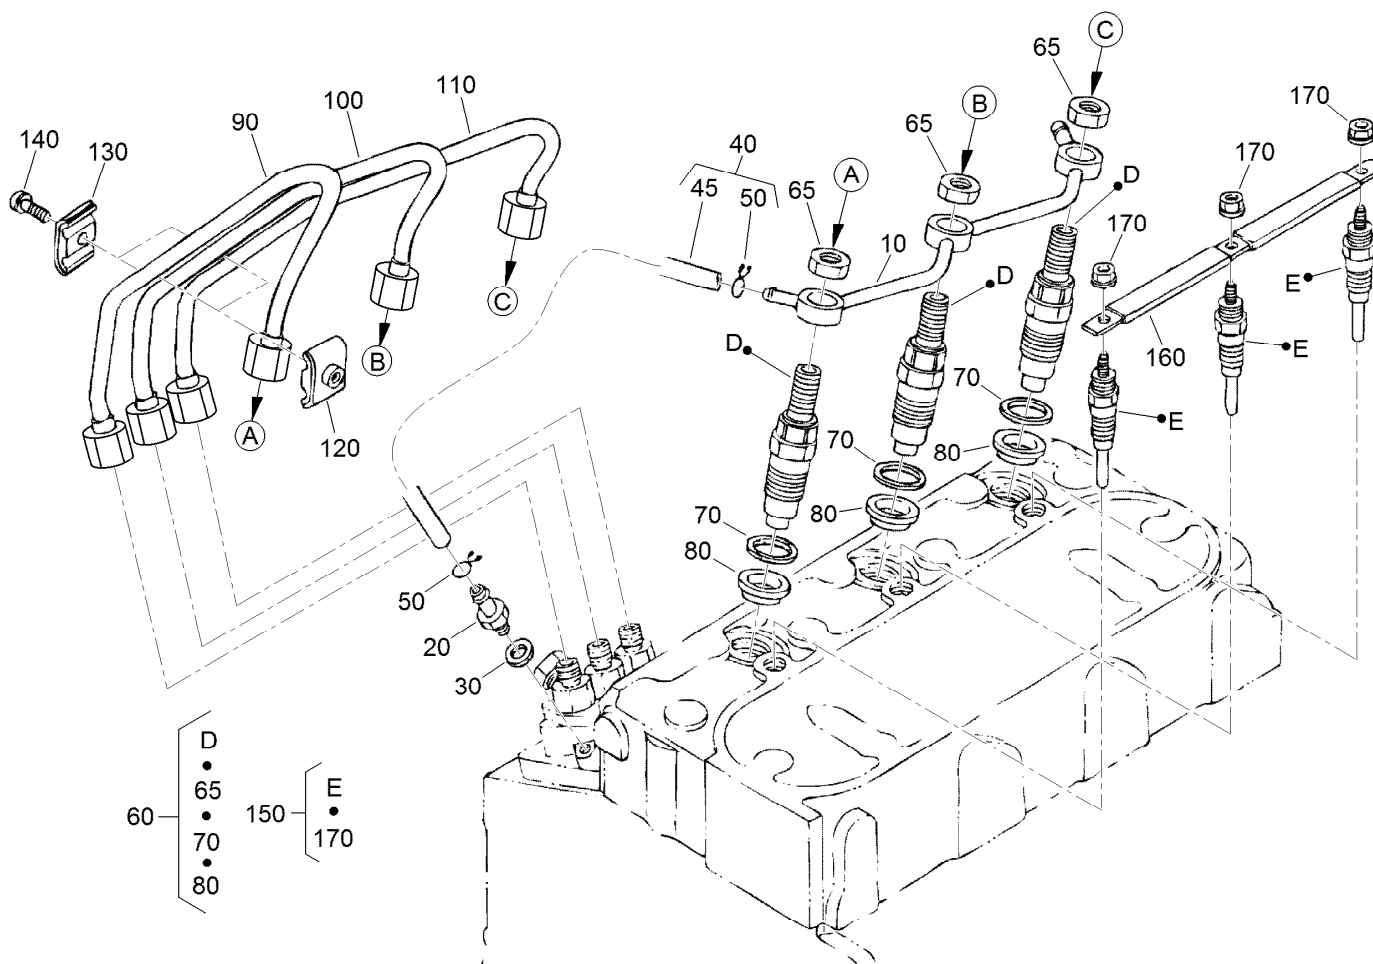

## Nozzle Holder and Glow Plug Assembly


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 98-9620     | 1    | Overflow Pipe ASM  |
| 20   | 98-9431     | 1    | Screw-Bleeder, Air |
| 30   | 98-7654     | 1    | Gasket             |
| 40   | 98-9420     | 1    | Overflow Pipe ASM  |
| 45   | 112-0182    | 1    | Pipe-Overflow      |
| 50   | 98-7671     | 2    | Clip-Pipe          |
| 60   | 115-3018    | 3    | Nozzle Holder Kit  |
| 65   | 121-2411    | 3    | Nut                |
| 70   | 98-7676     | 3    | Gasket             |
| 80   | 98-7677     | 3    | Seal-Heat          |
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 90   | 132-4945    | 1    | Pipe Injection   |
| 100  | 132-4946    | 1    | Pipe Injection   |
| 110  | 132-4947    | 1    | Pipe Injection   |
| 120  | 98-7682     | 2    | Clamp-Pipe       |
| 130  | 98-7683     | 2    | Clamp-Pipe       |
| 140  | 98-7684     | 2    | Screw (W/Washer) |
| 150  | 130-1411    | 3    | Plug-Glow        |
| 160  | 98-9631     | 1    | Cord-Plug, Glow  |
| 170  | 99-8377     | 3    | Nut-Flange       |

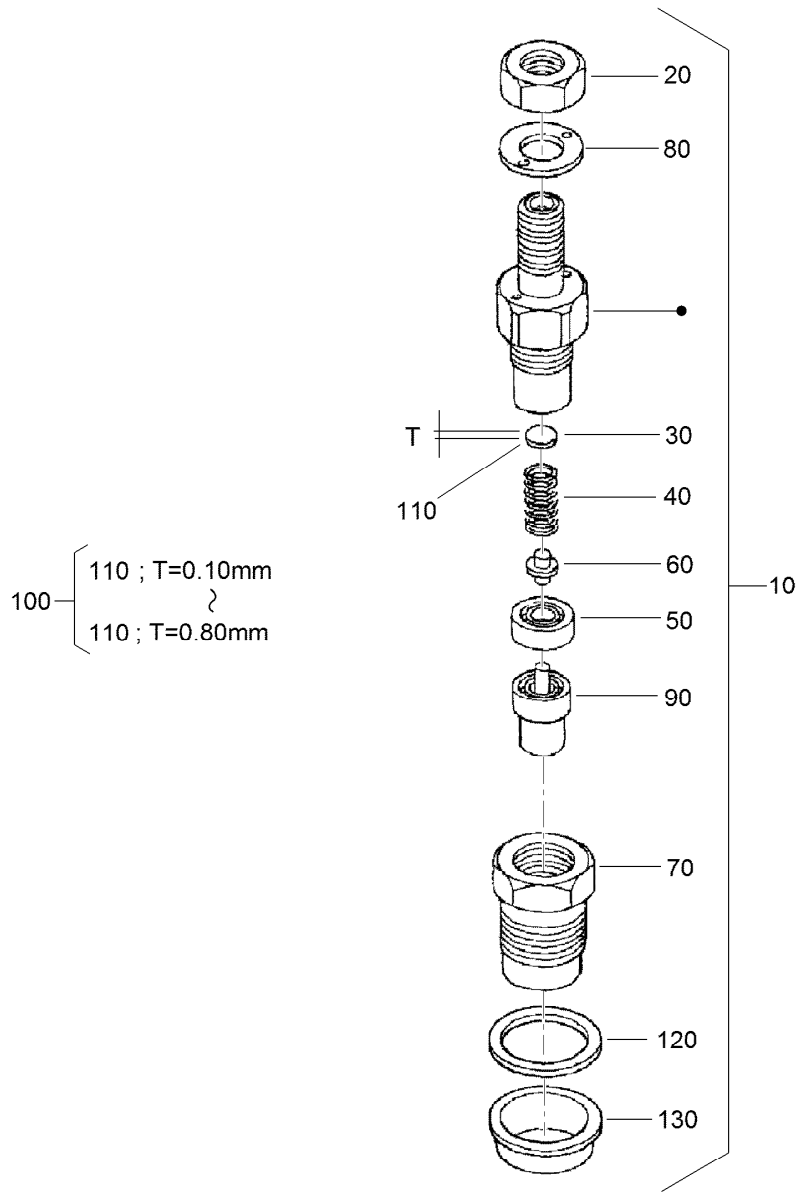


## Nozzle Holder Assembly
 
| Ref. | Part Number | Qty. | Description            | Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|------|-------------|------|------------------------|
| 10   | 115-3018    | 3    | Nozzle Holder Kit      | 110  | 99-8311     | 3    | Washer-Adjust (0.20MM) |
| 20   | 121-2411    | 3    | Nut                    | 110  | 99-8312     | 3    | Washer-Adjust (0.30MM) |
| 30   | 99-8302     | 3    | Washer-Adjusting       | 110  | 99-8313     | 3    | Washer-Adjust (0.40MM) |
| 40   | 99-8303     | 3    | Spring-Nozzle          | 110  | 99-8314     | 3    | Washer-Adjust (0.50MM) |
| 50   | 99-8304     | 3    | Spacer-Distance        | 110  | 99-8315     | 3    | Washer-Adjust (0.52MM) |
| 60   | 99-8305     | 3    | Rod-Push               | 110  | 99-8316     | 3    | Washer-Adjust (0.54MM) |
| 70   | 99-8306     | 3    | Nut-Nozzle             | 110  | 99-8317     | 3    | Washer-Adjust (0.56MM) |
| 80   | 99-8307     | 3    | Washer-Plain           | 110  | 99-8318     | 3    | Washer-Adjust (0.58MM) |
| 90   | 115-3020    | 3    | Piece-Nozzle           | 110  | 99-8319     | 3    | Washer-Adjust (0.80MM) |
| 100  | 99-8309     | 3    | Adjusting Washer ASM   | 120  | 98-7676     | 3    | Gasket                 |
| 110  | 99-8310     | 3    | Washer-Adjust (0.10MM) | 130  | 98-7677     | 3    | Seal-Heat              |

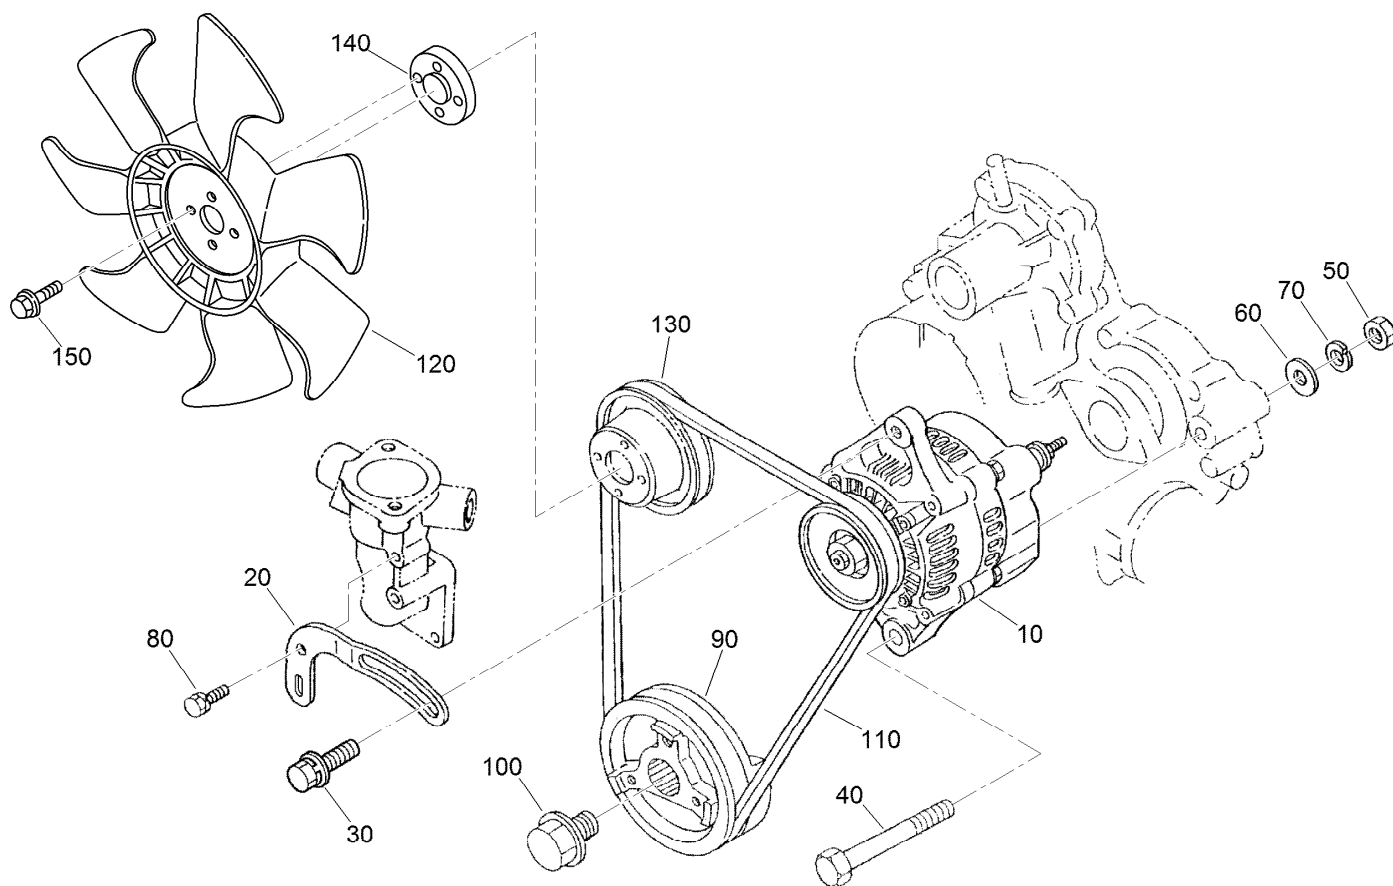

## Alternator and Pulley Assembly

 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 10   | 131-6557    | 1    | Alternator ASM    |
| 20   | 112-7047    | 1    | Stay-Dynamo       |
| 30   | 108-7088    | 1    | Bolt              |
| 40   | 98-9360     | 1    | Bolt              |
| 50   | 98-7737     | 1    | Nut               |
| 60   | 98-9366     | 1    | Washer-Plain      |
| 70   | 99-7527     | 1    | Washer-Spring     |
| 80   | 98-7692     | 1    | Bolt              |
| 90   | 117-8830    | 1    | Pulley-Drive, Fan |
| 100  | 98-9585     | 1    | Bolt              |
| 110  | 98-9676     | 1    | V-Belt            |
| 120  | 104-4246    | 1    | Fan-Engine        |
| 130  | 98-9584     | 1    | Pulley-Fan        |
| 140  | 104-4247    | 1    | Spacer-Fan        |
| 150  | 108-2873    | 4    | Bolt-Flange       |

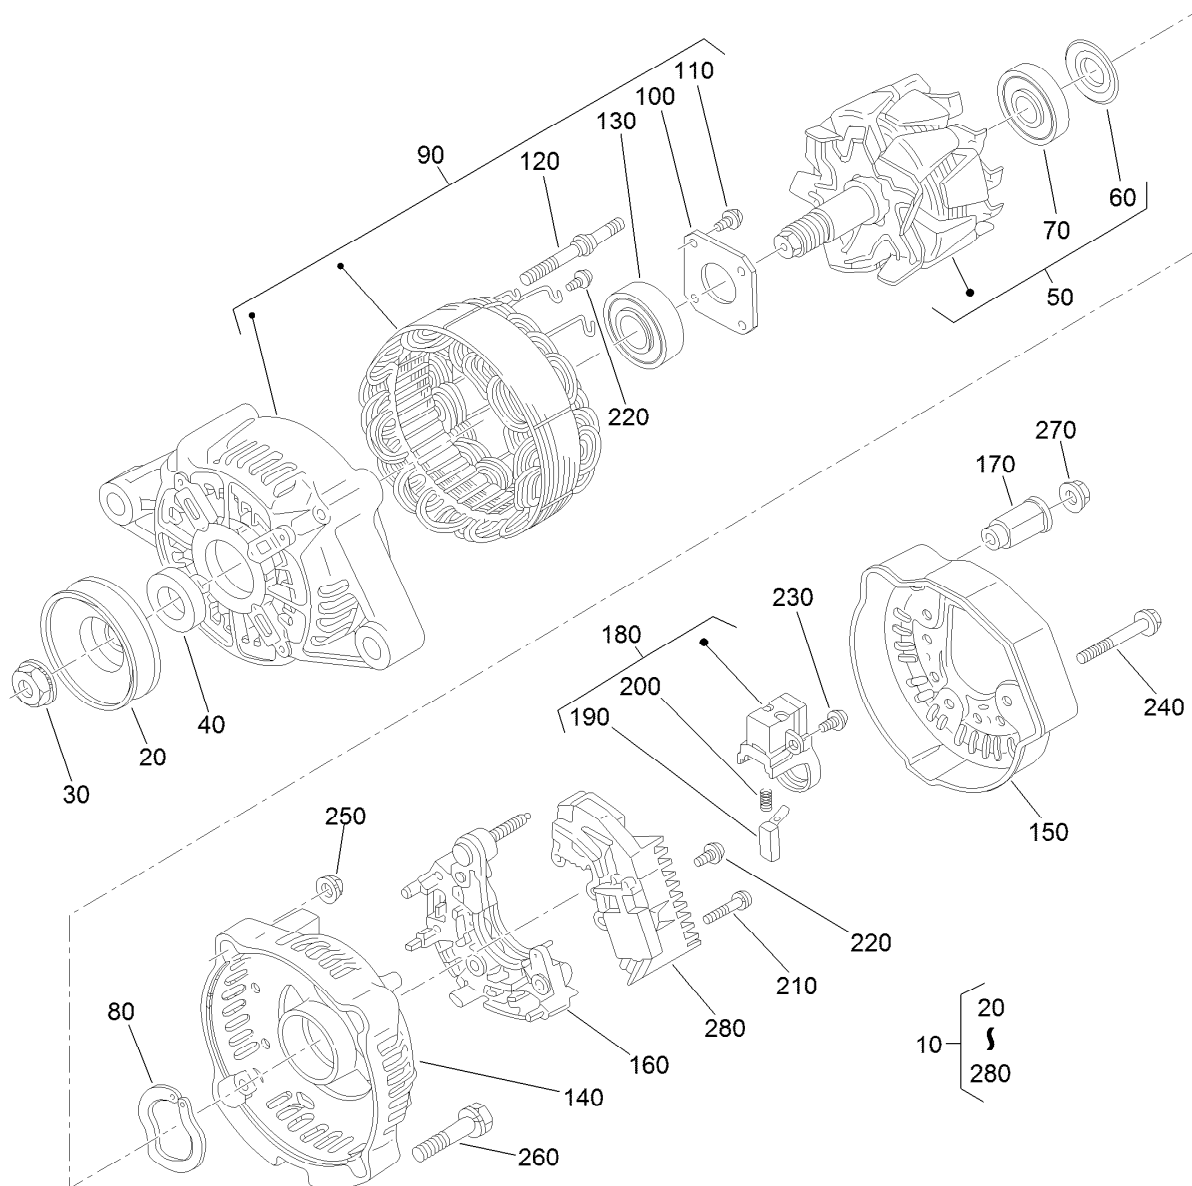

## Alternator Components Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 131-6557    | 1    | Alternator ASM      |
| 20   | 98-9453     | 1    | Pulley-Dynamo       |
| 30   | 98-7708     | 1    | Nut                 |
| 40   | 98-7709     | 1    | Collar              |
| 50   | 107-0136    | 1    | Rotor ASM           |
| 60   | 98-7711     | 1    | Cover-Bearing       |
| 70   | 107-0138    | 1    | Bearing-Ball        |
| 80   | 98-7713     | 1    | Washer-Thrust       |
| 90   | 107-0139    | 1    | Drive End Frame ASM |
| 100  | 98-7715     | 1    | Plate-Retainer      |
| 110  | 98-7716     | 4    | Screw-Head, Round   |
| 120  | 98-7717     | 2    | Bolt-Through        |
| 130  | 133-2811    | 1    | Bearing             |
| 140  | 107-9087    | 1    | Frame-End           |
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 150  | 107-0140    | 1    | Cover-End          |
| 160  | 98-7721     | 1    | Rectifier ASM      |
| 170  | 98-7722     | 1    | Bushing-Insulation |
| 180  | 107-0141    | 1    | Brush Holder ASM   |
| 190  | 98-7724     | 2    | Brush              |
| 200  | 98-7725     | 2    | Spring-Brush       |
| 210  | 98-7726     | 2    | Screw-Head, Round  |
| 220  | 98-7727     | 6    | Screw-Head, Round  |
| 230  | 98-7728     | 1    | Screw-Head, Round  |
| 240  | 98-7729     | 3    | Bolt               |
| 250  | 98-7730     | 2    | Nut                |
| 260  | 98-7731     | 2    | Bolt               |
| 270  | 98-7732     | 1    | Nut                |
| 280  | 110-3799    | 1    | Regulator ASM      |

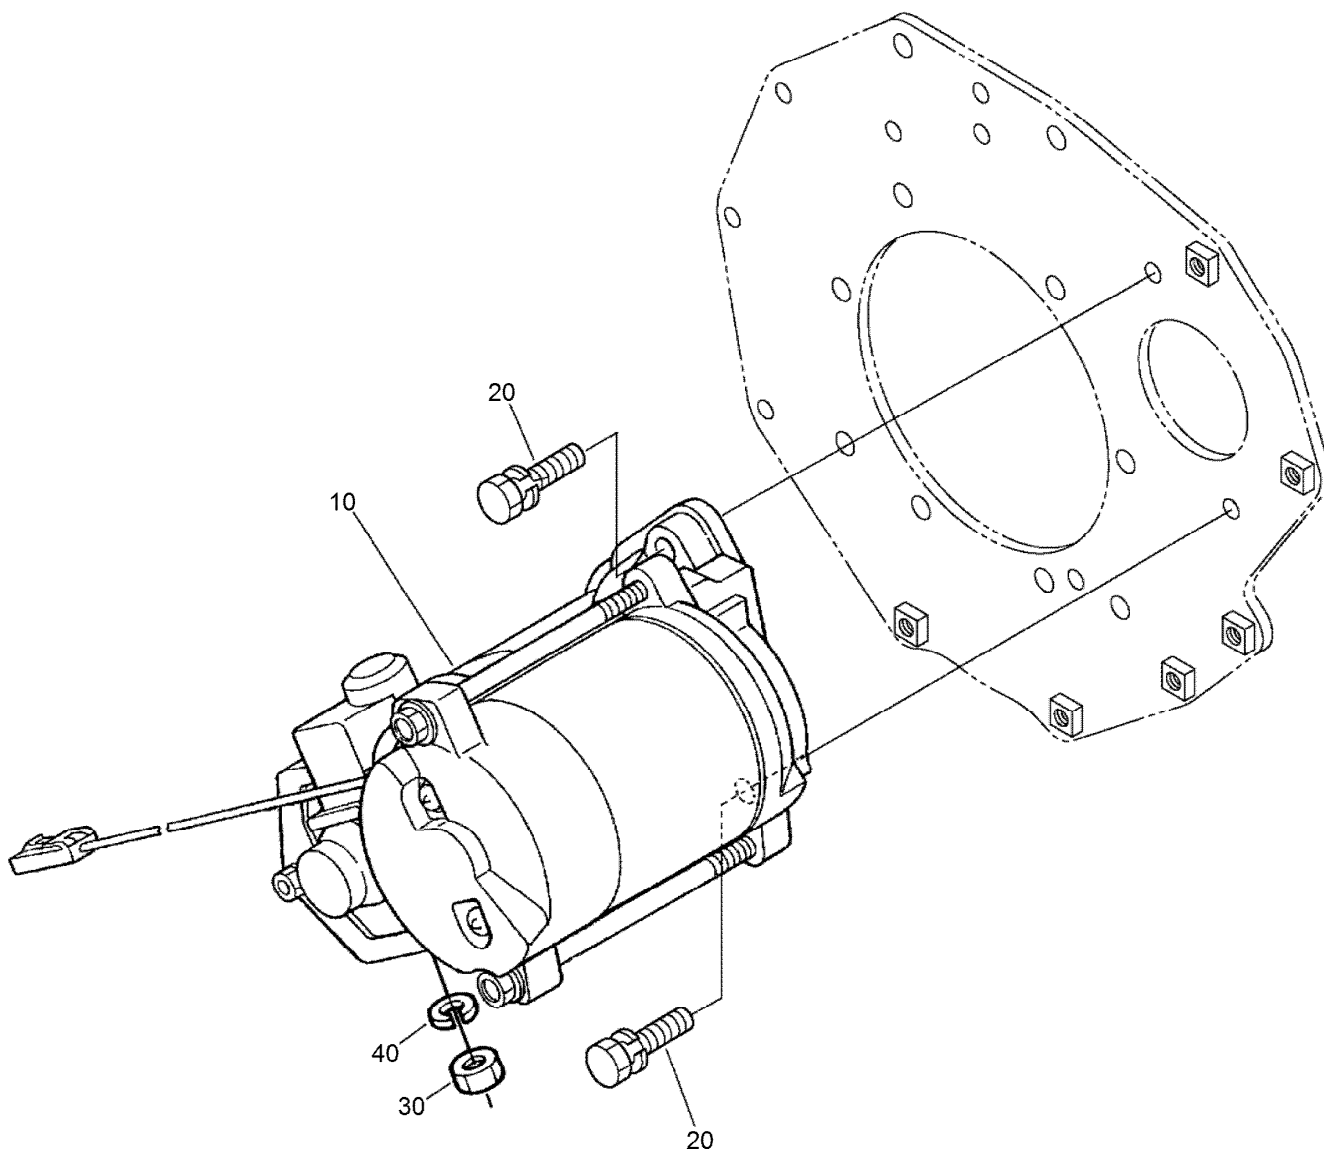

## Starter Installation Assembly
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 132-4948    | 1    | Starter             |
| 20   | 98-7697     | 2    | Bolt                |
| 30   | 98-7739     | 1    | Nut                 |
| 40   | 131-9579    | 1    | Washer-Spring, Lock |

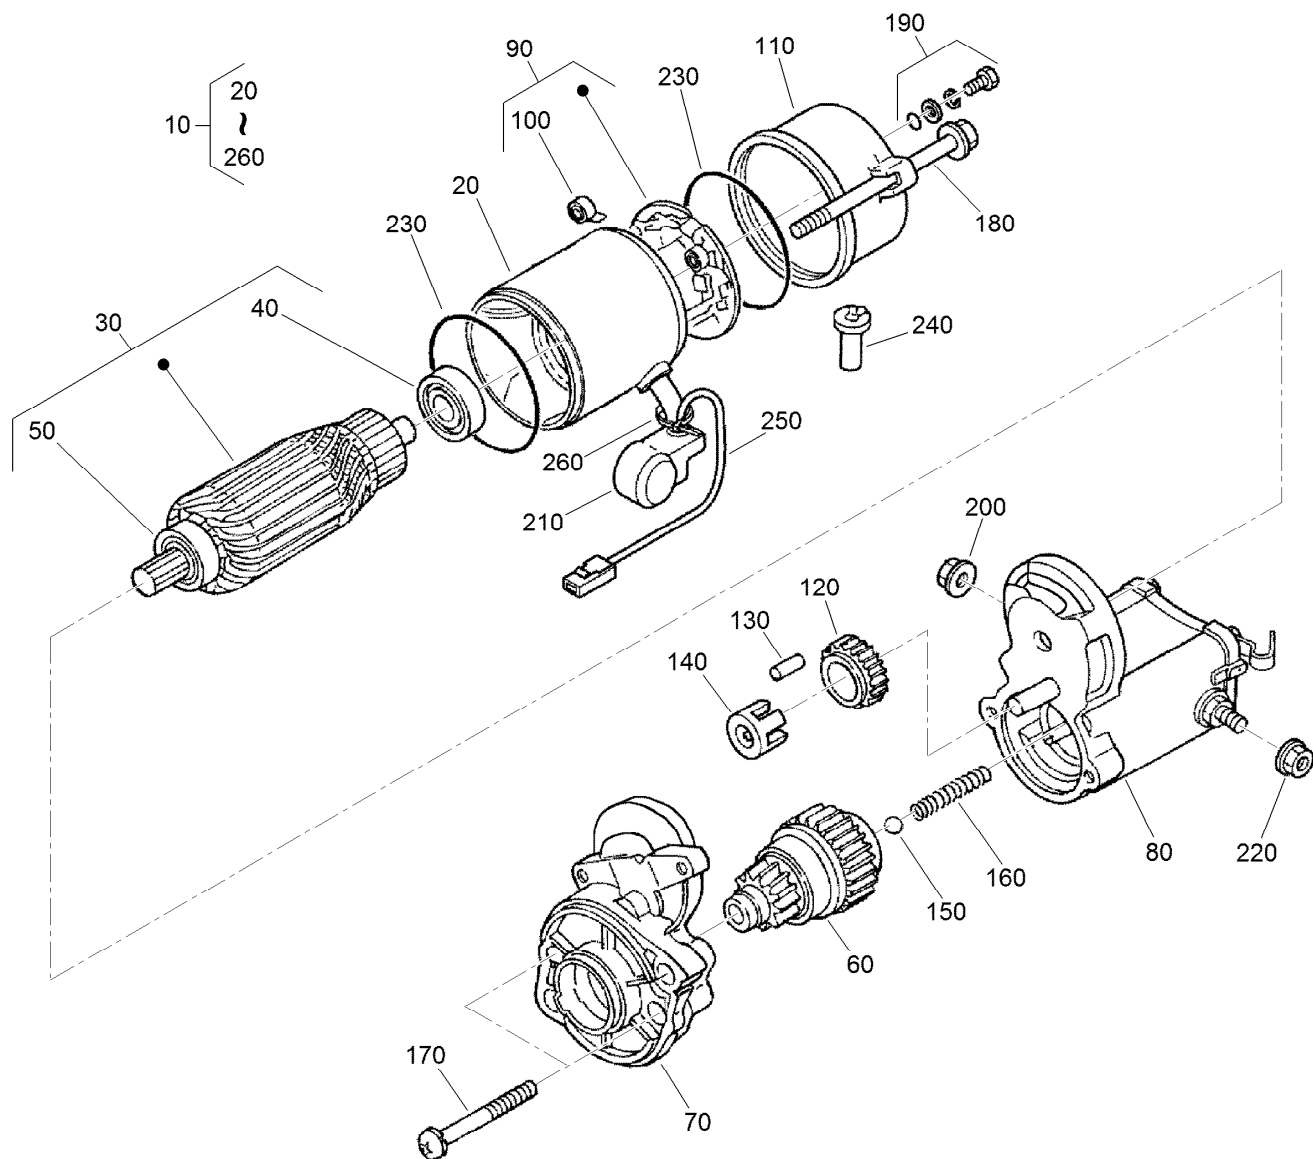


## Starter Component Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 132-4948    | 1    | Starter             |
| 20   | 132-4949    | 1    | Yoke                |
| 30   | 132-4930    | 1    | Armature            |
| 40   | 98-7743     | 1    | Bearing             |
| 50   | 98-7744     | 1    | Bearing             |
| 60   | 132-4934    | 1    | Clutch ASM          |
| 70   | 132-4933    | 1    | Housing ASM         |
| 80   | 105-3746    | 1    | Magnetic Switch ASM |
| 90   | 132-4932    | 1    | Holder-Brush        |
| 100  | 132-4931    | 4    | Spring-Brush        |
| 110  | 132-4935    | 1    | Frame End ASM       |
| 120  | 98-7751     | 1    | Gear                |
| 130  | 98-7753     | 5    | Roller              |


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 140  | 98-7752     | 1    | Retainer            |
| 150  | 98-7755     | 1    | Ball                |
| 160  | 98-7754     | 1    | Spring              |
| 170  | 98-7756     | 2    | Bolt                |
| 180  | 100-2210    | 2    | Bolt-Through        |
| 190  | 98-7758     | 2    | Bolt ASM            |
| 200  | 99-8376     | 1    | Nut-Hex             |
| 210  | 99-8375     | 1    | Cover               |
| 220  | 99-8371     | 1    | Nut-Hex             |
| 230  | 98-7757     | 2    | O-Ring              |
| 240  | 98-7759     | 1    | Pipe-Drain          |
| 250  | 98-9711     | 1    | Cord-Solenoid, Stop |
| 260  | 98-9712     | 1    | Band-Cover          |

 24

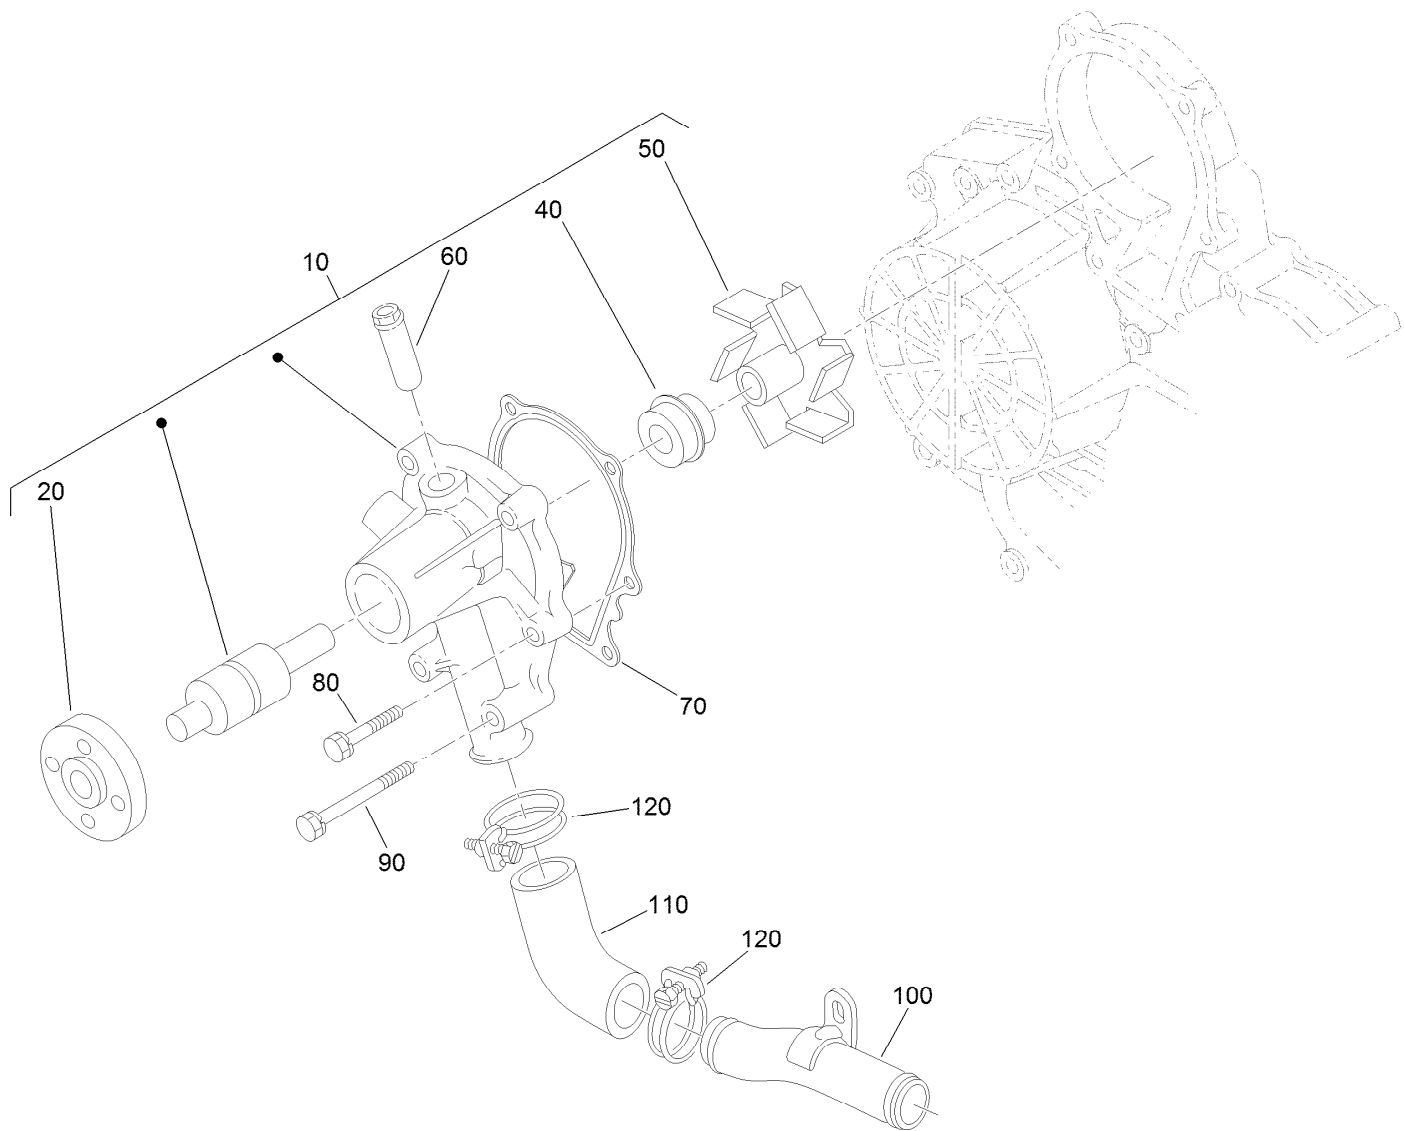

## Water Pump Assembly

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 107-9089    | 1    | Water Pump ASM       |
| 20   | 99-3516     | 1    | Flange-Pump, Water   |
| 40   | 105-3750    | 1    | Mechanical Seal ASM  |
| 50   | 112-7017    | 1    | Impeller-Pump, Water |
| 60   | 100-1932    | 1    | Pipe-Return, Water   |
| 70   | 99-3454     | 1    | Gasket-Pump, Water   |
| 80   | 98-9353     | 4    | Bolt                 |
| 90   | 107-9090    | 4    | Bolt                 |
| 100  | 98-9716     | 1    | Pipe-Water           |
| 110  | 107-9091    | 1    | Pipe-Water           |
| 120  | 127-0439    | 2    | Clamp-Hose           |

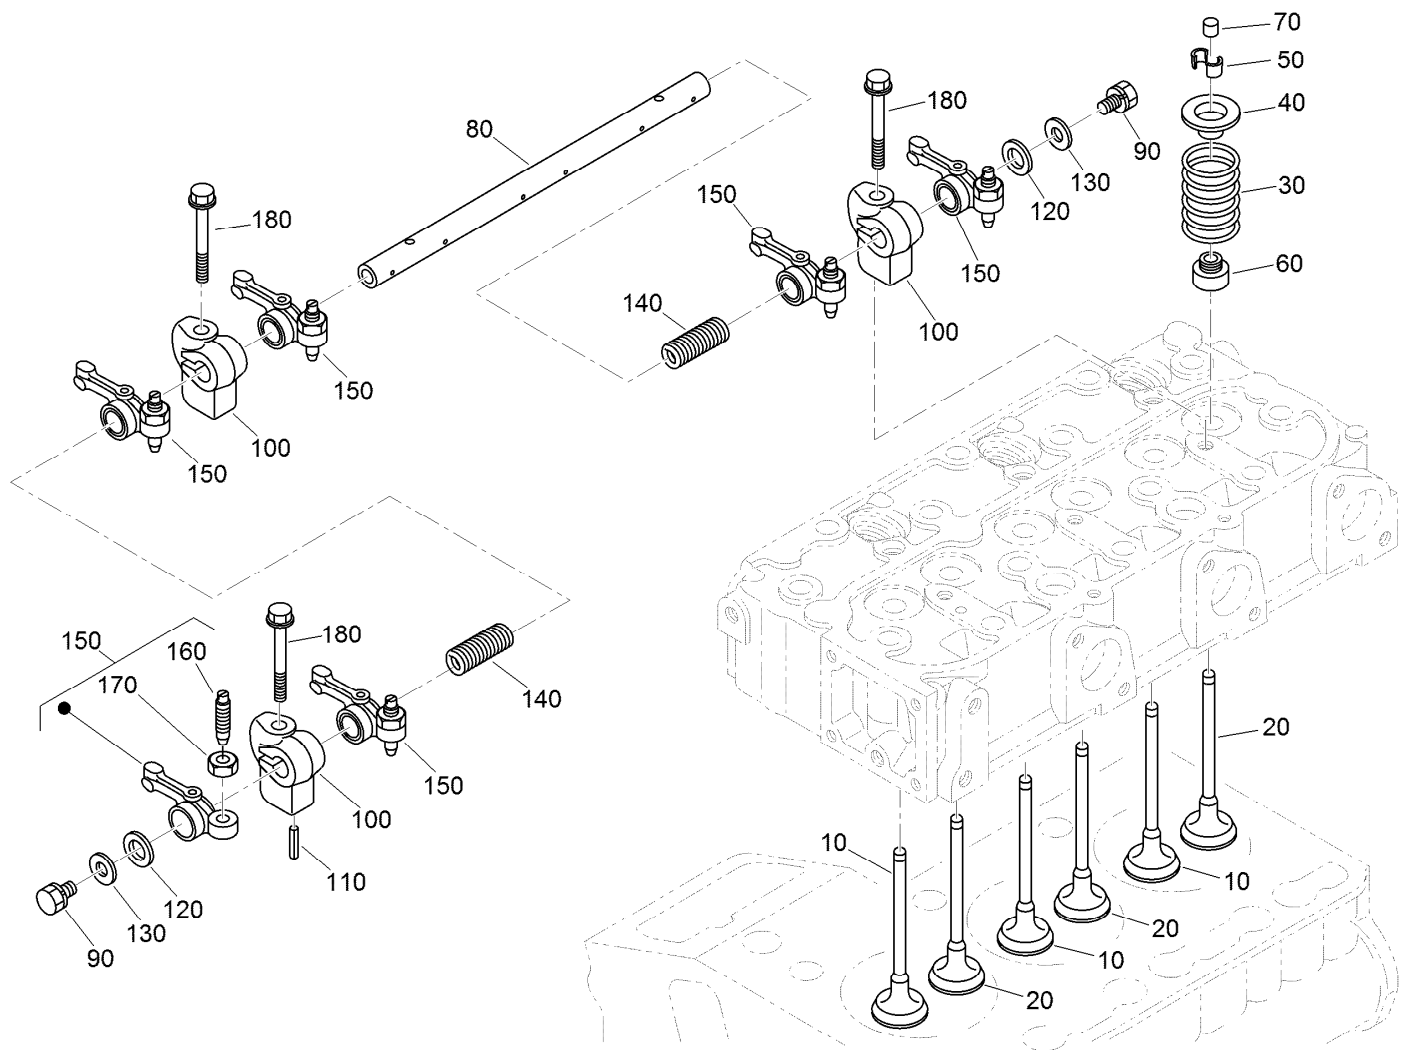

## Valve and Rocker Arm Assembly


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 112-7018    | 3    | Valve-Inlet          |
| 20   | 120-2564    | 3    | Valve-Exhaust        |
| 30   | 98-9648     | 6    | Spring-Valve         |
| 40   | 107-9092    | 6    | Retainer-Spring      |
| 50   | 98-9390     | 6    | Collet-Spring, Valve |
| 60   | 99-8385     | 6    | Seal-Stem, Valve     |
| 70   | 98-9497     | 6    | Cap-Valve            |
| 80   | 130-1248    | 1    | Shaft-Arm, Rocker    |
| 90   | 108-2873    | 2    | Bolt-Flange          |
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 100  | 98-9505     | 3    | Bracket-Arm, Rocker      |
| 110  | 105-3758    | 1    | Pin-Spring               |
| 120  | 98-9507     | 2    | Washer-Shaft, Rocker Arm |
| 130  | 110-3832    | 2    | Washer-Plain             |
| 140  | 98-9504     | 2    | Spring-Arm, Rocker       |
| 150  | 112-7020    | 6    | Rocker Arm ASM           |
| 160  | 98-9502     | 6    | Screw-Adjusting          |
| 170  | 98-9503     | 6    | Nut                      |
| 180  | 117-8832    | 3    | Bolt                     |

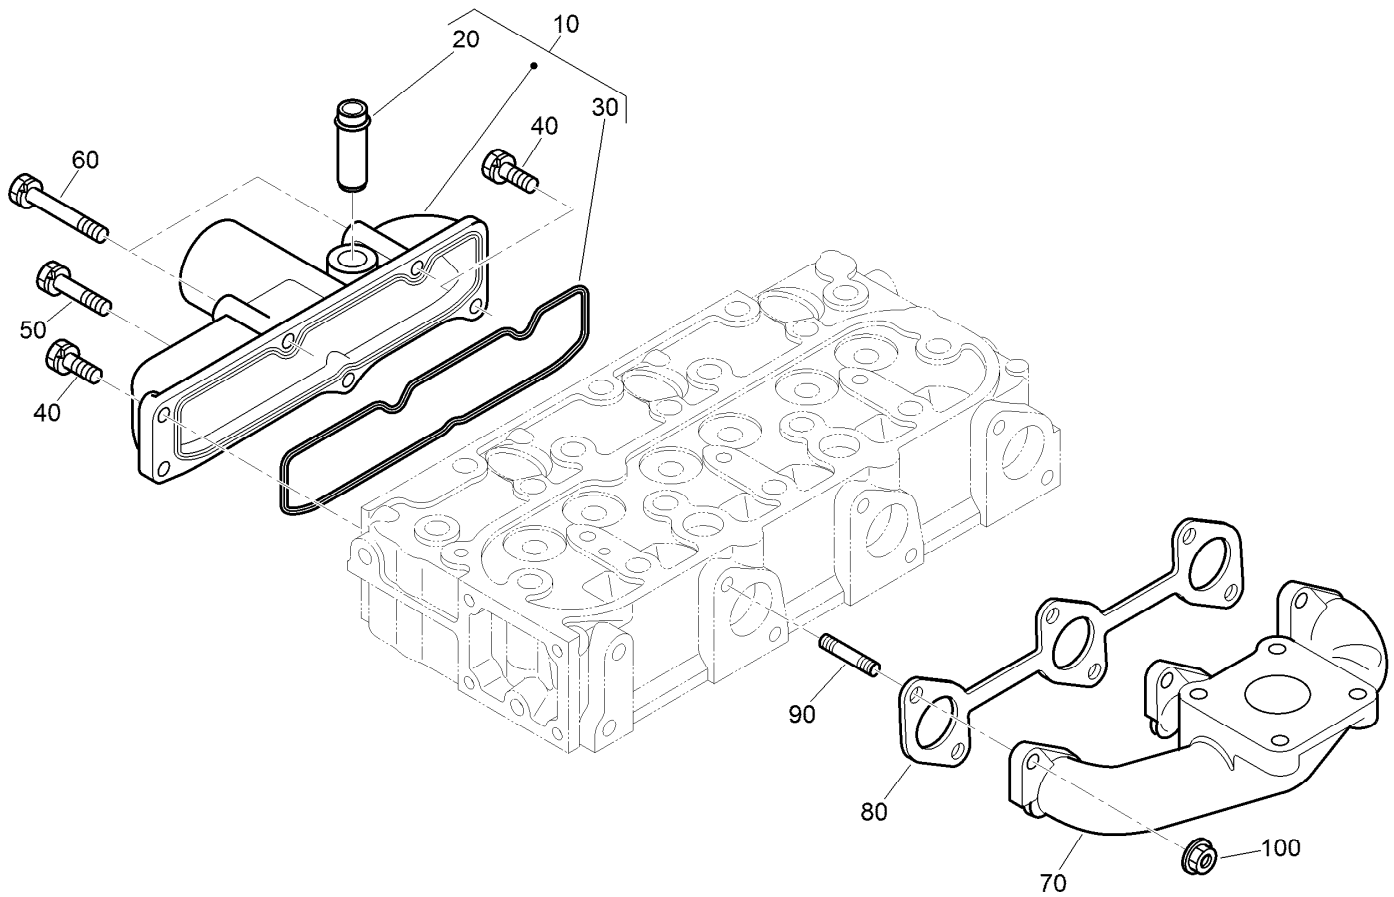


## Inlet and Exhaust Manifold Assembly
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 10   | 108-6577    | 1    | Inlet Manifold ASM       |
| 20   | 98-9492     | 1    | Joint-Pipe, Breather     |
| 30   | 98-9609     | 1    | Gasket-Manifold, Inlet   |
| 40   | 127-0403    | 3    | Bolt-Flange              |
| 50   | 98-9353     | 1    | Bolt                     |
| 60   | 105-3797    | 2    | Bolt                     |
| 70   | 107-9093    | 1    | Manifold-Exhaust         |
| 80   | 99-8327     | 1    | Gasket-Manifold, Exhaust |
| 90   | 98-9588     | 6    | Stud                     |
| 100  | 98-9665     | 6    | Nut                      |

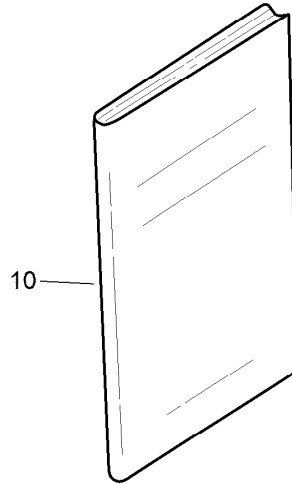


## Accessories and Service Parts
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 130-1543           | 1           | Manual-Operator    |

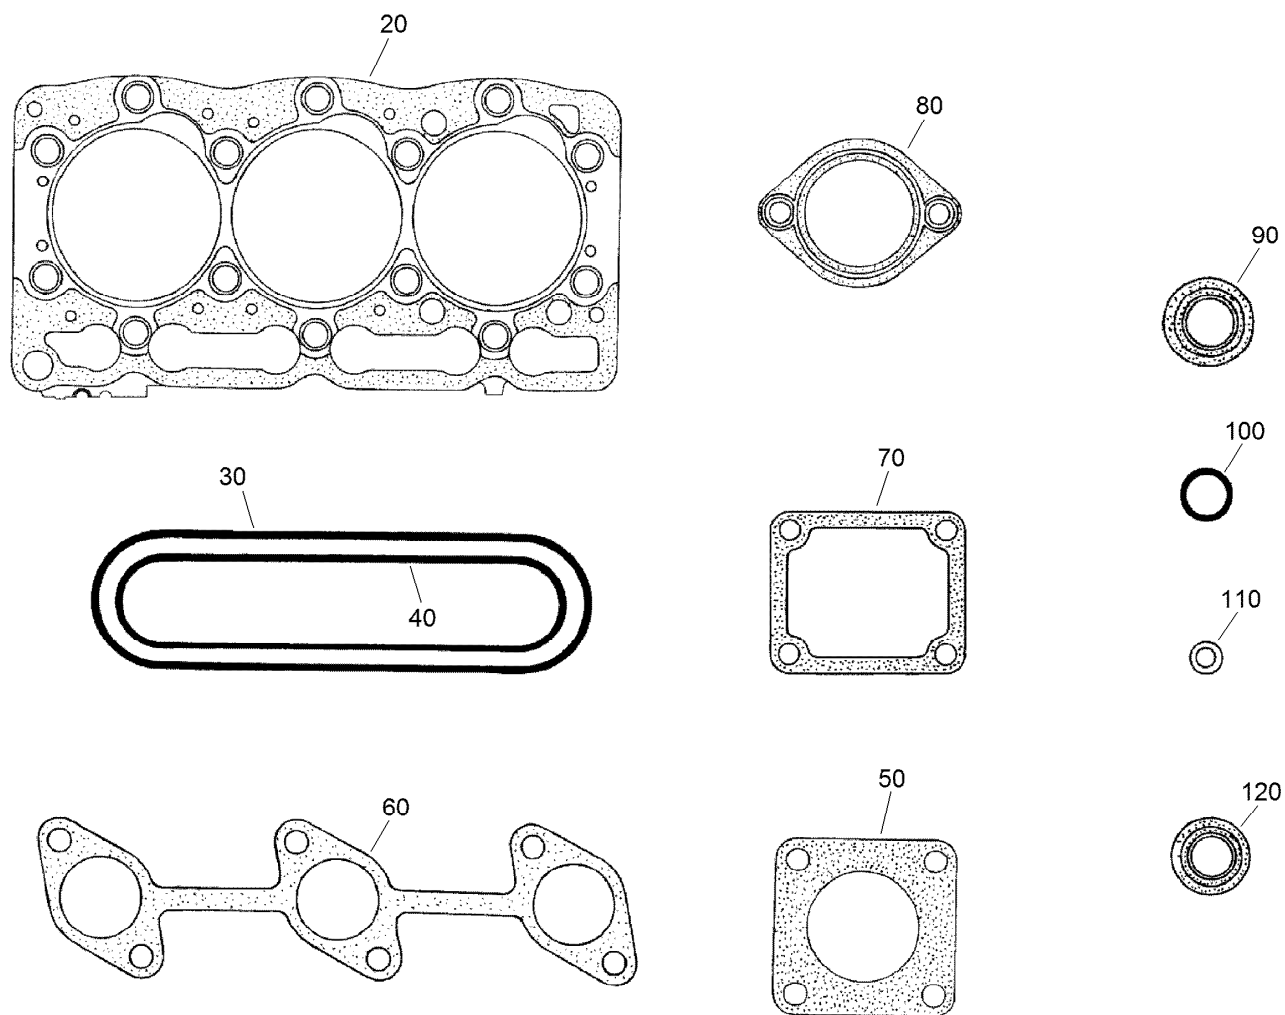

## Upper Gasket Kit
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 10   | 117-8833    | 1    | Upper Gasket Kit         |
| 20   | 108-6573    | 1    | Gasket-Head, Cylinder    |
| 30   | 117-8806    | 1    | Gasket-Cover, Head       |
| 40   | 98-9609     | 1    | Gasket-Manifold, Inlet   |
| 50   | 99-8343     | 1    | Gasket-Muffler           |
| 60   | 99-8327     | 1    | Gasket-Manifold, Exhaust |
| 70   | 98-9638     | 1    | Gasket-Flange, Water     |
| 80   | 105-3748    | 1    | Gasket-Thermostat        |
| 90   | 98-7677     | 3    | Seal-Heat                |
| 100  | 99-3446     | 2    | O-Ring                   |
| 110  | 98-7676     | 3    | Gasket                   |
| 120  | 99-8385     | 6    | Seal-Stem, Valve         |

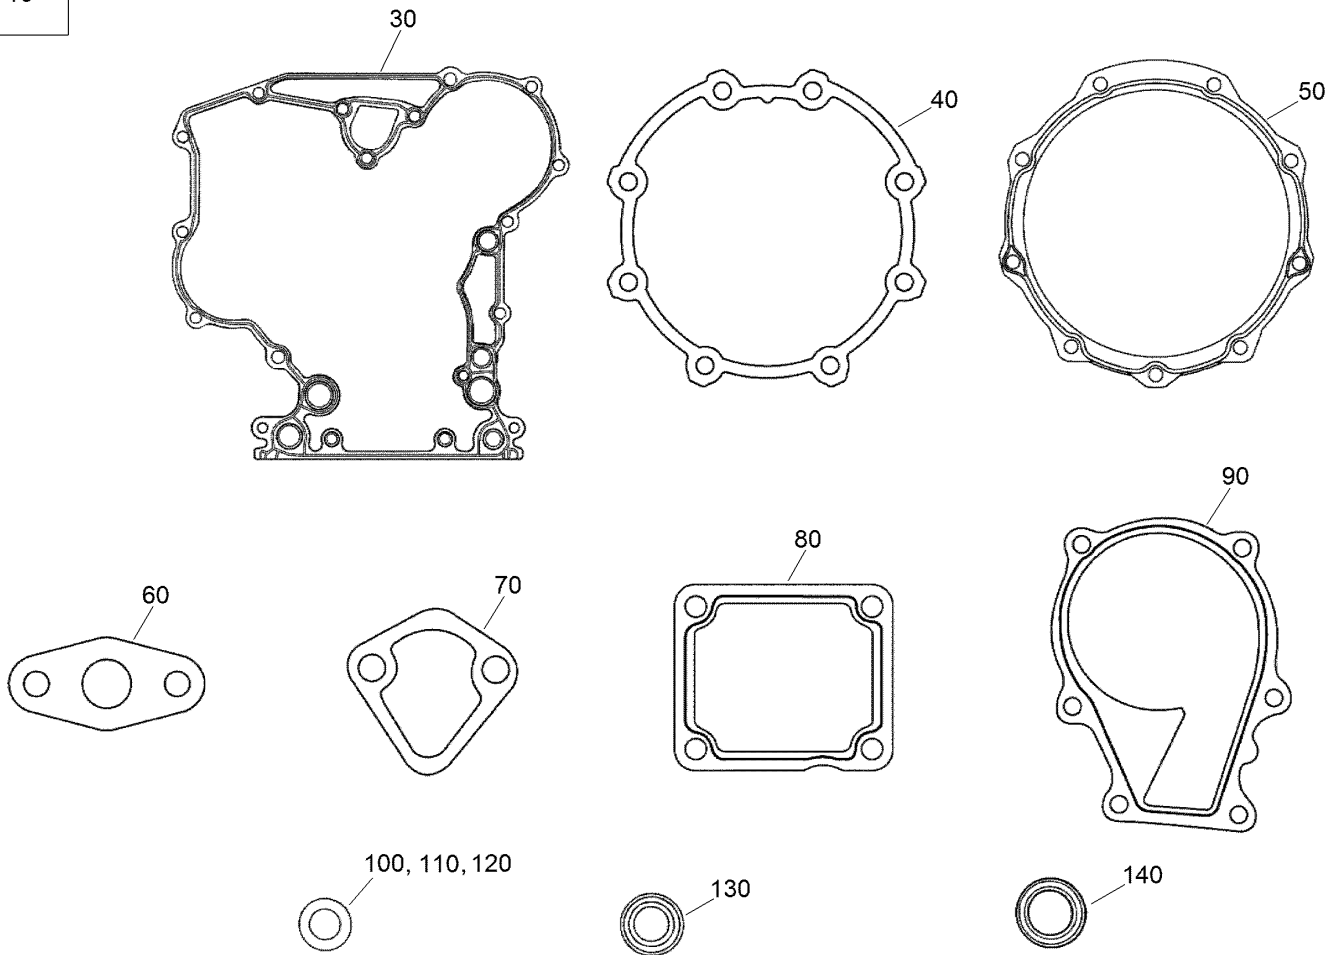

## Lower Gasket Kit

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 117-8834    | 1    | Lower Gasket Kit     |
| 30   | 117-8835    | 1    | Gasket-Case, Gear    |
| 40   | 131-6554    | 1    | Gasket-Case, Bearing |
| 50   | 112-7037    | 1    | Gasket-Cover, Case   |
| 60   | 98-9682     | 1    | Gasket               |
| 70   | 117-7562    | 1    | Gasket-Pump, Fuel    |
| 80   | 98-9637     | 1    | Gasket               |
| 90   | 99-3454     | 1    | Gasket-Pump, Water   |
| 100  | 98-7654     | 6    | Gasket               |
| 110  | 98-7524     | 1    | Gasket               |
| 120  | 110-9715    | 1    | Gasket-Pan, Oil      |
| 130  | 98-9482     | 1    | Seal-Oil             |
| 140  | 112-0180    | 1    | Seal-Oil             |

# Attachments and Accessories

## For 22327 TX 1000 Compact Tool Carrier

| Product Name                      | Model/Part |
|-----------------------------------|------------|
| Light Kit.....                    | 131-9247   |
| Standard Bucket .....             | 22340      |
| Adjustable Forks .....            | 22341      |
| High Volume Bucket .....          | 22342      |
| Loose Materials Bucket .....      | 22410      |
| 48in Hydraulic Blade.....         | 22414      |
| Bore Drive Head .....             | 22420      |
| Rod and Reamer .....              | 22421      |
| Multi-Purpose Tool .....          | 22423      |
| Direct Drive Power Box Rake ..... | 22426      |
| Stump Grinder .....               | 22429      |
| Tree Forks .....                  | 22438      |
| Cement Bowl .....                 | 22442      |
| 40in Tiller .....                 | 22445      |
| Snowthrower.....                  | 22456      |
| Crumber Kit .....                 | 22464      |
| Trench Filler.....                | 22472      |
| High-Torque Trencher Head .....   | 22473      |
| High-Speed Trencher Head .....    | 22474      |
| Narrow Bucket .....               | 22520      |
| Grapple Rake .....                | 22521      |
| Auger Head .....                  | 22805      |
| Universal Swivel Auger Head ..... | 22806      |
| 18in Auger Bit .....              | 22814      |
| 24in Auger Bit .....              | 22815      |
| 30in Auger Bit .....              | 22816      |
| 12in Auger Bit Extension .....    | 22818      |
| 24in Auger Bit Extension .....    | 22819      |
| 6in Full-Flight Auger Bit .....   | 22820      |
| 9in Full-Flight Auger Bit .....   | 22821      |
| 12in Full-Flight Auger Bit.....   | 22822      |
| 15in Full-Flight Auger Bit.....   | 22823      |
| Vibratory Plow .....              | 22911      |
| Soil Cultivator .....             | 23102      |
| Low Flow Auxiliary Kit.....       | 23134      |
| Concrete Breaker .....            | 23135      |
| Leveler.....                      | 23165      |
| Double Detent Valve .....         | 23171      |
| Stump Grinder Fit-Up Kit.....     | 23172      |
| Spark Arrestor .....              | 98-9099    |

## For 22327G TX 1000 Compact Tool Carrier

| Product Name   | Model/Part |
|----------------|------------|
| Light Kit..... | 131-9247   |

## Attachments and Accessories (continued)

|                                   |         |
|-----------------------------------|---------|
| Standard Bucket .....             | 22340   |
| Adjustable Forks .....            | 22341   |
| High Volume Bucket .....          | 22342   |
| Loose Materials Bucket .....      | 22410   |
| 48in Hydraulic Blade .....        | 22414   |
| Bore Drive Head .....             | 22420   |
| Rod and Reamer .....              | 22421   |
| Multi-Purpose Tool .....          | 22423   |
| Direct Drive Power Box Rake ..... | 22426   |
| Stump Grinder .....               | 22429   |
| Tree Forks .....                  | 22438   |
| Cement Bowl .....                 | 22442   |
| 40in Tiller .....                 | 22445   |
| Snowthrower.....                  | 22456   |
| Crumber Kit .....                 | 22464   |
| Trench Filler .....               | 22472   |
| High-Torque Trencher Head .....   | 22473   |
| High-Speed Trencher Head .....    | 22474   |
| Narrow Bucket .....               | 22520   |
| Grapple Rake .....                | 22521   |
| Auger Head .....                  | 22805   |
| Universal Swivel Auger Head ..... | 22806   |
| 18in Auger Bit .....              | 22814   |
| 24in Auger Bit .....              | 22815   |
| 30in Auger Bit .....              | 22816   |
| 12in Auger Bit Extension .....    | 22818   |
| 24in Auger Bit Extension .....    | 22819   |
| 6in Full-Flight Auger Bit .....   | 22820   |
| 9in Full-Flight Auger Bit .....   | 22821   |
| 12in Full-Flight Auger Bit.....   | 22822   |
| 15in Full-Flight Auger Bit.....   | 22823   |
| Vibratory Plow .....              | 22911   |
| Soil Cultivator .....             | 23102   |
| Low Flow Auxiliary Kit.....       | 23134   |
| Concrete Breaker .....            | 23135   |
| Leveler.....                      | 23165   |
| Double Detent Valve .....         | 23171   |
| Stump Grinder Fit-Up Kit.....     | 23172   |
| Spark Arrestor .....              | 98-9099 |

### For 22327HD TX 1000 Compact Tool Carrier

| Product Name                 | Model/Part |
|------------------------------|------------|
| Light Kit.....               | 131-9247   |
| Standard Bucket .....        | 22340      |
| Adjustable Forks .....       | 22341      |
| High Volume Bucket .....     | 22342      |
| Loose Materials Bucket ..... | 22410      |
| 48in Hydraulic Blade .....   | 22414      |

## Attachments and Accessories (continued)

|                                   |         |
|-----------------------------------|---------|
| Bore Drive Head .....             | 22420   |
| Rod and Reamer .....              | 22421   |
| Multi-Purpose Tool .....          | 22423   |
| Direct Drive Power Box Rake ..... | 22426   |
| Stump Grinder .....               | 22429   |
| Tree Forks .....                  | 22438   |
| Cement Bowl .....                 | 22442   |
| 40in Tiller .....                 | 22445   |
| Snowthrower.....                  | 22456   |
| Crumber Kit .....                 | 22464   |
| Trench Filler.....                | 22472   |
| High-Torque Trencher Head .....   | 22473   |
| High-Speed Trencher Head .....    | 22474   |
| Narrow Bucket .....               | 22520   |
| Grapple Rake .....                | 22521   |
| Auger Head .....                  | 22805   |
| Universal Swivel Auger Head ..... | 22806   |
| 18in Auger Bit .....              | 22814   |
| 24in Auger Bit .....              | 22815   |
| 30in Auger Bit .....              | 22816   |
| 12in Auger Bit Extension .....    | 22818   |
| 24in Auger Bit Extension .....    | 22819   |
| 6in Full-Flight Auger Bit .....   | 22820   |
| 9in Full-Flight Auger Bit .....   | 22821   |
| 12in Full-Flight Auger Bit.....   | 22822   |
| 15in Full-Flight Auger Bit.....   | 22823   |
| Vibratory Plow .....              | 22911   |
| Soil Cultivator .....             | 23102   |
| Low Flow Auxiliary Kit.....       | 23134   |
| Concrete Breaker .....            | 23135   |
| Leveler.....                      | 23165   |
| Double Detent Valve .....         | 23171   |
| Stump Grinder Fit-Up Kit.....     | 23172   |
| Spark Arrestor .....              | 98-9099 |



**Count on it.**