



Count on it.

Form No. 3403-643 Rev C

Parts Catalog

Polar Trac® Cab

Groundsmaster® 7200 Series Mower

Model No. 30474—Serial No. 316000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame, Mount and Seal Assembly..... 4

Rear Mount and Seal Assembly..... 6

Windshield Wiper and Air Filter Assembly 8

Front Window, Door and Side Window Assembly 10

Right-Hand Door Assembly 12

Left-Hand Door Assembly..... 14

Rear Window Assembly 16

Hose and Washer Bottle Assembly 18

Hose and Washer Bottle Assembly (Tier 4) 20

Roof, Heat Mixing Box and Headliner Assembly 22

Headliner, Switch and Control Assembly 24

Rear Lamp, Work Light and Warning Light Assembly..... 26

Rear Lamp Assembly No. 119-8093 28

Blower Mount Assembly 29


Heater Core Bracket and Cover Assembly..... 30

Air Diverter Assembly 32

Air Diverter Assembly No. 121-8369..... 34

Heat / AC Mixing Box Housing Assembly..... 35

Frame, Mount and Seal Assembly

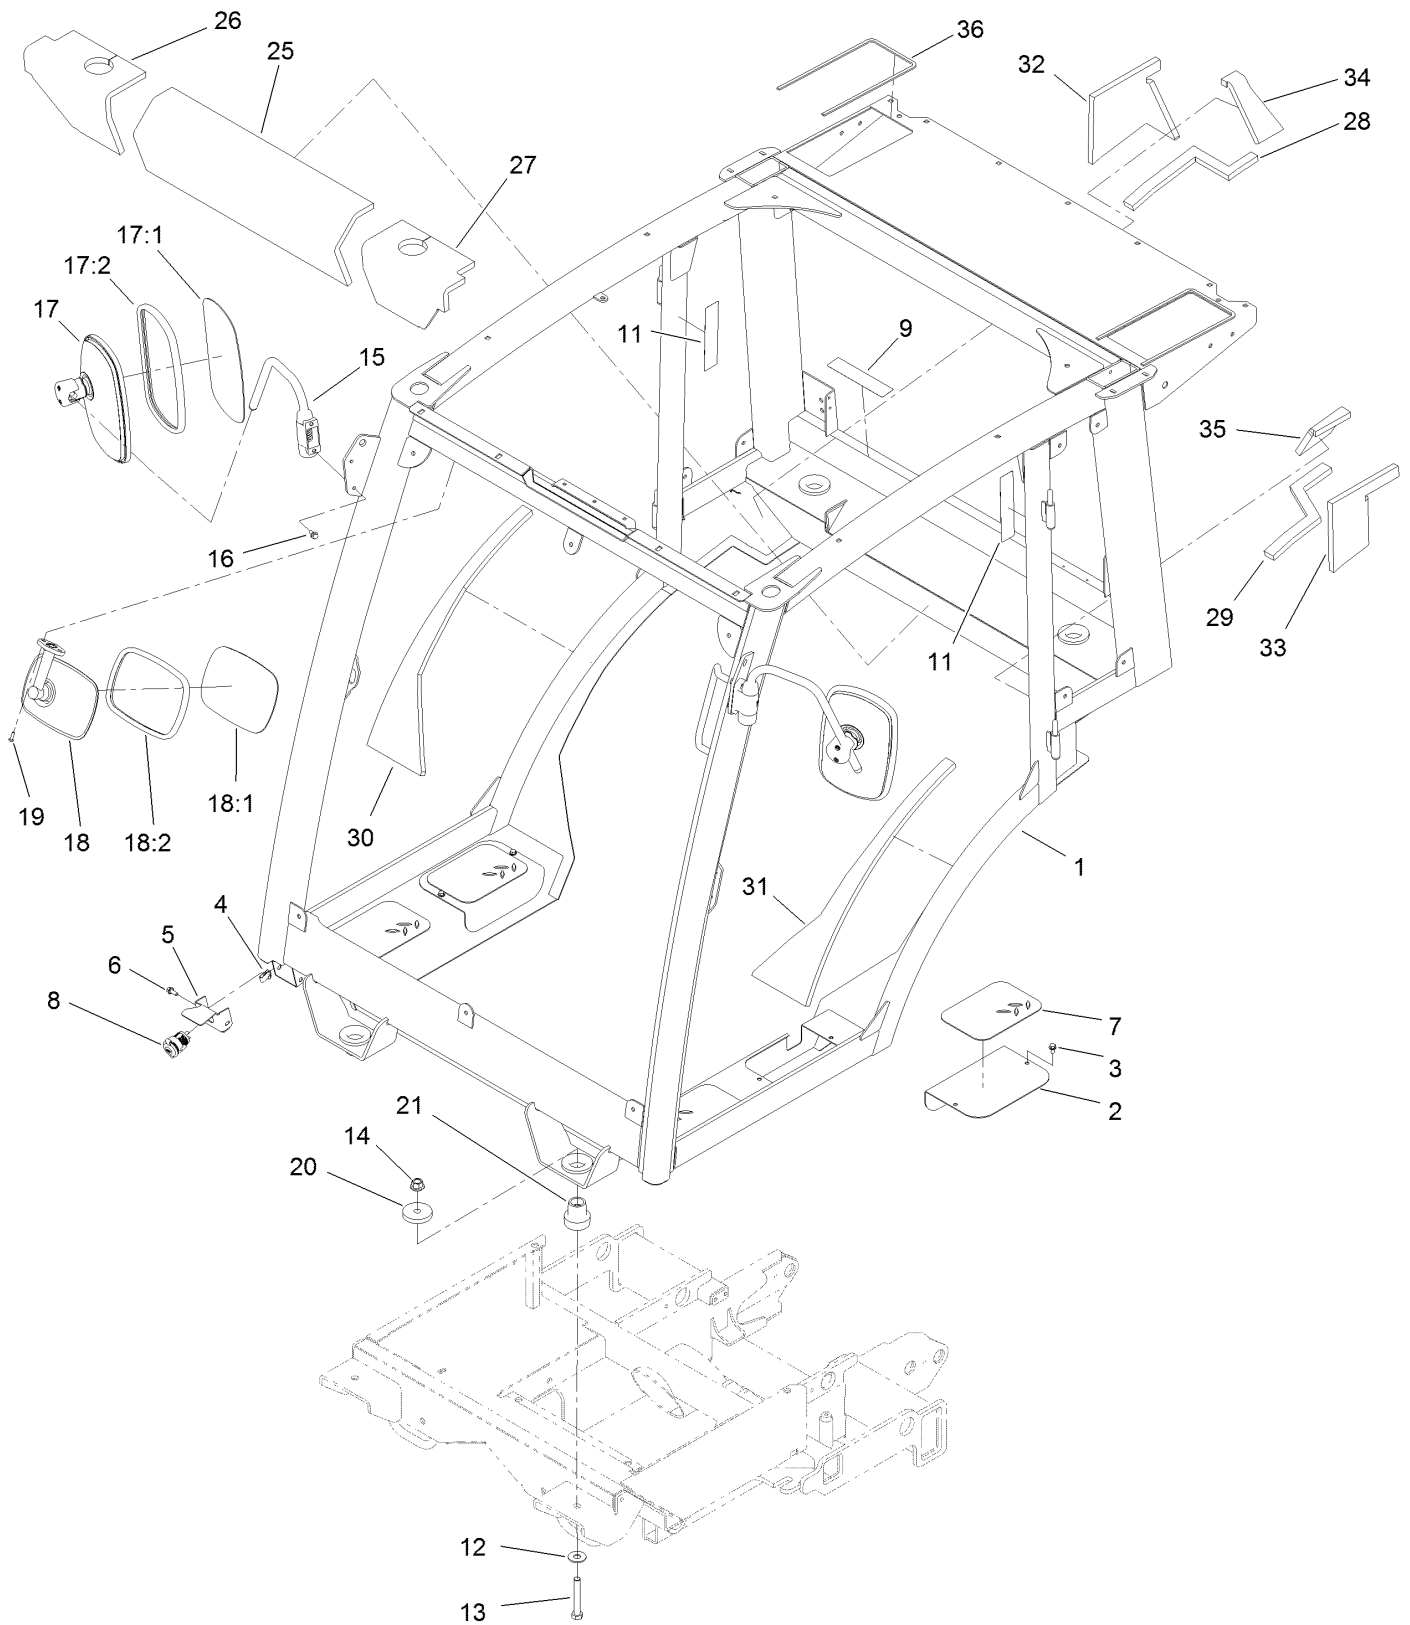


Frame, Mount and Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8601-03	1	Frame-Main	18:1		1	Mirror-Glass ●
2	125-9579-03	2	Cover-Access	18:2		1	Gasket ●
3	119-1065	4	Screw-Lock,HF	19	32144-32	2	Screw-PPH
4	107069	2	Clip	20	115-5519	2	Washer-Plain
5	125-9584-03	1	Cover-Switch, Power Point	21	110-5954	2	Mount-Center, Bonded
6	3234-33	2	Screw-HHF	25	130-0559	1	Foam-Interior, Rear Center
7	125-9582	4	Pad-Step	26	125-9594	1	Foam-Interior, Rear RH
8	109-9376	1	Receptacle-12V	27	130-0560	1	Foam-Interior, Rear LH
9	130-0611	1	Decal-Window, Pin	28	130-0613	1	Foam-Interior, RH Side Rear
11	130-5361	2	Decal-Warning	29	130-0617	1	Foam-Interior, LH Side Rear
12	3256-6	2	Washer-Flat	30	130-0612	1	Foam-Interior, RH Side Front
13	112-7264	2	Screw-HH				
14	99-5107	2	Nut-Lock	31	130-0616	1	Foam-Interior, LH Side Front
15	121-8275	2	Arm-Mirror, Side	32	130-0614	1	Foam-Interior, RH Side
16	33103-016	4	Screw-HHF	33	130-0618	1	Foam-Interior, LH Side
17	121-8341	2	Side Mirror ASM	34	130-0615	1	Foam-Interior, RH Cover
17:1		1	Mirror-Glass ●	35	130-0619	1	Foam-Interior, LH Cover
17:2		1	Gasket ●	36	130-0587	2	Seal-Foam, Roof Air Filter
18	121-8343	1	Interior Mirror ASM				

● Not serviced separately

Rear Mount and Seal Assembly

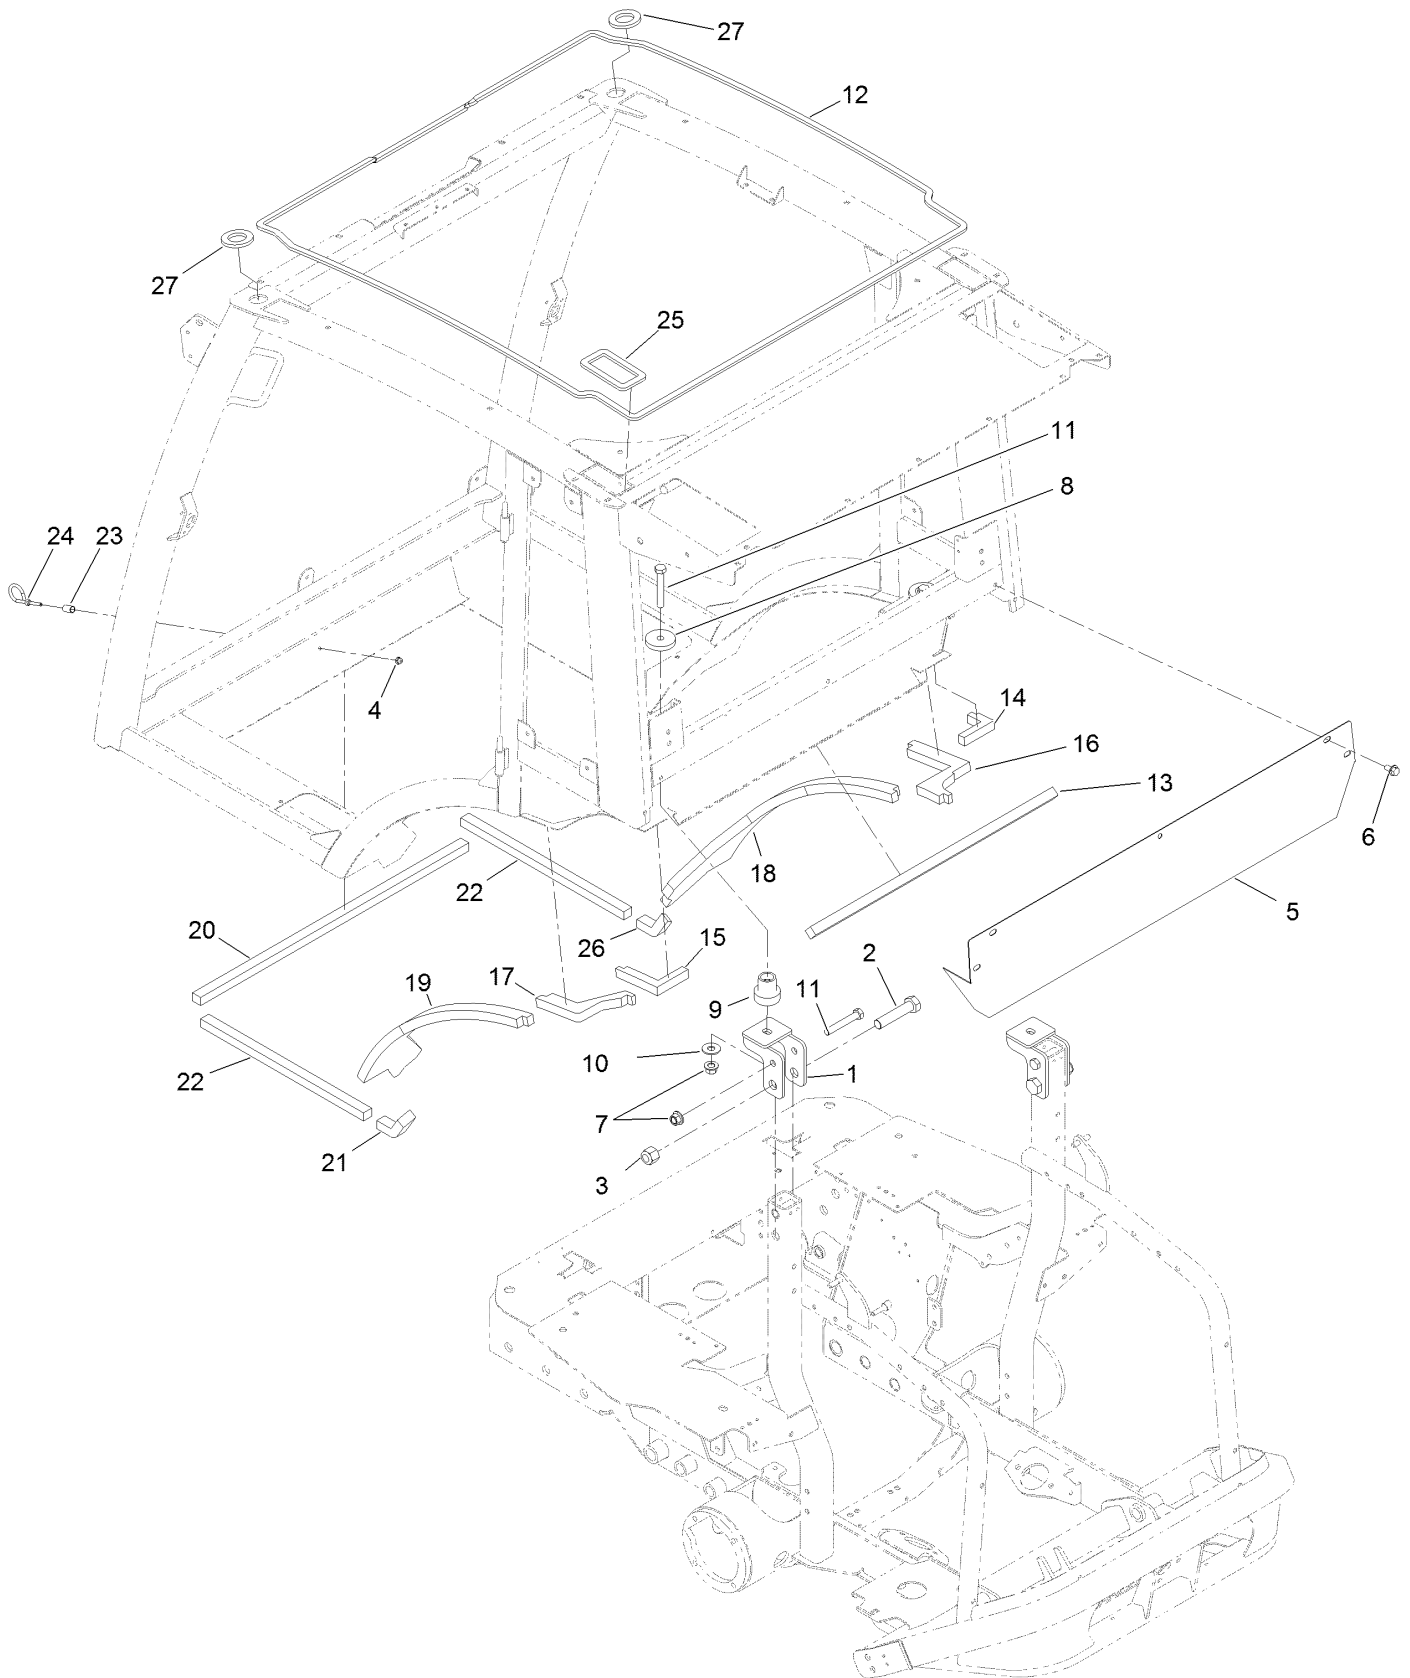

Rear Mount and Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9745-03	2	Mount-Rear	15	130-5467	1	Seal-Foam, LH Rear
2	328-5	2	Screw-HH	16	130-5466	1	Seal-Foam, RH Mid
3	3296-51	2	Nut-Lock, NI	17	130-5465	1	Seal-Foam, LH Mid
4	104-7201	1	Nut-HF, NI	18	130-5464	1	Seal-Foam, RH Tank
5	130-5882-03	1	Cover-Access, Hose	19	130-5463	1	Seal-Foam, LH Tank
6	110-9380	5	Screw-HWH	20	125-9585	1	Seal-Foam, Front
7	99-5107	4	Nut-Lock	21	130-5884	1	Seal-Foam, LH Side
8	115-5519	2	Washer-Plain	22	130-5883	2	Seal-Foam
9	110-5954	2	Mount-Center, Bonded	23	85-0290	1	Spacer-Pivot, Seat
10	3256-6	2	Washer-Flat	24	107-3908	1	Guide-Rope, Upper
11	112-7264	4	Screw-HH	25	130-5855	2	Seal-Tube, Rear
12	130-0586	1	Seal-Foam, Frame Roof	26	130-5885	1	Seal-Foam, RH Side
13	125-9587	1	Seal-Foam, Rear	27	133-0982	2	Tube-Seal, Front
14	130-5468	1	Seal-Foam, RH Rear				


This exploded view diagram illustrates the assembly of a refrigerator. The components are numbered as follows:

- 1**: Refrigerator body (main cabinet)
- 2**: Compressor
- 3**: Condenser coils
- 4**: Condenser fan
- 5**: Condenser fan motor
- 6**: Condenser fan guard
- 7**: Condenser fan bracket
- 8**: Condenser fan support
- 9**: Condenser fan nut
- 10**: Condenser fan bolt
- 11**: Condenser fan housing
- 12**: Condenser fan housing bracket
- 13**: Condenser fan housing nut
- 14**: Condenser fan housing bolt
- 15**: Condenser fan housing support
- 16**: Condenser fan housing bracket
- 16:2**: Condenser fan housing bracket (part 2)
- 16:3**: Condenser fan housing bracket (part 3)
- 20**: Condenser fan wiring
- 23**: Condenser fan housing (top)
- 24**: Condenser fan housing (bottom)
- 25**: Condenser fan housing (middle)
- 26**: Condenser fan housing (side)

Windshield Wiper and Air Filter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	119-4386	1	Harness-Wire, Power	16	125-7452	1	Wiper Motor ASM
3	121-8457	2	Filter-Air	16:2	3253-3	1	Washer-Lock
4	107069	2	Clip	16:3	33113-025	1	Screw-HH
5	98-8332	2	Knob	16:4	112-2844	2	Nut-HF
6	125-9825-03	2	Cover-Air, Fresh	17	125-7453	1	Arm-Wiper
7	3230-9	4	Screw-CARR	18	125-7454	1	Blade-Wiper
8	3230-22	13	Screw-CARR	18:1	47-2830	2	Screw
9	3256-3	17	Washer-Flat	18:2	43-5920	2	Washer-Lock, Spring
10	104-8300	17	Nut-HF, NI	20	99-7435	1	Relay
11	106-8737	2	Nut-Retainer	22	3290-378	6	Tie-Cable
12	130-5871	1	Bracket-Wiper	23	130-5661	2	Tube-Sleeve
13	32144-11	2	Screw-HWH	24	3229-30	4	Screw-CARR
14	32105-15	4	Screw-HWH	25	130-5854	2	Brace-Seal
15	104-7201	8	Nut-HF, NI	26	130-6068-03	1	Plate-Washer, Wiper Motor

Front Window, Door and Side Window Assembly

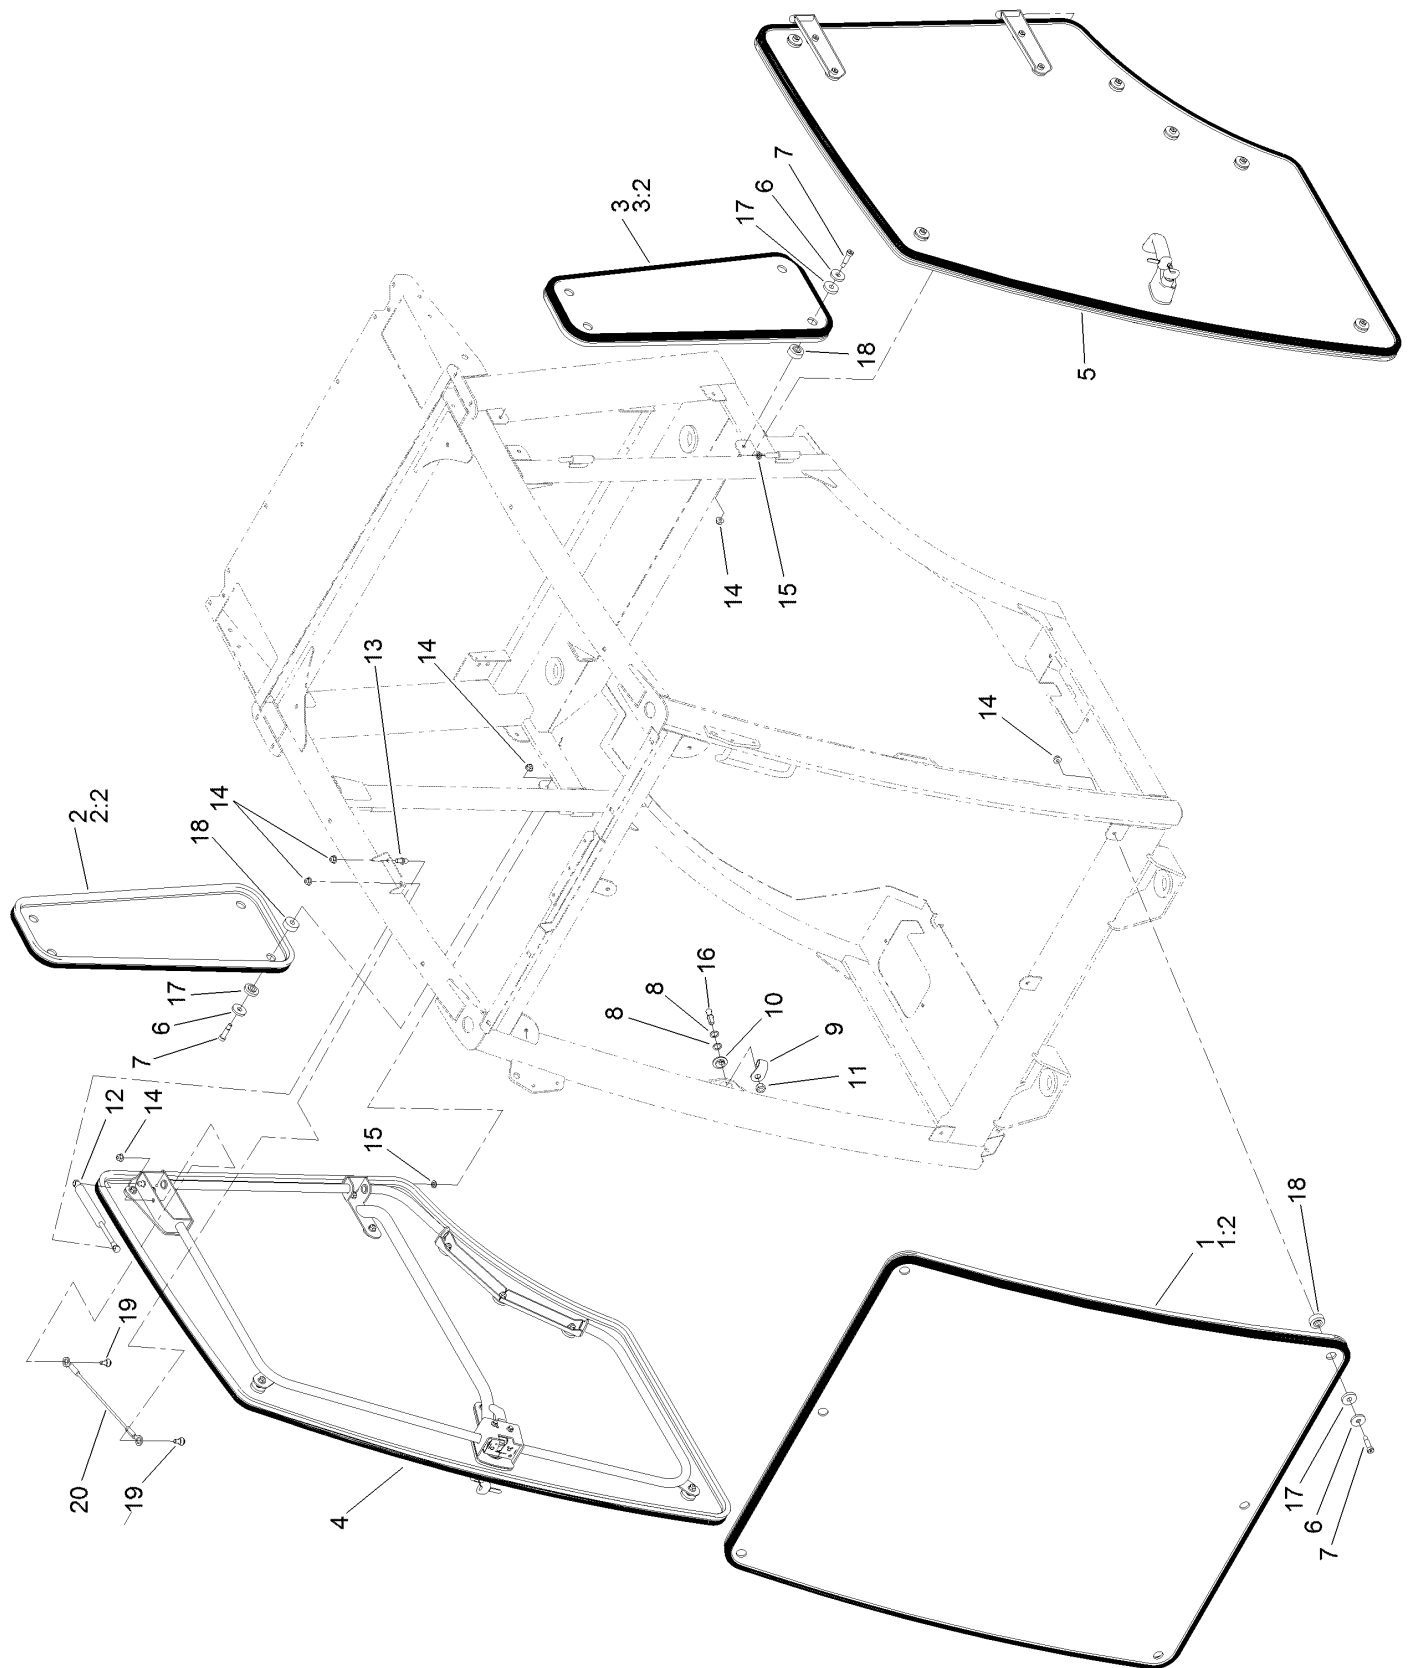

Front Window, Door and Side Window Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5670	1	Front Window ASM	10	125-9992	2	Adjuster-Stud
1:2	121-8608	1	Trim-Window, Front	11	106-0327	2	Nut-Hex
2	130-5671	1	RH Side Window ASM	12	130-6083	2	Spring-Gas, Door
2:2	121-8607	1	Trim-Window, Side	13	98-3104	2	Stud-Ball
3	130-5672	1	LH Side Window ASM	14	104-8300	20	Nut-HF, NI
3:2	121-8607	1	Trim-Window, Side	15	121-8441	4	Washer-Spacer
4		1	RH Door ASM ●	16	125-9993	2	Striker-Stud
5		1	LH Door ASM ●	17	125-9982	14	Bushing-Flange
6	130-5815	14	Washer-Backup	18	125-9537	14	Bushing-Flange
7	125-9521	14	Screw-Shldr HSH	19	120-9471	4	Bolt-Shoulder
8	73-0040	4	Washer-Thrust	20	130-5726	2	Lanyard
9	121-8393	2	Guard-Striker				


● Not serviced separately

This technical drawing is an exploded view of a vehicle chassis assembly, showing the relationship between various components. The main frame (2) is a large, curved metal structure. A front suspension arm (3) is shown at the bottom, connected to a lower control arm (14) and a steering knuckle (12). A rear suspension arm (5) is shown on the right, connected to a rear control arm (16) and a rear steering knuckle (11). A rear axle (19) is shown on the left, connected to a rear control arm (13:4, 13:5) and a rear steering knuckle (12). Various bolts (18) and nuts (14) are shown in their respective positions. The diagram includes dashed lines to indicate the assembly path and alignment of the parts.

Right-Hand Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9618-03	2	Hinge-Door, RH	13:4	121-8327	1	Washer
2	130-5674	1	RH Glass ASM	13:5	121-8328	1	Nut
2:2	121-8606	1	Trim-Door	13:6	121-8627	1	Cylinder-Mounting, End
3	121-8625-03	1	Frame-Door, RH	13:7	121-8323	1	Grommet-Mounting, Small
5	104-8300	11	Nut-HF, NI	13:8	125-9531	1	Key-Set
7	125-9676	6	Washer-Backup	14	33103-025	1	Screw-HHF
9	125-9520	10	Screw-Shoulder, HSH	15	121-8395	1	Plate-Support, Latch
11	98-3104	1	Stud-Ball	16	3234-21	2	Screw-HHF
12	121-8390	1	Latch-RH	17	104-7201	2	Nut-HF, NI
13	121-8630	1	Handle ASM	18	125-9982	20	Bushing-Flange
13:2	121-8628	1	Cylinder-Mounting, Key	19	121-8331	1	Gasket-Handle
13:3	121-8322	1	Grommet-Mounting, Large				


Left-Hand Door Assembly

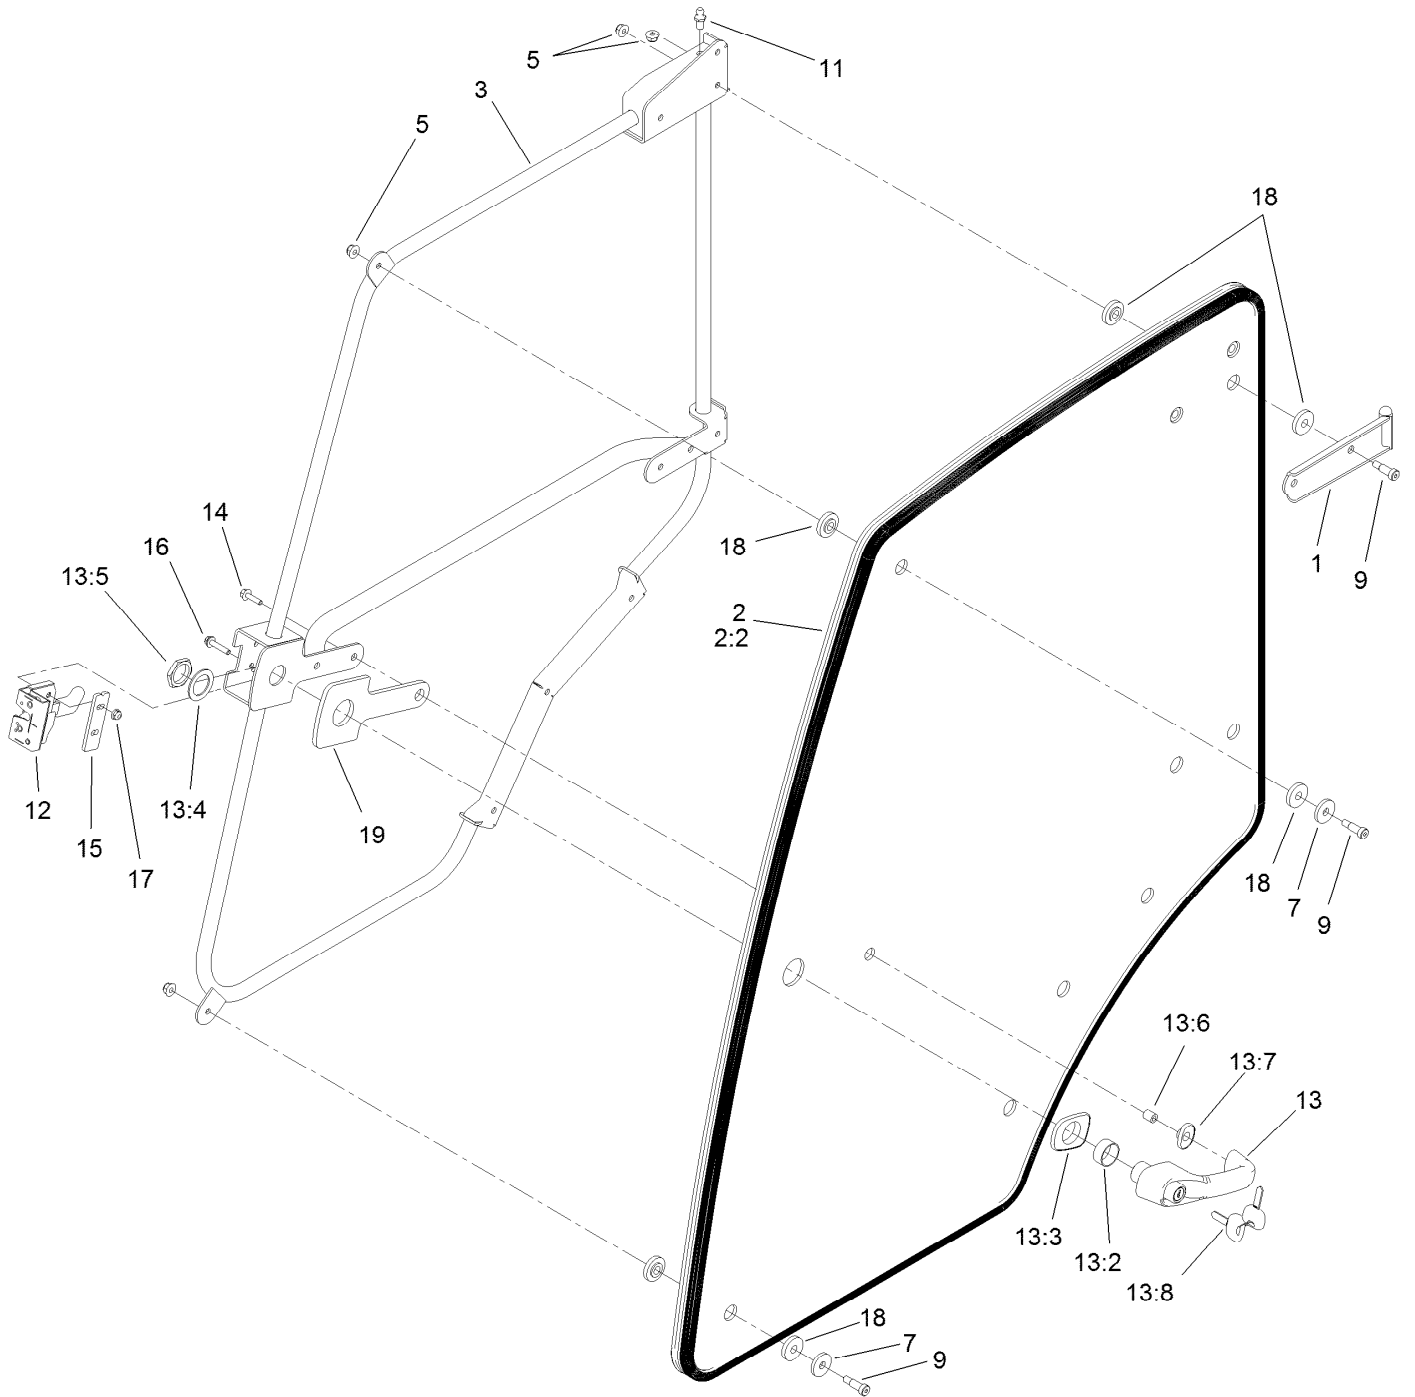

Left-Hand Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9619-03	2	Hinge-Door, LH	13:4	121-8327	1	Washer
2	130-5675	1	LH Glass ASM	13:5	121-8328	1	Nut
2:2	121-8606	1	Trim-Door	13:6	121-8627	1	Cylinder-Mounting, End
3	121-8605-03	1	Frame-Door, LH	13:7	121-8323	1	Grommet-Mounting, Small
5	104-8300	11	Nut-HF, NI	13:8	125-9531	1	Key-Set
7	125-9676	6	Washer-Backup	14	33103-025	1	Screw-HHF
9	125-9520	10	Screw-Shoulder, HSH	15	121-8395	1	Plate-Support, Latch
11	98-3104	1	Stud-Ball	16	3234-21	2	Screw-HHF
12	121-8391	1	Latch-LH	17	104-7201	2	Nut-HF, NI
13	121-8630	1	Handle ASM	18	125-9982	20	Bushing-Flange
13:2	121-8628	1	Cylinder-Mounting, Key	19	121-8331	1	Gasket-Handle
13:3	121-8322	1	Grommet-Mounting, Large				


Rear Window Assembly

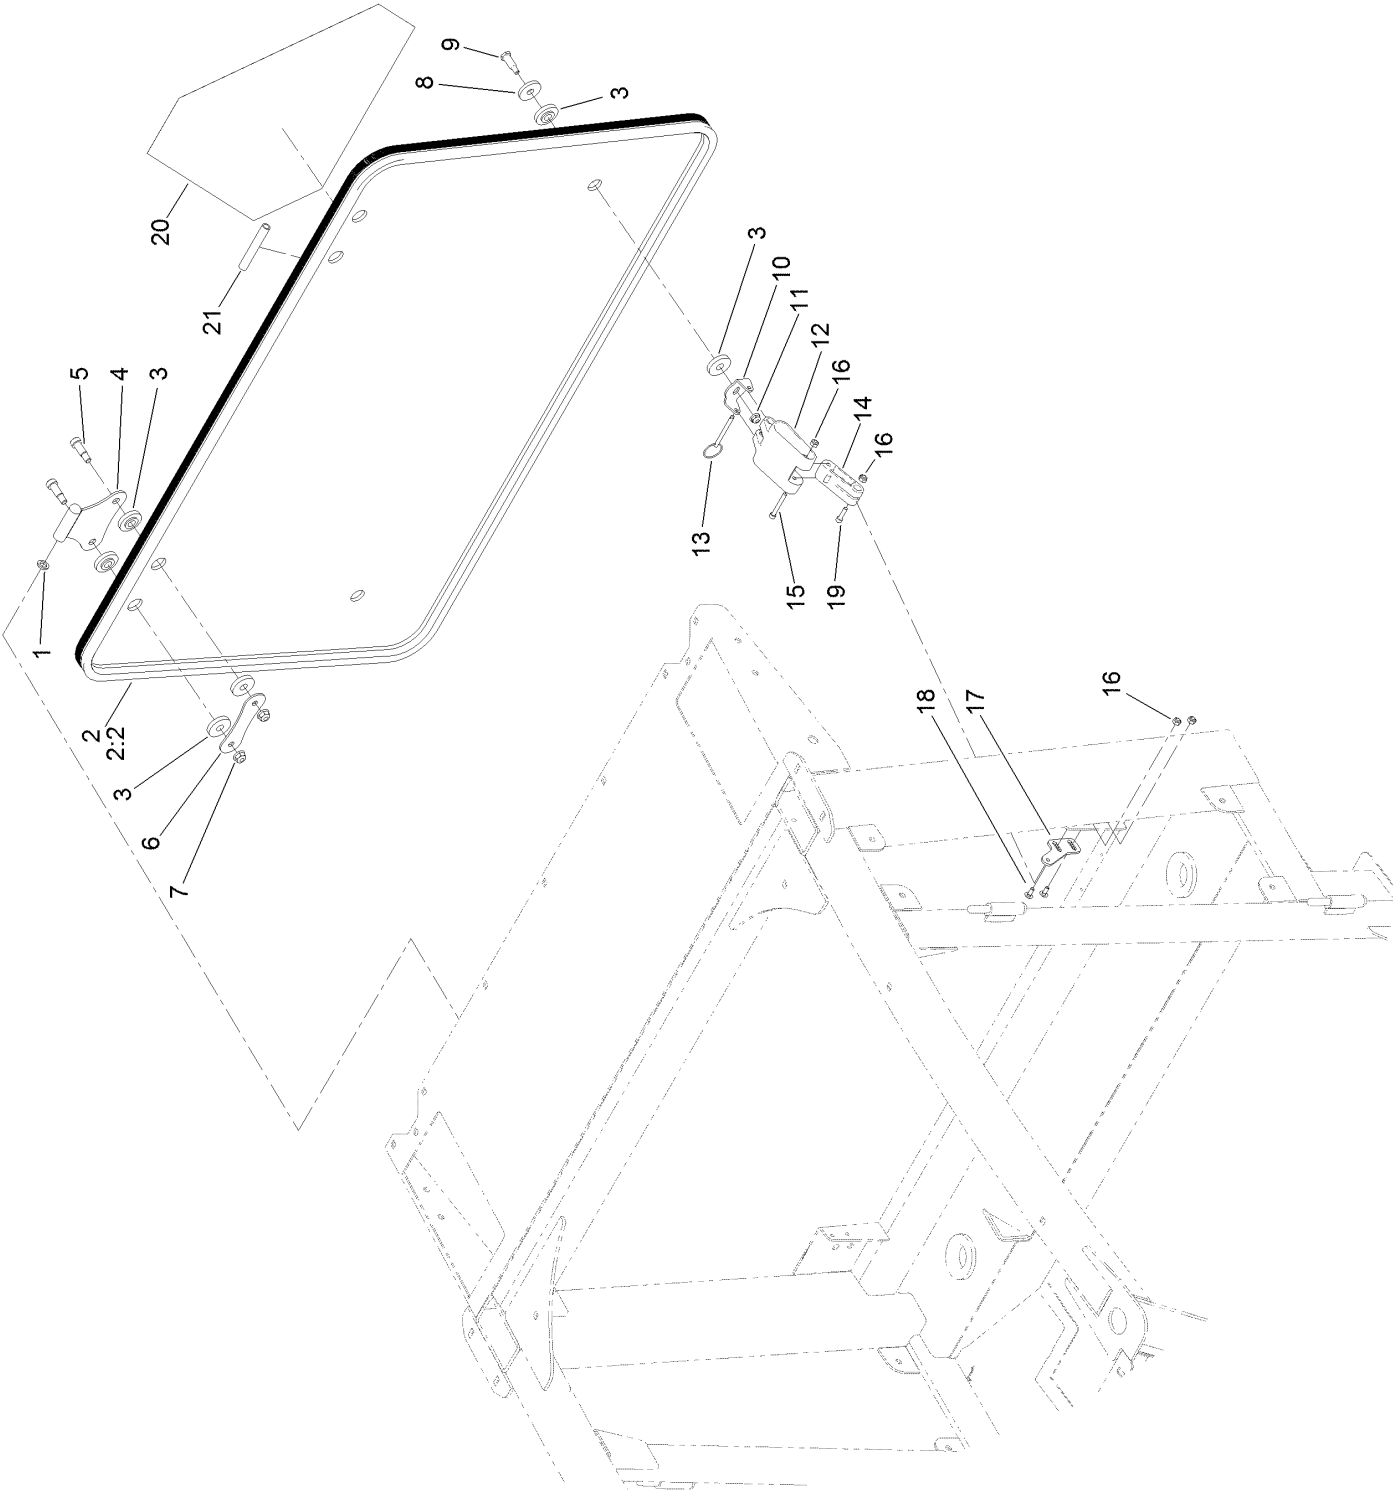

Rear Window Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8441	2	Washer-Spacer	11	104-7201	2	Nut-HF, NI
2	130-5673	1	Rear Window ASM	12	125-9792	2	Handle-Window
2:2	121-8609	1	Trim-Window, Rear	13	127-9850	2	Pin-Release, Quick
3	125-9982	12	Bushing-Flange	14	125-9793	2	Link-Window
4	121-8535-03	2	Hinge-Window	15	3274-59	2	Screw-HSH
5	125-9520	4	Screw-Shoulder, HSH	16	120-9681	8	Nut-Lock, NI
6	127-9933	2	Plate-Backer, Windshield	17	130-0590	2	Mount-Tab
7	104-8300	4	Nut-HF, NI	18	1-807513	4	Bolt-CARR
8	125-9676	2	Washer-Backup	19	3274-14	2	Screw-HSH
9	119-9812	2	Bolt-Shoulder	20	120-0250	1	Decal-Warning
10	125-9987	2	Mount-Latch	21	130-5578	2	Tubing-Seal, Rubber


Hose and Washer Bottle Assembly

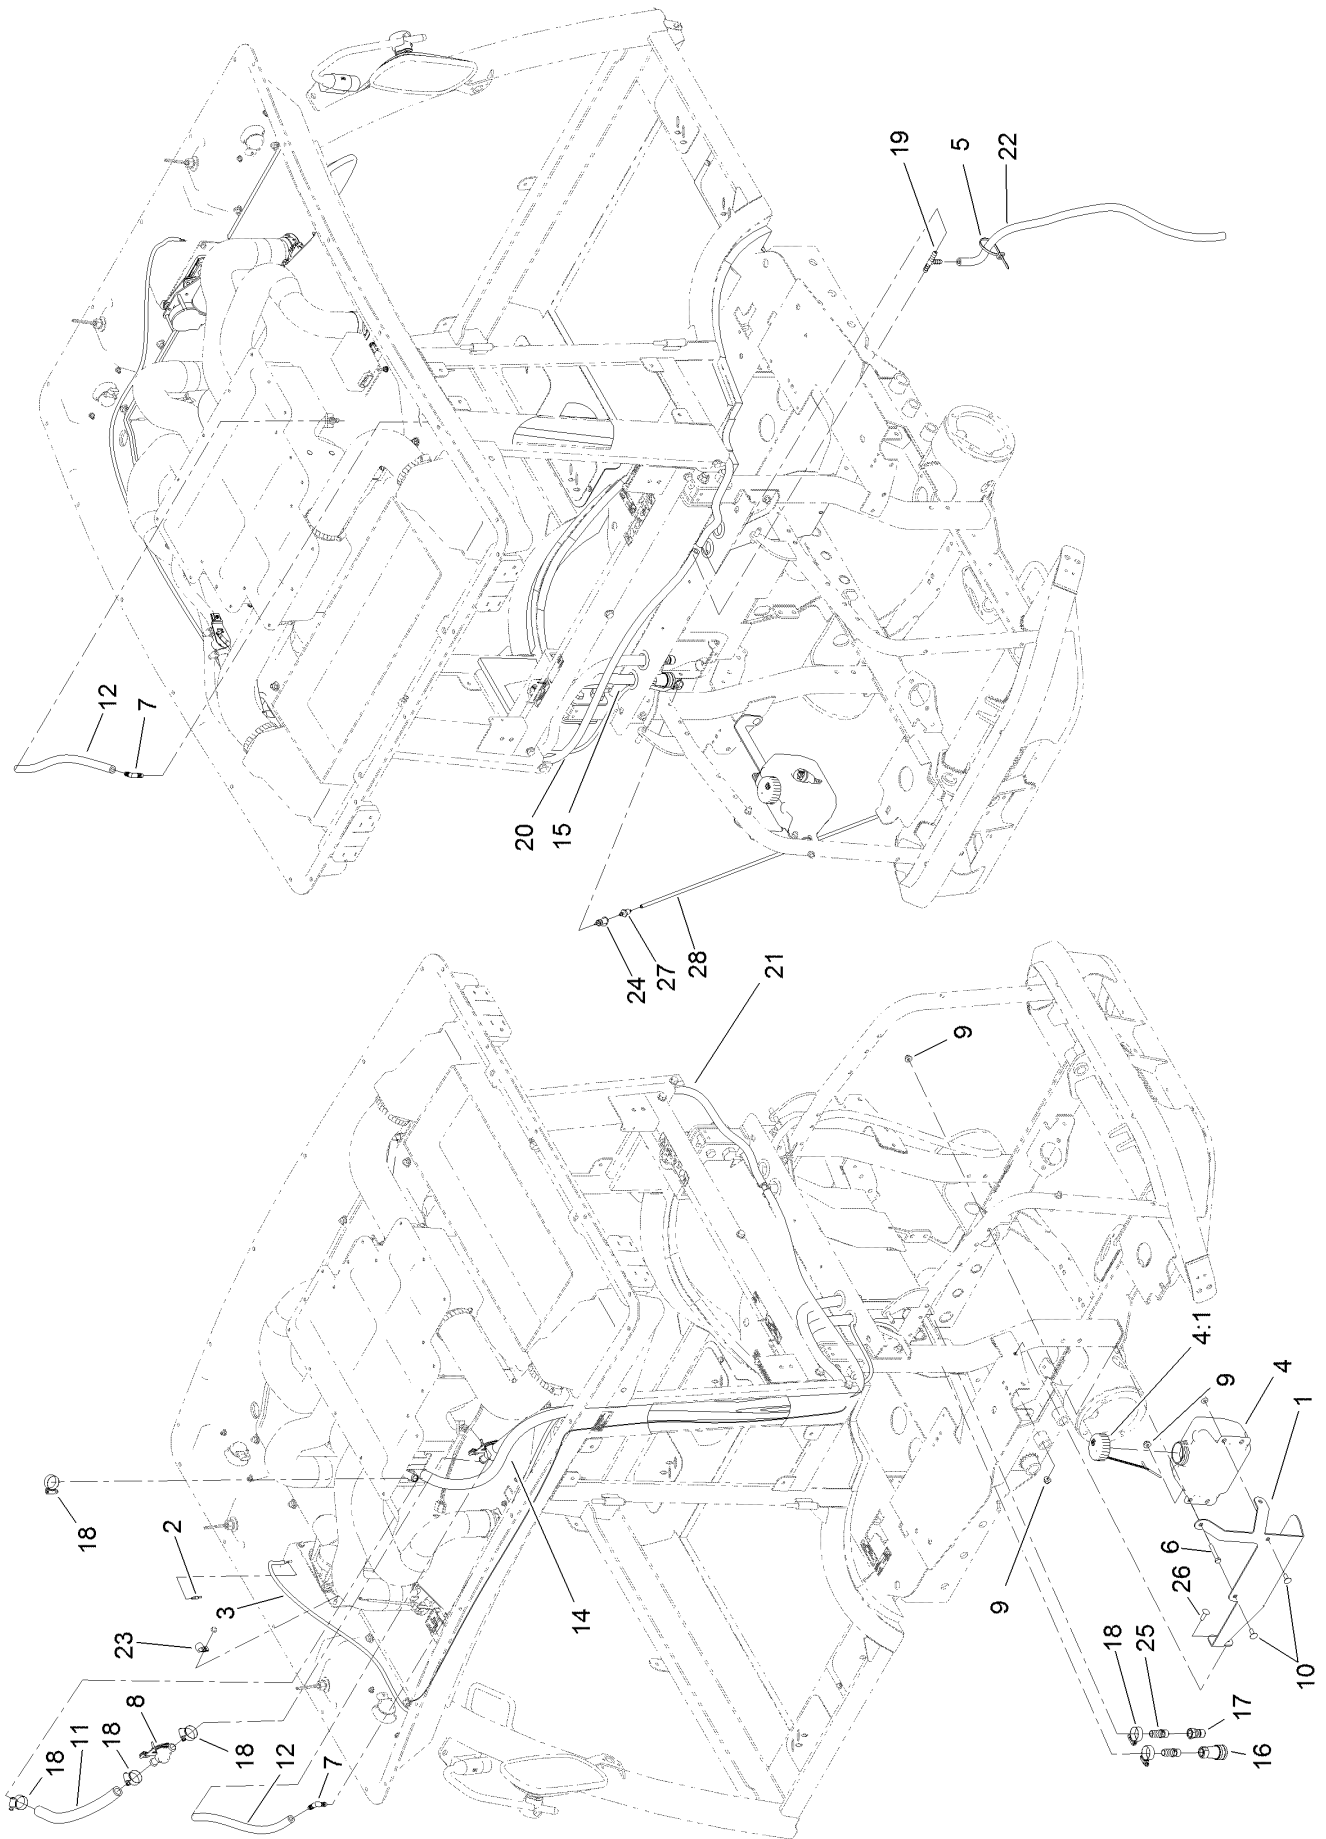

Hose and Washer Bottle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5890-03	1	Bracket-Bottle, Washer	15	127-9908	1	Hose-Heater
2	127-9905	1	Fitting-Hose, Barb	16	125-9679	1	Coupler-Female
3	127-9902	1	Hose-Washer Fluid	17	125-9680	1	Coupler-Male
4	125-5257	1	Tank-Fluid, Washer	18	2412-129	6	Clamp-Hose
4:1	125-5258	1	Lid-Tank, Washer Fluid	19	127-9930	1	Fitting-Tee
5	3290-378	1	Tie-Cable	20	127-9909	1	Hose-Drain
6	322-10	2	Screw-HH	21	127-9927	1	Hose-Drain
7	130-0578	2	Fitting-Barb, 90 DEG	22	130-5498	1	Hose-Drain
8	120-4947	1	Valve-Heater	23	2412-73	1	Clamp-R
9	104-8300	5	Nut-HF, NI	24	130-5795	1	Fitting-Straight
10	3230-23	2	Bolt-CARR	25	117-9410	2	Fitting-Straight
11	125-9706	1	Hose-Heater	26	3230-22	1	Screw-CARR
12	125-9865	2	Hose-Drain	27	130-5794	1	Fitting-Straight
14	127-9907	1	Hose-Heater	28	130-6114	1	Hose-Washer Fluid


Hose and Washer Bottle Assembly (Tier 4)

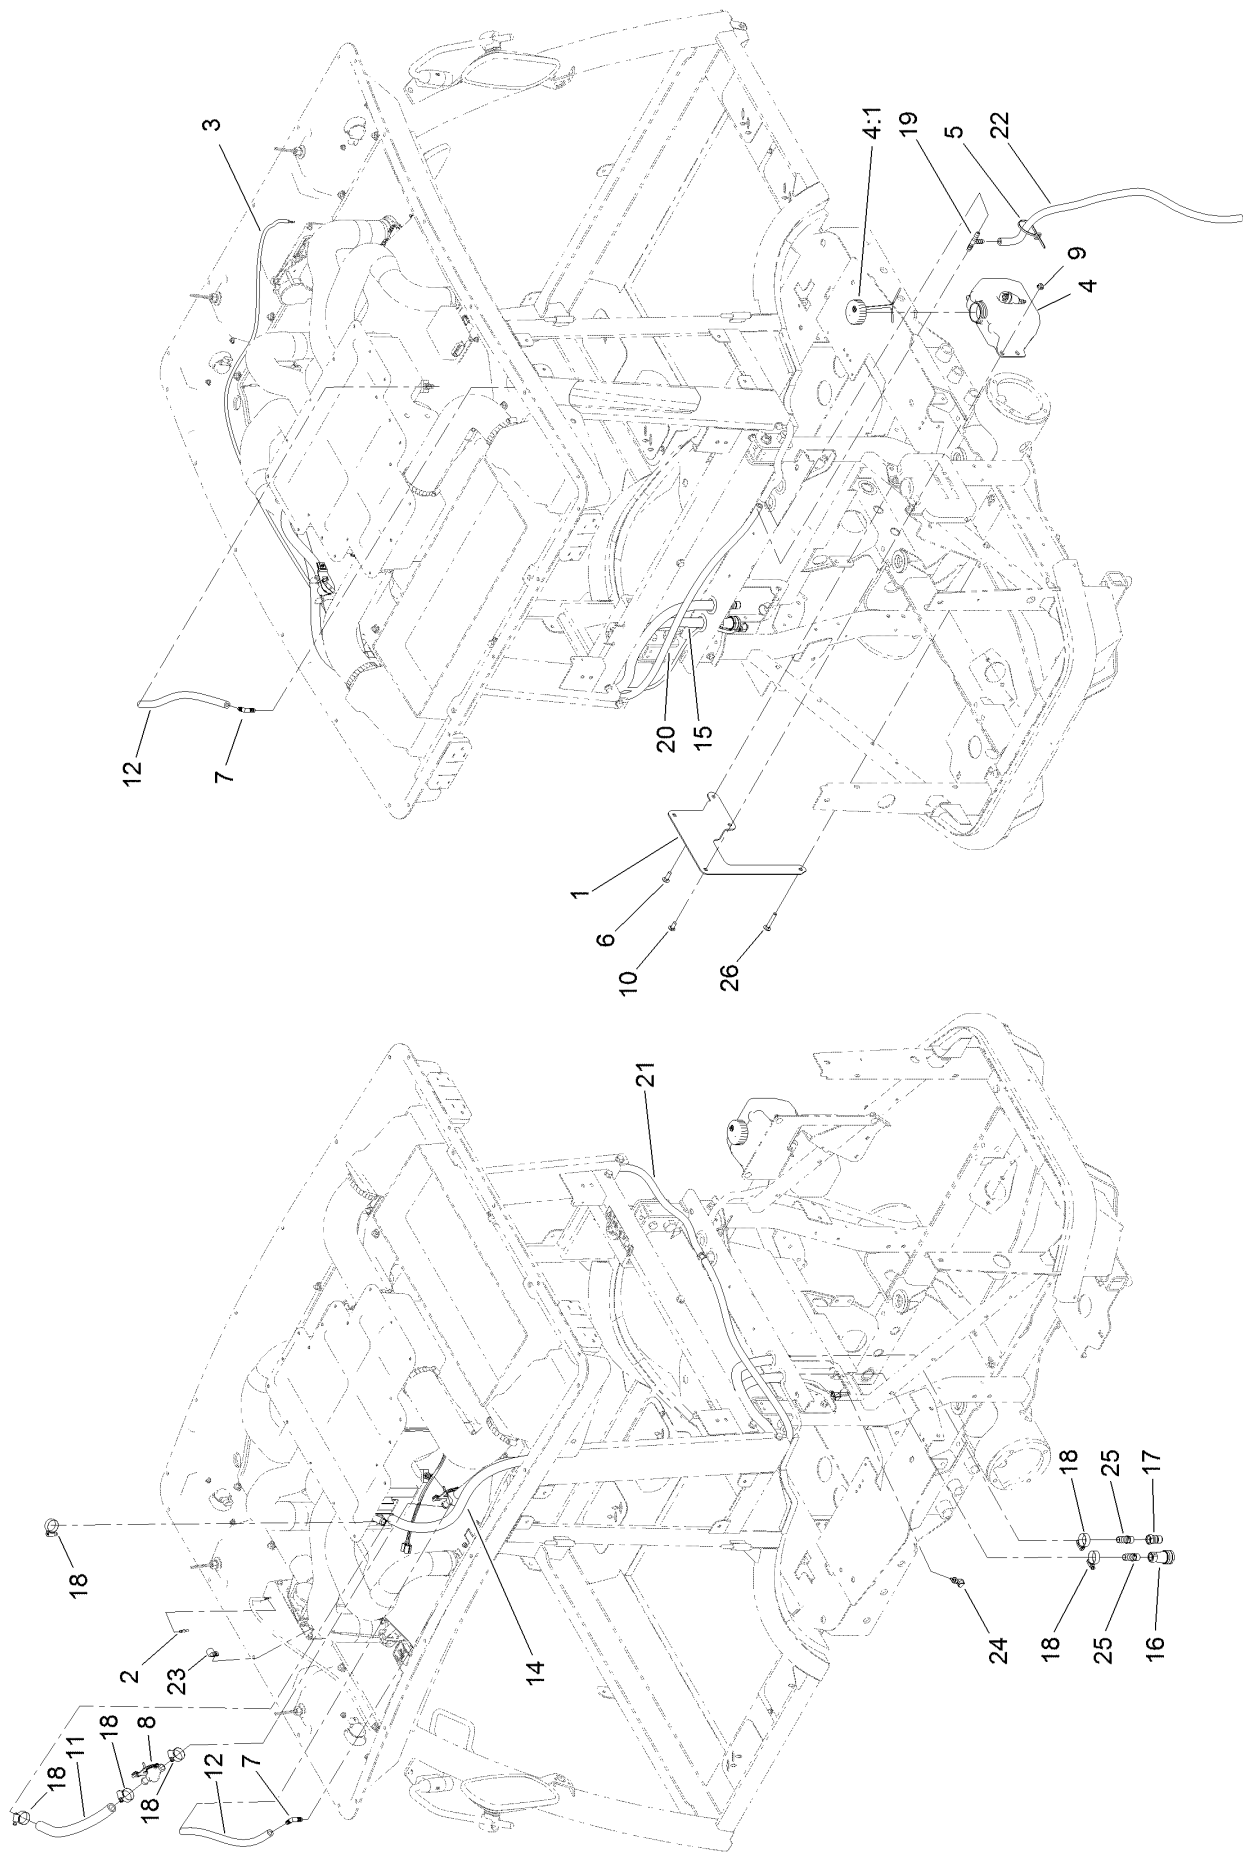

Hose and Washer Bottle Assembly (Tier 4) (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-0298-03	1	Bracket-Bottle, Washer Fluid	14	127-9907	1	Hose-Heater
2	127-9905	1	Fitting-Hose, Barb	15	127-9908	1	Hose-Heater
3	127-9902	1	Hose-Washer Fluid	16	125-9679	1	Coupler-Female
4	125-5257	1	Tank-Fluid, Washer	17	125-9680	1	Coupler-Male
4:1	125-5258	1	Lid-Tank, Washer Fluid	18	2412-129	6	Clamp-Hose
5	3290-378	1	Tie-Cable	19	127-9930	1	Fitting-Tee
6	3230-2	2	Bolt-CARR	20	127-9909	1	Hose-Drain
7	130-0578	2	Fitting-Barb, 90 DEG	21	127-9927	1	Hose-Drain
8	120-4947	1	Valve-Heater	22	130-5498	1	Hose-Drain
9	104-8300	5	Nut-HF, NI	23	2412-73	1	Clamp-R
10	3230-23	2	Bolt-CARR	24	130-5795	1	Fitting-Straight
11	125-9706	1	Hose-Heater	25	117-9410	2	Fitting-Straight
12	125-9865	2	Hose-Drain	26	3230-6	1	Bolt-CARR

Roof, Heat Mixing Box and Headliner Assembly

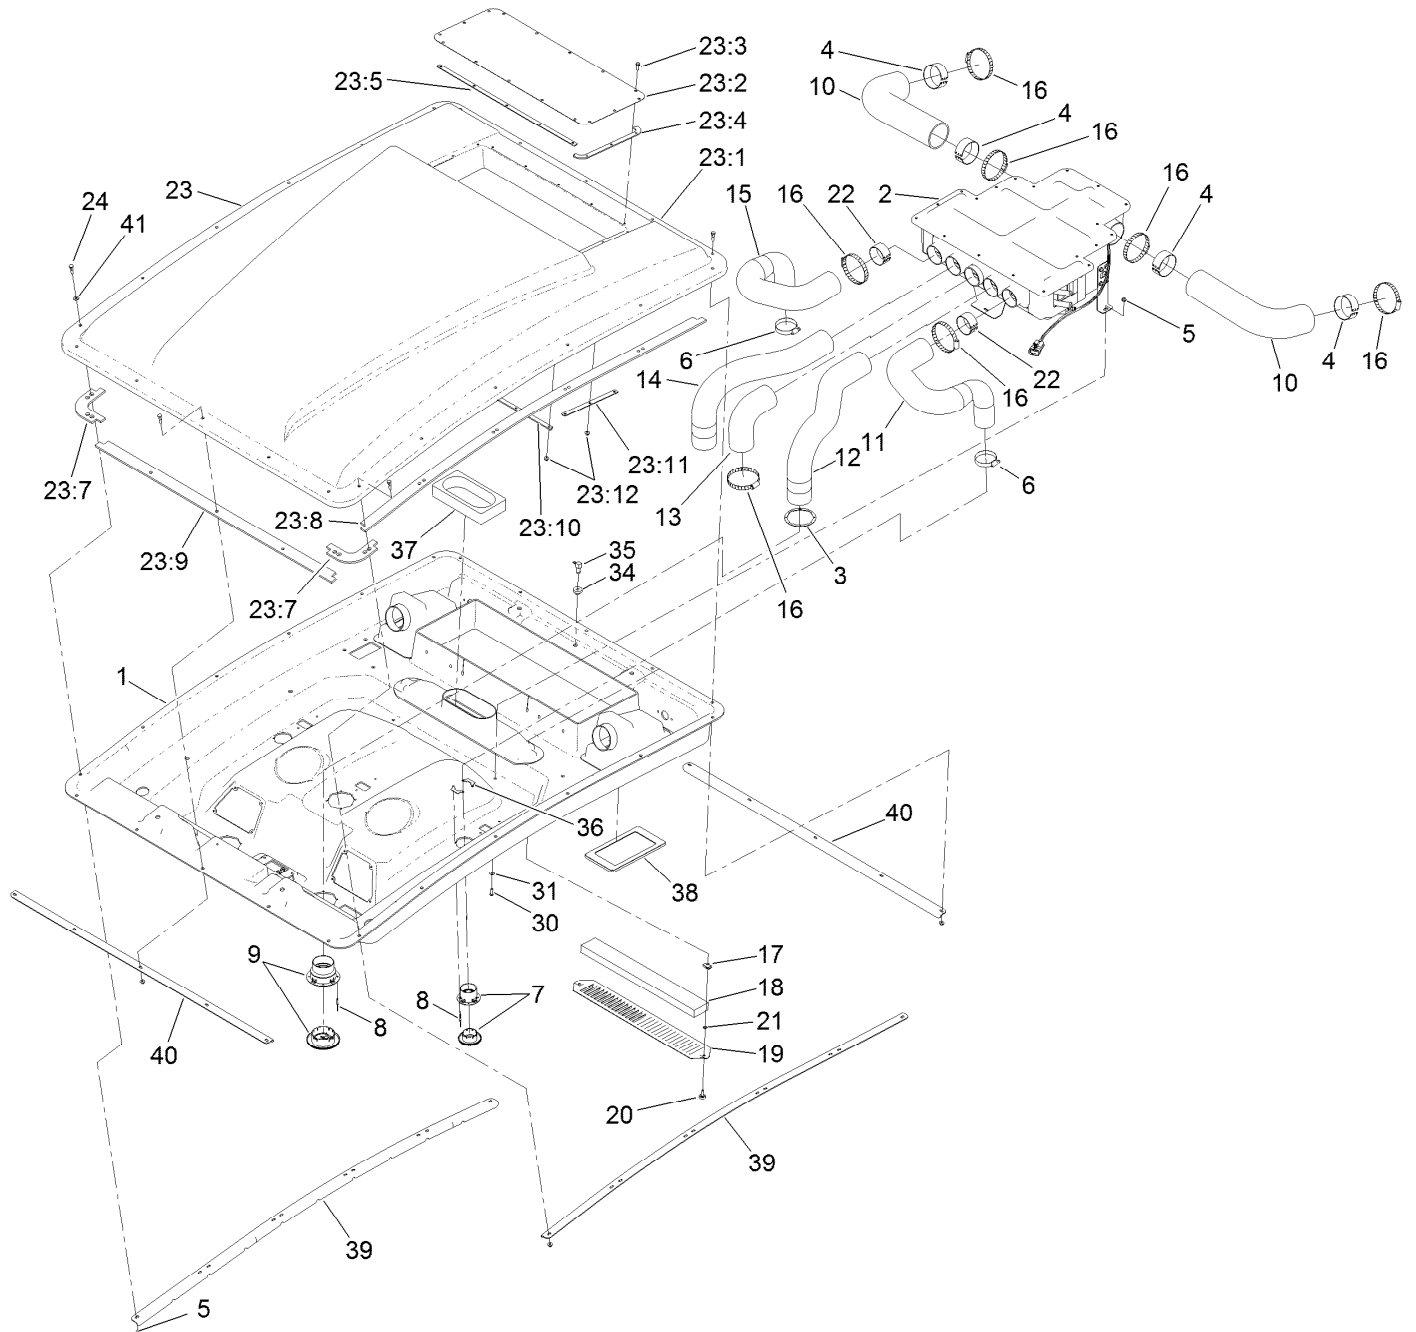


Roof, Heat Mixing Box and Headliner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8470	1	Headliner	23		1	Roof ASM ●
2	121-8603	1	Heat Mixing Box ASM	23:1	125-9607	1	Roof
3	130-0558	3	Backplate-Rivet	23:2	125-9527-03	1	Cover-Roof
4	130-5939	4	Tube-Support	23:3	32105-15	16	Screw-HWH
5	104-7201	24	Nut-HF, NI	23:4	132-3668	2	Seal-Cover, Short Side
6	2412-130	2	Clamp-Hose	23:5	132-3669	2	Seal-Cover, Long Side
7	130-0455	2	Louver-Round, Snap-In	23:7	130-5961	4	Seal-Corner
8	125-7503	20	Rivet-Pop	23:8	130-5960	2	Seal-Side
9	130-0465	3	Louver-Round, Snap-In (4 Inch)	23:9	130-5962	2	Seal-Front, Rear
10	121-8473	2	Hose-Intake, Fresh Air	23:10	132-3670-03	2	Strap-Roof, Long
11	130-0440	1	Hose-Vent, LH	23:11	132-3671-03	2	Strap-Roof, Short
12	121-8477	1	Hose-Vent, Defrost (LH)	23:12	104-7201	16	Nut-HF, NI
13	130-0437	1	Hose-Vent, Center	24	119-3301	22	Bolt-Pivot, Eccentric
14	121-8478	1	Hose-Vent, Defrost (RH)	30	3274-69	2	Screw-HSBH
15	130-0441	1	Hose-Vent, RH	31	3256-1	2	Washer-Flat
16	2412-110	7	Clamp-Band/Screw	34	46-6560	1	Bushing
17	107069	2	Clip	35	104-5228	1	Fitting-Elbow, 90 DEG
18	125-9532	1	Filter-Cab, Inside	36	130-0445	4	Backplate-Rivet
19	125-9604-03	1	Plate-Cover, Recirculation	37	130-0444	1	Foam-Inlet, Airbox
20	125-7438	2	Knob-Screw, Thumb	38	132-3474	2	Insert-Seal, Filter
21	106-8737	2	Nut-Retainer	39	132-1461-03	2	Strap-Cab, Side
22	130-5938	2	Tube-Support	40	132-1462-03	2	Strap-Cab
				41	3256-74	22	Washer-Flat

● Not serviced separately


Headliner, Switch and Control Assembly

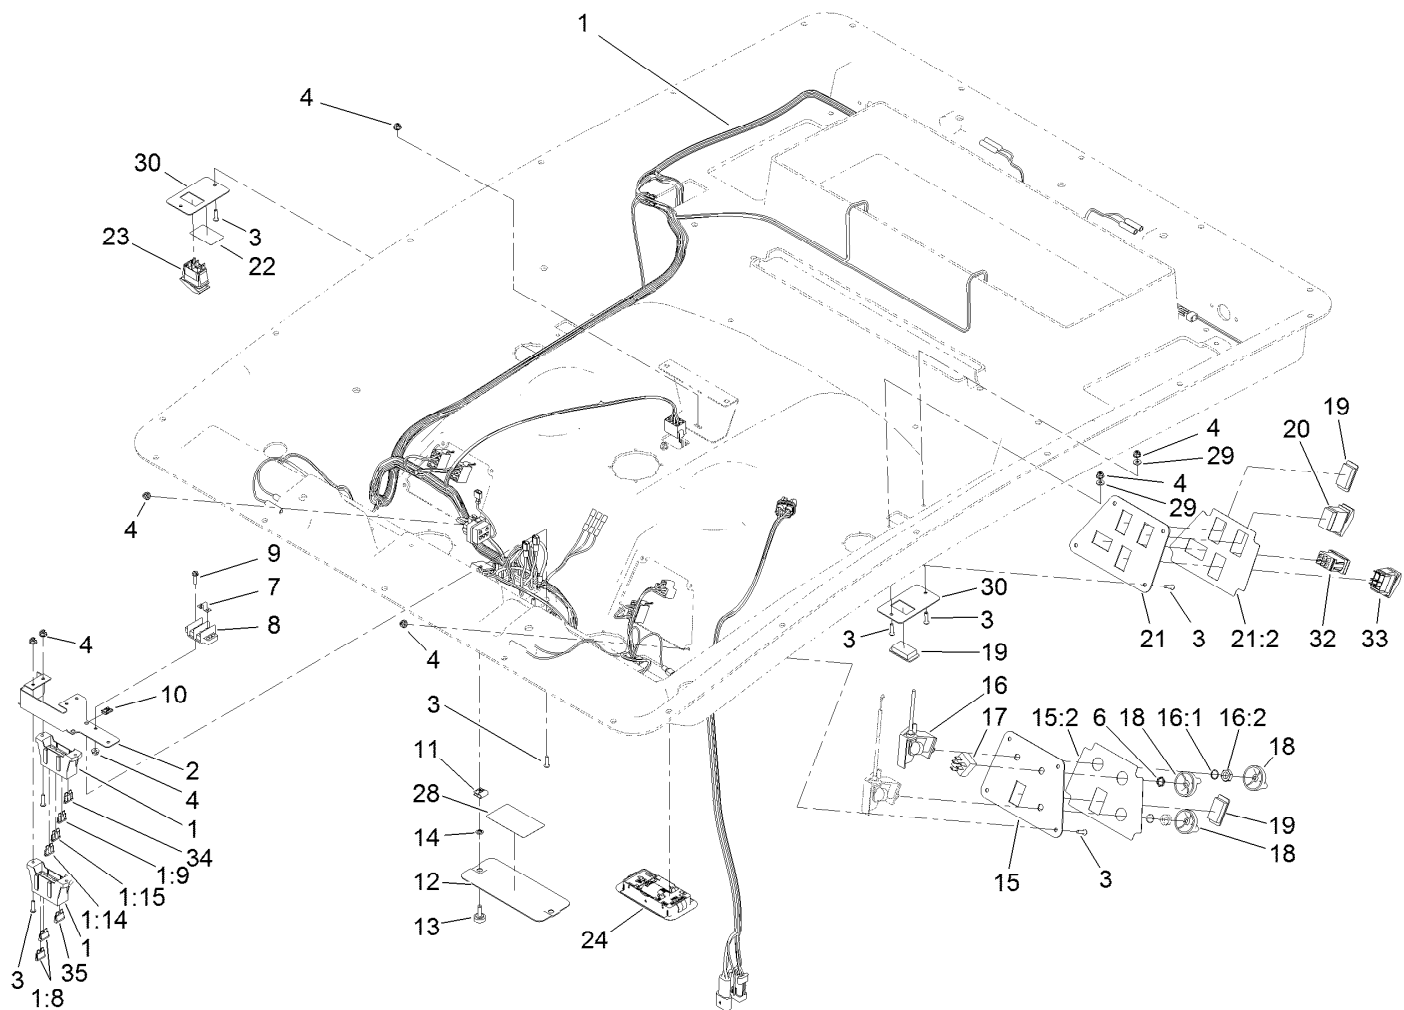

Headliner, Switch and Control Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-0723	1	Harness-Wire, Headliner	16:1	3254-20	1	Washer-Lock, Int
1:8	109355	2	Fuse-Blade, 15 Amp	16:2	3220-4	1	Nut-Jam
1:9	109103	1	Fuse-Blade, 30 Amp	17	122-0150	1	Switch, Rotary
1:14	109101	1	Fuse-Blade, 20 Amp	18	125-9510	3	Knob-Control
1:15	109102	1	Fuse-Blade, 25 Amp	19	99-7420	3	Plug-Hole
2	125-9606-03	1	Bracket-Fuse Block	20	95-8999	1	Switch-Rocker, On-None-On
3	104-2408	20	Screw-HSBH	21	125-9657	1	Panel-Light
4	120-4578	18	Nut-HF	21:2	125-9659	1	Decal, Lights
6	130-0588	1	Nut-Switch	22	125-9688	1	Decal-Washer
7	42863	1	Strip-Jumper	23	119-8355	1	Switch-Rocker
8	42862	1	Block-Terminal, Ground	24	125-7437	1	Light-Dome
9	32105-13	2	Screw-HWH	28	132-3600	1	Decal-Panel, Fuse
10	107-1013	4	Nut-Speed	29	3256-14	4	Washer-Flat
11	609900	2	Nut-Speed	30	130-0436	2	Panel-Switch
12	125-9603-03	1	Plate-Cover, Fuse	32	107-8034	1	Switch-Rocker, On-Off-On
13	125-7438	2	Knob-Screw, Thumb	33	119-7769	1	Switch-Rocker, On/None/On
14	106-8737	2	Nut-Retainer	34	109102	1	Fuse-Blade, 25 Amp
15	121-8481	1	Panel-Air/Heat	35	109355	1	Fuse-Blade, 15 Amp
15:2	121-8378	1	Decal, Air/Heat				
16	125-9677	1	Control-Rotary, Linear				

Rear Lamp, Work Light and Warning Light Assembly

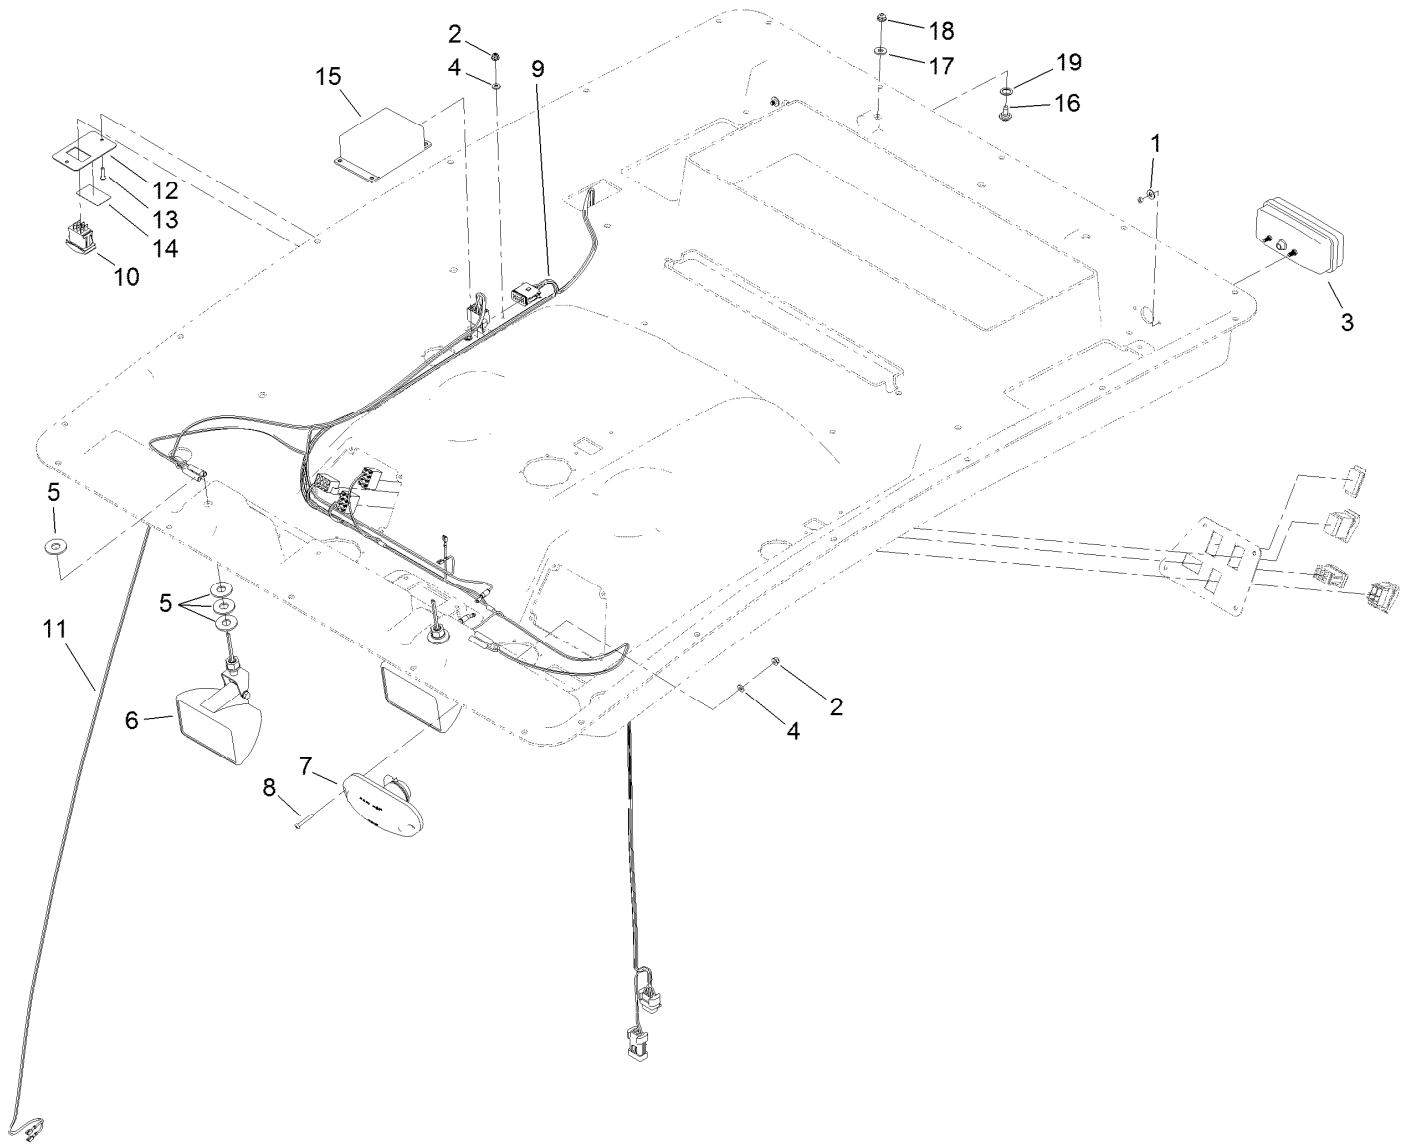


Rear Lamp, Work Light and Warning Light Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3256-1	4	Washer-Flat	11	122-0158	1	Harness-Wire, Power Point
2	120-4578	6	Nut-HF	12	130-0436	1	Panel-Switch
3	119-8093	2	Tail Light ASM	13	104-2408	2	Screw-HSBH
4	3256-14	6	Washer-Flat	14	130-0457	1	Decal-Power Point
5	3256-6	8	Washer-Flat	15	105-4515	1	Flasher-Rate, Dual
6	115-8883	2	Light-Work	16	92-9698	2	Screw-Shoulder
7	121-8355	2	Light-Turn And Warning, Front	17	3256-2	2	Washer-Flat
8	104-1452	4	Screw-PPH	18	104-7201	2	Nut-HF, NI
9	122-0180	1	Harness-Wire	19	94-8196	2	Washer-Nylon
10	100-1535	1	Switch-Rocker, (On)-Off-(On)				

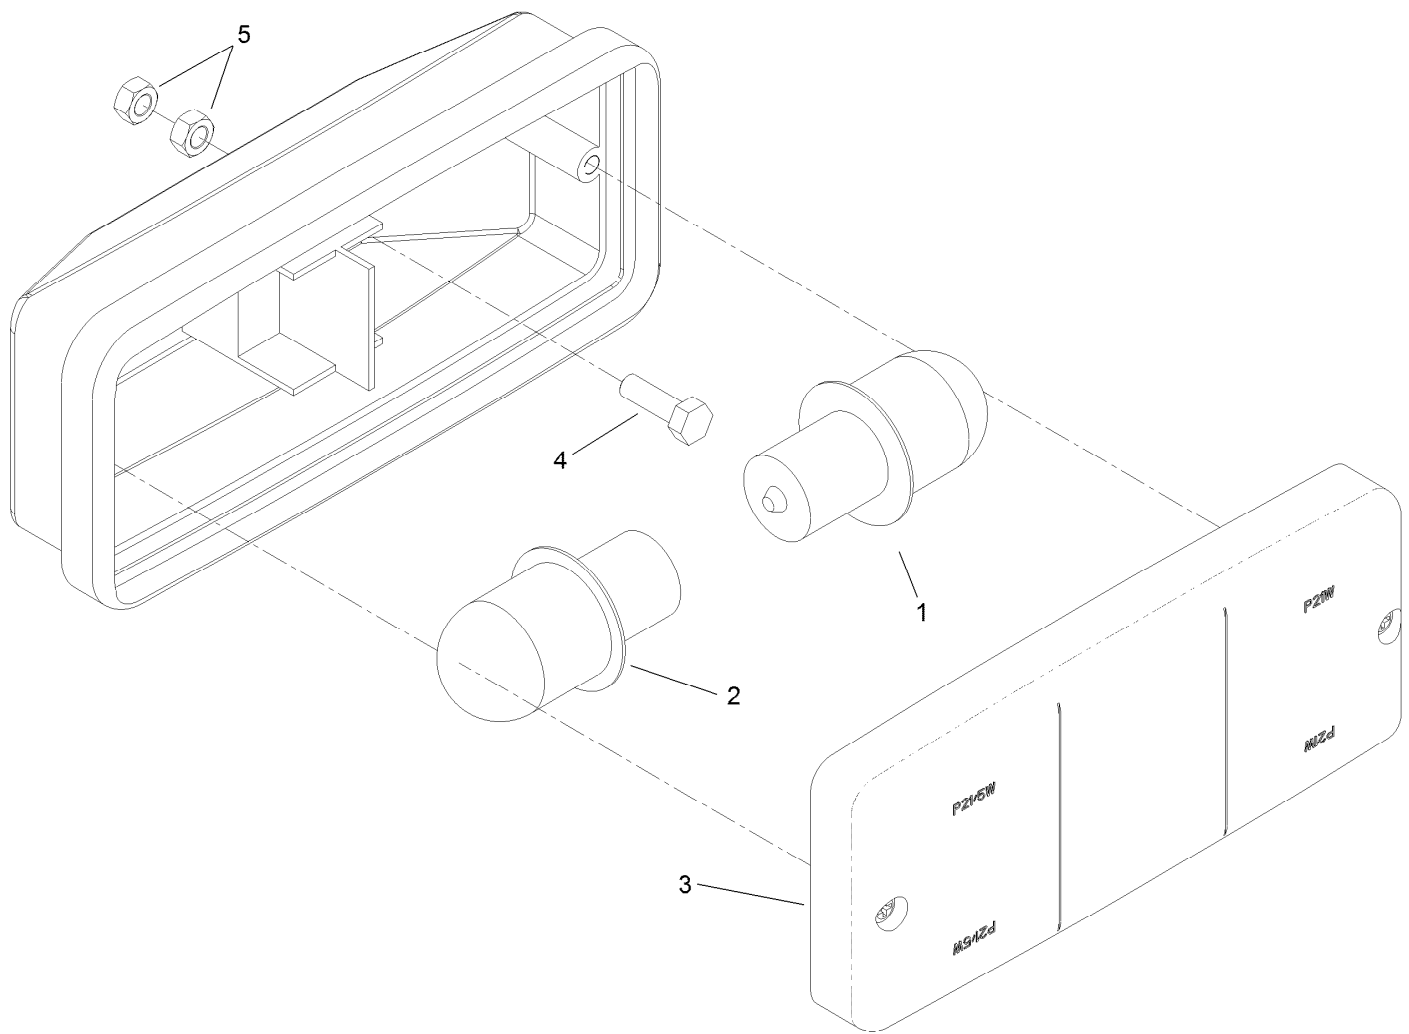

Rear Lamp Assembly No. 119-8093


Ref.	Part Number	Qty.	Description
1	120-7552	1	Bulb-12V
2	120-6657	1	Bulb-5W
3	120-6656	1	Lens-Red/Amber
4	60-6910	2	Screw-HH
5	48-7880	4	Nut-Hex

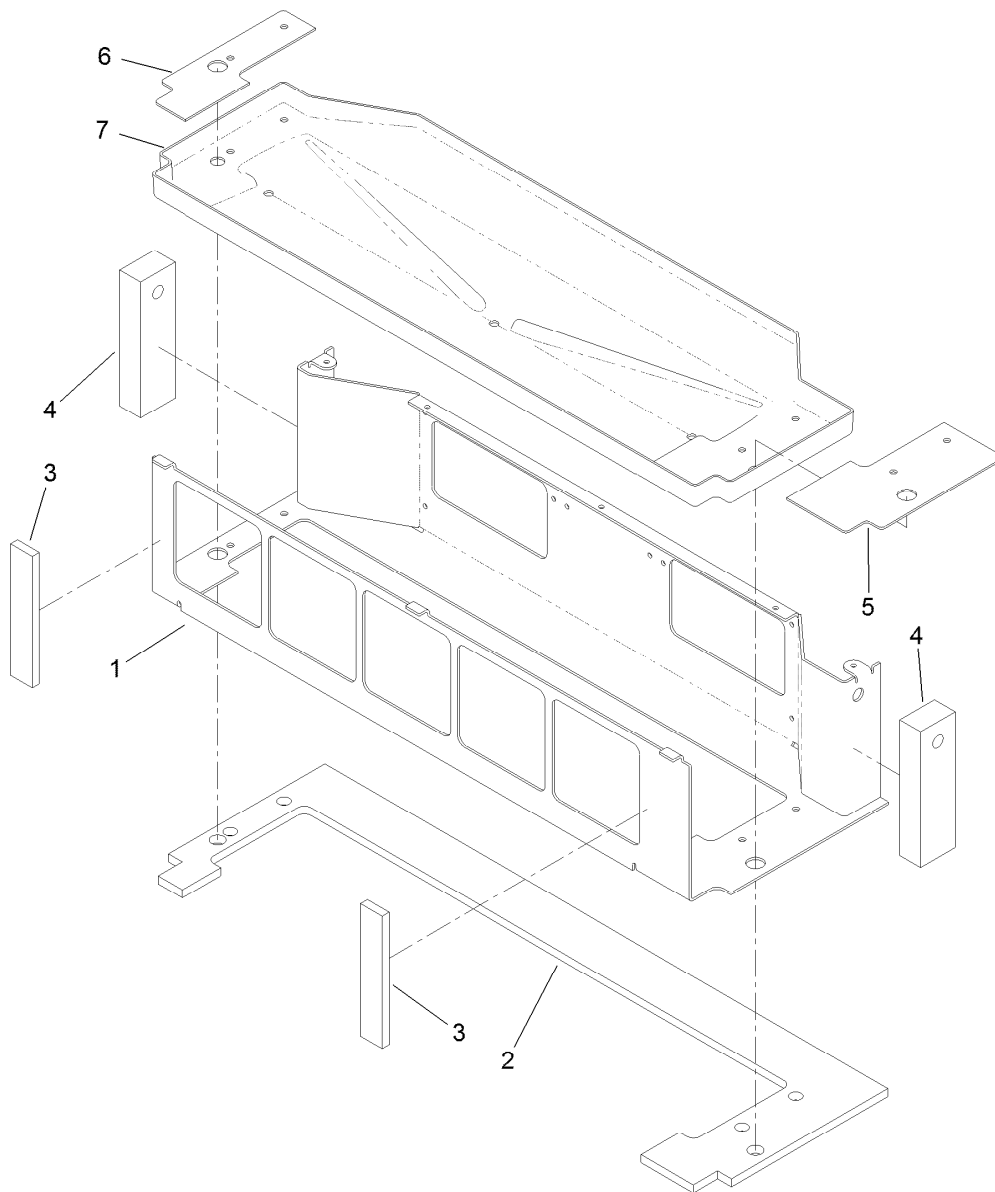

Blower Mount Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5655-03	1	Bracket-Mount
2	130-5659	1	Seal-Foam
3	130-5808	2	Seal-Foam, Front
4	130-0602	2	Seal-End
5	130-5653	1	Gasket-Mount, LH Bracket
6	130-5654	1	Gasket-Mount, RH Bracket
7	130-5664	1	Water-Tray


Heater Core Bracket and Cover Assembly

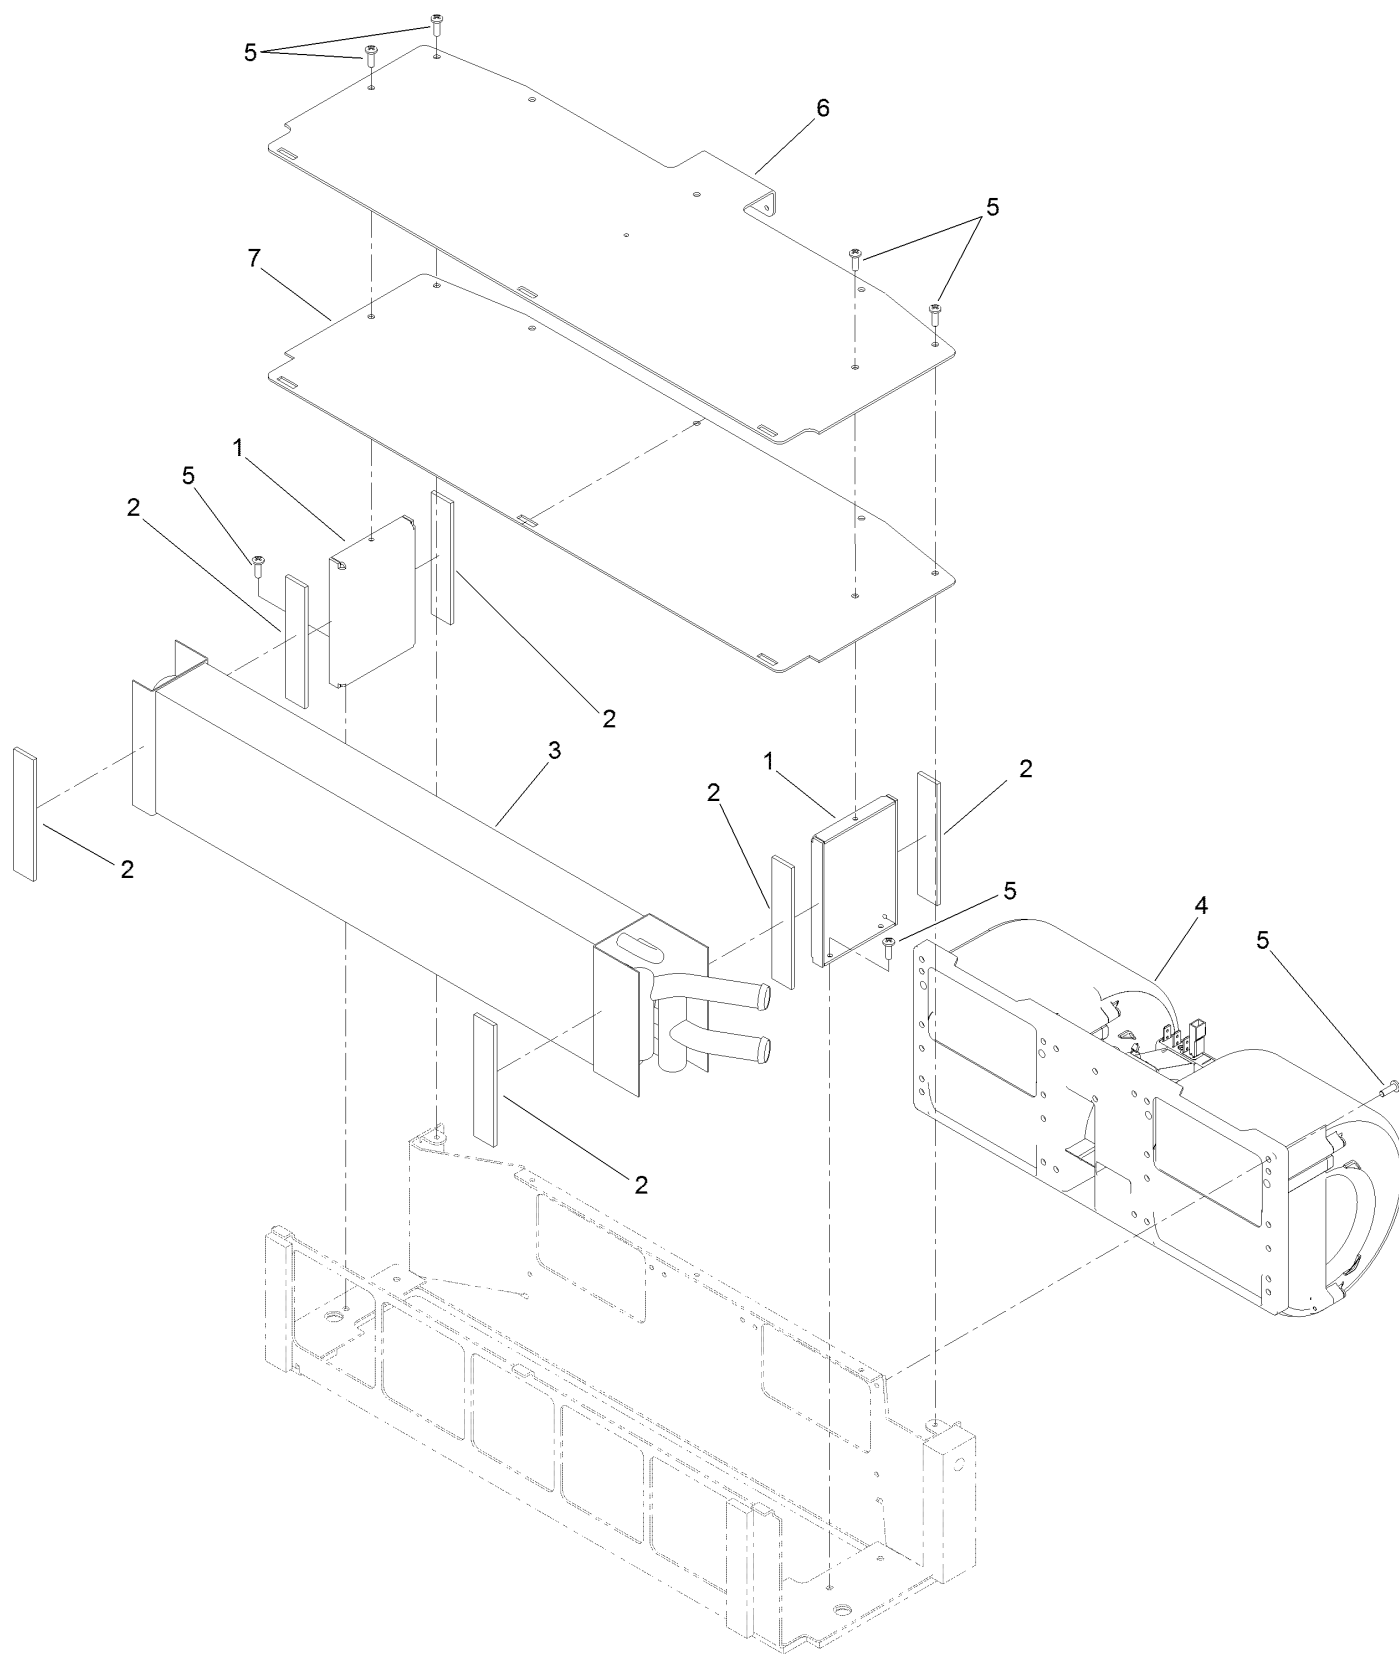

Heater Core Bracket and Cover Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5812-03	2	Bracket-Mount, Heater Core	5	363-8245	17	Screw-TAP
2	130-5658	6	Gasket-Coil	6	130-5656-03	1	Cover, Bracket-Mount
3	127-9915	1	Core-Heater	7	130-5652	1	Gasket-Mount, Cover
4	121-8451	1	Fan-Blower				Bracket

Air Diverter Assembly

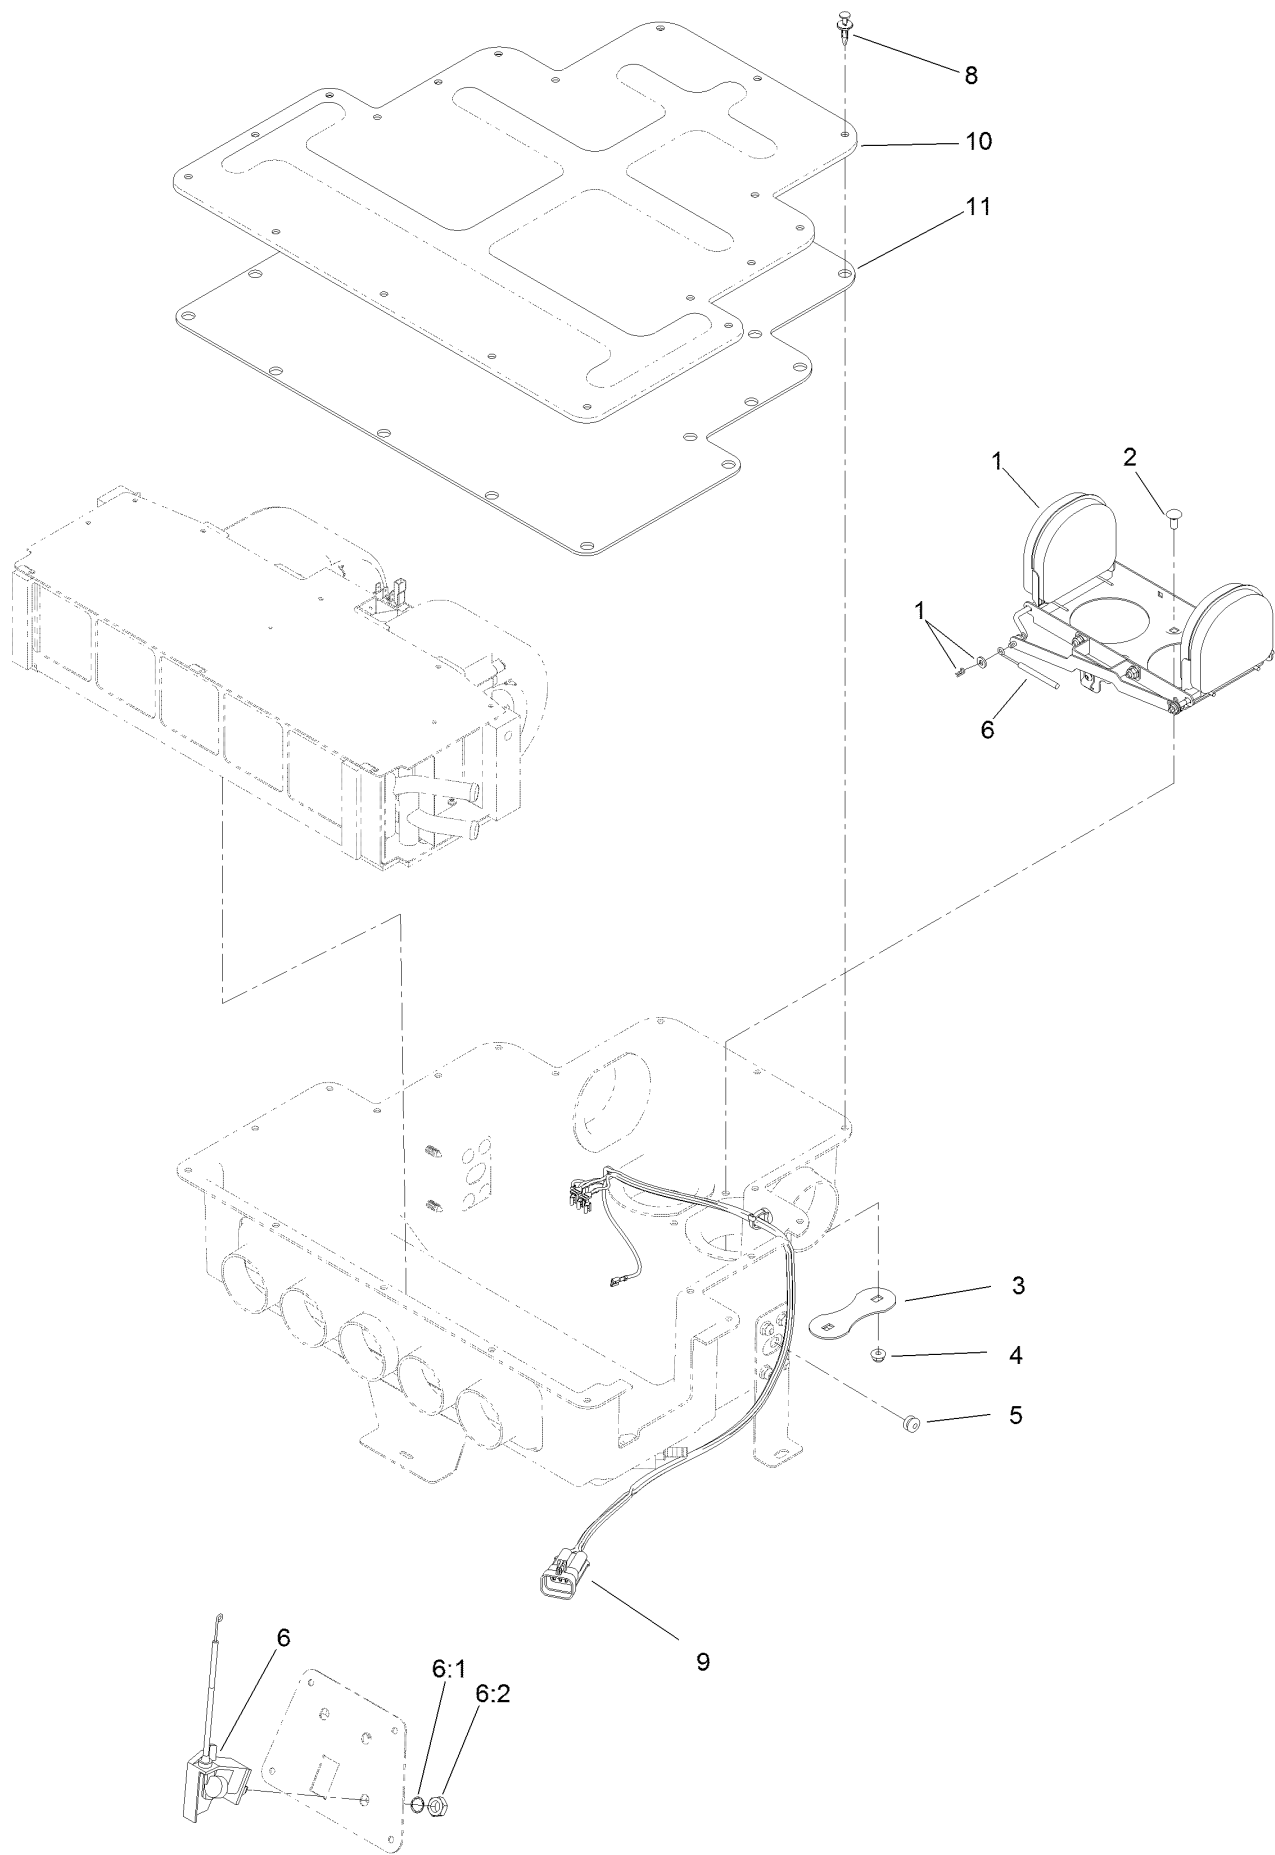


Air Diverter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8369	1	Air Diverter ASM	6:2	3220-4	1	Nut-Jam
2	3229-11	2	Screw-CARR	8	125-9622	19	Rivet-Blind
3	121-8491	1	Plate-Support	9	122-0153	1	Harness-Wire, Heat/AC
4	104-7201	2	Nut-HF, NI				Blower
5	125-7528	1	Grommet-Cable	10	121-8449	1	Housing-Ventilation, Upper
6	125-9678	1	Control-Rotary, Linear	11	130-5614	1	Insulation-Cover
6:1	3254-20	1	Washer-Lock, Int				

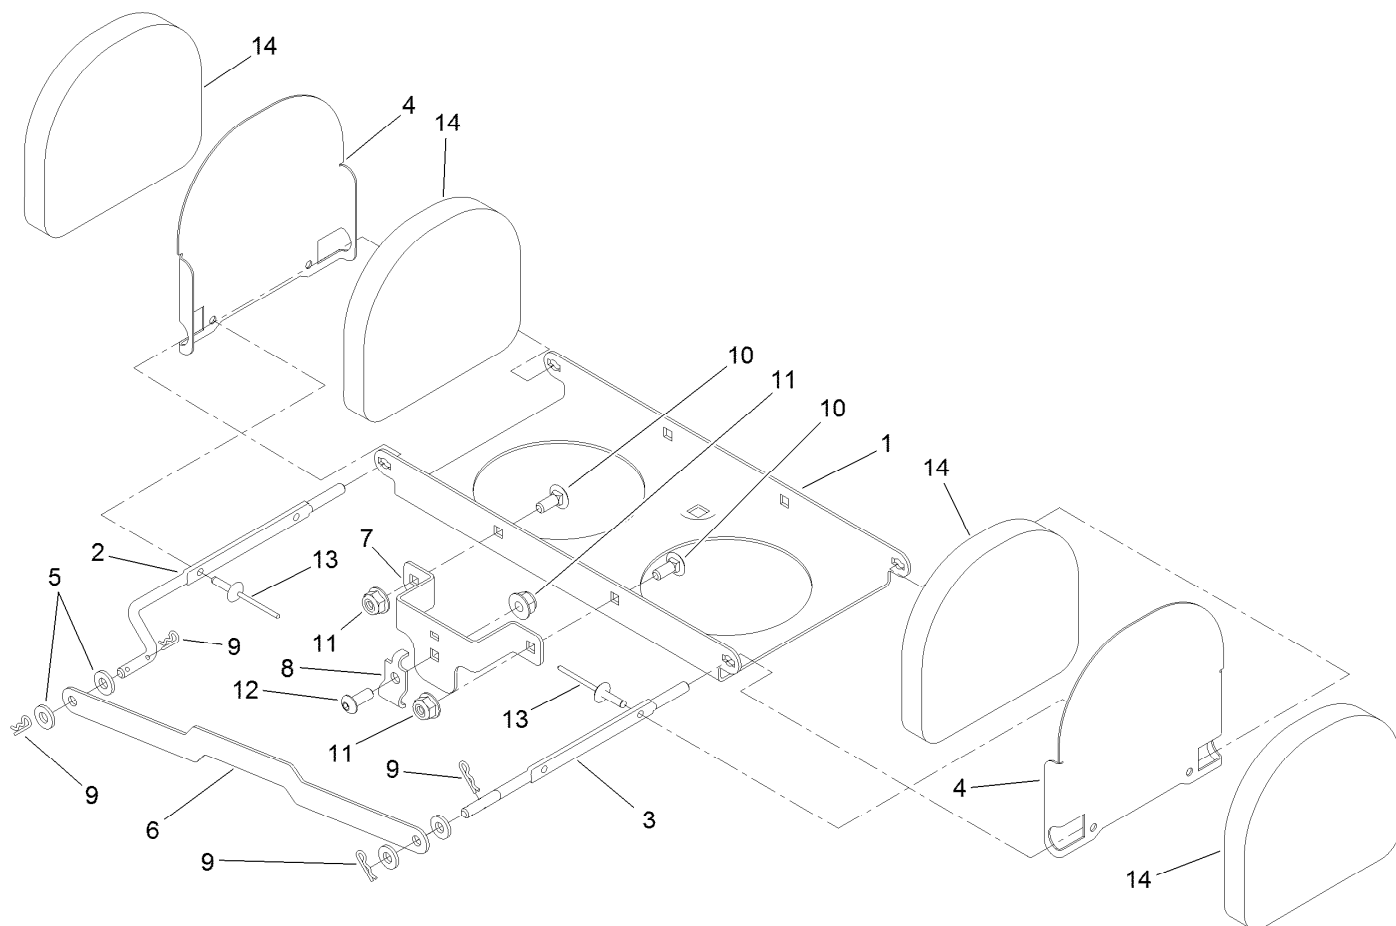

Air Diverter Assembly No. 121-8369

Ref.	Part Number	Qty.	Description
1	125-9697	1	Base-Mount
2	121-8381	1	Shaft-Baffle, RH
3	121-8382	1	Shaft-Baffle, LH
4	125-9698	2	Baffle-Air
5	3256-51	4	Washer-Flat
6	125-9696	1	Link-Baffle
7	121-8374	1	Mount-Cable
8	121-8256	1	Clamp-Conduit
9	108-2992	4	Pin-Hair
10	1-807513	2	Bolt-CARR
11	120-4578	3	Nut-HF
12	115-9830	1	Screw-HSBH
13	3290-271	4	Rivet-Pop
14	125-9699	4	Damper-Foam

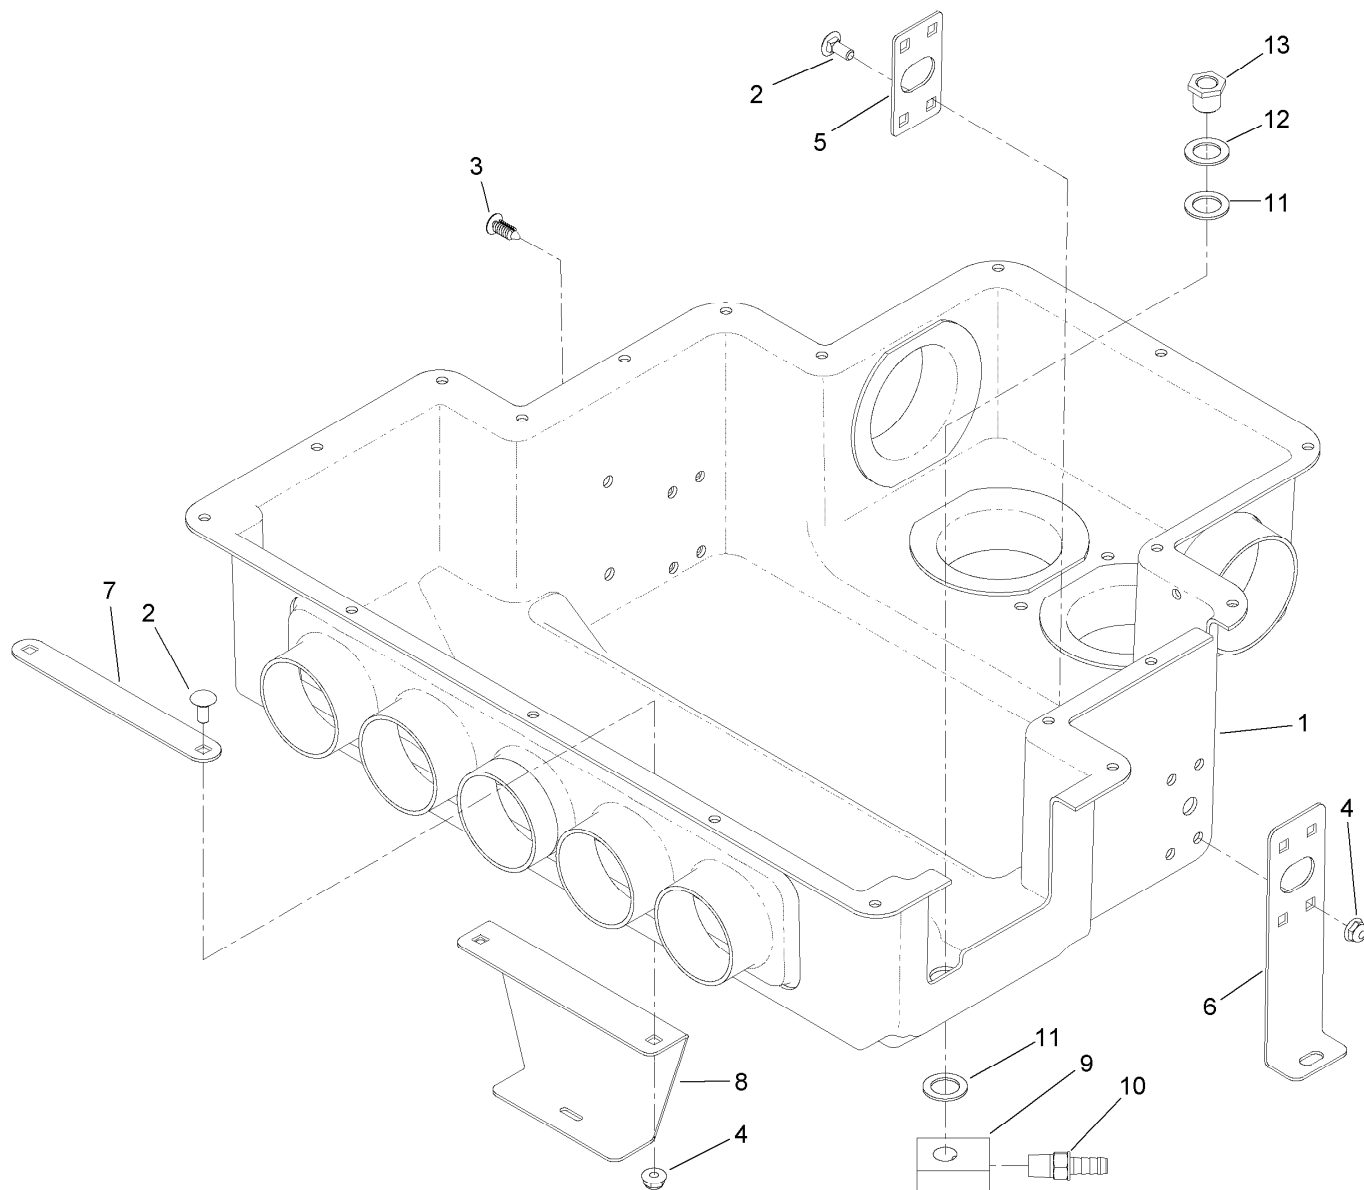

Heat / AC Mixing Box Housing Assembly

Ref.	Part Number	Qty.	Description
1	130-5830	1	Housing-Heat/AC
2	3229-11	10	Screw-CARR
3	114-4899	2	Rivet-Push
4	104-7201	10	Nut-HF, NI
5	130-5834	2	Bracket-Support
6	130-5821	2	Bracket-Airbox, Side
7	125-7504	1	Plate-Backer, Center
8	130-0554	1	Bracket-Airbox, Center
9	130-5601	2	Drain-Lower
10	108-0342	2	Fitting-Straight
11	121-6840	4	Washer-Rubber
12	107-3041	2	Washer-Flat
13	130-0293	2	Drain-Upper



Count on it.