



Form No. 3447-811 Rev B

Count on it.

Parts Catalog

Polar Trac® Cab

Groundsmaster® 7200 Series Mower

Model No. 30474—Serial No. 409300000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame, Mount and Seal Assembly	4
Windshield Wiper and Air Filter Assembly	6
Front Window, Door and Side Window Assembly	8
Right-Hand Door Assembly	10
Left-Hand Door Assembly	12
Hose and Washer Bottle Assembly	14
Rear Mount and Seal Assembly	16
Rear Window Assembly	18
Hose and Washer Bottle Assembly (Tier 4)	20
Roof, Heat Mixing Box and Headliner Assembly	22
Headliner, Switch and Control Assembly	24
Rear Lamp, Work Light and Warning Light Assembly	26
Blower Mount Assembly	28
Heater Core Bracket and Cover Assembly	30
Heat/AC Mixing Box Housing Assembly	32
Air Diverter Assembly	34
Air Diverter Assembly No. 121-8369	36
Attachments and Accessories	38

Frame, Mount and Seal Assembly

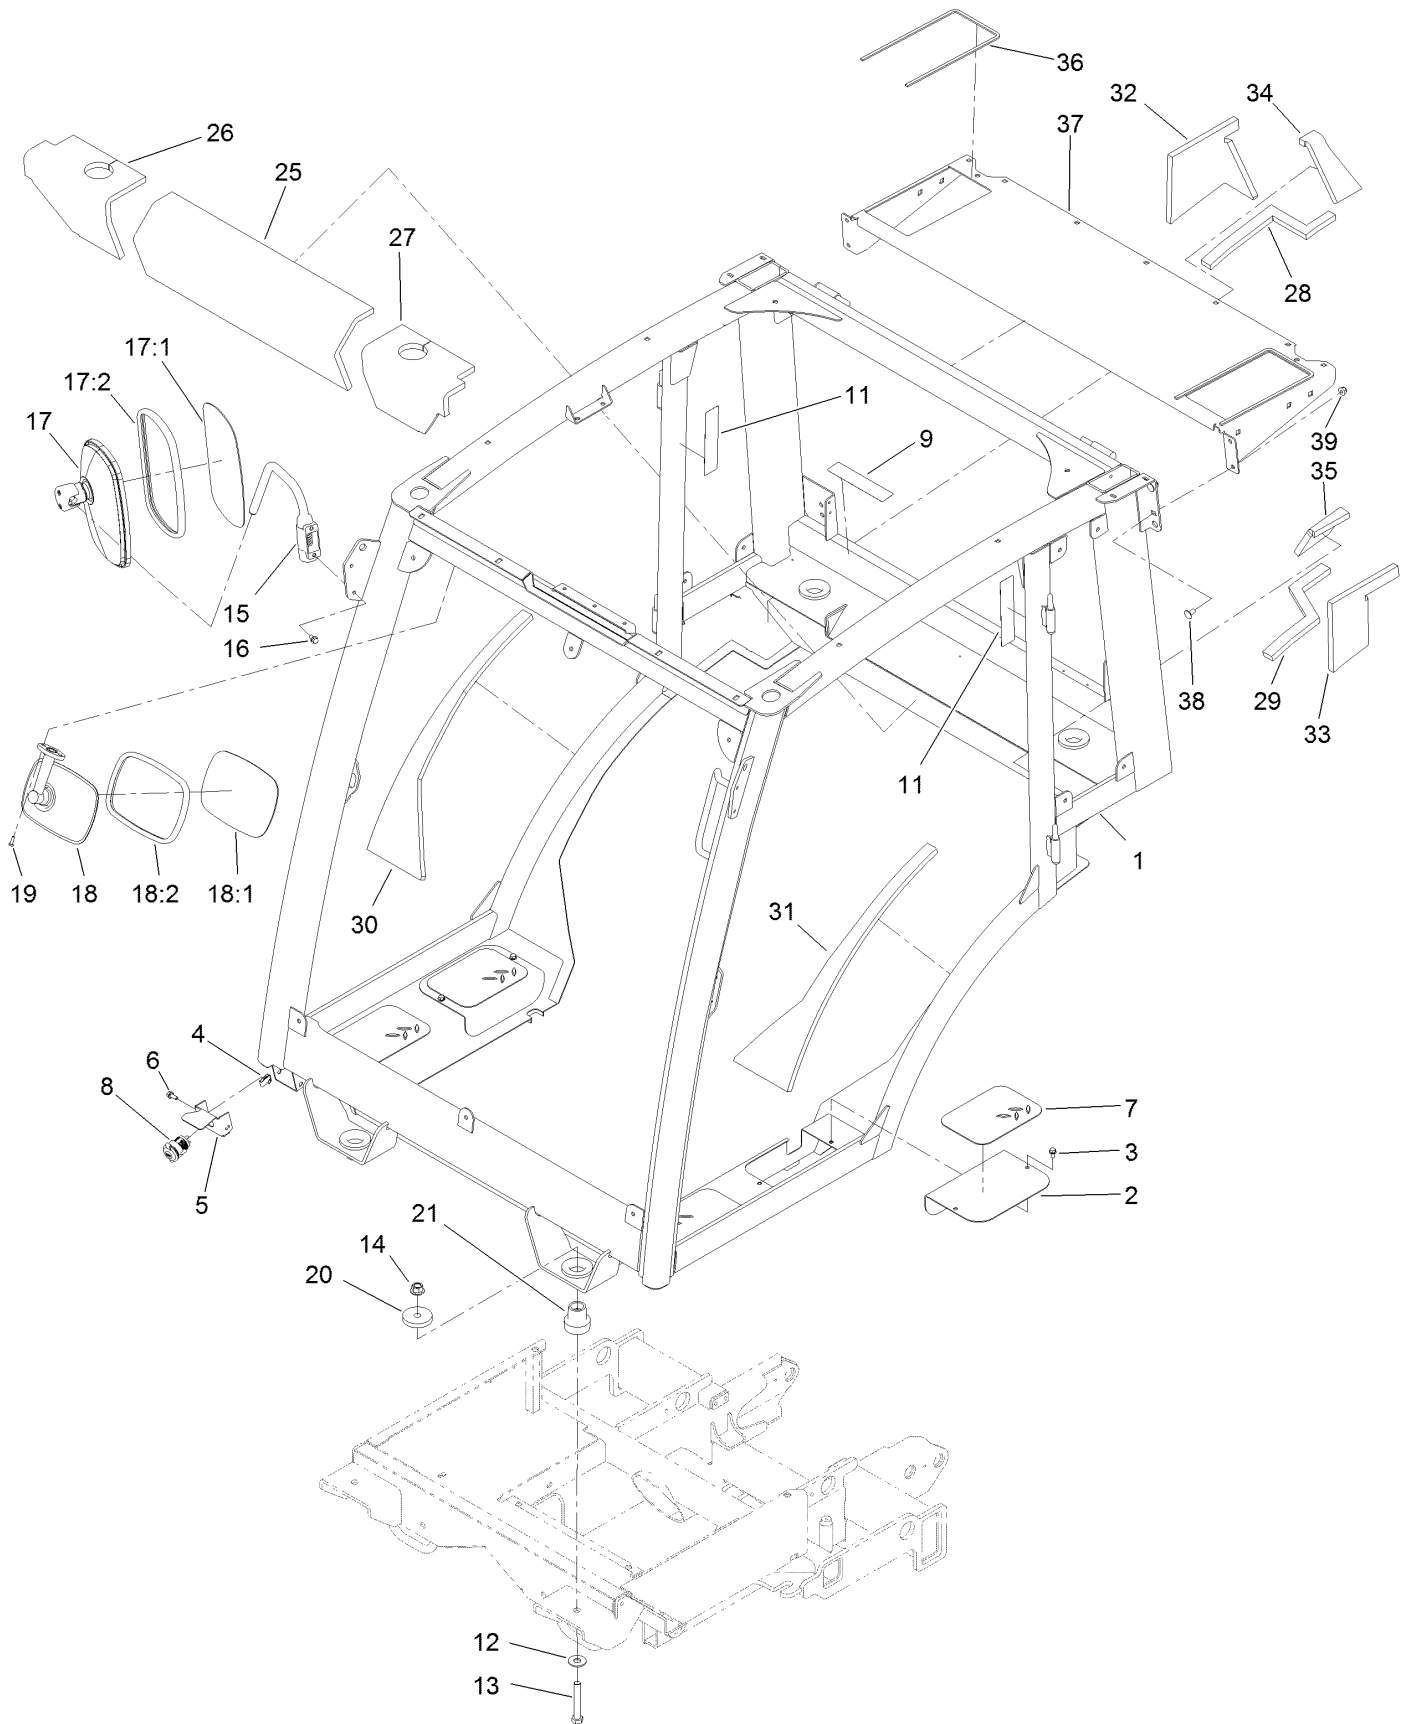


Frame, Mount and Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-1810-03	1	Frame-Main	18:2		1	Gasket ●
2	125-9579-03	2	Cover-Access	19	32144-32	2	Screw-PPH
3	119-1065	4	Screw-Lock,HF	20	115-5519	2	Washer-Plain
4	107069	2	Clip	21	110-5954	2	Mount-Center, Bonded
5	125-9584	1	Cover-Switch, Power Point	25	130-0559	1	Foam-Interior, Rear Center
6	3234-33	2	Screw-HHF	26	125-9594	1	Foam-Interior, Rear RH
7	125-9582	4	Pad-Step	27	130-0560	1	Foam-Interior, Rear LH
8	109-9376	1	Receptacle-12V	28	130-0613	1	Foam-Interior, RH Side Rear
9	130-0611	1	Decal-Window, Pin	29	130-0617	1	Foam-Interior, LH Side Rear
11	130-5361	2	Decal-Warning	30	130-0612	1	Foam-Interior, RH Side Front
12	3256-6	2	Washer-Flat	31	130-0616	1	Foam-Interior, LH Side Front
13	112-7264	2	Screw-HH	32	130-0614	1	Foam-Interior, RH Side
14	99-5107	2	Nut-Lock	33	130-0618	1	Foam-Interior, LH Side
15	121-8275	2	Arm-Mirror, Side	34	130-0615	1	Foam-Interior, RH Cover
16	33103-016	4	Screw-HHF	35	130-0619	1	Foam-Interior, LH Cover
17	121-8341	2	Side Mirror ASM	36	130-0587	2	Seal-Foam, Roof Air Filter
17:1		1	Mirror-Glass ●	37	136-1776-03	1	Shelf-Mount, Fan
17:2		1	Gasket ●	38	3230-18	4	Screw-CARR
18	121-8343	1	Interior Mirror ASM	39	104-8300	4	Nut-HF, NI
18:1		1	Mirror-Glass ●				

● Not serviced separately


Windshield Wiper and Air Filter Assembly

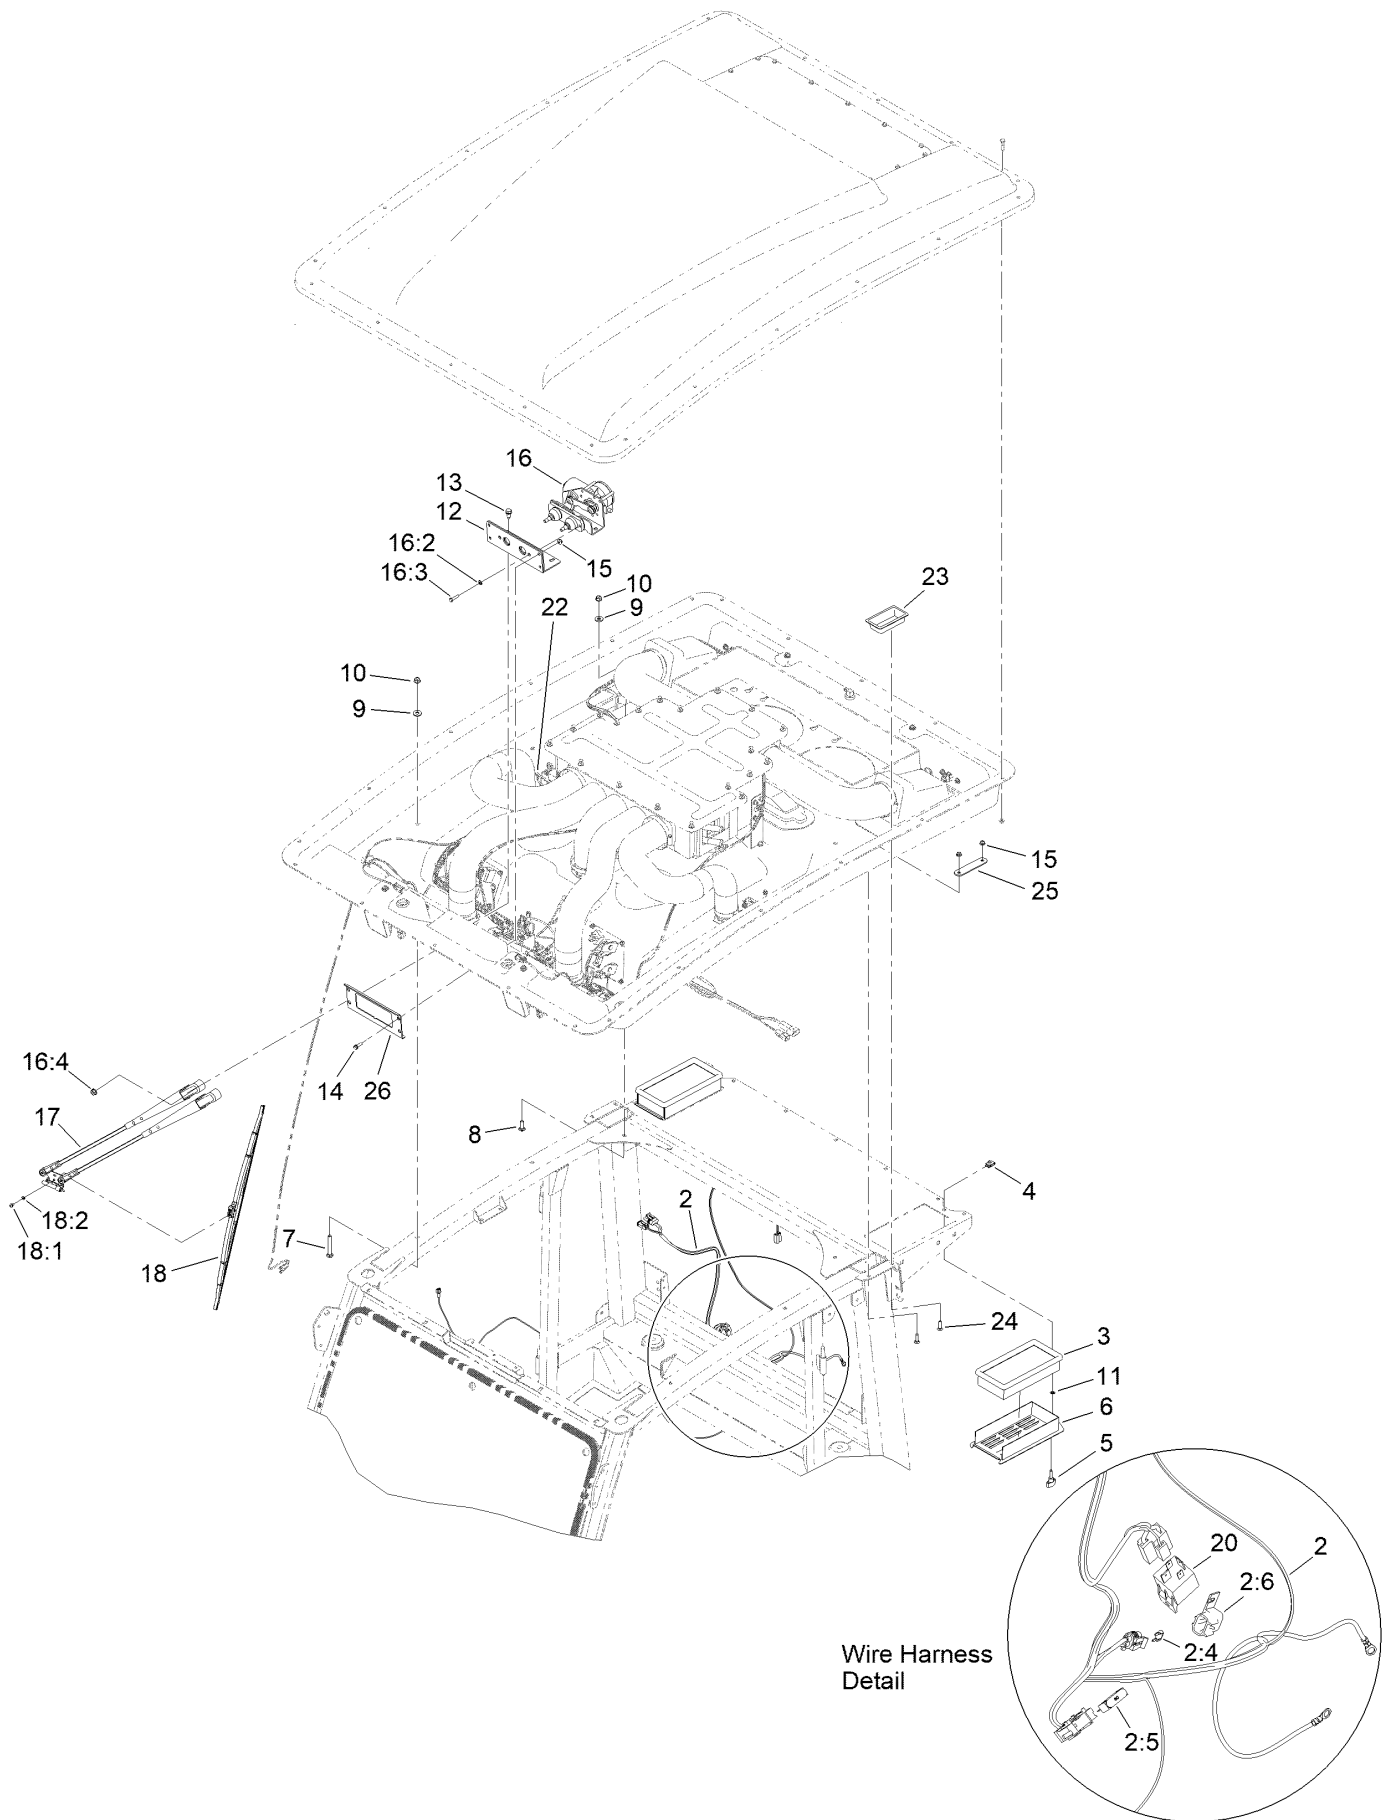

Windshield Wiper and Air Filter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	122-2238	1	Harness-Wire, Power	15	104-7201	8	Nut-HF, NI
2:4	121-8866	1	Fuse-Mini Blade, 10 Amp	16	125-7452	1	Wiper Motor ASM
2:5	114-3342	1	Fuse-Maxi, 60 Amp	16:2	3253-3	1	Washer-Lock
2:6	32180-101	1	Cover-Fuse, Single	16:3	33113-025	1	Screw-HH
3	121-8457	2	Filter-Air	16:4	112-2844	2	Nut-HF
4	107069	2	Clip	17	125-7453	1	Arm-Wiper
5	126-5846	2	Knob-T	18	125-7454	1	Blade-Wiper
6	125-9825-03	2	Cover-Air, Fresh	18:1	47-2830	2	Screw
7	3230-9	4	Screw-CARR	18:2	43-5920	2	Washer-Lock, Spring
8	3230-22	13	Screw-CARR	20	99-7435	1	Relay
9	3256-3	17	Washer-Flat	22	3290-378	6	Tie-Cable
10	104-8300	17	Nut-HF, NI	23	130-5661	2	Tube-Sleeve
11	32115-15	2	Nut-Push	24	3229-30	4	Screw-CARR
12	130-5871	1	Bracket-Wiper	25	130-5854	2	Brace-Seal
13	32144-11	2	Screw-HWH	26	130-6068-03	1	Plate-Washer, Wiper Motor
14	32105-15	4	Screw-HWH				

Front Window, Door and Side Window Assembly

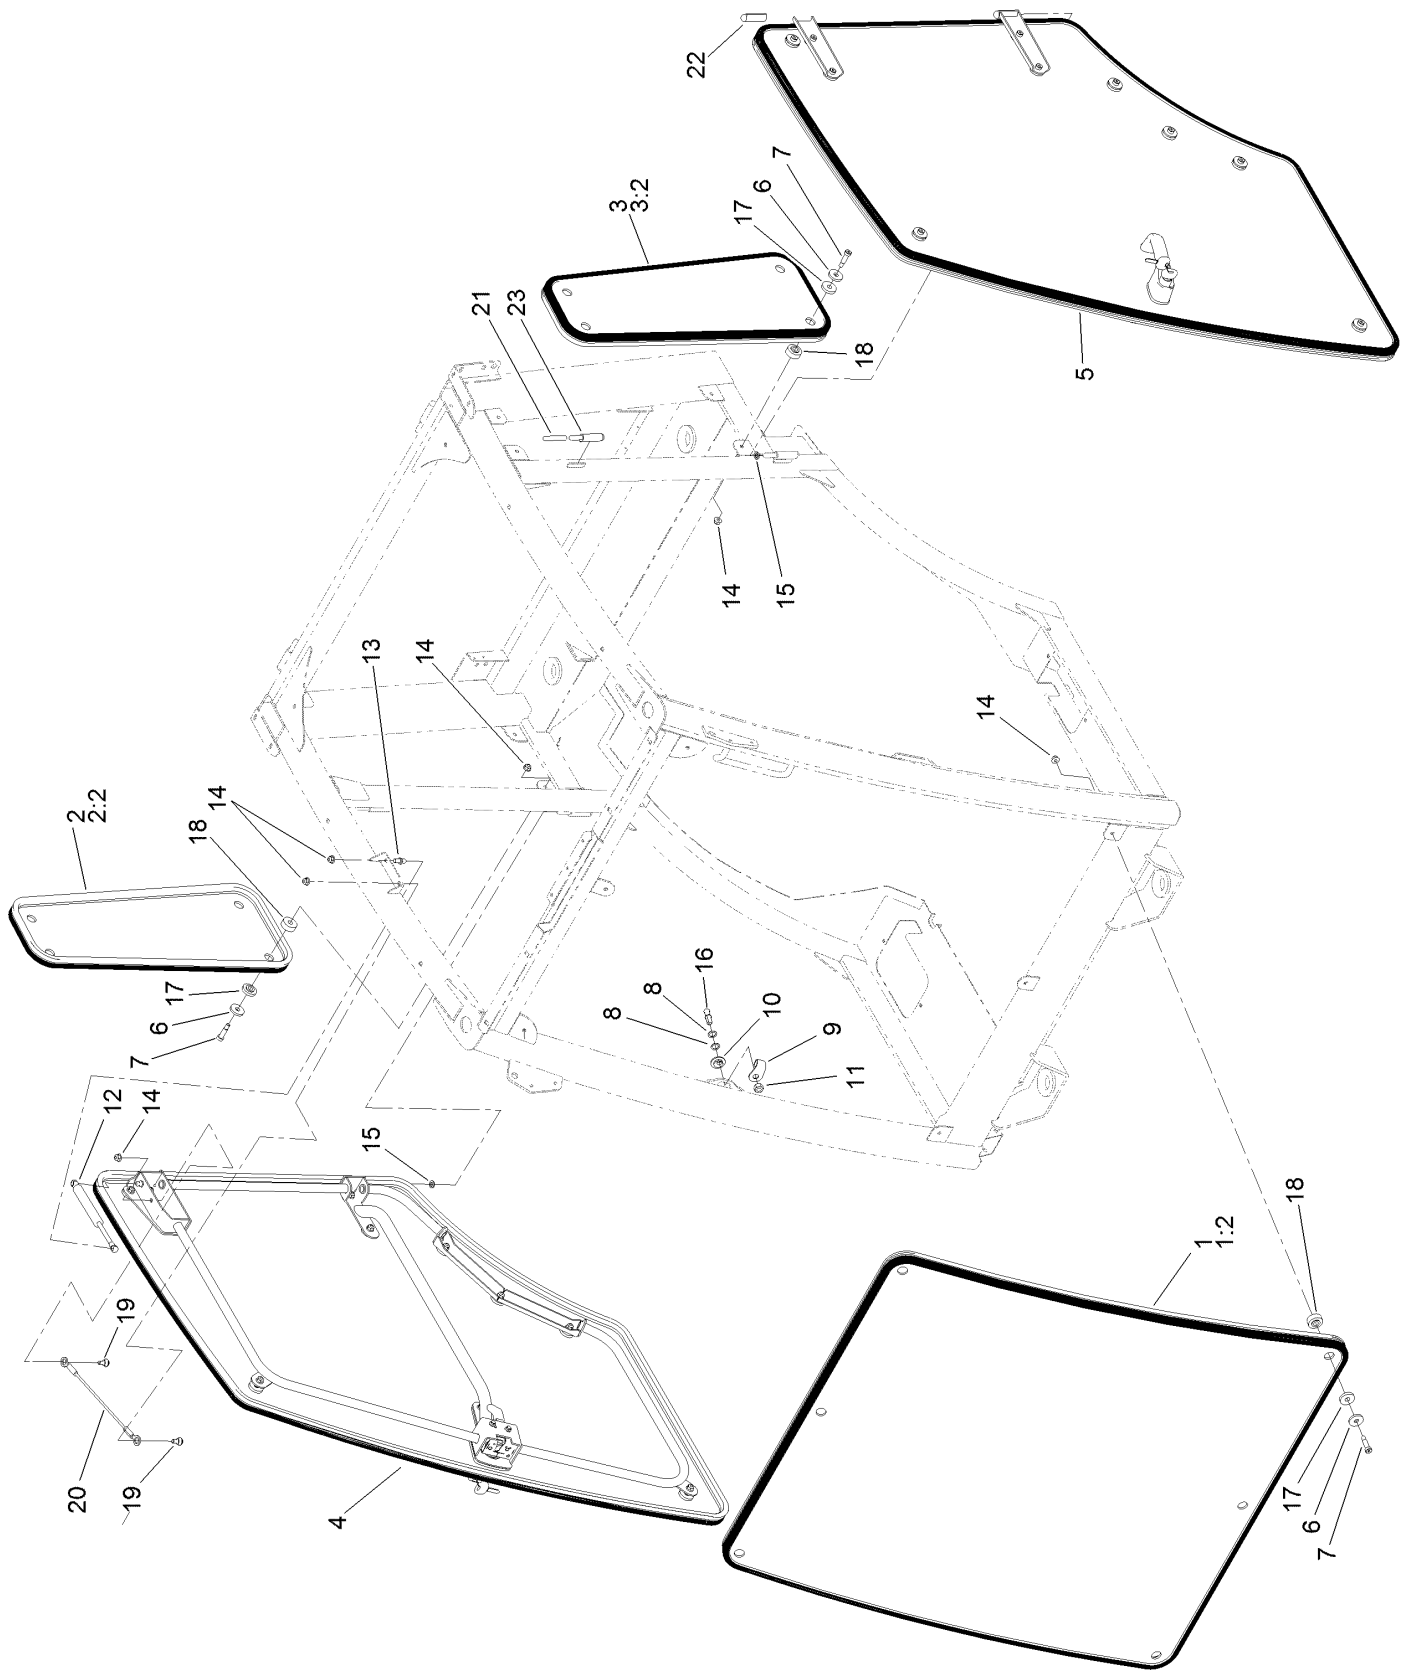


Front Window, Door and Side Window Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5670	1	Front Window ASM
1:2	121-8608	1	Trim-Window, Front
2	130-5671	1	RH Side Window ASM
2:2	121-8607	1	Trim-Window, Side
3	130-5672	1	LH Side Window ASM
3:2	121-8607	1	Trim-Window, Side
4		1	RH Door ASM ●
5		1	LH Door ASM ●
6	130-5815	14	Washer-Backup
7	125-9521	14	Screw-Shldr HSH
8	73-0040	4	Washer-Thrust
9	121-8393	2	Guard-Striker
10	125-9992	2	Adjuster-Stud

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	106-0327	2	Nut-Hex
12	130-6083	2	Spring-Gas, Door
13	98-3104	2	Stud-Ball
14	104-8300	20	Nut-HF, NI
15	121-8441	4	Washer-Spacer
16	132-3718	2	Stud-Striker
17	125-9982	14	Bushing-Flange
18	125-9537	14	Bushing-Flange
19	120-9471	4	Bolt-Shoulder
20	130-5726	2	Lanyard
21	133-1110	1	Pin-Hinge
22	121-8439	1	Receiver-Pivot, Hinge
23	121-8440	1	Pivot-Hinge

● Not serviced separately


Right-Hand Door Assembly

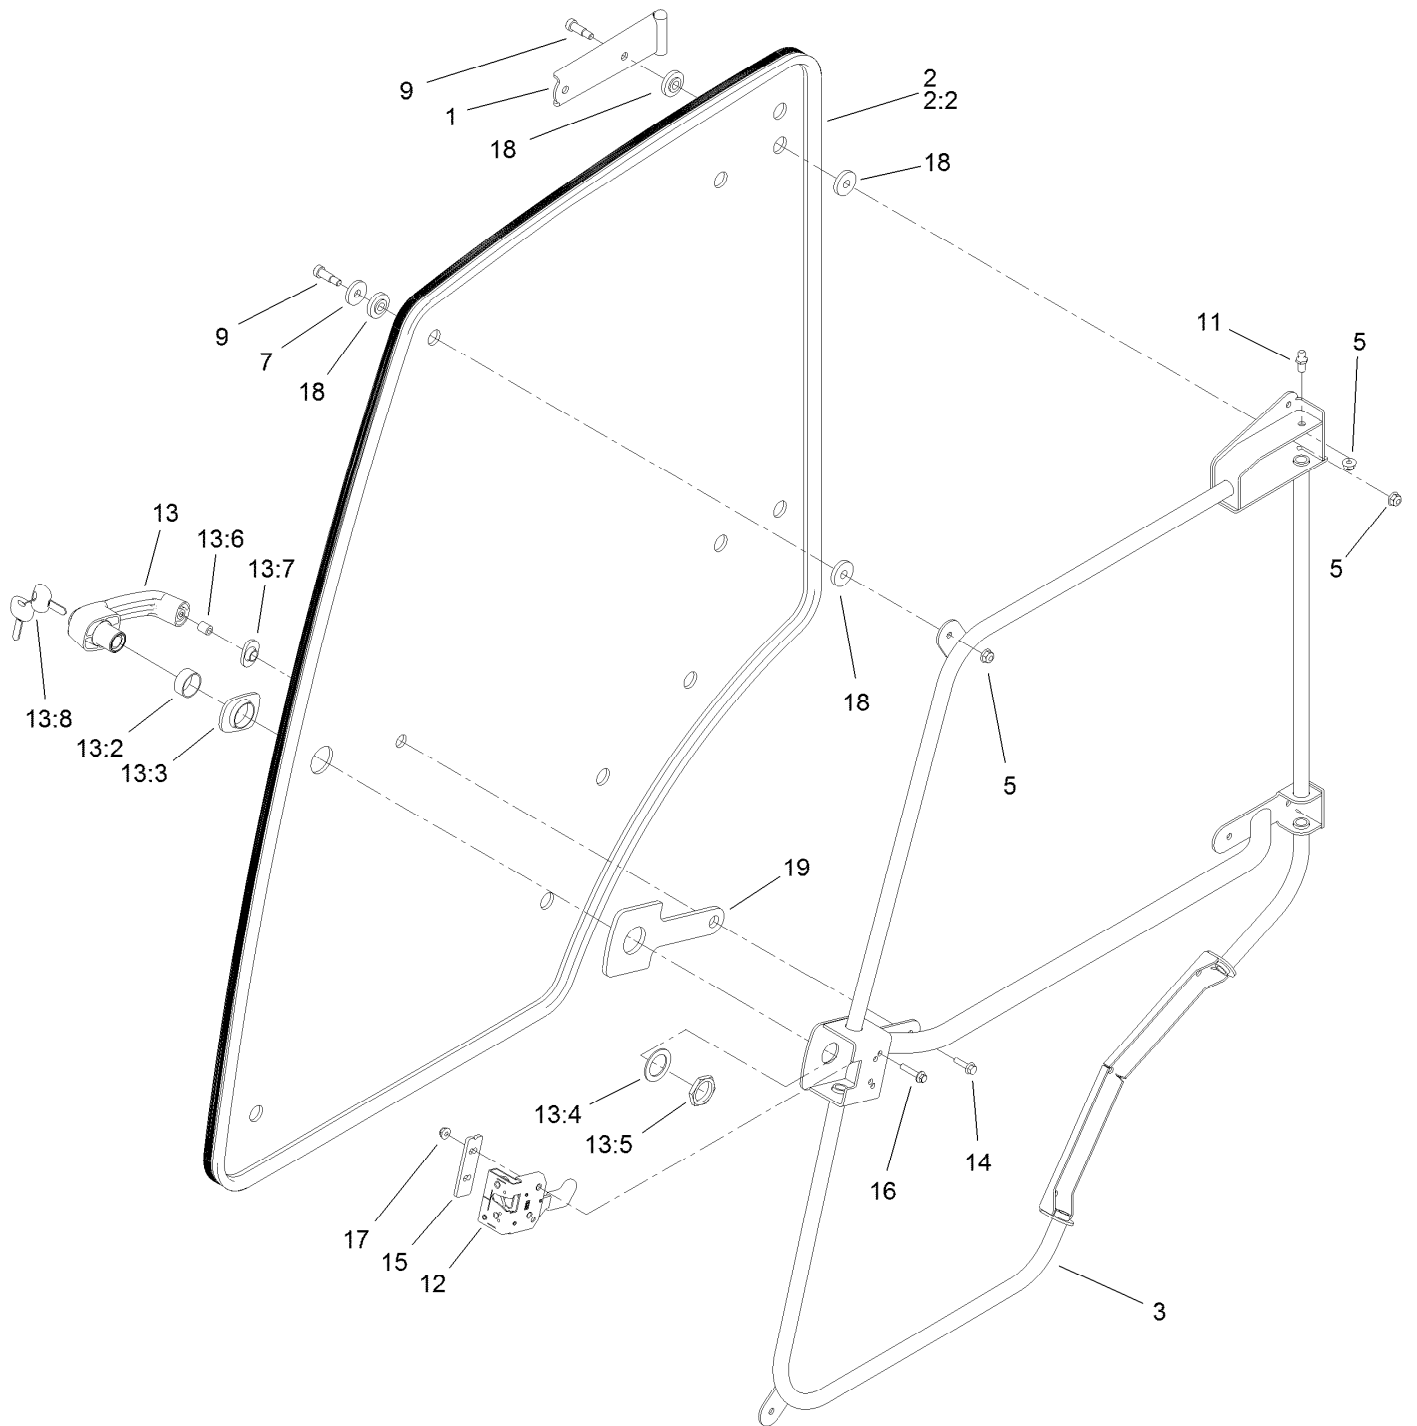

Right-Hand Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9618-03	2	Hinge-Door, RH	13:4	121-8327	1	Washer
2	130-5674	1	RH Glass ASM	13:5	121-8328	1	Nut
2:2	121-8606	1	Trim-Door	13:6	121-8627	1	Cylinder-Mounting, End
3	121-8625-03	1	Frame-Door, RH	13:7	121-8323	1	Grommet-Mounting, Small
5	104-8300	11	Nut-HF, NI	13:8	125-9531	1	Key-Set
7	125-9676	6	Washer-Backup	14	33103-025	1	Screw-HHF
9	125-9520	10	Screw-Shoulder, HSH	15	121-8395	1	Plate-Support, Latch
11	98-3104	1	Stud-Ball	16	3234-21	2	Screw-HHF
12	121-8390	1	Latch-RH	17	104-7201	2	Nut-HF, NI
13	121-8630	1	Handle ASM	18	125-9982	20	Bushing-Flange
13:2	121-8628	1	Cylinder-Mounting, Key	19	121-8331	1	Gasket-Handle
13:3	121-8322	1	Grommet-Mounting, Large				


Left-Hand Door Assembly

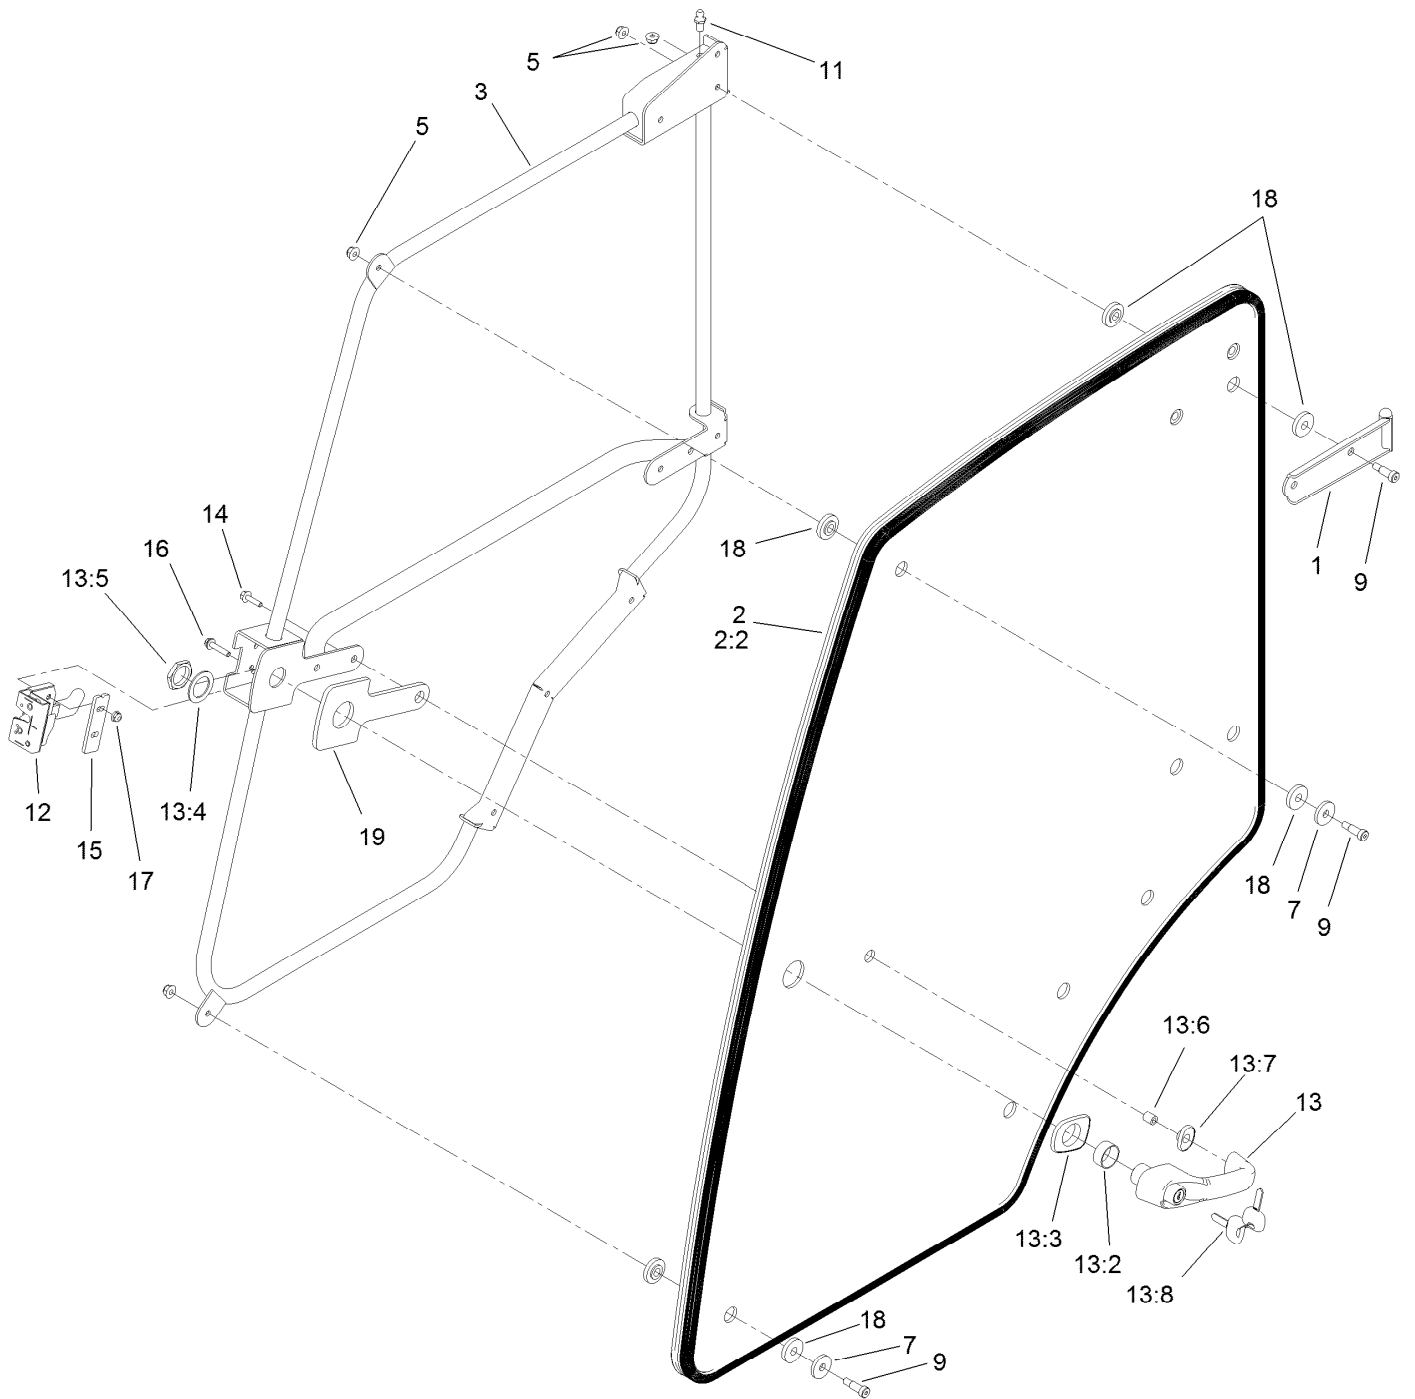

Left-Hand Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9619-03	2	Hinge-Door, LH	13:4	121-8327	1	Washer
2	130-5675	1	LH Glass ASM	13:5	121-8328	1	Nut
2:2	121-8606	1	Trim-Door	13:6	121-8627	1	Cylinder-Mounting, End
3	121-8605-03	1	Frame-Door, LH	13:7	121-8323	1	Grommet-Mounting, Small
5	104-8300	11	Nut-HF, NI	13:8	125-9531	1	Key-Set
7	125-9676	6	Washer-Backup	14	33103-025	1	Screw-HHF
9	125-9520	10	Screw-Shoulder, HSH	15	121-8395	1	Plate-Support, Latch
11	98-3104	1	Stud-Ball	16	3234-21	2	Screw-HHF
12	121-8391	1	Latch-LH	17	104-7201	2	Nut-HF, NI
13	121-8630	1	Handle ASM	18	125-9982	20	Bushing-Flange
13:2	121-8628	1	Cylinder-Mounting, Key	19	121-8331	1	Gasket-Handle
13:3	121-8322	1	Grommet-Mounting, Large				


Hose and Washer Bottle Assembly

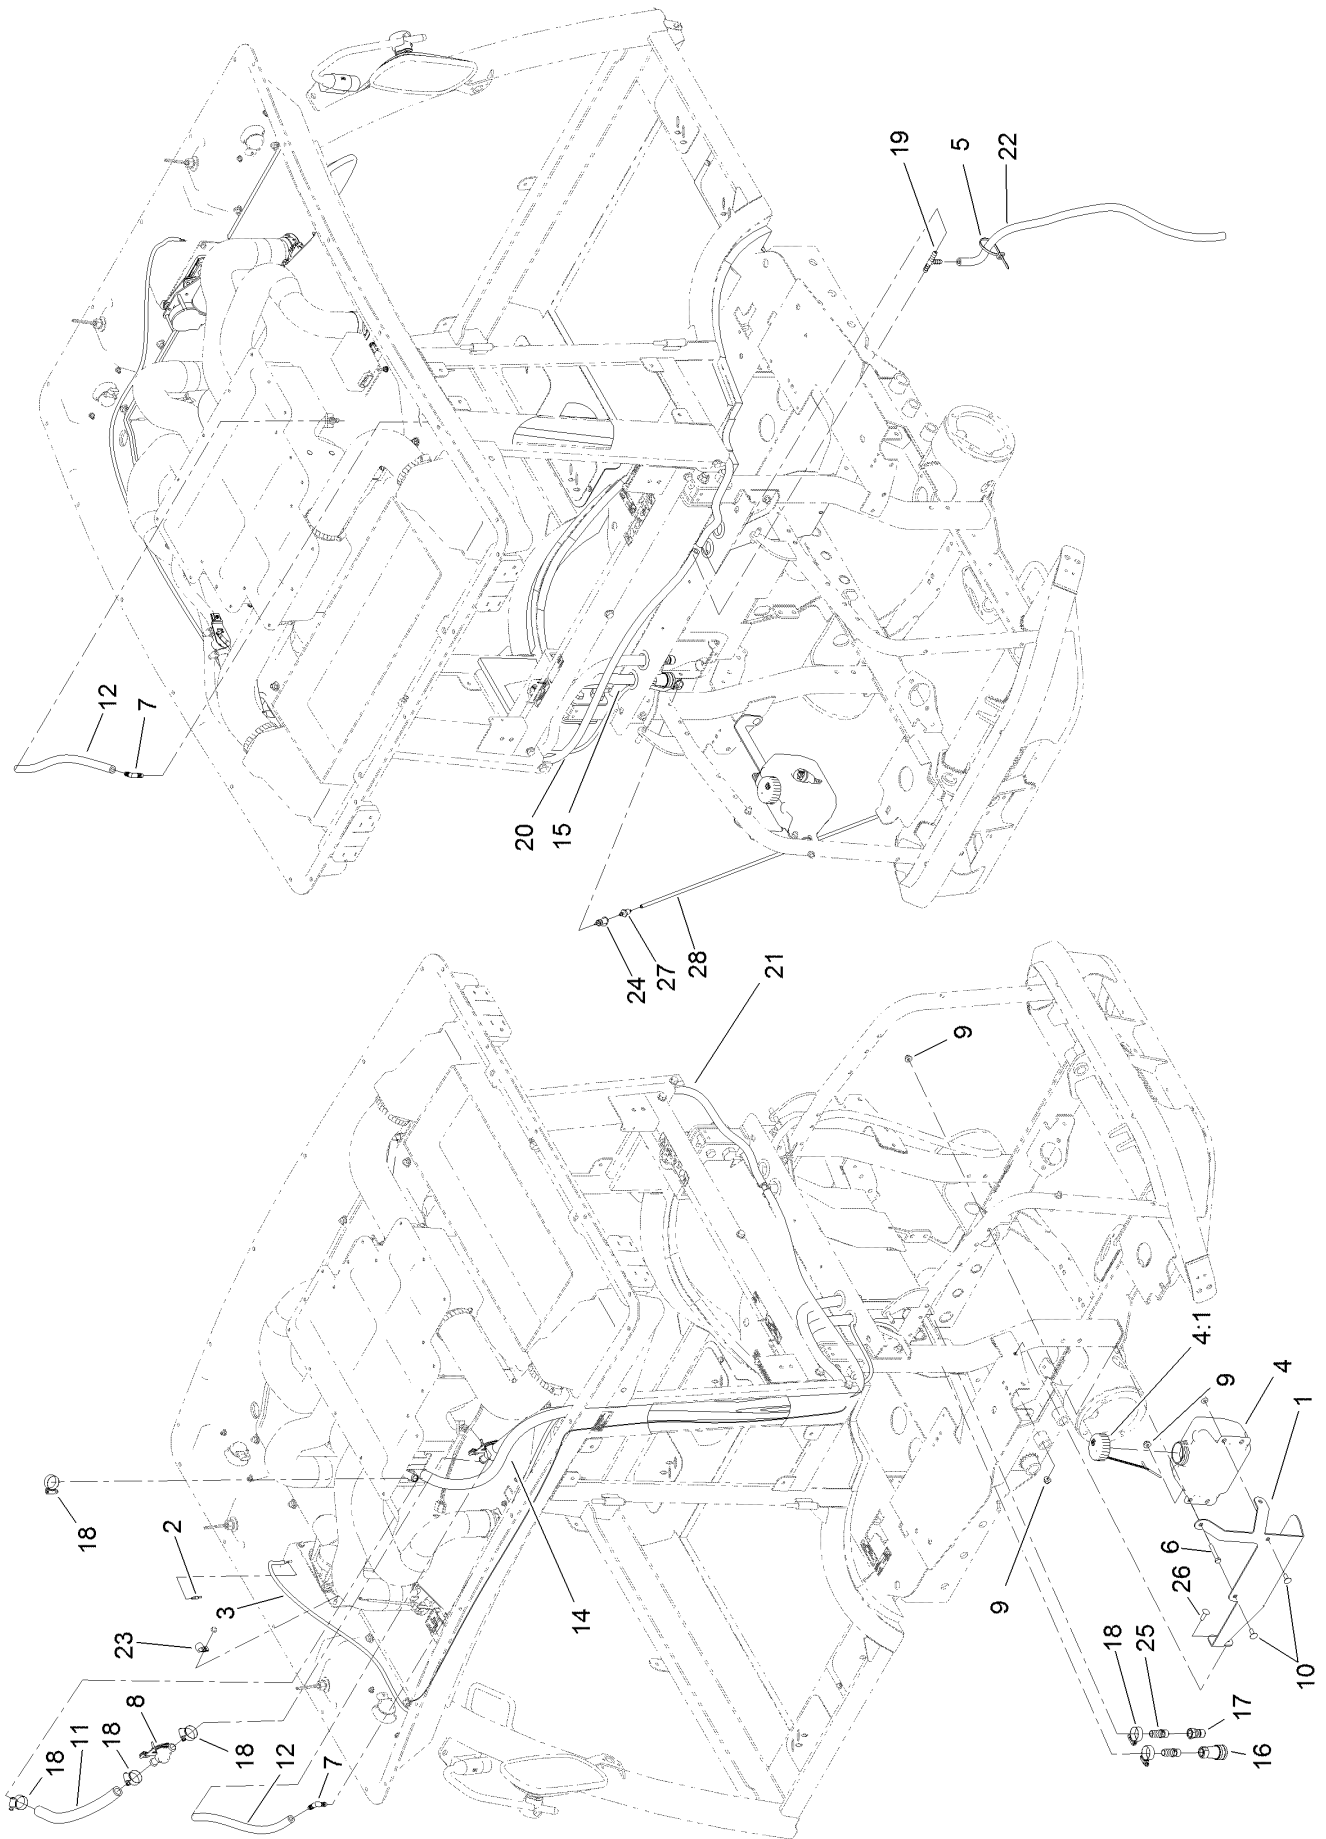

Hose and Washer Bottle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5890-03	1	Bracket-Bottle, Washer	15	127-9908	1	Hose-Heater
2	127-9905	1	Fitting-Hose, Barb	16	125-9679	1	Coupler-Female
3	127-9902	1	Hose-Washer Fluid	17	125-9680	1	Coupler-Male
4	138-2702	1	Tank-Fluid, Washer	18	2412-129	6	Clamp-Hose
4:1	125-5258	1	Lid-Tank, Washer Fluid	19	127-9930	1	Fitting-Tee
5	3290-378	1	Tie-Cable	20	127-9909	1	Hose-Drain
6	322-10	2	Screw-HH	21	127-9927	1	Hose-Drain
7	130-0578	2	Fitting-Barb, 90 DEG	22	130-5498	1	Hose-Drain
8	120-4947	1	Valve-Heater	23	2412-73	1	Clamp-R
9	104-8300	5	Nut-HF, NI	24	130-5795	1	Fitting-Straight
10	3230-23	2	Bolt-CARR	25	117-9410	2	Fitting-Straight
11	125-9706	1	Hose-Heater	26	3230-22	1	Screw-CARR
12	125-9865	2	Hose-Drain	27	130-5794	1	Fitting-Straight
14	127-9907	1	Hose-Heater	28	130-6114	1	Hose-Washer Fluid


Rear Mount and Seal Assembly

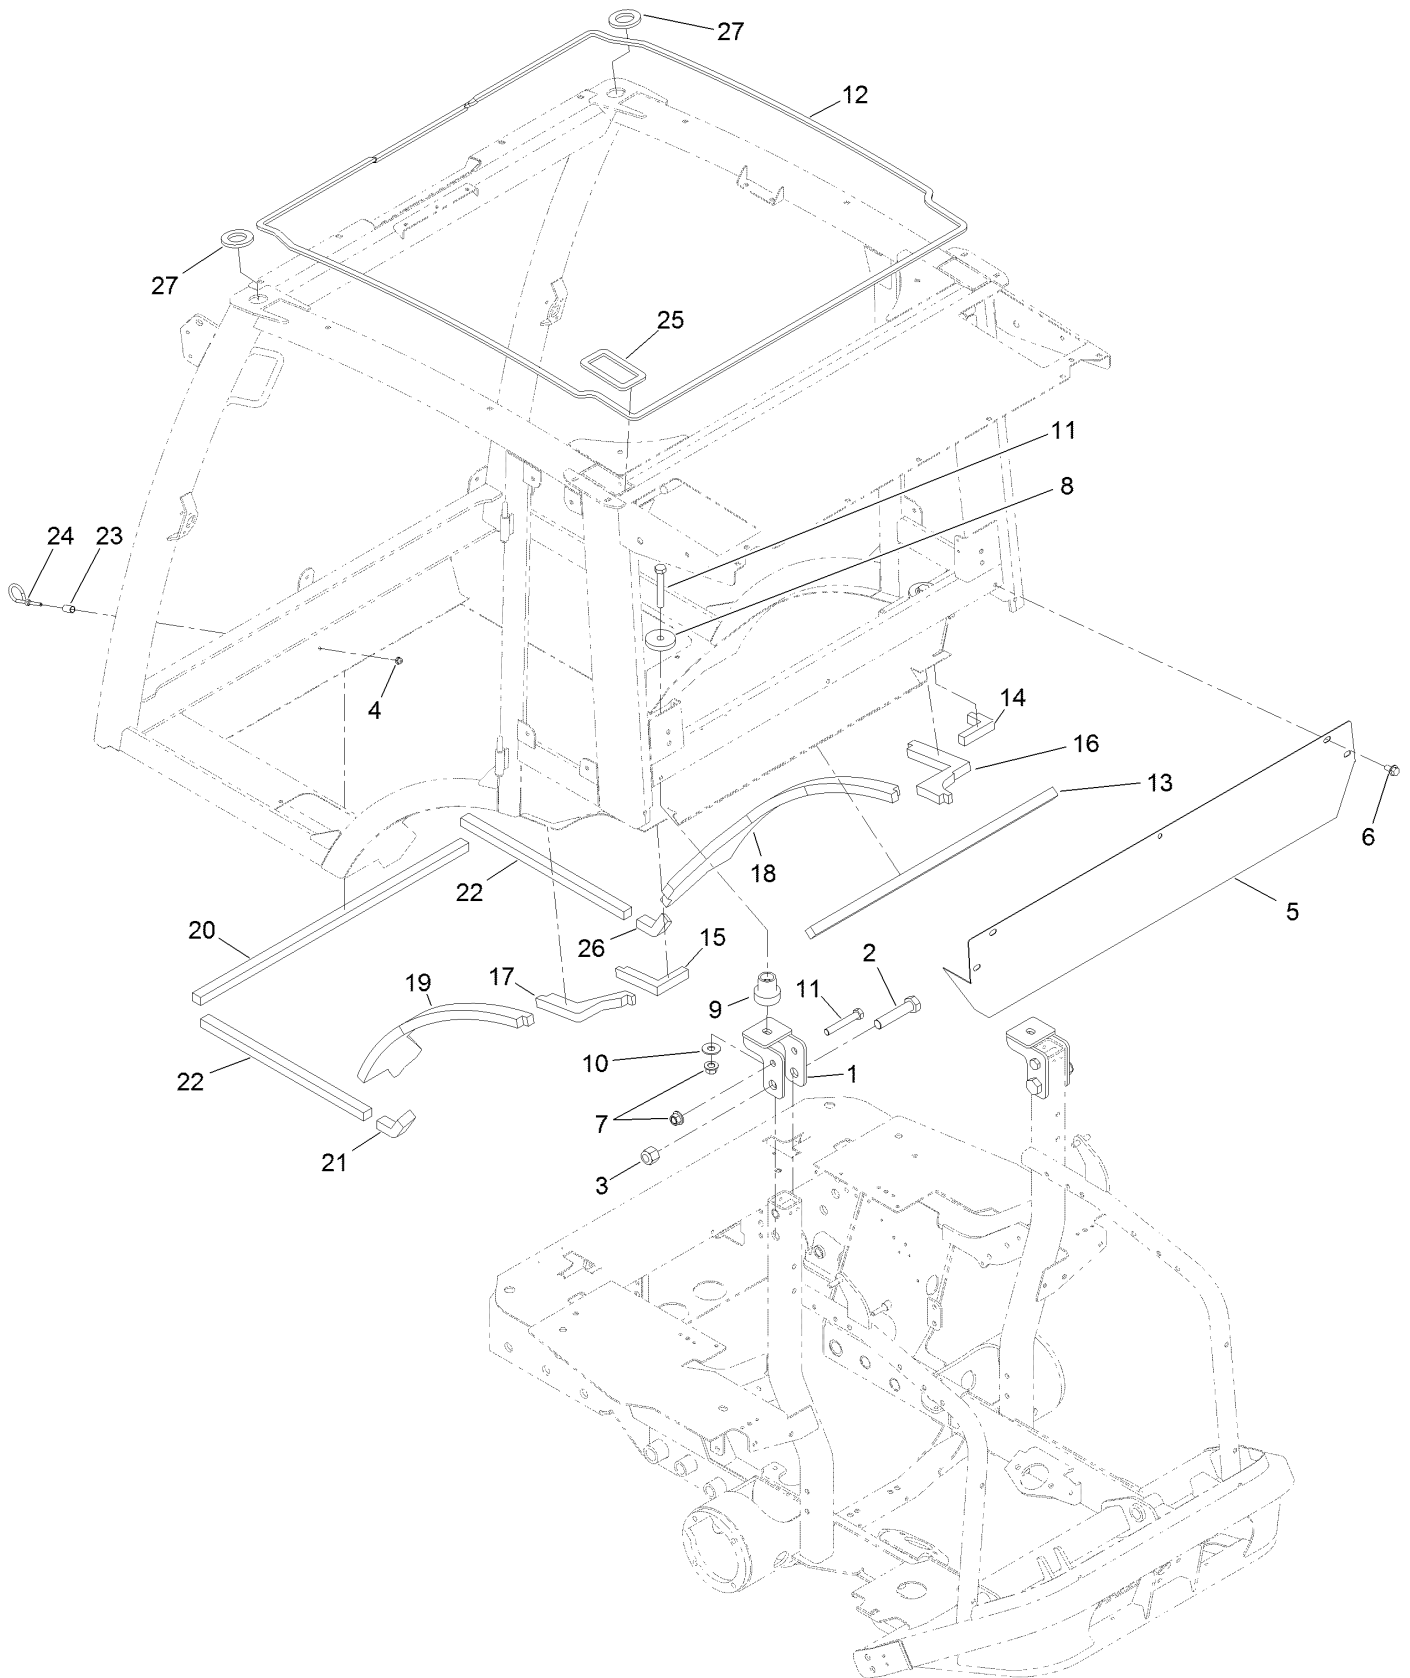

Rear Mount and Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9745-03	2	Mount-Rear	15	130-5467	1	Seal-Foam, LH Rear
2	328-5	2	Screw-HH	16	130-5466	1	Seal-Foam, RH Mid
3	3296-51	2	Nut-Lock, NI	17	130-5465	1	Seal-Foam, LH Mid
4	104-7201	1	Nut-HF, NI	18	130-5464	1	Seal-Foam, RH Tank
5	130-5882-03	1	Cover-Access, Hose	19	130-5463	1	Seal-Foam, LH Tank
6	110-9380	5	Screw-HWH	20	125-9585	1	Seal-Foam, Front
7	99-5107	4	Nut-Lock	21	130-5884	1	Seal-Foam, LH Side
8	115-5519	2	Washer-Plain	22	130-5883	2	Seal-Foam
9	110-5954	2	Mount-Center, Bonded	23	85-0290	1	Spacer-Pivot, Seat
10	3256-6	2	Washer-Flat	24	107-3908	1	Guide-Rope, Upper
11	112-7264	4	Screw-HH	25	130-5855	2	Seal-Tube, Rear
12	130-0586	1	Seal-Foam, Frame Roof	26	130-5885	1	Seal-Foam, RH Side
13	125-9587	1	Seal-Foam, Rear	27	133-0982	2	Tube-Seal, Front
14	130-5468	1	Seal-Foam, RH Rear				


Rear Window Assembly

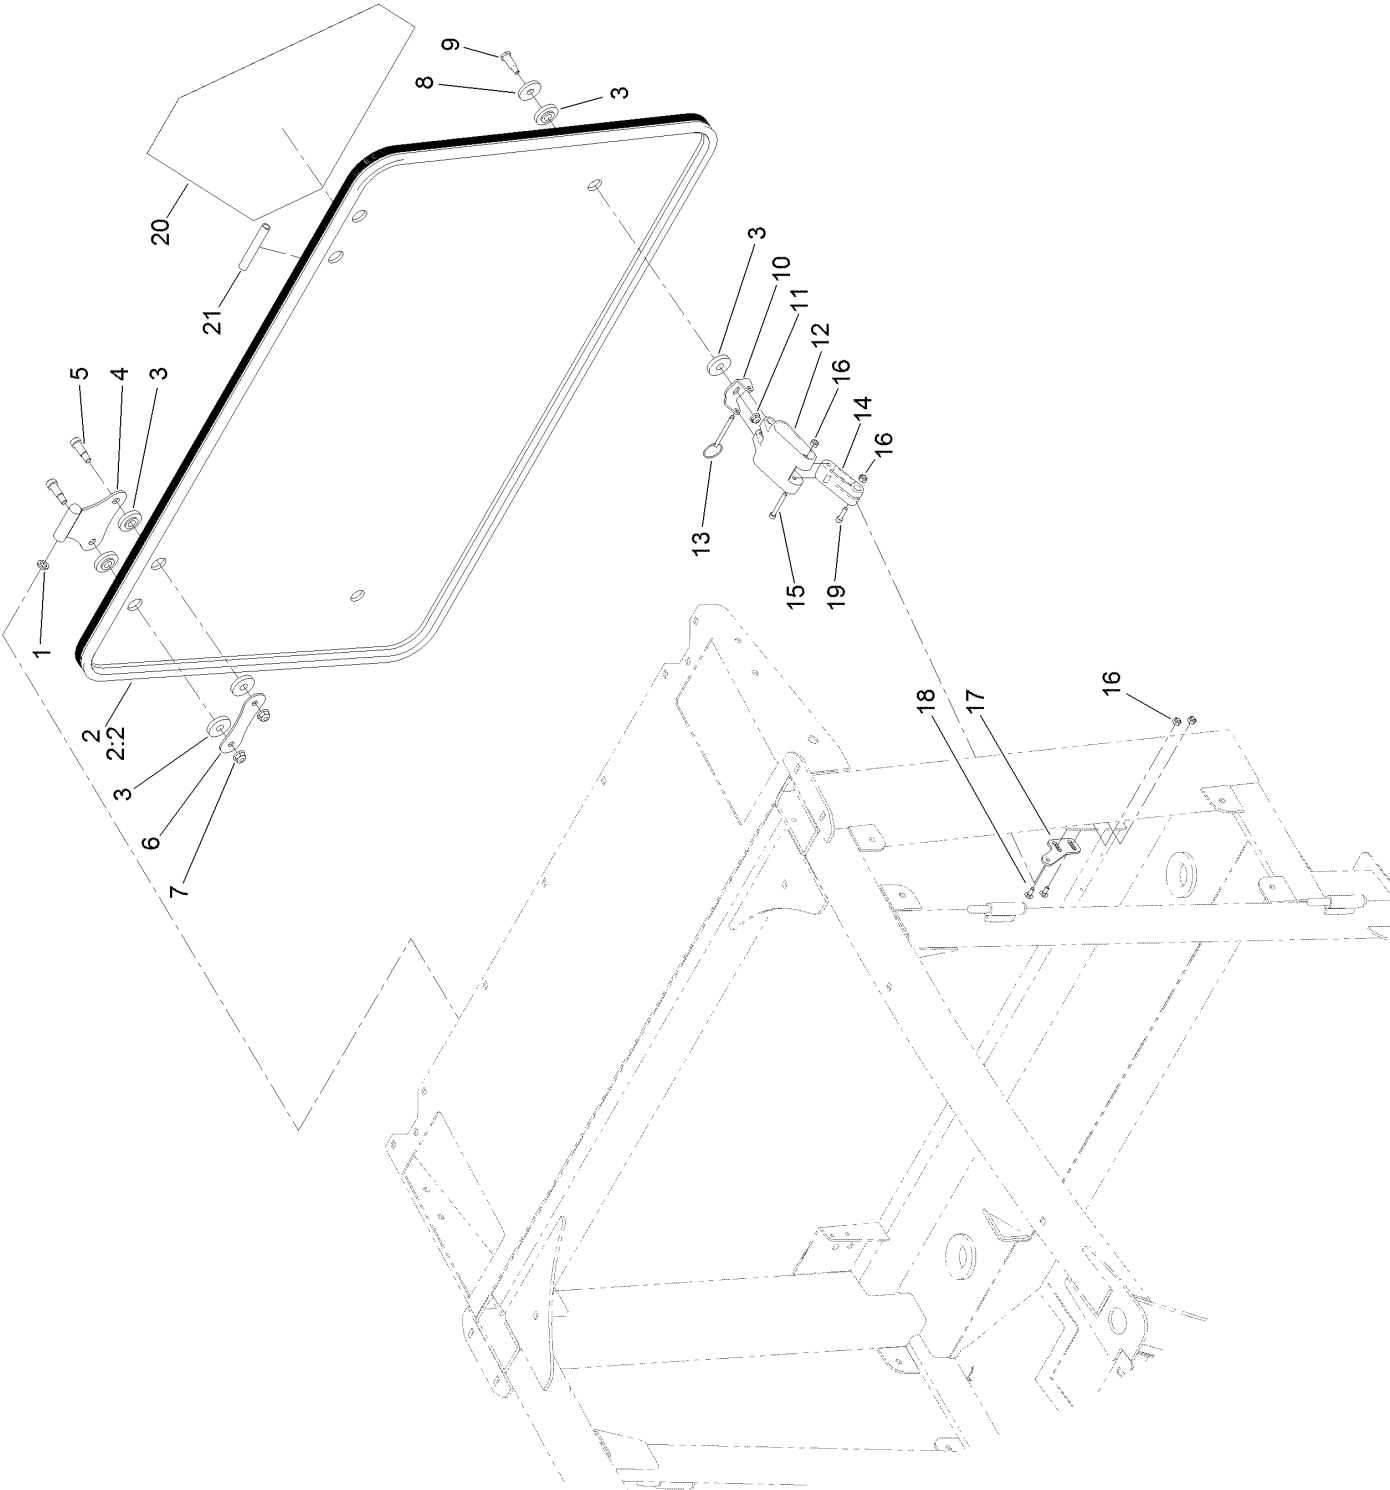

Rear Window Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8441	2	Washer-Spacer	11	104-7201	2	Nut-HF, NI
2	130-5673	1	Rear Window ASM	12	125-9792	2	Handle-Window
2:2	121-8609	1	Trim-Window, Rear	13	127-9850	2	Pin-Release, Quick
3	125-9982	12	Bushing-Flange	14	125-9793	2	Link-Window
4	121-8535-03	2	Hinge-Window	15	3274-59	2	Screw-HSH
5	125-9520	4	Screw-Shoulder, HSH	16	120-9681	8	Nut-Lock, NI
6	144-3307	2	Plate-Backer, Windshield	17	130-0590	2	Mount-Tab
7	104-8300	4	Nut-HF, NI	18	1-807513	4	Bolt-CARR
8	125-9676	2	Washer-Backup	19	3274-14	2	Screw-HSH
9	119-9812	2	Bolt-Shoulder	20	120-0250	1	Decal-Warning
10	144-3308	2	Mount-Latch	21	130-5578	2	Tubing-Seal, Rubber


Hose and Washer Bottle Assembly (Tier 4)

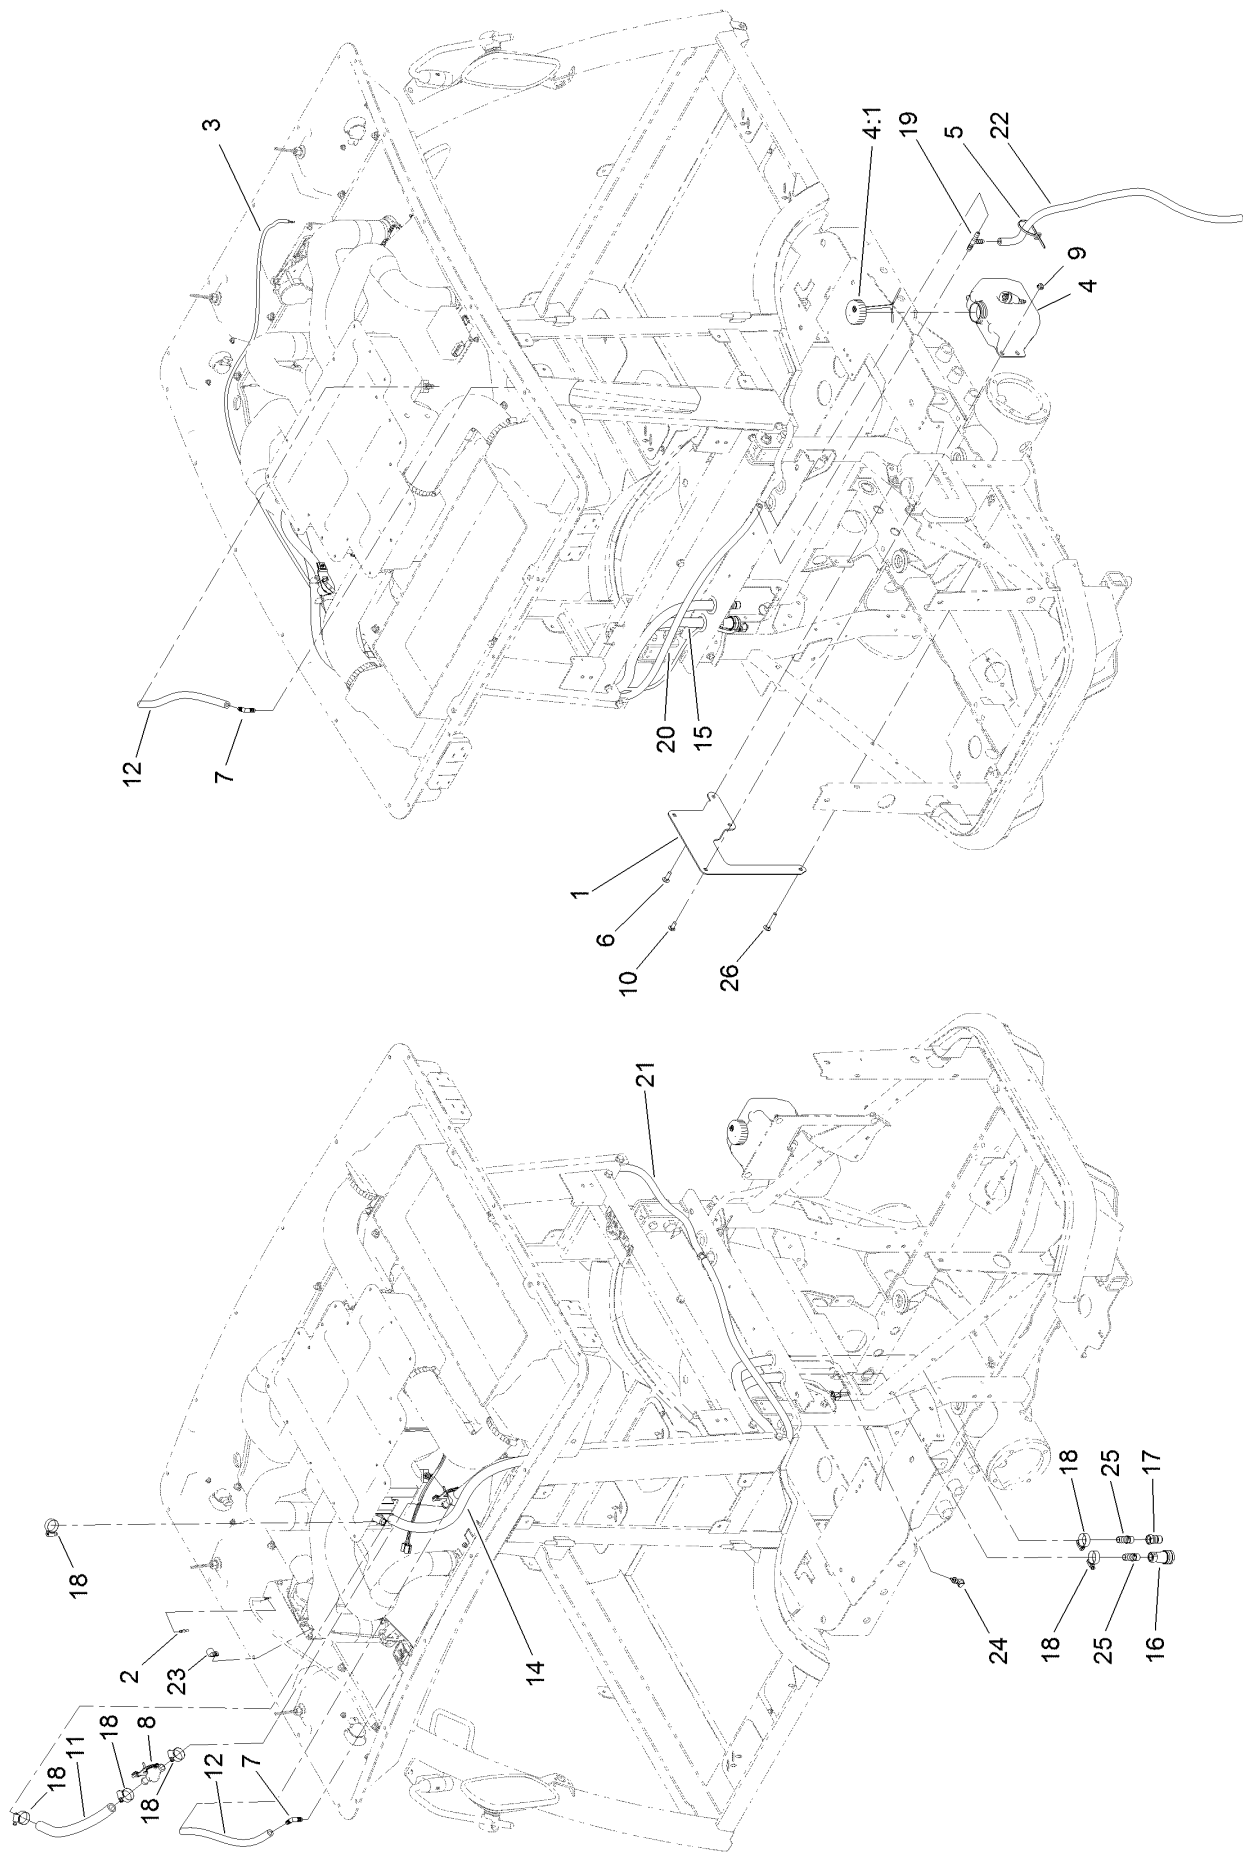

Hose and Washer Bottle Assembly (Tier 4) (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-0298-03	1	Bracket-Bottle, Washer Fluid	14	127-9907	1	Hose-Heater
2	127-9905	1	Fitting-Hose, Barb	15	127-9908	1	Hose-Heater
3	127-9902	1	Hose-Washer Fluid	16	125-9679	1	Coupler-Female
4	138-2702	1	Tank-Fluid, Washer	17	125-9680	1	Coupler-Male
4:1	125-5258	1	Lid-Tank, Washer Fluid	18	2412-129	6	Clamp-Hose
5	3290-378	1	Tie-Cable	19	127-9930	1	Fitting-Tee
6	3230-2	2	Bolt-CARR	20	127-9909	1	Hose-Drain
7	130-0578	2	Fitting-Barb, 90 DEG	21	127-9927	1	Hose-Drain
8	120-4947	1	Valve-Heater	22	130-5498	1	Hose-Drain
9	104-8300	5	Nut-HF, NI	23	2412-73	1	Clamp-R
10	3230-23	2	Bolt-CARR	24	130-5795	1	Fitting-Straight
11	125-9706	1	Hose-Heater	25	117-9410	2	Fitting-Straight
12	125-9865	2	Hose-Drain	26	3230-6	1	Bolt-CARR

Roof, Heat Mixing Box and Headliner Assembly

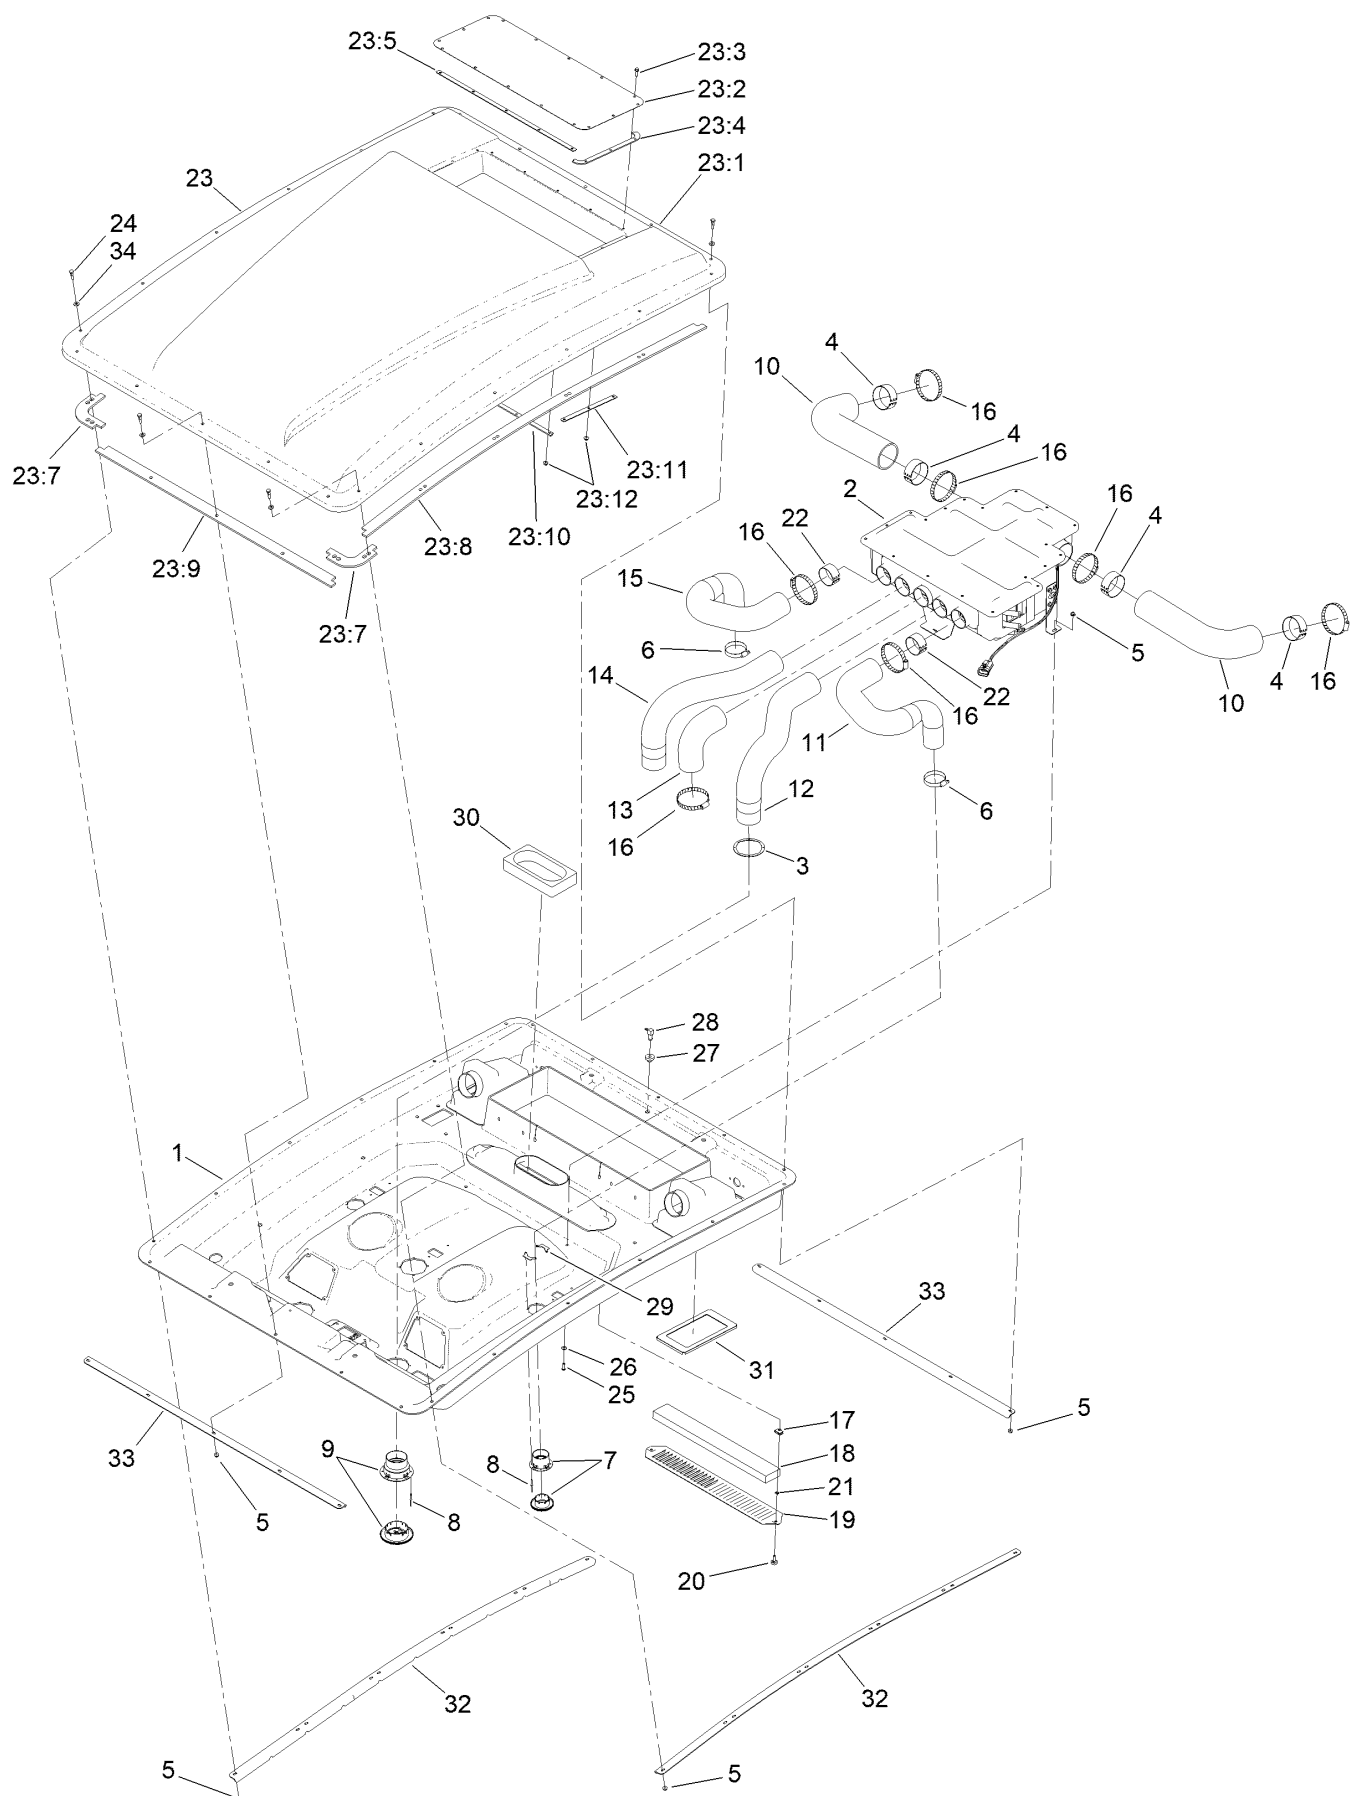


Roof, Heat Mixing Box and Headliner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-6760	1	Headliner ASM	23		1	Roof ASM ●
2	121-8603	1	Heat Mixing Box ASM	23:1	125-9607	1	Roof
3	130-0558	3	Backplate-Rivet	23:2	125-9527-03	1	Cover-Roof
4	130-5939	4	Tube-Support	23:3	32105-15	16	Screw-HWH
5	104-7201	24	Nut-HF, NI	23:4	132-3668	2	Seal-Cover, Short Side
6	2412-130	2	Clamp-Hose	23:5	132-3669	2	Seal-Cover, Long Side
7	130-0455	2	Louver-Round, Snap-In	23:7	130-5961	4	Seal-Corner
8	125-7503	20	Rivet-Pop	23:8	130-5960	2	Seal-Side
9	130-0465	3	Louver-Round, Snap-In (4 Inch)	23:9	130-5962	2	Seal-Front, Rear
10	121-8473	2	Hose-Intake, Fresh Air	23:10	132-3670-03	2	Strap-Roof, Long
11	130-0440	1	Hose-Vent, LH	23:11	132-3671-03	2	Strap-Roof, Short
12	121-8477	1	Hose-Vent, Defrost (LH)	23:12	104-7201	16	Nut-HF, NI
13	130-0437	1	Hose-Vent, Center	24	136-8674	22	Bolt-Pivot, Eccentric
14	121-8478	1	Hose-Vent, Defrost (RH)	25	3274-69	2	Screw-HSBH
15	130-0441	1	Hose-Vent, RH	26	3256-1	2	Washer-Flat
16	2412-110	7	Clamp-Band/Screw	27	46-6560	1	Bushing
17	107069	2	Clip	28	104-5228	1	Fitting-Elbow, 90 DEG
18	125-9532	1	Filter-Cab, Inside	29	130-0445	4	Backplate-Rivet
19	125-9604-03	1	Plate-Cover, Recirculation	30	130-0444	1	Foam-Inlet, Airbox
20	125-7438	2	Knob-Screw, Thumb	31	132-3474	2	Insert-Seal, Filter
21	32115-15	2	Nut-Push	32	132-1461-03	2	Strap-Cab, Side
22	130-5938	2	Tube-Support	33	132-1462-03	2	Strap-Cab
				34	3256-74	22	Washer-Flat

● Not serviced separately


Headliner, Switch and Control Assembly

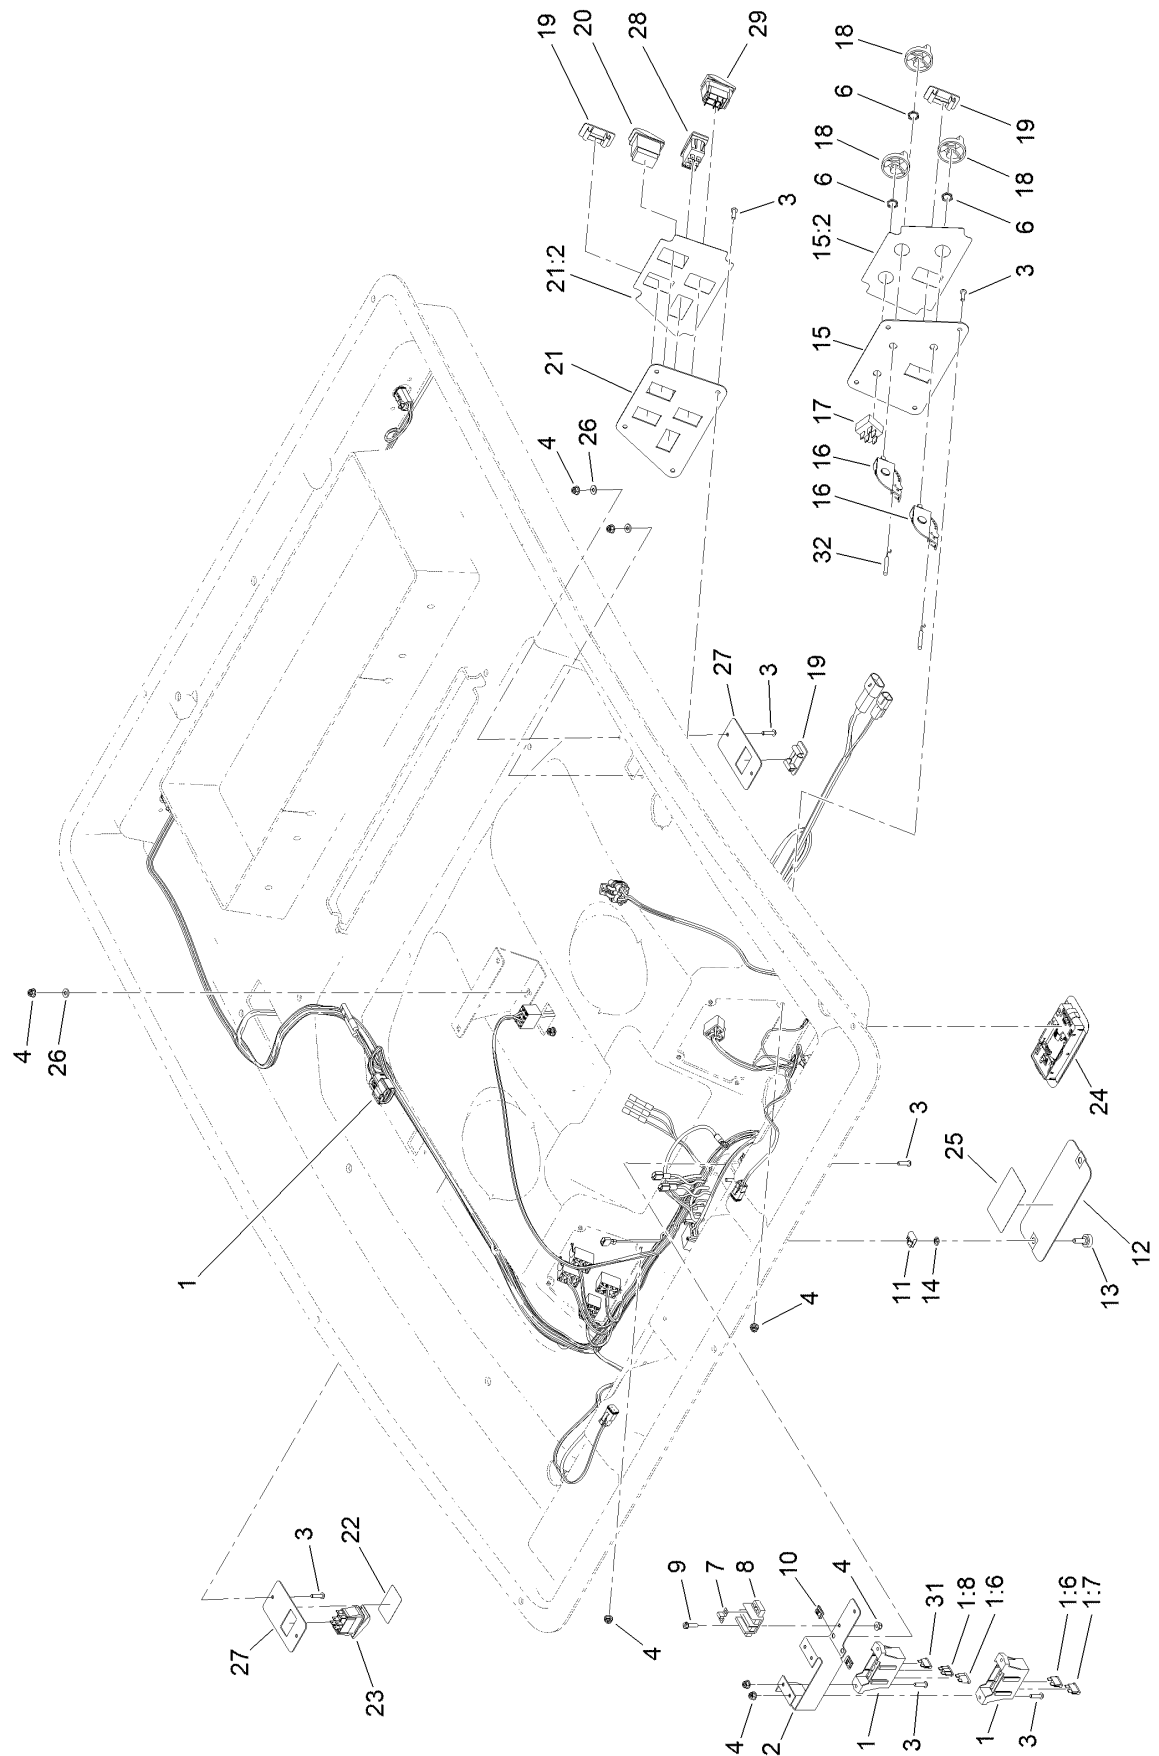

Headliner, Switch and Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-2237	1	Harness-Wire, Cab	16	144-3572	2	Control-Rotary, Linear
			Headliner	17	122-0150	1	Switch, Rotary
1:6	218-578	2	Fuse-Blade, 10 Amp	18	125-9510	3	Knob-Control
1:7	109355	1	Fuse-Blade, 15 Amp	19	99-7420	3	Plug-Hole
1:8	109102	1	Fuse-Blade, 25 Amp	20	95-8999	1	Switch-Rocker,
2	125-9606-03	1	Bracket-Fuse Block				On-None-On
3	104-2408	20	Screw-HSBH	21	125-9657	1	Panel-Light
4	120-4578	18	Nut-HF	21:2	125-9659	1	Decal, Lights
6	130-0588	3	Nut-Switch	22	125-9688	1	Decal-Washer
7	42863	1	Strip-Jumper	23	119-8355	1	Switch-Rocker
8	42862	1	Block-Terminal, Ground	24	125-7437	1	Light-Dome
9	32105-13	2	Screw-HWH	25	144-3324	1	Decal-Fuse Panel
10	107-1013	4	Nut-Speed	26	3256-14	4	Washer-Flat
11	609900	2	Nut-Speed	27	144-3306	2	Panel-Switch
12	125-9603-03	1	Plate-Cover, Fuse	28	107-8034	1	Switch-Rocker, On-Off-On
13	125-7438	2	Knob-Screw, Thumb	29	119-7769	1	Switch-Rocker, On/None/On
14	32115-15	2	Nut-Push	31	109355	1	Fuse-Blade, 15 Amp
15	144-3510	1	Panel-Air/Heat	32	144-3573	1	Cable-Control
15:2	144-3512	1	Decal, Air/Heat				


Rear Lamp, Work Light and Warning Light Assembly

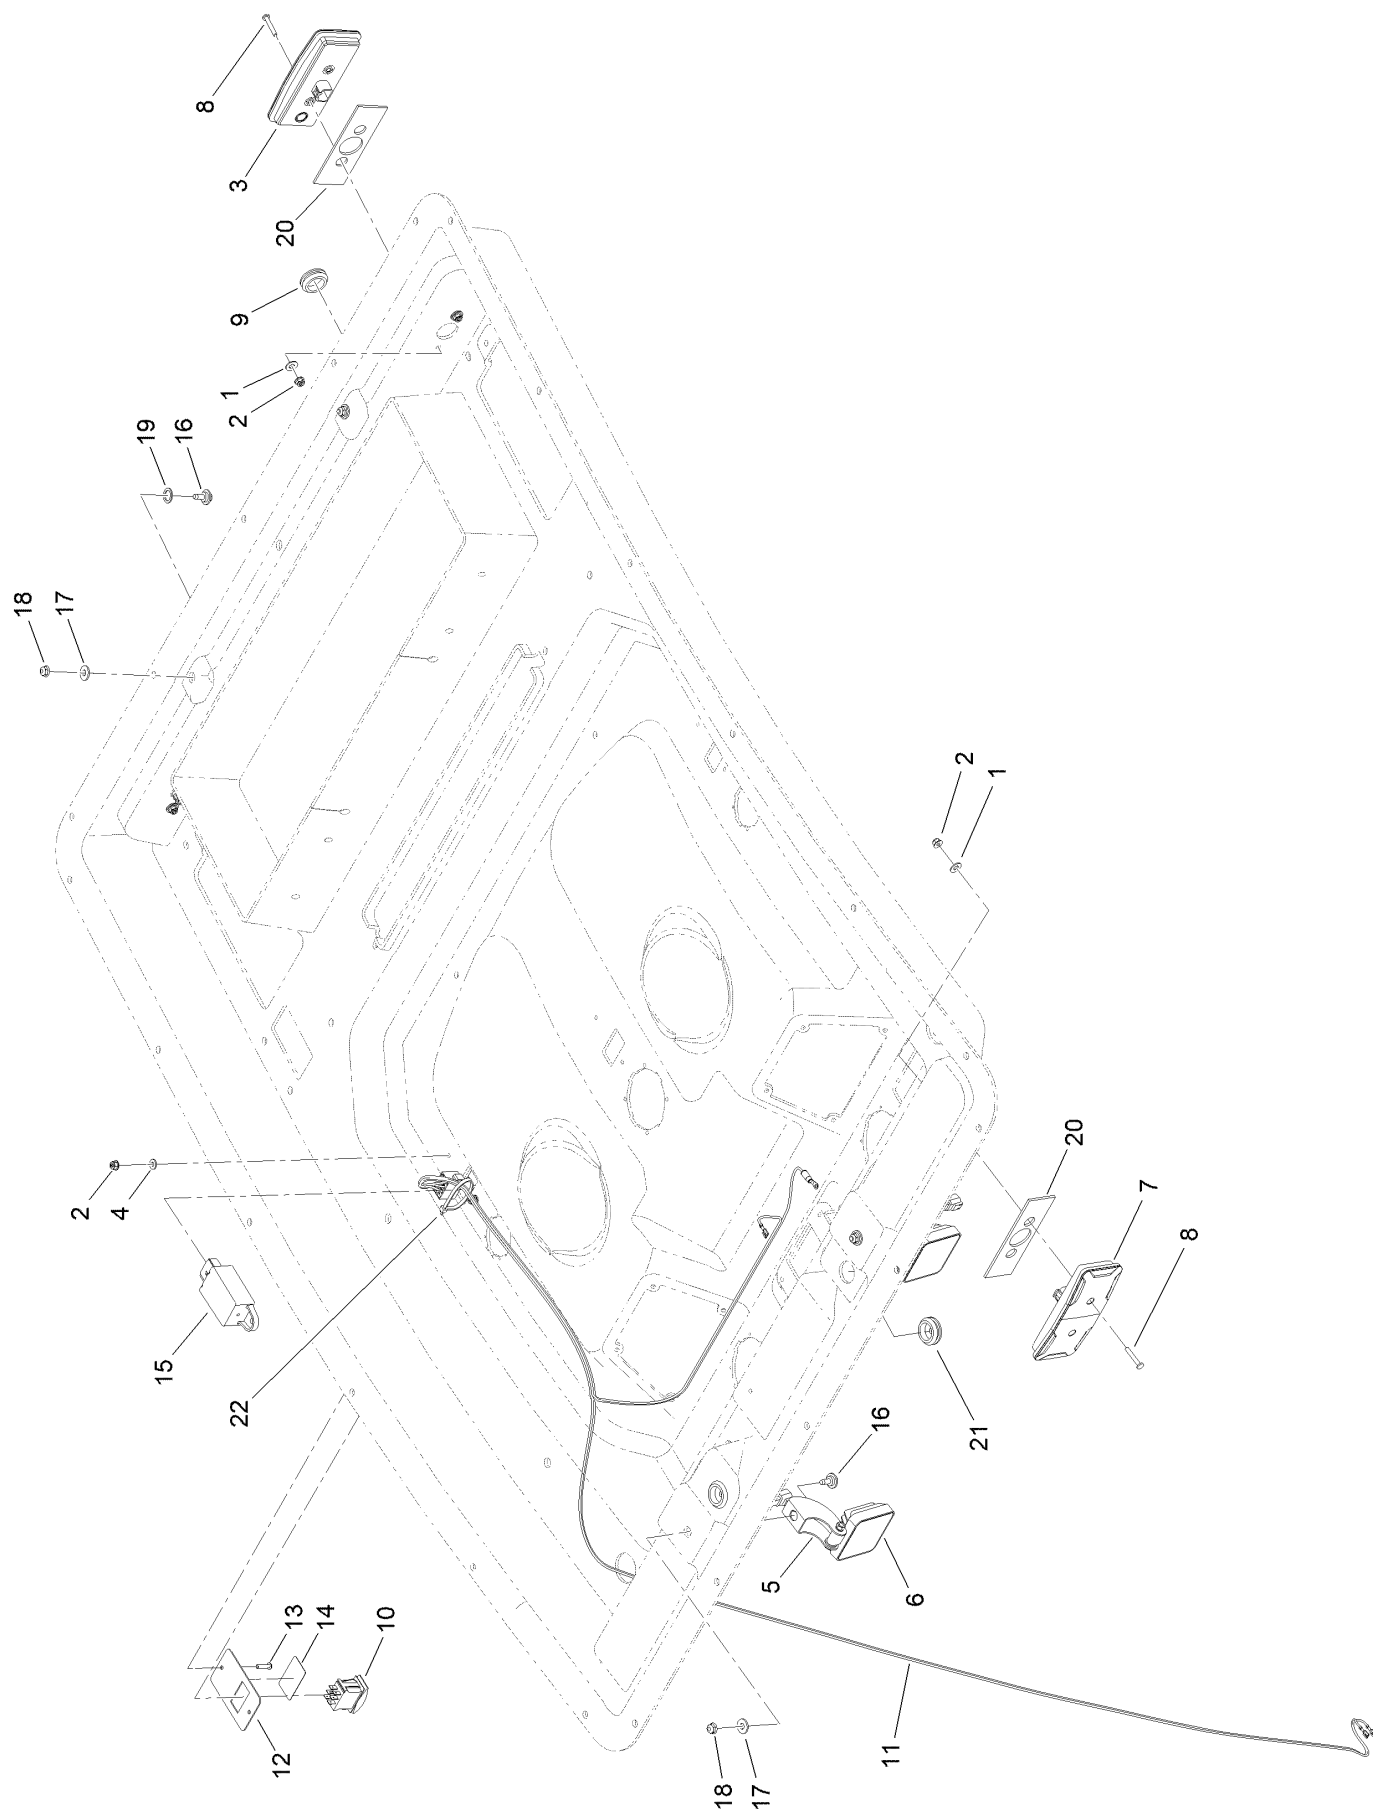

Rear Lamp, Work Light and Warning Light Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3256-1	8	Washer-Flat	12	144-3306	1	Panel-Switch
2	120-4578	10	Nut-HF	13	104-2408	2	Screw-HSBH
3	139-2071	2	Light-Rear Tail/Stop/Turn	14	130-0457	1	Decal-Power Point
4	3256-14	2	Washer-Flat	15	139-2080	1	Flasher-Dual Rate
5	140-1625	2	Mount-Light, Work	16	92-9698	4	Screw-Shoulder
6	140-6990	2	Light-Work, LED	17	3256-2	4	Washer-Flat
7	139-2070	2	Light-Front Turn/Pos	18	104-7201	4	Nut-HF, NI
8	3250-23	8	Screw-PPH	19	94-8196	2	Washer-Nylon
9	110-5333	2	Grommet-Plug	20	140-6764	4	Gasket-Light
10	100-1535	1	Switch-Rocker, (On)-Off-(On)	21	144-3281	2	Grommet-Harness, Plug
11	122-0158	1	Harness-Wire, Power Point	22	3290-378	1	Tie-Cable


Blower Mount Assembly

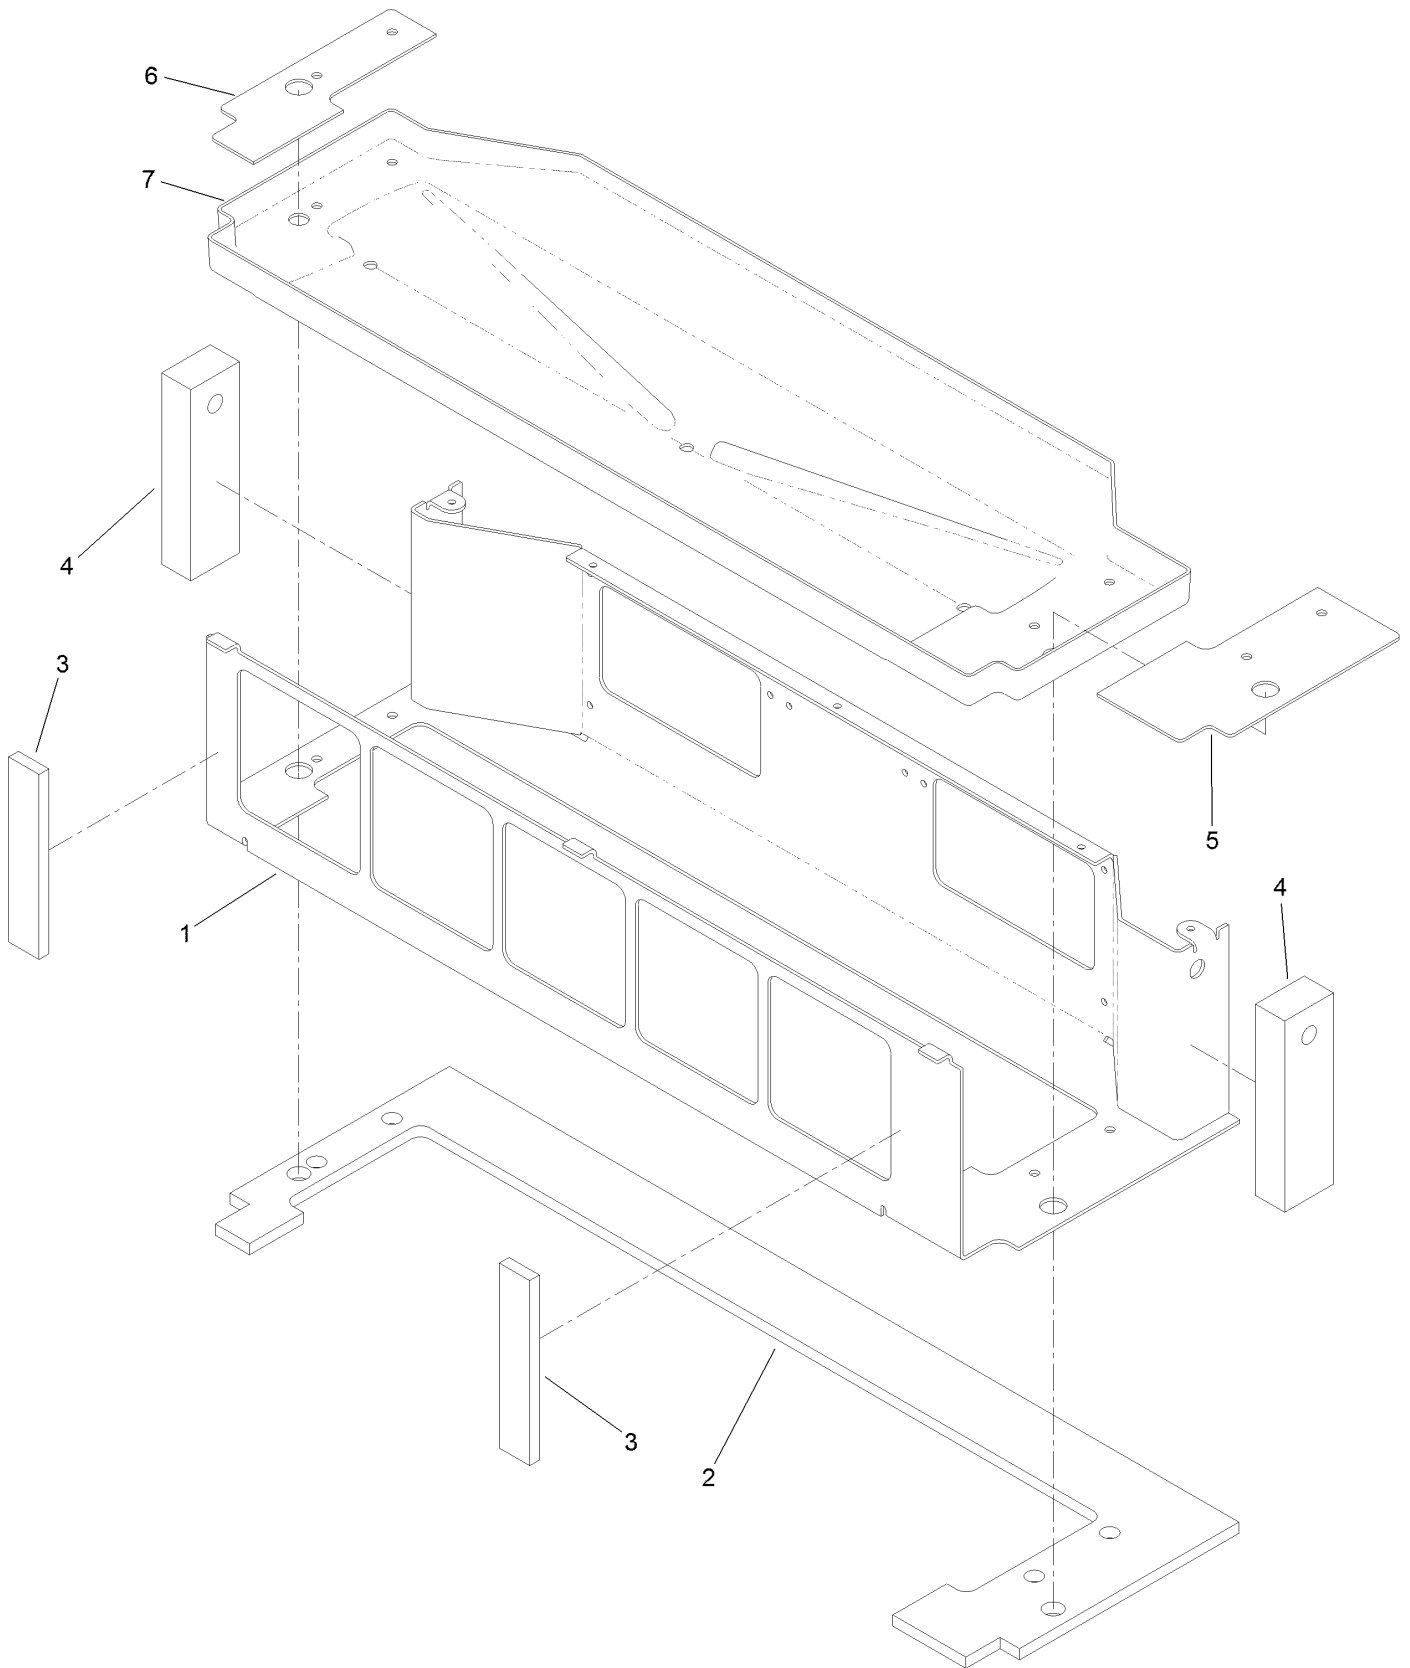

Blower Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5655-03	1	Bracket-Mount	5	130-5653	1	Gasket-Mount, LH Bracket
2	130-5659	1	Seal-Foam	6	130-5654	1	Gasket-Mount, RH Bracket
3	130-5808	2	Seal-Foam, Front	7	130-5664	1	Water-Tray
4	130-0602	2	Seal-End				


Heater Core Bracket and Cover Assembly

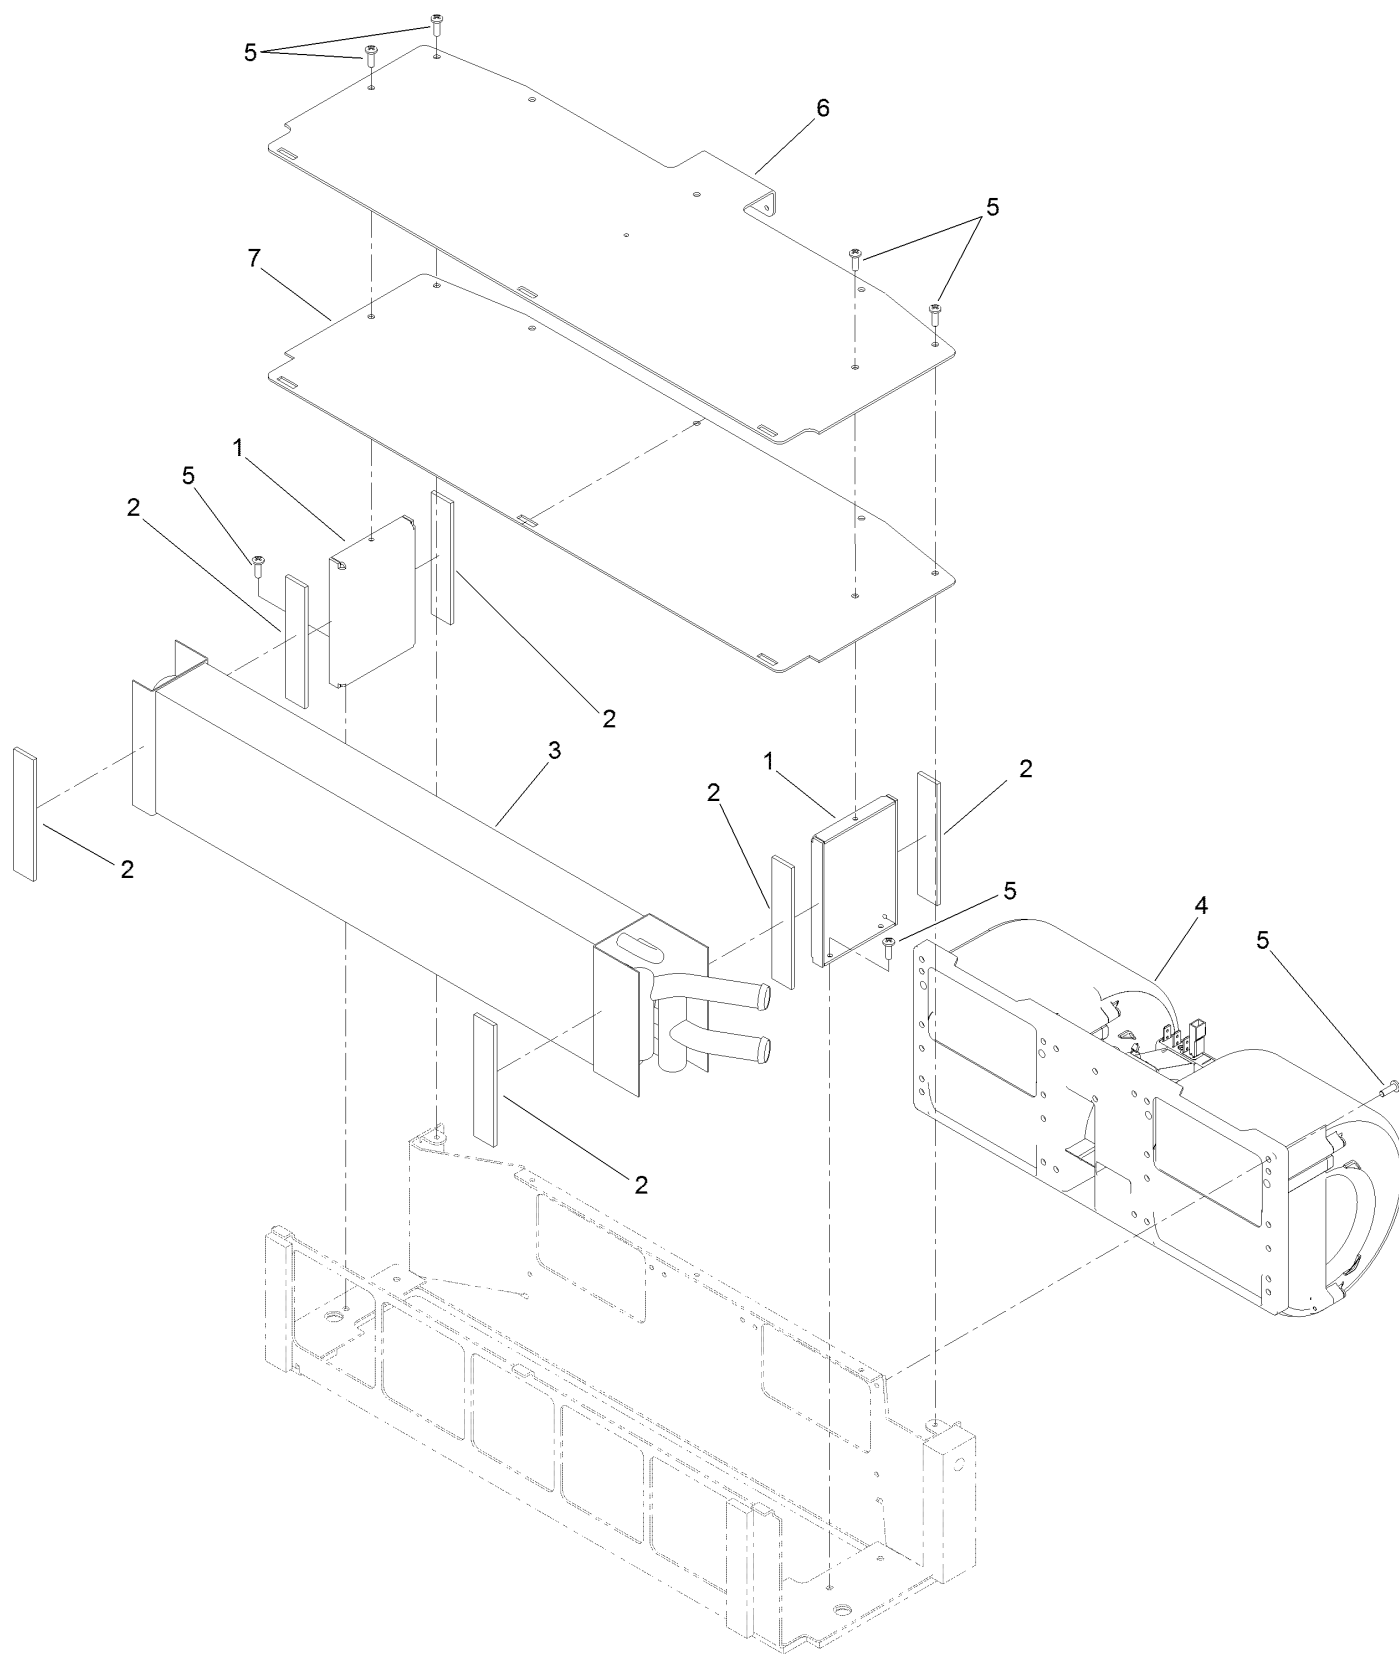

Heater Core Bracket and Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5812-03	2	Bracket-Mount, Heater Core	5	363-8245	17	Screw-TAP
2	130-5658	6	Gasket-Coil	6	130-5656-03	1	Cover, Bracket-Mount
3	127-9915	1	Core-Heater	7	130-5652	1	Gasket-Mount, Cover
4	121-8451	1	Fan-Blower				Bracket


Heat/AC Mixing Box Housing Assembly

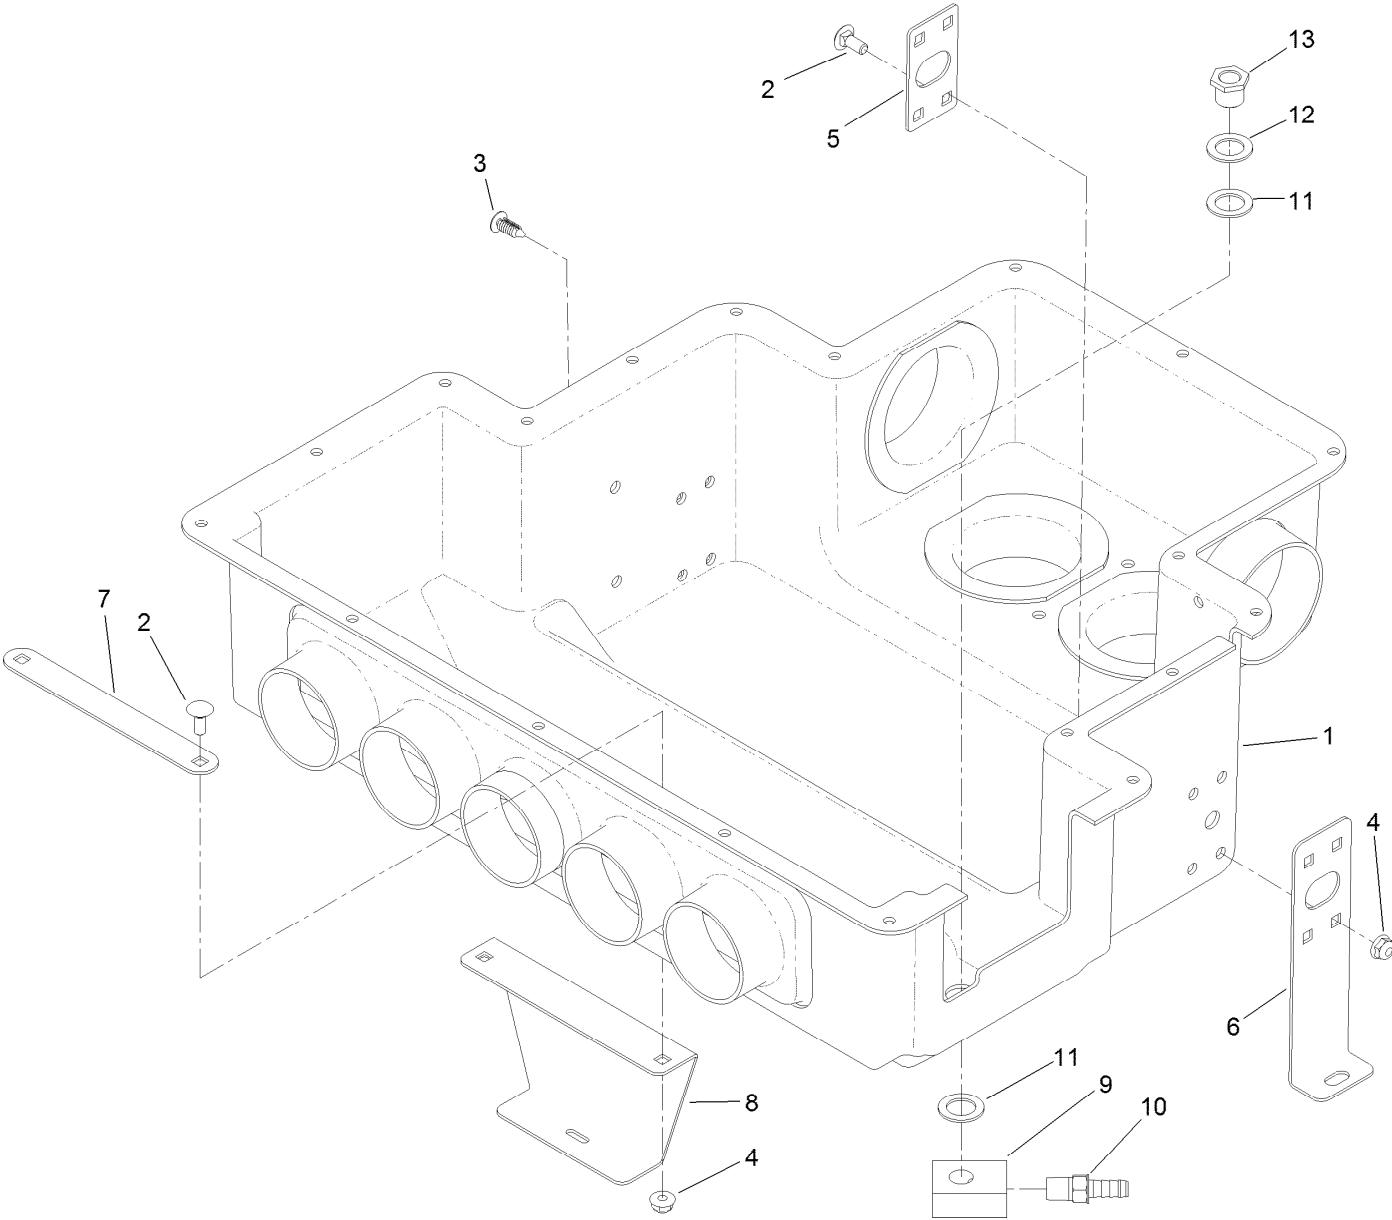

Heat/AC Mixing Box Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-5830	1	Housing-Heat/AC	8	130-0554	1	Bracket-Airbox, Center
2	3229-11	10	Screw-CARR	9	130-5601	2	Drain-Lower
3	114-4899	2	Rivet-Push	10	108-0342	2	Fitting-Straight
4	104-7201	10	Nut-HF, NI	11	121-6840	4	Washer-Rubber
5	130-5834	2	Bracket-Support	12	107-3041	2	Washer-Flat
6	130-5821	2	Bracket-Airbox, Side	13	130-0293	2	Drain-Upper
7	125-7504	1	Plate-Backer, Center				

Air Diverter Assembly

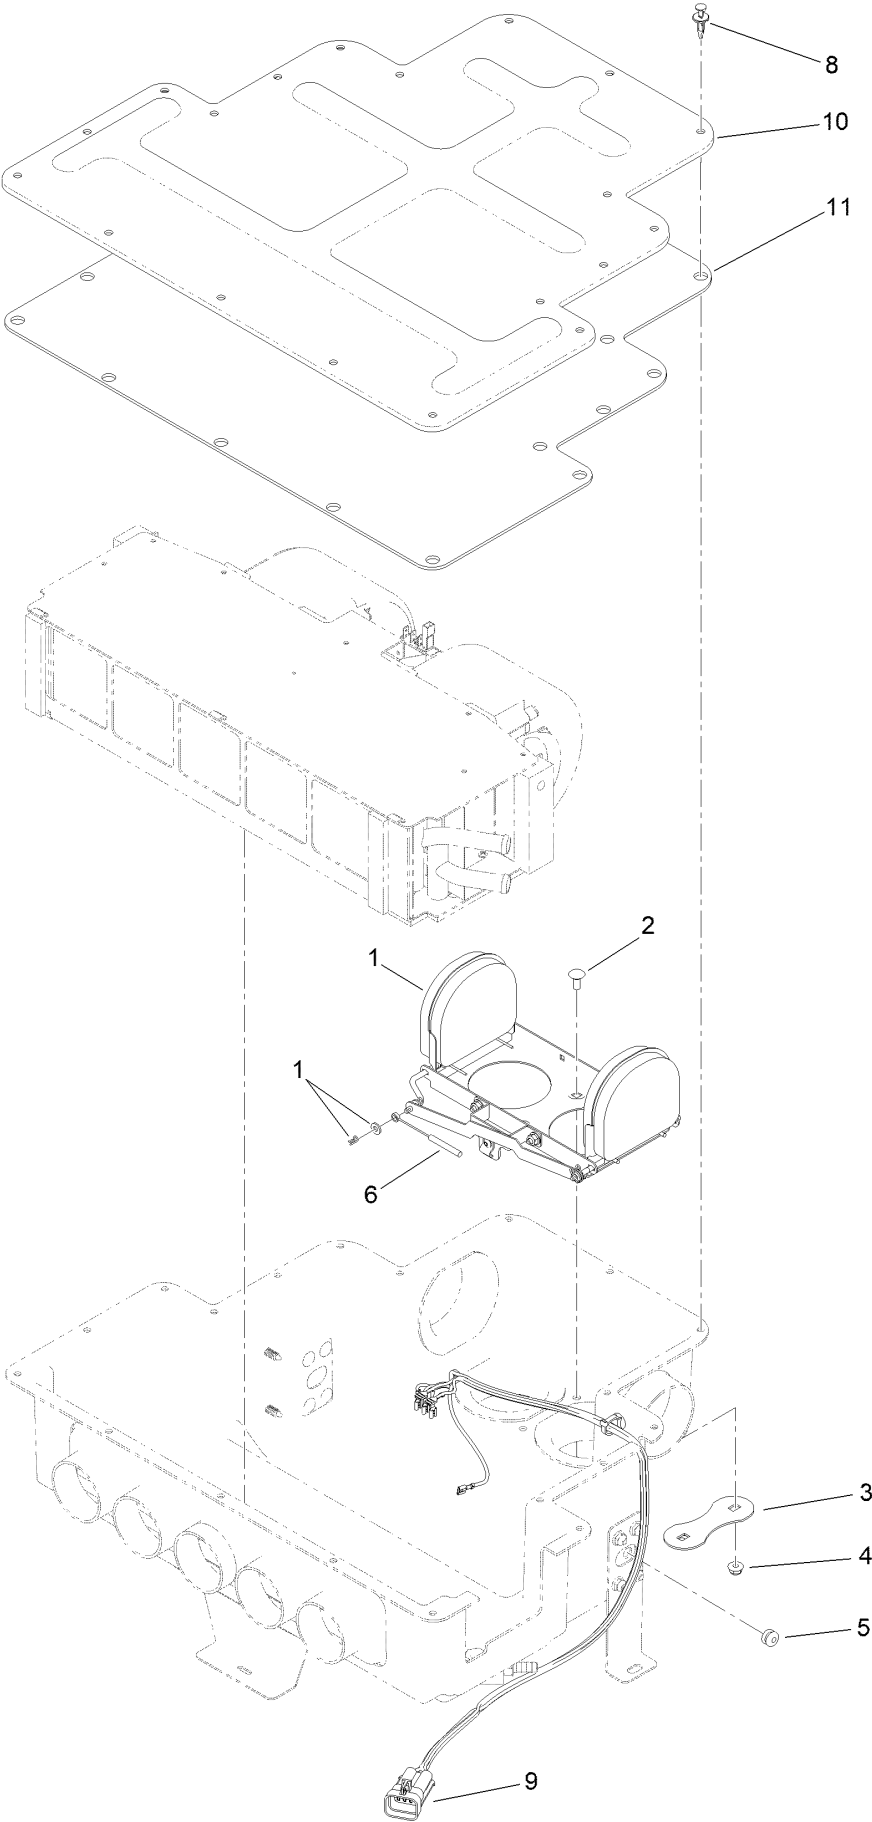

Air Diverter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-8369	1	Air Diverter ASM	8	125-9622	19	Rivet-Blind
2	3229-11	2	Screw-CARR	9	122-0153	1	Harness-Wire, Heat/AC Blower
3	121-8491	1	Plate-Support	10	121-8449	1	Housing-Ventilation, Upper
4	104-7201	2	Nut-HF, NI	11	130-5614	1	Insulation-Cover
5	125-7528	1	Grommet-Cable				
6	144-3574	1	Cable-Control				

This exploded perspective view illustrates the assembly of a vehicle interior trim component. The main rectangular panel (1) is shown with various mounting points and features. Callout 1 points to the main panel. Callout 2 indicates a lower trim piece. Callout 3 points to a horizontal trim bar. Callout 4 points to a side trim piece. Callout 5 points to a screw. Callout 6 points to a lower trim piece. Callout 7 points to a bracket. Callout 8 points to a screw. Callout 9 points to a screw. Callout 10 points to a circular trim piece. Callout 11 points to a screw. Callout 12 points to a screw. Callout 13 points to a screw. Callout 14 points to a side trim piece.

Air Diverter Assembly No. 121-8369 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9697	1	Base-Mount	8	613385	1	Clamp-Cable
2	121-8381	1	Shaft-Baffle, RH	9	108-2992	4	Pin-Hair
3	121-8382	1	Shaft-Baffle, LH	10	1-807513	2	Bolt-CARR
4	125-9698	2	Baffle-Air	11	120-4578	3	Nut-HF
5	3256-51	4	Washer-Flat	12	115-9830	1	Screw-HSBH
6	125-9696	1	Link-Baffle	13	3290-271	4	Rivet-Pop
7	121-8374	1	Mount-Cable	14	125-9699	4	Damper-Foam

Attachments and Accessories

For 30474 Polar Trac Cab Groundsmaster 7200 Series Mower

Product Name	Model/Part
Work Light Kit	114-5610
Exterior Mirror Kit.....	130-5448
Interior Mirror Kit.....	130-5449
Beacon Kit, 2015 and After Groundsmaster Series Traction Unit	31509
LED Work Light Kit, 2015 and After Cab and 2 Post ROPS Extension Kit.....	31596

Notes:



Count on it.