

Basket Tipper Kit for Reelmaster® 5500D

Part No. 100-9945

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

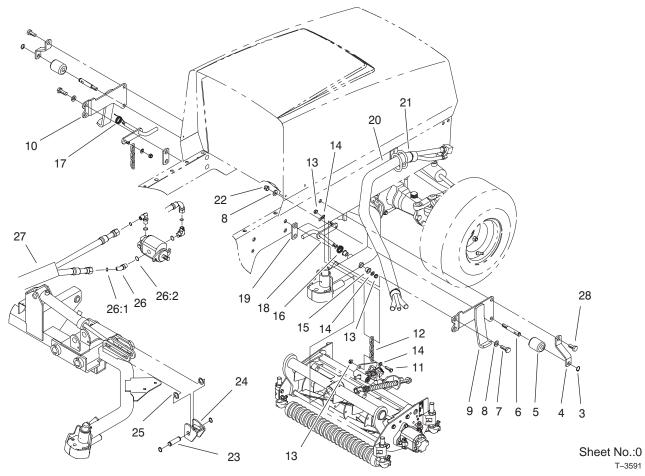

Basket Tipper Assembly

| Ref. No. | Part No. | Qty. | Description |
|----------|-------------|--------|--------------------|
| 3 | 32151–62 | 2 | Ring-Retaining |
| 4 | 100-9930-03 | 2 | Bracket-Roller |
| 5 | 100–9947 | 2 | Roller–Reel |
| 6 | 98-3934 | 2 4 | Pin-Roller |
| 7 | 325–6 | 4 | Screw-HH |
| 8 | 3256–26 | 6 | Washer–Flat |
| 9 | 100-9929-03 | 1 | LH Tipper ASM |
| 10 | 100-9928-03 | 1 | RH Tipper ASM |
| 11 | 323–7 | 2 | Screw-HH |
| 12 | 5–1096 | 2 | Chain–Lift |
| 13 | 3296–39 | 6 | |
| 14 | 3256–24 | 6 | Washer–Flat |
| 15 | 256–287 | 4 | |
| 16 | 104–1805 | 1 | Spring-Torsion, LH |
| 17 | 98–3929 | 1 | Spring-Torsion |
| 18 | 104–1800–03 | 2 | Pivot Rod ASM |
| 19 | | 2 | Plate-Frame |
| 20 | | 2 | Sleeve–Protective |
| 21 | | 6 | Tie–Cable |
| | 3296–23 | 2 | Nut-Lock, NI |
| | 100–9938 | 2 | |
| 24 | | 2 | Cylinder Stop ASM |
| 25 | | 4 | |
| | 340–101 | 1 | Fitting-HYD, 90° |
| 26:1 | | 1 | O–Ring |
| 26:2 | 237–79 | 1 | O–Ring |

| Ref. No. | Part No. | Qty. | Description |
|----------|---------------------------|------|-------------------------------|
| 27 28 | Part No. 104–1817 3213–3 | Qty. | Sleeve—Protective Screw—HH |
| | | | |