



48cm Rear-Bagging Mower

Model No. 20831-230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

 
Contents

Description	Page	Description	Page
Deck and Kicker Assembly	3	Air Cleaner Assembly	
Engine and Blade Assembly	4	Briggs and Stratton Model 122602–0120–E1	14
Height–Of–Cut and Wheel Assembly	5	Governor Assembly	
Lower Handle and Adjusting Knob Assembly ..	6	Briggs and Stratton Model 122602–0120–E1	15
Grass Bag Assembly	7	Muffler and Fuel Tank Assembly	
Rear Axle Assembly	8	Briggs and Stratton Model 122602–0120–E1	16
Cylinder Assembly		Blower Housing Assembly	
Briggs and Stratton Model 122602–0120–E1	9	Briggs and Stratton Model 122602–0120–E1	17
Cylinder Head Assembly		Starter Assembly	
Briggs and Stratton Model 122602–0120–E1	10	Briggs and Stratton Model 122602–0120–E1	18
Crankshaft Assembly		Gasket Assembly	
Briggs and Stratton Model 122602–0120–E1	11	Briggs and Stratton Model 122602–0120–E1	19
Crankcase Assembly		Carburetor Overhaul Kit Assembly	
Briggs and Stratton Model 122602–0120–E1	12	Briggs and Stratton Model 122602–0120–E1	20
Carburetor Assembly			
Briggs and Stratton Model 122602–0120–E1	13		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

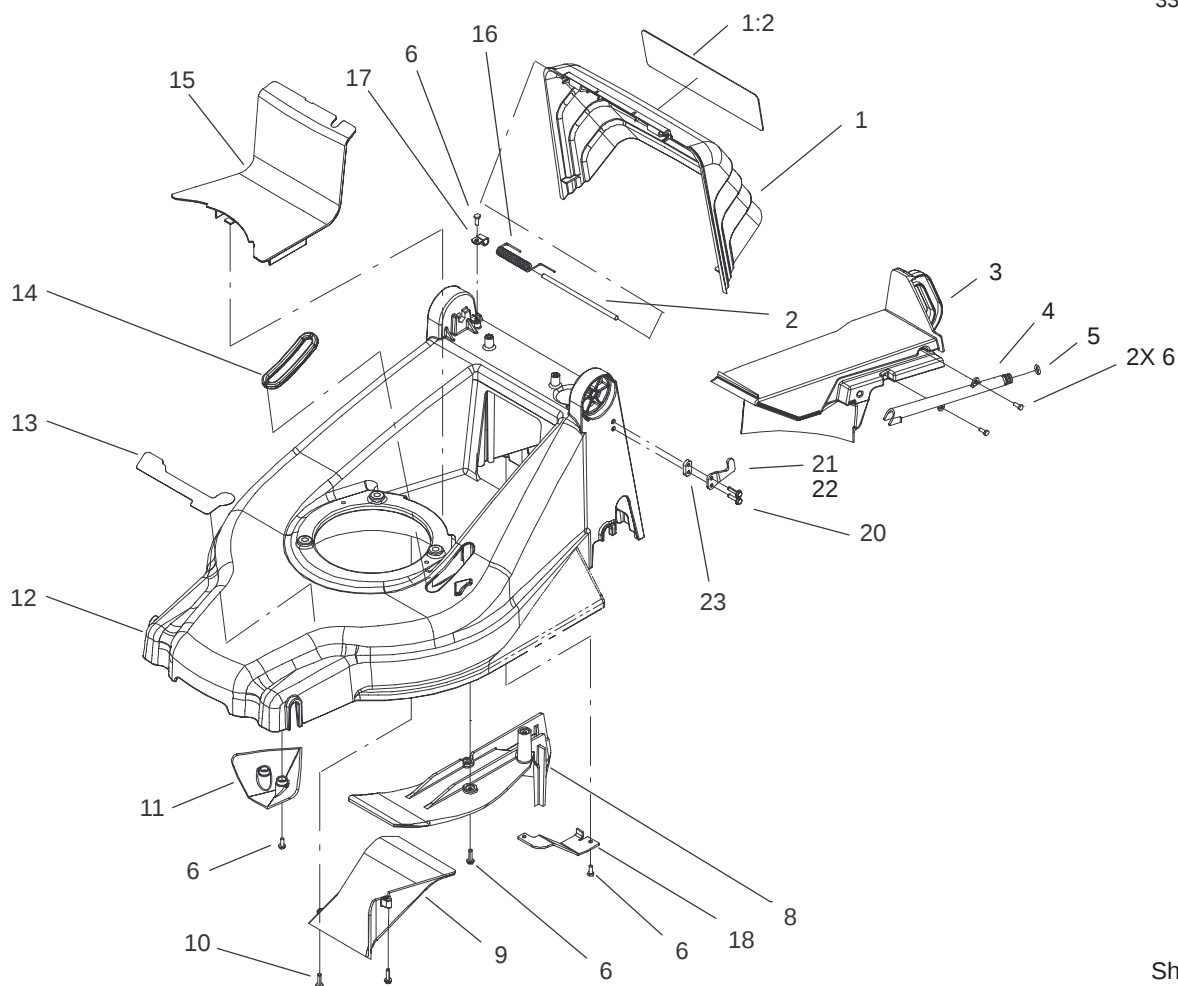


Sheet No.:2

Deck and Kicker Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-9115	1	Door ASM				
1:2	93-4105	1	Decal-Danger				
2	100-1509	1	Rod-Pivot				
3	100-1505	1	Plug-Kicker, Recycler				
4	100-1522	1	Fitting-Washout				
5	46-6290	1	O-Ring				
6	32144-1	11	Screw-Taptite				
8	99-6486	1	Cover-Kicker, Rear				
9	100-1506	1	Ramp-Discharge				
10	100-4352	2	Screw-HWH				
11	99-6485	1	Kicker-Front				
12	104-7579	1	Deck				
13	100-4354	1	Decal-Recycler				
14	100-3932	1	Boot-HOC				
15	99-6479	1	Cover-Belt				
16	104-7594	1	Spring-Torsion				
17	98-2256	2	Clamp				
18	100-9123-03	1	Bracket-Deck				
20	100-4351	4	Screw-HWH				
21	104-7557	1	Hook-Left				
*22	104-7558	1	Hook-Right				
23	104-7556	2	Spacer				

 * Not illustrated

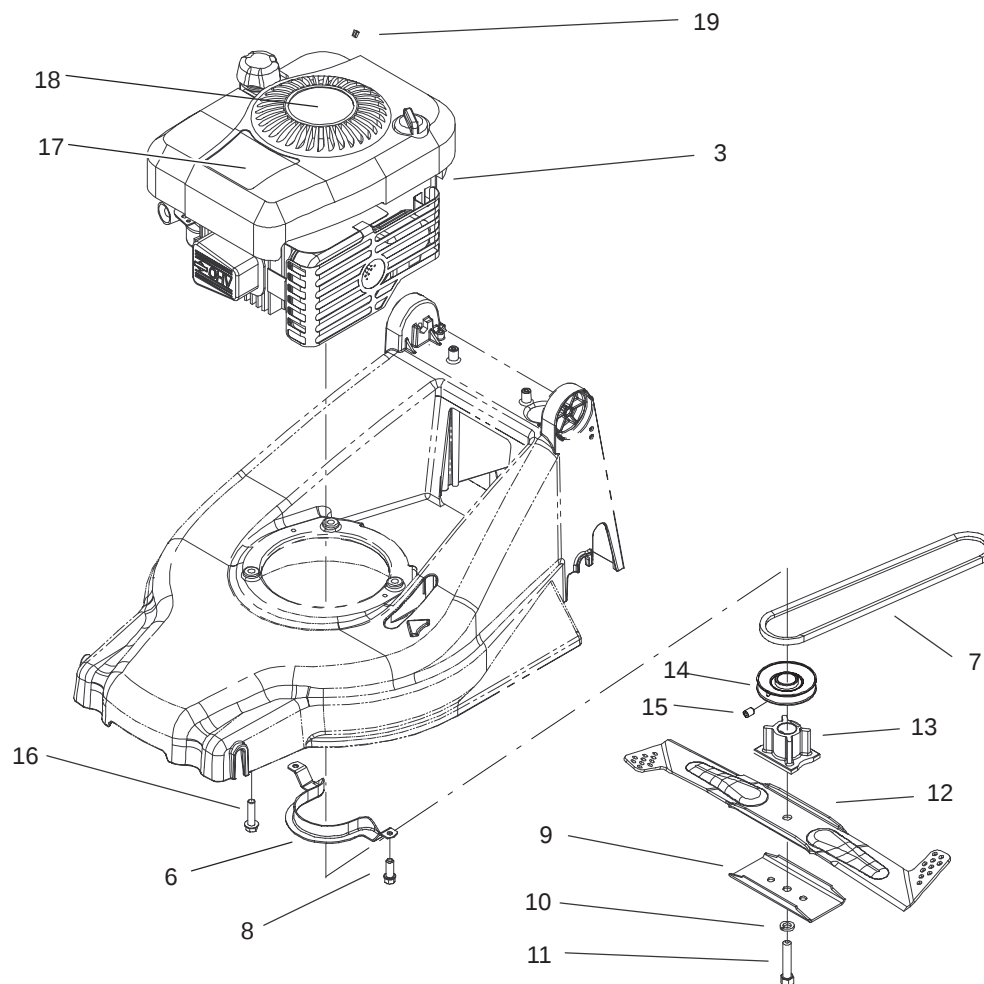


Sheet No.:3

Engine and Blade Assembly

Ref. No.	Part No.	Qty.	Description
☆3		1	Engine—B & S Model 122602—0120—E1
6	100—1523—03	1	Guide—Belt, Engine
7	93—0232	1	V—Belt
8	32144—4	2	Screw—HWH
9	80—0510—03	1	Stiffener—Blade
10	3253—22	1	Washer—Lock
11	100—4368	1	Bolt—Blade
12	105—0525—03	1	Blade
13	104—7554	1	Retainer—Blade
14	100—1102	1	Pulley ASM
15	104—0214	1	Screw—Set
16	32144—102	3	Screw—HWH
17	99—6015	1	Decal—Recoil
18	99—6014	1	Decal—Recoil
19	2210—316	1	Stop—Rope

Ref. No.	Part No.	Qty.	Description

 
☆ Not serviced separately

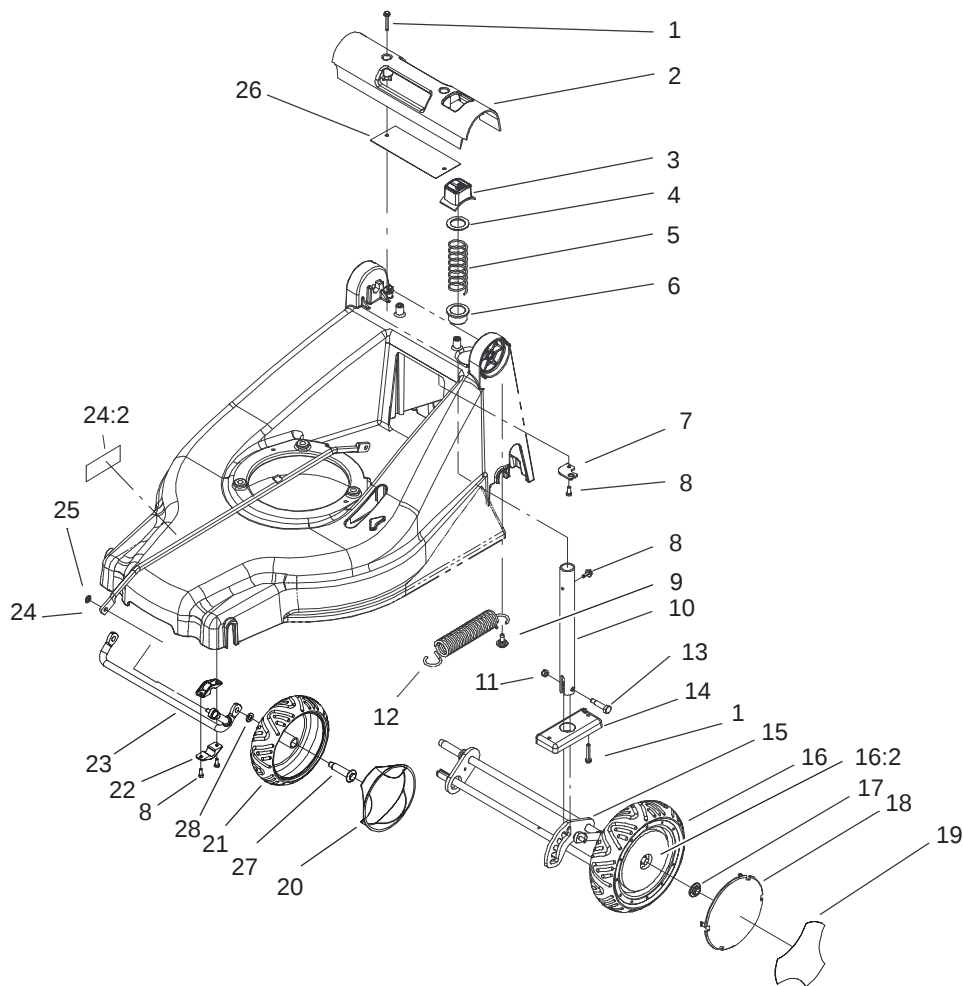

Sheet No.:4

Height-Of-Cut and Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-4352	4	Screw-HWH	23	104-7562	1	Front Axle ASM
2	99-6487	1	Handle-Deck	24	100-9116	1	Rod ASM
3	99-6480	1	Button-HOC	24:2	100-4355	1	Decal-HOC
4	88-7540	1	Washer-Backup	25	100-3939	2	Palnut
5	99-6481	1	Spring-Compression, HOC	26	100-4383-03	1	Cover-Handle
6	99-6483	1	Bushing-HOC	27	614650	2	Bolt-Shoulder
7	100-1525	1	Bracket-Cable, Traction	28	40-1940	2	Washer
8	32144-1	6	Screw-Taptite				
9	92-9698	1	Screw-Shoulder				
10	99-6458	1	Pipe-HOC				
11	3296-73	1	Nut-Lock, NI				
12	100-4384	1	Spring-Extension, HOC				
13	99-6459	1	Bolt-Shoulder				
14	99-6460	1	Plate-Support, HOC				
15	99-6478	1	Rear Axle ASM				
16	99-6471	2	Wheel ASM				
16:1:2	27-6250	2	Bushing				
17	100-4370	2	Nut-Lock, Flanged				
18	100-4366	2	Cover-Smart Wheel				
19	100-9114	2	Decal-Smart Wheel				
20	95-6543	2	Cover-Wheel				
21	99-6470	2	Wheel ASM				
22	100-1500	4	Mount-Axle, Front				

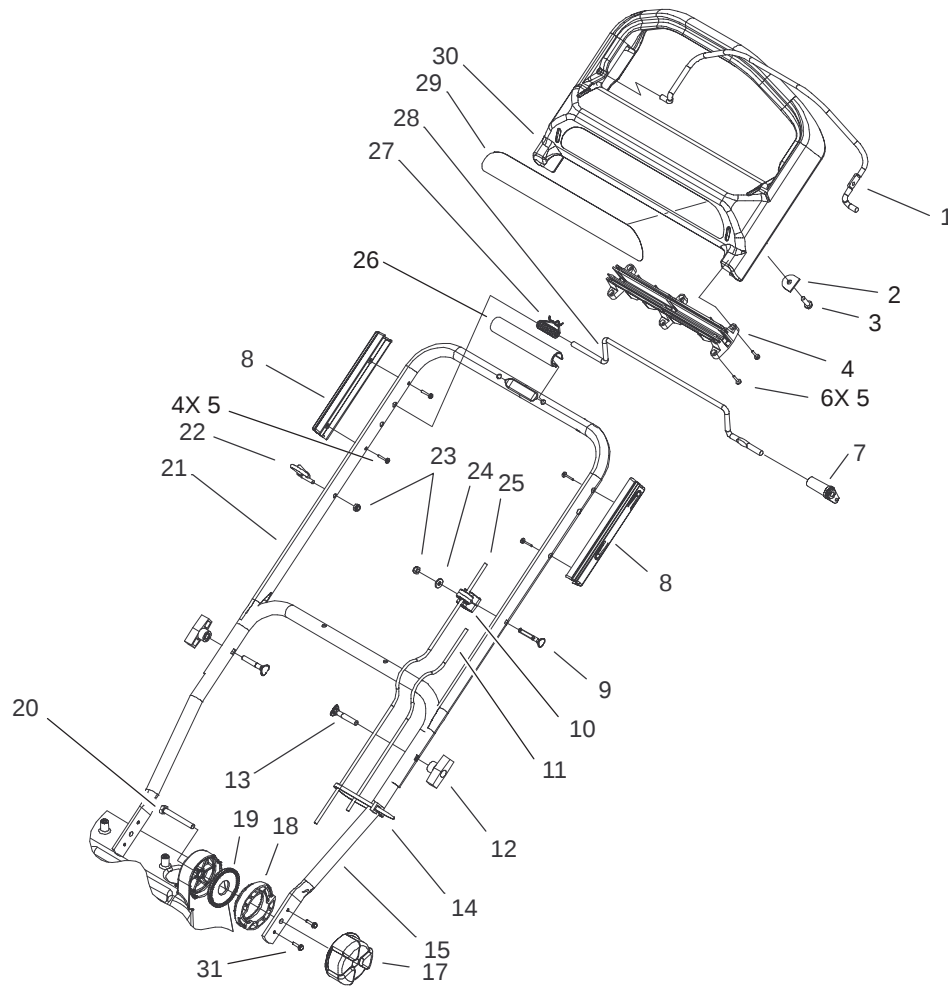 


Sheet No.:5

Lower Handle and Adjusting Knob Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake
2	99-1595	1	Retainer-Cable, Brake
3	46-8091	1	Screw-HWH
4	99-6008	1	Retainer-Control Rod, Traction
5	94-4496	10	Screw-PPH
7	99-1589	1	Lever-Traction
8	99-1590	2	Guide-Handle, Control
9	95-4453	1	Screw-Handle
10	99-5239	1	Anchor-Cable
11	100-3936	1	Cable-Traction
12	98-7134	2	Knob-Handle
13	92-2260	2	Screw-Handle
14	3290-378	2	Tie-Cable
15	100-1502-05	1	Handle-Lower
17	100-4396	2	Knob-Adjusting, Handle
18	104-7553-03	2	Disk-Adjusting, Handle
19	100-1517	2	Disk-Holding, Handle
20	60-6690	2	Capscrew
21	99-1596-05	1	Handle-Upper
22	86-9671	1	Guide-Rope
23	3296-73	2	Nut-Lock, NI
24	3256-1	1	Washer-Flat
25	100-3937	1	Cable-Brake

Ref. No.	Part No.	Qty.	Description
26	100-5970	1	Cover-Handle
27	99-1592	1	Spring-Torsion, RH
28	99-1588	1	Bar-Control, Traction
29	100-5950	1	Decal-Automatic
30	99-1582	1	Handle-Control
31	100-4351	4	Screw-HWH

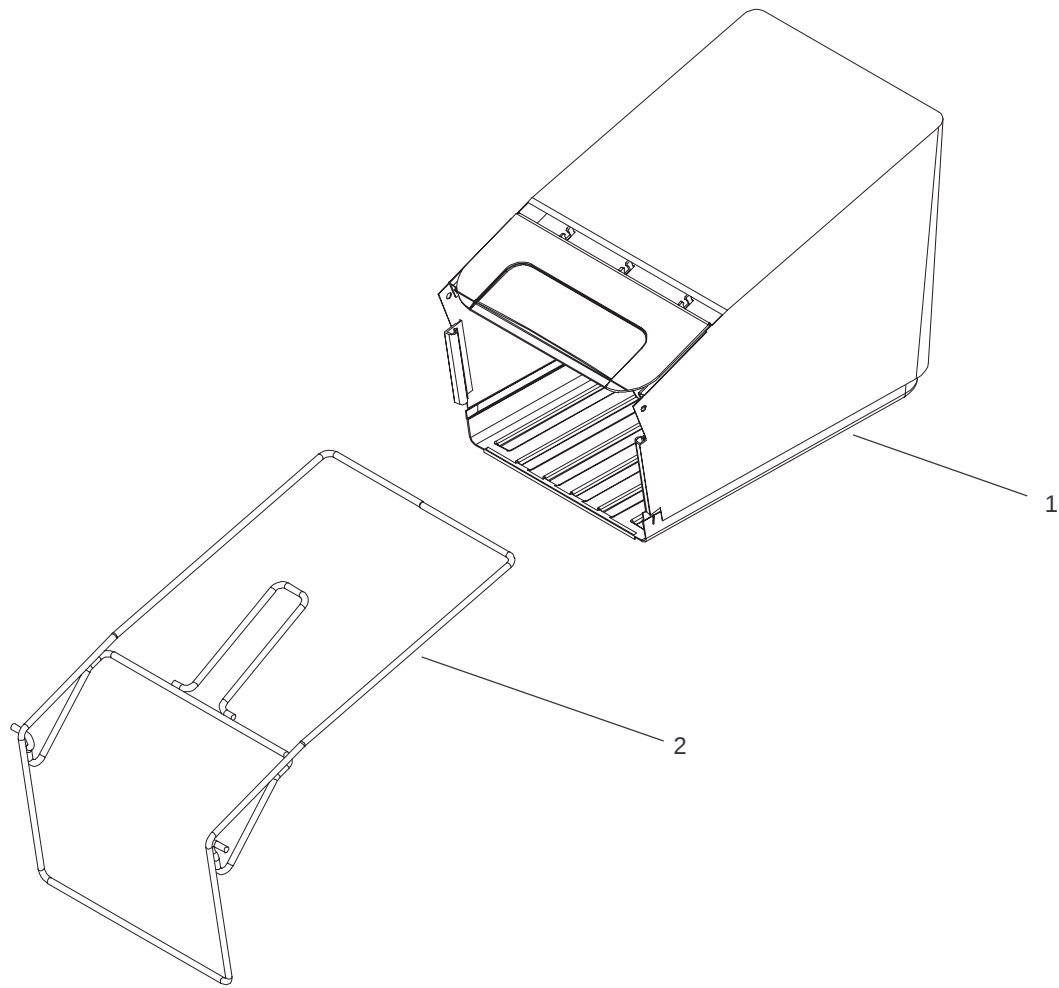 


Sheet No.:8

Grass Bag Assembly

Ref. No.	Part No.	Qty.	Description
1	104-7578	1	Grass Bag ASM
2	104-7560-03	1	Bag Frame ASM


Ref. No.	Part No.	Qty.	Description

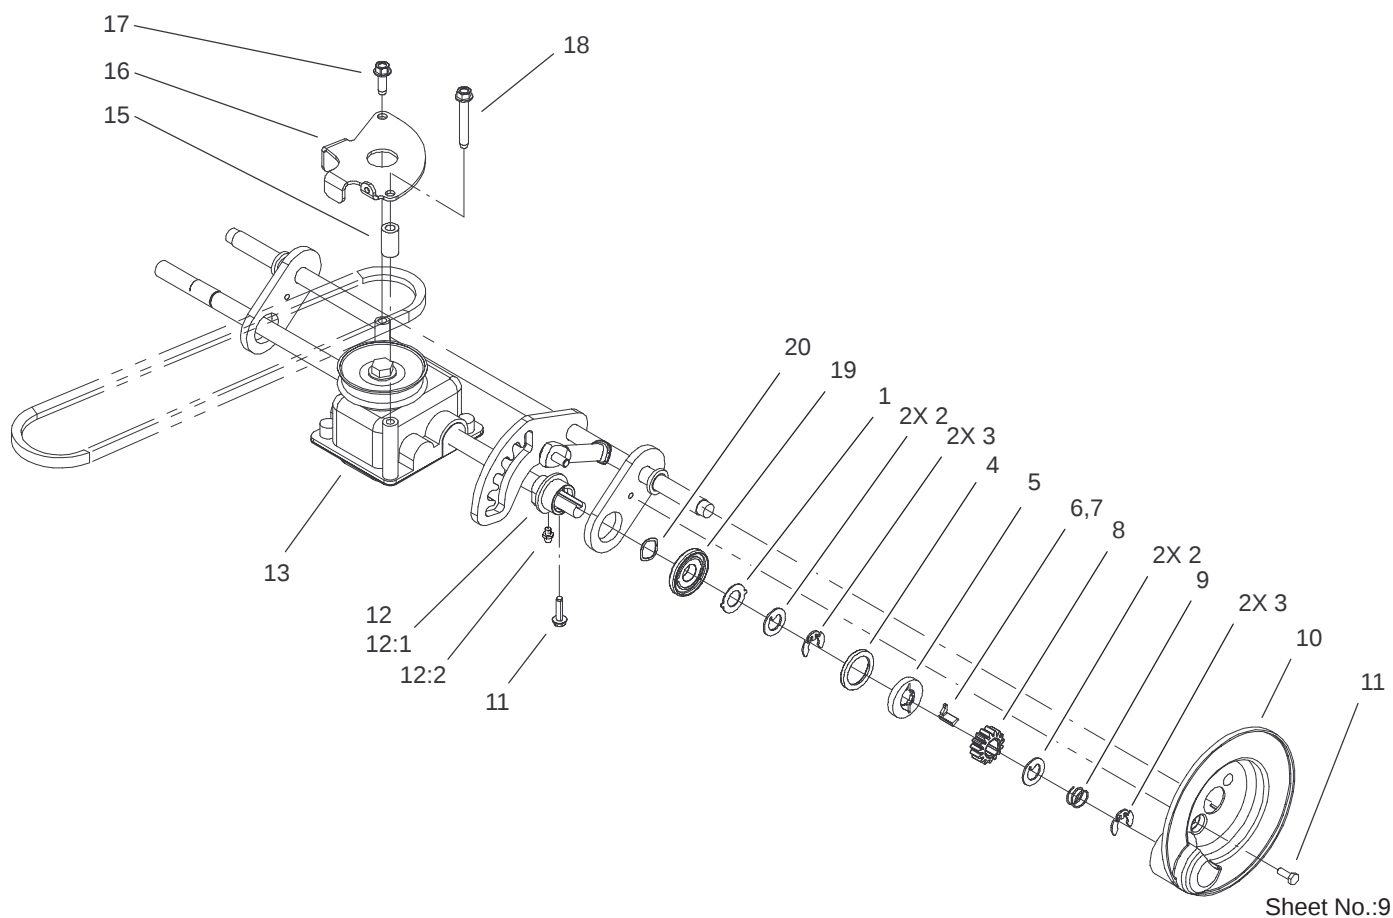 

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	65-4730	2	Washer-Arm, Pivot
2	65-4740	4	Washer-Thrust, Keyed
3	65-2720	4	Klipring-Locking
4	65-4710	2	Ring-Friction
5	65-4760	2	Washer-Clutch
6	66-6040	1	Key-Rocking, RH
7	66-6050	1	Key-Rocking, LH
8	65-4750	2	Gear-Pinion
9	65-4720	2	Spring-Compression
10	100-1513	2	Cover-Gear
11	32144-1	4	Screw-Taptite
12	100-9118	2	Bushing ASM
12:1	99-6463	1	Bushing-Drive Shaft
12:2	302-56	1	Fitting-Grease
13	104-7593	1	Gear Case ASM
15	614673	1	Bushing-Plate, Actuator
16	100-1524-03	1	Guide-Transmission
17	49-2040	1	Screw-Tapping
18	92-1616	1	Screw-HWHTF
19	100-1511	2	Retainer-Ring
20	100-1515	2	Washer-Wave

Ref. No.	Part No.	Qty.	Description

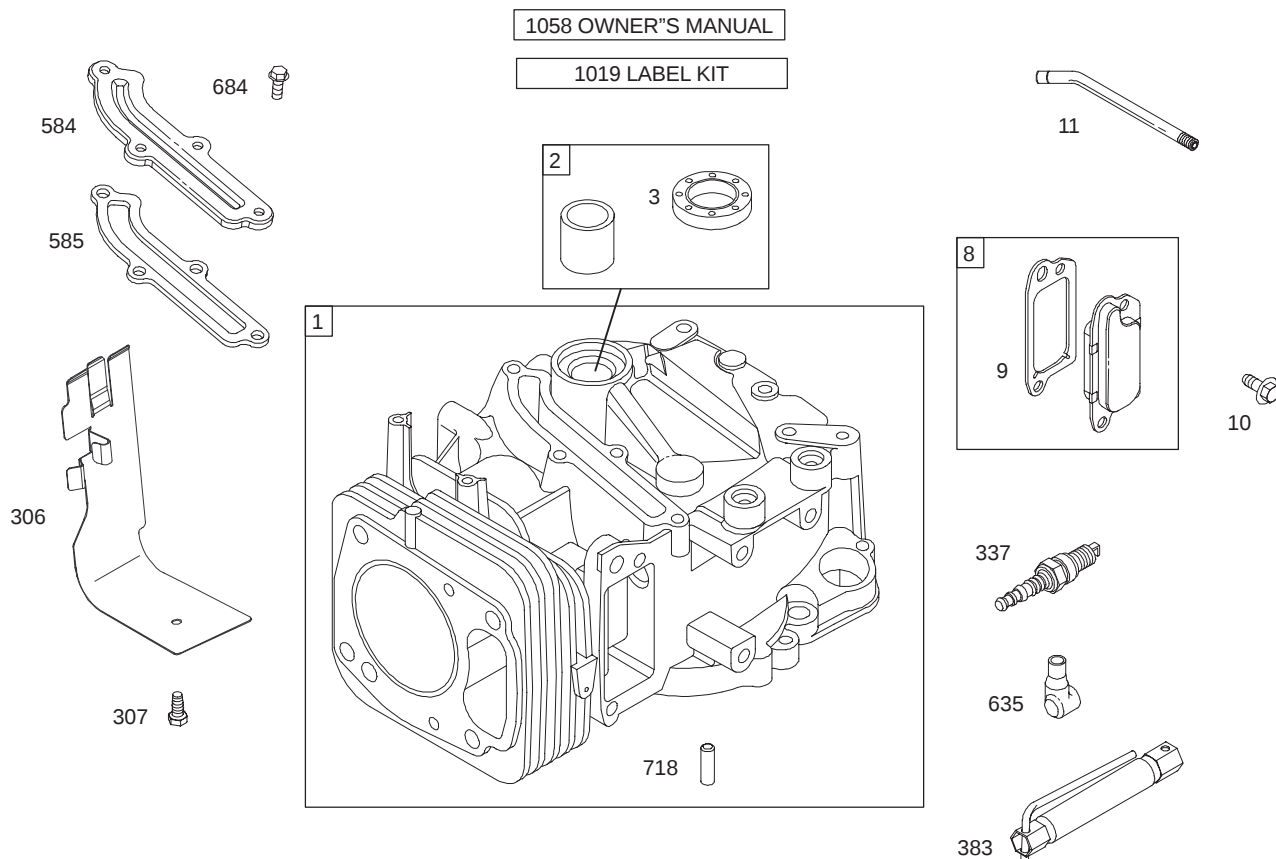 

Assemblies include all parts shown in frames.


Cylinder Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	499678	1	Cylinder Assembly	1019	695811	1	Kit-Label
2	399269	1	Kit-Bushing/Seal (Magneto Side)	1058	274979	1	Owner's Manual
★3	299819	1	Seal-Oil (Magneto Side)				
8	495786	1	Breather Assembly				
△★9	272481	1	Gasket-Breather				
10	691125	1	Screw (Breather Assembly)				
11	691260	1	Tube-Breather				
306	691232	1	Shield-Cylinder				
307	690345	1	Screw (Cylinder Shield)				
337	692051	1	Sparkplug				
383	19374	1	Wrench-Sparkplug				
584	692342	1	Cover-Breather Passage				
★585	691879	1	Gasket-Breather Passage				
635	66538	1	Boot-Sparkplug				
684	690345	1	Screw (Breather Passage Gasket)				
718	690959	1	Pin-Locating				

△ Included in Valve Gasket Set-Ref. 1095.

Obtain Parts from Briggs and Stratton

 ★ Included in Engine Gasket Set-Ref. 358.

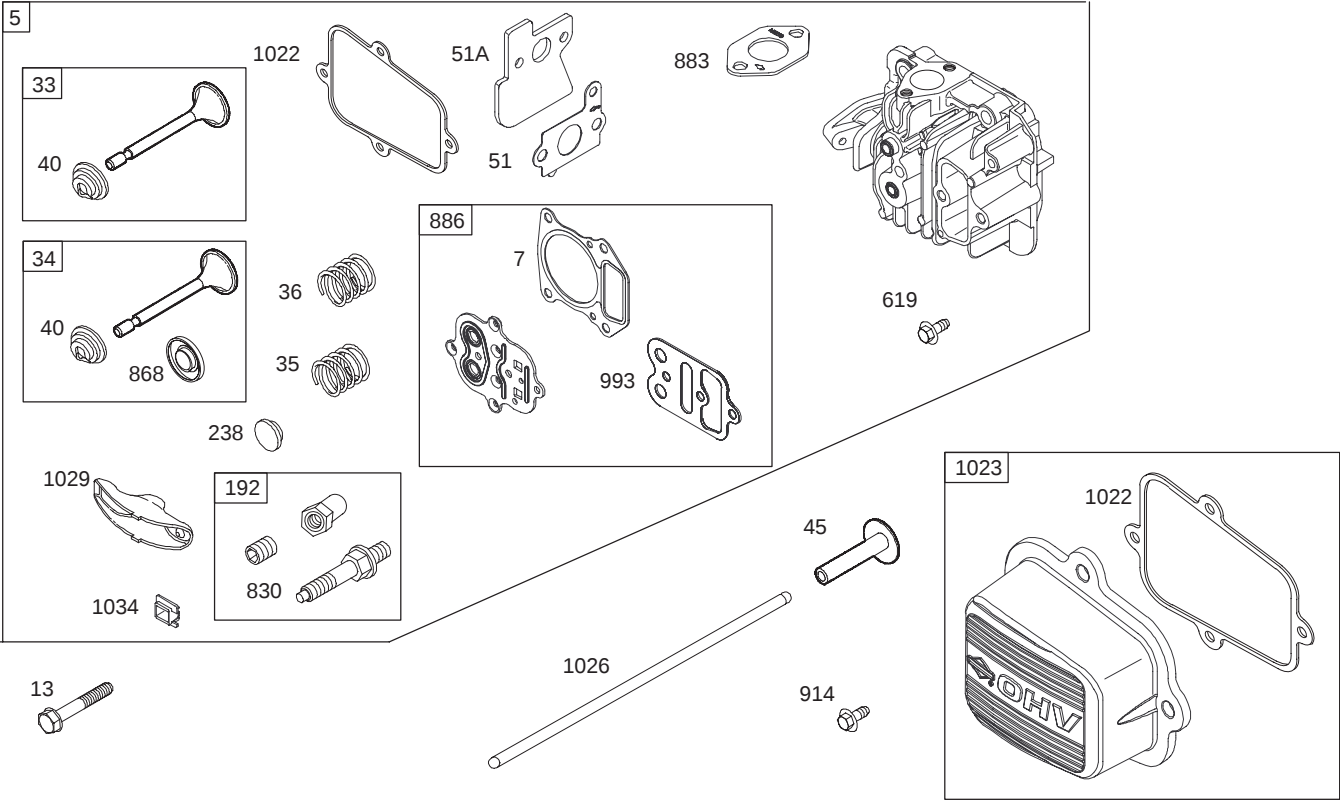


Assemblies include all parts shown in frames.

Cylinder Head Assembly

Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
5	695276	1	Head-Cylinder	914	691127	1	Screw (Rocker Cover)
Δ★7	695166	1	Gasket-Cylinder Head	Δ★993	694088	1	Gasket-Cylinder Head Plate
13	691137	1	Screw (Cylinder Head)	Δ★1022	691890	1	Gasket-Rocker Cover
33	499642	1	Valve-Exhaust	1023	692694	1	Cover-Rocker
34	499641	1	Valve-Intake	1026	692045	1	Rod-Push
35	691304	1	Spring-Valve (Intake)	1029	691230	1	Arm-Rocker
36	691304	1	Spring-Valve (Exhaust)	1034	691343	1	Guide-Push Rod
40	692194	1	Retainer-Valve				
45	690977	1	Tappet-Valve				
Δ★◆51	692668	1	Gasket-Intake				
Δ★◆51A	692799	1	Gasket-Intake				
192	694543	1	Adjuster-Rocker Arm				
238	691300	1	Cap-Valve				
619	691108	1	Screw (Cylinder Head Plate)				
830	694544	1	Stud-Rocker Arm				
Δ★868	692044	1	Seal-Valve				
Δ★883	691893	1	Gasket-Exhaust				
886	696268	1	Gasket Kit-Cylinder Head/Plate				

 Δ Included in Valve Gasket Set-Ref. 1095. ◆ Included in Carburetor Gasket Set-Ref. 977.
★ Included in Engine Gasket Set-Ref. 358. • Included in Carburetor Overhaul Kit-Ref. 121.

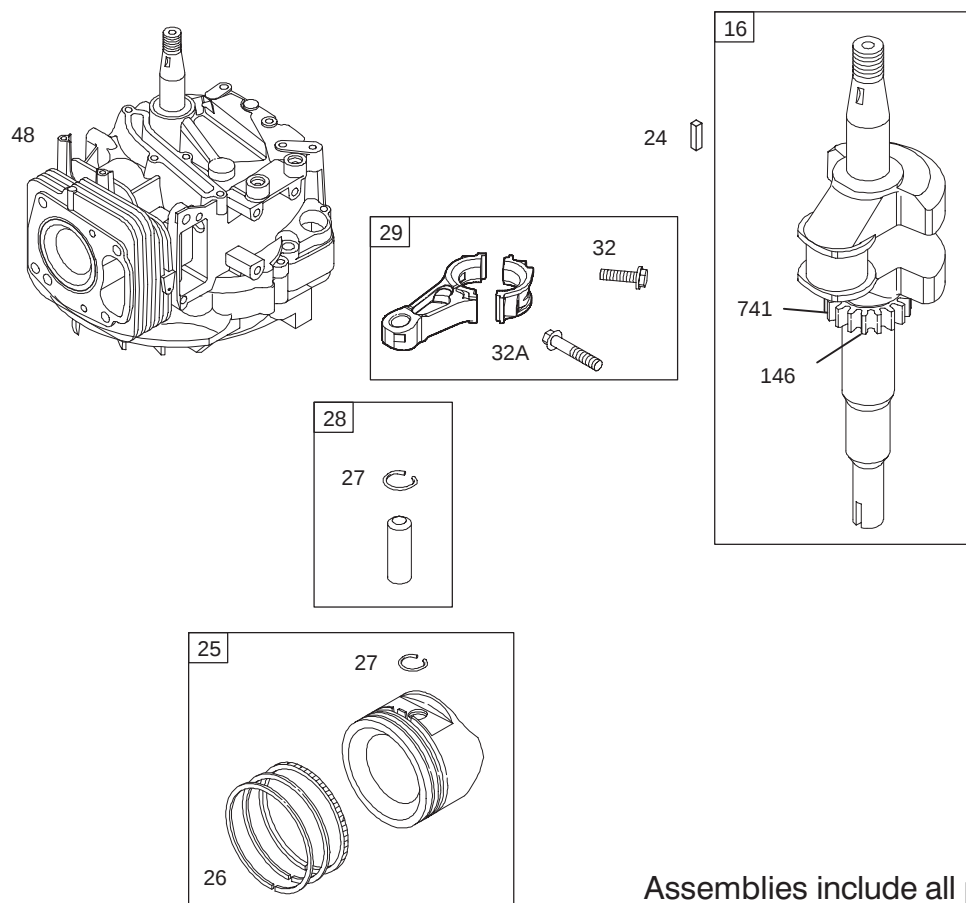


Assemblies include all parts shown in frames.

Crankshaft Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
16	695950	1	Crankshaft
24	222698	1	Key-Flywheel
25	499627	1	Piston Assembly (Standard)
	692788	1	Piston Assembly (.010" Oversize)
	692789	1	Piston Assembly (.020" Oversize)
	692790	1	Piston Assembly (.030" Oversize)
26	499631	1	Ring Set (Standard)
	692785	1	Ring Set (.010" Oversize)
	692786	1	Ring Set (.020" Oversize)
	692787	1	Ring Set (.030" Oversize)
27	691866	1	Lock-Piston Pin
28	499423	1	Pin-Piston
29	499424	1	Rod-Connecting
32	691664	1	Screw (Connecting Rod)

Ref. No.	Part No.	Qty.	Description
32A	695759	1	Screw (Connecting Rod)
48	694898	1	Short Block
146	690979	1	Key-Timing
741	691830	1	Gear-Timing

 Obtain Parts from Briggs and Stratton

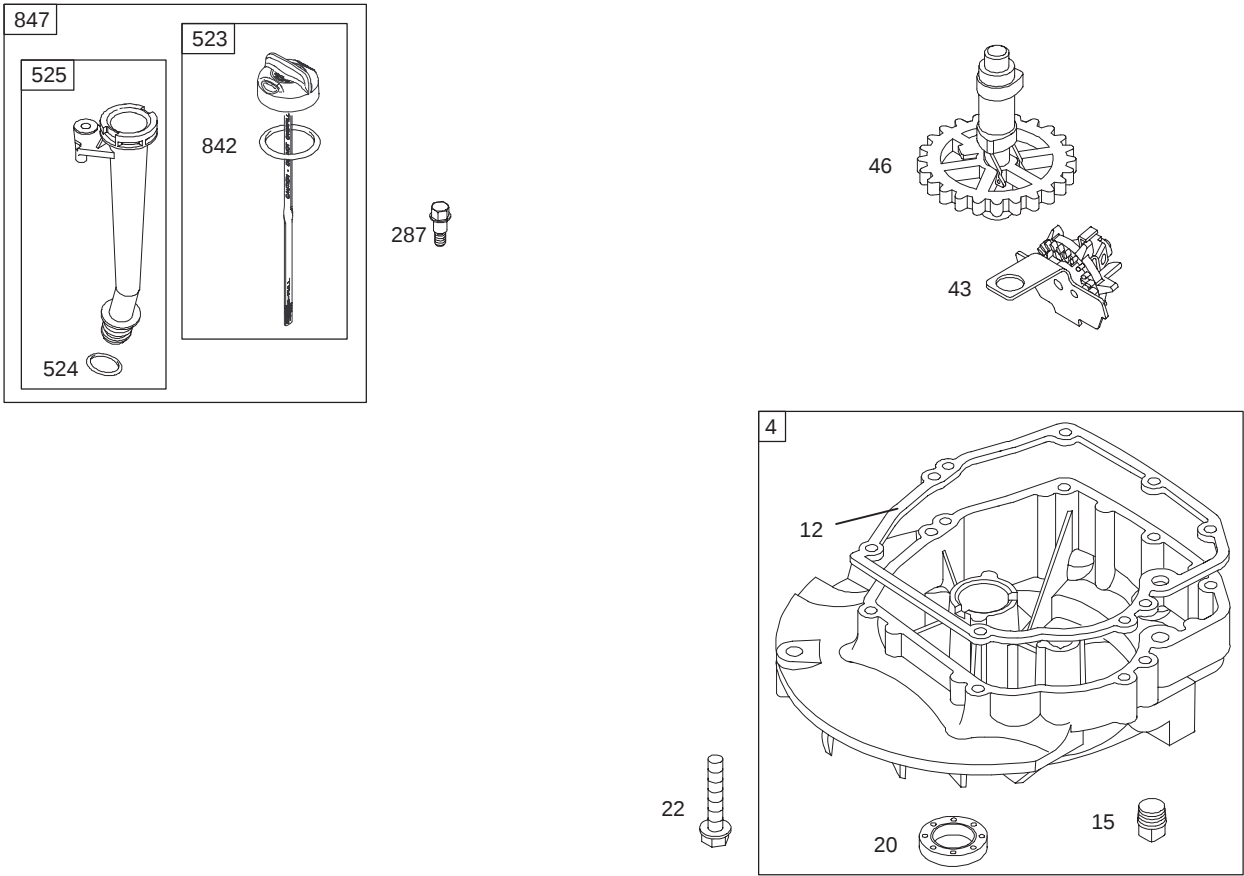

Assemblies include all parts shown in frames.


Crankcase Assembly

Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
4	499619	1	Sump-Engine				
★12	692232	1	Gasket-Crankcase				
15	691680	1	Plug-Oil Drain				
★20	399781	1	Seal-Oil (PTO Side)				
22	691092	1	Screw (Engine Sump)				
43	691997	1	Slinger-Governor/Oil				
46	694039	1	Camshaft				
287	690940	1	Screw (Dipstick Tube)				
523	499621	1	Tube-Dipstick				
★524	692296	1	Seal-Dipstick Tube				
525	495265	1	Tube-Dipstick				
★842	691031	1	Seal-O Ring (Dipstick Tube)				
847	692047	1	Assembly-Dipstick/Tube				

★ Included in Engine Gasket Set-Ref. 358.

 Obtain Parts from Briggs and Stratton

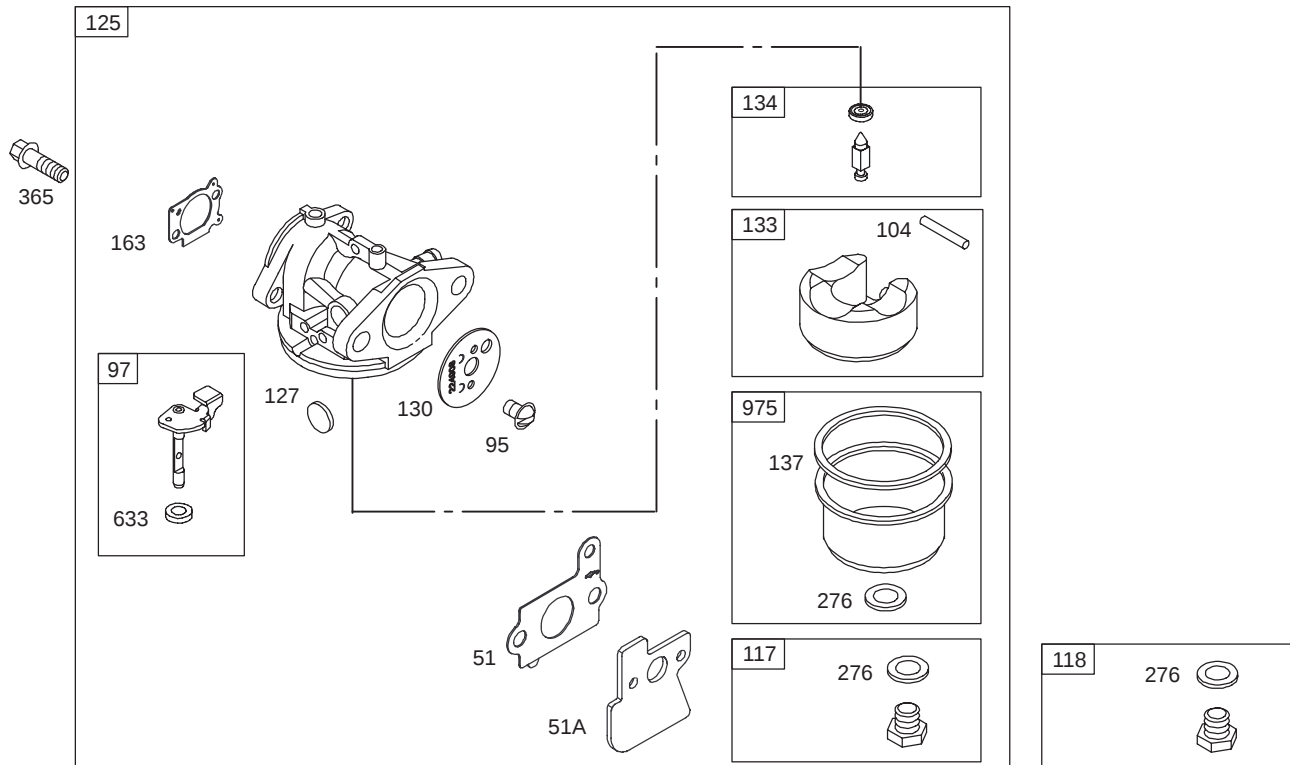


Carburetor Assembly

Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
Δ★●◆51	692668	1	Gasket-Intake
Δ★●◆51A	692799	1	Gasket-Intake
95	691636	1	Screw (Throttle Valve)
97	499682	1	Shaft-Throttle
●104	691242	1	Pin-Float Hinge
117	498978	1	Jet-Main (Standard)
118	498975	1	Jet-Main (High Altitude)
125	694202	1	Carburetor
●127	694468	1	Plug-Welch
130	691203	1	Valve-Throttle
133	398187	1	Float-Carburetor
●134	398188	1	Kit-Needle/Seat
●◆137	693981	1	Gasket-Float Bowl
Δ★●◆163	691894	1	Gasket-Air Cleaner
●◆276	271716	1	Washer-Sealing
365	691136	1	Screw (Carburetor)
●◆633	691321	1	Seal-Choke/Throttle Shaft
975	493640	1	Bowl-Float

△ Included in Valve Gasket Set—Ref. 1095.
★ Included in Engine Gasket Set—Ref. 358.
Obtain Parts from Briggs and Stratton

 - Included in Carburetor Overhaul Kit—Ref. 121.
- ◆ Included in Carburetor Gasket Set—Ref. 977.

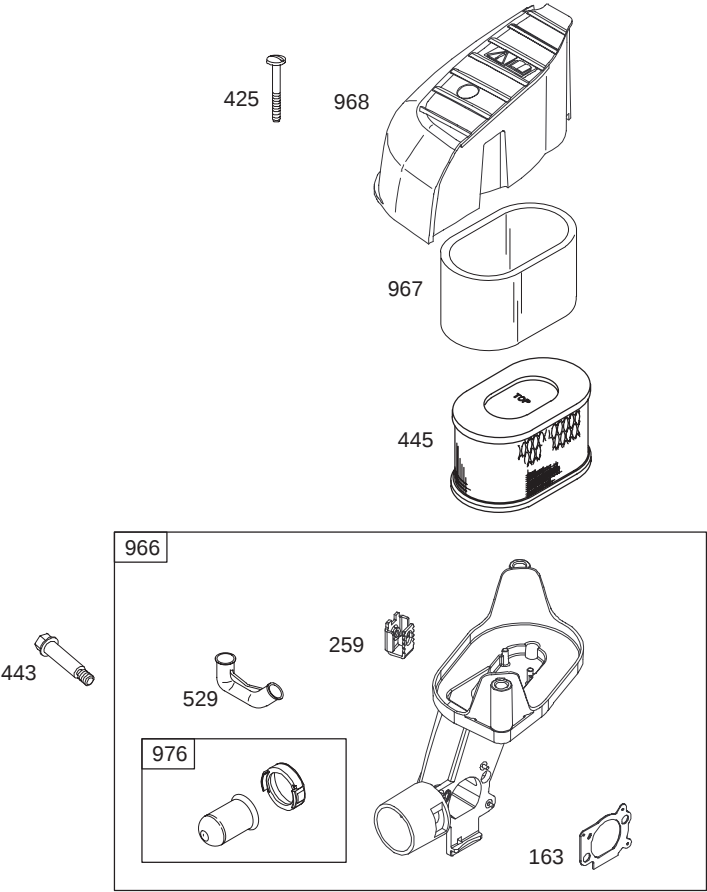


Assemblies include all parts shown in frames.

Air Cleaner Assembly
Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
Δ★◆163	691894	1	Gasket-Air Cleaner				
259	691189	1	Bracket-Casing Clamp				
425	690244	1	Screw				
			(Air Cleaner Cover)				
443	690255	1	Screw				
			(Air Cleaner Primer Bracket)				
445	690610	1	Filter-Air Cleaner Cartridge				
529	692937	1	Grommet				
966	690243	1	Base-Air Cleaner Primer				
967	273356	1	Filter-Pre Cleaner				
968	692692	1	Cover-Air Cleaner				
976	694395	1	Primer-Carburetor				

Δ Included in Valve Gasket Set-Ref. 1095.
★ Included in Engine Gasket Set-Ref. 358.

 ◆ Included in Carburetor Overhaul Kit-Ref. 121.
◆ Included in Carburetor Gasket Set-Ref. 977.

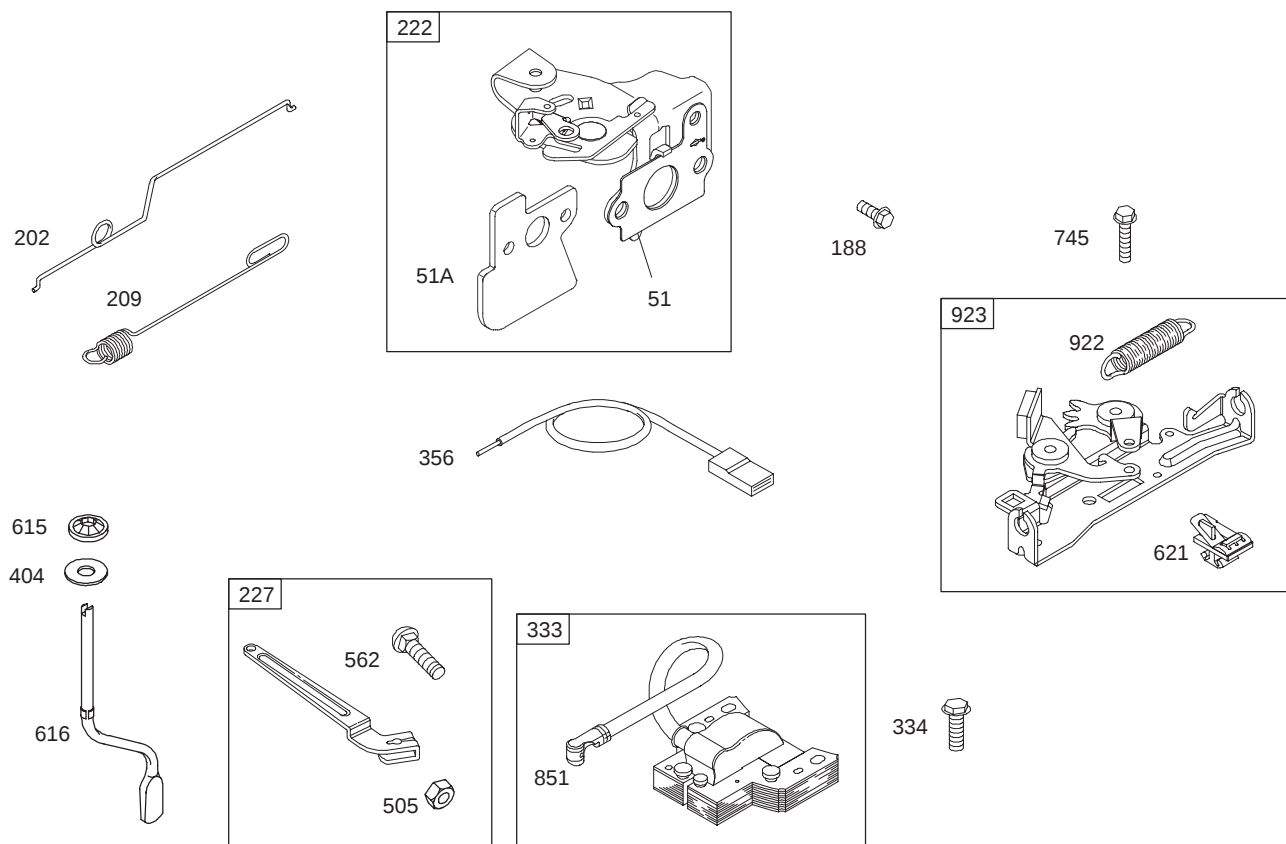

Assemblies include all parts shown in frames.

Governor Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
△★◆51	692668	1	Gasket-Intake	616	691308	1	Crank-Governor
△★◆51A	692799	1	Gasket-Intake	621	692310	1	Switch-Stop
188	693168	1	Screw	745	691648	1	Screw
			(Control Bracket)				(Brake)
202	691303	1	Link-Mechanical Governor	851	493880	1	Terminal-Sparkplug
209	691292	1	Spring-Governor	922	691831	1	Spring-Brake
222	692723	1	Bracket-Control	923	691994	1	Brake Assembly
227	690783	1	Lever-Governor Control				
333	802574	1	Armature-Magneto				
334	691061	1	Screw (Magneto Armature)				
356	692390	1	Wire-Stop				
404	690272	1	Washer (Governor Crank)				
505	231082	1	Nut (Governor Control Lever)				
562	92613	1	Screw (Governor Control Lever)				
615	690340	1	Retainer-Governor Shaft				

 
△ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

Obtain Parts from Briggs and Stratton

◆ Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

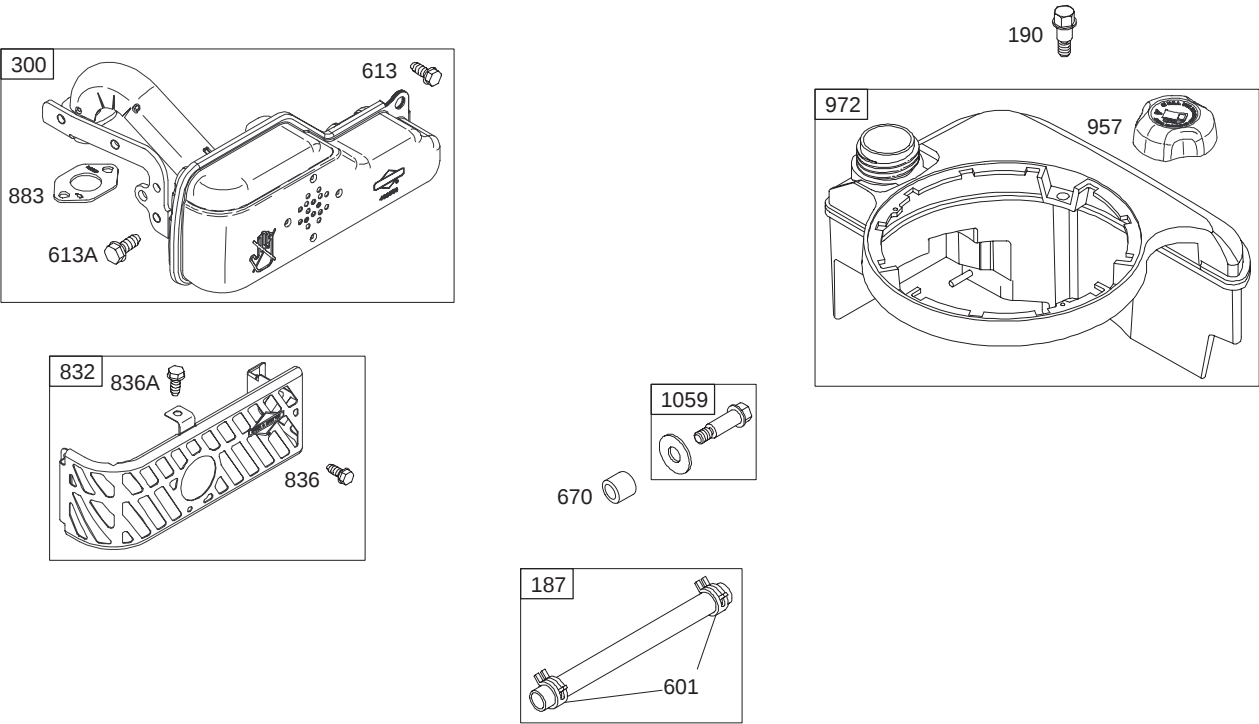


Assemblies include all parts shown in frames.

Muffler and Fuel Tank Assembly
Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
187	691050	1	Line-Fuel				
190	690940	1	Screw (Fuel Tank)				
300	694248	1	Muffler				
601	95162	1	Clamp-Hose				
613	691108	1	Screw (Muffler)				
613A	691140	1	Screw (Muffler)				
670	692294	1	Spacer-Fuel Tank				
832	691466	1	Guard-Muffler				
836	690960	1	Screw (Muffler Guard)				
836A	691147	1	Screw (Muffler Guard)				
Δ★883	691893	1	Gasket-Exhaust				
957	692046	1	Cap-Fuel Tank				
972	499618	1	Tank-Fuel				
1059	692311	1	Kit-Screw/Washer				

 Δ Included in Valve Gasket Set-Ref. 1095. ★ Included in Engine Gasket Set-Ref. 358.
Obtain Parts from Briggs and Stratton

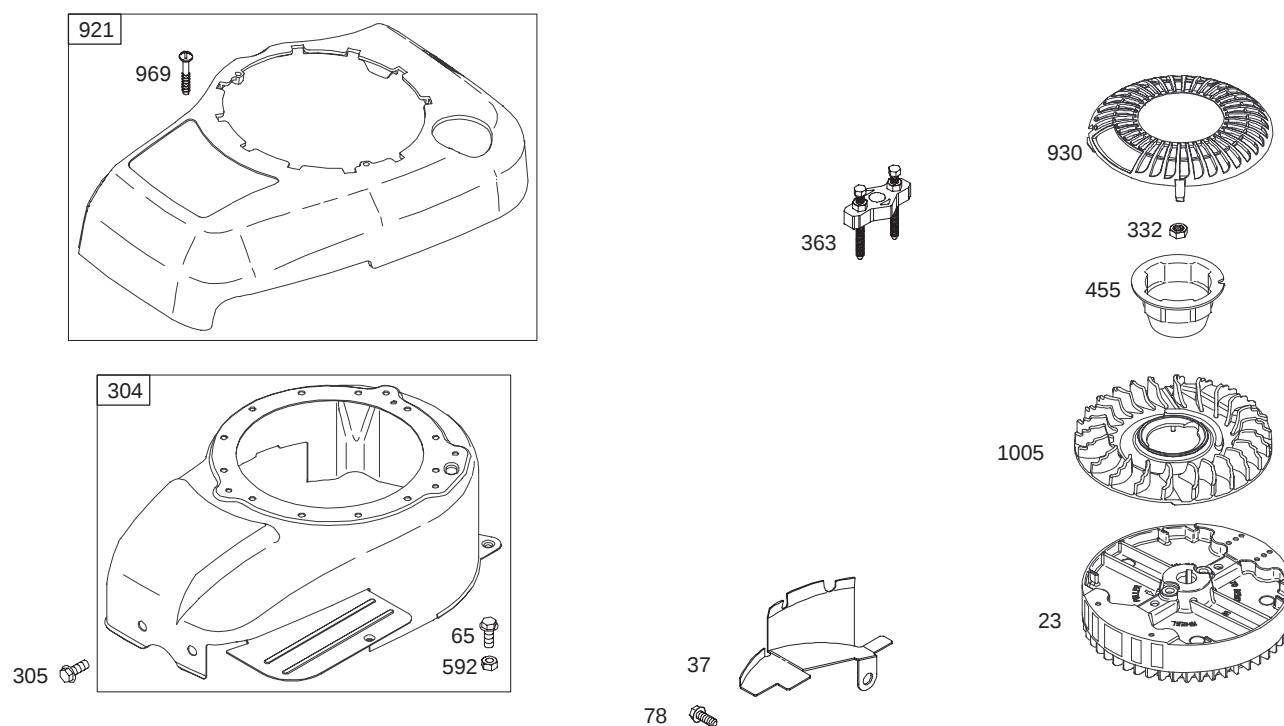


1036 Emission Label

Assemblies include all parts shown in frames.

Blower Housing Assembly Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
23	696569	1	Flywheel				
37	694086	1	Guard-Flywheel				
65	690837	1	Screw				
			(Rewind Starter)				
78	691108	1	Screw				
			(Flywheel Guard)				
304	499677	1	Housing-Blower				
305	690960	1	Screw				
			(Blower Housing)				
332	690662	1	Nut				
			(Flywheel)				
363	19069	1	Puller-Flywheel				
455	695161	1	Cup-Flywheel				
592	690800	1	Nut				
			(Rewind Starter)				
921	692699	1	Cover-Blower Housing				
930	692691	1	Guard-Rewind				
969	691138	1	Screw				
			(Blower Housing Cover)				
1005	691346	1	Fan-Flywheel				
1036	696767	1	Label-Emission				

 Obtain Parts from Briggs and Stratton

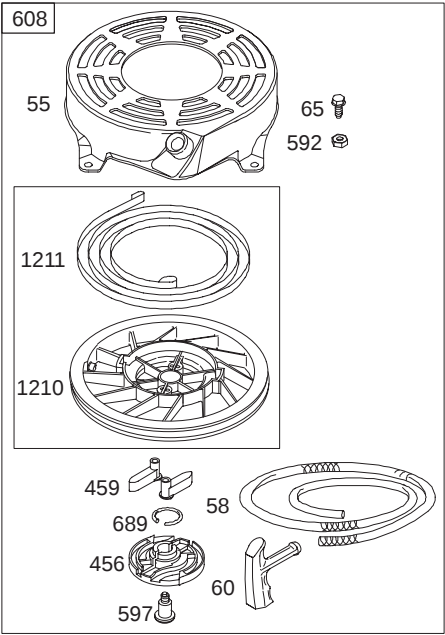


Assemblies include all parts shown in frames.

Starter Assembly
Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
55	691421	1	Housing-Rewind Starter				
58	280399	1	Rope-Starter (Cut to Required Length)				
60	281434	1	Grip-Starter Rope				
65	690837	1	Screw (Rewind Starter)				
456	692299	1	Plate-Pawl Friction				
459	281505	1	Pawl-Ratchet				
592	690800	1	Nut (Rewind Starter)				
597	691696	1	Screw (Pawl Friction Plate)				
608	497680	1	Starter-Rewind				
689	691855	1	Spring-Friction				
1210	498144	1	Pulley/Spring Assembly (Pulley)				
1211	498144	1	Pulley/Spring Assembly (Spring)				

 Obtain Parts from Briggs and Stratton

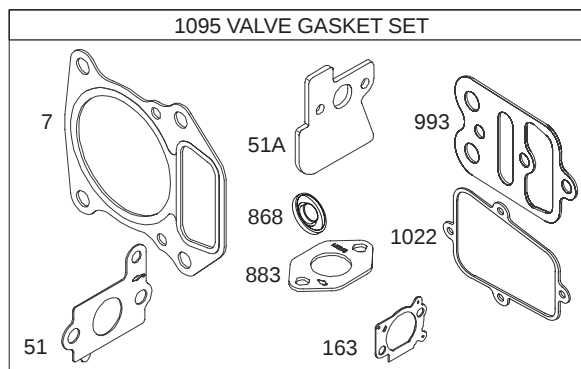

Gasket Assembly



Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description
★3	299819	1	Seal—Oil (Magneto Side)
△★7	695166	1	Gasket—Cylinder Head
★9	272481	1	Gasket—Breather
★12	692232	1	Gasket—Crankcase
★20	399781	1	Seal—Oil (PTO Side)
△★●◆51	692668	1	Gasket—Intake
△★●◆51A	692799	1	Gasket—Intake
△★●◆163	691894	1	Gasket—Air Cleaner
358	694090	1	Gasket Set—Engine
★524	692296	1	Seal—Dipstick Tube
★585	691879	1	Gasket—Breather Passage
★842	691031	1	Seal—O Ring (Dipstick Tube)
△★868	692044	1	Seal—Valve
△★883	691893	1	Gasket—Exhaust
△★993	694088	1	Gasket—Cylinder Head Plate
△★1022	691890	1	Gasket—Rocker Cover
1095	694091	1	Gasket Set—Valve

Ref. No.	Part No.	Qty.	Description

◆ Included in Carburetor Gasket Set—Ref. 977.

  19

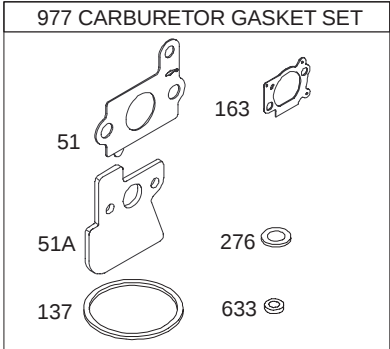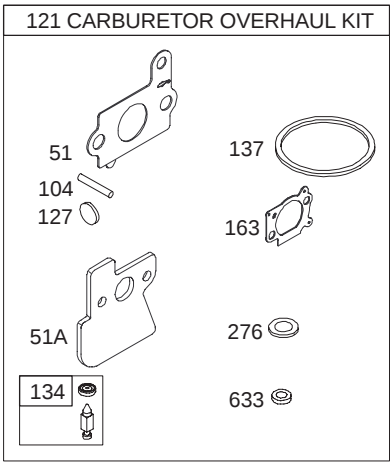

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly

Briggs and Stratton Model 122602-0120-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
Δ★◆51	692668	1	Gasket-Intake				
Δ★◆51A	692799	1	Spacer-Carburetor				
●104	691242	1	Pin-Float Hinge				
121	692703	1	Kit-Carburetor Overhaul				
●127	694468	1	Plug-Welch				
●134	398188	1	Kit-Needle/Seat				
◆137	693981	1	Gasket-Float Bowl				
Δ★◆163	691894	1	Gasket-Air Cleaner				
◆276	271716	1	Washer-Sealing				
◆633	691321	1	Seal-Choke/Throttle Shaft				
977	692704	1	Gasket Set-Carburetor				

Δ Included in Valve Gasket Set-Ref. 1095.
★ Included in Engine Gasket Set-Ref. 358.
◆ Included in Carburetor Overhaul Kit-Ref. 121.
◆ Included in Carburetor Gasket Set-Ref. 977.

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

