



Model No. 41361-210000101 & UP

OPERATOR'S, SET-UP,
& PARTS MANUAL

ROPS for the MULTI-PRO® 1200 & 1250 Vehicle

To assure maximum safety, optimum performance, and to gain knowledge of the product, it is essential that you or any other operator of this Vehicle read and understand the contents of this manual before the engine is ever started. Pay particular attention to the **SAFETY INSTRUCTIONS** highlighted by the triangular safety alert symbol.



The safety alert symbol means **CAUTION**, **WARNING** or **DANGER** - personal safety instruction. Failure to comply with the instruction may result in personal injury.

SAFETY INSTRUCTIONS

Keep this Operator's Manual in the plastic tube behind the operator seat.

It is very important that all persons operating this equipment have easy access to these instructions at all times!

Carefully read and follow the "Set-Up" Instructions that are provided with this equipment and the Safety Instructions in the Multi-Pro™ Operator's Manual.

RECOGNIZE SAFETY INFORMATION



This safety-alert symbol is used to call attention to a **dangerous** situation, which could result in serious injury or death to the operator or a bystander.

Safety, mechanical and some general information in this manual are emphasized. **DANGER**, **WARNING** and **CAUTION** identify safety messages. Whenever the triangular safety symbol appears, it is followed by a safety message that must be read and understood. For more details concerning safety, read the Safety Instructions on this page and page 2. **IMPORTANT** identifies special mechanical information and **NOTE** identifies general information worthy of special attention.

These instructions are provided as a guide for the safe operation and maintenance of this equipment. However, the operator's personal safety, as well as those persons in the work area, will depend on the careful actions and good judgement of the operator. **To reduce the potential for injury or death, comply with the following safety instructions.**

BEFORE OPERATING:

1. Operate this machine equipped with this ROPS only after reading and understanding the contents of this manual and the Multi-Pro™ Operator's Manual. A replacement manual is available by sending complete model and serial number to: Hahn Inc., 1625 N. Garvin, Evansville, IN 47711.

2. Keep all safety devices and decals in place. If a safety device or decal is malfunctioning, illegible or damaged, replace it before operating the machine.

3. It is mandatory to wear the seat belt at all times when operating the machine equipped with the ROPS system. (Always adjust and secure Seat Belt before operating the machine.)

WHILE OPERATING:

1. Since this attachment adds extra weight and may alter center of gravity to the vehicle, drive careful to prevent loss of control and possible upset.

2. Gross vehicle weight has a major impact on your ability to stop and/or turn. Heavier loads and heavier attachments make a vehicle harder to stop or turn. The heavier the load, the longer it takes to stop.

3. The ROPS is equipped with a roll bar, shoulder restraints and seat belt. The ROPS system used on the vehicle will reduce the risk of serious or fatal injury in the unlikely event of a tip over, although the system cannot protect the operator from all possible injuries.

4. Replace a damaged ROPS, do not repair or revise. Any alteration of ROPS must be approved by the manufacturer.

SAFETY INSTRUCTIONS

SEAT BELT OPERATION:

1. Pull the seat belt across lap and latch. Extend belt completely from retractor and adjust out slack.



WARNING

An improperly latched seat belt could result in the operator being thrown from the vehicle.

- Being thrown from vehicle can result in serious injury or death.
- Insert the seat belt metal tab into the buckle and pull tight.
- Read and understand the instructions and charts, and all seat belt safety information presented in this manual.

MAINTENANCE:

1. Before servicing or making any adjustments to the ROPS or Sprayer:

- A. Stop the Vehicle and set the parking brake.
- B. Shut off the vehicle's engine and remove key from ignition.

3. To be sure of optimum performance and safety, always purchase genuine TORO replacement parts and accessories. Replacement parts and accessories made by other manufacturers could be dangerous. Altering this equipment in any manner may affect the machine's operation, performance, durability or its use may result in injury or death. Such use could void the product warranty of The TORO Company.

- C. Disengage all power and wait until all moving parts have stopped.


2. Keep all nuts, bolts and other fasteners tightened to torque. Replace any shields removed during servicing or adjustments.

TORQUE SPECIFICATION CHART

BOLT SIZE	TORQUE VALUE
3/8"	30 FT. LB.
7/16"	50 FT. LB.
1/2"	75 FT LB.

SAFETY AND INSTRUCTION DECALS

The following safety and instruction decals are installed on the Rops. If any become damaged or illegible, replace them. Decals and part numbers are listed below and in the parts catalog. Order replacements from your Authorized Toro Distributor.

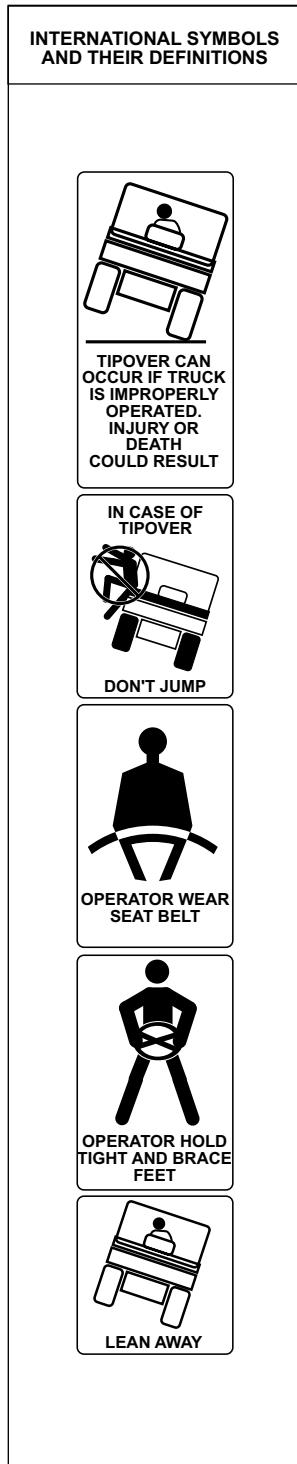

Part No. 93-9850: Located on the
Inside of ROPS Bar - L.H.S.

Part No. 104-8982: Located on the
Inside of ROPS Bar - Both Sides.

SET-UP INSTRUCTIONS

**AN ASSISTANT MAY BE NEEDED WHILE
INSTALLING THE ROPS PACKAGE ON THE
TORO MULTI-PRO™ 1200 or 1250 AS
OUTLINED IN THE FOLLOWING STEPS.**

Refer to illustrated parts list for the details of parts used in assembling the ROPS.

**NOTE: "RIGHT", "LEFT", "FRONT" AND "REAR"
ARE REFERENCED WHILE SEATED IN THE
OPERATORS POSITION.**



FIG. 1

1. Open shipping carton, remove the shipping clamps and rear ROPS bar. Mount the ROPS bar to the vehicle frame as in FIG. 1 by inserting (8) 1/2" x 1-1/4" hex. socket hd. bolt and flat washers through the ROPS bar and the vehicle frame. Start nuts on bolts by hand. See FIG. 2.

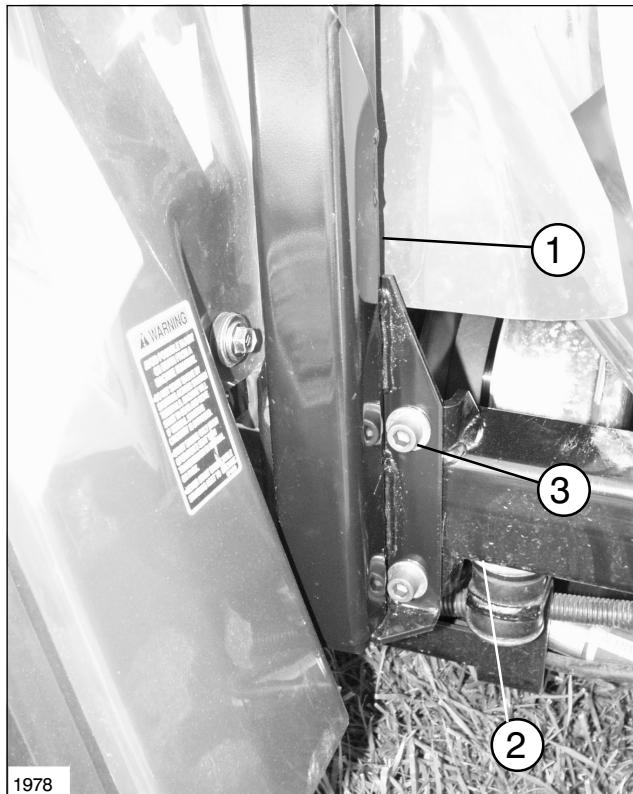



FIG. 2

1. ROPS Bar
2. Vehicle Frame
3. Socket Hd. Screw

2. Align the ROPS bars and using a torque wrench, tighten the mounting bolts to 75 Ft-lb.

3. Mount the seat belt assembly to the Seat Belt Bracket behind the Seat at a 45° angle using (2) 7/16" x 1-1/4" hex. hd. cap screws, lockwashers, and hex nuts as shown in FIG. 3 Using a torque wrench, torque nuts to 50 ft. lb.

SET-UP INSTRUCTIONS

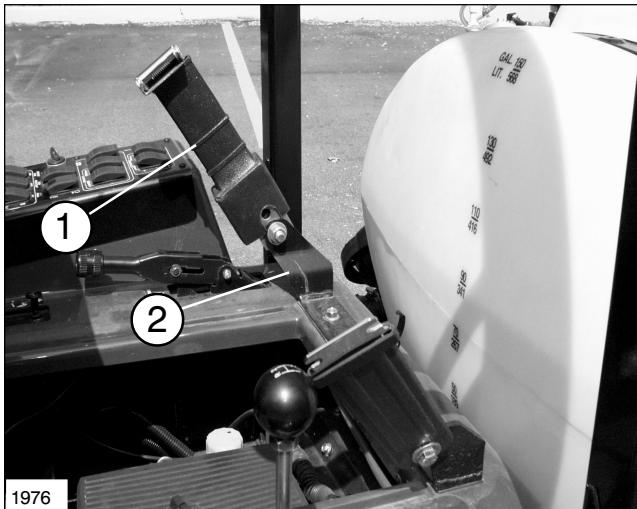

TORQUE SPECIFICATION CHART

BOLT SIZE	TORQUE VALUE
3/8"	30 FT. LB.
7/16"	50 FT. LB.
1/2"	75 FT LB.


NOTE: TO ENSURE THE STRUCTURAL RIGIDITY OF ROPS SYSTEM, MAINTAIN THE TORQUE VALUES ON THE ATTACHING HARDWARE AS OUTLINED ABOVE.

FIG. 3

1. Seat Belt Assembly 2. Seat Belt Bracket

NOTES:

1965

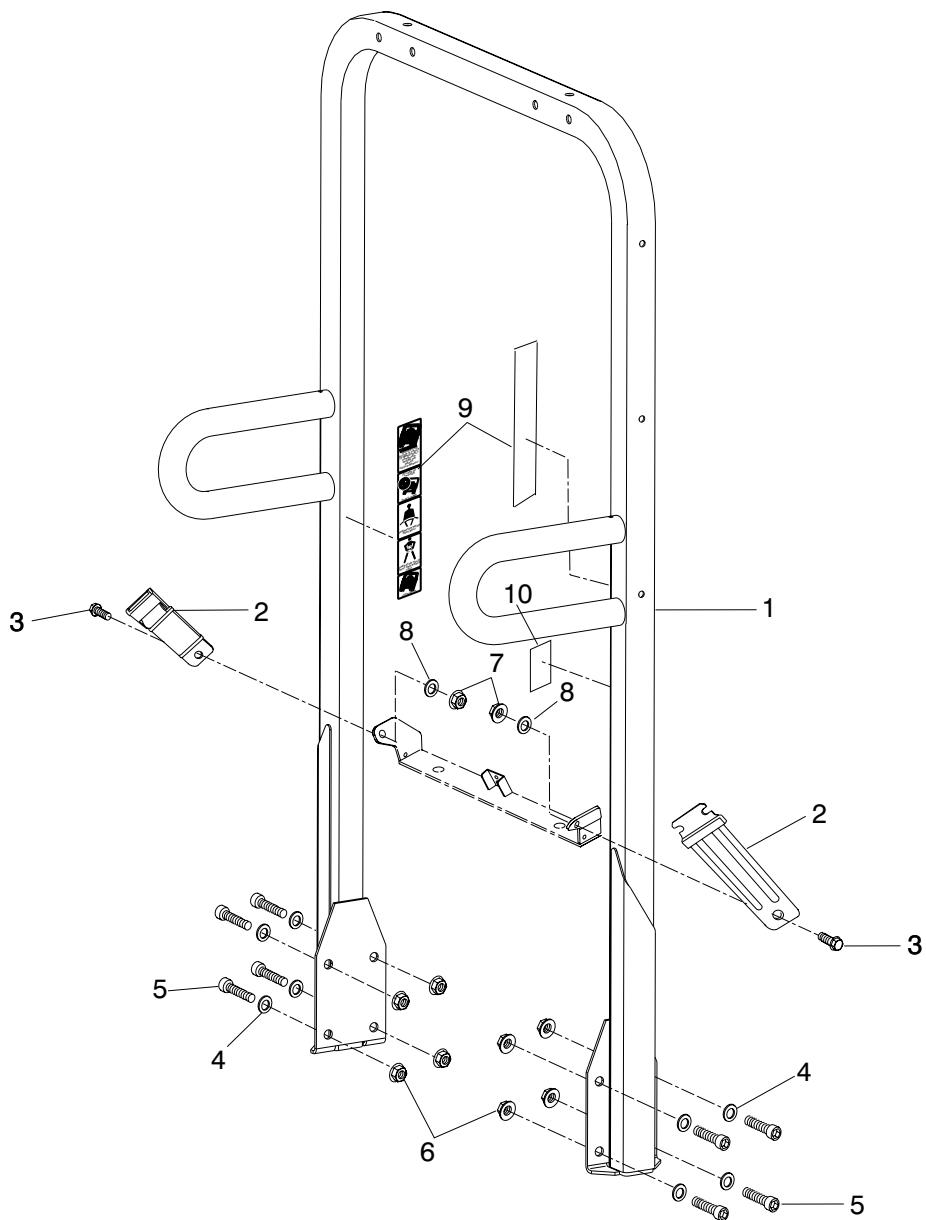

ROPS

Ref.	Part No.	Description	Qty.
1	104-8976	ROPS Bar	1
2	21-4191	Seat Belt ASM	1
3	324-5	Capscrew	2
4	3256-26	Washer	8
5	3274-89	Hex Socket Hd. Bolt	8
6	3218-49	Flange Nut	8
7	3217-8	Nut	2
8	3253-6	Lock Washer	2
9	104-8982	Decal - Warning	2
10	93-9850	Decal - ROPS Damage	1

NOTES:



Helping you put quality into play.®