



Form No. 3464-352 Rev B

Count on it.

Parts Catalog

Cab Kit

Workman® HDX and HDX-Auto Utility Vehicle

Model No. 07392—Serial No. 414600000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame, Mount and Seal Assembly 4

Roof, Wiper Motor and Console Assembly 6


Window and Latch Assembly 8

Rain Gutter and Dash Support Assembly 10

Inner Fender Assembly 12

Attachments and Accessories 14


Frame, Mount and Seal Assembly

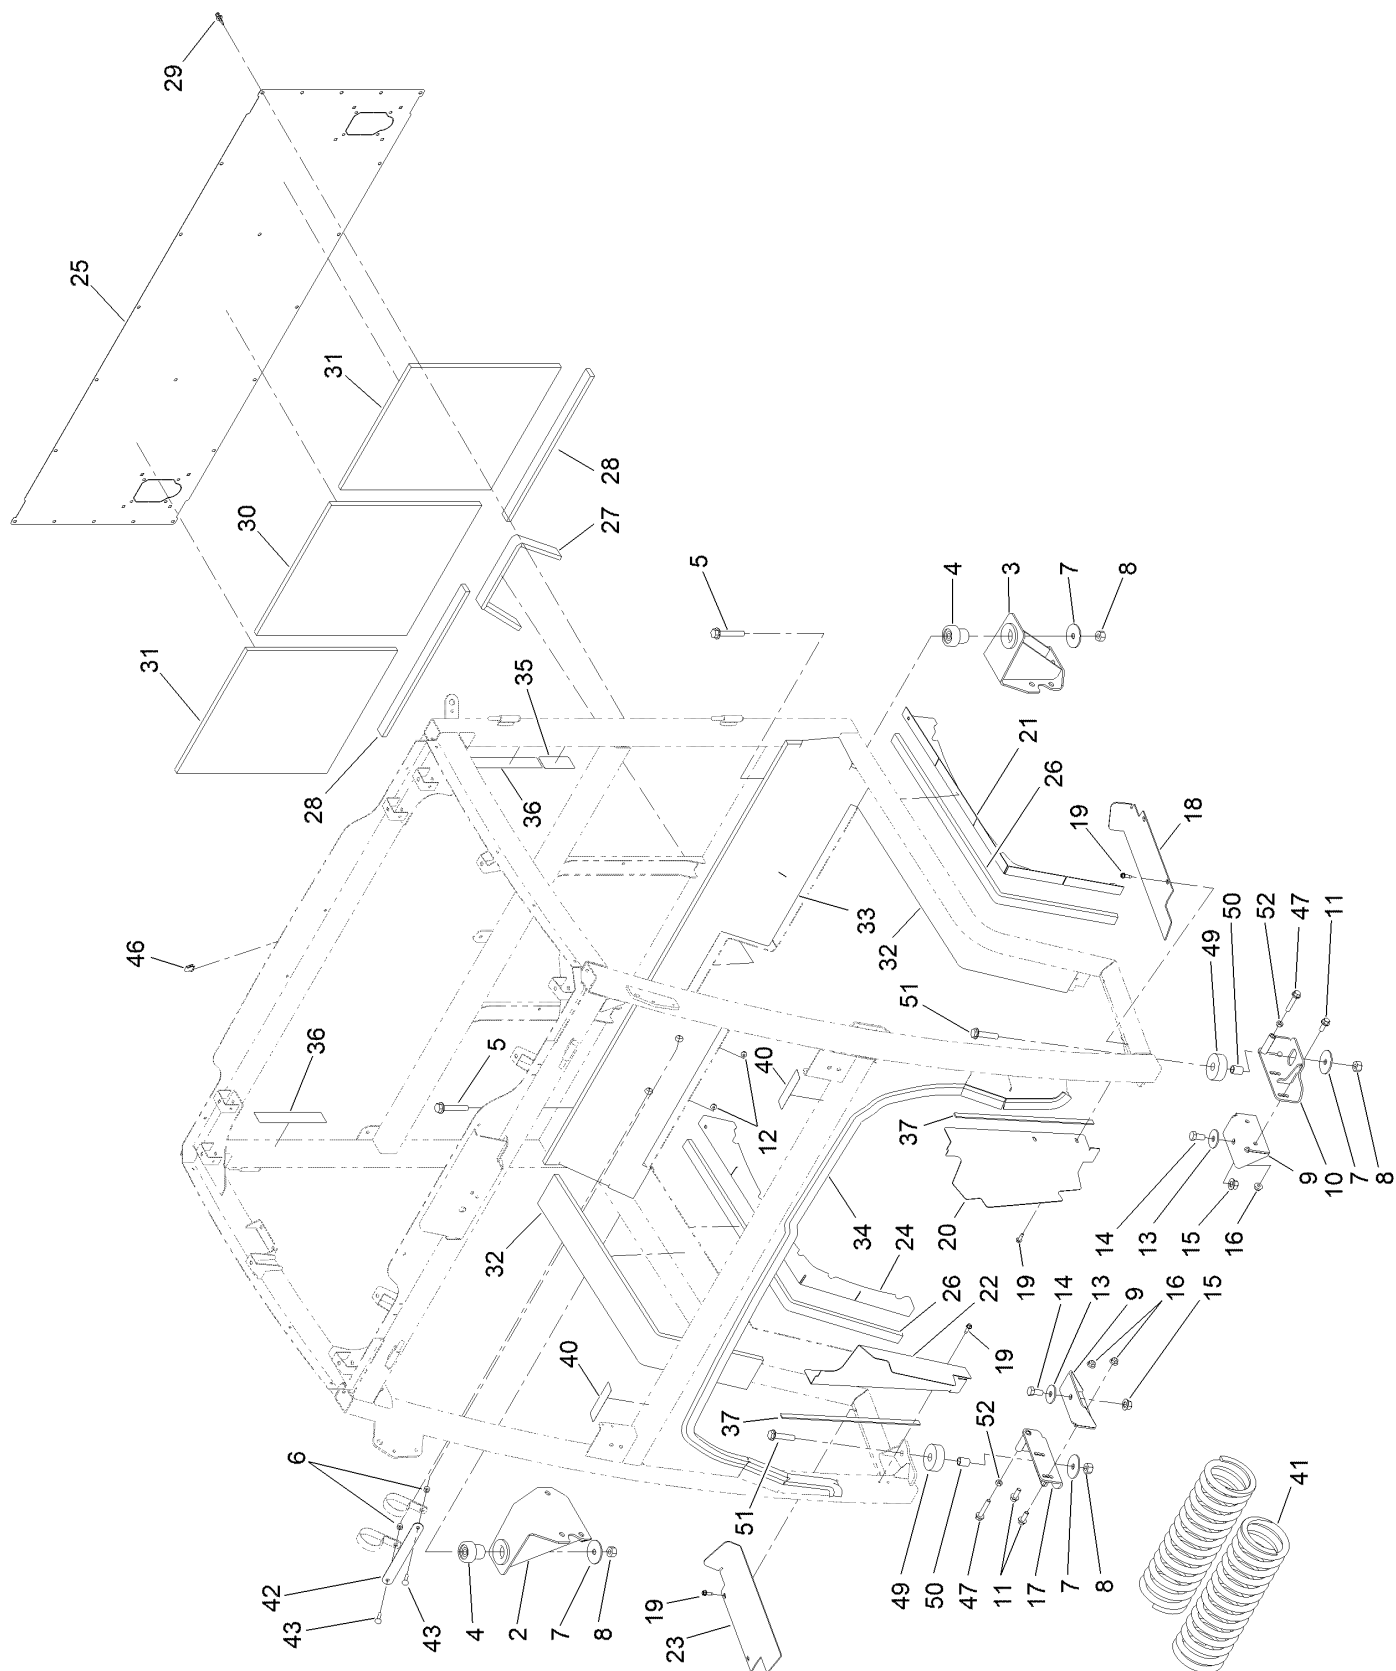

Frame, Mount and Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	125-9805-03	1	Mount-Cab, RH	25	132-7769-03	1	Plate-Panel,Rear
3	125-9802-03	1	Mount-Cab, LH	26	125-9842	2	Foam-Seal, Side
4	110-5954	2	Mount-Center, Bonded	27	125-9843	1	Foam-Seal, Rear (Center)
5	3234-40	2	Screw-HF	28	125-9844	2	Foam-Seal, Rear
6	98-4799	2	Spacer	29	125-9622	22	Rivet-Blind
7	114-0019	4	Washer-Plain	30	127-9945	1	Foam-Upholstrey, Center
8	3296-25	4	Nut-Lock, NI	31	127-9946	2	Foam-Upholstrey, Side
9	125-9633-03	2	Bracket-Mount, Front	32	130-0450	2	Foam-Interior, Side
10	136-2147-03	1	Mount-LH	33	130-0449	1	Foam-Interior, Rear
11	3234-42	4	Screw-HHF	34	137-1315	1	Seal-Trim, Cam
12	104-7201	2	Nut-HF, NI	35	93-9850	1	Decal-ROPS, CE
13	86-1990	2	Washer-Thrust	36	117-4955	2	Decal-Danger, ROPS (CE)
14	325-4	2	Screw-HH	37	137-1033	2	Seal-Cover
15	99-5107	2	Nut-Lock	40	130-5964	2	Decal-Window, Pin
16	104-8301	4	Nut-HF, NI	41	140-2574	2	Spring-Compression, HD
17	136-2146-03	1	Mount-RH	42	130-5583	1	Strap-Mount, Manual
18	137-1032-03	1	Plate-Floor, LH	43	3229-3	2	Screw-CARR
19	32104-95	8	Screw-HWH	46	107069	1	Clip
20	137-1026-03	1	Cover-Panel, Lower LH	47	66-9302	2	Screw-HHF Lock
21	125-9841-01	1	Plate-Panel, LH (Seal)	49	119-8615	2	Isolator-Rubber
22	137-1025-03	1	Cover-Panel, Lower RH	50	136-2151	2	Spacer-Mount
23	137-1031-03	1	Plate-Floor, RH	51	3234-46	2	Screw-HHF
24	125-9840-01	1	Plate-Panel, RH (Seal)	52	3217-7	2	Nut-Hex


Roof, Wiper Motor and Console Assembly

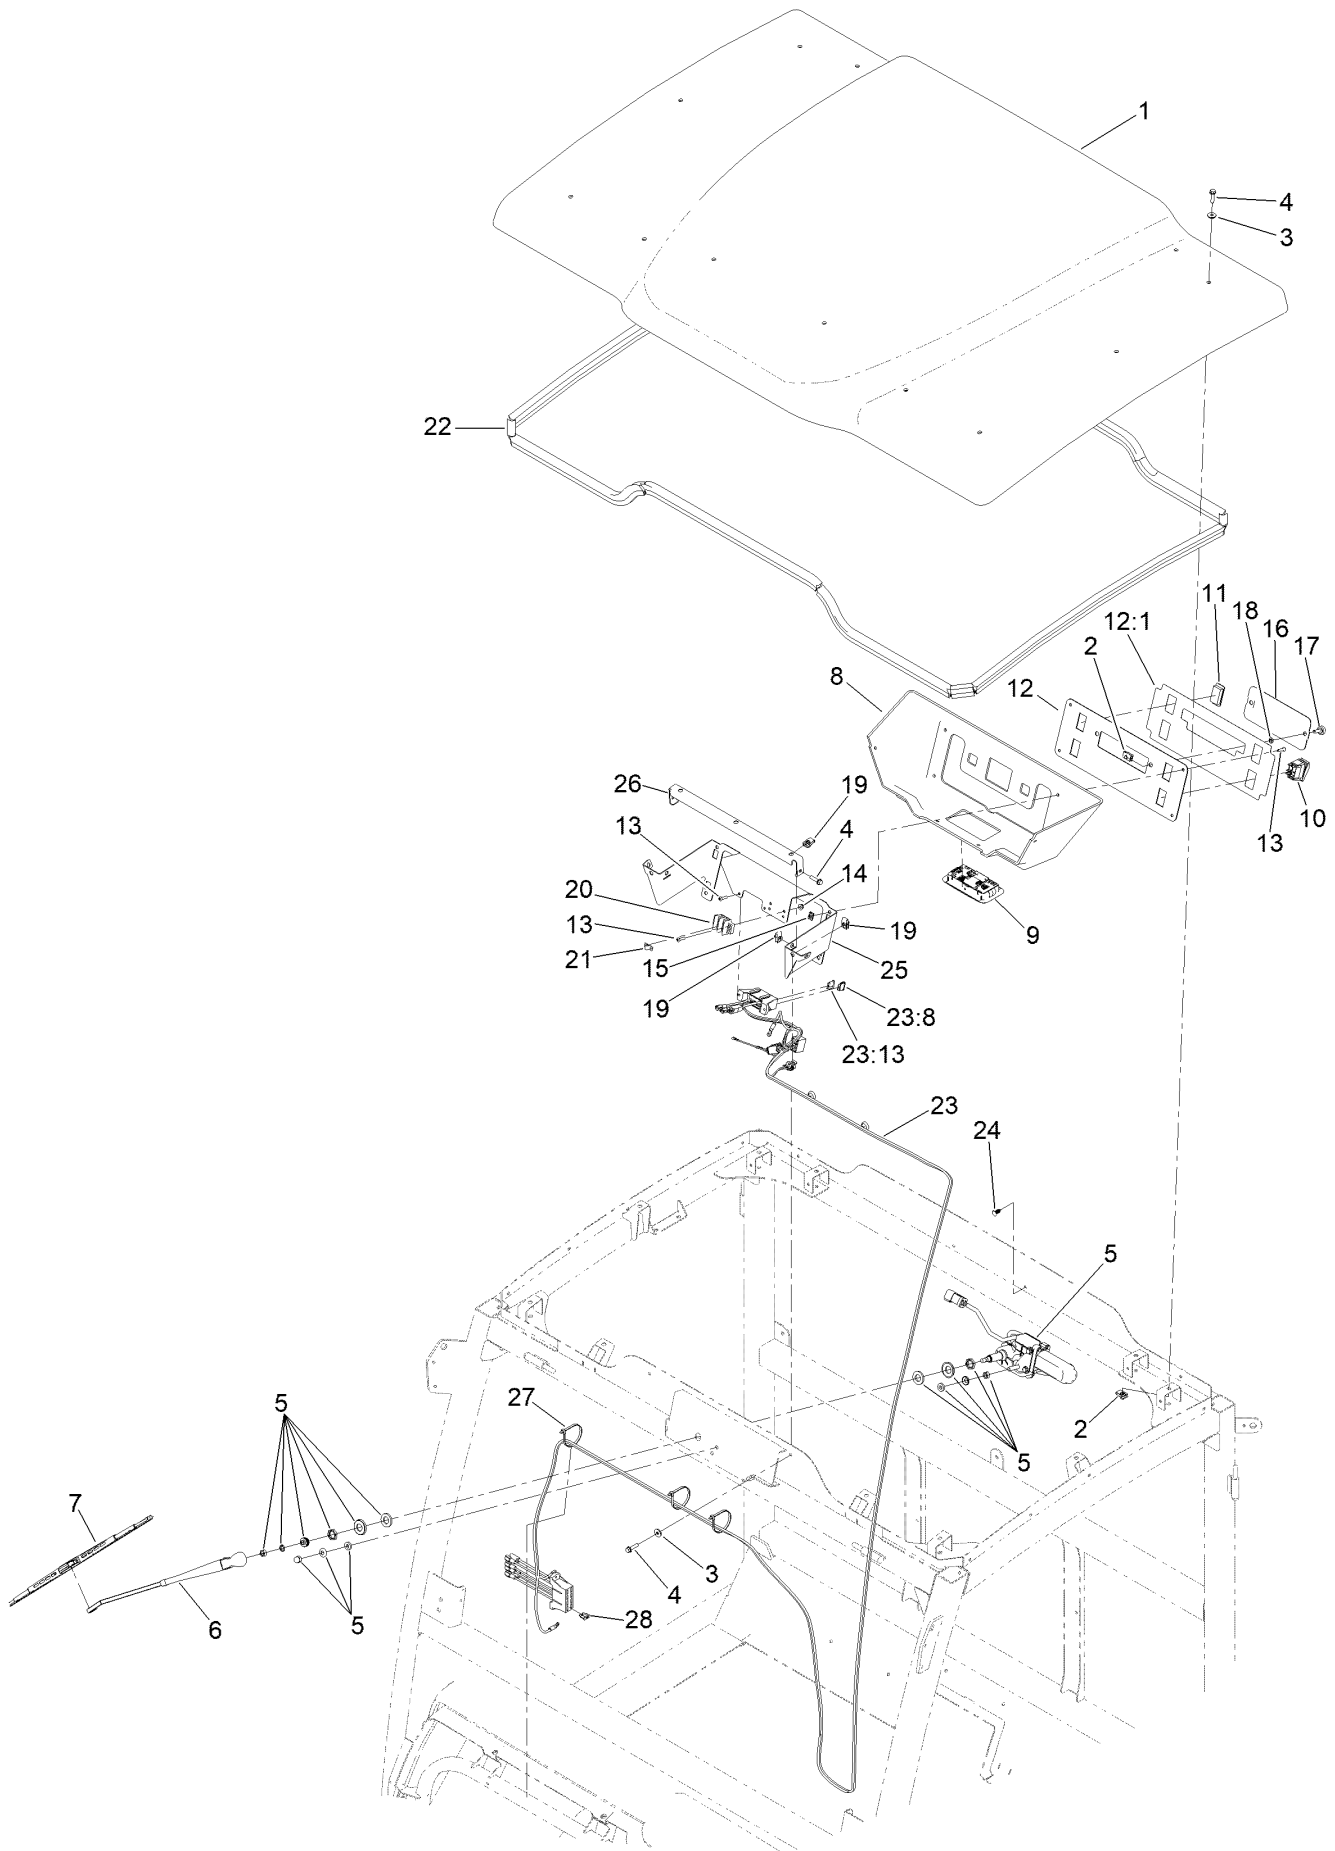

Roof, Wiper Motor and Console Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-2733	1	Roof-Cab, Workman	16	125-9603-03	1	Plate-Cover, Fuse
2	107069	12	Clip	17	125-7438	2	Knob-Screw, Thumb
3	119-0872	14	Washer-Sealing, Bonded	18	32115-15	2	Nut-Push
4	120-4654	12	Screw-HHF	19	126-3739	8	Nut-Retainer
5	130-6087	1	Wiper Motor ASM	20	42862	1	Block-Terminal, Ground
6	127-9878	1	Arm-Wiper	21	42863	1	Strip-Jumper
7	130-5430	1	Blade-Wiper	22	137-1316	1	Seal-Trim
8	136-1969	1	Console-Roof Top	23	122-0308	1	Harness-Wire, Headliner
9	125-7437	1	Light-Dome	23:8	109355	1	Fuse-Blade, 15 Amp
10	119-8355	1	Switch-Rocker	23:13	110928	1	Fuse-Blade, 5 Amp
11	99-7420	3	Plug-Hole	24	114-4899	12	Rivet-Push
12	145-7732	1	Panel ASM-Console	25	137-1018-03	1	Mount-Console
12:1	145-7728	1	Decal-Console	26	137-1313-03	1	Support-Roof
13	104-2408	8	Screw-HSBH	27	3290-379	4	Tie-Cable
14	120-4578	4	Nut-HF	28	109103	1	Fuse-Blade, 30 Amp
15	107-1013	4	Nut-Speed				


Window and Latch Assembly

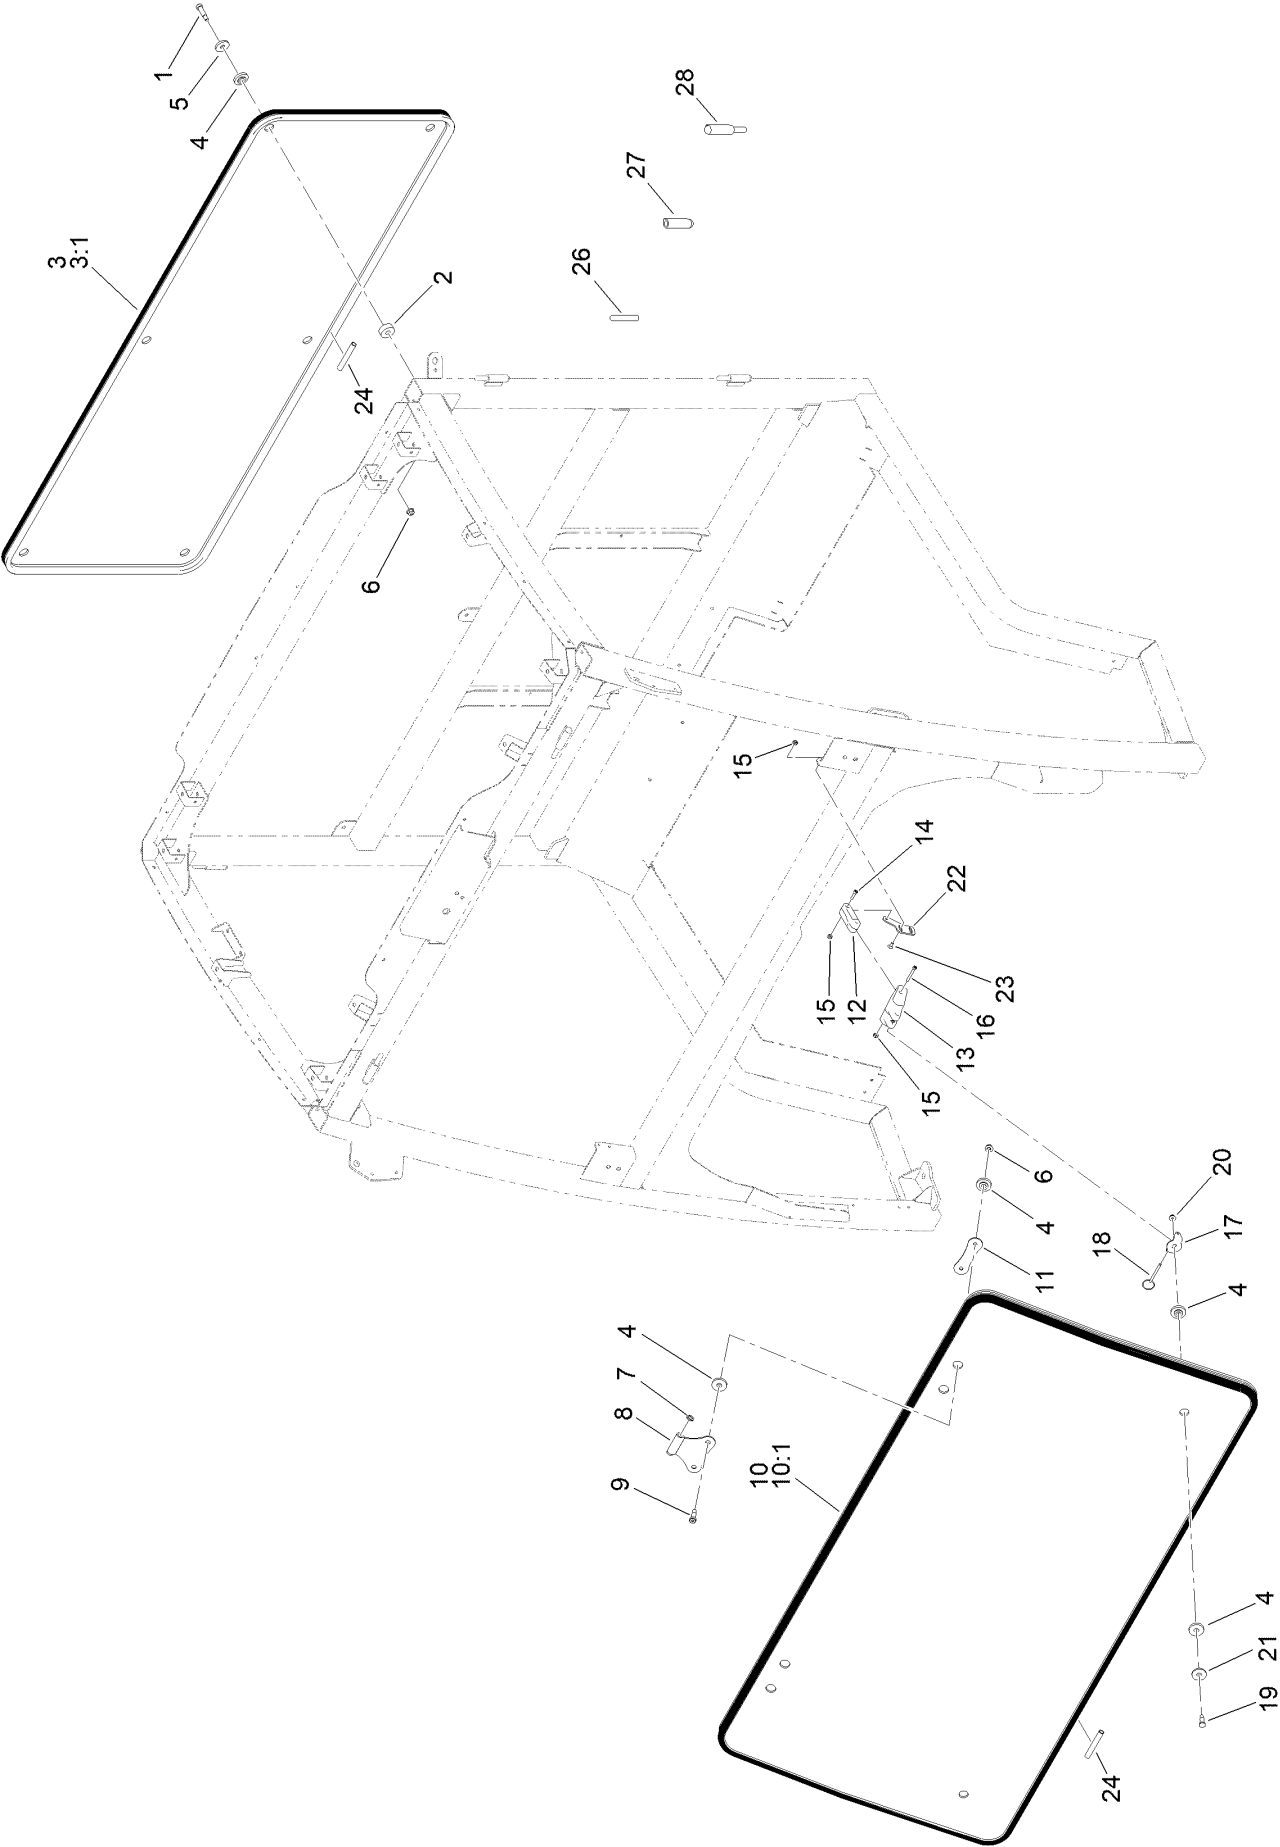

Window and Latch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-9521	6	Screw-Shldr HSH	14	3274-14	2	Screw-HSH
2	125-9537	6	Bushing-Flange	15	120-9681	8	Nut-Lock, NI
3	125-9849	1	Window-Rear	16	3274-59	2	Screw-HSH
3:1	125-9848	1	Trim-Window, Rear	17	144-3308	2	Mount-Latch
4	125-9982	18	Bushing-Flange	18	127-9850	2	Pin-Release, Quick
5	130-5815	6	Washer-Backup	19	119-9812	2	Bolt-Shoulder
6	104-8300	10	Nut-HF, NI	20	104-7201	2	Nut-HF, NI
7	121-8441	2	Washer-Spacer	21	125-9676	2	Washer-Backup
8	121-8535-03	2	Hinge-Window	22	130-0590	2	Mount-Tab
9	125-9520	4	Screw-Shoulder, HSH	23	1-807513	4	Bolt-CARR
10	125-9850	1	Window-Front, Upper	24	130-5578	2	Tubing-Seal, Rubber
10:1	127-9962	1	Seal-Trim, Windshield	26	133-1110	1	Pin-Hinge
11	144-3307	2	Plate-Backer, Windshield	27	121-8439	1	Receiver-Pivot, Hinge
12	125-9793	2	Link-Window	28	121-8440	1	Pivot-Hinge
13	125-9792	2	Handle-Window				


Rain Gutter and Dash Support Assembly

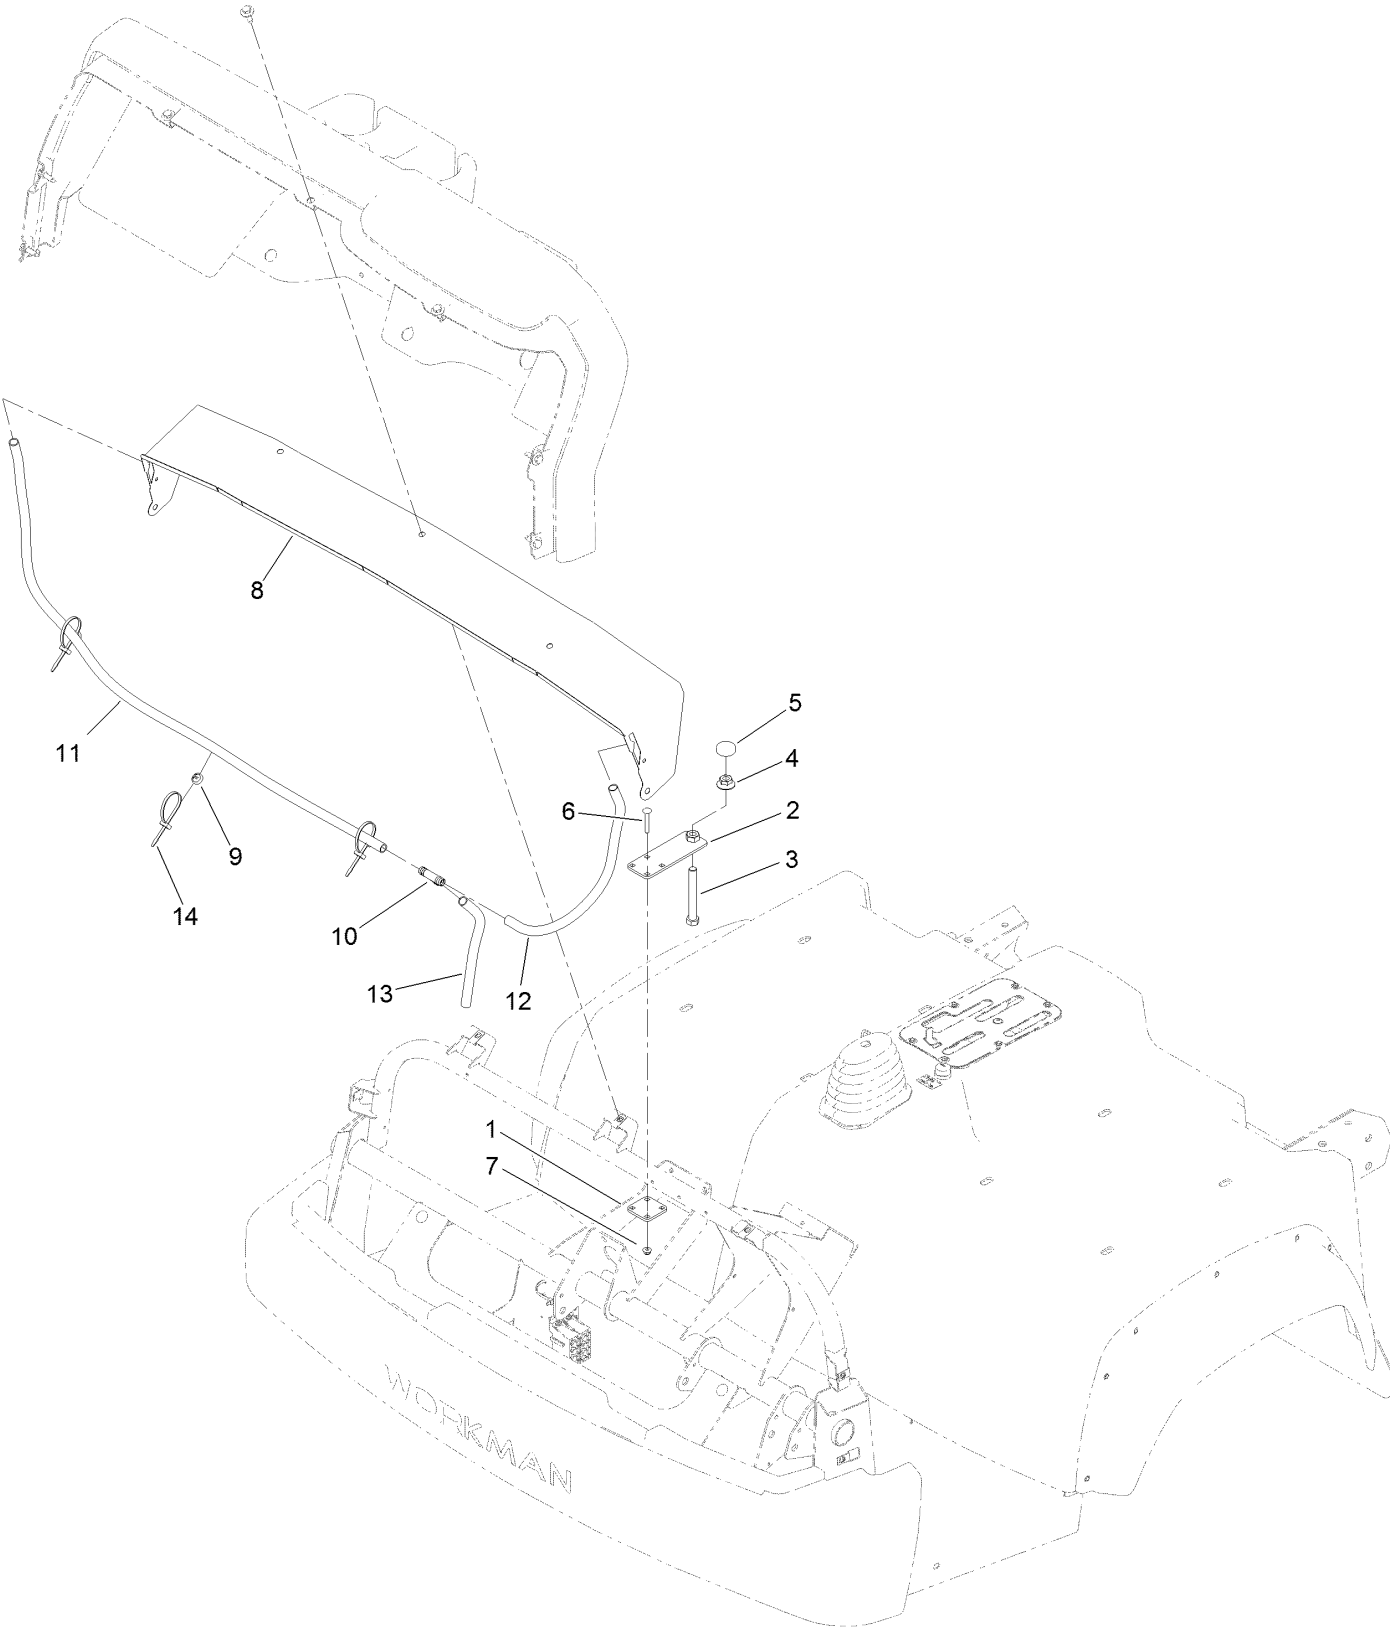

Rain Gutter and Dash Support Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-1021-03	1	Back-Plate	8	137-1314-03	1	Gutter
2	137-1024-03	1	Plate-Adjust	9	32180-139	3	Mount-Tie Wrap, Magnetic
3	116-0559	1	Bolt-TAP	10	138-2751	1	Fitting-Tee, Barb
4	32128-56	1	Nut-HF	11	138-2704	1	Tube-Clear, 48 Inch
5	137-1023	1	Plate-Stop	12	138-2705	1	Tube-Clear, 17 Inch
6	3229-5	4	Screw-CARR	13	138-2706	1	Tube-Clear, 13 Inch
7	104-7201	4	Nut-HF, NI	14	3290-378	3	Tie-Cable

Inner Fender Assembly

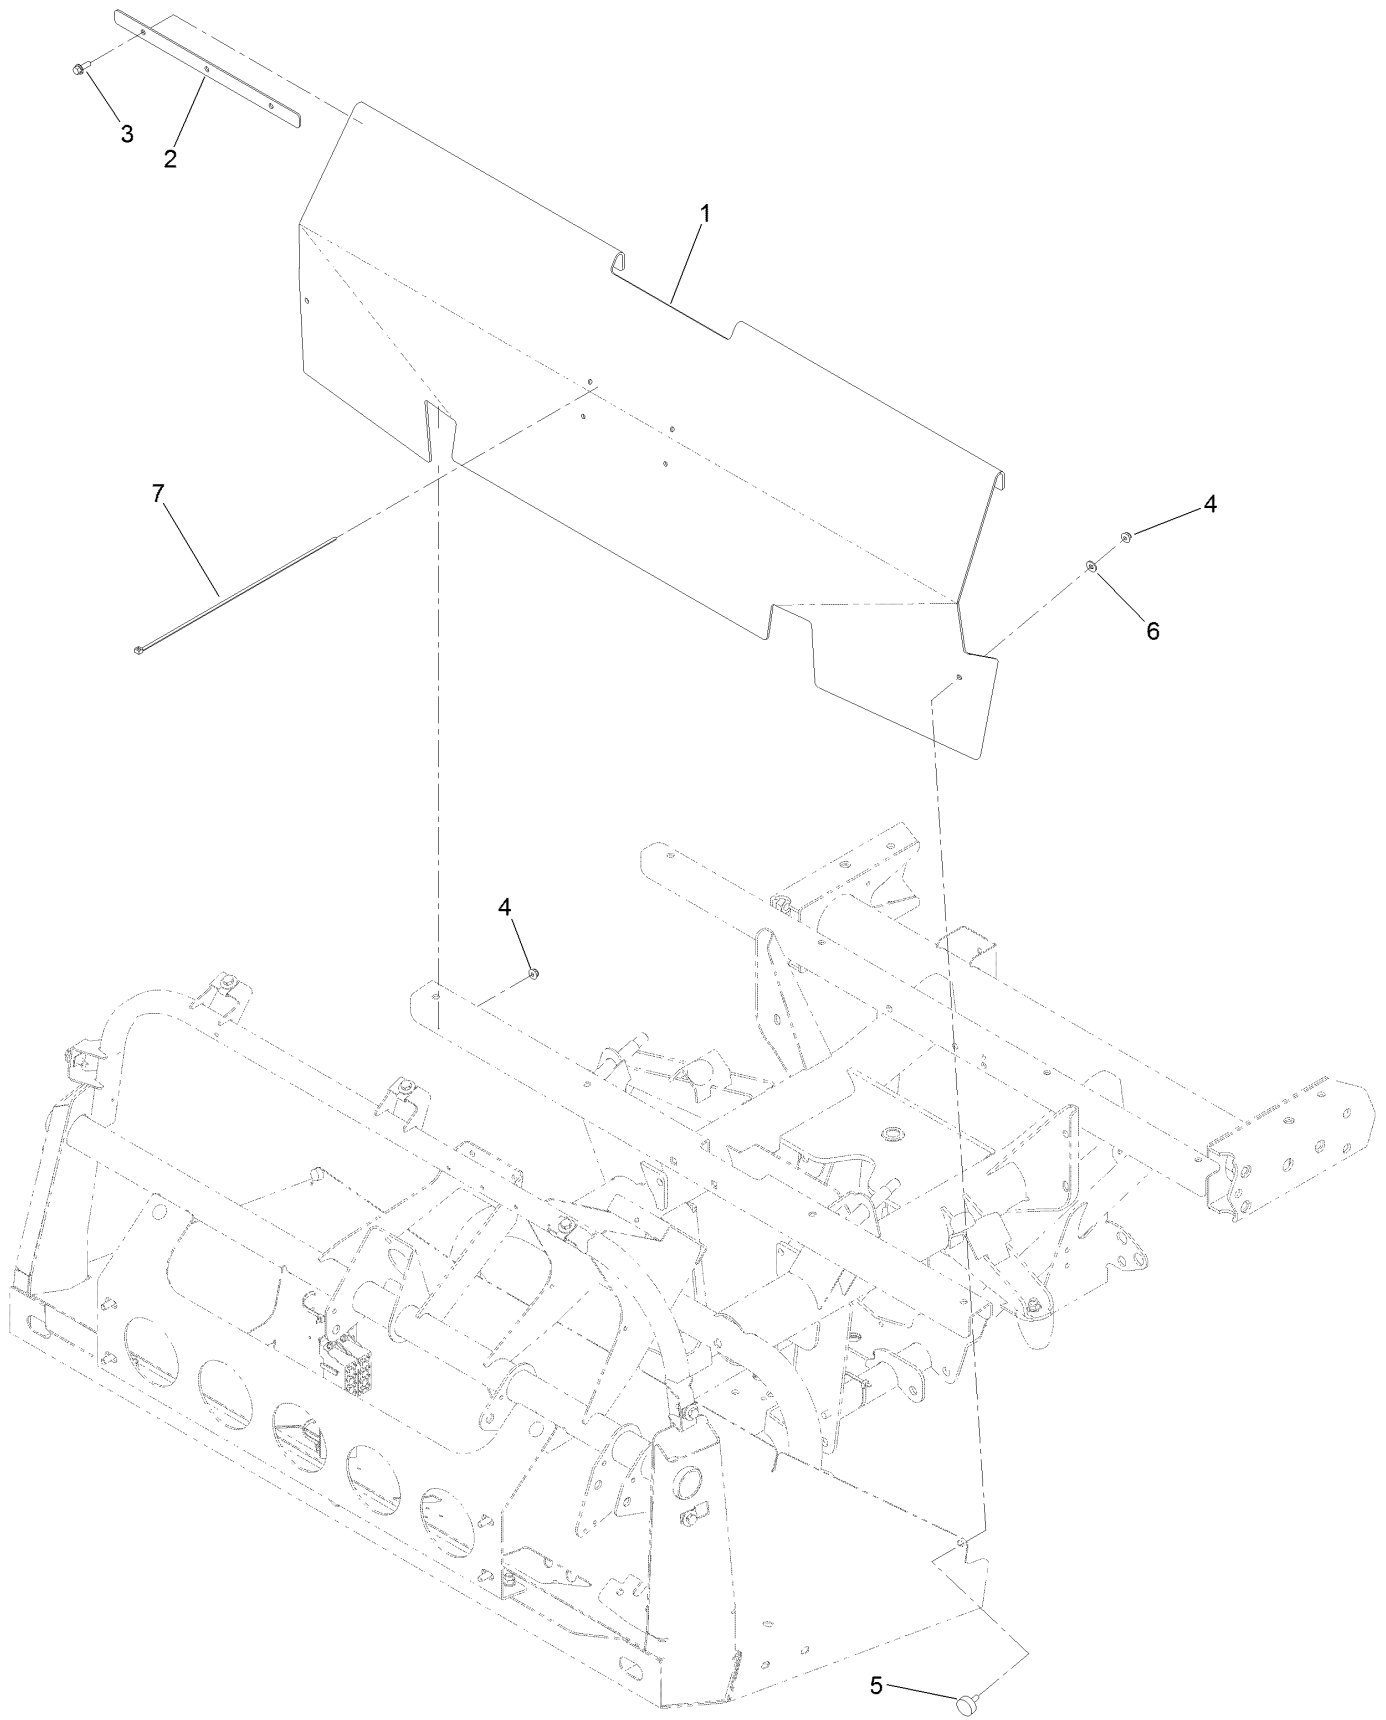

Inner Fender Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-2659	1	Fender-Inner	5	138-2662	2	Bumper-Rubber
2	138-2660	2	Strap-Fender	6	119-8952	2	Washer-Spcl
3	3234-4	6	Screw-HHF	7	3290-379	2	Tie-Cable
4	104-7201	8	Nut-HF, NI				

Attachments and Accessories

For 07392 Cab Kit Workman HDX and HDX-Auto Utility Vehicle

Product Name	Model/Part
Door Kit with Sliding Window	07393
Exterior Mirror Kit.....	130-5448
Interior Mirror Kit.....	130-5449
Beacon Kit	130-5484
Work Light Kit	130-5485
Windshield Washer Fluid Kit, 2015 and after Workman MD/HD Series Utility Vehicle	130-5615

Notes:



Count on it.