



Form No. 3397-761 Rev C

Count on it.

Parts Catalog

Door Kit with Sliding Window Workman® HDX Utility Vehicle

Model No. 07393



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Door and Striker Assembly 4

LH Door Assembly 6

Sliding Window Assembly No. 145-7613SP 8

RH Door Assembly..... 10

Door and Striker Assembly

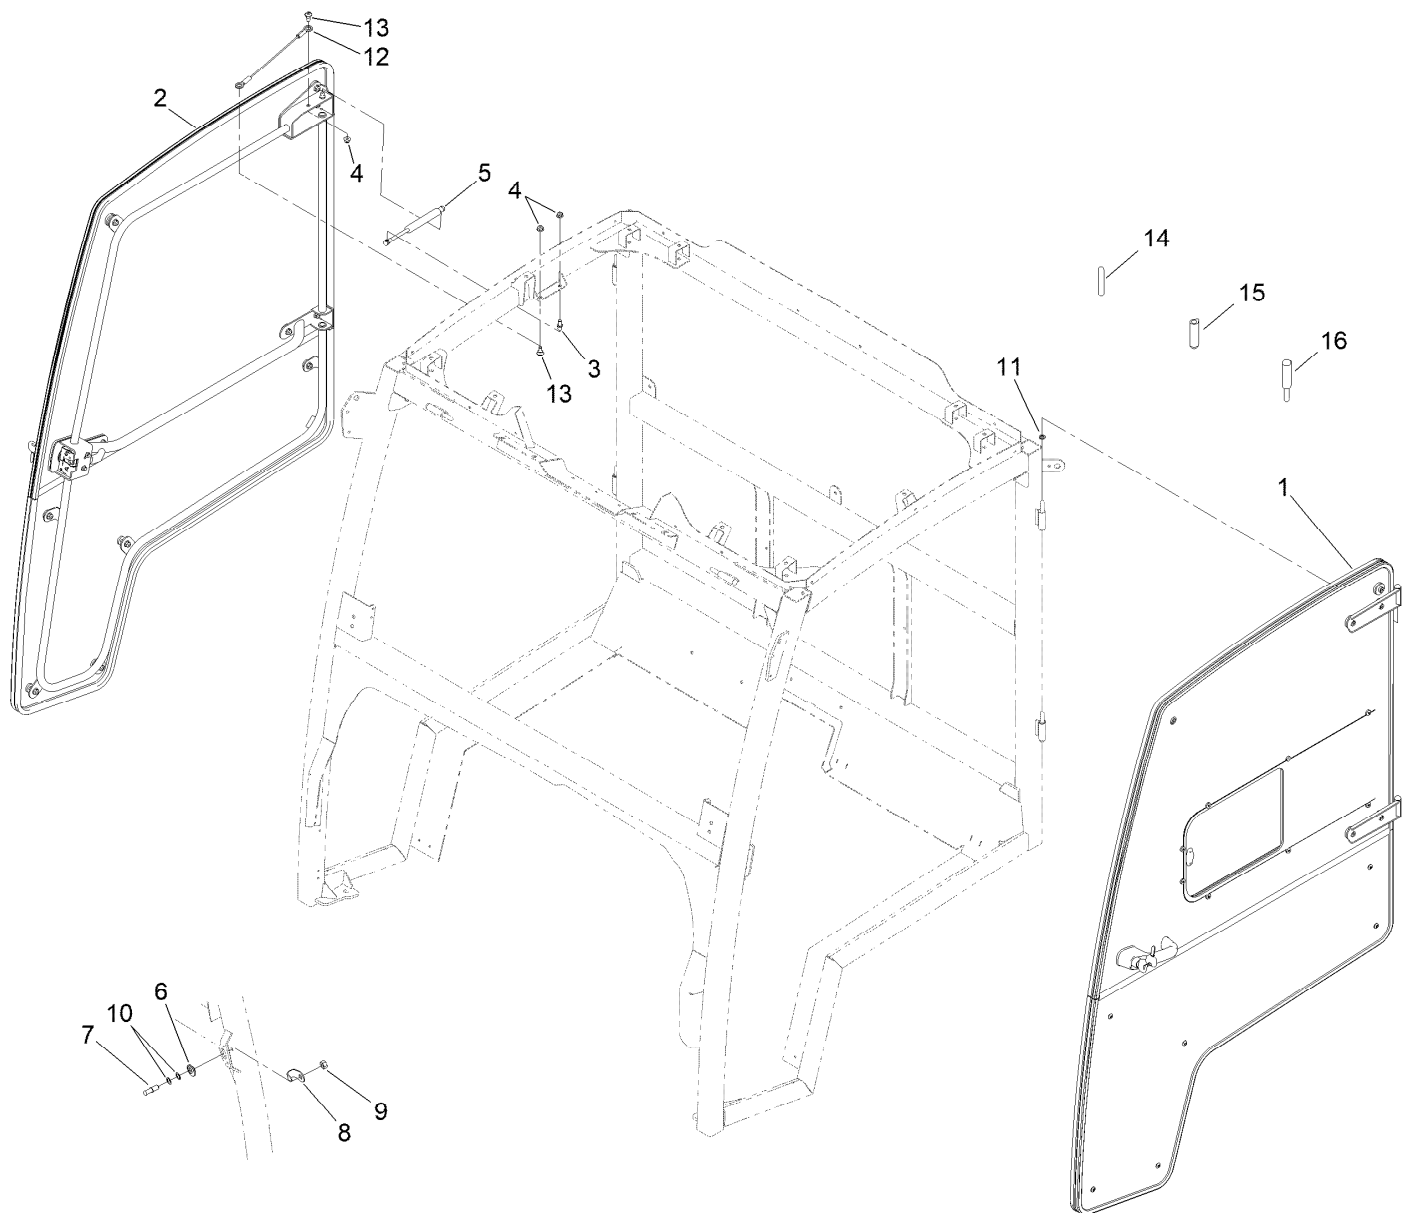


Door and Striker Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	LH Door ASM ●	9	106-0327	2	Nut-Hex
2		1	RH Door ASM ●	10	73-0040	4	Washer-Thrust
3	98-3104	2	Stud-Ball	11	121-8441	4	Washer-Spacer
4	104-8300	6	Nut-HF, NI	12	130-5726	2	Lanyard
5	130-6083	2	Spring-Gas, Door	13	120-9471	4	Bolt-Shoulder
6	125-9992	2	Adjuster-Stud	14	133-1110	1	Pin-Hinge
7	125-9993	2	Striker-Stud	15	121-8439	1	Receiver-Pivot, Hinge
8	121-8393	2	Guard-Striker	16	121-8440	1	Pivot-Hinge

● Not serviced separately


LH Door Assembly

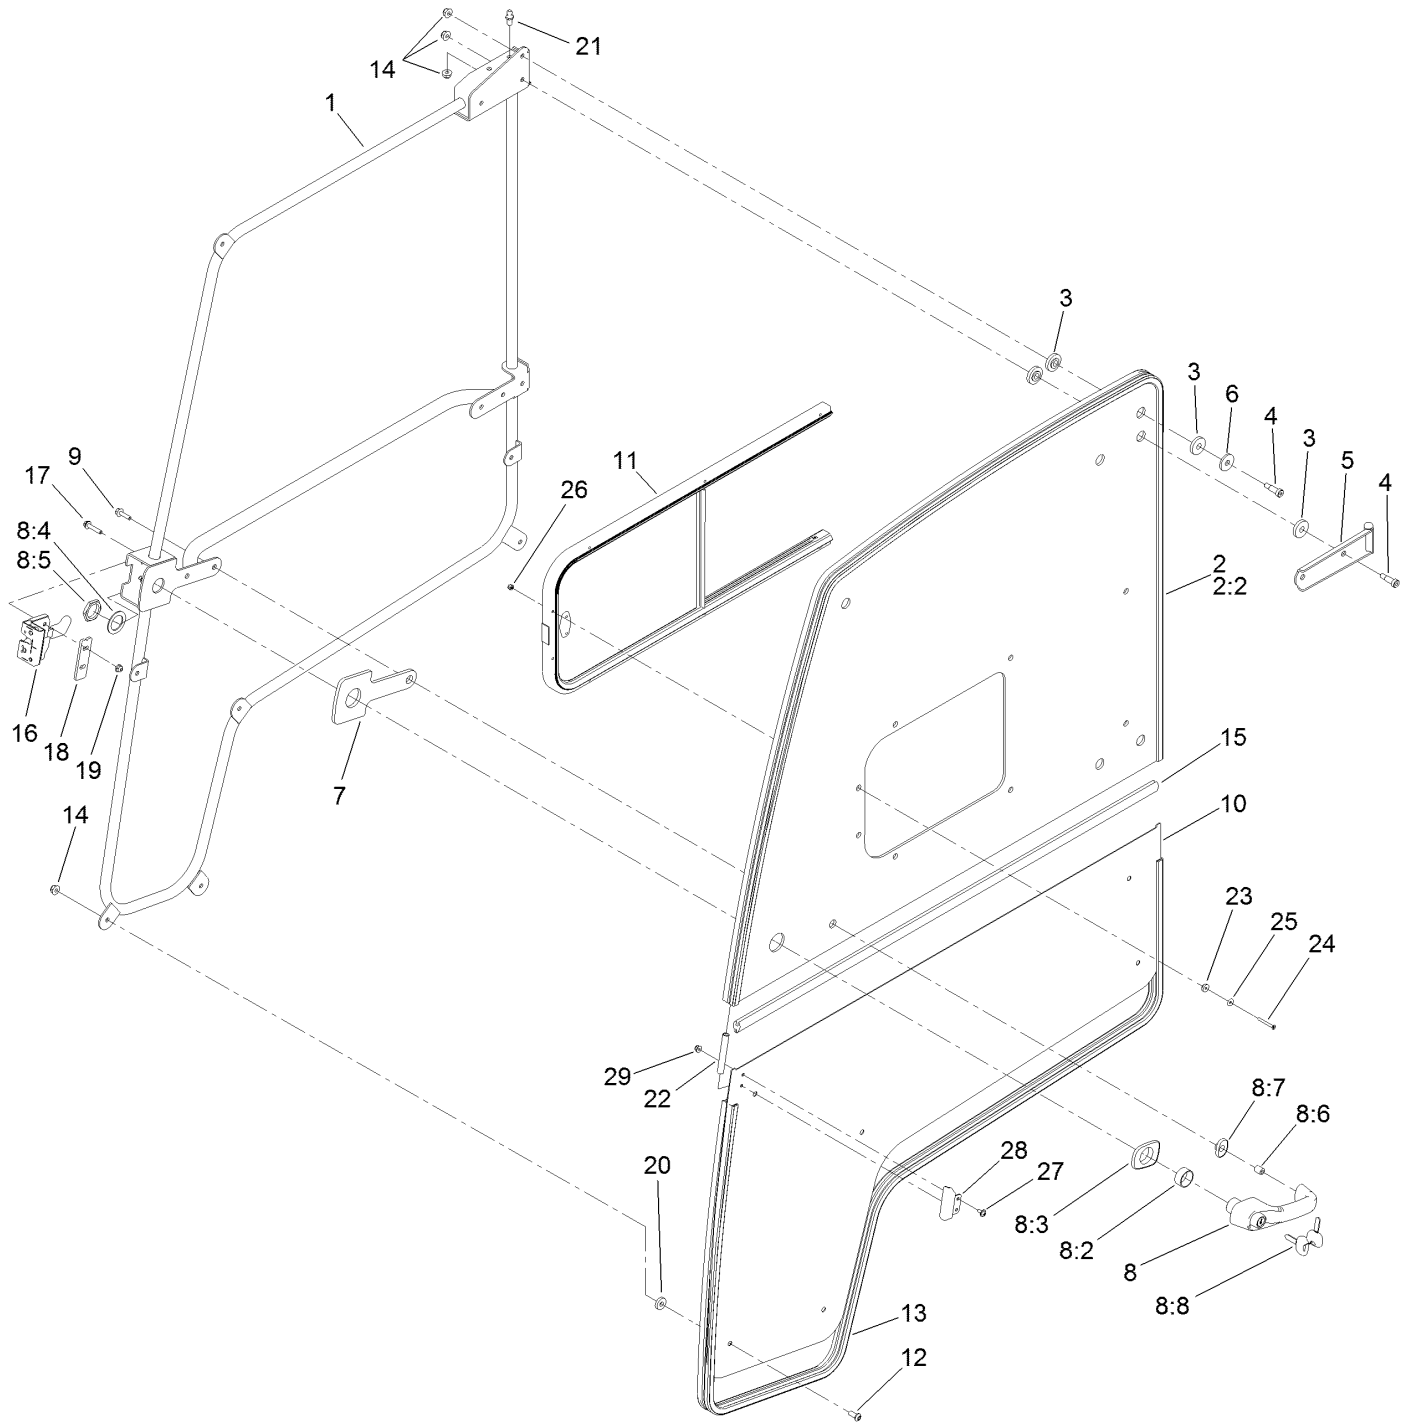

LH Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-0482-03	1	Frame-Door, LH	12	3274-55	6	Screw-HSBH
2	130-5553	1	LH-Upper Door Panel ASM	13	130-0487	1	Trim-Door
2:2	130-0484	1	Trim-Door	14	104-8300	13	Nut-HF, NI
3	125-9982	12	Bushing-Flange	15	130-0488	1	Trim-Locking, Gasket
4	125-9520	6	Screw-Shoulder, HSH	16	121-8391	1	Latch-LH
5	125-9619-03	2	Hinge-Door, LH	17	3234-21	2	Screw-HHF
6	125-9676	2	Washer-Backup	18	121-8395	1	Plate-Support, Latch
7	121-8331	1	Gasket-Handle	19	104-7201	2	Nut-HF, NI
8	121-8630	1	Handle ASM	20	104-7658	6	Spacer
8:2	121-8628	1	Cylinder-Mounting, Key	21	98-3104	1	Stud-Ball
8:3	121-8322	1	Grommet-Mounting, Large	22	130-5578	2	Tubing-Seal, Rubber
8:4	121-8327	1	Washer	23	130-5544	8	Bushing-Rubber
8:5	121-8328	1	Nut	24	130-5548	8	Screw-PFH
8:6	121-8627	1	Cylinder-Mounting, End	25	130-5549	8	Washer
8:7	121-8323	1	Grommet-Mounting, Small	26	520-0006	8	Nut-Hex, Nylock
8:8	125-9531	1	Key-Set	27	109-2661	2	Screw-PPH
9	33103-025	1	Screw-HHF	28	130-5847	1	Bracket-Guard, Trim (LH)
10	130-0485-03	1	Panel-Door, LH-Lower	29	120-4578	2	Nut-HF
11	145-7613SP	1	Window Slider Assembly				

Sliding Window Assembly No. 145-7613SP

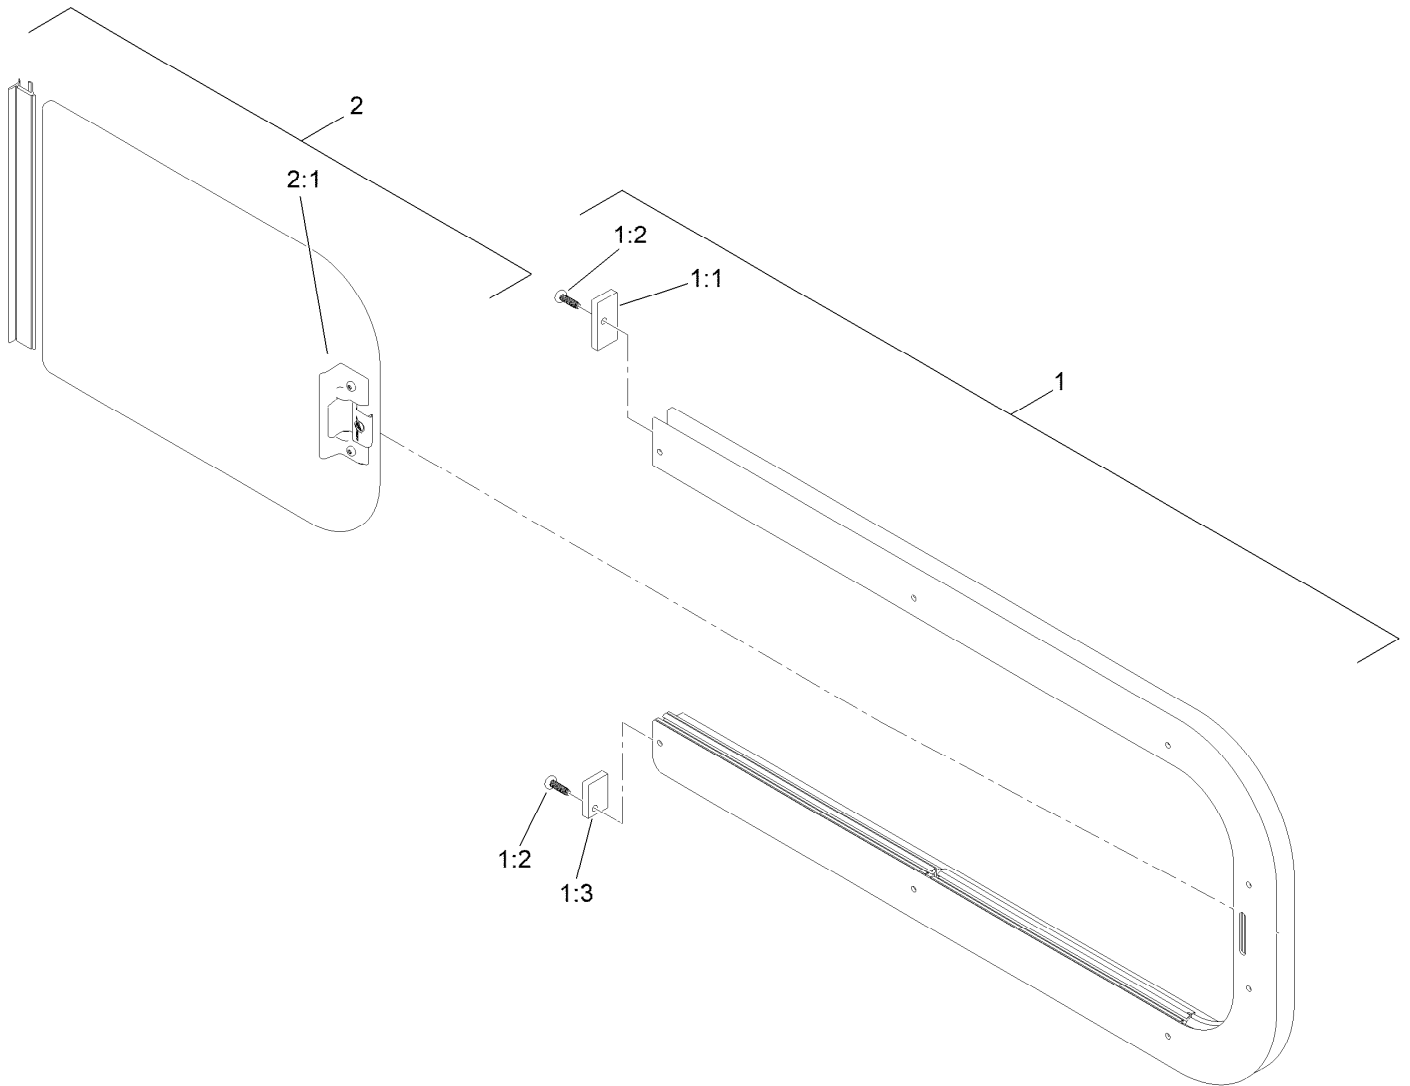


Sliding Window Assembly No. 145-7613SP (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7651	1	Frame ASM
1:1	145-7650	1	Cap-End, Full
1:2	145-7648	2	Screw-Sliding Window End Cap

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:3	145-7649	1	Cap-End, Short
2	145-7652	1	Glass ASM
2:1	145-7653	1	Latch-Slider Window

RH Door Assembly

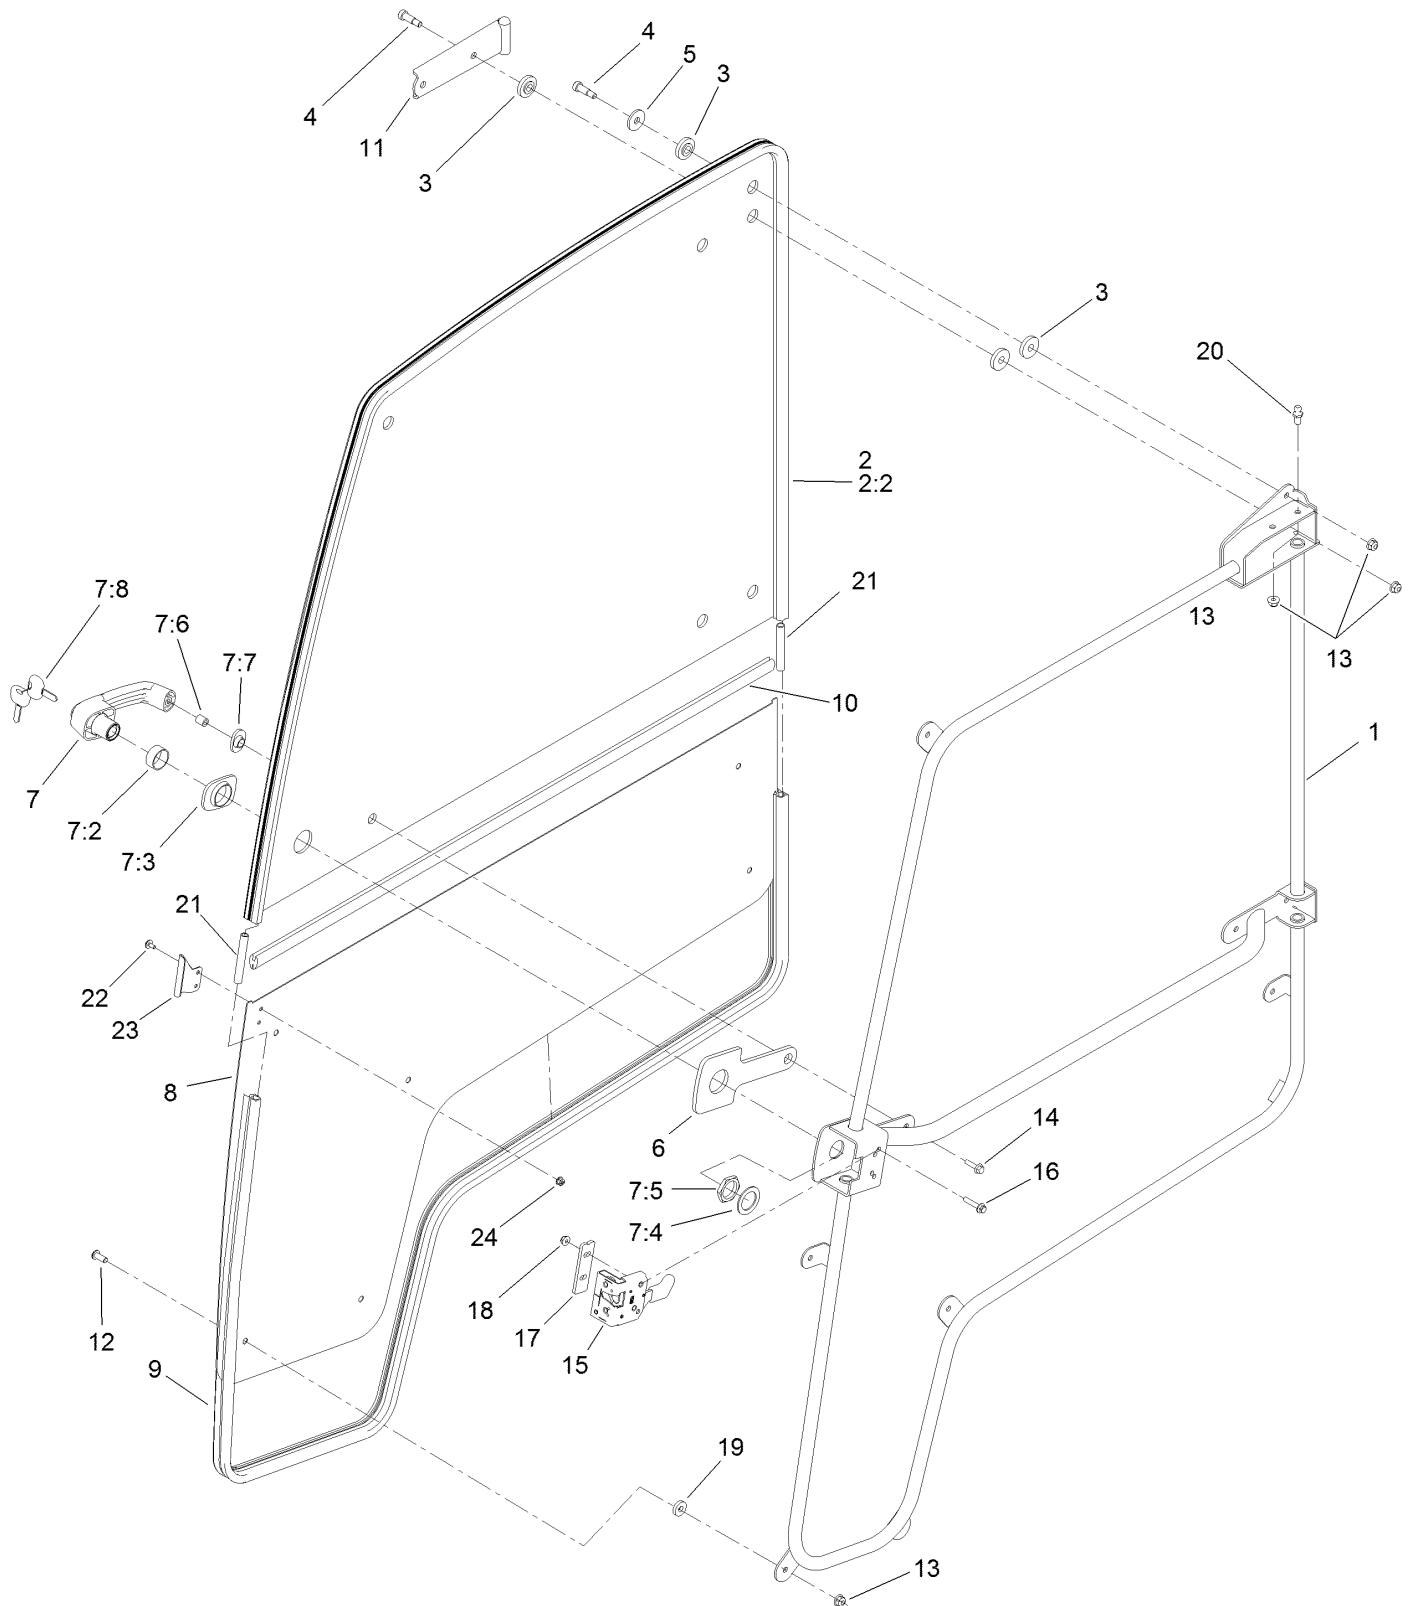

RH Door Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-0489-03	1	Frame-Door, RH	9	130-0487	1	Trim-Door
2	130-5554	1	RH-Upper Door Panel ASM	10	130-0488	1	Trim-Locking, Gasket
2:2	130-0484	1	Trim-Door	11	125-9618-03	2	Hinge-Door, RH
3	125-9982	12	Bushing-Flange	12	3274-55	6	Screw-HSBH
4	125-9520	6	Screw-Shoulder, HSH	13	104-8300	13	Nut-HF, NI
5	125-9676	2	Washer-Backup	14	33103-025	1	Screw-HHF
6	121-8331	1	Gasket-Handle	15	121-8390	1	Latch-RH
7	121-8630	1	Handle ASM	16	3234-21	2	Screw-HHF
7:2	121-8628	1	Cylinder-Mounting, Key	17	121-8395	1	Plate-Support, Latch
7:3	121-8322	1	Grommet-Mounting, Large	18	104-7201	2	Nut-HF, NI
7:4	121-8327	1	Washer	19	104-7658	6	Spacer
7:5	121-8328	1	Nut	20	98-3104	1	Stud-Ball
7:6	121-8627	1	Cylinder-Mounting, End	21	130-5578	2	Tubing-Seal, Rubber
7:7	121-8323	1	Grommet-Mounting, Small	22	109-2661	2	Screw-PPH
7:8	125-9531	1	Key-Set	23	130-5848	1	Bracket-Guard, Trim (RH)
8	130-0485-03	1	Panel-Door, LH-Lower	24	120-4578	2	Nut-HF



Count on it.