



Count on it.

Parts Catalog

Titan® MR4800 Zero Turn Riding Mower

Model No. 76440TA—Serial No. 417200000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly..... 4

Decklift Assembly..... 6

Caster Fork and Wheel Assembly..... 8

Hydraulic Drive Assembly..... 10

LH Hydro Transmission Assembly No. 147-2860..... 12

RH Hydro Transmission Assembly No. 147-2861..... 14

Parking Brake Assembly..... 16

Rear Wheel Assembly..... 18

Control Assembly..... 20

Engine and Muffler Assembly..... 22

Fuel Assembly..... 24

Electrical Assembly..... 26

48in Deck and Decal Assembly..... 28

Deck Decal Assembly No. 147-8749..... 30


Model Specific Decal Assembly..... 32

Seat Pan Assembly..... 34

Clutch Assembly..... 36

Attachments and Accessories..... 38


Frame Assembly

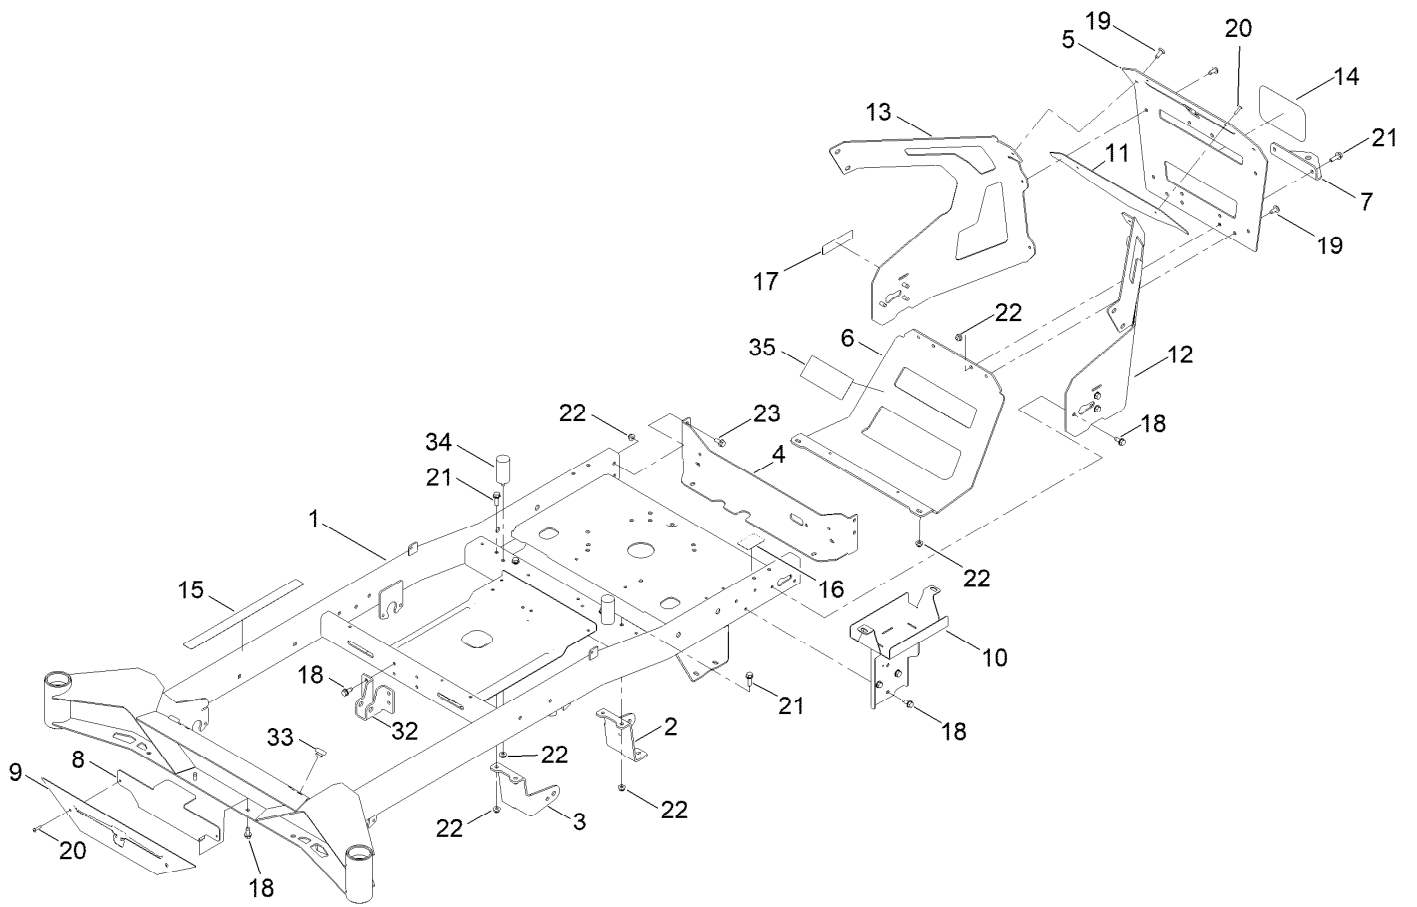

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6608	1	Service ASM-Frame, Titan	15	144-5288	1	Decal-Warning
2	161-6506-01	1	Mount-Drive, LH	16	161-6207	1	Decal-Bypass
3	161-6507-01	1	Mount-Drive, RH	17	142-5864	1	Decal-Spark Arrester
4	147-8709-03	1	Plate-Mount	18	32144-70	15	Screw-HWHTF
5	147-2998-03	1	Guard-Engine	19	138-9753	8	Screw
6	147-3000-03	1	Guard-Muffler	20	130-8451	4	Rivet-Trifold
7	117-1232-03	1	Bracket-Hitch	21	139-2596	6	Screw-HHF
8	147-2878-01	1	Plate-Backer	22	119-4041	14	Nut-HF
9	147-2879-03	1	Logo-Plate-Front	23	139-2598	4	Screw-HHF
10	145-6283-01	1	Wa-Battery Mount	32	145-6323-01	1	Bracket-Mount Damper, Lower
11	147-2999-01	1	Plate-Backer	33	140-3460	2	Bumper-Rubber
12	147-2996-01	1	Guard-Engine LH	34	145-6310	2	Bumper-Rubber
13	147-2997-01	1	Guard-Engine-RH	35	161-6260	1	Tape-Heat
14	99-4693	1	Decal				


Decklift Assembly

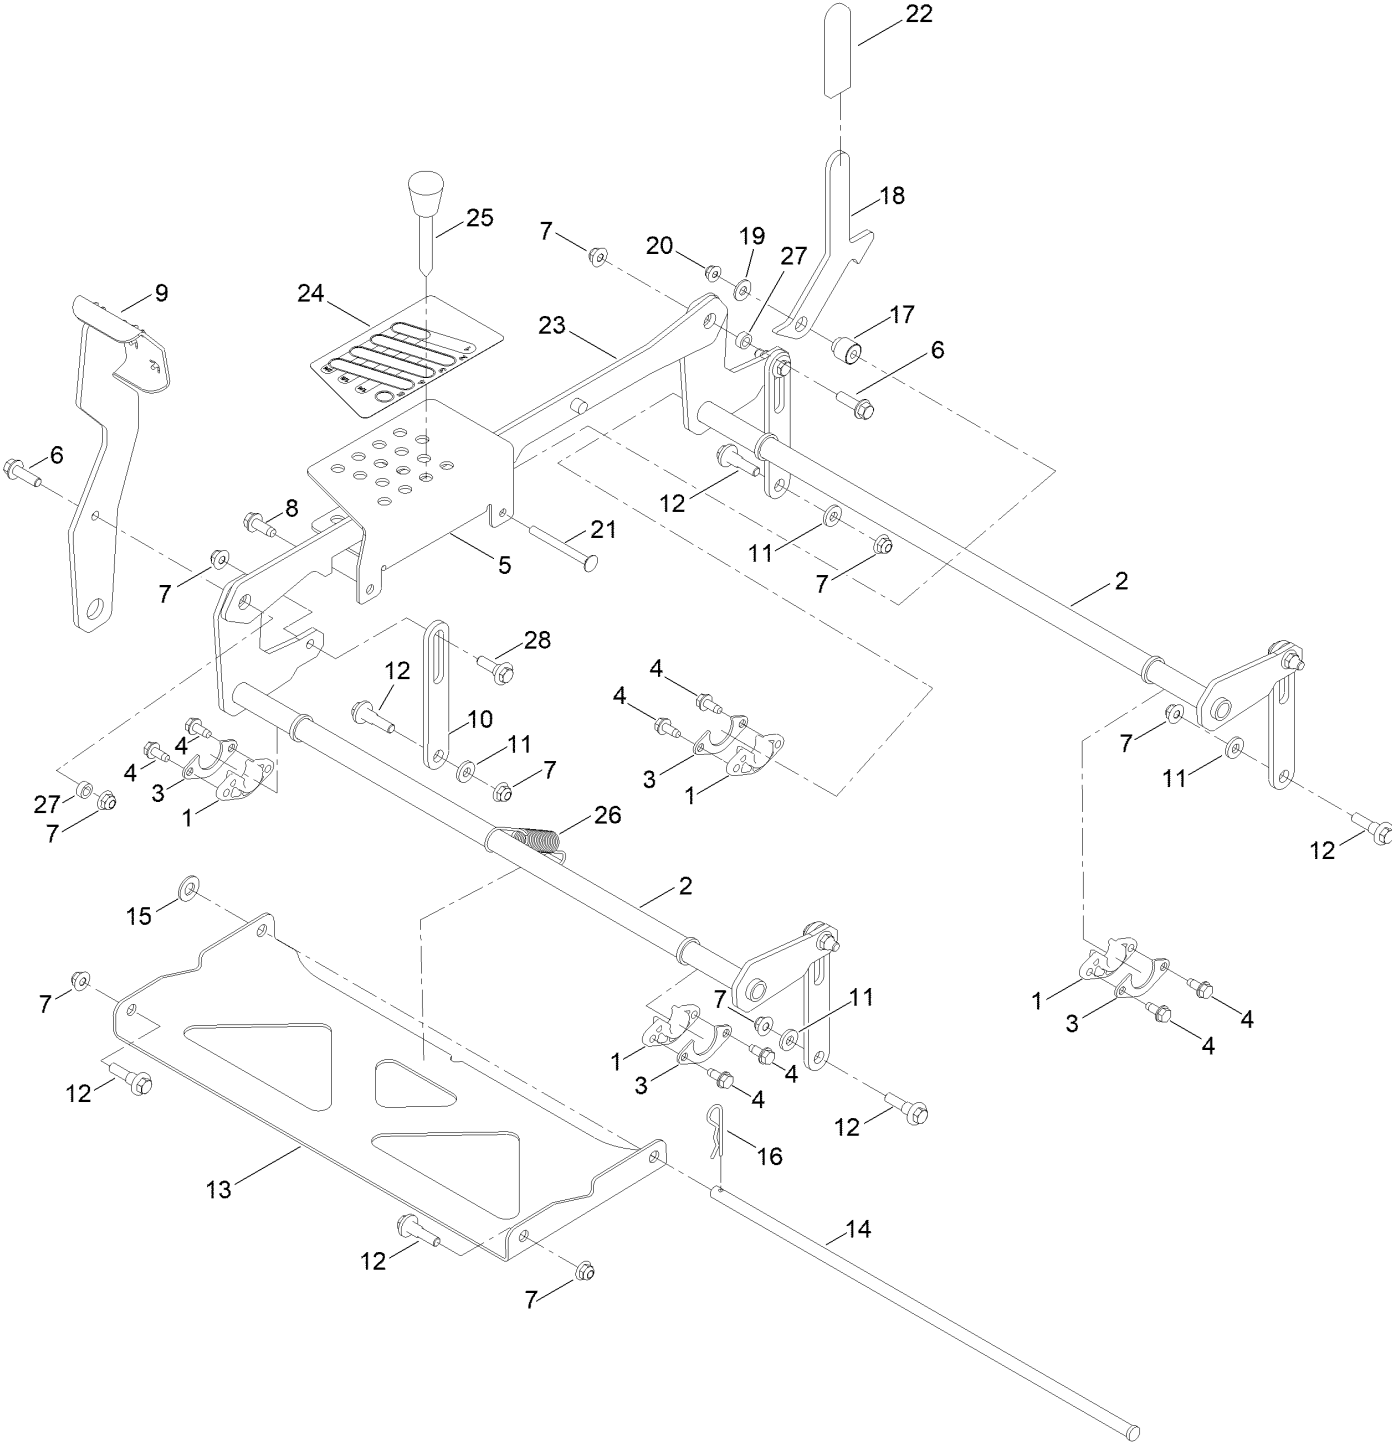

Decklift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-5872	4	Bearing-Flange	15	139-2611	1	Washer-Flat
2	161-4632-01	2	Pivot ASM-Decklift [red]	16	139-2562	1	Pin-Hair
3	138-7204	4	Gusset-Deck Lift	17	145-6282	1	Spacer-Stepped
4	32144-70	8	Screw-HWHTF	18	145-6279	1	Plate-Transport Lock
5	145-6260-01	1	Bracket-HOC	19	137-3082	1	Washer-Plain
6	119-4061	2	Screw-HHF	20	119-4041	1	Nut-HF
7	119-4042	12	Nut-HF, NI	21	138-0741	1	Screw-CARR
8	139-2428	1	Screw-HWH	22	140-0413	1	Grip-Handle
9	145-6278-01	1	Pedal ASM [red]	23	145-6262-01	1	Link ASM-HOC [red]
10	161-4635-01	4	Link-HOC	24	147-2867	1	Decal-HOC, Titan
11	138-7207	4	Spacer-Hub, Blower	25	140-2146	1	HOC Pin ASM
12	130-0742	6	Bolt-Shoulder	26	138-7206	1	Spring-Extension
13	145-6248-03	1	Pan-Deck Pivot	27	140-2093	2	Spacer
14	145-6288	1	Pin-Deck	28	614672	4	Screw-Shoulder, HWH


Caster Fork and Wheel Assembly

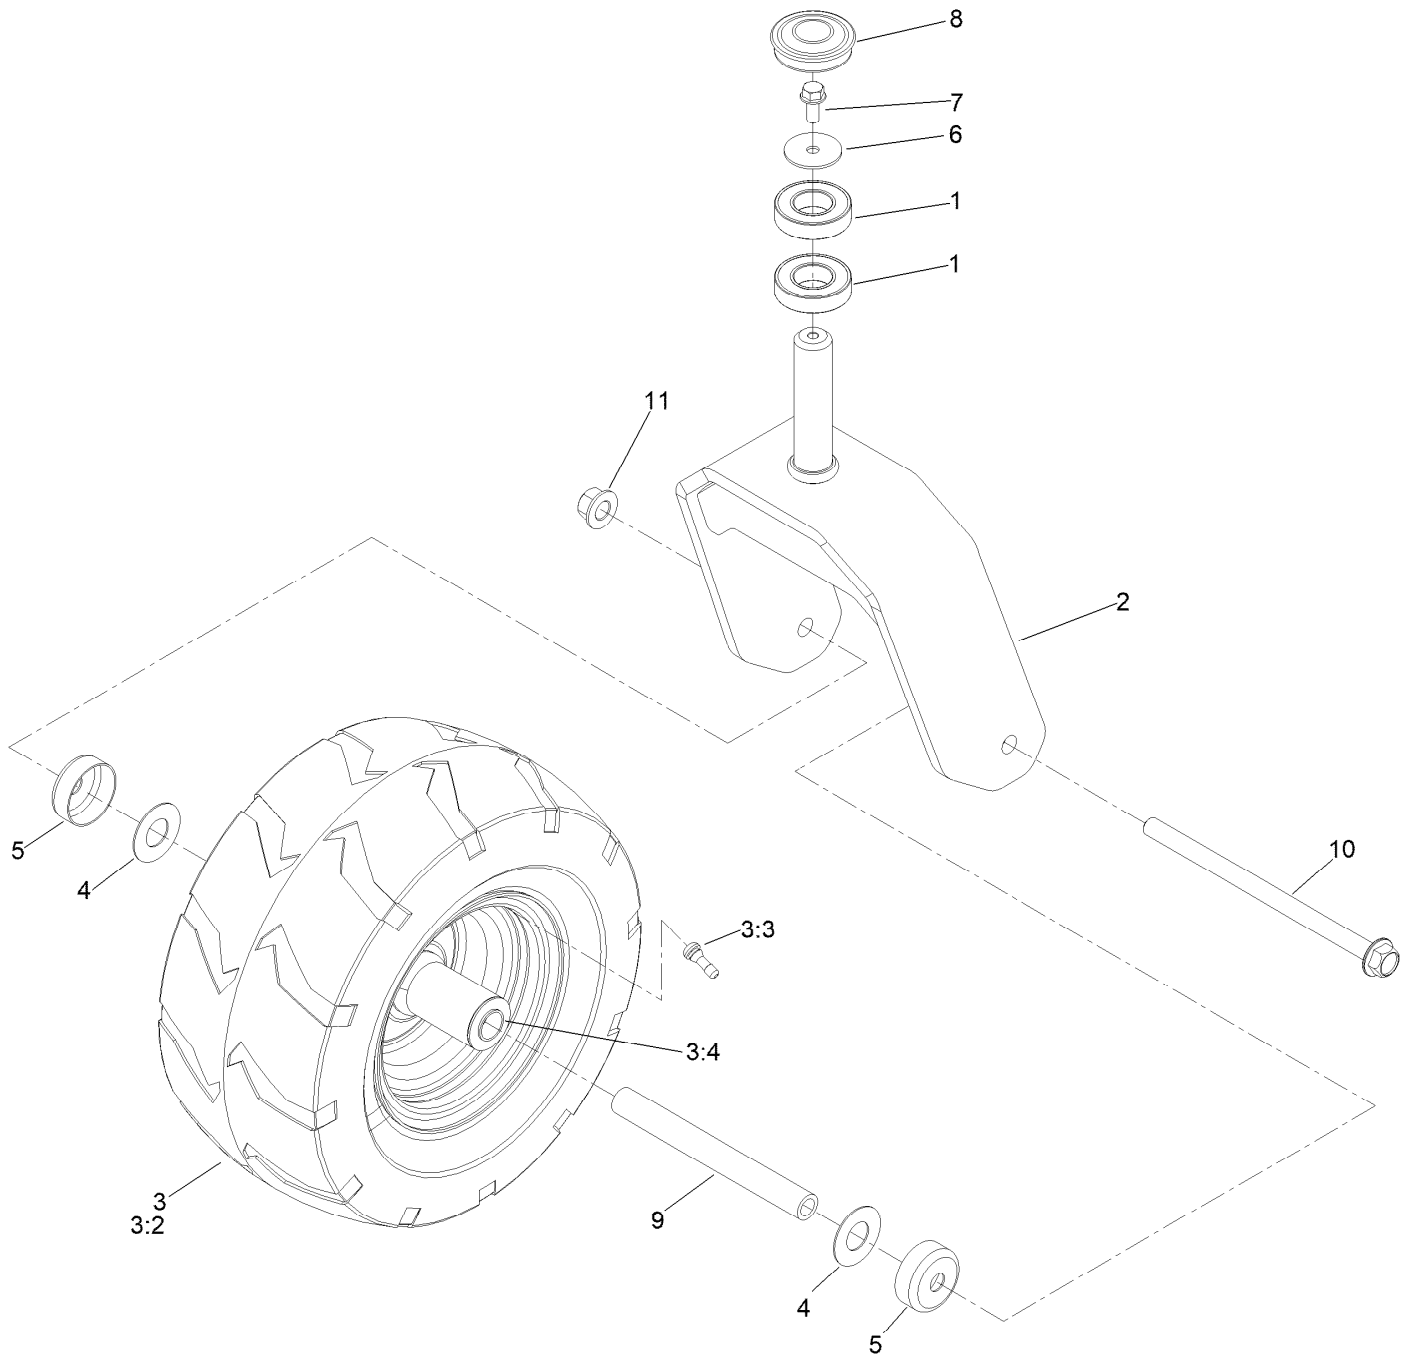

Caster Fork and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-3678	4	Bearing-Ball	5	138-7208	4	Guard-Seal
2	145-6375-01	2	Castor Fork [red]	6	115-1151	2	Washer-Flat
3	147-7647	2	Tire And Wheel ASM	7	100-1668	2	Screw-HHF
3:2	147-7648	1	Tire 13X6.5-6, Treaded	8	144-0375	2	Cap, Grease
3:3	232-27	1	Stem-Valve	9	133-4487	2	Spanner-Wheel
3:4	147-7652	2	Bearing	10	139-2559	2	Screw-HHF
4	136-5590	4	Washer	11	139-1689	2	Nut-HF

Hydraulic Drive Assembly

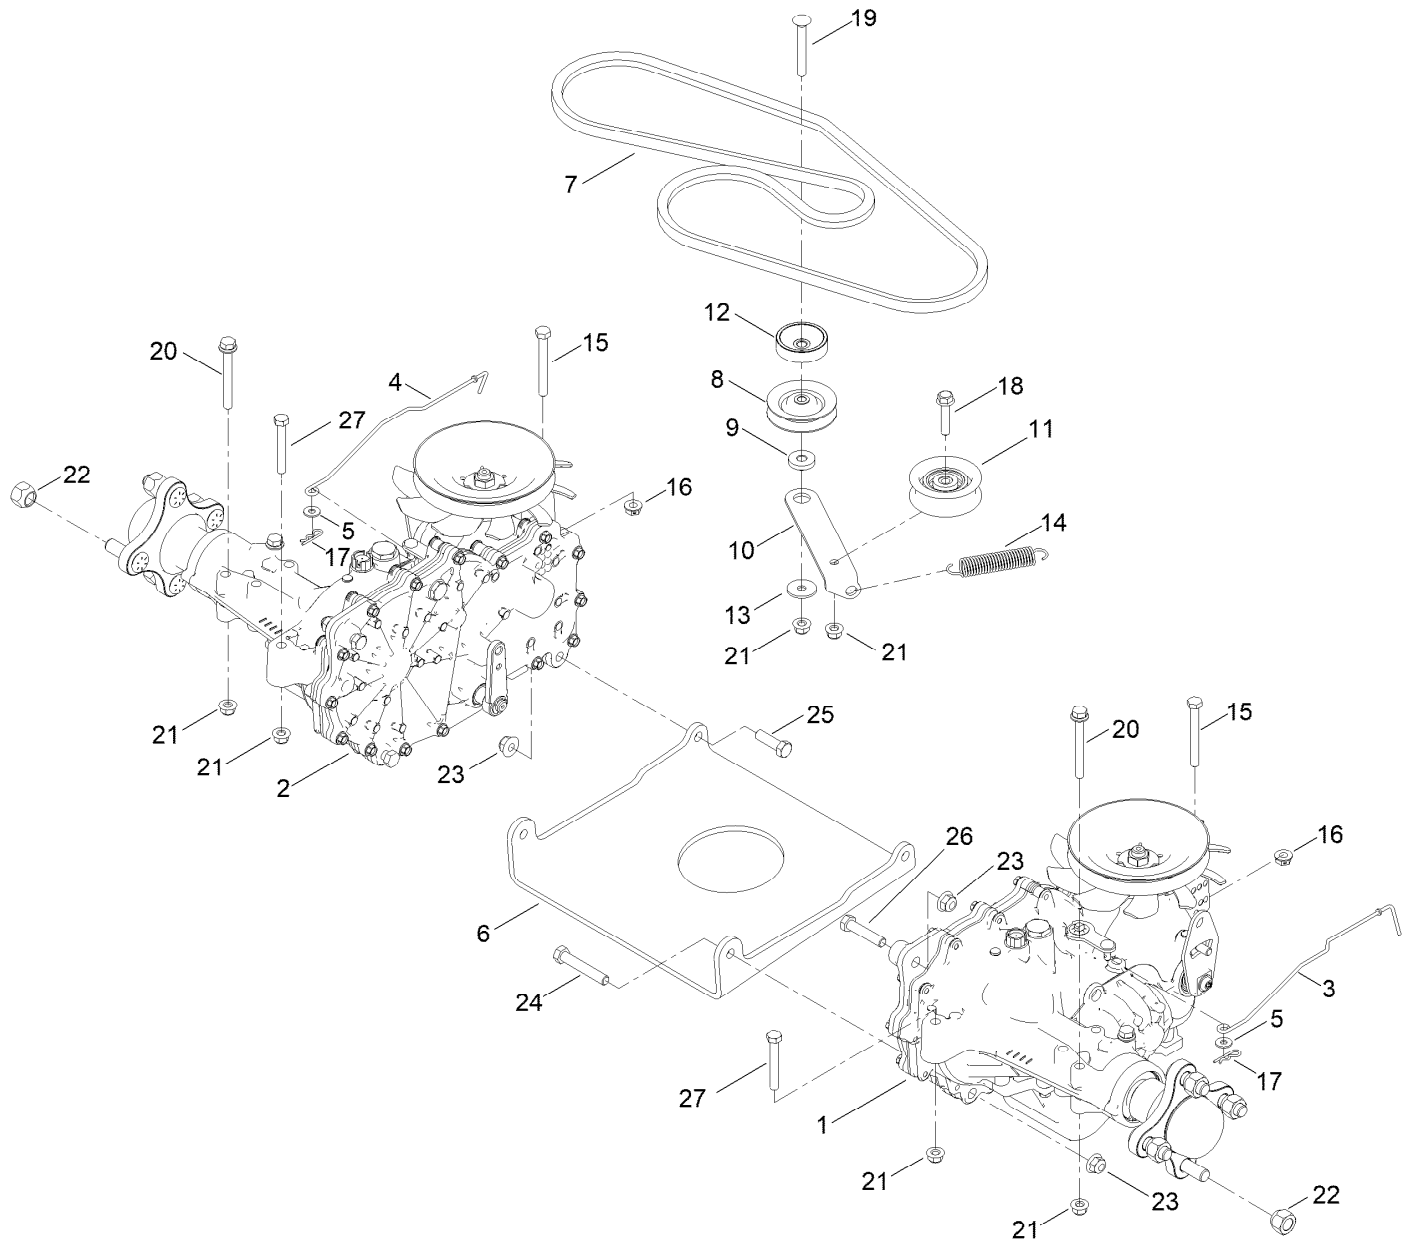

Hydraulic Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2860	1	LH Hydro Transmission ASM	14	137-7040	1	Spring-Return, Pedal
2	147-2861	1	RH Hydro Transmission ASM	15	145-6388	2	Screw-HH Spcl
3	147-2987	1	Rod-Bypass, LH	16	139-2574	2	Nut-HF
4	147-2986	1	Rod-Bypass, RH	17	3290-307	2	Pin-Cotter
5	119-8952	2	Washer-Spcl	18	115-1794	1	Screw-HHF
6	145-6383-03	1	Plate-Hydro	19	3230-8	1	Screw-CARR
7	145-6363	1	V-Belt (A Sec 66.30 EI)	20	138-7590	4	Screw-HHF
8	68-0030	1	Idler	21	104-8300	8	Nut-HF, NI
9	138-7277	1	Spacer-Arm, Idler	22	139-2564	8	Nut-Lug
10	147-2925	1	Arm-Idler	23	104-8301	6	Nut-HF, NI
11	138-7597	1	Pulley-Idler, Flat	24	323-11	2	Screw-HH
12	138-9809	1	Spacer	25	323-7	2	Screw-HH
13	5-4460	1	Washer-Pivot	26	323-9	2	Screw-HH
				27	322-11	2	Screw-HH


This diagram is an exploded view of a mechanical assembly, showing various components and their assembly relationships. The parts are numbered as follows:

- 1: Main engine block
- 2: Piston and connecting rod assembly
- 3: Flywheel
- 4: Crankshaft
- 5: Camshaft
- 6: Valve train components
- 7: Bolts
- 8: Gaskets
- 9: Timing belt/pulley
- 10: Water pump
- 11: Oil pump
- 12: Fan
- 13: Pulley
- 14: Belt
- 15: Cover
- 16: Housing
- 17: Bracket
- 18: Mounting plate
- 19: Bolt
- 20: Nut
- 21: Washer
- 22: Seal
- 23: Filter
- 24: Hose
- 25: Pipe
- 26: Connector
- 27: Plug
- 28: Pin
- 29: Rivet
- 30: Bolt
- 31: Nut
- 32: Washer
- 33: Seal
- 34: Gasket
- 35: Bolt
- 36: Nut
- 37: Washer
- 38: Seal
- 39: Gasket
- 40: Bolt
- 41: Nut
- 42: Washer
- 43: Seal
- 44: Gasket
- 45: Bolt
- 46: Nut
- 47: Washer
- 48: Seal
- 49: Gasket
- 50: Bolt
- 51: Nut
- 52: Washer
- 53: Seal
- 54: Gasket
- 55: Bolt
- 56: Nut
- 57: Washer
- 58: Seal
- 59: Gasket
- 60: Bolt
- 61: Nut
- 62: Washer
- 63: Seal
- 64: Gasket
- 65: Bolt
- 66: Nut
- 67: Washer
- 68: Seal
- 69: Gasket
- 70: Bolt
- 71: Nut
- 72: Washer
- 73: Seal
- 74: Gasket
- 75: Bolt
- 76: Nut
- 77: Washer
- 78: Seal
- 79: Gasket
- 80: Bolt
- 81: Nut
- 82: Washer
- 83: Seal
- 84: Gasket
- 85: Bolt
- 86: Nut
- 87: Washer
- 88: Seal
- 89: Gasket
- 90: Bolt
- 91: Nut
- 92: Washer
- 93: Seal
- 94: Gasket
- 95: Bolt
- 96: Nut
- 97: Washer
- 98: Seal
- 99: Gasket
- 100: Bolt
- 101: Nut
- 102: Washer
- 103: Seal
- 104: Gasket
- 105: Bolt
- 106: Nut
- 107: Washer
- 108: Seal
- 109: Gasket
- 110: Bolt
- 111: Nut
- 112: Washer
- 113: Seal
- 114: Gasket
- 115: Bolt
- 116: Nut
- 117: Washer
- 118: Seal
- 119: Gasket
- 120: Bolt
- 121: Nut
- 122: Washer
- 123: Seal
- 124: Gasket
- 125: Bolt
- 126: Nut
- 127: Washer
- 128: Seal
- 129: Gasket
- 130: Bolt
- 131: Nut
- 132: Washer
- 133: Seal
- 134: Gasket
- 135: Bolt
- 136: Nut
- 137: Washer
- 138: Seal
- 139: Gasket
- 140: Bolt
- 141: Nut
- 142: Washer
- 143: Seal
- 144: Gasket
- 145: Bolt
- 146: Nut
- 147: Washer
- 148: Seal
- 149: Gasket
- 150: Bolt
- 151: Nut
- 152: Washer
- 153: Seal
- 154: Gasket
- 155: Bolt
- 156: Nut
- 157: Washer
- 158: Seal
- 159: Gasket
- 160: Bolt
- 161: Nut
- 162: Washer
- 163: Seal
- 164: Gasket
- 165: Bolt
- 166: Nut
- 167: Washer
- 168: Seal
- 169: Gasket
- 170: Bolt
- 171: Nut
- 172: Washer
- 173: Seal
- 174: Gasket
- 175: Bolt
- 176: Nut
- 177: Washer
- 178: Seal
- 179: Gasket
- 180: Bolt
- 181: Nut
- 182: Washer
- 183: Seal
- 184: Gasket
- 185: Bolt
- 186: Nut
- 187: Washer
- 188: Seal
- 189: Gasket
- 190: Bolt
- 191: Nut
- 192: Washer
- 193: Seal
- 194: Gasket
- 195: Bolt
- 196: Nut
- 197: Washer
- 198: Seal
- 199: Gasket
- 200: Bolt
- 201: Nut
- 202: Washer
- 203: Seal
- 204: Gasket
- 205: Bolt
- 206: Nut
- 207: Washer
- 208: Seal
- 209: Gasket
- 210: Bolt
- 211: Nut
- 212: Washer
- 213: Seal
- 214: Gasket
- 215: Bolt
- 216: Nut
- 217: Washer
- 218: Seal
- 219: Gasket
- 220: Bolt
- 221: Nut
- 222: Washer
- 223: Seal
- 224: Gasket
- 225: Bolt
- 226: Nut
- 227: Washer
- 228: Seal
- 229: Gasket
- 230: Bolt
- 231: Nut
- 232: Washer
- 233: Seal
- 234: Gasket
- 235: Bolt
- 236: Nut
- 237: Washer
- 238: Seal
- 239: Gasket
- 240: Bolt
- 241: Nut
- 242: Washer
- 243: Seal
- 244: Gasket
- 245: Bolt
- 246: Nut
- 247: Washer
- 248: Seal
- 249: Gasket
- 250: Bolt
- 251: Nut
- 252: Washer
- 253: Seal
- 254: Gasket
- 255: Bolt
- 256: Nut
- 257: Washer
- 258: Seal
- 259: Gasket
- 260: Bolt
- 261: Nut
- 262: Washer
- 263: Seal
- 264: Gasket
- 265: Bolt
- 266: Nut
- 267: Washer
- 268: Seal
- 269: Gasket
- 270: Bolt
- 271: Nut
- 272: Washer
- 273: Seal
- 274: Gasket
- 275: Bolt
- 276: Nut
- 277: Washer
- 278: Seal
- 279: Gasket
- 280: Bolt
- 281: Nut
- 282: Washer
- 283: Seal
- 284: Gasket
- 285: Bolt
- 286: Nut
- 287: Washer
- 288: Seal
- 289: Gasket
- 290: Bolt
- 291: Nut
- 292: Washer
- 293: Seal
- 294: Gasket
- 295: Bolt
- 296: Nut
- 297: Washer
- 298: Seal
- 299: Gasket
- 300: Bolt
- 301: Nut
- 302: Washer
- 303: Seal
- 304: Gasket
- 305: Bolt
- 306: Nut
- 307: Washer
- 308: Seal
- 309: Gasket
- 310: Bolt
- 311: Nut
- 312: Washer
- 313: Seal
- 314: Gasket
- 315: Bolt
- 316: Nut
- 317: Washer
- 318: Seal
- 319: Gasket
- 320: Bolt
- 321: Nut
- 322: Washer
- 323: Seal
- 324: Gasket
- 325: Bolt
- 326: Nut
- 327: Washer
- 328: Seal
- 329: Gasket
- 330: Bolt
- 331: Nut
- 332: Washer
- 333: Seal
- 334: Gasket
- 335: Bolt
- 336: Nut
- 337: Washer
- 338: Seal
- 339: Gasket
- 340: Bolt
- 341: Nut
- 342: Washer
- 343: Seal
- 344: Gasket
- 345: Bolt
- 346: Nut
- 347: Washer
- 348: Seal
- 349: Gasket
- 350: Bolt
- 351: Nut
- 352: Washer
- 353: Seal
- 354: Gasket
- 355: Bolt
- 356: Nut
- 357: Washer
- 358: Seal
- 359: Gasket
- 360: Bolt
- 361: Nut
- 362: Washer
- 363: Seal
- 364: Gasket
- 365: Bolt
- 366: Nut
- 367: Washer
- 368: Seal
- 369: Gasket

LH Hydro Transmission Assembly No. 147-2860 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-8345	1	RH Main Housing Kit	83	104-5329	1	Pin-Jackshaft
2	140-8349	1	RH Side Cover Kit	90	104-2169	1	Ring-Retaining
7	117-5359	16	Screw-HHF	91	114-1694	1	Gear-54T
11	135-1140	1	Plug-Straight	92	120-7975	1	Spacer
23	109-3321	1	Element-Oil Filter, HYD	93	135-1361	1	Bearing-Ball
30	139-7497	1	Seal-Lip	95	130-8477	1	Bearing-Ball
31	106-8677	1	Ring-Retaining, External	96	104-2144	1	Seal
32	114-1685	1	Rod-Bypass	97	109-5939	1	Hub Kit
33	106-8679	1	Ring-Retaining, Internal	102	125-0021	1	Handle-Brake
34	112-9852	1	Arm-Bypass	103	131-0906	1	Ring-Retaining, EXT
35	106-8681	1	Ring-Retaining, External	106	139-7499	1	Filter Guard Kit
40	104-5304	1	Swashplate-Trunnion	130	126-3251	2	Tube-Charge
41	104-5313	1	Seal-Lip	156	115-5057	1	Cover-Nut, Axle
42	104-2116	1	Stud	157	126-1930	1	Gerotor Seal Kit
43	112-9853	1	Puck-Friction	164	121-5745	1	Spacer
55	104-5308	1	Spacer	193	140-8343	1	Plug
56	104-5310	1	Seal-Lip	194	140-8356	1	Breather Fitting ASM
57	104-5309	1	Ring-Retaining	195	140-8357	1	RH Internal Expansion Tank ASM
60	112-4154	1	Bearing-Thrust	200	140-8351	1	Seal Kit
64	139-4074	1	Cylinder Block ASM Kit	201	147-2906	1	Kit, Center Section, LH Charge
65	94-6922	1	Bearing-Thrust	202	114-8464	1	Charge Relief Kit
69	110-8561	1	Pump Block ASM	203	114-8465	1	Charge Kit
70	104-5339	1	Washer-Flat	207	135-7343	1	Fan And Pulley Kit
71	104-5340	1	Ring-Retaining	209	114-8467	1	Puller-Hub, 4 Bolt
72	114-1690	1	Gear-14T	210	139-7502	1	Input Shaft Kit
73	114-1691	1	Shaft-Motor	211	117-5362	1	Control Arm Kit
74	104-5360	1	Washer	212	114-8470	1	Axle Shaft Kit
80	94-1933	2	Washer	215	140-8352	1	Inboard Kit
81	114-1692	1	Gear-45T				
82	114-1693	1	Gear-11T				


RH Hydro Transmission Assembly No. 147-2861

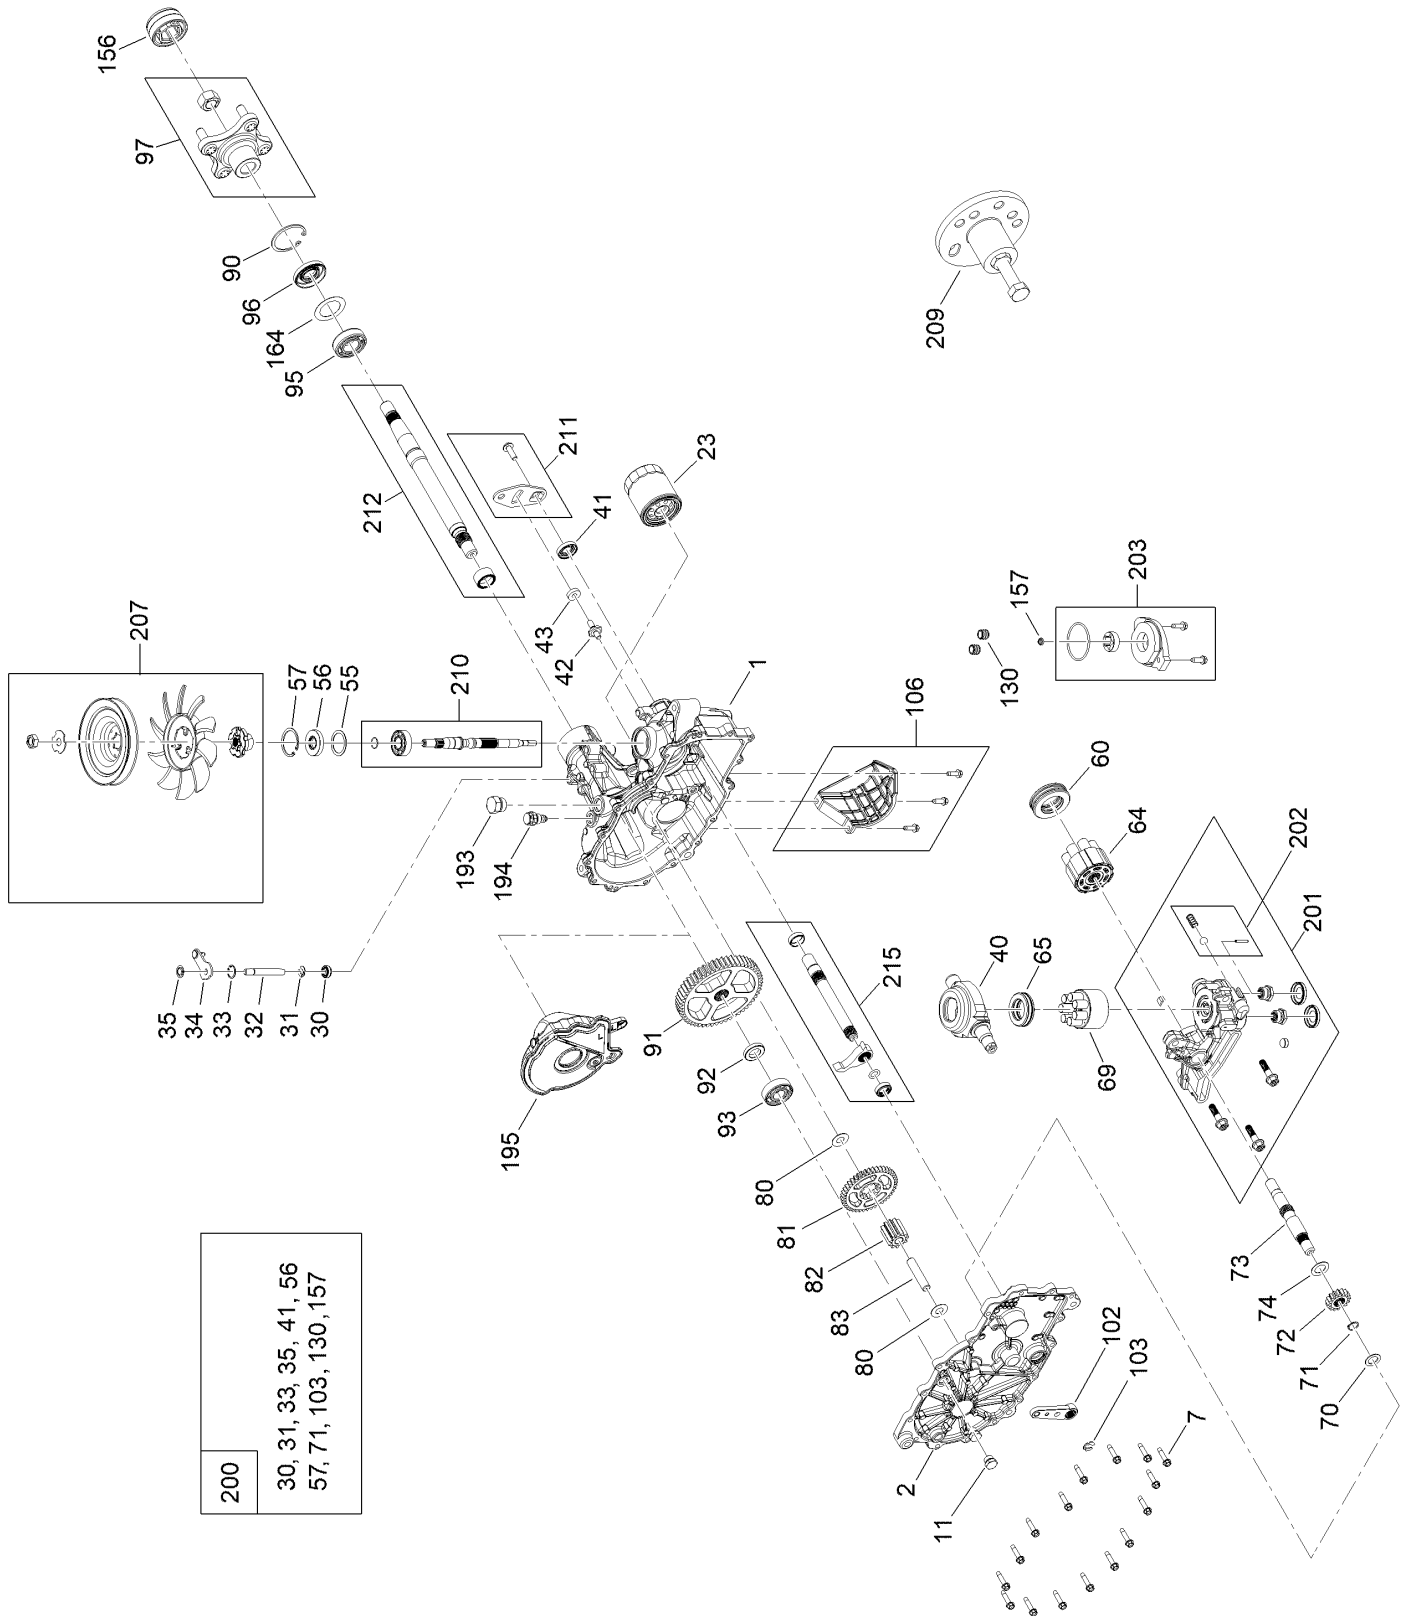

RH Hydro Transmission Assembly No. 147-2861 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-8347	1	LH Main Housing Kit	83	104-5329	1	Pin-Jackshaft
2	140-8350	1	LH Side Cover Kit	90	104-2169	1	Ring-Retaining
7	117-5359	16	Screw-HHF	91	114-1694	1	Gear-54T
11	135-1140	1	Plug-Straight	92	120-7975	1	Spacer
23	109-3321	1	Element-Oil Filter, HYD	93	135-1361	1	Bearing-Ball
30	139-7497	1	Seal-Lip	95	130-8477	1	Bearing-Ball
31	106-8677	1	Ring-Retaining, External	96	104-2144	1	Seal
32	114-1685	1	Rod-Bypass	97	109-5939	1	Hub Kit
33	106-8679	1	Ring-Retaining, Internal	102	125-0021	1	Handle-Brake
34	107-2490	1	Arm-Bypass	103	131-0906	1	Ring-Retaining, EXT
35	106-8681	1	Ring-Retaining, External	106	139-7498	1	Filter Guard Kit
40	104-5304	1	Swashplate-Trunnion	130	126-3251	2	Tube-Charge
41	104-5313	1	Seal-Lip	156	115-5057	1	Cover-Nut, Axle
42	104-2116	1	Stud	157	126-1930	1	Gerotor Seal Kit
43	112-9853	1	Puck-Friction	164	121-5745	1	Spacer
55	104-5308	1	Spacer	193	140-8343	1	Plug
56	104-5310	1	Seal-Lip	194	140-8356	1	Breather Fitting ASM
57	104-5309	1	Ring-Retaining	195	140-8358	1	LH Internal Expansion Tank ASM
60	112-4154	1	Bearing-Thrust	200	140-8351	1	Seal Kit
64	139-4074	1	Cylinder Block ASM Kit	201	147-2907	1	Kit, Center Section, RH Charge
65	94-6922	1	Bearing-Thrust	202	114-8464	1	Charge Relief Kit
69	110-8561	1	Pump Block ASM	203	114-8465	1	Charge Kit
70	104-5339	1	Washer-Flat	207	135-7343	1	Fan And Pulley Kit
71	104-5340	1	Ring-Retaining	209	114-8467	1	Puller-Hub, 4 Bolt
72	114-1690	1	Gear-14T	210	139-7502	1	Input Shaft Kit
73	114-1691	1	Shaft-Motor	211	117-5362	1	Control Arm Kit
74	104-5360	1	Washer	212	114-8470	1	Axle Shaft Kit
80	94-1933	2	Washer	215	140-8353	1	Inboard Kit
81	114-1692	1	Gear-45T				
82	114-1693	1	Gear-11T				


Parking Brake Assembly

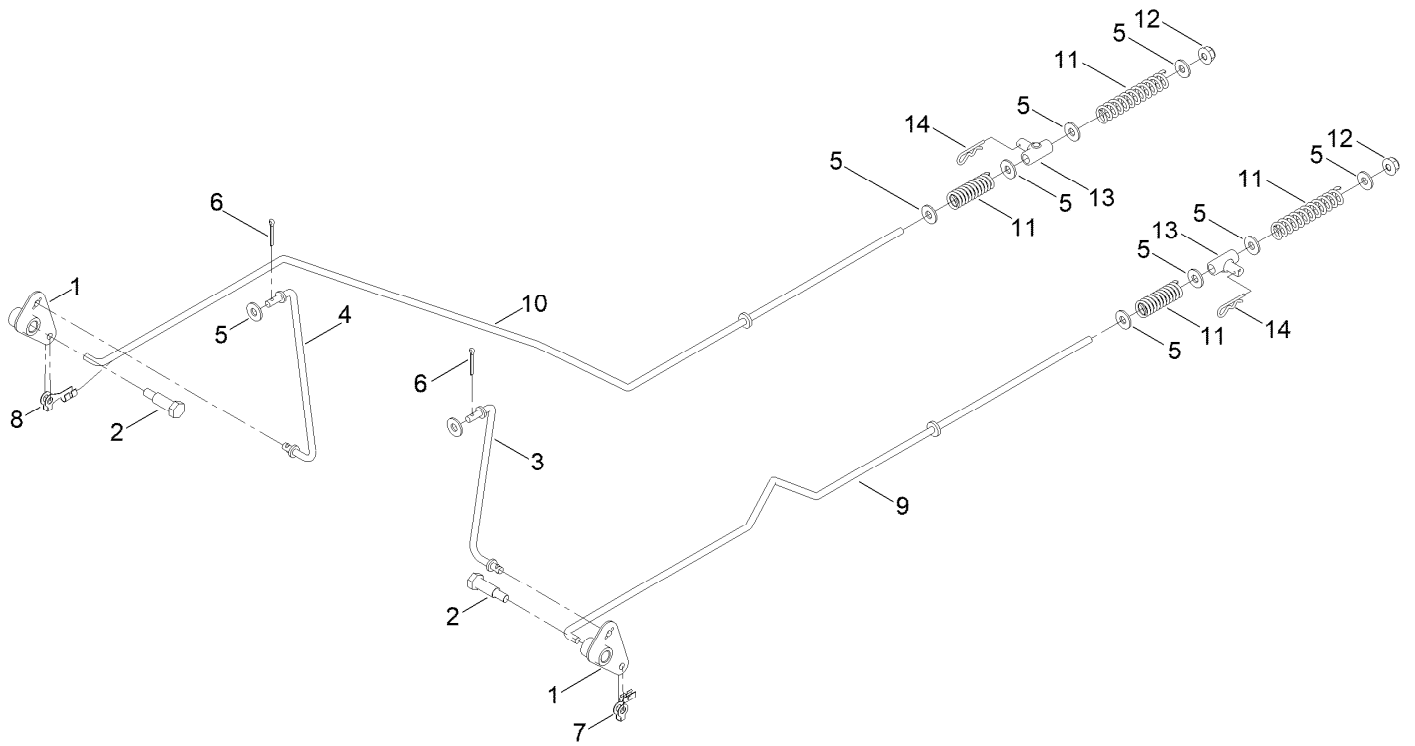

Parking Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6420	2	Bellcrank	8	144-1815	1	Clip-Rod, RH (7R, 1/4In)
2	145-6364	2	Bolt-Shoulder	9	145-0408	1	Rod-Brake LH
3	145-4607	1	Link-Brake, LH	10	145-0407	1	Rod-Brake, RH
4	145-6238	1	Link-Brake, RH	11	138-7252	4	Spring-Compression
5	119-8952	10	Washer-Spcl	12	119-4040	2	Nut-HF, NI
6	120-9716	2	Pin-Cotter	13	119-8857	2	Mount-Pivot
7	144-1816	1	Clip-Rod, LH (7L, 1/4In)	14	137-3083	2	Pin-Hair

Rear Wheel Assembly

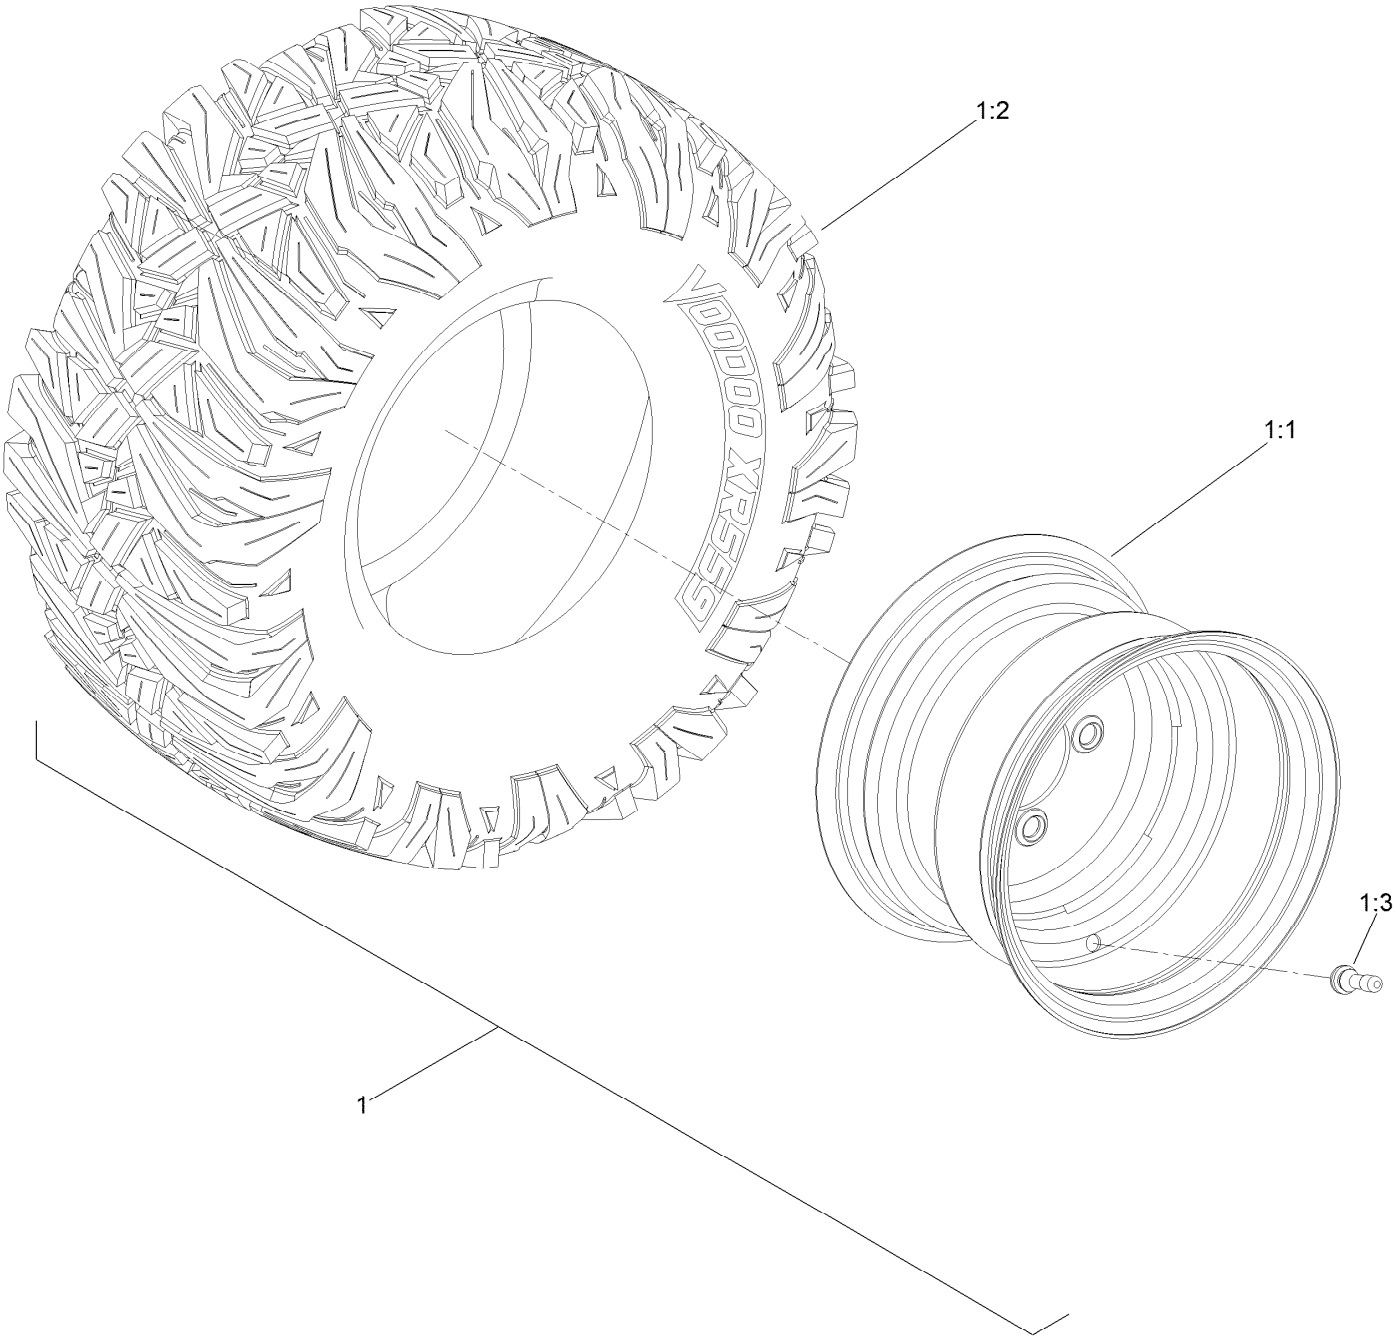


Rear Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-6393	2	Tire ASM-22X11-10 Nos2.4
1:1	147-5178	1	Rim

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:2	147-5177	1	Tire
1:3	232-27	1	Stem-Valve

Control Assembly

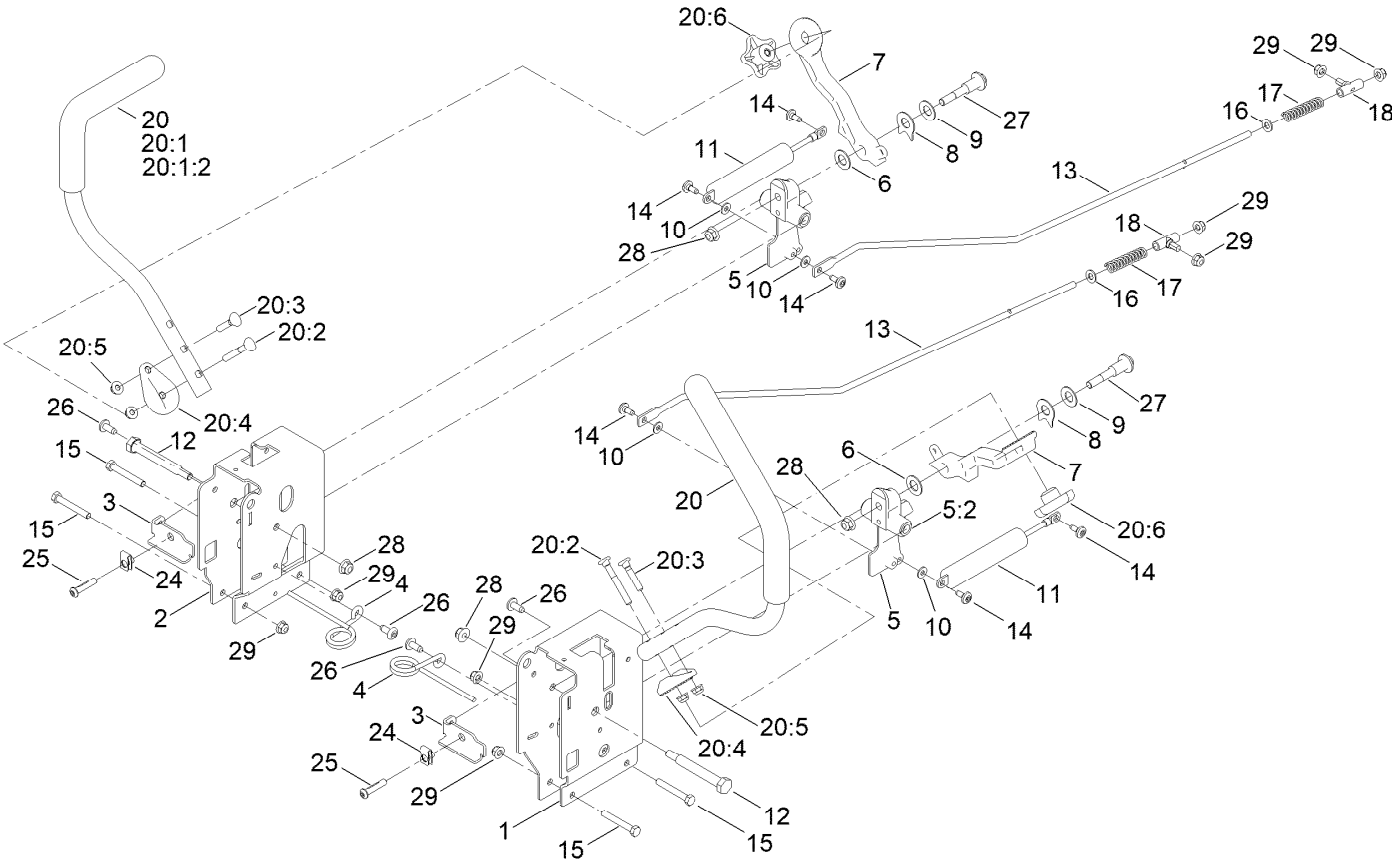


Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-4615-03	1	Control Box - LH G7	17	138-7252	2	Spring-Compression
2	145-4647-03	1	Control Box - RH G7	18	138-7218	2	Mount-Rod, Hydro
3	147-7580-03	2	Adjustment Plate-Control Box	20	161-6523	2	Handle-Control, ASM
4	145-6253	2	Spring-Torsion	20:1		1	Handle-Control, ●
5	145-4648	2	Pivot Arm ASM	20:1:2	147-3029	1	Grip
5:2	256-156	2	Bushing-Flange	20:2	145-6366	1	Screw-Handle
6	120-2273	2	Washer-Nylon	20:3	137-3008	1	Screw-Handle
7	147-5191-05	2	Arm-Control, 32 Teeth	20:4	147-5192-05	1	Disc-Adjustment Handle, 32 Teeth
8	142-8478	2	Spacer, Anti-Rotation	20:5	138-8401	2	Nut-HF
9	119-8925	2	Washer-Belleville	20:6	117-5976	1	Knob-Handle
10	119-8952	4	Washer-Spcl	24	112-3306	2	Nut
11	132-6853	2	Damper-Non Cavitating	25	126-4299	2	Screw-HSBH
12	115-5099	2	Bolt-Pivot	26	138-9753	4	Screw
13	161-9725	2	Rod-Hydro	27	117-1198	2	Bolt-Pivot
14	120-7950	6	Screw-Torx	28	104-8301	4	Nut-HF, NI
15	322-11	4	Screw-HH	29	104-8300	8	Nut-HF, NI
16	120-9683	2	Washer-Plain				

● Not serviced separately

Engine and Muffler Assembly

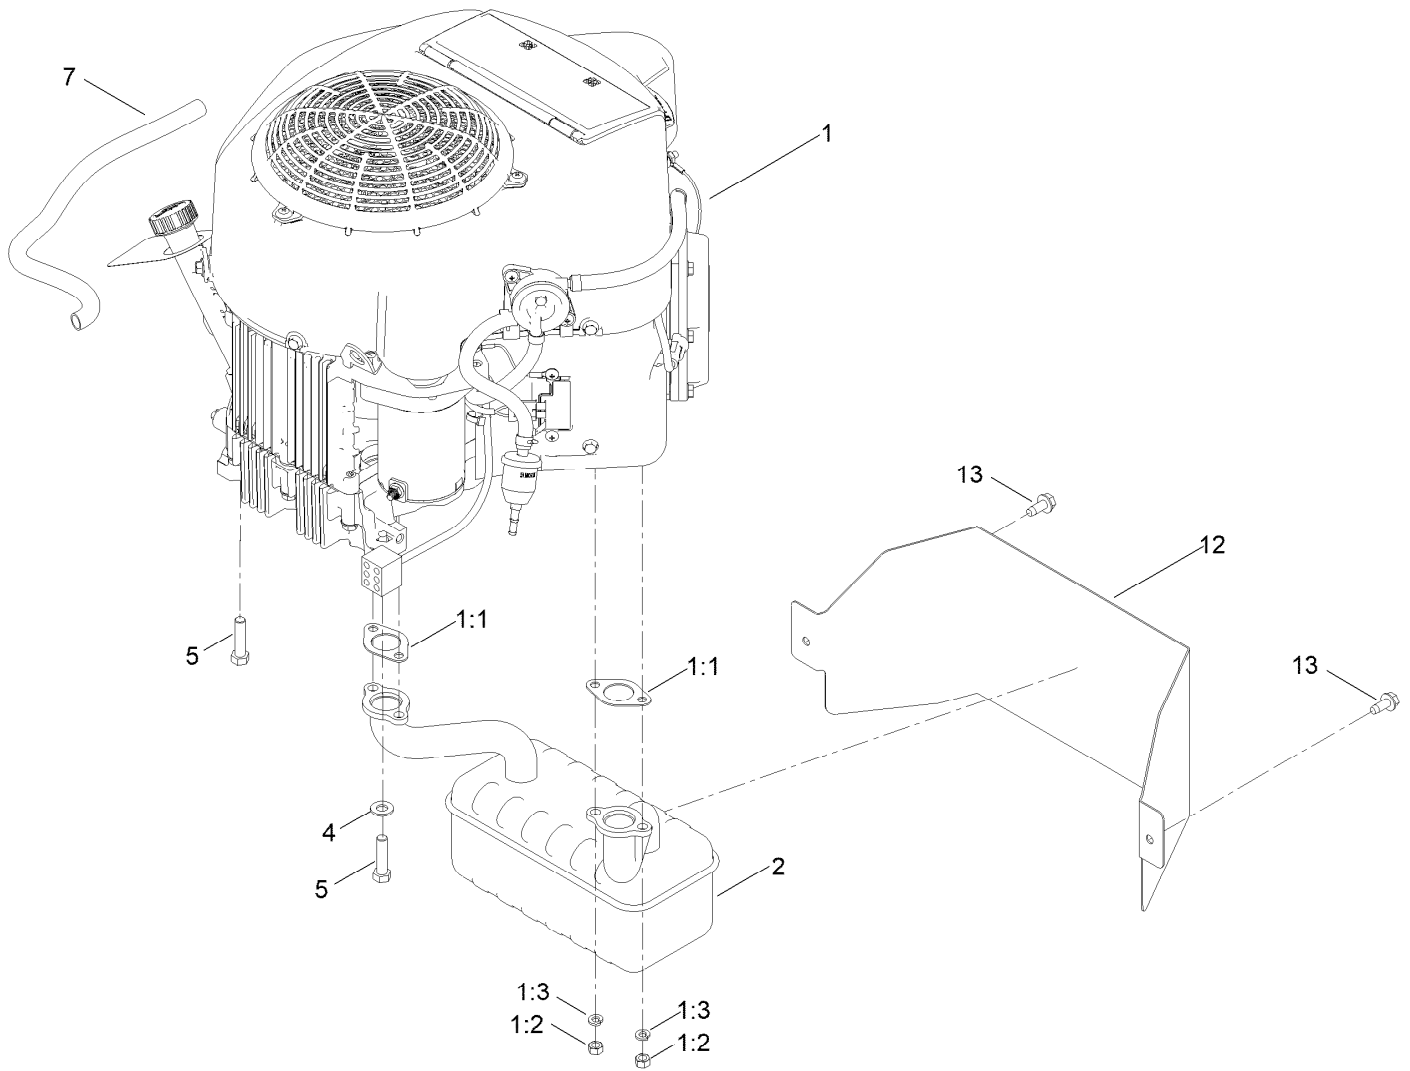


Engine and Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Kawasaki, Fr730V-S09-R ●■	5	323-50	4	Bolt-HH
1:1	1-653313	2	Gasket-Exhaust	6	114-3549	4	Nut
1:2	114-3549	4	Nut	7	106-7022	1	Tube-Drain, Oil
1:3	114-3550	4	Washer-Lock	9	114-3550	4	Washer-Lock
2	139-5867	1	Muffler	10	1-653313	2	Gasket-Exhaust
4	3256-24	3	Washer-Plain	12	161-6221-03	1	Heat Shield-Muffler
				13	32144-70	2	Screw-HWHTF

● Not serviced separately

■ Obtain parts from www.kawpower.com


Fuel Assembly

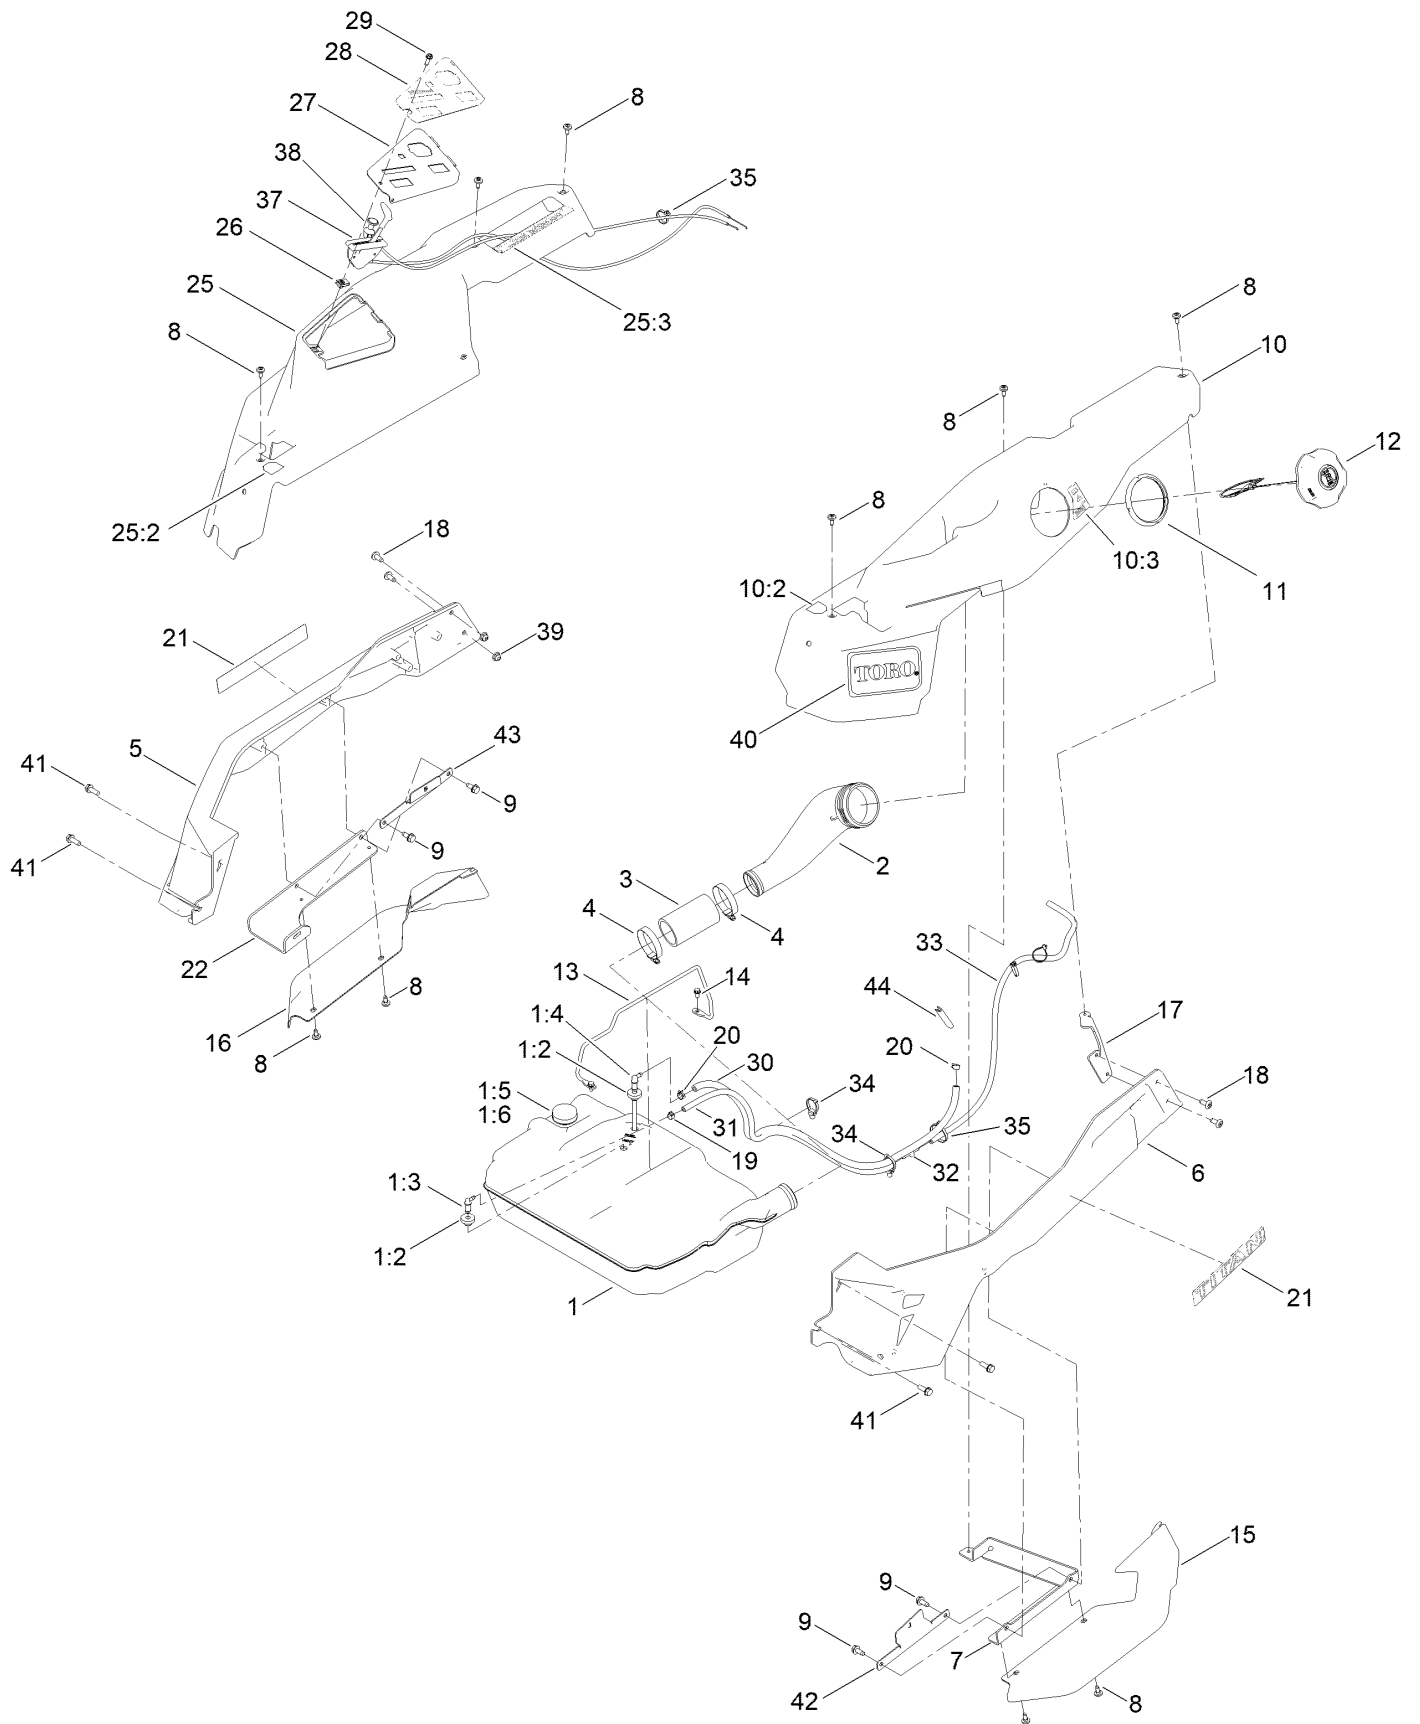

Fuel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-5288	1	Tank ASM - Fuel	20	2412-98	2	Clamp-Hose
1:2	46-6560	2	Bushing	21	147-7566	2	Decal-Titan
1:3	144-5302	1	Fitting-Elbow 90	22	147-5173-03	1	Bracket-Mr Spring
1:4	147-2934	1	Fitting-Pickup, Fuel	25	147-8744	1	Pod ASM - RH , Mr
1:5	133-9269	1	Grommet-Fuel				W/Decals
1:6	147-5166	1	Remote Gauge ASM	25:2	139-2394	1	Decal-Control Lever, RH
2	147-7657	1	Neck-Filler, Fuel	25:3	147-7574	1	Decal - Myride
3	145-4698	1	Hose-Filler, Fuel	26	107069	1	Clip
4	2412-130	2	Clamp-Hose	27	147-2990-03	1	Panel-Control
5	147-2973-01	1	Cast-Tube, RH [red]	28	147-7571	1	Decal - Control Panel
6	147-2972-01	1	Cast-Tube, LH [red]	29	49-2040	1	Screw-HWHTF
7	147-2974-03	1	Mount-Pod Bracket LH	30	109-0275	1	Hose-Fuel
8	120-7950	10	Screw-Torx	31	121-0780	1	Hose-Fuel
9	32144-70	4	Screw-HWHTF	32	144-1983	1	Adapter Orifice
10	147-8741	1	Pod ASM - LH W/Decals	33	108-6344	1	Hose-Fuel
10:2	139-2395	1	Decal-Control Lever, LH	34	32180-030	2	Clip-Tie
10:3	147-2399	1	Decal-Fuel Fill	35	614249	4	Tie-Cable
11	147-7712	1	Ring-Retaining	37	139-5808	1	Cable-Throttle
12	137-4119	1	Cap-Fuel, Ratcheting	38	147-2902	1	Cable-Choke
13	147-5176	1	Rod-Hold Down	39	119-4041	2	Nut-HF
14	32144-4	2	Screw-HWH	40	147-7714	2	Decal - Toro Logo
15	147-2978	1	Fender-Time Cutter, LH	41	32144-41	4	Screw-Taptite
16	147-2979	1	Fender-Time Cutter, RH	42	161-4609-03	1	Bracket-Alignment, Pod LH
17	147-2976-03	1	Bracket-Rear Pod, LH	43	161-4611-03	1	Bracket- Alignment, Pod RH
18	138-9753	4	Screw				Mr
19	2412-80	1	Clamp-Hose	44	161-6414	1	Trim-Edge Guard


Electrical Assembly

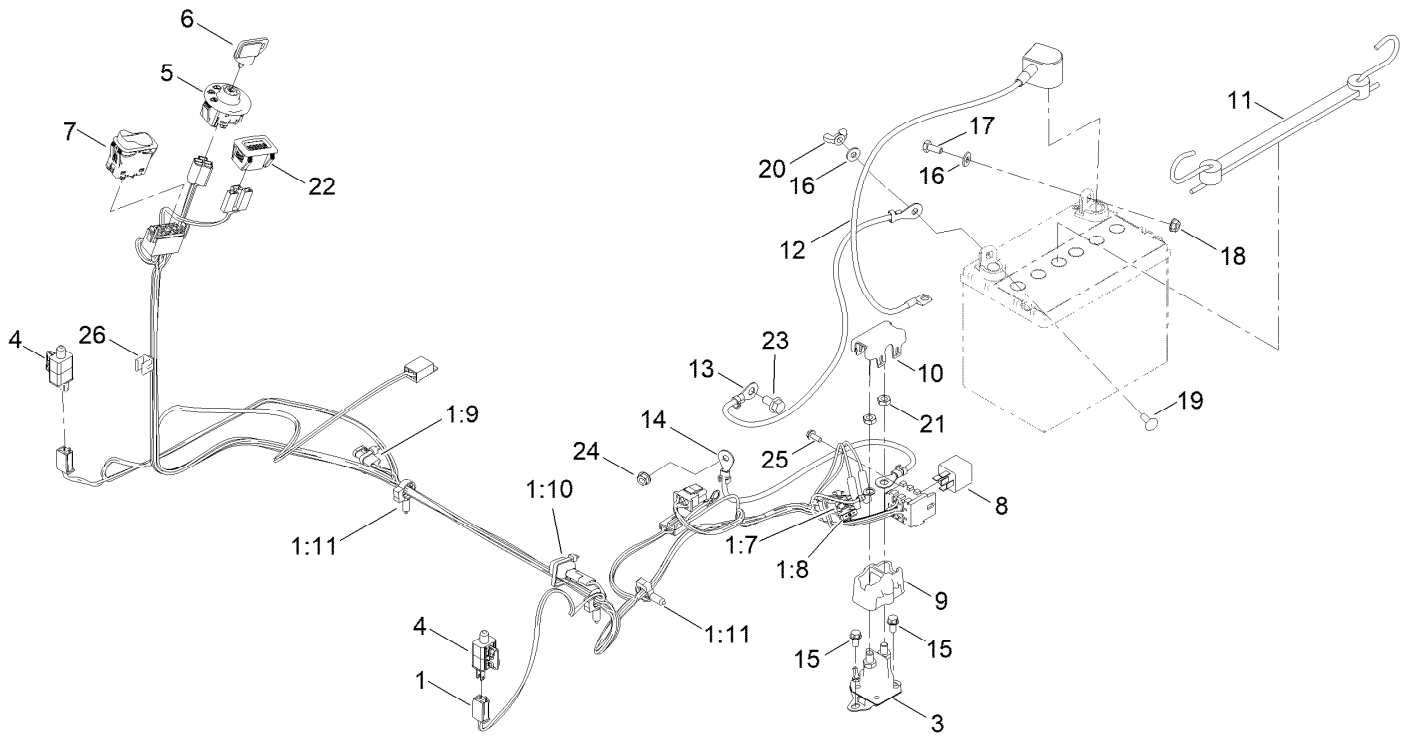

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-6382	1	Harness-Wire, Main	12	147-2941	1	Cable-Battery,Red
1:7	109355	1	Fuse-Blade, 15 Amp	13	119-8899	1	Cable-Battery, Black
1:8	109102	1	Fuse-Blade, 25 Amp	14	121-0711	1	Cable-Battery, Positive
1:9	32180-435	1	Cap-Over Mold, 1M/1F	15	32144-4	2	Screw-HWH
1:10	100-4918	1	Diode	16	119-8952	2	Washer-Spcl
1:11	32180-047	3	Clip-Tubing, Harness	17	137-3041	1	Screw-HH
3	117-1197	1	Solenoid	18	139-2575	1	Nut-HF
4	110-6765	2	Switch	19	137-3053	1	Screw-CARR
5	137-4100	1	Switch-Ignition	20	32103-22	1	Nut-Wing
6	63-8360	1	Key-Ignition	21	139-2580	2	Nut-HJ
7	139-6368	1	Switch-Rocker, On-None-On	22	139-6404	1	Hour Meter
8	1-643275	1	Relay	23	33104-016	1	Screw-HHF
9	140-2080	1	Cover-Solenoid	24	32128-33	1	Nut-HF
10	140-2081	1	Cap-Solenoid	25	139-1713	1	Screw-Thd Roll
11	104-2466	1	Holddown-Battery	26	32180-082	1	Clip-Edge W/Tie, Perpendicular


48in Deck and Decal Assembly

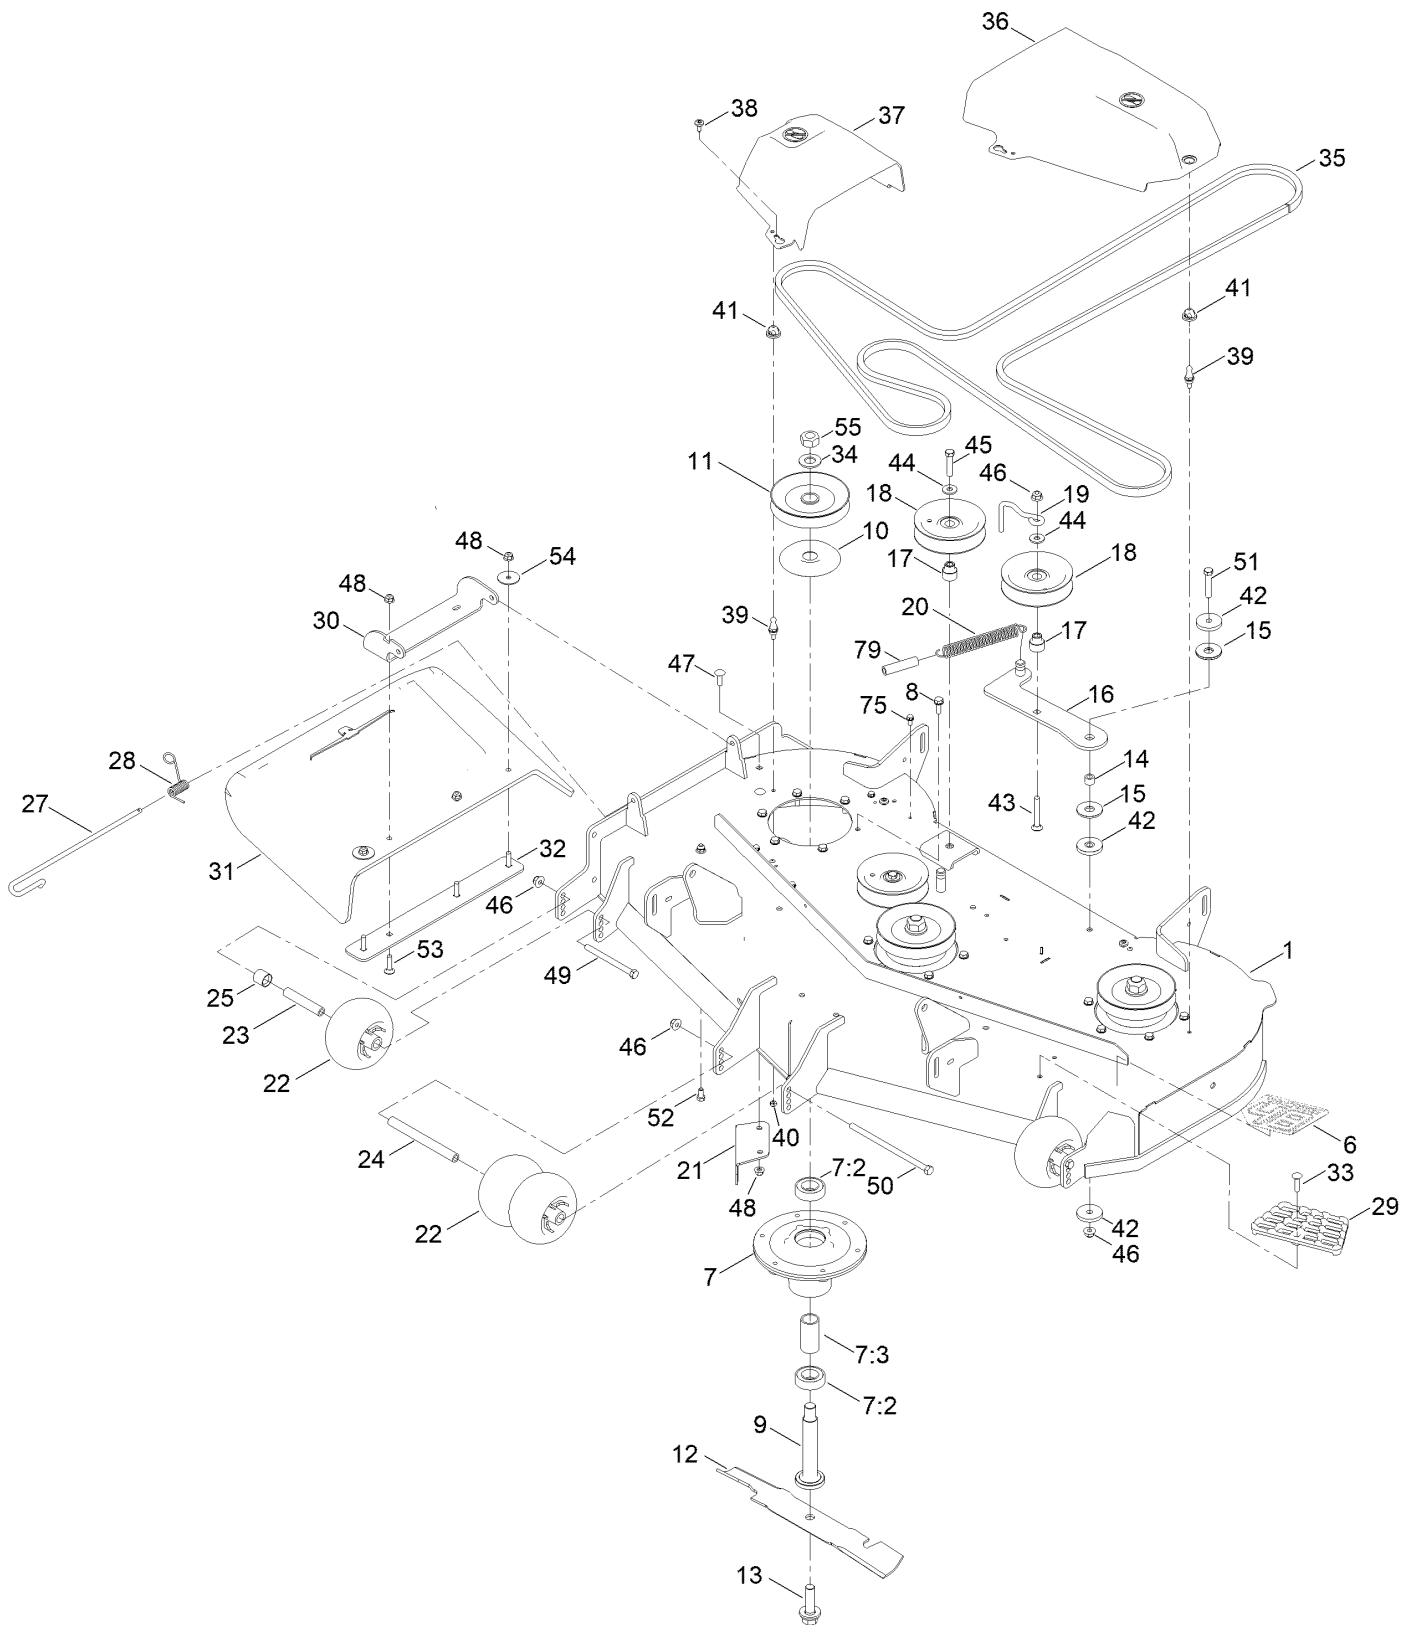

48in Deck and Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-8749	1	48 In Deck & Decal ASM	31	147-3015	1	Deflector - Molded
6	147-7568	1	Decal - Deck 48	32	115-5048-03	1	Plate-Deflector
7	139-2357	3	Spindle ASM	33	139-1702	1	Bolt-Carriage
7:2	116-0720	2	Bearing-Ball	34	7-4150	3	Washer
7:3	138-7220	1	Spacer-Bearing	35	133-1166	1	V-Belt
8	32144-41	18	Screw-Taptite	36	147-2854	1	Cover-Belt, LH
9	115-2642	3	Shaft-Spindle	37	147-2853	1	Cover-Belt, RH
10	138-7221	3	Shield-Bearing	38	120-7950	4	Screw-Torx
11	147-7673	3	Pulley	39	147-2872	2	Stud-Ball
12	117-7277-03	3	Blade-Hi Flo, 16.50 Inch	40	115-7373	2	Nut-Lock
13	145-0412	3	Screw-Blade	41	147-2871	2	Grommet-Ball
14	138-7225	1	Spacer	42	110-9981	3	Washer-Plain
15	114-0463	2	Washer-Friction, Composite	43	3231-31	1	Screw-CARR
16	145-7038	1	Idler Arm ASM	44	80-6990	3	Washer-Hardened
17	138-7227	3	Bushing-Idler	45	323-9	2	Screw-HH
18	132-4718	3	Pulley-Idler, Flat	46	104-8301	5	Nut-HF, NI
19	136-5615	1	Guide-Belt, Idler	47	3230-22	2	Screw-CARR
20	138-7228	1	Spring-Extension	48	104-8300	8	Nut-HF, NI
21	117-7418-03	1	Baffle-Cutoff	49	323-23	2	Screw-HH
22	1-603299	4	Roller-Scalp, Anti	50	108-5388	1	Screw-HH
23	138-7229	2	Tube-Spanner	51	323-10	1	Screw-HH
24	98-5967	1	Spacer-Wheel	52	322-2	1	Screw-HH
25	104-0892	2	Spacer-Axle, Rear	53	3230-3	4	Screw-CARR
27	138-7231	1	Pin-Chute	54	3256-68	2	Washer-Flat
28	138-7232	1	Spring-Torsion	55	3219-7	3	Nut-Hex
29	126-4781-03	1	Step-Deck	75	32144-4	4	Screw-HWH
30	114-1648-03	1	Bracket-Deflector, Upper	79	99-7375	1	Hose-Breather


Deck Decal Assembly No. 147-8749

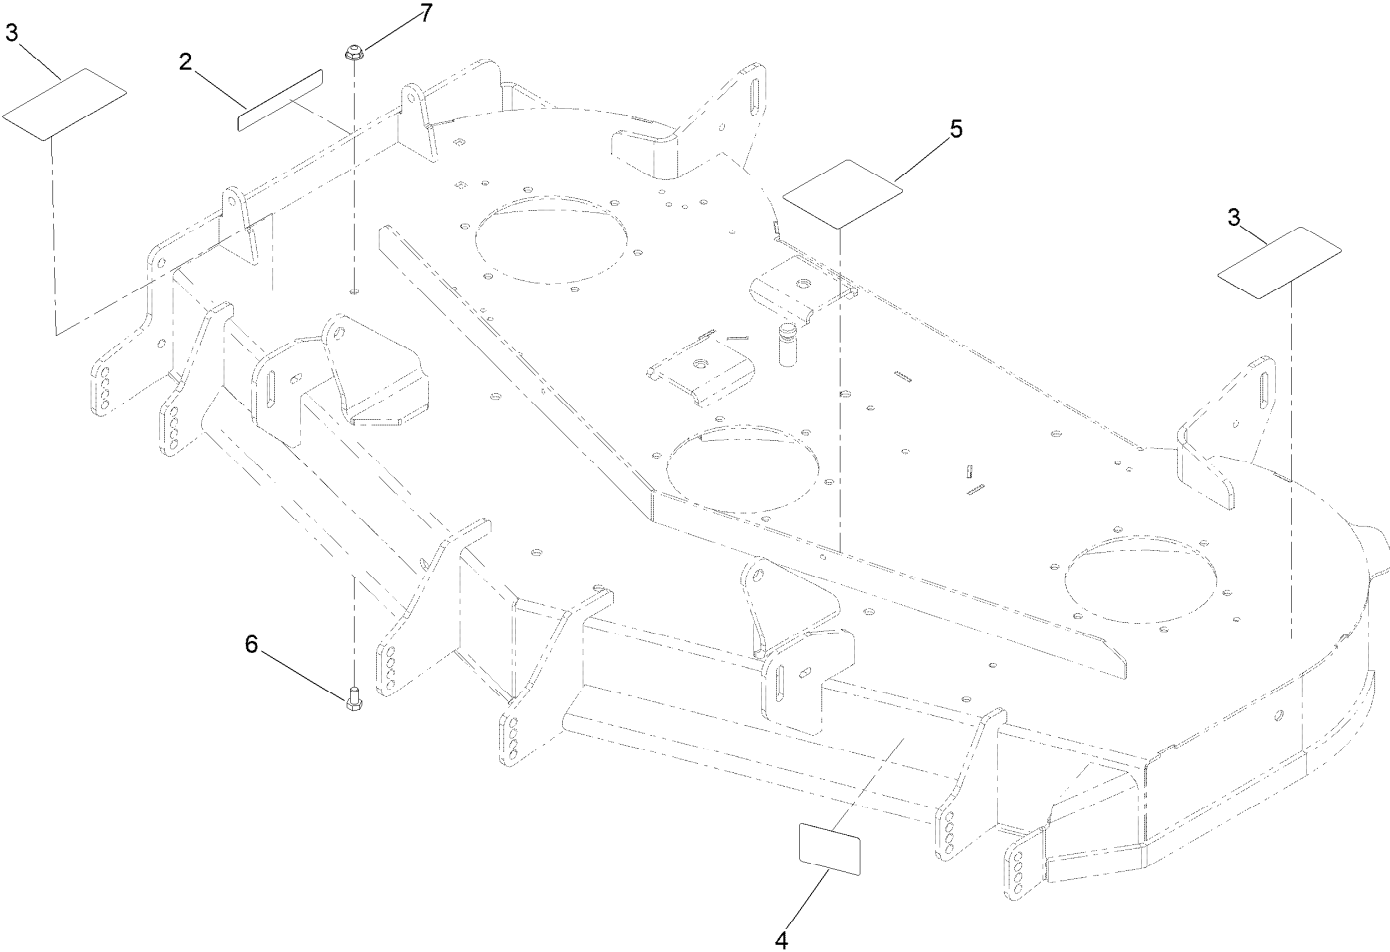

Deck Decal Assembly No. 147-8749 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	130-0731	1	Decal-Danger	5	117-1194	1	Decal-Routing, Belt
3	132-0872	2	Decal-Danger, Deck	6	139-2585	1	Screw-HH
4	130-0765	1	Decal-Scalp, Anti	7	119-4041	1	Nut-HF


Model Specific Decal Assembly

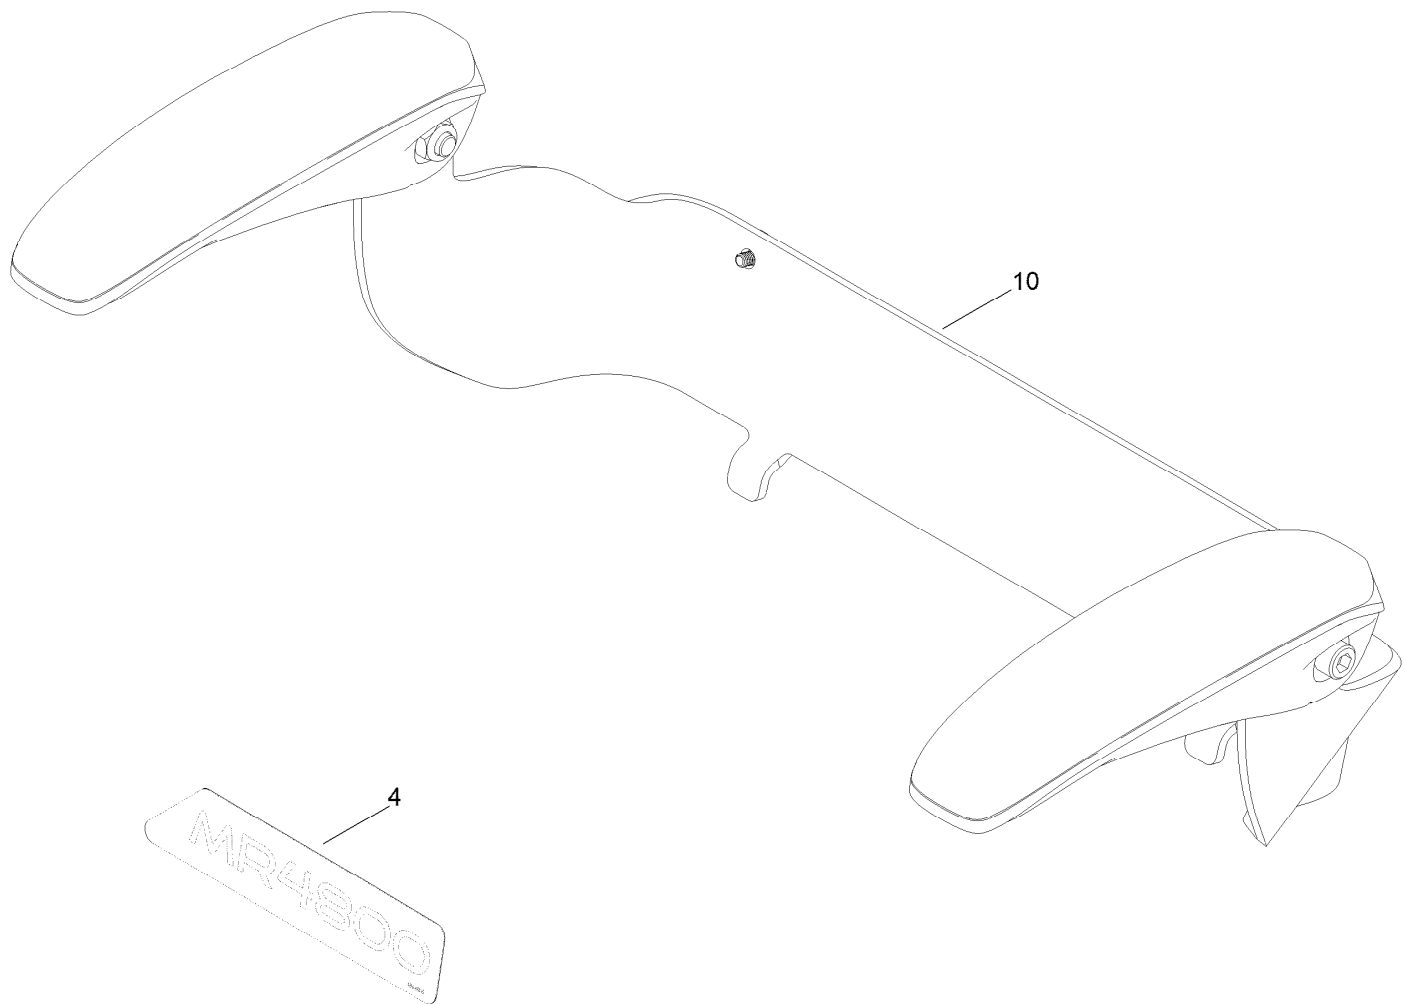

Model Specific Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	161-4555	1	Decal Mr4800
10	161-4567	1	Kit-Arm Rest


Seat Pan Assembly

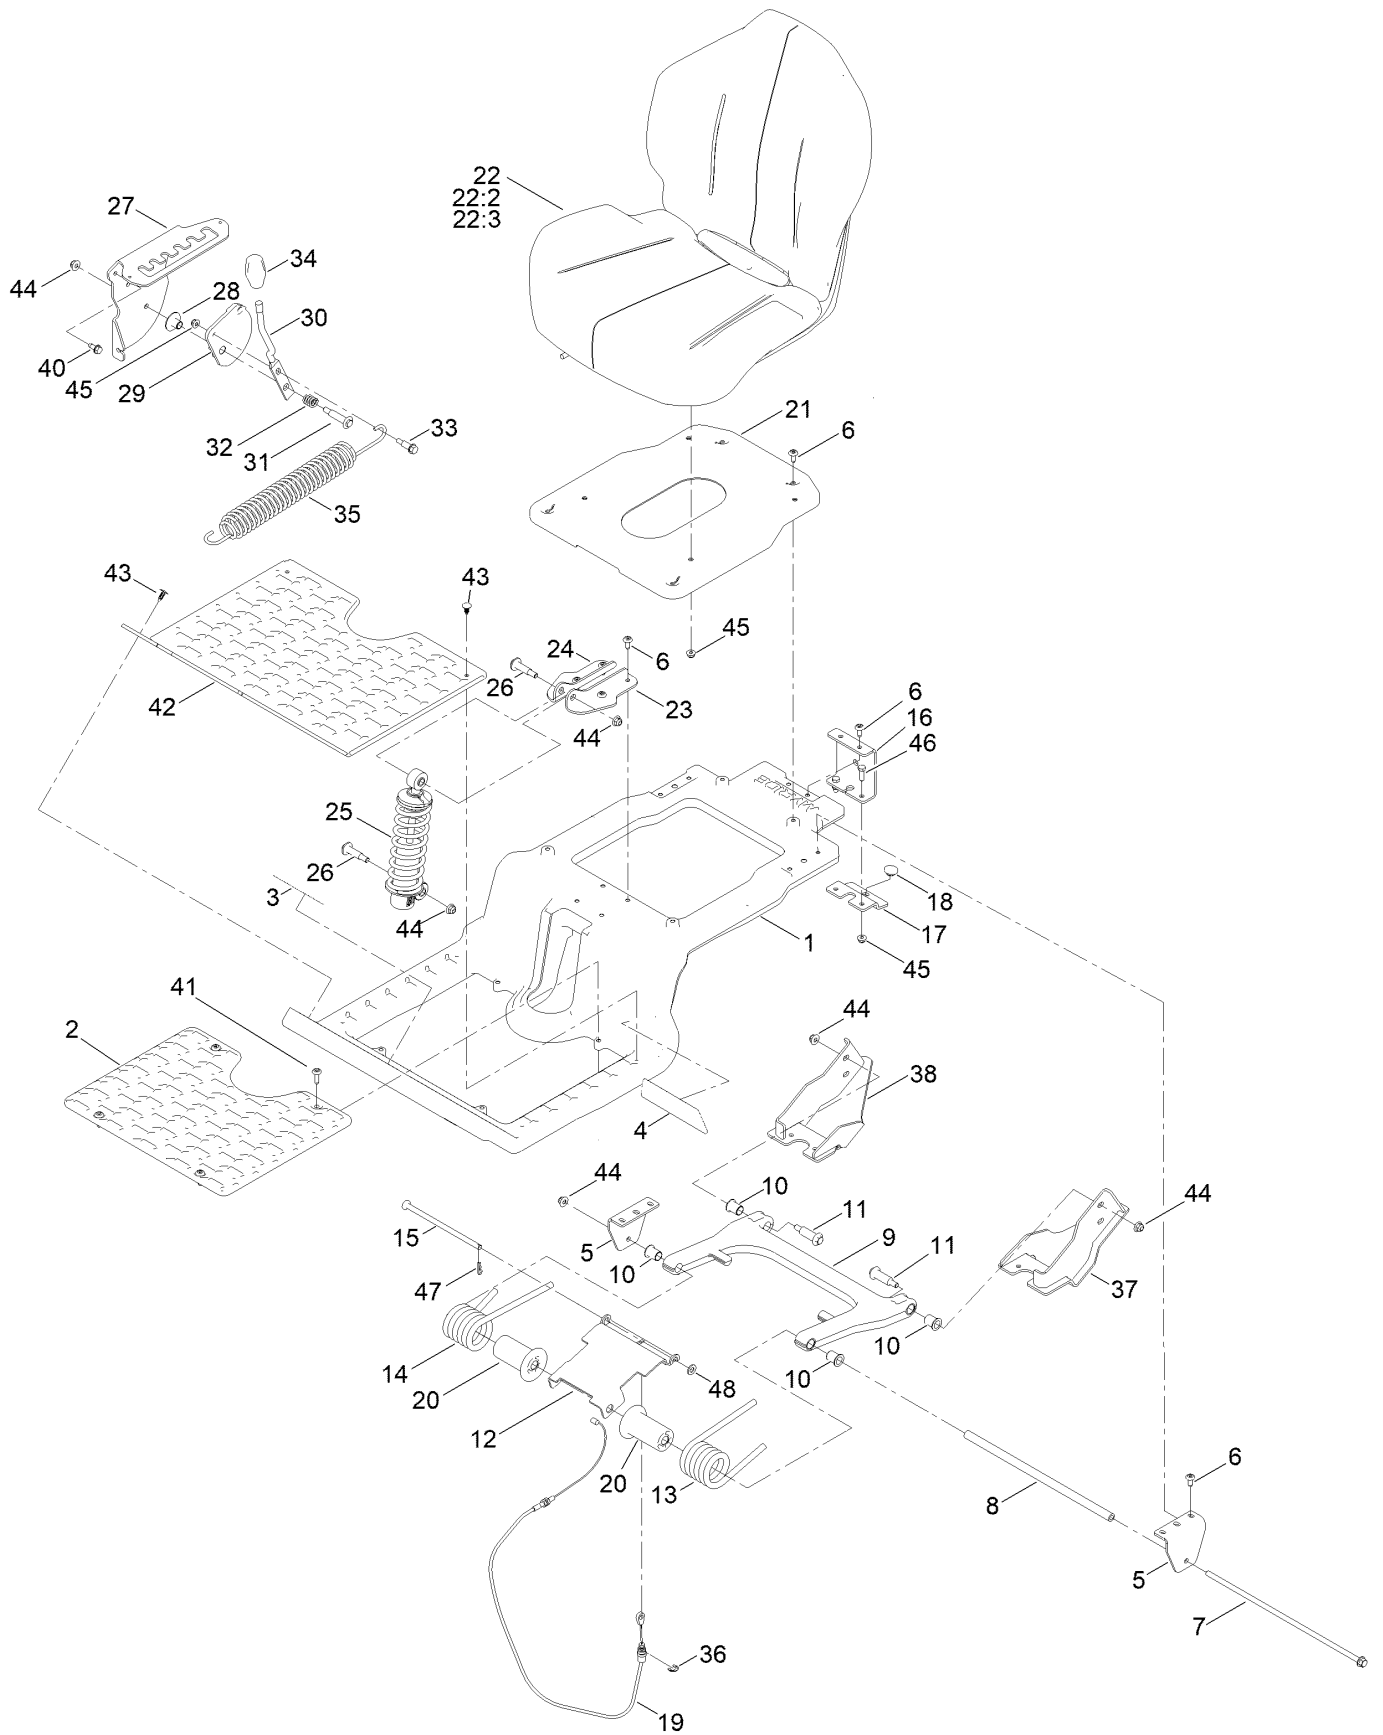

Seat Pan Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-6394-05	1	Platform, Myride	24	133-9319-03	1	Bracket-Shock Mount, Upper (RH)
2	145-6395-05	1	Platform, Myride	25	139-2427	1	Shock/Spring ASM
3	147-7662	1	Decal - Myride	26	136-7198	2	Bolt-Shoulder
4	147-7575	1	Decal - Myride	27	145-6309-01	1	Bracket-Mr Gate
5	138-7517	2	Bracket-Mount, Swing Arm	28	139-5800	1	Bushing - Flange
6	138-9753	14	Screw	29	147-5171	1	Pulley-Cam
7	138-7548	1	Screw-HHF	30	147-5172	1	Lever-Adjustment, Threaded
8	138-7549	1	Tube-Spacer	31	92-1057	1	Bolt-Shoulder
9	145-6312	1	Arm-Swing	32	139-5858	1	Spring-Compression
10	138-2573	4	Bushing-Flange	33	140-3759	1	Bolt-Shoulder,HHF
11	138-2547	2	Bolt-Shoulder	34	147-8715	1	Knob-Mr
12	138-7566-03	1	Plate-Adjuster	35	138-9848	1	Spring-Extension
13	137-1983	1	Spring-Torsion, LH	36	32120-47	1	Ring-Retaining, External
14	137-7018	1	Spring-Torsion, RH	37	147-8721-03	1	Mount-Mr Swing Arm, LH
15	138-9813	1	Rod-Adjustment	38	147-8722-03	1	Mount-Mr Swing Arm, RH
16	138-9788	1	Bracket-Cable	40	32144-70	3	Screw-HWHTF
17	139-2361-03	1	Bracket Lower	41	147-7606	4	Screw-Spcl
18	135-0505	1	Bumper-Seat	42	147-7724	1	Floor Mat
19	147-7713	1	Cable-Adjustment, Myride	43	117-2382	4	Plug-Plastic
20	138-9776	2	Retainer-Spring	44	119-4042	6	Nut-HF, NI
21	147-7690-03	1	Pan-Seat [black]	45	119-4041	7	Nut-HF
22	147-8730	1	Seat ASM - Milsco Cs180D	46	139-1716	2	Screw-HH
22:2	161-4566	1	Kit-Adjuster	47	137-3083	1	Pin-Hair
22:3	82-2190	1	Switch-Bail	48	115-1166	1	Washer-Plain
23	133-9318-03	1	Bracket-Shock Mount, Upper (LH)				

Clutch Assembly

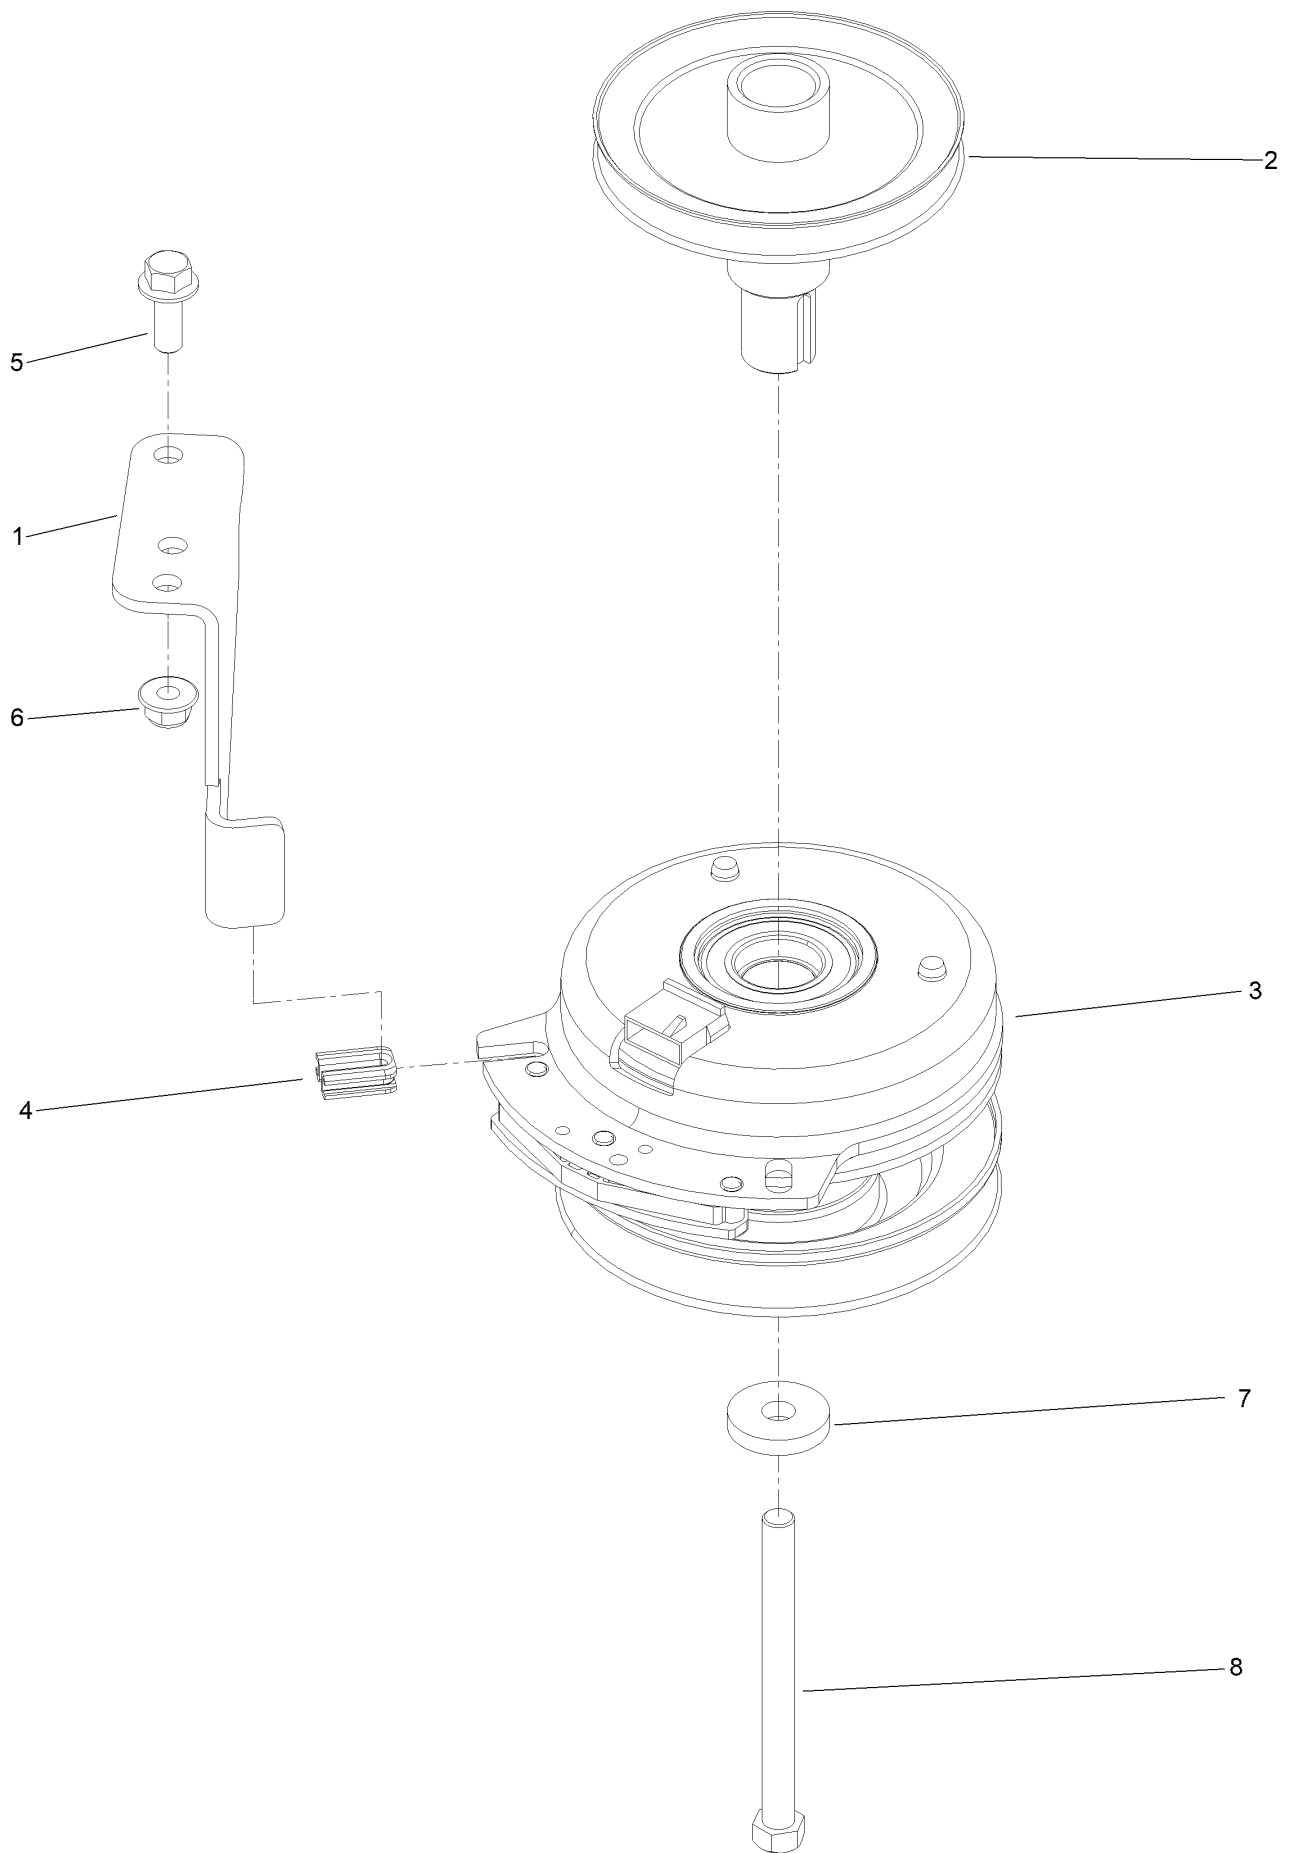

Clutch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-7000	1	Stop-Clutch (Wide)	5	3234-42	1	Screw-HHF
2	138-9831	1	Pulley-Engine	6	104-8301	1	Nut-HF, NI
3	127-3410	1	Clutch-PTO	7	112843	1	Washer
4	120-2217	1	Isolator-Clutch	8	3212-19	1	Screw-HH

Attachments and Accessories

For 76440TA Titan MR4800 Zero Turn Riding Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Jack Kit	127-6666
Fuel Stabilizer .05 oz	130-2393
4-Cycle Fuel, Snow And Lawn 32oz Can	131-3823
Toro Premium Fuel Treatment 12oz Bottle	131-6572
48in Recycler Kit.....	136-7488
Oil-30/10W-30 Synthetic (Quart).....	138-6053
Heavy Duty Spring Kit.....	140-2051
HD Bagger Cover Kit	140-5036
Bagging Enhancement Kit 48in.....	140-5121
Hydro Service Kit	144-5347
Flat Free Caster Wheel Kit.....	145-0489
Led Light Kit.....	147-8757
Kit-Striping, 48in	147-8776
Mount, Jack Titan	147-8824
Assist Bar Kit	161-4450
10W30 4-Cycle Engine Oil (32oz Bottle).....	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903
Toro Deluxe Rider Cover.....	490-7319
Powered Bagger, Titan Models ROHS.....	79348
ROPS Kit	79487
Kit-Slope Sensor.....	79489

Notes:



Count on it.