



MODEL NO. 41150-20101 & UP (PA-17)
MODEL NO. 41550-20101 & UP (PA-21)

PARTS LIST

PA-17 and PA-21 SPREADER

NOTE

The PA-17 Spreader is designed for use on the MULTI-PRO 1100 or, with the addition of the P.T.O Shaft Kit, a tractor's 3-point hitch.

CAUTION!

The PA-21 Spreader is designed for use on the MULTI-PRO 5200 ONLY or, with the addition of the P.T.O Shaft Kit, a tractor's 3-point hitch.



SAFETY AND INSTRUCTION DECALS

The following decals are installed on the machine. If any become damaged or illegible, replace it. The decal part number is listed below.



WARNING

TO AVOID INJURY FROM
AGITATOR OSCILLATING INSIDE
HOPPER
DISENGAGE AND SHUT OFF ALL POWER BEFORE
SERVICING OR UNCLOGGING AGITATOR. 87-0550

Part No. 87-0550: Located one on each side of Hopper.

CAUTION

- READ OPERATOR'S MANUAL.
- STAY CLEAR OF OSCILLATING PENDULUM WHEN IN OPERATION.
- KEEP ALL SHIELDS IN PLACE.
- DISENGAGE AND SHUT OFF ALL POWER BEFORE SERVICING, LUBRICATING OR UNCLOGGING MACHINE.
- KEEP HANDS, FEET AND CLOTHING AWAY FROM POWER DRIVEN PARTS.
- USE CARE WHEN OPERATING ON HILLSIDES.
- DO NOT OPERATE NEAR BYSTANDERS. 87-0510

Part No. 87-0510: Located on left side of Drive Housing.



DANGER

- ENTANGLEMENT IN ROTATING DRIVELINE CAN CAUSE SERIOUS INJURY OR DEATH.
- KEEP ALL SHIELDS IN PLACE.
- AVOID CONTACT WITH ROTATING PARTS. 87-0560

Part No. 87-0560: Located on front of Hopper

CAUTION

MAXIMUM CAPACITY IS
1000 LBS.
(450 KILOGRAMS)

▼ MAXIMUM SAND LEVEL ▼


87-0470

Part No. 87-0470: Located on rear of Hopper.




Part No. 67-7320: Located one on each side of Spreader Frame.

PA-17 SPREADER and PA-21 SPREADER

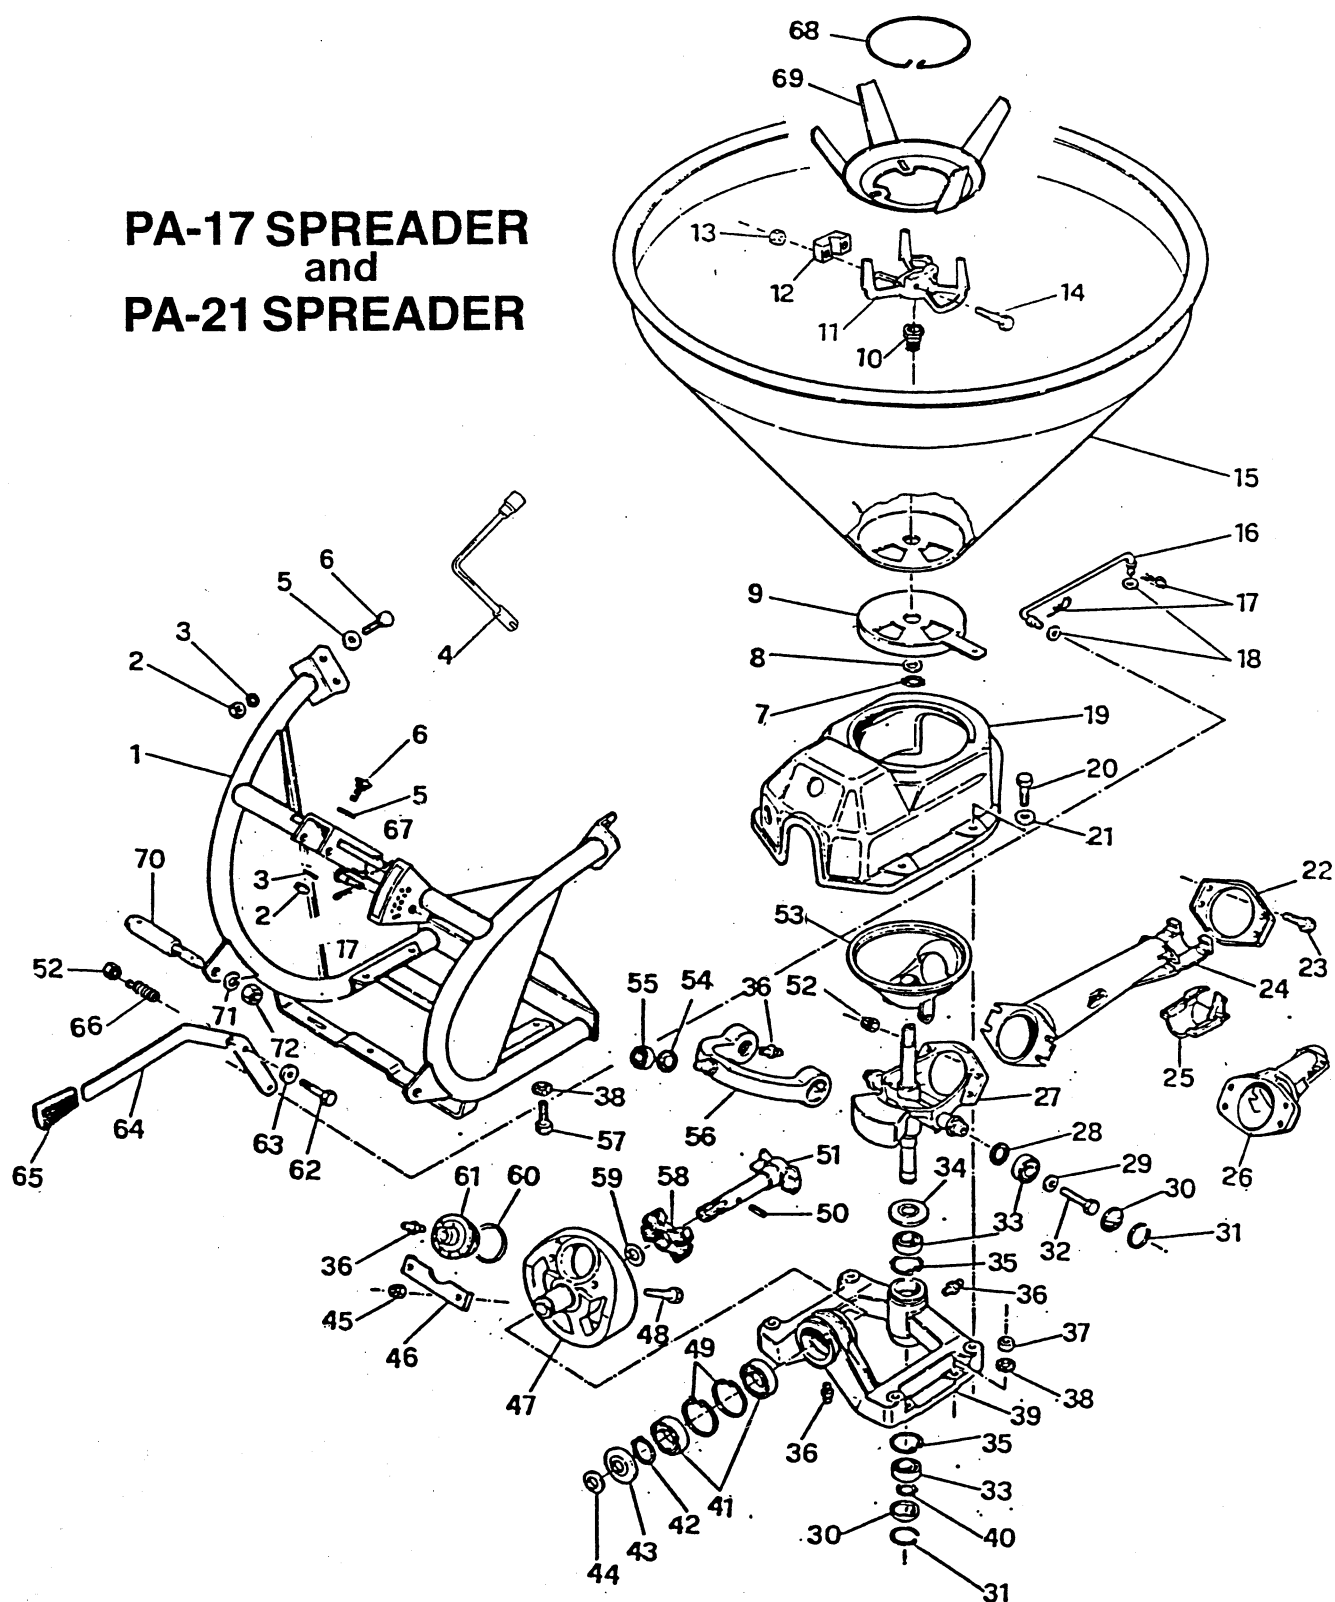

REF	PART NO.	DESCRIPTION	QTY.
1	41494	Spreader Frame-Welded	1
2	41551	Hex Nut	6
3	41557	Washer, Internal Tooth	6
4	41576	ARC Adjustment Wrench	1
5	41558	Flat Washer	6
6	41543	Hex Hd. Cap Screw	6
7	41536	Ring Nut	1
8	41496	Ring	1
9	41497	Dosing Disc	1
10	41498	Agitator Bush-Guide	1
11	41499	Agitator	1
12	42869	Agitator Fixing Plate	1
13	41552	Hex Nut	2
14	41544	Hex Hd. Cap Screw	2
15	41505	Steel Hopper (Model No. 41150 (PA-17)	1
	42473	Steel Hopper (Model No. 41550 (PA-21)	1
16	41500	Adjustment Lever	1
17	41541	Hair Pin Cotter	3
18	41559	Flat Washer	2
19	41501	Protection Casing	1
20	41545	Hex Hd. Cap Screw	4
21	41560	Flat Washer	4
22	41502	Coupling Flange	1
23	41546	Hex Hd. Cap Screw	4
24	41503	Pendulum Spout	1
25	41504	Cup	1
26	41506	Sand Spout (f/w Spreader Mtg Kit 41152 (PA-17) or 41552 (PA-21)	1
27	41507	Spout Mounting	1
28	41508	Gasket	2
29	41509	Washer	3
30	41510	Fork-Protection Cover	3
31	41511	Ring	3
32	41547	Hex Hd. Cap Screw	2
33	41533	Bearing	4
34	41512	Shaft Cover	1
35	41537	Retaining Ring	2
36	41563	Grease Fitting	5
37	41553	Hex Nut	4
38	41561	Washer-Internal Tooth	4
39	41513	Spreader-Unit Mounting	1
40	41538	Retaining Ring	1
41	41534	Bearing	2
42	41539	Retaining Ring	1
43	41515	Front Cover	1
44	41516	Front Washer	1
45	41554	Hex Nut Self-Locking	2
46	41517	Fixing Plate	1
47	41518	Handwheel	1
48	41548	Hex Hd. Cap Screw	2
49	41540	Retaining Ring	2
50	41542	Roll Pin	1
51	41519	Shaft	1
52	41555	Hex Nut Self-Locking	5
53	41520	Cup	1
54	41521	Fork Guard	1
55	41535	Bearing	1
56	41522	Fork	1
57	41549	Hex Hd. Cap Screw	4
58	41523	Rubber Shock Absorber	1
59	41524	Washer	1
60	41525	Ring	1
61	41526	Stroke Adjuster	1
62	41550	Hex Hd. Cap Screw	1
63	41527	Bakelite Disc	1
64	41529	Adjustment Lever	1
65	41530	Hand Grip	1
66	41531	Compression Spring	1
67	41528	Stroke Stop Pin	1
68	41579	Agitator Locking Ring	1
69	41578	Agitator Rim	1
70	41532	Pin-Lower Hitch (f/w PTO Shaft Kit, Model #41156)	2
71	41562	Lock Washer (f/w PTO Shaft Kit, Model #41156)	2
72	41556	Hex Nut (f/w PTO Shaft Kit, Model #41156)	2

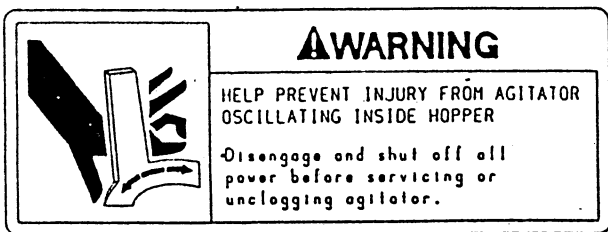

safety tips



BEFORE SERVICING OR ADJUSTING THIS MACHINE:

- Disengage all power.
- Shut off the Vehicle engine.
-  Wait until all moving parts have stopped
- Keep hands, feet and clothing away from all power-driven parts.
-  Read instructions on chemical container thoroughly. Never exceed the maximum load.

-  Keep all nuts, bolts and other fasteners tightened securely
-  Keep all shields in place.
-  Always disengage the Spreader drive and set the Parking BEFORE leaving the operator's position.
-  Make certain everyone is clear of the machine BEFORE starting the machine or moving the Vehicle.