



# Operator's Manual

## Reelmaster® 3100-D Traction Unit

### Model—Serial Range

**03170**—418200000 and Up

**03171**—418310093 and Up



# Disclaimers and Regulatory Information

# Electromagnetic Compatibility Certification

## Table of Contents

|                                                |      |
|------------------------------------------------|------|
| Disclaimers and Regulatory Information .....   | 2    |
| Chapter 1: Introduction .....                  | 1-1  |
| Intended Use .....                             | 1-1  |
| Getting Help .....                             | 1-1  |
| Manual Conventions .....                       | 1-2  |
| Safety Alert Classifications .....             | 1-3  |
| Chapter 2: Safety .....                        | 2-1  |
| General Safety .....                           | 2-1  |
| Before Operation Safety .....                  | 2-1  |
| Fuel Safety .....                              | 2-2  |
| During Operation Safety .....                  | 2-2  |
| Rollover Protection System (ROPS) Safety ..... | 2-3  |
| Slope Safety .....                             | 2-4  |
| After Operation Safety .....                   | 2-4  |
| Maintenance Safety .....                       | 2-4  |
| Engine Safety .....                            | 2-5  |
| Electrical System Safety .....                 | 2-6  |
| Cooling System Safety .....                    | 2-7  |
| Hydraulic System Safety .....                  | 2-8  |
| Blade Safety .....                             | 2-9  |
| Storage Safety .....                           | 2-9  |
| Safety and Instructional Decals .....          | 2-10 |
| batterysymbols .....                           | 2-11 |
| 93-6681 .....                                  | 2-12 |
| 93-7276 .....                                  | 2-13 |
| 94-3353 .....                                  | 2-14 |
| 99-3444 .....                                  | 2-15 |
| 106-9290 .....                                 | 2-16 |
| 117-3270 .....                                 | 2-17 |
| 121-3598 .....                                 | 2-18 |
| 121-3623 .....                                 | 2-19 |
| 121-3628 .....                                 | 2-20 |
| 125-6688 .....                                 | 2-21 |
| 133-8062 .....                                 | 2-22 |
| 136-3678 .....                                 | 2-23 |
| 136-3679 .....                                 | 2-24 |
| 136-3702 .....                                 | 2-25 |
| 136-3716 .....                                 | 2-26 |
| 147-6069 .....                                 | 2-27 |
| Chapter 3: Setup .....                         | 3-1  |
| 1 Installing the Wheels .....                  | 3-1  |
| 2 Installing the Steering Wheel .....          | 3-2  |
| 3 Charging and Connecting the Battery .....    | 3-3  |
| 4 Checking the Slope Indicator .....           | 3-3  |
| 5 Installing the Roll Bar .....                | 3-3  |
| 6 Installing the Front Lift Arms .....         | 3-3  |
| 7 Preparing to Install the Lift Arms .....     | 3-4  |

|                                                                    |      |
|--------------------------------------------------------------------|------|
| 8 Assembling the Lift Arms to the Machine .....                    | 3-5  |
| 9 Assembling the Lift Cylinder to the Left Lift Arm .....          | 3-6  |
| 10 Assembling the Lift Cylinder to the Right Lift Arm .....        | 3-7  |
| 11 Installing the Carrier Frames to the Cutting Units .....        | 3-7  |
| 12 Preparing the Cutting Units .....                               | 3-8  |
| 13 Assembling the Carrier Frames for the Front Cutting Units ..... | 3-9  |
| 14 Assembling the Cutting Unit and Rear Carrier Frame .....        | 3-10 |
| 15 Assembling the Carrier Frames for the Front Cutting Units ..... | 3-11 |
| 16 Assembling the Cutting Unit and Rear Carrier Frame .....        | 3-12 |
| 17 Installing the Cutting Units .....                              | 3-12 |
| 18 Installing the Cutting Unit Drive Motors .....                  | 3-12 |
| 19 Installing the Telematics Device .....                          | 3-13 |
| 20 Adjusting the Lift Arms .....                                   | 3-13 |
| 21 Checking Lift Arm and Rear Cutting Unit Clearance .....         | 3-14 |
| 22 Adjusting Lift Arm Clearance .....                              | 3-15 |
| 23 Adjusting the Lift Arm Stop Bolts .....                         | 3-16 |
| 24 Adjusting the Rear Cutting Unit Clearance .....                 | 3-17 |
| 25 Preparing the Machine .....                                     | 3-17 |
| 26 Installing the Hood Latch .....                                 | 3-17 |
| 27 Installing the Exhaust Guard .....                              | 3-17 |
| 28 Installing the CE Decals .....                                  | 3-17 |
| 29 Applying the Year of Production Decal and CE Decal .....        | 3-18 |
| 30 Applying the CE Tilt Danger Decal .....                         | 3-19 |
| 31 Installing the Tipper Roller Kit (Optional) .....               | 3-19 |
| Chapter 4: Product Overview .....                                  | 4-1  |
| Controls .....                                                     | 4-1  |
| Key Switch .....                                                   | 4-2  |
| Traction Pedals .....                                              | 4-3  |
| Mow/Transport Slide .....                                          | 4-4  |
| Cutting Unit Shift Lever .....                                     | 4-5  |
| Raise/Lower .....                                                  | 4-6  |
| Side Shift .....                                                   | 4-7  |
| Slope Indicator .....                                              | 4-8  |
| Indicator Slot .....                                               | 4-9  |
| Cutting-Unit Drive Switch .....                                    | 4-10 |
| Throttle .....                                                     | 4-11 |
| Lift Lever Lock .....                                              | 4-12 |
| Parking Brake .....                                                | 4-13 |
| Oil Pressure Warning Light .....                                   | 4-14 |
| Engine Coolant Temperature Warning Light .....                     | 4-15 |
| Alternator Light .....                                             | 4-16 |
| Glow-Plug Indicator Light .....                                    | 4-17 |
| Hour Meter .....                                                   | 4-18 |
| Mower Manifold .....                                               | 4-19 |
| Reel Speed Knob .....                                              | 4-20 |
| Backlap Control .....                                              | 4-21 |
| Fuel Gauge .....                                                   | 4-22 |
| Tilt-Steering Lever .....                                          | 4-23 |
| Seat Adjustment Lever .....                                        | 4-24 |
| Specifications .....                                               | 4-25 |
| Attachments/Accessories .....                                      | 4-25 |
| Chapter 5: Operation .....                                         | 5-1  |
| Before Operation .....                                             | 5-1  |

|                                                                   |      |
|-------------------------------------------------------------------|------|
| Performing Daily Maintenance .....                                | 5-2  |
| Fuel .....                                                        | 5-3  |
| Fuel Specifications .....                                         | 5-4  |
| Adding Fuel .....                                                 | 5-5  |
| Checking the Interlock Switches .....                             | 5-6  |
| Preparing the Machine .....                                       | 5-7  |
| Checking the Traction Pedal Start-Interlock .....                 | 5-8  |
| Checking the Cutting Unit Drive Switch Start-Interlock .....      | 5-9  |
| Checking the Parking Brake and Seat Run-Interlock .....           | 5-10 |
| Checking the Parking Brake and Traction Pedal Run-Interlock ..... | 5-11 |
| Checking the Seat and Traction Pedal Run-Interlock .....          | 5-12 |
| During Operation .....                                            | 5-12 |
| Starting the Engine .....                                         | 5-13 |
| Shutting Off the Engine .....                                     | 5-14 |
| Cutting Grass with the Machine .....                              | 5-15 |
| Side-Shifting the Cutting Units .....                             | 5-16 |
| Driving the Machine in Transport Mode .....                       | 5-17 |
| Clip Rate (Reel Speed) .....                                      | 5-18 |
| Adjusting the Reel Speed .....                                    | 5-19 |
| Bleeding the Fuel System .....                                    | 5-20 |
| Operating Tips .....                                              | 5-21 |
| Mowing Techniques .....                                           | 5-22 |
| After Operation .....                                             | 5-23 |
| After Mowing .....                                                | 5-23 |
| Towing the Machine .....                                          | 5-23 |
| Tie-Down Point Locations .....                                    | 5-23 |
| Hauling the Machine .....                                         | 5-23 |
| Chapter 6: Maintenance .....                                      | 6-1  |
| Recommended Maintenance Schedule .....                            | 6-1  |
| Daily Maintenance Checklist .....                                 | 6-2  |
| Pre-Maintenance Procedures .....                                  | 6-2  |
| Preparing for Maintenance .....                                   | 6-3  |
| Lifting the Front of the Machine .....                            | 6-4  |
| Lifting the Back of the Machine (Using a Hoist) .....             | 6-5  |
| Lifting the Back of the Machine (Using a Jack) .....              | 6-6  |
| Removing the Battery Cover .....                                  | 6-7  |
| Opening the Hood .....                                            | 6-8  |
| Lubrication .....                                                 | 6-8  |
| Greasing the Bearings and Bushings .....                          | 6-9  |
| Grease Fitting Locations .....                                    | 6-10 |
| Checking the Sealed Bearings .....                                | 6-11 |
| Engine Maintenance .....                                          | 6-11 |
| Engine Oil Specifications .....                                   | 6-12 |
| Checking the Engine-Oil Level .....                               | 6-13 |
| Changing the Engine Oil and Filter .....                          | 6-14 |
| Servicing the Air Cleaner .....                                   | 6-15 |
| Fuel System Maintenance .....                                     | 6-15 |
| Fuel Storage .....                                                | 6-16 |
| Servicing the Fuel Tank .....                                     | 6-17 |
| Inspecting the Fuel Lines and Connections .....                   | 6-18 |
| Servicing the Fuel/Water Separator .....                          | 6-19 |
| Draining the Fuel/Water Separator .....                           | 6-20 |
| Replacing the Fuel/Water Separator Filter .....                   | 6-21 |

|                                                         |      |
|---------------------------------------------------------|------|
| Bleeding Air from the Injectors .....                   | 6-22 |
| Electrical System Maintenance .....                     | 6-22 |
| Servicing the Battery.....                              | 6-23 |
| Servicing the Fuses .....                               | 6-24 |
| Drive System Maintenance .....                          | 6-24 |
| Checking the Tire Pressure.....                         | 6-25 |
| Torquing the Wheel Lug Nuts .....                       | 6-26 |
| Torquing the Axle Hub Nuts .....                        | 6-27 |
| Adjusting the Traction Drive for Neutral .....          | 6-28 |
| Cooling System Maintenance.....                         | 6-28 |
| Coolant Specifications.....                             | 6-29 |
| Checking the Coolant Level.....                         | 6-30 |
| Cleaning the Engine Cooling System .....                | 6-31 |
| Brake Maintenance .....                                 | 6-31 |
| Adjusting the Parking Brake.....                        | 6-32 |
| Belt Maintenance.....                                   | 6-32 |
| Servicing the Engine Belts .....                        | 6-33 |
| Tensioning the Alternator/Fan Belt .....                | 6-34 |
| Replacing the Hydrostat Drive Belt .....                | 6-35 |
| Controls Maintenance .....                              | 6-35 |
| Adjusting Mow Ground Speed.....                         | 6-36 |
| Adjusting the Throttle.....                             | 6-37 |
| Hydraulic System Maintenance .....                      | 6-37 |
| Hydraulic Fluid Specifications .....                    | 6-38 |
| Checking the Hydraulic Fluid .....                      | 6-39 |
| Inspecting the Hydraulic Lines and Hoses .....          | 6-40 |
| Changing the Hydraulic Fluid .....                      | 6-41 |
| Changing the Hydraulic Filter .....                     | 6-42 |
| Cutting Unit Maintenance .....                          | 6-42 |
| Checking the Reel-to-Bedknife Contact.....              | 6-43 |
| Backlapping the Cutting Units .....                     | 6-44 |
| Preparing the Machine .....                             | 6-45 |
| Lapping the Reels and Bedknife .....                    | 6-46 |
| Finishing Backlapping .....                             | 6-47 |
| Chassis Maintenance .....                               | 6-47 |
| Inspecting the Seat Belt .....                          | 6-48 |
| Cleaning.....                                           | 6-48 |
| Washing the Machine .....                               | 6-49 |
| Chapter 7: Storage .....                                | 7-1  |
| Storing the Machine .....                               | 7-1  |
| Storing the Battery.....                                | 7-1  |
| Chapter 8: Troubleshooting .....                        | 8-1  |
| Using the Standard Control Module (SCM).....            | 8-1  |
| Troubleshooting the Standard Control Module (SCM) ..... | 8-2  |
| California Proposition 65 Warning Information .....     | 3    |



**Intended Use**

**Getting Help**

# Manual Conventions

# Safety Alert Classifications



## **General Safety**

### **Before Operation Safety**

# **Fuel Safety**

## **During Operation Safety**

# Rollover Protection System (ROPS) Safety

**Slope Safety**

**After Operation Safety**

**Maintenance Safety**

# Engine Safety

# Electrical System Safety

# Cooling System Safety

# Hydraulic System Safety

# **Blade Safety**

## **Storage Safety**

# Safety and Instructional Decals

# batterysymbols









**106-9290**

**117-3270**

**121-3598**

**121-3623**

**121-3628**

**125-6688**

**133-8062**

**136-3678**

**136-3679**

136-3702

**136-3716**

147-6069



# **1 Installing the Wheels**

# 2

## Installing the Steering Wheel

**3 Charging and Connecting the Battery**

**4 Checking the Slope Indicator**

**5 Installing the Roll Bar**

**6 Installing the Front Lift Arms**

# 7

## Preparing to Install the Lift Arms

# 8

## Assembling the Lift Arms to the Machine

# 9

## Assembling the Lift Cylinder to the Left Lift Arm

**10**

**Assembling the Lift Cylinder to the Right Lift Arm**

**11**

**Installing the Carrier Frames to the Cutting Units**

# **12** Preparing the Cutting Units

# **Assembling the Carrier Frames for the Front Cutting Units**

## Assembling the Cutting Unit and Rear Carrier Frame

# **Assembling the Carrier Frames for the Front Cutting Units**

**16** Assembling the Cutting Unit and Rear Carrier Frame

**17** Installing the Cutting Units

**18** Installing the Cutting Unit Drive Motors

**19** Installing the Telematics Device

**20** Adjusting the Lift Arms

# Checking Lift Arm and Rear Cutting Unit Clearance

# **22** Adjusting Lift Arm Clearance



**24** **Adjusting the Rear Cutting Unit Clearance**

**25** **Preparing the Machine**

**26** **Installing the Hood Latch**

**27** **Installing the Exhaust Guard**

**28** **Installing the CE Decals**



**30** Applying the CE Tilt Danger Decal

**31** Installing the Tipper Roller Kit (Optional)



## Controls

# Key Switch

# Traction Pedals

# Mow/Transport Slide

# Cutting Unit Shift Lever

# Raise/Lower

# Side Shift

# Slope Indicator

# Indicator Slot

# Cutting-Unit Drive Switch

# Throttle

# Lift Lever Lock

# Parking Brake

# Oil Pressure Warning Light

# Engine Coolant Temperature Warning Light

# Alternator Light

# Glow-Plug Indicator Light

# Hour Meter

# Mower Manifold

# Reel Speed Knob

# Backlap Control

# Fuel Gauge

# Tilt-Steering Lever

# Seat Adjustment Lever

# Specifications

# Attachments/Accessories



## **Before Operation**

# Performing Daily Maintenance

# Fuel

# Fuel Specifications

# Adding Fuel

# Checking the Interlock Switches

# Preparing the Machine

# Checking the Traction Pedal Start-Interlock

# Checking the Cutting Unit Drive Switch Start-Interlock

# Checking the Parking Brake and Seat Run-Interlock

# Checking the Parking Brake and Traction Pedal Run-Interlock

# **Checking the Seat and Traction Pedal Run-Interlock**

## **During Operation**

# Starting the Engine

# Shutting Off the Engine

# Cutting Grass with the Machine

# Side-Shifting the Cutting Units

# Driving the Machine in Transport Mode

# Clip Rate (Reel Speed)

# Adjusting the Reel Speed

# Bleeding the Fuel System

# Operating Tips

# Mowing Techniques

**After Operation**

**After Mowing**

**Towing the Machine**

**Tie-Down Point Locations**

**Hauling the Machine**



## **Recommended Maintenance Schedule**

# **Daily Maintenance Checklist**

## **Pre-Maintenance Procedures**

# Preparing for Maintenance

# Lifting the Front of the Machine

# Lifting the Back of the Machine (Using a Hoist)

# **Lifting the Back of the Machine (Using a Jack)**

# Removing the Battery Cover

# Opening the Hood

## Lubrication

# Greasing the Bearings and Bushings

# Grease Fitting Locations

# Checking the Sealed Bearings

## Engine Maintenance

# Engine Oil Specifications

# Checking the Engine-Oil Level

# Changing the Engine Oil and Filter

# **Servicing the Air Cleaner**

## **Fuel System Maintenance**

# Fuel Storage

# Servicing the Fuel Tank

# Inspecting the Fuel Lines and Connections

# Servicing the Fuel/Water Separator

# Draining the Fuel/Water Separator

# Replacing the Fuel/Water Separator Filter

# **Bleeding Air from the Injectors**

## **Electrical System Maintenance**

# Servicing the Battery

# **Servicing the Fuses**

## **Drive System Maintenance**

# Checking the Tire Pressure

# Torquing the Wheel Lug Nuts

# Torquing the Axle Hub Nuts

# **Adjusting the Traction Drive for Neutral Cooling System Maintenance**

# Coolant Specifications

# Checking the Coolant Level

# **Cleaning the Engine Cooling System**

## **Brake Maintenance**

# **Adjusting the Parking Brake Belt Maintenance**

# Servicing the Engine Belts

# Tensioning the Alternator/Fan Belt

# **Replacing the Hydrostat Drive Belt**

## **Controls Maintenance**

# Adjusting Mow Ground Speed

# **Adjusting the Throttle**

## **Hydraulic System Maintenance**

# Hydraulic Fluid Specifications

# Checking the Hydraulic Fluid

# Inspecting the Hydraulic Lines and Hoses

# Changing the Hydraulic Fluid

# **Changing the Hydraulic Filter**

## **Cutting Unit Maintenance**

# Checking the Reel-to-Bedknife Contact

# Backlapping the Cutting Units

# Preparing the Machine

# Lapping the Reels and Bedknife

# **Finishing Backlapping**

## **Chassis Maintenance**

# **Inspecting the Seat Belt**

## **Cleaning**

# Washing the Machine



## **Storing the Machine**

## **Storing the Battery**



## **Using the Standard Control Module (SCM)**

# Troubleshooting the Standard Control Module (SCM)

# **California Proposition 65 Warning Information**