



Count on it.

Form No. 3471-202 Rev A

Parts Catalog

Reelmaster® 3100-D Traction Unit With Sidewinder®

Model No. 03171—Serial No. 418400000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

 
For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame and Roll-Over Protection System Assembly	5
Battery Tray and Cover Assembly	6
Engine and Air Cleaner Assembly	7
Air Cleaner Assembly No. 93-2190	8
Muffler, Muffler Guard and Engine Mount Assembly	9
Radiator Assembly	10
Scissor Assembly	11
Rear Lift Arm Assembly	13
Control Panel Assembly	14
Seat Assembly	16
Seat and Track Assembly No. 139-2679	17
Seat Assembly No. 139-2700	18
Steering Column Assembly	19
Steering Valve Assembly No. 121-7856	20
Pedal Assembly	21
Floor Plate Assembly	23
Hood Assembly	24
Hydraulic Drive and Wheel Assembly	25
Hydraulic Motor Assembly No. 110-8785	26
Hydraulic Motor Assembly No. 110-8786	27
Brake Assembly No. 104-7705	28
Rear Fork and Tire Assembly	29
Hydraulic Motor Assembly No. 95-8694	30
Hydraulic Cylinder Assembly No. 121-3653	31
Tandem Hydraulic Pump Assembly	32
Hydraulic Pump Assembly No. 104-4890	33
Gear Pump Assembly No. 136-3743	35
Tandem Pump Mount Assembly	36
Traction and Steering Circuit Assembly	37
Lift Circuit Assembly	38
Hydraulic Cylinder Assembly No. 117-5109	39
Hydraulic Cylinder Assembly No. 112-9916	40
Hydraulic Cylinder Assembly No. 121-3654	41
Hydraulic Mow Circuit Assembly	42
Gear Motor Assembly No. 115-8250	44
Optional Tool Assembly	45
Wire Harness and Battery Assembly	46
Hydraulic Tank and Valve Assembly	47
Hydraulic Manifold Assembly No. 108-9037	49
Control Valve Assembly	50
Valve Assembly No. 95-8581	51
Crankcase Assembly	52
Oil Pan and Dipstick Assembly	53
Cylinder Head Assembly	54
Gear Case and Oil Filter Cartridge Assembly	55
Cylinder Head Cover Assembly	56
Main Bearing Case Assembly	57
Camshaft and Idle Gear Shaft Assembly	58
Piston and Crankshaft Assembly	59
Fuel Camshaft and Governor Shaft Assembly	60
Idle Apparatus Assembly	61
Stop Solenoid and Fuel Pump Cover Assembly	62
Injection Pump Assembly	63
Governor Assembly	64

Contents (continued)


Speed Control Plate Assembly	65
Nozzle Holder and Glow Plug Assembly	66
Nozzle Holder Assembly	67
Alternator, Pulley and Fan Assembly	68
Alternator Components Assembly	69
Starter and Flywheel Assembly	70
Starter Component Assembly	71
Water Flange and Thermostat Assembly	72
Water Pump and Water Pipe Assembly	73
Valve and Rocker Arm Assembly	74
Inlet and Exhaust Manifold Assembly	75
Miscellaneous Engine Parts	76
Upper Gasket Kit	77
Lower Engine Gasket Kit	78
Engine and Air Cleaner Assembly	79
Fuel System Assembly	80
Gear Motor Assembly No. 115-8250	82
Battery Tray and Cover Assembly	83
Attachments and Accessories	84

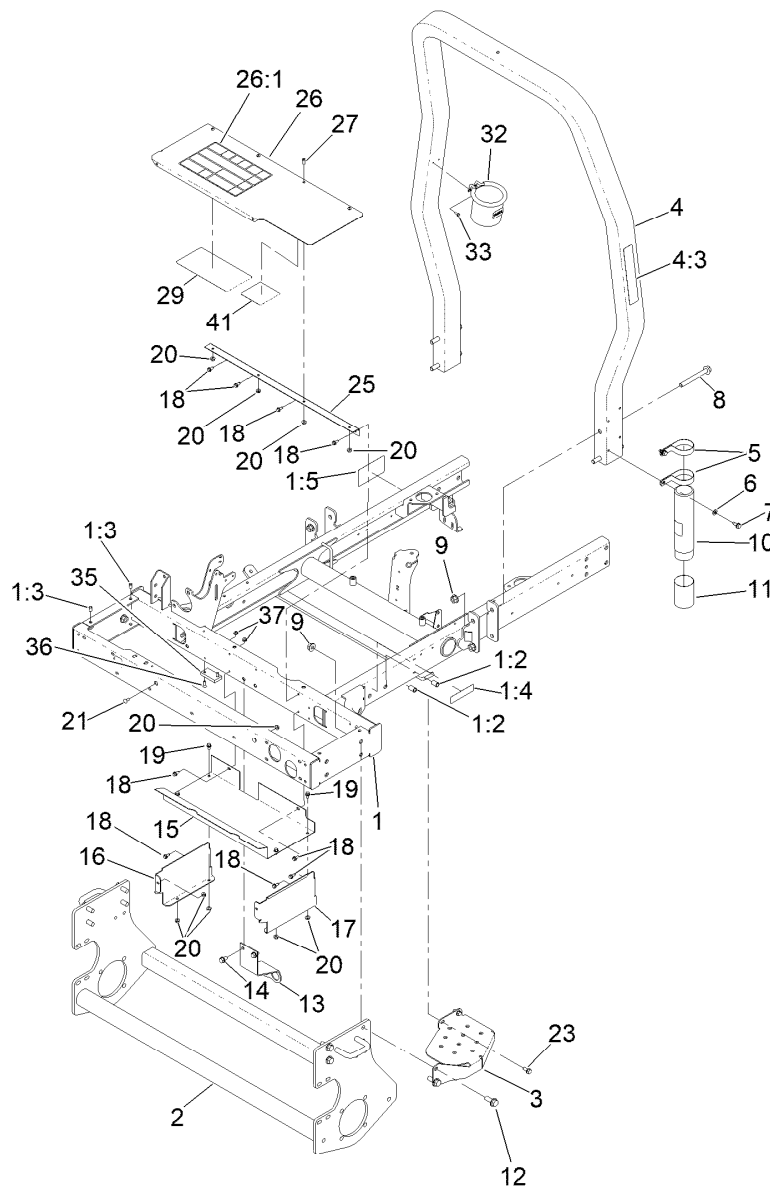

Frame and Roll-Over Protection System Assembly

Ref.	Part Number	Qty.	Description
1	121-3639	1	Frame ASM W/Decals
1:2	32148-8	2	Nut-Clinch
1:3	32148-6	2	Nut-Clinch
1:4	133-8062	1	Decal-Spark Arrestor
1:5	117-3270	2	Decal-Danger
2	95-8568-03	1	Frame-Lower
3	99-3375-03	1	Step
4	127-8493	1	ROPS ASM
4:3	136-3702	1	Decal-Safety, ROPS
5	2412-133	2	Clamp-R
6	3256-23	2	Washer-Plain
7	32144-70	2	Screw-HWHTF
8	117-3176	4	Screw-HHF
9	32128-49	12	Nut-HHF
10	104-7050	1	Tube-Manual
11	104-7048	1	Cap-Housing
12	3234-38	8	Screw-HHF
13	115-3417-0P	1	Bracket-Bulkhead, Scissor
14	32144-15	2	Screw-HHFTF


Ref.	Part Number	Qty.	Description
15	99-3430-0P	1	Bottom - Toolbox *b
16	99-3431-0P	1	End - Toolbox, RH *b
17	99-3432-0P	1	End - Toolbox, LH *b
18	32144-10	9	Screw-HWH
19	3234-13	4	Screw-HHF
20	32128-33	10	Nut-HF
21	3229-11	2	Screw-CARR
23	3234-5	2	Screw-HHF
25	119-2034	1	Hinge-Toolbox
26	119-2029	1	Toolbox Cover ASM
26:1	121-3623	1	Decal-Danger
27	119-6906	4	Screw-HSBH
29	136-3716	1	Decal-Service
32	161-8355	1	Cup Holder ASM
33	32144-1	2	Screw-Taptite
35	95-8684	1	Pad-Bumper
36	3289-4	2	Screw-FH
37	104-7201	2	Nut-HF, NI
41	147-6069	1	Decal-Reel Speed

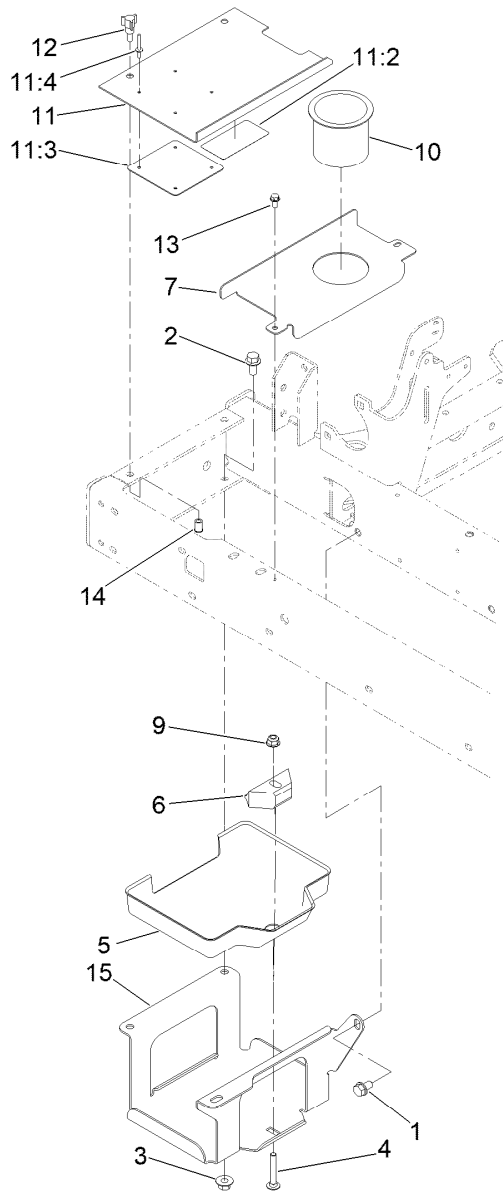 

Battery Tray and Cover Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	32144-15	1	Screw-HHFTF
2	3234-1	3	Screw-HHF
3	32128-43	3	Nut-Flange
4	3230-6	1	Bolt-CARR
5	99-3513	1	Tray-Battery
6	138-6335	1	Retainer-Battery
7	95-8817-01	1	Cover-Battery, Inner
9	104-8300	1	Nut-HF, NI
10	94-1410	1	Holder-Can, Beverage


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	99-3602	1	Battery Cover ASM
11:2	93-7276	1	Decal-Danger
11:3	87-7620	1	Shield-Terminal, Battery
11:4	3269-27	4	Rivet-Snap
12	233-70	2	Knob-Star, Three
13	32144-4	2	Screw-HWH
14	32148-6	2	Nut-Clinch
15	95-8796-03	1	Support-Battery

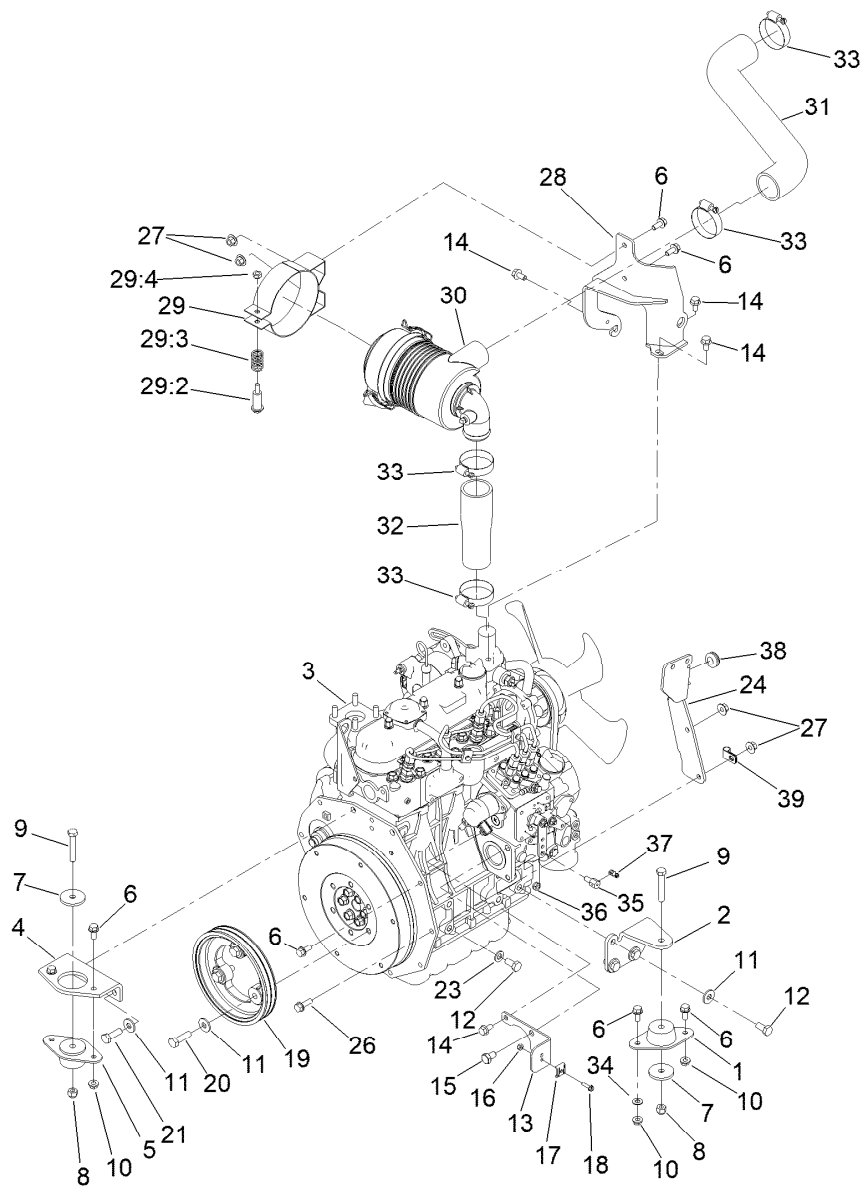 

Engine and Air Cleaner Assembly


Ref.	Part Number	Qty.	Description
1	121-9076	1	Mount-Engine
2	95-8937-0P	1	Mount-Engine, LH
3	138-6905	1	Engine-Kubota, D1105
4	95-8926-0P	1	Mount - Engine, Front
5	93-5265	1	Mount-Engine
6	3234-5	5	Screw-HHF
7	80-8560	2	Washer-Hardened
8	3296-39	2	Nut-Lock, NI
9	323-11	2	Screw-HH
10	32128-20	4	Nut-HF
11	80-6990	7	Washer-Hardened
12	63-7790	4	Screw-Cap
13	110-9009-0P	1	Bracket-Cable, Throttle
14	33104-016	4	Screw-HHF
15	70-8470	1	Screw-HH
16	3296-2	1	Nut-Lock, NI
17	81-1690	1	Clamp-Cable
18	32105-13	1	Screw-HWH
19	99-3412	1	Pulley
20	56-2140	3	Screw-HH
21	95-8812	1	Screw-HH

Ref.	Part Number	Qty.	Description
23	33095-00	1	Washer-Flat
24	115-3487-0P	1	Bracket-Mount, Fuel Filter
26	3234-17	3	Screw-HHF
27	32128-44	4	Nut
28	136-3154-0P	1	Bracket-Cleaner, Air
29	93-2191	1	Air Cleaner Mounting Band ASM
29:2	94-3653	1	Bolt
29:3	94-3654	1	Spring
29:4	33024-00	1	Nut-Lock, NI
30	93-2190	1	Air Cleaner ASM
31	95-8946	1	Hose-Upper, Air Inlet
32	95-8947	1	Hose-Air Inlet, Lower
33	2412-92	4	Clamp-Hose
34	120-9683	1	Washer-Plain
35	98-9311	1	Swivel-Throttle
36	3296-20	1	Nut-Lock, NI
37	112-9919	1	Stop-Cable, Throttle
38	1-543296	1	Grommet
39	2412-10	1	Clamp-R

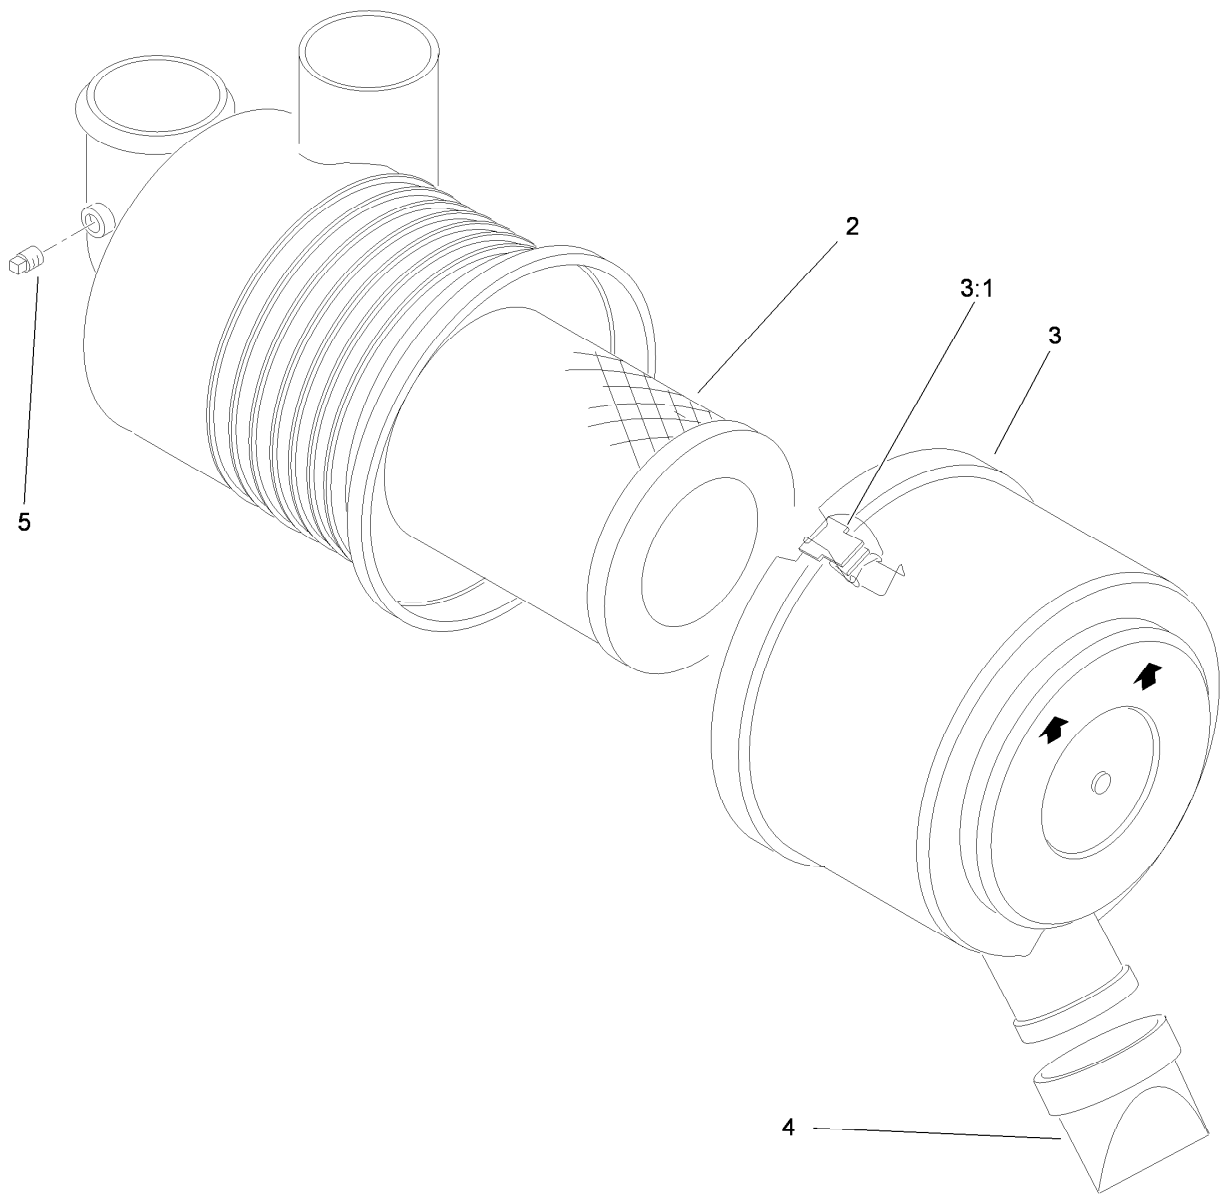 

Air Cleaner Assembly No. 93-2190


Ref.	Part Number	Qty.	Description
2	108-3811	1	Filter-Air V-Twin HD
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe

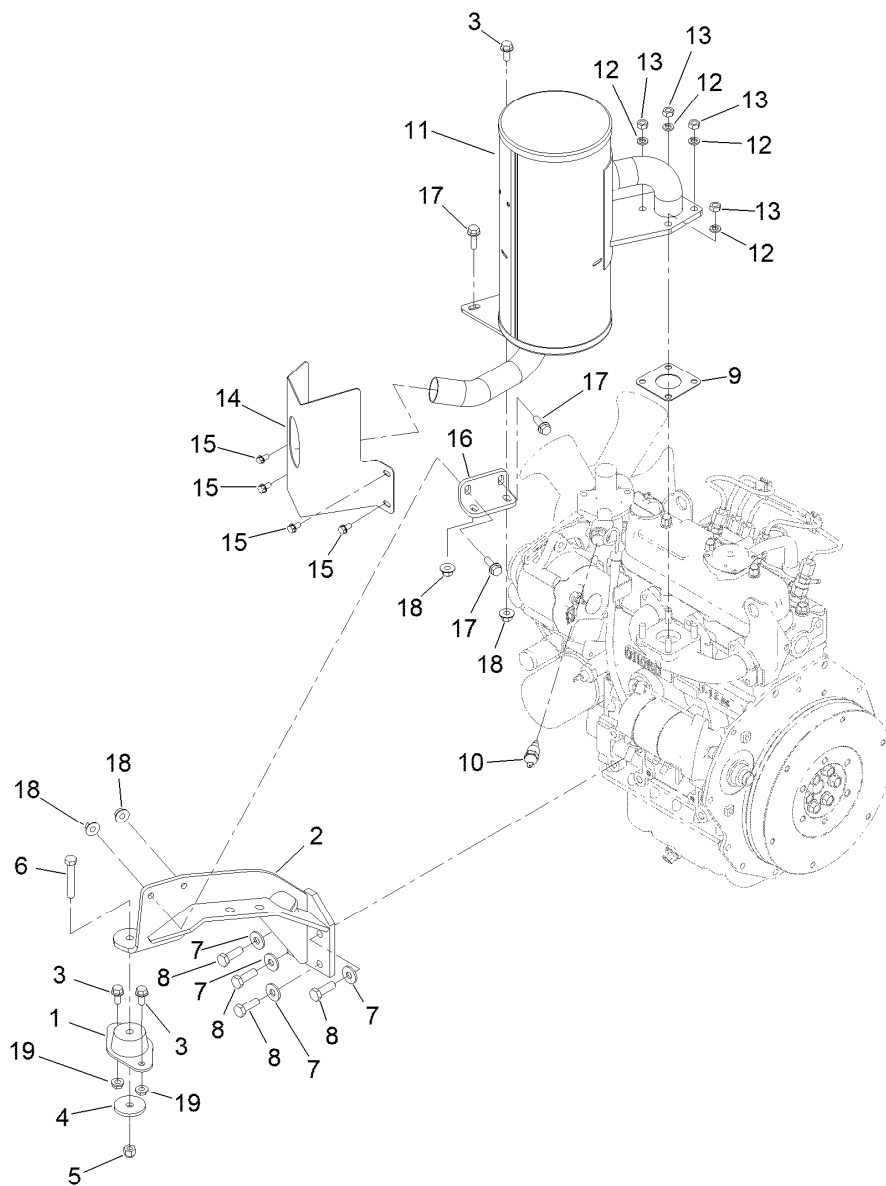 

Muffler, Muffler Guard and Engine Mount Assembly

Ref.	Part Number	Qty.	Description
1	121-9076	1	Mount-Engine
2	100-4838-0P	1	Mount-Engine
3	3234-5	3	Screw-HHF
4	80-8560	1	Washer-Hardened
5	3296-39	1	Nut-Lock, NI
6	323-11	1	Screw-HH
7	80-6990	4	Washer-Hardened
8	95-8812	4	Screw-HH
9	98-9611	1	Gasket
10	106-7772	1	Thermoswitch


Ref.	Part Number	Qty.	Description
11	139-6013	1	Muffler
12	3253-4	4	Washer-Lock
13	33014-00	4	Nut-Hex
14	140-7428-03	1	Guard-Exhaust
15	32144-4	4	Screw-HWH
16	95-8943-0P	1	Bracket-Muffler
17	3234-17	3	Screw-HHF
18	32128-44	4	Nut
19	32128-20	2	Nut-HF

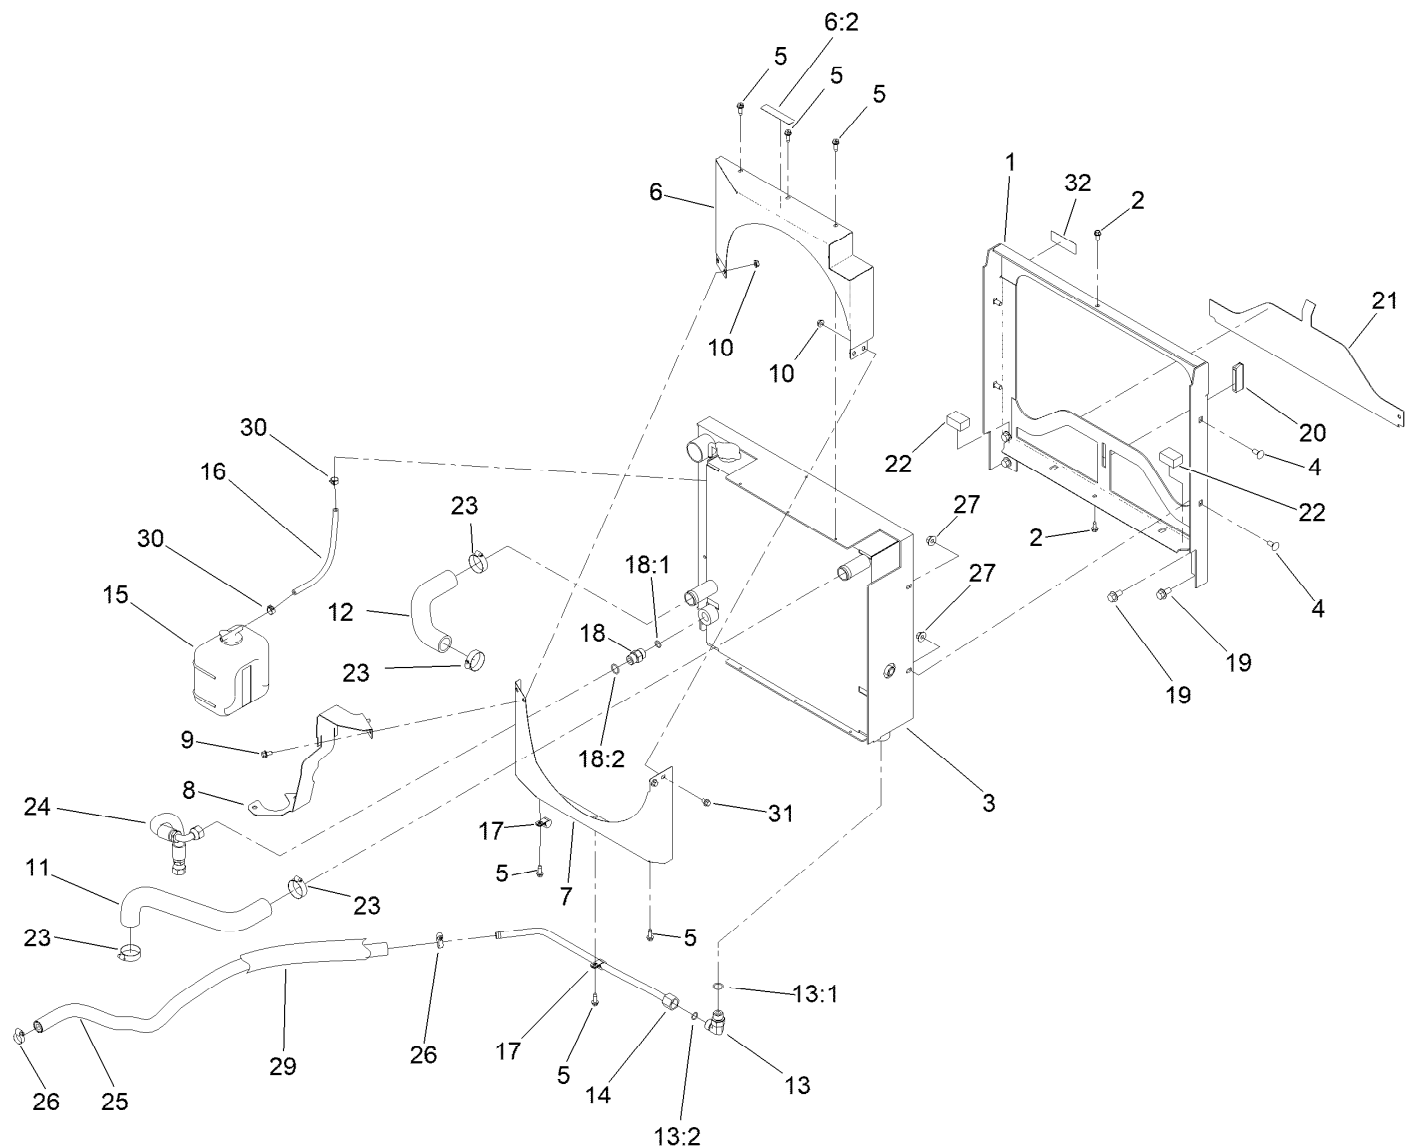 

Radiator Assembly

Ref.	Part Number	Qty.	Description
1	100-4903-0P	1	Radiator Frame ASM
2	119-2038	2	Screw-HWH
3	120-3392	1	Radiator/Oil Cooler
4	3230-1	4	Bolt-CARR
5	32104-95	6	Screw-HWH
6	121-3584	1	Shroud-Fan, Top
6:2	93-6681	1	Decal-Warning, Fan
7	121-6254-0P	1	Shroud-Fan, Bottom
8	121-3604-0P	1	Bracket-Mounting, Reservoir
9	3234-13	2	Screw-HHF
10	32128-33	4	Nut-HF
11	121-3571	1	Hose-Radiator, Upper
12	119-6748	1	Hose-Radiator, Lower
13	340-98	1	Fitting-Elbow, 90 DEG
13:1	237-79	1	O-Ring
13:2	237-30	1	O-Ring
14	147-6083	1	Hydraulic Tube ASM
15	108-0638	1	Bottle-Overflow


Ref.	Part Number	Qty.	Description
16	110-4105	1	Hose-Fuel
17	2412-73	2	Clamp-R
18	340-4	1	Fitting-Straight
18:1	237-30	1	O-Ring
18:2	237-79	1	O-Ring
19	3234-1	4	Screw-HHF
20	99-3497	1	Magnet
21	95-8702-0P	1	Shield-Radiator, Lower
22	95-8962	2	Seal-Foam, Radiator
23	2412-34	4	Clamp-Hose
24	104-2806	1	Hose-HYD
25	93-6804	1	Hose
26	2412-36	2	Clamp-Hose
27	3296-29	4	Nut-Lock, NI
29	56-7985	1	Sleeve-Protective
30	92-2379	2	Clamp-Hose
31	3234-26	2	Screw-HHF
32	125-6688	1	Decal-Danger, Starter Fluid

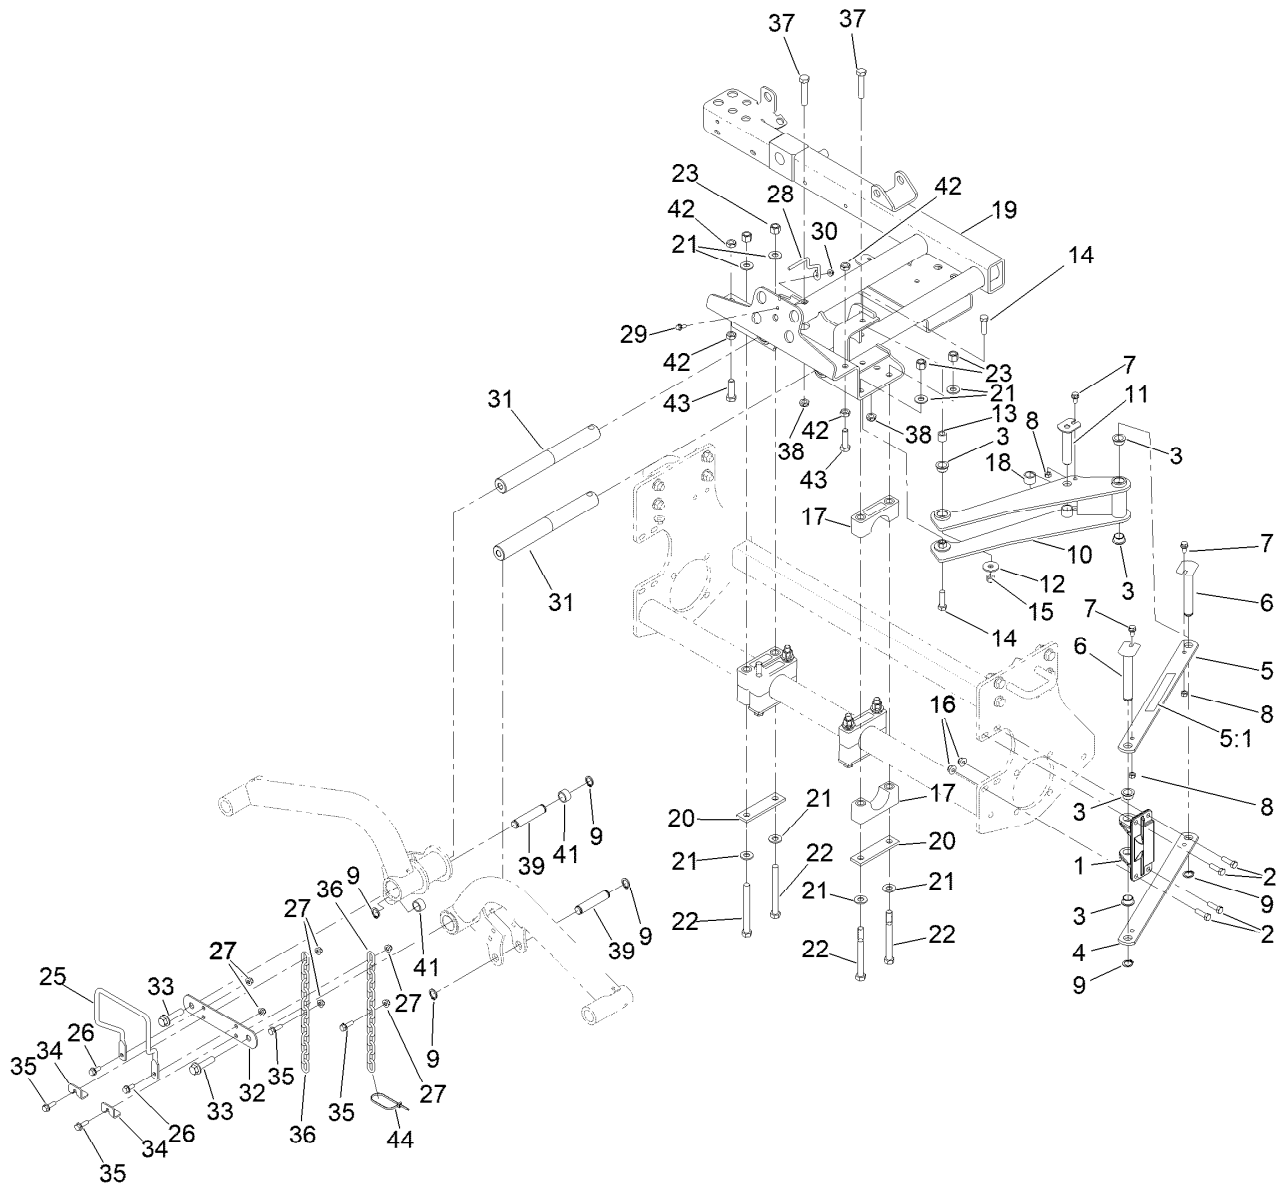 

Scissor Assembly


Ref.	Part Number	Qty.	Description
1	95-8883	1	Mount-Scissor
2	323-7	4	Screw-HH
3	95-8526	6	Bushing-Plastic
4	95-8527-0P	1	Link-Scissor
5	99-3505	1	Scissors Link ASM
5:1	94-3353	1	Decal-Pinch Point, Intl
6	125-1914	2	Pin-Pivot
7	3234-14	3	Screw-HHF
8	32152-1	3	Nut-Lock
9	32120-93	6	Ring-Retaining
10	95-8521-03	1	Frame-Scissor
11	140-5248	1	Pin-Ram, Pivot
12	87-5330	2	Washer
13	95-8603	2	Spacer
14	324-6	2	Screw-HH
15	3296-48	2	Nut-Hex
16	104-8301	4	Nut-HF, NI
17	104-4865	8	Cap-Bearing
18	46-6350	2	Spacer
19	100-4930-03	1	Carrier ASM
20	99-3373	4	Bar-Support, Slide

Ref.	Part Number	Qty.	Description
21	87-7270	16	Washer-Thrust
22	325-19	8	Screw-HH
23	3296-23	8	Nut-Lock, NI
25	99-3492	1	Rod-Formed, Hose Guard
26	3234-5	2	Screw-HHF
27	104-8300	6	Nut-HF, NI
28	99-3433	1	Wire-Center
29	3234-4	1	Screw-HHF
30	32128-33	1	Nut-HF
31	95-8531	2	Shaft-Pivot, Liftarm
32	95-8532-03	1	Link-Shaft, Pivot
33	3234-27	2	Screw-HHF
34	99-3550	2	Clip-Link
35	3234-17	4	Screw-HHF
36	98-7981	2	Chain-Link, Straight
37	325-10	2	Screw-HH
38	3296-45	2	Nut-Hex
39	95-8575	2	Pin-Clevis
41	75-9590	2	Spacer-Cylinder
42	3218-5	4	Nut-Jam

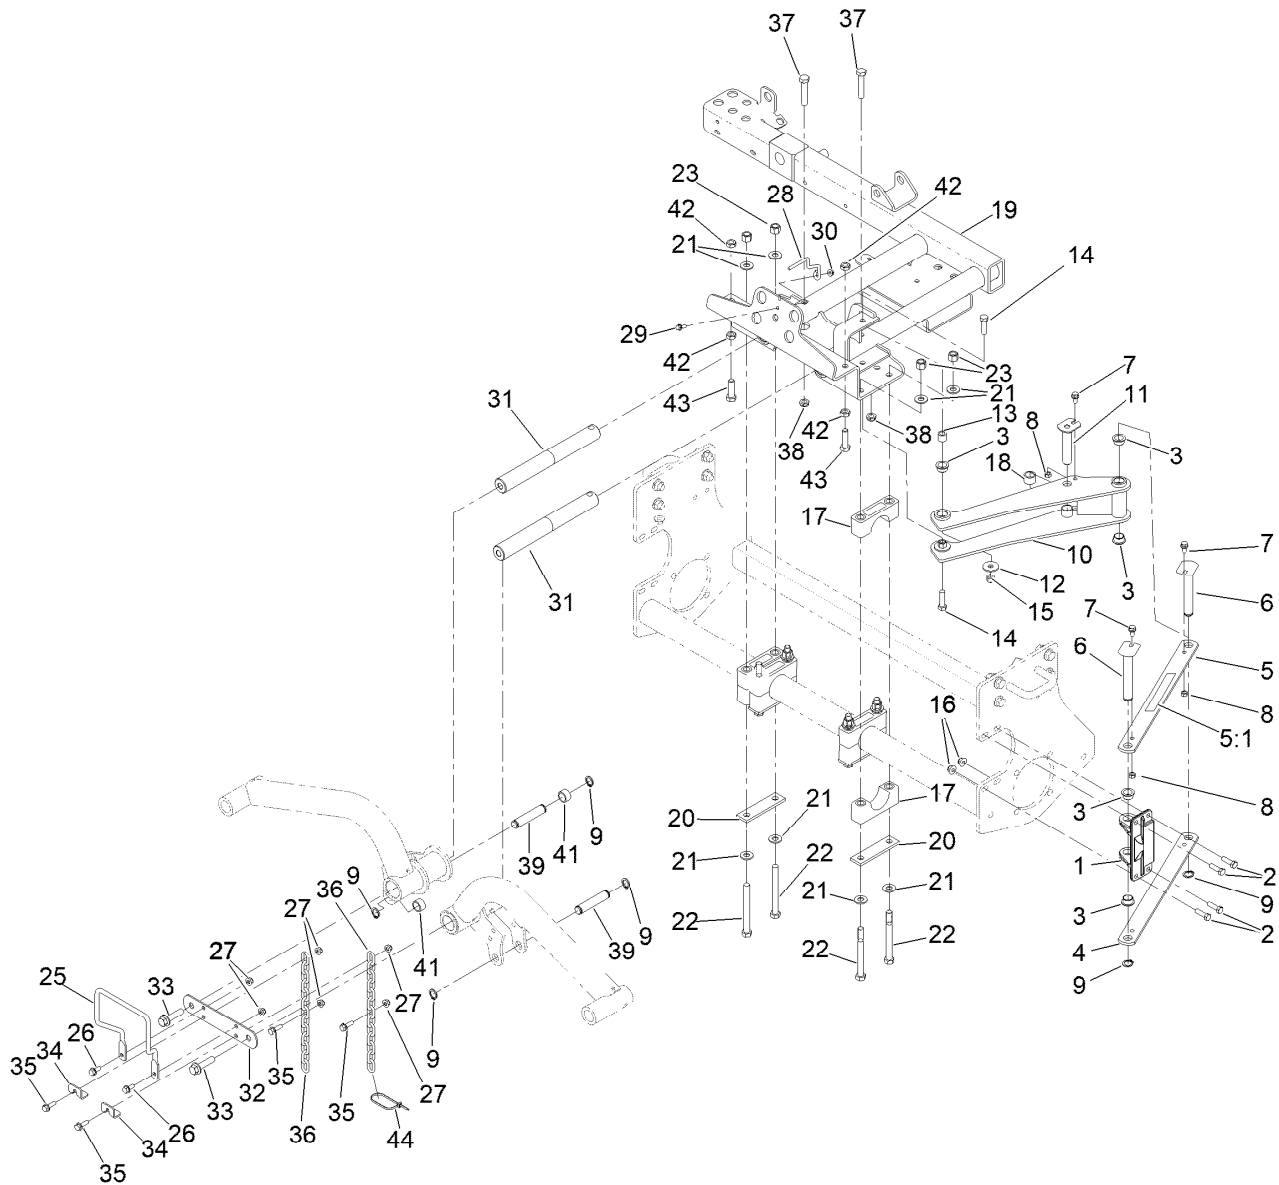 

Scissor Assembly (continued)

Ref.	Part Number	Qty.	Description
43	325-7	2	Screw-HH
44	3290-378	1	Tie-Cable

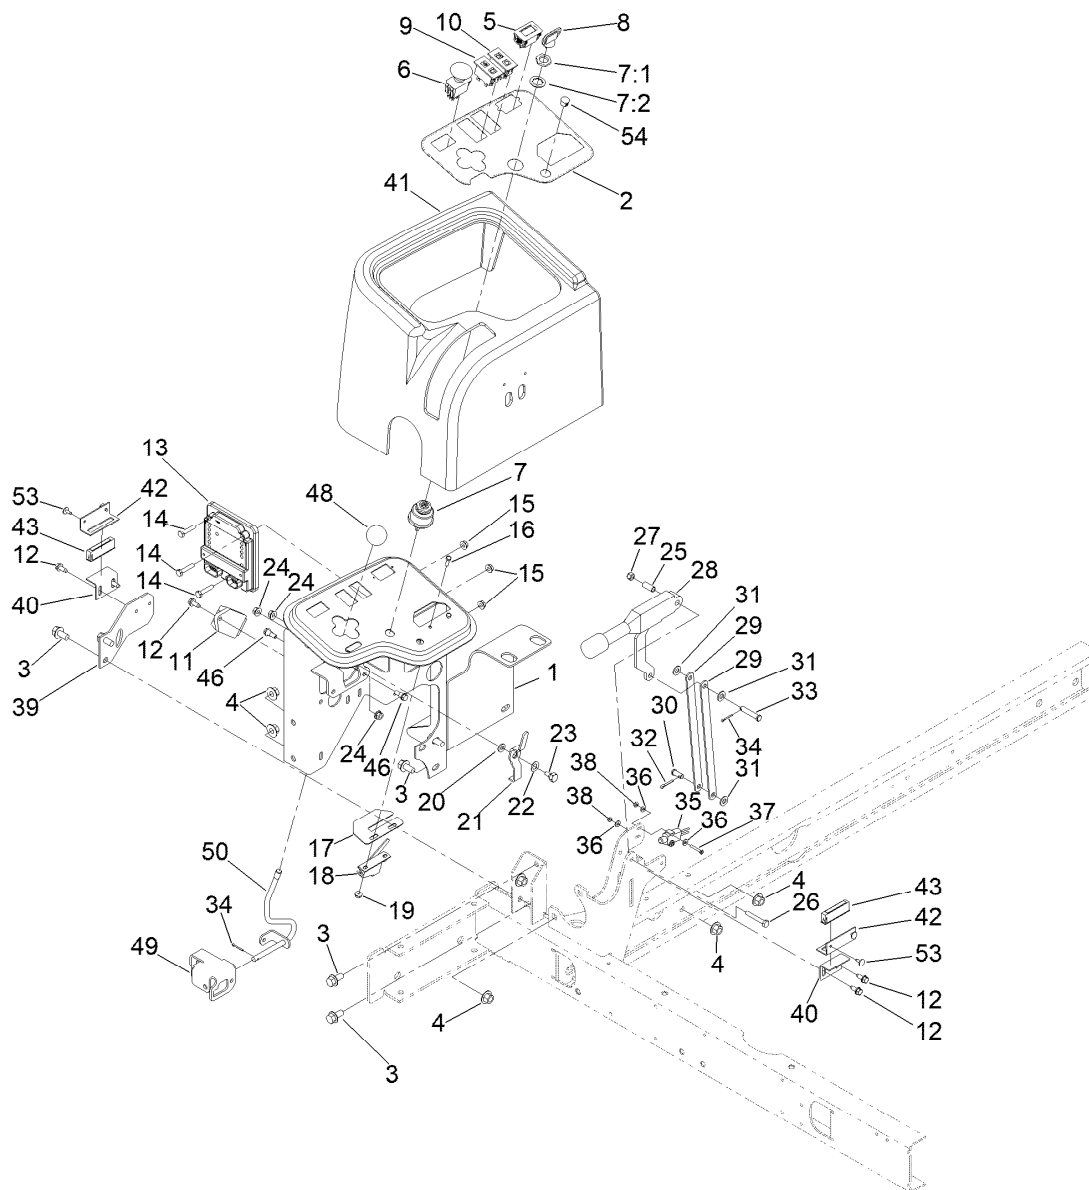 


Control Panel Assembly

Ref.	Part Number	Qty.	Description
1	136-3681-03	1	Panel-Control
2	136-3679	1	Decal-Console
3	3234-1	6	Screw-HHF
4	32128-43	6	Nut-Flange
5	120-2244	1	Hourmeter
6	93-9999	1	Switch-PTO
7	104-2541	1	Ignition Switch ASM
7:1	218-461	1	Nut-HH
7:2	3254-5	1	Washer-Lock
8	63-8360	2	Key-Ignition
9	100-8070	1	Lamp-Warning
10	100-8071	1	Lamp-Warning
11	98-7611	1	Controller-Glow
12	32144-10	5	Screw-HWH
13	106-9277	1	Module-Control, Standard
14	321-8	3	Screw-HH
15	32128-33	3	Nut-HF
16	3290-134	2	Screw

Ref.	Part Number	Qty.	Description
17	104-0421	1	Plate-Stop, Throttle
18	138-1224	1	Cable-Throttle
19	3290-148	2	Nut-HF
20	3256-22	1	Washer-Flat
21	99-3401	1	Lever-Lock
22	3290-477	1	Washer-Curved
23	63-3410	1	Screw-Shoulder
24	32128-32	3	Nut-HHF
25	87-4710	1	Spacer-Brake, Parking
26	321-10	1	Screw-HH
27	3296-42	1	Nut-Lock, NI
28	104-4817	1	Lever-Brake
29	104-4628	2	Link-Brake, Parking
30	283-62	1	Pin-Clevis
31	3256-23	3	Washer-Plain
32	3272-10	1	Pin-Cotter
33	94-3829	1	Pin-Clevis
34	3272-6	2	Pin-Cotter

 
● Not illustrated

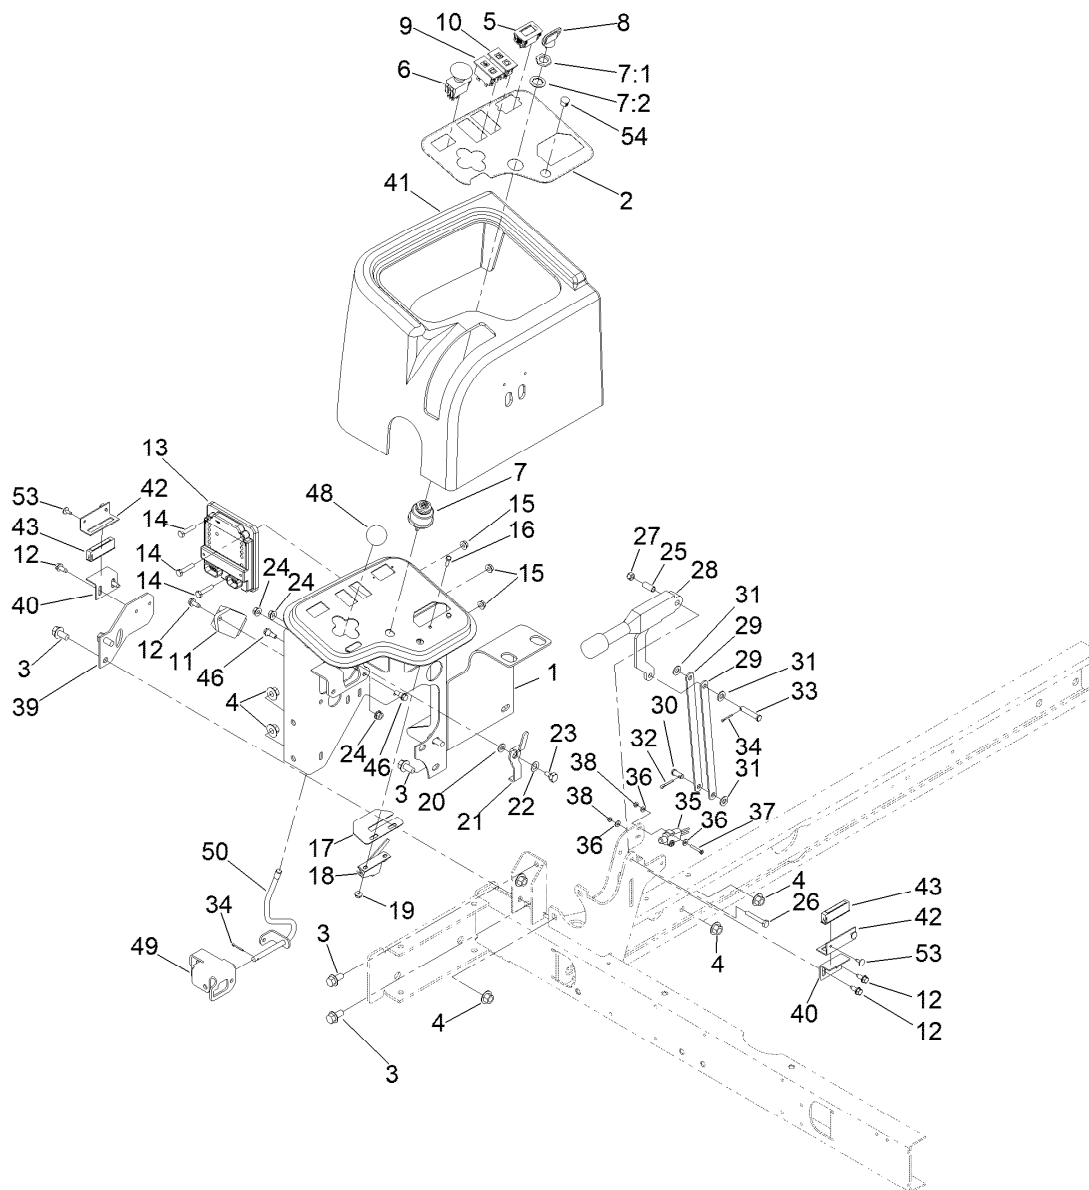

Control Panel Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
35	95-8900	1	Switch	46	42-3560	2	Bolt-Shoulder
36	3256-21	4	Washer-Flat	48	233-42	1	Knob
37	32105-9	2	Screw-HH	49	95-8633	1	Bracket-Valve, Actuator
38	3296-9	2	Nut-Hex	50	95-8635	1	Lever-Valve
39	95-8764-0P	1	Support-Magnet	53	3269-5	4	Rivet-Pop
40	95-8765	2	Bracket-Strike, Magnet	54	2410-64	1	Plug-Button
41	95-8707	1	Cover-Dash	56	3290-378	1	Tie-Cable ●
42	95-8763	2	Bracket-Hold Down, Cover	57	3290-379	1	Tie-Cable ●
43	58-4250	2	Catch-Magnetic				

 ● Not illustrated

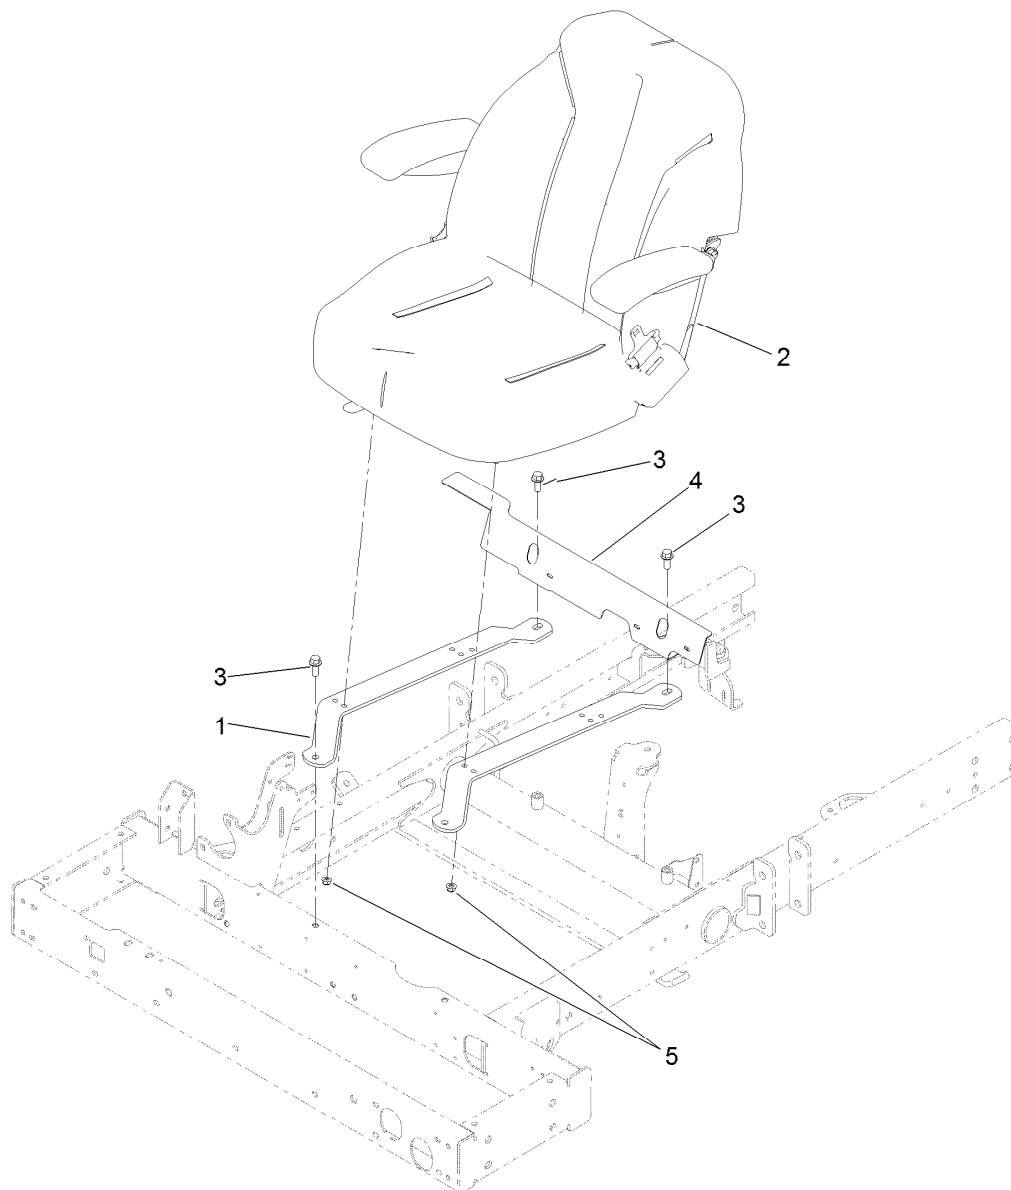


Seat Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-3665-03	2	Strap-Support, Seat
2	139-2679	1	Seat And Track ASM
3	3234-11	4	Screw-HHF
4	104-4833-03	1	Shield-Heat
5	104-8300	4	Nut-HF, NI

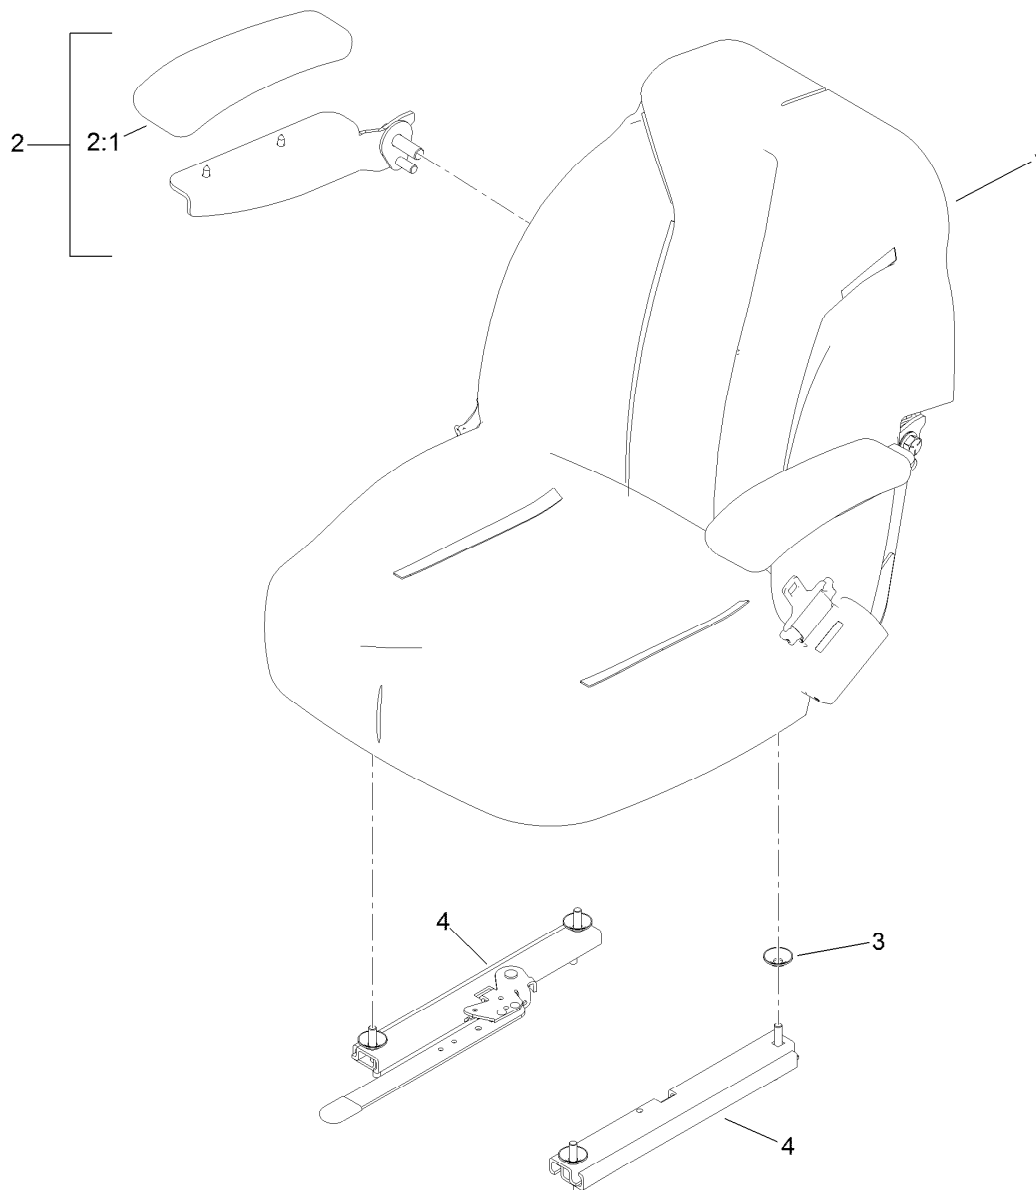 


Seat and Track Assembly No. 139-2679

Ref.	Part Number	Qty.	Description
1	139-2700	1	Seat ASM
2	121-3658	1	RH Arm Rest Kit
2:1	110-4163	1	Cushion-Rest, Arm
3	136-9002	4	Spacer-Mounting
4	126-2177	1	Track-Seat

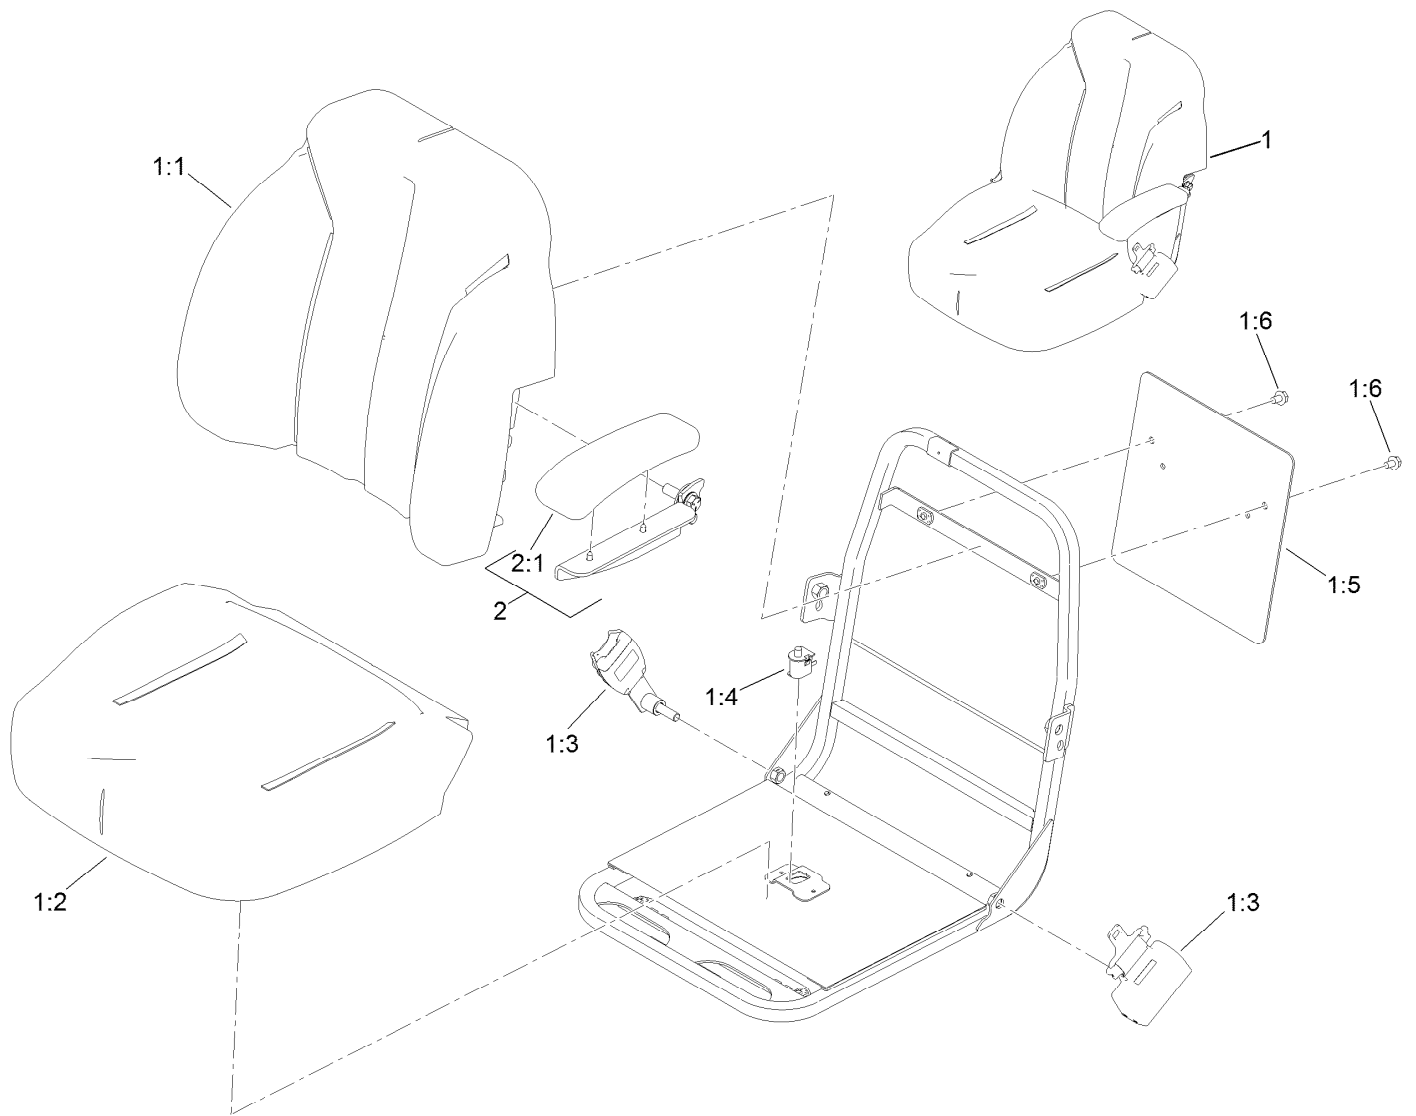 


Seat Assembly No. 139-2700

Ref.	Part Number	Qty.	Description
1	139-2680	1	Seat ASM
1:1	145-0083	1	Cover-Seat, Back
1:2	145-0084	1	Cover-Seat, Bottom
1:3	139-2707	1	Seat Belt Kit
1:4	82-2190	1	Switch-Bail
1:5	139-2701	1	Plate-Decal
1:6	3234-30	2	Screw-HHF
2	121-3660	1	LH Arm Rest Kit
2:1	110-4163	1	Cushion-Rest, Arm

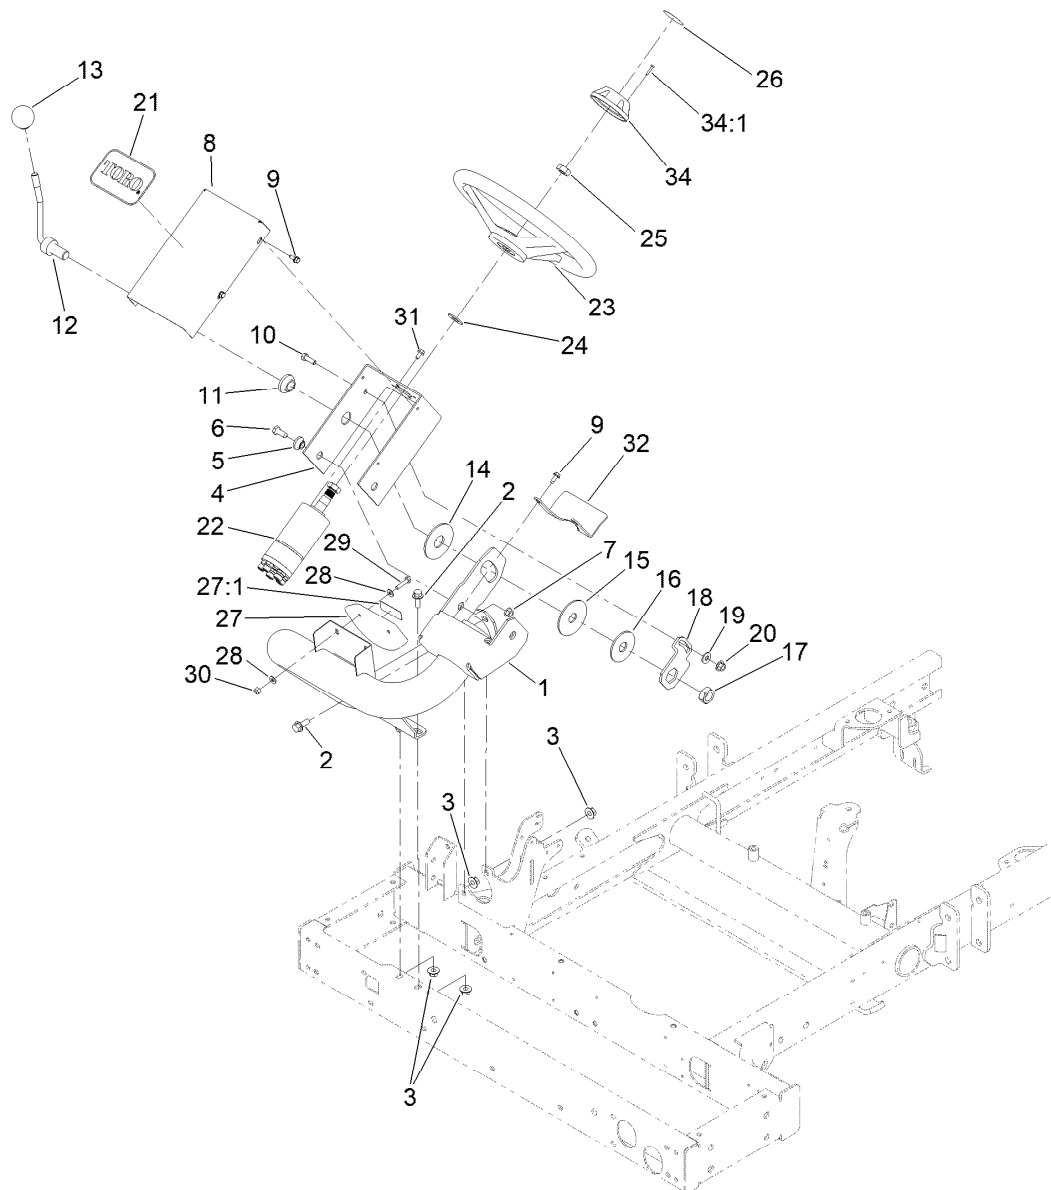 

Steering Column Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	105-8536-01	1	Arm-Steering	19	3256-3	1	Washer-Flat
2	3234-11	4	Screw-HHF	20	32128-44	1	Nut
3	32128-43	4	Nut-Flange	21	67-1300	1	Decal
4	104-5185-01	1	Bracket-Valve, Steering	22	121-7856	1	Steering Valve ASM
5	93-5988	2	Hub-Pivot	23	145-0051	1	Steering Wheel
6	323-5	2	Screw-HH	24	3256-27	1	Washer-Flat
7	32128-21	2	Nut-HF Lock	25	3296-33	1	Nut-Lock, NI
8	95-8794-01	1	Cover-Valve, Steering	26	68-5370	1	Decal
9	32144-10	5	Screw-HWH	27	100-4929	1	Slope Indicator ASM
10	322-5	1	Screw-HH	27:1	121-3598	1	Decal-Danger, 17 Degree
11	99-3502	1	Boss	27:1	121-3628	1	Decal-Angle
12	95-8798-03	1	Lever-Steering	28	3256-22	4	Washer-Flat
13	233-48	1	Knob	29	321-7	2	Screw-HH
14	31-0390	1	Disc-Friction	30	3296-42	2	Nut-Lock, NI
15	82-9010	1	Disc-Friction	31	33103-012	4	Screw-HHF
16	80-2930	1	Washer-Flat	32	99-3405-01	1	Shield-Steering
17	3218-7	1	Nut-Jam	34	68-5140	1	Cap-Wheel, Steering
18	80-2880	1	Bracket-Tilt	34:1	32144-21	1	Screw

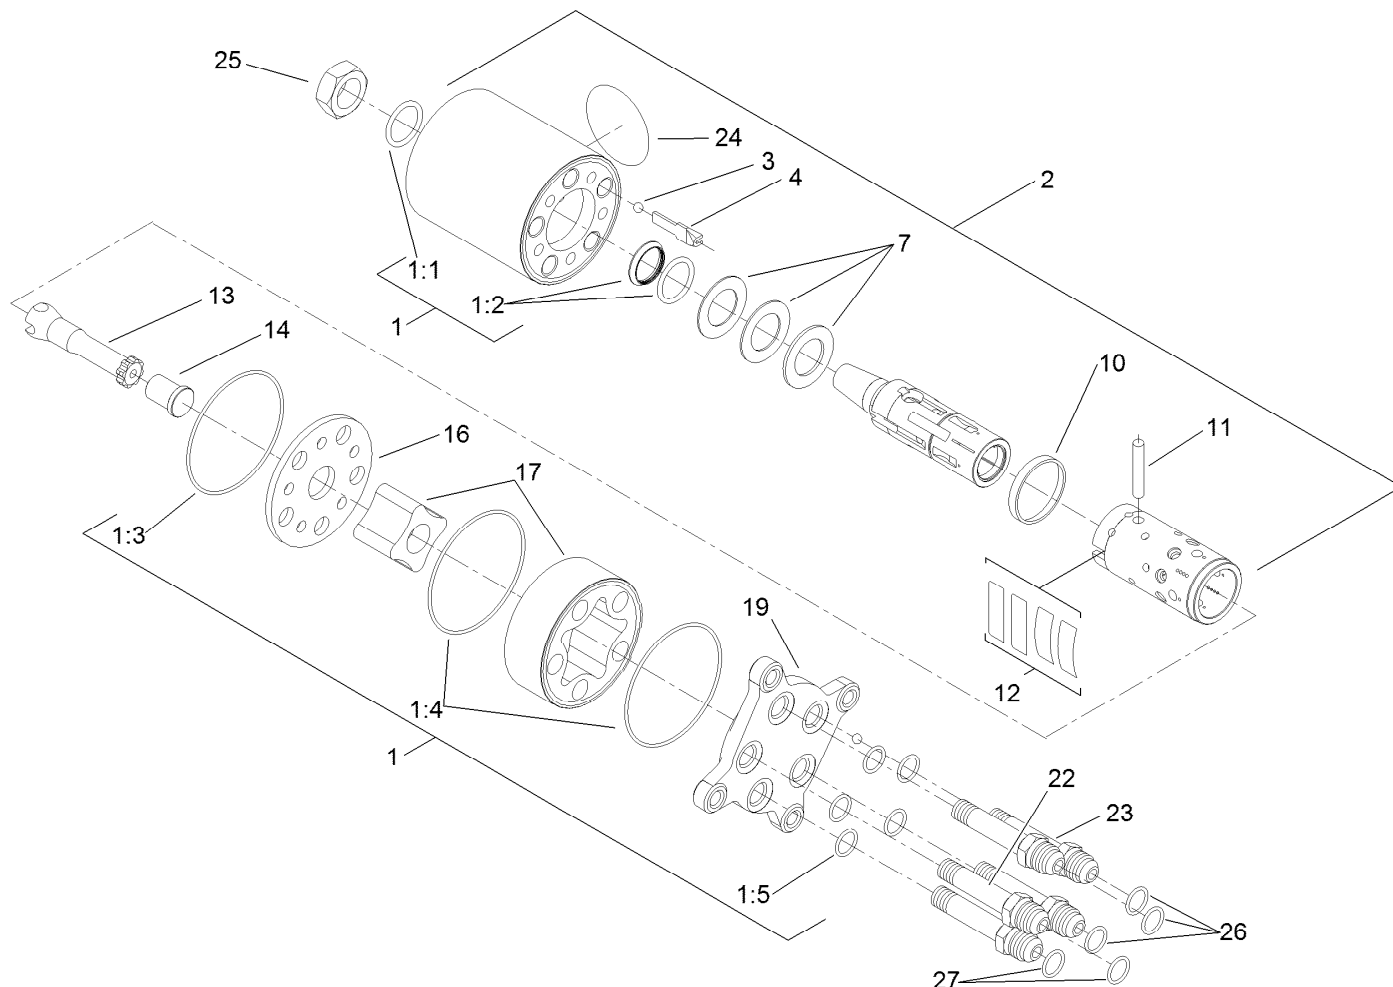 


Steering Valve Assembly No. 121-7856

Ref.	Part Number	Qty.	Description
1	106-6716	1	Seal Kit
1:1		1	Ring-Seal, Dust ●
1:2		1	Seal-Shaft ●
1:3		1	O-Ring ●
1:4		2	O-Ring ●
1:5		5	O-Ring ●
2		1	Housing ●
3		1	Ball ●
4		1	Stop-Ball ●
7		1	Bearing ASM ●
10		1	Ring ●
11		1	Pin-Cross ●

Ref.	Part Number	Qty.	Description
12		1	Springs ●
13		1	Shaft ●
14		1	Spacer ●
16		1	Plate-Distributor ●
17		1	Gearwheel Set ●
19		1	Cover-End ●
22		1	Screw-Special ●
23		4	Screw-Special ●
24		1	Plate-Name ●
25	3296-33	1	Nut-Lock, NI
26	237-22	3	O-Ring
27	237-21	2	O-Ring

 ● Not serviced separately

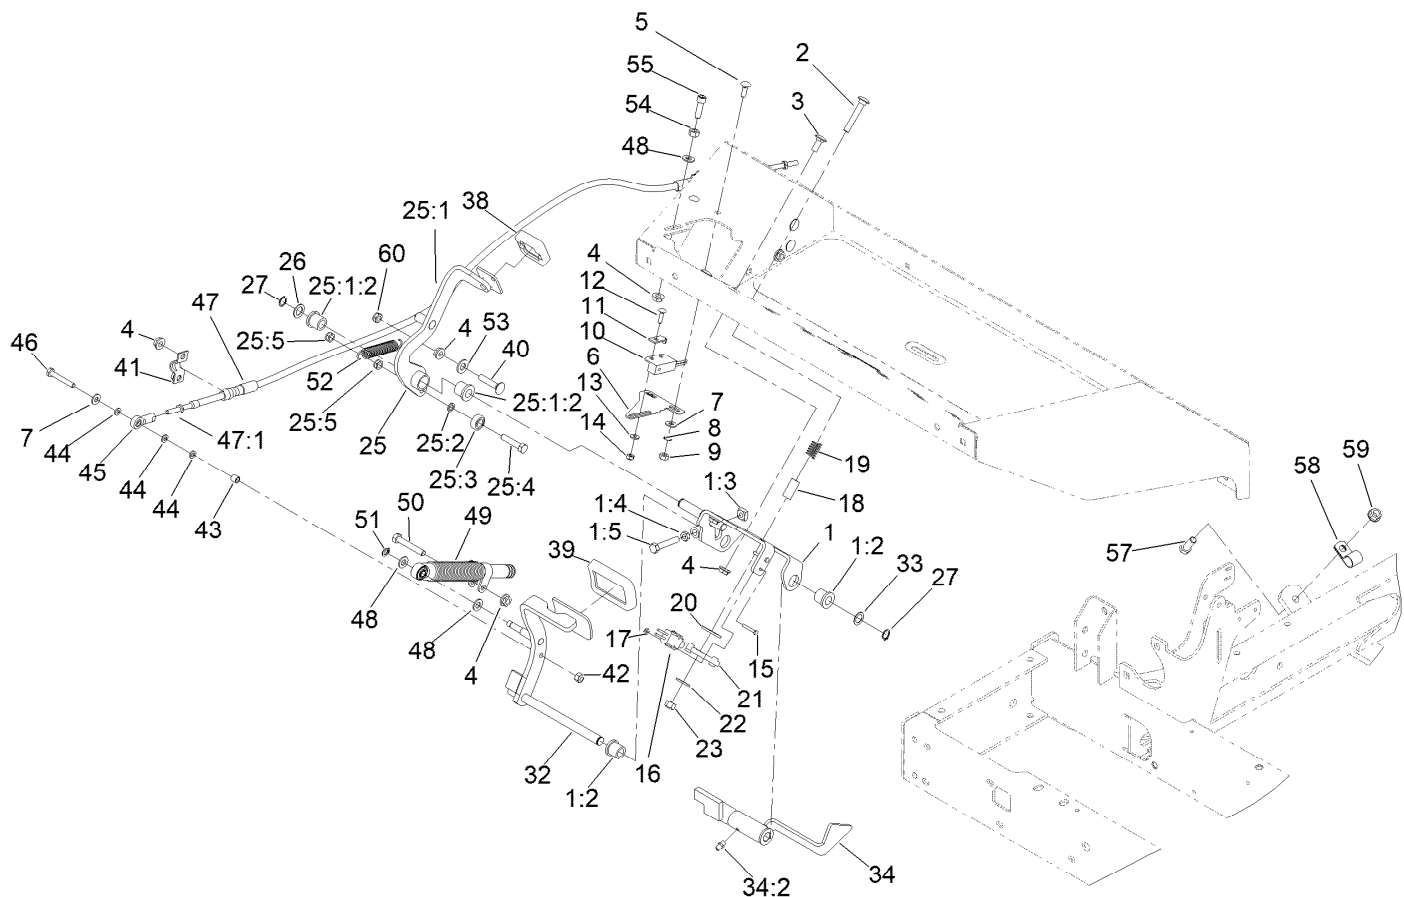


Pedal Assembly

Ref.	Part Number	Qty.	Description
1	140-6253	1	Traction Bracket ASM
1:2	256-243	2	Bearing-Flange
1:3	99-3565	1	Nut-Square
1:4	3218-2	1	Nut-Hex Jam
1:5	322-41	1	Bolt-Hex,TAP
2	3230-6	1	Bolt-CARR
3	3230-23	4	Bolt-CARR
4	32128-20	8	Nut-HF
5	3229-1	2	Screw-CARR
6	100-4871	1	Bracket-Switch, Neutral
7	3256-22	3	Washer-Flat
8	3255-7	2	Washer-Lock/EXT
9	3217-5	2	Nut-Hex
10	100-1270	1	Switch-Proximity
11	100-4872	1	Plate-Switch, Neutral
12	3229-20	1	Screw-CARR
13	3256-14	1	Washer-Flat
14	3296-2	1	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
15	32105-9	2	Screw-HH
16	95-8900	1	Switch
17	3296-9	2	Nut-Hex
18	95-8866	1	Tube-Arm, Rocker
19	65-9940	1	Spring
20	87-7270	1	Washer-Thrust
21	99-3593	1	Arm-Rocker
22	3256-3	1	Washer-Flat
23	3296-29	1	Nut-Lock, NI
25	140-6251	1	Reverse Pedal ASM
25:1		1	Reverse Pedal ASM W/Bushings ●
25:1:2	256-243	2	Bearing-Flange
25:2	75-5470	1	Spacer-Bearing
25:3	251-259	1	Bearing-Ball
25:4	322-7	1	Screw-HH
25:5	3296-47	2	Nut-Lock,NI
26	41-8440	1	Washer

 
● Not serviced separately

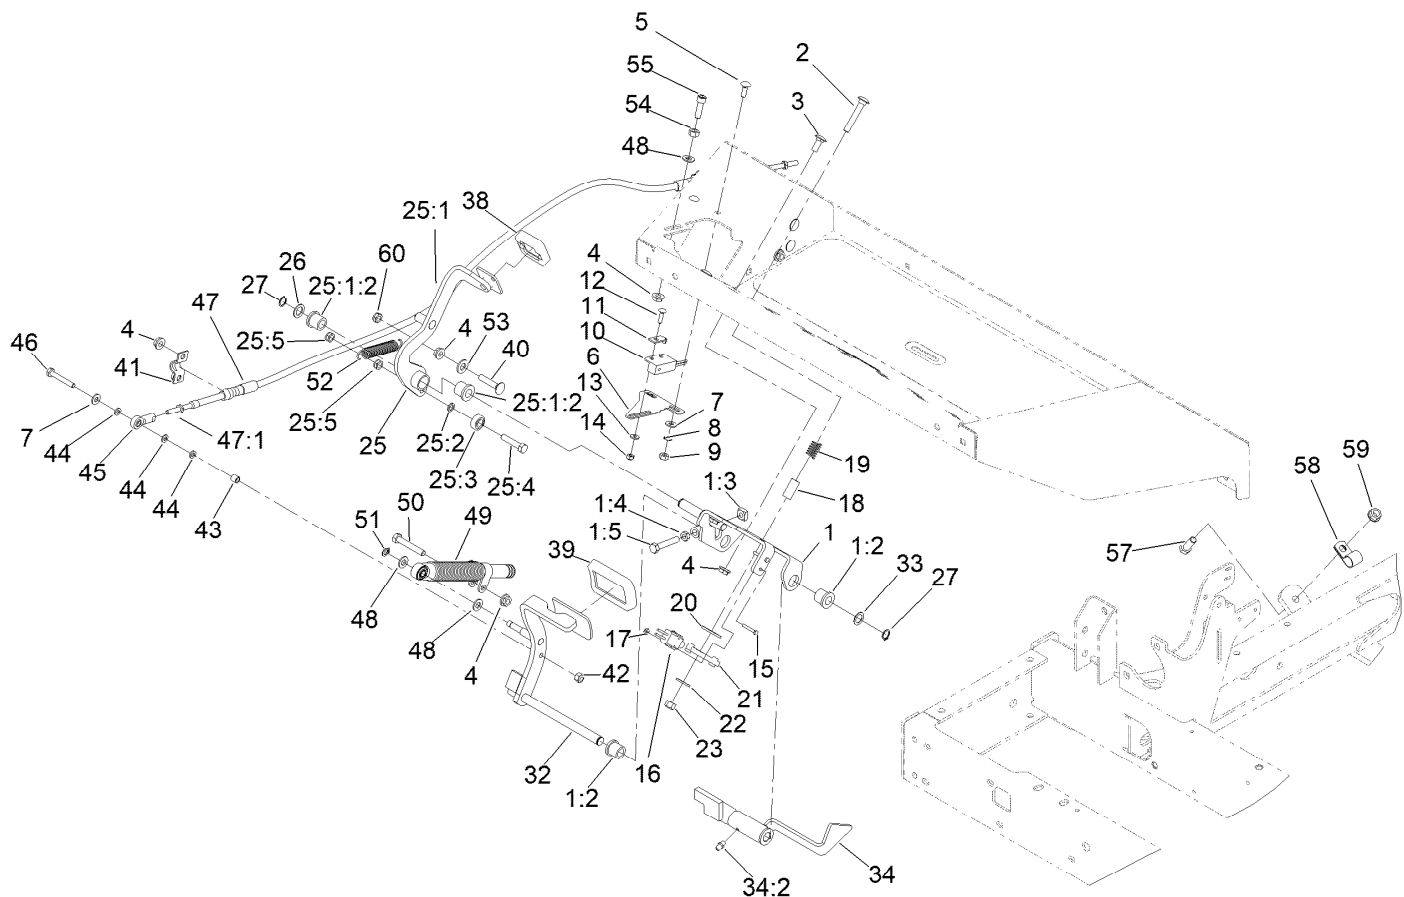

Pedal Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
27	32151-84	2	Ring-Shaft, EXT	47	100-4815	1	Cable-Control, Traction
32	140-6263	1	Traction Pedal ASM	47:1	3220-1	2	Nut-Jam
33	73-0040	1	Washer-Thrust	48	3256-23	3	Washer-Plain
34	140-6255	1	Detent Slider ASM	49	140-6248	1	Damper
34:2	302-5	1	Fitting-Grease	50	322-10	1	Screw-HH
38	74-9110	1	Pad-Pedal, Reverse	51	32151-3	1	Ring-Grip
39	74-9100	1	Pad-Pedal, Forward	52	99-3476	1	Spring-Extension
40	3230-27	1	Screw-CARR	53	3256-24	1	Washer-Plain
41	93-2092	1	Clamp-Cable	54	3217-6	1	Nut-Hex
42	3296-42	1	Nut-Lock, NI	55	3274-22	1	Screw-HSH
43	99-3545	1	Spacer	57	323-6	1	Screw-HH
44	33093-00	3	Washer-Flat	58	2412-41	1	Clamp-R
45	2411-41	1	Rod End-Ball Joint	59	3290-357	1	Nut-HSF
46	321-10	1	Screw-HH	60	3296-47	1	Nut-Lock, NI

 ● Not serviced separately

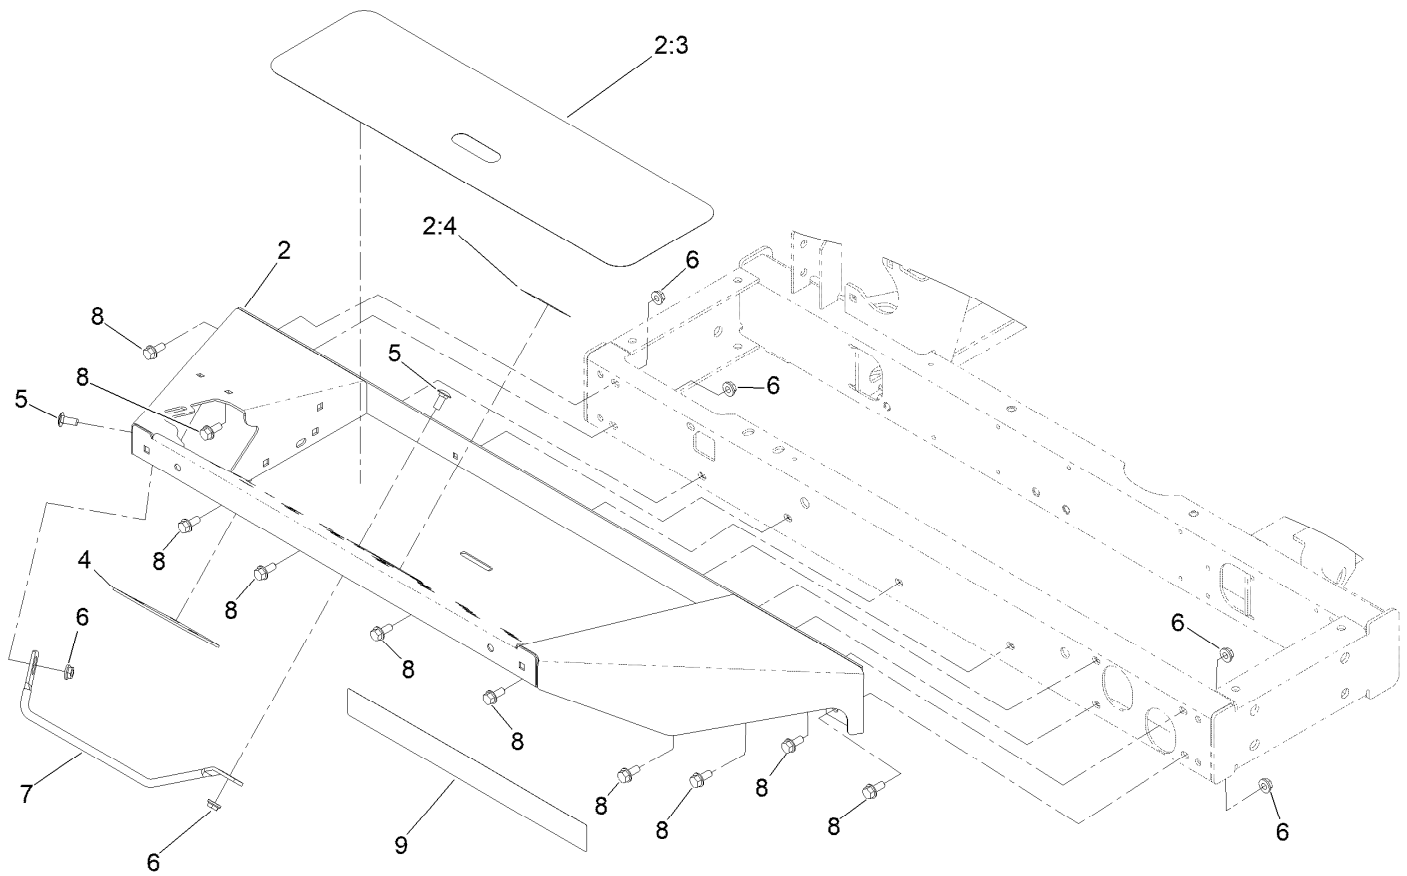

Floor Plate Assembly

Ref.	Part Number	Qty.	Description
2	106-4154	1	Floorplate ASM
2:3	99-3478	1	Tread-Foot
2:4	99-3444	1	Decal-Mow / Transport
4	106-2661-0P	1	Plate-Support
5	3230-23	2	Bolt-CARR
6	32128-20	12	Nut-HF
7	95-8893	1	Bar-Deflector
8	3234-5	10	Screw-HHF
9	99-3388	1	Decal

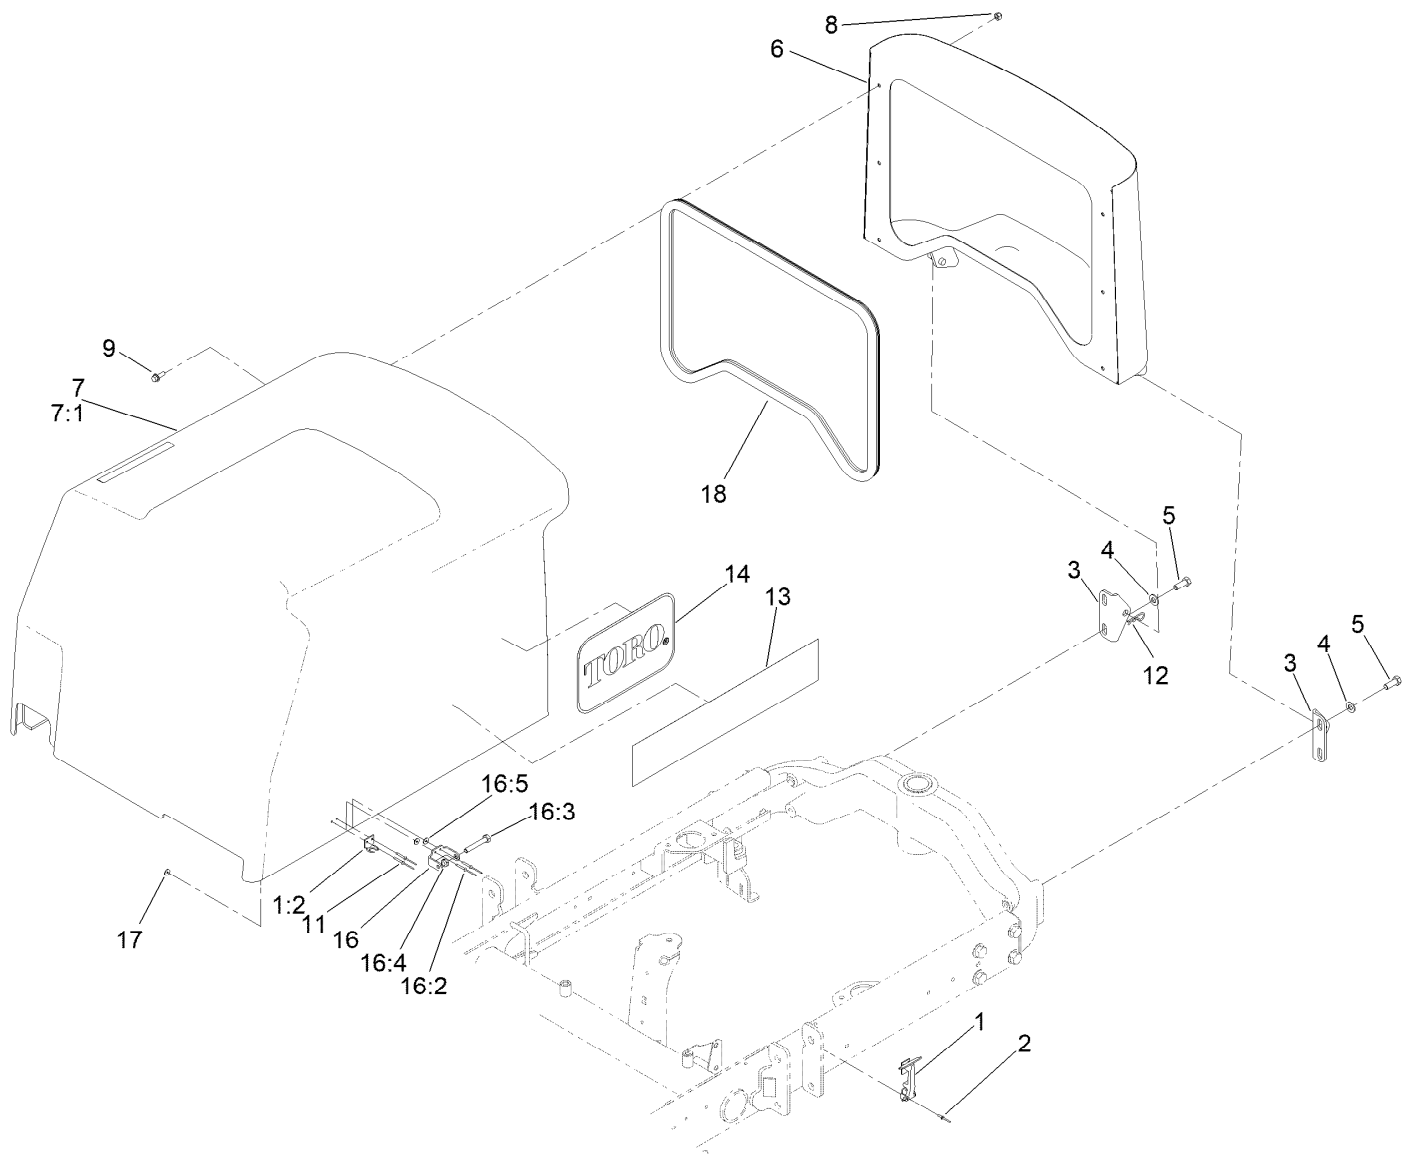 


Hood Assembly

Ref.	Part Number	Qty.	Description
1	59-9740	2	Flex Draw Latch ASM
1:2	249-40	1	Keeper
2	3290-55	4	Rivet-Pop
3	95-8728	2	Bracket-Pivot, Hood
4	3256-24	4	Washer-Plain
5	323-6	4	Screw-HH
6	95-8724-03	1	Screen-Hood
7	121-3633	1	Hood ASM
7:1		1	Hood ■
7:1:1	106-8114	1	Heat Tape Repair Kit ●
8	3296-42	6	Nut-Lock, NI
9	3234-4	6	Screw-HHF

Ref.	Part Number	Qty.	Description
11	107-0333	4	Rivet-Pop
12	3290-467	1	Pin-Hair
13	104-5153	2	Decal-Hood
14	66-6140	2	Decal
16	119-2004	1	CE Latch Kit
16:2	107-0333	2	Rivet-Pop
16:3	322-10	1	Screw-HH
16:4	3296-47	1	Nut-Lock, NI
16:5	3269-10	2	Washer-Back
17	3269-10	4	Washer-Back
18	95-8809	1	Trim-Seal

● Not illustrated

 
■ Not serviced separately

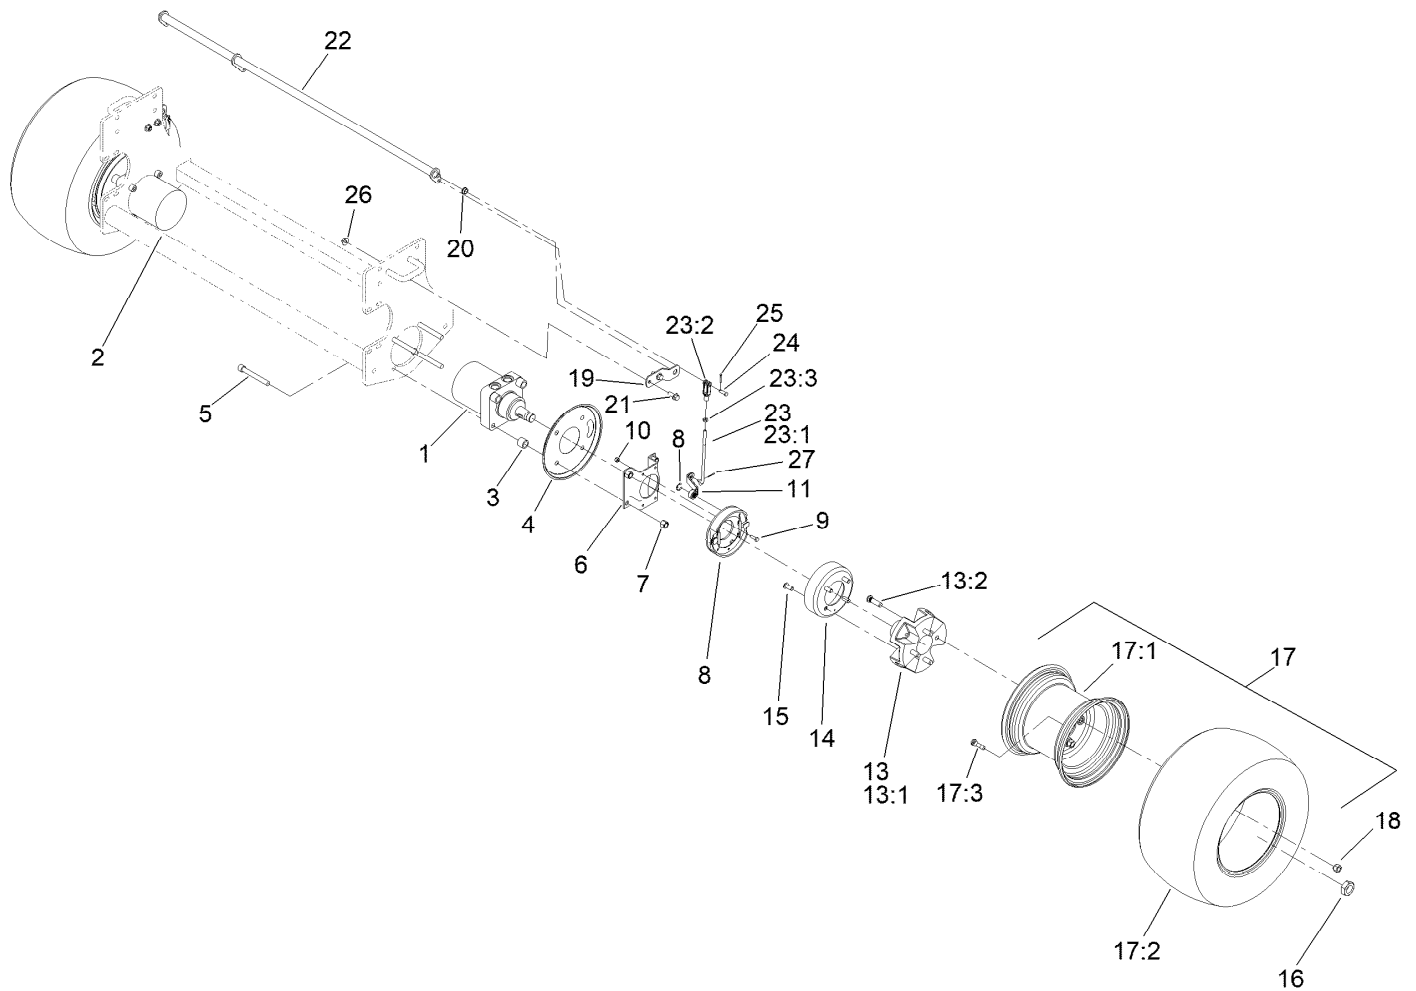

Hydraulic Drive and Wheel Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	110-8785	1	HYD Motor ASM (CCW)	17		2	Tire And Rim ASM ●
2	110-8786	1	HYD Motor ASM (CW)	17:1	121-3548	1	Rim
3	119-8238	8	Spacer-Deck Pulley	17:2	117-5125	1	Tire
4	104-0485-0P	2	Shield-Wheel	17:3	232-27	1	Stem-Valve
5	3274-99	8	Screw-HSH	18	139-2564	8	Nut-Lug
6	147-3595	2	Bracket-Brake	19	95-8683	2	Bracket-Pivot, Brake
7	3296-23	8	Nut-Lock, NI	20	256-156	2	Bushing-Flange
8	104-7705	2	Brake ASM	21	3234-11	4	Screw-HHF
9	321-5	8	Screw-HH	22	104-4625-03	1	Shaft-Pivot, Brake
10	3296-42	8	Nut-Lock, NI	23	115-6672	2	Brake Lever ASM
11	114-2726	2	Lever-Brake	23:1	104-4627	1	Rod-Adjusting
13		2	Wheel Hub/Stud ASM ●	23:2	1-303105	1	Yoke-Adjustable
13:1	104-0462	1	Hub-Wheel, Spacer	23:3	3220-2	1	Nut-Hex Jam
13:2	10-6830	4	Stud-Type, Drive	24	283-1	2	Pin-Clevis
14	104-4809	2	Drum-Brake	25	3272-10	2	Pin-Cotter
15	3274-105	8	Screw-HSBH	26	32128-43	4	Nut-Flange
16	116-1399	2	Locknut	27	3272-6	2	Pin-Cotter

 
● Not serviced separately

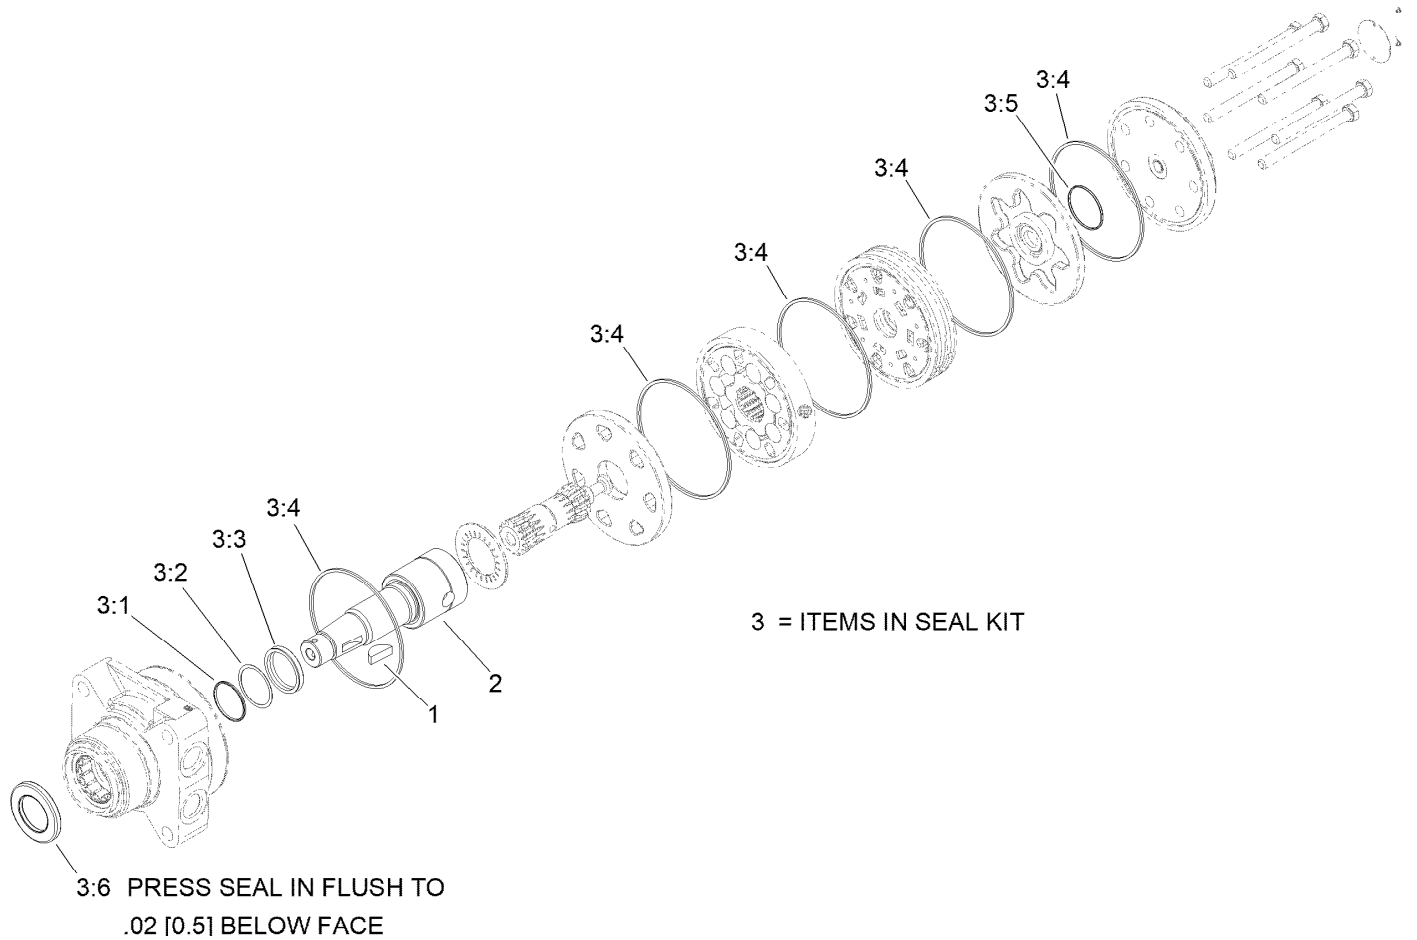

Hydraulic Motor Assembly No. 110-8785

Ref.	Part Number	Qty.	Description
1	3257-42	1	Key-Woodruff
2	99-3090	1	Shaft-Coupling
3	100-6131	1	Seal Kit
3:1		1	Ring-Back Up ●
3:2		1	Washer-Back Up ●
3:3		1	Seal-Shaft ●
3:4		5	Seal-Ring ●
3:5		1	Seal-Commutator ●
3:6		1	Seal-Dirt And Water ●

 
● Not serviced separately

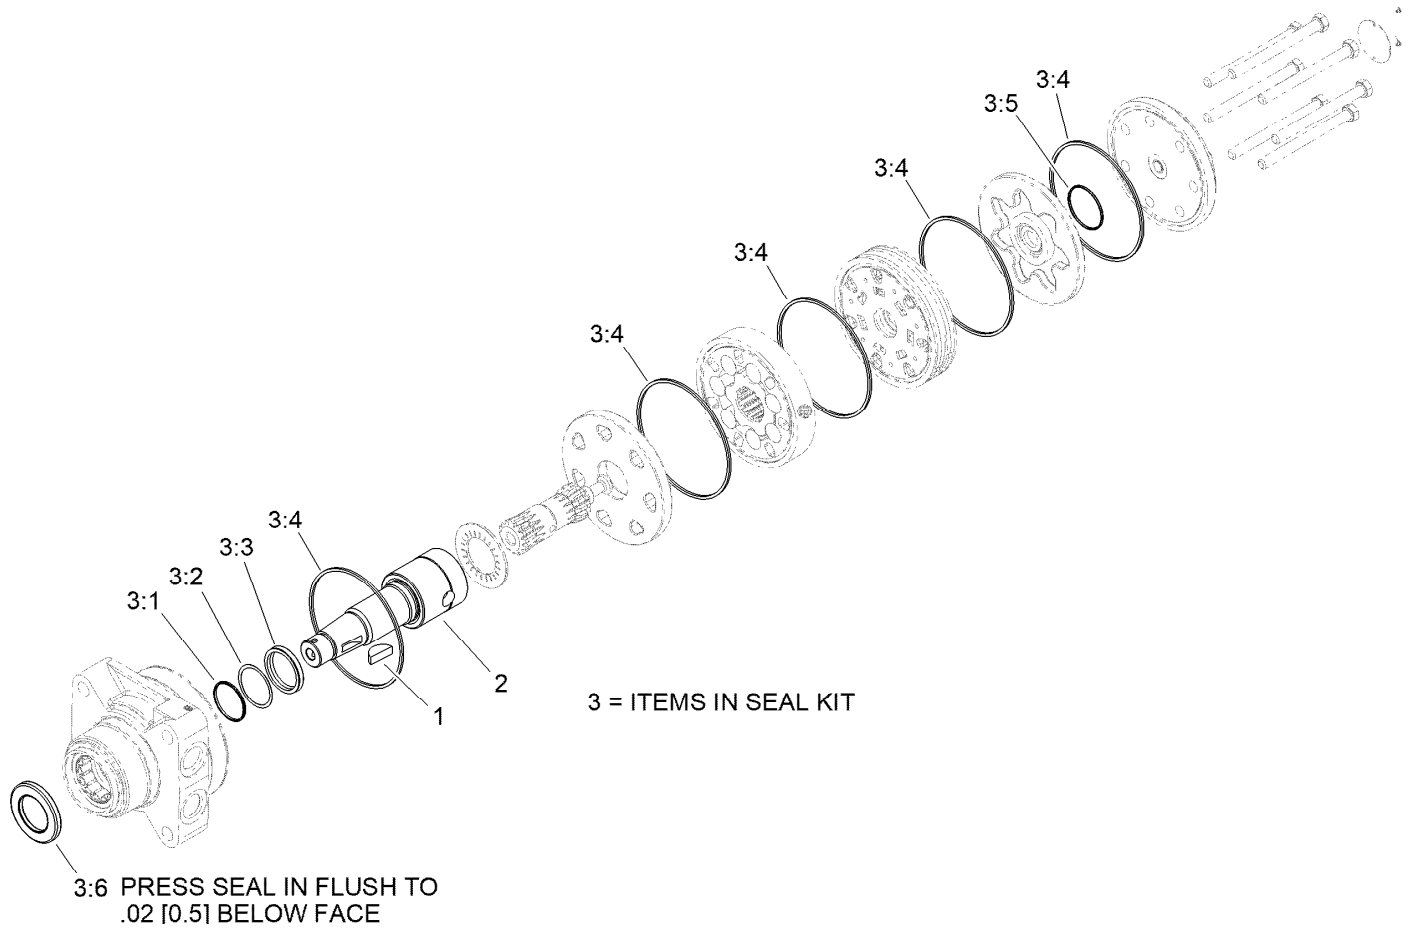

Hydraulic Motor Assembly No. 110-8786


Ref.	Part Number	Qty.	Description
1	3257-42	1	Key-Woodruff
2	99-3090	1	Shaft-Coupling
3	100-6131	1	Seal Kit
3:1		1	Ring-Back Up ●
3:2		1	Washer-Back Up ●
3:3		1	Seal-Shaft ●
3:4		5	Seal-Ring ●
3:5		1	Seal-Commutator ●
3:6		1	Seal-Dirt And Water ●

 ● Not serviced separately

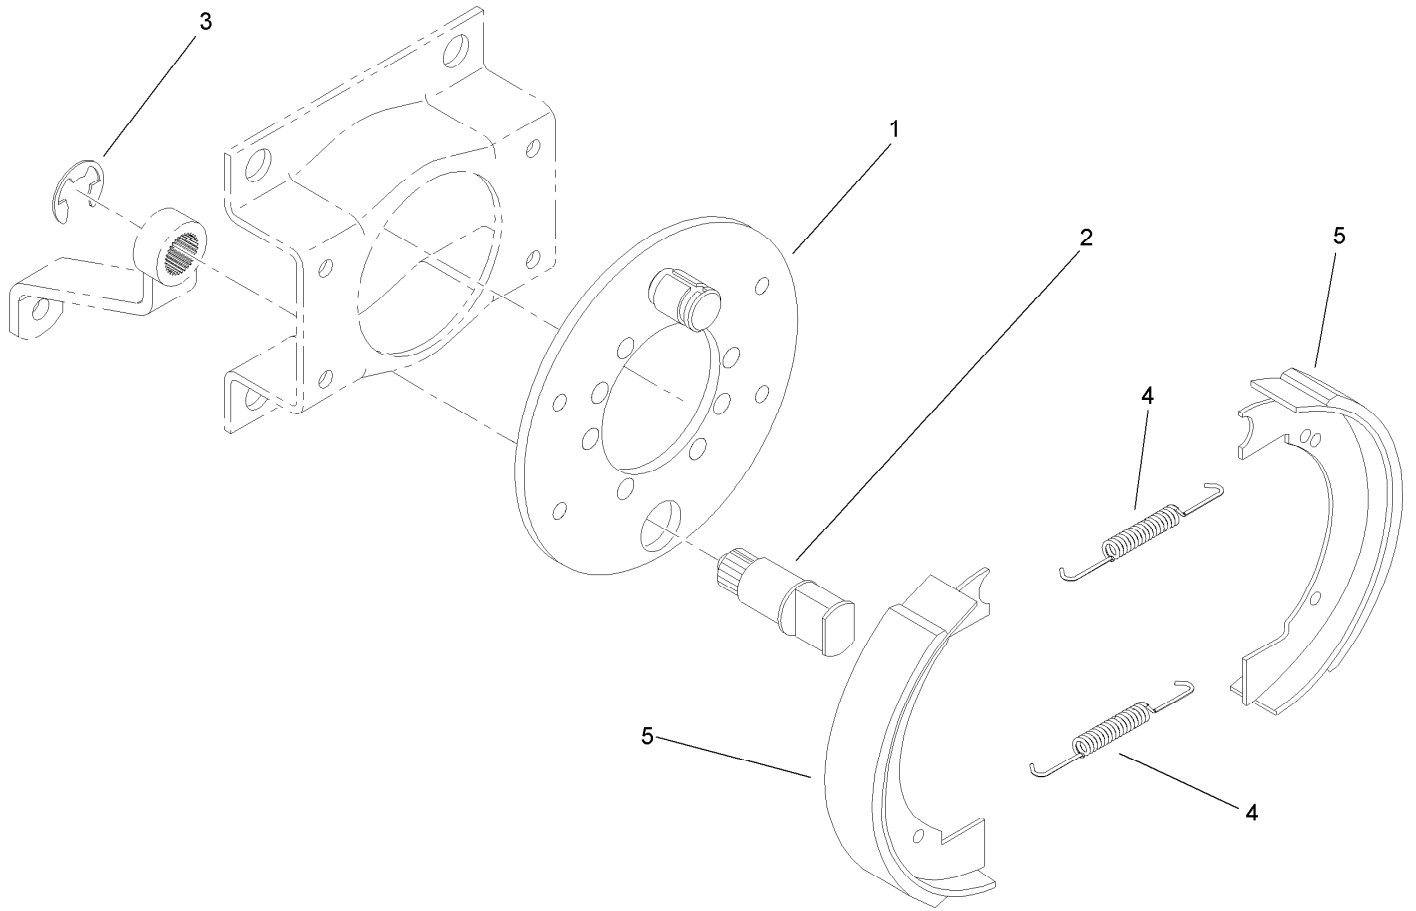

Brake Assembly No. 104-7705

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	70-9870	1	Plate-Backing
2	104-7707	1	Shaft-Cam, Brake
3	104-7706	1	E-Ring, Bowed
4	70-9880	2	Spring-Return
5	70-9840	2	Shoe-Brake

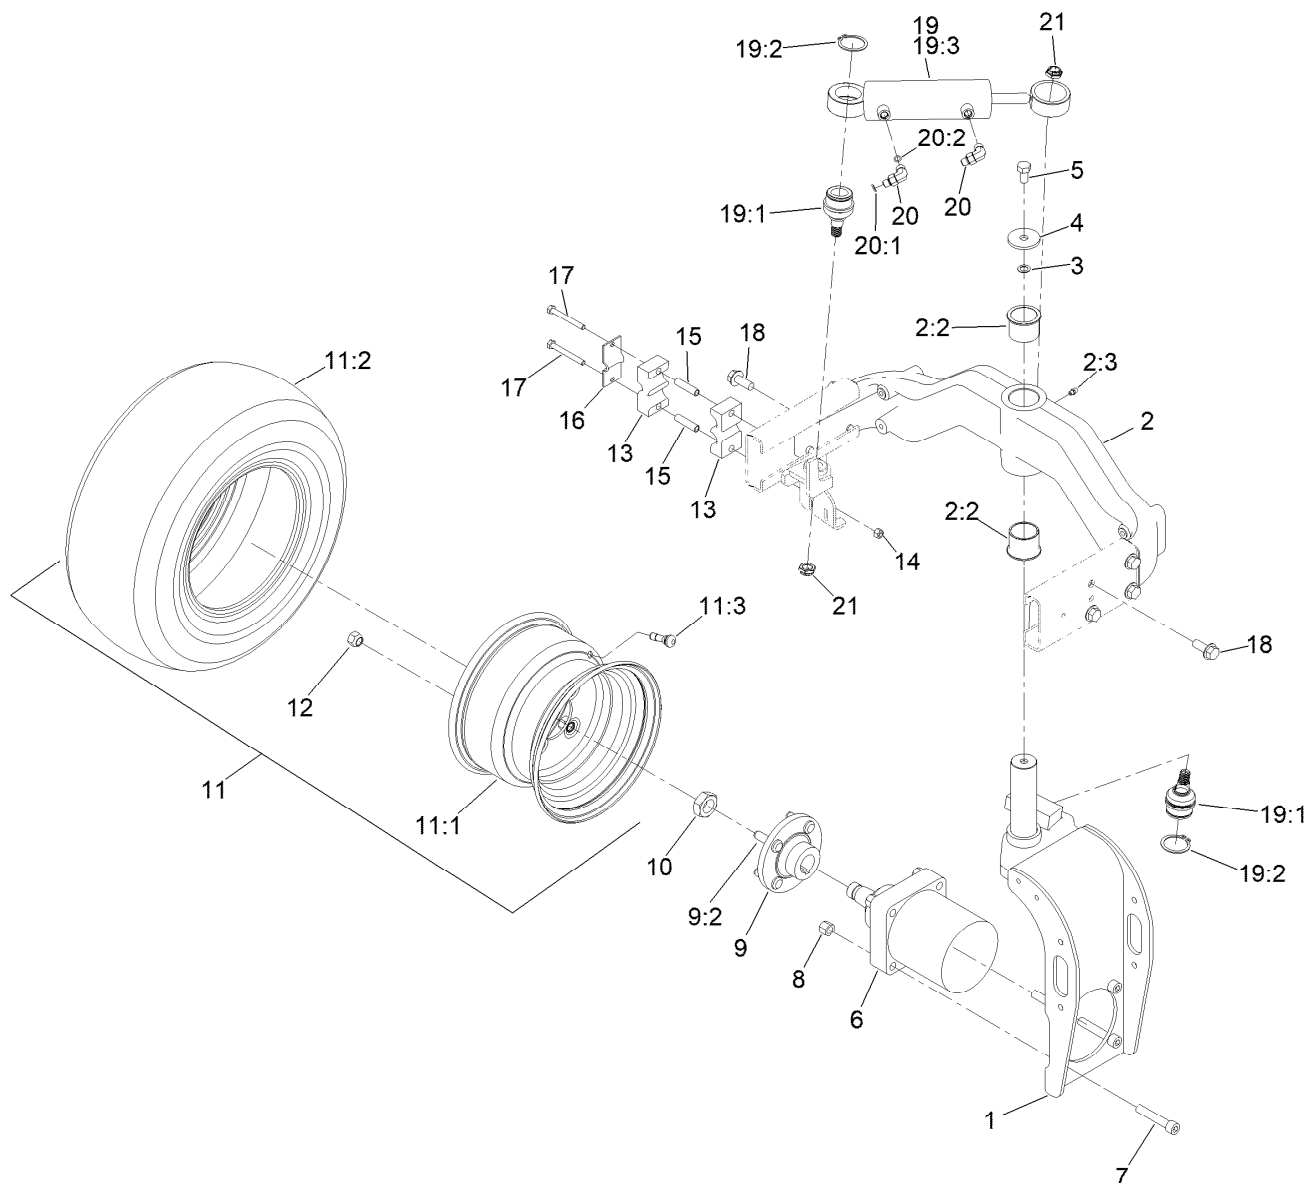 


Rear Fork and Tire Assembly

Ref.	Part Number	Qty.	Description
1	140-6293-01	1	Fork-Rear
2	127-8576	1	Rear Casting ASM
2:2	127-8572	2	Bushing-Flange
2:3	302-5	1	Fitting-Grease
3	3255-2	1	Washer-Lock, EXT
4	75-7730	1	Washer-Thrust
5	325-3	1	Screw-HH
6	95-8694	1	HYD Motor ASM
7	3274-93	4	Screw-HSH
8	3296-23	4	Nut-Lock, NI
9	18-3209	1	Wheel Hub/Stud ASM
9:2	10-6830	4	Stud-Type, Drive
10	116-1399	1	Locknut
11		1	Wheel And Tire ASM ●
11:1	117-5129	1	Rim
11:2	115-1572	1	Tire

Ref.	Part Number	Qty.	Description
11:3	232-27	1	Stem-Valve
12	139-2564	4	Nut-Lug
13	82-8170	2	Clamp
14	3296-29	2	Nut-Lock, NI
15	93-7960	2	Spacer
16	93-7961	1	Clamp-Drain, Case
17	322-13	2	Screw-HH
18	3234-38	8	Screw-HHF
19		1	Steering Cylinder ASM ●
19:1	121-3605	2	Ball Joint
19:2	32151-104	2	Ring-Retaining, External
19:3	121-3653	1	Cylinder-HYD
20	340-132	2	Fitting-Elbow, 90 DEG
20:1	237-78	1	O-Ring
20:2	237-21	1	O-Ring
21	121-3611	2	Nut-Hex, Flexstop

 
● Not serviced separately

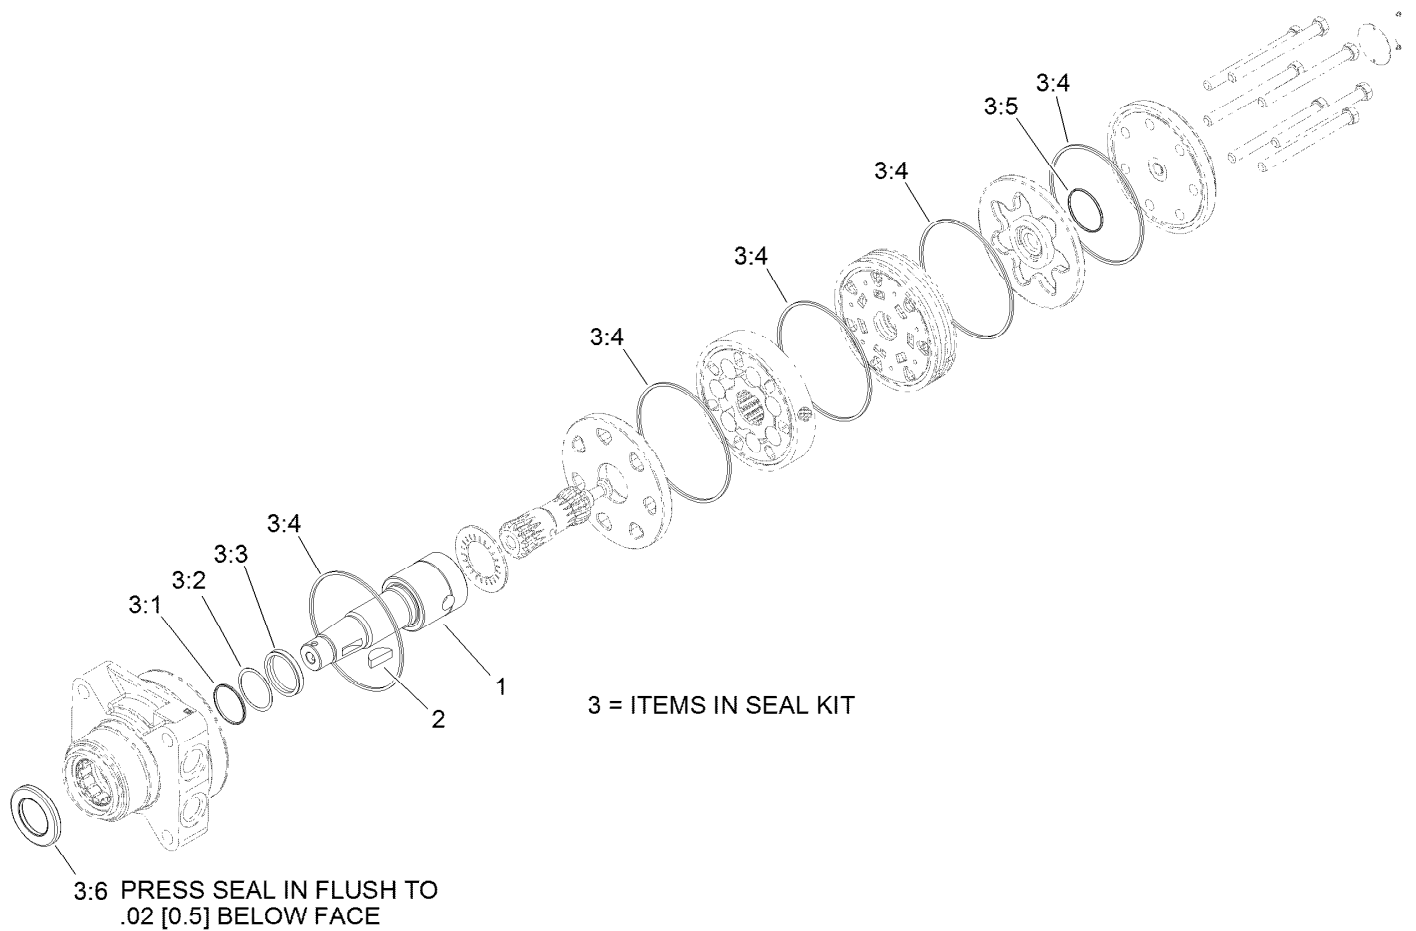

Hydraulic Motor Assembly No. 95-8694

Ref.	Part Number	Qty.	Description
1	99-3090	1	Shaft-Coupling
2	3257-42	1	Key-Woodruff
3	100-6131	1	Seal Kit
3:1		1	Ring-Back Up ●
3:2		1	Washer-Back Up ●
3:3		1	Seal-Shaft ●
3:4		5	Seal-Ring ●
3:5		1	Seal-Commutator ●
3:6		1	Seal-Dirt And Water ●

 
● Not serviced separately

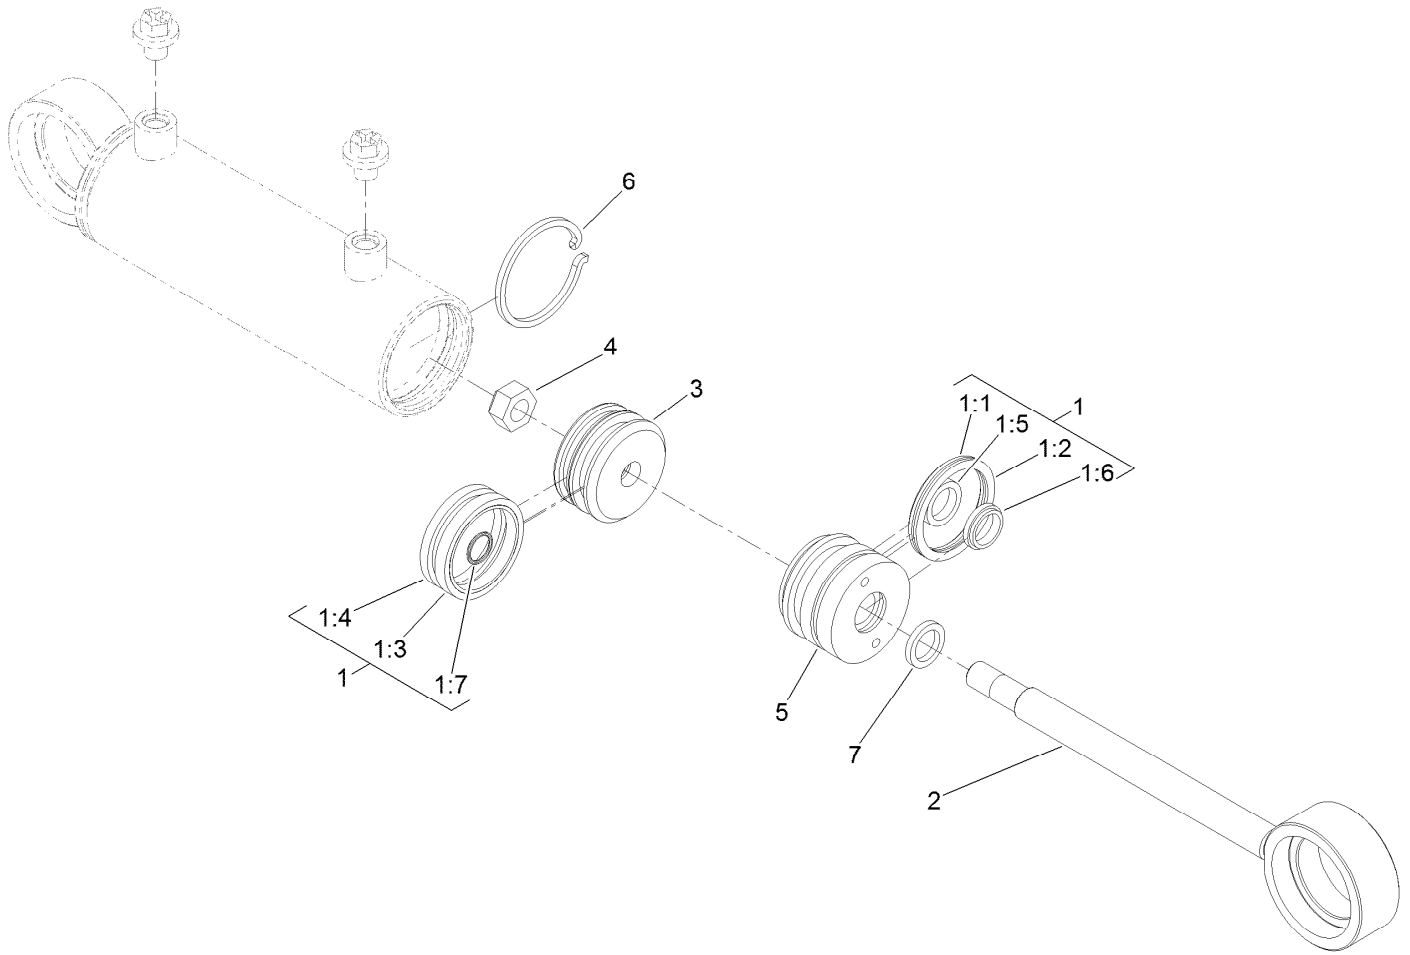

Hydraulic Cylinder Assembly No. 121-3653

Ref.	Part Number	Qty.	Description
1	136-3278	1	Seal Kit
1:1		1	O-Ring ●
1:2		1	Backup ●
1:3		1	Psp Seal ●
1:4		1	Wear Ring ●
1:5		1	Bt Seal ●
1:6		1	Dust Seal ●
1:7		1	O-Ring ●
2		1	Rod ●
3		1	Piston ●
4		1	Head ●
5		1	Lock Nut ●
6		1	Retaining Ring ●
7		1	Square O-Ring ●

 
● Not serviced separately

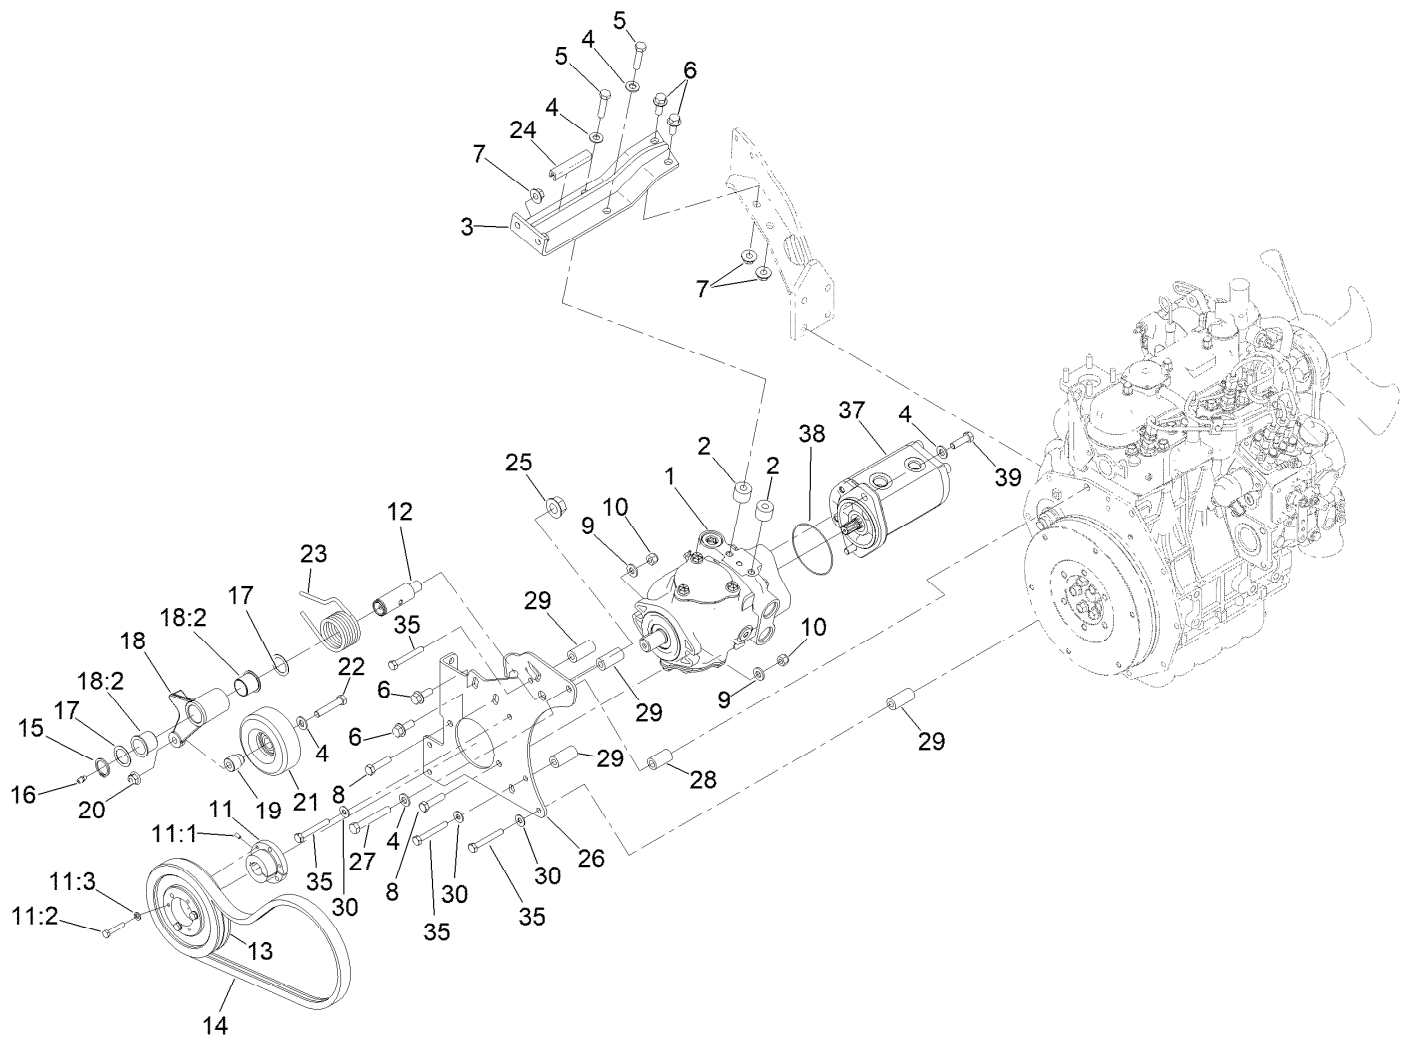

Tandem Hydraulic Pump Assembly

Ref.	Part Number	Qty.	Description
1	104-4890	1	Piston Pump ASM
2	99-3440	2	Spacer
3	99-3436-0P	1	Support-Pump
4	3256-24	6	Washer-Plain
5	323-19	2	Screw-HH
6	3234-11	4	Screw-HHF
7	32128-43	4	Nut-Flange
8	323-8	2	Screw-HH
9	100-4852	2	Washer-Hardened
10	3296-39	2	Nut-Lock, NI
11	93-6842	1	Bushing-Lock, Taper
11:1	3245-36	1	Screw-Set, HSH
11:2	321-13	3	Screw-HH
11:3	3253-3	3	Washer-Lock
12	99-3529	1	Shaft-Pivot, Idler
13	93-6841	1	Pulley
14	95-8730	1	V-Belt
15	32151-36	1	Ring-Retaining
16	302-5	1	Fitting-Grease

Ref.	Part Number	Qty.	Description
17	74-1810	2	Washer
18	137-1653	1	Idler Arm ASM
18:2	126-1963	2	Bushing-Pivot
19	95-8806	1	Spacer
20	104-8301	1	Nut-HF, NI
21	95-8802	1	Pulley-Idler
22	323-10	1	Screw-HH
23	95-8917	1	Spring-Torsion
24	70-2041	1	Trim - Edge
25	32128-54	1	Nut-HF
26	95-8933-0P	1	Plate - Pump Mount *b
27	42-9370	1	Screw-HH
28	95-8736	1	Spacer
29	95-8941	4	Spacer-Mount, Pump
30	87-8640	3	Washer-Flat
35	33114-060	4	Screw-HH
37	136-3743	1	Pump-Gear
38	60-3520	1	O-Ring
39	323-7	2	Screw-HH

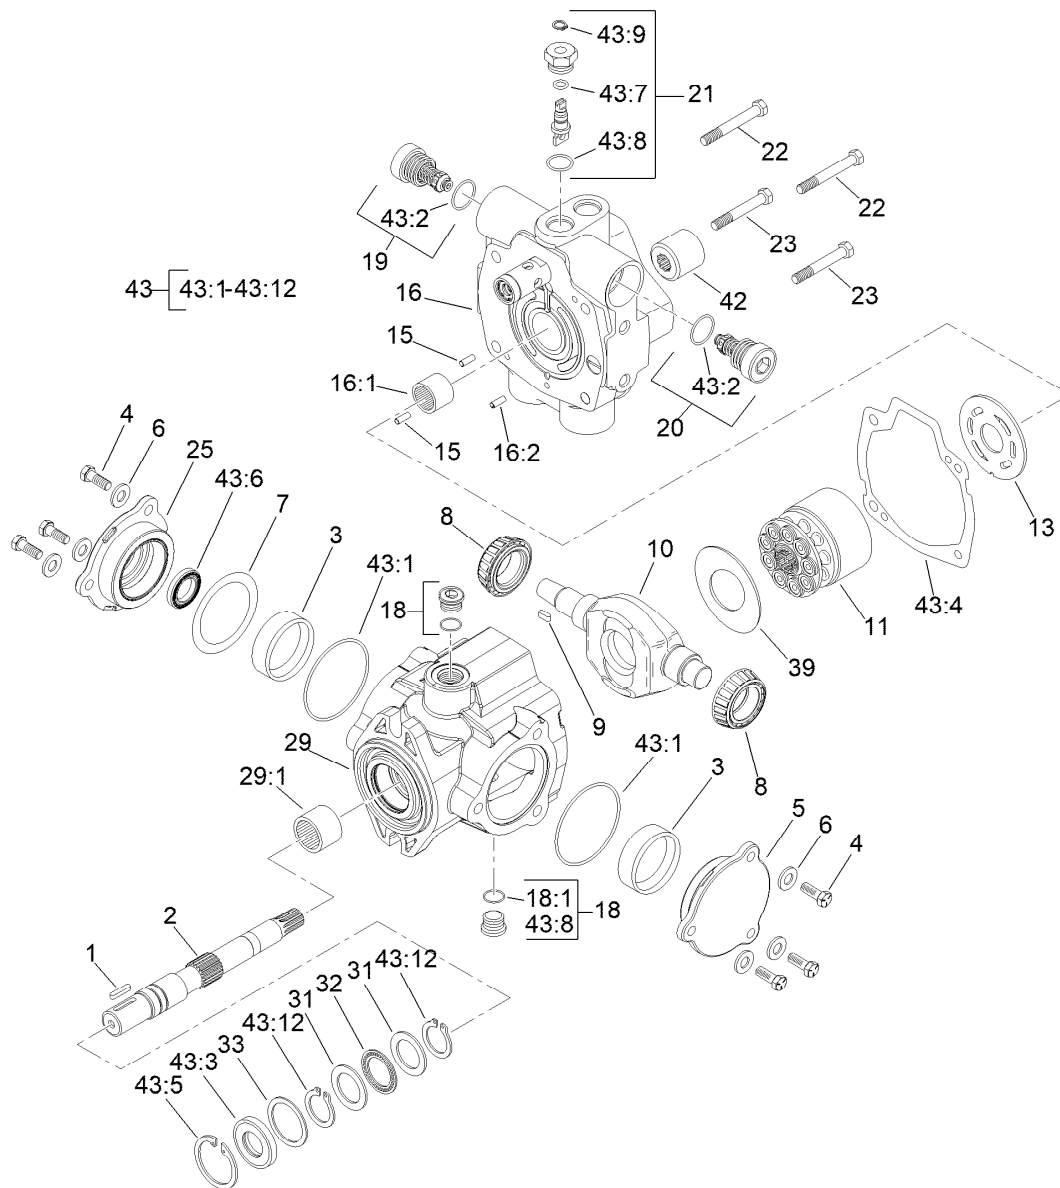 


Hydraulic Pump Assembly No. 104-4890

Ref.	Part Number	Qty.	Description
1	94-3645	1	Key
2	94-6359	1	Shaft-Drive
3	104-4046	2	Bearing-Cup
4	98-4640	6	Screw-Cap
5	98-4644	1	Plate-Cover
6	105-9762	6	Washer
7	100-3182	2	Shim Kit
8	98-4639	2	Bearing-Cone
9	94-3646	1	Key
10	104-4888	1	Swashplate
11	76-6070	1	Rotating Kit
13	104-0429	1	Plate-Valve
15	76-6150	2	Pin-Dowel
16	105-3813	1	Endcover Sub ASM
16:1	94-6368	1	Bearing
16:2		1	Pin-Roll ■
18	74-9280	2	Plug ASM
18:1		1	O-Ring ■

Ref.	Part Number	Qty.	Description
19	104-4889	1	Relief Valve ASM
20	105-3812	1	Valve-Check
21	105-3811	1	Valve-Bypass
22	76-6170	2	Capscrew
23	76-6160	2	Capscrew
25	98-4645	1	Plate-Cover
29	100-3176	1	Housing ASM
29:1	94-6363	1	Bearing
31	252-71	2	Washer-Thrust
32	252-66	1	Bearing-Thrust
33	33-3720	1	Washer
39	98-4635	1	Insert-Plate, Cam
42	74-9040	1	Coupler
43	120-5754	1	Seal Kit
43:1		2	O-Ring ■
43:2		2	O-Ring ■
43:3		1	Seal-Shaft ■
43:4		1	Gasket ■

● Not illustrated

 ■ Not serviced separately

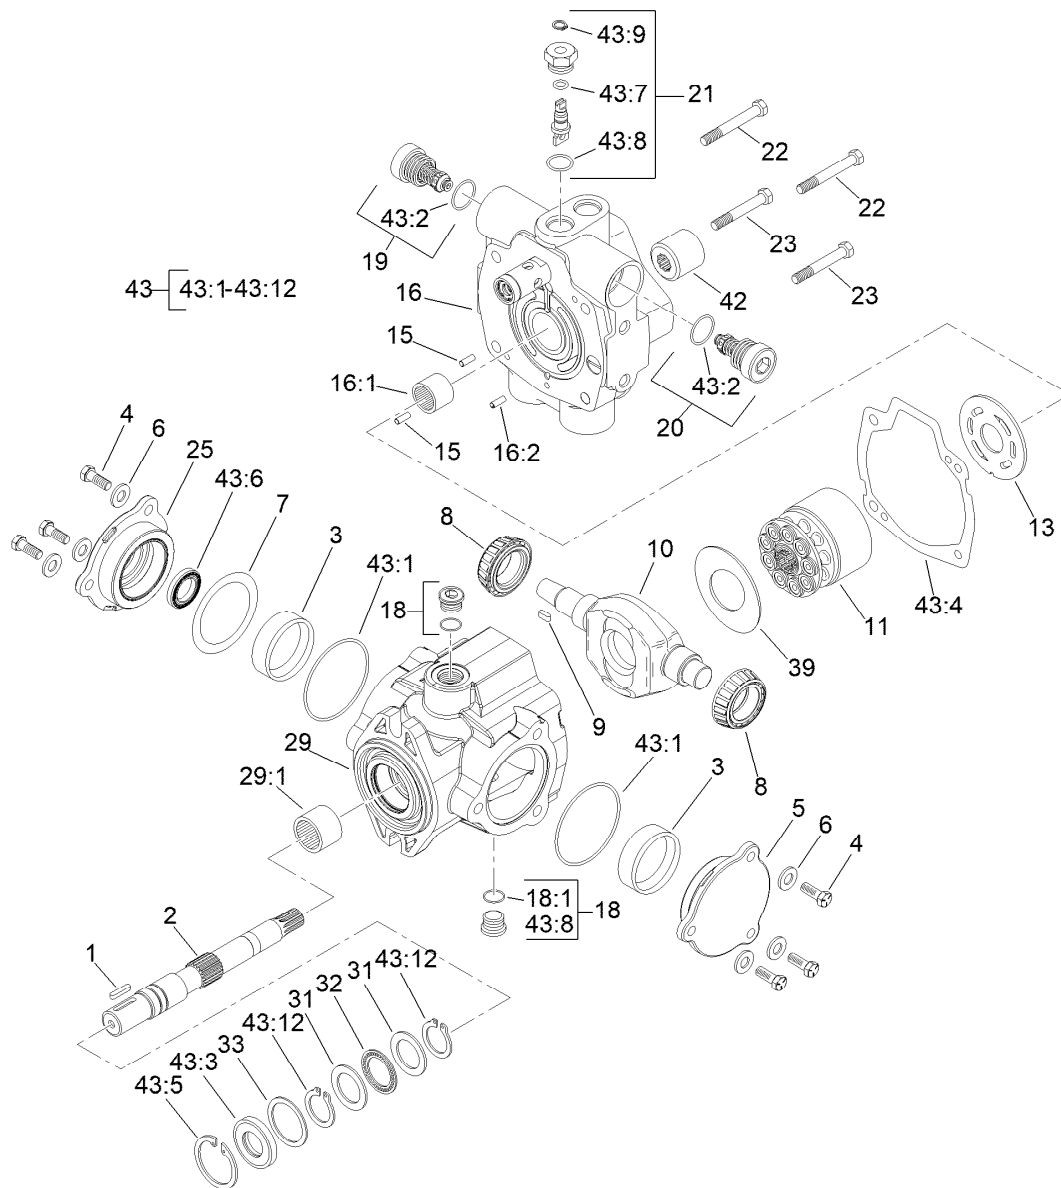


Hydraulic Pump Assembly No. 104-4890 (continued)

Ref.	Part Number	Qty.	Description
43:5		1	Ring-Retaining ■
43:6		1	Seal-Shaft ■
43:7		1	O-Ring ■
43:8		5	O-Ring ■
43:9		1	Ring-Retaining ■

Ref.	Part Number	Qty.	Description
43:10		1	O-Ring ●■
43:11		1	O Ring-Molded ●■
43:12		2	Ring-Retaining ■
43:13		1	O-Ring ■●

● Not illustrated

 
■ Not serviced separately

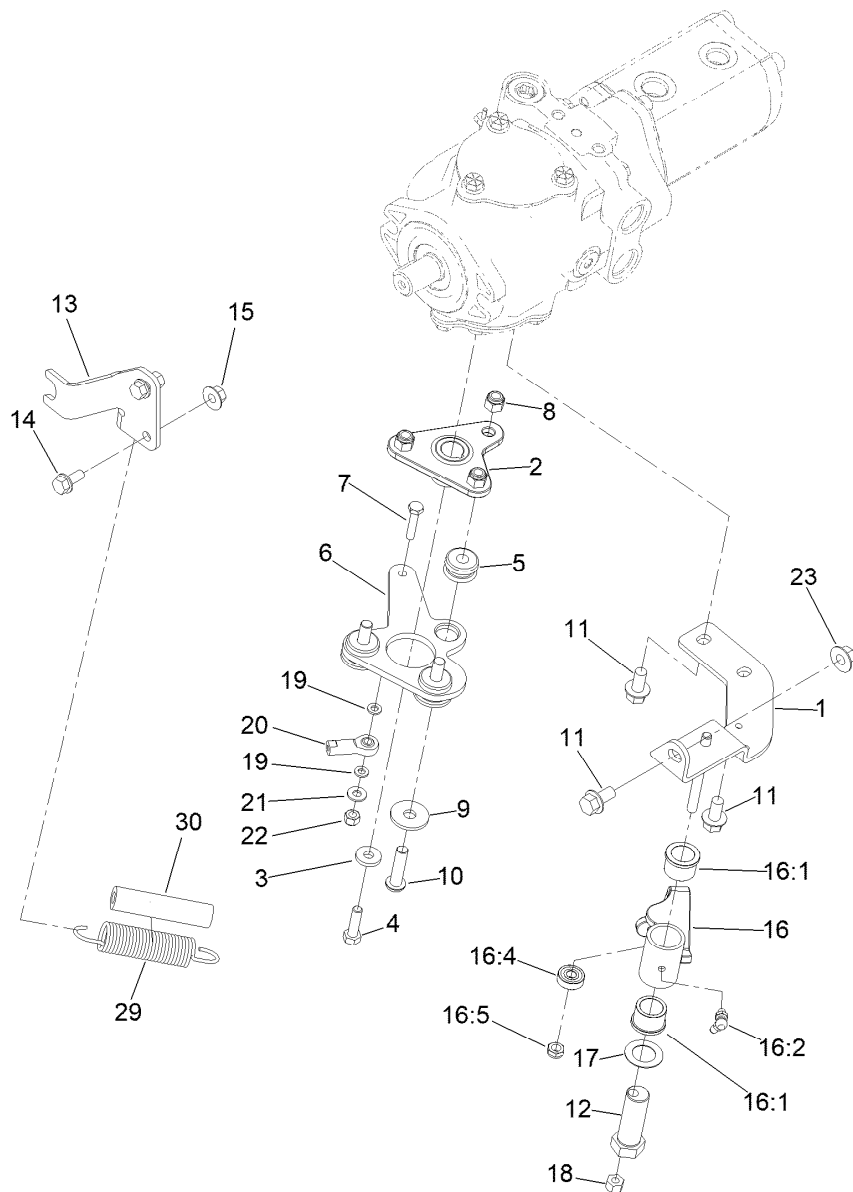

Tandem Pump Mount Assembly

Ref.	Part Number	Qty.	Description
1	95-8960-0P	1	Bracket-Neutral
2	120-5566	1	Hub
3	88-7200	1	Washer-Flat
4	3210-6	1	Screw-HH
5	63-9750	3	Mount
6	99-3594-0P	1	Lever-Pump
7	321-8	1	Screw-HH
8	3296-39	3	Nut-Lock, NI
9	2844	3	Washer
10	95-3857	3	Screw-HSBH
11	3234-1	3	Screw-HHF
12	76-8640	1	Stud-Traction
13	104-0464-03	1	Bracket-Support, Cable
14	3234-5	2	Screw-HHF
15	32128-44	2	Nut


Ref.	Part Number	Qty.	Description
16	140-6168	1	Neutral Arm ASM
16:1	256-113	2	Bushing-Flange
16:2	302-60	1	Fitting-Grease
16:4	251-259	1	Bearing-Ball
16:5	3296-47	1	Nut-Lock, NI
17	3-6498	1	Washer-Thrust
18	3296-29	1	Nut-Lock, NI
19	33093-00	2	Washer-Flat
20	2411-41	1	Rod End-Ball Joint
21	3256-22	1	Washer-Flat
22	3296-42	1	Nut-Lock, NI
23	32128-43	1	Nut-Flange
29	145-5262	1	Spring-Extension
30	99-3556	1	Hose

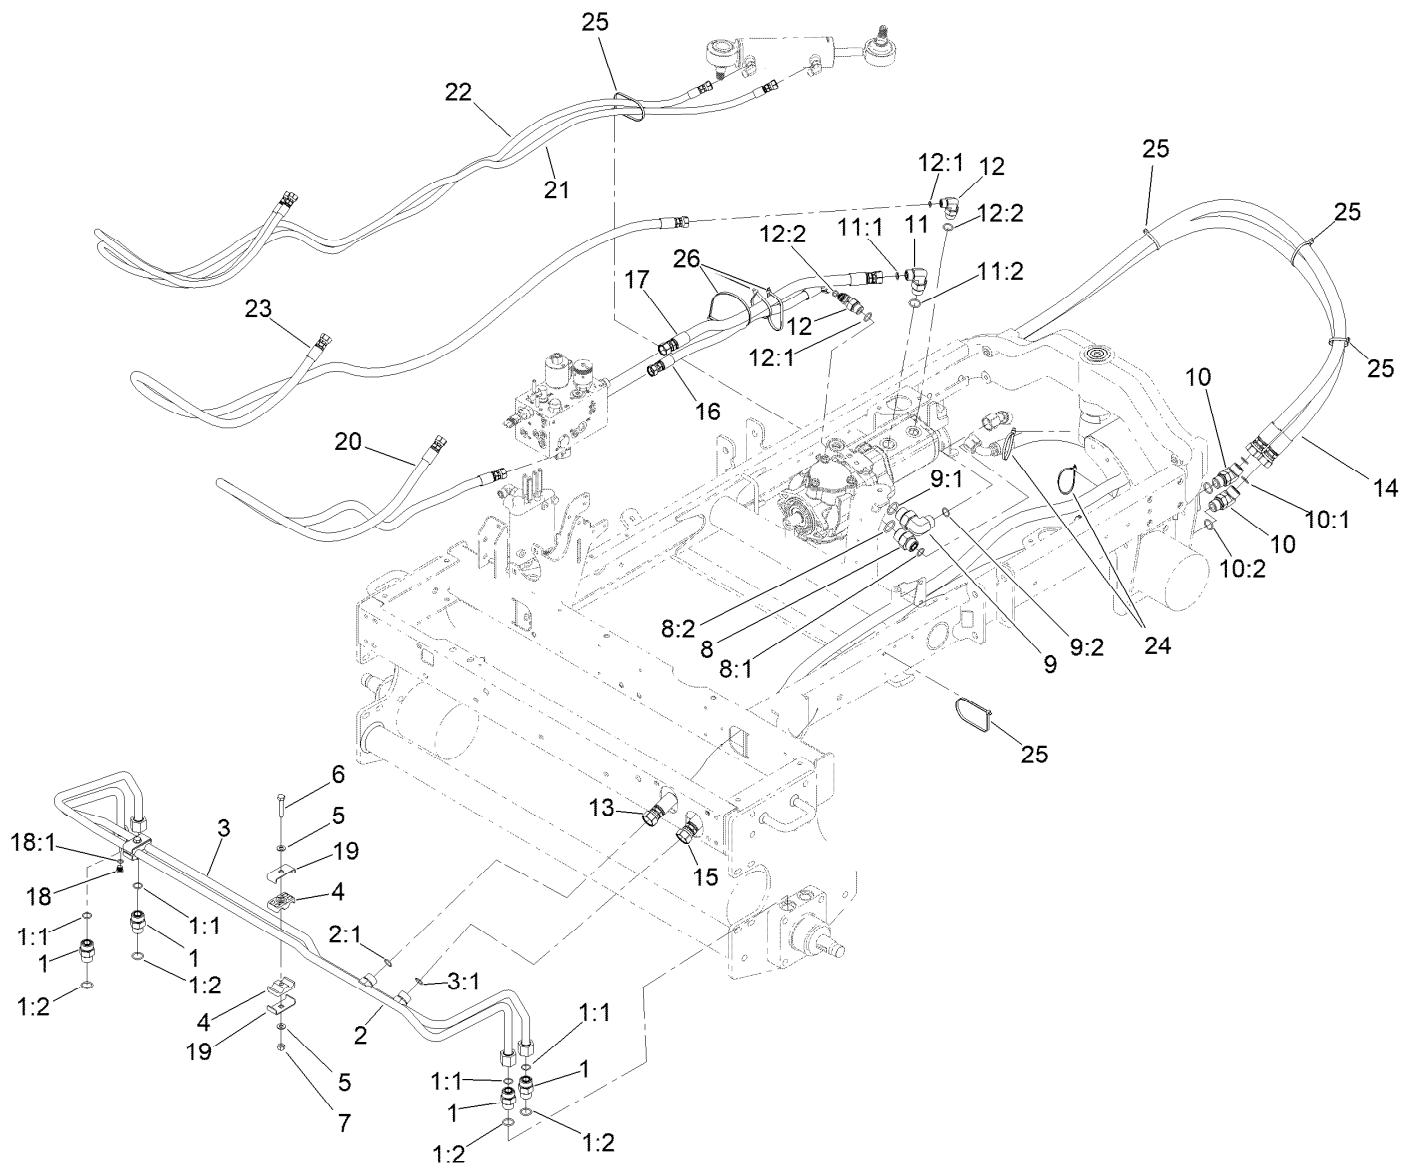 

Traction and Steering Circuit Assembly

Ref.	Part Number	Qty.	Description
1	340-7	4	Fitting-Straight
1:1	237-65	1	O-Ring
1:2	237-80	1	O-Ring
2	95-8783	1	Tube ASM
2:1	237-65	1	O-Ring
3	95-8784	1	Tube ASM
3:1	237-65	1	O-Ring
4	56-7971	4	Clamp-Tube
5	3256-23	4	Washer-Plain
6	322-9	2	Screw-HH
7	3296-29	2	Nut-Lock, NI
8	340-8	1	Fitting-Straight
8:1	237-65	1	O-Ring
8:2	237-81	1	O-Ring
9	340-139	1	Fitting-Elbow 90
9:1	237-81	1	O-Ring
9:2	237-65	1	O-Ring
10	340-14	2	Fitting-HYD, 45 DEG
10:1	237-65	1	O-Ring
10:2	237-80	1	O-Ring
11	340-105	1	Fitting-Elbow, 90 DEG

Ref.	Part Number	Qty.	Description
11:1	237-80	1	O-Ring
11:2	237-30	1	O-Ring
12	340-18	2	Fitting-HYD, 90 DEG
12:1	237-79	1	O-Ring
12:2	237-22	1	O-Ring
13	105-1221	1	Hose ASM
14	105-1222	1	Hose ASM
15	105-1214	1	Hose-HYD
16	106-4197	1	Hose ASM
17	161-8376	1	Hose ASM
18	353-990	1	Plug ASM
18:1	237-78	1	O-Ring
19	119-1419	4	Plate-Clamp
20	95-8842	1	Hose-HYD
21	95-8845	1	Hose ASM
22	95-8844	1	Hose ASM
23	147-6064	1	Hose ASM
24	3290-378	2	Tie-Cable
25	3290-379	5	Tie-Cable
26	3334-945	3	Tie-Cable

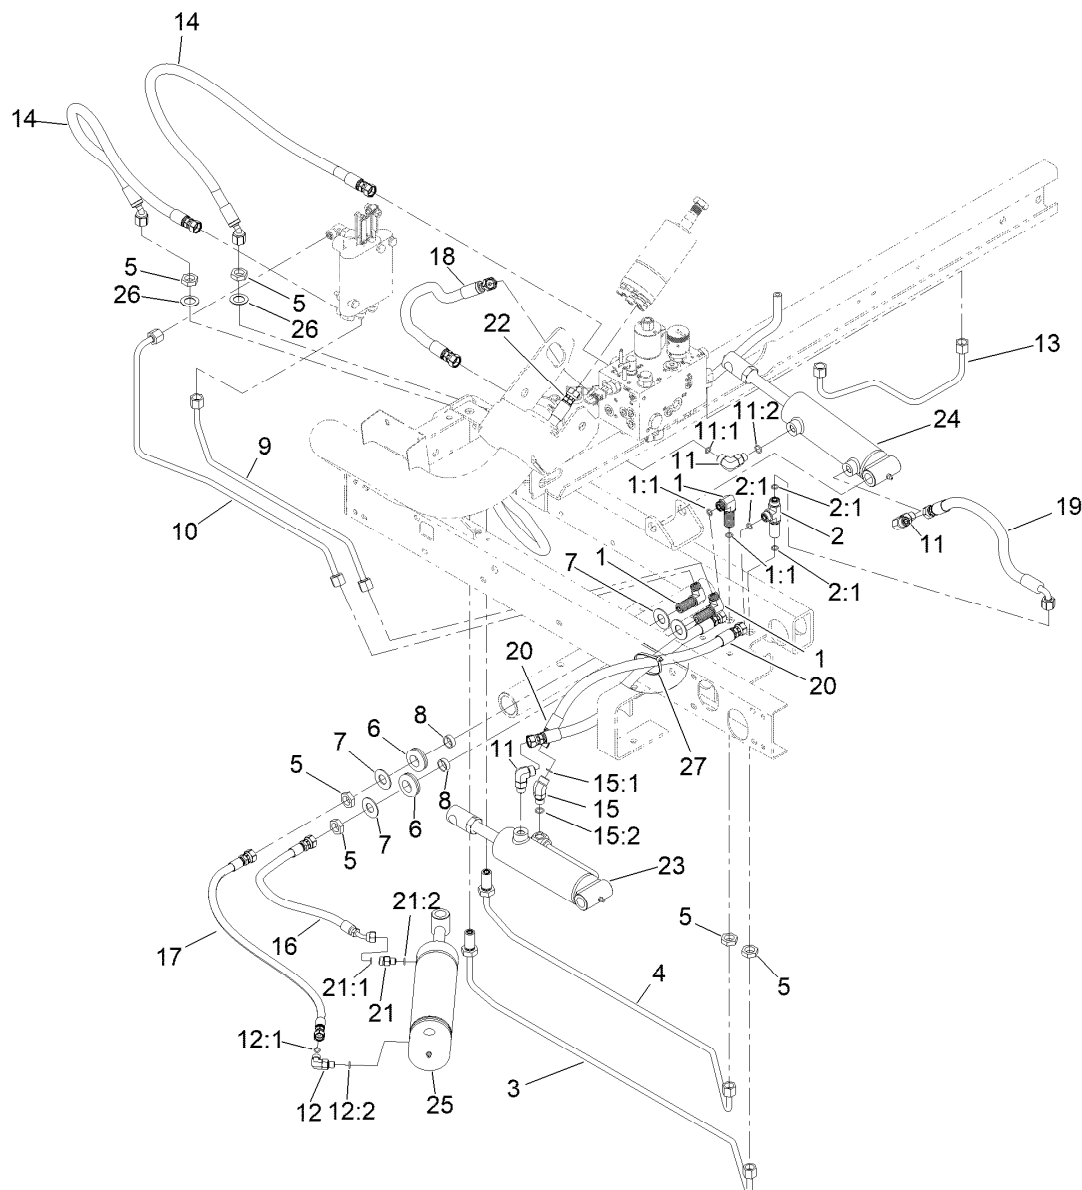 


Lift Circuit Assembly

Ref.	Part Number	Qty.	Description
1	340-154	3	Union-Bulkhead
1:1	237-22	2	O-Ring
2	340-68	1	Fitting-Tee, Bulkhead
2:1	237-22	3	O-Ring
3	95-8984	1	Tube-HYD
4	95-8983	1	Tube-HYD
5	340-70	6	Nut-Lock
6	240-4	2	Grommet-Rubber
7	69-8940	4	Washer
8	69-8970	2	Spacer
9	95-8791	1	Tube-HYD
10	95-8790	1	Tube-HYD
11	340-77	3	Fitting-Elbow, 90 DEG
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring
12	340-132	1	Fitting-Elbow, 90 DEG
12:1	237-78	1	O-Ring
12:2	237-21	1	O-Ring
13	95-8792	1	Tube ASM


Ref.	Part Number	Qty.	Description
14	95-8822	2	Hose-HYD
15	340-87	1	Fitting-Elbow, 45 DEG
15:1	237-22	1	O-Ring
15:2	237-42	1	O-Ring
16	95-8838	1	Hose-HYD
17	95-8839	1	Hose-HYD
18	95-8823	1	Hose ASM
19	104-2234	1	Hose-HYD
20	117-5147	2	Hose-HYD
21	85-9720	1	Fitting-STR, Orifice
21:1	237-78	1	O-Ring
21:2	237-21	1	O-Ring
22	95-8843	1	Hose-HYD
23	117-5109	1	HYD Cylinder ASM
24	112-9916	1	HYD Cylinder ASM
25	121-3654	1	Cylinder-HYD
26	1278	2	Washer
27	3290-378	1	Tie-Cable ●

 ● Not illustrated

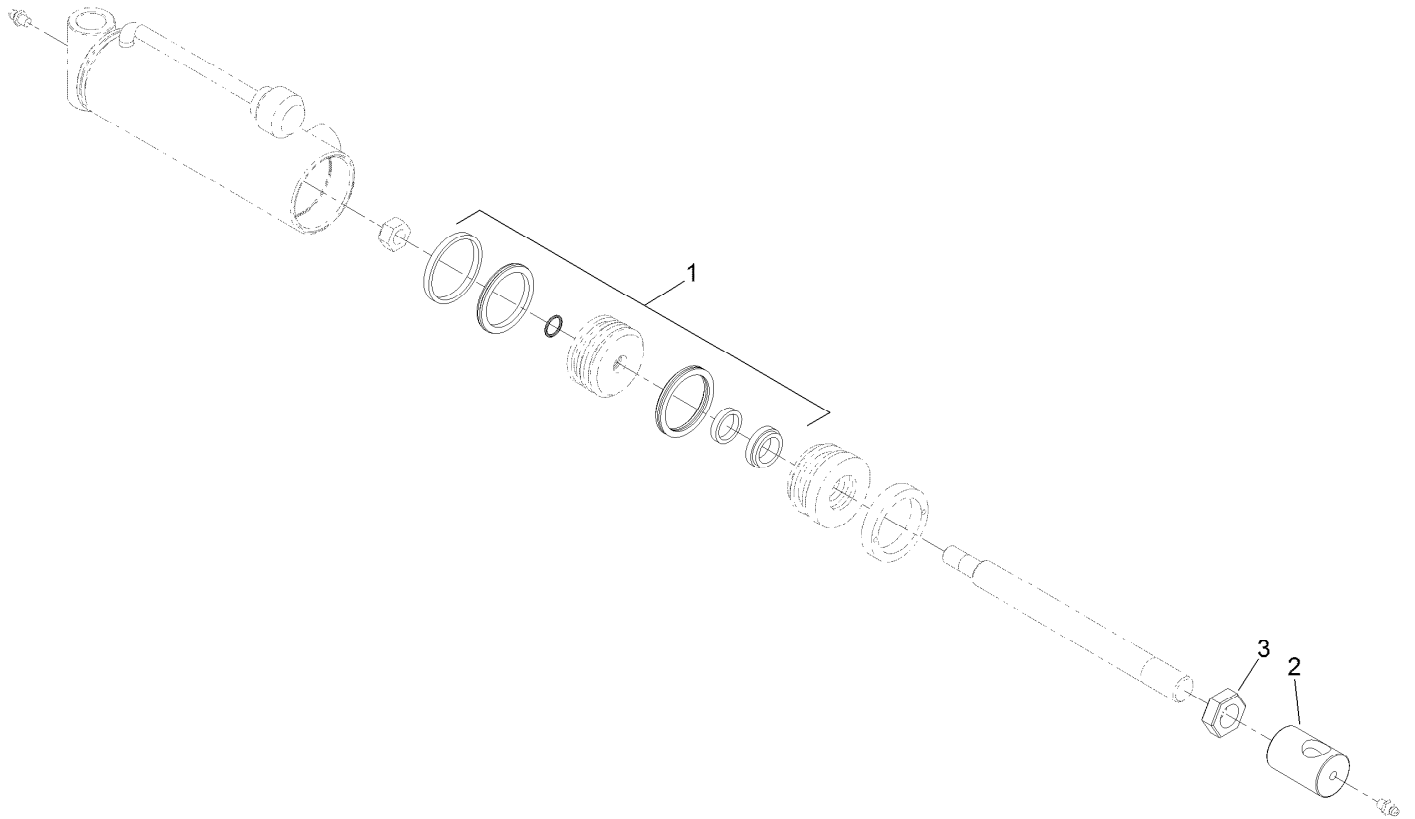


Hydraulic Cylinder Assembly No. 117-5109

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-3410	1	Seal Kit
2	108-9035	1	Clevis
3	3220-7	1	Nut-Jam

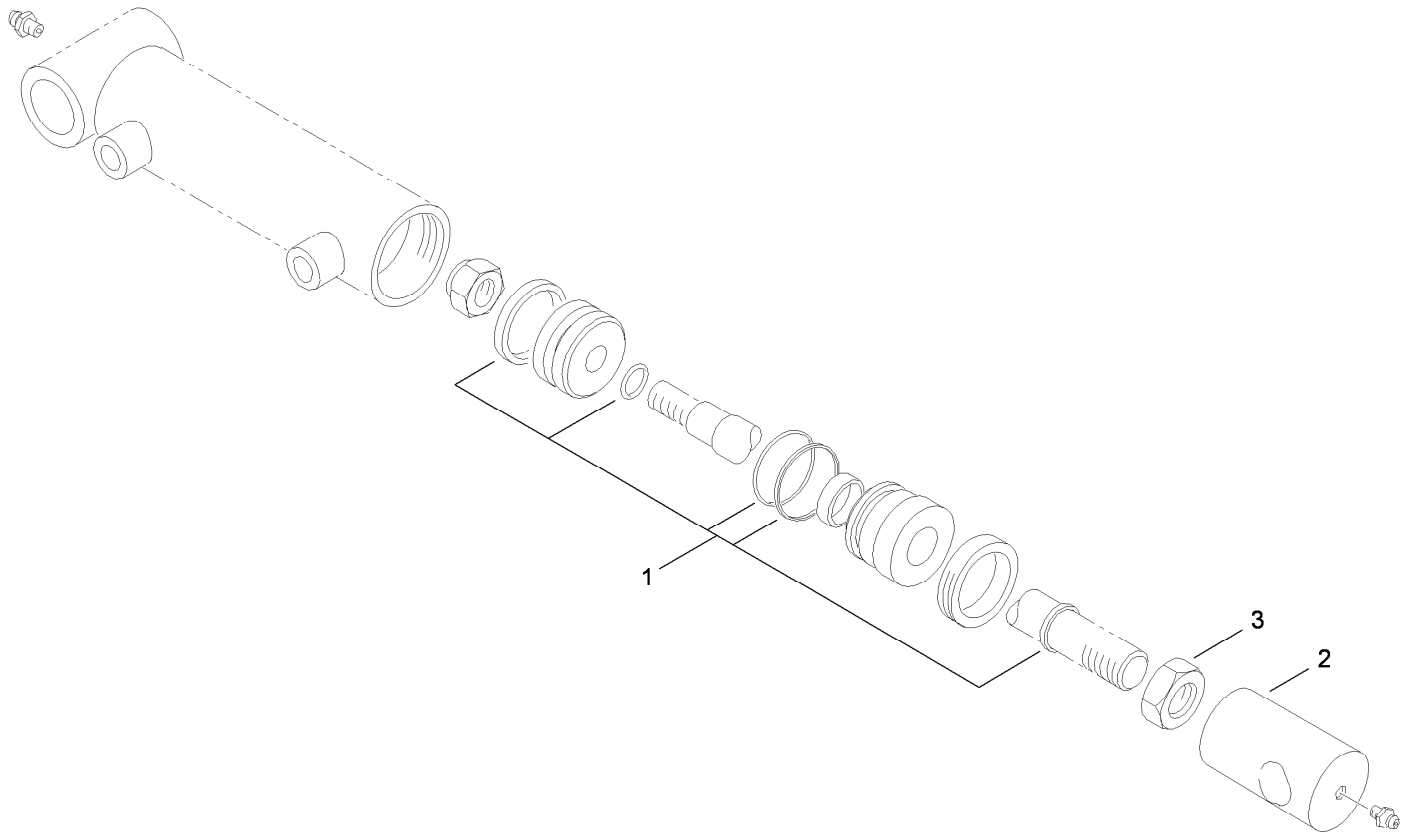 


Hydraulic Cylinder Assembly No. 112-9916

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-3410	1	Seal Kit
2	108-9035	1	Clevis
3	3220-7	1	Nut-Jam

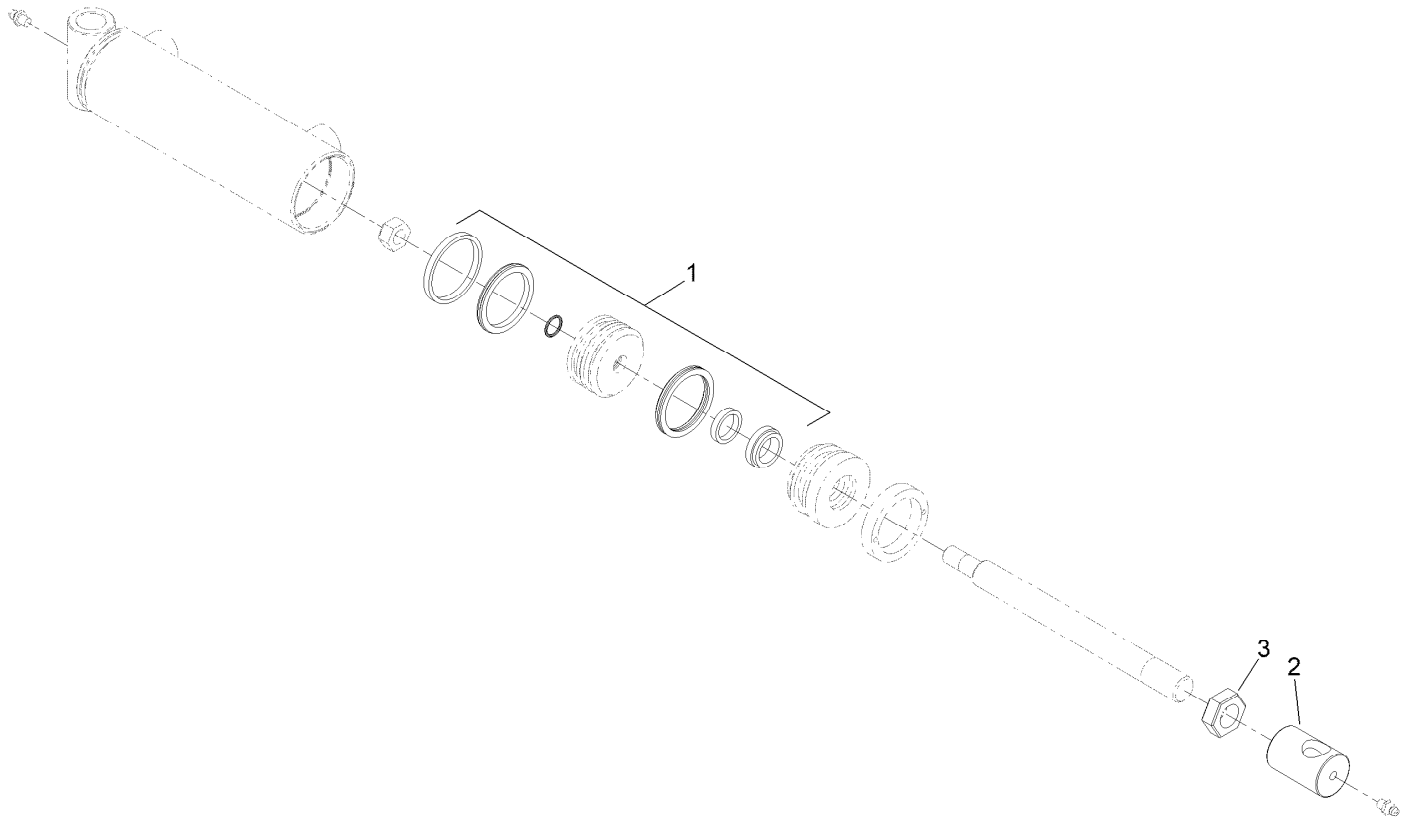 

Hydraulic Cylinder Assembly No. 121-3654


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-3410	1	Seal Kit
2	108-9035	1	Clevis
3	3220-7	1	Nut-Jam

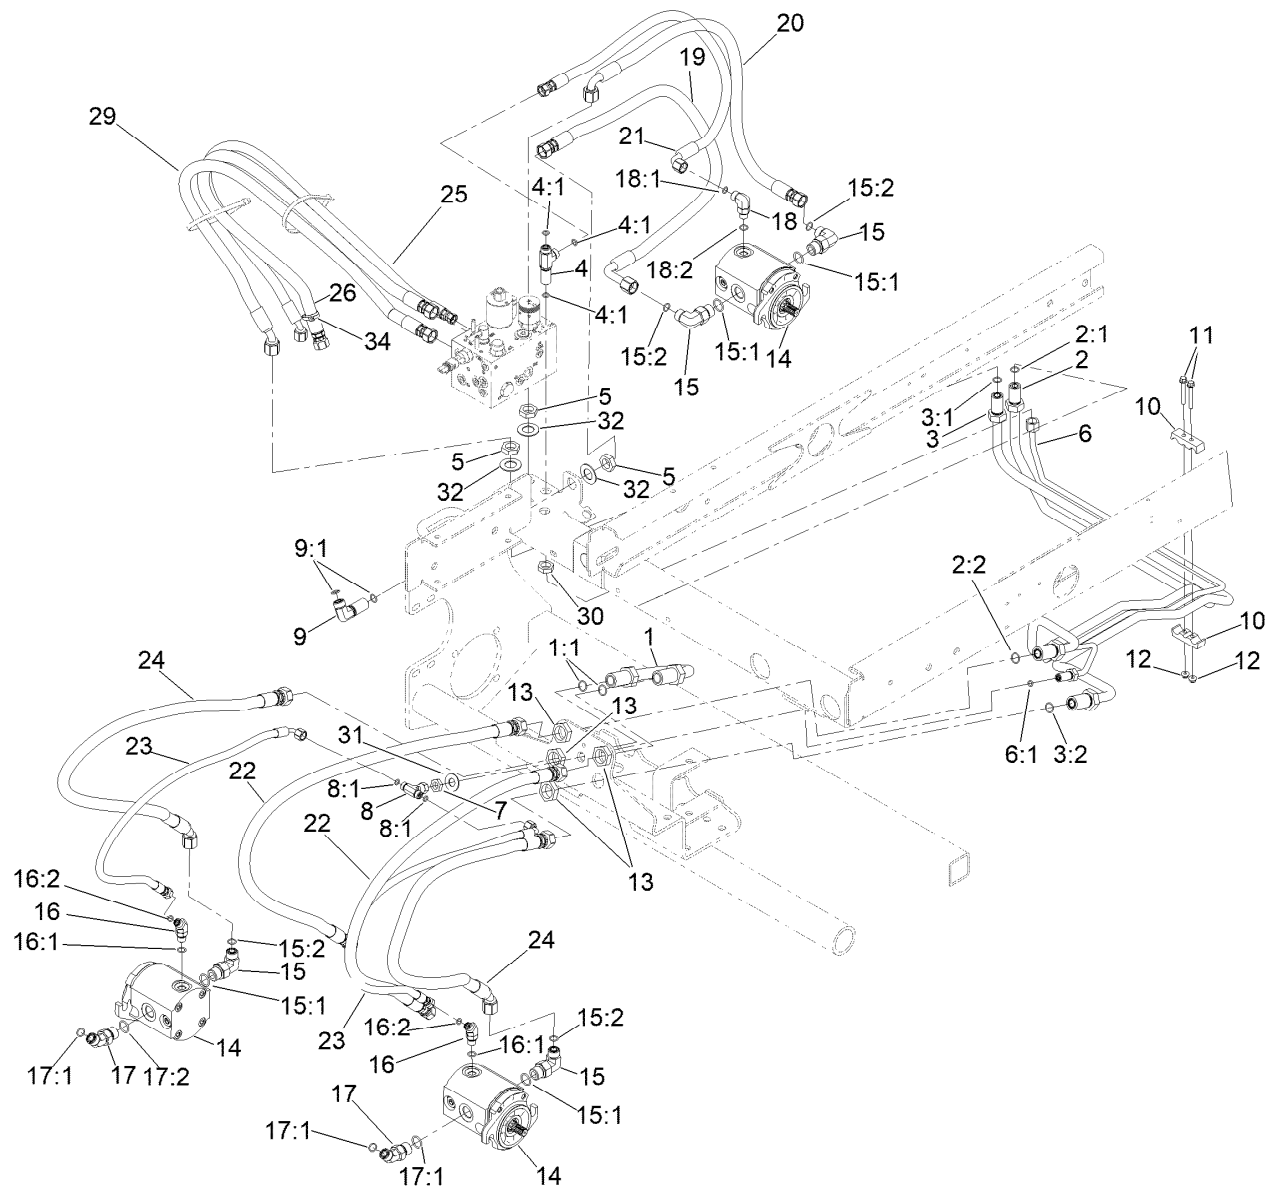 

Hydraulic Mow Circuit Assembly

Ref.	Part Number	Qty.	Description
1	99-3640	1	Tube ASM
1:1	237-65	2	O-Ring
2	95-8980	1	Tube ASM
2:1	237-30	1	O-Ring
2:2	237-65	1	O-Ring
3	95-8981	1	Tube ASM
3:1	237-30	1	O-Ring
3:2	237-65	1	O-Ring
4	340-68	1	Fitting-Tee, Bulkhead
4:1	237-22	3	O-Ring
5	340-127	3	Nut-Bulkhead
6	95-8982	1	Tube ASM
6:1	237-21	1	O-Ring
7	340-78	1	Nut-Lock
8	99-3477	1	Fitting-Tee
8:1	237-21	2	O-Ring
9	93-9151	1	Fitting-HYD
9:1	237-30	2	O-Ring
10	93-2509	2	Clamp-Tube
11	3234-34	2	Screw-HHF
12	104-7201	2	Nut-HF, NI


Ref.	Part Number	Qty.	Description
13	340-74	4	Nut-Lock, Bulkhead
14	115-8250	3	Gear Motor ASM
15	340-105	4	Fitting-Elbow, 90 DEG
15:1	237-80	1	O-Ring
15:2	237-30	1	O-Ring
16	340-137	2	Fitting
16:1	237-21	1	O-Ring
16:2	237-42	1	O-Ring
17	340-89	2	Fitting-HYD, 45 DEG
17:1	237-30	1	O-Ring
17:2	237-80	1	O-Ring
18	340-77	1	Fitting-Elbow, 90 DEG
18:1	237-22	1	O-Ring
18:2	237-42	1	O-Ring
19	117-5145	1	Hose-HYD
20	117-5146	1	Hose-HYD
21	114-5500	1	Hose-HYD
22	117-5142	2	Hose-HYD
23	117-5144	2	Hose-HYD
24	117-5143	2	Hose-HYD
25	115-3411	1	Hose-HYD

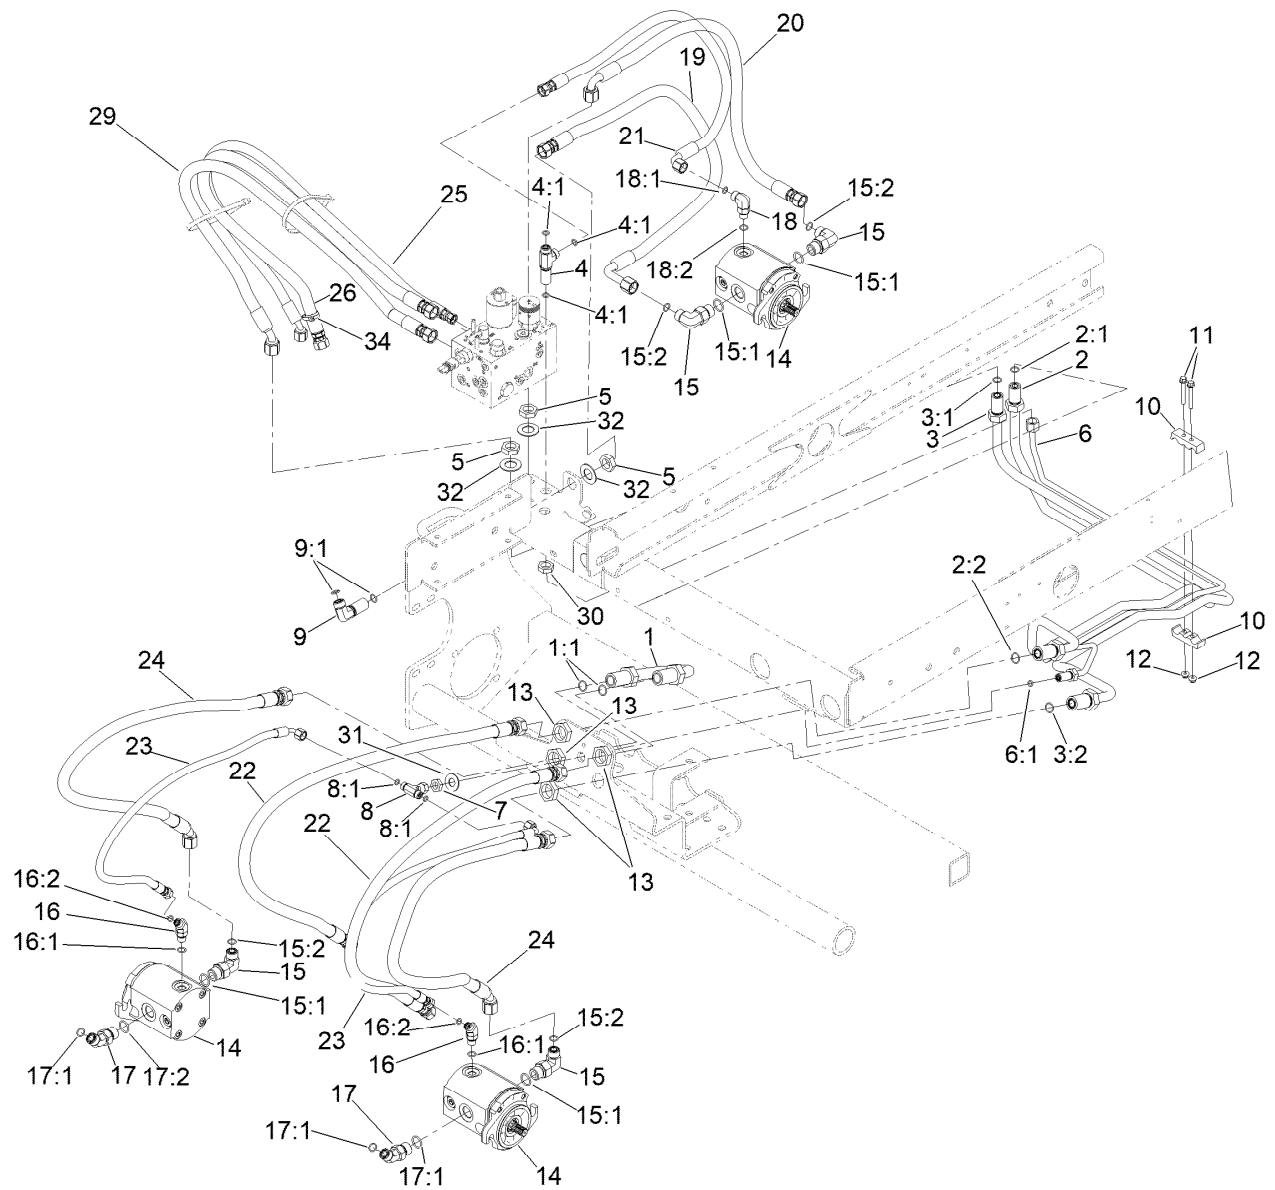 

Hydraulic Mow Circuit Assembly (continued)

Ref.	Part Number	Qty.	Description
26	95-8824	1	Hose ASM
29	95-8820	1	Hose ASM
30	340-70	1	Nut-Lock


Ref.	Part Number	Qty.	Description
31	69-8980	1	Washer
32	69-8930	3	Washer
34	3290-378	1	Tie-Cable

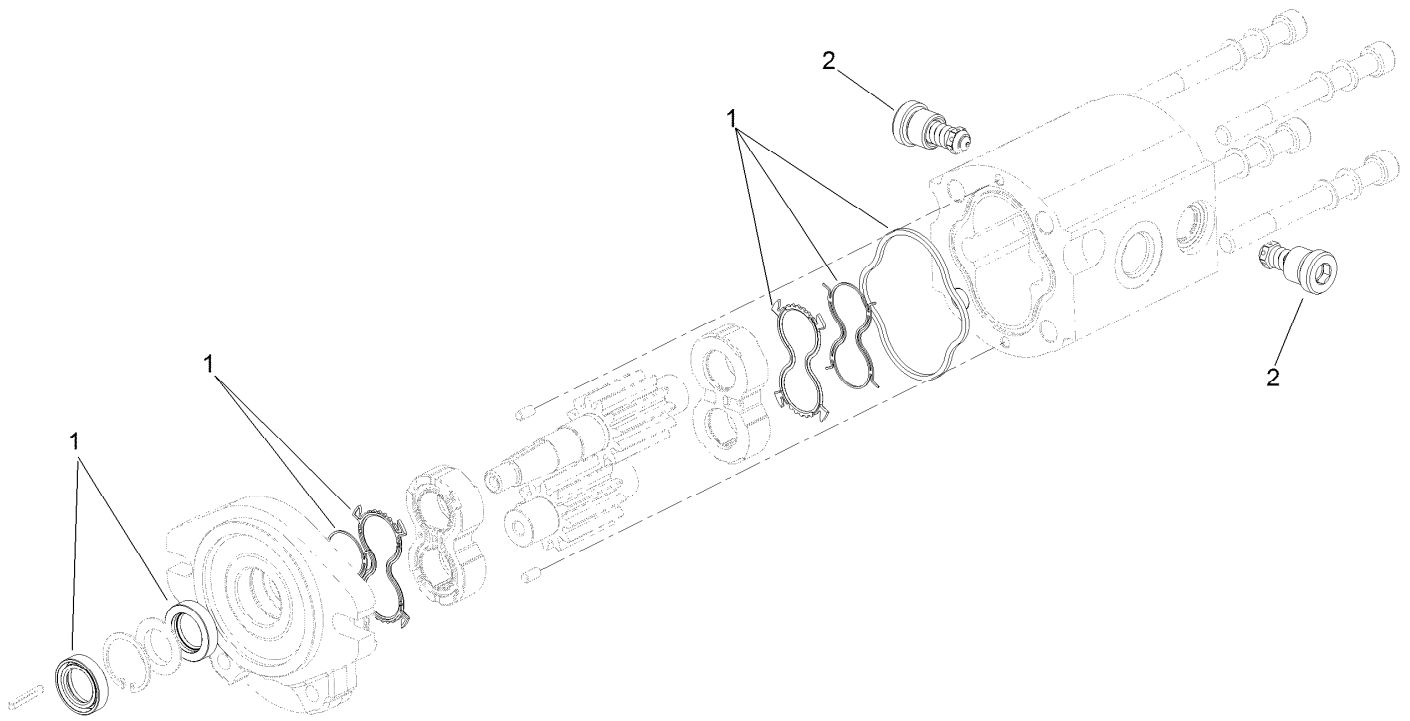 

Gear Motor Assembly No. 115-8250


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1682	1	Motor Seal Kit ●
2	117-5107	2	Valve-Check ●

 ● Not illustrated

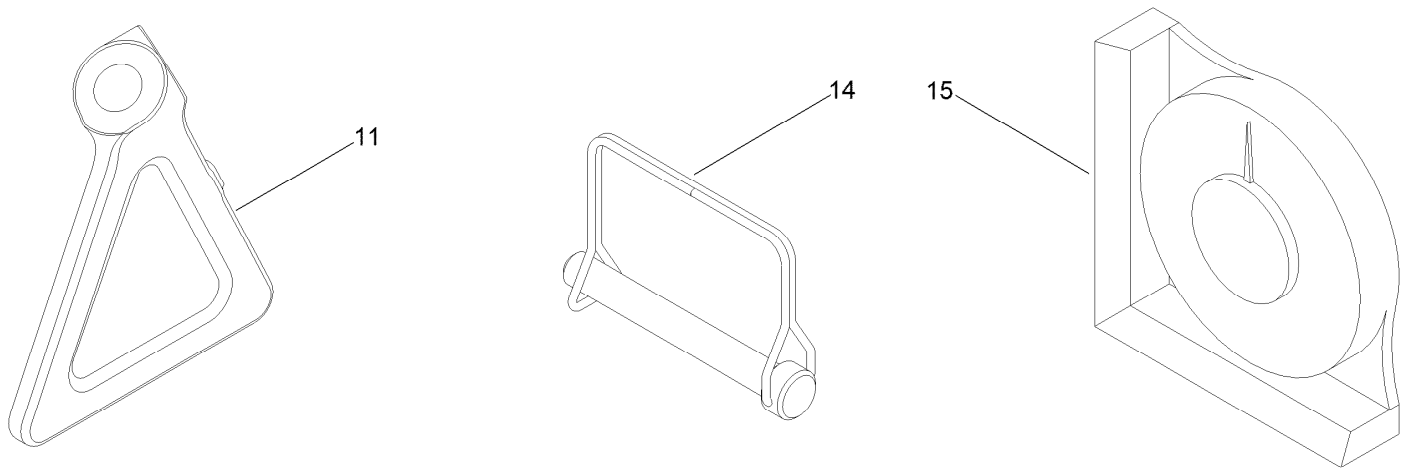

Optional Tool Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	119-8010-03	1	Kickstand
14	107-7400	1	Pin-Lynch
15	99-3503	1	Indicator-Angle

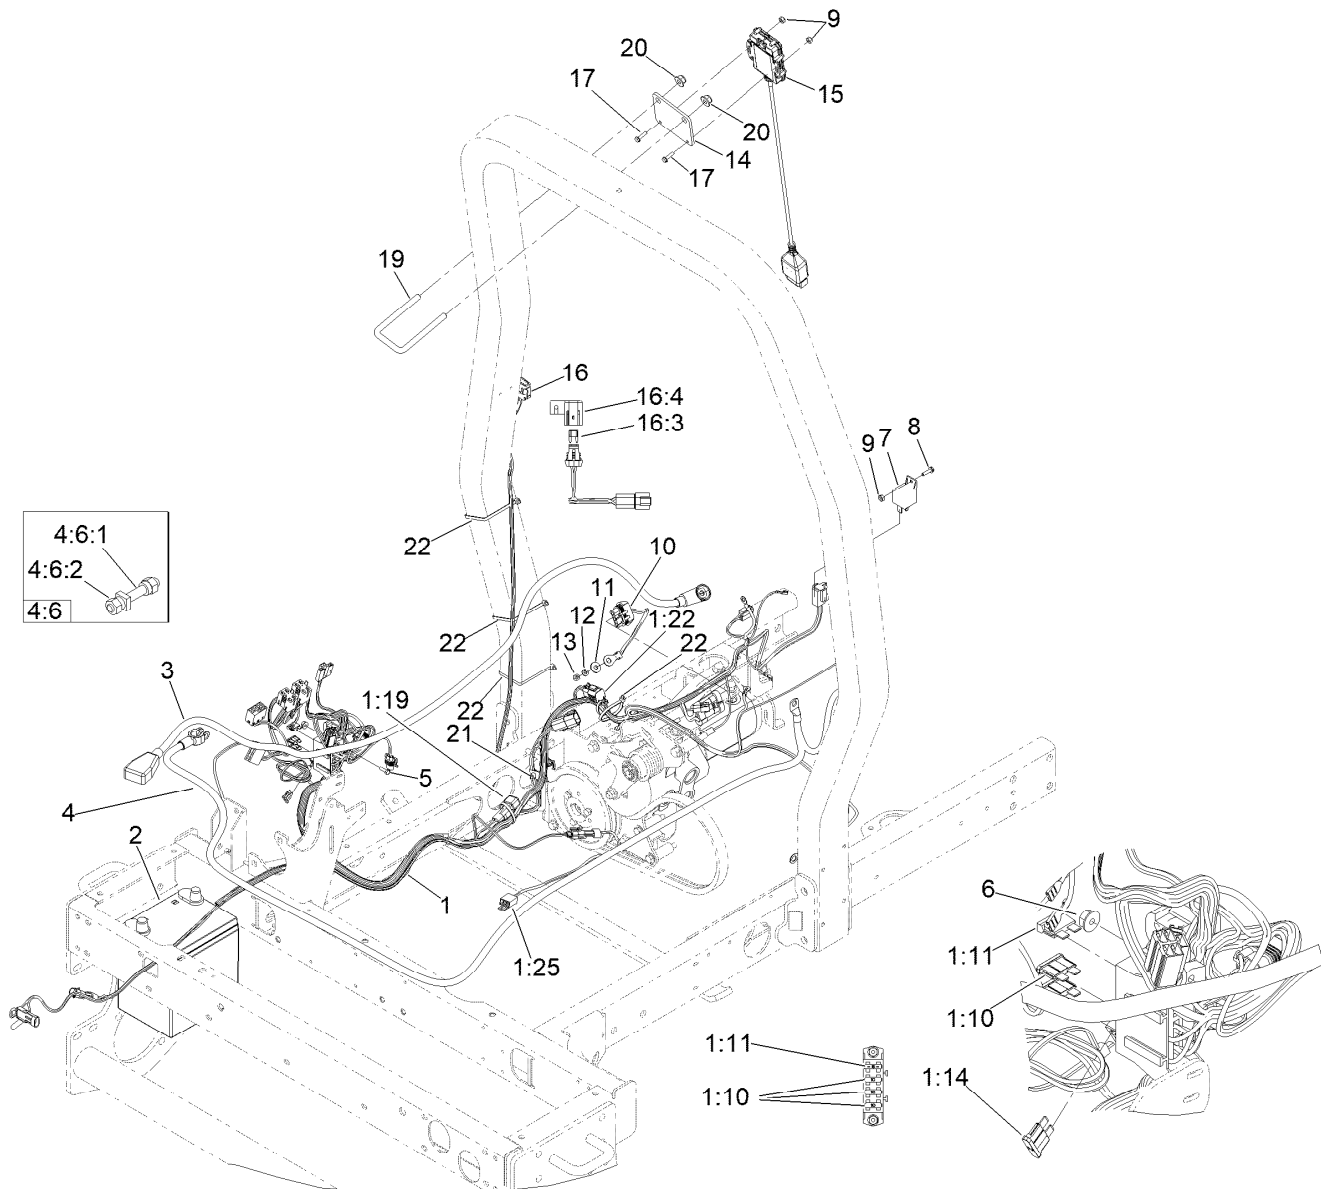 


Wire Harness and Battery Assembly

Ref.	Part Number	Qty.	Description
1	122-2738	1	Harness-Wire, Main
1:10	218-578	3	Fuse-Blade, 10 Amp
1:11	109355	1	Fuse-Blade, 15 Amp
1:14	94-6710	1	Fuse-2 Amp
1:19	100-4918	1	Diode
1:22	32180-156	1	Cap-Plug, 6 Way
1:25	122-2708	1	Harness-Wire, Seat Switch
2	161-6891	1	Battery-Wet,12V,540 CCA
3	95-8853	1	Cable-Battery, Positive
4	95-8854	1	Cable-Battery, Negative
4:6		1	Bolt ASM ■
4:6:1	32180-107	1	Bolt-Clamp, Battery
4:6:2	32180-108	2	Nut-Hex Shoulder
5	3290-134	2	Screw
6	3290-148	2	Nut-HF
7	99-7435	1	Relay

Ref.	Part Number	Qty.	Description
8	32105-13	1	Screw-HWH
9	3296-2	3	Nut-Lock, NI
10	99-3441	1	Harness-Wire, Fusible Link
11	3256-78	1	Washer-Flat
12	43-5930	1	Washer-Lock, Spring
13	48-7890	1	Nut-Hex
14	161-8395-03	1	Bracket-Lmu
15	122-3876	1	Gateway-Telematics Lite
16	122-2161	1	Harness-Wire
16:3	121-8861	1	Fuse-Mini Blade, 2 Amp
16:4	32180-101	1	Cover-Fuse, Single
17	3290-126	2	Screw-HWH
19	138-8991	1	U-Bolt-Sq
20	104-8301	2	Nut-HF, NI
21	3290-378	9	Tie-Cable ●
22	3290-379	8	Tie-Cable ●

● Not illustrated

 
■ Not serviced separately

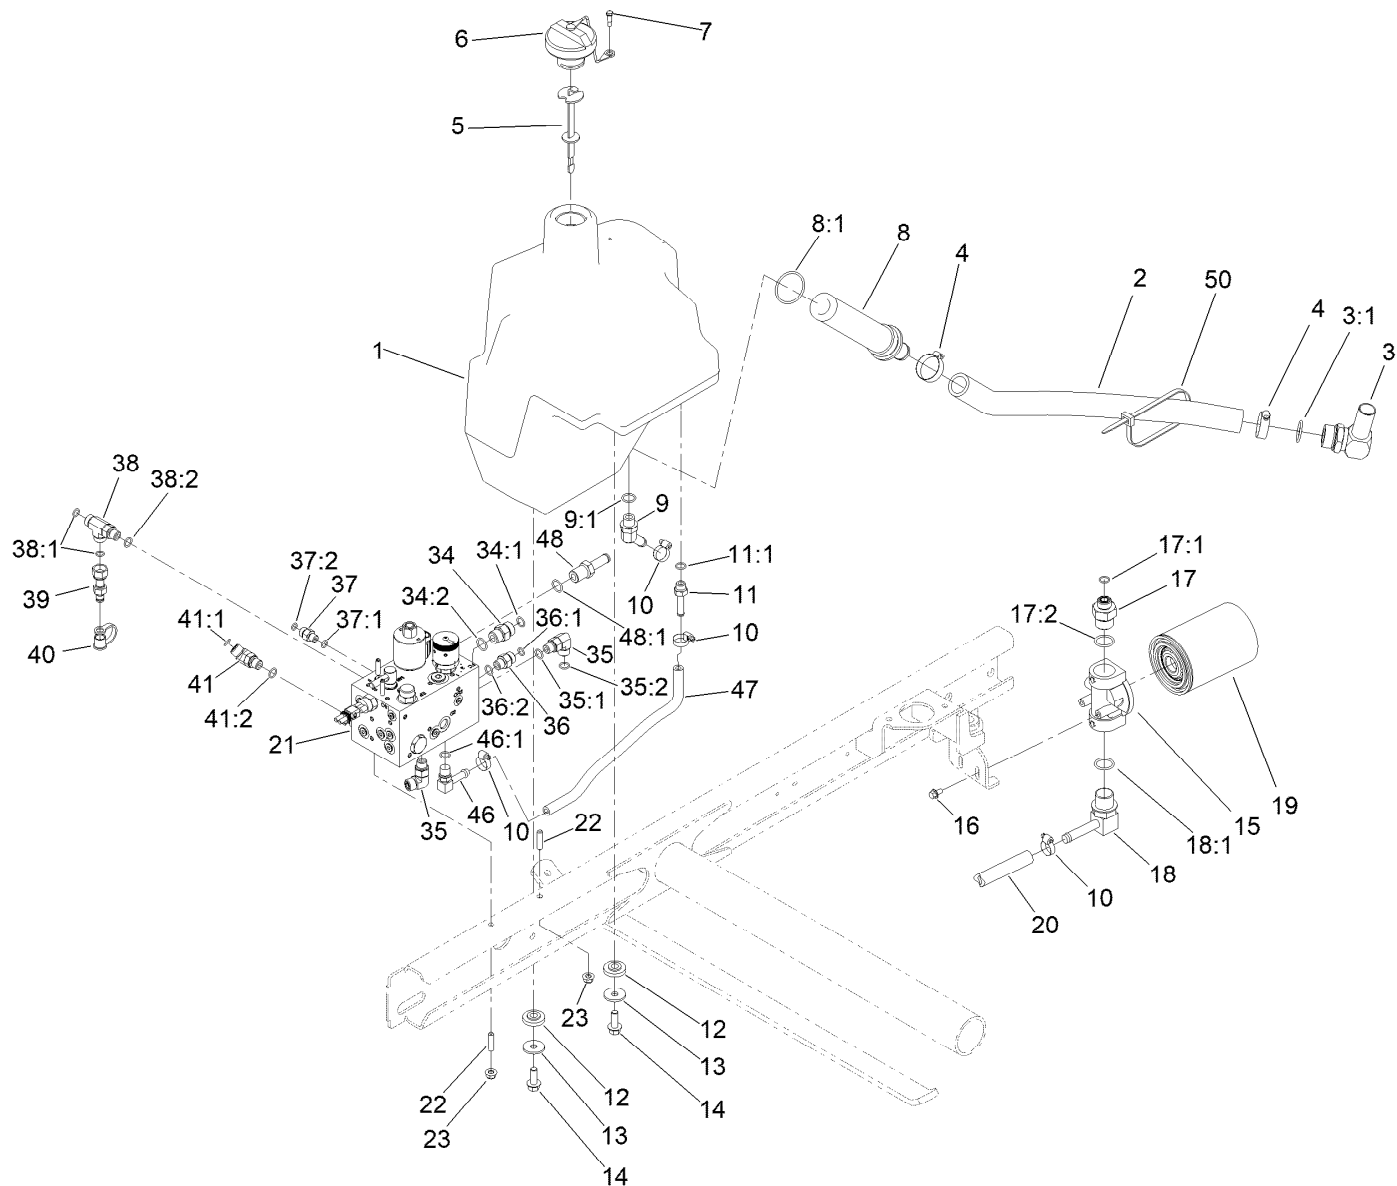

Hydraulic Tank and Valve Assembly

Ref.	Part Number	Qty.	Description
1	104-4840	1	Tank-HYD
2	104-4845	1	Hose-Suction
3	56-9530	1	Fitting-HYD, 90 DEG
3:1	237-117	1	O-Ring
4	2412-34	2	Clamp-Hose
5	119-6968	1	Dipstick-Oil
6	93-7160	1	Cap-Oil, HYD
7	57-5420	1	Screw-Shoulder
8	104-7546	1	Tank Strainer ASM
8:1	340-136	1	O-Ring
9	354-126	1	Fitting-Elbow, 45
9:1	237-79	1	O-Ring
10	2412-36	4	Clamp-Hose
11	353-979	1	Fitting-STR
11:1	237-42	1	O-Ring
12	240-11	4	Bushing-Flange
13	63-8410	4	Washer
14	3234-11	4	Screw-HHF
15	92-5821	1	Head-Filter
16	3234-13	2	Screw-HHF
17	100-4240	1	Fitting-STR


Ref.	Part Number	Qty.	Description
17:1	237-30	1	O-Ring
17:2	237-81	1	O-Ring
18	95-8814	1	Fitting-90
18:1	237-81	1	O-Ring
19	86-3010	1	Filter-Oil
20	99-3501	1	Hose
21	108-9037	1	Manifold ASM
22	104-0430	2	Stud
23	104-8300	2	Nut-HF, NI
34	340-4	3	Fitting-Straight
34:1	237-30	1	O-Ring
34:2	237-79	1	O-Ring
35	340-77	2	Fitting-Elbow, 90 DEG
35:1	237-22	1	O-Ring
35:2	237-42	1	O-Ring
36	340-2	1	Fitting-Straight
36:1	237-22	1	O-Ring
36:2	237-42	1	O-Ring
37	340-92	1	Fitting-Straight
37:1	237-78	1	O-Ring
37:2	237-21	1	O-Ring

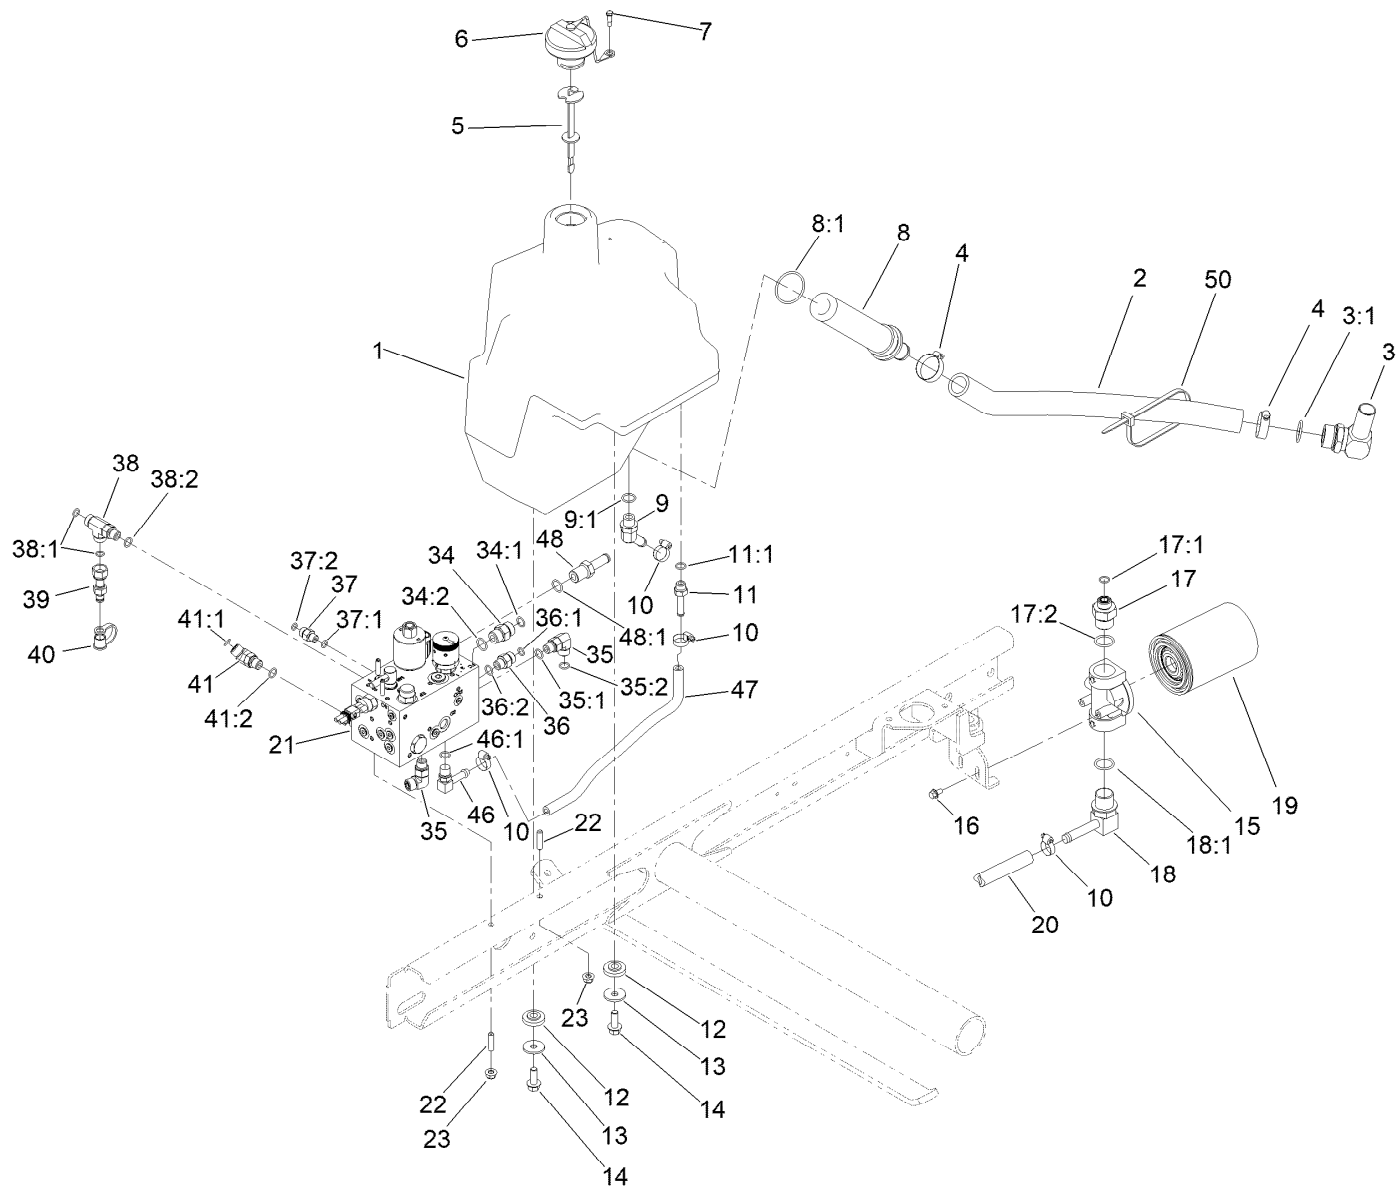 

Hydraulic Tank and Valve Assembly (continued)

Ref.	Part Number	Qty.	Description
38	340-86	1	Fitting-Tee
38:1	237-22	2	O-Ring
38:2	237-42	1	O-Ring
39	86-5480	1	Nipple-Test
40	354-79	1	Cap-Dust
41	340-87	1	Fitting-Elbow, 45 DEG
41:1	237-22	1	O-Ring

Ref.	Part Number	Qty.	Description
41:2	237-42	1	O-Ring
46	100-4887	1	Fitting-Elbow, 90
46:1	237-42	1	O-Ring
47	80-7342	1	Hose-HYD
48	354-121	1	Fitting-STR
48:1	237-79	1	O-Ring
50	3290-379	2	Tie-Cable

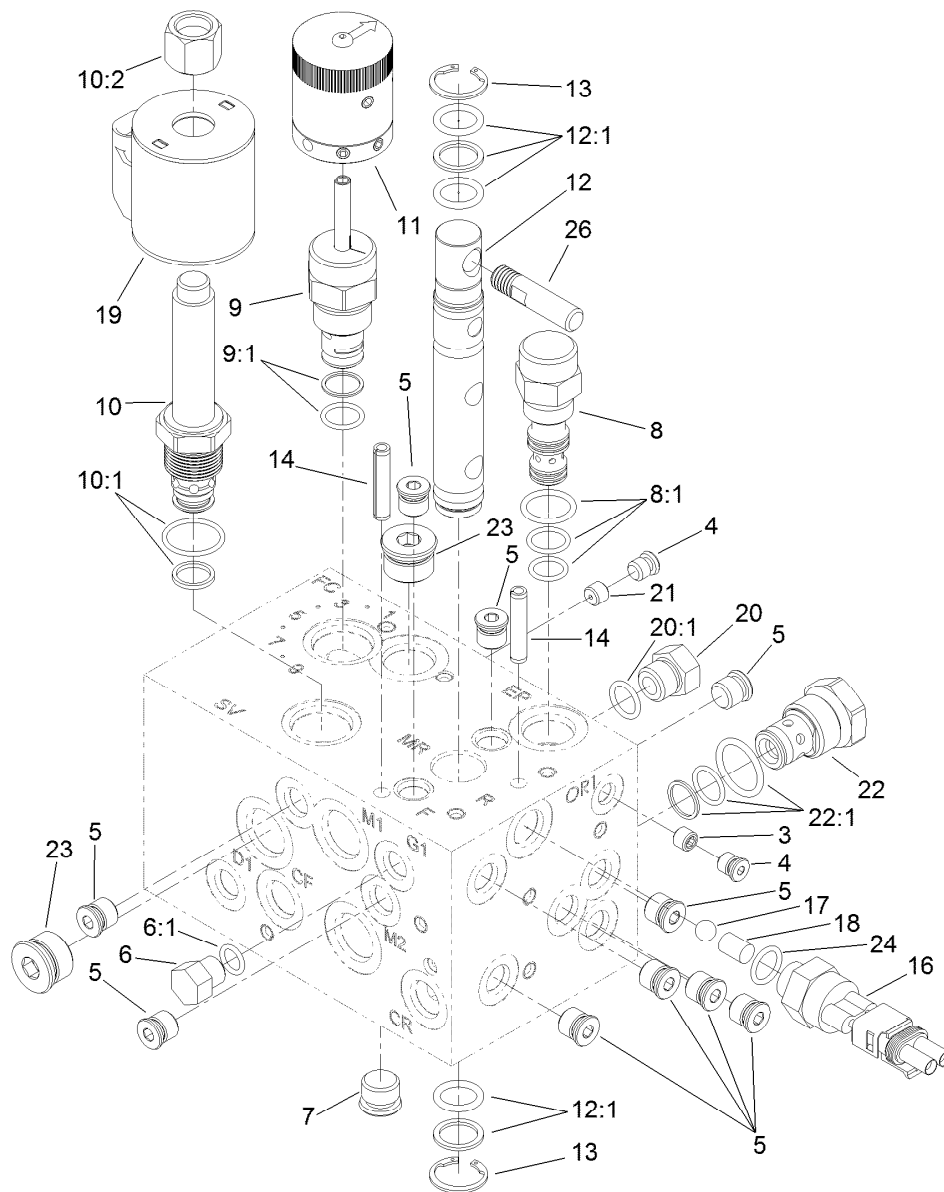 


Hydraulic Manifold Assembly No. 108-9037

Ref.	Part Number	Qty.	Description
3	110-8771	1	Orifice-.020
4	106-1024	2	Plug-Leak, Zero
5	106-1025	10	Plug-HYD
6	353-512	1	Plug
6:1	237-78	1	O-Ring
7	106-1026	1	Plug-HYD
8	110-8770	1	Logic Element
8:1	110-8773	1	Seal Kit
9	110-8769	1	Valve-Control, Manual Flow
9:1	110-2633	1	Seal Kit
10	110-8768	1	Valve-Relief, Solenoid (3000 PSI)
10:1	110-6316	1	Seal Kit
10:2	130-8180	1	Nut-Coil (9/16-24 Unef-2B)
11	110-8767	1	Rotary Handle ASM
12	117-0108	1	Spool-Rotary

Ref.	Part Number	Qty.	Description
12:1	117-0109	1	Seal Kit
13	112-6532	2	Ring-Retaining
14	112-6531	2	Pin-Spring
16	72-4310	1	Switch-Ball
17	110-8762	1	Ball-Chrome
18	110-8761	1	Pin-Dowel
19	110-6344	1	Coil-12V, DC
20	353-508	1	Plug-HH
20:1	237-42	1	O-Ring
21	110-8760	1	Orifice-.073
22	110-8759	1	Valve-Relief
22:1	110-8772	1	Seal Kit ●
23	106-1027	2	Plug
24	110-8757	1	O-Ring
26	110-8758	1	Handle-Spool

 
● Not illustrated

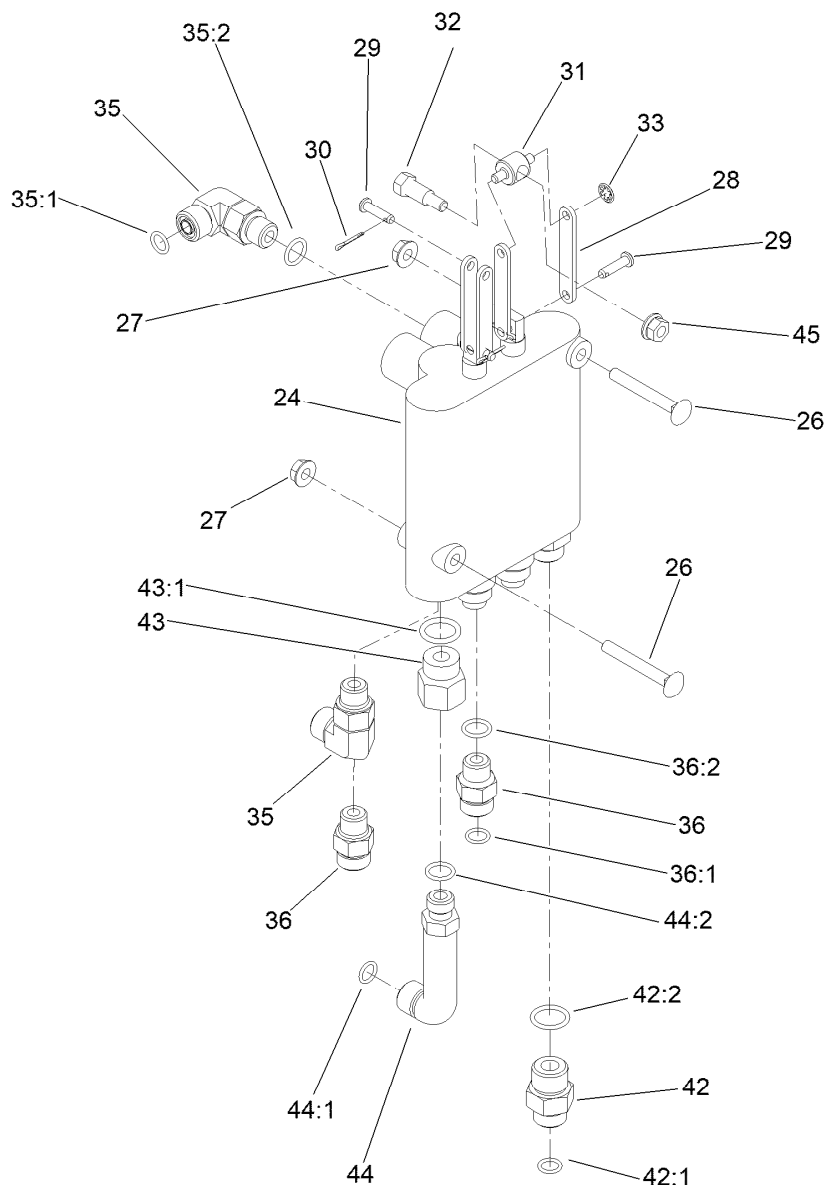

Control Valve Assembly

Ref.	Part Number	Qty.	Description
24	95-8581	1	2-Spool Control Valve ASM
26	3230-33	2	Screw-CARR
27	32128-33	2	Nut-HF
28	95-8634	4	Link
29	283-16	3	Pin-Clevis
30	3272-1	3	Pin-Cotter
31	95-8638	1	Trunnion-Valve, Actuator
32	92-8916	1	Bolt-Shoulder
33	32151-106	2	Ring-Retaining
35	340-77	2	Fitting-Elbow, 90 DEG
35:1	237-22	1	O-Ring
35:2	237-42	1	O-Ring


Ref.	Part Number	Qty.	Description
36	340-2	1	Fitting-Straight
36:1	237-22	1	O-Ring
36:2	237-42	1	O-Ring
42	340-3	1	Fitting-Straight
42:1	237-22	1	O-Ring
42:2	237-79	1	O-Ring
43	353-397	1	Reducer-Adapter
43:1	237-79	1	O-Ring
44	69-4320	1	Fitting-HYD, 90 DEG
44:1	237-22	1	O-Ring
44:2	237-42	1	O-Ring
45	32128-32	1	Nut-HHF

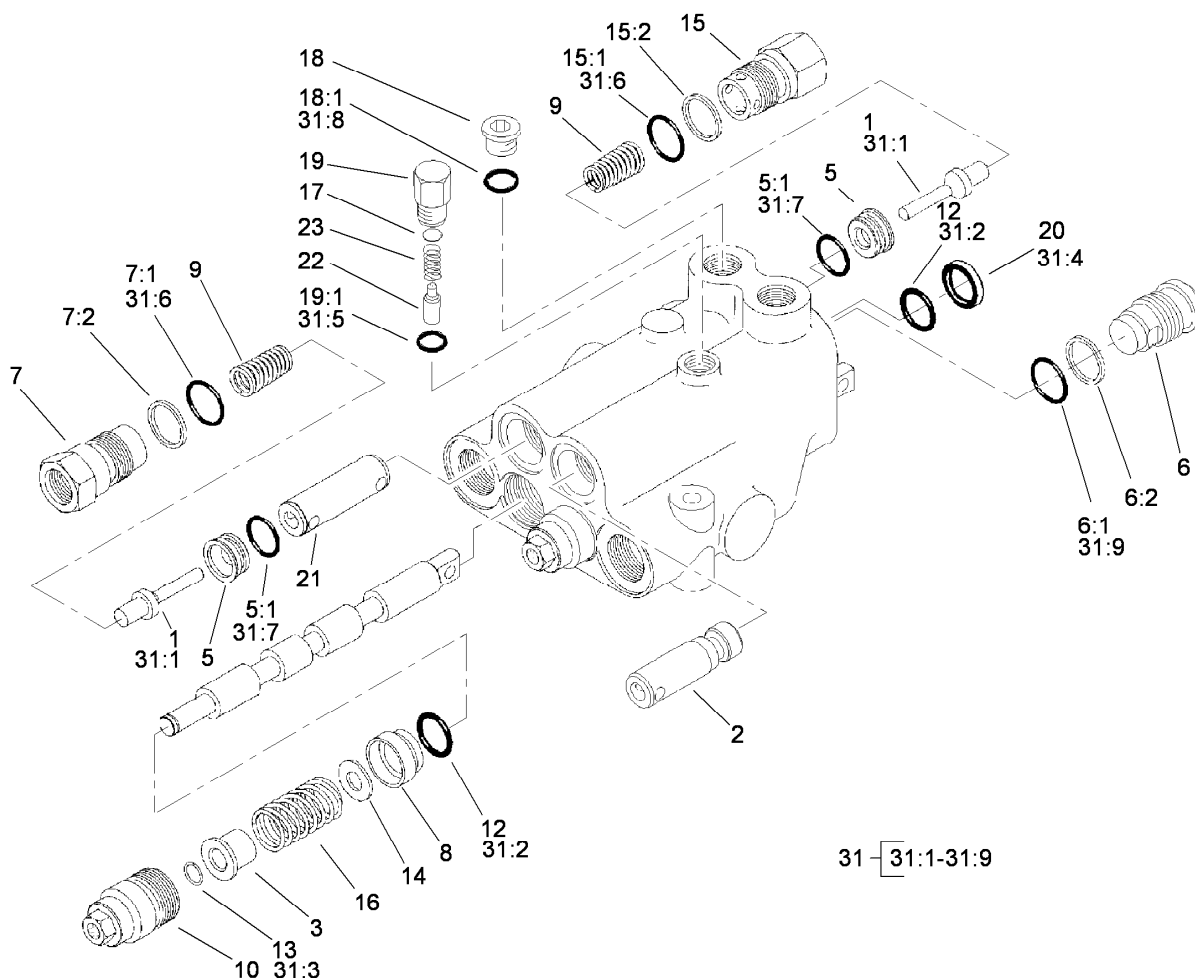 

Valve Assembly No. 95-8581

Ref.	Part Number	Qty.	Description
1	58-6290	3	Poppet
2	69-1840	1	Plunger
3	58-6310	2	Spacer
5	58-6330	3	Seat
5:1	58-6340	1	O-Ring
6	58-6350	1	Plug
6:1	60-5720	1	O-Ring
6:2	58-6370	1	Washer
7	69-1800	2	Plug ASM
7:1	60-5720	1	O-Ring
7:2	58-6370	1	Washer
8	58-6400	2	Bushing
9	69-1810	3	Spring
10	58-6420	2	Cap
12	58-6450	4	O-Ring
13	58-6460	2	Ring-Retaining
14	65-2770	2	Washer
15	99-3526	1	Plug ASM
15:1	60-5720	1	O-Ring
15:2	59-7730	1	Washer-Backup


Ref.	Part Number	Qty.	Description
16	99-3531	2	Spring
17	60-6450	1	Disc
18	353-989	1	Plug-Hex, Hollow
18:1	237-42	1	O-Ring
19	58-6780	1	Plug
19:1	58-6790	1	O-Ring
20	58-6320	2	Wiper
21	99-3528	1	Plunger
22	58-6770	1	Plunger
23	58-6760	1	Spring
31	99-3530	1	Seal Kit
31:1	58-6290	3	Poppet
31:2	58-6450	4	O-Ring
31:3	58-6460	2	Ring-Retaining
31:4	58-6320	2	Wiper
31:5	58-6790	1	O-Ring
31:6	60-5720	4	O-Ring
31:7	58-6340	2	O-Ring
31:8	237-42	1	O-Ring
31:9	59-7730	2	Washer-Backup

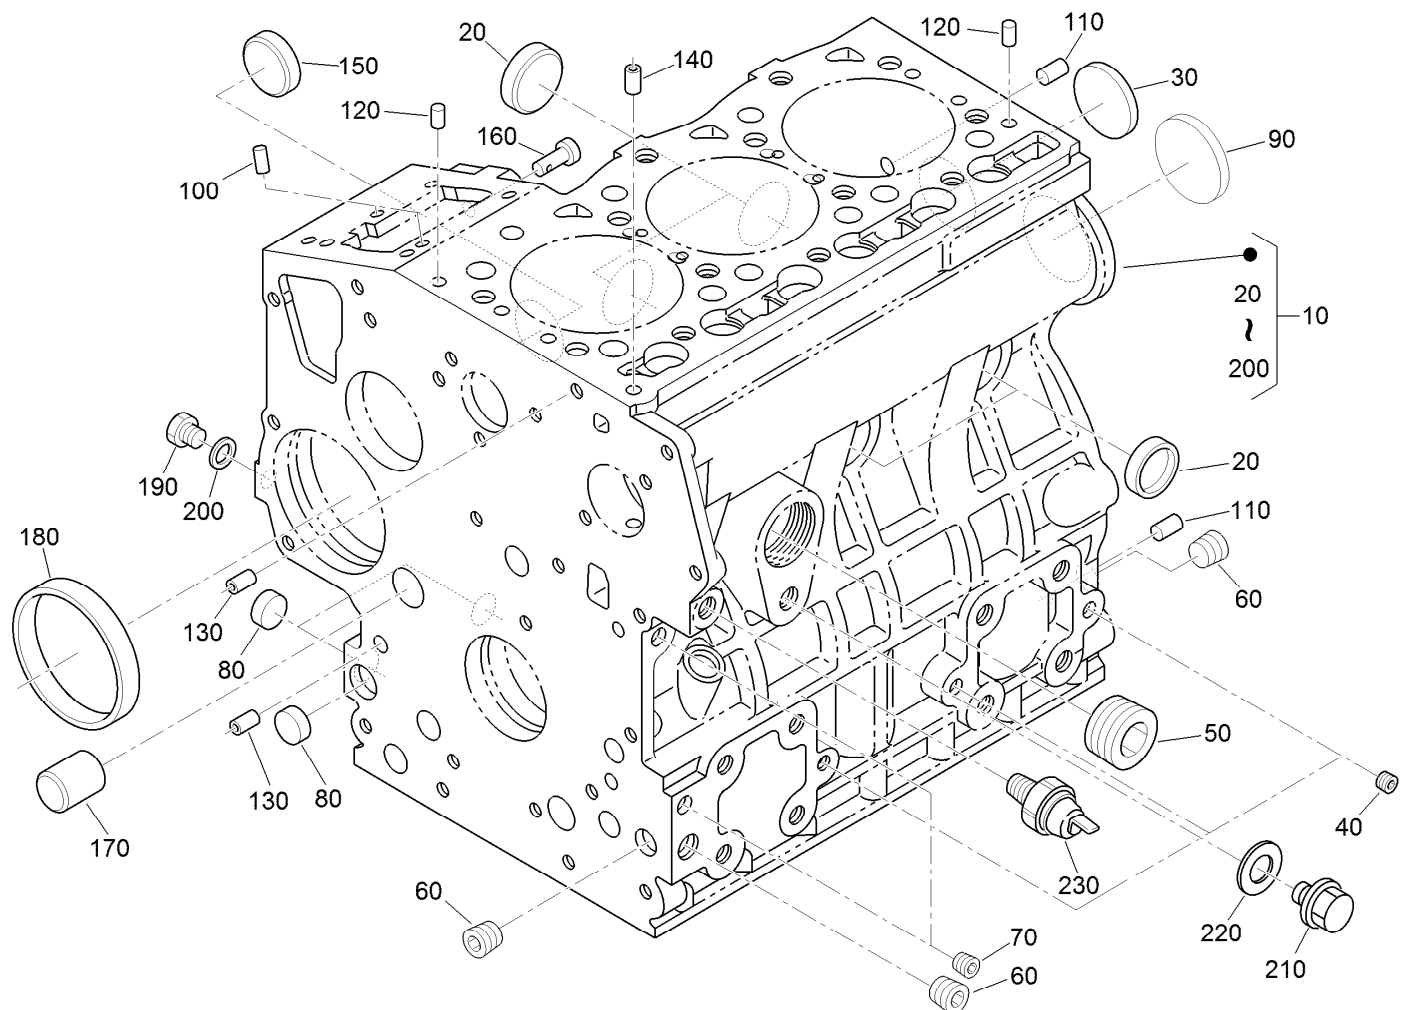 

Crankcase Assembly


Ref.	Part Number	Qty.	Description
10	115-3443	1	Crankcase ASM
20	98-9398	4	Cap-Sealing
30	98-7539	1	Cap-Sealing
40	98-9687	3	Plug
50	105-3779	1	Plug
60	98-9597	3	Plug
70	98-7487	2	Plug
80	98-9379	3	Plug-Expansion
90	98-9668	1	Plug-Expansion
100	98-9375	2	Pin-Straight
110	98-9377	2	Pin-Straight
120	98-9376	2	Pin-Straight

Ref.	Part Number	Qty.	Description
130	98-9387	2	Pin-Pipe
140	98-9539	1	Pin-Pipe
150	98-9599	1	Plug
160	98-9630	1	Pin-Spring, Start
170	98-9675	1	Plug
180	98-9656	1	Bushing-Governor, Gear
190	120-2559	1	Plug
200	98-7428	1	Gasket
210	99-3447	1	Plug
220	106-7056	1	Gasket
230	98-9416	1	Switch-Oil

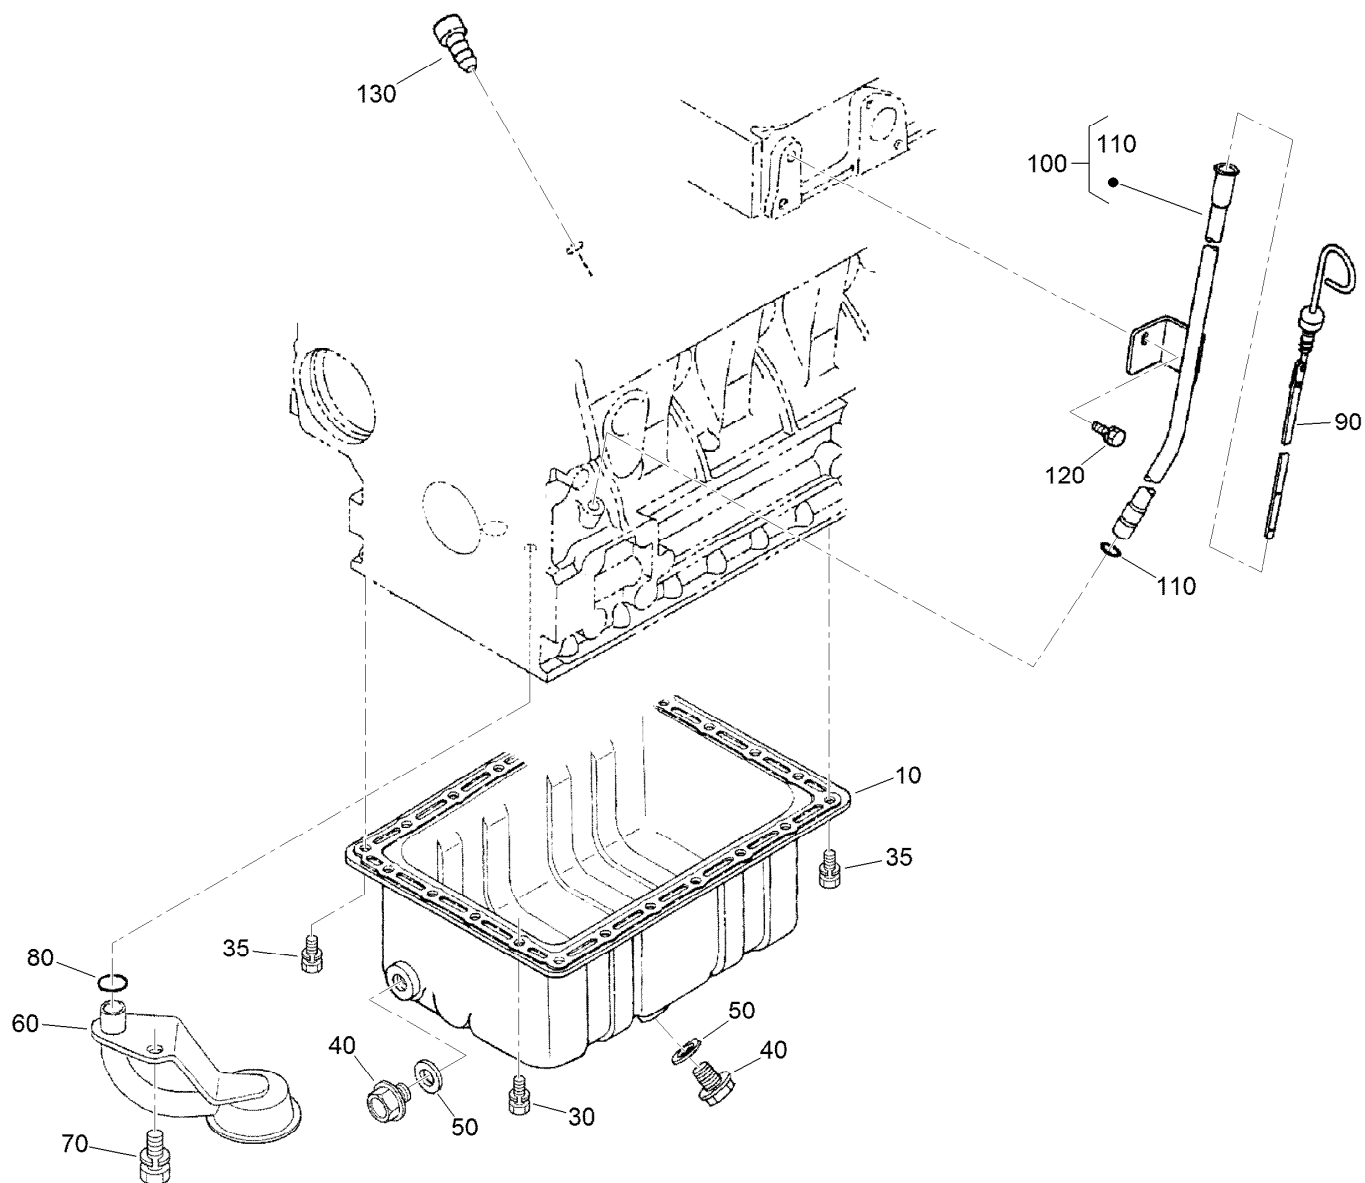 


Oil Pan and Dipstick Assembly

Ref.	Part Number	Qty.	Description
10	98-9685	1	Pan-Oil
30	98-9351	20	Bolt
35	98-9351	2	Bolt
40	114-8151	1	Plug-Drain
50	98-7524	1	Gasket
60	108-1401	1	Base-Filter
70	98-7526	1	Bolt
80	105-3776	1	O-Ring
90	98-9670	1	Gauge-Oil
100	98-9672	1	Oil Gauge Guide ASM
110	98-9722	1	O-Ring
120	100-9195	1	Bolt
130	110-3720	1	Plug-Gauge, Oil

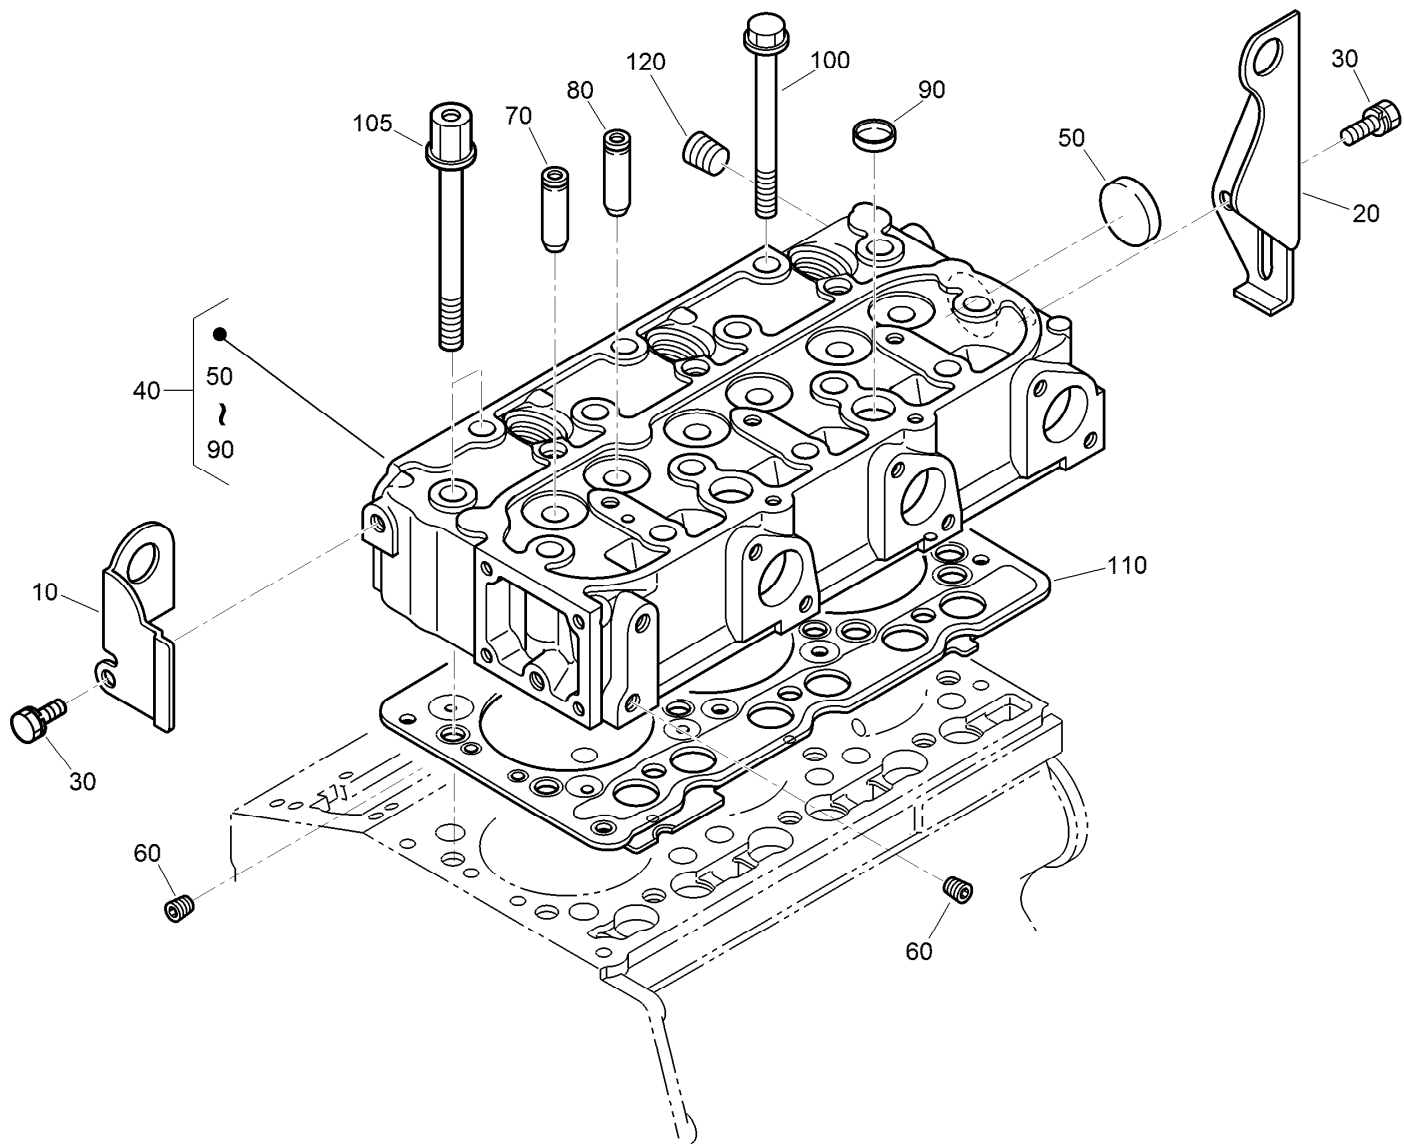 

Cylinder Head Assembly


Ref.	Part Number	Qty.	Description
10	130-1231	1	Hook-Engine
20	98-9478	1	Hook-Engine
30	100-9195	2	Bolt
40	138-6997	1	Cylinder Head ASM
50	105-3705	1	Cap-Sealing
60	98-9687	2	Plug
70	107-9066	3	Guide-Valve, Inlet
80	107-9067	3	Guide-Valve, Exhaust
90	98-9389	2	Cap-Sealing
100	98-9479	12	Bolt-Head, Cylinder
105	98-9647	2	Bolt-Head, Cylinder
110	108-6573	1	Gasket-Head, Cylinder
120	98-9444	1	Plug

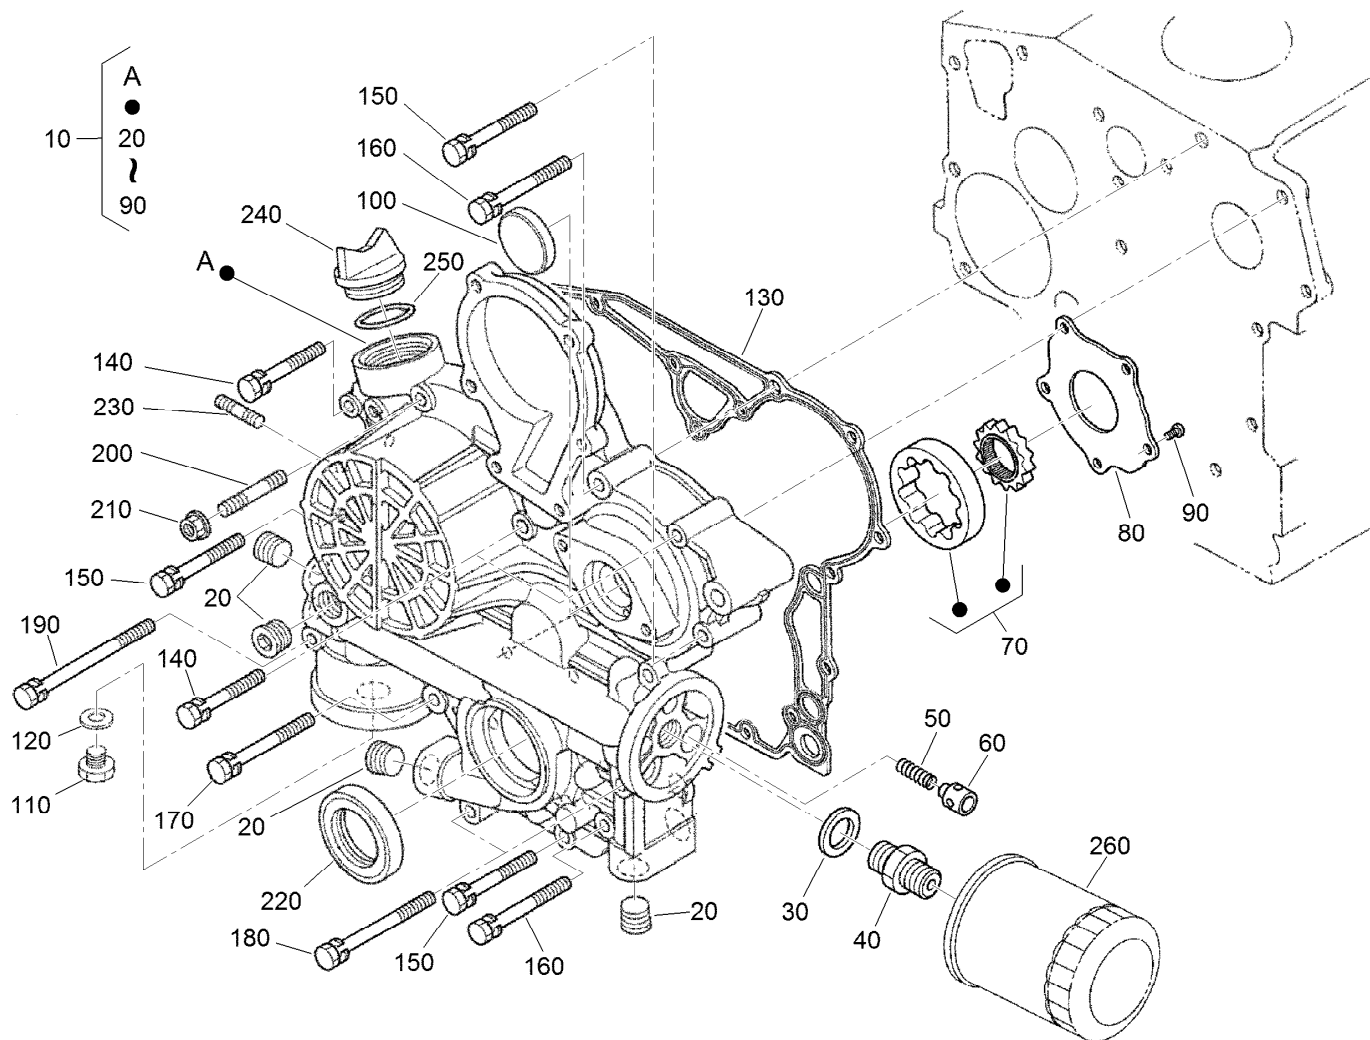 

Gear Case and Oil Filter Cartridge Assembly


Ref.	Part Number	Qty.	Description
10	115-3442	1	Comp Gear Case
20	127-0425	5	Plug
30	98-7562	1	Washer-Plain
40	98-9388	1	Joint-Pipe
50	130-1511	1	Spring
60	130-1510	1	Valve-Relief
70	130-1508	1	Rotor ASM
80	130-1509	1	Cover-Pump, Oil
90	130-1164	5	Screw-Binding
100	99-3515	1	Plug-Gearcase
110	99-3450	1	Plug
120	99-3451	1	Plug-Packing
130	98-9633	1	Gasket-Case, Gear

Ref.	Part Number	Qty.	Description
140	100-1765	3	Bolt
150	125-9063	4	Bolt-Sems
160	98-9356	2	Bolt
170	98-9437	1	Bolt
180	98-9586	2	Bolt
190	99-3511	1	Bolt
200	105-3709	1	Stud
210	100-2203	1	Nut-Flange
220	119-8038	1	Seal-Oil
230	105-3710	2	Stud
240	107-9075	1	Plug-Filler, Oil
250	99-3446	1	O-Ring
260	127-0511	1	Filter-Oil

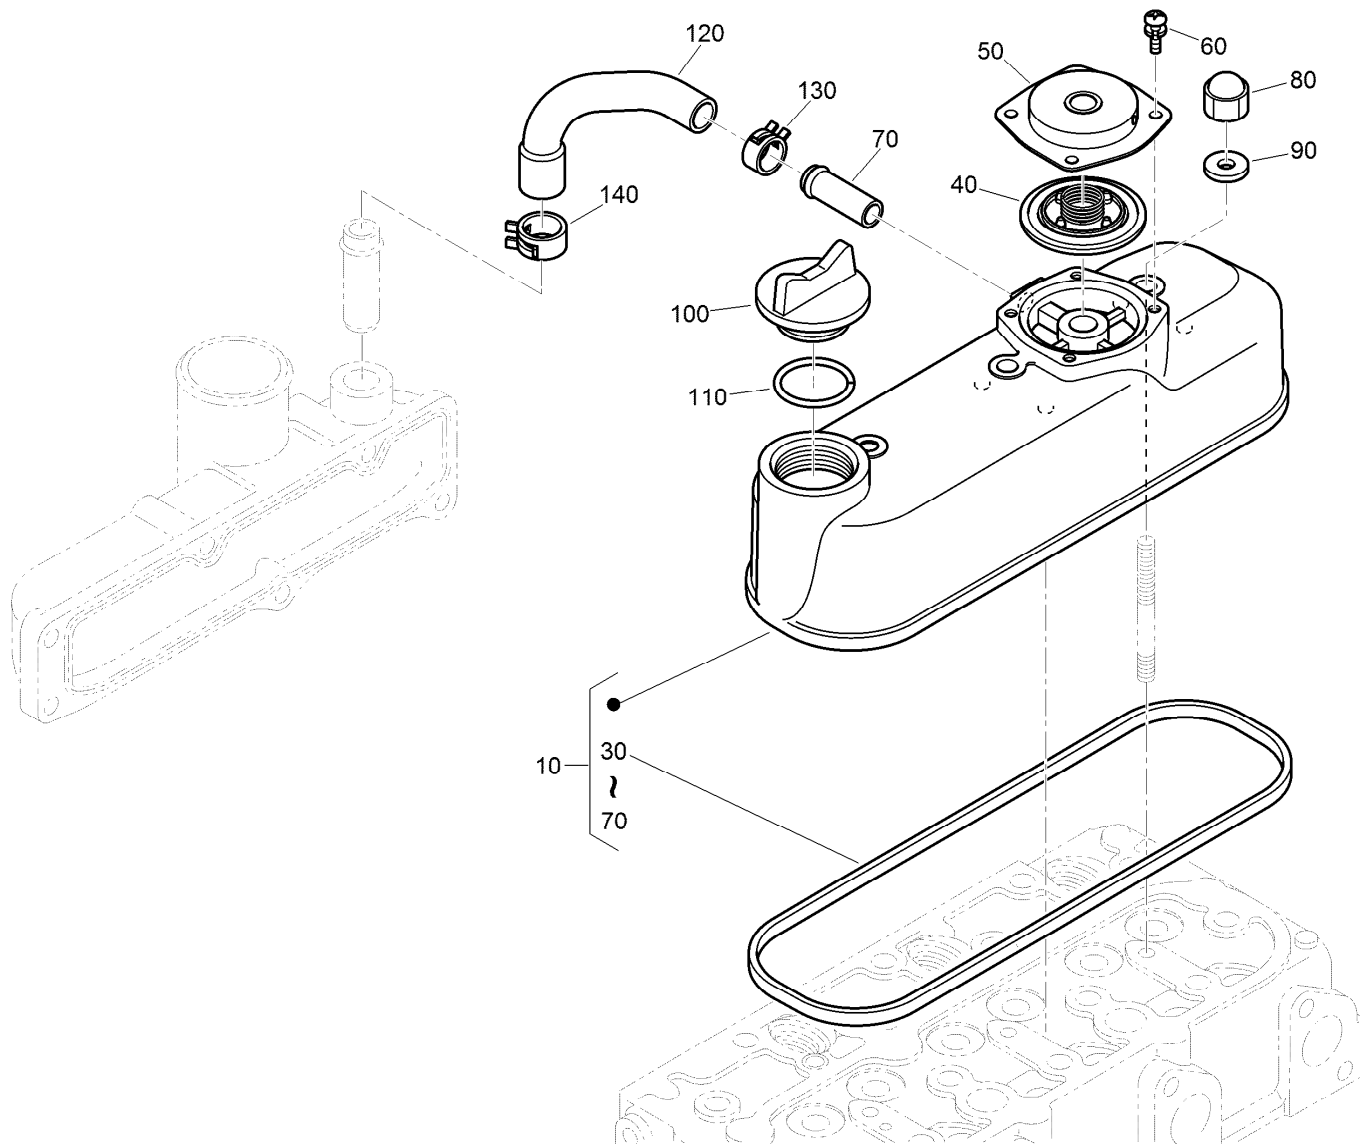 

Cylinder Head Cover Assembly


Ref.	Part Number	Qty.	Description
10	130-1372	1	Cylinder Head Cover ASM
30	98-9615	1	Gasket-Cover, Head
40	110-3715	1	Valve-Breather
50	110-3714	1	Cover-Breather
60	98-9364	4	Screw (With Washer)
70	98-7766	1	Pipe-Return, Water
80	98-9455	3	Nut-Cap
90	98-9454	3	Gasket
100	107-9075	1	Plug-Filler, Oil
110	99-3446	1	O-Ring
120	107-7836	1	Tube-Breather
130	108-2859	1	Clamp-Hose
140	108-2860	1	Clamp-Hose

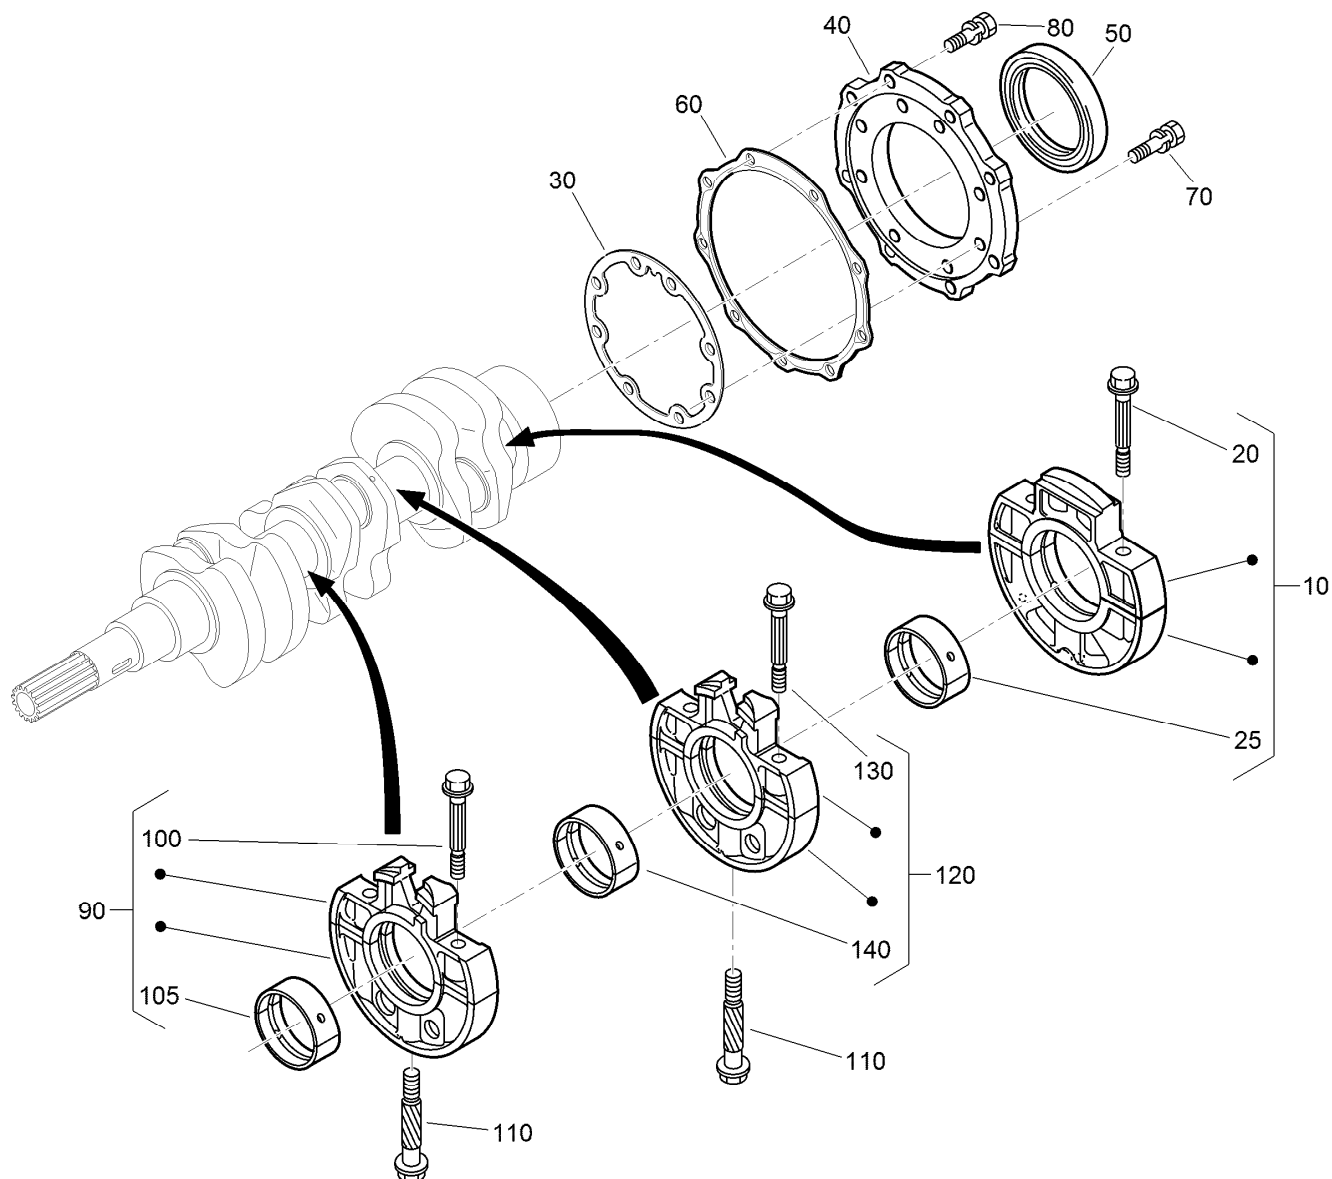 

Main Bearing Case Assembly


Ref.	Part Number	Qty.	Description
10	112-7026	1	Wheel Bearing Case ASM
20	98-9484	2	Bolt-Case, Bearing
25	115-4121	1	Metal-Crankshaft (STD)
25	112-7039	1	Metal-Crankshaft (0.2Mm)
25	112-7040	1	Metal-Crankshaft (-0.4Mm)
30	127-0440	1	Gasket-Case, Bearing
40	112-7046	1	Cover-Case, Bearing
50	112-0180	1	Seal-Oil
60	112-7037	1	Gasket-Cover, Case
70	127-0441	8	Bolt
80	127-0442	9	Bolt

Ref.	Part Number	Qty.	Description
90	115-4106	1	Main Bearing Case ASM
100	98-9484	2	Bolt-Case, Bearing
105	98-9524	1	Metal-Crankshaft (STD Set)
105	127-0433	1	Metal-Crankshaft (-0.2MM)
105	98-9531	1	Bearing-Main (0.4MM)
110	98-9485	2	Bolt-Case, Bearing
120	115-4107	1	Main Bearing Case ASM
130	98-9484	2	Bolt-Case, Bearing
140	98-9524	1	Metal-Crankshaft (STD Set)
140	127-0433	1	Metal-Crankshaft (-0.2MM)
140	98-9531	1	Bearing-Main (0.4MM)

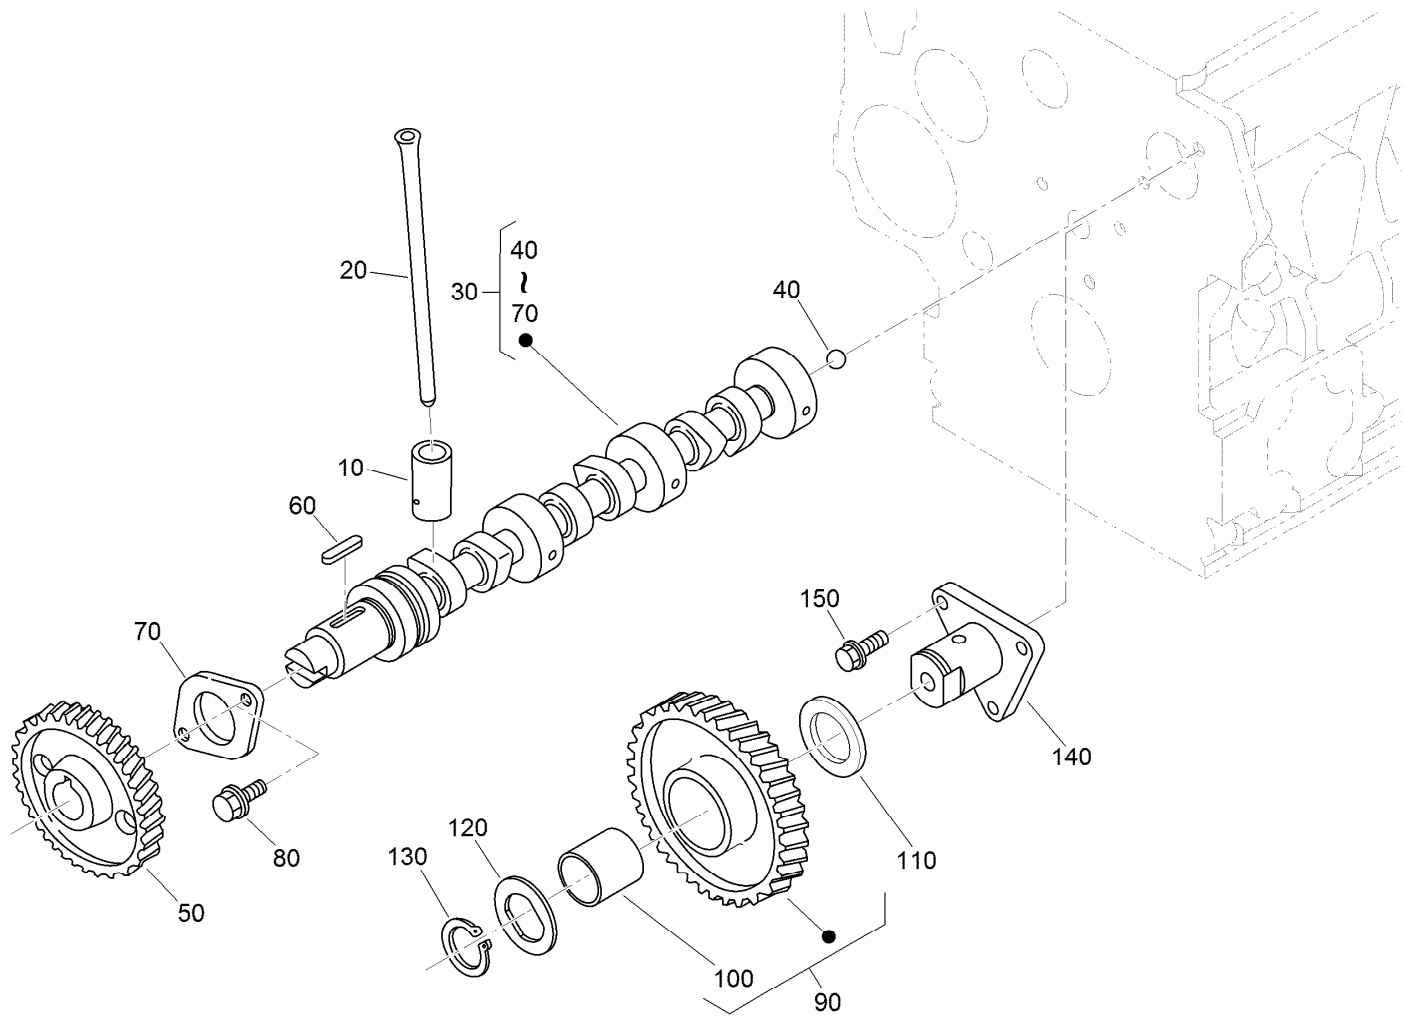 

Camshaft and Idle Gear Shaft Assembly


Ref.	Part Number	Qty.	Description
10	112-0185	6	Tappet
20	127-0421	6	Rod-Push
30	130-1505	1	Camshaft ASM
40	110-3729	1	Ball
50	120-3116	1	Camshaft ASM
60	98-9378	1	Key-Feather
70	98-9510	1	Stopper-Camshaft
80	98-7692	2	Bolt
90	117-7584	1	Idler Gear ASM
100	117-7585	1	Bushing-Gear, Idle
110	98-9535	1	Collar-Gear, Idle
120	98-9536	1	Collar-Gear, Idle
130	98-9534	1	Circlip-Gear, Idle
140	98-9533	1	Shaft-Gear, Idle
150	98-7692	3	Bolt

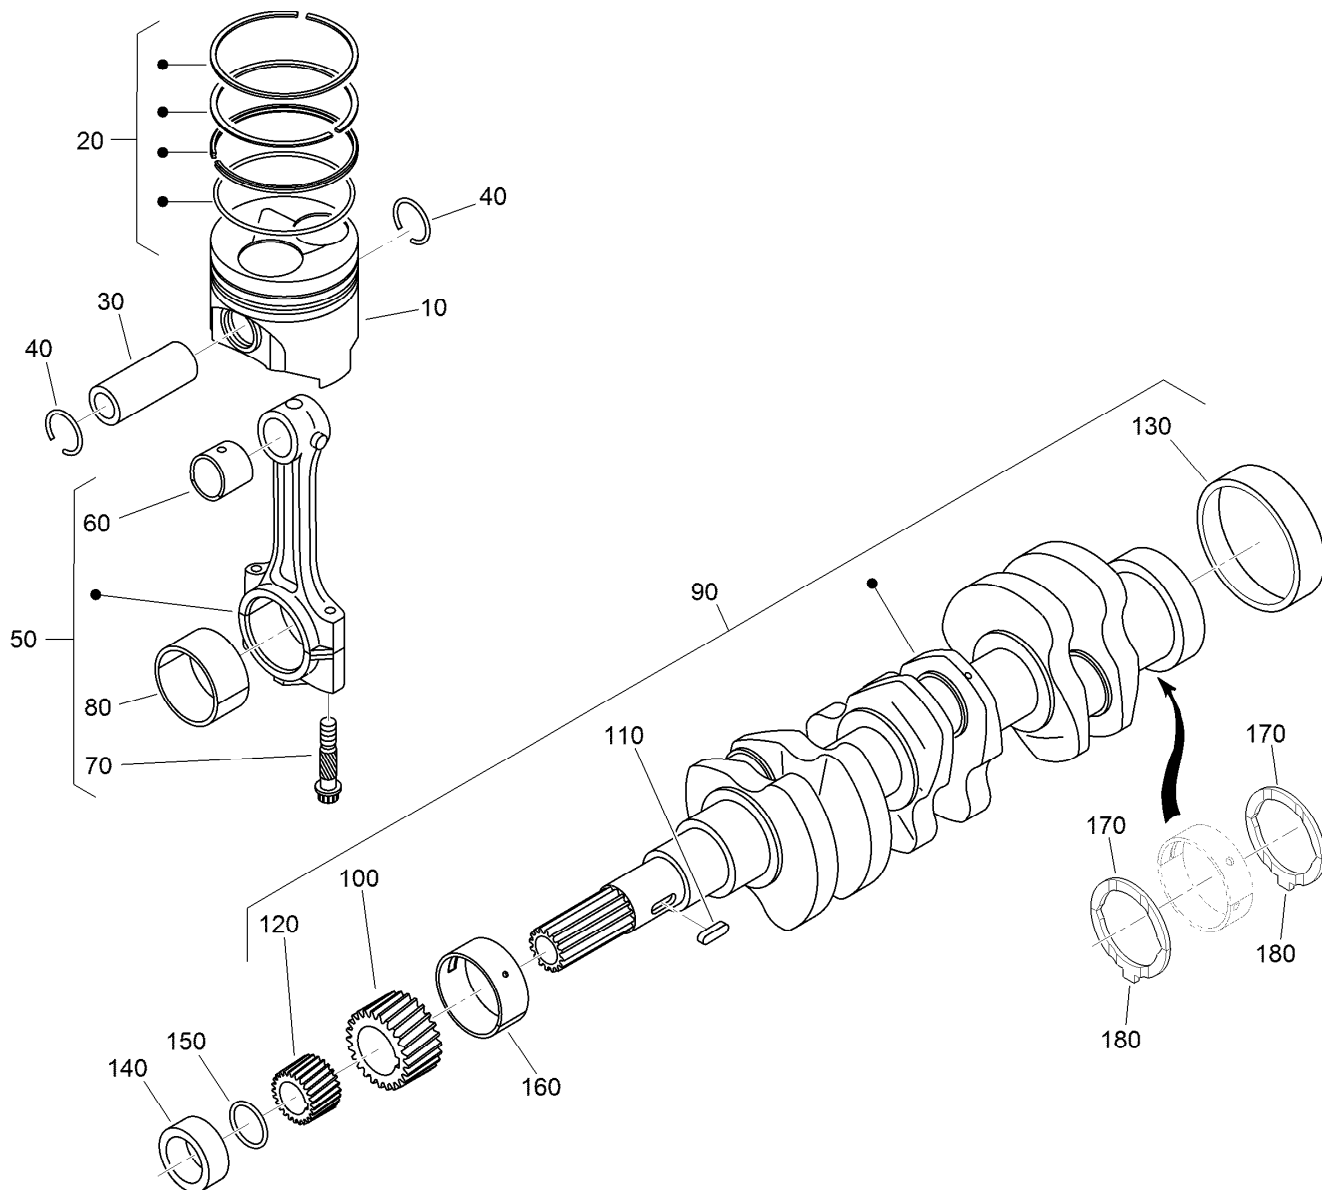 

Piston and Crankshaft Assembly

Ref.	Part Number	Qty.	Description
10	130-1546	3	Piston (STD)
10	130-1549	3	Piston (+0.50MM)
20	130-1506	3	Piston Ring ASM (STD)
20	130-1507	3	Piston Ring ASM (+0.50MM)
30	98-9513	3	Pin-Piston
40	98-9514	6	Circlip-Pin, Piston
50	117-7586	3	Connecting Rod ASM
60	115-3014	3	Bushing-Pin, Piston
70	98-9517	6	Bolt-Rod, Connecting
80	98-9553	3	Bearing-Rod (STD)
80	98-9519	3	Bearing-Rod (-0.2MM)
80	117-7588	3	Metal-Crankpin (-0.4MM)
90	130-1375	1	Crankshaft ASM
100	117-7561	1	Gear-Crankshaft


Ref.	Part Number	Qty.	Description
110	98-9666	1	Key
120	127-0445	1	Gear-Drive, Oil Pump
130	98-9522	1	Sleeve-Crankshaft
140	127-0444	1	Collar-Crankshaft
150	105-3783	1	O-Ring
160	112-7005	1	Bearing-Main (STD)
160	98-9528	1	Bearing-Main (-0.2MM)
160	130-1274	1	Metal-Crankshaft (-0.40Mm)
170	98-9413	2	Bearing-Thrust (STD)
170	127-0416	2	Metal-Side (+0.2Mm)
170	127-0417	2	Metal-Side (+0.40Mm)
180	98-9688	2	Bearing-Thrust (STD)
180	127-0437	2	Metal-Side (+0.2MM)
180	127-0438	2	Metal-Side (+0.40MM)

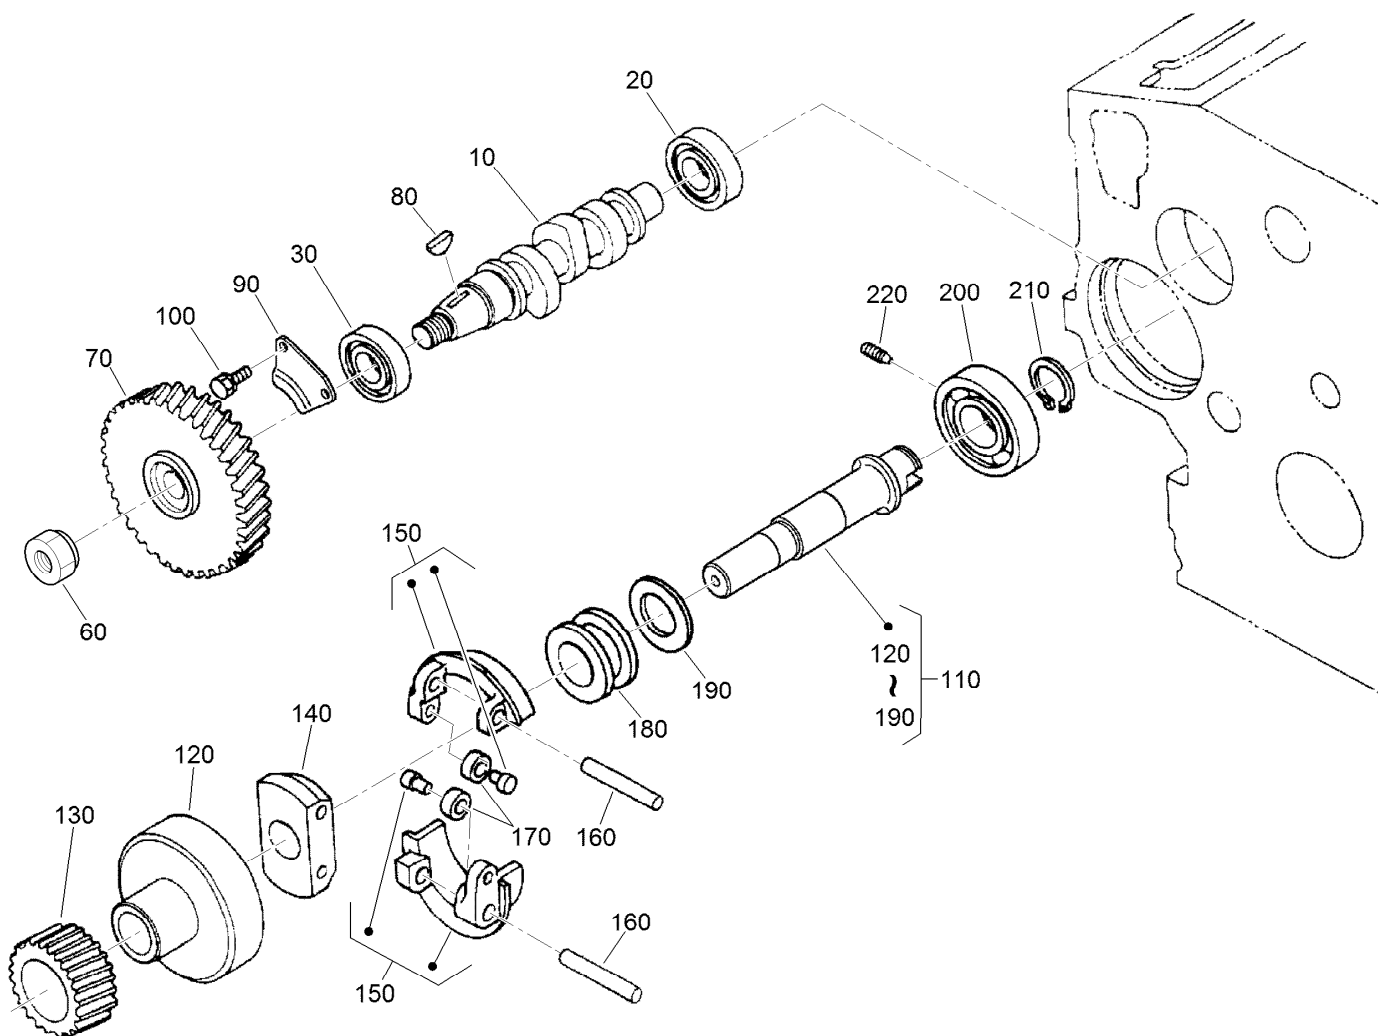 

Fuel Camshaft and Governor Shaft Assembly


Ref.	Part Number	Qty.	Description
10	98-9459	1	Camshaft-Fuel
20	107-9077	1	Bearing-Ball
30	107-9078	1	Bearing-Ball
60	130-1512	1	Nut
70	130-1378	1	Gear-Injection Pump
80	98-9595	1	Key-Woodruff
90	98-9511	1	Stopper-Fuel, Camshaft
100	98-7692	2	Bolt
110	130-1255	1	Governor Shaft ASM
120	98-9562	1	Holder-Gear, Governor

Ref.	Part Number	Qty.	Description
130	98-9673	1	Gear-Governor
140	98-9561	1	Holder-Weight, Governor
150	98-9559	2	Governor Weight ASM
160	98-9560	2	Shaft-Weight, Governor
170	98-9692	2	Roller
180	98-9563	1	Sleeve-Governor
190	98-9564	1	Washer-Thrust
200	107-9079	1	Bearing-Ball
210	98-9657	1	Circlip-Shaft, Governor
220	98-9565	1	Screw-Set

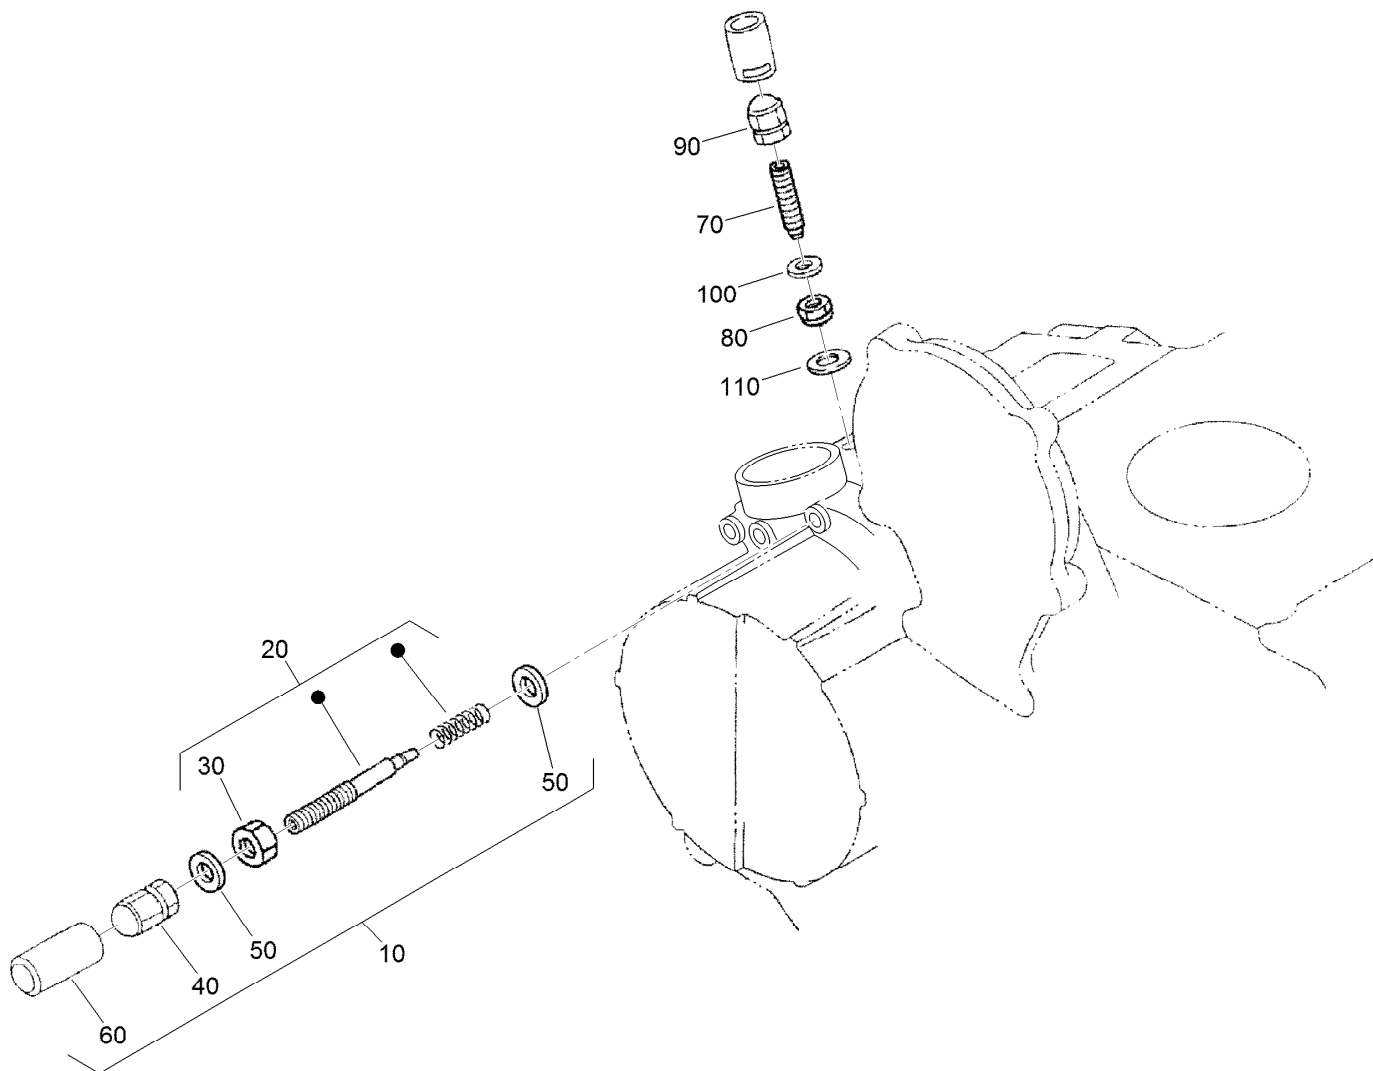 


Idle Apparatus Assembly

Ref.	Part Number	Qty.	Description
10	107-7838	1	Apparatus-Idling
20	130-1253	1	Adjusting Bolt ASM
30	98-9439	1	Nut
40	112-0181	1	Nut
50	98-7654	2	Gasket
60	98-7656	1	Cap
70	112-7015	1	Bolt-Adjusting
80	100-2175	1	Nut-Lock
90	112-0181	1	Nut
100	98-7654	1	Gasket
110	107-9081	1	Gasket

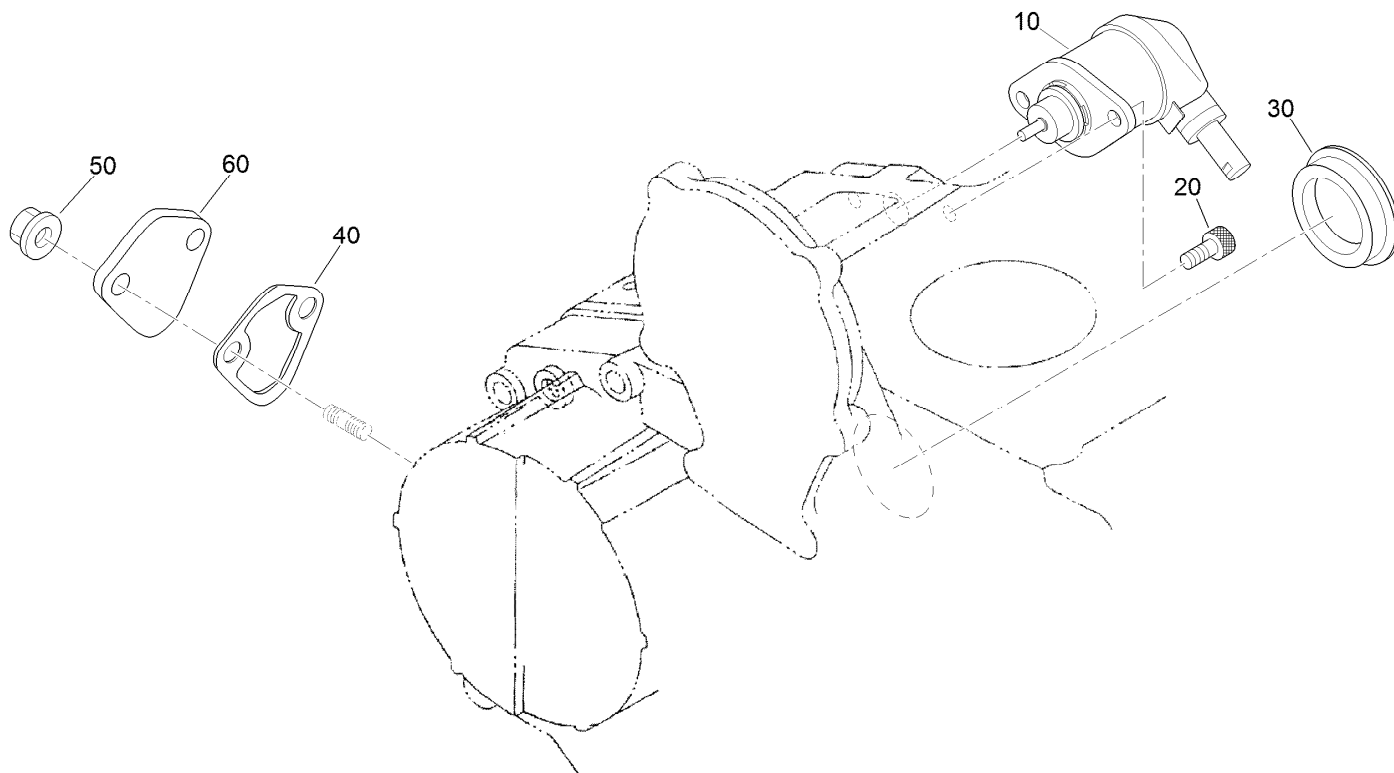 

Stop Solenoid and Fuel Pump Cover Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	104-5155	1	Solenoid-Stop
20	130-1155	2	Screw-HSH
30	99-3514	1	Cover
40	117-7562	1	Gasket-Pump, Fuel
50	100-2203	2	Nut-Flange
60	112-7016	1	Cover-Pump

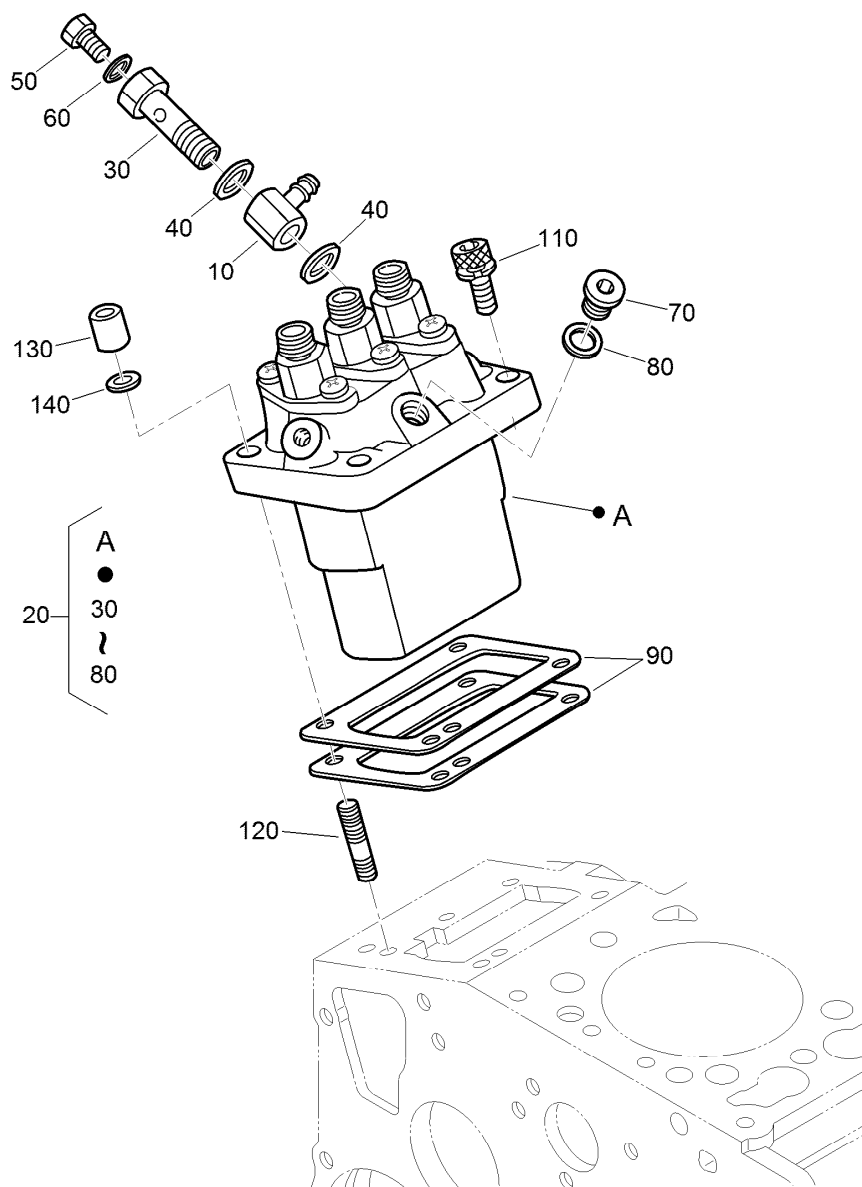 

Injection Pump Assembly

Ref.	Part Number	Qty.	Description
10	98-9596	1	Joint-Eye
20	98-9643	1	Injection Pump ASM
30	98-9464	1	Bolt-Joint
40	98-9445	2	Gasket
50	98-9430	1	Screw
60	98-9446	1	Gasket
70	98-9466	1	Plug
80	98-9451	1	Gasket
90	98-9456	1	Shim-Injection (0.20MM)


Ref.	Part Number	Qty.	Description
90	98-9457	1	Shim-Injection (0.25MM)
90	98-9458	1	Shim-Injection (0.30MM)
90	115-3046	1	Shim-Injection (0.35MM)
90	115-3045	1	Shim-Injection (0.175MM)
110	117-7564	2	Bolt-Hex Soc HD
120	98-9438	2	Stud
130	98-9440	2	Nut-Cap
140	98-7699	2	Washer-Spring

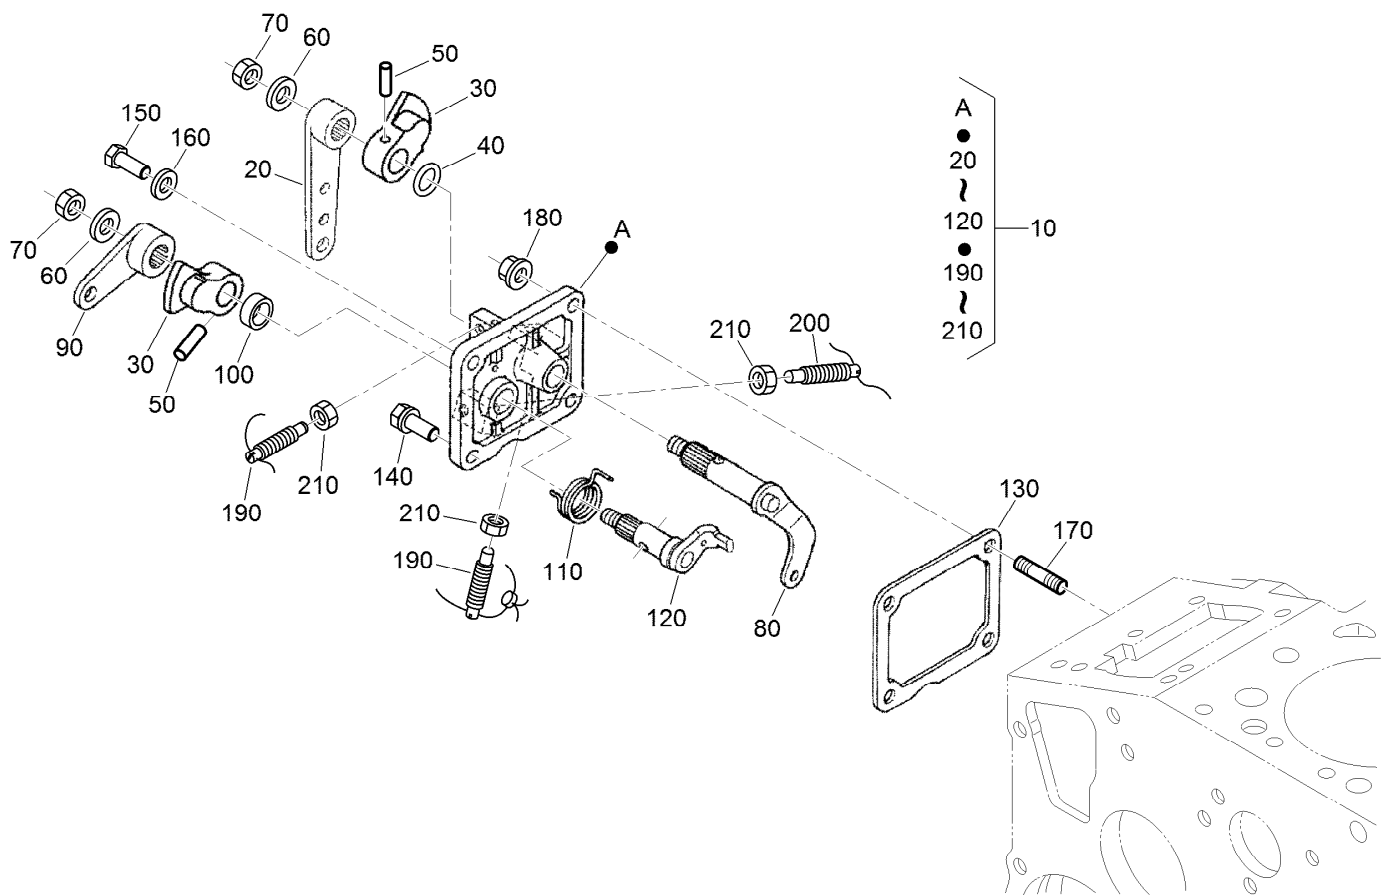 

Speed Control Plate Assembly

Ref.	Part Number	Qty.	Description
10	105-3735	1	Control Plate ASM
20	98-9662	1	Lever-Control, Speed
30	98-9572	2	Lever-Control, Speed
40	105-3788	1	O-Ring
50	98-7602	2	Pin-Spring
60	98-9594	2	Washer-Plain
70	98-9589	2	Nut
80	98-9658	1	Governor Lever ASM
90	98-9663	1	Lever-Stop, Engine
100	98-7601	1	Seal-Oil
110	98-9472	1	Spring-Return


Ref.	Part Number	Qty.	Description
120	98-9664	1	Shaft-Lever, Stop
130	98-9637	1	Gasket
140	98-7692	1	Bolt
150	127-0401	1	Bolt-Hex
160	98-7654	1	Gasket
170	105-3710	2	Stud
180	100-2203	2	Nut-Flange
190	117-7565	2	Bolt-Adjusting
200	117-7566	1	Bolt-Adjusting
210	98-7572	3	Nut

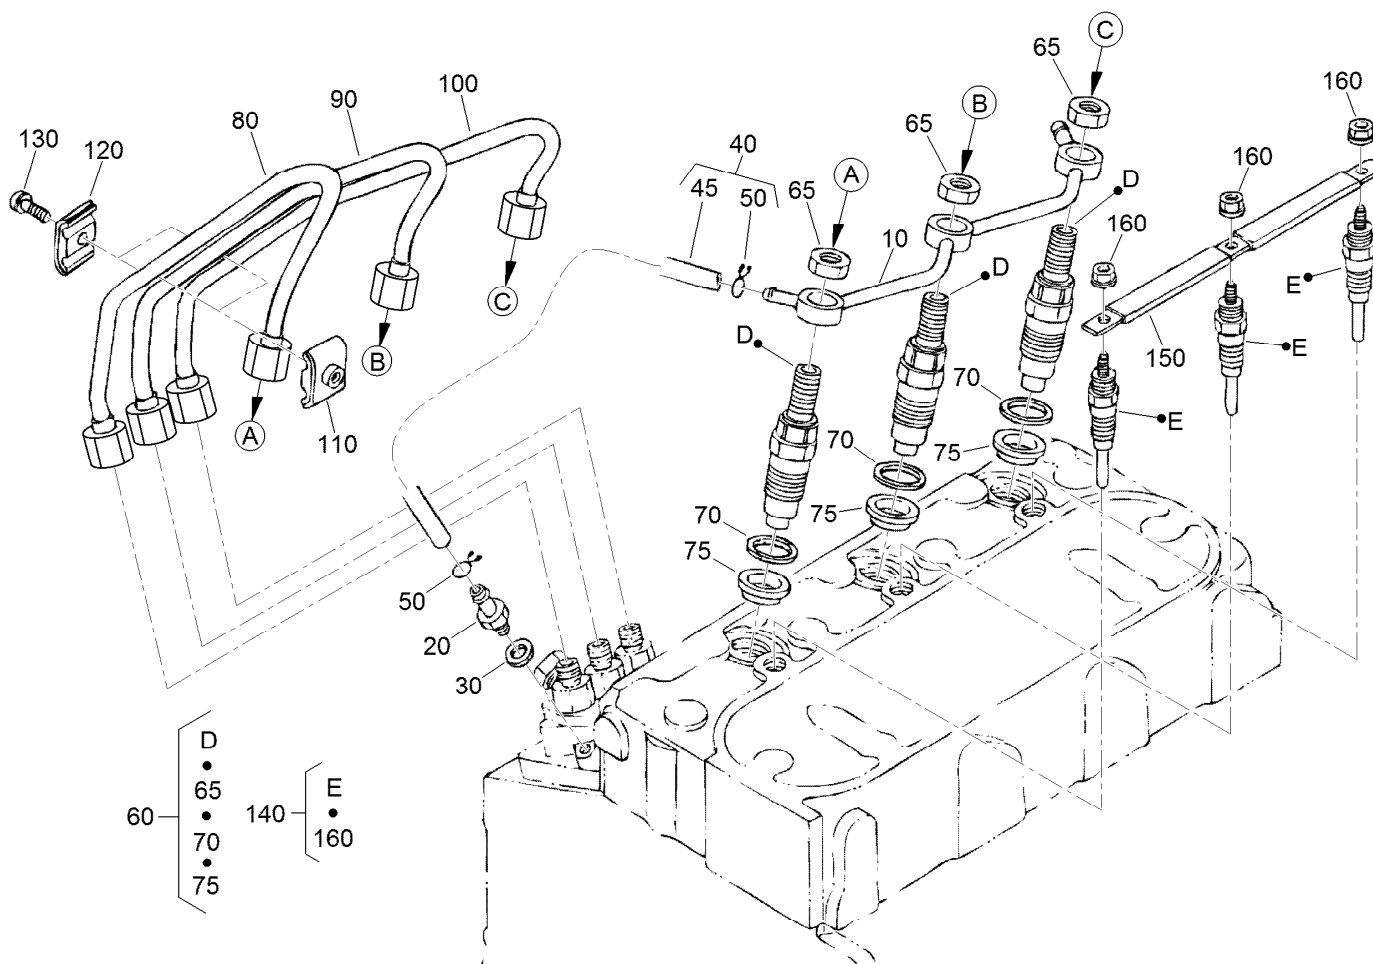 

Nozzle Holder and Glow Plug Assembly


Ref.	Part Number	Qty.	Description
10	98-9620	1	Overflow Pipe ASM
20	98-9431	1	Screw-Bleeder, Air
30	98-7654	1	Gasket
40	98-9420	1	Overflow Pipe ASM
45	112-0182	1	Pipe-Overflow
50	98-7671	2	Clip-Pipe
60	115-3018	3	Nozzle Holder Kit
65	121-2411	3	Nut
70	98-7676	3	Gasket
75	98-7677	3	Seal-Heat

Ref.	Part Number	Qty.	Description
80	98-9622	1	Pipe-Injection
90	98-9654	1	Pipe-Injection
100	98-9655	1	Pipe-Injection
110	98-7682	2	Clamp-Pipe
120	98-7683	2	Clamp-Pipe
130	98-7684	2	Screw (W/Washer)
140	130-1411	3	Plug-Glow
150	98-9631	1	Cord-Plug, Glow
160	99-8377	3	Nut-Flange

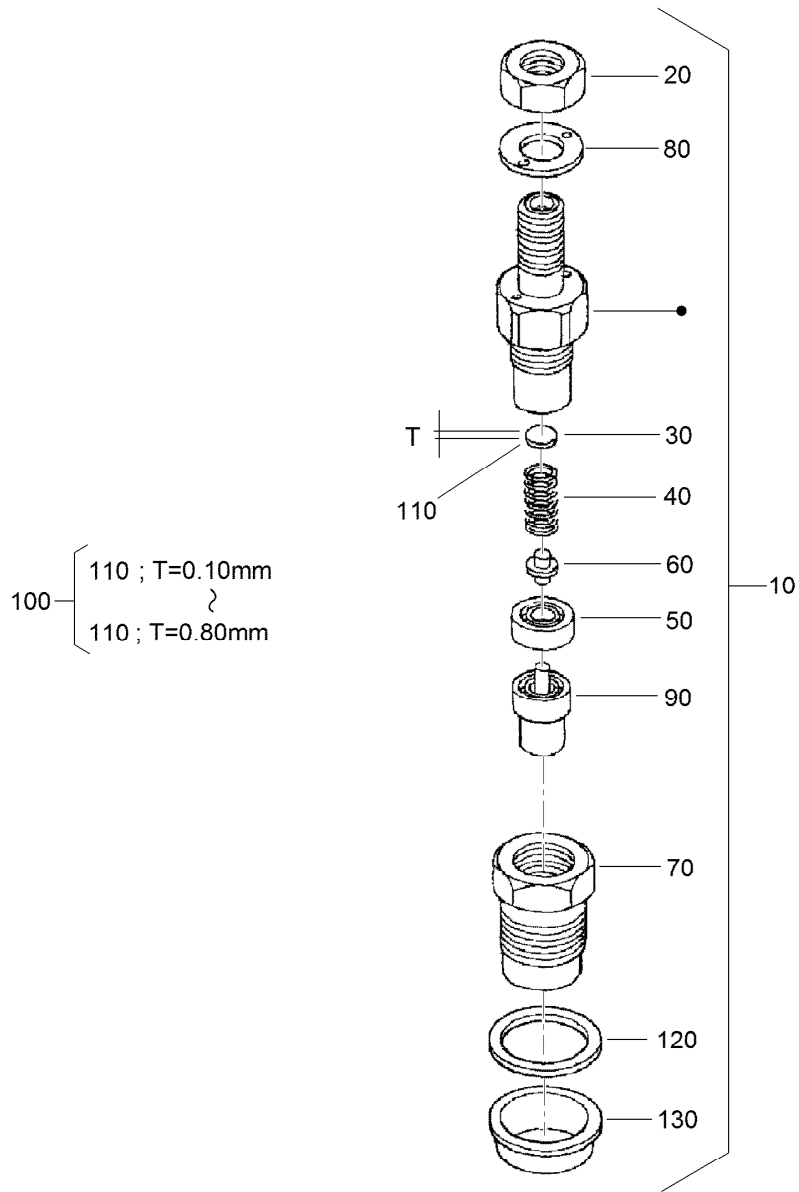 


Nozzle Holder Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
10	115-3018	3	Nozzle Holder Kit	110	99-8311	3	Washer-Adjust (0.20MM)
20	121-2411	3	Nut	110	99-8312	3	Washer-Adjust (0.30MM)
30	99-8302	3	Washer-Adjusting	110	99-8313	3	Washer-Adjust (0.40MM)
40	99-8303	3	Spring-Nozzle	110	99-8314	3	Washer-Adjust (0.50MM)
50	99-8304	3	Spacer-Distance	110	99-8315	3	Washer-Adjust (0.52MM)
60	99-8305	3	Rod-Push	110	99-8316	3	Washer-Adjust (0.54MM)
70	99-8306	3	Nut-Nozzle	110	99-8317	3	Washer-Adjust (0.56MM)
80	99-8307	3	Washer-Plain	110	99-8318	3	Washer-Adjust (0.58MM)
90	115-3020	3	Piece-Nozzle	110	99-8319	3	Washer-Adjust (0.80MM)
100	99-8309	3	Adjusting Washer ASM	120	98-7676	3	Gasket
110	99-8310	3	Washer-Adjust (0.10MM)	130	98-7677	3	Seal-Heat

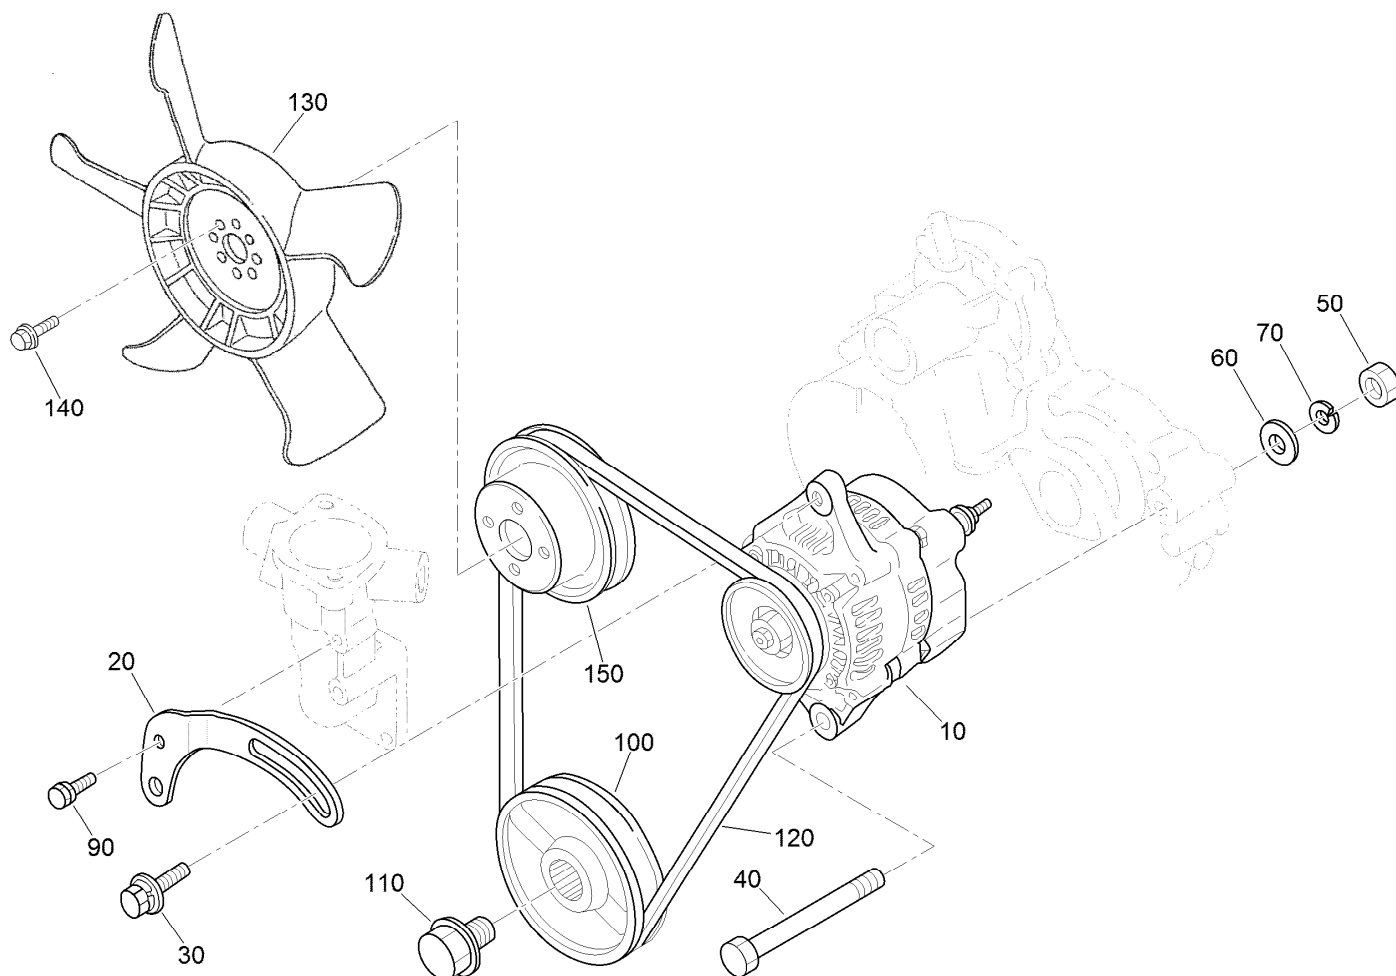 

Alternator, Pulley and Fan Assembly


Ref.	Part Number	Qty.	Description
10	98-9474	1	Alternator ASM
20	112-7047	1	Stay-Dynamo
30	108-7088	1	Bolt
40	98-9360	1	Bolt
50	98-7737	1	Nut
60	98-9366	1	Washer-Plain
70	98-7738	1	Washer-Spring
90	98-7692	1	Bolt
100	99-3456	1	Pulley-Drive, Fan
110	98-9585	1	Bolt
120	130-1241	1	V Belt
130	99-3461	1	Fan
140	99-8363	4	Bolt-Flange
150	99-3453	1	Pulley-Fan

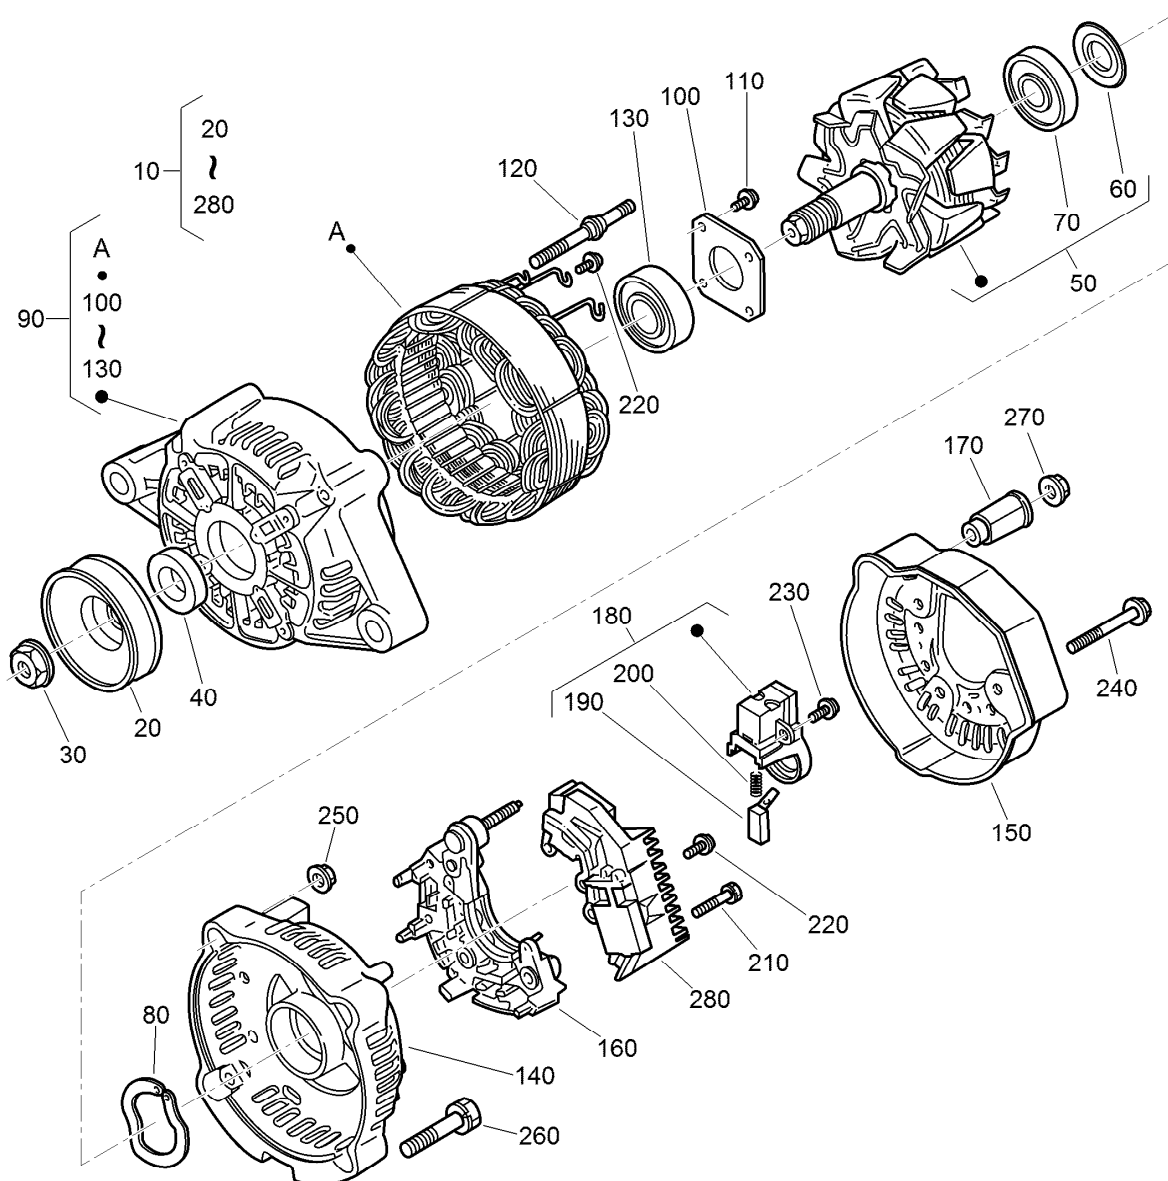 

Alternator Components Assembly


Ref.	Part Number	Qty.	Description
10	98-9474	1	Alternator ASM
20	98-9453	1	Pulley-Dynamo
30	98-7708	1	Nut
40	98-7709	1	Collar
50	107-0136	1	Rotor ASM
60	98-7711	1	Cover-Bearing
70	107-0138	1	Bearing-Ball
80	98-7713	1	Washer-Thrust
90	107-0139	1	Drive End Frame ASM
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	133-2811	1	Bearing
140	107-9087	1	Frame-End

Ref.	Part Number	Qty.	Description
150	107-0140	1	Cover-End
160	127-1612	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	107-0141	1	Brush Holder ASM
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	110-3799	1	Regulator ASM

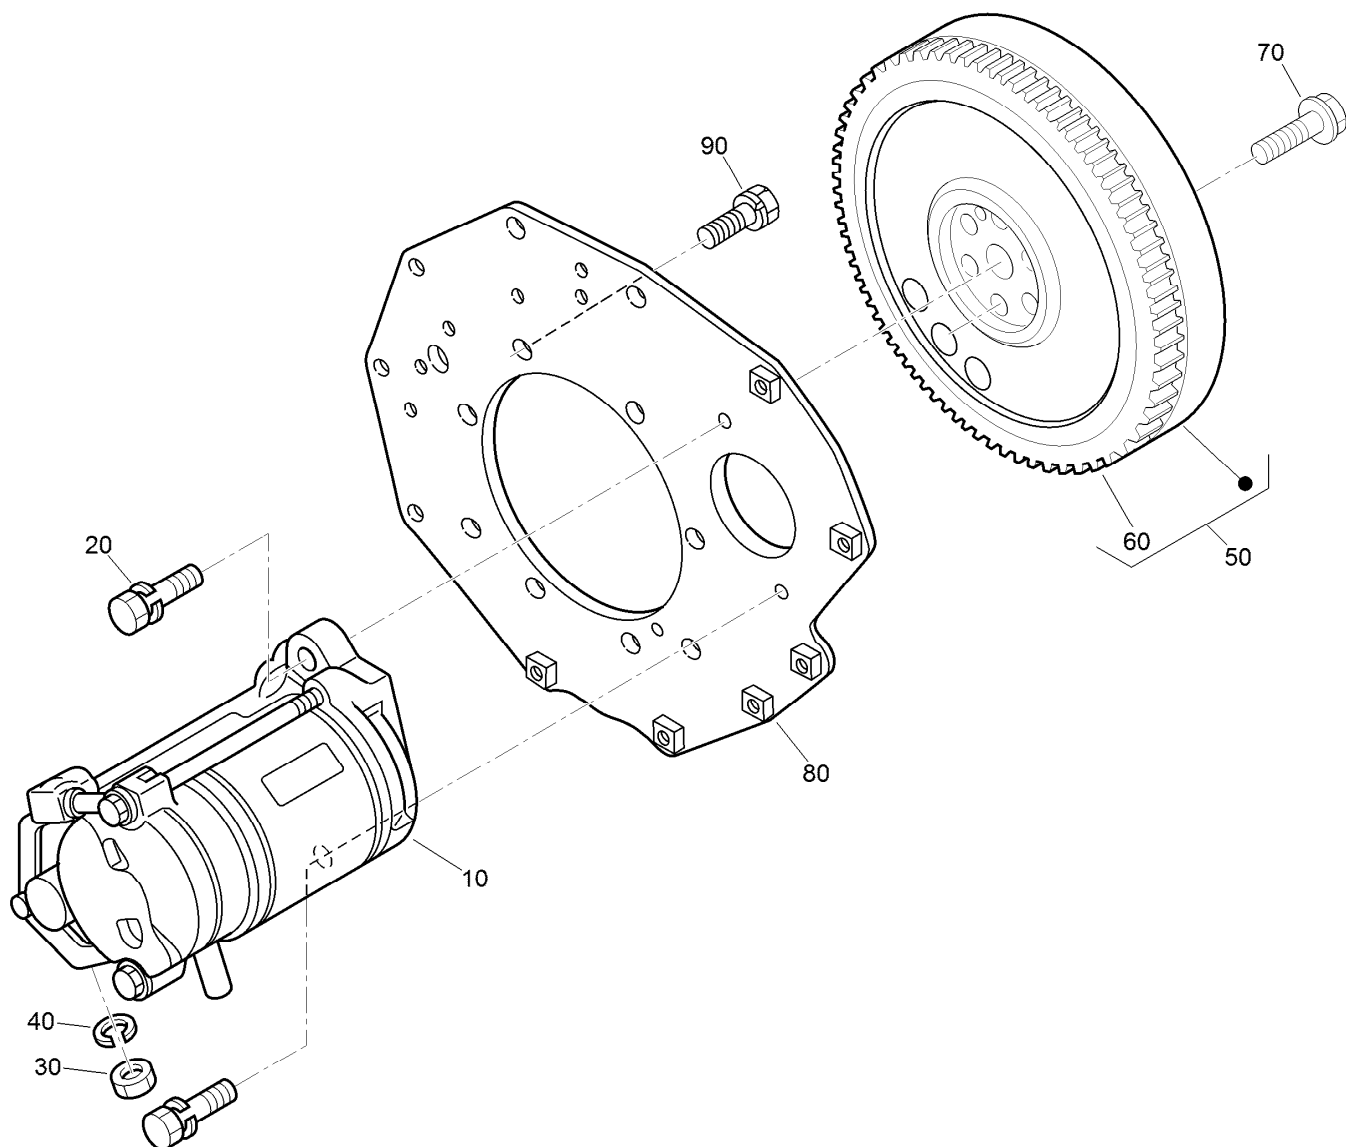 

Starter and Flywheel Assembly


Ref.	Part Number	Qty.	Description
10	98-9705	1	Starter ASM
20	98-7697	2	Bolt
30	98-7739	1	Nut
40	105-2893	1	Washer-Spring
50	105-3784	1	Flywheel ASM
60	115-3015	1	Gear-Ring
70	98-9537	6	Bolt-Flywheel
80	98-9486	1	Plate-End, Rear
90	98-9392	8	Bolt

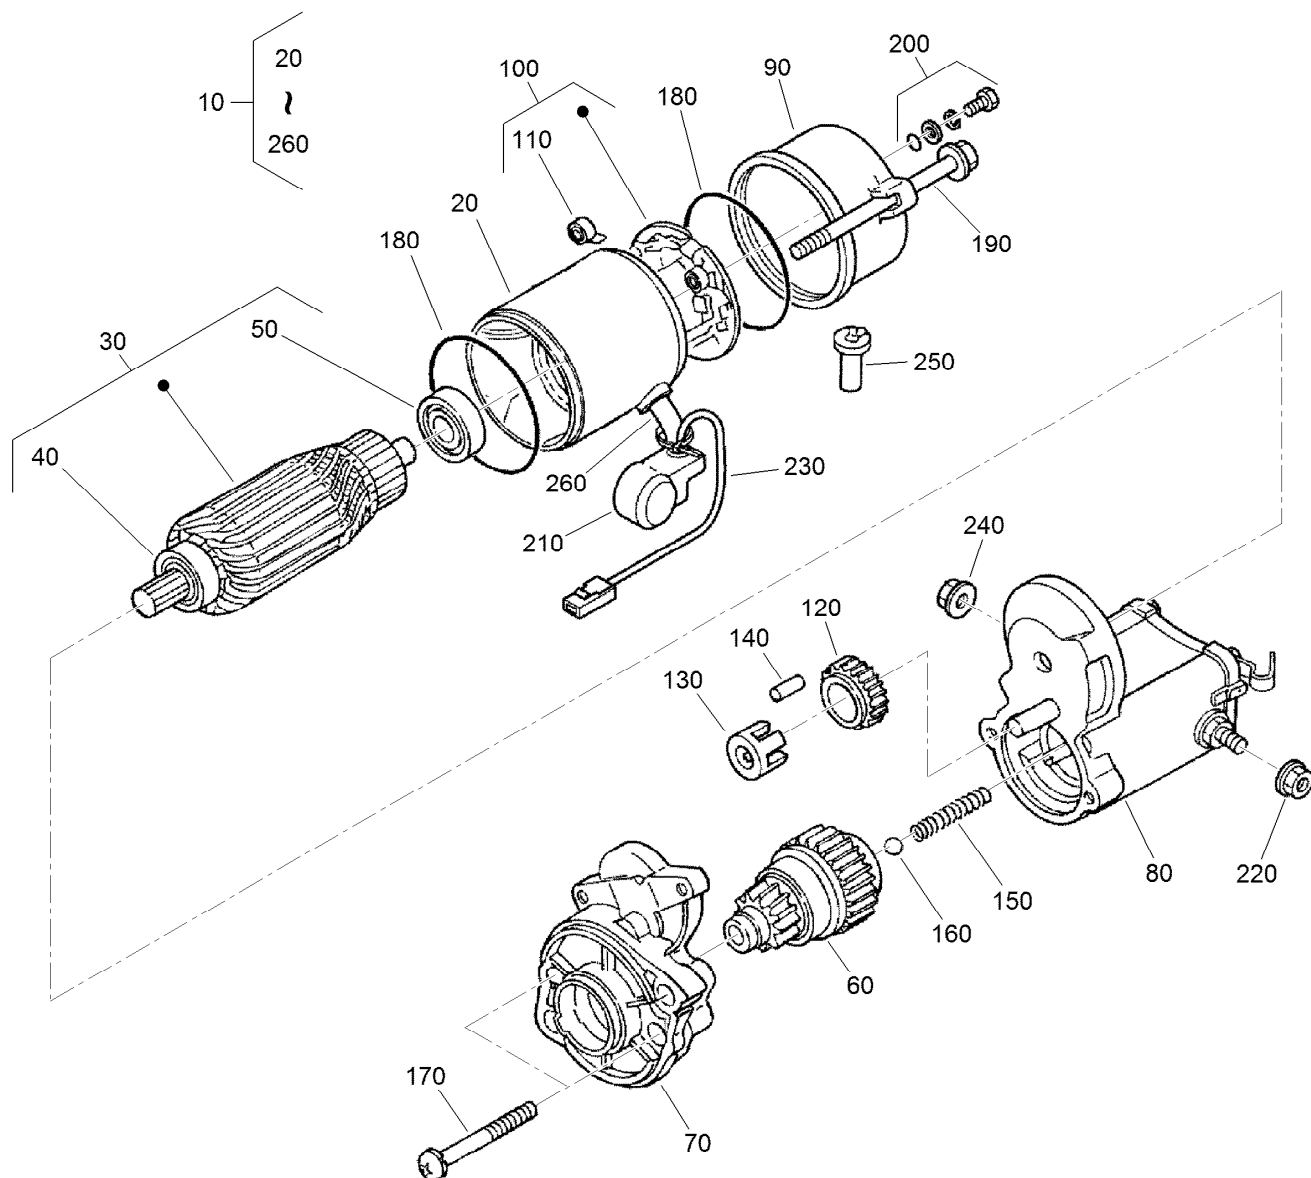 

Starter Component Assembly


Ref.	Part Number	Qty.	Description
10	98-9705	1	Starter ASM
20	104-8608	1	Yoke ASM
30	98-7742	1	Armature ASM
40	98-7744	1	Bearing
50	98-7743	1	Bearing
60	99-8373	1	Clutch-Running, Over
70	99-8374	1	Frame-End, Drive
80	105-3746	1	Magnetic Switch ASM
90	98-7748	1	Frame-End
100	98-7749	1	Brush Holder ASM
110	98-7750	4	Spring-Brush
120	98-7751	1	Gear
130	98-7752	1	Retainer

Ref.	Part Number	Qty.	Description
140	98-7753	5	Roller
150	98-7754	1	Spring
160	98-7755	1	Ball
170	98-7756	2	Bolt
180	98-7757	2	O-Ring
190	100-9240	2	Bolt
200	98-7758	2	Bolt ASM
210	99-8375	1	Cover
220	99-8371	1	Nut-Hex
230	98-9711	1	Cord-Solenoid, Stop
240	99-8376	1	Nut-Hex
250	98-7759	1	Pipe-Drain
260	98-9712	1	Band-Cover

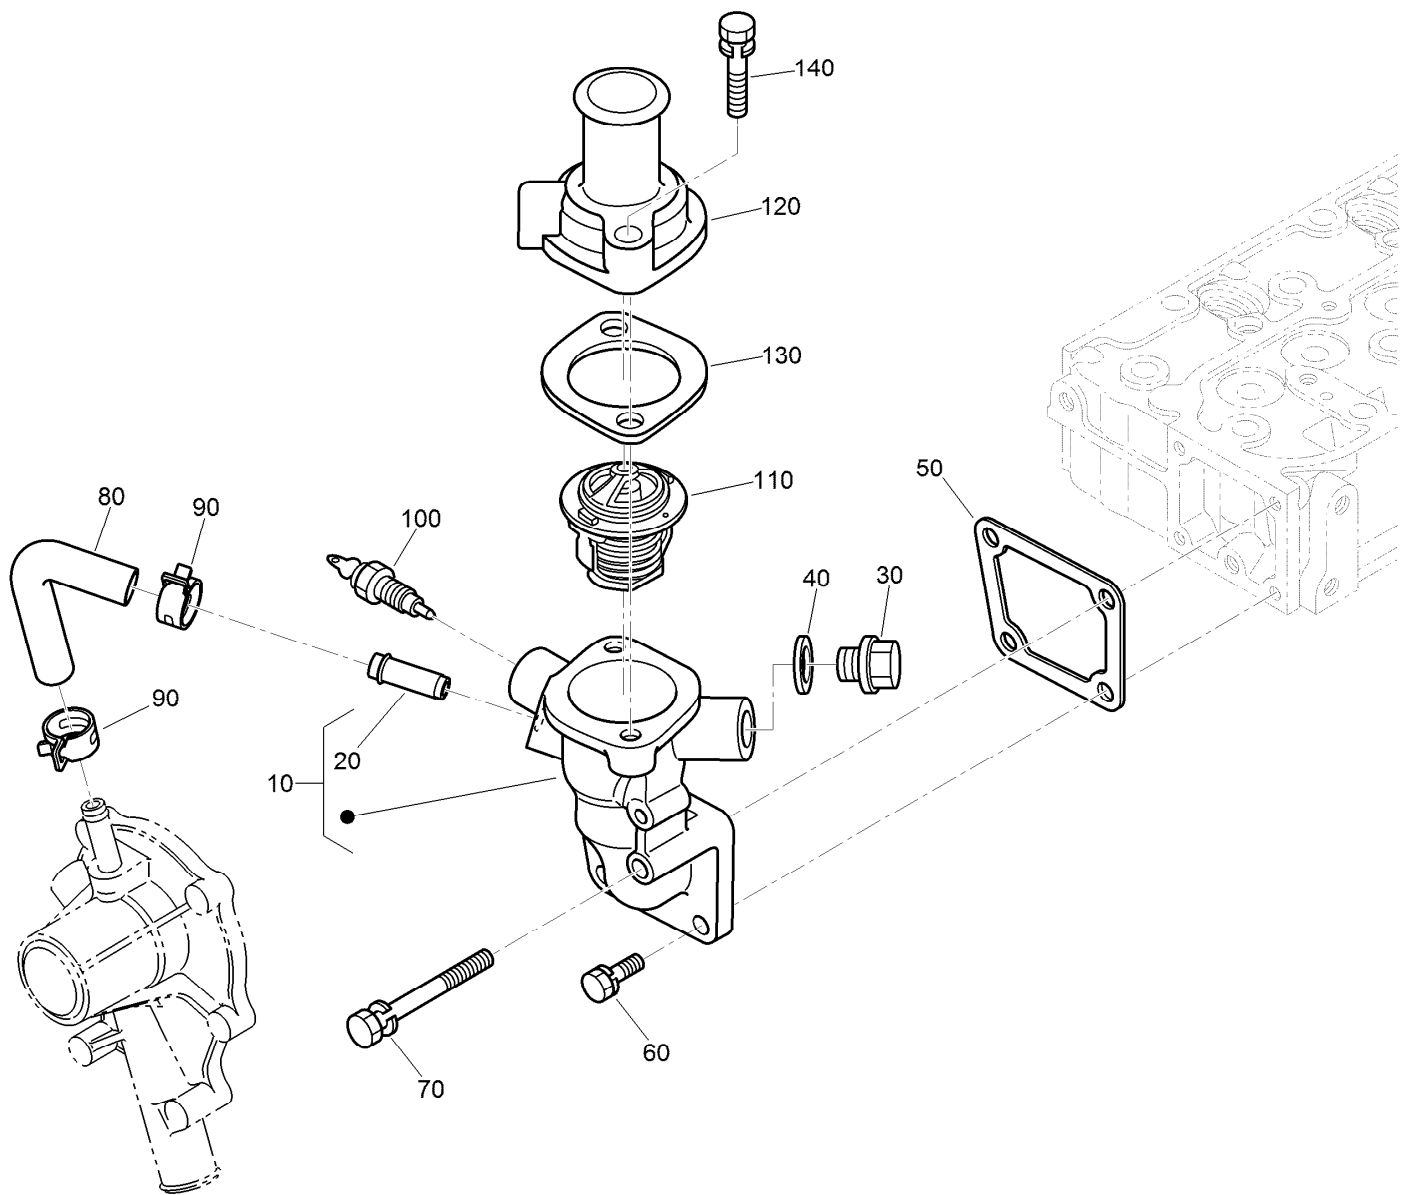 


Water Flange and Thermostat Assembly

Ref.	Part Number	Qty.	Description
10	98-9713	1	Water Flange ASM
20	98-9580	1	Pipe-Return, Water
30	105-3747	1	Plug
40	99-3583	1	Gasket
50	98-9638	1	Gasket-Flange, Water
60	98-7692	3	Bolt
70	98-9356	1	Bolt
80	98-9578	1	Pipe-Return, Water
90	125-9078	2	Clamp-Hose
100	98-9719	1	Thermoswitch
110	98-7778	1	Thermostat ASM
120	98-9471	1	Cover-Thermostat
130	105-3748	1	Gasket-Thermostat
140	98-7777	2	Bolt

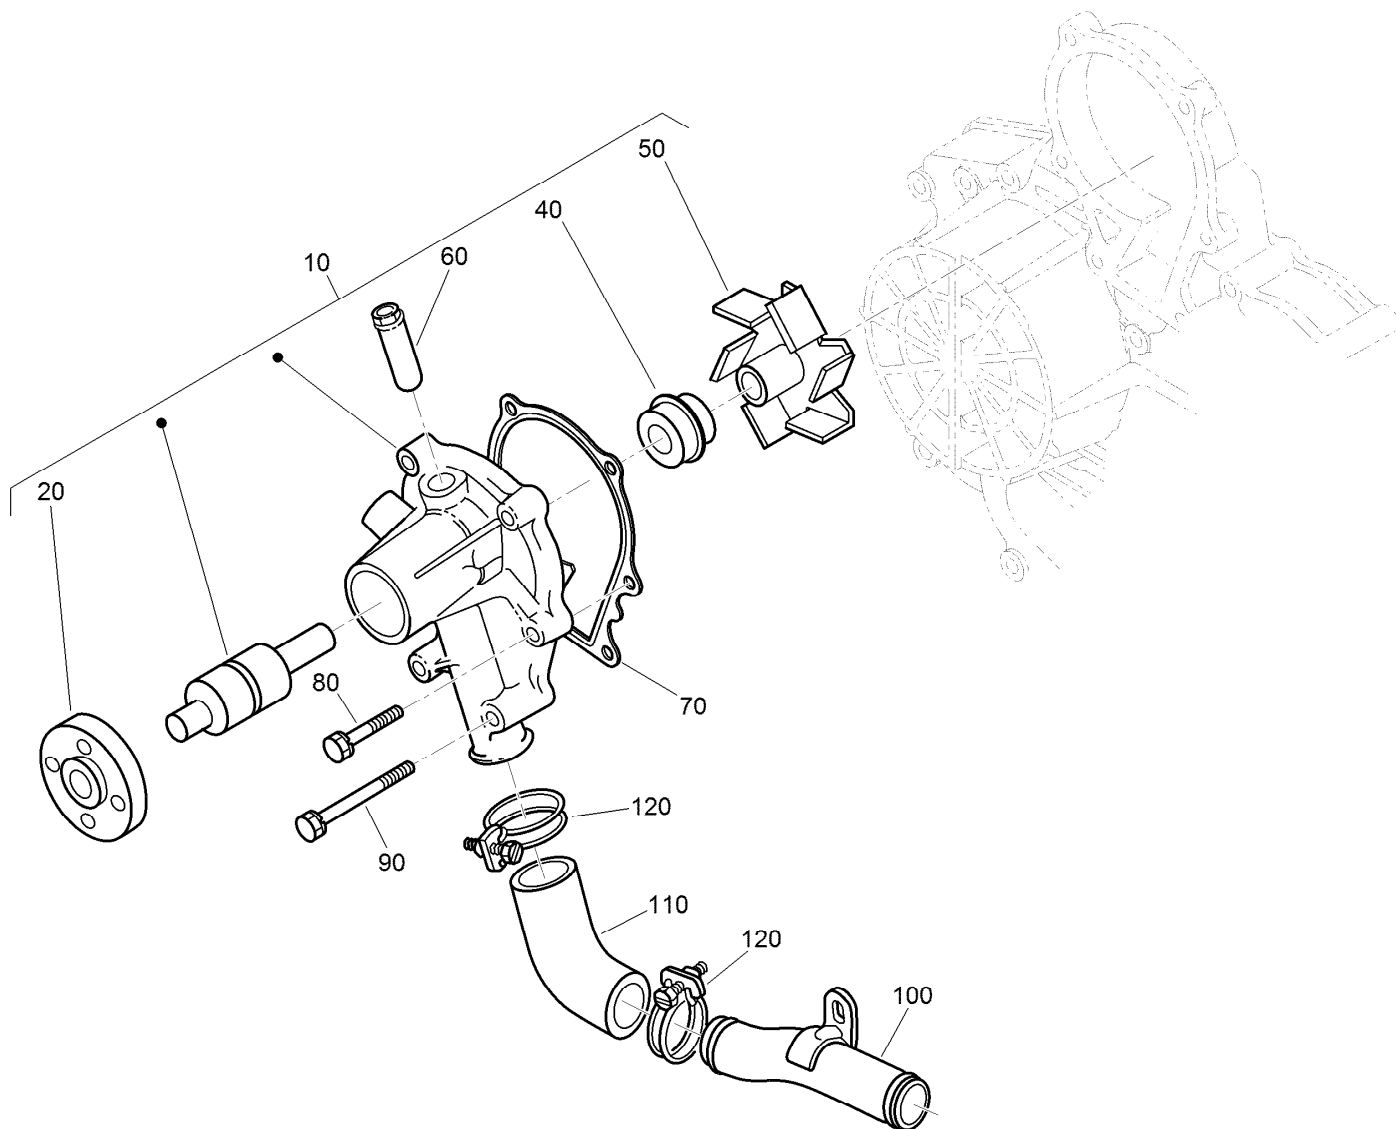 

Water Pump and Water Pipe Assembly


Ref.	Part Number	Qty.	Description
10	107-9089	1	Water Pump ASM
20	99-3516	1	Flange-Pump, Water
40	105-3750	1	Mechanical Seal ASM
50	112-7017	1	Impeller-Pump, Water
60	100-1932	1	Pipe-Return, Water
70	99-3454	1	Gasket-Pump, Water
80	98-9353	4	Bolt
90	98-9357	2	Bolt
100	98-9716	1	Pipe-Water
110	107-9091	1	Pipe-Water
120	127-0439	2	Clamp-Hose

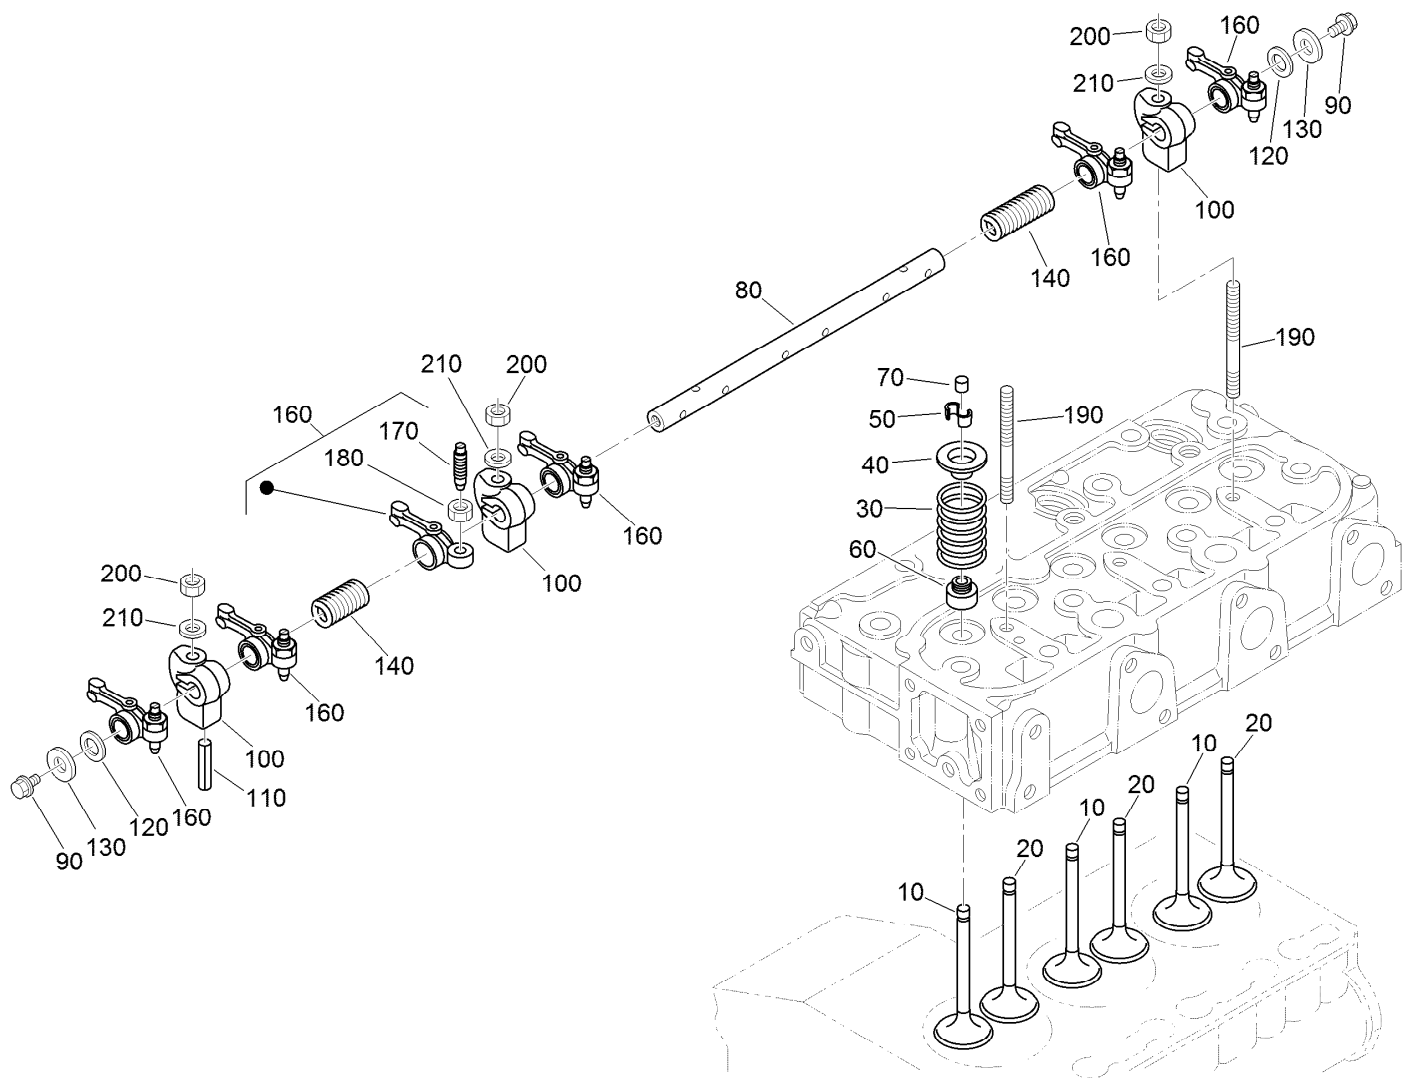 

Valve and Rocker Arm Assembly


Ref.	Part Number	Qty.	Description
10	112-7018	3	Valve-Inlet
20	120-2564	3	Valve-Exhaust
30	98-9648	6	Spring-Valve
40	107-9092	6	Retainer-Spring
50	117-7572	6	Collet-Spring, Valve
60	99-8385	6	Seal-Stem, Valve
70	98-9497	6	Cap-Valve
80	130-1248	1	Shaft-Arm, Rocker
90	99-8363	2	Bolt-Flange
100	98-9505	3	Bracket-Arm, Rocker

Ref.	Part Number	Qty.	Description
110	105-3758	1	Pin-Spring
120	98-9507	2	Washer-Shaft, Rocker Arm
130	110-3832	2	Washer-Plain
140	98-9504	2	Spring-Arm, Rocker
160	112-7020	6	Rocker Arm ASM
170	98-9502	6	Screw-Adjusting
180	98-9503	6	Nut
190	98-9506	3	Stud
200	98-9393	3	Nut
210	98-9385	3	Washer-Flat

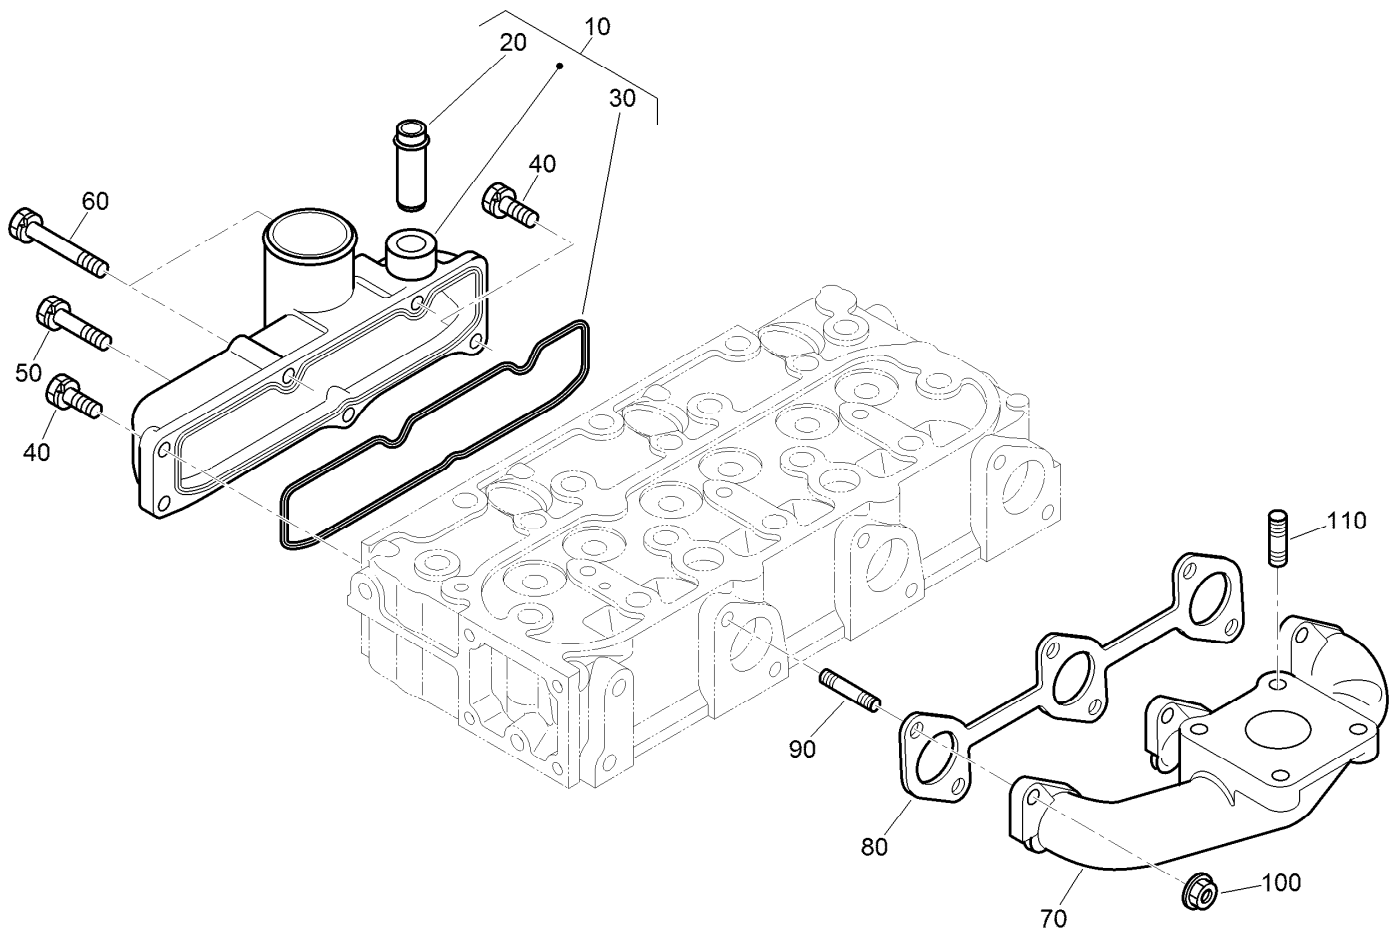 


Inlet and Exhaust Manifold Assembly

Ref.	Part Number	Qty.	Description
10	107-7843	1	Manifold Inlet ASM
20	98-9492	1	Joint-Pipe, Breather
30	98-9609	1	Gasket-Manifold, Inlet
40	127-0403	3	Bolt-Flange
50	98-9353	1	Bolt
60	125-9063	2	Bolt-Sems
70	107-9093	1	Manifold-Exhaust
80	99-8327	1	Gasket-Manifold, Exhaust
90	98-9588	6	Stud
100	98-9665	6	Nut
110	98-7769	4	Stud

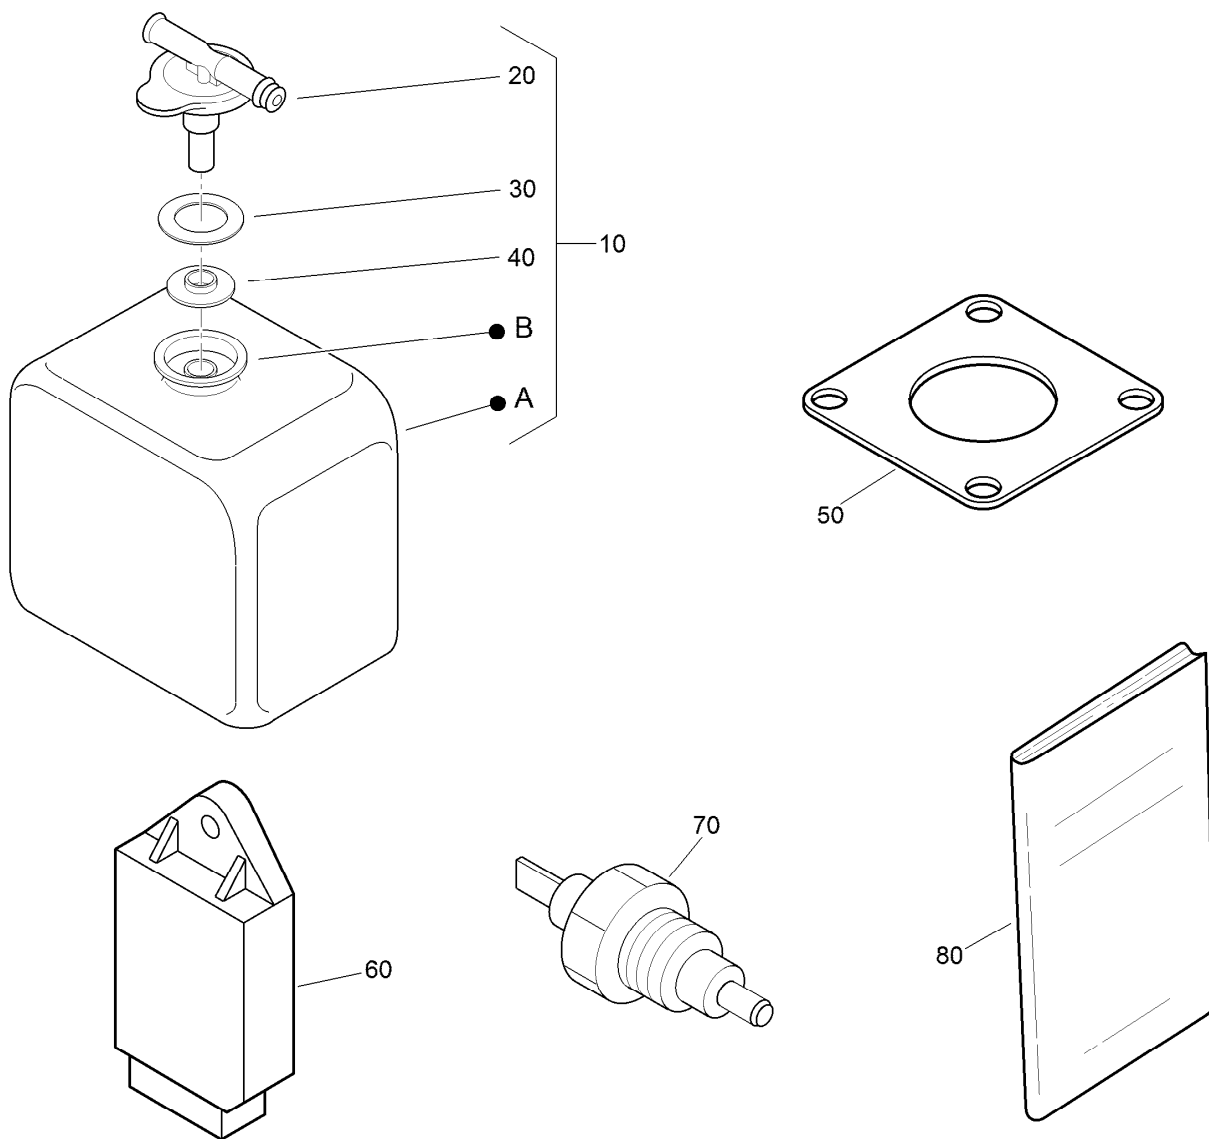 


Miscellaneous Engine Parts

Ref.	Part Number	Qty.	Description
10	104-9318	1	Bottle-Overflow
20	115-4132	1	Cap
30	105-3755	1	Gasket
40	105-3756	1	Plate
50	99-8343	1	Gasket-Muffler
60	98-7611	1	Controller-Glow
70	106-7772	1	Thermoswitch
80	130-1543	1	Manual-Operator

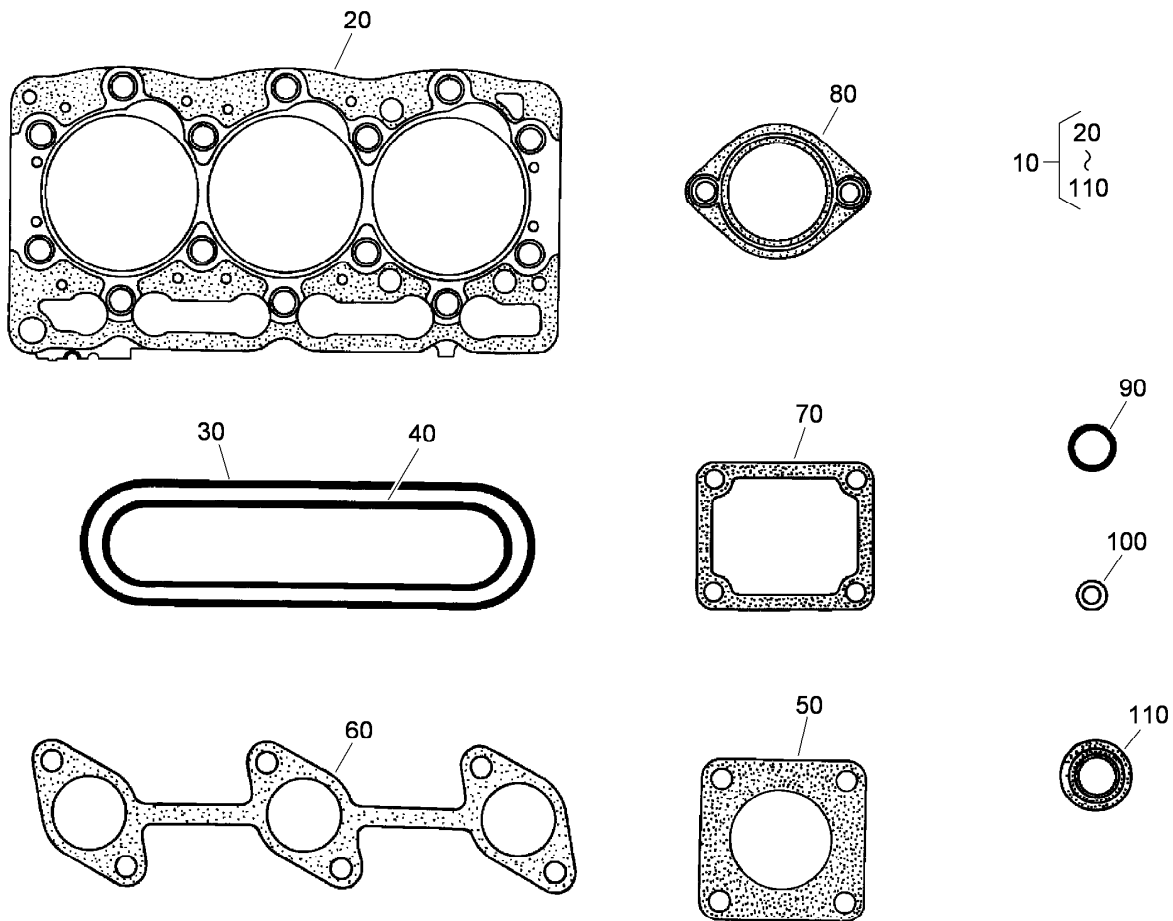 

Upper Gasket Kit


Ref.	Part Number	Qty.	Description
10	107-7848	1	Upper Gasket Kit
20	108-6573	1	Gasket-Head, Cylinder
30	98-9615	1	Gasket-Cover, Head
40	98-9609	1	Gasket-Manifold, Inlet
50	99-8343	1	Gasket-Muffler
60	99-8327	1	Gasket-Manifold, Exhaust
70	98-9638	1	Gasket-Flange, Water
80	105-3748	1	Gasket-Thermostat
90	99-3446	2	O-Ring
100	98-9454	3	Gasket
110	99-8385	6	Seal-Stem, Valve

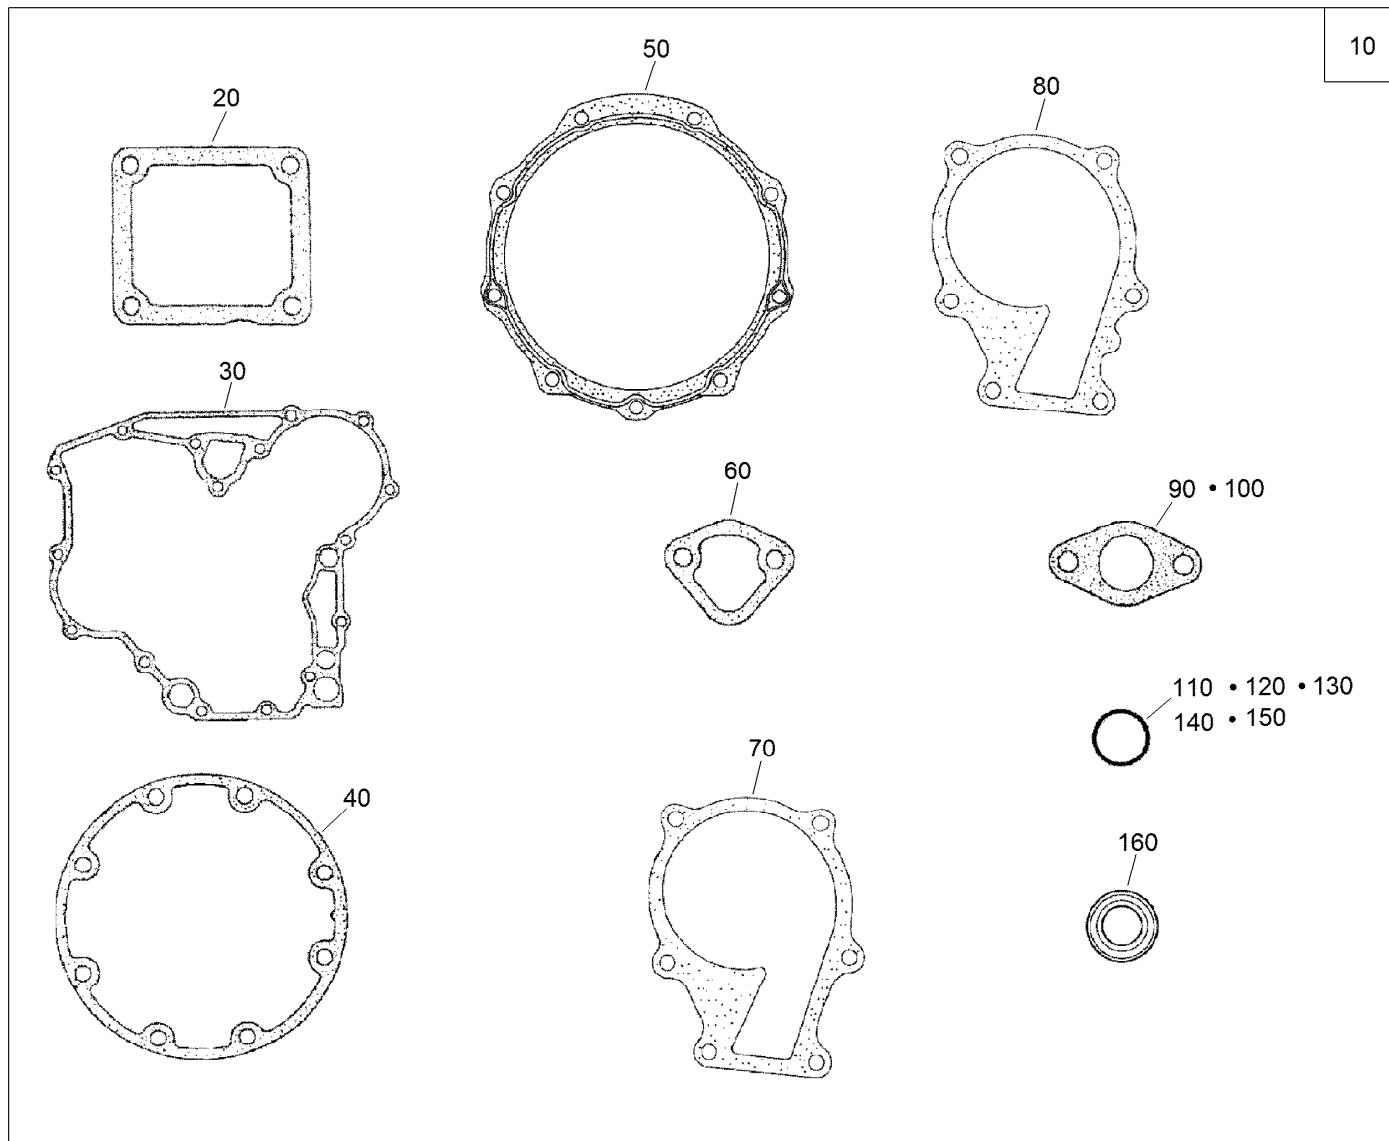 

Lower Engine Gasket Kit

Ref.	Part Number	Qty.	Description
10	130-1364	1	Lower Gasket Kit
20	98-9637	1	Gasket
30	98-9633	1	Gasket-Case, Gear
40	127-0440	1	Gasket-Case, Bearing
50	112-7037	1	Gasket-Cover, Case
60	117-7562	1	Gasket-Pump, Fuel
70	98-9632	1	Gasket-Pump, Water
80	99-3454	1	Gasket-Pump, Water


Ref.	Part Number	Qty.	Description
90	98-9682	1	Gasket
100	98-9683	1	Gasket-Cover, Solenoid
110	105-3781	2	O-Ring
120	105-3777	2	O-Ring
130	105-3783	1	O-Ring
140	105-3776	1	O-Ring
150	105-3788	1	O-Ring
160	98-7601	1	Seal-Oil

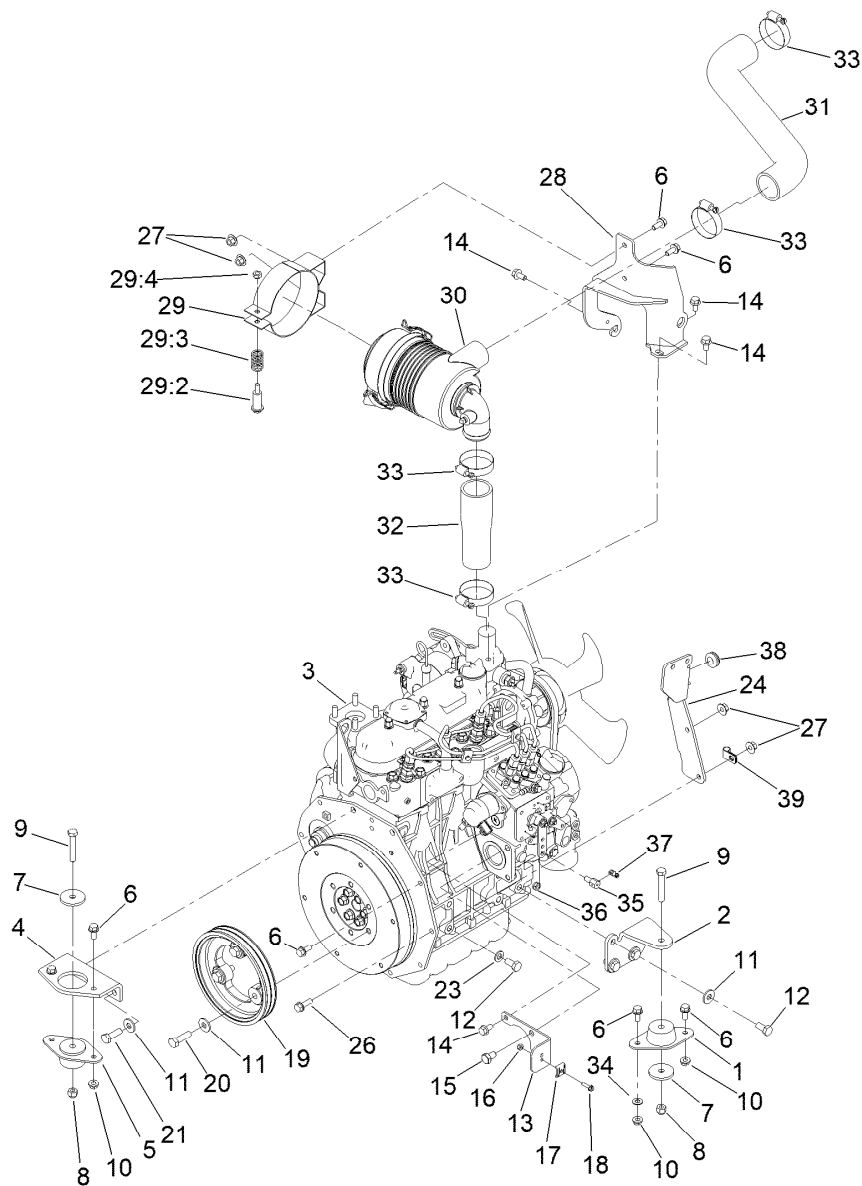 

Engine and Air Cleaner Assembly

Ref.	Part Number	Qty.	Description
1	121-9076	1	Mount-Engine
2	95-8937-0P	1	Mount-Engine, LH
3	138-6905	1	Engine-Kubota, D1105
4	95-8926-0P	1	Mount - Engine, Front
5	93-5265	1	Mount-Engine
6	3234-5	5	Screw-HHF
7	80-8560	2	Washer-Hardened
8	3296-39	2	Nut-Lock, NI
9	323-11	2	Screw-HH
10	32128-20	4	Nut-HF
11	80-6990	7	Washer-Hardened
12	63-7790	4	Screw-Cap
13	110-9009-0P	1	Bracket-Cable, Throttle
14	33104-016	4	Screw-HHF
15	70-8470	1	Screw-HH
16	3296-2	1	Nut-Lock, NI
17	81-1690	1	Clamp-Cable
18	32105-13	1	Screw-HWH
19	99-3412	1	Pulley
20	56-2140	3	Screw-HH
21	95-8812	1	Screw-HH

Ref.	Part Number	Qty.	Description
23	33095-00	1	Washer-Flat
24	115-3487-0P	1	Bracket-Mount, Fuel Filter
26	3234-17	3	Screw-HHF
27	32128-44	4	Nut
28	136-3154-0P	1	Bracket-Cleaner, Air
29	93-2191	1	Air Cleaner Mounting Band ASM
29:2	94-3653	1	Bolt
29:3	94-3654	1	Spring
29:4	33024-00	1	Nut-Lock, NI
30	93-2190	1	Air Cleaner ASM
31	95-8946	1	Hose-Upper, Air Inlet
32	95-8947	1	Hose-Air Inlet, Lower
33	2412-92	4	Clamp-Hose
34	120-9683	1	Washer-Plain
35	98-9311	1	Swivel-Throttle
36	3296-20	1	Nut-Lock, NI
37	112-9919	1	Stop-Cable, Throttle
38	1-543296	1	Grommet
39	2412-138	1	R-Clamp

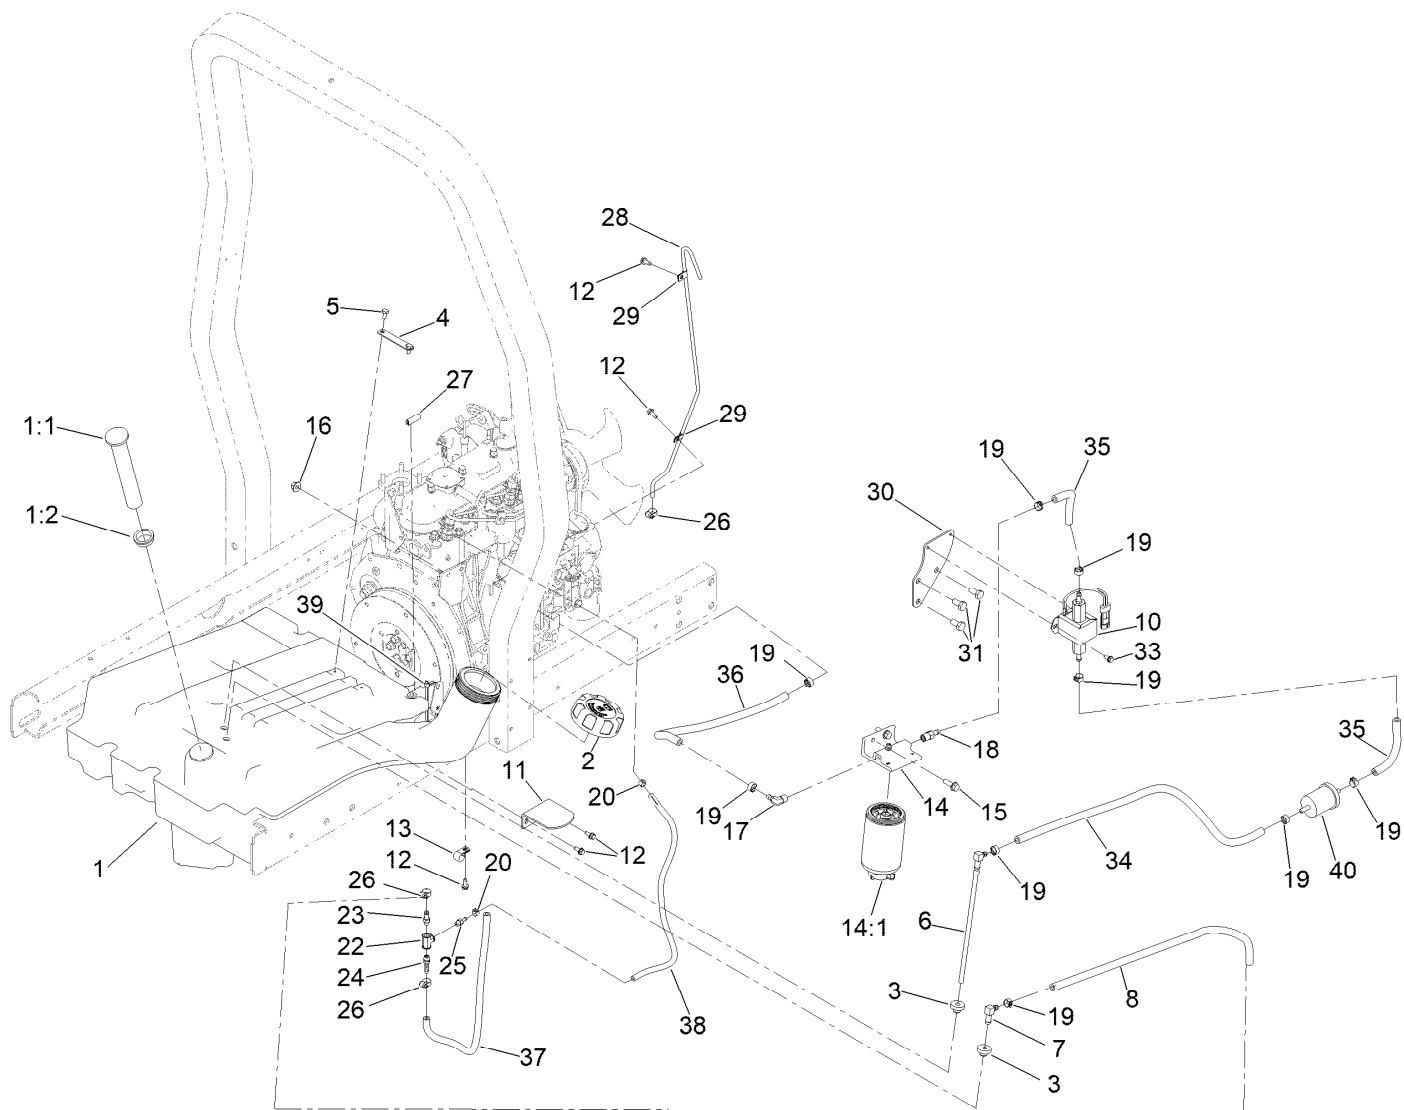 


Fuel System Assembly

Ref.	Part Number	Qty.	Description
1	95-8620	1	Tank-Fuel
1:1	95-8971	1	Gauge-Fuel
1:2	95-8972	1	Grommet
2	125-9171	1	Cap-Fuel
3	46-6560	2	Bushing
4	95-8881	1	Strap-Line, Fuel
5	321-2	2	Screw-HH
6	110-9689	1	Pipe-Stand
7	46-6550	1	Fitting-Elbow, 90 DEG
8	110-6187	1	Hose-Fuel
10	145-3160	1	Pump-Fuel, Electric
11	95-8968-03	1	Support-Tank, Fuel
12	32144-10	5	Screw-HWH
13	2412-73	1	Clamp-R
14	110-9044	1	Separator-Filter
14:1	110-9049	1	Filter-Spin On, Fuel/Water
15	3234-17	2	Screw-HHF
16	32128-44	2	Nut

Ref.	Part Number	Qty.	Description
17	353-781	1	Fitting-HYD, 90
18	353-783	1	Fitting-STR
19	92-2379	9	Clamp-Hose
20	2412-80	2	Clamp-Hose
22	354-20	1	Fitting-Tee
23	354-21	1	Fitting-Barbed
24	304-73	1	Fitting-Straight
25	354-22	1	Fitting-Barbed
26	2412-108	3	Clamp-Worm
27	110-8754	1	Trim
28	95-8615	1	Tube-Breather
29	2412-72	2	Clip-Closed, Insulated
30	136-3818-0P	1	Plate-Fuel Pump
31	63-7790	3	Screw-Cap
33	32144-4	2	Screw-HWH
34	110-3257	1	Hose-Fuel
35	109-0310	2	Hose-Fuel
36	121-7852	1	Hose-Fuel

 ● Not illustrated

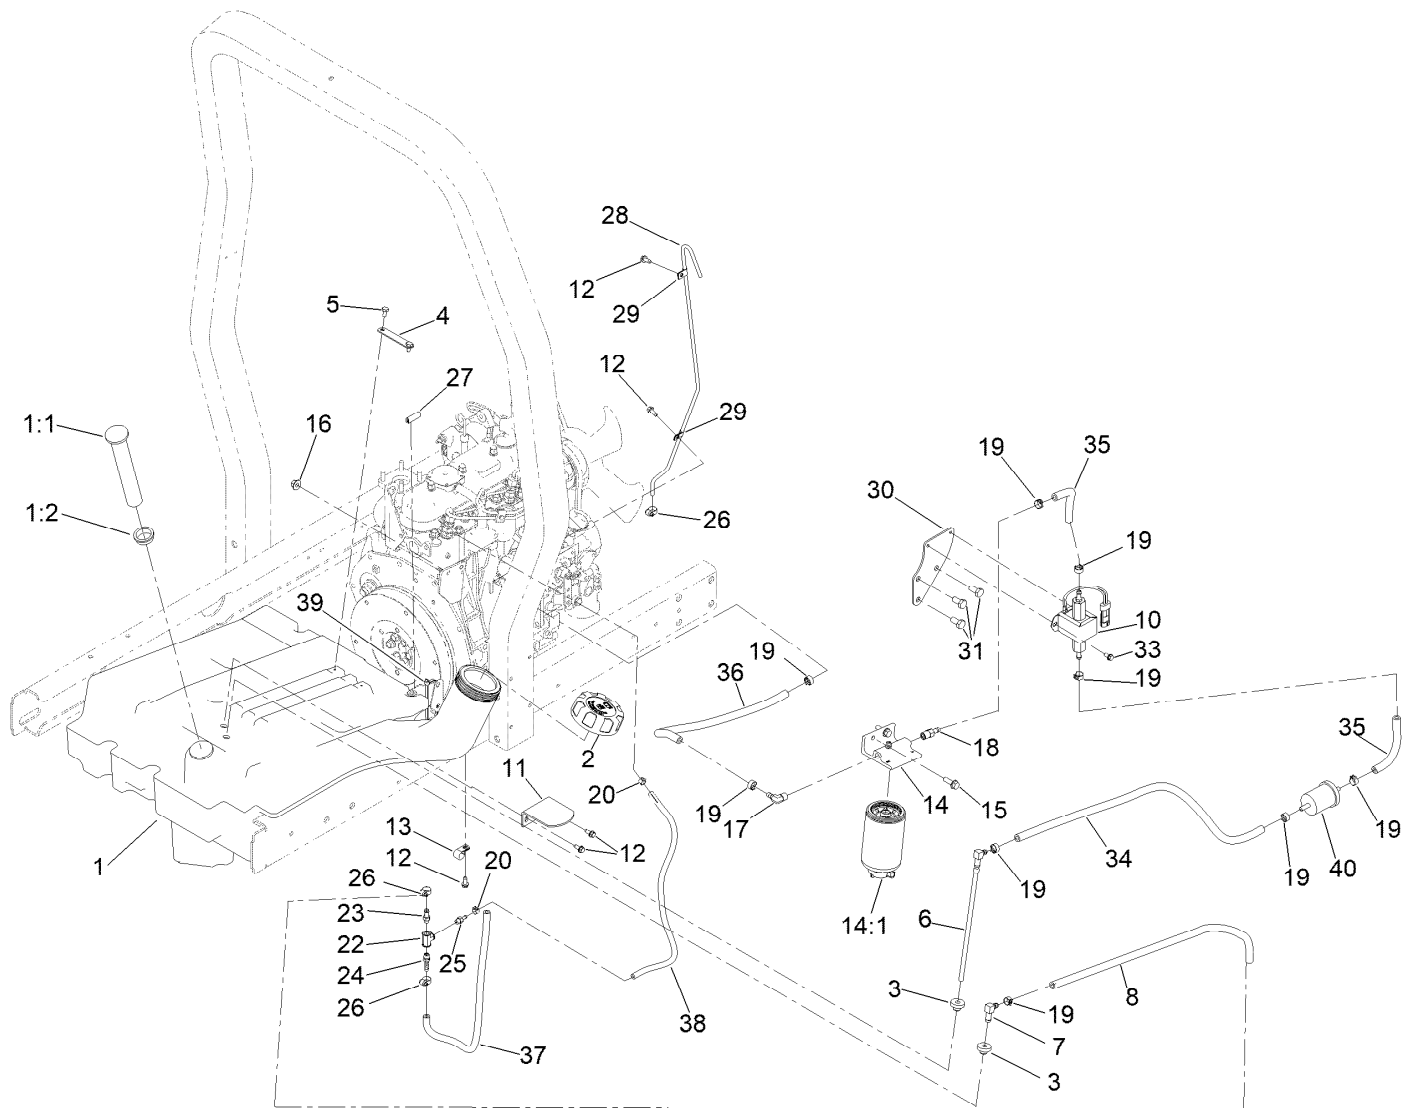


Fuel System Assembly (continued)

Ref.	Part Number	Qty.	Description
37	110-5701	1	Hose-Fuel
38	138-3151	1	Hose-Fuel
39	3290-379	1	Tie-Cable ●


Ref.	Part Number	Qty.	Description
40	98-7612	1	Filter-Fuel
42	3290-378	1	Tie-Cable ●

 ● Not illustrated

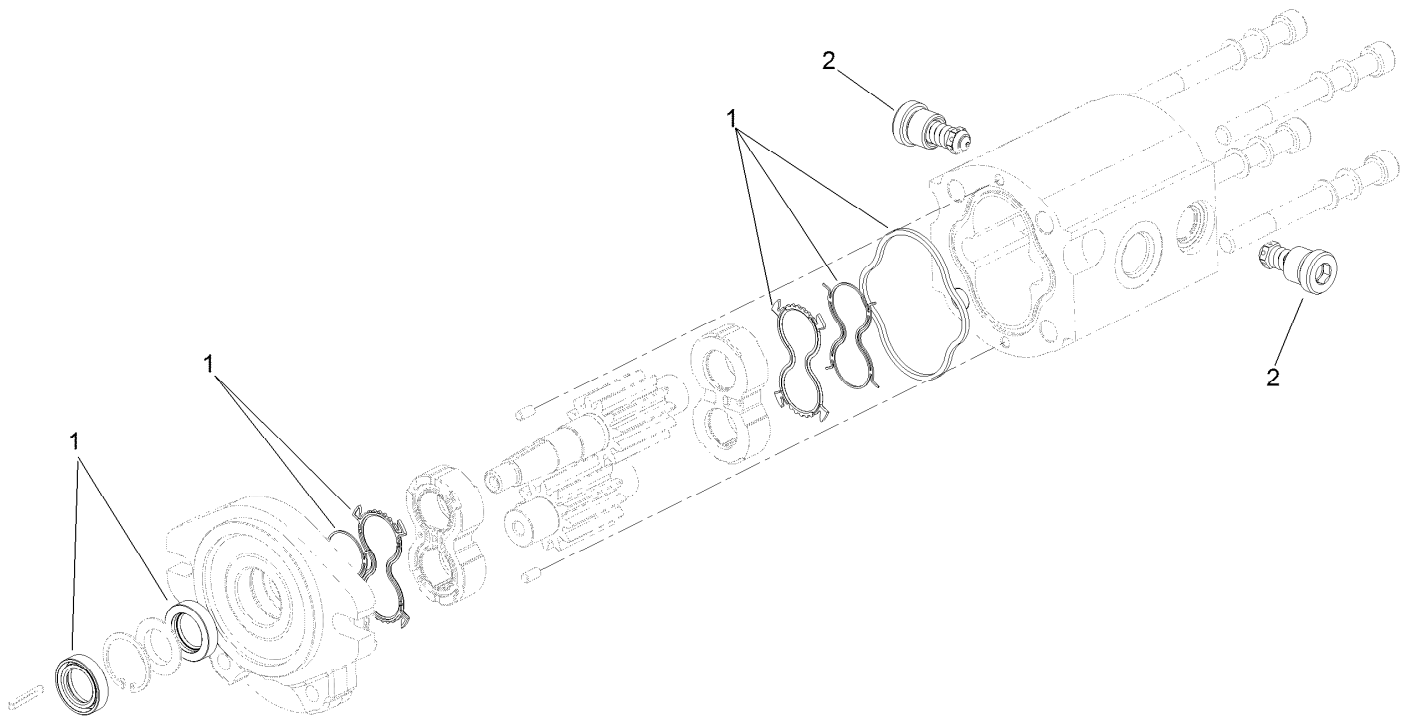

Gear Motor Assembly No. 115-8250

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2784	1	Seal Kit
2	117-5107	2	Valve-Check

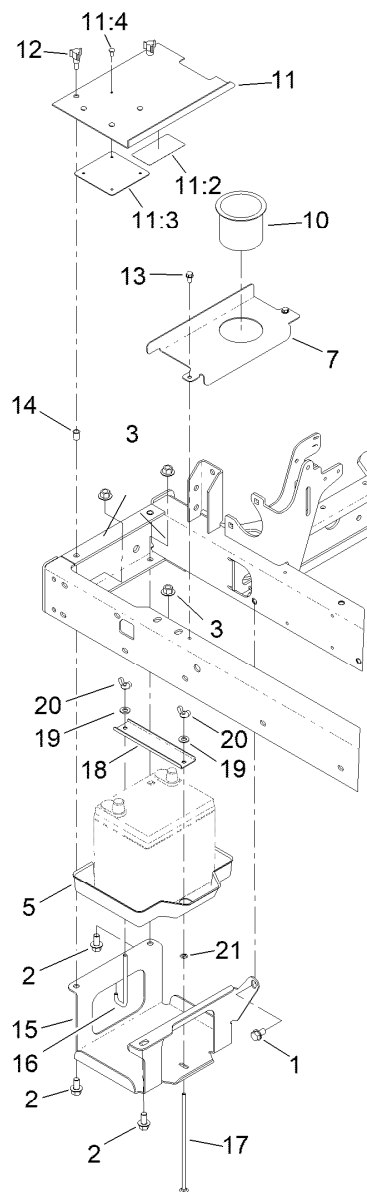 

Battery Tray and Cover Assembly

Ref.	Part Number	Qty.	Description
1	32144-15	1	Screw-HHFTF
2	3234-1	3	Screw-HHF
3	32128-43	3	Nut-Flange
5	163-3526	1	Tray-Battery
7	95-8817-01	1	Cover-Battery, Inner
10	94-1410	1	Holder-Can, Beverage
11	99-3602	1	Battery Cover ASM
11:2	93-7276	1	Decal-Danger
11:3	87-7620	1	Shield-Terminal, Battery
11:4	3269-27	4	Rivet-Snap

Ref.	Part Number	Qty.	Description
12	233-70	2	Knob-Star, Three
13	32144-4	2	Screw-HWH
14	32148-6	2	Nut-Clinch
15	163-3537-0P	1	Support-Battery
16	163-3516	1	Post-Clamp, Battery
17	137-8106	1	Screw-CARR
18	163-3515-0P	1	Channel-Clamp, Battery
19	3256-23	2	Washer-Plain
20	32103-22	2	Nut-Wing
21	32115-15	1	Nut-Push

Attachments and Accessories

For 03171 Reelmaster 3100-D Traction Unit With Sidewinder

Product Name	Model/Part
27in Lift Arm Kit	03172
32in Lift Arm Kit	03173
8-Blade 27in DPA Edge Series Cutting Unit.....	03189
11-Blade 27in DPA Edge Series Cutting Unit	03190
8-Blade 32in DPA Edge Series Cutting Unit.....	03191
RM3105 27in, 8bld Rr Es No Frt Roller Cu.....	03192
27in Verticutter Cutting Unit	03203
Operator Cooling Fan	03247
Switch Panel-Universal Sunshade.....	03248
Wireless Hourmeter	115-4754
External Antenna Kit, Wireless Hourmeter System	115-9524
Base Station Kit, Wireless Hourmeter System	115-9542
Repeater Kit, Wireless Hourmeter System	115-9543
Smooth Rear Tire	127-2796
Hi-Back Seat Cover	133-1308
PX Hydraulic Fluid (5 Gal)	133-8086
PX Hydraulic Fluid (55 Gal).....	133-8087
Wheel Weight Kit	136-3315
Decal-Service, Japan	138-1190
Beacon Kit	138-2699
Power Harness Kit.....	138-2993
Work Lights Kit, Groundsmaster and Reelmaster Traction Units with Universal Sunshade.....	140-1554
Hydraulic Booster-10.5 fl oz.....	145-5286
Premium Seat Kit.....	30629
White Universal Sunshade	30669
Red Universal Sunshade	30671
Arm Rest Kit.....	30707
LED Work Light Kit.....	31692
New Red Paint - Gallon	361-11
Dark Metallic Gray Aerosol Paint	361-12
Semi-Gloss Black Spray Paint.....	361-9
1000 Hour MVP Kit	44963
Air Dry Red Paint - Qt	5340

Notes:

Notes:

Notes:



Count on it.